


PARTS CATALOG

Allison

200-300 Series


**TORQMATIC
CONVERTERS**

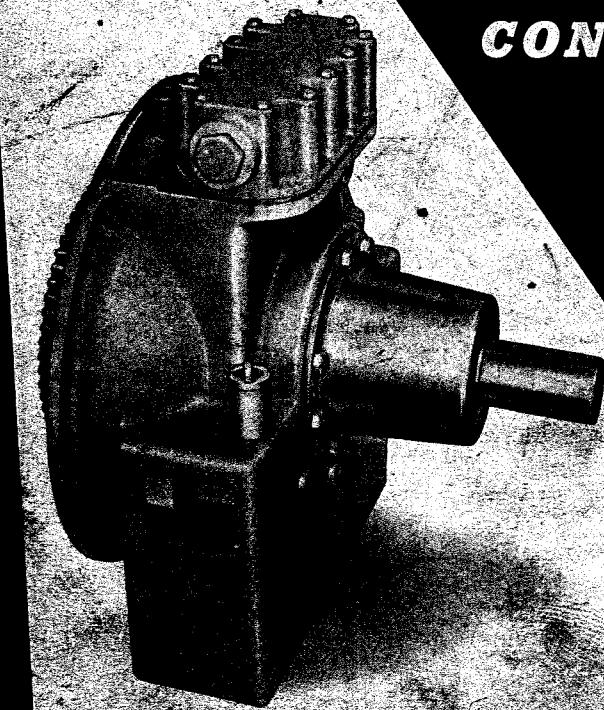


ALLISON DIVISION

GENERAL MOTORS CORPORATION

INDIANAPOLIS 6, INDIANA

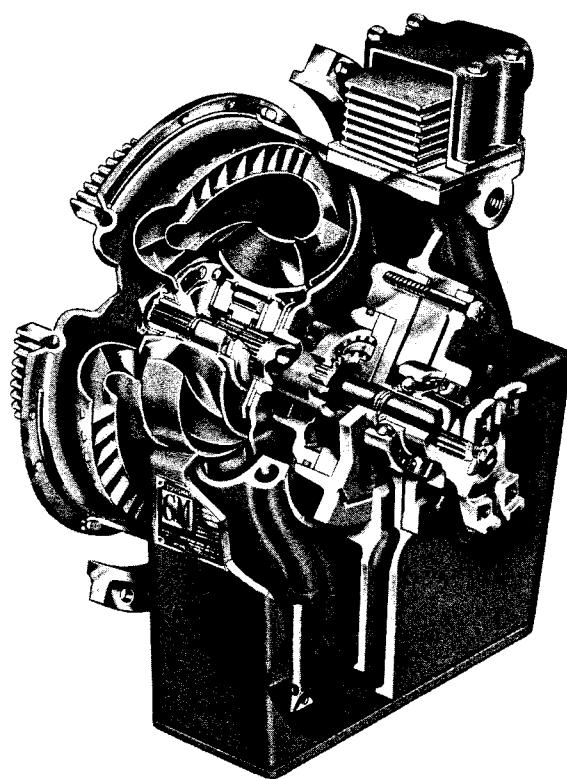

**TC-200 Series
Torqmatic Converter**

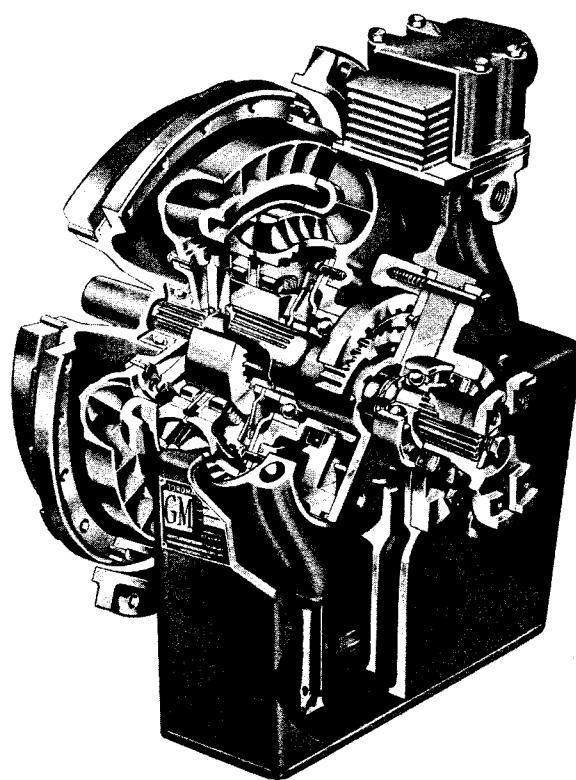

**TC-300 Series
Torqmatic Converter**

FOREWORD

This catalog contains parts information for all models of the TC 200-300 Series Allison Torqmatic Converters.

Information not covered in this catalog can be obtained by writing to the Transmission Service Manager, Allison Division, GMC, Indianapolis 6, Indiana.

January 15, 1958

TABLE OF CONTENTS

	<u>Page Number</u>		<u>Figure Number</u>
Foreword	1		
How to Find the Right Parts	3		
Model Designation Chart	4-6		
Example of Parts List Organization	7		
How to Order Parts	8		
Pictorial Index			
TC-200 Series Basic Torqmatic Converter	9		
TC-300 Series Basic Torqmatic Converter	10		
TC 200-300 Series Optional Equipment	11		
Glossary	13		
Quick Reference Listing for Your Torqmatic Drive	14		
TC-200 Basic Torqmatic Converter	I-1		I
TC-200 Basic Torqmatic Converter Output Shafts	II-1		II
TC-300 Basic Torqmatic Converter	III-1		III
TC-300 Basic Torqmatic Converter Output Shafts	IV-1		IV
TC 200-300 Series Optional Equipment			
Manual Input Disconnect Clutch Assembly Option	V-1		V, V-A
Manual Input Disconnect Clutch Housing Options	VI-1		VI, VI-A
Drive Ring Options	VI-1		VI, VI-A
Oil Cooler Options	VII-1		VII, VII-A
Cable Drive Adapter Option for Accessory Drive	VII-1		VII, VII-A
Rear Disconnect Clutch Adapter Option	VII-1		VII, VII-A
Mounting Plate Options	VII-1		VII, VII-A
Service Information Letters			
Numerical Parts Index	INDEX-1		

Copyright 1958



The complete line of Allison Torqmatic Drives includes the Torqmatic Converter and the Torqmatic Transmission. Literature on these products is available. Address requests for this information to the Transmission Sales Manager.


ALLISON DIVISION
GENERAL MOTORS CORPORATION
Indianapolis 6, Indiana

Important

HOW TO FIND THE RIGHT PARTS WITH THIS PARTS CATALOG

→ FIRST, you must know the assembly part number of your Torqmatic converter in order to find the correct part number of the part you require.

This Torqmatic converter assembly part number, and option number appear on the name plate attached to the housing. The name plate is illustrated below.

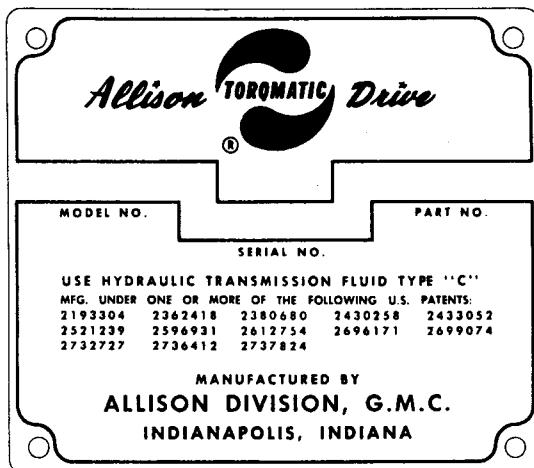

Facsimile of Name Plate attached to the
Allison Torqmatic Converter housing.

NEXT, turn to the "Pictorial Index" on pages 9, 10, and 11, which will aid you in locating the parts you want. Each group listing is preceded by the Torqmatic converter assembly part numbers (A/N). Be sure the parts you want are right for your model converter. Check your Torqmatic converter assembly part number with the numbers preceding each group listing. Do not use the figure reference numbers when ordering parts.

To find detail parts of options for your Torqmatic converter, first reconcile the option number (found on the name plate after the assembly part number) to the option list on page 4, then turn to the section and group indicated opposite the option number.

For example, if your model number is TCA 325-119 and your assembly part number is 6755390, locate option 119 in listing on page 4. You will find:

— xxx-119 - Series 300: SAE 2 housing with 11 1/2-inch drive ring (see section VI, group D); 10-inch input-disconnect clutch (see section V, group A); cooler (see section VII, group B). For the detail parts of the SAE 2 manual input-disconnect clutch housing, turn to section VI, group D, for the parts listing. For the detail parts of the manual input-disconnect clutch assembly, turn to section V, group A, for parts listing. To find the oil cooler parts, turn to section VII, group B.

Pages 4, 5, and 6 will further help you in ordering correctly the parts you need.

MODEL DESIGNATION CHART
(Series 200-300 Torqmatic Converters)

BASIC TORQMATIC CONVERTERS: LETTERS

TC = Converter assembly

TCA = Converter with accessory drive

TCRD = Converter with rear-disconnect clutch

SERIES DESIGNATION: FIRST TWO DIGITS

- 24x = 240 Series
- 32x = 320 Series

CONVERTER BASIC VARIATIONS: THIRD DIGIT

- xx4 = Automotive flange
- xx5 = Industrial shaft - standard bearing
- xx6 = SAE 3 rear-disconnect clutch housing
- xx7 = Industrial shaft - extra-duty bearings
- xx8 = Industrial shaft - bevel pinion mounting
- xx9 = SAE 2 rear-disconnect clutch housing

CONVERTER OPTIONS: LAST THREE DIGITS

- xxx-101 = Series 200: Cooler (see section VII, group A)
- xxx-102 = Series 300: Cooler (see section VII, group B),
Drive ring bolts (see section VI, group L)
- xxx-103 = Unassigned
- xxx-104 = Series 200: SAE 2 housing with 10-inch drive ring (see section VI, group C)
- xxx-105 = Series 200: SAE 2 housing with 10-inch drive ring (see section VI, group C);
10-inch input-disconnect clutch (see section V, group A)
- xxx-106 = Series 200: SAE 2 housing with 10-inch drive ring (see section VI, group C);
cooler (see section VII, group A)
- xxx-107 = Series 200: SAE 2 housing with 10-inch drive ring (see section VI, group C);
10-inch input-disconnect clutch (see section V, group A);
cooler (see section VII, group A)
- xxx-108 = Series 200: SAE 3 housing with 10-inch drive ring (see section VI, group E)
- xxx-109 = Series 200: SAE 3 housing with 10-inch drive ring (see section VI, group E);
10-inch input-disconnect clutch (see section V, group A)
- xxx-110 = Series 200: SAE 3 housing with 10-inch drive ring (see section VI, group E);
cooler (see section VII, group A)
- xxx-111 = Series 200: SAE 3 housing with 10-inch drive ring (see section VI, group E);
10-inch input-disconnect clutch (see section V, group A);
cooler (see section VII, group A)
- xxx-112 = Series 200 or 300: Rear-disconnect clutch adapter (see section VII, group G),
Drive ring bolts (see section VI, group L)
- xxx-113 = Series 200: Rear-disconnect clutch adapter (see section VII, group G);
cooler (see section VII, group A)
- xxx-114 = Series 200: 10-inch input drive ring (see section VI, group B)
- xxx-115 = Series 200: 10-inch input drive ring (see section VI, group B);
cooler (see section VII, group A)

(Continued on next page)

MODEL DESIGNATION CHART - Continued

CONVERTER OPTIONS: LAST THREE DIGITS - Continued

- xxx-116 = Series 300: SAE 2 housing with 11 1/2-inch drive ring
(see section VI, group D)
- xxx-117 = Series 300: SAE 2 housing with 11 1/2-inch drive ring
(see section VI, group D);
10-inch input disconnect clutch (see section V, group A)
- xxx-118 = Series 300: SAE 2 housing with 11 1/2-inch drive ring
(see section VI, group D);
cooler (see section VII, group B)
- xxx-119 = Series 300: SAE 2 housing with 11 1/2-inch drive ring
(see section VI, group D);
10-inch input disconnect clutch (see section V, group A);
cooler (see section VII, group B)
- xxx-120 = Series 300: SAE 3 housing with 11 1/2-inch drive ring
(see section VI, group F)
- xxx-121 = Series 300: SAE 3 housing with 11 1/2-inch drive ring
(see section VI, group F);
10-inch input-disconnect clutch (see section V, group A)
- xxx-122 = Series 300: SAE 3 housing with 11 1/2-inch drive ring
(see section VI, group F);
cooler (see section VII, group B)
- xxx-123 = Series 300: SAE 3 housing with 11 1/2-inch drive ring
(see section VI, group F);
10-inch input-disconnect clutch (see section V, group A);
cooler (see section VII, group B)
- xxx-124 = Series 300: Rear-disconnect clutch adapter (see section VII, group G);
cooler (see section VII, group B) (drive ring bolts, see
section VI, group L)
- xxx-125 = Series 300: 11 1/2 in. drive ring (see section VI, group A)
- xxx-126 = Series 300: 11 1/2 in. drive ring (see section VI, group A), cooler
(see section VII, group B)
- xxx-127 = Series 200-300: Accessory drive adapter (see section VII, group C),
Drive ring bolts (see section VII, group L)
- xxx-129 = Series 200-300: Rear-disconnect clutch adapter (see section VII,
group G) Drive ring bolts (see section VI, group L)
- xxx-130 = Series 300: SAE 2 housing with 11 1/2-inch drive ring
(see section VI, group D)
- xxx-131 = Series 200: SAE 2 housing with 10-inch drive ring (see section VI, group C)
- xxx-132 = Series 300: SAE 3 housing with 11 1/2-inch drive ring
(see section VI, group F);
10-inch input disconnect clutch (see section V, group A);
accessory drive adapter (see section VII, group C)
- xxx-133 = Series 300: SAE 3 housing with 11 1/2-inch drive ring
(see section VI, group F)
- xxx-134 = Series 200: SAE 2 housing with 10-inch drive ring (see section VI, group H)
- xxx-136 = Series 300: SAE 2 housing with 11 1/2-inch drive ring
(see section VI, group G)
- xxx-137 = Series 300: SAE 3 housing (see section VI, group K)
- xxx-140 = Series 300: Drive ring bolts (see section VI, group L)

EXAMPLE OF PARTS LIST ORGANIZATION

Here is an example of the parts list organization used in this catalog. Understanding this example will help you to order the right parts.

REF	NOMENCLATURE	PART NO	REQ
1	Assembly	6700001	1
2	Subassembly	6754002	1
3	Detail part	676003	1
4	Detail part	67543004	1
5	Detail part	67090005	2
6	Detail part	4597006	3
7	Detail part	3285007	1
8	Subassembly	6765008	1
9	Detail part	5950009*	4
10	Detail part	6759010*	1
11	Subassembly	67521011	1
12	Detail part	67573012	1
13	Subassembly	67094013	1
14	Detail part	67048014	1
15	Detail part	6750015	2
16	Detail part	67076016	1
17	Detail part	67854017	1
18	Subassembly	5759018	1
19	Subassembly	4399019	1
20	Detail part	7550020	1

*Serviced in assembly only - not as a detail part.

Explanation

If you order part number 6700001, you will receive parts 6754002 through 6759015.

If you order part number 6754002, you will receive parts 676003 through 67090005.

If you order part number 676003, you will receive part 676003 only.

If you order part numbers 5950009 or 6759010, you will receive part 6765008 which is the assembly composed of parts 5950009 and 6759010. The star after part numbers 5950009 and 6759010 indicates that these parts are not serviced alone.

If you order part number 4597006, you will receive part 4597006 only.

If you order part number 67076016, you will receive part 67076016 only.

The numbers appearing in the column under REF are the item reference numbers appearing in the illustrations.

Summary

If an assembly or subassembly is ordered, all subassemblies and detail parts indented beneath it will be included.

If a detail part is ordered, only the detail part will be sent unless its part number is starred (*). A starred (*) part number means that such a part is not serviced alone. This is necessary because certain parts require factory installation or adjustment. If an order is received for a starred (*) part, the assembly or subassembly under which it is indented will be sent.

HOW TO ORDER PARTS

Be sure to give the Torqmatic Converter Assembly Part Number, the Model, and the Serial Number found on the Torqmatic Converter housing name plate.

Always give the part name and quantity desired as well as the part number.


All parts orders should be placed with the distributor or dealer from whom you purchased your equipment. Do not place orders directly with Allison Division.

NOTE












You will find a quick reference form on page 14 for listing your Allison Torqmatic Converter model and assembly part numbers. Fill it in now — it may save you many hours later.

Pictorial Index

To Get the Right Part you
must Know Your Converter
Assembly Number
Found on the Converter
Name Plate

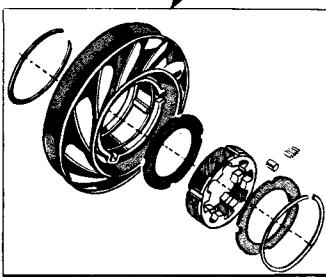

BASIC CONVERTER
Page I-1

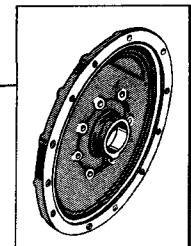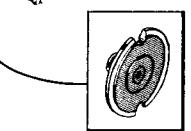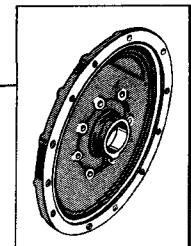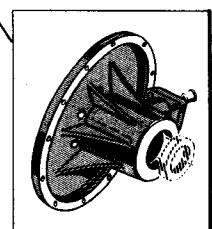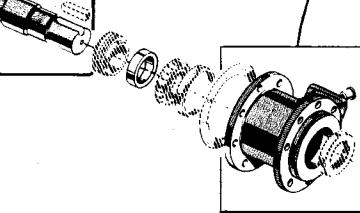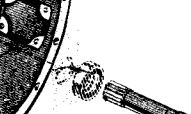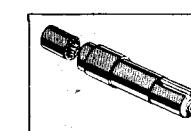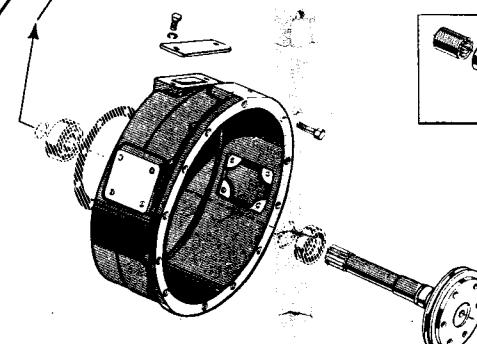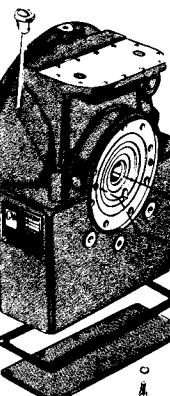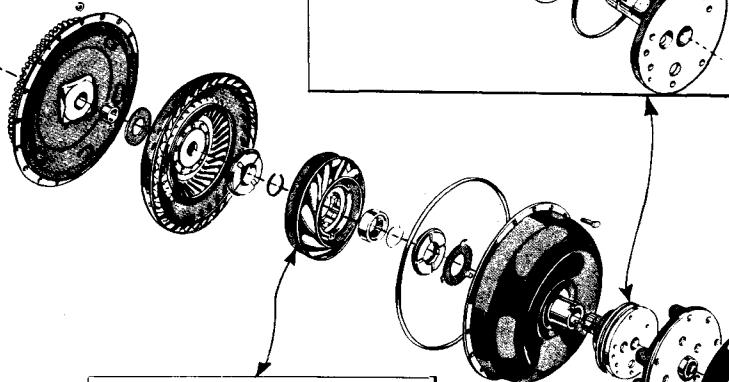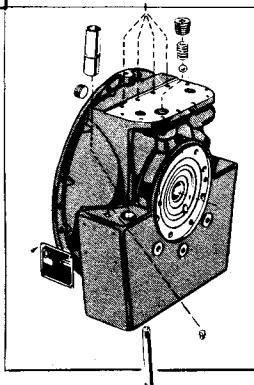


C S P

Pictorial Index

To Get the Right Part you
must Know Your Converter
Assembly Number
Found on the Converter
Name Plate

BASIC CONVERTER
Page III-1

OUTPUT
SHAFTS
Page IV-1

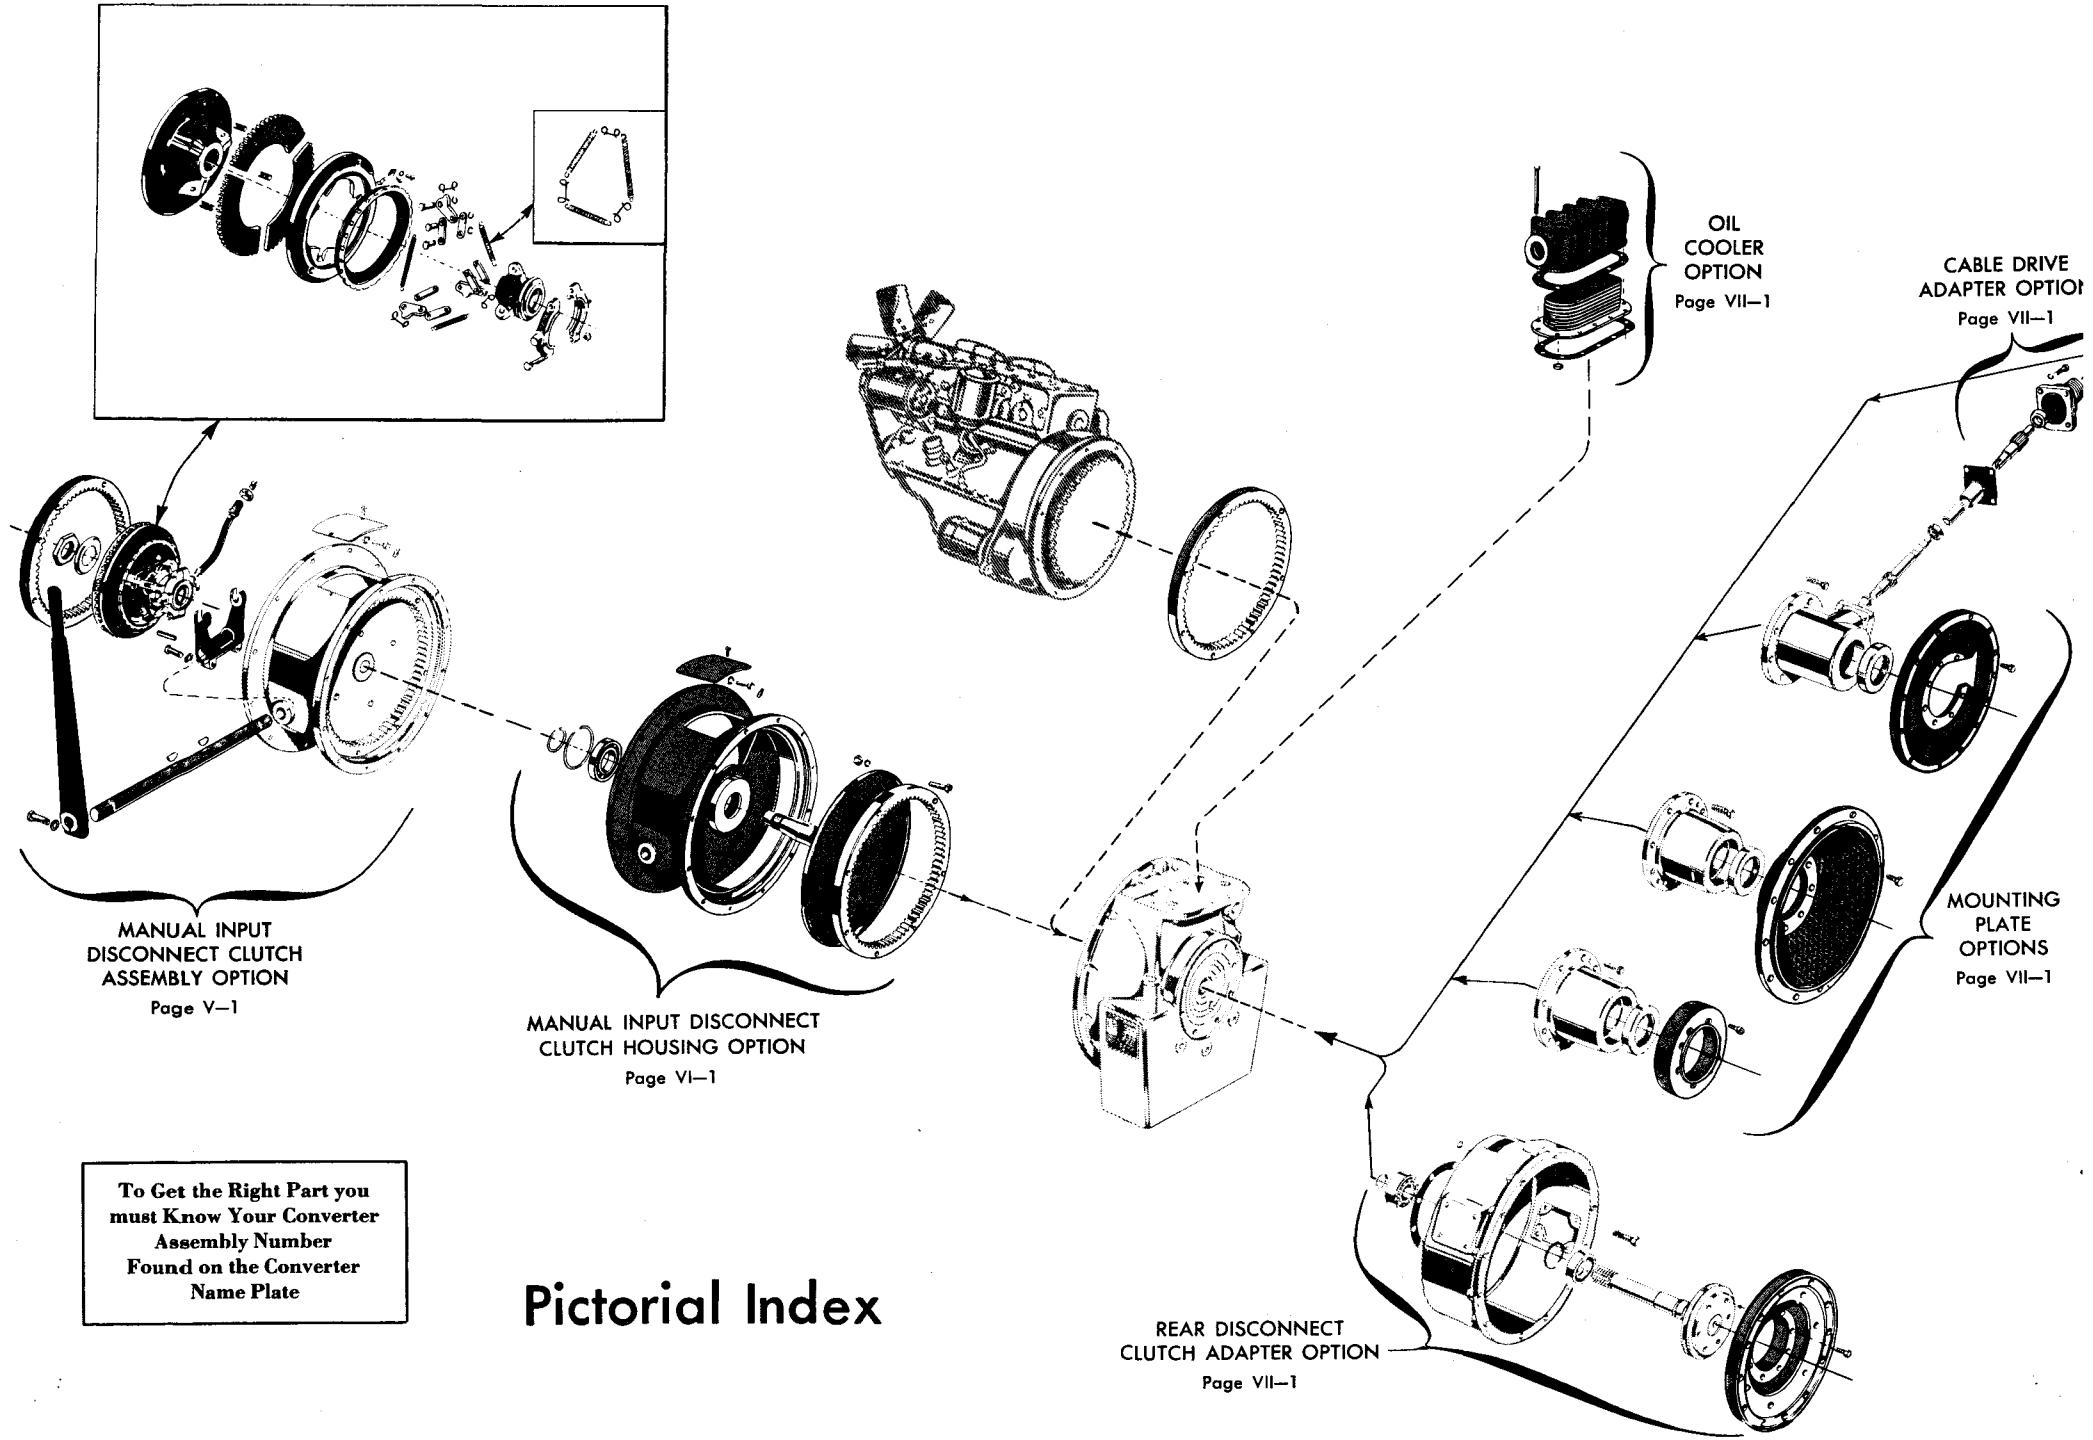

Pictorial Index

GLOSSARY OF ABBREVIATIONS

adptr	adapter	lng	long
&	and	mnfld	manifold
assy	assembly	med	medium
A/N	Assembly Number	mntg	mounting
ar	as required	NC	National Coarse Thread
avail	available	NF	National Fine Thread
brng	bearing	NPT	National Taper Pipe Thread
brkt	bracket	ND	New Departure
brk	brake	no	number
bshng	bushing	OD	outside diameter
ctr	center	OL	overall length
cls	class	OS	oversize
cl	cluster	pack	packing
clu	clutch	pinn	pinion
C/o	consists of	pln	plain
c-pin	cotter pin	plnt	planetary
c'sunk	countersunk	presr	pressure
dia	diameter	regltr	regulator
div	division	rtnr	retainer
drv	drive	rnd	round
drvvn	driven	S/N	Serial Number
drvng	driving	srvc	service
ea	each	SIL	Service Information Letter
exc	except	SK	Service Kit
exch	exchange	sltd	slotted
expn	expansion	spcr	spacer
extrnl	external	spcl	special
fil hd	fillister head	speedo	speedometer
flng	flange	sq	square
fix	flexible	sq-sckt	square socket
flywhl	flywheel	std	standard
frt	front	temp	temperature
gskt	gasket	thrd	thread
gov	governor	trns	transmission
hd	head	undrsz	undersize
hx	hexagon	upr	upper
hsng	housing	wshr	washer
hydr	hydraulic	W/	with
incl	includes	W/out	without
ID	inside diameter		
instr	instrument		
inter	intermediate		
intrnl	internal		

**QUICK REFERENCE LISTING
FOR YOUR TORQMATIC DRIVE**

Fill In Now

ALLISON TORQMATIC CONVERTER

1. Model No. _____ Assy Part No. _____
Serial No. _____ Installation _____
ALLISON TORQMATIC CONVERTER
2. Model No. _____ Assy Part No. _____
Serial No. _____ Installation _____
ALLISON TORQMATIC CONVERTER
3. Model No. _____ Assy Part No. _____
Serial No. _____ Installation _____
ALLISON TORQMATIC CONVERTER
4. Model No. _____ Assy Part No. _____
Serial No. _____ Installation _____
ALLISON TORQMATIC CONVERTER
5. Model No. _____ Assy Part No. _____
Serial No. _____ Installation _____
ALLISON TORQMATIC CONVERTER
6. Model No. _____ Assy Part No. _____
Serial No. _____ Installation _____
ALLISON TORQMATIC CONVERTER
7. Model No. _____ Assy Part No. _____
Serial No. _____ Installation _____
ALLISON TORQMATIC CONVERTER
8. Model No. _____ Assy Part No. _____
Serial No. _____ Installation _____
ALLISON TORQMATIC CONVERTER
9. Model No. _____ Assy Part No. _____
Serial No. _____ Installation _____

TC-200 SERIES BASIC TORQMATIC CONVERTER

To find detail parts for your Allison Torqmatic Converter, turn to the group and page listed opposite the assembly part number of your converter.

A/N*	MODEL	GROUP	PAGE
6755291	TC 244	A	I-3
6755292	TC 245	A	I-3
6755386	TCA 245	A	I-3
6755387	TCRD 246	A	I-3
6756320	TCA 248	A	I-3
6756733	TC 248	A	I-3
6756751	TCA 247	A	I-3
6757848	TC 248	A	I-3
6757850	TC 244	A	I-3
6758071	TCA 248	A	I-3
6758320	TCA 248	A	I-3
6758586	TCRD 246	A	I-3

*A/N (Assembly number) found on your converter name plate.

ALLISON TORQMATIC CONVERTER SERIES 200-300 PARTS CATALOG

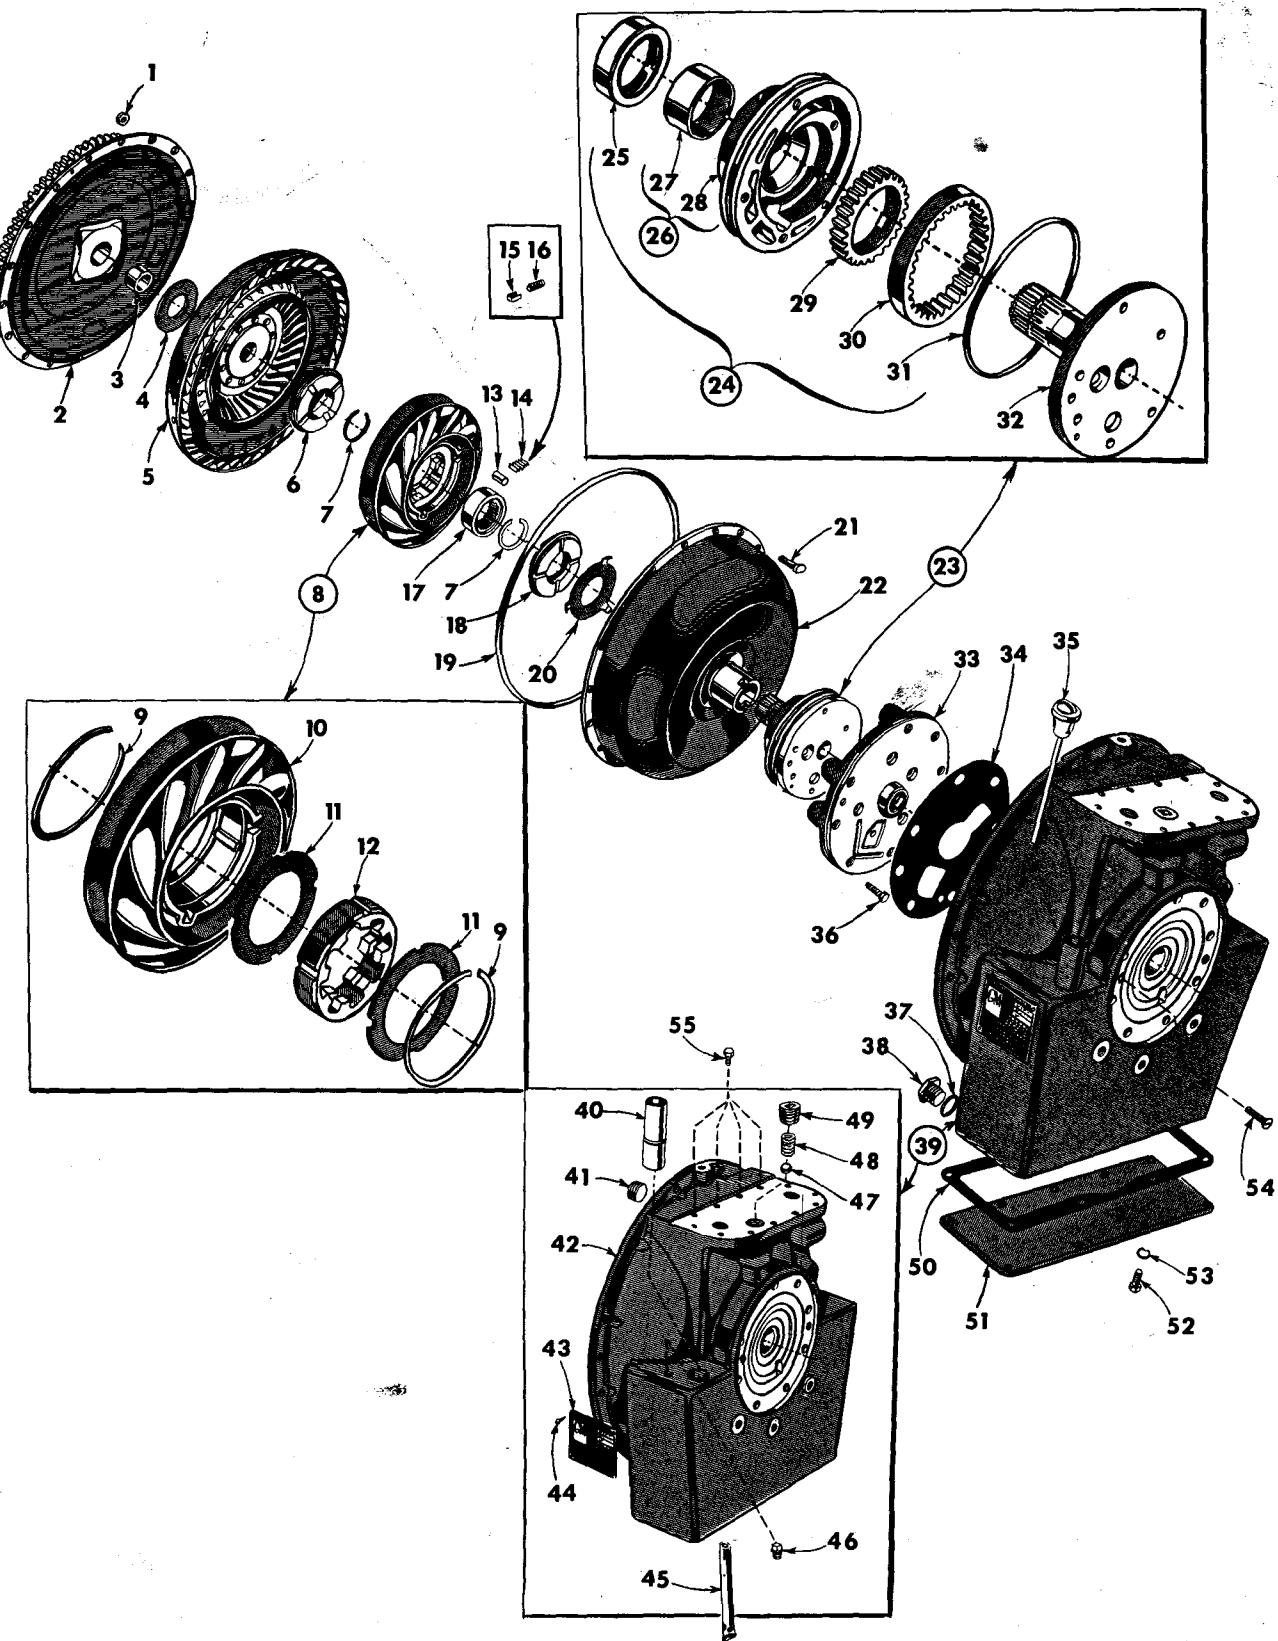


Fig I. TC-200 SERIES BASIC TORQMATIC CONVERTER, EXPLODED VIEW

TC-200 SERIES BASIC TORQMATIC CONVERTER GROUP A, FIGURE I

REF	NOMENCLATURE	PART NO	REQ
1	NUT	451006	18
2	GEAR & COVER ASSY	6755221	1
3	BUSHING	3702079	1
4	WASHER, Turbine thrust	3719262	1
5	TURBINE ASSY	3702724	1
6	WASHER, Stator frnt thrust	3709094	1
7	RING, Extrnl snap, 1 1/4 OD	6750046	2
8	STATOR ASSY (See SIL 280)	6769234	1
9	RING, Snap	3702104	2
10	STATOR	3702688	1
11	WASHER, Cam thrust	3702103	2
12	CAM, Stator freewheel	3719260	1
13	ROLLER, Stator freewheel	3702101	8
14	SPRING, Roller	3719261	8
15	GUIDE, Roller (use prior to S/N 19439 only)	3691806	8
16	SPRING, Roller (use prior to S/N 19439 only)	3689751	8
17	RACE, Freewheel roller	6754958	1
18	WASHER, Stator rear thrust (See SIL 127.)	6756233	1
19	RING, Seal, 12 ID x .139 dia (See SIL 150.)	3713622	1
20	WASHER, Converter pump thrust	6756629	1
21	BOLT, Spcl	3717166	18
22	PUMP ASSY, Converter	3702742	1
23	PUMP ASSY, Charging oil	6755266	1
24	GEAR & BODY ASSY	6756644	1
25	SEAL, Oil (See SIL 165)	3737894	1
26	BODY ASSY, Oil pump	3702066	1
27	BUSHING	3702069	1
28	BODY, Oil pump	3702067*	1
29	GEAR, Charging oil pump drv	3702070*	1
29	GEAR, Charging oil pump drv (optional)	3719252*	1
30	GEAR, Charging oil pump drvn	3689760*	1
31	RING, Seal	3689826	1
32	SUPPORT, Stator (ground sleeve)	6754964	1
33	ADAPTER, Charging oil pump	6754968	1
34	GASKET, (See SIL 137.)	6756872	1
35	INDICATOR, Oil lever	6755786	1
36	BOLT, Hx hd self-locking, 1/4-20x1	9409062	5
37	GASKET, Annular	105456	1
38	PLUG, Drain	6701230	1
39	HOUSING ASSY, Converter (See SIL 136)	6768955	1
40	SLEEVE, Oil filler	6755789	1
41	PLUG, Sq-sckt hd, 3/4 NPT	444672	2
42	HOUSING, Converter (See SIL 137)	6768942*	
43	PLATE, Torqmatic converter name	6768267	1
44	SCREW, Rnd hd drv, #4 x 1/4	142862	4
45	TUBE, Oil cooler return	6756693	1
46	PLUG, Pipe, 1/4	444576	1
47	BALL	453621	1
48	SPRING	6758597	1
49	PLUG, Sq hd pipe, 1	444678	1
50	GASKET, Sump plate	6754490	1
51	PLATE, Sump	6754495	1
52	BOLT, Hx hd, 5/16-18x7/8	179817	9
53	WASHER, Lock, 5/16	103320	9
54	SCREW, Flat 1/4-20x1 3/4 (See SIL 161.)	113998	2
55	BOLT, Hx hd, 5/16-18 x 1/2 (See SIL 196.)	179812	4

*

Serviced as an assy only - not as a detail part.

TC-200 SERIES BASIC TORQMATIC CONVERTER OUTPUT SHAFTS

To find detail parts for your Allison Torqmatic Converter, turn to, the group and page listed opposite the assembly part number of your converter.

A/N*	MODEL	GROUP	PAGE
6755291	TC 244	A	II-3
6755292	TC 245	B	II-3
6755386	TCA 245	E	II-4
6755387	TCRD 246	D	II-4
6756320	TCA 248	F	II-4
6756733	TC 248	C	II-3
6756751	TCA 247	H	II-5
6757848	TC 248	C	II-3
6757850	TC 244	G	II-5
6758071	TCA 248	K	II-5
6758320	TCA 248	F	II-4
6758586	TCRD 246	J	II-5

*A/N (Assembly number) found on your converter name plate.

ALLISON TORQMATIC CONVERTER SERIES 200-300 PARTS CATALOG

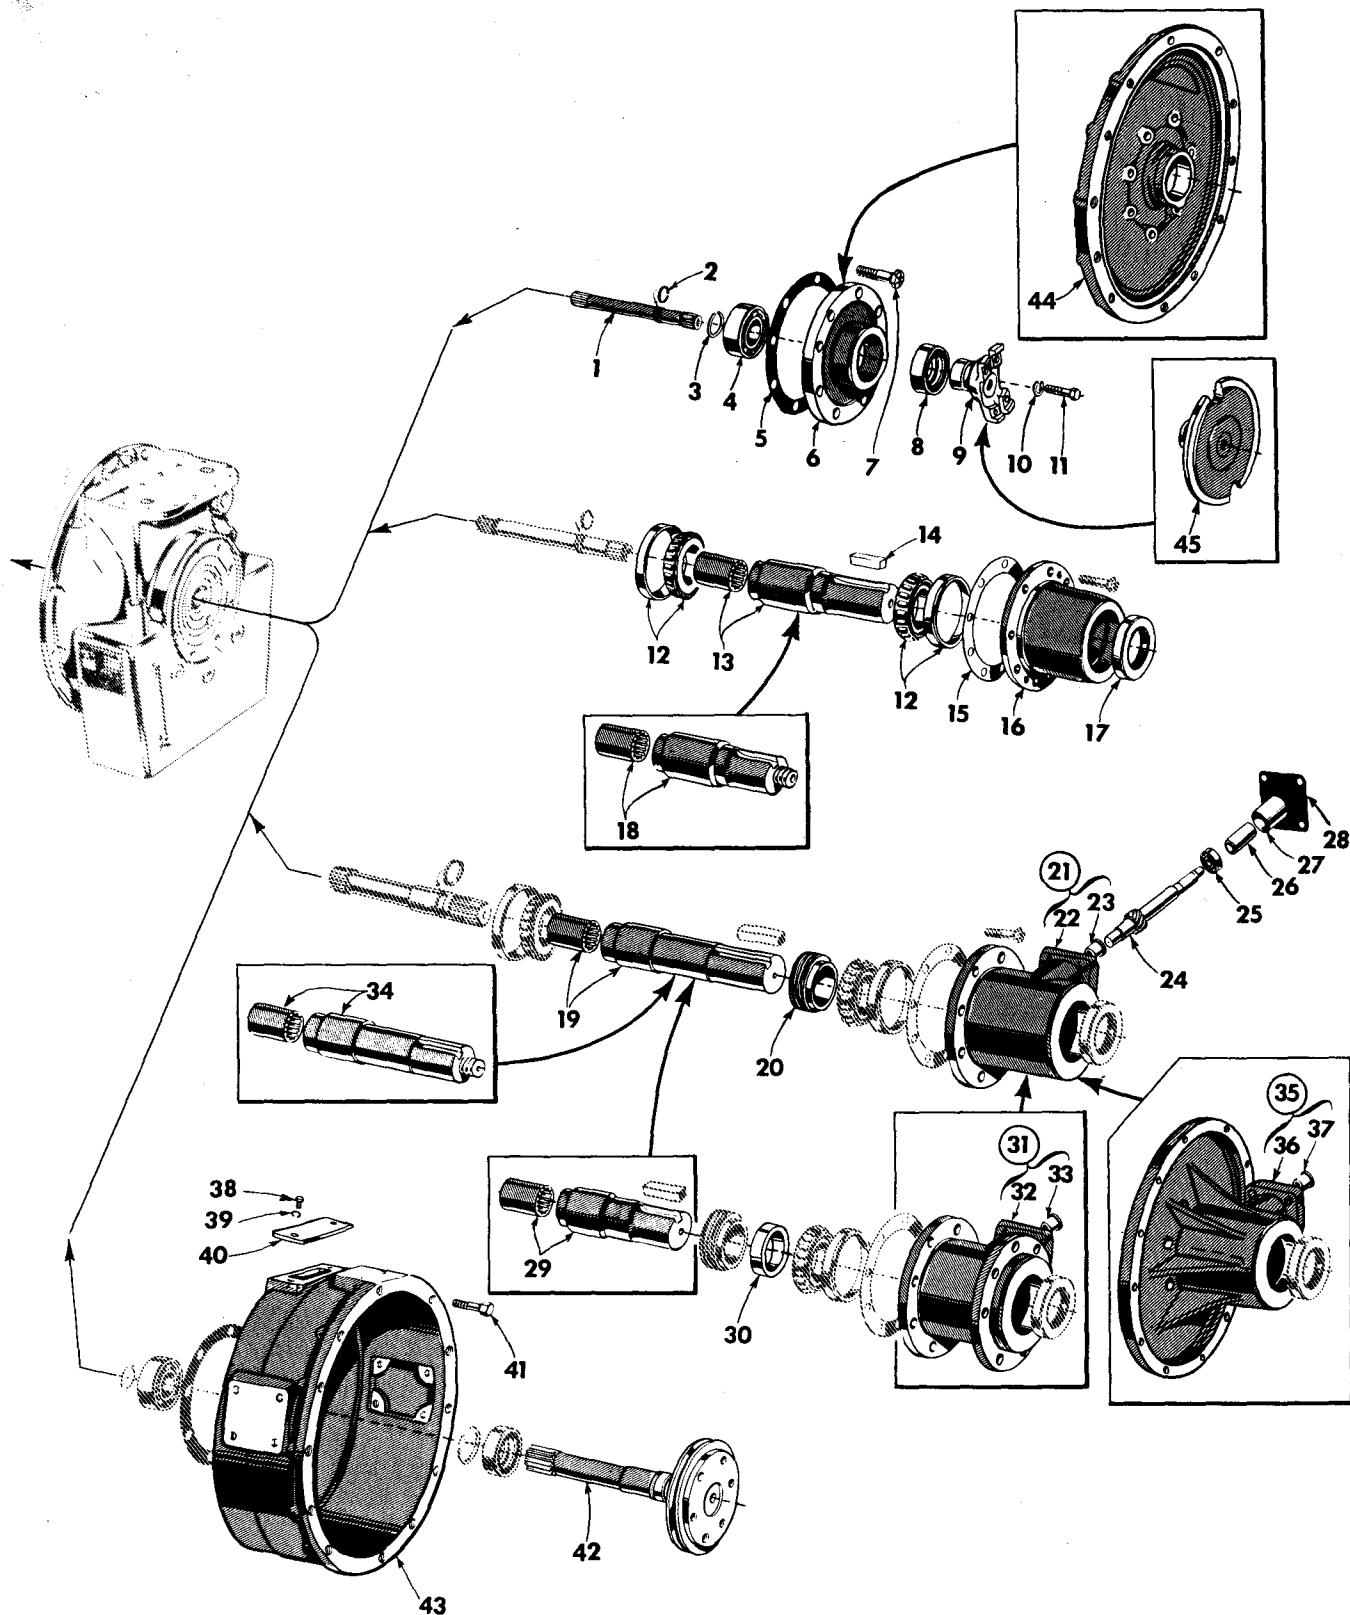


Fig II. TC-200 SERIES BASIC TORQMATIC CONVERTER OUTPUT SHAFTS,
EXPLODED VIEW

TC-200 SERIES OUTPUT SHAFT GROUP A (AUTOMOTIVE), FIGURE II

REF	NOMENCLATURE	PART NO	REQ
1	SHAFT, Turbine (See SIL 221.)	6759462	1
2	RING, Hook type seal	3689838	1
3	RING, Extrnl snap, 1.250 ID	6750046	1
4	BEARING ASSY, Single row ball	903307	1
5	GASKET, Brng rtrn	6753966	1
6	RETAINER, Brng	6755302	1
7	BOLT, Hx hd self-locking, 1/2-13x2 1/2	9409055	8
8	SEAL, Oil, 2.750 x 1.750 ID x .75 thick	6753857	1
9	FLANGE ASSY (M4C)	6754963	1
10	WASHER, Lock, 1/2	103323	1
11	BOLT, Hx hd, 1/2-20x1 1/4	181429	1
12-45	Not used in this group.		

TC-200 SERIES OUTPUT SHAFT GROUP B (INDUSTRIAL), FIGURE II

Same as Group A, except for parts listed below.

3-6	Not used in this group.		
8-11	Not used in this group.		
12	BEARING ASSY, Tapered roller	6751541	2
13	SHAFT ASSY, Converter output	6755032	1
14	KEY, 5/8x5/8x3	6751531	1
15	SHIM, Brng hsng, .003	6753859	AR
15	SHIM, Brng hsng, .010	6753860	AR
16	HOUSING, Brng	6754508	1
17	SEAL, Oil, 3.378 OD x 2.35 ID x .483 wide	6754506	1
18-45	Not used in this group.		

TC-200 SERIES OUTPUT SHAFT GROUP C

(BEVEL PINION MOUNTING), FIGURE II

Same as Group B except for parts listed below.

13-14	Not used in this group.		
18	SHAFT ASSY, Converter output	6756856	1

ALLISON TORQMATIC CONVERTER SERIES 200-300 PARTS CATALOG

TC-200 SERIES OUTPUT SHAFT GROUP D
(SAE #3 REAR DISCONNECT CLUTCH HOUSING), FIGURE II
 Same as Group A, except for parts listed below.

REF	NOMENCLATURE	PART NO	REQ
1	Not used in this group.		
6-7	Not used in this group.		
9-37	Not used in this group.		
38	BOLT, Hx hd, 3/8-16x3/4	179837	2
39	WASHER, Lock, 3/8	103321	2
40	SHIELD, Dust	6757426	1
41	BOLT, Hx hd self-locking, 1/2-13x2 3/4	9409203	8
42	SHAFT, Turbine	6755469	1
43	HOUSING, SAE #3 rear disconnect clu	6754349	1

TC-200 SERIES OUTPUT SHAFT GROUP E
(INDUSTRIAL SHAFT WITH ACCESSORY DRIVE), FIGURE II
 Same as Group B except for parts listed below.

13	Not used in this group.		
16	Not used in this group.		
18	Not used in this group.		
19	SHAFT ASSY, Converter output	6755383	1
20	GEAR, Accessory drv	6755619	1
21	HOUSING ASSY, Brng	6755377	1
22	HOUSING, Brng	6755384*	1
23	BUSHING	2222424	1
24	GEAR, Accessory drvn	6755618	1
25	BEARING ASSY, Single row ball	954498	1
26	SLEEVE, Accessory drv	3224085	1
27	SPACER, 1.38 OD x .06 wall x 2.16	6751524	1
28	GASKET	3224773	1

TC-200 SERIES OUTPUT SHAFT GROUP F
(INDUSTRIAL SHAFT WITH ACCESSORY DRIVE AND
BEVEL PINION MOUNTING), FIGURE II
 Same as Group E, except for parts listed below.

7	BOLT, Hx hd, 1/2-13x2 3/4	9409203	8
14	Not used in this group.		
19	Not used in this group.		
29-33	Not used in this group.		
34	SHAFT ASSY, Converter output	6756321	1
35	HOUSING ASSY, Brng	6757521	1
36	HOUSING, Brng	6757115	1
37	BUSHING	2222424	1

* Serviced as an assy only - not as a detail part.

TC-200 SERIES OUTPUT SHAFT GROUP G (COUPLING), FIGURE II
 Same as Group A except for parts listed below.

REF	NOMENCLATURE	PART NO	REQ
6	Not used in this group.		
7	BOLT, Hx hd, 1/2-13 x 2 3/4	9409240	8
9	Not used in this group.		
44	RETAINER, Brng	6757737	1
45	COUPLING, Output drv	6757757	1

TC-200 SERIES OUTPUT SHAFT GROUP H (INDUSTRIAL), FIGURE II
 Same as Group E, except for parts listed below.

7	BOLT, Hx hd, self-locking	9409240	8
12	BEARING ASSY, Tapered roller	456635	2
18-19	Not used in this group.		
21-23	Not used in this group.		
29	SHAFT ASSY, Converter output	6758295	1
30	SPACER, Converter output shaft	6756689	1
31	HOUSING ASSY, Brng	6756706	1
32	HOUSING	6756698	1
33	BUSHING	2222424	1

**TC-200 SERIES OUTPUT SHAFT GROUP J
 (SAE #3 REAR DISCONNECT CLUTCH HOUSING), FIGURE II**
 Same as Group D except for parts listed below.

42	SHAFT, Turbine	6758592	1
----	--------------------------	---------	---

**TC-200 SERIES OUTPUT SHAFT GROUP K
 (INDUSTRIAL SHAFT WITH ACCESSORY DRIVE), FIGURE II**
 Same as Group E except for parts listed below.

19	SHAFT ASSY, Converter output	6758124	1
----	--	---------	---

TC-300 SERIES BASIC TORQMATIC CONVERTER

To find detail parts for your Allison Torqmatic Converter, turn to the group and page listed opposite the assembly part number of your converter.

A/N*	MODEL	GROUP	PAGE	A/N*	MODEL	GROUP	PAGE
6755060	TC 324	A	III-3	6759643	TC 376	C	III-4
6755061	TC 325	A	III-3	6759657	TC 324	D	III-5
6755062	TCRD 326	A	III-3	6759658	TC 325	D	III-5
6755390	TCA 325	A	III-3	6759659	TC 327	D	III-5
6755395	TC 374	E	III-5	6759660	TCA 327	D	III-5
6755396	TC 375	E	III-5	6759661	TCA 325	D	III-5
6755397	TCA 375	E	III-5	6759663	TCA 378	B	III-4
6755398	TCRD 376	E	III-5	6759664	TCRD 326	D	III-5
6756752	TC 327	A	III-3	6759666	TC 374	B	III-4
6756753	TCA 327	A	III-3	6759667	TC 374	B	III-4
6756754	TC 377	E	III-5	6759668	TC 375	B	III-4
6756755	TCA 377	E	III-5	6759669	TC 377	B	III-4
6756789	TCA 377	E	III-5	6759672	TCA 377	B	III-4
6756914	TCRD 329	A	III-3	6759674	TCRD 376	B	III-4
6756937	TCRD 379	E	III-5	6759676	TCRD 379	B	III-4
6757844	TCRD 379	E	III-5	6759677	TCA 377	B	III-4
6757846	TC 374	E	III-5	6759706	TCA 377	E	III-5
6757847	TC 378	E	III-5	6759730	TC 378	B	III-4
6758048	TCA 328	A	III-3	6759741	TC 328	D	III-5
6759137	TCA 378	E	III-3	6759759	TCRD 329	D	III-5
6759598	TCA 377	E	III-5	6759767	TCA 377	B	III-4

*A/N (Assembly number) found on your converter name plate.

ALLISON TORQMATIC CONVERTER SERIES 200-300 PARTS CATALOG

6755395

11232

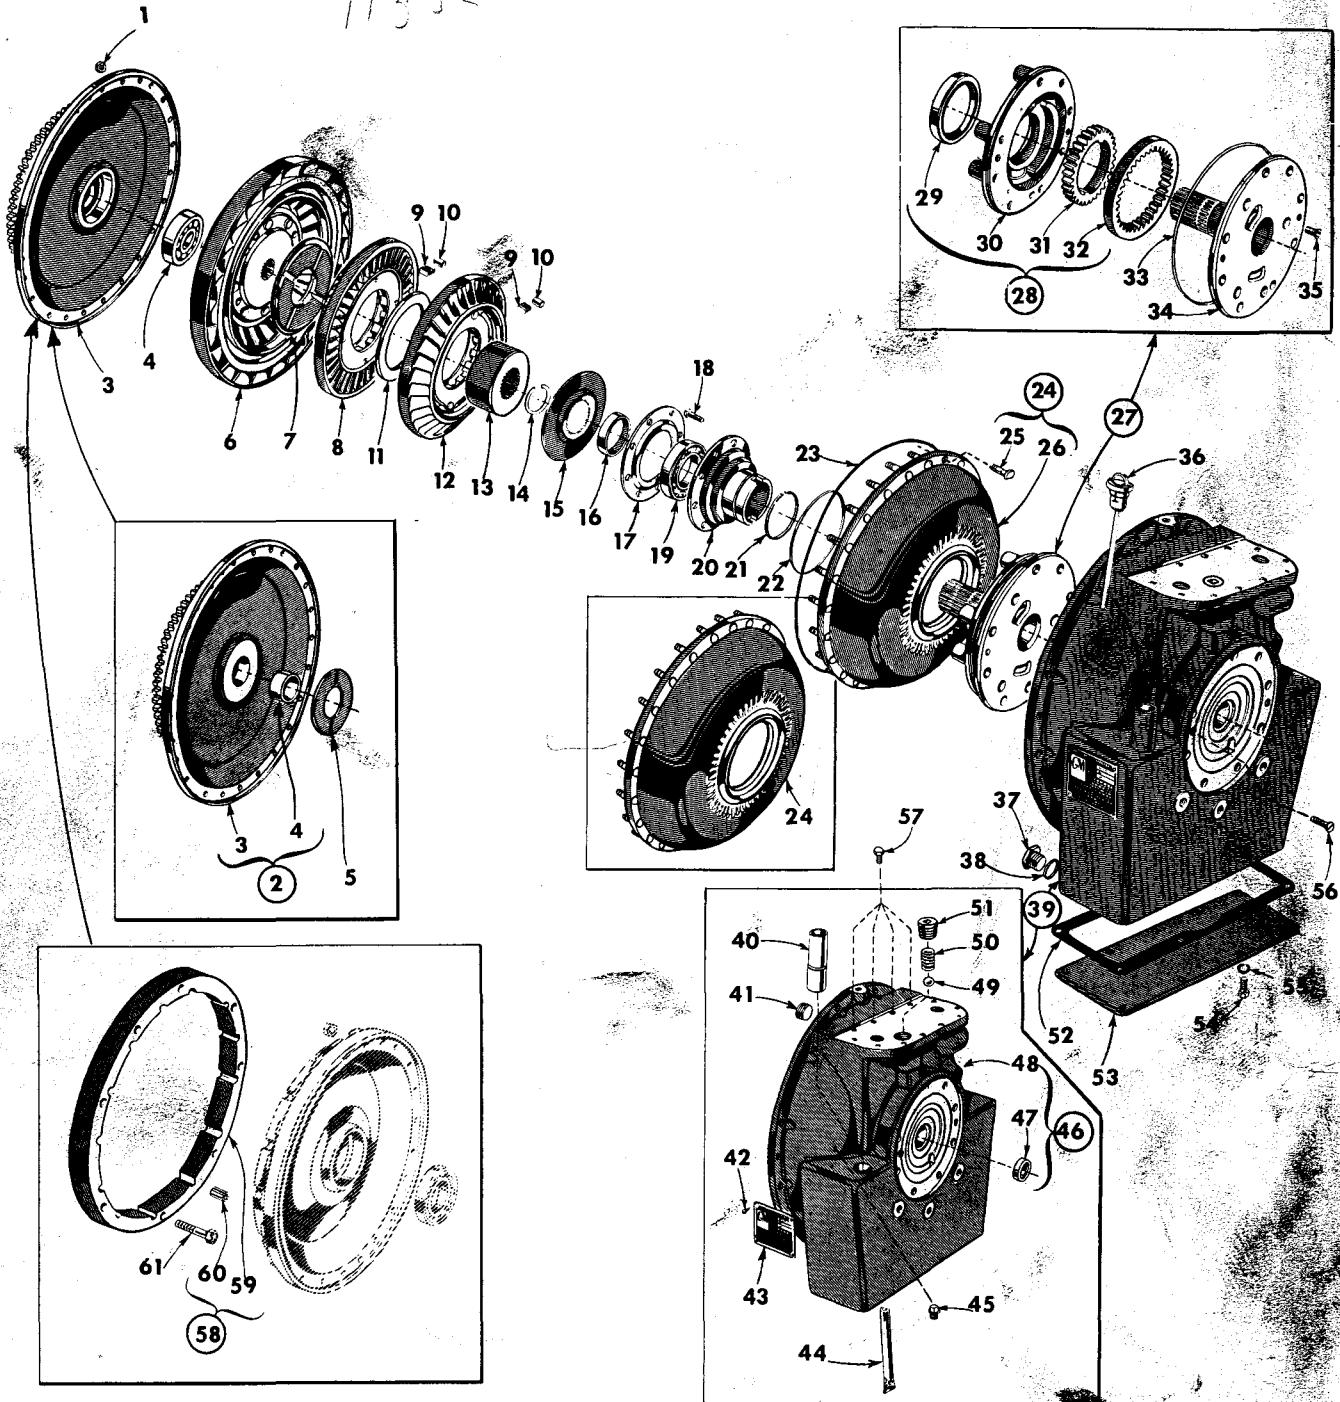


Fig III. TC-300 SERIES BASIC TORQMATIC CONVERTER, EXPLODED VIEW

TC-300 SERIES BASIC TORQMATIC CONVERTER GROUP A, FIGURE III

REF	NOMENCLATURE	PART NO	REQ
1	NUT, Hx lock, 5/16-24	451006	24
2	COVER ASSY, Converter pump (Use prior to S/N 13596. See SIL 224.)	6755325	1
3	COVER, Converter pump (Use prior to S/N 13596. See SIL 224.)	6755317*	1
4	BUSHING (Use prior to S/N 13596. See SIL 224.)	6754922	1
5	COVER, Converter pump (Use 6757712 Cover . . . starting with S/N 13596. See SIL 224.)	6757712	1
6	BEARING ASSY, Single row ball (Use 903208 . . . 903208 Bearing starting with S/N 13596. See SIL 224.)	903208	1
7	WASHER, Turbine thrust (Use prior to S/N 13596. 6755004 See SIL 224.)	6755004	1
8	TURBINE ASSY (Prior to S/N 13596 use Turbine 6755467)	6769453	1
9	WASHER, Stator thrust (use prior to S/N 12227 only) (See SIL 206)	6757753	1
10	STATOR ASSY, First (prior to S/N 12227 use stator 6755463) (See SIL 302)	6768903	1
11	SPRING, Freewheel roller	6754999	16
12	ROLLER, Stator freewheel	7450737	16
13	WASHER, Spcr, 4.62 OD x 3.5 ID x .22 wide . . .	6754994	1
14	STATOR ASSY, Second (See SIL 302)	6768902	1
15	RACE, Freewheel roller	6755892	1
16	RING, Extrnl snap, 1.61 ID	6755897	1
17	SPACER, Freewheel roller race	6769091	1
18	SPACER, 2.00 OD x 1.81 ID x .493 wide (Used only on trns prior to S/N 7144. See SIL 157.)	6755896	1
19	RETAINER, Brng	6757634	1
20	BOLT, Hx hd self-locking, 1/4-20x5/8,cls 2 . .	9409073	8
21	BEARING ASSY, Double row ball (See SIL 157.) . .	6757374	1
22	HUB, Converter pump (See SIL 292)	6768714	1
23	RING, Hook type seal, 2.906 dia	6754488	1
24	RING, Seal	6758296	1
25	RING, Seal	6753866	1
26	PUMP ASSY, Converter (for TC-320 Series) . . .	6756847	1
27	BOLT, Spcl, 5/16-24x1.30	6755988	24
28	PUMP, Converter (for TC-320 series)	6755457*	1
29	PUMP ASSY, Charging oil (use 6757621 prior to S/N 19085) (See SIL 292)	6768707	1
30	GEAR & BODY ASSY (use 6757086 prior to S/N 19085) (See SIL 292)	6768706	1
31	SEAL, 3.00 ID	6768644	1
32	BODY, Oil pump (use 6768349 prior to S/N 19085) (See SIL 161 & 292)	6768704*	1
33	GEAR, Oil pump drv	6768351*	1
34	GEAR, Oil pump drvn	6768350*	1
35	RING, Seal, 8.00 ID x 1/8 dia	6702958	1
	SLEEVE, Converter ground	6757599	1
	SCREW, Flat hd, slotted, 1/4-20x5/8	113989	3

* Serviced as an assy only - not as a detail part.

(CONTINUED ON NEXT PAGE)

TC-300 SERIES BASIC TORQMATIC CONVERTER GROUP A, (CONT'D) FIGURE III

REF	NOMENCLATURE	PART NO	REQ
36	INDICATOR, Oil level	6755786	1
37	PLUG, Drain	6701230	1
38	GASKET, Annular	105456	1
39	HOUSING ASSY, Converter (See SIL 136)	6768956	1
40	SLEEVE, Oil filler	6755789	1
41	PLUG, Sq sckt hd, 3/4 NPT	444672	2
42	SCREW, Rnd hd drv, #4x1/4	142862	4
43	PLATE, Torqmatic converter name	6768267	1
44	TUBE, Oil cooler return	6756693	1
45	PLUG, Pipe, 1/4	444576	1
46-47	Not used in this group.		
48	HOUSING, Converter	6768942*	1
49	BALL	453621	1
50	SPRING	6758597	1
51	PLUG, Sq sckt pipe, 1	444678	1
52	GASKET, Sump plate	6754490	1
53	PLATE, Sump	6754495	1
54	BOLT, Hx hd, 5/16-18x7/8, cls 2	179817	9
55	WASHER, Lock, 5/16	103320	9
56	SCREW, Flat hd, 1/4-20x1 3/4	113998	2
57	BOLT, Hx hd, 5/16-18x1/2 (See SIL 196)	179812	4
58-61	Not used in this group.		

TC-300 SERIES BASIC TORQMATIC CONVERTER GROUP B, Figure III

Same as Group A, except for parts listed below.

3	COVER, Converter pump	6769071	1
58	RING ASSY, Converter drive	6769070	1
59	RING, Converter drive	6769069	1
60	PIN, Roll	453675	12

TC-300 SERIES BASIC TORQMATIC CONVERTER GROUP C, Figure III

Same as Group A, except for parts listed below.

(e)	COVER ASSY, Converter pump	6769049	1
3	COVER, Converter pump	6769056	1
(e)	PLUG	6756348	1
4	BEARING ASSY, Single row ball	903011	1
6	TURBINE ASSY	6769060	1
8	STATOR ASSY, First	6769105	1
13	RACE, Freewheel roller	6769048	1
14	RING, External snap	6758777	1
15	SPACER, Freewheel roller race	6769045	1
18	BOLT, Hx hd, 1/4-20x5/8	179793	8
(e)	LOCKSTRIP	6769053	4
20	HUB, Converter pump	6769062	1
24	PUMP ASSY, Converter (for TC 370 series) . . .	6756001	1
26	PUMP, Converter	6755468	1

(e) Not illustrated.

* Serviced as an assy only - not as a detail part.

(CONTINUED ON NEXT PAGE)

TC-300 SERIES BASIC TORQMATIC CONVERTER GROUP C (CONT'D), Figure III

REF	NOMENCLATURE	PART NO	REQ
27	PUMP ASSY, Charging oil	6769061	1
34	SLEEVE, Converter ground	6769055	1
36	INDICATOR, Oil level	6769090	1
39	HOUSING ASSY, Converter	6769044	1
40	SLEEVE, Oil filler	6769089	1
46	HOUSING ASSY, Converter	6769073	1
47	SLEEVE, Converter housing	6769052	1
48	HOUSING, Converter	6769054	1
58	RING ASSY, Converter drive	6769070	1
59	RING, Converter drive	6769069	1
60	PIN, Spring	453675	12
61	BOLT, Drive ring	9409231	8

TC-300 SERIES BASIC TORQMATIC CONVERTER GROUP D, Figure III

Same as Group B except for parts listed below.

24	PUMP ASSY, Converter (for TC 370 series) . . .	6756001	1
26	PUMP, Converter (for TC 370 series)	6755468	1

TC-300 SERIES BASIC TORQMATIC CONVERTER GROUP E, Figure III

Same as Group A, except for parts listed below.

24	PUMP ASSY, Converter (for TC 370 series) . . .	6756001	1
26	PUMP, Converter (for TC 370 series)	6755468	1

TC-300 SERIES BASIC TORQMATIC CONVERTER OUTPUT SHAFTS

To find detail parts for your Allison Torqmatic Converter, turn to the group and page listed opposite the assembly part number of your converter.

A/N*	MODEL	GROUP	PAGE	A/N*	MODEL	GROUP	PAGE
6755060	TC 324	L	IV-6	6759643	TC 376	P	IV-6
6755061	TC 325	C	IV-3	6759657	TC 324	L	IV-6
6755062	TCRD 326	A	IV-3	6759658	TC 325	C	IV-3
6755390	TCA 325	G	IV-5	6759659	TC 327	D	IV-4
6755395	TC 374	L	IV-6	6759660	TCA 328	J	IV-5
6755396	TC 375	C	IV-3	6759661	TCA 325	G	IV-5
6755397	TCA 375	G	IV-5	6759663	TCA 378	J	IV-5
6755398	TCRD 376	A	IV-3	6759664	TCRD 326	A	IV-3
6756752	TC 327	D	IV-4	6759666	TC 374	M	IV-6
6756753	TCA 327	H	IV-5	6759667	TC 374	L	IV-6
6756754	TC 377	D	IV-4	6759668	TC 375	C	IV-3
6756755	TCA 377	H	IV-5	6759669	TC 377	D	IV-4
6756914	TCRD 329	B	IV-3	6759672	TCA 377	H	IV-5
6756937	TCRD 379	B	IV-3	6759674	TCRD 376	A	IV-3
6756789	TC 378	E	IV-4	6759676	TCRD 379	B	IV-3
6757844	TCRD 379	B	IV-3	6759677	TCA 377	K	IV-5
6757846	TC 374	M	IV-6	6759706	TCA 377	N	IV-6
6757847	TC 378	F	IV-4	6759730	TC 378	E	IV-4
6758048	TC 328	J	IV-5	6759741	TC 328	E	IV-4
6759137	TCA 378	K	IV-5	6759759	TCRD 329	B	IV-3
6759598	TCA 377	L	IV-6	6759767	TCA 377	N	IV-6

*A/N (Assembly number) found on your converter name plate.

ALLISON TORQMATIC CONVERTER SERIES 200-300 PARTS CATALOG

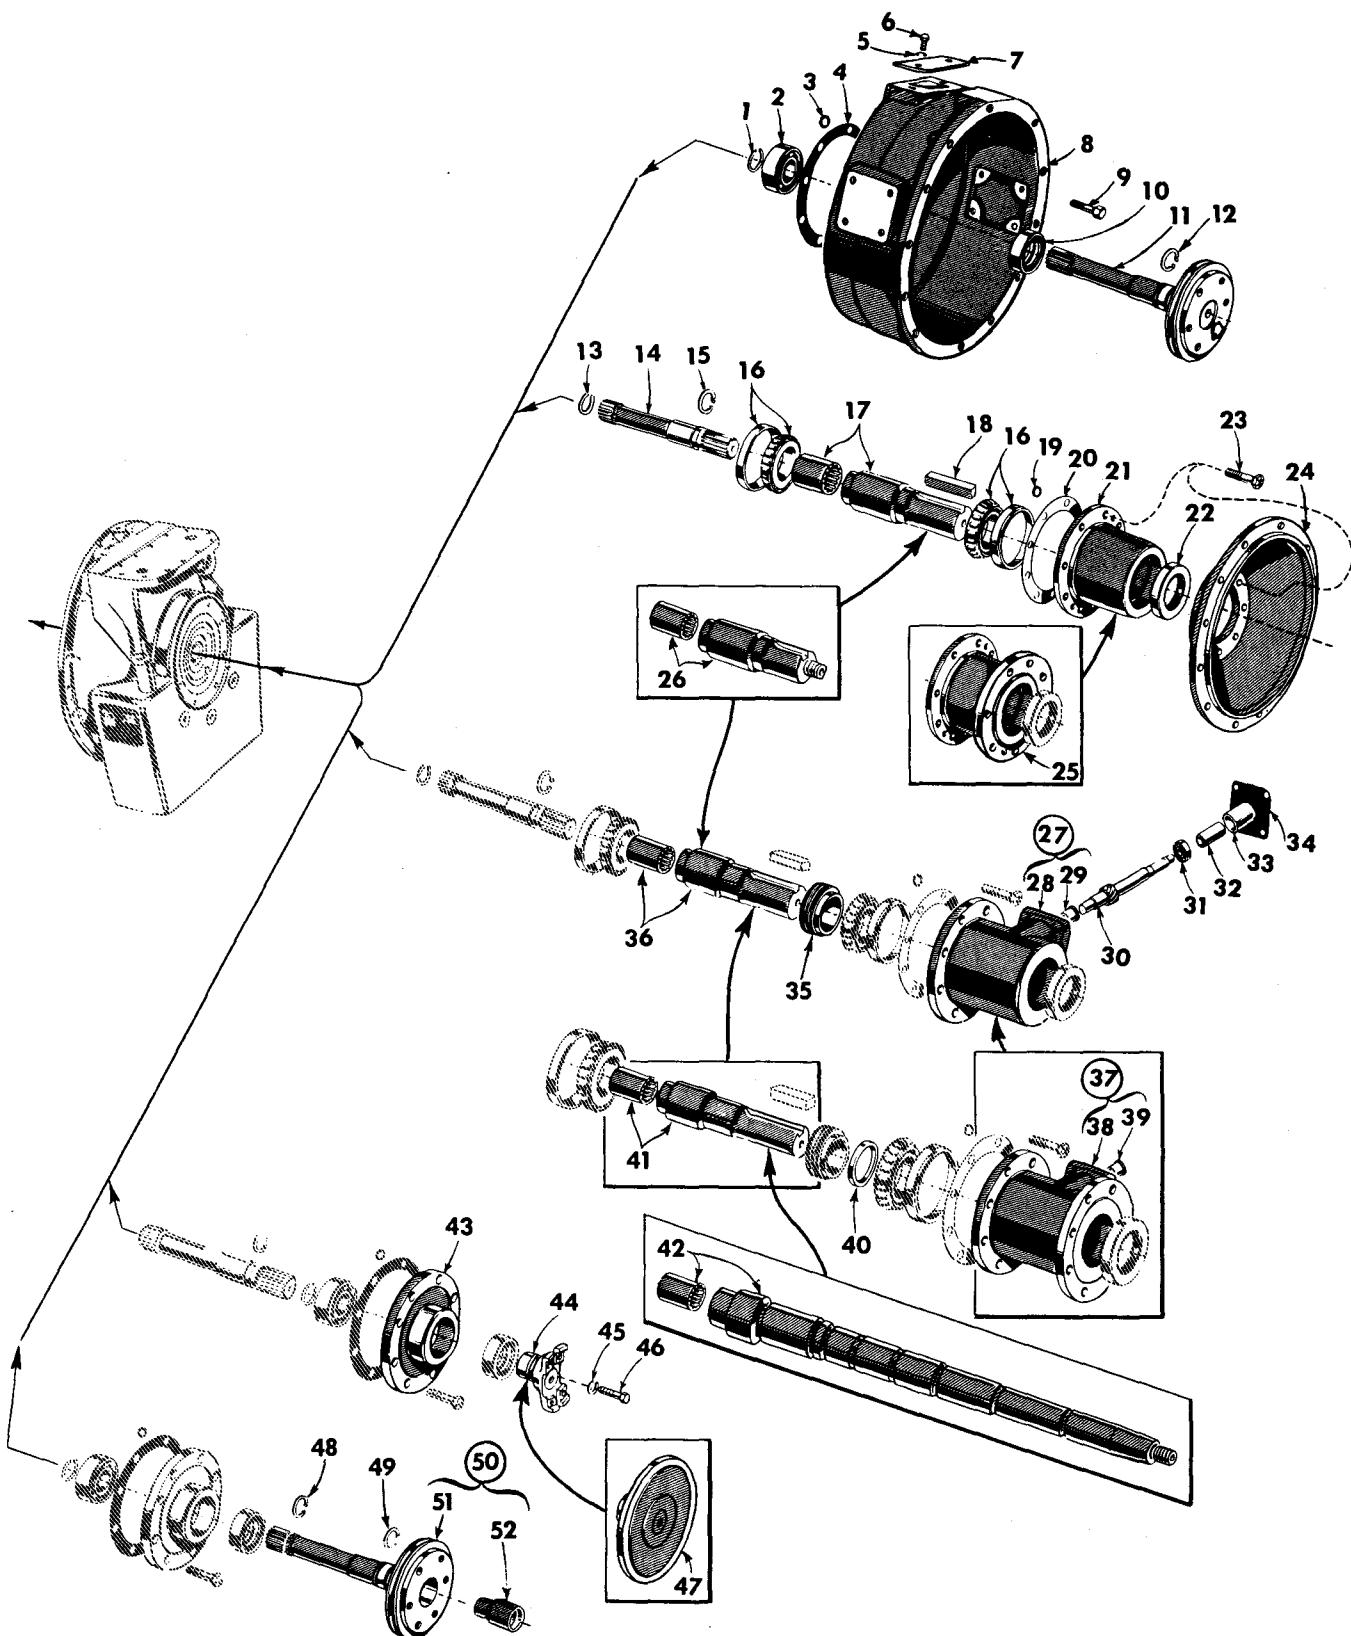


Fig IV. TC-300 SERIES BASIC TORQMATIC CONVERTER OUTPUT SHAFTS,
EXPLODED VIEW

**TC-300 SERIES OUTPUT SHAFT GROUP A
(SAE #3 REAR DISCONNECT CLUTCH HOUSING), FIGURE IV**

REF	NOMENCLATURE	PART NO	REQ
1	RING, Extrnl snap, 1.250 ID	6750046	1
2	BEARING ASSY, Single row ball	903307	1
3	RING, Seal, .487 ID x .103 (See SIL 137.)	6763013	1
4	GASKET, Brng rtnr	6753966	1
5	WASHER, Lock, 3/8	103321	2
6	BOLT, Hx hd, 3/8-16x3/4	179837	2
7	SHIELD, Dust	6757426	1
8	HOUSING, SAE #3 rear disconnect clu	6754349	1
9	BOLT, Hx hd self-locking, 1/2-13x3.00, cls 2	9409240	8
10	SEAL, Oil, 2.750 x 1.75 ID x .75 thick	6753857	1
11	SHAFT, Turbine	6759948	1
12	RING, Hook type seal, 1.406 bore	6751839	1
13-47	Not used in this group.		

**TC-300 SERIES OUTPUT SHAFT GROUP B
(SAE #2 REAR DISCONNECT CLUTCH HOUSING), FIGURE IV**
Same as Group A except for parts listed below.

8	HOUSING, SAE #2 rear disconnect clu	6756913	1
---	---	---------	---

**TC-300 SERIES OUTPUT SHAFT GROUP C
(INDUSTRIAL SHAFT), FIGURE IV**

1-12	Not used in this group.		
13	RING, Extrnl snap, 1.10 ID	8347316	1
14	SHAFT, Turbine	6759947	1
15	RING, Hook type seal, 1.406 bore	6751839	1
16	BEARING ASSY, Tapered roller	6751541	2
17	SHAFT ASSY, Converter output	6755031	1
18	KEY, 5/8x5/8x3	6751531	1
19	RING, Seal, .487 ID x .103 (See SIL 137)	6763013	8
20	SHIM, Brng hsng, .003	6753859	AR
20	SHIM, Brng hsng, .010	6753860	AR
21	HOUSING, Brng	6754508	1
22	SEAL, Oil, 3.378 OD x 2.35 ID x .483 wide	6754506	1
23	BOLT, Hx hd self-locking, 1/2-13x3.00, cls 2	9409240	8
24-47	Not used in this group.		

ALLISON TORQMATIC CONVERTER SERIES 200-300 PARTS CATALOG

TC-300 SERIES OUTPUT SHAFT GROUP D
(INDUSTRIAL SHAFT WITH EXTRA DUTY BEARINGS), FIGURE IV
 Same as Group C except for parts listed below.

REF	NOMENCLATURE	PART NO	REQ
16	BEARING ASSY, Tapered roller	456635	2
17	SHAFT ASSY, Converter output	6756869	1
21	Not used in this group.		
25	HOUSING, Brng	6756865	1

TC-300 SERIES OUTPUT SHAFT GROUP E
(INDUSTRIAL SHAFT WITH BEVEL PINION MOUNTING), FIGURE IV
 Same as Group C except for parts listed below.

13	Not used in this group.		
15	RING, Hook type seal	3689838	1
17	Not used in this group.		
18	Not used in this group.		
23	BOLT, Hx hd self-locking, 1/2-13x2 1/2, cls 2 .	9409055	8
25	HOUSING, Brng	6756865	1
26	SHAFT ASSY, Converter output	6756946	1

TC-300 SERIES OUTPUT SHAFT GROUP F
(INDUSTRIAL SHAFT WITH BEVEL PINION MOUNTING), Figure IV
 Same as Group C, except for parts listed below.

13	Not used in this group.		
17	Not used in this group.		
23	BOLT, Hx hd, 1/2-13x3 1/4	9409227	8
24	PLATE, Trns adptr	6756947	1
26	SHAFT ASSY, Converter output	6756946	1

**TC-300 SERIES OUTPUT SHAFT GROUP G
(INDUSTRIAL SHAFT WITH ACCESSORY DRIVE), FIGURE IV**
Same as Group C except for parts listed below.

REF	NOMENCLATURE	PART NO	REQ
17	Not used in this group.		
21	Not used in this group.		
27	HOUSING ASSY, Brng	6755377	1
28	HOUSING, Brng	6755384*	1
29	BUSHING	2222424	1
30	GEAR, Accessory drvn	6755618	1
31	BEARING ASSY, Single row ball	954498	1
32	SLEEVE, Accessory drv	3224085	1
33	SPACER, 1.38 OD x .06 wall x 2.16	6751524	1
34	GASKET	3224773	1
35	GEAR, Accessory drv	6755619	1
36	SHAFT ASSY, Converter output	6755380	1

**TC-300 SERIES OUTPUT SHAFT GROUP H
(INDUSTRIAL SHAFT WITH EXTRA DUTY BEARINGS
AND ACCESSORY DRIVE), FIGURE IV**
Same as Group G, except for parts listed below.

16	BEARING ASSY, Tapered roller	456635	2
27-29	Not used in this group.		
36	Not used in this group.		
37	HOUSING ASSY, Brng	6756706	1
38	HOUSING, Brng	6756698*	1
39	BUSHING	2222424	1
40	SPACER, Converter output shaft	6756689	1
41	SHAFT ASSY, Converter output	6756691	1

**TC-300 SERIES OUTPUT SHAFT GROUP J
(INDUSTRIAL SHAFT WITH ACCESSORY DRIVE), FIGURE IV-A**
Same as Group G, except for parts listed below.

18	Not used in this group.		
26	SHAFT ASSY	6758054	1
36	Not used in this group.		

**TC-300 SERIES OUTPUT SHAFT GROUP K
(INDUSTRIAL SHAFT WITH ACCESSORY DRIVE), FIGURE IV**
Same as Group G except for parts listed below.

18	Not used in this group.		
41	Not used in this group.		
42	SHAFT ASSY, Converter output	6768346	1

* Serviced as an assy only - not as a detail part.

**TC-300 SERIES OUTPUT SHAFT GROUP L
(AUTOMOTIVE SHAFT), FIGURE IV**

Same as Group A, except for parts listed below.

REF	NOMENCLATURE	PART NO	REQ
5-8	Not used in this group.		
10	BOLT, Hx hd self-locking, 1/2-13x2 3/4, cls 2 .	9409203	8
11	Not used in this group.		
14	SHAFT, Turbine	6759946	1
43	RETAINER, Brng	6755302	1
44	FLANGE ASSY (M4C)	6755333	1
45	WASHER, Lock, 1/2	103323	1
46	BOLT, Hx hd, 1/2-20x1 1/4, cls 2	181429	1

TC-300 SERIES OUTPUT SHAFT GROUP M (Coupling), Figure IV

Same as Group L, except for parts listed below.

44	Not used in this group.		
47	COUPLING, Output drv	6757758	1

**TC-300 SERIES OUTPUT SHAFT GROUP N
(INDUSTRIAL SHAFT WITH EXTRA DUTY BEARINGS
AND ACCESSORY DRIVE), Figure IV**

Same as Group H, except for parts listed below.

30	GEAR, Accessory drvn	6768425	1
35	GEAR, Accessorydrv	6768426	1

TC-300 SERIES OUTPUT SHAFT GROUP P, Figure IV

1	SNAPRING	6703023	1
2	BEARING, Single row ball	954528	1
3	SEALRING, .487 ID x .103 dia	6763013	8
4	GASKET, Bearing hsng	6753966	1
5-8	Not used in this group.		
9	BOLT, 1/2-13x2 3/4	9409203	8
10	SEAL, Lip type	6754947	1
11-42	Not used in this group.		
43	RETAINER, Bearing	6769057	1
44-47	Not used in this group.		
48	SEALRING, Hook type	6764025	1
49	SEALRING, Hook type	6700296	1
50	SHAFT ASSY, Output	6769051	1
51	SHAFT, Output	6769058	1
52	PLUG	6769050	1

TC 200-300 SERIES OPTIONAL EQUIPMENT

MANUAL INPUT DISCONNECT CLUTCH ASSEMBLY OPTION

To find detail parts for your Allison Torqmatic Converter Option, turn to the group and page listed opposite the series number of your converter.

SERIES	GROUP	PAGE
TC 200 (Option 6757004)	A	V-3
TC 300 (Option 6757004)	A	V-3

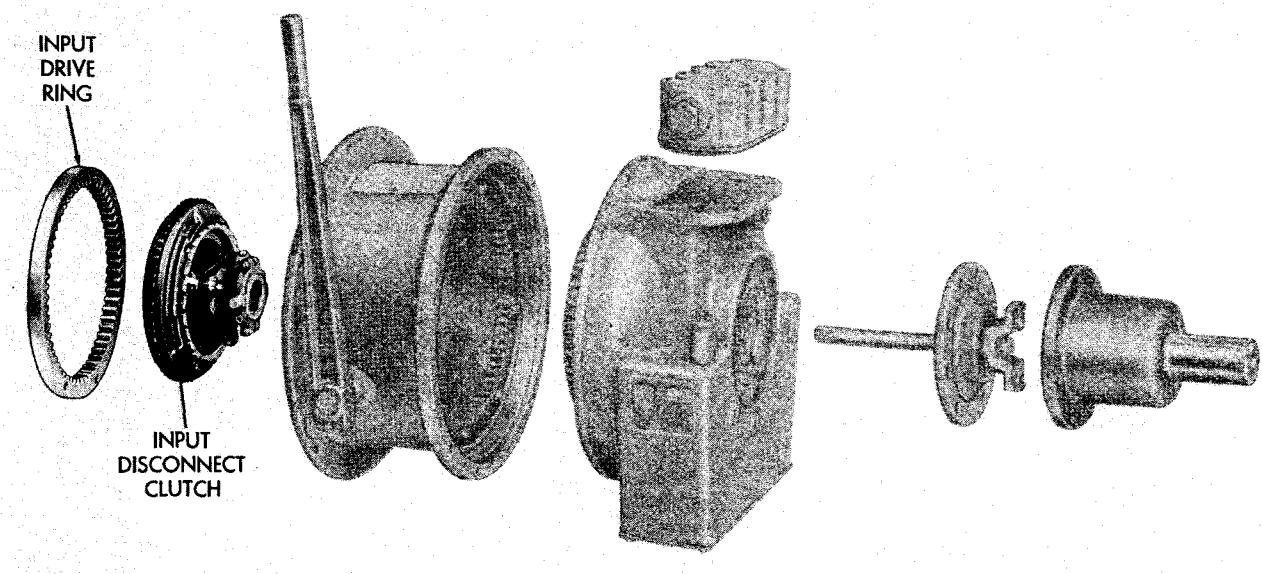


Fig V. TC 200-300 SERIES MANUAL INPUT DISCONNECT CLUTCH ASSEMBLY OPTION

ALLISON TORQMATIC CONVERTER SERIES 200-300 PARTS CATALOG

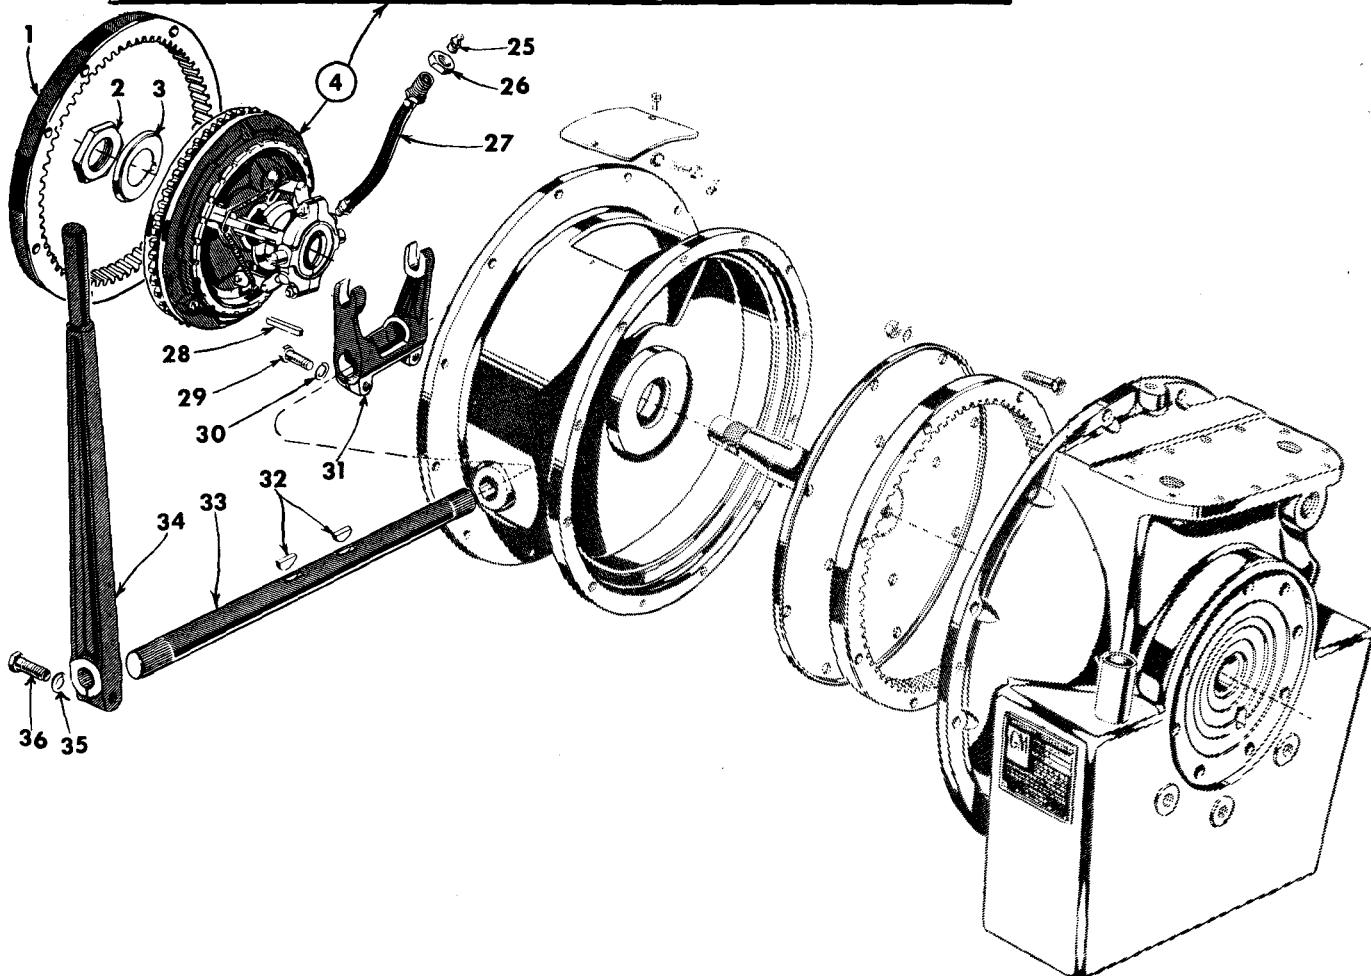
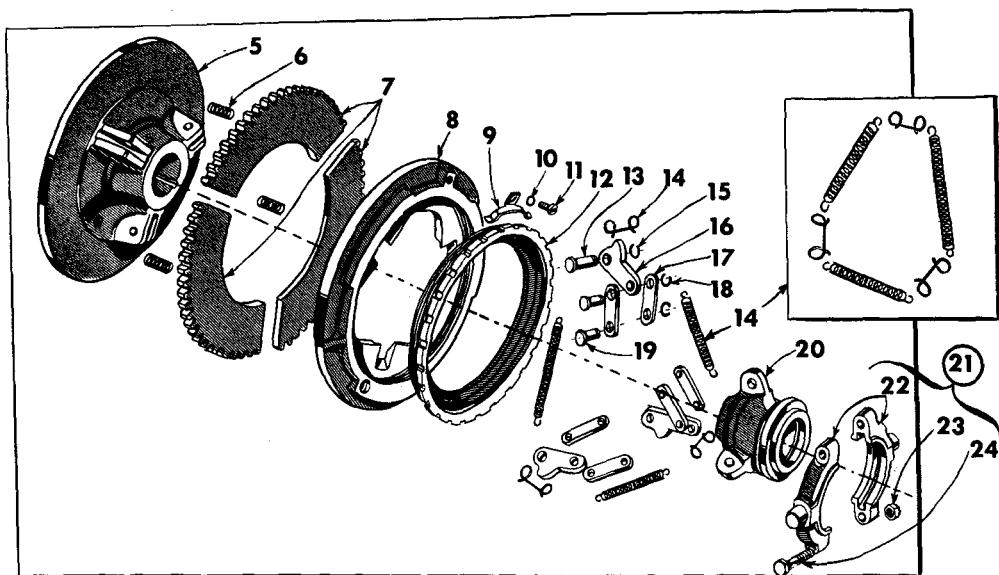


Fig V-A. TC 200-300 SERIES MANUAL INPUT DISCONNECT CLUTCH ASSEMBLY
OPTION, EXPLODED VIEW

**GROUP A — MANUAL INPUT DISCONNECT CLUTCH ASSEMBLY
(OPTION 6757004), FIGURE V-A**

REF	NOMENCLATURE	PART NO	REQ
1	RING, Drv, 10	5192180	1
2	NUT	5192153	1
3	WASHER	5194671	1
4	CLUTCH ASSY, Manual input disconnect, 10	5194365	1
5	BODY, Clu	5193258	1
6	SPRING, Separator	5193431	3
7	FACING ASSY	5192182	1
8	PLATE, Presr	5194294	1
9	LOCK, Adjusting	5194291	1
10	WASHER, Shakeproof, 1/4	114604	1
11	SCREW, Fillister hd, 1/4-20x3/8	114351	1
12	NUT, Adjusting	5193430	1
13	PIN, Clevis	5193422	3
14	SPRING, Lever	5194138	1
15	RING, Rtnr	5192142	1
16	LEVER	5194140	3
17	LINK, Connecting	5193421	6
18	RING, Rtnr	5192176	6
19	PIN, Clevis	5193420	6
20	SLEEVE, Release	5193259	1
21	BEARING ASSY, Release	5193260	1
22	BEARING, Release (Serviced in assy 5193260 only)*		1
23	NUT, Elastic stop, 5/16-24	214279	2
24	BOLT, Hx hd, 5/16-24x1 3/4	181345	2
25	FITTING, Grease	111296	1
26	NUT, Jam, 5/8-18	114498	1
27	TUBE ASSY, Flx lube	5193064	1
28	KEY, 1/4x1/4x2	5192489	1
29	BOLT, Hx hd, 3/8-16x1 1/4, cls 3	179841	2
30	WASHER, Lock, 3/8	103321	2
31	YOKE, Clu shifter	5193255	1
32	KEY, Woodruff	113782	2
33	SHAFT, Clu shifter	5194244	1
34	LEVER, Clu control hand	6756637	1
35	WASHER, Lock, 1/2	103323	1
36	BOLT, Hx hd, 1/2-13x1 5/8, cls 2	179887	1

* Serviced in assy only - not as a detail part.

TC 200-300 SERIES OPTIONAL EQUIPMENT

MANUAL INPUT DISCONNECT CLUTCH HOUSING
OPTIONS AND DRIVE RING OPTIONS

To find detail parts for your Allison Torqmatic Converter Option, turn to the group and page listed opposite the series number of your converter.

SERIES	GROUP	PAGE
TC 200 (Option 5192180)	B	VI-3
TC 200 (Option 6757000)	C	VI-3
TC 200 (Option 6757002)	E	VI-4
TC 200 (Option 6759249)	H	VI-4
TC 300 (Option 5192163)	A	VI-3
TC 300 (Option 6757001)	D	VI-3
TC 300 (Option 6757003)	F	VI-4
TC 300 (Option 6759251)	G	VI-4
TC 300 (Option 6759252)	J	VI-4
TC 300 (Option 6768580)	G	VI-4
TC 300 (Option 6768581)	K	VI-4
TC 300 (Option 6768582)	F	VI-4
TC 300 (Option 6768583)	D	VI-3
TC 300 (Option 6769108)	L	VI-4

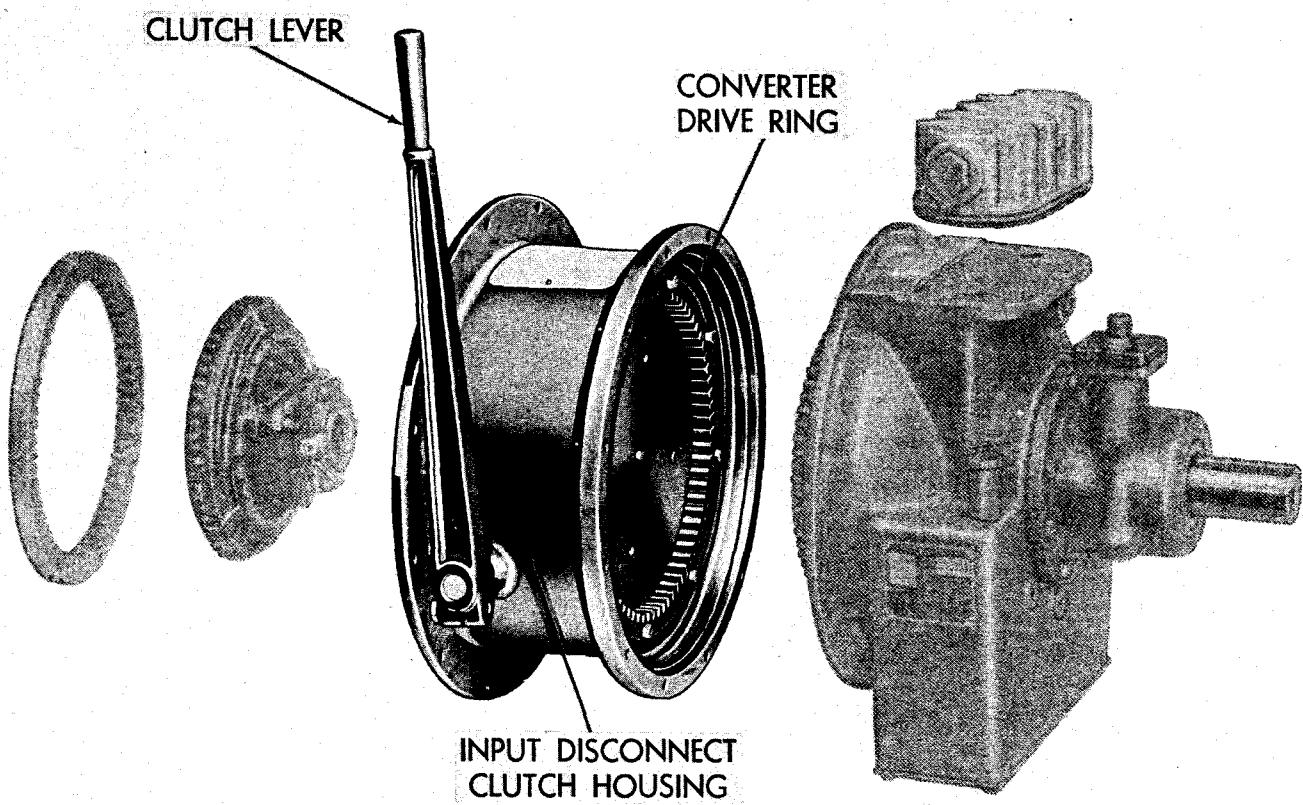


Fig VI. TC 200-300 SERIES MANUAL INPUT DISCONNECT CLUTCH HOUSING
OPTIONS AND DRIVE RING OPTIONS

ALLISON TORQMATIC CONVERTER SERIES 200-300 PARTS CATALOG

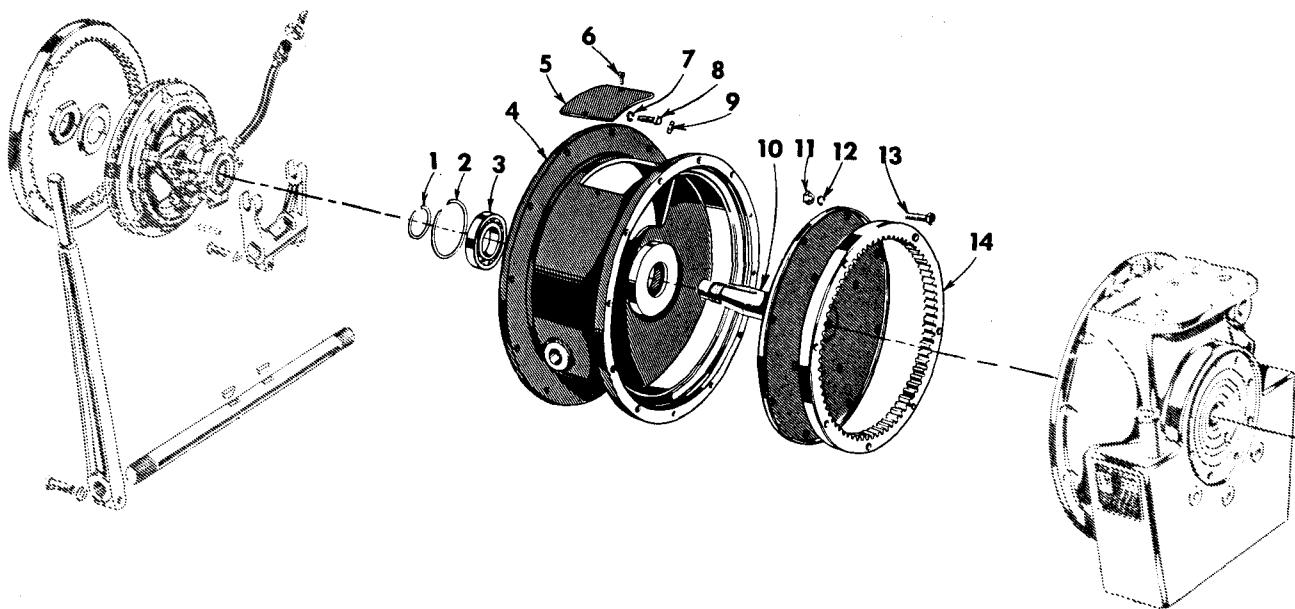


Fig VI-A. TC 200-300 SERIES MANUAL INPUT DISCONNECT CLUTCH HOUSING OPTIONS AND DRIVE RING OPTIONS, EXPLODED VIEW

GROUP A — 11 1/2-INCH DRIVE RING (OPTION 5192163), FIGURE VI-A

REF	NOMENCLATURE	PART NO	REQ
1-13	Not used in this group.		
14	RING, Drv, 11 1/2 dia (use prior to S/N 17314 only)	5192163	1

GROUP B — 10-INCH DRIVE RING (OPTION 5192180), FIGURE VI-A

1-13	Not used in this group.		
14	RING, Drv, 10 dia	5192180	1

GROUP C — SAE #2 MANUAL INPUT DISCONNECT CLUTCH HOUSING (OPTION 6757000), FIGURE VI-A

1	RING, Snap	7709143	1
2	RING, Snap	6753487	1
3	BEARING ASSY, Single row ball	954551	1
4	HOUSING, SAE #2 manual input disconnect clu . .	6756620	1
5	COVER, Manual input disconnect clu hsng	6756618	1
6	SCREW, #10-24 x 7/16	113903	2
7	WASHER, Lock, 3/8	103321	12
8	BOLT, Hx hd, 3/8-16x1 1/8, cls 2	179840	12
9	FITTING, Grease	111296	1
10	SHAFT ASSY, Converter input	6756615	1
11	NUT, 3/8-24	103026	8
12	WASHER, Lock, 3/8	103321	8
13	BOLT, Hx hd, 3/8-16x1 1/2, cls 2	181374	8
14	RING, Drv, 10	5192180	1

GROUP D — SAE #2 MANUAL INPUT DISCONNECT CLUTCH HOUSING (OPTION 6768583), Figure VI-A

Same as Group C except for parts listed below.

10	SHAFT ASSY, Converter input	6756616	1
14	RING, Drv, 11 1/2 (use prior to S/N 17314 only)	5192163	1

GROUP E — SAE #3 MANUAL INPUT DISCONNECT CLUTCH HOUSING (OPTION 6757002), FIGURE VI-A

Same as Group C except for parts listed below.

4	HOUSING, SAE #3 manual input disconnect clu . .	6756627	1
---	---	---------	---

**GROUP F — SAE #3 MANUAL INPUT DISCONNECT CLUTCH HOUSING
(OPTION 6768582), Figure VI-A**

Same as Group D, except for parts listed below.

REF	NOMENCLATURE	PART NO	REQ
4	HOUSING, SAE #3 manual input disconnect clu . .	6756627	1

**GROUP G — SAE #2 MANUAL INPUT DISCONNECT CLUTCH HOUSING
(OPTION 6768580), Figure VI-A**

Same as Group C, except for parts listed below.

1	RING, Snap .	6751822	1
10	SHAFT ASSY, Converter input	6758987	1
14	RING, Drv, 11 1/2 (use prior to S/N 17314 only)	5192163	1

**GROUP H — SAE #2 MANUAL INPUT DISCONNECT CLUTCH HOUSING
(OPTION 6759249), Figure VI-A**

Same as Group C, except for parts listed below.

10	SHAFT ASSY, Converter input	6758988	1
----	---	---------	---

**GROUP J -- SAE #3 MANUAL INPUT DISCONNECT CLUTCH HOUSING
(OPTION 6759252), Figure VI-A**

Same as Group G, except for parts listed below.

4	HOUSING, SAE #3 manual input disconnect clu . .	6756627	1
---	---	---------	---

**GROUP K — SAE #3 MANUAL INPUT DISCONNECT CLUTCH HOUSING
(OPTION 6768581), Figure VI-A**

Same as Group G, except for parts listed below.

4	HOUSING, SAE #3 manual input disconnect clu . .	6756627	1
14	Not used in this group.		

**GROUP L — DRIVE RING BOLTS
(OPTION 6769108), Figure VI-A**

1-12	Not used in this group.		
13	BOLT, Drive ring	9409231	8
14	Not used in this group.		

TC 200-300 SERIES OPTIONAL EQUIPMENT

OIL COOLER OPTIONS, CABLE DRIVE ADAPTER OPTION
FOR ACCESSORY DRIVE, REAR DISCONNECT CLUTCH
ADAPTER OPTION, AND MOUNTING PLATE OPTIONS

To find detail parts for your Allison Torqmatic Converter Option, turn to the group and page listed opposite the series number of your converter.

SERIES	GROUP	PAGE
TC 200 (Option 6757005)	A	VII-3
TC 200 (Option 6756685)	G	VII-4
TC 200 (Option 6755877)	C	VII-3
TC 248 (Option 6757008) Used on A/N 6757848 only)	F	VII-4
TCA 248 (Option 6757007)	D	VII-3
TC 300 (Option 6756685)	G	VII-4
TC 300 (Option 6757006)	B	VII-3
TCA 300 (Option 6755877)	C	VII-3
TC 378 (Option 6757009)	E	VII-4

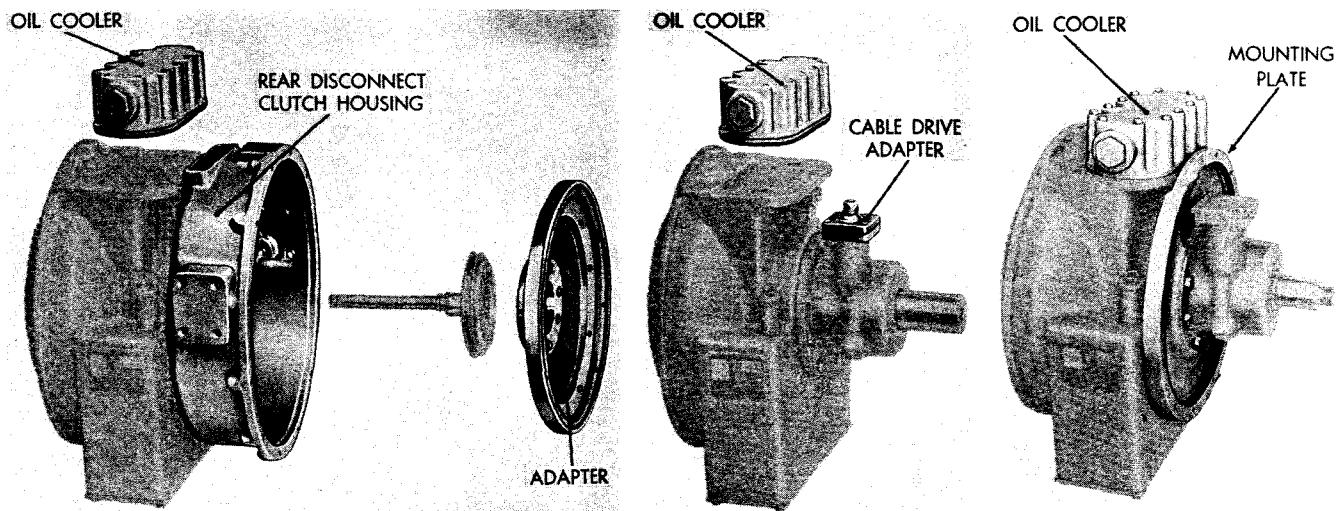


Fig VII. TC 200-300 SERIES OIL COOLER OPTIONS, CABLE DRIVE ADAPTER OPTION, REAR DISCONNECT CLUTCH ADAPTER OPTION, AND MOUNTING PLATE OPTIONS

ALLISON TORQMATIC CONVERTER SERIES 200-300 PARTS CATALOG

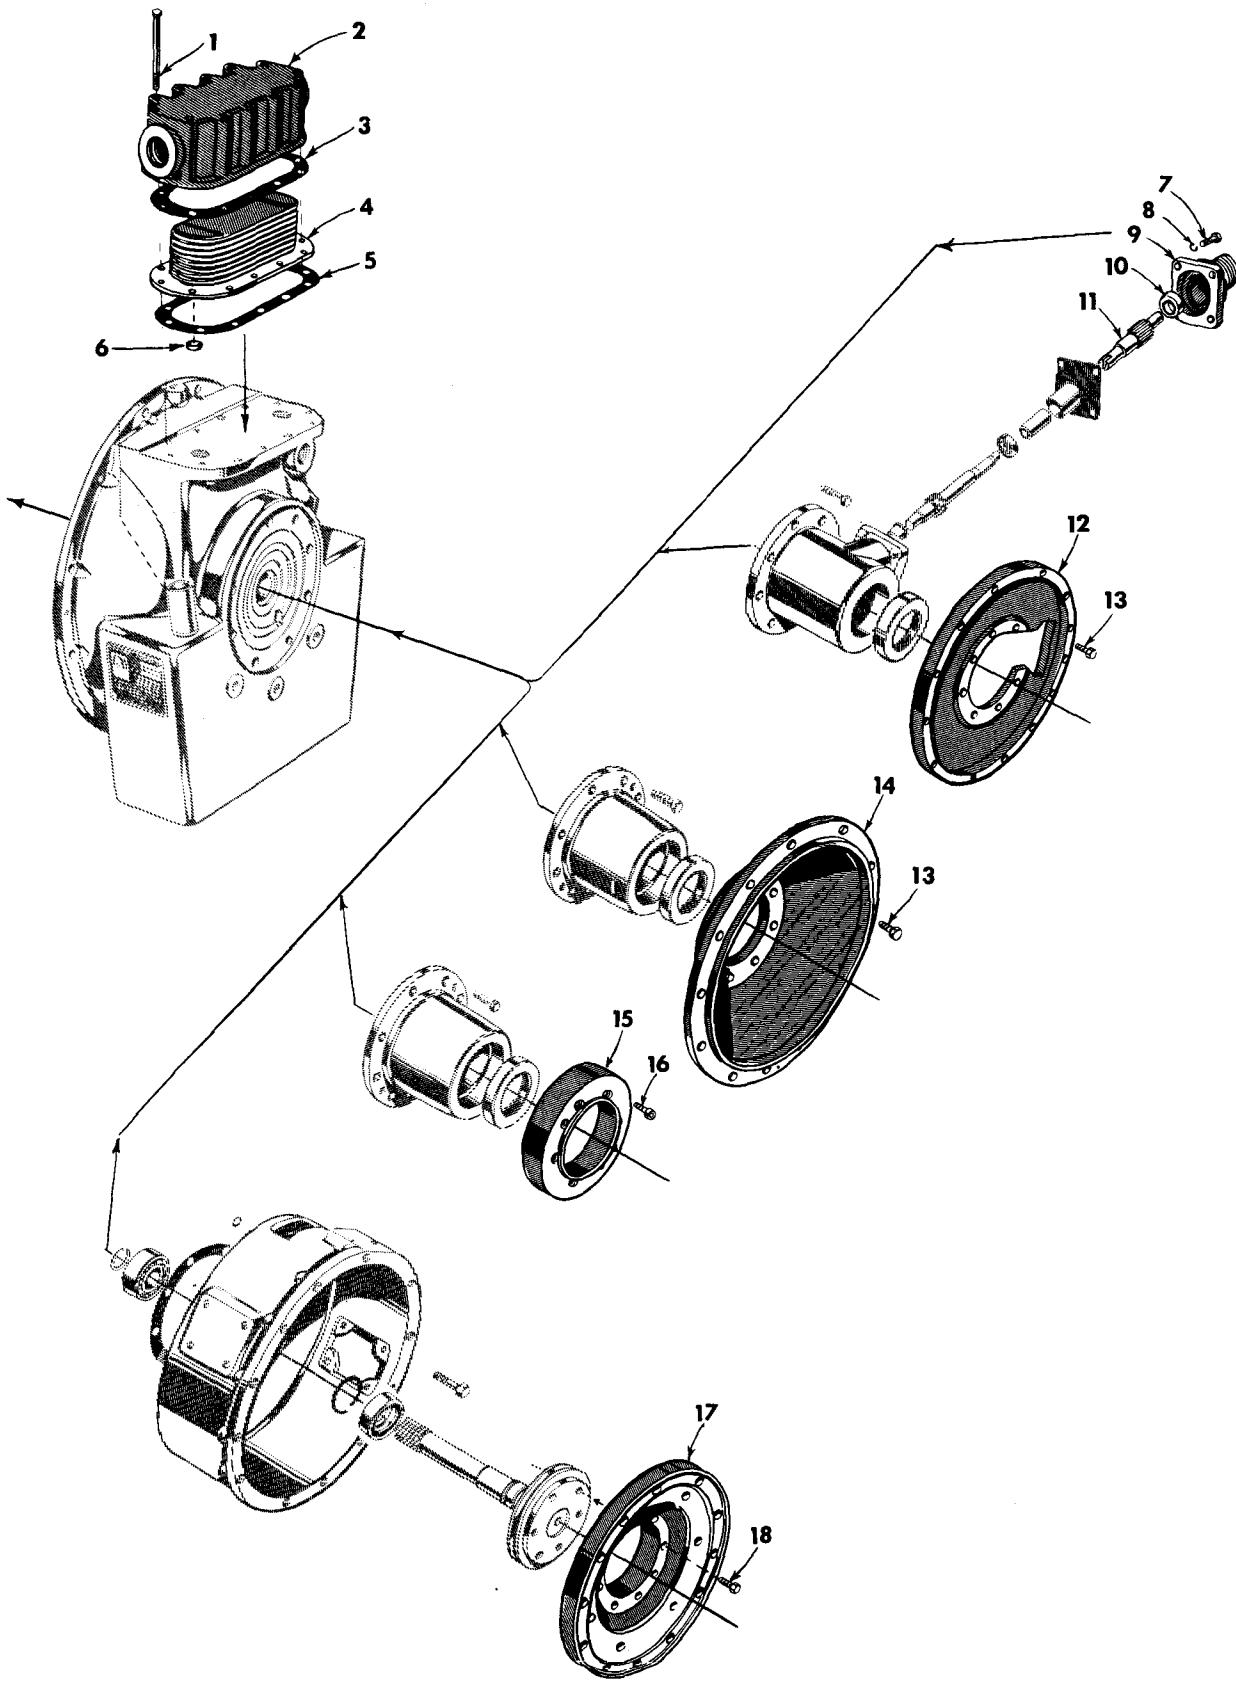


Fig VII-A. TC 200-300 SERIES OIL COOLER OPTIONS, CABLE DRIVE ADAPTER OPTION, REAR DISCONNECT CLUTCH ADAPTER OPTION, AND MOUNTING PLATE OPTIONS, EXPLODED VIEW

GROUP A — OIL COOLER (OPTION 6757005), FIGURE VII-A

REF	NOMENCLATURE	PART NO	REQ
1	BOLT, Hx hd, 5/16-18x3 3/4, cls 2	186271	12
2	COVER, Oil cooler	6755488	1
3	GASKET, Oil cooler cover	6754299	1
4	CORE ASSY, Oil cooler	8522609	1
5	GASKET, Oil cooler	6754314	1
6	PLUG, Orifice, .218 dia (See SIL 136)	6756658	1
7-18	Not used in this group.		

GROUP B — OIL COOLER (OPTION 6757006), FIGURE VII-A

Same as Group A except for parts listed below.

6	PLUG, Orifice, .312 dia (See SIL 136)	6756659	1
---	---	---------	---

**GROUP C — CABLE DRIVE ADAPTER FOR ACCESSORY DRIVE
(OPTION 6755877), FIGURE VII-A**

1-6	Not used in this group.		
7	BOLT, Hx hd, 5/16-18x1 1/8, cls 2	179819	4
8	WASHER, Lock, 5/16	103320	4
9	ADAPTER, Cable drv	6752033	1
10	SEAL, Oil, .50 ID	6752035	1
11	SHAFT, Cable drv adptr	6752034	1
12-18	Not used in this group.		

GROUP D — MOUNTING PLATE (OPTION 6757007), FIGURE VII-A

1-11	Not used in this group.		
12	PLATE, Mntg (Use on converters prior to S/N 6482)	6756362	1
13	BOLT, Hx hd self-locking, 1/2-13x3 1/4, cls 2 (Use on converters prior to S/N 6482.)	9409227	8
14-18	Not used in this group.		

GROUP E — MOUNTING PLATE (OPTION 6757009), FIGURE VII-A

REF	NOMENCLATURE	PART NO	REQ
1-12	Not used in this group.		
13	BOLT, Hx hd self-locking, 1/2-13x3 1/4, cls 2 .	9409227	8
14	PLATE, Mntg	6756947	1
15-18	Not used in this group.		

GROUP F — MOUNTING PLATE (FOR TC-248), FIGURE VII-A

1-14	Not used in this group.		
15	PLATE, Mntg	6756864	1
16	BOLT, Hx sckt hd, 1/2-13x3 3/4	147465	8
17-18	Not used in this group.		

**GROUP G — REAR DISCONNECT CLUTCH ADAPTER
(OPTION 6756685), FIGURE VII-A**

1-16	Not used in this group.		
17	ADAPTER, Rear disconnect clu	6756119	1
18	BOLT, Hx hd self-locking, 1/2-20x1 1/2, cls 2 .	9409060	6

SERVICE INFORMATION LETTERS

Serial No. 127
Page 1 of 1
May 17, 1954

SUBJECT: TORQMATIC CONVERTERS - ALL 200 SERIES MODELS. SERVICE REPLACEMENT STATOR THRUST WASHERS OF CERTAIN EARLY PRODUCTION UNITS.

REFERENCE: Transmission Engineering Memorandum, Serial No. 434 A-B, dated April 12, 1954.

In order to improve the wear characteristics of the stator thrust washers where high torque multiplication for long periods is involved, improved thrust washers have been incorporated on the 200 Series Torqmatic Converters.

All 200 Series Torqmatic Converters, S/N 4803 and below, except 4768, should have both thrust washers replaced in the event disassembly should be required for any reason.

Parts Involved:

Name	Old Part No.	New Part No.
Washer, Rear Thrust	CEX-7990	6756233
Washer, Pump Thrust	3709044	6756629

The following unit serial numbers are affected by this change:

4600	4691	4779	4790
4601	4714	4780	4791
4602	4721	4781	4792
4625	4725	4782	4799
4668	4776	4783	4800
4669	4777	4788	4801
4672	4778	4789	4802
			4803

Service Manager - Transmissions

Serial No. 134
Page 1 of 3
July 30, 1954

**SUBJECT: TORQMATIC CONVERTERS — TC-200 AND 300
SERIES — MODEL CONSOLIDATION**

Effective August 1, 1954, the TC-200 and 300 Series Torqmatic Converters will be broken down into Basic Converters and Option Kits.

A Basic Converter will consist of a Torqmatic Converter, Torqmatic Converter with accessory drive, or Torqmatic Converter with rear disconnect clutch. Such items as coolers, housings, drive rings, etc., are no longer part of a Basic Converter, but will be considered as options. Option Kits will contain all of the necessary parts to be completely assembled to a Basic Converter. This new system should simplify the process of ordering and stocking the units by the customer. At the same time, it will reduce the number of TC-200 and 300 models.

BASIC CONVERTERS

- A. Each Basic Converter will have an assembly number such as 675XXXX. For example, the assembly number of the TC-244 Basic Converter is P/N 6755291.
- B. Each Basic Converter will also have a model number such as TC-245. This is the portion of the model number that defines the Basic Converter. The letters and digits used are explained thus:

- a. The letters refer to the type of Basic Converter:

TC	-	Converter Assembly
TCA	-	Converter with Accessory Drive
TCRD	-	Converter with Rear Disconnect Clutch

Serial No. 134
Page 2 of 3
July 30, 1954

- b. The first two digits will describe the Series:

TC-24X	-	240 Series
TC-32X	-	320 Series
TC-37X	-	370 Series

- c. The third digit will refer to variations such as:

TC-XX4	-	Flange Output - Mechanics 4C
TC-XX5	-	Industrial Output - Standard Bearings
TC-XX6	-	SAE #3 Rear Disconnect Clutch Housing
TC-XX7	-	Industrial Shaft - Extra Duty Bearings
TC-XX8	-	Industrial Shaft - Bevel Pinion Mounting
TC-XX9	-	SAE #2 Rear Disconnect Clutch Housing

OPTION KITS

- A. Each Option Kit will have an assembly number such as 675XXXX. For example, the assembly number for one Cooler Option Kit is P/N 6757005.

Customers who want to assemble options to the basic converter in their own plant, must order these options thus:

The customer wants to assemble a TCA-245 with a cooler, SAE #2 clutch housing with 10" ring and a 10" disconnect clutch. He should order:

TCA-245 Basic Converter P/N 6755386
Cooler Option Kit P/N 6757005
SAE #2 Clutch Housing and 10" Ring
Option Kit P/N 6757000
10" Disconnect Clutch Option Kit P/N 6757004

- B. Each Option Kit will also have a Specification Number. The Option Kit Specification Number will begin with Serial Number 101. For example, the specification number for one cooler option kit is #101.

ALLISON TORQMATIC CONVERTER SERIES 200-300 PARTS CATALOG

Serial No. 134
Page 3 of 3
July 30, 1954

- a. Customers who want a Basic Converter with the options already assembled to it by Allison, should order thus:

Customer who wants the same Basic Converter with options as listed above would order -
TCA-245-107.

- b. In cases where Basic Converter assemblies must be partially disassembled to add special attaching parts, these parts will be classified as Special Options and must be assembled to the Basic Converter by Allison. All Special Options will be given Specification Numbers beginning with Serial Number 201. Example: TCA-248-201.

201-6757008 - Transmission Mounting Plate Option

Due to the adoption of the Basic Converter and Option system, the models listed below are duplications and therefore will be cancelled. They will be released under this system as follows:

<u>Cancelled Part Number</u>	<u>Order now as:</u>
6754956	TC-244-101
6755063	TC-245-101
6755388	TCA-245-101
6755389	TCRD-246-101
6755391	TC-324-102
6755392	TC-325-102
6755393	TCA-325-102
6755394	TCRD-326-102
6755399	TC-374-102
6755400	TC-375-102
6755401	TCA-374-102
6755402	TCRD-375-102

Service Manager - Transmissions

Note: This letter supersedes and replaces Serial No. 136
S. I. L. #136 dated August 9, 1954, Page 1 of 6
Rev. "A" dated 1-24-55 and Rev. "B" August 9, 1954
dated 3-16-55. Rev. "A" 1-24-55
Rev. "B" 3-16-55
Rev. "C" 6-17-55

SUBJECT: TORQMATIC CONVERTER - TC-200 & 300 SERIES -
HYDRAULIC CIRCUITS AND OPERATING PRESSURES.

There are three (3) types of approved hydraulic circuits that are recommended for the subject converters.

1. Integral Heat Exchanger with or without the Integral By-Pass Valve (See S. I. L. No. 175 for Information on Integral By-Pass Valve).

The integral heat exchanger is approved for all applications and will maintain pressures within required limitations. Use of an integral heat exchanger requires use of an orifice in the converter "in" (see sketch) line. Orifice P/N 6756658 with a 7/32" diameter hole, is used with all TC-200 Series Converters. Orifice P/N 6756659 with a 5/16" diameter hole, is used with all TC-300 Series Converters. See sketch for correct flow of water through heat exchanger.

2. Remote Heat Exchanger and External By-Pass Valve (Units below Serial No. 8073).

The remote heat exchanger circuit must have a minimum oil line size of 5/8" I.D., and must have an approved * pressure by-pass valve set for initial opening at 55 plus-minus 5 psi, mounted at the converter oil "out" connection (see below for exceptions) and piped to discharge into the converter oil "in" line. This is for the purpose of controlling converter charging pressure during cold weather starts. This is necessary in order to prevent excessive converter pressure when starting at low ambient temperatures, which could damage the converter.

*Kunkle Fig. 286, 3/4" pressure relief valve set for initial opening at 55 plus-minus 5 psi.

Serial No. 136
Page 2 of 6
August 9, 1954
Rev. "A" 1-24-55
Rev. "B" 3-16-55
Rev. "C" 6-17-55

Exception to location of pressure relief valve

On Detroit Diesel Engine applications, due to peculiarities in the installation, it has been necessary to locate the by-pass valve at the cooler instead of at the converter. The relocation of the by-pass valve in this case has been approved by Allison.

On other installations, if remote mounting of the by-pass valve is necessary, the installation must first be approved by Allison.

3. Remote Heat Exchange and Integral By-pass Valve (Units above Serial No. 8073 see S.I.L. No. 175).

The remote heat exchanger circuit must have a minimum oil line size of 5/8" I.D. in addition to satisfying the cooling requirements for the particular installation. The heat exchanger must have a pressure drop that is compatible with the pressure requirements at stall. In these units the integral by-pass valve will properly control the pressure throughout the remainder of the operating range.

Pressure Limitation on TC-200 & 300 Series Converters.

1. The following oil "out" pressures must be provided at 225 degrees to 250 degrees F. oil temperatures:

TC-200

Minimum at full throttle stall	15 psi
Maximum at full throttle stall	30 psi
Maximum at full throttle no load	60 psi

TC-300

Minimum at full throttle stall	25 psi
Maximum at full throttle stall	35 psi
Maximum at full throttle no load	60 psi

Note: This page replaces and supersedes
Page 3 of 6 pages of S.I.L. No. 136
dated August 9, 1954, and Revision
"A" dated 1-24-55, Rev. "B" dated
3-16-55, Rev. "C" dated 6-17-55
and Rev. "D" dated 3-22-56.

Serial No. 136
Page 3 of 6
August 9, 1954
Rev. "A" 1-24-55
Rev. "B" 3-16-55
Rev. "C" 6-17-55
Rev. "D" 3-22-56
Rev. "E" 5-24-56

2. The following methods should be used to attain the required pressure limitations:

2.1 Pressure at Stall too High

If the converter pressure at stall is too high, the pressure drop in the cooler circuit must be reduced. If an increase in oil line size does not reduce the pressure to the required limits, then a heat exchanger with less restriction must be used.

2.2 Pressure at Stall too Low

If the converter pressure at stall is too low, the pressure drop in the cooler circuit must be increased. The simplest way to do this is to install an orifice of the proper size to provide the minimum pressure shown above.

4. Oil recommendations for units incorporating the integral by-pass valve (units Serial No. 8073 and above).

-10° F and higher:

Hydraulic transmission fluid type C where available, otherwise SAE 10 heavy duty (MIL-L-2104).

-10° F and lower:

Hydraulic transmission fluid type C where available, otherwise SAE 10 heavy duty (MIL-L-2104).

5. Oil recommendations for units using the external by-pass valve (units below Serial No. 8073).

+ 10° F and higher:

Hydraulic transmission fluid type C where available, otherwise SAE 10 heavy duty (MIL-L-2104).

ALLISON TORQMATIC CONVERTER SERIES 200-300 PARTS CATALOG

Serial No. 136
Page 4 of 6
August 9, 1954
Rev. "A" 1-24-55
Rev. "B" 3-16-55
Rev. "C" 6-17-55

+ 10° F and lower:

A mineral base oil meeting the following specifications:

Viscosity at 100° F	55-65 SSU
Viscosity at 210° F	35-38 SSU
Pour Point	-30° F
Flash Point	300° F Min.
Copper Strip Test ASTM #D 130	Negative
Cabinet Humidity Test (Anti-rust and anti-corrosion)	Corrosion around edge of panel only
L-4 Test	Pass
Foam Test	Pass

At temperatures below the pour point of the special light weight oils, auxiliary heat must be applied to raise the oil temperature to its pour point.

The following oils are represented by the respective suppliers as meeting the above specifications. Responsibility for the quality of a lubricating oil and its performance in service must remain with the oil company marketing the lubricant. This list should, therefore, not be construed as a recommendation of the products by the Allison Division of General Motors.

<u>Brand</u>	<u>Type</u>
Esso	Torque Fluid 35
Texas Co.	Texaco Torque Fluid
Cities Service	Torque Fluid #4
Socony-Vacuum	Mobile Fluid #62
Standard Oil of Calif.	RPM Torque Fluid #3
Standard Oil	Stanotorque Conv. Fluid


Since new products are continuously being tested by the oil industry, the listing may not contain all products marketed at the time of issue. Revised lists will be made available from time to time, as additional information is developed.

Service Manager - Transmissions


TC 200-300 SERIES CONVERTER
HYDRAULIC CIRCUIT RECOMMENDATIONS

Serial #136
Page 5 of 6
August 9, 1954
Rev. "A" 1-24-55
Rev. "B" 3-16-55
Rev. "C" 6-17-55

REMOTE HEAT EXCHANGER

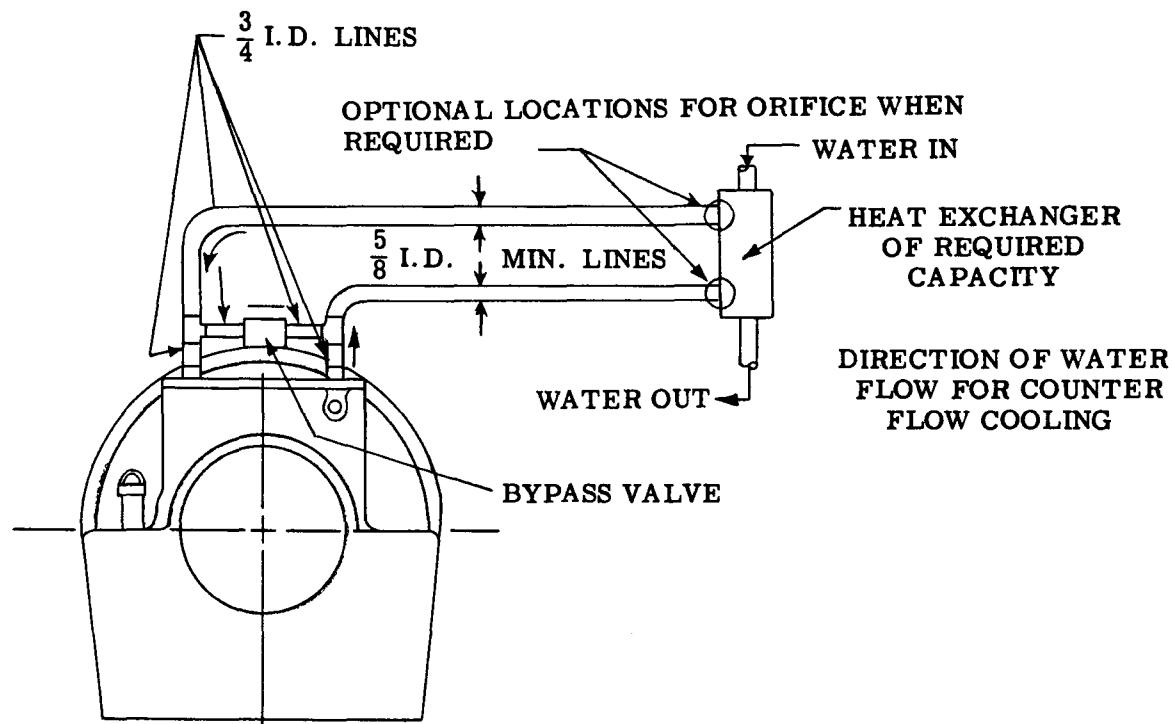


INTEGRAL HEAT EXCHANGER

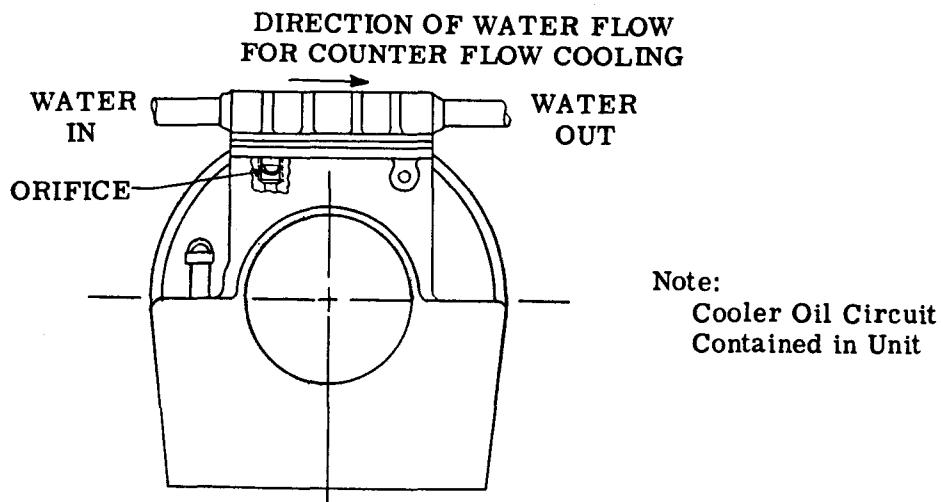

Serial No. 136
Page 6 of 6
August 9, 1954
Rev. "A" 1-24-55
Rev. "B" 3-16-55
Rev. "C" 6-17-55

REMOTE HEAT EXCHANGER
WITH INTEGRAL
BYPASS VALVE

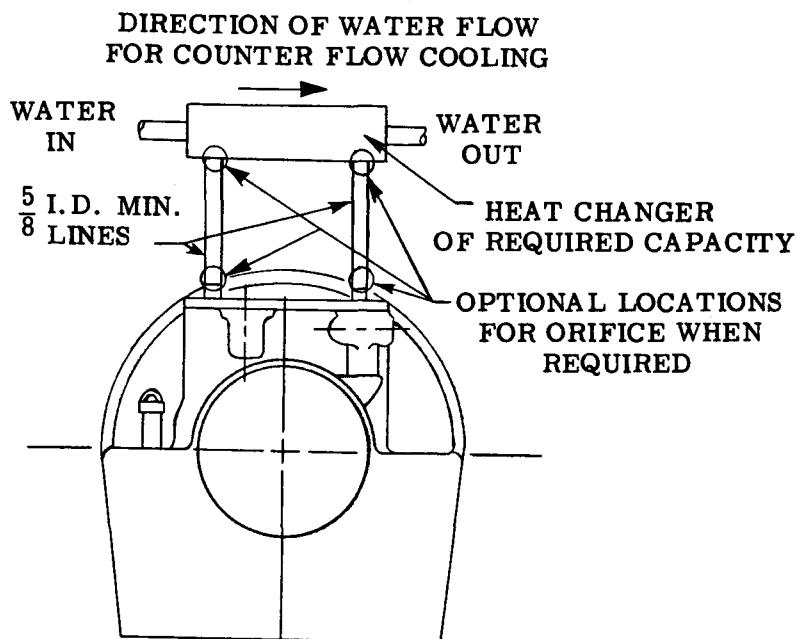

Serial No. 137
Page 1 of 1
August 2, 1954


SUBJECT: TORQMATIC CONVERTERS - ALL MODELS OF
TC-300 SERIES - ADDITION OF "O" RINGS
P/N 7374627 TO THE CONVERTER HOUSING
P/N 6754489.

Starting with Torqmatic Converter Serial Number 5165, counterbores and seal rings were added to the eight (8) mounting holes at the rear of the Converter Housing P/N 6754489.

The "O" Rings P/N 7374627 are recessed in the counterbores and were added in order to preclude the possibility of oil leakage around the mounting bolts.

Note: This same converter Housing P/N 6754489 is used with the TC-200 Series Converters. The "O" Rings are not necessary with the TC-200 Series Converters because of the addition of Gasket P/N 6756872 (Ref.: Service Bulletin #25). Interchangeability is not affected.

Service Manager - Transmissions

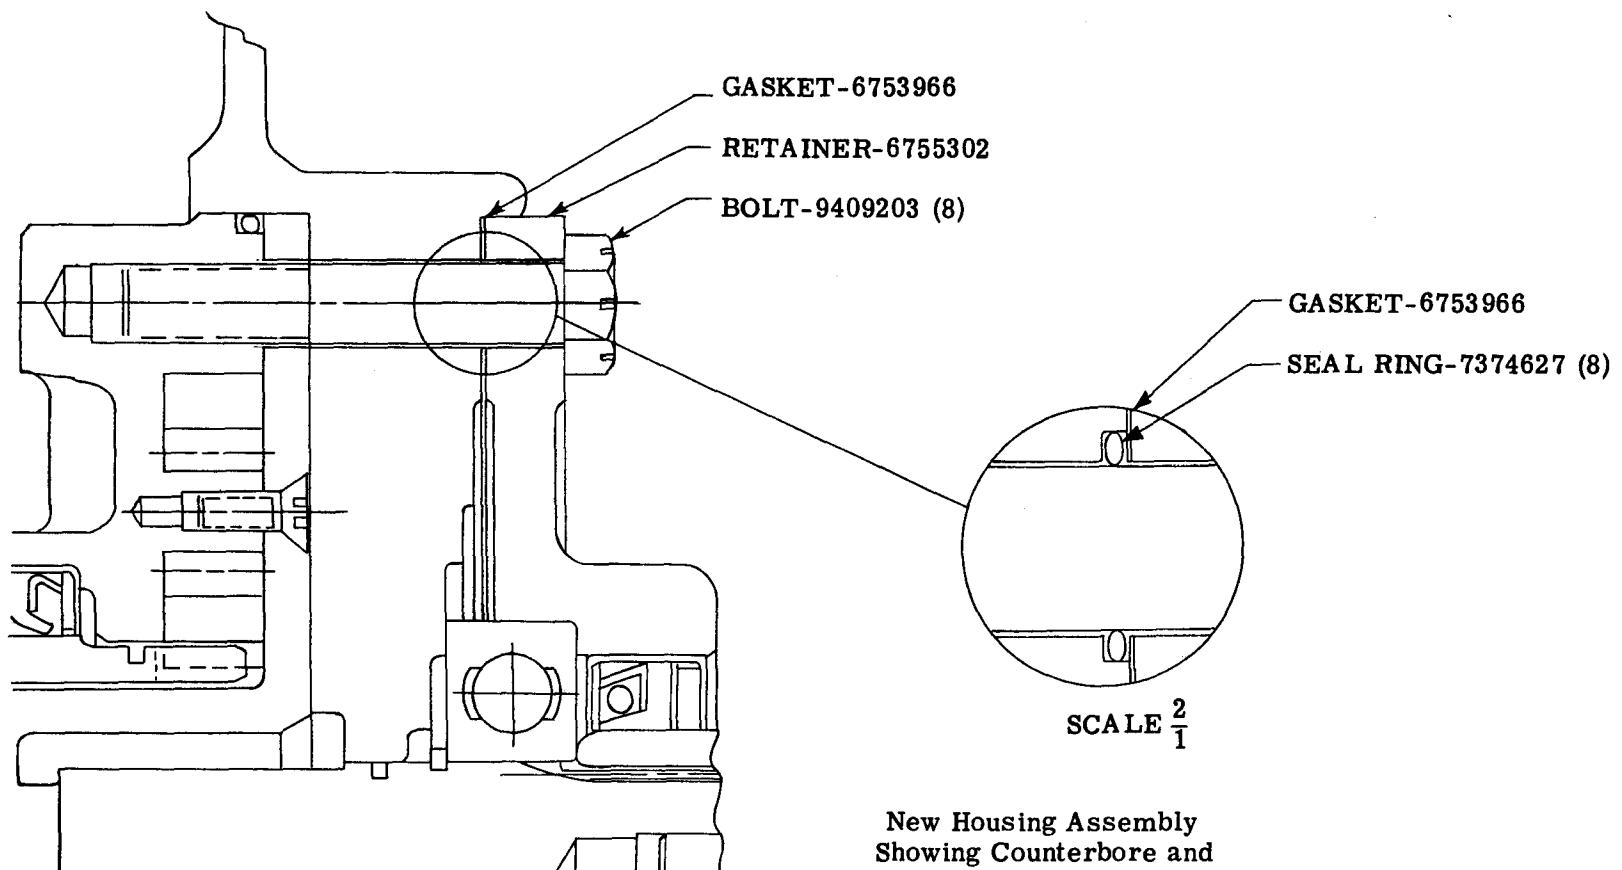

Old Housing Assembly
No Counterbore or
"O" Ring Seal

New Housing Assembly
Showing Counterbore and
"O" Ring Seal

Note: Gasket P/N 6753966
is Retained

S.I.L. 137