



Catalogo Parti Di Ricambio

Spare Parts List

Catalogue Pieces De Rechange

Ersatzteilkatalog

**TRASMISSIONE TLB2
TLB2 TRANSMISSION
TLB2 TRANSMISSION
TLB2 GETRIEBE
REF. 141166**

**INDICE
INDEX
INDEX
INDEX**

1.0.0 Scatola trasmissione
Transmission housing
Bâtier de transmission
Getriebegehäuse

2.0.0 Alberi d'entrata e di trasmissione PTO (asse A)
Input and PTO transmission shafts (axe A)
Arbre d'entrée et arbre moteur PTO (axe A)
Eingangswelle und PTO-Transmissionswelle

3.0.0 Albero primario (asse B) e albero rinvio (asse D)
Primary shaft (axe B) reverse shaft (axe D)
Arbre primaire (axe B) arbre renvoi (axe D)
Hauptantriebswelle (achse B) Vorgelegewelle (achse D)

4.0.0 Albero secondario (asse C)
Secondary shaft (axe C)
Arbre secondaire (axe C)
Nebenabtriebswelle (achse C)

4.1.0 Albero secondario (asse C)
Secondary shaft (axe C)
Arbre secondaire (axe C)
Nebenabtriebswelle (achse C)

5.0.0 Albero d'uscita (asse E)
Output shaft (axe E)
Arbre de sortie (axe E)
Ausgangswelle (achse E)

6.0.0 Pompa olio
Oil pump
Pompe à huile
Ölpumpe

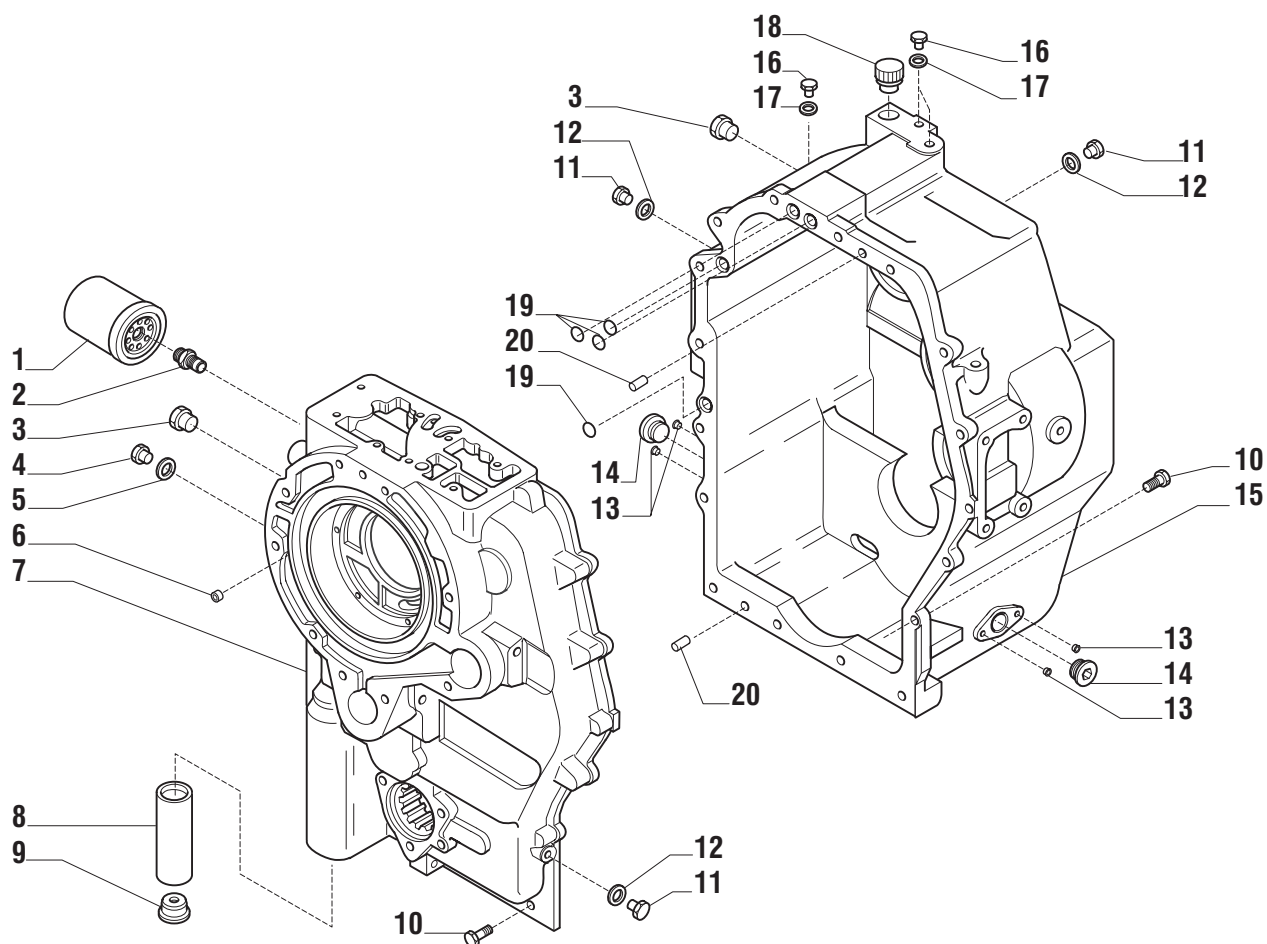
7.0.0 Convertitore
Converter
Convertiteur
Konverter

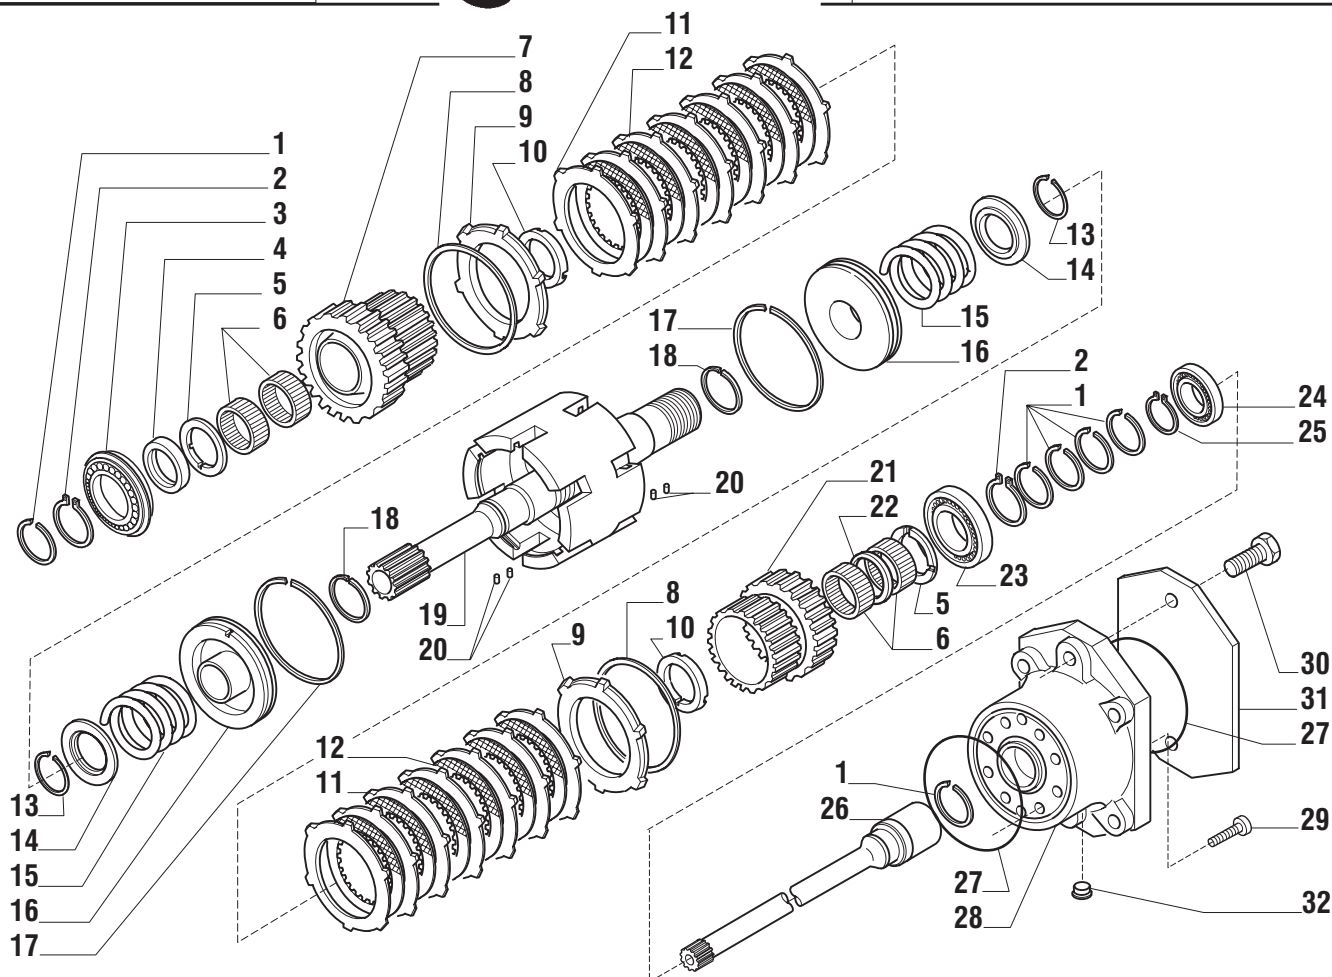
8.0.0 Sistema di gestione idraulica/elettronica
Electronic /hydraulic system
Système de gestion hydraulique/électronique
Hydraulisch/Elektronischverwaltung Systeme

9.0.0 Tubazioni e sensori
Pipes and sensors
Tuyauteries et senseurs
Leitung und Sensor

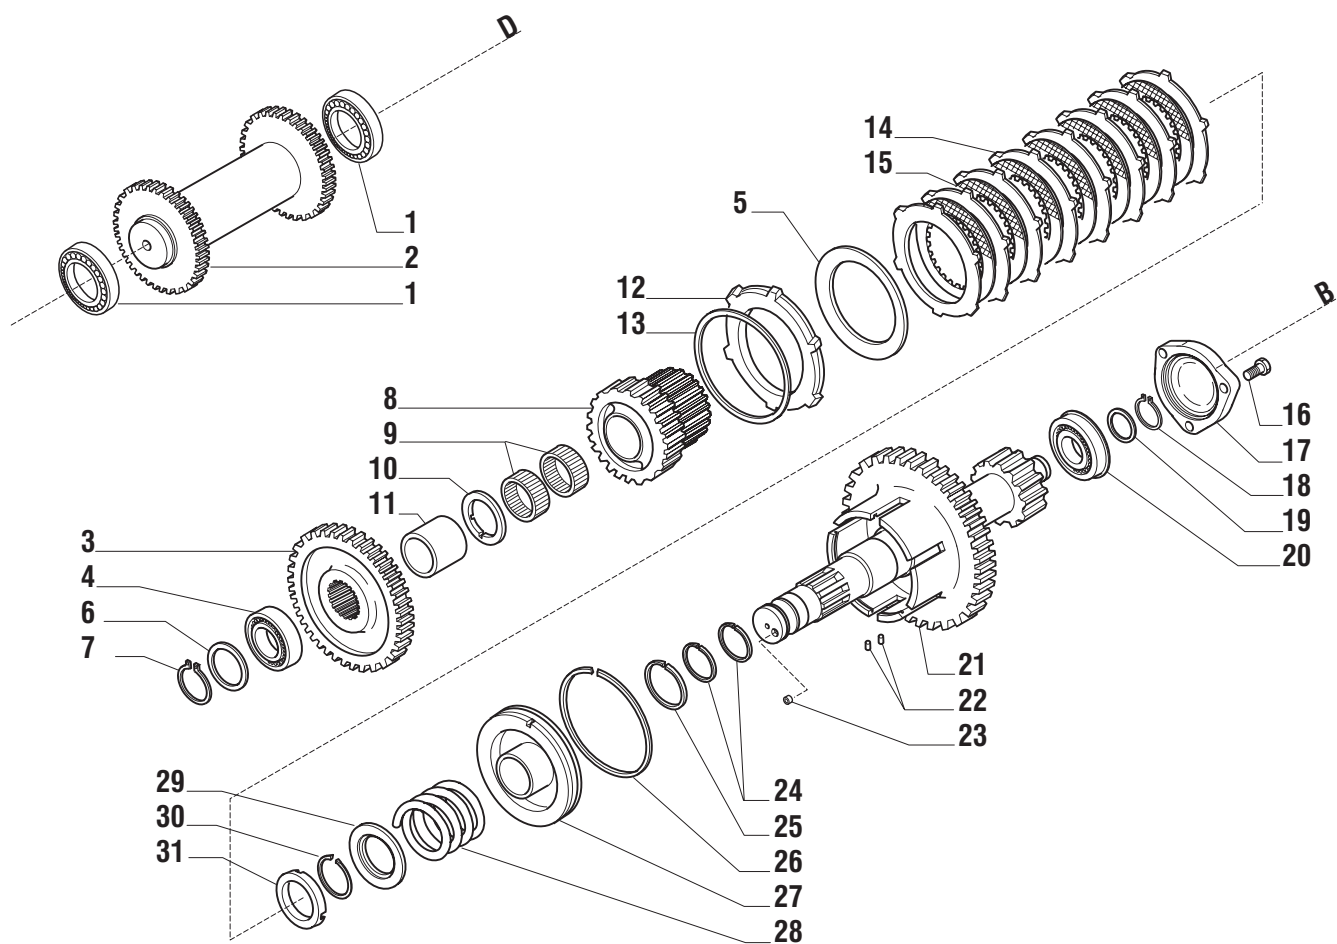
10.0.0 Sommario kit
Kit summary
Sommaire kit
Ersatzteil-Satz

**This catalogue is valid from serial number 101.
Ce catalogue est valable à commencer du numéro 101.
Der vorliegende katalog ist gültig ab Serienmr. 101.
Il presente catalogo è valido a partire dal N° di matricola 101.**

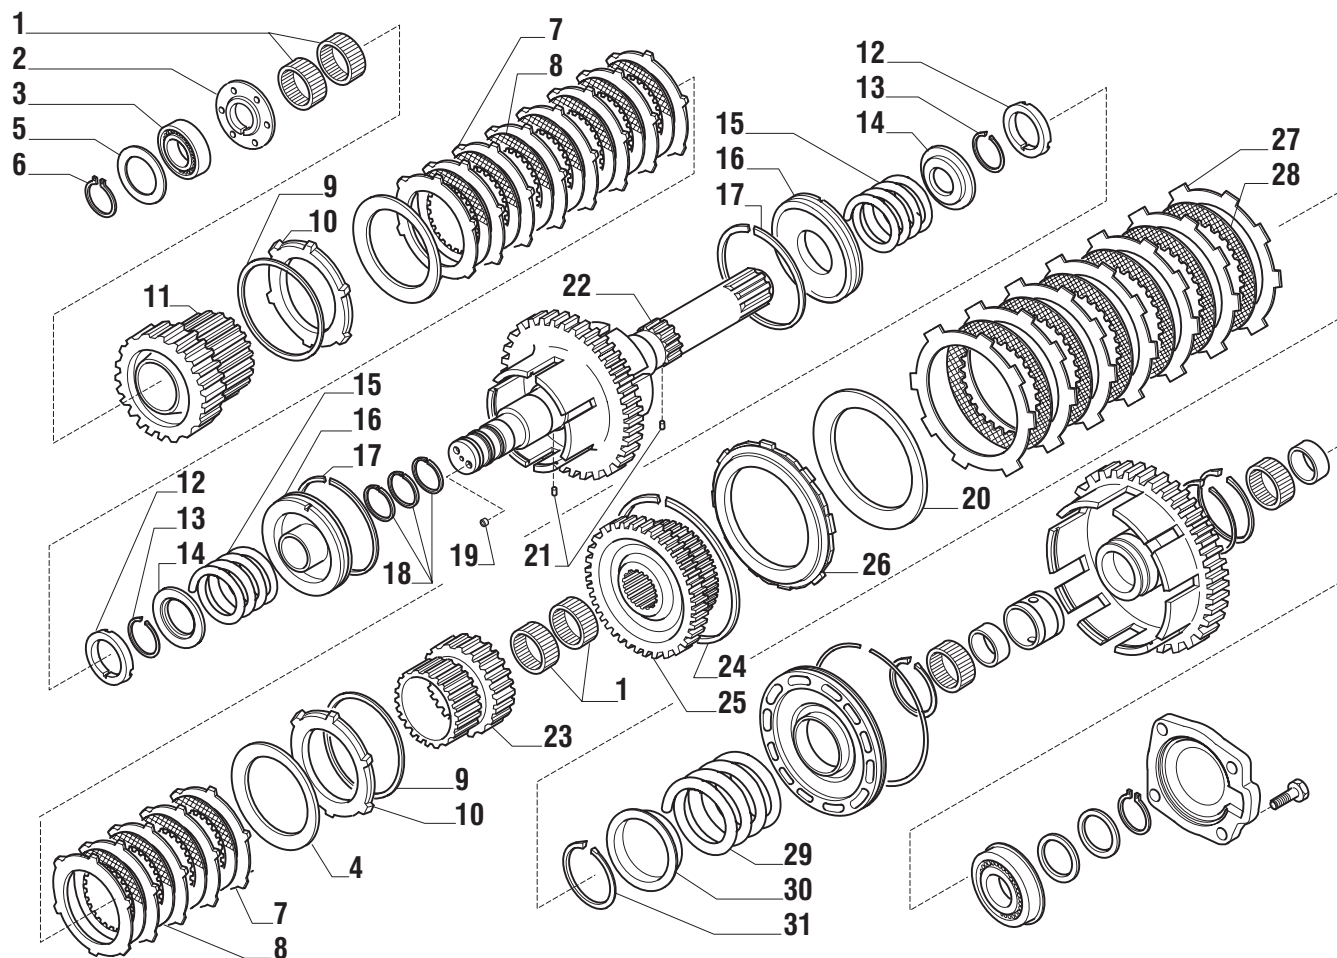
[illegible]



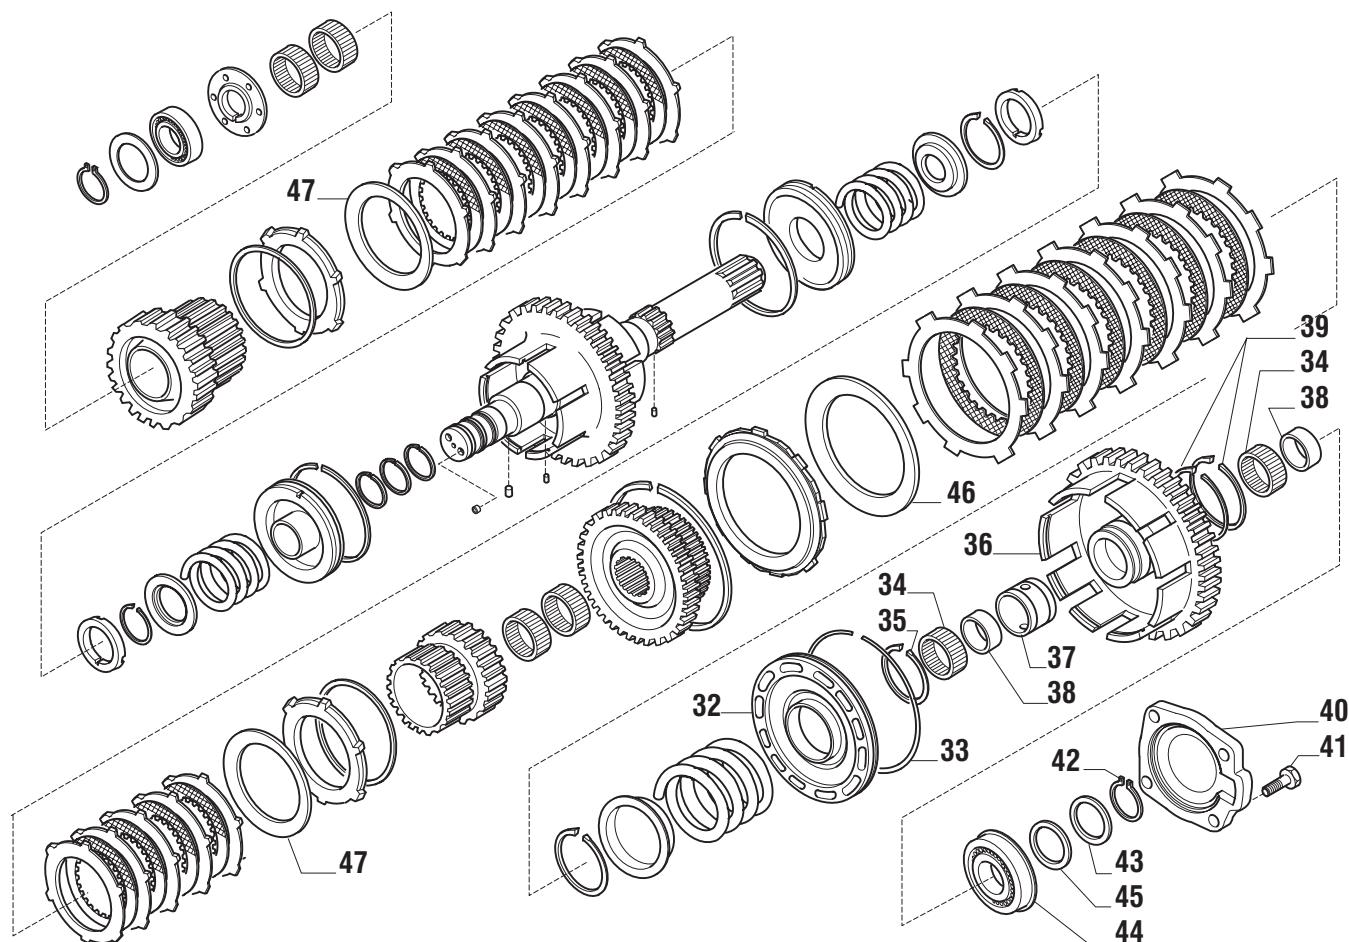
Pos.	Ref.	Q.ty	Descrizione	Description	Kit	From S/N	To S/N	Note
1	137823	6	Anello tenuta	Seal ring				
2	024800	2	Anello seeger D45	Snap ring D45				
3	026160	1	Cuscinetto	Bearing				
4	129885	1	Distanziale	Spacer				
5	129886	2	Ralla	Thrust washer				
6	028041	4	Gabbia rullini	Needle bearing bush				
7	138392	1	Ingranaggio Z37	Gear Z37				
8	025067	2	Anello arresto	Lockring				
9	135020	2	Anello arresto	Lockring				
10	129901	2	Ralla	Thrust washer				
11	133924	14	Controdisco frizione	Clutch drive plate				
12	138574	12	Disco frizione	Clutch plate				
13	025031	2	Anello arresto	Lockring				
14	133912	2	Coperchio fermo molla	Lock-spring cover				
15	129896	2	Molla	Spring				
16	133905	2	Pistone frizione	Clutch piston				
17	138790	5	Anello tenuta	Seal ring				
18	137824	2	Anello tenuta	Seal ring				
19	135198	1	Albero entrata cavo comp.	Inner shaft				
20	024321	4	Spina elastica D3x8	Split pin D3x8				
21	138358	1	Ingranaggio Z37	Gear Z37				
22	129903	1	Distanziale	Spacer				
23	025829	1	Cuscinetto	Bearing				
24	025735	1	Cuscinetto	Bearing				
25	024785	1	Anello seeger D30	Snap ring D30				
26	138383	1	Albero trasm. PTO	PTO transmission shaft				
27	028571	2	Anello OR	O.ring				
28	138387	1	Flangia	Flange				
29	021410	8	Vite M10x30	Bolt M10x30				
30	021009	2	Vite M16x45	Bolt M16x45				
31	138550	1	Coperchio	Cover				
32	030720	2	Tappo	Plug				

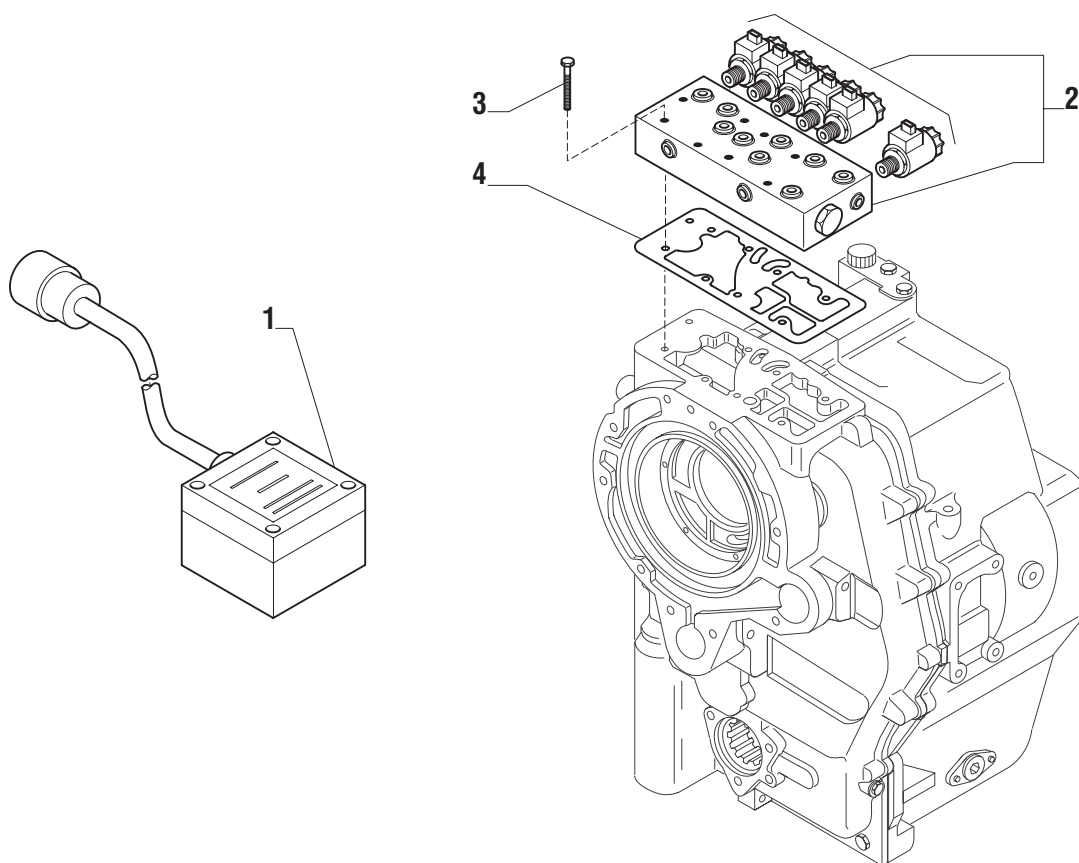


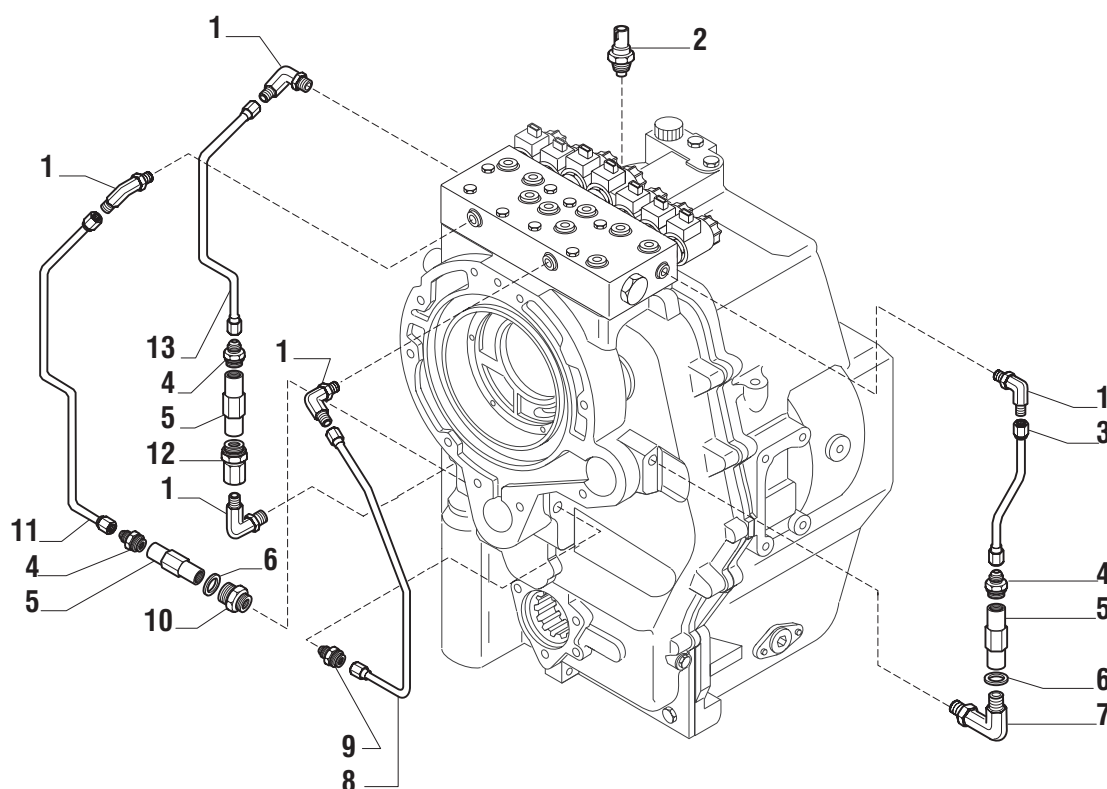
Pos.	Ref.	Q.ty	Descrizione	Description	Kit	From S/N	To S/N	Note
1	025808	2	Cuscinetto	Bearing				
2	135247	1	Albero rinvio Z27	Reverse shaft Z27				
3	133174	1	Ingranaggio Z45	Gear Z45				
4	025809	1	Cuscinetto	Bearing				
5	140116	1	Molla a tazza	Belleville washer				
6	125829	1	Rondella	Washer				
7	025053	1	Anello arresto	Lockring				
8	138362	1	Ingranaggio Z30	Gear Z30				
9	028015	2	Gabbia rulli	Needle bearing bush				
10	129886	1	Ralla	Thrust washer				
11	138359	1	Distanziale	Spacer				
12	140332	1	Anello arresto	Lockring				
13	025067	1	Anello arresto	Lockring				
14	133980	9	Controdisco frizione	Clutch drive plate				
15	138574	8	Disco frizione	Clutch plate				
16	020852	3	Vite M10x30	Bolt M10x30				
17	133372	1	Coperchio	Cover				
18	024790	1	Anello seeger D35	Snap ring D35				
19	125830	1	Rondella	Washer				
20	026188	1	Cuscinetto	Bearing				
21	138363	1	Albero Z58/Z17	Shaft Z58/Z17				
22	024321	2	Spina elastica D3x8	Split pin D3x8				
23	021558	1	Tappo M10x1	Plug M10x1				
24	138786	2	Anello tenuta	Seal ring				
25	137824	1	Anello tenuta	Seal ring				
26	138790	1	Anello tenuta	Seal ring				
27	140126	1	Pistone frizione	Clutch piston				
28	129896	1	Molla	Spring				
29	133912	1	Coperchio fermo molla	Lock-spring cover				
30	025031	1	Anello arresto	Lockring				
31	129901	1	Ralla	Thrust washer				



Pos.	Ref.	Q.ty	Descrizione	Description	Kit	From S/N	To S/N	Note
1	028041	4	Gabbia rullini	Needle bearing bush				
2	139390	1	Distanziale	Spacer				
3	025809	1	Cuscinetto	Bearing				
4	140117	1	Molla a tazza	Belleville washer				
5	125829	1	Rondella	Washer				
6	025053	1	Anello arresto	Lockring				
7	133980	9	Controdisco frizione	Clutch drive plate				
8	138574	8	Disco frizione	Clutch plate				
9	025067	2	Anello arresto	Lockring				
10	140332	2	Anello arresto	Lockring				
11	138368	1	Ingranaggio Z44	Gear Z44				
12	129901	2	Ralla	Trust washer				
13	025031	2	Anello arresto	Lockring				
14	133912	2	Coperchio fermo molla	Lock-spring cover				
15	129896	2	Molla	Spring				
16	140126	2	Pistone frizione	Clutch piston				
17	137826	2	Anello tenuta	Seal ring				
18	137822	3	Anello tenuta	Seal ring				
19	021558	2	Tappo M10x1	Plug M10x1				
20	140116	2	Molla a tazza	Belleville washer				
21	024321	2	Spina elastica D3x8	Split pin D3x8				
22	139392	1	Albero Z58 3/4"	Shaft Z58 3/4"				
23	138366	1	Ingranaggio Z30	Gear Z30				
24	025066	1	Anello arresto	Lockring				
25	138365	1	Ingranaggio Z51	Gear Z51				
26	138381	1	Anello tenuta	Seal ring				
27	138377	7	Controdisco frizione	Clutch drive plate				
28	138378	6	Disco frizione	Clutch plate				
29	139348	1	Molla	Spring				
30	139347	1	Coperchio fermo molla	Lock-spring cover				
31	025021	1	Anello arresto	Lockring				

[illegible]

[illegible]

[illegible]

