Cummins Parts Model: C-105. C-140 Catalog

Bulletin: 967093

Parts Ordering for: C-105, C-140

Genuine Cummins Parts and service facilities are worldwide. There are more than 1100 Cummins Sales and Service locations in the principal cities of the United States and Canada, and more than 350 Sales and Service locations situated elsewhere throughout the free world. Each distribution outlet is thoroughly equipped with technical data, factory-trained mechanics, modern equipment and a full, adequate stock of Genuine Cummins Parts.

For quicker and better service, your parts requirements should be ordered from your nearest Cummins Distributor or Dealer. At any of the locations prompt, intelligent, courteous service is a basic trademark. Each is ready and eager to help in every possible way through personal contact or through the mail — at your convenience.

The satisfactory ordering and receiving of parts by the purchaser is greatly dependent upon the proper use of available information. In order that all avoidable errors may be eliminated, the following instructions are offered as the purchaser's guide:

1. Write your order clearly, using a typewriter if possible.

- Be sure to list the correct part number. If in doubt as to the correct part number, state the model and serial number of the engine on which the part is to be used. Part numbers are usually located in various places on the part itself.
- When possible, arrange your purchase order in part number numerical sequence.
- Always specify shipping instructions "Best Way" is satisfactory if you have no preference.
- 5. State your company name and shipping address clearly.

Genuine Cummins Parts mean QUALITY! They're designed and engineered to fit best in your Cummins Diesel. Each part is made of the highest quality material — on the most accurate of machines — by the top craftsmen of the trade.

You can be sure a Genuine Cummins Part will fit better — do the job better — lessen the chances of costly breakdown. When you buy replacement parts, buy quality. Buy Genuine Cummins Parts!

YOU OWN THE BEST . . . REPAIR WITH THE BEST

COPYRIGHT 1966

PRICE \$.25

Special Parts


This Parts Catalog includes those parts that are normally used on our standard engine model.

Special Parts peculiar to engine serial No_____ are listed on the form below. To make certain you have ordered correct parts, refer to this form before submitting Parts Order.


Part Number	Description
	· · · · · · · · · · · · · · · · · · ·
Cummins Distributor	

Table of Contents

Cylinder Block and Cylinder Liner
Crankshaft and Main Bearing Shells
Connecting Rod, Piston and Rings
Counterbalancer
Rear Cover and Camshaft
Gear Case Cover
Cylinder Head
Rocker Levers
Push Rods and Tappets
Cylinder Head Cover and Breather 1
Oil Pan 1
Lubricating Oil Filter (Paper Element Type) 1
Lubricating Oil Filter (Bag Type) 1
Lubricating Oil Cooler 1
Lubricating Oil Pump 1
Water Pump and Accessory Drive Pulley 1
Thermostat Housing 1
Radiator, Fan Guard, Fan and Spacer 1
Air Cleaner 1
Air Intake Manifold and Illustration 20 & 2
Exhaust Manifold2
Fuel Pump Drive 2
PT Fuel System
Fuel Pump Damper, Gear Pump and Fuel Filters 24 & 2
Shutdown Valve, Injector, Fuel Tubing
and Fuel Inlet and Drain Connection 26 & 2
Corrosion Resistor 2
Aneroid Control 2
Turbocharger T-350 36
Turbocharger Oil Filter 3.
Air Compressor 3
Flywheel, Ring Gear and Front Engine Support 33
Instrument Panel and Illustration 34 & 3
Electrical Equipment3

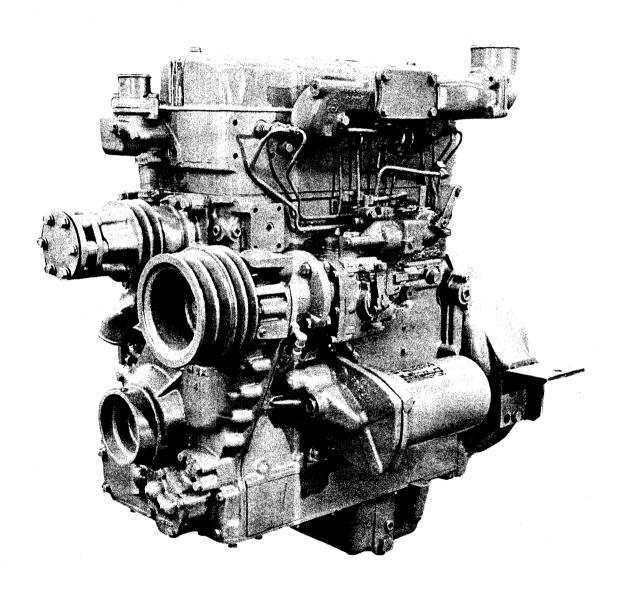


TYPICAL CUMMINS 4 CYLINDER "C" SERIES DIESEL ENGINE

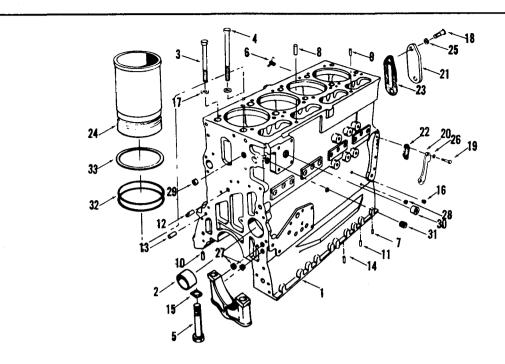


CYLINDER BLOCK


Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
BM-72247 100673 122936 122937 104293 107947 120830 68445 113937 68568 70645 70653 60408 69236 60488 69233 67857 60533 S-911-B 113995 S-109 S-106-A 125744 65473 S-973 120324 65474	GROUP A C-105, C-105-IP C-105-BI Block, cylinder (135190) Bushing, camshaft Capscrew, cylinder head (short) Capscrew, cylinder head (long) Capscrew, main bearing Cock, drain Dowel, main bearing cap Dowel, cylinder head to block Dowel, cylinder head to block Dowel, oil pan to block Dowel, oil pan to block Dowel, gear cover Dowel, gear cover Dowel, lubricating, pump to block Dowel, oil line Dowel, drive support Lock plate, main bearing capscrew Plug, pipe, oil gallery Washer, cylinder head MOUNTING PARTS Capscrew (3/8"-16 x 7/8") Capscrew (5/16"-18 x 1-3/4") Connection, oil transfer Cover, water header end Elbow, street Gasket, oil transfer connection Gasket, water header cover	1 4 5 5 10 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2 3 4 5 6 7 8 9 10 11 12 13 14	126299 112851 S-604 S-605 159379 67622 69901 S-910-B S-915-A S-908 S-995 112847 174316 S-2286 127184 S-684 64482 67089	Guide, tappet Liner, cylinder Lockwasher (3/8") Lockwasher (5/16") Plate, name Plug, pipe Plug, pipe Plug, pipe, oil gallery Plug, pipe (1/2") Plug, pipe, (3/8") Plug, pipe, connection Ring, cylinder packing, liner Ring, cylinder packing, liner Screw, name plate Washer Washer Wire, lock Wire, lock GROUP B C-140 Same as Group A, except: Connection, oil transfer Nameplate Screw Shim, liner (.007") Shim, liner (.008") Shim, liner (.009") Shim, liner (.020") Shim, liner (.020") Shim, liner (.031")	12 4 2 4 1 4 3 2 2 2 8 4 4 4 4 12 1 4	24 25 26 27 28 29 30 31 32 33

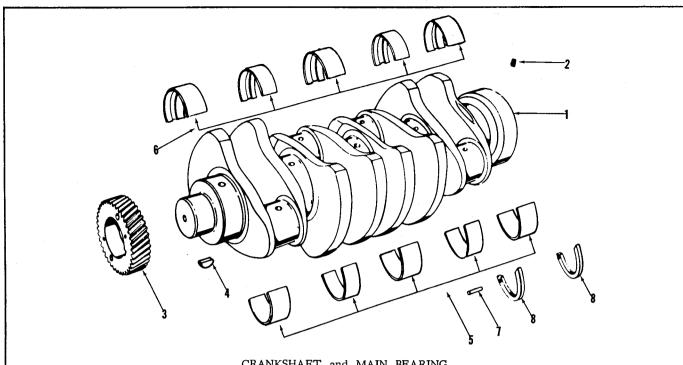


Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
	GROUP: A All Models						
BM-76712 BM-76711 S-911-B 134131 S-331	Crankshaft and gear (135580) Crankshaft and plug Plug, pipe (1/8") Gear, crankshaft pinion Key, gear	1 1 4 1 1	1 2 3 4				
BM -44996 * 44297 43214 124922 150310	Set, main bearing shell Shell, main bearing, (lower) Shell, main bearing, (upper) Dowel, pin Ring, thrust	1 5 5 2 4	5 6 7 8				
purcl .040	Main bearing and main bearing sets nased in standard, .010", .020", ", undersize. When ordering bearys state the size required.	.030	٠,				

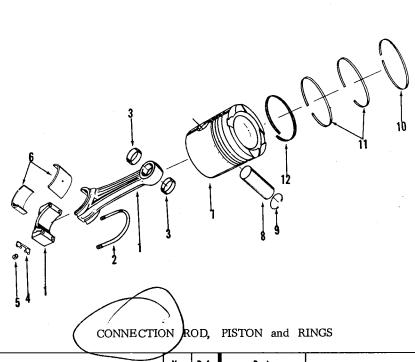

Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
BM-71330 110275 143940 60358 S-265 127730 *	GROUP A C-105, C-105-IP, C-105-BI Rod, connecting(143253) (taper piston pin boss) Bolt, connecting rod Bushing, piston pin Lockplate, connecting rod Nut, connecting rod bolt Shell, connecting rod bearing cting rod bearing shells may be pure .020", .030" and .040" undersize. Piston assembly (standard) Piston Pin, piston Ring, snap Piston assembly (.020" oversize) Piston Pin, piston Ring, snap Piston assembly (.030" oversize) Piston Pin, piston Ring, snap Piston assembly (.040" oversize) Piston Pin, piston Ring, snap Piston assembly (.040" oversize) Piston Pin, piston Ring, snap	4 8 8 16 8	1 2 3 4 5 6	BM-64260 145150 112880 118630 BM-64262 145152 112882 118632 BM-64263 145153 112883 118633 BM-64264 145154 112884 118634 BM-60610 130500 BM-60612 130502 BM-60613 130502 BM-60614 130504	Ring set, piston (standard) Ring, compression Ring, compression Ring, oil Ring set, piston (.020" oversize) Ring, compression Ring, oil Ring set, piston (.040" oversize) Ring, compression Ri	1 4 4 8 4 4 1 4 4 8 4 4 1 4 1 4 1 4 1 4	10 11 12 10 11 12 10 11 11 12

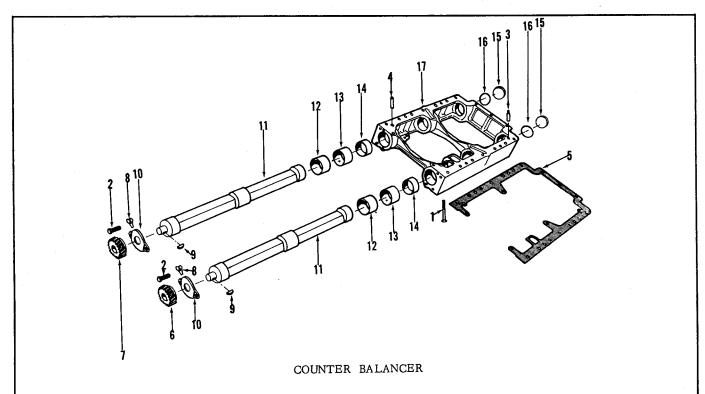


BM-64259 Counterbalancer (raised) 1 1 1 1 1 1 1 1 1	Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
	BM-64259 137072 S-107 68568 70645 135410 134350 134336 117559 166438 135098 132649 BM-74096 140220 140230 140240 135155 139837	GROUP A All Models Counterbalancer (raised) Capscrew, spacer to block Capscrew, thrust (5/16"-18 x 3/4") Dowel, diamond Dowel, master Gasket, spacer Gear, balancer (F.P. side) Gear, balancer (Exhaust side) Lockplate, thrust plate Key Plate, thrust, balancer shaft Shaft, balancer Spacer assembly, balancer Bushing, balancer shaft (front) Bushing, balancer shaft (middle) Bushing, balancer shaft (middle) Cover, balancer shaft plate "O" ring, cover	1 4 1 1 1 1 4 2 2 2 1 2 2 2 2 2 2 2 2 2	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16	Number	Part Name	Req.	No.

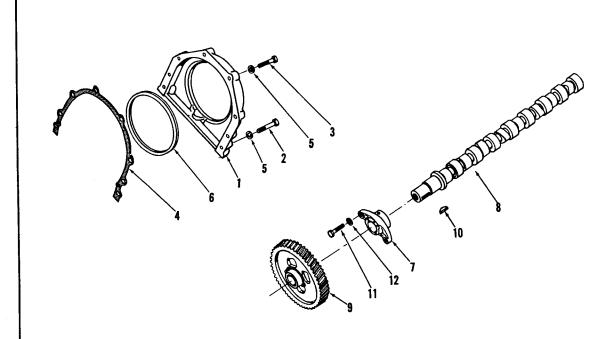


REAR COVER and CAMSHAFT


Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
106203 S-106-A S-111 102151 102152 S-605 141745	GROUP A All Models REAR COVER Cover, rear Capscrew (5/16"-18 x 1-3/4") Capscrew (5/16"-18 x 1-1/2") Gasket, cover plate (.010") Gasket, cover plate (.005") Lockwasher (5/16") Seal, oil	1 2 A/R A/R 8 1		BM-66888 121720 112407 134418 S-302 S-112 S-604	GROUP B C-105, C-105-IP, C-105-BI CAMSHAFT Camshaft assembly Bearing, front camshaft Camshaft Gear, camshaft Key, woodruff camshaft gear MOUNTING PARTS Capscrew, camshaft bearing Lockwasher, camshaft bearing capscrew (3/8") GROUP C C-140 Same as Group B except: Key	1 1 1 1 1 3 3 3	7 8 9 10 11 12

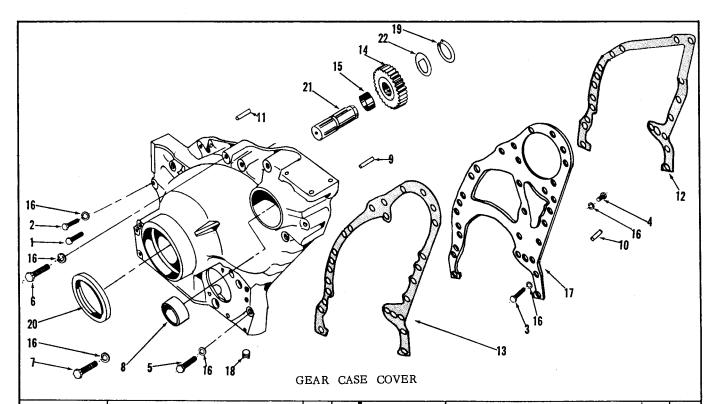


Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
S-103-D S-104 S-109 S-117 S-120 S-137 S-141 S-163 BM-77377 139810 60408 67857 70653 135223 150235 BM-74402 149560 S-604 150234 S-908 135530 140896 149566 135099	GROUP A All Models Capscrew (3/8"-16 x 1-1/4") Capscrew (3/8"-16 x 7/8") Capscrew (3/8"-16 x 3/4") Capscrew (3/8"-16 x 3/4") Capscrew (3/8"-16 x 1-3/4") Capscrew (3/8"-16 x 2") Capscrew (3/8"-16 x 2-3/4") Capscrew (3/8"-16 x 3-1/4") Cover, gear (150241) Bushing Dowel Dowel Dowel Gasket Gasket, gear housing Gear, idler (149559) Bushing, idler gear Lockwasher (3/8") Plate, gear housing Plug (3/8") Ring, snap Seal Shaft, idler Washer, idler gear	4 2 3 3 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22				

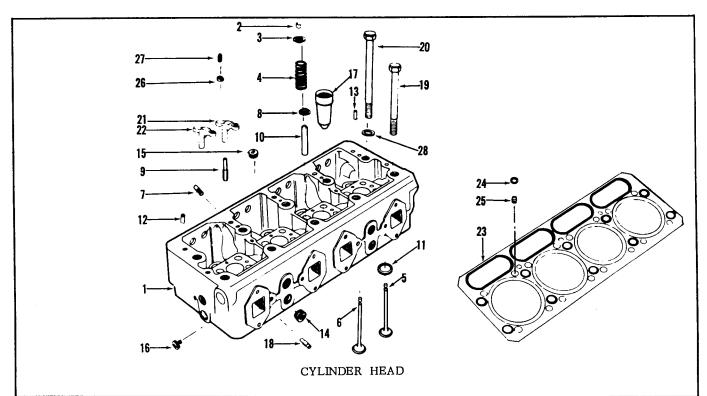

Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
BM-74458 119819 119806 120089 148738 44748 BM-74456 146891 105292 143526 105293 70843 60488 69233 S-995 S-915-A 70459 108019 103847	GROUP A C-105, C-105-BI, C-105-IP Head, cylinder (143540) Half-collect, valve Retainer, valve spring Spring, valve Valve, exhaust Valve, intake Head, cylinder (143540) (less valves) Dowel, manifold, threaded Guide, valve spring Guide, crosshead valve Guide, valve Insert, valve seat Pin, dowel, rocker shaft Pin, dowel, oil line Plug, pipe (3/4") Plug, pipe (1/2") Plug, fuse Sleeve, injector Stud, exhaust manifold	1 32 16 16 8 8 1 2 16 8 16 16 2 1 9 6 1 4 4	1 2 3 4 5 6 6 1 7 7 8 8 9 10 11 12 13 14 15 16 17 18		Capscrew, head to block Capscrew, head to block Crosshead, valve (right) Crosshead, valve (left) Gasket, cylinder head (143836) Grommet, water Retainer, water grommet Nut (3/8") Pin, groove Retainer, water grommet Screw, adjusting Washer, cylinder head GROUP B C-140 Same as Group A except: Head, cylinder Valve, exhaust	5 4 4 1 16 16 8 2 16 8 10	19 20 21 22 23 24 25 26 27 28

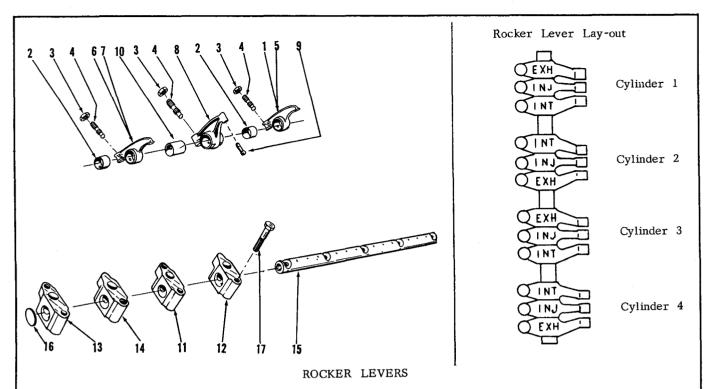


BM -96069	GROUP A C-105, C-105-IP, C-105-BI				GROUP B C-140		
		- 1					
	Lever, exhaust valve	2	1		Same as Group A except:		
BM -96068	Lever, and bushing (168829) Cylinder 2, 4	2	1	BM -96073	Lever, intake and exhaust (intake Cylinder,#2 & 4)		
142190	Bushing, lever	2	2		(exhaust, Cylinder #1 & 3)	4	
S-212	Nut, adjusting screw	1 2	3		(children's Cylinder #1 a cy	1	ĺ
168306	Screw, adjusting	2	4	BM -96069	Lever, intake and exhaust (intake, Cylinder #1 & 3)		
BM -96073 BM -96072	Lever, exhaust valve Lever and bushing (168827)	2	5		(exhaust, Cylinder #2 & 4)	4	
	Cylinder 1, 3	2	_		GROUP C All Models		
142190	Bushing, lever	2 2	2	DN 4 0 (0 7 0	1	1	1 8
S-212 168306	Nut, adjusting screw Screw, adjusting		3 4	BM-96078 BM-96077	Lever, injector (168826) Lever and bushing	4 4	
100300	screw, adjusting	4	*	152173	Socket, injector	4	(
BM-96082	Lever, intake valve	2	6	BM-96076	Lever and bushing	4	1
BM-96081	Lever and bushing (168830)	-		142180	Bushing	4	10
	Cylinder 1, 3	2		S-212	Nut, adjusting screw	4	3
142190	Bushing, lever	2	2	168306	Screw, adjusting	4	4
S-212	Nut, adjusting screw	2	3				١
168306	Screw, adjusting	2	4	114452	Bearing, shaft No. 3, 5	2	11
06000	I among the last and last		, ,	114450	Bearing, shaft No. 4	1	12
BM-96080 BM-96079	Lever, intake valve Lever and bushing (168828)	2	7	114451 114453	Bearing, shaft No. 1 Bearing, shaft No. 2	$\begin{vmatrix} 1 \\ 1 \end{vmatrix}$	14
DIVI-900/9	Cylinder 2, 4	2		114433	bearing, shart No. 2	+	1.7
142190	Bushing, lever	2	2	113609	Shaft, rocker lever	1	1:
S-212	Nut, adjusting screw	2	3	113987	Plug, expansion	l ī	10
168306	Screw, adjusting	2	4	S-150	Capscrew, bearing to cylinder head	5	1

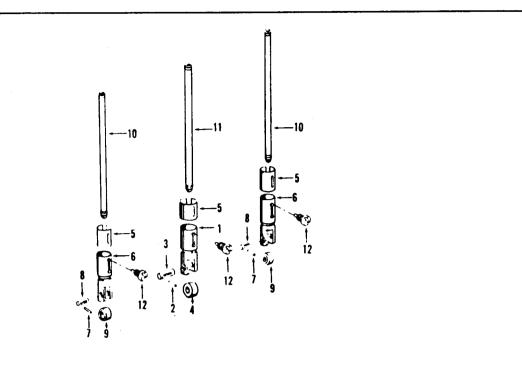


PUSH RODS and TAPPETS


Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
BM-40616 108187 113748 60521 108156 BM-40615 108186 113749 69027 108156 BM-46364 BM-46363 126299	GROUP A All Models Tappet, injector (113745) Lockwire Pin, roller Roller, tappet Sleeve, guide Tappet, valve (113746) Lockwire Pin, roller Roller, tappet Sleeve, guide Rod, intake and exhaust push (112695) Rod, injector push (112699) Guide, tappet	4 4 4 4 8 8 8 8 8 8 12	1 2 3 4 5 6 7 8 9 5 10 11 12				

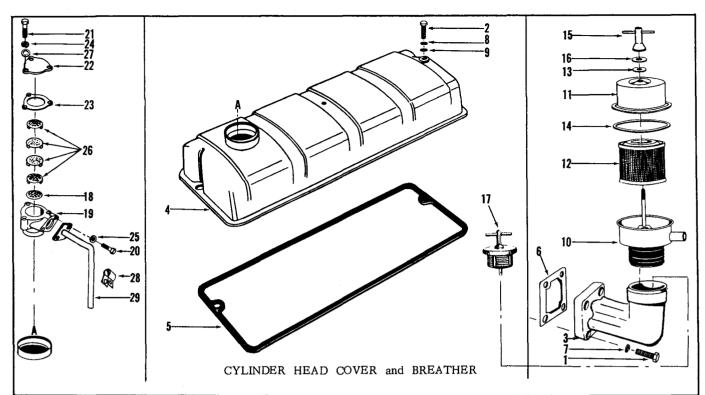


Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
S-102 S-104 149284 132406 130350 149285 S-605 70415 115231 156780 156781 155997 AF-250 125015 125019 150662 125016	GROUP A C-105, C-105-BI, C-105-IP Capscrew (5/16"-18 x 1") Capscrew (3/8"-16 x 2-1/4") Connection, breather Cover, cylinder head (omit hole "A") Gasket, cover Gasket, connection Lockwasher (5/16") "O" ring Washer, cupped CRANKCASE BREATHER Breather Body, breather Cover, breather Element, breather Gasket, wingnut Gasket, cover Handle "T" Washer	4 3 1 1 1 1 4 3 3 3	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16	101322 132407 250729 105021 122133 S-115 S-167-A 122136 122135 S-600 S-605 105019 S-631 69911-A 146146	GROUP B C-140 Same as Group A except: Cap Cover, cylinder head (add hole "A") CRANKCASE BREATHER Breather Baffle, breather Body, breather Capscrew (5/16"-18 x 7/8") Capscrew (1/4"-20 x 7/8") Cover, breather Gasket, cover Lockwasher, cover to body (1/4) Lockwasher (5/16") Screen, breather Washer, cover to body (9/32") Clamp, hose Tube, breather vent	1 1 1 1 2 3 1 1 3 2 4 3 1 1	17 4 18 19 20 21 22 23 24 25 26 27 28 29

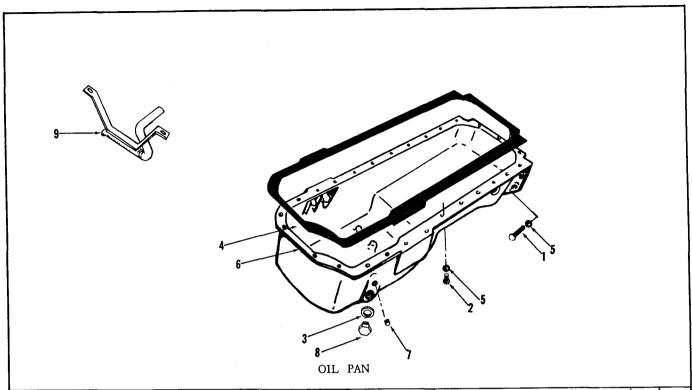


Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
S-112 S-169-A S-3050 135411 S-604 144761 S-911-B 110907 BM-90065	GROUP A All Models Capscrew (3/8"-16 x 1") Capscrew (3/8"-16 x 4-1/2") Gasket, plug oil drain Gasket, oil pan Lockwasher (3/8") Pan, oil Plug, pipe (1/8") Plug, oil pan drain Tube, oil suction	5 17 1 22 1 2	1 2 3 4 5 6 7 8 9				
146263 144770 S-1020	OIL GAUGE TUBE and DIPSTICK Bayonet Tube, gauge Connector, tubing	1 1 1					

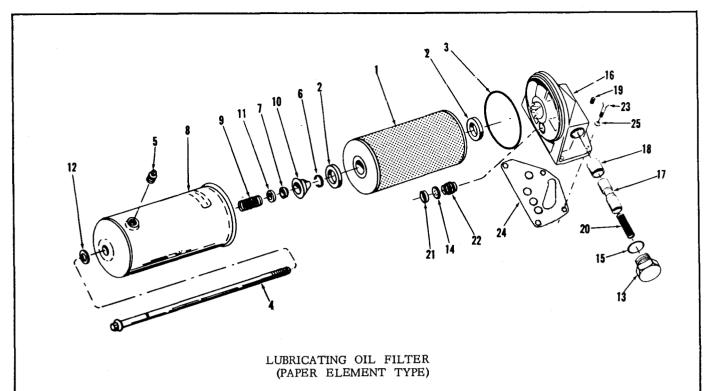


Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
	GROUP A C-105-IP						
BM -95363	Assembly, lubricating oil filter	1					
163359	Decal	li					
BM -97627	Filter	î					ĺ
LF-516	Cartridge	li	1			1	
153514	Seal, cartridge	2	2				
153528	Gasket	1	3			1	1
165286	Shell, assembly	1					
153517	Bolt	1	4				
S-901	Plug, pipe (1/4")	i	5				
S-16245	Ring, snap	Î	6			1	1
153518	Seal, bolt	ī	7			l	
153516	Shell, filter	ī	8				
153519	Spring, cartridge	1	9				
153521	Support, cartridge	Î	10		•		
153521	Washer, bolt	i	11				
8265	Washer, copper	l ī	12				
BM -94168	Head assembly	lī				1	
69354	Cap	Ī	13				
153525	Disc, by-pass	ī	14				1
S-3050	Gasket, cap	1	15				1
169652	Head, filter	Ī	16				1
148216	Plunger	l ī	17				
148217	Plunger	lī	18			1	
S-911-B	Plug, pipe	ī	19				1
69355	Spring	l ī	20				1
153526	Seat, by-pass	ī	21				
251152	Spring, by-pass	1	22			ł	
	-F8,, F						
S-112	Capscrew (3/8"-16 x 1")	4	23				
169653	Gasket, filter head	1	24			1	1
S-604	Lockwasher (3/8")	4	25				
	, , ,						
							İ
]	l

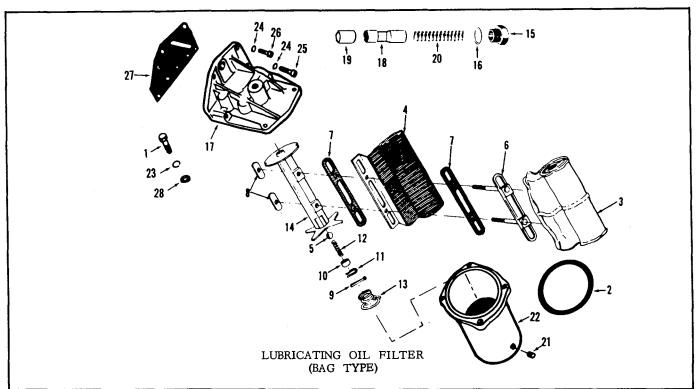


Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
BM-78381 S-137 114479 69751 104926 S-1915-1 S-1953 134729 128798 128805 128800 128801 128802 S-503 128803 128807 128804 128806 128799 BM-49131 69354 S-3050 118812 BM-68225 148216 148217	GROUP B C-105, C-105-BI, C-140 Filter assembly Capscrew (3/8"-16 x 2") Decal Gasket, cover to shell Filter, lubricating oil Element assembly Bag, filter Separator Spool assembly Ball, by-pass relief Clamp, bag Gasket, clamp Nut, clamp Pin, cotter Retainer, spring Ring, retaining Spring, by-pass adjusting Spring, shock Spool Head assembly Cap, spring retaining Gasket, cap Head, oil filter Plunger, relief valve Plunger, high pressure Plunger, oil pressure	1 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	S-141 112795 S-622	Spring, relief valve Plug, pipe Plug, drain Shell assembly Lockwasher (7/16") Lockwasher (3/8") Capscrew (3/8"-16 x 1") Capscrew (3/8"-16 x 2-3/4") Gasket, head to block Washer, plain (15/32")	1 1 4 4 2 2 1 4	20 21 22 23 24 25 26 27 28

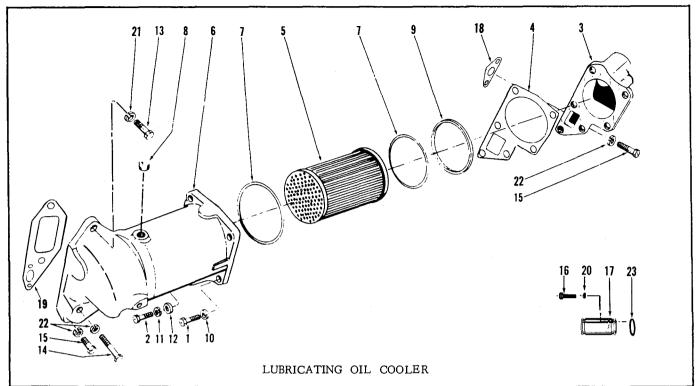


Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
BM-67305 S-103-D S-119 134211 111956 BM-54620 110848 111865 148293 S-910-B 110827 S-604 S-604 S-605 S-626	GROUP A All Models Assembly, lubricating oil cooler Capscrew (3/8"-16 x 1-1/4") Capscrew (5/16"-18 x 1-1/4") Cover Gasket Housing assembly Element Housing "O" ring Plug, pipe (1/4") Retainer, element and "O" ring Lockwasher (3/8") Lockwasher (5/16") Washer, plain (11/32")	1 4 2 1 1 1 1 2 1 4 2 2	1 2 3 4 5 6 7 8 9 10 11 12				
S-123 S-103 S-119 S-114 111753 111755 68615 S-600 S-604 S-605 43463-A	MOUNTING PARTS Capscrew (3/4"-10 x 2-1/2") Capscrew (5/16"-18 x 2-1/4") Capscrew (5/16"-18 x 1-1/4") Capscrew (1/4"-20 x 3/4") Connection Gasket, cover to block (front) Gasket, housing to block (rear) Lockwasher (1/4") Lockwasher (3/8") Lockwasher (5/16") "O" ring	1 1 3 1 1 1 1 1 1 4 2	13 14 15 16 17 18 19 20 21 22 23				

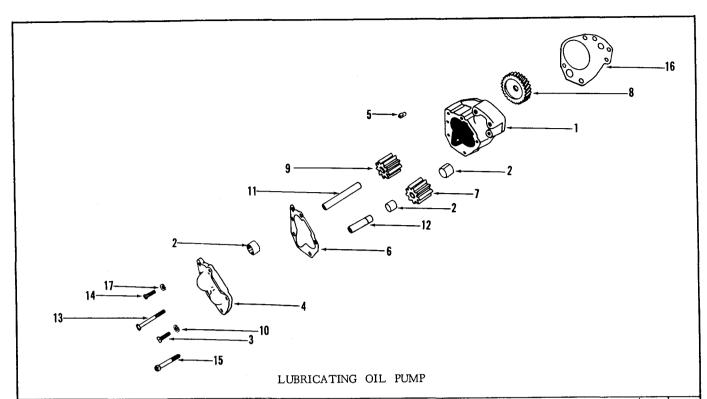


Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
BM-66908 BM-66918 68586 S-115 BM-66919 68586 68585 135297 BM-20443 68586 134615 68588 S-605 135152 135153 S-105 S-112 S-141 135296 S-604 135528	GROUP A All Models Pump, oil Body and bushing (134847) Bushing, drive shaft Capscrew, body to cover (5/16"-18 x 7/8") Cover and bushing (134586) Bushing, drive shaft Dowel, pin, body to cover Gasket, cover to body Gear and bushing, idler (68589) Bushing, idler gear Gear, drive Gear, idler drive Lockwasher (5/16") Shaft, drive Shaft, idler Capscrew (3/8"-16 x 3-1/2") Capscrew (3/8"-16 x 1") Capscrew (3/8"-16 x 2-3/4") Gasket Lockwasher (3/8") "O" ring, rubber	1 1 1 3 1 1 1 1 3 1 1 3 1 1 3 1 1 8 2	1 2 3 4 2 5 6 6 7 7 2 8 8 9 10 11 12 13 144 15 16 17				

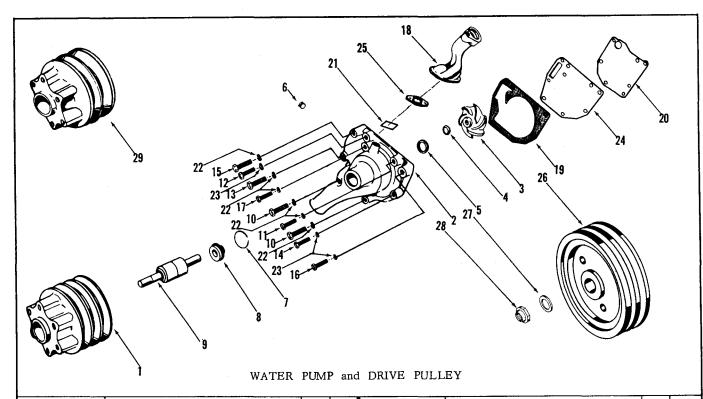


Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
BM -67303 124626 135077 BM -71639 143913 135079 S -915 - A 132426 170895 124628	GROUP A C-140, C-105 Pump, water Pulley Body, pump Impeller (135078) Film, bonding Seat, impeller Plug, pipe (1/2") Ring, snap Seal, pump Shaft, drive MOUNTING PARTS	1 1 1 1 1 1 1 1	1 2 3 4 5 6 7 8 9	BM-58373 S-690 S-207-A BM-67302 124679 124927	ACCESSORY DRIVE PULLEY Pulley, drive (124618) Washer (15/16") Nut GROUP B C-105-IP, C-105-BI Same as Group A except: Pump, water Pulley Belt, "V"	1 1 1 1 2	26 27 28 29
178571 S-102-D S-120 S-122 S-126 S-140 S-141 106069 108707 134125 134026 134027 118375 S-604 S-610 134007 118374	Belt, "V" Capscrew (3/8"-16 x 3") Capscrew (3/8"-16 x 1-3/4") Capscrew (7/16"-14 x 1-1/4") Capscrew (3/8"-16 x 2-1/2") Capscrew (7/16"-14 x 1-3/4") Capscrew (3/8"-16 x 2-3/4") Capscrew (7/16"-14 x 2") Capscrew (3/8"-16 x 1-1/2") Connection, water pump outlet Gasket, water pump Gasket, water pump plate Insert, water outlet connection Lockwasher (3/8") Lockwasher (7/16") Plate, water pump Plate, water outlet connection	2 2 1 1 1 1 1 1 1 1 1 6 3 1 1	10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25				

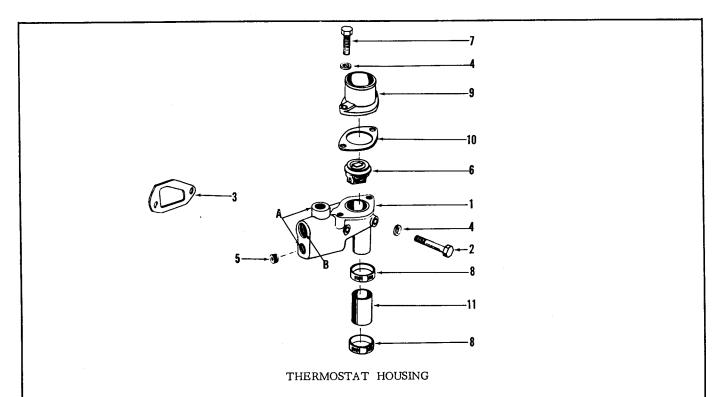

Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
	GROUP A C-105, C-105-BI, C-140						
113927 S-102-D 113923 S-604 S-924 135729	Housing, thermostat Capscrew (3/8"-16 x 3") Gasket, thermostat housing Lockwasher (3/8") Plug, pipe (1/2") Thermostat 167 - 172°	1 2 1 2 1	1 2 3 4 5 6				
	CONNECTION						
S-103-D 43828-A 113625 113914 116146 S-604	Capscrew (3/8"-16 x 1-1/4") Clamp, hose Connection, water outlet Gasket, outlet connection Hose Lockwasher (3/8")	2 2 1 1 1 2	7 8 9 10 11 4				
	GROUP B C-105-IP						
	Same as Group A except:						
113928 S-92 4 S-962	Housing, thermostat Plug, pipe (1/2") (Hole "A") Plug, pipe (1") (Hole "B")	1 2 1	1 5				
	·						
						1	

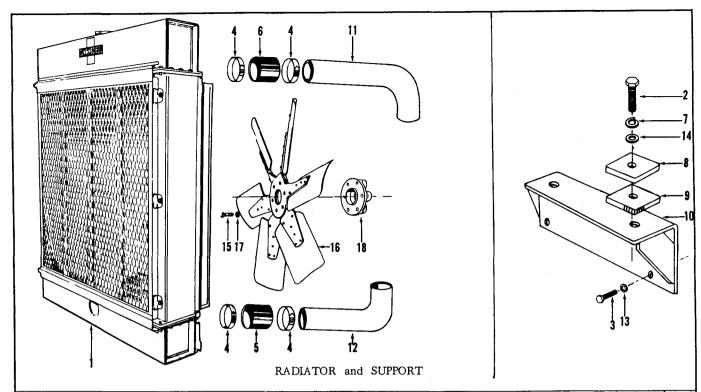

Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
137246	GROUP A C-105-IP	1	1				
137577 137247 S-102 S-107 S-145 43828 63241-L 63241-J S-605 70919 S-200 S-3097 137258 137259 148358 137249 137256 S-608 S-670	Adapter, shroud Brace Capscrew (5/16"-18 x 1") Capscrew (5/16"-18 x 3/4") Capscrew (1/2"-13 x 1-1/4") Clamp, hose Hose Hose Lockwasher (5/16") Nameplate Nut (1/2") Screw Spacer Spacer Support, radiator Pipe Pipe Washer (1/2") Washer, plain (17/32")	1 1 1 4 4 8 2 2 4 1 6 2 2 2 1 1 1 1 6 6	2 3 4 5 6 7 8 9 10 11 12 13 14				-
S-137 S-107 122786 137254 S-604 S-605 100462	FAN, FAN GUARD and FAN SPACER Capscrew (3/8"-16 x 2") Capscrew (5/16"-18 x 3/4") Fan, sucker Guard, fan Lockwasher (3/8") Lockwasher (5/16") Spacer	6 4 1 1 6 4 1	15 16 17 18				

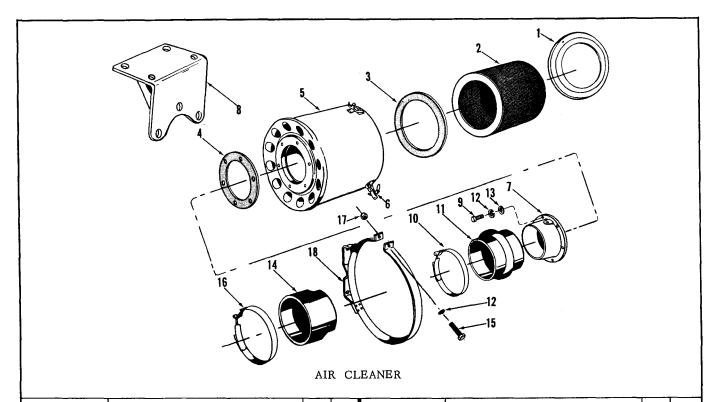

Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
106830 107130 106836 107131 107132 107129 122121 106123 106125 S-115 125739 103806 S-605 S-626	GROUP A C-105, C-105-IP, C-105-BI Cleaner, air Cover Element (AF-259) Gasket, element Gasket, flange Shell Spring Adapter, air cleaner Bracket, air cleaner Capscrew (5/16"-18 x 7/8") Clamp, hose, "T" bolt Hose Lockwasher (7/16") Washer (11/16")	1 1 1 1 1 3 1 1 6 4 2 6	1 2 3 4 5 6 7 8 9 10 11 12 13	103806 S-605 S-221 107091 S-626	Hose Lockwasher (7/16") Nut (3/8") Strap Washer (11/16")	1 7 1 2 6	11 12 17 18 13
106835 107125 106838 107126 107127 107128 122121 106124 108799 S-115 S-119 125739 125740	GROUP B C-140 Cleaner, air Cover Element (AF-252) Gasket, element Gasket, flange Shell Spring Adapter, air cleaner Adapter, hose Capscrew (5/16"-18 x 7/8") Capscrew (5/16"-18 x 1-1/4") Clamp, "T" bolt hose Clamp, "T" bolt hose	1 1 1 1 3 1 1 6 1 3 1	1 2 3 4 5 6 7 14 9 15 10 16				


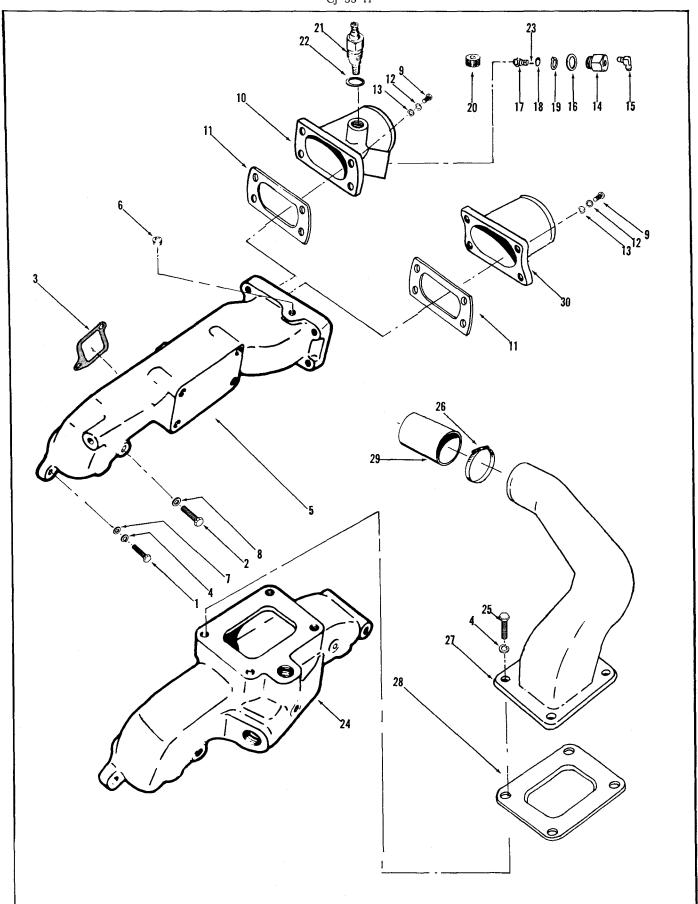



FIG. 1 AIR INTAKE MANIFOLD, GLOW PLUG, CONNECTIONS and AIR CROSSOVER

CJ-33-H-1 (Cont'd)

Part Number	Part Name	No. Req.	Fig. No.	8 - H - 1 Ref. No.	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.
G 100 D	GROUP A C-105	0		1		GROUP B C-140			
S-103-D S-199-B 70851 S-604 128467 S-910-B S-602 S-2760	Capscrew (3/8"-16 x 1-1/4") Capscrew (3/8"-16 x 3-3/4") Gasket, intake manifold Lockwasher (3/8") Manifold, air intake Plug, pipe (1/4") Washer, plain (13/32") Washer (25/64") CONNECTION	2 2 2 1 1 2 2 2	1 1 1 1 1 1 1	1 2 3 4 5 6 7	126123 S-103-D 43829-C 126078 126088 67185 S-604	Same as Group A except: Manifold, air intake Capscrew (3/8"-16 x 1-1/4" Clamp, hose Crossover, turbocharger Gasket, air crossover Hose, crossover to turbocharger Lockwasher (3/8")	1 4 2 1 1	1 1 1 1 1 1 1 1	24 25 26 27 28 29
S-103-D 103837 61574 S-604 S-602	Capscrew (3/8"-16 x 1-1/4") Connection Gasket, connection Lockwasher (3/8") Washer, plain (13/32")	4 1 1 4 4	1 1 1 1	9 10 11 12 13	5 004	GROUP C C-105-BI Same as Group A except: (Omit Glow plug)	•		
	GLOW PLUG				101424	Connection	1	1	30
125880 68139 67946 69215 68061-A 68178-1 68606 68812 118273 43468	Adapter, nozzle Elbow, hose Gasket Nozzle "O" ring Lockplate, nozzle Plug, pipe (1/8") Plug, glow Gasket, glow plug Pin, groove		1 1 1 1 1 1 1 1 1 1	14 15 16 17 18 19 20 21 22 23		GROUP D C-105-IP Same as Group A except: (Omit Glow plug and connection)			

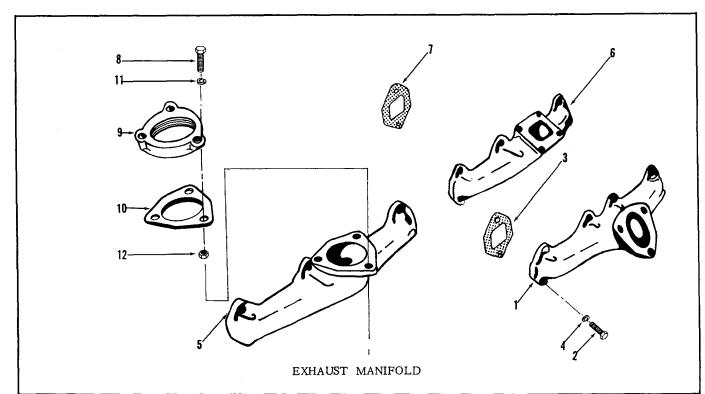

Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
	GROUP A C-105						
130559 S-103-D 114030 S-604	Manifold, exhaust Capscrew (3/8"-16 x 1-1/4") Gasket, manifold exhaust Lockwasher (3/8")	1 8 4 8	1 2 3 4				
	GROUP B C-105-BI						
	Same as Group A except:						
112505	Manifold, exhaust	1	5				
	GROUP C C-140				1	ļ	
	Same as Group A except:						
126039 129410	Manifold, exhaust Gasket, exhaust manifold	1 1	6 7				
	GROUP D C-105-IP						
	Same as Group B except:						
S-160-B 9563 9579 S-608 S-212	Capscrew (1/2"-20 x 2-1/2") Flange, exhaust Gasket, exhaust flange Lockwasher (1/2") Nut (1/2")	3 1 1 3 3	8 9 10 11 12				
				į			

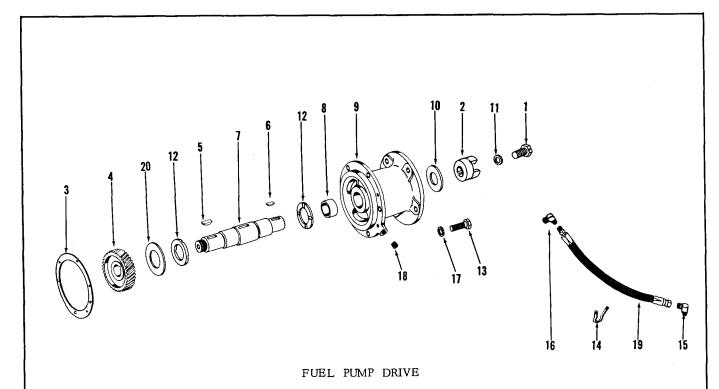

Part	No.	Ref.	Part	Part Name	No.	Ref.
Number Part Name	Req.	No.	Number		Req.	No.
BM-94791 Capscrew Coupling, fuel pump drive half 153218 Gasket Gear, accessory drive S-316 Key S-316 Support, accessory drive Bushing, compressor drive Support, compressor 147328 Support, compressor Washer, clamping 170664 Washer, plain 116389 Washer, thrust Capscrew (5/16"-18 x 1-1/4") Clip, hose Formal Street Elbow, oil restrictor Lockwasher (5/16") Plug, pipe (1/8") Hose Seal, keyway		No. 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20		Part Name		

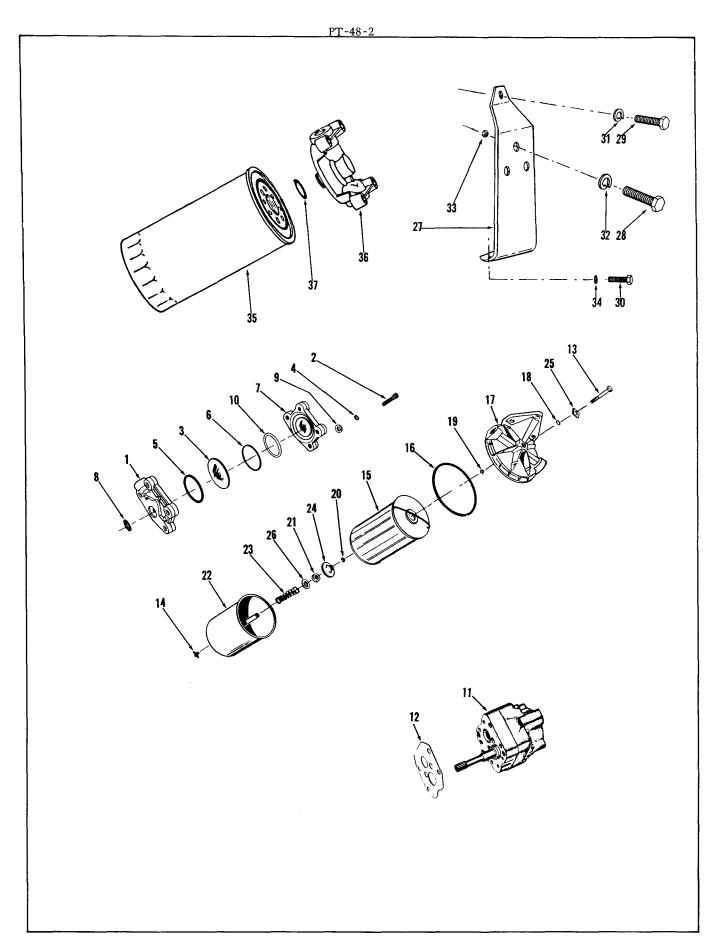


FIG. 2 FUEL PUMP DAMPER, GEAR PUMP and FILTERS

PT-48-2-1 (Cont'd)

			PT-4	8-2	(Cont'd)	·			
Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.
obtain the your engin has the sp build and the fuel p settings, result. Only placed wit Your Cummi part numbe	PT FUEL SYSTEM Cummins PT Fuel Pump is cali best performance and fuel e e. Your Cummins Distributor ecial tools required for com calibration. Caution: do no ressure settings or the thro as serious damage to your en PT Fuel System parts which co chout pump calibration are li ns Distributor will record to ref your complete PT Fuel P chis catalog.	or D plete t dis ttle gine an be sted he sp	y for ealer re- turb screw may	v ic	159748 S-103-D S-109 S-149-A HS1002000SS S-602 S-604 70168 68368-A	MOUNTING PARTS C-105-IP ("ONLY") Bracket, fuel filter Capscrew (3/8"-16 x 1-1/4") Capscrew (3/8"-16 x 5") Hose Lockwasher (13/32") Lockwasher (3/8") Nut, huglock Spacer FUEL FILTER GROUP B C-105, C-140	1 3 1 2 1 1 3 3 2 2	2 2 2 2 2 2 2	27 28 29 30 31 32 33 34
	FUEL PUMP DAMPER (All Models)				154711 FF-105 142784 250006	Assembly, fuel filter Cartridge (154709) Head, filter Gasket, cartridge	1 1 1	2 2 2	35 36 37
BM-76340 153336 S-172-C 139834 S-698 139988 100099 153338 151900 70704 160514	Damper, fuel pump Body, damper Capscrew Diaphragm Lockwasher "O" ring "O" ring Plate, damper Seal Washer, nylon	1 1 2 1 2 1 1 1 1 2 1	2 2 2 2 1 2 2 2 2 2 2 2	1 2 3 4 5 6 7 8 9					
BM -97502 177764	GEAR PUMP Pump, gear 3/4" (R.H.) Gasket, gear pump FUEL FILTER	1 1	2 2	11 12					
151940 121960 S-962-E 141986 FF-108 151881 251128 134736 135169 251131 151884 251091 151885 151920 251081 S-658	GROUP A C-105-BI, C-105-IP Filter, fuel Capscrew, head to shell Cock, drain Decal, filter Element Gasket, head to shell Head, filter "O" ring, capscrew Ring, grip, capscrew Ring, grip, post Seal, pilot Shell and post Spring, filter Support, filter element Washer, capscrew Washer, plain (5/8")	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	13 14 15 16 17 18 19 20 21 22 23 24 25 26					


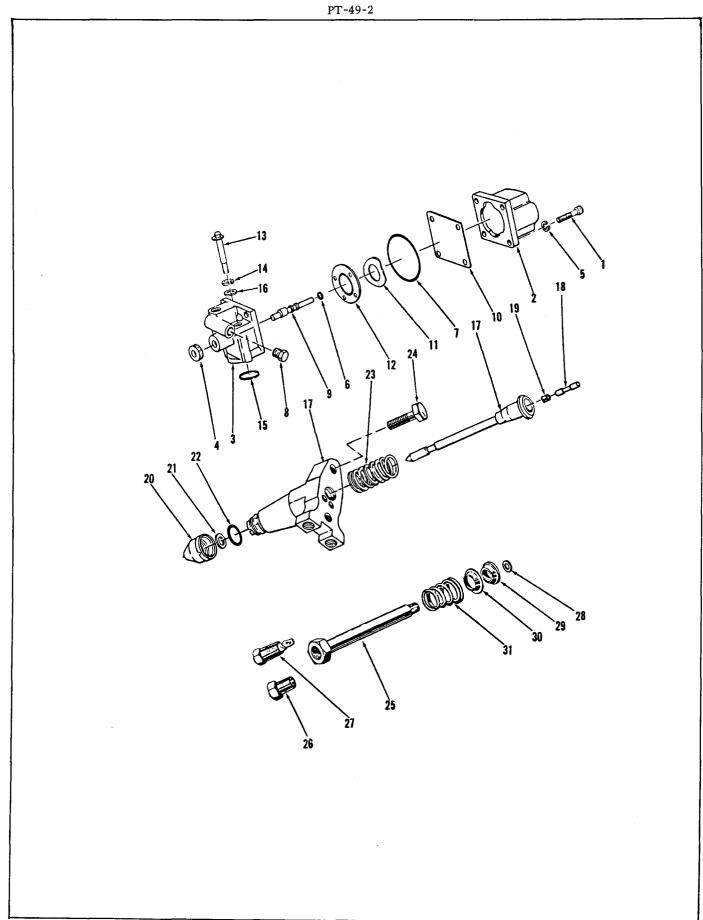


FIG. 3 SHUTDOWN VALVE, INJECTOR and FUEL INLET and DRAIN CONNECTIONS


PT-49-2-1 (Cont'd)

PT-49-2-1 (Cont'd)										
Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	
BM-69973 S-1214 134072 129826 129838 S-607 129888 114791 70295 143679 129839 129768 129827 171546 S-698 154087 67684 BM-71636 BM-71819 146814 148504 BM-54732	SHUTDOWN VALVE All Models Valve, shutdown (12 volt) Capscrew, coil to housing Coil assembly Housing, valve Knob, override Lockwasher (3/16") "O" ring, coil to housing "O" ring, shaft Plug, pipe Shaft, override Shield, fuel Spring Valve Capscrew Lockwasher (1/4") "O" ring Washer, plain INJECTOR All Models Injector assembly Body and plunger (131590) Link Sleeve Cup, injector (125145)	1 4 1 1 1 1 1 1 1 1 2 2 1 2	3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3	1 2 3 4 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20	BM-46134 116473 S-911-B 165485 BM-31308 BM-31309 101132 S-1003-1 70855 9426-2 70854 70847 70856	GROUP B C-140 Same as Group A except: Fitting, injector drain Elbow Plug, pipe (1/8") GROUP C C-105-IP Same as Group A except: Tube, fuel supply FUEL INLET and DRAIN CONNECTION All Models Connection, inlet Connection, drain Body, inlet and drain Connection, inlet Gasket, copper Gasket, rubber Retainer, gasket Spring, connection	1 1 1 1 1 4 4 4 8 8 8 8 8 8 8	3 3 3 3 3 3 3	25 26 27 28 29 30 31	
62410 70775 9337 S-165	Gasket, cup "O" ring, cup Spring, injector Capscrew (3/8"-24 x 1-1/2") FUEL TUBING GROUP A C-105, C-105-BI	4 4 4 8	3 3 3	21 22 23 24						
163646 70817 S-1004-1 BM-36324 180221 100502 S-1027 BM-49160 104536 118628 70829 180433 144727 185056	Clip, tube Connection, straight Elbow, tubing Fitting, injector drain Adapter, coupling Elbow Tube, connector Manifold, injector supply Ferrule, fuel tube Manifold, fuel supply Nut, tube Manifold, fuel drain Tube, fuel supply Tube, fuel by-pass	2 1 1 1 1 1 1 4 1 1 1 1 1 1 1 1 1 1 1 1								

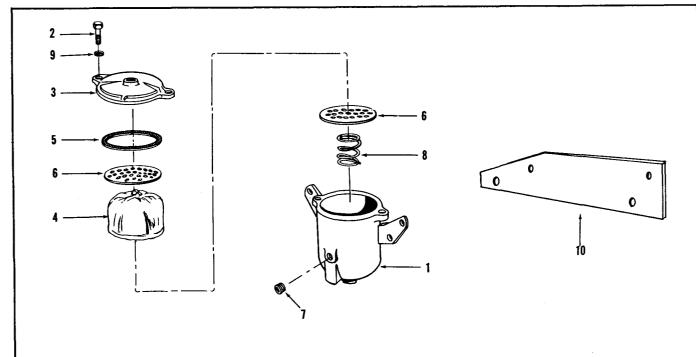


CORROSION RESISTOR


Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
132716 132717 70223 132718 132732 132730 132719 139090 132731 70233	GROUP A All Models Assembly, corrosion resistor Body Capscrew, cover to body (5/16"-18 x 1-1/4") Cover Element Gasket Plate Plug, pipe Spring Washer (11/32")	1 1 2 1 1 1 2 2 1	1 23 4 56 7 8	165228 S-921-D S-114 S-199-A 179904 179903 135970 179910 179924 109003 S-600 S-604 S-908 9674-D 130236 179901	GROUP B C-105, C-105-IP, C-105-BI (only) Bracket Bushing, pipe Capscrew (1/4"-20 x 3/4") Capscrew (3/8"-16 x 4") Clamp, hose Connector, elbow Decal, corrosion resistor Hose Hose Lockplate Lockwasher (1/4") Lockwasher (3/8") Plug, pipe (3/8") Spacer Shield, heat Valve, shutoff	1 1 2 2 4 2 1 1 1 2 2 1 2 1 2 1 2 1 2	10

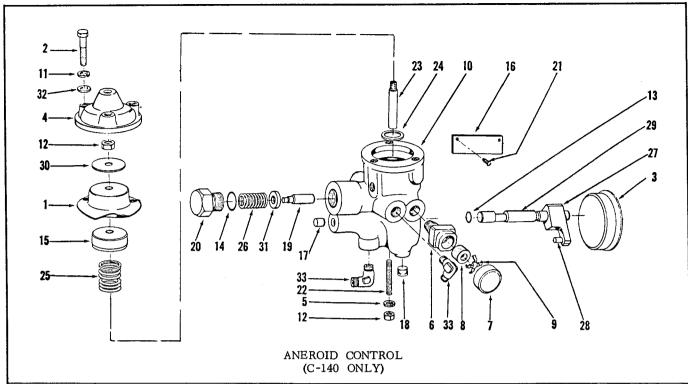


Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
RM-69581-AA	Control, aneroid	1			MOUNTING PARTS		
114739	Bellows	1	1		Modritario initia		
S-1218	Capscrew, cover to housing	3	2	143950	Adapter hose	2	
114773	Cover, control	li	3	120046	Bracket	1	
114947	Cover, bellows	1	4	S-112	Capscrew (3/8"-16 x 1")	2	
70815	Dyna-seal, adjusting screw	1	5	S-199-A	Capscrew (3/8"-16 x 4")	2	
BM-55534	Filter, air	1		68139	Elbow	1	
125026	Body, filter	1	6	144372	Elbow	2	33
125027	Cap, filter	1	7	HS0501400SS	Hose	1	
118020	Element	1	8	HS0501600SS	Hose	1	
124996	Spring, filter	1	9	HS0400600MS	Hose, manifold	1	
140357	Housing, control	1	10	S-604	Lockwasher (3/8")	2	
S-600	Lockwasher, cover to housing			S-679	Washer, copper (25/64")	3	
'	(1/4")	3	11	S-2760	Washer	1	
108074	Nut, bellows actuating shaft	2	12	68361	Spacer	1	
114791	"O" ring, plunger	1	13		•		l
154087	"O" ring, spring retainer	1	14	1			
114755	Piston, bellows	1	15	Ì			i
105375	Plate, name	1	16			İ	j
114765	Plug, plunger	2	17				
S-911-B	Plug, pipe (1/8")	2	18				
140414	Plunger, pressure	1	19			İ	İ
114764	Retainer, spring	1	20	Ì			
S-2267	Screw, nameplate	2	21	ĺ			1
109919	Screw, adjusting	1	22	I	}		1
115033	Shaft, bellows actuating	1	23				1
114921	Shim, spring	A/R	24				ĺ
115084	Spring, bellows	1	25				
114745	Spring, pressure valve	1	26				
BM-69381	Valve, lever and pin	1					
115034	Lever	1	27				
114940	Pin	1	28				
140358	Valve	1	29				
114754	Washer, bellows retainer	1	30				
114795	Washer, pressurizing valve	1	31				
70704	Washer, cover to housing	3	32				
70704	Washer, pressurizing valve Washer, cover to housing	3	31				

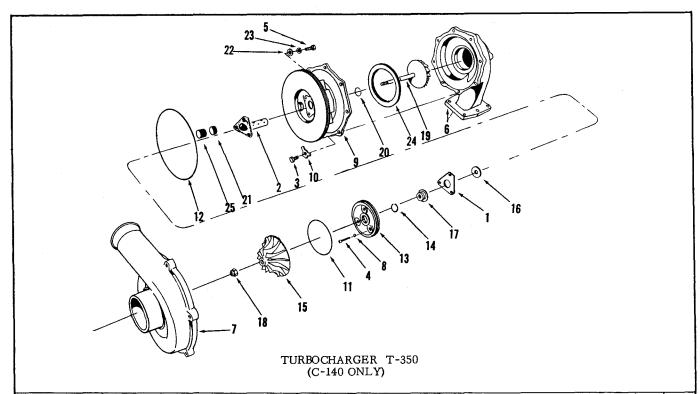


Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
	TURBOCHARGER T-350				MOUNTING PARTS		
AR-674	Turbocharger assembly	1		S-139-A	Capscrew (1/4"-20 x 5/8")	1	
154040	Bearing, outboard thrust	1	1	S-190-C	Capscrew (3/8"-24 x 5/8")		
176580	Bearing	1	2	113226	Capscrew (3/8"-24 x 1-3/4")	4	
105737	Capscrew (5/16"-18 x 3/4")	3	3	2603	Clamp	2	
140626	Capscrew, self lock	3	4	69465-A	Clamp		
S-107	Capscrew (5/16"-18 x 3/4")	6	5	68425	Clip	3	Ì
152635	Casing, turbine	1	6	BM -63242	Connection assembly	1 5	ł
156885	Casing, compressor	1	7	134444	Capscrew (5/16"-18 x 7/8")		
8078	Gasket	3	8	134426	Gasket	1 5	
154588	Housing, bearing	1	9	131480	Lockplate	5]
131480	Lockplate	8	10		Tube and flange assembly	1	ŀ
128920	"O" ring	1	11	S-917-A	Elbow	1	
128921	"O" ring	1	12	S-972	Elbow	1	
140284	Plate, oil seal	1	13	S-1040-A	Elbow	1	
S-910-B	Plug, pipe (1/4'')	1		111365	Elbow, 45 degree	2	ļ
128919	Ring, seal	1	14	142429	Elbow, 90 degree	1	
BM -63252	Rotor assembly	1		126088	Gasket, turbocharger	1	
*	Wheel, compressor	1	15	63223	Hose	1	l
*	Washer	1	16			1	İ
140286	Sleeve	1	17	HS0602640SS		1	
*	Nut	[1	18	HS0601340M		1	
*	Wheel and shaft assembly	1	19		Lockwasher (3/8")	1	ļ
146411	Ring, seal	1	20	107440	Locknut, turbocharger	4	1
176606	Spacer	3	21	66638	Nipple, pipe	1	
S-626	Washer, plain (11/32")	6	22	109660	Nipple	1	İ
S-605	Lockwasher (5/16")	6	23	60724	Spacer, belt shield	1	
128936	Plate, name	1	Į l				1
S-2267	Screw, nameplate	4					l
152634	Plate, spacing	1	24				
175309	Sleeve	3	25				
	* Sold only in balanced rotor as	(ssemb	ly				

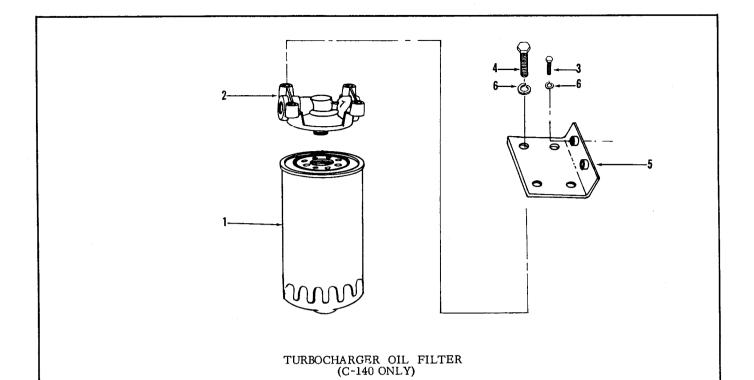

Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	Ng. Req.	Ref. No.
253243 LF-632 153717	Filter assembly, turbocharger oil Cartridge Head, filter MOUNTING PARTS	1 1 1	1 2				
S-111 S-112 153755 S-604	Capscrew (5/16"-18 x 1-1/2") Capscrew (3/8"-16 x 1") Bracket Lockwasher (3/8")	2 4 1 6	3 4 5 6				
			The state of the s				

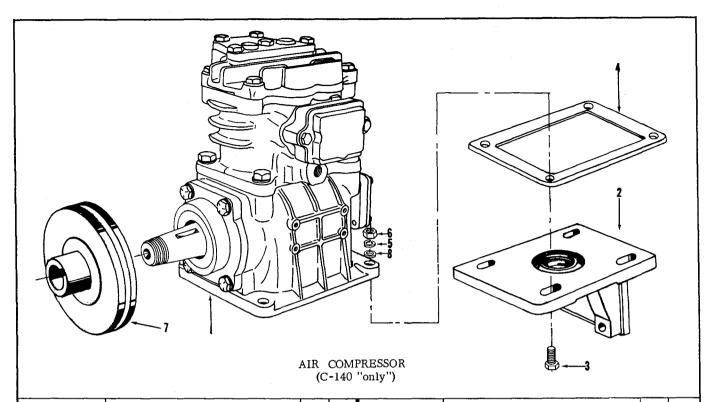

Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
Part Number 113860 134786 113845 S-155 S-121-B 108707 S-1047-A 69318 113874 113851 HS0400860MS S-604 S-610 S-223	Part Name Air Compressor MOUNTING PARTS Belt Bracket, air compressor mounting Capscrew (7/16"-14 x 1-1/2") Capscrew (7/16"-14 x 2-1/2") Capscrew (3/8"-16 x 1-1/2") Elbow Elbow Elbow Gasket, air compressor Gasket, air compressor mounting Hose Lockwasher (3/8") Lockwasher (7/16") Nut (3/8")	1 1 1 1 1 1 1 1 1 1 4 2 2	1 2 3 4 5 6		Part Name		
S-223 151938 S-602	Nut (3/8") Pulley, air compressor drive Washer, plain (13/32")	4 1 4	7 8				

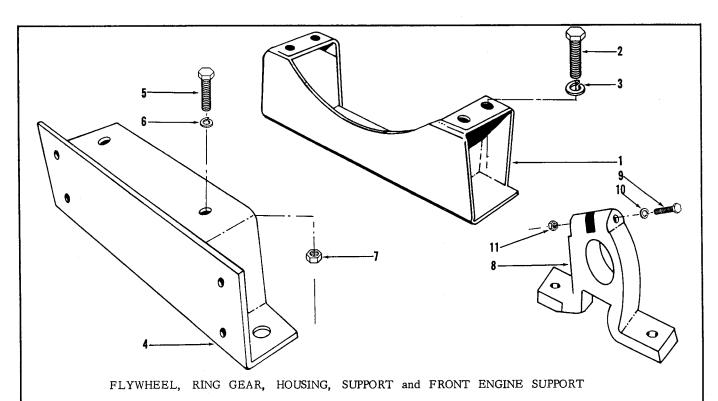

Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
	FLYWHEEL HOUSING GROUP A C-105, C-105-BI, C-140				FLYWHEEL HOUSING SUPPORT C-105-IP		
11013 S-140 67163 9226	Housing, flywheel Capscrew (7/16"-14 x 1-3/4") Capscrew Dowel, flywheel housing	1 4 8 2		137269 S-181 S-603	Support, flywheel housing Capscrew (5/8"-11 x 1-1/4") Lockwasher (5/8") FRONT ENGINE SUPPORT	1 4 4	1 2 3
9333 S-608 S-610 S-670 S-622	Gasket, flywheel housing Lockwasher (1/2") Lockwasher (7/16") Washer, plain Washer	1 8 4 8 4		148359 S-139 S-603 S-201	Support, front engine (lower) Capscrew (5/8"-11 x 1-1/4") Lockwasher (5/8") Nut (5/8")	1 2 2 2	4 5 6 7
103551	GROUP B C-105-IP Same as Group A except: Housing, flywheel	1		BM -72365 S-178-A S-603 S-201	Support, front engine (upper) (148360) Capscrew (5/8"-11 x 6-3/4") Lockwasher (5/8") Nut (5/8")	1 1 1 1	8 9 10 11
S-109 70346 S-602 S-604	Capscrew (3/8"-16 x 7/8") Cover, barring slot Lockwasher (13/32") Lockwasher (3/8")	2 1 2 2			FLYWHEEL AND RING GEAR		
				to adapt of differ assembl Your assembl of this b	wheels and ring gears have been dest the Cummins Diesel Engine to hurent installations. For this reasoncies are not listed. The Cummins Distributor will record for the condition of the conditi	ndred thes lywhe ne fro derin	ls ee eel nt g

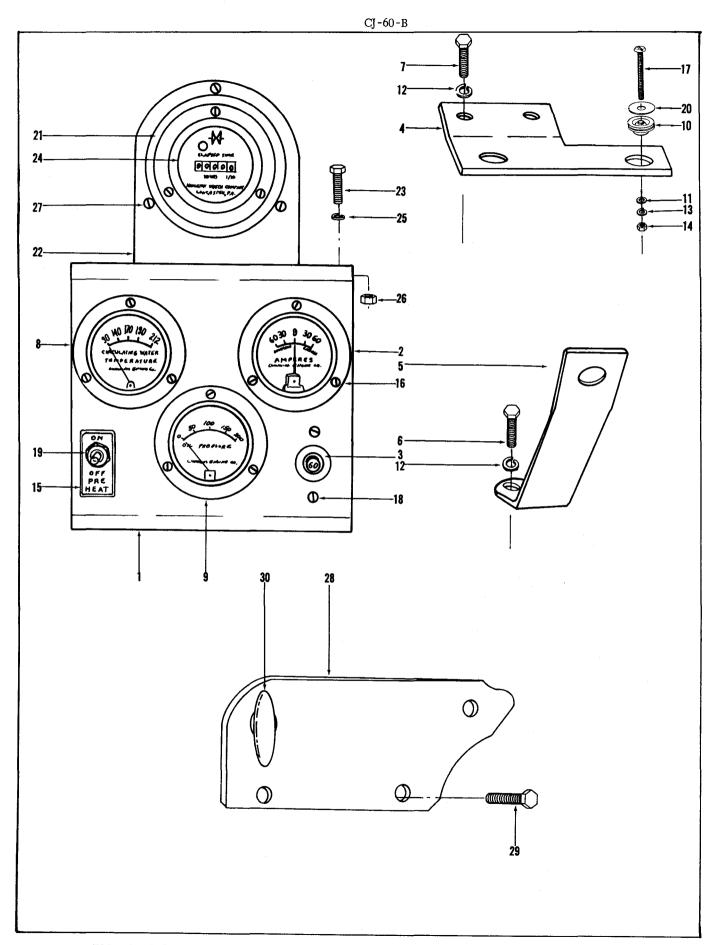


FIG. 4 INSTRUMENT PANEL, HOURMETER, THROTTLE CONTROL and BRACKET.

CJ-60-B-1

				J-60	-D-1				
Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.
	C-102-1P						†		===
127883	Panel, instrument	1	4	1		GROUP B C-105-BI			
	MOUNTING PARTS				66733 102846	Gauge, oil pressure Switch, ignition	1 1		
66741	Ammeter	1	4	2	118847	Switch, Ignition	1		
69486	Breaker, circuit (60)	1	4	3					
127884	Bracket, instrument panel (upper)	1	4	4		GROUP C C-105			
127885	Bracket, instrument panel	1	1	7		Same as Group B except:			
	(lower)	1	4	5					
S-102-D S-109	Capscrew (3/8"-16 x 3") Capscrew (3/8"-16 x 7/8")	1 2	4 4	6	100046 115007	Primer, hand Light, indicator	$\begin{vmatrix} 1 \\ 1 \end{vmatrix}$		
S-109 S-1059	Capscrew (3/8 -10 x //8)	1	*	'	66735	Gauge, fuel oil pressure	1		
S-1047-A	Elbow	1	1		174450	Plate	1		
S-1004-1 41627-B	Elbow Gauge, water temperature	1 1	4	8	104215 68813	Switch, toggle Resistor, preheater	1		ļ
66733	Gauge, water temperature	1	4	9	S-1213	Screw, fillister head	2		
102486	Isolator, vibration	3	4	10	S-600	Washer (1/4")	2		
S-603-A S-604	Washer (7/32") Lockwasher (3/8")	3 3	4 4	11 12	S-224	Nut (1/4")	2		
S-607	Lockwasher (3/16")	3	4	13		GROUP D C-140			
S-259	Nut	3	4	14			1		ļ
118367 S-1338	Plate Screw	1 9	4 4	15 16		Same as Group C except:			
103240	Screw	3	4	17	S-119	Capscrew (5/16"-18 x			
69504	Screw	2	4	18		1-1/4")	4		
102057	Switch	1 3	4	19	139474	Decal, cold start	1		
102484	Washer (7/32")	3	4	20	S-605 S-221	Lockwasher (5/16") Nut (5/16")	4		
	HOURMETER				2	1,42 (6) 16)			
68880	Adapter, hourmeter	1	4	21					
103317	Bracket, hourmeter	1	4	22					İ
S-159-A 113309	Capscrew (1/4"-28 x 3/4") Hourmeter	2 1	4 4	23 24					
S-600	Lockwasher (1/4")	2	4	25					ĺ
S-636 S-270	Lockwasher (5/32") Nut (1/4")	6 2	1 4	26					
70310	Screw	6	4 4	27					
	TIDOTTI E								
	THROTTLE CONTROL BRACKET								
128231	Bracket, throttle control	1	4	28					
S-105	Capscrew (3/8"-16 x	_							
	3-1/2")	2	4	29					
	THROTTLE CONTROL]
70619	Block, wire clamp	2							
S-188-C	Capscrew (14"-20 x 1/2")	1							
S-190-C	Capscrew (3/8"-24 x 5/8")								
70467 43588-D	Clip Control, push-pull	1 1	4	30			1		
S-600	Lockwasher (1/4")	1	7	30		j	İ	ļ	
S-604	Lockwasher (3/8")	1							ļ
S-224 69276	Nut (1/4") Spring, plunger	$\begin{array}{c c} 1 \\ 1 \end{array}$					1		
70208	Screw	2							
111670	Support, oil gauge tube	1							
S-631	Washer, plain (9/32")	1							

CJ-42**-**H

			CJ -42				
Part Number	Part Name	No. Req.	Ref. No.	Part Number	Part Name	No. Req.	Ref. No.
	ENGINE ELECTRICAL EQUIPMENT				STARTER MOUNTING		
Electric	al equipment is not manufactured	by th	ne	S-173-A	C-105, C-105-BI, C-140 Capscrew (5/8"-11 x 2-1/4")	3	
for electri manufactur	Engine Company, Inc. Complete cal equipment may be obtained from the Delco-Remy Company at A	om th Ander	e son,	S-603	Lockwasher (5/8") C-105-IP	3	
Ohio; The or from the	he Leece-Neville Company at Clev Electric Autolite Company at Toled eir service stations. Address of ation may be obtained from the manu	o, Oh near	io; est	S-103-A S-603	Capscrew (5/8"-11 x 2") Lockwasher (5/8")	3 3	
service sta	ALL MODELS				MAGNETIC SWITCH,		
113910 43812	Generator Motor, starting	1 1			REGULATOR MOUNTING and BRACKET		
115572 124627	Regulator, voltage Pulley, generator	1 1			C-105-IP		
178571	Belt, generator	1		118847 148356	Switch, magnetic Bracket, regulator and switch	1	
	GENERATOR MOUNTING C-105, C-105-BI, C-140			S-149-A S-114	Capscrew, bracket (3/8"-16 x 5") Capscrew, regulator	2	
114039	Baffle, generator	1		S-181-B	(1/4"-20 x 3/4") Capscrew, switch	3	
113697 S-102 S-107	Bracket, generator Capscrew (5/16"-18 x 1") Capscrew (5/16"-18 x 3/4")	1 2 1		S-600 S-604	(3/8"-16 x 1/2") Lockwasher, regulator (1/4") Lockwasher, switch and bracket	2 3 4	
S-112 113938	Capscrew (3/10 -16 x 3/4) Capscrew (3/8"-16 x 1") Fan, generator pulley	4		5-004	GASKET SETS	*	
113875 S-604	Link, generator adjusting Lockwasher (3/8")	1 4	ŀ	BM -72231	Engine gasket set	1	
S-605 66747 68251	Lockwasher (5/16") Spacer Spacer, exhaust manifold shield	3 1 1		BM -70445 BM -68356	Cylinder head gasket set Fuel pump gasket set	1	
	C-105-IP			10 4 597 S-2668	Nameplate, fuel system Joint, ball	1 2	
114039 126173	Baffle, generator Bracket, generator	1 1	1	S-605 S-248	Lockwasher (5/16") Nut (5/16")	2 2	
S-103-D S-119 S-134	Capscrew (3/8"-16 x 1-1/4") Capscrew (5/16"-18 x 1-1/4") Capscrew (5/16"-18 x 2")	1 1 1 1					
S-155 103009 113938	Capscrew (7/16"-14 x 1-1/2") Capscrew (7/16"-14 x 1-1/4") Fan, generator pulley	1 2 1					
112243 S-604	Link Lockwasher (3/8")	1 1		}			
S-605 S-610 S-221	Lockwasher (5/16") Lockwasher (7/16") Nut	3 3					
114126 114127	Spacer, generator Spacer, generator	2 2 1					
S-626	Washer, plain (11/32")	1					
				·			
					<u> </u>		