


Cummins Parts Model: V-378 Series Catalog

Bulletin: 967140 - D

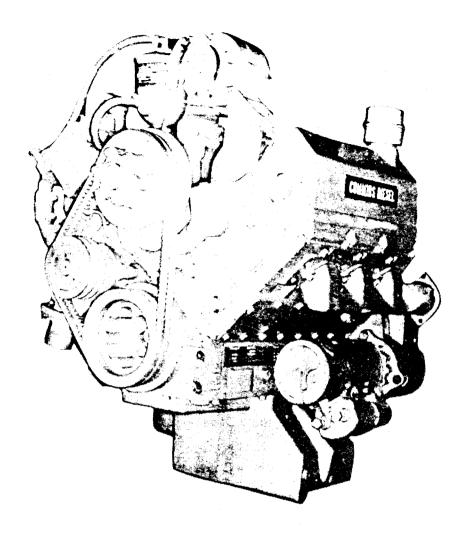

Parts Ordering for: V-378 Series

Genuine Cummins Parts and service facilities are worldwide. There are more than 2400 Cummins Sales and Service locations in the principal cities of the United States and Canada, and more than 500 Sales and Service locations situated elsewhere throughout the free world. Each distribution outlet is thoroughly equipped with technical data, factory-trained mechanics, modern equipment and a full, adequate stock of Genuine Cummins Parts.

For quicker and better service, your parts requirements should be ordered from your nearest Cummins Distributor or Dealer. At any of the locations prompt, intelligent, courteous service is a basic trademark. Each is ready and eager to help in every possible way through personal contact or through the mail — at your convenience.

The satisfactory ordering and receiving of parts by the purchaser is greatly dependent upon the proper use of available information. In order that all avoidable errors may be eliminated, the following instructions are offered as the purchaser's guide:

1. Write your order clearly, using a typewriter if possible.

- Be sure to list the correct part number. If in doubt as to the correct part number, state the model and serial number of the engine on which the part is to be used. Part numbers are usually located in various places on the part itself.
- 3. When possible, arrange your purchase order in part number numerical sequence.
- Always specify shipping instructions "Best Way" is satisfactory if you have no preference
- 5. State your company name and shipping address clearly.

Genuine Cummins Parts mean QUALITY! They're designed and engineered to fit best in your Cummins Diesel. Each part is made of the highest quality material — on the most accurate of machines — by the top craftsmen of the trade.

You can be sure a Genuine Cummins Part will fit better — do the job better — lessen the chances of costly breakdown. When you buy replacement parts, buy quality. Buy Genuine Cummins Parts!

YOU OWN THE BEST . . . REPAIR WITH THE BEST

GUSTOMER SERVICE INFORMATION

This Parts Catalog contains standard parts information for the V-378 Series Naturally Aspirated engines.

Part numbers appearing in () are for identification purposes only and should not be used when ordering service replacement parts.


The form below is provided for your convenience and when properly filled out, will allow proper identification of your unit and the normal maintenance items. Parts information errors that could cause extended down time could be avoided if the information on this form is referred to when ordering parts from your Cummins Distributor or Dealer.

ALWAYS SPECIFY ENGINE MODEL AND SERIAL NUMBER WHEN ORDERING PARTS FROM THIS CATALOG


Engine Model	Engine Serial No	Fuel Pump Assembly No.
Installed In	Model	Chassis No.
MAINTENANCE ITEMS	S - REPLACEMENT REFERENCE	NUMBERS
Belts Alternator	Filter Elements Air	
Fan	Breather	·
Water Pump	Fuel	· · · · · · · · · · · · · · · · · · ·
Power Steering	Lubricating	
Air Conditioner	Water	
OTHER SPECIAL EQU		

Table of Contents


	Page		Page
Air Compressor – Cummins Compact	25 & 26	Fuel Pump Damper	29 & 30
Air Intake Manifold	22	Fuel Pump	29 & 30
Air Cleaner	23 & 24	Fuel Tubing	29 & 30
Alternator	32	Gask et Sets	34
Camshaft and Cover	6	Gear Housing and Cover	11
Camshaft Bushings	1	Injector	31
Connecting Rod	4	Instrument Panel	33
Corrosion Resistor	21	Lubricating Oil Cooler	16
Crank shaft	3	Lubricating Oil Filter	14
Cylinder Block	1	Lubricating Oil By-Pass Filter	15
Cylinder Head	9	Lubricating Oil Pump	12
Cylinder Head Cover	10	Main Bearing Shells	3
Cylinder Liner	1	Oil Pan	13
Dipstick and Tube	13	Pistons	4
Electrical Equipment	32	Piston Rings	4
Exhaust Manifold	27	Push Rods	7
Fan Hub	18	Radiator	33
Flywheel Housing	34	Rocker Levers	8
Flywheel and Ring Gear	34	Shutdown Valve	31
Front Cover	5	Starting Motor	32
Front Engine Support	5	Thermostat and Housing	19 & 20
Front Water Header Cover	1	Tappets	7
Fuel Filter	29 & 30	Vibration Damper	3
Fuel Gear Pump	29 & 30	Water Header Cover	2
Fuel Pump Drive	28	Water Pump and Pulley	17

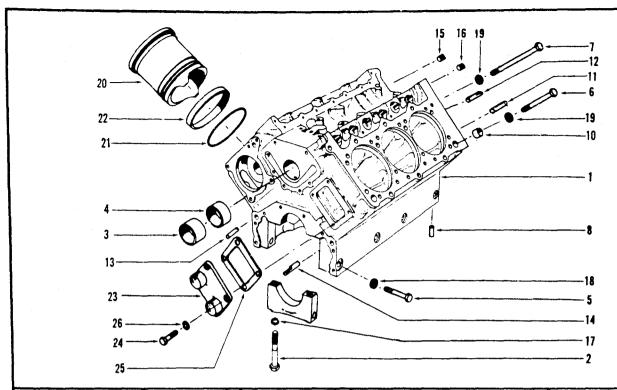


RT MBER PART NAME	NO. REQ'D	REF. NO.	PART NUMBER		NO. REQ'D	RE
CYLINDER BLOCK Block, cylinder (553590) Bolt, main bearing Bushing, cam (1 & 4) Bushing, cam (2 & 3) Capscrew, main bearing side locking Capscrew, cylinder head — short Capscrew, cylinder head — long Dowel ring main bearing cap (Diamond) Dowel ring, cylinder head to block Master) Dowel ring, cylinder head to block (Master) Dowel ring, cylinder head to block (Diamond) Dowel, front cover to block Dowel, front cover to block Plug, expansion Plug, pipe (1/8") Washer, main bearing cap Washer, main bearing side locking Washer, cylinder head capscrew	1 8 2 2 8 20 8 2 4 2 1 1 2 3 8 8 28	NO. 1 2 3 4 5 6 7 8 10 11 12 13 14 15 16 17 18 19	NUMBER AR-60170 554311 171270 171880 554776 S-2286 551455 167801 183307 S-112 S-172-B 167802 S-604 171786 171787 171788 171789 171790	MOUNTING PARTS Kit, cylinder liner Liner, cylinder Packing, cylinder liner Seal, crevice Nameplate Screw, mounting FRONT WATER HEADER COVER Cover, water header (C Application) Cover, water header (Auto Application) Cover, water header (P. Application) Capscrew (Auto & C Application) Capscrew (P Application only) Gasket Cover Lockwasher (3/8") OVERSIZE FOR SERVICE Shim, liner (.007) Shim, liner (.010) Shim, liner (.0114) Shim, liner (.021)	6 6 6 6 1 4 1 1 4 4 1 4 A/RRA/RA/RA/RA/RA/RA/RA/RA/RA/RA/RA/RA/R	N

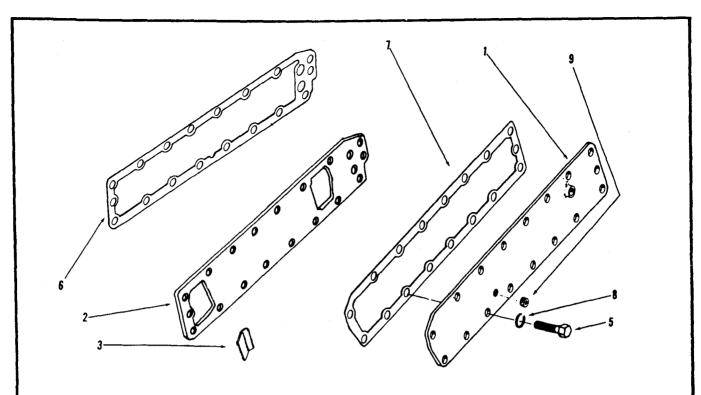


WATER HEADER COVER MOUNTING PARTS 167779 Cover, water header (L.B.) 1 1 S-109 Capscrew (3/8" - 16 x 7/8") 27 BM-97543 Cover and baffle (R.B.) 1 1 176597 Gasket, water header (R.B.) 1 553813 Cover, water header 1 2 167778 Gasket, water header cover (L.B.) 1 175428 Baffle 1 3 S-604 Lockwasher (3/8") 27 S-908 Plug, pipe (3/8") 1 1	ENGINE APPLICATION	FF-HIGHWA	¥Υ	C-CONSTRUCT	RIAL POWER X			
167779 Cover, water header (L,B.) 1 1 S-109 Capscrew (3/8" - 16 x 7/8") 27 BM-97543 Cover and baffle (R,B.) 1 1 176597 Gasket, water header (R,B.) 1 553813 Cover, water header 1 2 167778 Gasket, water header cover (L,B.) 1 175428 Baffle 1 3 S-604 Lockwasher (3/8") 27 Plug, pipe (3/8") 1 1 1 1		PART NAME				PART NAME	NO. REQ'D	RE NO
	NUMBER WAT 167779 Cove BM-97543 Cove 553813 Cove	FER HEADER COVER er, water header (L,B.) er and baffle (R,B.) er, water header	1 1 1 1	1 2	S-109 176597 167778 S-604 S-908	MOUNTING PARTS Capscrew (3/8" - 16 x 7/8") Gasket, water header (R.B.) Gasket, water header cover (L.B.) Lockwasher (3/8") Plug, pipe (3/8")	27 1 1 27 1	5678 9

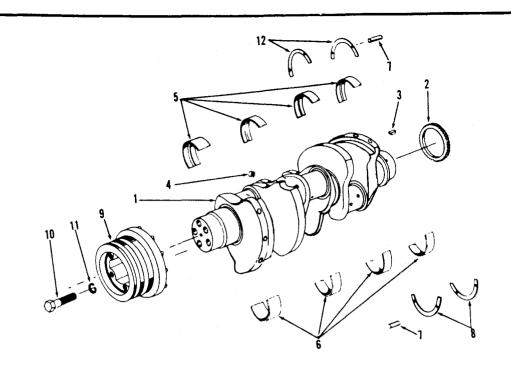


ENGINE APPLI	CATION AUTOMOTIVE X B-OFF	HIGHWA	11	C-CONSTRUCTION (NDUSTRIAL X PINDUST	RIAL POW	EHI
PART NUMBER	PART NAME	NO. REQ'D	REF.	PART NUMBER	PART NAME	NO. REQ'D	REF NO.
	CRANKSHAFT						
AR-60774 195240 177086 144131 S-911-B	Crankshaft assembly Crankshaft Gear Key Plug pipe (1/8'') MAIN BEARING SET	1 1 1 1 3	1 2 3 4				
BM-99830* 182320 182400 182200 182210 148547 173640 553670	Bearing set, main (Std) Main bearing (upper 1 and 5) Main bearing (upper 2, 3,4) Main bearing (lower 1 and 5) Main bearing (lower 2, 3, 4) Dowel Ring, half thrust (lower) Ring, half thrust (upper) VIBRATION DAMPER	1 2 2 2 2 2 2 2 2	5 5 6 6 7 8 12				
193079 S-149-B S-608 554032	Damper, vibration Capscrew (½" - 20 x 1½") Lockwasher (½") Capscrew (Ford only)	1 5 5 5	9 10 11 10				
	* Main bearings may be purchased in .010", .020" and .030" undersize.						

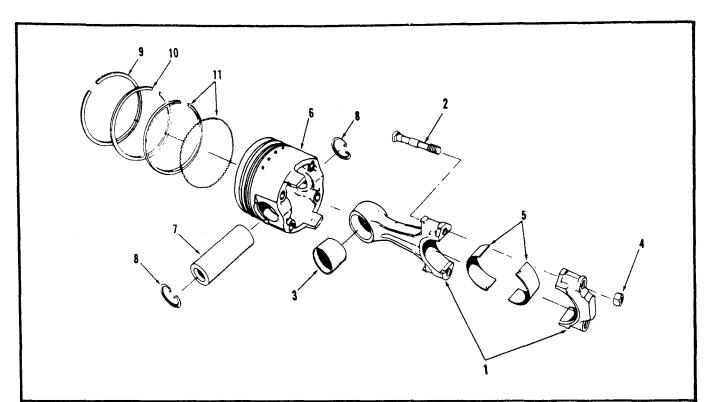


PART		NO.	REF.	PART		NO.	REF
NUMBER	PART NAME	REQ'D		NUMBER	PART NAME	REQ'	D NG.
	CONNECTING ROD				PISTON		
BM-78784 551143 195360 152838 157620*	Rod, connecting (166452) Bolt, connecting rod (7/16" - 20 x 3.5/16") Bushing, piston pin Nut, connecting rod bolt (7/16") Bearing, connecting rod (Std)	6 12 6 12 12	1 2 3 4 5	AR-60740 200800 151770 157978	Piston, assembly (Std) Piston Pin, piston Ring, snap RINGS	6 6 6 12	6 7
	* Connecting rod bearing shells may be purchased in .010'', .020' and .030'' undersize.			AR-61500 201650 208990 201645	Ring set, piston (Std) Ring, compression (Top) Ring, compression Ring, oil	6 6 6 6	9

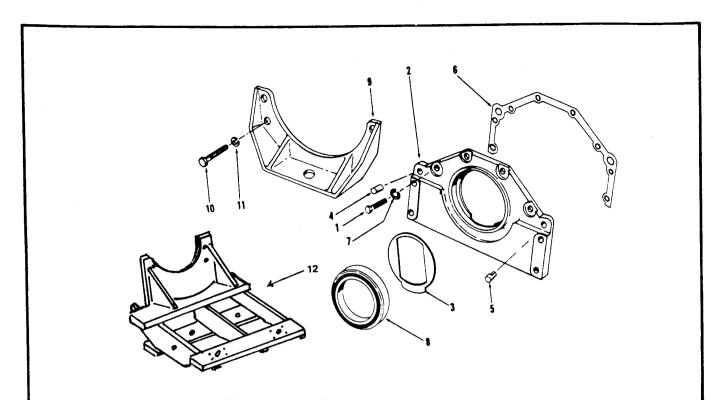


PART NUMBER	PART NAME	NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF NO.
	FRONT COVER Capscrew (3/8" – 16 x 7/8") Cover, front Deflector, oil Dowel (Master) Dowel (Diamond), Gasket, cover Lockwasher (3/8") Seal, crank shaft			553640 188397 106289 S-608	PART NAME FRONT SUPPORT Support, engine front (IP) Support, engine front (Auto and CI) Capscrew (½" – 13 x 2¼") Washer (½")	NO. REQ'D	REI 12 9 10 1 1

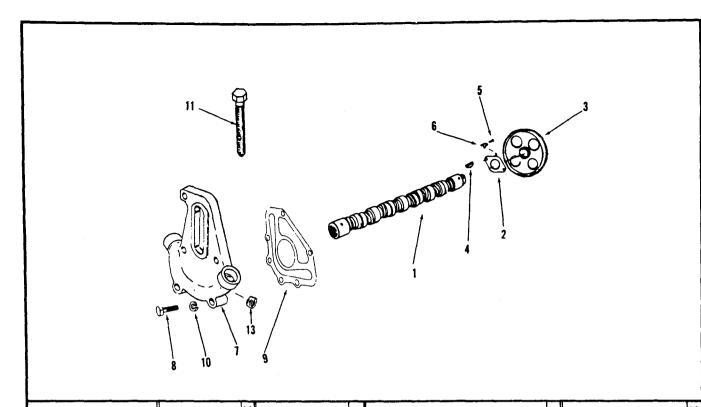


ENGINE APPLI	ENGINE APPLICATION AUTOMOTIVE X B-01		B-OFF-H	GHW	AY	C-CONSTRUCTION	ON & INDUSTRIAL X P-INDUSTRI	IAL POWER	
PART NUMBER		PART NAME		NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
	CAMS	HAFT	<u>-</u>				CAMSHAFT COVER		
201060 167305 187649 S-313	Gear, Key, c	naft ig, camshaft thrust camshaft camshaft NTING PARTS		1 1 1 1	1 2 3 4	556493* 108707 S-103-D S-104 555195	Cover, cam (fan bracket, water crossover) Capscrew (3/8" - 16 x 1½") Capscrew (3/8" - 16 x 2½") Capscrew (3/8" - 16 x 2½") Connection, water transfer	1 2 2 2 2	7 8 8 8
S-107	Capsci	rew, thrust bearing			_	550164 S-604	Gasket, cover Lockwasher (3/8'')	1	9 10
68908-A	Lockp	(5/16" - 18 x plate, thrust bearing	¾")	2 2	5 6	555198 182706 S-911-B	"O" ring Screw, fan adjusting Plug, pipe (1/8")	1 1	11 13
							* NOTE: Also listed on page 18 and 20		
			·						

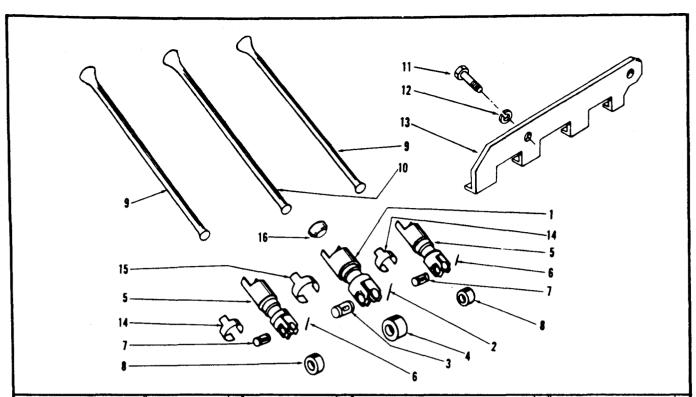


ENGINE APPLI	CATION	AUTOMOTIVE X B-C	OFF-HIGHWA	ΑY	C-CONSTRUCTI	ON & INDUSTRIAL X	P-INDUSTRIA	L POWE	ER X
PART NUMBER		PART NAME	NO. REQ'D	REF. NO.	PART NUMBER	PART NA	AME	NO. REQ'D	REF. NO.
BM-94016 111272 114223	Tapper Lockw Pin, in	RODS AND TAPPETS t, injector (171936) ire, tappet ector tappet roller	6 6	1 2 3					
154571 107738 BM-94014 108186 169154 153679 168209 170326	Socket Tappet Lockw Pin, va Rotler, Rod, v	injector tappet c, cam follower t, valve (171937) ire, tappet lve tappet roller valve tappet alve push njector push	6 6 12 12 12 12 12 12	4 16 5 6 7 8 9					
S-110 S-605 551084 156438 156439	Capscr Lockw Plate, t Spring	ew, tappet guide plate (5/16" - 18 x 5/8") asher (5/16") appet guide valve tappet injector tappet	12 12 6 12 6	11 12 13 14 15					

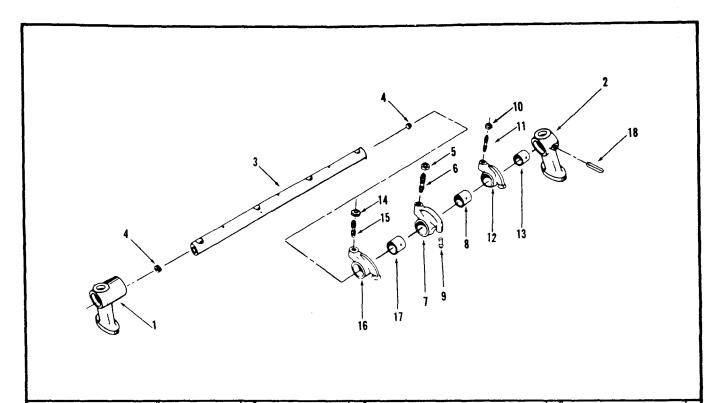


ENGINE APPLIC	CATION AUTOMOTIVE X B-OFF-H	IGHW/	AY	C-CONSTRUCTION	ON & INDUSTRIAL X P-INDUS	TRIAL POWE	RX
PART NUMBER	PART NAME	NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. I REQ'D I	REF. NO.
154109 551608 AR-60595 161825 BM-99987 S-212 168306 BM-99986 152936 194037 BM-79725 S-212 168306 BM-79724 152937 BM-79723 S-212 168306 BM-79722 152937 551609	Bracket, rocker lever shaft Bracket, rocker lever shaft Shaft, rocker lever (151606) Plug Lever, injector rocker (194038) Nut, adjusting screw Screw, adjusting (½") Lever and bushing Bushing, injector rocker lever Socket, injector link Lever, intake rocker (168255) Nut, adjusting screw Screw, adjusting (½") Lever and bushing Bushing, valve rocker lever Lever, exhaust valve rocker (168285) Nut, adjusting screw Screw, adjusting (½") Lever and bushing Bushing, valve rocker lever Pin, rocker shaft locating	622466666666666666666666	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18				

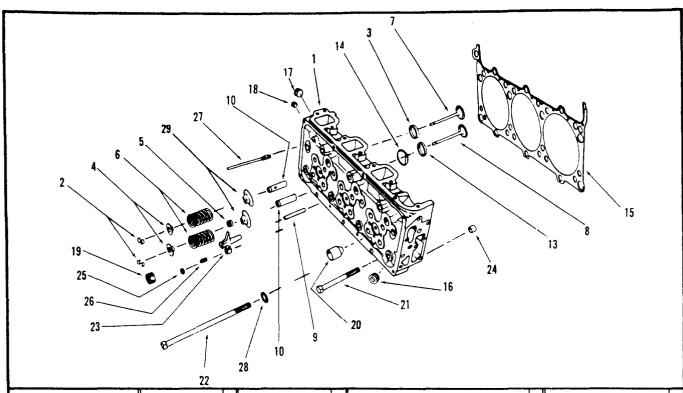


PART NUMBER	PART NAME	NO. REQ'D	REF.	PART NUMBER		NO. REQ'D	REF NO.
	CYLINDER HEAD				CYLINDER HEAD GASKET		
AR-60776 166772 155441 156541 163037 166774 166774 553811 AR-60777 154220 154946 195000 196641 553461 551475 554416 S-910-B S-911-B S-995 169630 154390	Head assembly, cylinder (152143) Collet, valve half Retainer, valve spring Seal, intake valve Spring, valve Valve, exhaust Valve, intake Wearplate, valve spring Head, cylinder (less valves) Guide, crosshead Guide, valve intake and exhaust Insert, intake valve seat "O" ring Plate, swirl Plug, cup Plug, pipe Plug, pipe (½" NPTF) Plug, pipe (1/8" NPTF) Plug, pipe (¾" NPTF) Sleeve, injector Insert, exhaust valve seat	2 48 24 12 24 12 24 2 12 24 12 12 12 12 12 12 12 12 12 12 12 12 12	1 2 4 5 6 7 8 29 9 10 13 14 16 17 18 19 20 3	AR-62070 156081 209658 209656 553019 553743 AR-62077 AR-62078	Gasket, cylinder head (555623) (Std) Grommet Grommet, water Grommet, push tube opening "O" ring Grommet SERVICE OPTIONAL Gasket, cylinder head (.010) Gasket, cylinder head (.020)	2 4 24 2 4 16	15
162182 162183 156879 100973 S-273 190817 147389 BM-78775 S-1003-1 S-1022-A 153411	Capscrew, cylinder head (short) Capscrew, cylinder head (long) Crosshead, valve Dowel, ring, cylinder head to block Nut, crosshead adjusting Retainer, crosshead (Auto & CI) Screw, crosshead adjusting Tube, vent (153882) Connector, tubing Nut, tube Washer, cylinder head	20 8 12 4 12 6 12 2 2 2 2 28	21 22 23 24 25 26 27				

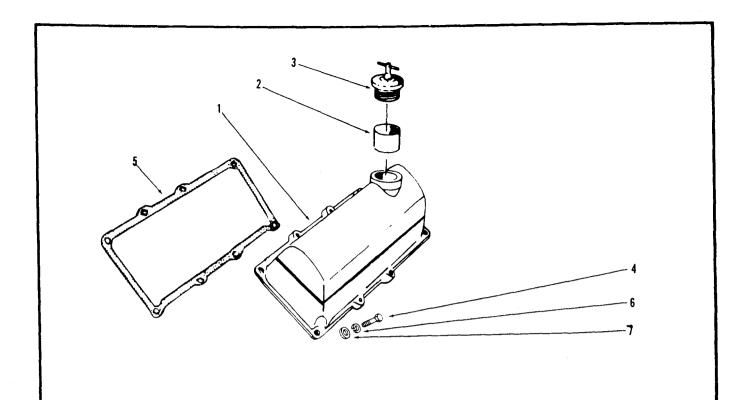


ENGINE APPLIC	CATION	AUTOMOTIVE	B-OFF-H	IGHWA	Y	C-CONSTRUCTION	ON & INDUSTRIAL	X P-INDUSTRIA	LPOWER	i X
PART NUMBER		PART NAME		NO. REQʻD	REF. NO.	PART NUMBER	PART	NAME	NO. R REQ'D N	EF.
AR-60375 552383 550113 AR-60691 552384 550113 553521 101322 107981	Cover, Cover, Tube - Cover, Cover, Tube, Cover, Cap, f	NDER HEAD COVEI , valve R-B (C & P Ap , valve R-B (C & P App filler R-B (C & P App , valve R-B (Auto App , valve R-B (Auto App filler R-B (Auto App , valve (L-B) iller (Auto)	oplication) oplication) dication) olication) olication) olication)		1 2 1 2 3 3					
1087 07 154019 S-604 S-602 554833	Capscr Gaske Lockw Washe	NTING PARTS rew (3/8" - 16 x 1%' t, valve cover vasher (3/8") r, plain (3/8") plate label	"	16 2 16 16 2	4 5 6 7					

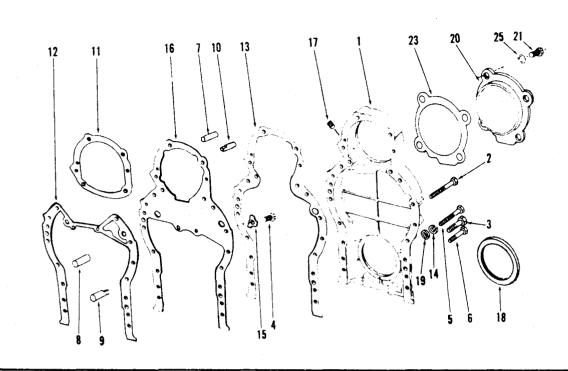


PART NUMBER	PART NAME	NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF NO.
168644 S-109 108707 S-126 S-102-D S-104 9089 69562 102957 153807 168649 168650 167993 S-604 175282 551467 69901 551515 S-602	GEAR HOUSING Auto Application Housing, gear Capscrew (3/8" – 16 x 7/8") Capscrew (3/8" – 16 x 2%") Capscrew (3/8" – 16 x 2") Capscrew (3/8" – 16 x 2") Capscrew (3/8" – 16 x 2") Dowel (Master) Dowel (Master) Dowel (Diamond) Dowel (Diamond) Gasket, plate to block Gasket, gear housing Gasket, compressor support Lockwasher (3/8") Lockplate Plate, gear housing Plug, hex Seal, rear crank shaft Washer, plain (3/8")	1 2 6 2 1 6 1 1 1 1 1 1 1 1 1 2 1 1 2 1 1 1 1	1 4 6 5 2 3 7 8 9 10 2 13 11 14 15 16 17 18 19	172645 171627 OMIT S-602 ADD S-965-E 555245 S-102 153433 S-604	C & IP Applications Same as Auto except: Housing, gear (C) Housing, gear (IP) Washer, plain (3/8") Plug, pipe (1/16") GEAR HOUSING COVER Auto Application Only Cover, gear housing Capscrew (5/16" – 18 x 1") Gasket Support Lockwasher (3/8")	1 1 1 4 1 4	19 20 21 23 25

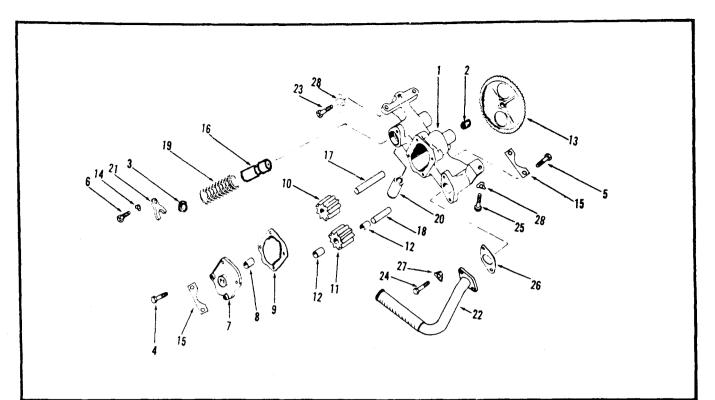


ENGINE APPLIC	CATION AUTOMOTIVE X B-OFF-H	iGHW/	AY	C-CONSTRUCTI	ON & INDUSTRIAL X P-INDUST	RIAL POWE	RX
PART NUMBER		NO. REQ'D	REF.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
AR-60801 AR-60089 68586 175805 S-107 S-155-A S-109 AR-60092 68586 178283	PART NAME LUBRICATING OIL PUMP Pump, lubricating oil Body and bushing (187011) Bushing Cap, by-pass spring Capscrew, cover to body (5/16" - 18 × ¾") Capscrew, cover to body (5/16" - 18 × 2½") Capscrew, regulator (3/8" - 16 × 7/8' Cover and bushing (181165) Bushing Gasket, cover	1 1 1 1 2 2 1 1 1	1 2 3 4 5 6 7 8 9		MOUNTING PARTS Capscrew, pump to block (3/8" - 16 × 1¼") Capscrew, tube to pump (3/8" - 16 × 7/8") Capscrew, pump to block (3/8" - 16 × 1") Gasket, tube to pump Lockplate, tube to pump Lockplate, pump to block		
187012 AR-60090 68586 184044 109319 551117 183014 178284 190138 551079 554616 126304 553268	Gear, idler drive Gear, idler (187013) Bushing Gear, main drive Lockplate, regulator Lockplate, cover to body Plunger, pressure regulator Shaft, drive Shaft, idler Spring, regulator Tube, by-pass Yoke, pressure regulator Tube, suction assembly	1 1 2 1 1 2 1 1 1 1 1 1	10 11 12 13 14 15 16 17 18 19 20 21 22				

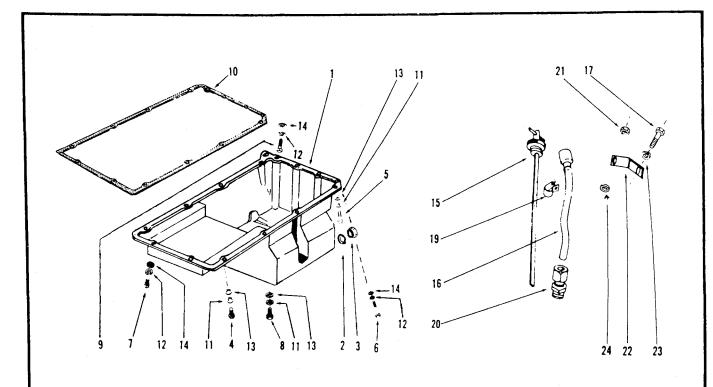


PART NUMBER	PART NAME	NO. REQ'D	REF. NO.	PART NUMBER		IO. IEQ'D	REF NO.
553261 553856 553855 S-103-D S-199-A S-124-C S-119 S-117 175726 S-604 S-605 S-602 S-626 69901 161704 555601 553854 550389 109319	Pan oil, rear sump Gasket, oil drain Plug, oil drain Capscrew (3/8" - 16 x 1½") Capscrew (5/16" - 18 x 4") Capscrew (5/16" - 18 x 1½") Capscrew (3/8" - 16 x ¾") Capscrew (3/8" - 16 x ¾") Capscrew (3/8") Lockwasher (3/8") Lockwasher (5/16") Washer, plain (3/8") Washer, plain (5/16") Plug, hex Plug, pipe Plug, pipe Insert, drain plug hole Capscrew Lockplate	1 1 1 6 2 2 2 2 1 8 6 8 6 1 1 1 1 2 2 2	1 2 3 4 5 6 7 9 10 11 12 13 14	553933 171634 S-109 554013 163759 S-604 S-223 172036 S-602 550847 554183 168978 S-188-C S-224 554013 163759 S-600 168979 S-631	CI AND IP Applications Dipstick Tube, dipstick Capscrew (3/8" - 16 × 7/8") Clamp Connection, dipstick tube Lockwasher (3/8") Nut (3/8") Support, oil gauge tube (P Application) Washer, plain (3/8") Support, oil gauge (C Application) Auto Application Dipstick Tube, dipstick Capscrew (¼" - 20 × ½") Nut Clamp Connection, dipstick tube Lockwasher (¼") Support, oil gauge tube Washer (9/32")	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	155 166 177 199 200 233 211 222 244 222 245 156 177 211 199 200 222 244

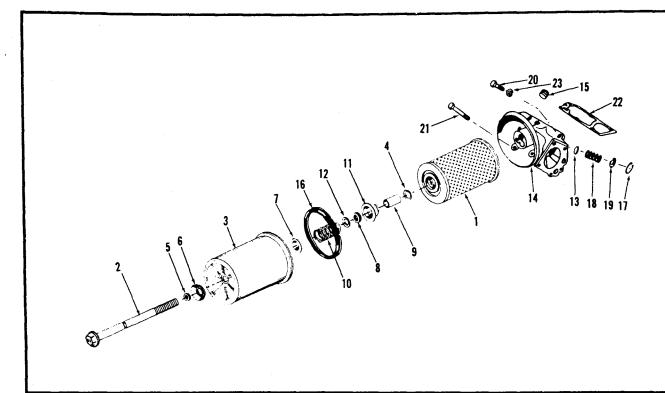


ENGINE APPLICA	ATION AUTOMOTIVE X	B-OFF-HIGHWA	Υ	C-CONSTRUCTI	ON & INDUSTRIAL X P-INDUST	RIAL POWE	RX
PART NUMBER	PART NAME	NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
AR-60253 173174 555378 556507 551681 556506 554378 554375 551685 554377 551683 554376 551684 200819 175623 S-908 193302 156676 188476 S-689	Filter, lubricating oil Cartridge Shell assembly, filter Bolt, centre Can, filter Circlip Gasket, bolt Plate Retainer, seal ring Seal, bolt Spacer Spring, cartridge Support, cartridge Washer, bolt seal Disc, by-pass Head, filter Plug, pipe (3/8") Ring, sealing, head Ring, snap disc Spring, by-pass Washer, disc (19/32")		1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	1087 07 S-126 176924 S-604	MOUNTING PARTS Capscrew (3/8" - 16 x 1½") Capscrew (3/8" - 16 x 2½") Gasket Lockwasher (3/8")	5 2 1 7	20 21 22 23

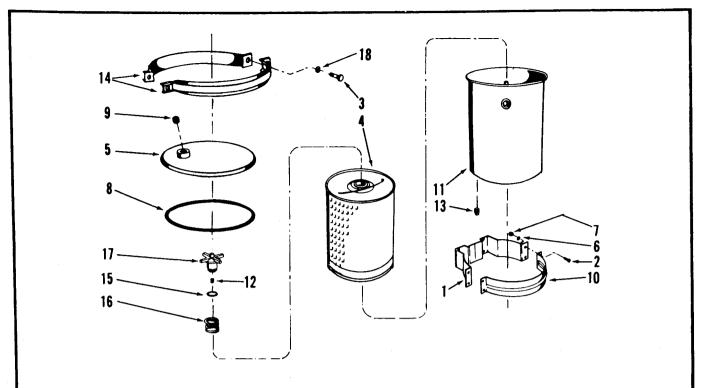


ENGINE APPLIC	ATION	AUTOMOTIVE	B-OFF-F	IIGHWA	AY	C-CONSTRUCTION 8	INDUSTRIAL X	P-INDUSTRIA	L POW	ER
PART NUMBER		PART NAME		NO. REQ'D	REF. NO.	PART NUMBER	PART NA	ME	NO. REQ'D	RE NO
159707 145664 70188 70223 256839 159667 70189 164159 S-908 145665 252056 157151 131911 S-908 150038 150039 70194 252138 116029 150037 252055	Assemfilter (Bracket Capsor Cartric Cover Lockv Nut, n "O" "I Plug, c Strap, Shell, Decal, Orific Plug, c Coupl Lockv Suppo "O" ri Spring	et, filter rew, bracket rew, (5/16" - 18 x 1% dge vasher, bracket nounting bracket ing, cover cover (3/8") mounting filter	oy-pass	1 2 8 2 1 1 8 8 1 1 1 1 1 1 1 1 1 1 1 1	1 2 3 4 5 6 7 8 9 10 11 12 13 14 14 18 15 16 17					

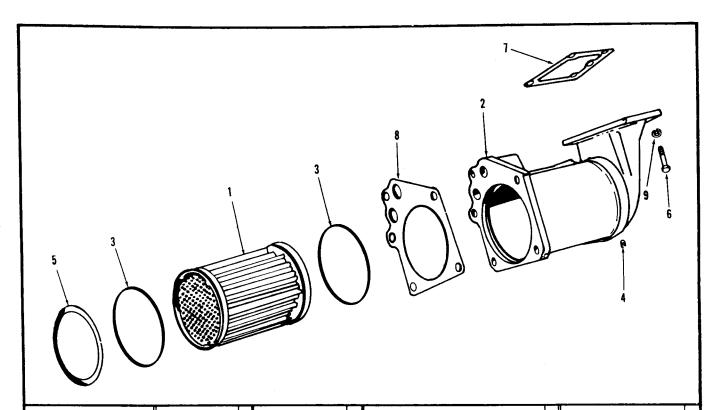


ENGINE APPLI	CATION	AUTOMOTIVE X	B-OFF-H	IGHW/	AY	C-CONSTRUCTI	ON & INDUSTRIAL)	P-INDUSTRIA	L POWE	RX
PART NUMBER		PART NAME		NO. REQ'D	REF.	PART NUMBER	PART N	AME	NO. REQ'D	REF. NO.
BM-91604 110848 166401 148293 553364 110827	Coole Eleme Housi "O" r Plug, Retail	ing ing	OLER	1 1 1 2 1	1 2 3 4 5					
S-103-D 165153 166407 S-604	Capso Gaske Gaske	erew, mounting et, housing to block et, cooler to filter washer (3/8")		9 1 1 9	6 7 8 9					

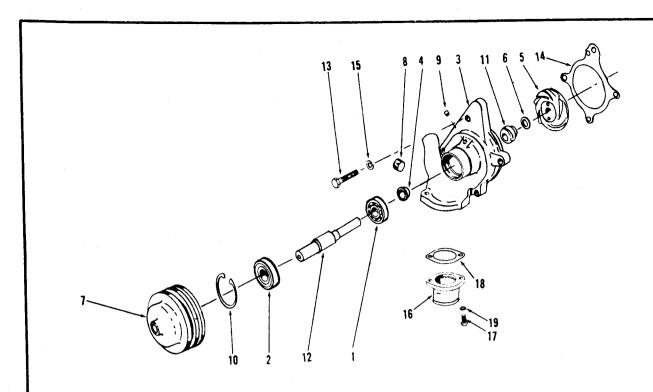


PART NAME	AL POW	WER
AR-61788 177596 Bearing, ball 552335 Bearing, ball 555260 Body, water pump 11 3 554438 Impeller, water pump 12 1 5 200509 Seal, seat 13 1 63042 AR-62494 Kit, water pump repair Bearing, ball Bearing Bearing, ball Bearing Bearing, ball Bearing Bearing, ball Bearing Bea	NO. REQ'D	R D N
177596 Bearing, ball 1 1 552335 Bearing, ball 1 2 177596 Bearing, ball Bearing, ball Bearing, ball 1 2 177596 Bearing, ball		
177596 Bearing, ball 1 1 552335 Bearing, ball Bearing, ball 1 2 177596 Bearing, ball B	1	1
Bearing, ball 1	l i	
Body, water pump	1 1	-
107776	1 ;	١
Impeller, water pump 1	1 1	1.
Seal, seat 1 6 169042 Gasket, water pump 553093 Pulley, water pump 1 7 107776 Flinger, water pump 553095 Plug, pipe (¾") 1 8 8 8 8 8 8 8 8 8	l i	
Pulley, water pump 1	1 1	
S-995 S-915-A S-915-A S-911-B Plug, pipe (1/8") 1 9 9 1 1 1 1 1 1 1	1 i	- 1
S-915-A S-911-B Plug, pipe Plug, pipe 1 1 9 1 10 68270 Connection, water Capscrew, connection Gasket, connection S-604 Connection Gasket, connection Gasket, connection Cokwasher (3/8") Capscrew, water pump 1 12 S-112 S-604 Capscrew, connection Gasket, connection Capscrew, connection Capscr	1 '	
S-911-B 160586 214173 553090 Ring, retaining Seal, water pump Shaft, water pump 1 1 12 S-112 9221 S-112 9221 S-604 MOUNTING PARTS 108707 Capscrew, water pump to block (3/8" - 16 x 1½") 163042 Connection, water Capscrew, connection Gasket, connection Lockwasher (3/8")	ı	-
160586 Ring, retaining 1 10 68270 Seal, water pump 1 11 12 S-112 S-112 Gasket, connection Gasket, connection Lockwasher (3/8") 169042 Gasket, water pump to block 1 14 14 14 14 15 16 16 17 17 18 19 19 19 19 19 19 19	i	- 1
214173 Seal, water pump 1 11 12 S-112 S-112 Gasket, connection Gasket, connection Gasket, connection Lockwasher (3/8") 163042 Gasket, water pump to block 1 14 14 Gasket, water pump to block 1 14 14 Gasket, water pump to block 1 14 Gasket, water pump t	1	
Shaft, water pump	1 1	
9221 Gasket, connection Lockwasher (3/8")	2	
MOUNTING PARTS 108707 Capscrew, water pump to block (3/8" - 16 x 1½") 4 13 163042 Gasket, water pump to block 1 14	1 1	
(3/8" - 16 x 1½") 4 13 169042 Gasket, water pump to block 1 14	2	
163042 Gasket, water pump to block 1 14	İ	
S-604 Lockwasher (3/8") 4 15	1	
	1	
	- 1	
	i	
	1	
	- 1	
	ł	
	1	- 1
	1	
	1	- 1
	- 1	1
	i	
, , , , , , , , , , , , , , , , , , , ,	- 1	1
	- 1	- 1
	- 1	
	- 1	-
	- 1	- 1

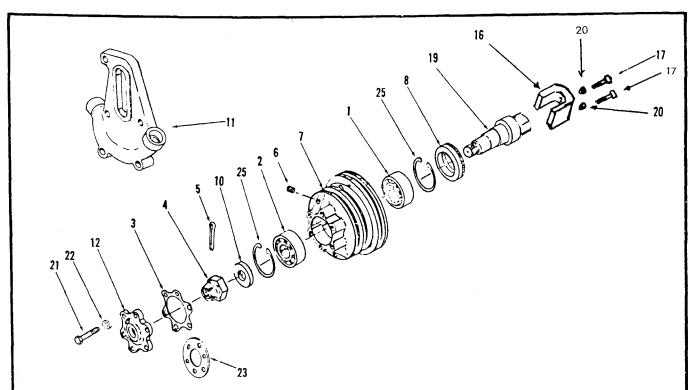


		AUTOMOTIVE X B-OF			 	N & INDUSTRIAL X P-IN	
PART NUMBER		PART NAME	NO. REQ'C	REF.	PART NUMBER	PART NAME	NO. R REQ'D N
	HIGH	FAN MOUNT					
AR-62215	Hub, f		1				
553712	Bearin	g, tapered roller	1	1 1]]
553713		g, tapered roller	1	2	1		
556457	Gasket		1	3			
553817		ut, slotted hex.	1	4	1		łi
S-507 555932	Pin, co		1 1	5			
69901	Plug, h	, fan hub	1	7	1		1 1
553714		nex ner, fan hub	2	6]		
200307	Seal, o	ier, rari nub	2	25 8			1 1
554214		fan hub	1	19	[1 [
551496		r, clamp	1 1	10	1		
153411		r, clamp	2	20			1 1
556493		cam/bracket, fan/crossove		20]		1 1
] "	water		11			
556452	Pilot, 1		l i	12]		
182707		,fan hub	i	16			
554316	Capscr		2	17			
	MOUN	ITING PARTS					1
178685	Belt		2	ĺ			
S-199-A		ew, fan mounting (P)	6	21	•		
S-604	Lockw	asher (3/8")	6	22	i		
119211	Spacer	, fan (P)	1	23	l		1 1
S-120	Capscr	ew fan mounting (Auto & (C) 6	21			1 1
					ľ		
i	}						
	ĺ						1 1
							1 1
					.		

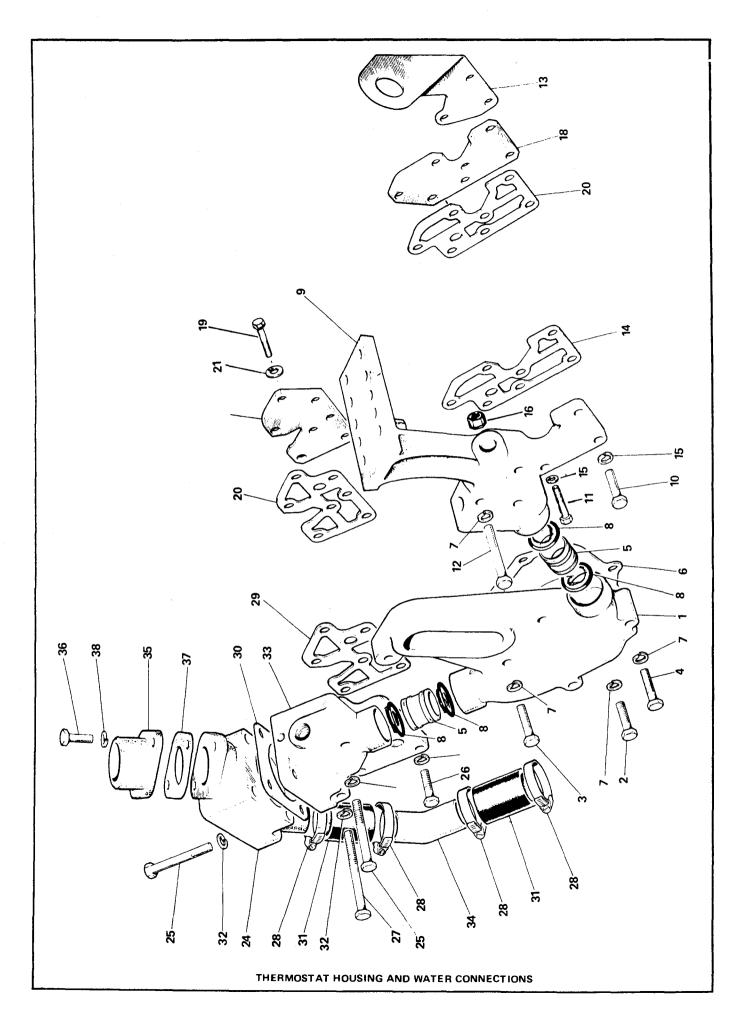


ENGINE APPLI	CATION AUTOMOTIVE X B-OFF-H	IGHWA	Y	C-CONSTRUCTI	ON & INDUSTRIAL X P-INDUSTRIA	L POW	ER X
PART NUMBER		NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
	WATER CROSSOVER				THERMOSTAT HOUSING		
556493 108707 S-103-D S-104 555195 550164 S-604 555198 182706 S-911-B 650864 S-103-D S-109	Crossover, water, (cam cover) Capscrew, cover to block Capscrew, cover to block (3/8" - 16 x 1¼") Capscrew, cover to block (3/8" - 16 x 2½") Connection, water transfer Gasket, cover Lockwasher, cover to block (3/8") "O" ring, sealing Screw, fan adjusting Plug pipe Bracket, lifting (IP) Capscrew (IP) Capscrew (IP)	1 2 2 2 2 1 6 4 1 1 1 3 4	1 2 3 4 5 6 7 8	555256 S-163 S-103-D S-199-A 550547 157290 553916 553414 S-604 S-908 S-915-A 186780 555199 135675 553457 108707 69901	Housing, thermostat Capscrew, (3/8" - 16 x 3¼") Capscrew (3/8" - 16 x 1¼") Capscrew (3/8" - 16 x 4") Clamp, hose Gasket, thermostat support Gasket, housing to support Hose Lockwasher (3/8") Plug, pipe (3/8"NPTF) Plug, pipe (1/8" NPTF) Seal Support, thermostat housing Thermostat Tube, water by-pass Capscrew Plug, hex	1 5 5 1 4 1 1 2 11 3 1 1 1 1 4 2	24 25 26 27 28 29 30 31 32 33
555189 168919 S-103-D 108707 S-126 157290 S-604 S-915-A S-962-E 554500 555702 550830 S-670 556045	Cover; cyl. head alt. support Bracket, engine lifting (Auto & IP Applications) Capscrew, cover lifting bracket (Auto) Capscrew (Auto) Capscrew (Auto) Capscrew, cover to cylinder head Gasket, cylinder head cover Lockwasher (3/8") Plug, pipe (½") Drain tap Plate, alternator steadying Bolt, shouldered Bushing, rubber Washer Spacer alt, support RIGHT BANK REAR	1 1 3 3 1 7 2 1 1 1 2 1	9 13 10 11 12 14 15 16	555348 S-112 9221 S-604 68270	CONNECTION WATER OUTLET Connection, water outlet (auto and CI) Capscrew (3/8" - 16 x 1") Gasket Lockwasher (3/8") Connection Water outlet (IP)	1 2 1 2 1	36 36 37 38 35
152398 553513 168919 S-109 S-112 157290 S-604 S-1005-A	Plate, cylinder head cover (CI & IP Applications) Plate, cylinder head cover (Auto) Bracket, engine lifting (Auto & CI Applications) Capscrew (3/8" - 16 x 7/8") Capscrew (3/8" - 16 x 1") (Auto) Gasket Lockwasher (3/8") Elbow (Auto) LEFT BANK REAR	1 1 4 3 1 7	18 18 13 19 19 20 21				
152398 S-109 157290 S-604 650864 S-103-D S-109	Plate, cylinder head cover Capscrew (3/8" - 16 x 7/8")	1 7 1 7 1 3 4	22 19 20 21 19 19				

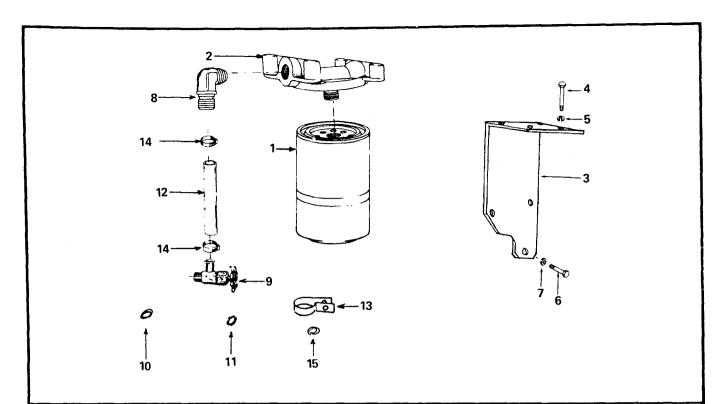


DA DE	CATION AUTOMOTIVE X B-OFF-		!	 	MINDUSTRIAL X P-INDUS		REI
PART NUMBER	PART NAME	NO. REQ'D	REF.	PART NUMBER	PART NAME	NO. REQ'D	
209606	CORROSION RESISTOR (SPIN ON TYPE) Resistor, corrosion						
209604 204163	Element, spin on Head MOUNTING PARTS	1 1	1 2				
556561 S-103-D S-604 S-119 S-605 179903 179901 62087 68368-A 179914 179913 550692 S-103-D S-604 179904 68368-B	Bracket Capscrew (3/8" -16 x 1¼") Lockwasher (3/8") Capscrew (5/16" - 18 x 5/8") Lockwasher (5/16") Connector Valve water shut off Spacer instrument panel Spacer L.O. filter Hose, to thermo. housing support Hose, thermo hsg. to resistor Clip Capscrew Lockwasher Hose clamp Spacer	1 4 4 3 3 2 2 2 1 1 1 2 1 1 4 1	3 4 5 6 7 8 9 10 11 12 12 13				

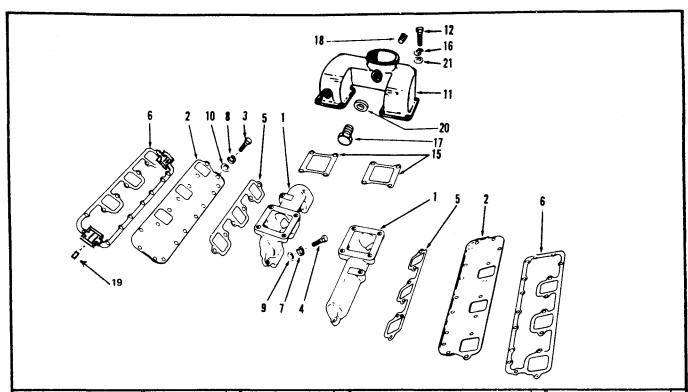

PART NUMBER	PART NAME	NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REI NO.
	AIR INTAKE MANIFOLD				IP & C Application		
168066 160509	Manifold, air intake Plate, push tube cover MOUNTING PARTS	2 2	1 2	S-103-D 168069 S-604 66030 S-995	Capscrew, connection Gasket, connection Lockwasher, connection (3/8") Plug, pipe (7/8") Plug, pipe (3/4")	8 2 8 1	12 15 16 17
S-110 S-103-D 154415 AR-62293 555959 556371 S-604 S-605 S-602 S-626	Capscrew, plate to block (5/16" - 18 x 5/8") Capscrew, manifold to plate Gasket, intake manifold Gasket, push tube cover Gasket, push tube cover Insert, push tube cover Lockwasher, manifold (3/8") Lock washer, cover plate (5/16") Washer plain, manifold (13/32") Washer, cover plate (11/32")	19 12 2 2 2 4 12 22 12 22	3 4 5 6 19 7 8 9	66292 S-602 69901	Washer, copper (29/32") Washer, plain (13/32") Plug hex	1 8 1	20 21
168068	CONNECTION, AIR CROSSOVER Connection, air crossover MOUNTING PARTS	1	11				
S-103-D 168069 S-604 66030 69901 66292 S-602 550050	Auto Application Capscrew, connection Gasket, connection Lockwasher, connection (3/8") Plug, pipe (7/8") Plug, pipe (1/8") Washer, copper (29/32") Washer, plain (13/32") Elbow	8 2 8 1 1 8 1	12 15 16 17 18 20 21				

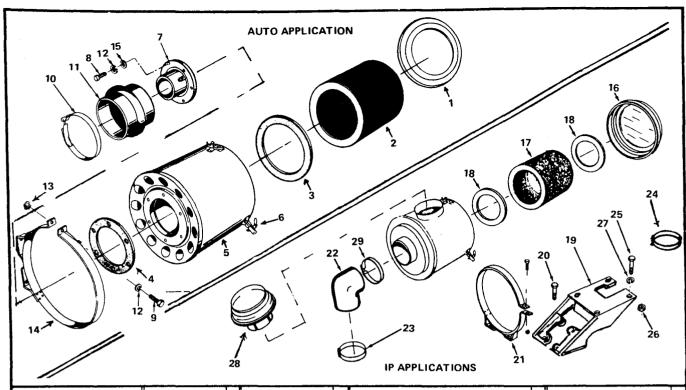

PART NUMBER	PART NAME	NO. REQ'D	REF.	PART NUMBER	PART NAME	NO.	REF D NO.
106835 107125 AF-252 107126 107127 107128 122121 106124 S-115 S-119 140311 103806 S-605 S-221 107091 S-626	AIR CLEANER Optional Auto Application Cleaner, air Cover Element Gasket, element Gasket, flange Shell Spring, cover clamp MOUNTING PARTS Adapter, air cleaner Capscrew (5/16" - 18 x 7/8") Capscrew (5/16" - 18 x 1½") Clamp, hose Hose, air cleaner Lockwasher (5/16") Nut (5/16") Strap Washer (11/32")	1 1 1 1 1 1 3 1 6 4 4 2 10 4 2 6	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	650051 650056 650055 650058 650068 650067 108707 650041 650356 125740 140311 S-166 S-205 S-604 650059 140312	AIR CLEANER Optional IP Applications Cleaner, air Cover Element Seal MOUNTING PARTS Air cleaner bracket Capscrew (1" - ½" x 3/8") Strap air cleaner Elbow Tee bolt hose clamp (4½" Dia.) Capscrew Nut Lockwasher (3/8") Stack cap T-Bolt clamp (4,5/8" Dia.)	1 1 1 2 1 1 4 4 4 1 1 1	16 17 18 19 20 21 22 23 24 25 26 27 28 29

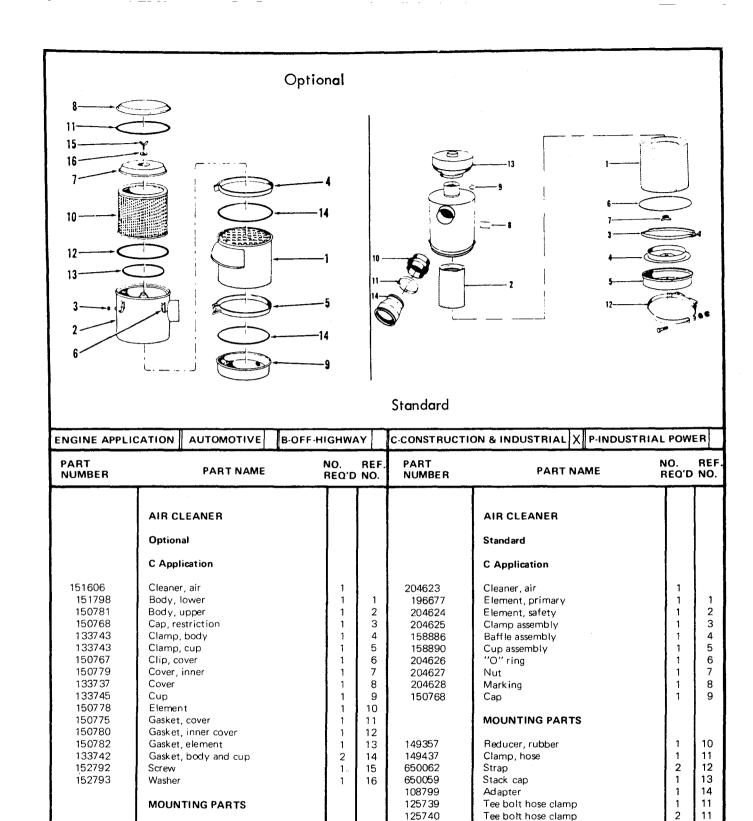

PARTS INDENTED ARE INCLUDED IN THE PART UNDER WHICH THEY ARE INDENTED

4

3

1

1

4

4

2

S-111

140311

125740

103806

108799

106220

S-605

S-221

Capscrew (5/16" - 18 x 1½")

Clamp, hose

Clamp, hose


Lockwasher (5/16")

Reducer, rubber


Hose

Nut


Strap

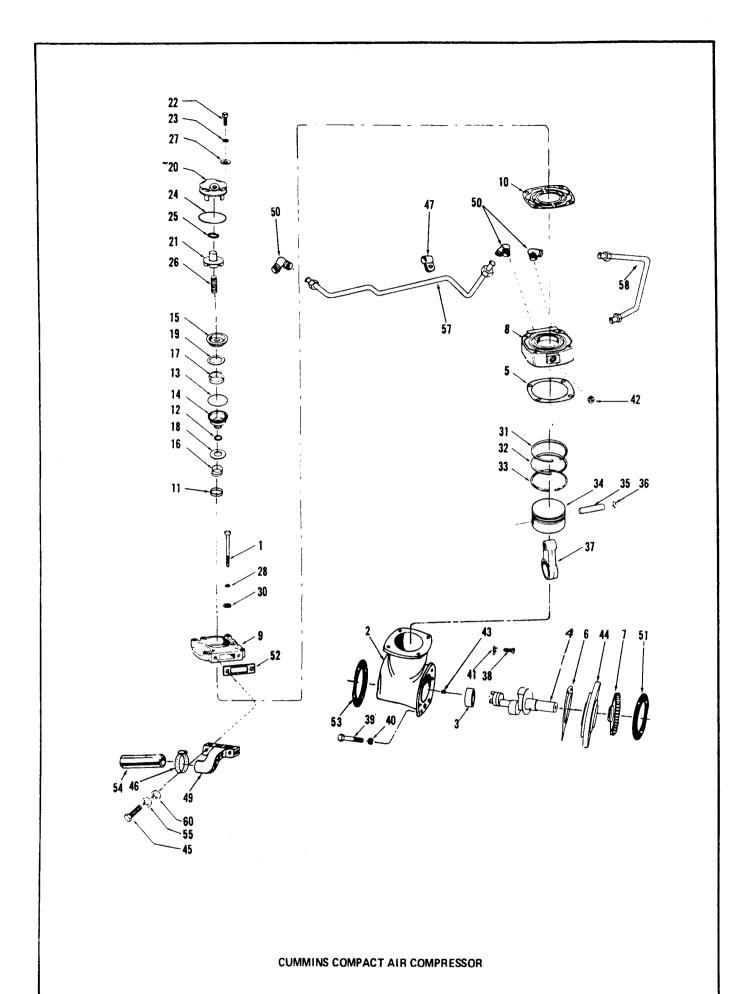


ART UMBER	PART NAME	NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	RE NO
	AIR COMPRESSOR				MOUNTING PARTS		
AR-73658	Compressor, air	1		S-111	Capscrew, air connection	2	4
S-155-A	Capscrew, head to crank case	4	1	550788	Clamp, hose	2	4
BM-98685	Crank case, compressor (176025)	1 1	2	176038	Connection, air	1 1	4
147610	Bushing, crank shaft	i	3	S-1005-A	Elbow, flexible hose	3	5
202780	Crank shaft, compressor	1 1	4	167993	Gasket, support	1	5
154018		lil	5		Gasket, support Gasket, air connection	Ιί	
	Gasket, head to crankcase	1		157911	· · ·		
176027	Gasket, support		6	200817	Gasket, fuel pump to compressor	1	
554645	Gear, compressor drive	1	7	179124	Hose	1	L
AR-73074	Head assembly	1		S-605	Lockwasher (5/16")	2	
179122	Head, air compressor	1	8	553512	Tube, water inlet	1	1
153964	Cover, air compressor nead	1	9	S-1002-A	Connection, straight	1	1
154996	Gasket	1	10	S-1004-A	Nut	2	
183429	Wearplate	1	11	S-1003-A	Sleeve	2	ì
AR-73075	Intake and exhaust valve assy.	1 1	l	553514	Tube, water outlet	1	
128085	"O" ring	1	12	S-1005-A	Elbow	1	1
128086	"O" ring	1	13	S-1004-A	Nut	2	ı
144714	Seat, exhaust valve	1	14	S-1003-A	Sleeve	2	ı
145028	Seat, intake valve	1	15	S-626	Washer, plain (11/32")	2	1
128080	Spring, exhaust valve	1	16	554124	Bracket Fuel pump to compressor	1	1
190334	Spring, intake valve	1	17	S-107	Capscrew	2	1
127940	Valve, exhaust	1	18	S-605	Lockwasher	2	1
144948	Valve, intake	1	19	69047-A	Capscrew	1	1
AR-73076	Unloading valve assembly	1		S-604	Washer	ĺ	ı
153966	Body, unloader valve	l i	20	S-626	Washer	4	1
191037	Cap, unloader	1	21	3-020	vvasilei	7	1
S-107	Capscrew (5/16" - 18 x ¾")	2	22		1		
S-605	Lock washer (5/16")	2	23	i	1	1	1
128086	"O" ring	1	24	•	i	ł	1
127936	Seal, plunger	1	24 25	1	1	- 1	1
150631	Spring, unloader valve	1 1	26				ı
109557	Washer (11/32")		20 27				I
S-605	The state of the s	2	,			ļ	ı
	Lockwasher, head to crank case	4	28	•		1	1
105375	Nameplate, serial number	1	1			1	
S-2267	Screw, nameplate	2	ŀ				1
S-626	Washer, plain	4	30		}	1	1
AR-73350	Ring set, compression (Std)	ł					1
	(Darlington Serv)	1	1			ı	1
650330	Ring	1	31				1
187350	Ring, compression	1	32				
180810	Ring, oil	1	33				
BM-77410	Piston assembly (Std)	1 1	•			ı	1
165430	Piston, air compressor	1	34	Ī		- 1	ı
119810	Pin, piston	1	35			1	ı
119859	Ring, snap	2	36	ł			1
76023	Rod, connecting	1	37			- 1	ł
÷112	Capscrew (3/8" - 16 x 1")	4	38			1	1
\$103-D	Capscrew (3/8" - 16 x 1¼")	2	39	Ì		1	ı
-604	Lockwasher (3/8")	2	40	Ì	1	ļ	
50720	Lockplate	4	41	l	1		1
-915-A	Plug, pipe (½")	1	42	i	1		
965-E	Plug, pipe (1/16")	1	43				Î
550187	Support	1 1	44				1
550792	Plug, pipe (crankshatt)	1 1	***		· ·	1	
00192	, lag, pipe (clankshait)	j '	Į.]	1		
		1	ļ	Ī	1		1
į		-	l	Į	1	ı	Ţ
1		1	•		ľ	Į	1
		1	ì		1	- 1	1
ŀ			l	1	1	1	1
[-	I	1	1	1	1
			I		1	-	1
						1	
Į.		l	ŀ		i	1	1
1				l		J	
Ĭ						j	
						1	1
						ı	1
1		į i			1		1
					1	1	1
				l		I	
I I							
						1	

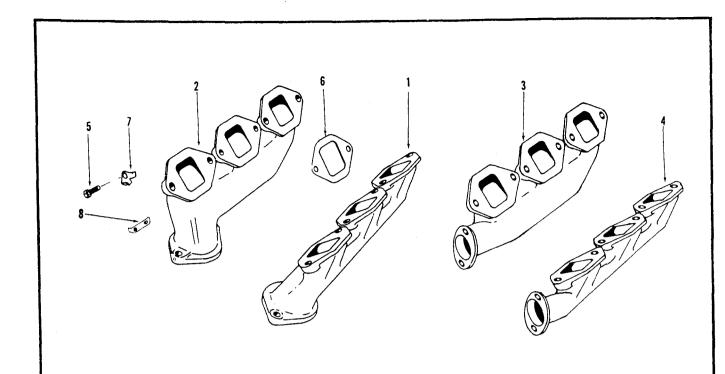


EXHAUST MANIFOLD MOUNTING PARTS	
171629 Manifold, exhaust L,B. (C & IP) 1 3 168003 Gasket, manifold Lock plate Lock plate Lock plate Lock plate Lock plate Spacer 1 168005 Exhaust flange (IP)	12 6 4 4 12 2 2

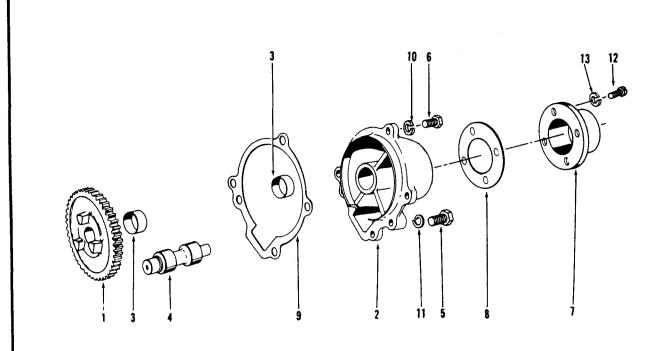


ENGINE APPLIC	ATION	AUTOMOTIVE	B-OFF-	HIGHW	AY	C-CONSTRUCTI	ON & INDUSTRIAL X P-INDUS	STRIAL POWER
PART NUMBER		PART NAME		NO. REQ'C	REF.	PART NUMBER	PART NAME	NO. REI REQ'D NO.
BM-93760 177097 BM-93759 147610 171636	P API Drive, Gear, Housi Bushir Shaft,	ng, drive (171635) ng, shaft		1 1 1 2 1	1 2 3 4	AR61319 554002 202840 AR61040 553024 S-965-E	FUEL PUMP DRIVE C APPLICATION Cover, gear housing Gear, housing cover Bushing, shaft Access driveshaft Support F.P. Plug, pipe	1 1 1 1 1 1
S-105-A S-105 551160 164059 153433 S-604 S-610 131449 S-607	Capsol Cover Gaske Gaske Lockv Lockv Screw	rew, drive (7/16" - rew, drive (3/8" - 1 , drive shaft t, cover t, support vasher, drive (3/8") vasher, drive (7/16' , cover r, cover	6 × 3½")	2 2 1 1 1 2 2 4 4	5 6 7 8 9 10 11 12 13	203391 554645 153433 S-163 S-604 S-602	Shaft, access drive Gear MOUNTING PARTS Gasket Capscrew Washer spring-lock Washer	1 1 4 4 4

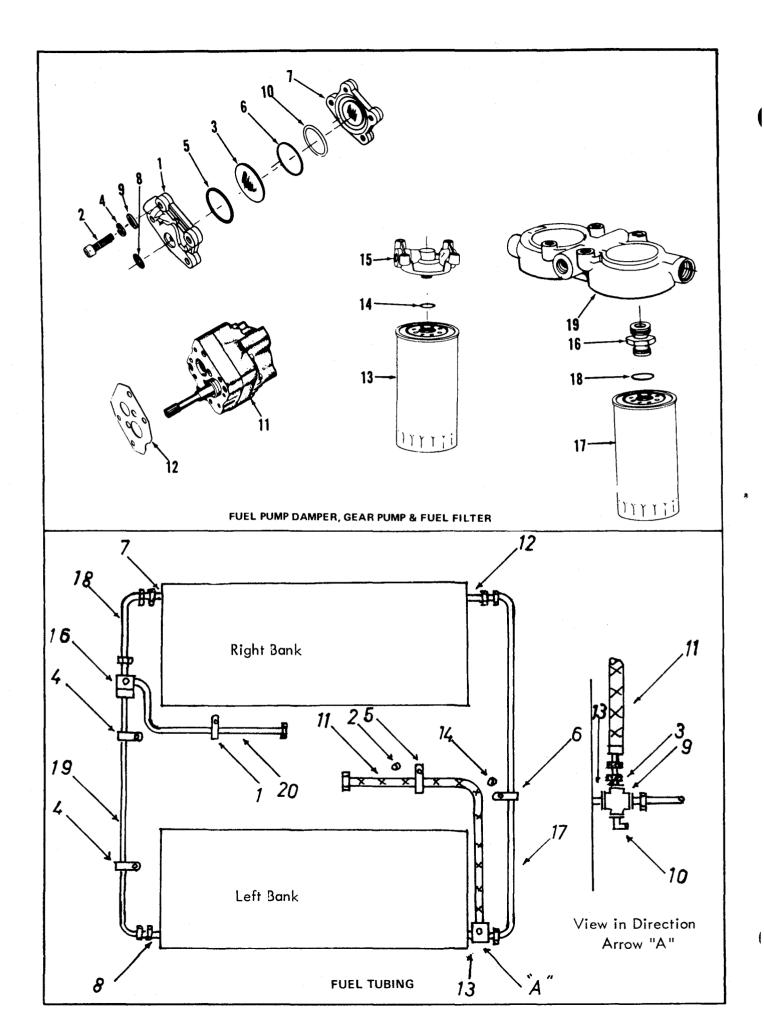

PART	_	NO.	REF.	PART		NO.	REF
NUMBER	PART NAME	REQ'D		NUMBER	PART NAME	REQ'D	
the best perform engine. Your Cu special tools req calibration. Cau settings or the t	PT FUEL SYSTEM PT Fuel Pump is calibrated to obtain nance and fuel economy for your ummins Distributor or Dealer has the juired for complete rebuild and ition: Do not disturb the fuel pressure hrottle screw settings, as serious engine may result.			156164 126516 FF-105-D 255622 135601 129859	C Application Filter, fuel Bolt, centre Cartridge (156172) "O" ring, element Head, fuel filter Elbow	1 2 2 2 1 2	16 17 18 19
Only PT Fuel S	ystem parts which can be replaced				MOUNTING FUEL FILTER		
Cummins Distri	calibration are listed here. Your butor will record the specific part complete PT Fuel Pump in the front e			AS1003340SS 556480 S-120	Bracket Capscrew (3/8'' - 16 × 2½'')	1 1 3	
or time catalogo.	FUEL PUMP DAMPER			S-604 S-103-D 108478	Lockwasher (3/8") Capscrew (3/8" - 16 x 1¼") Clip, hose	7 4 2	
BM-76340 153336	Damper, fuel pump Body, damper	1 1	1	68368-B	Spacer IP Application	1	
17 15 45 202897 181466 139988 100099 153338	Capscrew (¼" - 20 x 1¼") Diaphragm Lockwasher (17/64") "O" ring "O" ring Plate, damper	2 1 2 1 1	2 3 4 5 6 7	156171 FF-105-D 255622 142784 129866	Filter, fuel Cartridge (156172) Gasket, cover Head Adaptor	1 1 1 1 2	13 14 15
151900 70704	Seal Washer, (¼'')	1 2	8 9		MOUNTING FUEL FILTER		
160514	Washer, nylon	1	10	555067 103023	Brack et Capscrew	1 3	
	GEAR PUMP Auto, C Application			S-112 S-604 AS1003600SS	Capscrew Lockwasher Hose	4 4 1	
BM-96327 210647	Pump, gear Gasket	1 1	11 12	69465-A S-610	Clamp Lockwasher (7/16")	1 3	
	IP Application				Auto and CI Applications		
AR-00936 210647	Pump, gear Gasket	1 1	11 12	551394 114850	Clip, assembly Spaœr	1 1	1
	FUEL FILTER			550475 556539	Adapter, cross piece to pump Clip, assembly	1 2	2 3 4
154711 154709 255622 142784 129859	Auto Application Filter, fuel Cartridge Gasket, cover Head Elbow	1 1 1 1 2	13 14 15	554013 555079 S-1003-1 S-1003-1 554011 43765-A AS0402860SS	1	1 1 1 1 1 1 1	5 6 7 8 9 10
553663 S-604	MOUNTING FUEL FILTER Bracket Lockwasher (3/8")	1 7		AS0402560SS 553057 69187 62087 S-1006-1	Connector, male Nipple, male (%" NPTF x 1.1/16") Spacer, clip assembly "T" piece	1 1 1 1	11 12 13 14 16
S-103-D AS1001640SS	Capscrew (3/8" - 16 x 1¼") Hose	1		554009 553308 556236 555142 554348 553474	Tube, fuel Tube, fuel Tube, assembly Tube, fuel (Auto only) Tube, fuel (C only) Tube, fuel (IP only)	1 1 1 1 1	17 18 19 20 20 20
					FUEL TUBING - IP APPLICATION		
					Same as Auto & CI Except:		
				ADD S-910-B	Pipe, plug	1	3
				ОМІТ 550475	Adapter	1	3

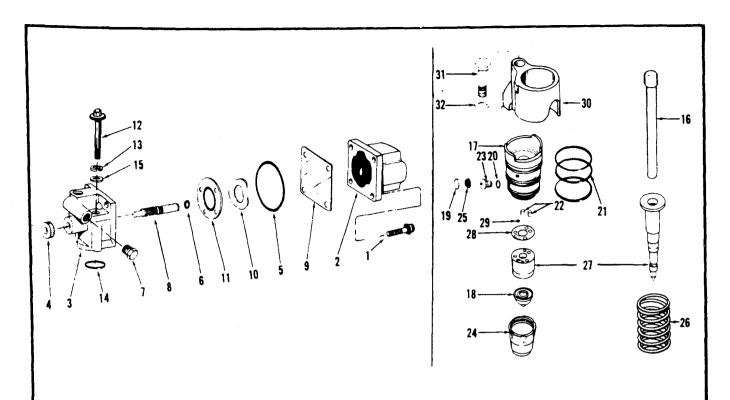


ENGINE APPLI	CATION AUTOMOTIVE X B-OFF	HIGHW	AY	C-CONSTRUCTION	ON & INDUSTRIAL X P-INDUSTRIAL	POW	ERX
PART NUMBER	PART NAME	NO. REQ'D	REF.	PART NUMBER		NO. REQ'D	REF.
BM-69973 S-1214 134072 129826 129838 129888 190876 70295 196037	SHUTDOWN VALVE Valve, shutdown (12V, 1 pole) Capscrew, coil to housing Coil assembly Housing, valve Knob, manual override "O" ring, coil to housing "O" ring, shaft Plug, pipe Shaft, manual override Shield, final	1 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 2 3 4 5 6 7 8	AR-73626 194041 178088 651121 174299 173086 101754 165296 173085*	INJECTOR Injector PT (Type D) Link, injector (½") Adapter, injector Cup, injector (7 x .0055 x 5 deg) Clip, filter screen Gasket, orifice "O" ring Pin, roll Plug, orifice	6 6 6 6 6 18 12 6	16 17 18 19 20 21 22 23
129839 129768 129827 S-607 171546 S-1003-1 181466 154087 67684 S-1004-1	Shield, fuel Spring Valve Lockwasher MOUNTING PARTS Capscrew, valve to housing Connection (IP) Lockwasher "O" ring Washer, plain Elbow, (Auto & C) Optional	2 1 2 1	12 13 14 15	178009 174298 166009 AR-40063 185782 167157 187326* 189848* 187858* 178980*	Retainer, cup Screen, filter Spring, injector Barrel and plunger Gasket Ball, check Barrel, injector Plug, barrel Coupling, plunger Plunger, injector * Note: Not sold separately. MOUNTING PARTS	6 6 6 6 6 6 24 6	24 25 26 27 28 29
BM-69985 134076 BM-69982 134075 BM-69979 134074	Valve, shutdown (24V, 2 pole) Coil assembly Valve, shutdown (12V, 2 pole) Coil assembly Valve, shutdown (24V, 1 pole) Coil assembly	1 1 1 1 1		552458 166392 69280	Clamp, injector Capscrew, hex head (3/8" - 16 × 2½") Washer, plain (25/64")	6 6 6	30 31 32

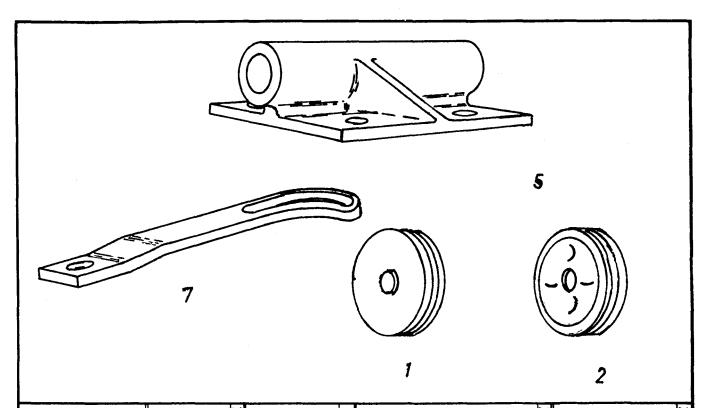

PART NUMBER	ENGINE APPLICA	TION AUTOMOTIVE X B-OFF-	IIGHW	AY	C-CONSTRUCTI	ON & INDUSTRIAL X P-INDUSTRI	AL POW	ERX
210127		PART NAME				PART NAME		REF.
	AR-02336 AR-02337 554999 555934 191818 145027 104597 556116 556126 S-112 S-604 S-103-D 553604 555568 554194 555500 S-145 554194 178447	Alternator Connector, Regulator (Auto & CI) Connector, Regulator (Auto & CI) Pulley, alternator (IP & CI) Pulley, alternator (Auto) Regulator (Auto & CI) Switch magnetic (Auto only) Plate, instruction MOUNTING PARTS Bracket, alternator Link alternator Capscrew (3/8" - 16 x 1") Lockwasher (3/8") Capscrew, alt, bracket (3/8"-16 x 1") Washer (3/8") hardened steel Capscrew Washer (17/32") hardened steel Nut hug lock Capscrew Washer (17/32") hardened steel Belt (CI & IP)	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	5	S-106 S-608 ADD	Auto & IP Application Motor, starting Capscrew, motor (½" - 13 x 1¾") Lockwasher, motor (½") CI Application Same as above except:	3	

PARTS INDENTED ARE INCLUDED IN THE PART UNDER WHICH THEY ARE INDENTED

ART UMBER		NO. REQ'D	REF. NO.	PART NUMBER		NO. REQ'D	RE NO
	RADIATOR				MOTOR TIE ROD		
553685	Radiator	1		554647	Tie rod	2	
000000	Hadiator			S-201	Nut	8	
	MOUNTING PARTS			S-603	Washer, springlock	4	
554591	Stay, radiator (R.B.)	1			REAR SUPPORT		
S-194	Capscrew	4			HEAR SUPPORT		
S-276	Nut	4		553627	Support, rear	1	
S-205	Nut	4		S-145	Capscrew	4	l
554590	Stay, radiator (L.B.)	1 4	Ì	S-608	Spring lockwasher	4	l
S-194 S-276	Capscrew Nut	4	})	I INSTRUMENT PANEL	}	
S-205	Nut	4	Į		INSTROMENT VANCE		
556372	Bush, radiator mounting	2		555046	Instrument panel	1	١
S-276	Nut	4	}	701214	Ammeter	1	
S-205	Nut	4		554646	Bracket, instrument panel	1	
650387 S-600	Mounting radiator rubber Lockwasher (¼'')	2 8		650565	Back plate	1	
S-115-C	Capscrew	8	l	553653 650427	Block and terminal Case, instrument	2	
S-144	Capscrew	2		S-159-B	Capscrew	4	l
S-658	Flat washer (21/32")	4	1	S-109	Capscrew	2	1
650864	Bracket support	1		S-115-C	Capscrew	2	l
S-603 553690	Lockwasher (5/8'') Pipe water	2	ļ	68138	Connection	1	١
650385	Pipe water conn.	1		S-902 556347	Coupling, pipe Gauge, water temperature	1 1	ı
69972	Coolant hose	4		650651	Gauge, pressure	li	١
4 3828-D	Clamp hose	8		650525	Hourmeter	1	1
554947	Hose swivel assembly	1		650442	Mounting	4	
43828-A 67949 -	Clamp Clip	2	ŀ	S-270	Nut	6	ı
650418	Adapter	1 1	1	S-223 S-251	Nut Nut	2	l
AS502660SS	Hose	1		S-256	Nut	2	١
116935	Adapter	2		118367	Plate, indicator	1	
179901	Valve water shut off	1		162843	Regulator (12 volt)	1	
S-602 S-602	Flat washer (13/32") Flat washer (13/32")	4	1	149226	Relay	1	
S-602	Flat washer (13/32'')	4	İ	S-1334 131678	Screw, machine	4 2	
0 002	1 100 11031101 (10702 7	1 7		S 600	Screw, machine Spring, lock washer	12	
	RADIATOR SHROUD & FAN GUA	RD		66501	Switch.	'1	
		1	i	102057	Start switch	1	
S-604	Lockwasher fan mounting	6		70427	Washer	4	
553650 650406	Fan, shroud Guard, fan	1		150348	Shock mounting assembly	1	1
S-691	Washer, toothlock	8			INSTRUMENT PANEL MOUNTING		
S-600	Spring, lockwasher, guard to shroud	8		F54004		i	
S-167-A	Capscrew, guard to shroud	8		551334 S-604	Clip Washer Spring Lock	6	1
146157	Flat washer, guard to shroud	8		650529	Support Throttle cvr	4	
651069 S-120	Fan Capscrew, fan mounting	1 6		S-117	Càpscrew	2	
5-120	Capscrew, fair modifying	6		550466	Clip	1	
	RESTRICTOR INDICATOR	1 1		68152	Clip	1	
65,0016	1 7			S-1047-A AS404760SS	Elbow	1	
650816 S-168-C	Indicator Capscrew			187734	Hose Throttle control	1 1	ı
650817	Flange	2		107704	Throttle Control	1 '	ı
650819	Insert	l i l			•	ĺ	ı
S-224	Nut	2					
555663	Nylon, tube	1]		}	
S-600 650818	Spring, lock washer	2				1	
550465	Tap Tube clip assembly	1 2					1
68455	Plug, pipe	1					1
1						1	
l	WIRING HARNESS					1	l
555595	Wiring harness	1				1	
1							
					·		
		1				1	

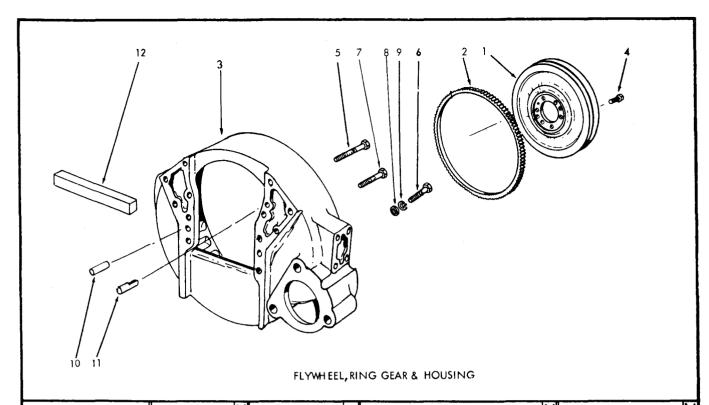

ENGINE APPLICAT	TION AUTOMOTIVE X B-OFF-	HGHWA	AY	C-CONSTRUCTION	ON & INDUSTRIAL X P-INDUSTRIA	AL POWE	RΧ
PART NUMBER	PART NAME	NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
BM99705 185539 154849 BM99688 182853 154849 168643 172647	STANDARD FLYWHEEL, RING GEAR AND HOUSING Flywheel & Ring Gear Assembly (IP & CI) Flywheel (IP / CI) Ring gear flywheel (IP & CI) Flywheel & ring gear assembly (Auto only) Flywheel (Auto only) Ring gear flywheel (Auto only) Flywheel housing (Auto) Flywheel housing (CI) Flywheel housing (IP)	1 1 1 1 1 1 1 1 1	1 2 3 3	S-106 106289 S-608 69562 102957 556346 S-187 554316	MOUNTING PARTS IP APPLICATION Capscrew Capscrew L/Washer (½") Master dowel Pin diamond dowel Dust seal Capscrew Capscrew Capscrew F/w mounting MOUNTING PARTS	4 14 13 1 1 8 8	5 7 9 10 11 12 6 4
108601 S-106 106289 S-670 S-608 69562 102957	MOUNTING PARTS AUTO APPLICATION Capscrew Capscrew Washer (17/32") L/Washer (½") Master dowel Pin diamond dowel Dust seal Capscrew flywheel mounting	6 8 14 13 1 1 1 1 8	5 7 8 9 10 11 12 4	554316 S-106 106289 S-608 69562 102957 556346 145601 172648 AR-62508 AR-62506 RM-68356	C APPLICATION Capscrew f/w mounting Capscrew Capscrew L/washer (½") Master dowel Pin diamond dowel Dust seal "O" ring Ring rect, sealing gasket sets Gasket, set engine Gasket, set cylinder head Gasket, set fuel pump	8 2 7 13 1 1 1 9 1 1	4 5 7 9 10 11 12