
Cummins Parts Model: V-470 Series Catalog

Bulletin No. 967115-A

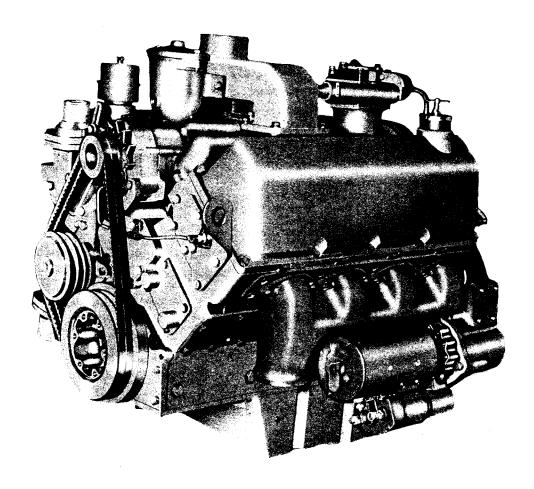

Parts Ordering for: V-470 Series

Genuine Cummins Parts and service facilities are world-wide. There are more than 1600 Cummins Sales and Service locations in the principal cities of the United States and Canada, and more than 300 Sales and Service locations situated elsewhere throughout the free world. Each distribution outlet is thoroughly equipped with technical data, factory-trained mechanics, modern equipment and a full, adequate stock of Genuine Cummins Parts.

For quicker and better service, your parts requirements should be ordered from your nearest Cummins Distributor or Dealer. At any of the locations prompt, intelligent, courteous service is a basic trademark. Each is ready and eager to help in every possible way through personal contact or through the mail — at your convenience.

The satisfactory ordering and receiving of parts by the purchaser is greatly dependent upon the proper use of available information. In order that all avoidable errors may be eliminated, the following instructions are offered as the purchaser's guide:

1. Write your order clearly, using a typewriter if possible.

- Be sure to list the correct part number. If in doubt as to the correct part number, state the model and serial number of the engine on which the part is to be used. Part numbers are usually located in various places on the part itself.
- 3. When possible, arrange your purchase order in part number numerical sequence.
- 4. Always specify shipping instructions "Best Way" is satisfactory if you have no preference.
- 5. State your company name and shipping address clearly.

Genuine Cummins Parts mean QUALITY! They're designed and engineered to fit best in your Cummins Diesel. Each part is made of the highest quality material — on the most accurate of machines — by the top craftsmen of the trade.

You can be sure a Genuine Cummins Part will fit better — do the job better — lessen the chances of costly breakdown. When you buy replacement parts, buy quality. Buy Genuine Cummins Parts!

YOU OWN THE BEST . . . REPAIR WITH THE BEST

FOREWORD

This Parts Catalog contains standard parts information for the V-470 Naturally Aspirated engines.

IMPORTANT

Two series of V-470 engines have been manufactured by Cummins Engine Company, Inc. These can be identified by the engine serial number letter prefix. This Parts Catalog pertains only to the engines that have the letter "F" prefix in the engine serial number. For engines having the letter "D" prefix in the engine serial number, please refer to Parts Catalog Bulletin number L-967020-A or Bulletin number 967088.

ENGINE APPLICATION INFORMATION

Explanation of the letter designations for the various engine applications is listed below.

Auto = Automotive Application.

- B = Off highway application, less air compressor
- C = Construction and mining applications, mobile type of equipment.
- P = Industrial application, radiator cooled, stationary unit.

In the engine application box at the top of each page, an "X" will appear only in the application column to which the parts information on the page is applicable.

In those cases, when assemblies and/or parts are variable to applications, direction is provided to identify the assembly or parts pertinent to the Engine Application. Part numbers appearing in () are for identification purposes only and should not be used when ordering service replacement parts.


SPECIAL PARTS

Special Parts peculiar to the engine can be listed on the form below. To make certain you have ordered correct parts, refer to this form before submitting Parts Order.


Part Number	Description											
Cummins Distributor_												

Table of Contents


Page	Gı	rid		Page	Grid
Air Compressor—Cummins Compact 30-3	1 C	9,10	Fuel Pump Damper	34	D1
Air Intake Manifold 27	C	6	Fuel Pump	34	D1
Air Cleaner	9 C	7,8	Fuel Tubing	35	D2
Alternator	D)4	Gasket Sets	38	D5
Breather	В	31	Gear Housing And Cover	11	B2
Camshaft And Cover 6	Α	/9	Injector	33	C12
Camshaft Bushings	Α	4 4	Instrument Panel	36	D3
Connecting Rod 4	Α	4 7	Lubricating Oil Cooler	19	B10
Corrosion Resistor	В	312	Lubricating Oil Filter	17	В8
Crankshaft	Α	46	Lubricating Oil By-Pass Filter	18	В9
Cylinder Block	Α	\4	Lubricating Oil Pump	12-13	B3,4
Cylinder Head	Α	\12	Main Bearing Shells	3	A6
Cylinder Head Cover	В	31	Numerical Index	39-42	D6-9
Cylinder Liner	Α	\ 4	Oil Pan	14,15 16	B5,6 7
Dipstick And Tube	5 B	35,6 7	Pistons	4	, А7
Electrical Equipment	D)4	Piston Rings	4	Α7
Exhaust Manifold	С	C5	Push Rods	7	A10
Fan And Guard 24-	25 C	C3,4	Radiator	24-25	C3,4
Fan Hub	С	C2	Rear Engine Support	5	A8
Flywheel Housing	D	D5	Rocker Levers	8	A11
Flywheel and Ring Gear	D	D5	Shutdown Valve	33	C12
Front Cover	Α	8/	Starting Motor	37	D4
Front Engine Support 5	Α	48	Thermostat And Housing	22	C1
Front Water Header Cover	Α	44	Tappets	7	A10
Fuel Filter	D	01	Vibration Damper	3	A6
Fuel Gear Pump	D	01	Water Header Cover	2	A 5
Fuel Pump Drive	С	211	Water Pump And Pulley	20	B11

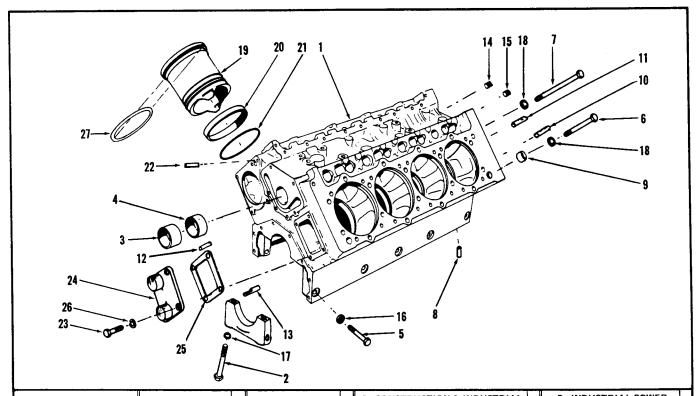


ENGINE APPLIC	ATION AUTOMOTIVE X B-OFF	HIGHW	AY	C - CONSTRUCTION & INDUSTRIAL X P - INDUSTRIAL I			
PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
	CYLINDER BLOCK			553371 S-2286	Data plate Screw, data plate	1 4	
BM-99814 180676	Block, cylinder (183070) Bolt, main bearing cap	1	1	70760	Dowel	1	22
554003	(9/16"-18 x 4-5/8") Bushing, camshaft (No. 1 and 5	10	2		FRONT WATER HEADER COVER	l	
	position)	2	3	S-112	Capscrew, water header cover	4	23
554004	Bushing, camshaft (No. 2, 3, and 4 position)	3	4	167801 167802	Cover, water header Gasket, water header cover	1 1	24 25
188395	Capscrew, main bearing side locking (9/16"-18 x 2-5/8")	10	5	S-604	Lockwasher, water header cover	4	26
162182	Capscrew, cylinder head (short) (1/2"-20 x 4-15/16")	26	6		OVERSIZE FOR SERVICE		
162183	Capscrew, cylinder head (long)			171786	Shim liner (.007)	A/R	27
148547	(1/2"-20 x 8-7/8") Dowel, rear main bearing cap	10 2	7 8	171787 171788	Shim liner (.010) Shim liner (.012)	A/R A/R	27 27
100973 69562	Dowel ring, cylinder head to block Dowel, gear housing to block	4	9	171789 171790	Shim liner (.014) Shim liner (.021)	A/R A/R	27 27
102957	(Master) Dowel, gear housing to block	2	10	.,,,,,		'	-
	(Diamond)	2	11		SEMI-FINISHED MAIN BEARING CAPS		
70645	Dowel, front cover to block (Master)	1	12	193010	Main bearing cap front	1	
68568	Dowel, front cover to block (Diamond)	1	13	193013 193011	Main bearing cap intermediate No. 2 Main bearing cap intermediate No. 4	1	
67622 S-911-B	Plug, pipe (3/8")	2	14	193012	Main bearing cap intermediate No. 3	1	
188394	Plug, pipe (1/4") Washer, main bearing side locking		15	193009	Main bearing cap rear	1	
164601	capscrew (5/8") Washer, main bearing cap (9/16")	10 10	16 17			•	
153411	Washer, cylinder head capscrew (9/16")	36	18				
	MOUNTING PARTS		, ,				
179710			10				
171880	Liner, cylinder Seal, crevice	8 8	19 20				
171270	Packing, cylinder liner	8	21				

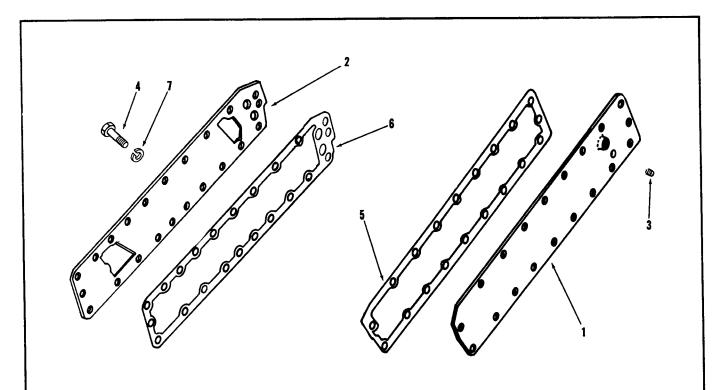


ENGINE APPLIC	INE APPLICATION AUTOMOTIVE X B-OF				HIGHW	AY	C - CONSTRUCTION	ON & INDUSTE	RIAL X	P - INDUSTRIAL	POWER	X
PART NUMBER		PART NAM	1E		NO. REQ'D.	REF. NO.	PART NUMBER	-	PART NAM	1E	NO. REQ'D.	REF. NO.
	WAT	ER HEADER CO	VER									;
193557 176596 68606	Cove Plug,	er, water header (er, water header (, pipe (1/8"-27 N JNTING PARTS	R.B.)		1 1 1	1 2 3						
S-109 167800 176598 S-604	(3/8' Gask Gask	icrew, cover to bli "-16 x 7/8") iet, cover to block iet, cover to block kwasher (3/8") co	k (L.B k (R.B	3.)	30 1 1 30	4 5 6 7						

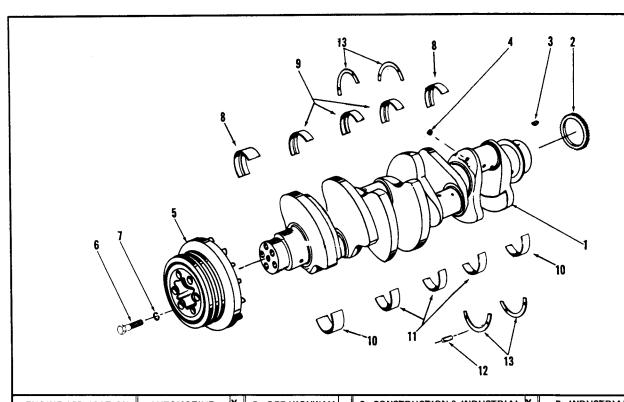


ENGINE APPLICATION AUTOMOTIVE X				B - OFF-HIGHW	AY	C - CONSTRUCTION	P - INDUSTRIA	P - INDUSTRIAL POWER		
PART NUMBER		PART NAME	:	NO. REQ'D	REF. NO.	PART NUMBER	PART N	IAME	NO. · RE REQ'D. NO	
	CRAN	KSHAFT					MAIN BEARING	S		1.
BM-99677 182360 177086 144131 S-911-B	Cranks Gear, c Key, c	crankshaft rankshaft gear iipe (1/8''-27 NPTF	=)	1 1 1 1 4	1 2 3 4	BM-99820 * 182310 182400 182200 182210 128765 173640 553670	Bearing set, main (Bearing, main (Up) Bearing, main (Up) Bearing, main (Lov) Bearing, main (Lov) Dowel, half ring Half ring, cranksha	per 1 and 5) per 2,3 and 4) wer 1 and 5) wer 2,3 and 4) off thrust (Upper) off thrust (Lower)	1 2 3 2 3 2 2 2 2 2	8 9 10 11 12 13 13
BM-96141 S-149-B		er, vibration (1751) ew, damper	72)	1	5	553671 553672	Half ring, cranksha Half ring, cranksha		2 2	13
S-608	(1/2"-2	20 x 1 1/2") asher, damper (1/2	?")	55	6 7	*	Main bearings may .010", .030 size.			

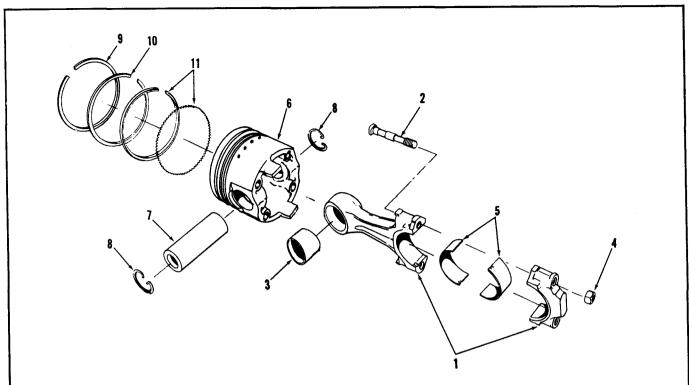


ENGINE APPLICA	ATION	ATION AUTOMOTIVE X B-O				HIGHW	AY	C - CONSTRUCTION	ON & INDUSTRIAL X	P - INDUSTRIAL	POWE	X F
PART NUMBER		PAR	T NAME	E		NO. REQ'D.	REF. NO.	PART NUMBER	PART NA	AME	NO. REQ'D.	REF. NO.
	Rod, Bolt, (7/16 Bush Nut, Bear Conr	PAR' NECTING connecting connecting 6"-20 x 3-5, ing, piston connecting ing, connect necting rod urchased in 040" under	ROD (1664) (16") pin rod bo ting rod bearing	52) olt (7/1 d (Std.	16'') .)				PISTON Piston, assembly (Storiston Pin, piston Ring, snap RINGS Ring set, piston (Std Ring, compression Ring, oil	i.)	NO. REQ'D. 8 8 8 16	

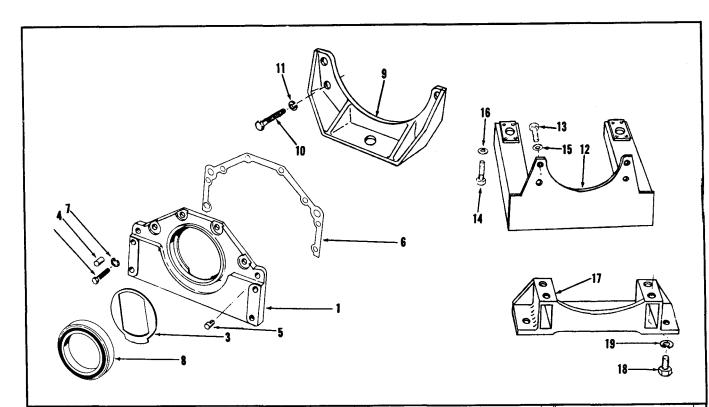


ENGINE APPLIC	ATION	AUTOMOTIVE	х	B - OFF-HIGHV	VAY	C - CONSTRUC	CTION & INDUSTRIAL X P-INDUSTRIA	L POWE	R X
PART NUMBER		PART NAME	: 	NO. REQ'D	REF	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
188393 S-109 173090 70645 68568 188396 S-604 551514	Cove Caps (3/8' Defle Dow Dow Gask	r, front crew, front cover '-16 x 7/8") ector, oil el (Master) el (Diamond) et, front cover ewasher (3/8") oil		1 4 1 1 1 4 1	1 2 3 4 5 6 7 8	106289	FRONT ENGINE SUPPORT Auto, C Applications Support, front MOUNTING PARTS Capscrew, front support (1/2"-13 x 2-1/4") Lockwasher (1/2") P Applications Same as above except: Support, front Capscrew, support to block Capscrew, radiator base mounting Lockwasher Lockwasher P Application Only Support, rear engine Capscrew (1/2"-13 x 1-1/4") Lockwasher (1/2")	1 4 4 2 4 2 1 4 4	9 10 11 12 13 14 15 16 17 18 19

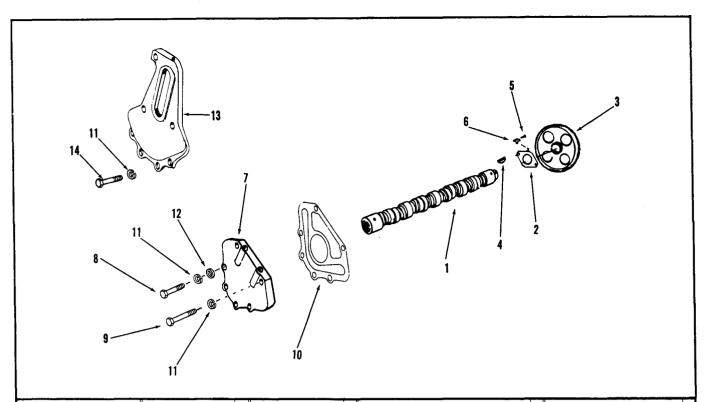


ENGINE APPLIC	ATION	AUTOMOTIVE	χ B-OFF	HIGHW	AY	C - CONSTRUCTION & INDUSTRIAL X P - INDUSTRIAL POWER				
PART NUMBER		PART NAME		NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.	
	CAM	SHAFT					CAMSHAFT COVER			
AR-60615 201050 167305 187649 S-313	Cams Cams Bear Gear Key,	shaft shaft shaft ing, camshaft thrust , camshaft camshaft		1 1 1 1	1 2 3 4	167834 108707 S-137 550164 S-604 S-602	Cover, camshaft Capscrew, camshaft cover (3/8"-16 x 1-1/2") Capscrew, camshaft cover (3/8"-16 x 2") Gasket, camshaft cover Lockwasher, cover (3/8") Washer, plain (13/32")	1 5 1 1 6 5	7 8 9 10 11 12	
S-107 68908-A	Capscrew, thrust bearing (5/16"-18 x 3/4") Lockplate, thrust bearing			2 2	5 6	ADD: 182697 S-103-D	HIGH MOUNT FAN Same as above except: Cover, camshaft Capscrew, camshaft cover (3/8"-16 x 1-1/4")	1 4	13 14	
						OMIT: S-602 S-137 108707	Washer, plain Capscrew, camshaft cover Capscrew (3/8"-16 x 1-1/2")	5 1 3	12 9 8	

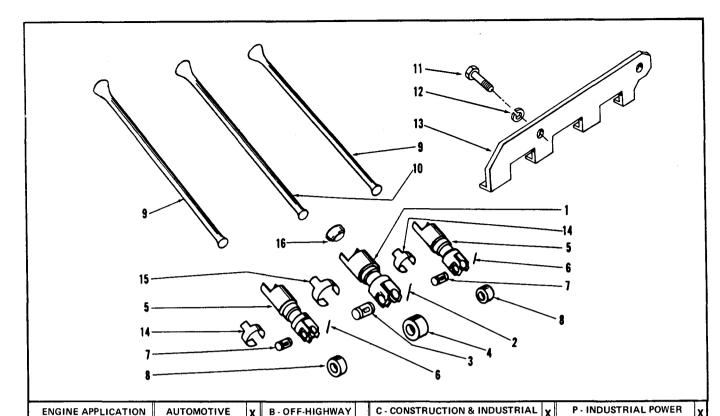


PART PART NAME NO. REF. PART PART NUMBER PAR	IO. EQ'D.	REF. NO.
PUSH RODS AND TAPPETS REUD. ROUMBER REUD. REUD.		

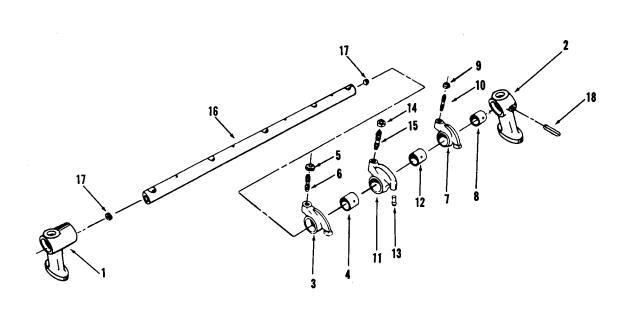


ENGINE APPLICA	ATION	AUTOMOTIVE	Х В-	OFF-HIGHW	AY	C - CONSTRUCTION	ON & INDUSTRIAL X	P - INDUSTRIA	L POWER	χ
PART NUMBER		PART NAME		NO. REQ'D.	REF. NO.	PART NUMBER	PART NA	AME	NO. REQ'D.	REF. NO.
154109 551608 BM-79723 BM-79722 152937 S-212 168306 BM-79724 152937 S-212 168306 BM-99987 BM-99986 152936 194037 S-212 168306 AR-60508 161825 551609	Brack Brack Lever (1682 Lever Bushi Nut, a Screw Lever Bushi Nut, a Screw Lever Bushi Screw Lever Screw Lever Bushi Socke Nut, a Screw Shaft, Plug,	et, rocker lever sha et, rocker lever sha , exhaust valve roc (85) and bushing ng, valve rocker lever adjusting screw (1/ and bushing ng, valve rocker lever adjusting screw adjusting screw adjusting screw adjusting ng, injector rocker and bushing ng, injector rocker adjusting screw adjusting screw	aft ker /er 2'') 8255) /er 94038) lever	82 888888888888888888	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18					

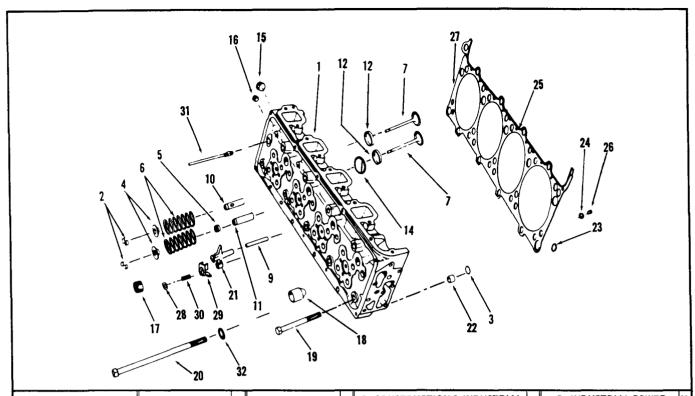


ENGINE APPLIC	ATION	AUTOMOTIVE	B-OFF-	HIGHW	AY	C - CONSTRUCTION	ON & INDUSTRIAL X	C - CONSTRUCTION & INDUSTRIAL X P - INDUSTRIA			
PART NUMBER		PART NAME			NO. REQ'D.	REF. NO.	PART NUMBER	PART N	NO. REQ'D.	REF. NO.	
	PART NAME CYLINDER HEAD Head assembly, cylinder (157782) Half collet, valve Retainer, spring Seal, intake valve Spring, valve Valve, exhaust & intake Head assembly, less valves Guide, crosshead Guide, exhaust valve Guide, intake valve Insert, valve seat, intake and exhaust Plate, swirl Plug, cup Plug, pipe Plug, pipe (1/4") Plug, pipe (1/8") Plug, pipe (3/4") Sleeve, injector							MOUNTING PAR Capscrew, cylinder Capscrew, cylinder Crosshead, valve Dowel ring, cylind "O" ring Gasket, cylinder h Grommet Grommet, oil and Grommet, push tu Retainer, grommer Nut, crosshead adj Retainer, crosshead Screw, crosshead at Tube, vent (15388 Connector, tube Nut, tube			
S-995 169630	Plug, p	pipe (3/4")			0 8 8	17 18	153411 AR-00588 AR-00589 171999	Washer, cylinder h OPTIONAL Gasket, cylinder h Gasket, cylinder h Guide, valve crossh	ead (.010'') ead (.020'')	2 2 2 A/R	32

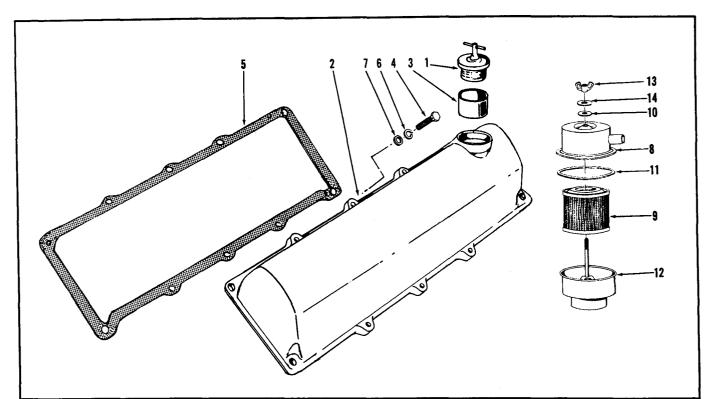


ENGINE APPLI	NE APPLICATION AUTOMOTIVE X B-OF						AY	C - CONSTRUCTION & INDUSTRIAL X P - INDUSTRIA				₹X
PART NUMBER			PART NA	ME		NO. REQ'D	REF. NO.	PART NUMBER	PART N	AME	NO. REQ'D.	REF. NO.
101322 AR-60122 551786 550113 551786	Cap, c Cover Cover, Tube,	Applic oil fille and tu , cyline filler , cyline	r ibe (R.B.) der head (der head (₹.B.)	1	1 1 1 1 1	1 2 3	154272 155997 AF-250 125015 125019 155998 125017 125016	BREATHER All Applications Breather, crankcase Cover, breather Element Gasket, washer Gasket, cover Housing, element Nut, wing, cover Washer, plain cover		1 1 1 1 1 1 1 1	8 9 10 11 12 13 14
107981	Cap, o	oil fille				1	. 1					
108707 157018 S-604 S-602	Capsci Gaske Locky	rew, co t, cove	PARTS over (3/8" r (3/8") n (13/32")		1/2")	20 2 20 20	4 5 6 7					

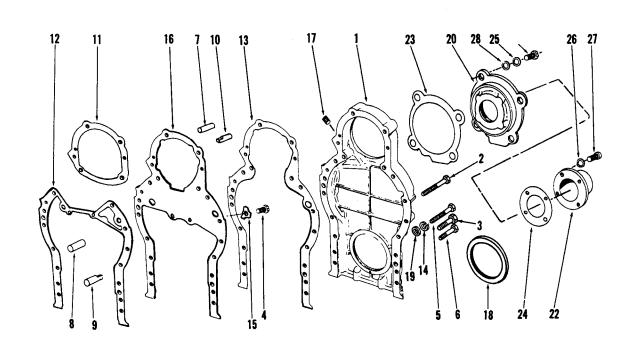


PART	DART MASS	NO.	REF.	PART	PART NAME	NO.	REF
NUMBER	PART NAME	REQ'D.	NO.	NUMBER	PANT NAME	REQ'I	D. NO.
	GEAR HOUSING				C, P Applications		
	Auto Application				Same as Auto except:		'
168644 S-102-D S-104 S-109 S-126 108707 9089 69562 102957 153807 167993 168649 168650 S-604 175282 551467 S-911-B 551515 S-602	Housing, gear Capscrew, housing to block (3/8"-16 x 3") Capscrew, housing to block (3/8"-16 x 2-1/4") Capscrew, plate to block (3/8"-16 x 7/8") Capscrew, housing to block (3/8"-16 x 2-1/2") Capscrew, housing to block (3/8"-16 x 1-1/2") Dowel (Master) Dowel (Master) Dowel (Diamond) Dowel (Diamond) Gasket, compressor support Gasket, plate to block Gasket, gear housing to plate Lockwasher, housing to block (3/8") Lockplate, plate to block Plate, gear housing Plug, pipe (1/8") Seal, oil Washer, plain (13/32")	1 1 6 2 1 6 6 1 1 1 1 1 1 1 1 1 1 1 1 1	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	171627 172645 551161 S-163 551160 153433 550123 S-604 S-607 131449 S-602	Housing, gear (P) Housing, gear (C) GEAR HOUSING COVER Auto Application Only Cover, gear housing Capscrew (3/8"-16 x 3-1/4" Cover, drive shaft Gasket, support Gasket Lockwasher (3/8") Lockwasher (3/16") Screw Washer, plain (13/32")	1 1 1 1 1 1 1 4 4 4 4 4 4 4 4 4 4 4 4 4	20 21 22 23 24 25 26 27 28

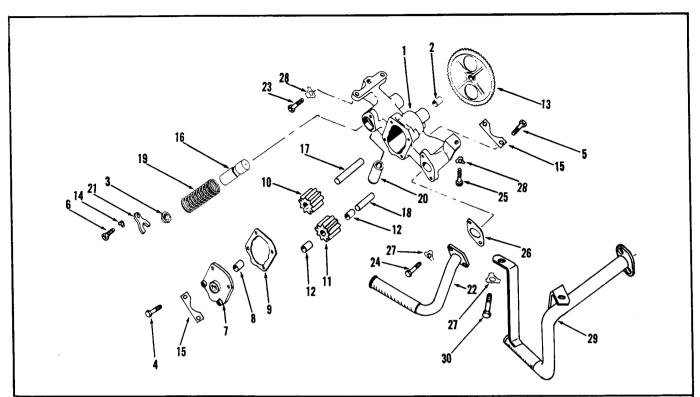


ENGINE APPLICA	ATION	AUTOMOTIVE	х	B - OFF-I	HIGHW	AY	C - CONSTRUCTION	ON & INDUSTRIAL	P - INDUSTRIA	L POWE	³ x
PART NUMBER		PART NAME	:	ı	NO. REQ'D.	REF. NO.	PART NUMBER	PART I	NAME	NO. REQ'D.	REF. NO.
AR-60098	Rear Auto Pum Body Bush Caps (5/10 Capss (5/10 Caps (5/10 C	by-pass spring screw, cover to bod 6"-18 x 3/4") crew, cover to bod 6"-18 x 2-1/2") crew, regulator "-16 x 7/8") er and bushing (181 ing set, cover , idler drive , idler (187013)	011) y y 1165) dy ator		1 1 1 1 2 2 1 1 1 1 1 2 1 1 1 1 1 1 1 1	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 6 17 18 19 20 21 22	S-103-D S-109 S-112 164916 109319 175282 ADD: AR-60086 AR-60486 S-117 109319 OMIT: 175795	Capscrew, pump to Capscrew, tube to Capscrew, tube to Capscrew, tube to pu Lockplate, tube to Lockplate, pump to LUBRICATING OF Front Sump Pan Same as rear sump Pump, lubricating Tube, suction Capscrew Lockplate, tube to Tube, by-pass	o block pump o block mp pump o block IL PUMP except:	2 2 1 1 2 3 1 1 2 2 1	23 24 25 26 27 28 29 30 27 20

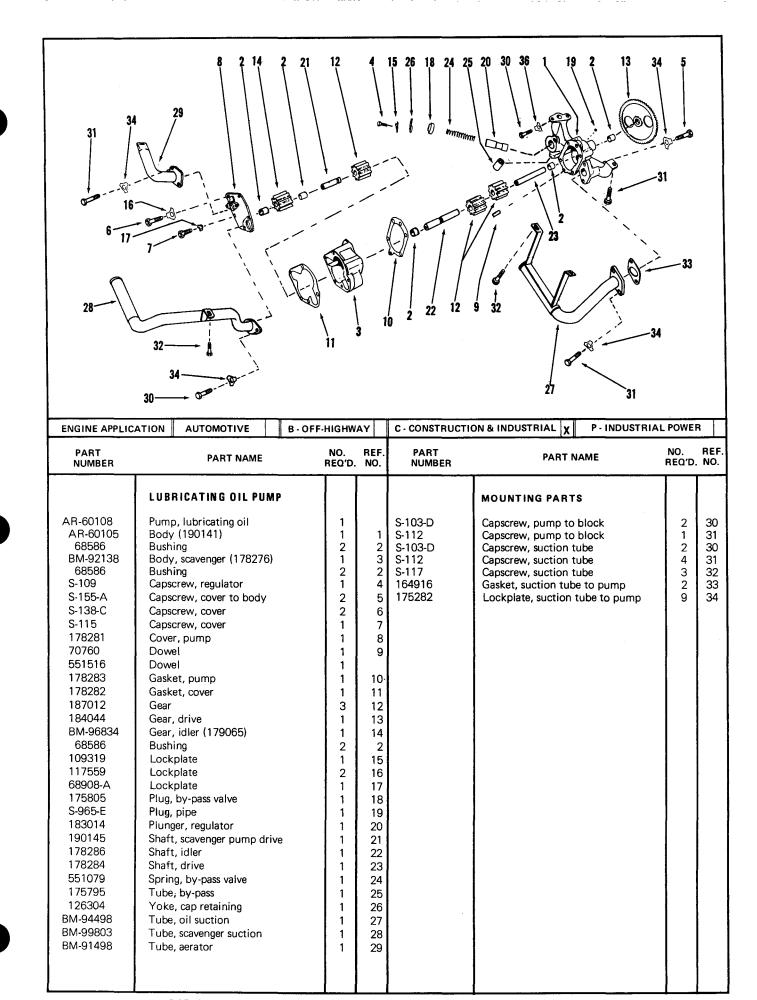


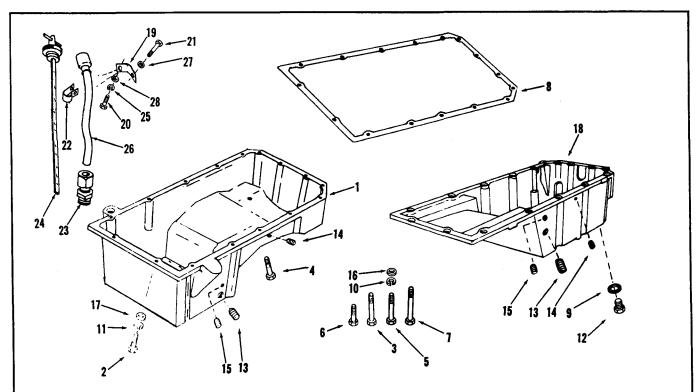


ENGINE APPLI	CATION	AUTOMOTIVE X	B-OFF-				ON & INDUSTRIAL	P - INDUSTRIA	NO.	REF
PART NUMBER		PART NAME		NO. REQ'D.	REF. NO.	PART NUMBER	PART I	NAME	REQ'D	
	FRO	NT SUMP OIL PAN					REAR SUMPOIL	PAN		
175702 108707 S-199-A S-103-D S-124-C S-119 550389 175727 163087 S-605 S-604 553015 S-915-A S-911-B S-908 S-602 S-626	Capso Capso Capso Capso Gasko Gasko Lock Plug, Plug, Plug, Wash	crew (3/8"-16 x 1-1/2 crew (3/8"-16 x 4") crew (3/8"-16 x 1-1/4 crew (5/16"-18 x 4") crew (5/16"-18 x 1-1/2 crew (5/16"-18 x 5-1/2 et, oil pan et, drain plug washer (5/16") washer (3/8") oil pan drain pipe pipe pipe er, plain (13/32") er, plain (11/32")	1'') /4'')	1 2 6 2 2 1 1 6 10 1 1 1 10 6	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17	175729 S-199-A S-103-D S-124-C S-119 550389 175727 163087 553015 S-908 S-605 S-604 S-915-A S-911-B S-602 S-626	Pan, oil Capscrew (3/8"-16 Capscrew (5/16"-1 Capscrew (5/16"-1 Capscrew (5/16"-1 Gasket, oil pan Gasket, drain plug Plug, oil drain Plug, pipe Lockwasher Lockwasher Plug, pipe Plug, pipe Washer, plain (13/ Washer, plain (11/	6 x 1-1/4") 18 x 4") 18 x 1-1/4") 18 x 5-7/8") 32")	1 2 8 2 2 2 1 1 1 1 6 10 6	18 3 4 5 11 11 10 11 11 11
550171 S-121 163759 552142 S-600 S-270 550310	Brack Capso Conn Dipst (Unm Lock Nut (Ret, tube crew, bracket (1/4"-2 ector, dipstick tube cick, oil level narked—mark as requi washer (1/4") 1/4") , dipstick		1 1 1 1 1 1	23 24 26	168979 S-188-C 108707 200064 163759 551186 S-600 168978 S-602 S-631	Bracket, oil gauge Capscrew (1/4"-2(Capscrew (3/8"-16 Clamp, tube Connector, tube Dipstick, oil level Lockwasher (1/4" Tube, dipstick Washer, plain (13/ Washer, plain (9/3	0 x 1/2") 6 x 1-1/2")))	1 1 1 1 1 1 1 1 1 1 1	19 20 22 22 23 24 25 26 27 28

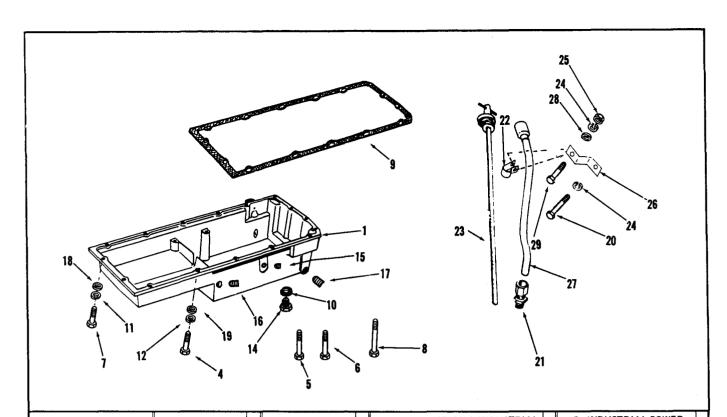


ENGINE APPLIC	ATION	AUTOMOTIVE	B - O	FF-HIGHW	AY	C - CONSTRUCTION	ON & INDUSTRIAL X	P - INDUSTRIA	L POWE	3
PART NUMBER		PART NAME		NO. REQ'D.	REF. NO.	PART NUMBER	PART NA	AME	NO. REQ'D.	REF. NO.
185556 185557 S-110 S-103-D S-199-A S-124-C S-119 550389 175727 163087 S-605 S-604 117559 553015 S-911-B S-908 S-915-A S-602 S-626	Pan, c Baffle Capsc Capsc Capsc Capsc Capsc Gaske Gaske Lock Lock Lock Plug, Plug, Plug, Plug, Washe	plication poil e, oil pan crew, baffle crew (3/8"-16 x 1-1, crew (5/16"-18 x 4") crew (5/16"-18 x 1-1, crew (5/16"-18 x 5-1, crew (5/16"-18 x 5-1, crew (5/16") pan et, oil pan washer (5/16") washer (3/8") plate, baffle oil drain pipe pipe	') 1/4'')	1 1 4 8 2 2 2 2 1 1 6 0 4 1 1 1 10 6	1 2 3 4 5 6 7 8 9 10 11 12 13 4 15 6 17 8 9 10 11 12 13 14 15 16 17 8 19	S-188-C 108707 163759 200064 196000 S-600 S-223 172036 171634 S-602 S-631	Capscrew (1/4"-20 x Capscrew (3/8"-16 x Connector Clamp Dipstick, oil level Lockwasher (1/4") Nut Support, oil gauge tu Tube, dipstick Washer, plain Washer, plain (9/32"	1/2'') 1 1/2'') be	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	29 20 21 22 23 24 25 26 27 28

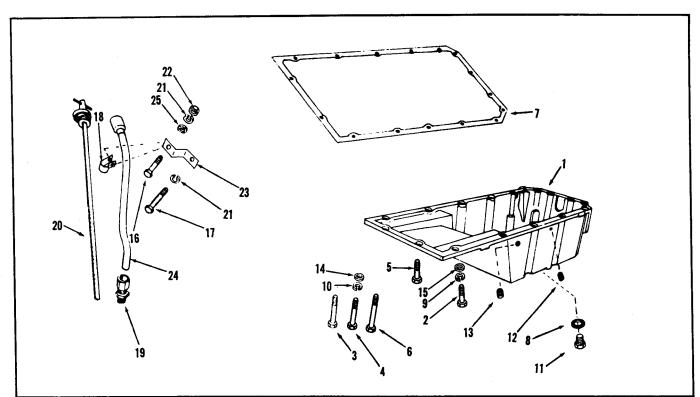


ENGINE APPLI	CATION	AUTOMOTIVE	В	3 - OFF-HIGHV	IAY	C - CONSTRUCTI	ON & INDUSTRIAL	P - INDUSTRIA	L POWER	X
PART NUMBER		PART NAME		NO. REQ'D	REF. NO.	PART NUMBER	PART I	NAME	NO. REQ'D.	REF. NO.
189230 S-103-D S-199-A S-124-C S-119 550389 175727 163087 S-604 S-605 553015 S-911-B S-908 S-602 S-626	Pan, o Capscr Capscr Capscr Capscr Gasket Lockw Lockw Plug, c Plug, p Plug, p	il rew (3/8"-16 x 1 1/4 rew (3/8"-16 x 4") rew (5/16"-18 x 4") rew (5/16"-18 x 1 1 rew (5/16"-18 x 5 7 t t, oil drain vasher (3/8") vasher (5/16") bil drain pipe) /4'')	1 8 2 2 2 2 1 1 10 6 1 1 10 6	1 2 3 4 5 6 7 8 9 10 11 12 13 4 15	S-188-C 108707 200064 163759 551775 S-600 168979 171634 S-602 S-631	Capscrew (1/4"-20 Capscrew (3/8"-10 Clamp Connection, dipst Dipstick Lockwasher (1/4" Support, oil gauge Tube, dipstick Washer, plain (13/Washer, plain (9/3)	0 x 1/2") 6 x 1 1/2") ick tube 1) tube	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	16 17 18 19 20 21 23 24 25

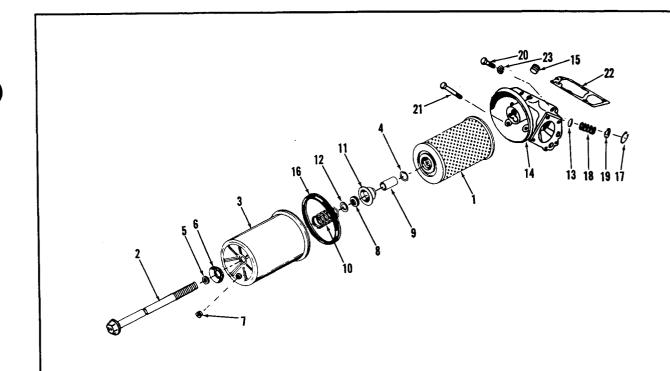


ENGINE APPLIC	ATION	AUTOMOTIVE	X	B-OFF-HIGHW	/AΥ	C - CONSTRUCTION	ON & INDUSTRIAL X	P - INDUSTRIA	AL POWER	Х
PART NUMBER		PART NAM	ΙE	NO. REQ'D	REF. NO.	PART NUMBER	PART N	IAME	NO. REQ'D.	REF. NO.
	Filter, Cartri Shell a Bolt, c Can, f Circlip Gaske Plug, I Seal, t Space Spring Suppo Washe Disc, I Head, Plug, I Ring, Spring	lubricating oil dge assembly, filter center ilter ot, bolt bipe bolt r, cartridge brt, cartridge brt, cartridge brt, cartridge brt, cartridge brt, bolt seal by-pass filter		REQ'D	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17	108707 S-126 181728 S-604	MOUNTING PAR Capscrew (3/8"-16 Capscrew (3/8"-16 Gasket Lockwasher	RTS 5 × 1 1/2")		
										: :

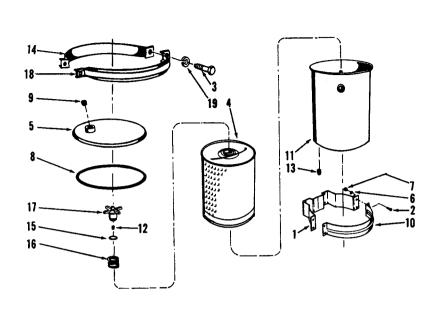


ENGINE APPLI	CATION	AUTOMOTIVE	B - OFF-HIGHW	ΙΑΥ	C - CONSTRUCTION	& INDUSTRIAL X	P - INDUSTRIAL	POWE	₹
PART NUMBER		PART NAME	NO. REQ'D	REF. NO.	PART NUMBER	PART NA	ME	NO. REQ'D.	REF. NO.
	DADT NAME		ASS REQ'D			PART NA	ME	NO. REQ'D.	REF.

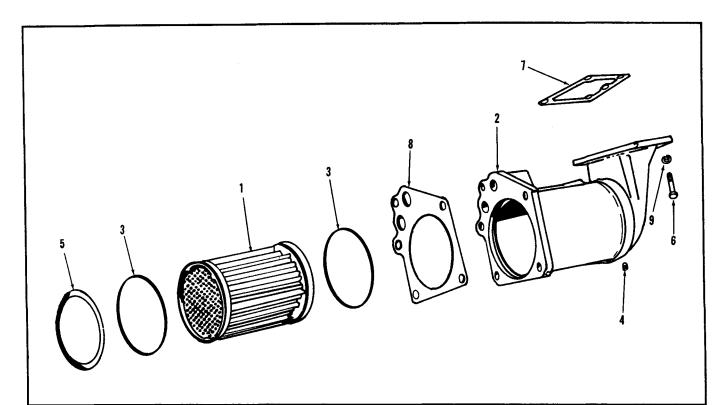


ENGINE APPLIC	CATION AUTOMOT	IVE X	B · OFF-I	IIGHW.	AY	C - CONSTRUCTION	ON & INDUSTRIAL X	P - INDUSTRIAL	POWER	₹ X
PART NUMBER	PART	NAME		NO. REQ'D.	REF. NO.	PART NUMBER	PART N	IAME	NO. REQ'D.	REF. NO.
BM-91604 110848 166401 148293 S-910-B 110827	LUBRICATING O Cooler, lubricating Element Housing "O" ring Plug, pipe Retainer, element		ER	1 1 2 1 1	1 2 3 4 5					
S-103-D 165153 166407 S-604	MOUNTING PAR Capscrew, mountin Gasket, housing to Gasket, cooler to fi Lockwasher	g block		9 1 1 9	6 7 8 9					

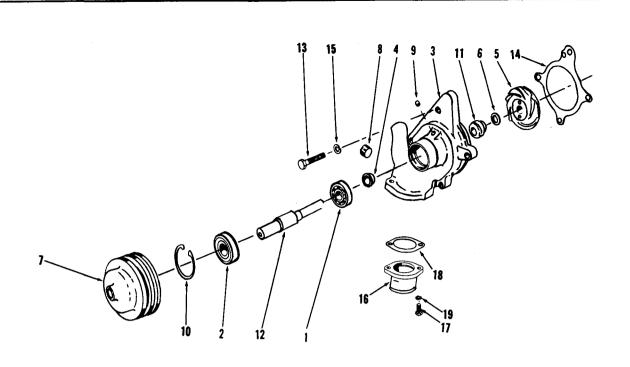


ENGINE APPLICA	ATION AUTOMOTIVE X B.	OFF-HIGHWAY	C - CONSTRUCT	ION & INDUSTRIAL X P - INDUSTR	RIAL POWER X
PART NUMBER	PART NAME	NO. REF.	PART NUMBER	PART NAME	NO. REF. REQ'D. NO.
AR-60679 552335 552377 552332 107776 BM-96156 200509 170783 S-995 S-915-A S-911-B 160586	Pump, water Bearing, ball Bearing, ball Bearing, ball Body, water pump Flinger, water pump Impeller, water pump (200515) Seal, seat Pulley, water pump Plug, pipe (3/4") Plug, pipe Plug, pipe (1/8") Ring, retaining	1 6 1 7 1 8 1 9 1 10	552377 BM-96156 170895 169042 107776	WATER PUMP REPAIR KIT Kit, water pump repair Bearing, ball Bearing, ball Impeller, water pump Seal, water pump Gasket, water pump mounting Flinger, water pump WATER INLET CONNECTION Connection, water Capscrew, connection	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
170895 552334 108707 169042 S-604	Seal, water pump Shaft, water pump MOUNTING PARTS Capscrew, water pump to block Gasket, water pump to block Lockwasher (3/8")	1 11 1 12 4 13 1 14 4 15	S-604	Gasket, connection Lockwasher	1 18 2 19

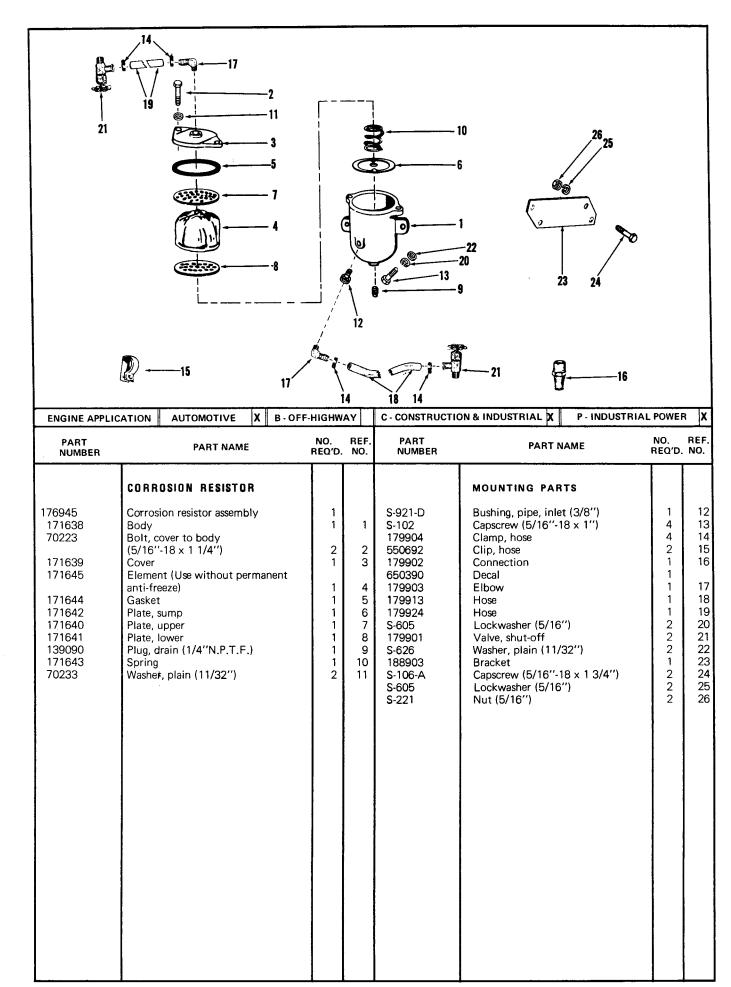


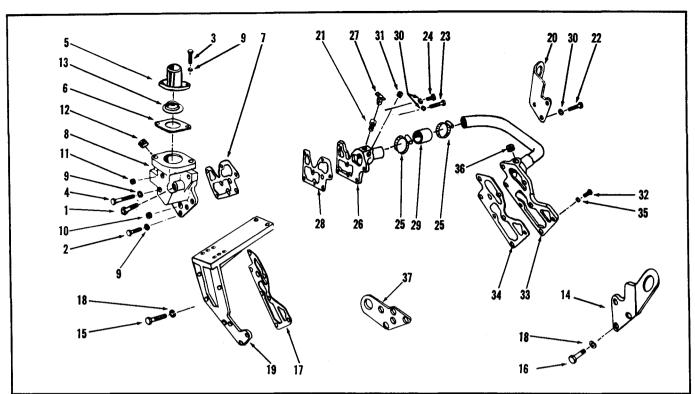


ENGINE APPLI									-HIGHWAY			C - CONSTRUCTION & INDUSTR			X	P - INDUST	RIAL	POWE	R X
PART NUMBER		PART NAME							IO. Q'D.	REF. NO.		PART NUMBER		PAR	TNA	AME	·	NO. REQ'D.	REF. NO.
	THER	MO	STAT	HOU	SIN	G					١		PAp	plication					
S-102-D S-103-D S-112 S-199-A	RIGH Auto, Capscr Capscr Capscr Capscr	C A rew, rew, rew,	housi housi conne housi	tion ng (3/2 ng ection ng (3/2	3"- 3"-		·		1 5 2 1	1 2 3 4		S-103-D 157290 S-604 172017	Gask Lock Supp RIG	screw (3/8 set kwasher (3/ port, altern HT BANK Application	/8'') ator RE#	bracket		7 1 7 1	15 7 18 19
172031 140329 157290 172032 S-604 S-908 S-911-B S-915-A 163981	Conne Gasker Gasker Housin Lockw Plug, p Plug, p Therm	t, co et, ho ng, t washe pipe pipe pipe nosta	nnectiusing hermoer (3/8" (1/8" (1/2") t	on to hea stat ''')	ıd				1 1 1 7 1 2 1	5 6 7 8 9 10 11 12 13		168919 S-929-B S-103-D S-104 S-112 550547 BM-96631 S-962-E 157290 178804 S-604 S-908	Bush Caps Caps Clan Cros Drai Gask Hose Lock	screw (3/8' screw (3/8' screw (3/8' np, hose sover, wate n cock set, crossov	'-16 '-16 '-16 er er	× 2 1/4'')		1 1 4 1 9 2 1 1 2 1 14 2	20 21 22 23 24 25 26 27 28 29 30 31
ADD: 160216 650864	Conne Bracke			er out	let				1	5 37		S-112 BM-96630	Auto	T BANK R	atio sove		: 1")	7	32 33
OMIT:		·	J						Ì			157290 S-604 S-908	Gasi Loci	sover, wate ket, crossov kwasher (3, , pipe (3/8	/er /8'')			1 7 1	34 35 36
172031	Conne LEFT Auto,	BAN	IK FR	ONT	let				1	5			PA	pplications e as above		ept:			
168919 S-103-D 108707	Bracke Capscr Capscr	et, li [.] rew,	fting plate	to hea	d				1 4 3	14 15 16		ADD: 650864 S-103-D	Brac Caps	ket, lifting screw, liftir	(L.E	3.) racket		1 4	37 32
157290 S-604 172017	Gasket Lockw Suppo	t, pla vashe	ate to er (3/8	head ''')	acke	et			1 4 1	17 18 19		OMIT : S-112	Cap	screw (3/8'	'-16	x 1′′)		4	32

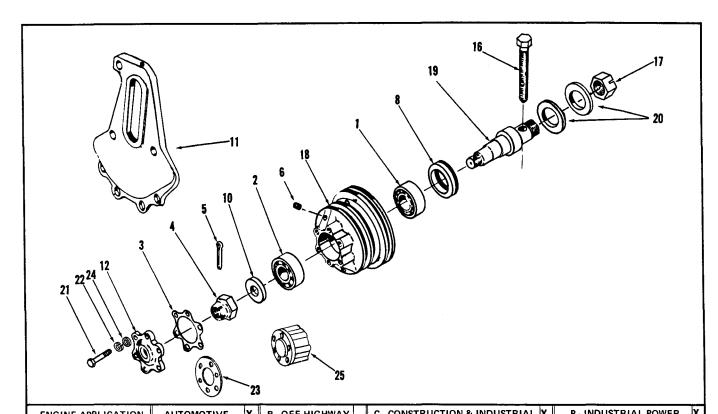


ENGINE APPLI	CATION AUTOMOTIVE X B-C	FF-HIGHWA	Υ	C - CONSTRUCTION	ON & INDUSTRIAL X P-INDUS	TRIAL POWE	R X
PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
S-117 S-604	STANDARD FAN MOUNT Capscrew, fan to crankshaft Lockwasher, fan to crankshaft HIGH FAN MOUNT Auto, C Application	6 6		178685 108707 S-604 119221 S-602	MOUNTING PARTS Belt Capscrew, fan mounting Lockwasher Spacer, fan Washer, plain P Application	1 6 6 1 15	21 22 23 24
BM-94480 143116 116759 143108 146650 67532 S-510 173223 S-911-B 106276 146647	Hub, fan Bearing, tapered roller Bearing, tapered roller Gasket Locknut, slotted Locknut, Marsden Pin, cotter Pulley, fan hub Plug, pipe Seal, oil Shaft, fan hub	1 1 1 1 1 1 1 1 2 1	1 2 3 4 17 5 18 6 8	ADD: S-141 152237 67012-1 70540 OMIT:	Same as above except: Capscrew, fan mounting Pilot, fan Spacer, fan Spacer, fan	6 1 1 1	21 12 25
146651 67526 182697 147209 182706	Washer, clamp Washer, clamp Bracket, camshaft cover and fan Pilot, fan Screw, adjusting	1 2 1 1 1 1 1	10 20 11 12 16	108707 147209	Capscrew Pilot fan	6 1	21 12
							<u> </u>

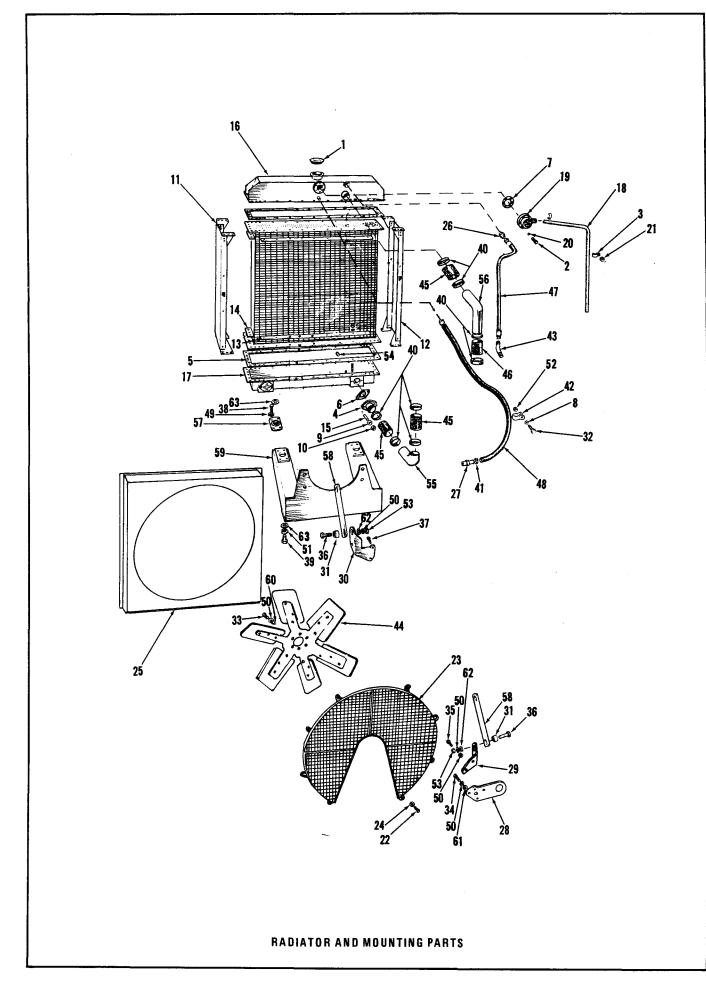


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF NO.
AR-73455 650399 650980 132049 650987 650981 650998 650988 650988 650991 650992 650994 650999 650998 650998 650998 650998 650998 650984 650993 120684 S-600 S-115-C S-167-A 650406 S-600 650404 S-691	RADIATOR P Application Only Radiator and shroud Radiator assembly Cap, radiator filler Capscrew, relief valve Clamp, overflow tube Connection Gasket, conection Gasket, relief valve Lockwasher (1/4" shakeproof) Lockwasher (3/8" shakeproof) Nut, water connection Panel, side (L.H.) Panel, side (R.H.) Plate, stiffening (long) Plate, stiffening (short) Stud, water connection Tank, top subassembly Tank, bottom subassembly Tube, overflow Valve, relief Valve, relief Valve Plief Valve, relief valve Lockwasher (1/4") Capscrew Capscrew, fan guard mounting Guard, fan Lockwasher, fan guard Shroud, fan Washer, toothlock	1 1 1 6 2 1 2 2 2 2 4 4 1 1 1 1 1 6 2 8 8 1 8 1 8 1 8	1 22 3 4 5 6 7 8 9 100 11 1 12 13 14 15 16 17 18 19 20 21 22 23 244 25	650429 S-114 S-141 S-120 108707 S-165 S-103-D S-115-C S-144 43828-D 43828-A 67949 116936 651069 69972 110980 AS0502660SS 138381 S-600 S-604 S-604 S-603 S-270 S-205 S-908	Adapter, thermostat to radiator Adapter, radiator to water pump Bracket, engine lifting Bracket, engine lift and support Bush, radiator stay Capscrew, clip Capscrew, fan Capscrew, fan Capscrew, lifting bracket Capscrew, lifting bracket Capscrew, radiator stay mounting Capscrew, radiator base mounting Capscrew, radiator base mounting Clamp, hose radiator to pump Clamp Clip, hose Elbow, thermostat to radiator Fan Hose, radiator to water pump Hose, water pump Hose, thermostat to radiator Hose, radiator to water pump Lockwasher (3/8") Lockwasher (5/8") Nut, clip Nut, radiator stay mounting Plug, radiator to water pump Pipe, radiator to water pump Pipe, radiator to water pump Stay, radiator for mounting Stay, radiator Support, front engine Washer, plain, fan Washer, plain, lifting bracket Washer, plain, lifting bracket Washer, plain, radiator base mounting	1 1 1 1 1 1 1 4 1 6 2 2 4 3 8 2 8 2 2 2 1 1 3 1 1 1 1 9 4 2 1 4 1 1 1 2 2 1 6 3 8 4	26 2 26 29 36 3 3 3 3 3 3 3 3 3 3 3 4 4 4 4 4 4 4

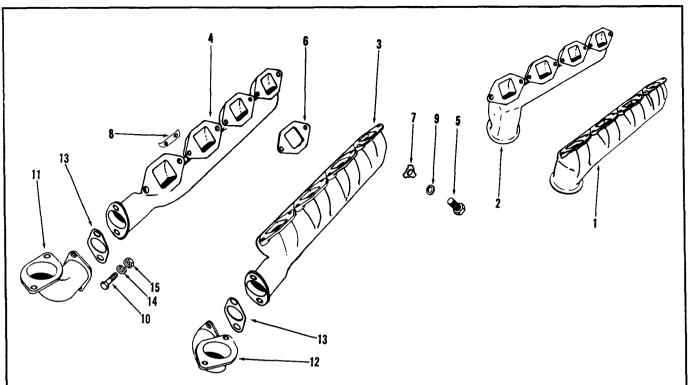



ENGINE APPLIC	ATION	AUTOMOTIVE	х	B · OFF	HIGHW	AY	C - CONSTRUCTION	ON & INDUSTRIAL X	P · INDUSTRIA	L POWEI	R X
PART NUMBER		PART NAMI	E		NO. REQ'D.	REF. NO.	PART NUMBER	PART N	AME	NO. REQ'D.	REF. NO.
161488 161489 173139 173140	EXHAUST MANIFOLD Manifold, exhaust L.B. (Auto) Manifold, exhaust R.B. (Auto) Manifold, exhaust R.B. (C and P) Manifold, exhaust L.B. (C and P) MOUNTING PARTS Auto, C Application		1 1 1	1 2 3 4							
S-172-B 168003 550720 551108 S-602	Capso Gaske Lock Lock Washe	crew, manifold et, manifold plate plate er plication			16 8 4 6 4	5 6 7 8 9					
ADD: 108707 650133 650134 168004 S-604 S-254	Same as above except: Capscrew (3/8"-16 x 1-1/2") Elbow, exhaust (L.B.) Elbow, exhaust (R.B.) Gasket, elbow to manifold Lockwasher (3/8") Nut		4 1 1 2 4 4	10 11 12 13 14 15							

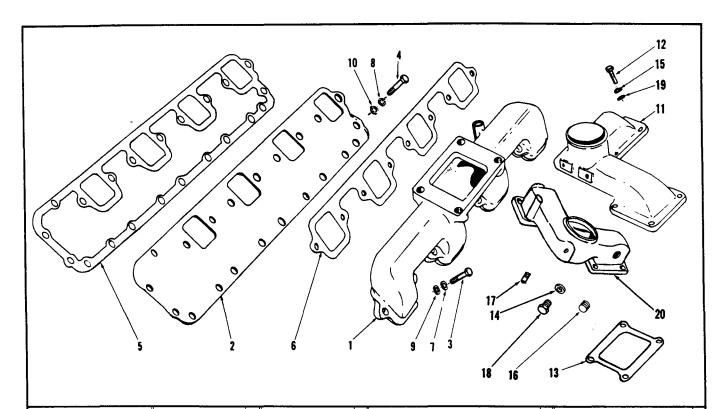


ENGINE APPLIC	IGINE APPLICATION AUTOMOTIVE X B - OFF		B - OFF-	F-HIGHWAY		C - CONSTRUCTION	ON & INDUSTRIAL X	P - INDUSTRIA	L POWE	R X	
PART NUMBER		PART NAME	E _		NO. REQ'D.	REF. NO.	PART NUMBER	PART N	AME	NO. REQ'D.	REF. NO.
	AIR I	NTAKE MANIFO	LD					CONNECTION, AI	R CROSSOVER		
168067 159267		old, air intake push rod cover			2 2	1 2	168076	Connection, air cro		1	11
	MOUN	ITING PARTS						MOUNTING PAR	TS		
S-102	Capscr	ew, plate to block	(Auto	o,C)	2			Auto Application			
S-174-B S-110		ew, manifold to pl ew, plate to block			16 24	3	S-103-D 168069	Capscrew, connection Gasket, connection		8 2	12 13
157015 156996	Gasket	t, plate t, intake manifold			2 2	5 6	66292 S-604	Gasket, plug Lockwasher		2 8	14 15
S-604 S-605	Lockw	vasher, manifold vasher, plate			16 26	7 8	S-911-B S-932-B	Plug, pipe Nipple		1	16 17
108976 S-626	Washe	r, plain, manifold r, plain, manifold			16 26	9	66030 S-602	Plug Washer, plain		2 8	18 19
		, pram, mamera					0 002	C, P Application			
								Same as above exce	ept:		
							ADD:			1	
							S-9 9 5	Plug, pipe		1	
							OMIT:			1	
							S-932-B	Nipple		1	17
								AUTOMOTIVE OP	TIONAL		
							176538	Connection, air cro	ssover	1	20
				:							
							<u></u>				

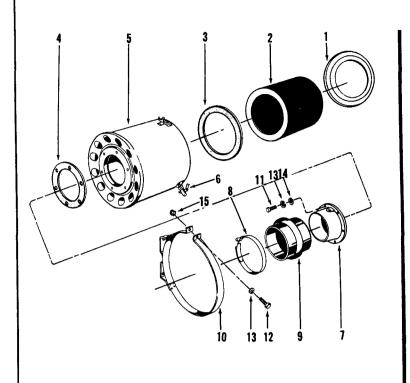

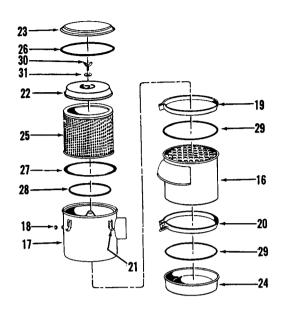


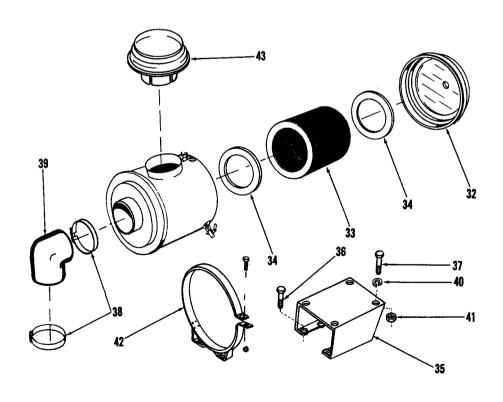


ENGINE APPLIC		-HIGHW NO.	REF.	PART	ON & INDUSTRIAL X P-INDUSTRIAL	NO.	REF.
NUMBER	PART NAME	REQ'D.		NUMBER	PART NAME	REQ'D.	
106835 107125 AF-252 107126 107127 107128 122121	AIR CLEANER Auto Application Cleaner, air Cover, shell Element assembly Gasket, element Gasket, flange Shell, air cleaner Spring, cover clamp MOUNTING PARTS Adapter, air cleaner	1 1 1 1 1 3	1 2 3 4 5 6	S-111 S-605 125740 103807 S-221 5846 650051 650056 650055 650057	MOUNTING PARTS Capscrew (5/16"-18 x 1-1/2") Lockwasher (5/16") Clamp, T bolt hose Hose Nut Strap, air cleaner P Application Cleaner, air Cover Element Seal	4 4 2 4 2 1 1 1	12 13 8 9 15 10
125740 103807 107091 S-115 S-119 S-605 S-626 S-221	Clamp, hose Hose, air cleaner Strap, air cleaner Capscrew (5/16"-18 x 7/8") Capscrew (5/16"-18 x 1-1/4") Lockwasher (5/16") Washer, plain Nut Direct mounted Air Cleaner used with 176538 connection. Cleaner Bolt	4 2 2 6 4 10 6 4	8 9 10 11 12 13 14 15	650665 108707 * S-166 125740 105312 S-604 S-205 650041 650059	Bracket, air cleaner Capscrew (3/8"-16 x 1-1/4") Capscrew (3/8"-24 x 1-1/8") Clamp, T bolt Elbow, 90° Lockwasher (3/8") Nut Straps Hood, air cleaner Note: Remove (4) S-103-D capscrews	1 4 4 2 1 4 4 2	35 36 37 38 39 40 41 42 43
169391 209890 169392 169390 169367 151799 151787 150768 151794 151805 150767 1507786 133748 150746 150749 151693 150789 151792	Cover Element Gasket, bolt Gasket, cleaner Housing C Application Assembly, air cleaner Body, lower Body, upper Cap, restriction Clamp, body Clamp, cup Clip, cover Cover, inner Cover assembly Element Gasket, cover Gasket, inner cover Gasket, element		16 17 18 19 20 21 22 23 24 25 26 27 28		from air crossover.		
150460 152792 152793	Gasket, body and cup Screw Washer	2 1 1	29 30 31				

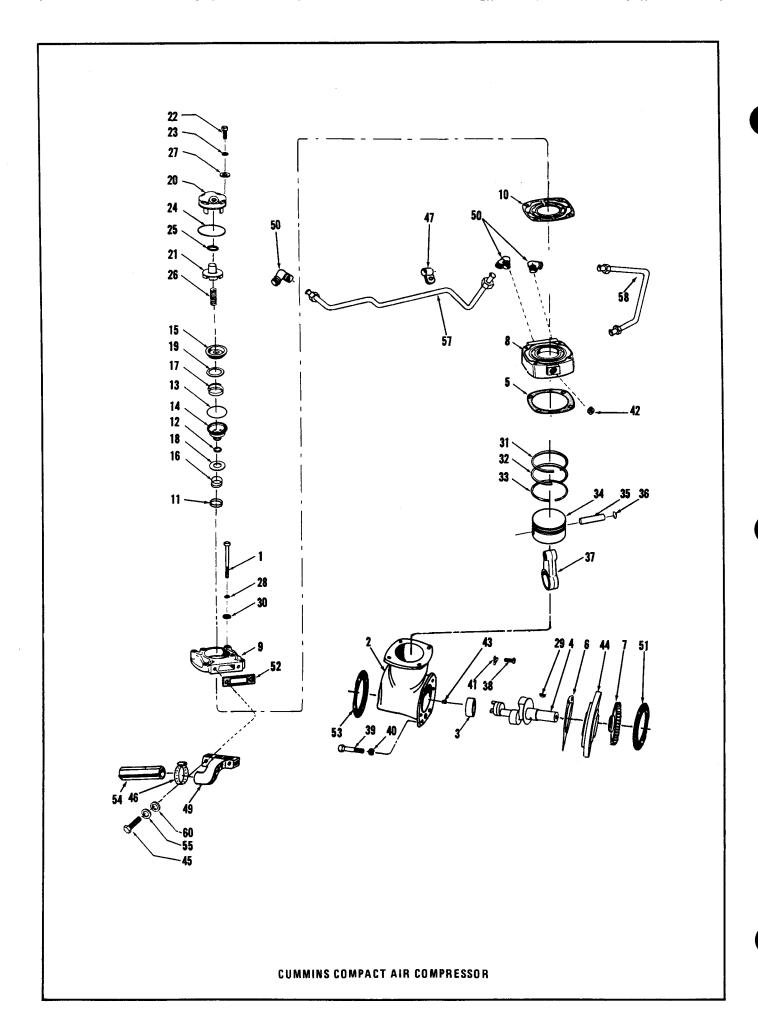


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REI NO
R-73582 S-155-A BM-98685 147610 176030 154018 176027 187639 AR-03926 179122 153964 154996 183429 AR-73075 128085 128086 144714 145028 128080 190334 127940 144948 AR-73076 153966 191037 S-115 S-605	AIR COMPRESSOR Compressor, air Capscrew, head to crankcase Crankcase, compressor (176025) Bushing, crankcase Crankshaft, compressor Gasket, head to crankcase Gasket, support Gear, compressor drive Head assembly Head, air compressor Cover, air compressor head Gasket Wearplate Intake and exhaust valve assembly "O" ring "O" ring Seat, exhaust valve Spring, exhaust valve Spring, intake valve Spring, intake valve Valve, exhaust Valve, intake Unloading valve assembly Body, unloader Capscrew Lockwasher	REQ'D. 1 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 2 2	NO. 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23		MOUNTING PARTS Capscrew, air connection Clamp, hose Clamp, hose Connector, flexible hose Connection, air Elbow, flexible hose Gasket, support Gasket, air connection Gasket, fuel pump to compressor Hose Lockwasher Pipe, nipple Tube, water inlet Tube, water outlet Tee, pipe Washer, plain		
144714 145028 128080 190334 127940 144948 AR-73076 153966 191037 S-115 S-605 128086 127936 150631 109557 S-605 S-316 136403 S-2267 S-626 AR-04130 194810 187350 180810	Seat, exhaust valve Seat, intake valve Spring, exhaust valve Spring, intake valve Valve, exhaust Valve, intake Unloading valve assembly Body, unloader valve Cap, unloader Capscrew Lockwasher "O" ring Seal, plunger Spring, unloader valve Washer Lockwasher, head to crankcase Key Nameplate, serial number Screw, nameplate Washer, plain Ring set, compressor (Std.) Ring, compression Ring, oil	1 1 1 1 1 1 1 1 1 1	14 15 16 17 18 19 20 21 22		washar, plain		
BM-77410 165430 119810 119859 176023 S-112 S-103-D S-604 550720 S-915-A S-965-E 650187 650792	Piston assembly (Std.) Piston, air compressor Pin, piston Ring, snap Rod, connecting Capscrew Capscrew Lockwasher Lockplate Plug, pipe Plug, pipe Support Plug, pipe (Crankshaft)	1 1 1 2 1 4 2 2 4 1 1 1	34 35 36 37 38 39 40 41 42 43 44				

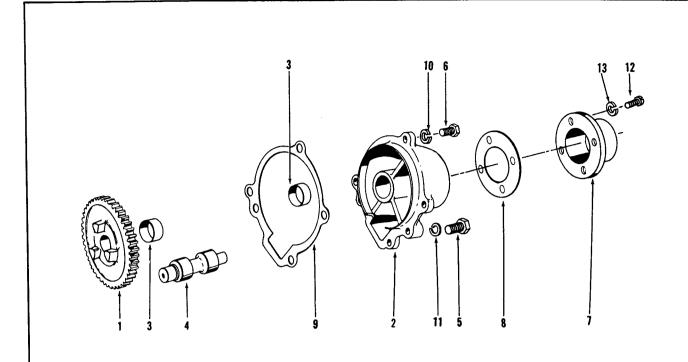


ENGINE APPL	CATION	AUTOMOTIVE	B - OFF-HIG	SHW	AY	C - CONSTRUCTION	ON & INDUSTRIAL X P-1	NDUSTRIAL POV	ER X
PART NUMBER		PART NAME	NO RE	Ο. Q′D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ	REF. D. NO.
BM-93760 177097 BM-93759 147610 171636	Drive, Gear, o	ig, drive (17 1635) g, shaft		1 1 1 2 1 1 1 2 1	1234	S-105-A S-105 551160 550123 153433 S-604 S-610 S-1326 S-607	MOUNTING PARTS Capscrew, drive Capscrew, drive Cover, drive shaft Gasket, cover Gasket, support Lockwasher, drive Lockwasher, drive Screw, cover Lockwasher	2 2 1 1 1 2 2 4 4 4	5 6 7 8 9 10 11 12 13

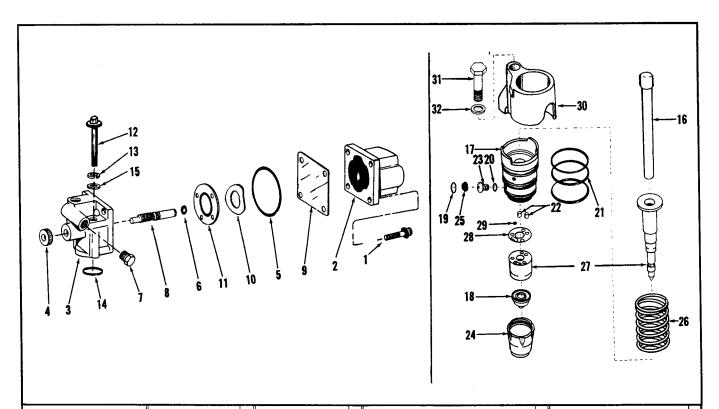


ENGINE APPLIC	INE APPLICATION AUTOMOTIVE X B - OFF-HIGHWAY		AY	C - CONSTRUCTION & INDUSTRIAL X P - INDUSTR		AL POWE	R X			
PART NUMBER		PART NAME		ı	NO. REQ′D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
BM-69973 187556 134072 129826 129838 129888 190876 70295 196037 129839 129768 129827 S-189-C S-1003-1 181466 154087 67684 S-1004-1 BM-69985 134076 BM-69982 134075 BM-69979 134074	Valve Caps Coil House Known Coil House Known Coil Caps Cons Cons Cons Cons Cons Coil Valve Coil Val	e UNTING PARTS screw, valve to hous nection (Auto, C) kwasher	g g 2 pol- 2 pol-	e) e)	1 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	174298 166009 AR-40063 185782 167157 187326 * 189848 *	Retainer, cup Screen, filter Spring, injector Barrel and plunger Gasket Ball, check Barrel, injector	888888888888888888888888888888888888888	16 17 18 19 20 21 22 23 24 25 26 27 28 29

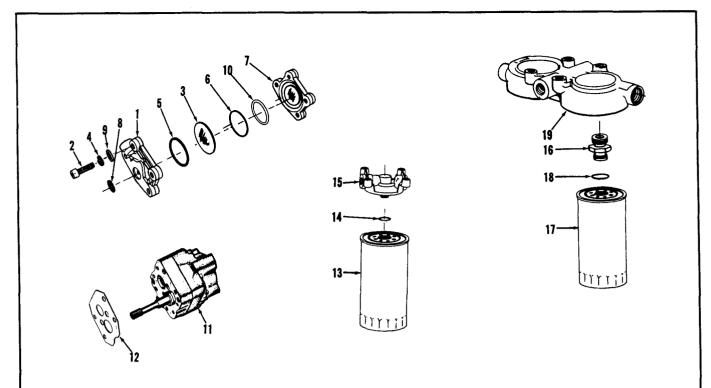


ENGINE APPLIC	ATION AUTOMOTIVE X B-OF	F-HIGHW	AY	C - CONSTRUCTI	ON & INDUSTRIAL X P - INDUS	STRIAL POWE	₹ X
PART NUMBER	PART NAME	NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
to obtai for you Dealer h rebuild the fuel tings, as O placed v Your Cu part nur	PT FUEL SYSTEM ach Cummins PT Fuel Pump is cality in the best performance and fuel econgregies. Your Cummins Distributions the special tools required for command calibration. Caution: Do not dipressure settings or the throttle screserious damage to your engine may really PT Fuel System parts which can without pump calibration are listed ummins Distributor will record the specific property of your complete PT Fuel Purt of this catalog.	nomy or or nplete isturb w set- esult. be re- here.		154711 FF-105 255622 142784 156171 FF-105-D 255622	FUEL FILTER Auto Application Filter, fuel Cartridge Gasket, cover Head P Application Filter, fuel Cartridge "O" ring, element	1 1 1 1 1 1	13 14 15
BM-76340 153336 S-170-C 202897 S-600 139988 100099 153338 151900 70704 160514	FUEL PUMP DAMPER Damper, fuel pump Body, damper Capscrew Diaphragm Lockwasher "O" ring "O" ring Plate, damper Seal Washer Washer, nylon GEAR PUMP	1 1 2 1 2 1 1 1 1 1 2	1 2 3 4 5 6 7 8 9	142784 BM-78793 126516 FF-105-D 255622 135601	Head, fuel filter C Application Filter, fuel Bolt, center Cartridge "O" ring, element Head, fuel filter	1 2 2 2 1	16 17 18 19
BM-96327 177764	Auto, C Application Pump, gear Gasket P Application	1 1	11 12				
AR-00936 177764	Pump, gear Gasket	1 1	11 12				

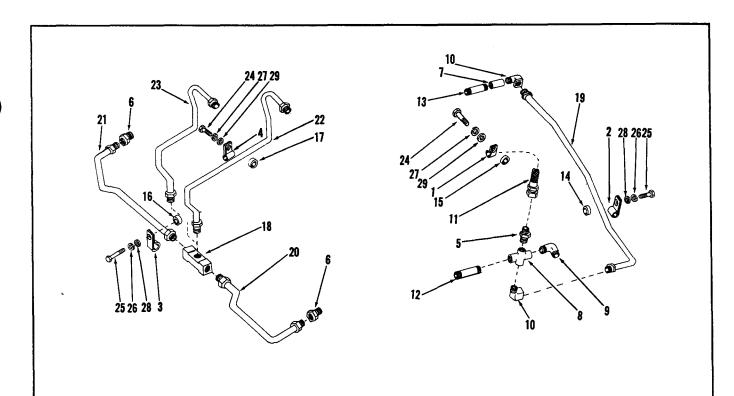

ENGINE APPLIC	ATION AUTOMOTIVE	X B - OFF-HIGHW	AY	C - CONSTRUCTI	ON & INDUSTRIAL X P - INDUSTR	IAL POWEI	R X
PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
68152 554014 550465 551394 550475 S-1003-1 S-935 175850 43765-A 185347 AS0401860SS AS0402860SS 550291 550610 62087 65297 68368-A 114850 S-1006-1 552184 551212 551213 551217 551215 551797	FUEL TUBING Clip, hose Clip, assembly Clip, hose Connector Connector Coupling Cross-piece Elbow, drain Elbow, crossover Hose (C,P) Hose (Auto) Nipple Nipple Spacer Spacer Spacer Spacer Tee Tube, fuel Tube, fuel Tube, fuel Tube, fuel Tube, fuel (C) Tube, fuel (C) Tube, fuel (P)	1 1 1 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1	1 2 3 4 5 6 7 8 9 10 11 11 12 13 14 15 16 17 18 19 20 21 22 23 22	S-102 S-105 S-604 S-605 S-602 S-626	Capscrew, fuel line clip to push tube cover Capscrew, fuel line clip to camshaft cover Lockwasher Lockwasher Washer, plain Washer, plain	2 2 2 2 2 2	24 25 26 27 28 29

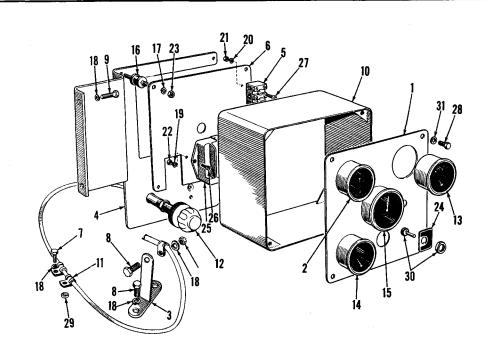

ENGINE APPLICAT	TION AUTOMOTIVE	B · OFF-HIGHW	AY	C - CONSTRUCT	ION & INDUSTRIAL P - INDUSTI	RIAL POWER	₹ X
PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
650436 68138 701214 109895 650529 650814 650449 650565 S-102 S-102-C S-115 S-117 S-129 650427 550465 108722 187734 162202 S-902 700469 650651 AS0401360SS AS0403760SS 650525 650442 S-600 S-604 S-607 S-636 S-223 S-256 S-259 S-270	Panel, instrument Adapter, hose Ammeter Bracket Bracket, throttle Bracket, instrument case Block, terminal Backplate Capscrew (5/16"-18 x 1") Capscrew (1/4"-28 x 2") Capscrew (3/8"-16 x 3/4" Capscrew (3/8"-16 x 3/4" Capscrew (3/8"-24 x 1") Case, instrument Clip Clamp, hose Control, throttle Connector Coupling, pipe Gauge, water temperature Gauge, oil pressure Hose Hose Hourmeter Isolator, vibration Lockwasher (1/4") Lockwasher (3/8") Lockwasher Lockwasher (5/32") Nut (3/8") Nut Nut Nut Nut (1/4")	5 4 2 1 2 1 2 1 1	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23	S-224 650818	Plate, indicator switch Regulator, voltage Screw Screw Screw Schock mounting assembly Spacer Switch, starting Switch, magnetic Switch, relay Switch, oil pressure Tee, pipe Washer, plain Indicator, restriction assembly Capscrew Clip Flange, adapter Insert Lockwasher Nut Tap, restriction Tubing, nylon Harness, wiring Tube, clip assembly Tube, clip assembly	1 1 2 3 4 1 1 1 1 1 1 1 2 2 1 1 2 2 1 8 4 4	24 25 26 27 28 29 30

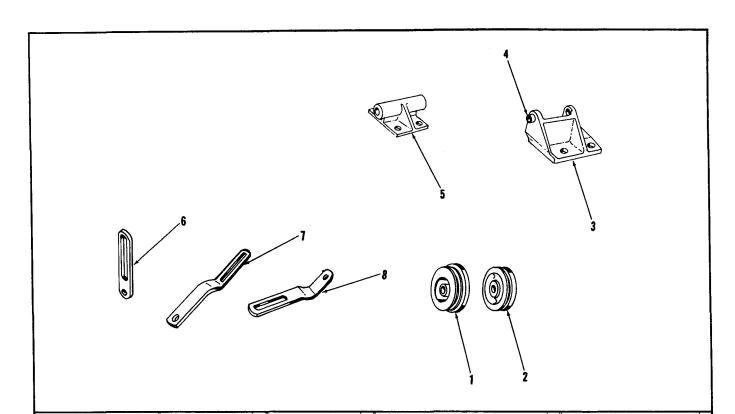

ENGINE APPLIC	ATION	AUTOMOTIVE	х В	- OFF-H	IGHW	AY	C - CONSTRUCTION	ON & INDUSTRIAL X	L X P-INDUSTRIAL POWER X		
PART NUMBER		PART NAME			NO. EQʻD.	REF. NO.	PART NUMBER	PART N	IAME	NO. REQ'D.	REF. NO.
	Altern Altern Conne Fan an Pulley Pulley Regula Switch MOUN Belt (A Belt (C Bracke (1790) Bushin Bracke Capscr Capscr Capscr Capscr Capscr Capscr Capscr Capscr Capscr Capscr Capscr Capscr Capscr Capscr Capscr Capscr	ator (Auto, P) ator (C) ctor, regulator ctor, regulator alternator (Auto, F) alternator (Auto, F) alternator (C) ator a, magnetic a, ignition ITING PARTS Auto, P) at and bushing alter and bu	(Auto	R, P)				STARTING MOT Auto, P Application Motor, starting Capscrew, motor Lockwasher, motor C Application Same as above exc	0 R n		
S-610 S-605 163666 182716 182708 S-223 S-217 108515 S-602 146161	Lockw Link, a Link, a Link, a Nut (A Nut (C Shim, Washer	adjusting (Auto) adjusting (C) adjusting (P) auto, P)) alternator			1 1 1 1 1 A/R 1	6 7 8					

PART	PART NAME	NO.	REF.	PART	PART NAME	NO. REI
NUMBER	PART NAME	REQ'D.	NO.	NUMBER		REQ'D. NO
	FLYWHEELS, RING GEARS and FLYWHEEL HOUSINGS					
have be hundred	Tywheels, ring gears and flywhee en designed to adapt the Cummir ds of different installations. For the semblies are not listed.	ns diesel to				
wheel, r	our Cummins Distributor will ring gear and flywheel housing parront of this catalog.	record fly- rt numbers				
	GASKET SETS					
.R- 60 180 .R- 60 181 M-68356	Gasket set, cylinder head Gasket set, engine Gasket set, fuel pump	1 1 1				

NUMERICAL INDEX

Part Number	Description	Page	Part Number	Description	Page	Part Number	Description	Page
AR-00588	Gasket, cyl. head	9	BM-99814	Block, cylinder	1	108515	Shim, alternator	37
AR-00589	Gasket, cyl. head	9	BM-99820	Bearing set, main	3	108722	Clamp, hose	31,36
AR-00936	Pump, gear	34	BM-99986	Lever & bushing	8	109319	Lockplate	12
AR-02336	Connector	37	BM-99987	Lever, rocker	8	109895	Bracket	36
AR-02337	Connector	37				110827	Retainer, element	19
AR-03926	Head Assembly	31			00	110848	Element	19
AR-04130	Ring set	31	AS0401360SS		36	110980	Hose	25
AR-40063	Barrel & Plunger	33	AS0401860SS		35 35	114123 114223	Gasket	37 7
AR-60078 AR-60079	Head, cylinder	9	AS0402860SS AS0403760SS		36	114223	Pin, tappet Spacer	, 35
AR-60079 AR-60086	Head assembly Pump, lub. oil	9 12	AS0502660SS		25	116029	"O" ring, support	18
AR-60089	Body and bushing	12	70000200000	11030		116759	Bearing Bearing	23
AR-60090	Gear, idler	12				116935	Adapter	25
AR-60092	Cover & bushing	12	AF-250	Element	10	116936	Elbow	25
AR-60098	Pump, lub. oil	12	AF-252	Element	29	117559	Lockplate	13,15
AR-60] 05	Body & bushing	13				118367	Plate, switch	36
AR-60108	Pump, lub. oil	13				119221	Spacer, fan	23
AR-60122	Cover & tube	10	FF-105	Cartridge	34	119810	Pin, Piston	31
AR-60180 AR-60181	Gasket set Gasket set	38 38	FF-105-D	Cartridge	34	119859 120684	Ring, snap Washer, relief valve	31 25
AR-60253	Filter, lub, oil	36 17				122121	Spring	29
AR-60486	Tube, suction	12	LF-500	Cartridge	18	125015	Gasket, washer	10
AR-60495	Tube, suction	12	LF-613	Cartridge	17	125016	Washer, cover	10
AR-60508	Shaft	8				125019	Gasket, cover	10
AR-60615	Camshaft	6				125740	Clamp	29
AR-60679	Pump, water	20	5846	Strap	29	126304	Yoke, regulator	12,13
AR-60698	Kit, water pump rep.	20	9089	Dowel	11	126516	Bolt, center	34
AR-61400	Ring set	4	9221	Gasket	20	127936 127940	Seal	31
AR-73075	Intake & exhaust valve assy.	31	43765-A 43828-A	Elbow, drain Clamp	35 25	128080	Valve Spring	31 31
AR-73076	Unloading viv. assy.	31	43828-D	Clamp	25 25	128085	"O" ring	31
AR-73326	Injector	33	62087	Spacer	35	128086	"O" ring	31
AR-73359	Injector	33	65297	Spacer	35	128765	Dowel, half ring	3
AR-73455	Radiator & shroud	25	66292	Gasket	27	129768	Spring	33
AR-73582	Air compressor	31	67012-1	Spacer, fan	23	129826	Housing	33
			67526	Clamp	23	129827	Valve	33
514 60050			67949	Clip, hose	25	129838	Knob	33
BM-68356	Gasket set	38	68138	Adapter, hose	36 35	129839 129888	Shield, fuel	33
BM-69973 BM-69979	Valve, shutdown Valve, shutdown	33 33	68152 68270	Clip, hose Connection, water	20	131911	"O" ring Orifice, plug	33 18
BM-69982	Valve, shutdown	33	68368-A	Spacer	35,36	132049	Relief valve	25
BM-69985	Valve, shutdown	33	68568	Dowel	1,5	133748	Cover	29
BM-76340	Damper, fuel pump	34	68586	Bushing	12,13	134072	Coil	33
BM-77410	Piston assembly	31	68908-A	Lockplate	6,13	134074	Coil	33
BM-78775	Tube, vent	9	69562	Dowel	1,11	134075	Coil	33
BM-78784	Rod, connecting	4	69972	Hose	25 23	134076 135601	Coil Head, fuel filter	33
BM-78793 BM-79721	Filter, fuel Gasket, cyl. head	34 9	70540 70645	Spacer, fan Dowel	1	136403	Nameplate	34 31
BM-79722	Lever & bushing	8	70760	Dowel	1,13	138381	Hose	25
BM-79723	Lever, rocker	8	70768	Stud, connection	25	139988	"O" ring	34
BM-79724	Lever & bushing	8	100973	Dowel, ring	1,9	140329	Gasket	22
BM-79725	Lever, rocker	8	100099	"O" ring	34	142784	Head	34
BM-91498	Tube, aerator	13	101322	Cap, oil filler	10	143108	Gasket	23
BM-91604	Cooler, lub. oil	19	101754	"O" ring	33	143116	Bearing	23
BM-92138 BM-93759	Body, scavenger Housing	13	102057 102846	Switch, starting Switch	36 37	144714 144948	Seat Valve	31 31
BM-93760	Drive, fuel pump	32 32	102957	Dowel	1,11	145027	Switch, magnetic	36,37
BM-94014	Tappet, valve	7	103807	Hose	29	145028	Seat	31
BM-94016	Tappet, injector	7	105312	Elbow	29	145664	Bracket, filter	18
BM-94480	Hub, fan	23	106276	Seal, oil	23	145665	Strap, mounting	18
BM-94498	Tube, oil suction	13	106835	Cleaner, air	29	146651	Clamp	23,25
BM-96141	Damper, vibration	3	107091	Strap	29	146647	Shaft, fan hub	23
BM-96156 BM-96200		20	107105 107125	Adapter	29 20	147209	Pilot, fan	23
BM-96327	Piston, assembly Pump, gear	4 34	107125	Cover Gasket	29 29	147389 147610	Screw, crosshead adj. Bushing	9 31,32
BM-96630	Crossover, water	22	107120	Gasket	29 29	148293	"O" ring	31,32 19
BM-96631	•	22	107128	Shell	29	148547	Dowel	1
BM-96737		37	107738	Socket	7	149226	Switch, relay	36
BM-96834	Gear and bushing	13	107776	Flinger, water pump	20	150037	Spring	18
BM-98685	Crankcase, compressor		107981	Cap, oil filler	10	150038	Coupling, half	18
BM-99677		3	108186	Lockwire	7	150039	Coupling, half	18 2 6
BM-99803	Tube, suction	13	108187	Lockwire	7	150348	Shock, mounting	3 6

Part			Part			Part		
N um ber	Description	Page	Number	Description	Page	Number	Description	Page
183510	Piston	4	550547	Clamp, hose	22	650429	Bush, radiator	25
184044	Gear, main drive	12,13		Clip, hose	21	650434	Stay, radiator	25
185556	Pan, oil	15	550720	Lockplate	26,31	650436	Panel, instrument	36
185557	Baffle, oil pan	15	550788	Clamp	31	650442	Isolator	36
185782	Gasket	33	551079	Spring, by-pass vlv.	12,13	650449	Block, terminal	36
186226	Tube	31	551084	Plate	7	650450	Support, rear	5
186397 187011	Motor, starting	37 12	551108	Lockplate	26	650525	Hourmeter	36
187012	Body, lub. oil Gear	12 12	551117 551158	Lockplate	12 17	650529	Bracket	36
187013	Gear	12,13	551160	Gasket, bolt Cover, drive shaft	11,32	650565 650651	Backplate	36 36
187326	Barrel, injector	33	551161	Cover, gear housing	11	650665	Gauge Bracket	36 29
187350	Ring, compression	31	551186	Dipstick	14	650814	Bracket	36
187639	Gear	31	551212	Tube, fuel	35	650816	Indicator	36
187649	Gear, camshaft	6	551213	Tube, fuel	35	650817	Flange	36
187734	Control, throttle	36	551215	Tube, fuel	35	650818	Tap, restriction	36
187858	Coupling	33	551217	Tube, fuel	35	650819	Insert	36
188393	Cover	5	551394	Clip, hose	35	650843	Tubing, nylon	36
188 394 188 39 5	Washer (5/8'')	1	551467	Plate, gear housing	11	650864	Bracket	22,25
100390	Capscrew (9/16''-18 × 2 5/8'')	4	551475 551514	Plug, cup Seal, oil	9 5	650866	Bracket	25
188396	Gasket	1 5	1551514	Seal, oil	11	650980 650982	Cap, radiator Gasket	25 25
188397	Support, front	5	551516	Dowel	13	650984	Valve, relief	25 25
188476	Spring, by-pass	17	551607	Shaft	8	650985	Gasket	25
188903	Bracket	21	551608	Bracket	8	650986	Tube	25
189230	Pan, oil	16	551609	Pin	8	650987	Clamp	25
189848	Plug, barrel	33	551680	Shell, filter	17	650989	Tank, top	25
189999	Tube	31	551681	Can, filter	17	650990	Tank, bottom	25
190138	Shaft, idler	12	551682	Plate	17	650991	Panel	25
190141 190145	Body	13	551683	Spring, cartridge	17	650992	Panel	25
190334	Shaft, pump Spring	13 31	551684	Washer, bolt seal	17	650993	Valve, relief	25
190740	Plate	9	551685 551686	Seal, bolt Support, cartridge	17 17	650994 650995	Plate Plate	25
190817	Retainer, crosshead	9	551687	Spacer	17	650996	Gasket	25 25
190876	"O" ring	33	551688	Circlip	17	651069	Fan	25 25
191037	Сар	31	551690	Bolt, center	17	700469	Gauge	36
191818	Regulator	37	551759	Guide, intake valve	9	701214	Ammeter	36
193009	Main bearing cap	1	551775	Dipstick	16	706085	Switch	36
193010	Main bearing cap	1	551786	Cover, cyl. head	10			
193011 193012	Main bearing cap	1	551797	Tube, fuel	35			
193012	Main bearing cap Main bearing cap	1 1	552142 552184	Dipstick	14	[
193302	ring, sealing head	17	552332	Tube, fuel Body, water pump	35 20	ļ		
193557	Cover, water header	2	552334	Shaft, water pump	20			
194037	Socket	8	552335	Bearing, ball	20	}		
194038	Lever, rocker	8	552377	Bearing, ball	20			
194041	Link, injector	33	552458	Clamp	33			
194810	Ring, compression	31	553015	Plug, oil pan	14	ļ		
195000 195321	Insert, valve seat	9	553019	"O" ring	9			
195360	Cup, injector Bushing, piston pin	33	553371	Data plate	1			
196000	Dipstick	4 15	553391 553461	Harness, wiring Plate, swirl	36 9			
196037	Shaft	33	553670	Half ring, crankshaft	3	ł		
200064	Clamp	14,15	553671	Half ring, crankshaft	3			
	•	16	553672	Half ring, crankshaft	3			
200509	Seal, seat	20	554003	Bushing, camshaft	1	1		
200515	Impeller	20	554004	Bushing, camshaft	1			
200817	Gasket	31	554013	Tube, clip	36	İ		
200819 201050	Disc, by-pass	17	554014	Clip, hose	35			
201030	Camshaft Diaphragm	6	650041	Strap	29			
203426	Pin, roll	34 33	650051 650055	Air cleaner Element	29 29	j		
204930	Ring, oil	4	650056	Cover	29 29			
208990	Ring, compressor	4	650057	Seal	29	1		
209889	Cleaner	29	650059	Hood	29			
209890	Element	29	650187	Support	31	1		
252055	Support	18	650255	Bracket	25			
252056	Shell, filter	18	650368	Support, front	5,25			
252138 255622	Support Gasket	18	650384	Pipe	25	1		
550113	Tube, filler	34 10	650385	Pipe	25 25			
550113	Gasket	11,32	650387 650390	Rubber, mounting Decal	25 21	1		
550164	Gasket	6	650399	Radiator	25			
550171	Bracket, tube	14	650404	Shroud, fan	25	Ì		
550291	Nipple	35	650406	Guard, fan	25			
550310	Tube, dipstick	14	650418	Adapter	25			
550465	Clip, assembly	35,36	650427	Case, instrument	36	i		

Part Number	Description	Page	Part Number	Description		Part Number	Description	Page
150460	Gasket	29	163037	Spring, valve	9	172031	Connection, outlet	22
150631	Spring	31	163087	Gasket, oil drain	14,15	172032	Housing, thermostat	22
150746	Cup	29	100000	Litation and castlesia	16	172036	Support, oil tube	15
150749 150767	Element Clip	29 29	163666 163759	Link, adjusting Connector, tube	37 14,15	172645 173085	Housing, gear Plug, orifice	11 33
150768	Спр	29 29	103/39	Connector, tube	16	173086	Gasket	33
150786	Cover	29	163981	Thermostat	22	173090	Deflector, oil	5
150789	Gasket	29	164159	"O" ring, cover	18	173139	Manifold	26
151607	Air cleaner assembly	29	164337	Pulley	37	173140	Manifold	26
151693	Gasket	29	164916	Gasket	12	173223	Pulley, fan hub	23
151770	Pin, piston	4	165153	Gasket	19 31	173640	Half ring, crankshaft	3 33
151787 151792	Body Gasket	29 29	165430 166009	Piston Spring	33	174298 174299	Screen, filter Clip, screen	33
151794	Clamp	29	166401	Housing	19	175172	Damper, vibration	3
151799	Body	29	166407	Gasket	19	175282	Lockplate	11,12
151805	Clamp	29	166452	Rod, connecting	4	175623	Head, filter	17
151900	Seal	34	166772	Half collet, valve	9	175702	Pan, oil	14
152237	Pilot, fan	23	166774	Valve, exh. & int.	9	175727	Gasket, oil pan	14,15
152936	Bushing	8	167157	Ball, check	33	175700	Dan all	16 14
152937 153338	Bushing Plate, damper	8 34	167305 167800	Bearing, camshaft Gasket	6 2	175729 175795	Pan, oil Tube, by-pass	12,13
153433	Gasket	11,32	167801	Cover	1	175805	Cap, by-pass spring	12,13
153679	Roller, tappet	7	167802	Gasket	1	175850	Cross, piece	35
153807	Dowel	11	167834	Cover, camshaft	6	176023	Rod	31
153882	Tube	9	167993	Gasket, compr.	11,31	176025	Crankcase, compr.	31
153964	Cover	31	168003	Gasket	26	176027	Gasket	31
153966 154018	Body Gasket	31	168004	Gasket	26 27	176030 176088	Crankshaft, compr.	31 37
154018 154087	"O" ring	31 33	168067 168069	Manifold Gasket	27 27	176365	Pulley Bushing	37 37
154109	Bracket	8	168209	Rod, push	7	176596	Cover, water header	2
154220	Guide, crosshead	9	168255	Lever, rocker	8	176598	Gasket	2
154272	Breather, crankcase	10	168285	Lever, rocker	8	176945	Corrosion resistor	21
154571	Roller, tappet	7	168306	Screw, adjusting	8	177086	Gear, crankshaft	3
154711 154946	Filter, fuel Guide, exh. valve	34 9	168644 168649	Housing, gear Gasket	11 11	177097 177217	Gear Hose	32 31
154996	Gasket	31	168650	Gasket	11	177764	Gasket	34
155336	Body, damper	34	168919	Bracket	22	178009	Retainer, cap	33
155441	Retainer, spring	9	168978	Tube, dipstick	14	178088	Adapter	33
155997	Cover, breather	10	168979	Support, oil tube	14,16	178276	Body	13
155998	Housing, element	10	169042	Gasket	20	178281	Cover, pump	13
156081 156082	Grommet Grommet	9 9	169154 169367	Pin, tappet	7 29	178282 178283	Gasket, cover	13 12,13
156171	Filter, fuel	34	169390	Housing Gasket	29	178284	Gasket, cover Shaft, drive	12,13
156438	Spring	7	169391	Cover	29	178286	Shaft, idler	13
156439	Spring	7	169392	Gasket	29	178471	Belt	37
156541	Seal, intake valve	9	169630	Sleeve, injector	9	178473	Belt	37
156674	Grommet	9	170326	Rod, push	7	178685	Belt	23
156676 156879	Ring, snap disc Crosshead, valve	17	170783	Pulley, water pump	20	178804	Hose	22
156958	Fan	9 37	170895 171270	Seal, water pump Packing, cyl. liner	20 1	178980 179065	Plunger, injector Gear	33 13
156959	Alternator	37	171299	Bracket	37	179078	Bracket	37
156996	Gasket	27	171627	Housing, gear	11	179122	Head, compressor	31
157015	Gasket	27	171634	Tube, dipstick	15,16	179710	Liner, cylinder	1
157018	Gasket, cover	10	171635	Housing	32	179901	Valve, shut-off	21
157040	Alternator	37	171636	Shaft	32	179904	Clamp, hose	21
157151 157290	Decal, filter Gasket	18 22	171638 171639	Body Cover	21 21	179913 179924	Hose Hose	21 21
157620	Bearing, connecting	22	171639	Plate	21	180676	Bolt, Main Bearing cap	21
	rod	4	171641	Plate	21	180810	Ring, oil	31
157626	Bolt, connecting rod		171642	Plate	21	181165	Cover	12
.=	(7/16"-20 x 3 5/16")		171643	Spring	21	181271	Retainer, grommet	9
157782	Head, cylinder	9	171644	Gasket	21	181728	Gasket	17
157911 157978	Gasket	31	171645	Element	21	182200	Bearing, main	3
159267	Ring, snap Plate	4 27	171690 171786	Ring, compr. Shim liner (.007")	4 1	182210 1823 7 0	Bearing, main Bearing, main	3 3
159667	Cover	18	171787	Shim liner (.007)	1	182360	Crankshaft	3
159707	Filter, hub oil	18	171788	Shim liner (.012")	1	182400	Bearing, main	3
160586	Ring, retaining	20	171789	Shim liner (.014")	1	182697	Cover, camshaft	6,23
161488	Manifold	26	171790	Shim liner (.021")	1	182706	Screw, adjusting	23
161489	Manifold	26	1717880	Seal, crevice	1	182708	Link, adjusting	37
161825	Plug, rocker shaft	8	171936	Tappet, injector	7	182716	Link, adjusting	37
162182	Capscrew, cyl. head	1,9	171937	Tappet valve	7	183014	Plunger, regulator	12,13
162183 162843	Capscrew, cyl. head Regulator	1,9 36	171999 172017	Guide, valve Support	9 22	183070 183429	Block, cylinder Wear plate	1 31
. 525-10		55	11/201/	Gupport	~~	1.00-720	rrout plate	0,

HARDWARE

<u>Boit</u>		Connector (Con't)	
70223 169369	5/16''-18 x 1 1/4''	179902 194410	<u>Pin</u>
Bushing		550475 650981	S-510
S-921-D	3/8"	Coupling	<u>Pipe</u>
S-929-B		S-902 S-935	S-920
<u>Capscrew</u> S-102	5/16′′-18 x 1′′		Plug
S-102-C S-102-D S-103-D	1/4"-28 x 2" 3/8"-16 x 3" 3/8"-16 x 1 1/4"	<u>Drain Cock</u> S-962-E	S-908 3/8" S-910-B 1/4" S-911-B 1/8"
S-104 S-105	3/8"-16 x 2 1/4" 3/8"-16 x 3 1/2"	Elbow	S-915-A 1/2" S-965-E 1/16" S-995 3/4"
S-105-A S-106 S-106-A S-107	7/16"-20 x 1 1/4" 1/2"-13 x 1 3/4" 5/16"-18 x 1 3/4" 5/16"-18 x 3/4"	S-1005-A 179903 185347 650133	66030 7/8" 67622 3/8" 68606 1/8"-27 NPTF
S-109 S-110 S-111 S-112	3/8"-16 × 7/8" 5/16"-18 × 5/8" 5/16"-18 × 1 1/2" 3/8"-16 × 1"	650134 Key	139090 1/4" 550973 553364 650792 1/16"
S-114 S-115 S-115-C	1/4"-20 x 3/4" 5/16"-18 x 7/8" 1/4"-28 x 1/2"	S-313 S-316	Screw
S-117 S-119 S-120 S-121 S-124-C S-126 S-129 S-137	3/8"-16 × 3/4" 5/16"-18 × 1 1/4" 3/8"-16 × 1 3/4" 1/4"-28 × 5/8" 5/16"-18 × 4" 3/8"-16 × 2 1/2" 3/8"-24 × 1" 3/8"-16 × 2"	144131 Lockwasher S-600 1/4" S-603 5/8" S-604 3/8" S-604 5/16"	S-1316 No. 6-32 x 1 1/8" S-1326 No. 10-24 x 5/8" S-1334 1/4"-28 x 3/8" S-2267 No. 2 x 1/4" S-2286 No. 2 x 3/16" 131449 No. 10-24 x 1/2"
S-138-C S-139 S-141 S-144	5/16"-18 x 3 1/2" 5/8"-11 x 2 3/4" 3/8"-16 x 2 3/4" 5/8"-11 x 2 1/2"	S-607 3/16" S-608 1/2" S-610 7/16"	Tee
S-145 S-149-B S-151 S-155-A	1/2"-13 x 1 1/4.' 1/2"-20 x 1 1/2" 7/16"-14 x 6" 5/16"-18 x 2 1/2"	S-636 5/32" 70189 1/4" 70194 5/16" 181466 5/16"	S-930-E S-1006-1 126876
S-163 S-165	3/8"-16 x 3 1/4" 3/4"-24 x 1 1/2"	650983 3/8'' 650988 1/4''	Washer
S-166 S-167 S-168-C S-170-C	3/8''-24 x 1 1/8'' 1/4''-20 x 7/8'' 1/4''-20 x 1'' 1/4''-20 x 1 1/4''	Nipple S-932-B	S-602
S-172-B S-174-B	3/8"-16 x 1 1/8" 3/8"-16 x 1 3/8"	550610 Nut	S-689 19/32" S-691 67684 17/64"
S-188-C S-189-C S-199-A S-199-B 70188 70449	1/4"-20 x 1/2" 1/4"-20 x 1 3/4" 3/8"-16 x 4" 3/8"-16 x 3 3/4" 1/4"-20 x 3/4" 5/16"-18 x 1 1/2"	S-205 3/8" S-212 1/2" S-217 7/16" S-221 5/16"	69280 25/64'' 70233 11/32'' 70427 9/32'' 70704 .265 108976
106289 108707 166392 187556 550389	1/2"-13 x 2 1/4" 3/8"-16 x 1 1/2" 3/8"-16 x 2 1/2" 5/16"-18 x 5 1/8"	S-223 3/8" S-224 1/4" S-254 3/8" S-256 5/16"	109557 146161 3/8'' 152793 153411 9/16'' 160514 1.695
Connector	3,10 13 × 3 1/0	S-259 3/8" S-270 1/4" S-273 3/8-24"	
S-1002-A S-1003-1 S-1004-1 160216		S-1022-A 67532 70299 125017 146650	
162202 168076 176538		152838 7/16"	