
# Cummins Parts Model: V-504 Bulletin

Bulletin No. 3379549-00

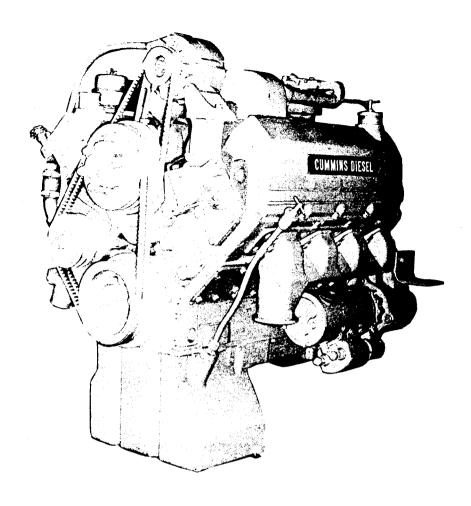

## Parts Ordering for: V-504 Series

Genuine Cummins Parts and service facilities are world-wide. There are more than 2400 Cummins Sales and Service locations in the principal cities of the United States and Canada, and more than 500 Sales and Service locations situated elsewhere throughout the free world. Each distribution outlet is thoroughly equipped with technical data, factory-trained mechanics, modern equipment and a full, adequate stock of Genuine Cummins Parts.

For quicker and better service, your parts requirements should be ordered from your nearest Cummins Distributor or Dealer. At any of the locations prompt, intelligent, courteous service is a basic trademark. Each is ready and eager to help in every possible way through personal contact or through the mail — at your convenience.

The satisfactory ordering and receiving of parts by the purchaser is greatly dependent upon the proper use of available information. In order that all avoidable errors may be eliminated, the following instructions are offered as the purchaser's guide:

1. Write your order clearly, using a typewriter if possible.

- Be sure to list the correct part number. If in doubt as to the correct part number, state the model and serial number of the engine on which the part is to be used. Part numbers are usually located in various places on the part itself.
- When possible, arrange your purchase order in part number numerical sequence.
- Always specify shipping instructions "Best Way" is satisfactory if you have no preference
- 5. State your company name and shipping address clearly.

Genuine Cummins Parts mean QUALITY! They're designed and engineered to fit best in your Cummins Diesel. Each part is made of the highest quality material — on the most accurate of machines — by the top craftsmen of the trade.

You can be sure a Genuine Cummins Part will fit better — do the job better — lessen the chances of costly breakdown. When you buy replacement parts, buy quality. Buy Genuine Cummins Parts!

YOU OWN THE BEST . . . REPAIR WITH THE BEST

### **FOREWORD**

This Parts Catalog contains standard parts information for the V-504 Naturally Aspirated engines.

V8-210 AUTOMOTIVE V-504— C210 CONSTRUCTION V-504— P210 INDUSTRIAL

### ENGINE APPLICATION INFORMATION

Explanation of the letter designations for the various engine applications is listed below. Auto=Automotive Application.

- B =Off highway application, less air compressor.
- C = Construction and mining applications, mobile type of equipment.
- P = Industrial application, radiator cooled, stationary unit.

In the engine application box on each page, an "X" will appear only in the application column to which the parts information on the page is applicable.

In those cases, when assemblies and/or parts are variable to applications, direction is provided to identify the assembly or parts pertinent to the Engine Application. Part numbers appearing in ( ) are for identification purposes only and should not be used when ordering service replacement parts.


### SPECIAL PARTS

Special Parts peculiar to the engine can be listed on the form below. To make certain you have ordered correct parts, refer to this form before submitting Parts Order.


Part Number	Description	
	And the second s	-
	- Address of the second	
Cummins Distributor		

# **Table of Contents**


	Page		Page
Alternator	36	Housing, Thermostat	19
Bearing, Main	3	Hub, Fan	22
Block, Cylinder	1	Instrument Panel	21
Bushings, Camshaft	1	Injector	32
Camshaft	6	Levers, Rocker	8
Cleaner, Air	25	Liner, Cylinder	1
Compressor, Air	26,27	Manifold, Air Intake	23
Connections, Air	23	Manifold, Exhaust	29
Cooler, Lubricating Oil Filter	16	Pan, Oil	13
Cover, Camshaft	6	Panel, Instrument	21
Cover, Cylinder Head	10	Piston	4
Cover, Front	5	Pump, Water	17
Cover, Gear Housing	11	Pump, Fuel Drive	28
Cover, Water Header	2	Pump, Fuel Gear	30,31
Cover, Water Header Front	1	Pump, Lubricating Oil	12
Crankshaft	3	Radiator	20,21
Crossmember	33	Rings, Piston	4
Crossover, Water	19	Rods, Push and Tappets	.7
Damper, Fuel Pump	30,31	Rod, Connecting	4
Damper, Vibration	3	Rod, Tie	33
Electrical Equipment	36	Resistor, Corrosion	18
Filter, Fuel	30,31	Restrictor Indicator	21
Filter, Lubricating Oil	14	Support, Front Engine	5
Filter, Lubricating Oil By-Pass	15	Starter	36
Flywheel, Housing & Ring Gear	37	Tubing, Fuel	34
Gasket Sets	37	Valve, Shutdown	32
Head, Cylinder	9	Wiring Harness	21
Housing, Gear	11		

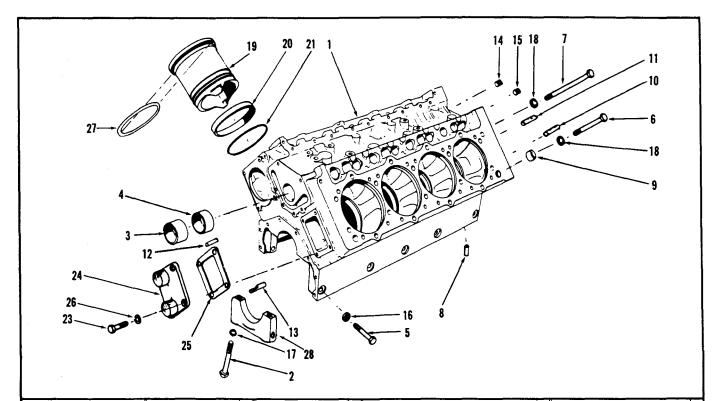


ENGINE APPLI	CATION AUTOMOTIVE X B-OFF	HIGHW	AY	C - CONSTRUCTION & INDUSTRIAL X P - INDUSTR			R X
PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
	CYLINDER BLOCK				FRONT WATER HEADER COVER		
AR-60781	Block, cylinder (553580)	1	1	S-172-B	Capscrew, water header cover		
180676	Bolt, main bearing cap (9/16''-18 x 4 5/8'')	10	2	S-112	(P. Application) Capscrew, water header cover	4	23
554003	Bushing, camshaft (No. 1 and 5			167801	(Auto & C Application) Cover water header (Auto	4	23
554004	position) Bushing, camshaft (No. 2, 3 and	2	3		Application)	1	24
100005	4 position)	3	4	551455 183307	Cover water header (C Application) Water header cover (P Application)	1 1	24 24
188395	Capscrew, main bearing side locking (9/16"-18 x 2 5/8")	10	5	167802	Gasket, water header cover	1	25
162182	Capscrew, cylinder head (short) (1/2"-20 x 4 15/16")	26	6	S-604	Lockwasher water header cover	4	26
162183	Capscrew, cylinder head (long)	20			OVERSIZE FOR SERVICE		ł
148547	(1/2''-20 x 8 7/8'') Dowel, rear main bearing cap	10	7 8	171786	Shim liner (.007")	A/R	27
100973	Dowel ring, cylinder head to block	4	9	171787 171788	Shim liner (,010") Shim liner (,012")	A/R A/R	
69562	Dowel, gear housing to block (Master)	2	10	171789 171790	Shim liner (,014") Shim liner (,021")	A/R A/R	
102957	Dowel, gear housing to block			171790	Shim liner (,021 )	^'''	2′
70645	(Diamond)  Dowel, front cover to block	2	11		SEMI-FINISHED MAIN BEARING		İ
	(Master)	1	12	193010	Main bearing cap front	1	28
68568	Dowel, front cover to block (Diamond)	1	13	193013	Main bearing cap intermediate No.2	1	28 28
161825 217632	Plug, pipe	2	14	193011 193012	Main bearing cap intermediate No.4  Main bearing cap intermediate No.3	1	28
188394	Plug, pipe (1/8") Washer, main bearing side locking	6	15	193009	Main bearing cap rear	1	28
553451	capscrew (5/8") Washer, main bearing cap (9/16")	10 10	16 17			-	
153411	Washer, cylinder head capscrew	10	17			1	
	(9/16'')	36	18				
	MOUNTING PARTS						
AR-60170	Kit, cylinder						
554311 216284	Liner, cylinder Seal, crevice	8	19		1		1
216284	Packing, cylinder liner	8	20 21				
	1	ľ	21		l	Į.	1

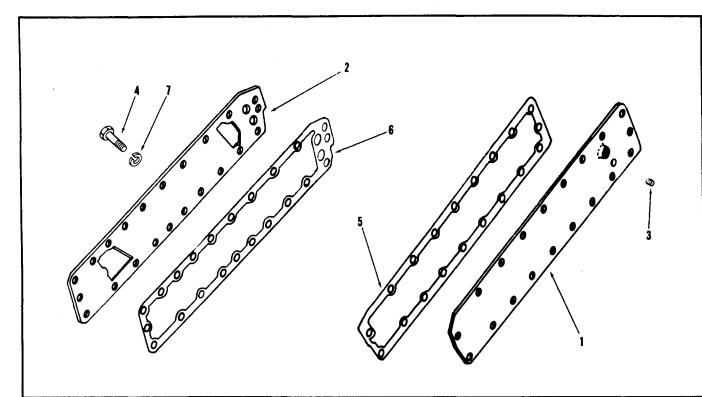


NUMBER         PART NAME         REQ'D. NO.         NUMBER         PART NAME         REQ'D. N.           193557         Cover, water header (L.B.)         1         1         S-109         Capscrew, cover to block (3/8"-16 x 7/8")         30           176596         Cover, water header (R.B.)         1         2         (3/8"-16 x 7/8")         30           68606         Plug, pipe (1/8"-27 N.P.T.F.)         1         3         167800         Gasket, cover to block (L.B.)         1           552129         Gasket, cover to block (R.B.)         1         1	ENGINE APPLICAT	TION AUTOMOTIVE X	B · OFF-HIGHW	AY	C - CONSTRUCTION	ON & INDUSTRIAL X	RIAL X P-INDUSTRIAL POWER		
193557   Cover, water header (L.B.)   1   1   S-109   Capscrew, cover to block (3/8"-16 x 7/8")   30   68606   Plug, pipe (1/8"-27 N.P.T.F.)   1   3   167800   Gasket, cover to block (L.B.)   1   Gasket, cover to block (R.B.)   1   1   1   1   1   1   1   1   1	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NA	AME	NO. REQ'D.	REF. NO.
	193557 C 176596 C	Cover, water header (L.B.) Cover, water header (R.B.)	1	1 2	S-109 167800 552129	Capscrew, cover to (3/8''-16 x 7/8'') Gasket, cover to blo Gasket, cover to blo	block ock (L.B.) ock (R.B.)	30 1 1	4 5 7

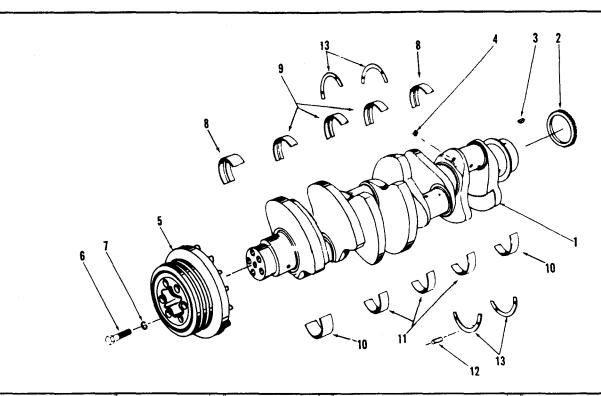


ENGINE APPLICA	ENGINE APPLICATION AUTOMOTIVE X			B · OFF·HIGHW	AY	C - CONSTRUCTION	ON & INDUSTRIAL X P - INDUSTRIA	X P - INDUSTRIAL POWER			
PART NUMBER		PART NAME		NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.		
AR-60473 194840 177086 144131 S-911-B	CRANKSHAFT  Crankshaft, assembly Crankshaft Gear, crankshaft Key, crankshaft gear Plug, pipe (1/8"-27 N.P.T.F.)  DAMPER  Damper, vibration (186377) Capscrew, damper		Crankshaft, assembly Crankshaft Gear, crankshaft Key, crankshaft gear Plug, pipe (1/8"-27 N.P.T			1 1 1 1 4	1 2 3 4	BM-99820 * 182320 182400 182200 182210 148547 173640 173641	MAIN BEARINGS  Bearing set, main (Std.) Bearing, main (Upper 1 and 5) Bearing, main (Upper 2, 3 and 4) Bearing, main (Lower 1 and 5) Bearing, main (Lower 2, 3 and 4) Dowel, half ring Half ring, crankshaft thrust (lower) Half ring, crankshaft thrust (.010")	1 2 3 2 3 2 2 4	8 9 10 11 12 13
AR-73534 S-149-B S-608	Capscr (1/2"-2			1 5 5	5 6 7	173642 553670	Half ring, crankshaft thrust (.020") Half ring, crankshaft thrust (upper) Main bearings may be purchased in .010", .020" and .030" undersize.	4 2	13		

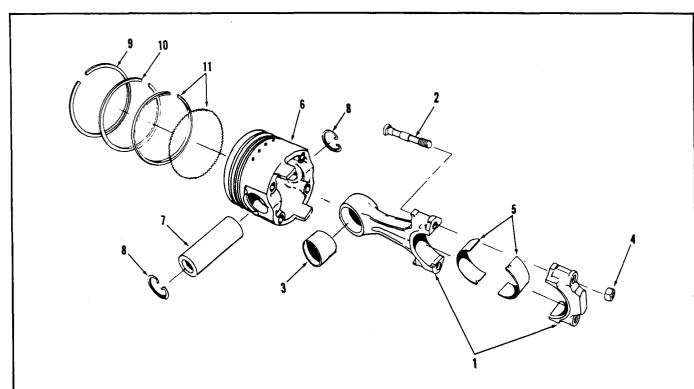


	CATION AUTOMOTIVE X B.OF			B.OFF	HIGHW	AY	C CONSTRUCTION	ON & INDUSTRIAL X P - INDUSTR	- INDUSTRIAL POWER		
PART NUMBER		PART NAME			NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	
	CONN	ECTING ROD		•				PISTON			
BM-78784 551143 551417 152838 157620 *	Bolt, co (7/16" Bushin Nut, co	Rod, connecting (166452) Bolt, connecting rod (7/16"-20 x 3 5/16") Bushing, piston pin Nut, connecting rod bolt (7/16") Bearing, connecting rod (Std.)  Connecting rod bearing shells may be purchased in .010", .020", and			16 8 16 16	1 2 3 4 5	AR-60740 200800 151770 157978	Piston, assembly (Std.) Piston Pin, piston Ring, snap  RINGS	8 8 8 16	6 7 8	
*	be pure	cting rod bearing sl chased in .010'', .0 undersize.	nells 20'',	may and			AR-61500 201650 208990 201645	Ring set, piston (Std.) Ring, compression (Top) Ring, compression Ring, oil	8888	9 10 11	

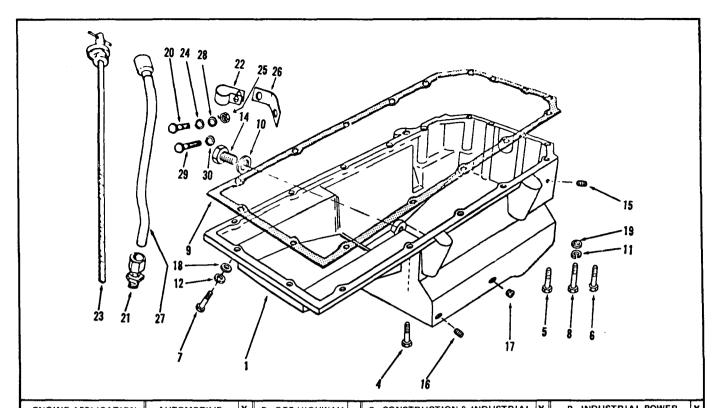


ENGINE APPLIC	ENGINE APPLICATION AUTOMOTIVE X E				AY	C - CONSTRUCTI	ON & INDUSTRIAL X	P · INDUSTR	IAL POWER	X
PART NUMBER		PART NAME	i 	NO. REQ'D.	REF. NO.	PART NUMBER	PART N	IAME	NO. REQ'D.	REF. NO.
554038 S-103-D S-199-A S-124-C S-102 550389 175727 553856 S-604 S-605 553855 555601 69901 161704 S-602 S-626 553854	Capsi Capsi Capsi Gask Gask Lock Lock Plug, Plug, Plug, Wash Wash	oil crew (3/8"-16 x 1 1 crew (3/8"-16 x 4") crew (5/16"-18 x 4" crew (5/16"-18 x 1" crew (5/16"-18 x 5 et, oil pan et, oil drain plug washer (3/8") washer (5/16") oil drain pipe hex	) '') '')	1 8 2 2 2 2 1 10 6 1 1 1 10 6	1 4 5 6 7 8 9 10 12 11 14 16 15 17 18	S-109 3275184 553593 S-604 S-223 172036 171634 S-602 554013	C, P Applications  Capscrew (3/8"-16 × Connector, dipstick Dipstick Lockwasher (3/8") Nut (3/8") Support, dipstick tul Tube, dipstick Washer, plain (13/32) Clip, tube	tube	1 1 1 1 1 1 1	29 21 23 24 25 26 27 30 22
S-188-C 554013 3275184 553606 S-600 168979 168978 146159	Capso Capso Clam Conn Dipst Lock Suppo Tube	crew (1/4"-20 x 1/2 crew (3/8"-16 x 1 1, p, tube lector, dipstick tube lick washer (1/4") ort, dipstick tube , dipstick er, plain	/2'')	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	29 20 22 21 23 24 26 27 28					

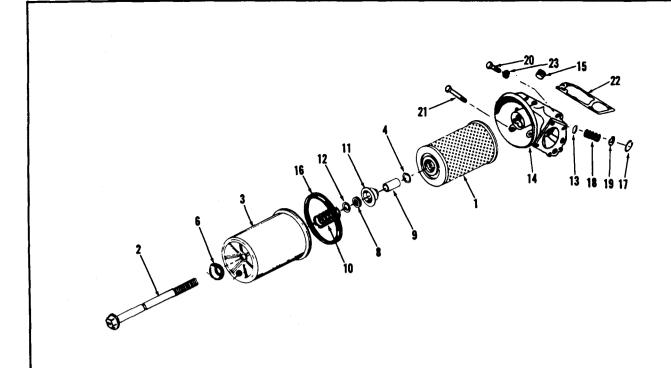


ENGINE APPLIC	NGINE APPLICATION AUTOMOTIVE B-OFF				HIGHW	AY	C - CONSTRUCTI	P · INDUSTRIA	RIAL POWER		
PART NUMBER		PART NAME			NO. REQ'D.	REF. NO.	PART NUMBER	PART N	AME	NO. REQ'D.	REF. NO.
AR-60253 173174 555378 556507 551681 556506 554374 554375 551685 554377 551683 554376 551684 200819 175623 S-908 193302 156676 188476 S-689	Filter, Cartric Shell a Bolt, c Can, fi Circlip Plate Retain Seal, b Spacer Spring Suppo Washer Disc, b Head, Plug, p Ring, s	ssembly, filter center	TER		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 2346 8910 112 13 14 15 167 178 19	108707 S-126 176924 S-604	MOUNTING PART Capscrew (3/8"-16 Capscrew (3/8"-16 Gasket Lockwasher	× 1 1/2")	5 2 1 7	20 21 22 23

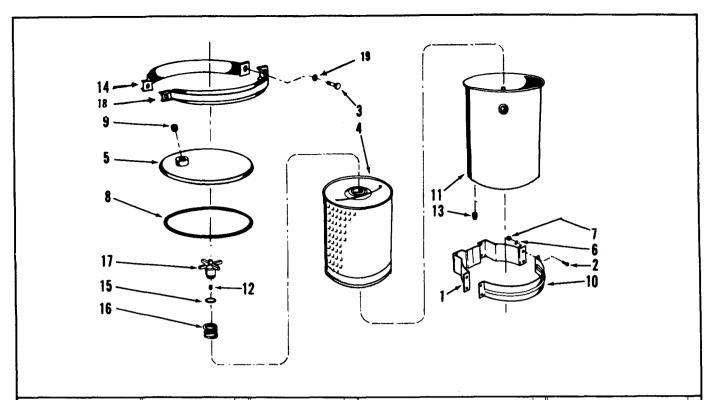


ENGINE APPLIC	ATION	AUTOMOTIVE		B - OFF-I	HIGHW	AY	C · CONSTRUCTIO	N & INDUSTRIAL	P - INDU	JSTRIAL POW	ER
PART NUMBER		PART NAME		NO. REQ'D.	REF. NO.	PART NUMBER	PART	NAME	NO. REQ	REF. D. NO.	
159707 145664 70188 70449 256839 3300946 159667 70189 70194 70299 164159 S-908 145665 257221 157151 131911 139090 257218 116029 150037 257216	Filtri Filter, Brack Capsc Capsc Cartri Coupl Cover Lockv Nut, r "O" r Suppc "O" r Spring	, lubricating oil by- et, filter rew, coupling half rew dge (LF-500) ling, half with nuts ling, half washer, bracket washer, coupling ha mounting bracket ing, cover cover , mounting filter e plug (No. 6)	pass		128211182811211111111	1 2 3 4 14 18 5 6 19 7 8 9 10 11 12 3 15 16 17					

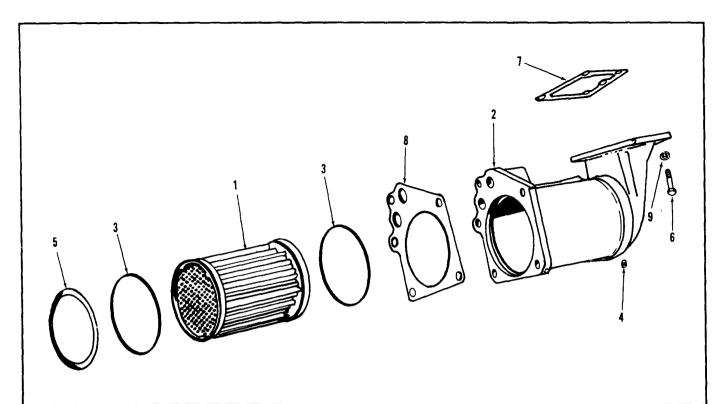


ENGINE APPLI	CATION AUTOMOTIVE X B-OF	F-HIGHW	AY	C - CONSTRUCT	ION & INDUSTRIAL X P - INDUS	TRIAL POWER X		
PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NAME NO. REF. REQ'D. NO.		
	LUBRICATING OIL COOLER				MOUNTING PARTS	,		
BM-91604 110848 166401 148293 110827 110827	Cooler, lubricating oil Element Housing "O" ring Plug, pipe Retainer, element	1 1 1 2 1 1	12345	S-103-D 165153 166407 S-604	MOUNTING PARTS  Capscrew, mounting Gasket, housing to block Gasket, cooler to filter Lockwasher	9 6 7 8 9		

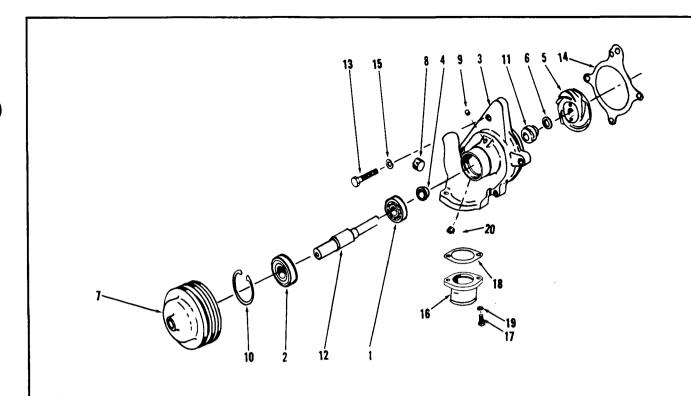


ENGINE APPLIC	NE APPLICATION AUTOMOTIVE X B.OF				IWA	<b>/</b>	C - CONSTRUCTION & INDUSTRIAL X P - INDUST				USTRIA	RIAL POWER		
PART NUMBER		PART NAME		NO. REQ	D. I	REF. NO.	PART NUMBER	P	PART NA	AME		NO. REQ'D.	REF. NO.	
AR-61788 552335 166596 555260 107776 554438 AR-12732 553093 S-995 S-915-A 160586 553090 217632 108707 169042 S-604 178685	Pump Bearin Bearin Body, Flinge Impel Seat + Pulley, Plug, Ring, Seal, v Shaft, Plug, MOU Capsc (3 Gaske Locky	r, water pump pipe (3/4") pipe retaining water pump , water pump		k 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2		1 2 3 4 5 6 7 8 20 10 11 11 12 9 13 14 15	AR-61392 552335 177596 107776 169042 554438 200509 AR-12732 68270 S-112 9221 S-604	WATER PUM Kit, water pum Bearing, ball Bearing, ball Flinger, water Gasket, water Impeller, water Seal + seat  WATER INLE Connection, w Capscrew, con Gasket, connect Lockwasher	pump pump pump r pump er pump	ir NNECTI		1 1 1 1 1 1 1 2 1 2	1 2 4 14 5 6 11 16 17 18 19	

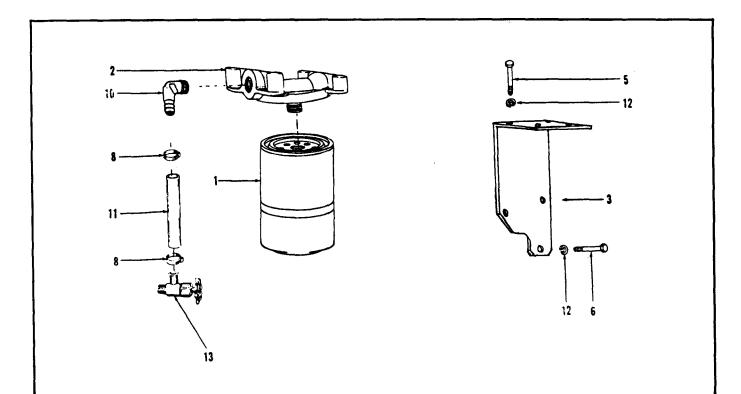


ENGINE APPLIC	NGINE APPLICATION AUTOMOTIVE X B-OFF				-HIGHW	AY	C - CONSTRUCTI	ON & INDUSTRIAL X	P - INDUSTRIA	LPOWER	3 X
PART NUMBER		PART NAME				REF. NO.	PART NUMBER	PART NA	AME	NO. REQ'D.	REF. NO.
258859 299080 204163 299082	Resist Resist Head Resist	cor, corrosion assembler, corrosion (WF20) cor, corrosion (WF20) cor, corrosion (WF20) PI	bly 010:		1 1 1	1 2					
556561 S-103-D S-111 179903 550692 179904 179913 179914 3275037 S-604 S-605 179901 68368-B	Capsc Capsc Conne Clip Hose Hose Space Locky Washe	rew ector clamp r washer er, lock , water shut-off	r		1 5 3 2 2 4 1 1 2 5 3 2 2 2	3 5 6 10 8 11 12 13					

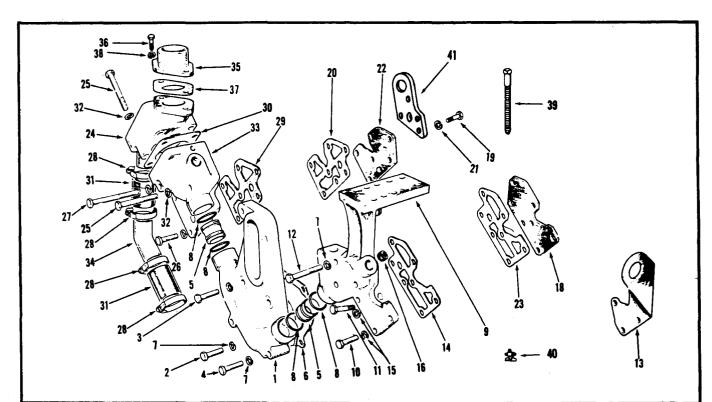


ENGINE APPLIC	ATION AUTOMOTIVE X B-OFF-	C-CONSTRUCTION & INDUSTRIAL X P-INDUSTRIAL POWER X					
PART NUMBER	PART NAME	NO. REQ'D	REF. NO.	PART NUMBER		IO. REQ'D	REF.
	WATER CROSSOVER						
556493	Crossover, water (Cam cover)	T I		S-604	Lockwasher (3/8")	7	21
ļ	Fan bracket	1	1	S-1005-A	Elbow, (Auto Application)	1	
108707	Capscrew, cover to block	2	2		i	Ī	l
S-103-D	Capscrew, cover to block	2	3		LEFT BANK REAR	1	l
S-104	Capscrew, cover to block	2	4	152398	Plate, cylinder head to cover	1	18
555195	Tube, water transfer	2	5	S-109	Capscrew (3/8"-16 x 7/8")	7	
550164	Gasket, cover	1	6	157290	Gasket, cylinder head cover	1	23
S-604	Lockwasher, cover to block	6	7	S-604	Lockwasher (3/8")	7	21
555198	Bush, sealing	4	8			l	
69901	Plug, pipe (1/8")	1			THERMOSTAT HOUSING	l	
182706	Screw, fan adjusting	1	39	555256	Housing, thermostat	1	24
!	LEFT BANK FRONT	1		S-163	Capscrew (3/8"-16 x 3¼")	5	25
		1		S-103-D	Capscrew (3/8"-16 x 1¼")	5	26
555189	Cover, cylinder head, alternator			S-199-A	Capscrew (3/8"-16 x 4")	1	27
	support	1	9	108707	Capscrew (3/8"-16 x 1½")	4	1
168919	Bracket, engine lifting (C & Auto)	1	13	550547	Clamps, hose	4	28
556480	Bracket, fuel filter (C only)	1		157290	Gasket, thermostat support	1	29
555702	Bolt, shouldered	1	l	553916	Gasket, thermostat housing to support	1	30
550830 6 103 B	Bushing, rubber	2		553414	Hose	2	31
S-103-D	Capscrew, cover, lifting bracket	1	10	S-604	Lockwasher (3/8")	11	32
108707	Capscrew	3	11	S-915-A	Plug, pipe (½" N.P.T.F.) (C & P)	1 1	1
S-126 S-962-E	Capscrew, cover to cylinder head	3	12	186780 555199	Seal Support, thermostat housing	1	33
157290	Drain, tap Gasket, cylinder head cover	1 1	40	204586	Thermostat	1	33
S-604	Lockwasher (3/8")	1 7	14 15	553457	Tube, water by-pass	l i	34
554500	Plate, alternator steadying	1 1	15	S-908	Plug, pipe	3	34
S-915-A	Plug, pipe (½")	2	16	69901	Plug, hex	2	ļ
556045	Spacer, alternator support	1	16	09901	riug, fiex	^	1
S-670	Washer, flat (17/32)	1 1			CONNECTION WATER OUTLET	ĺ	ł
650864	Bracket lifting (P. Application)		41	FFF040	Comment of the Charles (Alice Ch	Ι.	~
69901	Plug, pipe (1/8")	1 1	4'	555348	Connection, water outlet (Auto,C) Connection, water outlet (P)	1 1	35
, 55551	i Tiag, pipe (170 7	1 ' 1		550494 S-112	Connection, water outlet (r) Capscrew (3/8"-16 x 1")	2	200
i .				9221	Gasket	1 1	36 37
	RIGHT BANK REAR			9221 S-604	Lockwasher (3/8'')	2	38
553513	Plate cylinder head cover (Auto)	1 1	22	J-004	LUCKWasilei (3/0 /	-	1 30
152398	Plate, cylinder head cover (C & P)	1 1	18		1		l
168919	Bracket, engine lifting (C & Auto				1	l	1
i	& P)	] 1	13				
S-109	Capscrew (3/8''-16 x 7/8'')	7	19			Į	
157290	Gasket	1 1	20		1	i i	1

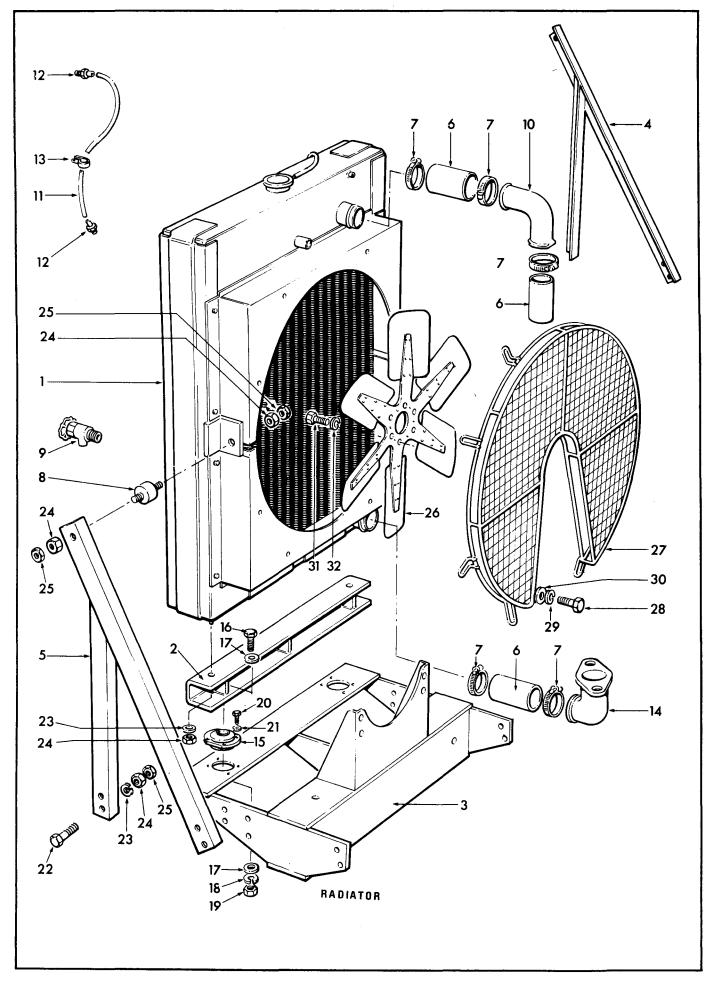

UMBER	PART NAME	NO. REQ'D	REF.	PART NUMBER	PART NAME	NO. REQ'D	RE
1		T.C.D	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	NGMBER			T.
	RADIATOR	İ			INSTRUMENT PANEL		
				555046	Instrument panel	1	
276048	Radiator	1	1	701214	Ammeter	1	1
	MOUNTING PARTS			554646	Bracket, instrument panel	1	Ì
				556393	Back plate	1	
276062	Spacer, radiator	1	2	553653 650427	Block and terminal Case, instrument	1 1	l
53640	Support, front Radiator stay (RB)	1 1	3	S-159-B	Case, instrument	4	l
54591 54590	Radiator stay (LB)	1	5	S-167-A	Capscrew	2	i
9972	Hose	3	6	S-115-C	Capscrew	2	1
3828-D	Clamp	6	7	68138	Connection	1	ı
276085	Bush, radiator	2	8	S-902	Coupling, pipe	1	1
79901	Drain tap	1	9	556347	Gauge, water temperature	1 1	ı
50385	Pipe	1 1	10	650651 650525	Gauge, pressure Hourmeter	1	ı
S0502660SS 16935	Hose Adapter	1 2	11 12	650442	Mounting	4	ı
7949	Clip	1	13	S-270	Nut	4	ł
8270	Connection water	1	14	S-224	Nut	2	1
50387	Vibration isolator	2	15	S-251	Nut	4	1
-144	Capscrew	2	16	S-256	Nut	2	
-658	Washer	4	17	118367	Plate, indicator	1 1	
-603	Lockwasher	2	18	162843 149226	Regulator (12 volt) Relay	1 1	
-201	Nut	2	19	S-1334	Screw, machine	4	ı
-115-C	Capscrew	8	20	131678	Screw, machine	2	1
-600	Lockwasher	8	21	S-600	Spring, lockwasher	8	1
-194	Capscrew	8	22	114850	Spacer	2	ı
-604	Lockwasher	10	23	66501	Switch, magnetic	1	l
G-205	Nut	10	24	102057	Start switch	1 4	1
5-276	Nut	8	25	70427 150348	Washer Shock mounting assembly	1 1	1
			}	650529	Support, throttle cable	li	1
			ŀ	S-117	Capscrew	2	1
	FAN AND FAN GUARD			554013	Clip	1	ı
51070	Fan	1	26	AS0404800SS	Hose	1	1
50406	Fan guard	1 1	27	69274	Elbow	1	ı
-114	Capscrew	8	28	118367 125740	Start switch indicator plate	1 1	1
-600	Lockwasher	8	29	S-199-A	Clamp Capscrew	6	1
46159	Washer	8	30	S-109	Capscrew	2	
-199-A	Capscrew	6	31	S-604	Lockwasher	10	1
-604	Lockwasher	6	32	S-223	Nut	2	
					RESTRICTOR INDICATOR		
				173214	Indicator	1	1
Į		1		S-168-C 650817	Capscrew Flange	2	1
ŀ				650819	Insert	l i	1
ŀ				S-224	Nut	2	
				555663	Nylon, tube	1	1
1		ì		S-600	Spring, lockwasher	2	
		( i		650818 550465	Tap Tube clip assembly	1 2	1
				330403	,	_	
				555505	WIRING HARNESS		
i				555595 194076	Wiring harness Wiring diagram	1 1	
				70 7070	Thing diagram		ļ
1							l

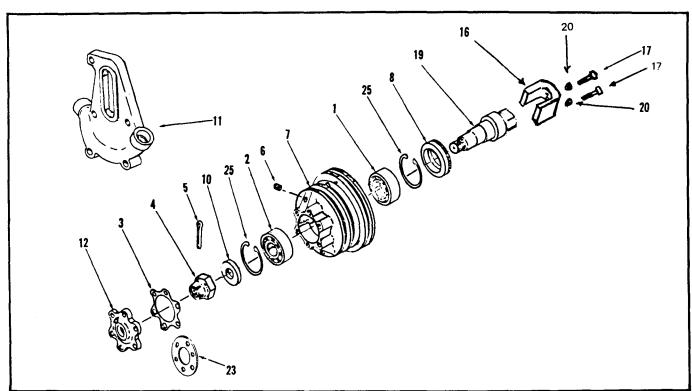


ENGINE APPLIC	ATION	AUTOMOTIVE	х	B · OFF-	HIGHW	AY	C - CONSTRUCTION	ON & INDUSTRIAL X	P - INDUSTRIAL	POWER	₹ X
PART NUMBER		PART NAME			NO. REQ'D	REF. NO.	PART NUMBER	PART	JAME	NO. REQ'D.	REF. NO.
AR-62215 553712 553713 556457 553817 S-507 555932	Hub Bea Bea Gas Loc Pin,	GH FAN MOUNT o, fan ring, tapered roller ring, tapered roller ket ket cknut, slotted hex cotter ley fan hub			1 1 1 1 1 1 1	1 2 3 4 5		•			
69901 553714 200307 554214 551498 153411 556493 556452 182707 554316 556454	Plug Reta Seal Sha Was Cov N Pilo Cla Cap	ey fan Hub g, hex ainer, fan hub l, oil ft, fan hub her, clamp her, clamp er, cam/bracket, Far water t fan (C & Auto) np, fan hub screw t (P. only)	n/cr	ossover	1 1 2 1 1 2 1	10 20 11 12 16 17					
*178685 556865	Belt Spac	UNTING PARTS cer, fan (P) listed on Page 17			2	23					
	•										

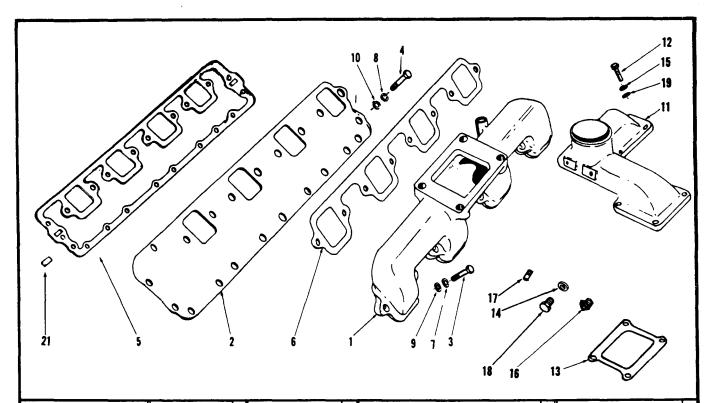


ENGINE APPLI	CATION AUTOMOTIVE X B-OFF-I	HIGHWA	AY	C-CONSTRUCTI	ON & INDUSTRIAL X P-INDUSTRIA	L POWE	RX
PART NUMBER	PART NAME	NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
168067 159267	AIR INLET MANIFOLD  Manifold, air intake Plate, push rod cover  MOUNTING PARTS	2 2	1 2	168076	CONNECTION, AIR CROSSOVER Connection, air crossover MOUNTING PARTS	1	11
S-102 S-103-D S-110 156996 S-604 S-605 S-602 S0626 AR62294 555960 556371	Capscrew, plate to block Capscrew, manifold to plate Capscrew, plate to block Gasket, intake manifold Lockwasher, manifold Lockwasher, plate Washer, plain, manifold Washer, plain, manifold Gasket, set Gasket, push tube cover Insert, gasket	2 16 24 2 16 26 16 26 26 2 2	3 4 6 7 8 9 10 5 21	S-103-D 168069 66292 S-604 69901 S-932-B 66030 S-602	Auto. Application  Capscrew, connection Gasket, connection Gasket, plug Lockwasher Plug, hex Nipple Plug Washer, plain  C.P. APPLICATIONS Same as above except:	8 2 2 8 1 1 2 8	12 13 14 15 16 17 18.
				<b>OMIT</b> : S-932-B	Nipple	1	17
				<b>ADD</b> : S-995	Plug, pipe	1	17

### NOTES

		 			 _		
-		 		 	 	 	
		 			 · · · · · · · · · · · · · · · · · · ·	 	
-	<u> </u>				 		
		 ····		 	 	 	
		 		 		 	-
-		 		 	 	 	
		 	<del>-</del> · · · · ·	 			
		 	<del>-</del>	 			
		 	<del>-</del> .	 			
					·		

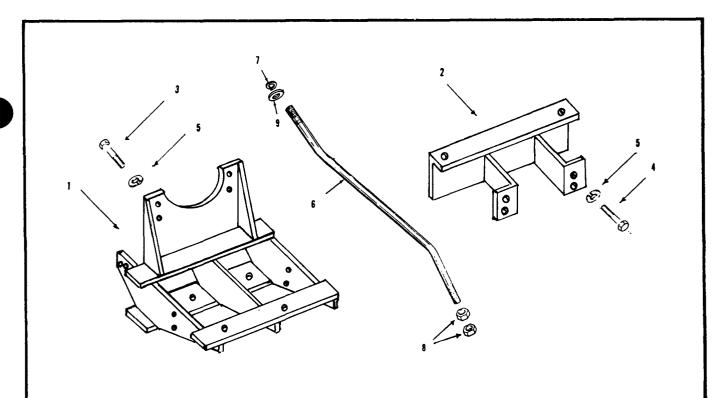


NGINE APPLICA	ATION AUTOMOTIVE	B-OFF-HIGHWA	AY	C-CONSTRUCTION	ON & INDUSTRIAL	P-INDUSTRIAL PO	WER )
PART NUMBER	PART NAME	NO. REQ'D	REF. NO.	PART NUMBER	PART NA	ME REQ	REI D NO
	CROSSMEMBER				TIE ROD		
* 553640 553627	Support, front Support, rear	1	2	AR-61005 554086	Rod, tie Rod, tie	1	
į	MOUNTING PARTS			\$-603	Lockwasher	8	3
106289 S-145	Capscrew (front) Capscrew (rear)	4 4	3 4	S-201 S-658	Nut Washer, plain	8	
S-608	Lockwasher	8	5	'			
*	Note: Also listed on pag 5 & 21	ges					
							ŀ
						Į	
						į	
						1	
,							
1						į	

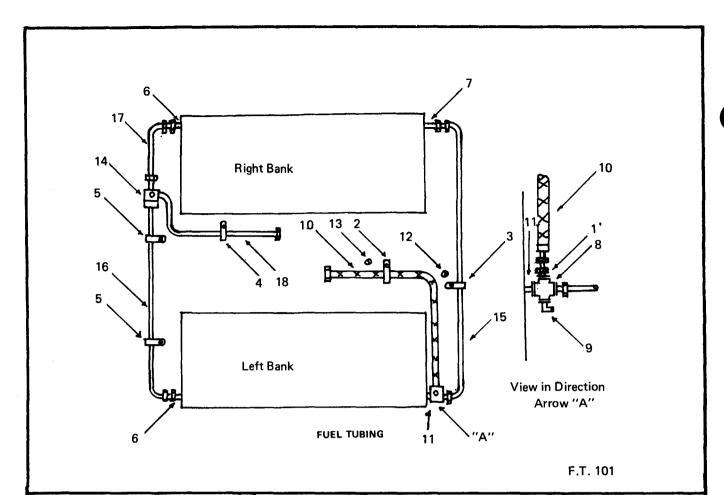


PART NUMBER	PART NAME	NO.	REF.		PART NAME	NO. RE	
NUMBER		REQ'D	NO.	NUMBER		KEU D	NO
l l	FUEL TUBING - FT 101	- [	1			1	
112105	Adapter, cross piece to pump	1	1			l	i
554013	Clip, tube	1	2			1	1
555079	Clip, hose	1	3	J J			1
551394	Clip, tube	1	4	· .			1
556539	Clip, hose	2	5			l	l
S-1003-1	Connector	2	6			1	1
553057	Connector	1	7			1	
554011	Cross pipe	1	8	1		i i	ı
43765-A	Elbow, drain	1 1	9				ŀ
AS0403000SS	Hose, flex (Auto Only)	1	10	1		J	•
AS0402700SS	Hose, flex (C & P only)	] 1	10			1	1
9187	Nipple, pipe (¼" N.P.T.F. x	l l	l				
	1 1/16′′)	1 1	11		,	1	
32087	Spacer	1	12	[			1
65297	Spacer	1	13			1	1
S-1006-1	"T" piece	1	14				l
54009	Tube fuel	1	15	l l		}	
56236	Tube, fuel	1	16	ł		1	
53308	Tube, fuel	1	17			1	1
554784	Tube, fuel (Auto Only)	1	18			1	1
54349	Tube, fuel (C Only)	<b>1</b> 1	18	[			1
56902	Tube, fuel (P Only)	1		1			1
		1					١
- 1		1	Į į	l l		1	1
						ì	
		1					l
J		J					
						ſ	
Ţ							1
[							•
- 1		1	ľ	1		1	l
1							ı
1				1		1	1
			•				1

PARTS INDENTED ARE INCLUDED IN THE PART UNDER WHICH THEY ARE INDENTED

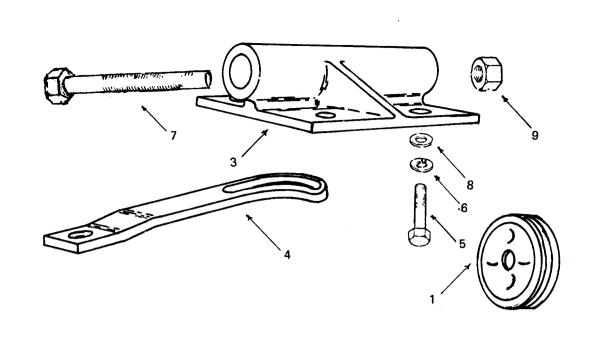

ENGINE APPLICAT	ION AUTOMOTIVE B-OFF-H	IIGHWA	AY	C-CONSTRUCTION & INDUSTRIAL X P-INDUSTRIAL POWER					
PART NUMBER	PART NAME	NO. REQ'D	REF.	PART NUMBER	PART NAME	NO. REI REQ'D NO			
210127 AR-02336 AR-02337 554999 191818	ELECTRICAL EQUIPMENT C & P ONLY  Alternator Delco 12V 58 amp Connector, regulator (CI) Connector, regulator (CI) Pulley alternator (IP.CI) Regulator (CI)  MOUNTING PARTS  Bracket, alternator	1 1 1 1 1 1 1 1	1	554560 S-106 S-608	STARTING MOTOR  IP Application  Motor, starting Capscrew, motor (½" - 13 x 1¾") Lockwasher, motor (½")  CI Applications  Same as above except:	1 3 3			
556126 S-112 S-604 S-103-D 553604 S-158-C 554194 555500 S-145 554194 178447	Link alternator Capscrew (3/8"-16 x 1") Lockwasher (3/8") Capscrew,alt. bracket (3/8"-16 x 1"/4") Washer (3/8") hardened steel Capscrew (½"-13 x 6¾") Washer (17/32") hardened steel Nut huglock Capscrew Washer (17/32") hardened steel Belt (CI, IP)	1 4 4	3456 789 8	<b>ADD</b> : 114123	Gasket, motor	1			

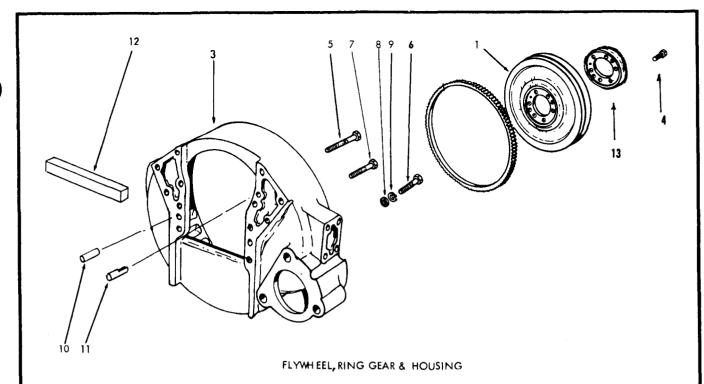

PART NUMBER		NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF NO.
BM-99705 185539 AR-60571	STANDARD FLYWHEEL, RING GEAR & HOUSING Flywheel & ring gear assembly (IP & CI) Flywheel (IP, CI) Flywheel & ring gear assy. (Auto)	1 1 1	1	108601 S-106 106289	MOUNTING PARTS  IP Application  Capscrew  Capscrew  Capscrew  Lockwasher (½")	2 4 9 13	5 7 9
553343 168643 172647 551462	Flywheel (Auto only) Flywheel housing (Auto) (Aluminium Flywheel housing (C) (Cast iron) Flywheel housing (IP) (Cast iron)  MOUNTING PARTS  Auto Application	1 1 1	3	S-608 69562 102957 556346 S-187 554316 S-670	Master dowel Pin diamond dowel Dust seal Capscrew Capscrew flywheel mounting Washer Capscrew	1 1 1 4 8 13	10 11 12 6 4 8
108601 S-106 106289 S-670 S-608 69562 102957 556346 213104 555794 S-187 S-136	Capscrew Capscrew Capscrew Washer (17/32'') Lockwasher (½'') Master dowel Pin diamond dowel Dust seal Capscrew flywheel mounting Ring flywheel mounting Capscrew 6" Capscrew 3½"	2 4 9 13 13 1 1 1 8 1 4 2	5 7 8 9 10 11 12 4 13	S-608 69753 556346 145601 3275255 S-670 S-187	MOUNTING PARTS  C Application  Capscrew flywheel mounting Capscrew Lockwasher (½") Master dowel Dust seal "O" ring Ring rect, sealing Lockwasher Capscrew Capscrew	8 4 7 13 2 1 1 1 13 4 2	4 5 7 9 10 12
designed different Distribut	neels, ring gears and flywheel housings ha to adapt the Cummins diesel to hund installations. For this reason your Co or will record your flywheel, ring gear a jusing part numbers in the front of this	reds of umming and fly	f 5	AR-62505 AR-62500 BM-68356	Capscrew  GASKET SETS  Gasket set, engine Gasket set, cylinder head Gasket set, fuel pump	1 1 4	