

Parts Ordering for: V-555 & VT-555 Series

Genuine Cummins Parts and service facilities are worldwide. There are more than 3500 Cummins Sales and Service locations in the principal cities of the United States and Canada, and more than 500 Sales and Service locations situated elsewhere throughout the free world. Each distribution outlet is thoroughly equipped with technical data, factory-trained mechanics, modern equipment and a full, adequate stock of Genuine Cummins Parts.

For quicker and better service, your parts requirements should be ordered from your nearest Cummins Distributor or Dealer. At any of the locations prompt, intelligent, courteous service is a basic trademark. Each is ready and eager to help in every possible way through personal contact or through the mail — at your convenience.

The satisfactory ordering and receiving of parts by the purchaser is greatly dependent upon the proper use of available information. In order that all avoidable errors may be eliminated, the following instructions are offered as the purchaser's guide:

Write your order clearly, using a typewriter if possible.

Be sure to list the correct part number. If in doubt as to the correct part number, state the model and serial number of the engine on which the part is to be used. Part numbers are usually located in various places on the part itself.

When possible, arrange your purchase order in part number numerical sequence.

Always specify shipping instructions — "Best Way" is satisfactory if you have no preference.

State your company name and shipping address clearly.

Genuine Cummins Parts mean QUALITY! They're designed and engineered to fit best in your Cummins Diesel. Each part is made of the highest quality material — on the most accurate of machines — by the top craftsmen of the trade.

You can be sure a Genuine Cummins Part will fit better — do the job better — lessen the chances of costly breakdown. When you buy replacement parts, buy quality. Buy Genuine Cummins Parts!

CUSTOMER SERVICE INFORMATION

This Parts Catalog contains parts information for the V-555 and VT-555 Series.

Cummins Distributor____

Part numbers appearing in () are for identification purposes only and should not be used when ordering service replacement parts.


The form below is provided for your convenience and when properly filled out, will allow proper identification of your unit and the normal maintenance items. Parts information errors that could cause extended down time could be avoided if the information on this is referred to when ordering parts from your Cummins Distributor or Dealer.

ALWAYS SPECIFY ENGINE MODEL AND SERIAL NUMBER WHEN ORDERING PARTS FROM THIS CATALOG


Engir	ne Serial No	
Mode	l	Chassis No
	Inje	ector No.
Belt, Water Pump		Belt, Gen
Fu	ll Flow Lub. Fi	lter
By-Pa	ss Lub. Filter	
	·	
	Mode Belt, Water Pump Fu By-Pa	


TABLE OF CONTENTS

Air Compressor	Gear Housing and Cover
Alternator	Injector
Breather	Intake Manifold (V-555)22
Camshaft and Cover	Intake Manifold (VT-555)
Camshaft Bushings	Lubricating Oil By-Pass Filter
Connecting Rod	Lubricating Oil Cooler
Crankshaft	Lubricating Oil Filter
Cylinder Block	Lubricating Oil Pump14
Cylinder Head	Main Bearing Shells
Cylinder Head Cover	Oil Pan
Cylinder Kit	Pistons
Cylinder Liner	Piston Rings4
Dipstick and Tube	Push Rods
Electrical Equipment	Rocker Levers
Exhaust Manifold (V-555)	Shutdown Valve
Exhaust Manifold (VT-555)	Starting Motor
Fan Hub	Tappets
Flywheel Housing	Thermostat and Housing
Flywheel and Ring Gear	Turbocharger
Front Cover	Turbocharger Connections
Front Engine Support	Turbocharger Heat Shield
Front Water Header Cover	Turbocharger Repair Kit31
Fuel Filter	Vibration Damper
Fuel Gear Pump	Water Filter
Fuel Pump Damper	Water Header Cover
Fuel Pump Drive	Water Pump and Pulley
Fuel Tubing	Water Pump Repair Kit
Gasket Sats	

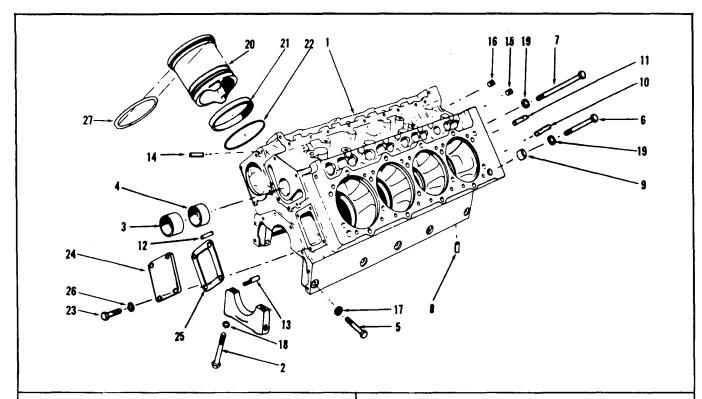


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
AR-61138 180676 554003 554004 188395 553444 553445 148547 100973 69562 102957 70645 68568 153807 161825 217632 188394 553451 553451	CYLINDER BLOCK All Models Block, cylinder (202322) Bolt, main bearing cap Bushing, camshaft (No. 1 and 5 position) Bushing, camshaft (No. 2, 3 and 4 position) Capscrew, main bearing side locking Capscrew, cylinder head (short) Capscrew, cylinder head (long) Dowel, rear main bearing cap Dowel ring, cylinder head to block Dowel, gear housing to block (Master) Dowel, front cover to block (Master) Dowel, front cover to block (Diamond) Dowel, gear housing to block (Diamond) Plug, pipe Plug, pipe Washer, main bearing side locking Washer, main bearing cap Washer, cylinder head capscrew	1 10 2 3 10 26 10 2 4 2 2 1 1 1 2 6 10 10 36	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	AR-61139 202460 216284 216283 S-112 551455 167802 S-604 171786 171788 171789 171790 193010 193013 193012 193011 193009	MOUNTING PARTS Kit, cylinder liner Liner, cylinder Packing, cylinder liner Seal, crevice FRONT WATER HEADER COVER All Models Capscrew, water header cover Cover, water header cover Lockwasher OVERSIZE FOR SERVICE All Models Shim, liner (.007") Shim, liner (.012") Shim, liner (.012") Shim, liner (0.012") Shim, liner (0.014") Shim, liner (0.21") SEMI-FINISHED MAIN BEARING CAPS All Models Cap, main bearing (front) Cap, main bearing (No. 2) Cap, main bearing (No. 4) Cap, main bearing (rear)	8 8 8 8 8 4 1 1 4 A/R A/R A/R A/R 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	27 27

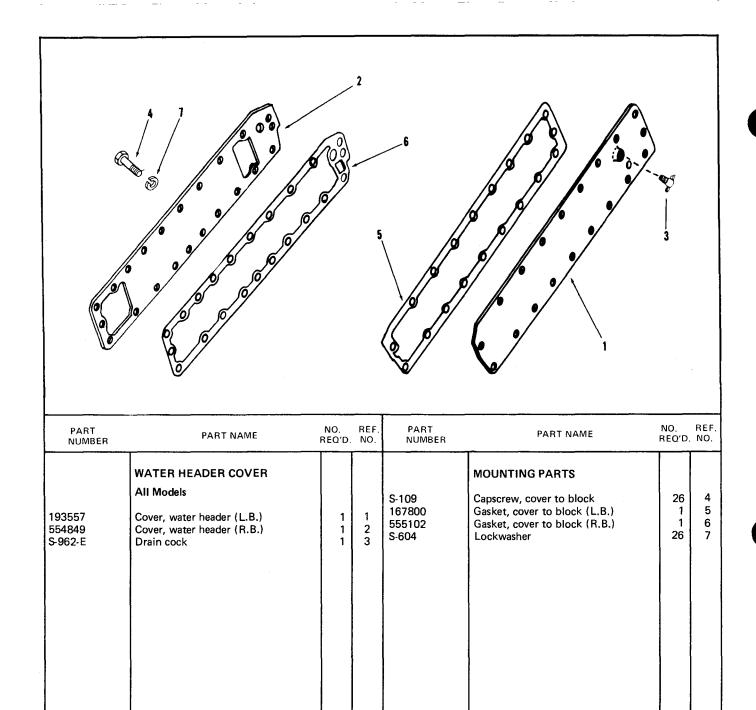


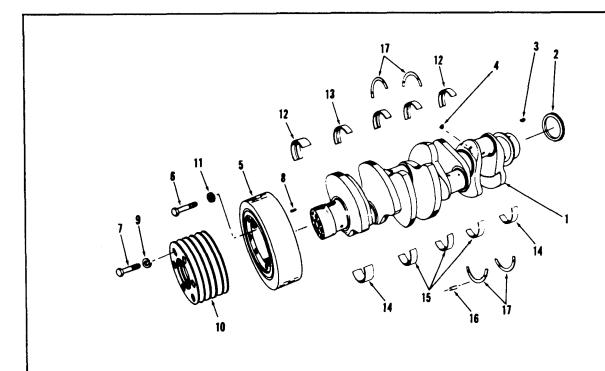


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF.
AR-61102 201950 177086 144131 217632	CRANKSHAFT All Models Crankshaft assembly Crankshaft Gear, crankshaft Key, crankshaft gear Plug, pipe DAMPER	1 1 1 1 4	1 2 3 4	AR-62184 * 214420 214440 214430 214450 173640 553670 148547	MAIN BEARINGS All Models Bearing set, main std. Bearing main (upper 1 and 5) Bearing main (upper 2, 3 and 4) Bearing main (lower 1 and 5) Bearing main (lower 1 and 5) Bearing main (lower 2, 3 and 4) Ring, half thrust (lower) Ring, half thrust (upper) Dowel, half thrust	1 2 3 2 2 2 2 2	12 13 14 15 17 17
AR-73725 195918 S-136 555965 S-608 202294 153411	All Models Damper, vibration (554025) Capscrew Capscrew Dowel Lockwasher Pulley, crankshaft Washer, hardened	1 8 6 1 6 1 8	5 6 7 8 9 10 11		Main bearings may be purchased in .010", .020" and .030" undersize.		

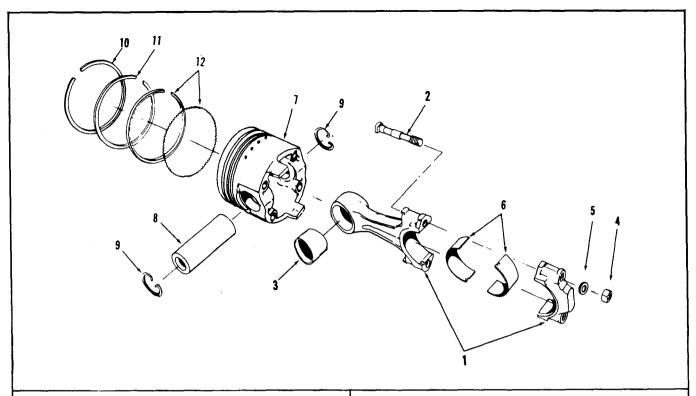


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
AR-61914 554944 555421 209869 209868 556350 *	CONNECTING ROD V-555 Rod, connecting (554335) Bolt, connecting rod Bushing, piston pin Nut, connecting rod Washer, connecting rod Bearing, connecting rod (std.)	8 16 8 16 16	1 2 3 4 5 6	3275431 3275949 554785 S-16256	PISTON (Cont'd.) VT-555 Piston, assembly Piston Piston, pin Ring, snap	8 8 8 12	7 8 9
AR-61919 554944 555420 209869 209868 556350 *	VT-555 Rod, connecting (554336) Bolt, connecting rod Bushing, piston pin Nut, connecting rod Washer, connecting rod Bearing, connecting rod (std.) Connecting rod bearing shells may be purchased in 0.010", 0.020", or	8 16 8 16 16 16	1 2 3 4 5 6	AR-61500 201650 208990 201645	All Models Ring set, piston (std.) Ring, piston top Ring, compression Ring, oil CYLINDER KIT V-555	8 8 8 8	10 11 12
AR-62440 556650 554785 S-16256	PISTON V-555 Piston, assembly Piston Pin, piston Ring, snap	8 8 8 16	7 8 9	AR-62790 AR-61139 AR-62240 AR-61500 3275952 AR-61139 3275431 AR-61500	Kit, cylinder Kit, cylinder liner Piston assembly Ring, set VT-555 Kit, cylinder Kit, cylinder liner Piston assembly Ring set	8 8 8 8 8	

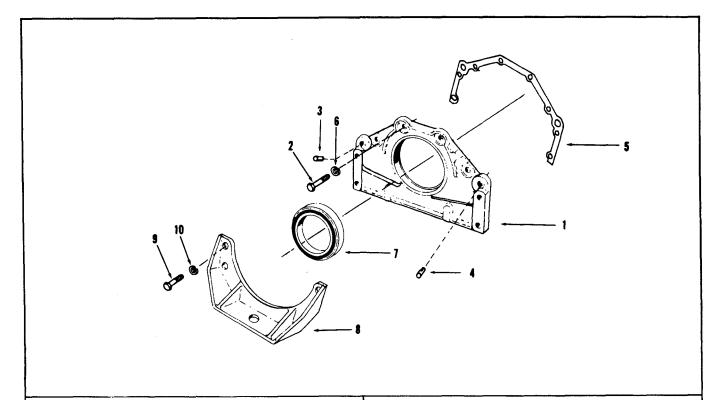


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
	FRONT COVER All Models				FRONT ENGINE SUPPORT All Models		
203117 S-112 70645	Cover, front Capscrew, front cover Dowel (Master)	1 2 1	1 2 3	188397	Support, front	1	8
68568 203062 S-604 3010461 3010465 556411	Dowel (Diamond) Gasket, front cover Lockwasher Seal, crankshaft * Repair sleeve Capscrew, socket head	1 1 2 1 1 2	4 5 6 7	106289 S-608	MOUNTING PARTS Capscrew, front support Lockwasher	4	9 10
	* Seal installation tool						

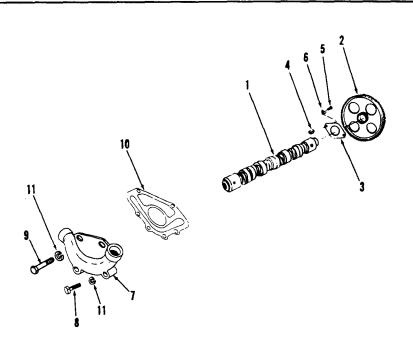


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
212260 201050 187649 167305 200717	CAMSHAFT Camshaft, VT-555 Camshaft, V-555 Gear, camshaft Plate, thrust Key, camshaft (std.)	1 1 1 1	1 2 3 4	555190 * S-104 S-103-D 550164 S-604	CAMSHAFT COVER All Models Cover, camshaft Capscrew Capscrew Gasket Lockwasher	1 2 4 1 6	7 8 9 10 11
S-107 68908-A	Capscrew thrust bearing Lockplate, thrust bearing CAMSHAFT KEYS FOR RETARDING AND ADVANCING TIMING	2 2	5 6	*	Note: Also listed on Page 20.		
200715 200716 200718 200719 200721 S-313	Key, camshaft 0.006" off set Key, camshaft 0.012" off set Key, camshaft 0.024" off set Key, camshaft 0.030" off set Key, camshaft 0.036" off set Key, camshaft						

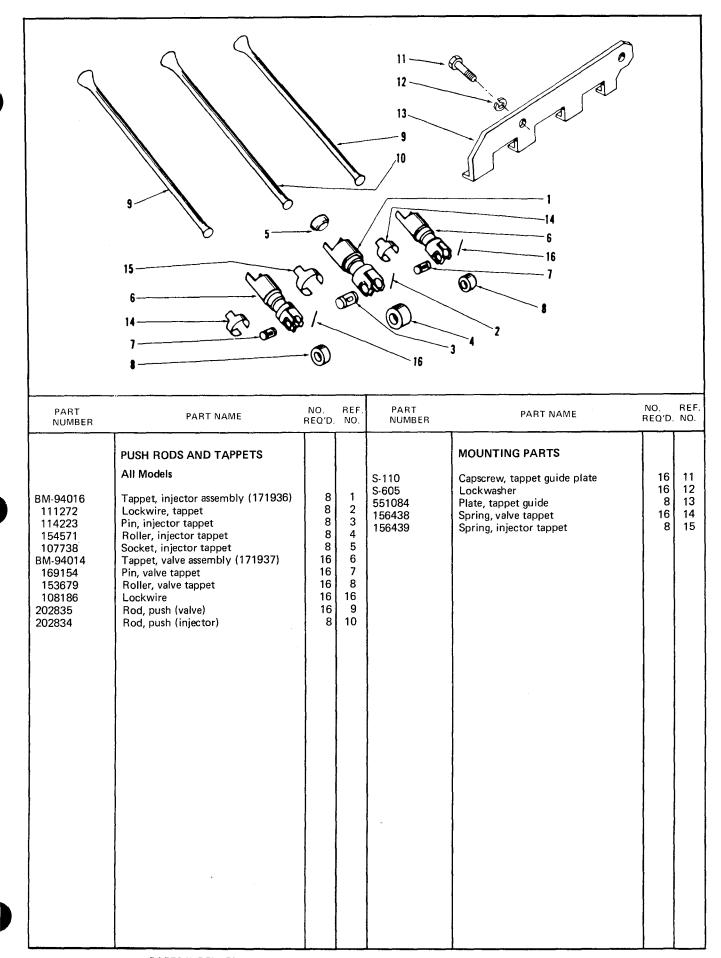


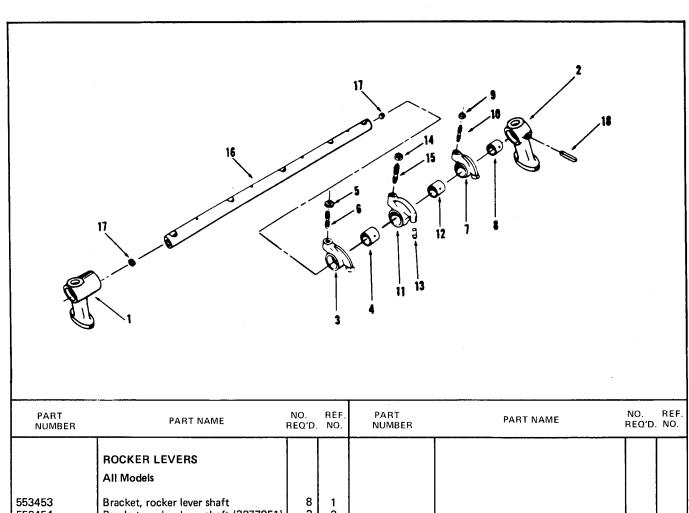


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
	ROCKER LEVERS All Models Bracket, rocker lever shaft Bracket, rocker lever shaft (3277051) Lever, exhaust valve rocker Lever and bushing Bushing, valve rocker lever Nut, adjusting screw Screw, adjusting Lever, intake rocker (168255) Lever and bushing Bushing, valve rocker lever Nut, adjusting screw Screw, adjusting Lever, injector rocker (194038) Lever and bushing Bushing, injector rocker lever Socket, injector link Nut, adjusting screw Screw, adjusting Shaft, rocker lever (553455) Plug, rocker shaft Pin, rocker shaft locating	REQ'D.			PART NAME	REQ'D.	NO.

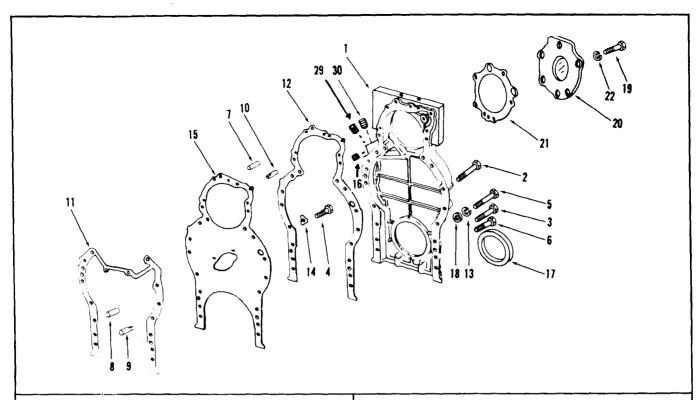



PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
202476 S-102-D S-104 S-109 S-126 108707 9089 69562	GEAR HOUSING V-555 Housing gear Capscrew housing to block Capscrew housing to block Capscrew plate to block Capscrew housing to block Capscrew housing to block Dowel (Master) Dowel (Master)	1 1 6 2 2 6 1	1 2 3 4 5 6 7 8	ADD: 556099 121229 3275101 S-105	Housing, gear Elbow Connection, oil drain GEAR HOUSING COVER Auto Application Only Capscrew	1 1 1 5	1
102957 153807 203008 203026 S-604 175282 202566 69901 3010459* 3010465 S-602 112076	Dowel (Master) Dowel (Diamond) Dowel (Diamond) Gasket, plate to block Gasket, gear housing to plate Lockwasher Lockplate Plate gear housing Hex plug Seal, crankshaft Repair sleeve Washer, plain Plug pipe Plug pipe	1 1 1 15 2 1 1 15 15 1 15 15 15 15 15 15 15 15 15	9 10 11 12 13 14 15 16 17 18 29 30	5-105 555336 203036 S-604 S-199-B	Capscrew Cover Gasket Lockwasher Capscrew	6 1	20 21 22
142110	Seal & Installation Tool Cup plug, barring hole VT-555 Same as above except:	1					
OMIT:	Camb de abore except.			;			
202476 112076	Housing, gear Plug, pipe	1	1 30				

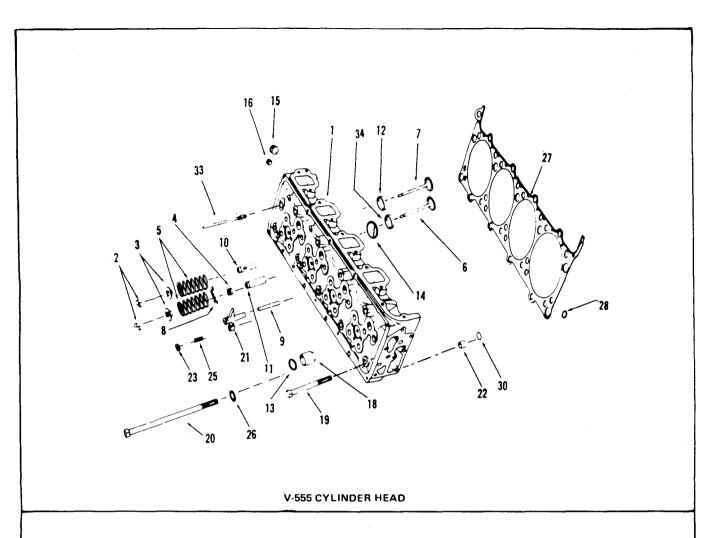


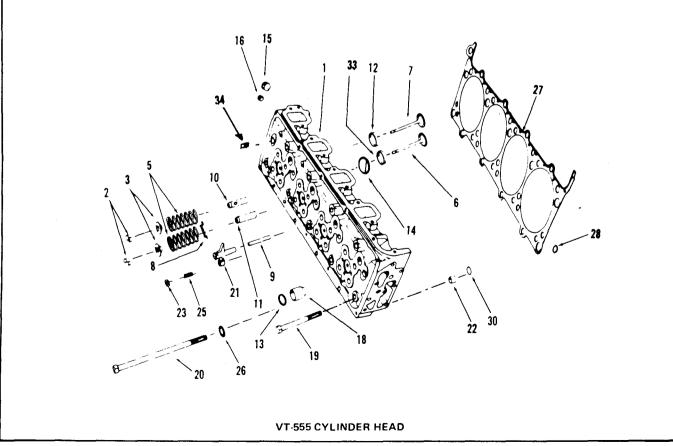


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF NO.
AR-61110 3275354 155441 156541 163037 3275355 3275356 553811 AR-61111 154220 154946 195000 154390 196641 553461 551475 554416 S-910-B 217632 169630	CYLINDER HEAD V-555 Head assembly, cylinder (553637) Half collet, valve Retainer, spring Seal, intake valve Spring, valve Valve, exhaust Valve, intake Wear plate Head assembly, less valves Guide crosshead Guide exhaust valve Guide intake valve Insert valve seat (intake) Insert valve seat (exhaust) "O" ring Plate, swirl Plug cup Plug cup Plug pipe Plug pipe Sleeve injector MOUNTING PARTS Capscrew, cylinder head (short) Capscrew, cylinder head (long)	2 64 32 16 32 16 16 16 16 16 8 16 8 24 2 8	1 2 3 4 5 6 7 8 9 10 11 12 34 13 14 15 16 18	196641 553461 551475 554416 S-910-B 217632 169630 OMIT: AR-61787 AR-62383 553461 Add 3275455 AR-62387 3012431	"O"ring Plate swirl Plug cup Plug cup Plug pipe Sleeve injector VT-555 CARB Automotive Same as above except: Head assembly, cylinder (553637) Head assembly, less valves Plate swirl Head assembly, cylinder (5533637) Head assembly, less valves Plate swirl MOUNTING PARTS Capscrew, cylinder head (short) Capscrew, cylinder head (long)	8 16 8 24 2 2 8 8 2 2 16 10 26 10 10 10 10 10 10 10 10 10 10 10 10 10	13 14 15 16 18 1 14 14
553445 156879 100973 S-273 147389 553451 AR-63087 214621 553019 214731 3275545 S-1003-1 S-1022-A 3275131	Capscrew, cylinder head (long) Crosshead, valve Dowel, ring Nut, crosshead adjusting Screw, crosshead adjusting Washer, cylinder head capscrew * Gasket, cylinder head Gasket "O" ring End caps, gasket Tube, vent assembly Connector, tube Nut, tube Tube, ventilator	10 16 4 16 16 36 2 2 4 4 2 2 2	20 21 22 23 25 26 27 28 33	156879 100973 S-273 147389 553451 AR-63087 214621 553019 214731 217632	Crosshead valve Dowel ring Nut, crosshead adjusting Screw, crosshead adjusting Washer, cylinder head capscrew Gasket, cylinder head Gasket "O" ring End caps, gasket Plug pipe OVERSIZE FOR SERVICE	16 4 16 16 36 2 2 4 4 2	34
AR-62074 AR-62075	OVERSIZE FOR SERVICE Gasket, cylinder head (.010") Gasket, cylinder head (.020") CYLINDER HEAD VT-555	A/R A/R		AR-62281 AR-62282	Gasket cylinder head (.010") Gasket cylinder head (.020") * Note: Use "O" ring only on engines previously fitted with "O" ring. Reference Service Topic 75T 2-2.	A/R A/R	
AR-61787 3275354 155441 163037 3275355 3275356 553811 AR-62383 154220 556461 1556461 195000 154390	Head assembly, cylinder (553637) Half collet valve Retainer spring Spring valve Valve exhaust Valve intake Wear plate Head assembly, less valves Guide crosshead Guide exhaust valves Guide intake valves Insert valve seat (intake) Insert valve seat (exhaust)	2 64 32 32 16 16 32 2 16 16 16	5 6 7 8 9 10 11 12				

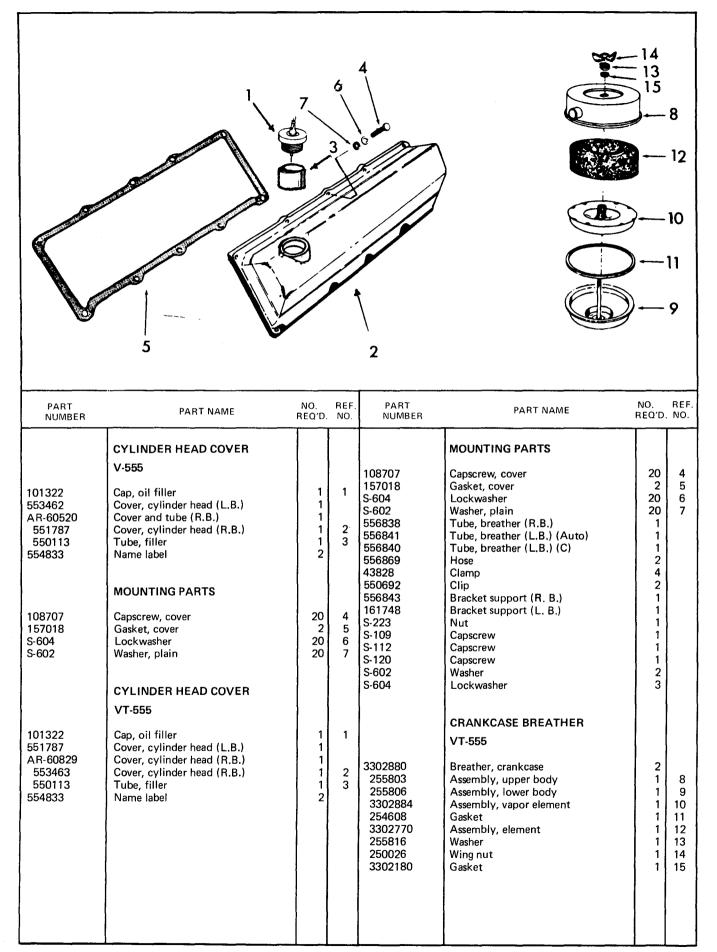

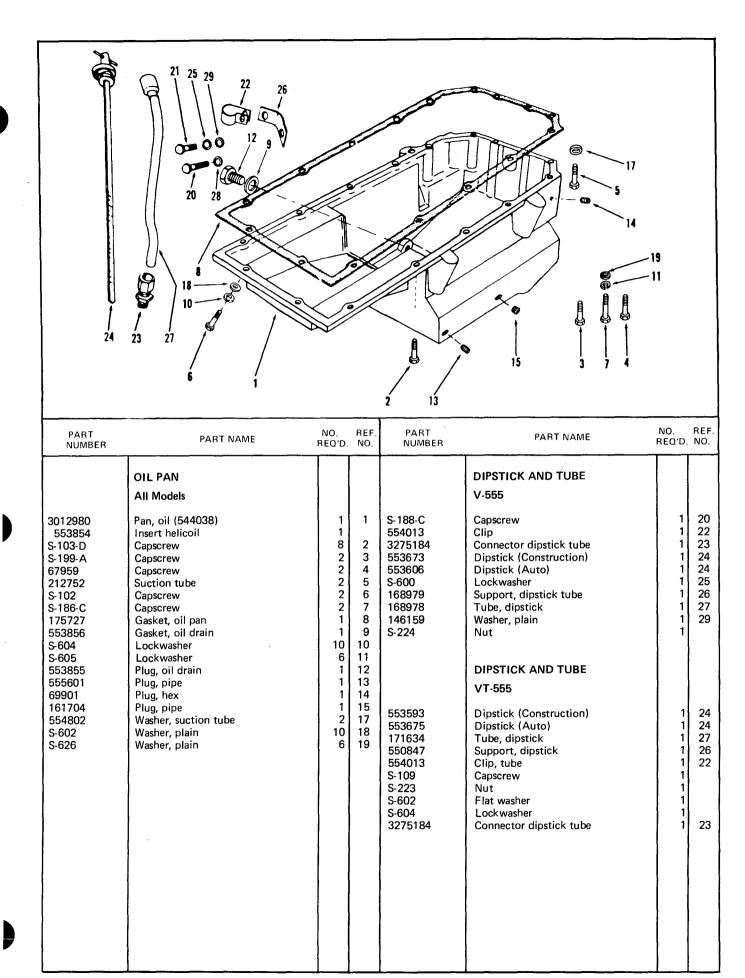


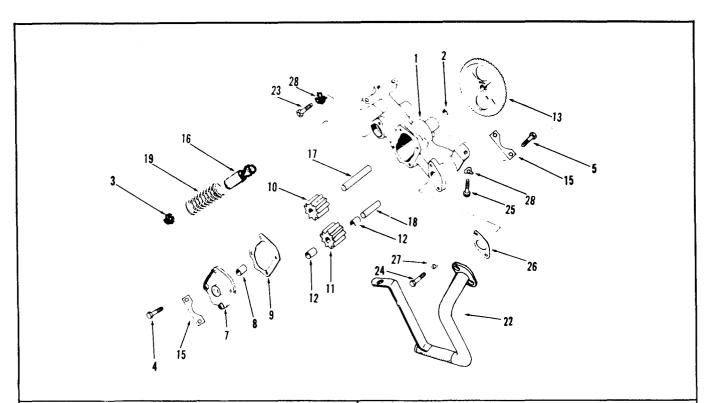


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
AR-62181 AR-60089 68586 556338 S-107 S-155-A AR-60092 68586 178283 187012 AR-60090 68586 184044 551117 183014 178284 190138 135527 3010618 3275137	LUBRICATING OIL PUMP V-555 Pump, lubricating oil Body and bushing (187011) Bushing Plug, by-pass spring Capscrew Capscrew Cover and bushing (181165) Bushing Gasket, cover Gear, idler drive Gear idler (187013) Bushing Gear main drive Lockplate, cover to body Plunger, pressure regulator Shaft, drive Shaft, idler Spring, regulator Tube, oil suction assembly Circlip	1 1 1 1 1 1 1 1 1 1 1 1	1 2 3 4 5 7 8 9 10 11 12 13 15 16 17 18 19 22	S-103-D 3275340 S-112 164916 175282	MOUNTING PARTS Capscrew, pump to block Capscrew, tube to pump Capscrew, pump to block Gasket, tube to pump Lockplate, pump to block	2 2 1 1 3 3	26
3275912 3277006	V1-555 Same as above except: Pump lubricating oil Spring regulator	1 1	19			,	

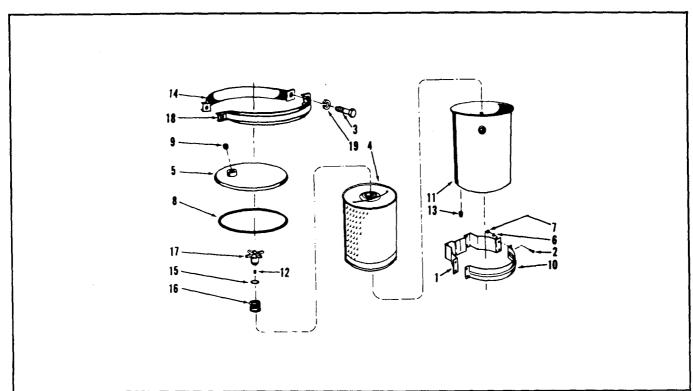


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
159707 145664 70188 70449 256839 3300947 3300948 159667 70189 70194 70299 164159 S-908 145665 257221 157151 131911 139090 257218 116029 150037 257216	LUBRICATING OIL BY-PASS FILTER Filter, lubricating oil by-pass Bracket, filter Capscrew, coupling half Capscrew Cartridge Coupling, half with nuts Coupling, half Cover Lockwasher, bracket Lockwasher, coupling half Nut, mounting bracket "O" ring, cover Plug, cover Strap, mounting Shell, filter Decal, filter Orifice plug (No. 6) Plug, drain Support, upper "O" ring, support Spring, hold down Support, upper Note: Not used on V-555 (Auto)	12821118281121111111111	1 2 3 4 14 18 5 6 19 7 8 9 10 1 12 13 15 16 17				

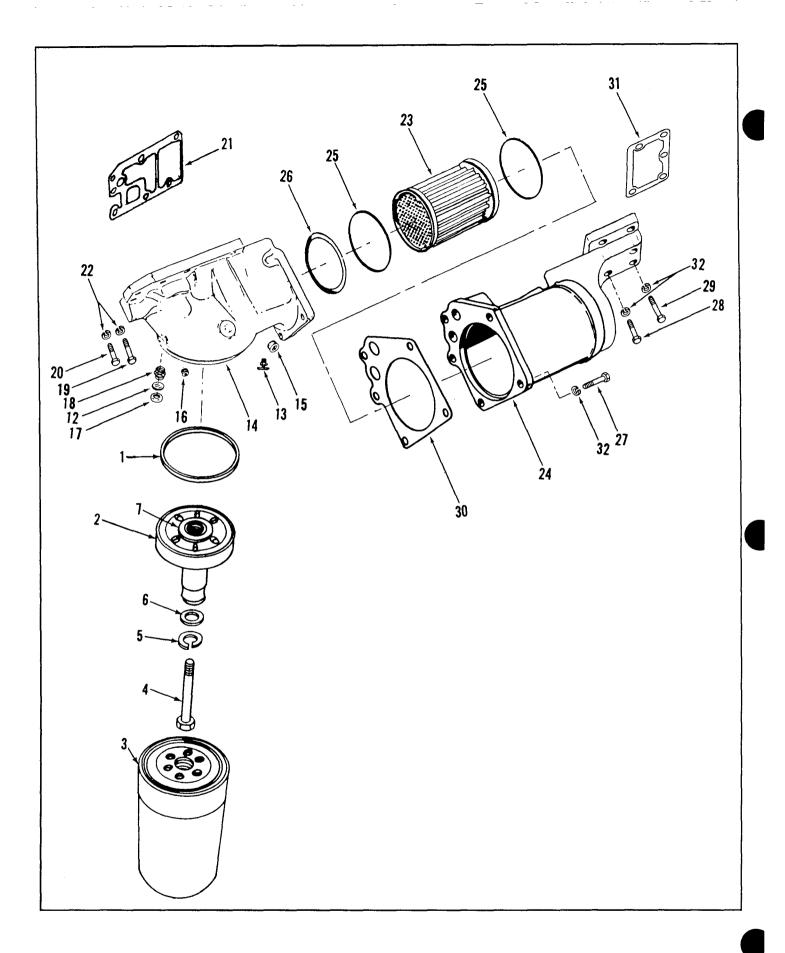


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
	LUBRICATING OIL FILTER All Models				LUBRICATING OIL COOLER All Models	-	
173368 3300908 3302026 3302059 S-603 200861 3300917 AR-61154	Seal Assembly adaptor filter head Filter spin-on (LF670SC) Capscrew, hex Lockwasher Washer Seal Filter, head assembly	1 1 1 1 1 1	1 2 3 4 5 6 7	AR-61125 173287 554254 216285 142616	Cooler, lubricating oil Element Housing, cooler "O" ring Ring, retaining MOUNTING PARTS	1 1 1 2 1	23 24 25 26
200819 S-962-E 554255 S-962 555601 554281 3275423	Disc, by-pass valve Drain, cock Head, filter Plug, pipe Plug, pipe Seat, by-pass valve Spring, by-pass valve	1 1 1 1 1 1 1 1	12 13 14 15 16 17 18	S-103-D 108707 S-126 554321 554320 S-604 S-126	Capscrew Capscrew Capscrew Gasket, cooler to filter Gasket, cooler to block Lockwasher Capscrew	4 2 3 1 1 10 1	28 29 30 31 32
108707 S-126 554319 S-604	MOUNTING PARTS Capscrew Capscrew Gasket Lockwasher	5 2 1 7	19 20 21 22				
		}	}	-			

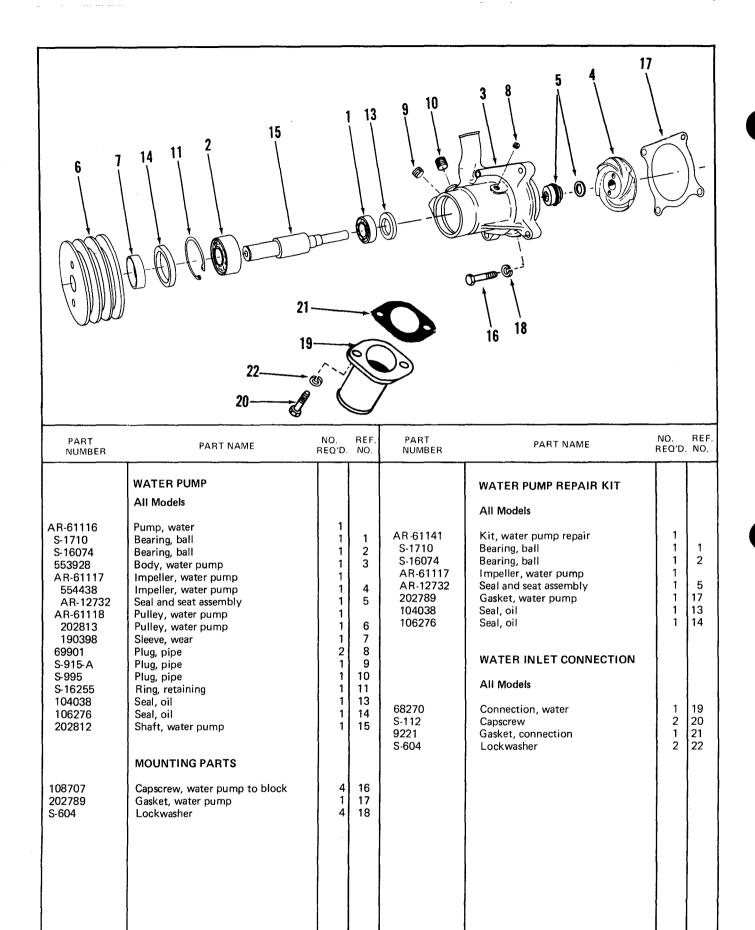


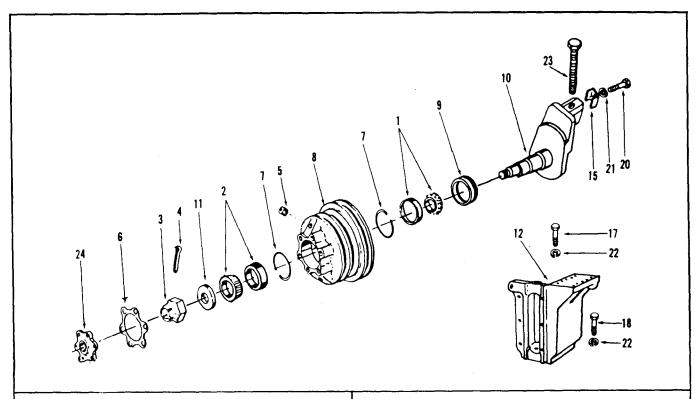



PART NUMBER	PART NAME	NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
AR-61120 553712 3001281 553817 S-507 69901 556457 553714 553709 200307 553838 551498 555444	FAN HUB All Models Hub, fan Bearing, rear Bearing, front Locknut, slotted Pin, cotter Plug hex Gasket, fan hub Retainer Pulley, fan hub Seal, oil Shaft, fan hub Washer, clamp Bracket, fan hub	1 1 1 1 1 1 1 1 1 1 1 1	6 7 8 9 10	182808 182707 555796 554613 554316 153411 9948 556629	MOUNTING PARTS Belt, drive Clamp, adjusting Capscrew, bracket to block Capscrew, adjusting clamp Washer, hardened Screw, adjusting Pilot, fan	31 4 2 2 2 1 1 1	15 17 18 20 21 23 24

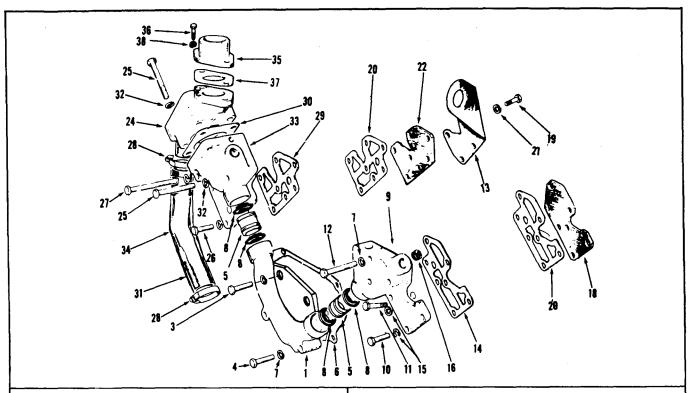


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
555190 S-103-D S-104 555196 550164 S-604 555198	WATER CROSSOVER All Models Crossover, water (cam cover) Capscrew, cover to block Capscrew, cover to block Connection, water transfer Gasket, cover Lockwasher, cover to block Bush sealing	1 4 2 2 1 6 4	1 3 4 5 6 7 8	152398 S-109 157290 S-604 553310 S-1005-A	LEFT BANK REAR Plate, cylinder head cover Capscrew Gasket, cylinder head cover Lockwasher Plate, cylinder head cover (VT-555 Auto) Elbow (VT-555 Auto) THERMOSTAT HOUSING All Models	1 7 1 7	18 19 20 21 18
555192 168919 S-103-D 108707 S-126 157290 S-604 S-915-A S-962-E 217632	All Models Cover, cylinder head (water connection) Bracket, engine lifting Capscrew, cover, lifting bracket Capscrew Capscrew, cover to cylinder head Gasket, cylinder head cover Lockwasher Plug, pipe Drain tap Plug, pipe RIGHT BANK REAR	1 1 3 3 1 7 2 1 1	9 13 10 11 12 14 15 16	555256 S-163 S-103-D S-199-A 550547 157290 553916 3275391 S-604 S-908 69901 S-915-A 186780 555199 204586	Housing, thermostat Capscrew Capscrew Clamps, hose Gasket, thermostat support Gasket, thermostat housing to support Hose Lockwasher Plug pipe Plug pipe Plug pipe (C Only) Seal Support, thermostat housing Thermostat	1 5 5 1 2 1 1 2 11 3 1 1 1 1 1 1	24 25 26 27 28 29 30 31 32
553513 152398 168919 S-109 157290 S-604 S-1005-A	Plate, cylinder head cover (V-555 Auto) Plate, cylinder head cover Bracket, engine lifting Capscrew Gasket Lockwasher Elbow (V-555 Auto Only)	1 1 1 7 1 7	22 13 19 20 21	555348 S-112 9221 S-604	CONNECTION WATER OUTLET All Models Connection, water outlet Capscrew Gasket Lockwasher	1 2 1 2	35 36 37 38

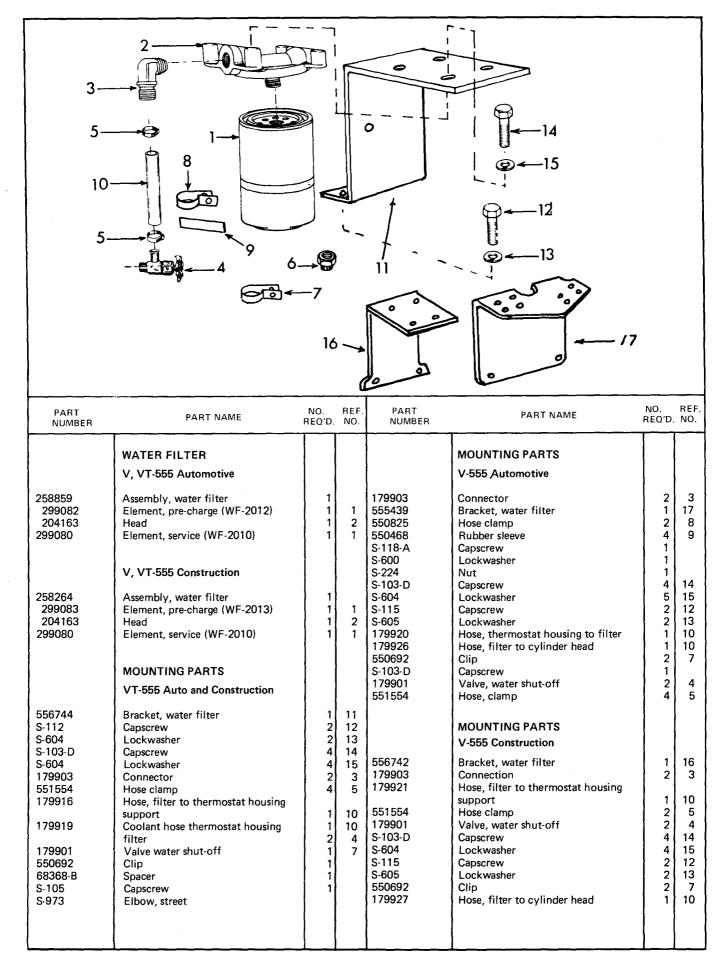


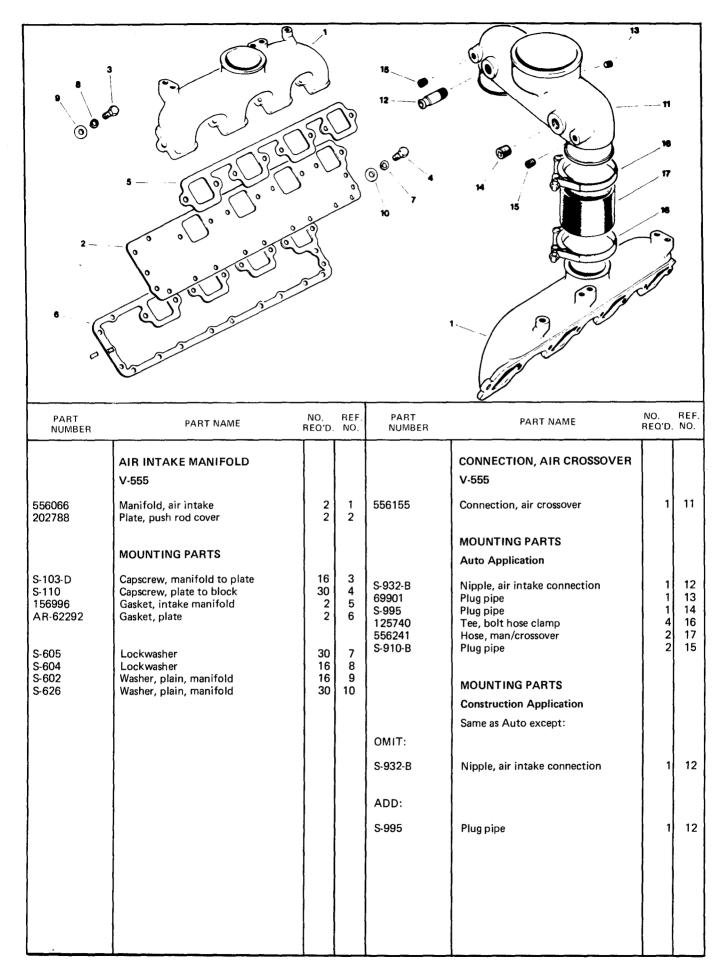

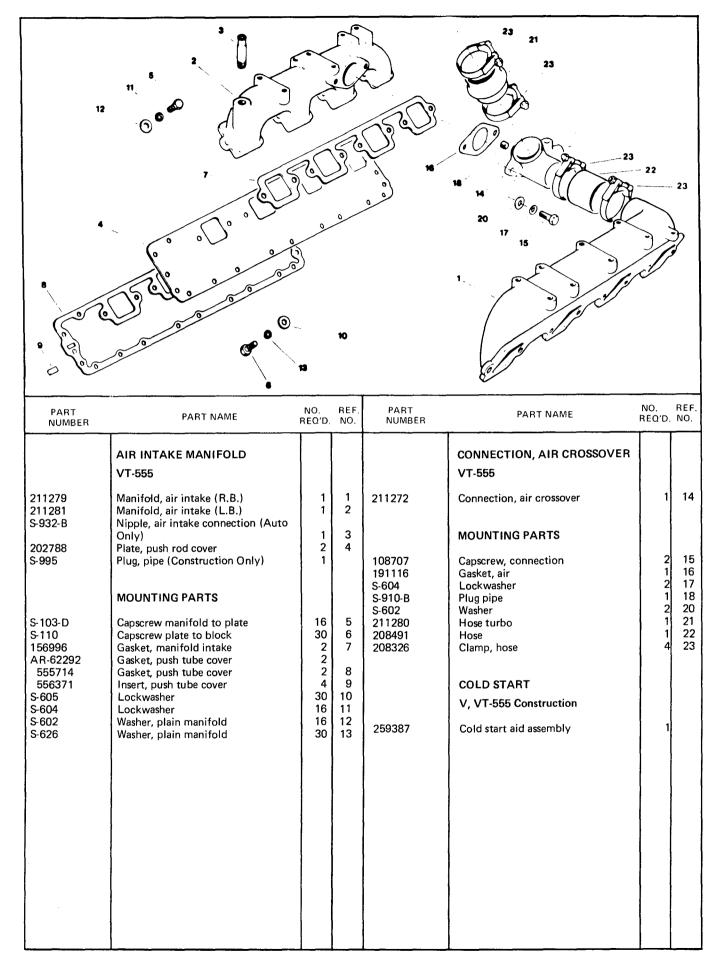


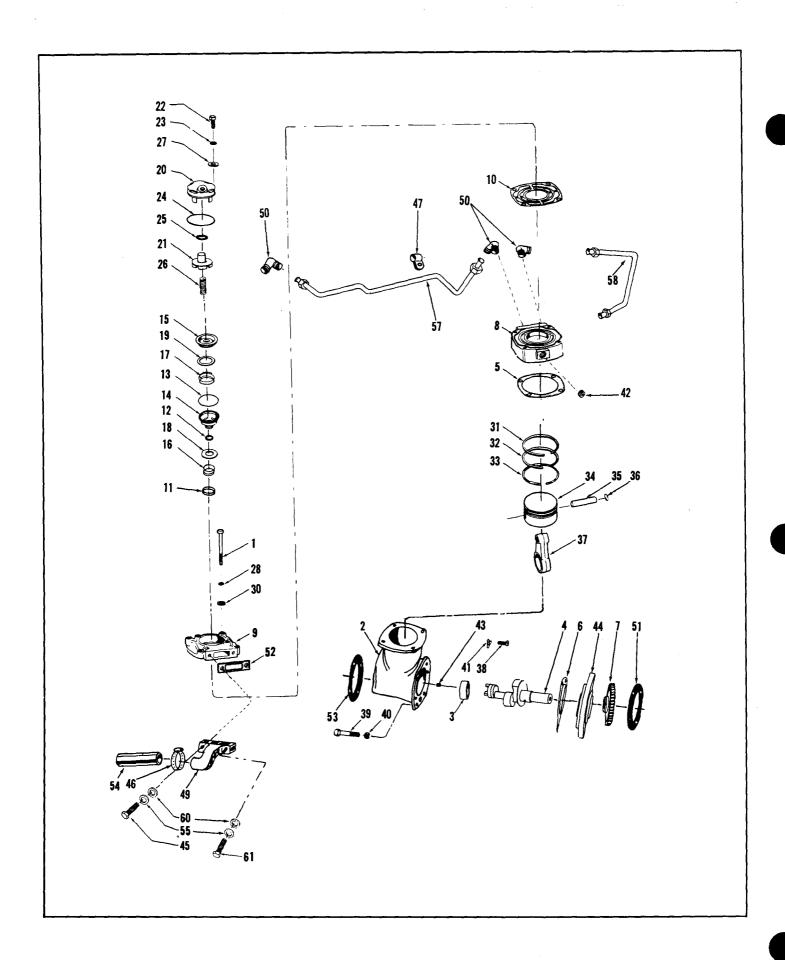


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	RI N
	AIR COMPRESSOR				MOUNTING PARTS		
	Automotive Application				V-555		
.R-45748	Compressor, air	1		 S-111	Capscrew, air connection	1	45
S-155-A	Capscrew, head to crankcase	4	1	550788	Clamp, hose	2	46
3M-98685	Crankcase, compressor (176025)	1	2	554013	Clamp	1	4
147610	Bushing, crankshaft	1	3	550037	Connection, air	1	4
202780	Crankshaft, compressor	1	4	S-1005-A	Elbow, flexible hose	1 1	5
54018	Gasket, head to crankcase	1	5	203074	Gasket, support	1	5
76027	Gasket, support	1	6	157911	Gasket, air connection	1 1	5
02225	Gear, compressor drive	1	7	200817	Gasket, fuel pump to compressor	1 1	۱ 5
AR-73938	Head assembly	1 1	1	556330	Hose	1 1	۱ و
218793	Head, air compressor	1	8	S-605	Lockwasher	2	۱ و
153964	Cover, air compressor head	1 1	9	S-921-D	Pipe, bushing	1	
154996	Gasket	1 1	10	556636	Tube, water inlet	1 1	۱ و
183429	Wearplate	1	111	S-1005-A	Elbow	2	`
AR-73075	Intake and exhaust valve assembly	1 1	[` '	S-1004-A	Nut	2	ł
128085	"O" ring	li	12	S-1003-A	Sleeve	2	
128086	"O" ring	li	13	554801	Tube, water outlet	1	١,
144714	Seat, exhaust valve	i	14	S-1002-A	1	li	١,
144714	Seat, exhaust valve Seat, intake valve	1	15	S-1002-A S-1004-A	Connection Nut	2	1
		1 1	16		1		l
128080	Spring, exhaust valve			S-1003-A	Sleeve	2	١.
190334	Spring, intake valve	1 1	17	S-626	Washer, plain	2	ľ
127940	Valve, exhaust	1	18	S-604	Lockwasher	1	ļ
144948	Valve, intake	1 1	19	S-109	Capscrew	1	
AR-73925	Unloading valve assembly	1	1	203277	Bracket, air compressor	1	
153966	Body, unloader valve	1	20	S-112	Capscrew	2	l
191037	Cap, unloader	1	21	S-602	Washer	3	
S-107	Capscrew	2	22	S-143-B	Capscrew	1	ŀ
S-605	Lockwasher	2	23	S-155	Capscrew	1	1
128086	"O" ring	[1	24	109859	Spider coupling	1	l
127936	Seal, plunger	1	25	217632	Plug, pipe	1	
217557	Spring, unloader valve	1 1	26	S-610	Lockwasher, F/P mtg	4	ı
109557	Washer	2	27	69324	Washer, F/P mtg	4	ı
S-605	Lockwasher, head to crankcase	4	28	206326	Capscrew, F/P mtg	4	
105375	Nameplate, serial number	1		200020	Supstitut, 177 mag	"	
S-2267	Screw, nameplate	2	l				ı
S-626	Washer, plain	4	30			- 1	
AR-73350	Ring set, compressor (Std.)	1 1	""				ĺ
650330	Ring, compression	li	31				1
187350	Ring, compression	1 ;	32				
180810		1 1	33		VT-555	ļ	l
BM-77410	Ring, oil Piston assembly (Std.)	1 1	33		V 1-999	j	
		1 1	34		Same as V-555 except:		
165430 119810	Piston, air compressor	1 1	35	OMIT:	,	1	1
	Pin, piston		36	OWITT:		- 1	
119859	Ring, snap	2		EE0027	Comment of the	.	4
176023	Rod, connecting	1	37	550037	Connection, air	1	ı
S-112	Capscrew	1 4	38 39	S-155	Capscrew	1	ľ
556192 5 604	Capscrew	2		556330	Hose	1	
S-604	Lockwasher	2	40	556636	Tube, water inlet		١
554210	Lockplate	4	41	S-1005-A	Elbow, flexible hose	1	١.
S-915-A	Plug, pipe	1	42	554801	Tube, water outlet	1	
217631	Plug, pipe	1	43	S-921-D	Pipe bushing	1	1
202273	Support	1	44	S-109	Capscrew	1	1
650792	Plug, pipe (Crankshaft)	1					ĺ
				ADD:			
				217302	Hose, compressor air inlet	1	!
		1		S-111	Capscrew	2	4
		1	1	555269	Connection, air	1	۱ ا
		1		3275343	Tube, water inlet	i	ا ا
	1		l	S-1005-A	Elbow, flexible hose	3	
		-	l	556172	Tube, water outlet	1 1	}
			1	S-117	Capscrew	i	ĺÌ
				• • • • • • • • • • • • • • • • • • •	Саросточ		
	1	1 1		ı	i	1 .	i

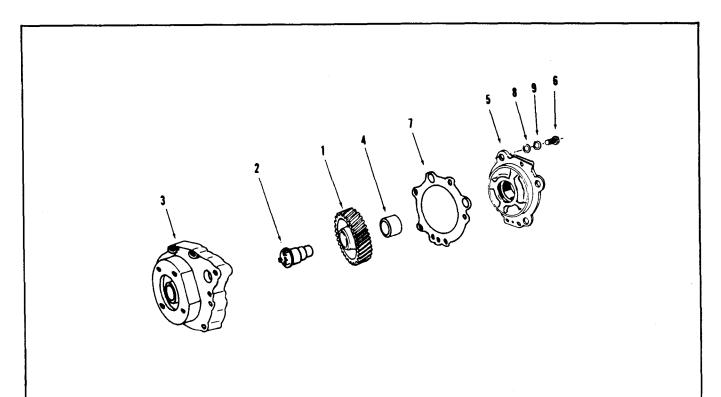


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF NO.
AR-61166 202225 203391 556608 217631 AR-61176 202840 554521	FUEL PUMP DRIVE Drive, fuel pump and support Gear, drive Shaft, drive Support, fuel pump Plug, pipe Cover and bushing assembly Bushing, shaft Cover, gear housing	1 1 1 1 1 1 1	1 2 3 4 5				
S-163 203036 S-604 S-602	MOUNTING PARTS Capscrew Gasket Lockwasher Washer, plain	6 1 6 6	6 7 8 9				

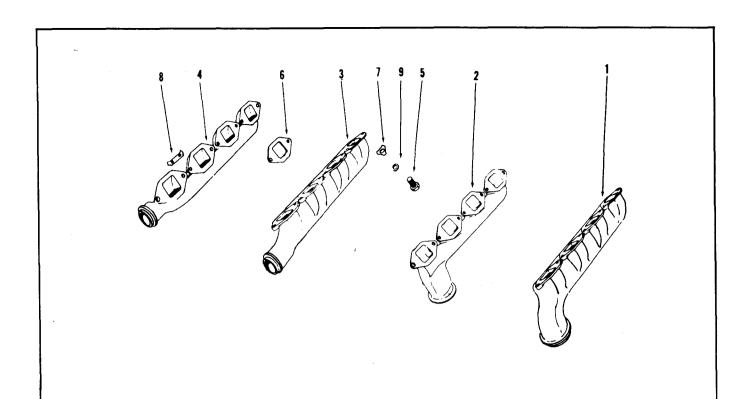


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
201693 554365 203665 554217	EXHAUST MANIFOLD V-555 Manifold, exhaust (L.B.) Auto Manifold, exhaust (R.B.) Auto Manifold, exhaust (L.B.) Construction Manifold, exhaust (R.B.) Construction	1 1 1 1	1 2 3 4				
108707 556355 556711 551108 556710	Capscrew Gasket, manifold Lockplate Lockplate Spacer	16 2 6 6 16	5 6 7 8 9				

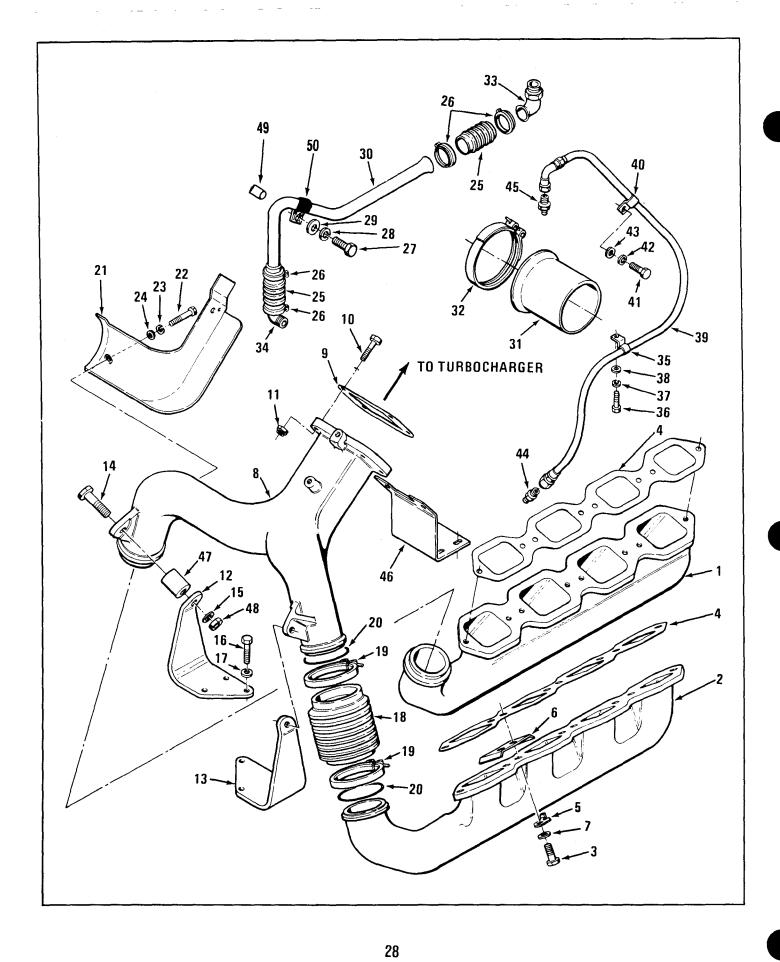


PART NUMBER	PART NAME	NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF.
	EXHAUST MANIFOLD VT-555				TOP MOUNT TURBO DRAIN TUBE		
556830 556831	Manifold, exhaust (L.B.) Manifold, exhaust (R.B.) MOUNTING PARTS	1 1	1 2	556150 556148 S-119 S-605 S-626	Hose connection Hose clip Capscrew Lockwasher Washer, plain	1 2 1 1	25 26 27 28 29
S-120 556355 556711 551108 68368-B	Capscrew Gasket, manifold Lockplate Lockplate Spacer	16 2 4 6 16	3 4 5 6 7	3275346 3275347 200759 115774 556061 3275101 65297 3275471	Tube, turbo oil drain (Construction) Tube, turbo oil drain (Auto) Adapter, exhaust manifold (Auto) Clamp, air inlet (Auto) Connection (Turbo) Connection (Gear housing) Spacer Clip turbo	A/R A/R 1 1 1 1 1	30 30 31 32 33 34 49 50
556829	TOP MOUNT COLLECTOR Collector, exhaust	1	8		TOP MOUNT TURBO OIL SUPPLY		
190849 S-120 70276 556834 556833 S-130 S-608 103009 S-610 556832 183670	MOUNTING PARTS Gasket, exhaust collector Capscrew Locknut Support, collector (L.B.) Support, collector (R.B.) Capscrew Lockwasher Capscrew Lockwasher Connection Clamp, "V" bank	1 4 4 1 1 2 2 6 6 2 4	9 10 11 12 13 14 15 16 17 18	550299 S-181-B S-604 S-602 209960 3006559 S-112 S-604 S-602 S-1039-A 208668	Hose clip Capscrew Lockwasher Washer, plain Hose Hose clip Capscrew Lockwasher Washer, plain Adapter, elbow Adapter, oil feed	1 1 1 1 1 1 1 1 1 1	35 36 37 38 39 40 41 42 43 44 45
556847 3275072 108027	Sealing ring Spacer Locknut TOP MOUNT HEAT SHIELD	4 2 2	20 47 48	211273 S-112 S-602 S-604 S-103-D	Bracket, turbo Capscrew Washer, plain Lockwasher Capscrew	1 3 4 4	46
556103 556455 S-600 146159	Heat shield Capscrew Lockwasher Washer, plain	1 2 2 2 2	21 22 23 24				

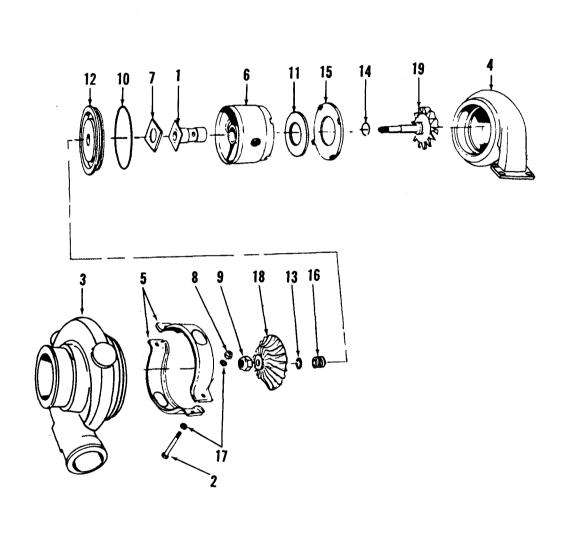


TURBOCHARGER VT-555 AR-12639 Turbocharger 1 156420 Bearing 1 194010 Capscrew 2 2 14649 Casing, compressor 1 3 214651 Casing, turbine 1 4 56416 Clamp, "V" band 2 5 202376 Housing, bearing 1 1 7 128936 Nameplate 1 167299 Nut, clamp 2 8 S-222-A Nut 1 202456 "O" ring 1 202377 Packing, bearing housing 1 216804 Plate, oil seal 1 8-2286 Screw 4 156444 Seal, ring 1 195840 Seal, ring 1 116		
AR-12639 Turbocharger 1 156420 Bearing 1 1 194010 Capscrew 2 2 214649 Casing, compressor 1 3 214651 Casing, turbine 1 4 156416 Clamp, "V" band 2 5 202376 Housing, bearing 1 6 170510 Bearing, insert 1 7 128936 Nameplate 1 1 167299 Nut, clamp 2 8 S-222-A Nut 1 9 202456 "O" ring 1 10 202377 Packing, bearing housing 1 11 216804 Plate, oil seal 1 12 S-2286 Screw 4 1 156444 Seal, ring 1 13 195840 Seal, ring 1 14 17570 Shield, heat 1 15		
156420 Bearing 1 1 194010 Capscrew 2 2 214649 Casing, compressor 1 3 214651 Casing, turbine 1 4 156416 Clamp, "V" band 2 5 202376 Housing, bearing 1 6 170510 Bearing, insert 1 7 128936 Nameplate 1 1 167299 Nut, clamp 2 8 S-222-A Nut 1 9 202456 "O" ring 1 10 202377 Packing, bearing housing 1 11 202377 Packing, bearing housing 1 11 216804 Plate, oil seal 1 12 S-2286 Screw 4 1 156444 Seal, ring 1 13 195840 Seal, ring 1 14 17570 Shield, heat 1 15		
156420 Bearing 1 1 194010 Capscrew 2 2 214649 Casing, compressor 1 3 214651 Casing, turbine 1 4 156416 Clamp, "V" band 2 5 202376 Housing, bearing 1 6 170510 Bearing, insert 1 7 128936 Nameplate 1 1 167299 Nut, clamp 2 8 S-222-A Nut 1 9 202456 "O" ring 1 10 202377 Packing, bearing housing 1 11 216804 Plate, oil seal 1 12 S-2286 Screw 4 1 156444 Seal, ring 1 13 195840 Seal, ring 1 14 17570 Shield, heat 1 15		
214649 Casing, compressor 1 3 214651 Casing, turbine 1 4 156416 Clamp, "V" band 2 5 202376 Housing, bearing 1 6 170510 Bearing, insert 1 7 128936 Nameplate 1 8 167299 Nut, clamp 2 8 S-222-A Nut 1 9 202456 "O" ring 1 10 202377 Packing, bearing housing 1 11 216804 Plate, oil seal 1 12 S-2286 Screw 4 156444 Seal, ring 1 13 195840 Seal, ring 1 14 171570 Shield, heat 1 15		
214649 Casing, compressor 1 3 214651 Casing, turbine 1 4 156416 Clamp, "V" band 2 5 202376 Housing, bearing 1 6 170510 Bearing, insert 1 7 128936 Nameplate 1 1 167299 Nut, clamp 2 8 S-222-A Nut 1 9 202456 "O" ring 1 10 202377 Packing, bearing housing 1 11 216804 Plate, oil seal 1 12 S-2286 Screw 4 4 156444 Seal, ring 1 13 195840 Seal, ring 1 14 171570 Shield, heat 1 15		
214651 Casing, turbine 1 4 156416 Clamp, "V" band 2 5 202376 Housing, bearing 1 6 170510 Bearing, insert 1 7 128936 Nameplate 1 7 167299 Nut, clamp 2 8 S-222-A Nut 1 9 202456 "O" ring 1 10 202377 Packing, bearing housing 1 11 216804 Plate, oil seal 1 12 S-2286 Screw 4 156444 Seal, ring 1 13 195840 Seal, ring 1 14 171570 Shield, heat 1 15		
156416 Clamp, "V" band 2 5		
Housing, bearing		
70510 Bearing, insert 1 7 28936 Nameplate 1 1 167299 Nut, clamp 2 8 3-222-A Nut 1 9 202456 "O" ring 1 10 202377 Packing, bearing housing 1 11 216804 Plate, oil seal 1 12 3-2286 Screw 4 4 156444 Seal, ring 1 13 195840 Seal, ring 1 14 171570 Shield, heat 1 15		
28936 Nameplate 1 67299 Nut, clamp 2 8 5-222-A Nut 1 9 202456 "O" ring 1 10 202377 Packing, bearing housing 1 11 216804 Plate, oil seal 1 12 3-2286 Screw 4 156444 Seal, ring 1 13 195840 Seal, ring 1 14 171570 Shield, heat 1 15		
67299 Nut, clamp 2 8 6-222-A Nut 1 9 202456 "O" ring 1 10 202377 Packing, bearing housing 1 11 216804 Plate, oil seal 1 12 3-2286 Screw 4 156444 Seal, ring 1 13 195840 Seal, ring 1 14 171570 Shield, heat 1 15		
S-222-A Nut 1 9 202456 "O" ring 1 10 202377 Packing, bearing housing 1 11 216804 Plate, oil seal 1 12 S-2286 Screw 4 156444 Seal, ring 1 13 195840 Seal, ring 1 14 171570 Shield, heat 1 15		
202456 "O" ring 1 10 202377 Packing, bearing housing 1 11 216804 Plate, oil seal 1 12 3-2286 Screw 4 156444 Seal, ring 1 13 195840 Seal, ring 1 14 171570 Shield, heat 1 15		
202377 Packing, bearing housing 1 11 216804 Plate, oil seal 1 12 S-2286 Screw 4 156444 Seal, ring 1 13 195840 Seal, ring 1 14 171570 Shield, heat 1 15		
216804 Plate, oil seal 1 12 5-2286 Screw 4 4 156444 Seal, ring 1 13 195840 Seal, ring 1 14 171570 Shield, heat 1 15		- 1
S-2286 Screw 4 156444 Seal, ring 1 195840 Seal, ring 1 171570 Shield, heat 1 15 15		- 1
156444 Seal, ring 1 13 195840 Seal, ring 1 14 171570 Shield, heat 1 15		
195840 Seal, ring		- 1
171570 Shield, heat 1 15		
2106UZ Sieeve 1 10 1		- 1
]	ĺ
3-631 Washer, plain 4 17		
216792 Wheel, compressor 1 18		
AR-10059 Wheel and shaft		
REPAIR KIT		
003834 Kit, repair 1		
S-222A Nut 1		
S-631 Washer 4]	
156444 Piston ring seal 1		
167299 Nut 2		1
170510 Bearing insert 1		1
194010 Capscrew 2		
195840 Seal ring 2	į į	
202377 Packing insulation 1	Į į	1
202456 ''O'' ring 1		- [
983361-B Decal 1		1
156420 Bearing 1		
	1	

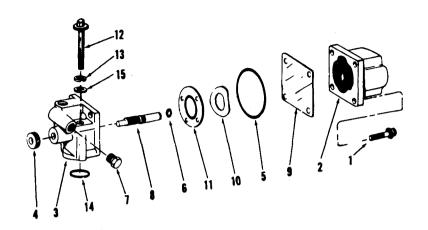

SHUT DOWN VALVE

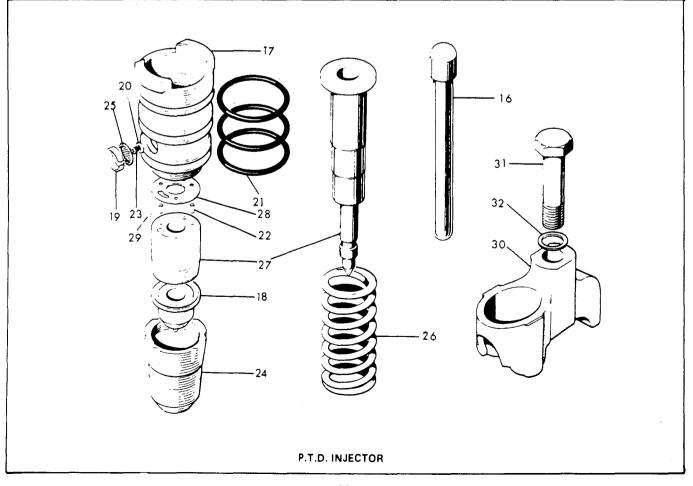

PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
	INJECTOR V-555 Auto				VT-555-C Applications Same as V-555 Auto except:		
3275272 194041 3275537 AR-73354 165296 3275267 174299 173086 101754 173085	Injector, PT (type D) Link, injector Injector, less link Adapter, injector (556895) Pin, roll Cup, injector Clip, filter screen Gasket, orifice "O" ring * Plug, orifice	8 8 8 16 8 8 8 24	16 17 22 18 19 20 21 23	OMIT: 3275272 3275767 3275267 173085 AR-40063 187326	Injector, PT (type D) Injector, less link Cup, injector Plug, orifice Barrel and plunger Barrel injector	8 8 8 8 8	
556894 174298 166009 AR-40063 185782 167157 187326 189848 187858 178980	Retainer, cup Screen, filter Spring, injector Barrel and plunger Gasket Ball, check * Barrel, injector * Plug, barrel * Coupling, plunger * Plunger, injector	8 8 8 8 8 8 32 8	24 25 26 27 28 29	3275388 3275265 177287 AR-73665 555729	Injector, PT (type D) Cup, injector Plug, orifice Barrel and plunger Barrel, injector Note: No injector less link for VT Series	8 8 8 8 8	
	Flow: 132 cc at 1000 strokes (120 psi)			*	Note: Not sold separately. MOUNTING PARTS		
OMIT:	V-555 Construction Same as V-555 Auto except:			552458 166392 69280	Clamp, injector Capscrew, hex head Washer, plain	8 8 8	30 31 32
3275272 3275537 3275267	Injector, PT (type D) Injector, less link Cup, injector	8 8 8			SHUTDOWN VALVE All Models		
ADD: 3275274 3275538 3275265	Injector, PT (type D) Injector, less link Cup, injector	8 8 8		BM-69973 187556 134072 129826 129838 129888 190876 70295	Valve, shutdown (12V, 1 pole) Capscrew, coil to housing Coil assembly Housing, valve Knob, manual override "O" ring, coil to housing "O"ring, shaft	1 4 1 1 1 1 1 1 1 1	1 2 3 4 5 6
OMIT:	VT-555 Auto Same as V-555 Auto except:			3000266 129839 129768 129827 S-607	Plug, pipe Shaft, manual override Shield, fuel Spring Valve Lockwasher	1 1 1 1 4	7 8 9 10
3275272 3275267 173085 AR-40063 187326	Injector, PT (type D) with link Cup, injector Plug, orifice Barrel and plunger Barrel, injector	8 8 8 8	18 23 27	S-189-C S-1004-1	MOUNTING PARTS Capscrew, valve to housing Connection	2	12
ADD: 3275773 3275417 177287 AR-73665 555729	Injector, PT (type D) with link Cup, injector Plug, orifice Barrel and plunger Barrel, injector Flow: 145 cc at 1000 strokes (120 psi)	8 8 8 8 8	18 23 27	BM-69985 134076 BM-69982 134075 BM-69979 134074	Lockwasher "O" ring Washer, plain OPTIONAL Valve, shutdown (24V, 2 pole) Coil assembly Valve, shutdown (12V, 2 pole) Coil assembly Valve, shutdown (24V, 1 pole) Coil assembly	2 1 2 1 1 1 1 1	13 14 12

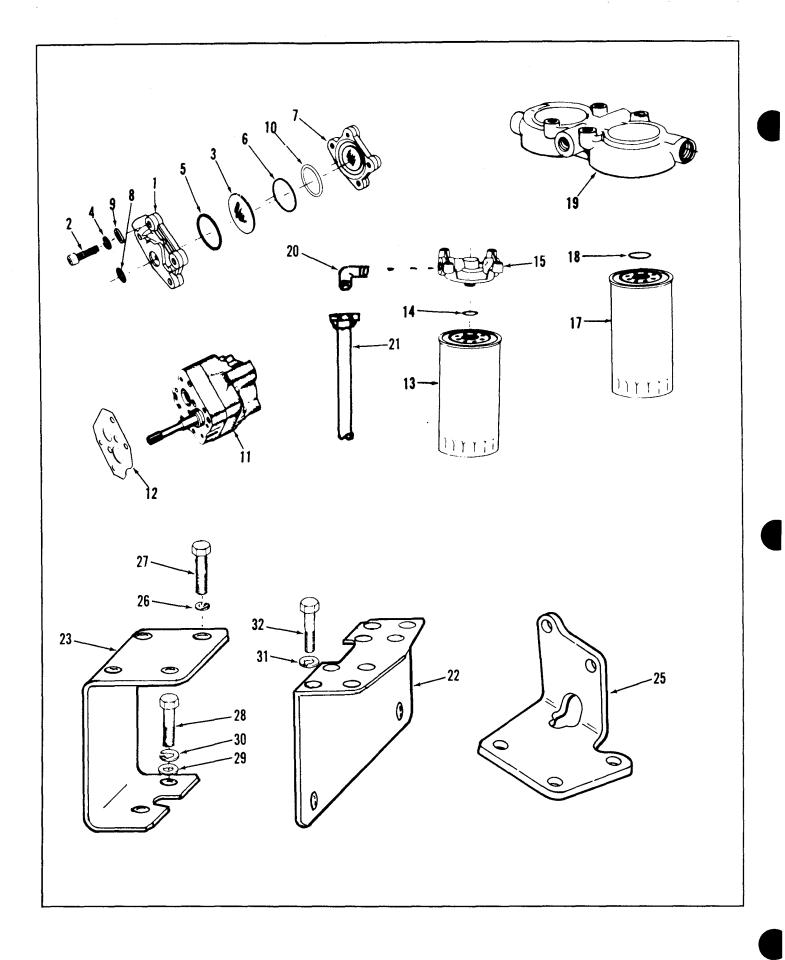

PART NUMBER	PART NAME	NO. REQ′D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF NO.
the best per	PT FUEL SYSTEM mmins PT Fuel Pump is calibrated to ol formance and fuel economy for your en nins Distributor or Dealer has the sp	gine.		AR-13274	C Applications All Models Filter, fuel	1	
tools requir Caution: Do	red for complete rebuild and calibra o not disturb the fuel pressure settings o ew settings, as serious damage to your en	tion. r the		156172 255622 212013 129859	Cartridge Gasket, cover Head, fuel filter Elbow, fuel filter	2 2 1 2	17 18 19 20
without pu Cummins I	Fuel System parts which can be replump calibration are listed here. Distributor will record the specific your complete PT Fuel Pump in the fro	Your part			FUEL FILTER MOUNTING PARTS V-555 Auto		
eriis catarog.	FUEL PUMP DAMPER			S-604 S-103-D AS1001800SS 555439	Lockwasher Capscrew Hose Bracket fuel filter and corrosion resistor	1 1	31 32 21 22
BM-76340 153336 S-105-C 202897	Damper, fuel pump Body damper Capscrew Diaphragm	1 1 2 1	1 2 3	5 004	VT-555 Auto		200
S-600 139988 100099 153338 151900	Lockwasher "O" ring "O" ring Plate, damper Seal	1 1 1 1	4 5 6 7 8	S-604 S-602 S-112 AS1002400SS S-103-D	Lockwasher Washer Capscrew Hose Capscrew	3 3 1 4	26 29 28 21 27
70704 160514	Washer Washer, nylon	1	9 10	S-604 556283	Lockwasher Fuel filter bracket	1	30 23
BM-97497	GEAR PUMP All Models			AS1003300SS S-120	C Applications Hose (V-555) Capscrew	1 3	21
210647	Pump, gear Gasket	1 1	11 12	S-103-D S-604 3006640 68368-B	Capscrew Lockwasher Clip hose Spacer	4 7 2 1	
154744	V-555 Auto			556480 AS1003600SS	Fuel Filter bracket Hose (VT-555)	1	25
154711 154709 255622 142784 129859 129866	Filter, fuel Cartridge Gasket, cover Head Elbow, fuel filter Adapter	1 1 1 1 2 1	13 14 15 20				
	VT-555 Auto Same as above except:						
OMIT:							
129866	Adapter	1					
ADD:							
129859	Elbow	1					

PART NUMBER	PART NAME	NO. REQ'D.	REF. PART NO. NUMBER	PART NAME	NO. RI REQ'D. N
AR-61156 (208183) 4797 3275169	STANDARD FLYWHEEL, RING GEAR AND HOUSING Automotive Flywheel and ring gear assembly Flywheel Ring gear, flywheel Flywheel housing (VT-555)	1 1 1 1 1 1	AR-61144 (203066) 4797 (556345	STANDARD FLYWHEEL, RING GEAR AND HOUSING Construction Flywheel and ring gear assembly Flywheel Ring gear, flywheel Flywheel housing (VT-555)	1 1 1 1
3275159 553808 S-175 106289 203310 69562	Flywheel housing (V-555) MOUNTING PARTS Capscrew, flywheel to adapter Capscrew, flywheel housing Capscrew, flywheel housing Plain washer Dowel, flywheel housing to block	8 4 7 13 2	555732 553808 S-106 S-150 S-608 69562	Flywheel housing (V-555) MOUNTING PARTS Capscrew, flywheel to adapter Capscrew Capscrew, flywheel to housing Lockwasher Dowel, flywheel housing to block	8 2 9 13 2
556346 554932 552133 S-188-C S-600 146159 202184 555965 554316 203060 172693 S-113 108604 S-150	Seal, dust Washer Cover, vent Capscrew, cover vent Lockwasher, cover vent Flat washer, cover vent Adapter, flywheel to crankshaft Dowel, adapter to flywheel Capscrew, adapter to crankshaft Cup, grease, retainer Gasket Capscrew Capscrew Capscrew	1 8 2 4 4 1 1 8 1 1 2 2 2	145601 3275255 554932 202184 555965 554316 203060 172693 151249 182459 S-604 S-112 108601 S-113 556346	"O" ring "O" ring seal Washer Adapter, flywheel to crankshaft Dowel, adapter to flywheel Capscrew, adapter to crankshaft Cup, grease, retainer Gasket Cover plate Gasket Lockwasher Capscrew Capscrew Capscrew Seal, dust	1 9 8 1 1 8 1 1 1 1 4 4 4 2 2 1 1
104469 104470	OPTIONAL OVERSIZES Dowel (0.0625") Dowel (0.1250")	A/R A/R	104469 104470	OPTIONAL OVERSIZES Dowel (0.0625") Dowel (0.1250")	A/R A/R

PART NUMBER	PART NAME	NO. REQ'D,	REF. NO.	PART NUMBER	PART NAME	NO. REQ'I	RE). NO
	ELECTRICAL EQUIPMENT				VT-555		
					1	1	
	Construction Only			554794	Tube assembly	1	1
				S-1003-1	Connector, male	2	1
04559	Alternator 24V 30AMP	1		555079	Clip	2	
54999	Pulley, alternator	1 1		S-1006-1	Tee piece	1	1
04561	Regulator 24V	1		554793	Tube assembly	1	
				556539	Clip	3	
	MOUNTING PARTS			551394	Clip	1	
	MOONTING PARTS	1 1		114850	Spacer	2	
78453	Belt, alternator	2		554013	Clip	1	
56778	Bracket, alternator	1 1		S-110 S-626	Capscrew Flat washer		
-112	Capscrew	4		S-605	Lockwasher	l i	
-145	Capscrew, link to alternator	2		68368-B	Spacer		
55381	Link, adjusting	1		185347	Elbow	1	
-604	Lockwasher	4		148376	Connection	1 1	
54194	Washer	4		65297	Spacer instrument panel	1 2	1
-158-C	Capscrew	1 1		3275344	Fuel drain tube	1	
55500	Nut huglock	1 1		550291	Nipple	1	
-608	Lockwasher	1		556170	Elbow drain, 90 deg.	1	٠.
]		S-1047-A	Elbow	1	
	STARTING MOTOR			S-917	Tee pipe		
	1	,		S-956-D	Elbow	1 1	
	Construction only	ſ		556520	Tube, fuel supply (C)		!
				AS0402700SS	Hose, fuel drain (C)		
73006	Motor, starting	1		556173 AS0403000SS	Tube, fuel supply (Auto) Hose, fuel drain (Auto)		•
58250	Capscrew	3 3		A3040300033	Hose, fuel drain (Auto)		
556462 14123	Lockwasher Gasket	3	1]	1
14123	Gasket	'					
			1				
	FUEL TUBING	ŧ	•	•			
	V-555	1					
						ł	1
S-1003-1	Connector male] 1	[!	1
554794	Fuel tube	1					1
556539	Clip .	3	İ			- 1	
S-1006-1 554793	Tee piece Fuel tube	1 1	1	1	1	ì	1
5-1003-1	Connector male					ļ	
553057	Connector male	l i	ļ	ļ		1	
555769	Tube, fuel drain	1 i				l	
556085	Clip tube	1			1		
554011	Cross pipe	1	Ì				1
69187	Nipple	1				ľ	
550475	Adapter	1	ļ			1	1
13765-A	Elbow	1				ļ	
51394	Clip	1			1	- [
14850	Spacer	1 !]	l	
554013	Tube clip			1		ļ	
14850	Spacer	1		1		1	1
52087 556173	Spacer, instrument panel Fuel tube (Auto)	1					1
556520	Fuel tube (Auto)		l			l	
AS0402700SS			1			J	1
\\$040270035 \\$0403000SS		i	l				
		1		-			
						1	
			•				
						1	
				1	1	}	
		ļ				1	Ì

PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF NO.
	ENGINE GASKET SET				AIR COMPRESSOR GASKET SET		-
AR-61440 555102 167802 167802 3010459 3010467 203062 550164 203074 203036 203008 203026 175727 553856 178283 164916 554319 554320 554322 202789 157911 182459 172693 555699 114123 AR-63520 553916 157018 157290 140329 9221 AR-62292 203063 156996 556355 554731 551108 101754 156541 190849 191116 556711 145534 553019 211353 214621 AR-62282	Gasket, water header Gasket, water header Gasket, water header Seal, crankshaft oil Seal, crankshaft Gasket, front cover Gasket, cam cover Gasket, support Gasket, plate to block Gasket, gear housing Gasket, oil pan Gasket, oil suction Gasket, oil suction Gasket, housing to block Gasket, cooler to filter Gasket, filter to block Gasket, filter to block Gasket, starter block Gasket, water pump Gasket, in inlet connection Gasket, housing cover Gasket, starter motor Gasket, starter motor Gasket, thermostat housing Gasket, valve cover Gasket, cylinder head cover plate Gasket, cylinder head cover plate Gasket, water connection Gasket, water connection Gasket, exhaust manifold Casket, push rod cover Gasket, air intake manifold Casket, exhaust manifold Lockplate, exhaust manifold Lockplate, exhaust manifold Cor' ring, rubber Seal, intake guide Gasket, steel exhaust collect Gasket, steel exhaust connection Lockplate exhaust manifold "O'' ring, rubber Seal, intake guide Gasket, steel exhaust connection Cylinder head gasket Gasket, cylinder head (.010") Gasket, cylinder head (.010") Gasket, cylinder head (.020")	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		AR-73308 154996 127936 128086 128085 154018 176027 BM-68356 100478 70705 100764 3009625 70809 70732 154087 43696-A 110855 210647 139988 100099 129888 190876 151900 154088 160514 70415	Gasket, cover to head Seal, underloader valve plunger "O" ring Gasket, head to crankcase Gasket, support FUEL PUMP GASKET SET Gasket set, fuel pump "O" ring, rubber Gasket, spring pack cover Gasket, front housing Seal, oil Seal, tachometer drive shaft Gasket, tachometer housing "O" ring, sealing "O" ring, sealing Gasket, gear pump body "O" ring, rubber "O" ring, rubber "O" ring, shut-off valve "O" ring, sealing "O" ring "O" ring	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	