

## Group 07

# lubricating system


you own the best ... repair with the best!
genuine CUMMINS parts

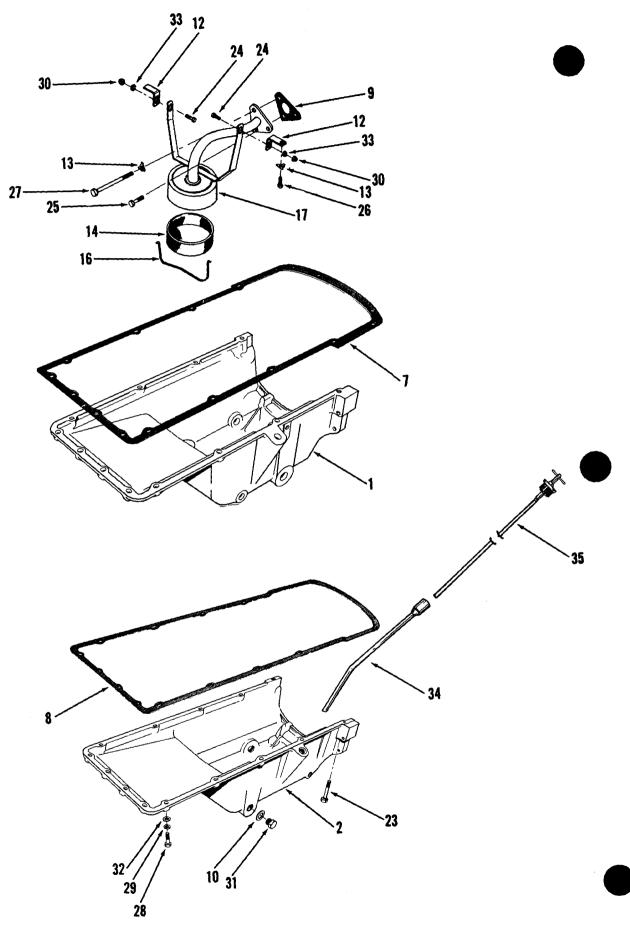


OIL PANS Figure 1

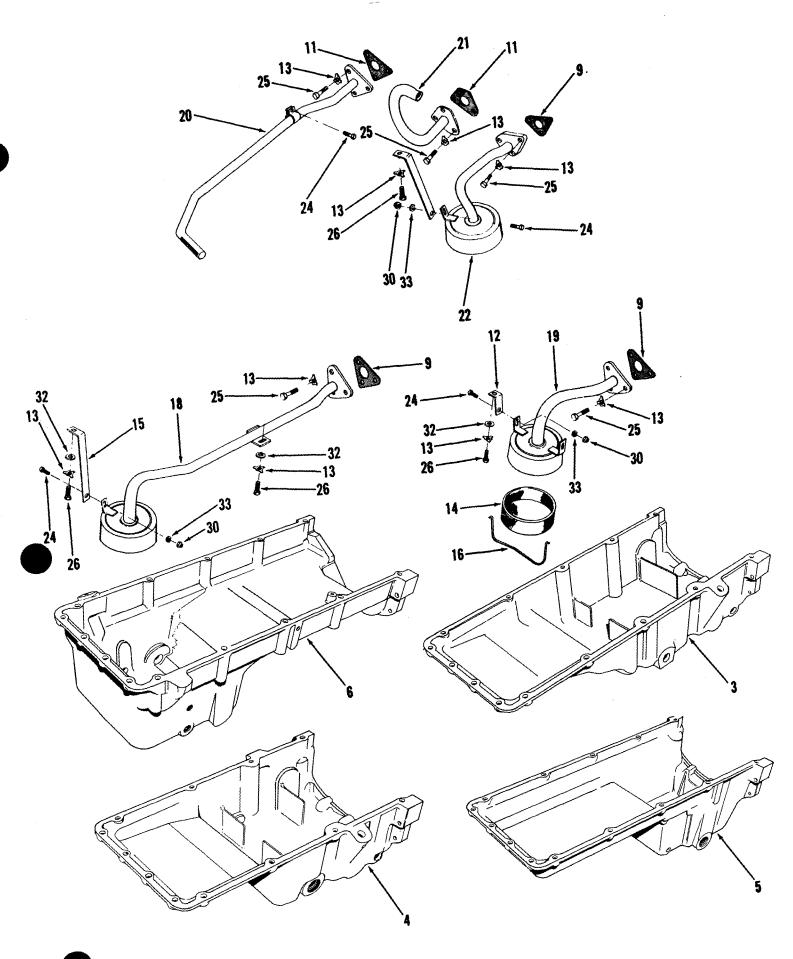


OIL PANS Figure 1

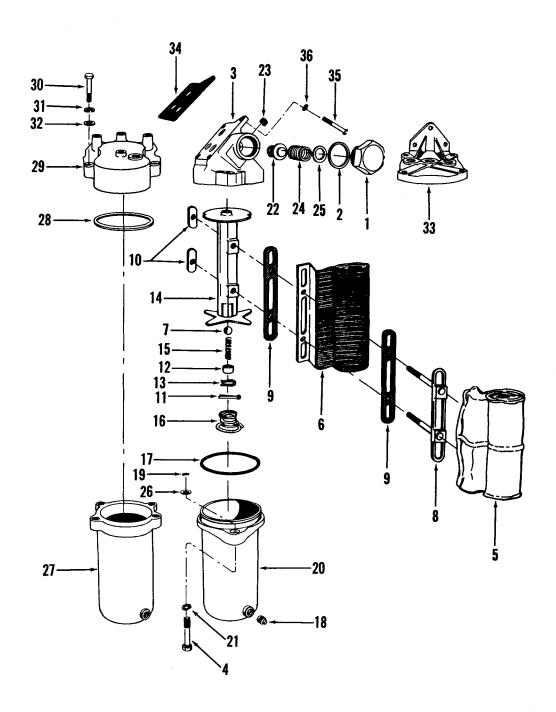

LUBRICATING OIL FILTER Figure 2

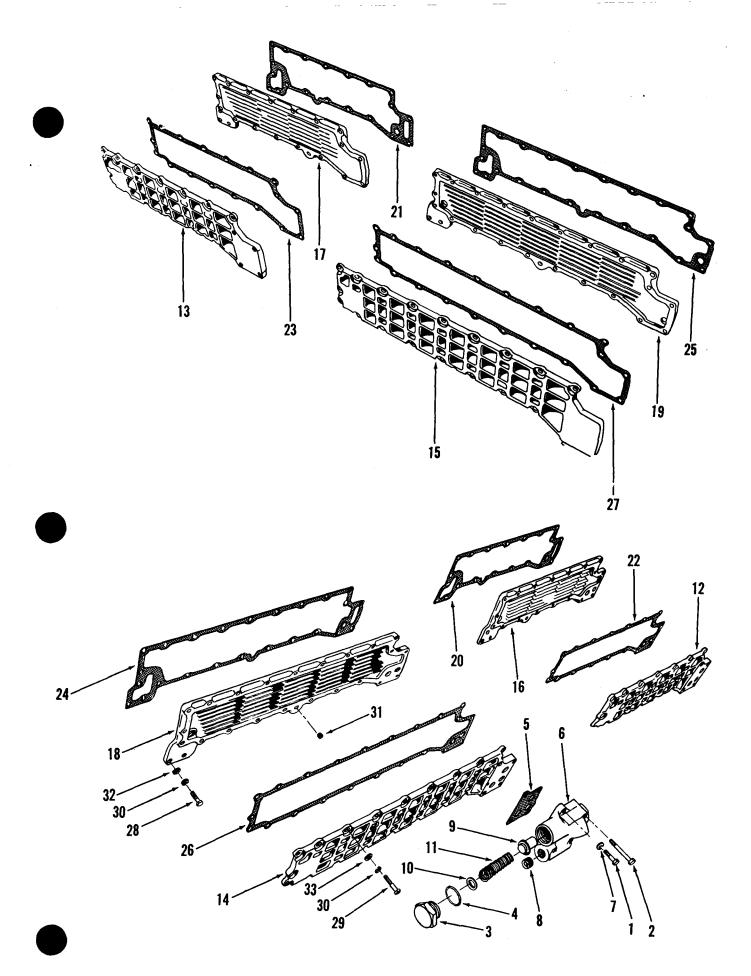

LUBRICATING OIL COOLER Figure 3

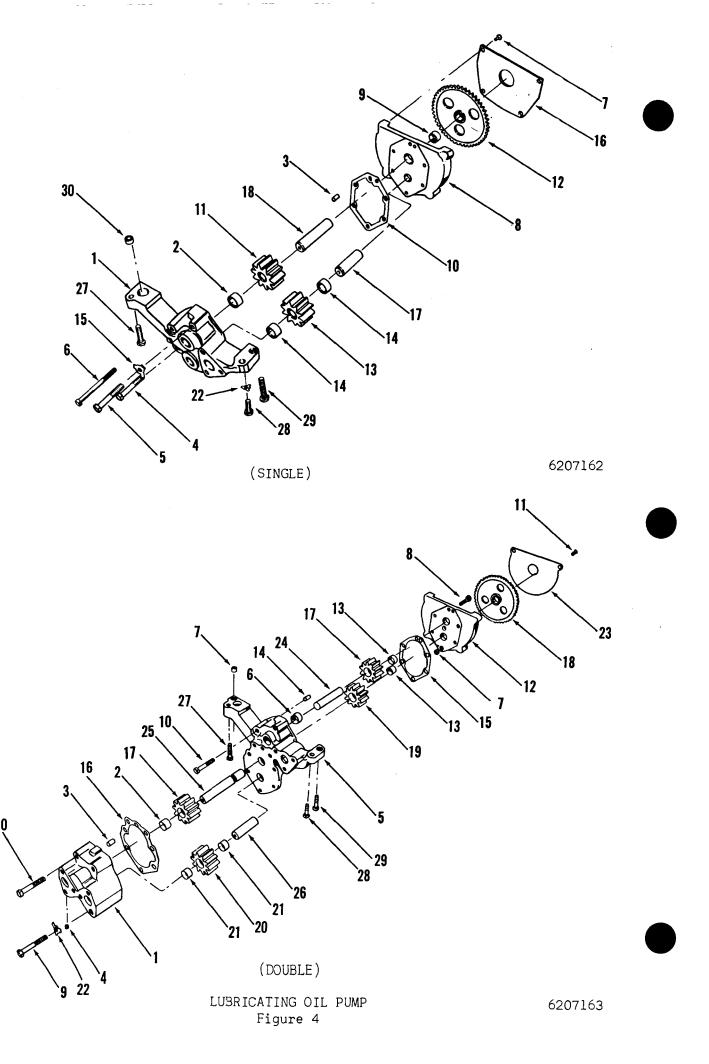

#### OIL PAN

Engine Model	No. Cyl.	ВВ	Eng	ine Ap	plicat IP	ion P	A G	Part Number	Par	t Name	No. Req.	Fig. No.	Ref. No.	Use	Remarks
					. }				REAR	SUMP					
/6-200	6	x						151602	Pan, oil		1	1	1	Std.	
78-265	8	x						151603	Pan, oil		1	1	2	Std.	
6-200	6	x						154676	Pan, oil		1	1	3	Opt.	Shallow
/6 <del>-</del> 200	6	x						153685	Pan, oil		1	1	4	Opt.	Shallow
8-265	8	x						154857	Pan, oil		1			Opt.	Shallow
/8-265	8	X		X				149526	Pan, oil		1	1	5	Std.	Use with double oil pump to provide 45° angularity in all directions at (2) gallon low level.
VT8-370	8						x	Not Rel.	Pan, oil		1	1		Std.	
V6-200	6			x				157854	Pan, oil		1			Std.	Use with double oil pump for high angularity to provide 45° operatio fore and aft and 30° to each side.
									FRONT	SUMP					
<b>/6-</b> 200	6	х						152066	Pan, oil		1			Opt.	Dipstick right side•
/6-200	6	х						152067	Pan, oil		1			Opt.	Dipstick left side.
6-200	6	х						156332	Pan, oil		1			Opt.	except left dip-
<b>78-</b> 265	8	х						151333	Pan, oil		1		6	Opt.	stick boss machined.
Interchan	geab1	e No.	. 1	and	No.	2	des	ign							

Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref No.
		BAFFLE	V6	V8		
V6-200	149527	Baffle, oil pan	1			
		GASKET				
V6-200	151102	Gasket, oil pan	1		1	7
V8-265	151101	Gasket, oil pan		1		3
V6-200, V8-265	144667	Gasket, tube flange to pan	1	1	1	9
	67946	Gasket, drain plug	2	2	1	10
V8-265	149747	Gasket, aerator tube		1	1	11
		HANGER				
V6-200, V8-265	105073	Hanger, suction tube and flange	2	2	ľ	12
		LOCKPLATE				
V6-200	68908	Lockplate, hanger and tube flange to pump	5	5	1	13
V8-265	117559	Lockplate	2	2		
		SCREEN				
V6-200, V8-265	43226-2	Screen, suction	1	1	1	14
		STRAP				
V6-200	152622	Strap, suction bell (use with 152066, 152067 front sump pan)	1		1	15
	157956	Strap, suction bell (CI)	/1			
		SUPPORT				
V6-200, V8-265	69171-1	Support, suction screen	1	1	i	16
Interchange	eable No. 1 and	No. 2 design.				

				15	5 <b>e</b> a	1-63
Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref. No.
			V6	V8		
		TUBE AND FLANGE, SUCTION				
V6-200, V8-265	BM-71317	Tube and flange, suction	1	1	1	17
V6-200	BM-74801	Tube and flange, suction (use with 152066, 152067 front sump pan)	1		1	18
V6-200	BM-76546	Tube and flange, suction (use with 153685, 154676, 154857 shallow rear sump pans)	1		1	19
V8-265	BM-73416	Tube and flange, scavenger suction (use with double oil pump) (CI)		1	1	20
V6-200	BM-79601	Tube and flange, scavenger suction (use with double oil pump) (CI)	1			
V6-200,	BM-73414	Tube, aerator (use with double oil pump)	1	1	1	21
V8-265	BM-73412	Tube, suction (use with double oil pump) (CI)		1	1	22
V6-200	Вм-79604	Tube, suction (use with double oil pump) (CI)	1			
V8-265	BM-72913	Tube and flange, suction (use with 151333 front sump pan)		1		
		TUBE, BY-PASS				
V6-200,	BM-76065	Tube, lubricating oil by-pass (std.)	1			
V8-265 V6-200	BM-76067	Tube, lubricating oil by-pass (front sump pan)		-		
V8-265	BM-76066	Tube, lubricating oil by-pass (front sump pan)		1		
V6 <b>-</b> 200	Вм-79600	Tube, lubricating oil (CI)	1			
		HADDWADE				
1// 000	C 100 P	HARDWARE				
V6-200, V8-265	S-102-D S-107	Capscrew 3/8-16, UNC-2A 3"			1	23
	S-112	Capscrew 5/16-18, UNC-2A 3/4"  Capscrew 3/8-16, UNC-2A 1"			1	24
	S-112	Capscrew 3/8-16, UNC-2A 1" Capscrew 1/4-20, UNC-2A 3/4"			1	25
	S-117	Capscrew 3/8-16, UNC-2A 3/4"			١,	
	S-141	Capscrew 3/8-16, UNC-2A 2 3/4"			1	26
	S-174-B	Capscrew 3/8-16, UNC-2A 1 3/8"			1	27
	S-604	Lockwasher 3/8"			1	28
	109558	Nut 3/8"			1	29
	S-911-B	Plug, pipe 1/8"			1	30
	S-915-A	Plug, pipe 1/2"				
	110907	Plug, pipe, drain			1	31
	147416	Plug, cup				21
Interchange	eable No. 1 and					

### 07.01.1 Page 4 MISCELLANEOUS AND MOUNTING PARTS

Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Re No
		UADDWADE (CONTID)	V6	V8		
V6 <b>-</b> 200.	S-602	HARDWARE (CONT'D) Washer, plain 13/32"			1	32
V6 <b>-</b> 200, V8-265	101503	Washer, plain 3/8"			1	3:
					-	
		·				
	•					
						i
			i 			
	į					
	1			1	1	1

#### DIPSTICK AND TUBE

				T	1	1-63
Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref. No.
		TUBE	V6	V8		
V6-200,	147418	Tube, dipstick	1	1	1	34
V8-265	155403	Tube, dipstick (side of rocker cover)		1		
	159029	Tube, dipstick (mounts along forward side of R.B. rocker cover for checking oil, rear sump pans)	1	1		
	159036	Tube, dipstick (mounts in No. 2 combination flywheel housing and gear covers)	1	1		
	158459	Tube, dipstick (use instead of 147418 with one piece flywheel housing and gear cover)	1	1		
	158906	Tube, dipstick	1	1		
	158907	Tube, dipstick Disconnect from oil pans for field service	1	1		
.V6-200	156297	Tube, dipstick (use with 153685 cast, shallow rear sump oil pan)	1			
	159434	Tube, dipstick (use with 152066 front sump oil pan. Extends to rear of engine for tilt cab)	1			
	160337	Tube dipstick (use with 157237 flywheel housing and gear cover to permit oil level checking without raising cab)	1			
VT8-370	158707	Tube, dipstick		1		
V6-200, V8-265	161217	Tube, dipstick (CI)	1	1		
		SUPPORT				
V6-200, V8-265	159037	Support, tube clip Use with 159029	1	1		
	159038	Support, tube clip or 159036 tubes	1	1		
	159039	Support, tube clip	1	1		
		HARDWARE				
V6-200,	S-117	Capscrew 3/8-16, UNC-2A 3/4"				
V8-265	S-604	Lockwasher 3/8"				
	S-223	Nut 3/8"				
		9,0				
All parts in	nterchangeable	No. 1 and No. 2 design.				

#### DIPSTICK AND TUBE

Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref. No.
		BRACKET	<b>V</b> 6	V8		
V6-200	150808	Bracket	1			
V6-200, V8-265						
	147135	Bracket, tube support	1	1		
		CLAMP				
V6-200, V8-265	65798	Clamp, tube	1	1		
		CONNECTOR, TUBE				
V6-200, V8-265	146299	Connector, tube	1	1		
		DIPSTICK				
		Standard and unmarked dipsticks only are included in this Parts Book, because of the varied number of applications applied to them. Dipsticks may be ordered by the part number obtained from the original engine parts list, or by the part number stamped on the original dipstick.				
		Included also are three blank, unmarked dipsticks (straight type only) which Cummins Distributors can cut and mark to fit individual applications. Orders may be placed by specifying the following part numbers:				
V6-200	147417	Dipstick (gear cover type)	1		1	35
V8-265	147538	Dipstick (gear cover type)		1	1	35
VT8-370	158713	Dipstick		1		
V6-200, V8-265	131461	Dipstick (11 7/16" long) (unmarked)	1	1		
VO 200	131462	Dipstick (23 1/4" long) (unmarked)	1	1		
	131463	Dipstick (47 ll/16" long) (unmarked)	1	1		
	108470	Bushing	1	1		
	108469	Cover, top	1	1		
	108467	Handle	1	1		
	100971	Pin	1	1		
	108468	Washer	1	1		
						1

#### LUBRICATING OIL FILTER

Engine Model	No. Cyl.	В	BI	Engin Cl	e Ap	oplic IP	ation P	M	6	Part Numbei	r	Part Name		No. Req.	Fig. No.	Ref. No.	Use	Remarks
	-											LUBRICATING FILTER	OIL					
<b>/6-</b> 200	6	Х		Х						BM-7144	.9	Filter and head		1	2		Std.	Oil cooler mount
8-265	8	х		х						BM-7144	.9	Filter and head		1	2			
T8-370	8							Х		BM-6064	8	Filter and cover		1	2		Std.	Remote mounted.
										BM-5921	.6	Filter and cover		1	2		Opt.	Same as BM-60648 except has 10808 cover.
6-200	6			х						BM-7375	0	Filter by-pass		1			Std.	
'8 <b>-</b> 265	8			х						BM-7375	50	Filter by-pass		1			Std.	
T8 <b>-</b> 370	8							х		BM-7584	16	Filter, turbocharge	r oil	1			Std.	
			The state of the s															
			The state of the s															
	1	1		1	1		}	1		1				1	I	1	1	]

#### LUBRICATING OIL FILTER

Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.
		V6 V8					V6 V8	<del></del>	
	LUBRICATING OIL					LUBRICATING OIL			
	FILTER		ĺ			FILTER			
						REMOTE MOUNTED	ì		
	GROUP A	•				GROUP A	'		
M-71449	Filter and head assembly,								
151169	lubricating oil Cap, regulator	1 1 1		1	BM-60648	Filter and cover, lubricating oil	1 1		
140698	Gasket, regulator cap			2	106069	Capscrew to cover	4 4	i	30
144991	Head, filter	1 1	_	3	20621	Cover, filter	1 1		29
BM-54270	Filter. lubricating oil	1 1	2		114479 BM-60647	Decal Filter assembly	$\begin{vmatrix} 1 & 1 \\ 1 & 1 \end{vmatrix}$		
135168	Capscrew, filter head	2 2	2	4	BM-60646	Element, filter	1 1	1	
BM-60646	Element, filter	1 1			S-1953	Bag	1 1	1	
S-1953 134729	Bag, filter Separator	1 1	_	5 6	134729 BM-60645	Separator Spool assembly (128799)	$\begin{vmatrix} 1 & 1 \\ 1 & 1 \end{vmatrix}$		1
BM-60645	Spool, bag	1 1		"	128805	Ball, by-pass relief	1 1		
128805	Ball, by-pass relief	1 1	_	7	128800	Clamp, bag	1 1		
128800 128801	Clamp, filter Gasket, filter clamp	1 1 2 2		8 9	128801 128802	Gasket, bag Nut, elongated	2 2 2 2		
128802	Nut, elongated clamp	2 2	2	10	S-503	Pin, cotter	$\begin{bmatrix} 2 & 2 \\ 2 & 2 \end{bmatrix}$		
S-503	Pin, cotter	1 1		11	128803	Retainer, spring	1 1	1	
128803 128807	Retainer, spring Ring, retaining	1 1 1 1		12	128807 128804	Ring, retaining Spring, by-pass ball	$\begin{vmatrix} 1 & 1 \\ 1 & 1 \end{vmatrix}$		
128799	Spool, bag	1 1		14	128804	Spring, spool			
128804	Spring, by-pass adjusting	1 1		15	128799	Spool, bag	1 1		
128806 116024	Spring, filter "O" ring, shell to head	1 1 1		16 17	BM-58237 69751	Shell assembly Gasket, cover to shell	1 1 1 1		27
69901	Plug, drain	1 1		18	S-622	Lockwasher, cover to shell			32
135169	Ring, retaining	2 2		19	69901	Plug, pipe	1 1		18
BM-65789 S-608	Shell assembly Lockwasher, head to filter	1 1 2 2		20 21	S-610	Washer, plain	1 1	. 2	31
155072	Plunger, relief valve	1 1		22					
S-908	Plug, pipe, head	1 1		23					
139957 62815	Spring, plunger Shim	l l As	2	24 25		GROUP B	İ		
02010		Reqd.		123		Same as Group A except			
158208	Washer, head to filter	2 2	2	26					
					BM-59216	Filter and cover,			
					BM 37210	lubricating oil	1 1	.	
	GROUP B				108084	Cover, filter	1 1	. 2	33
	Same as Group A except								
	, and the second				l				
BM-	Filter and head	1 1							
158206	Head, filter (has 3/8"	1 1							
	N.P.T.F. in rear for by-								
	pass take-off)	1 1	2	3					
						·			
		1							
		}							
			}						
					ĺ				
			1		1				
			1						
					1			-	
					l				
		l	1	1	ł		1	1	1

#### LUBRICATING OIL FILTER

	<del></del>	,					13.	seed	1-0
Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.
	LUBRICATING OIL BY-PASS FILTER	V6 V8							
M-73750 145664 70188 70223 136750 150038 150039 159667 70189 70194 70299 145640 S-908 145665 BM-74445 114479 131911 S-908 BM-74441 116029 150037 150036	Filter, lubricating oil Bracket, mounting Capscrew, mounting bracket Capscrew, coupling half Cartridge Coupling half with nuts, cover Coupling half, cover Cover Lockwasher, bracket Lockwasher, coupling half Nut, mounting bracket "O" ring, cover Plug, cover Strap, mounting Shell, filter Decal, filter Orifice, plug #6 Plug, drain Support, upper "O" ring, support Spring, hold down Support, upper	2 2 1 1 1 1 1 1 1 1 8 8							
M-75846 153106 152499 153717	TURBOCHARGER OIL FILTER GROUP A  Filter, turbocharger Bolt, head Element, filter Head, filter	1 1 1 1							

Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref No.
			V6	V8		
10.045	15.07//	BRACES AND BRACKETS				
/8 <b>-</b> 265	159766	Brace, filter bracket		1		
/6-200, /8-265	156143	Bracket, filter (mounts filter in a horizontal position, from L.B. oil cooler cover. Center line of shell approximately 5 1/2" below center line of crankshaft, 9 7/8" out from center line of crankshaft, 9 7/8" out from engine center line.	1	1		
	158762	Bracket, filter (use with Woodward governor)	1	1		
VT8-370	160067 158604	Bracket, filter Bracket, turbocharger filter		1 1		
		GASKETS			-	
V6-200,	145075	Gasket, filter to cooler cover	1	1	2	34
V8-265, VT8-370		•				
					!	
		REGULATOR, LUBRICATING OIL PRESSURE (Use with Remote Mounted Filter)				
V6-200, V8-265,	BM-74634	Regulator, housing (Std. VT8-370-M)	1	1		
VT8-370	S-141	Capscrew, housing	1	1	2	]
	S-199-B	Capscrew, housing	1	1	2	2
	151169	Cap, pressure regulator	1	1	2	;
	140698	Gasket, pressure regulator	1	1	2	
	145075	Gasket, housing	1	1	2	!
	152249	Housing, regulator	1	1	2	1 6
	S-604	Lockwasher, housing	4	4	2	-
	S-901	Plug, pipe	1	1	2	8
	155072	Plunger	1	1	2	9
	62815	Shim, regulator	As	Reqd	2	10
	139957	Spring, regulator	1	1	2	11
		HARDWARE				
	S-141	Capscrew 3/8-16, UNC-2A 2 3/4"			2	35
	S-604	Lockwasher 3/8"			2	36

#### LUBRICATING OIL COOLER

Engine Model	No. Cyl.	В	BI	Engine Cl	Appi	licati P P	on M	G	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Use	Remarks
										COVER					
76-200	6	х		х					157419	Cover, element	1	3	12	Std.	L.B.
76-200	6	х		χ̈́					157418	Cover, element	1	3	13	Std.	R.B.
/8 <b>-</b> 265	8	Х		x					157417	Cover, element	1	3	14	Std.	L.B.
/8 <b>-</b> 265	8	х		x					157416	Cover, element	1	3	15	Std.	R.B.
T8 <b>-</b> 370	8		į				x		157417	Cover, element	1	3	14	Std.	L.B.
T8-370	8						х		157416	Cover, element	1	3	15	Std.	R.B.
8-265	8	x							161461	Cover, element	ľ			Opt	L.B. Has filter pat 3° angle from vertical. Use with front down exhaus
										ELEMENT			-		
/6 <b>-</b> 200	6	х		х					157463	Element, plate, cooler	1	3	16	Std.	L.B.
/6-200	6	Х		x	ı	ļ			157461	Element, plate, cooler	1	3	17	Std.	R.B.
<b>/8-</b> 265	8	X		x					157462	Element, plate, cooler	l ı'	3	18	Std.	L.B.
/8-265	8	х		x					157460	Element, plate, cooler	1	3	19	Std.	R.B.
T8-370	8						x		157462	Element, plate, cooler	1	3	18	Std.	L.B.
T8-370	8						x		157460	Element, plate, cooler	1	3	19	Std	R.B.
8-265	8	Х							161463	Element, plate, cooler	1			Opt.	L.B. Use with 161461
				The state of the s											
															i

Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref No.
		GASKET	<b>V</b> 6			
V6 <b>-</b> 200	157429	Gasket, element to block (L.B.)	1		3	20
	157427	Gasket, element to block (R.B.)	1		3	21
	157439	Gasket, cover to element (L.B.)	1		3	22
	157437	Gasket, cover to element (R.B.)	1		3	23
V8-265,	157428	Gasket, element to block (L.B,)		1	3	24
VT8-370	157426	Gasket, element to block (R.B.)		1	3	25
	157438	Gasket, cover to element (L.B.)		1	3	26
	157436	Gasket, cover to element (R.B.)		1	3	27
	161462	Gasket, cover to element (L.B.) Use with 161461, 161462.		1		
		HARDWARE				
	S-103-D	Capscrew 3/8-16, UNC-2A 1 1/4"			3	2
	S-120	Capscrew 3/8-16, UNC-2A 1 3/4"			3	2
	S-604	Lockwasher 3/8"			3	3
	S-910-B	Plug, pipe 1/4"			3	3
	S-602	Washer 13/32"			3	3:
	63842	Washer 13/32"			3	3:

#### LUBRICATING OIL PUMP

feets:	N.	Г		<u> </u>	.l '	\!				Т			<del></del>				Γ	1	issued 1-63
Engine Model	No. Cyl.	В	B	Eng C	ine /	ippli IP	catio P	on M	6	<u>:</u>	Part Numbe	r	Part Name	R	Yo. eq.	Fig. No.	Ref. No.	Use	Remarks
													LUBRICATING						
													OIL PUMP					-	
6-200, 8-265	6,8	2	x								BM-7605	5	Pump, lubricating oil		1	4		Std.	
T8-370	8							>	(		BM-7605	5	Pump, lubricating oil		1	4		Std.	
6-200,	6,8			X							BM-7620	3	Pump, lubricating oil		1	4		Std.	Double
													·						
			ľ																
								Ì											
					•														
																!			
					1														
i					! !				:										
									!										
l parts	inte	rch	an	gea	ble	be	tw	eer	N	ıЬ.	l and	No	2 design.						
			1									- 1			İ	1		i	

#### LUBRICATING OIL PUMP


Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Part Number	Part Name	No. Reg.	Fig. No.	R
	LUBRICATING	V6 V8							
						;			l
	OIL PUMP								ļ
	(SINGLE)						ŀ		
	GROUP A								
M-76055	Pump, lubricating oil	1 1							
BM-76861	Body and bushing (149635)	1 1		1					
68365 70760	Bushing, body Dowel, body	2 2		2		1		1	١
S <del>-</del> 104	Capscrew, cover to body	3 3		4		1			İ
<b>S</b> -137	Capscrew, cover to body			5					l
108707	Capscrew, cover to body	2 2	4	6					
114463	Capscrew, plate	4 4		7			1	l	
BM-74650	Cover, pump (151032)	1 1		8		1			
68365	Bushing, cover	1 1		9					
143694 143403	Gasket, cover to body Gear, driver	1 1		10 11	i			ŀ	
149151	Gear, drive, main	1 1		12					
BM-71393	Gear, idler (143402)	1		13					
68365	Bushing, gear	2 2	4	14					
68908	Lockplate, cover to body	6 6		15				1	
151033	Plate, cover	1 1		16	i			Ì	
143406 143405	Shaft, idler Shaft, drive	1 1	1	17 18				1	
110100				10	!				
	LUBRICATING	:							
	OIL PUMP								ļ
	(DOUBLE)								
	GROUP B								
<b>M-</b> 76203	Pump, lubricating oil	1 1	. 4				ĺ		
BM-76877	Body and bushing (149955)	1 1		1					
68365	Bushing, body	1 1		2					
70760 S-965-E	Dowel, body Plug, pipe			3 4					1
BM-76201	Body and bushing (152038)	1 1		5					
68365	Bushing, body	1 1		6			1		
69236	Dowel, body	1 1	. 4	7					
S-103-D	Capscrew, cover to body	1 1		8					İ
S-104 S-137	Capscrew, cover to body	1 1	1	9					
5-137 114463	Capscrew, cover to body Capscrew, plate	4 4		10 11					
BM-73405	Cover and bushing (149809)		1						
68365	Bushing, cover	1 1	ŀ	13					
69236	Dowel, cover to body	1 1		14					
143694	Gasket, cover to body	1 1	4	15					
149816 143403	Gasket, scavenger pump Gear, drive	1 1 2 2		16 17					
149151	Gear, drive (main)	1 1		18				1	
149719	Gear, drive	1 1							ĺ
BM-76878	Gear and bushing, idler								
	(149972)	1 1		20					
68365	Bushing, gear	2 2 2		21					
68908 151620	Lockplate			22					
151620 143405	Plate, cover Shaft, drive	$egin{array}{cccc} 1 & 1 \\ 1 & 1 \end{array}$		23					
149717	Shaft, drive (Scavenger)	1 1		25					
149718	Shaft, idler	1 1		26					
•									
	 nterchangeable No. 1 and No.		İ						

	·				is	seed	1-63
Engine Model	Part Number		Part Name		No. Req.	Fig. No.	Ref No.
			DOWELS	V6	V8		
V6-200, V8-265, VT8-370	69236	Dowel, pump to		2	2	4	30
			LOCKPLATE				
V6-200, V8-265, VT8-370	68908	Lockplate, pum	np to block	2	2	4	22
	0.100.5		HARDWARE				
	S-103-D S-120	Capscrew Capscrew	3/8-16, UNC-2A 1 1/4"			4	28
	108707	Capscrew	3/8-16, UNC-2A 1 3/4" 3/8-16, UNC-2A 1 1/2"			4	27 29


## Group 08

## cooling system


commins continued to the continue of the conti

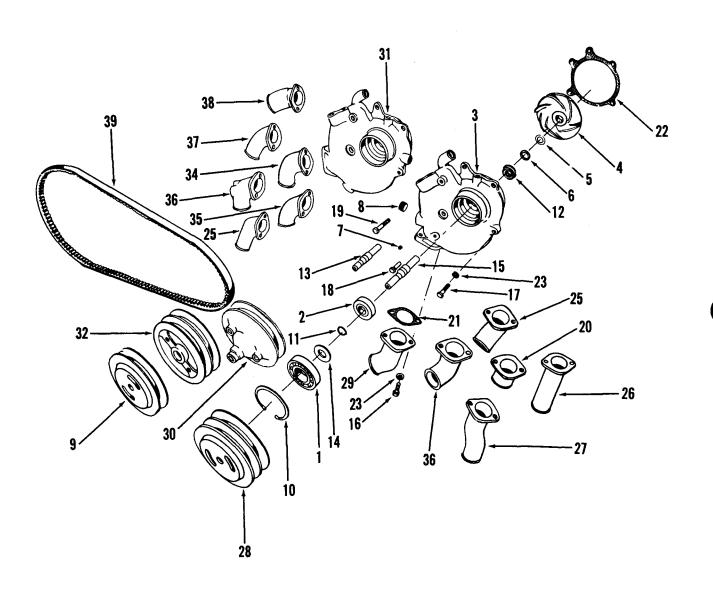


WATER PUMPS AND PULLEYS Figure 1

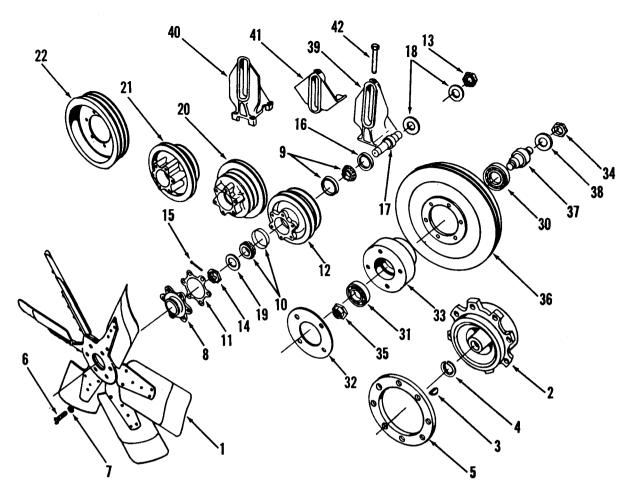

FANS, FAN HUBS, AND FAN BRACKETS Figure 2

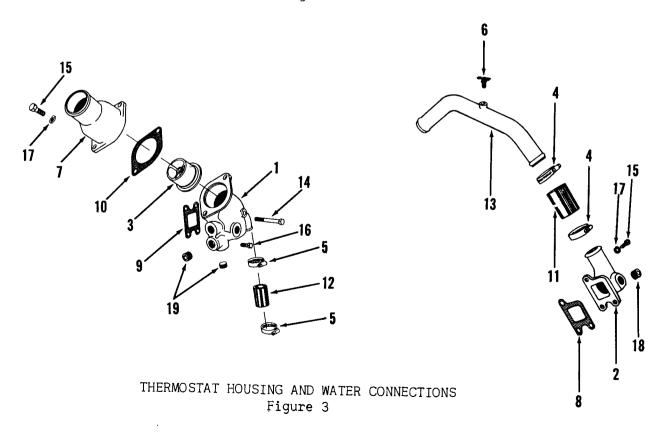

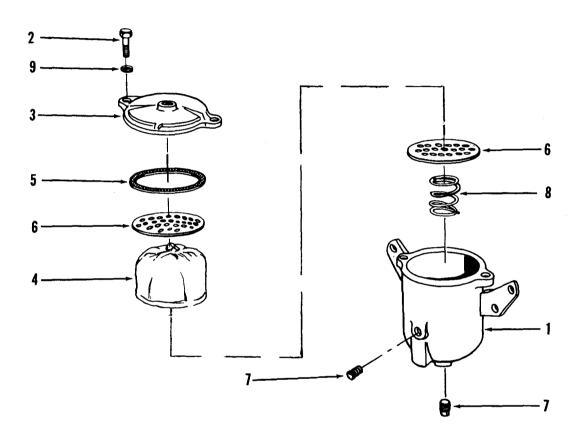

CORROSION RESISTOR Figure 4

#### WATER PUMP

	T	Т				_						Τ			ı	1		issued 1-63
Engine Model	No. Cyl.	В	В	Eng I C	ine I I	App	olicat IP	tion P	M	G	Part Number	Part I	Name	No. Req.	Fig. No.	Ref. No.	Use	Remarks
												WATER	PUMP					
V6-200	6	>	(								BM-76115	Pump, water		1	1		Std.	Low mount fan, 149506 pulley.
V8-265	8	>									BM-76115	Pump, water		1	1		Std.	
V6-200, V8-265	6,8	)	(								BM-78680	Pump, water		1	1		Opt	Same as BM-76115, less pulley.
V6-200,	6,8	)	(								BM-76161	Pump, water		1	1		Opt	High mount fan, 155227 pulley.
											BM-78658	Pump, water		1	1		Opt	Same as BM-76161, less pulley.
							A CONTRACTOR OF THE PARTY OF TH				BM-76435	Pump, water		1	1		Opt	Same as BM-76161, except has 154586 pulley.
											BM-78618	Pump, water		1	1		Opt	Same as BM-76161, except has 159768 body.
											BM-78414	Pump, water		1	1		Opt	Same as BM-76161, except has 15911? pulley.
V6-200	6			X							BM-79557	Pump, water		1	1		Std	
V8-265	8			Х							BM-79557	Pump, water		1	1		Std	except has 158056 158057 sheaves.
V6-200 V8-265	6,8										BM-79143	Pump, water		1	1		Opt	High mount fan. Constant velocity inlet.
VT8-370	8					1			Х		BM-78847	Pump, water		1	1		Std	
											BM-78016	Pump, water		1	1		Opt	Same as BM-78847, except has 156658 body, 156660 pulley.
											·							
												19						
<del></del>																		

#### WATER PUMP

Part Number	Part Name	No. Req		Fig. No.	Ref. No.	Part Number	Part Name	No. Req.	Fig. No.	Ref No.
	WATER PUMP (LOW MOUNT FAN) GROUP A	V6 V	/8				WATER PUMP (HIGH MOUNT FAN) (CONT'D)	V6 V8		
S-16237	Pump, water (less pulley)		1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	9 1 2 3 4 5 6 7 8 10 11 12 13 14	BM-78618 159768 BM-78414 159112	GROUP C  Same as Group A except:  Pump, water Body (Same as 157398 except has brazed by-pass plug)  GROUP D  Same as Group A except:  Pump, water Pulley, water pump (use with 159117 generator pulley, 159113 crankshaft pulley)		1	3
M-76161 155227 BM-78658 69866 * 154577 157398 S-1109 BM-76114 143913 135079 S-911-B S-995 70183 * S-16237 144306 * 159330 154639	Ring, snap		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		28 1 2 3 4 5 6 7 8 10 11 12 15 14	BM-79557 S-111 S-605 158056 158057 BM-78847 154967 156658 S-962-E BM-76114 143913 135079 S-911-B S-915-A S-995 158714 S-16255 144306 159192	GROUP E  Same as Group A except:  Pump, water Capscrew, sheave Lockwasher Sheave, fixed Sheave, adjusting  GROUP F  Pump, water Bearing, ball Body Cock, drain Impeller (159182) Film, bonding Seat, ceramic Plug, pipe Plug, pipe Plug Pulley Ring, retaining Seal Shaft			4 5 6 7

		т			<b>.</b>		is	sved	1-0
Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Part Number	Part Name	No. Req.	Fig. No.	Ref No.
	WATER PUMP	V6 V8							
	HIGH MOUNT FAN	1							
	(CONT'D)	1							}
	GROUP G				i				
	Same as Group E except:								
BM-78016	Pump, water								
156660	Pulley	1	1	32					
	GROUP H								
	Same as Group E except:								
BM- 158 <b>5</b> 33	Pump, water Body	1							
158714	Pulley	1							
								}	
				ļ					
								-	
				1					

## 08.01.2 Page 4 MISCELLANEOUS AND MOUNTING PARTS issued 1-63

Engine Model	Part Number	Part Hame		No. Req.	Fig. No.	Re No
		BELTS	V6	V8		
V6-200, V8-265	123818	Belt, water pump (low mount fan) Note: Belt for high mounted water pump same as fan drive belt.	1	1	1	39
	124421	Belt, water pump (CI)	1	1	1	39
VT8-370-M	154318	Belt, water pump and sea water pump		1	1	39
VT8-370-M	S-923-E	Cock, drain		1		
		CONNECTION				
V6-200,	68270	* Connection, water inlet (2.5" long) (std. low mount fa	n) 1	1	1	20
V8-265	158150	Connection, water inlet	1	1	1	2
	158059	Connection, water inlet	1	1	1	2
	154590	Connection, water inlet	1	1	1	2
	156399	Connection, water inlet, straight (7.31" long)	1	1	1	2
	156661	Connection, water inlet	1	1	1	3
	151075	Connection, water inlet, 90° forward, 20° in	1	1	1	3
	154591	Connection, water inlet, 90° straight in	1	1	1	3
	69246	Connection	1	1	1	3
	158059	Elbow, down, forward, special angle	1	1	1	2
	158646	Connection, 90° elbow points to front, 25° rotated from capscrew center line	1	1	1	3
VT8-370-M	160064	Connection, water inlet				
		GASKET		1		
V6-200,	154358	Gasket, water pump to block	1	1	1	2:
V8-265	9221	* Gasket, inlet connection	1	1	1	2
		H A R D W A R E				
	S-103-D	Capscrew 3/8-16, UNC-2A 1 1/4"			1	18
	S-112	Capscrew 3/8-16, UNC-2A 1"			1	10
	S-137	Capscrew 3/8-16, UNC-2A 2"			1	19
	108707	Capscrew 3/8-16, UNC-2A 1 1/2"			1	1
	S-604	Lockwasher 3/8"			1	23
* Interchan	 geable No. 1	and No. 2 design.				
			1	1	,	1

#### FAN

												 				issued	1-03
Engine Model	No. Cyl.	B B	Engin I CI	ie Appl	ication P	M	G	Part Number			Part Name	No. Req.	Fig. No.	Ref. No.	Use	Remarks	
											FAN						
V6-200, V8-265	6,8							141854	Fan			1	2	1	Opt.	30" sucker, L. low mount	Н.
								21036	Fan			1	2	1	Opt.	24" sucker, R. high mount	.Н.
								149154	Fan	ı		1	2	1	Opt.	28" sucker, L. high mount	.Н.
								160620	Fan	ı		1			Opt.	28" blower, low mount	
									`								
			1176										}				
							į										

#### FAN HUB

Engine	No.			[nair		nnlie		•		Da-4	1				N.	Fi	n. z		issued 1-63
Engine Model	Cyl.	В	BI	Engin Cl	e a	PP11C	P	M	6	Part Number			Part	Name	No. Req.	Fig. No.	Ref. No.	Use	Remarks
												F A	N	HUB					
V6-200	6	Х								BM-71346	Hub,	fan	(1-	40879)	1	2	2	Std.	Low mount fan.
V8-265	8	X								BM-71347	Hub,	fan	(1-	40879)	1	2	2	Std.	
V6-200, V8-265				х						BM-79555	Hub,	fan			1	2		Std.	High mount fan.
V6-200, V8-265	6,8	Х								BM-75818	Hub,	fan			1	2		Opt.	High mount fan.
		Х								BM-73285	Hub,	fan			1	2		Opt.	Same as BM-75818 except has 150067 hub.
		Х								BM-74769	Hub,	fan			1	2		Opt.	Same as BM-75818 except has 152661 hub.
		X								BM-77838	Hub,	fan			1	2		Opt.	Same as BM-75818 except has 158258 hub. For fan with 3" pilot, 4 bolts on 4 1/2" bolt circle, .557:1 ratio.
		Х								BM-78993	Hub,	fan			1	2		Opt.	Same as BM-75818 except has 158466 hub. Use with Freon air condi- tioner.
		X								BM-78268	Hub,	fan			1	2		Opt.	Same as BM-75818 except has 158780 pulley, 158780 same as 150067 pulley except generator drive groove 8.8" diameter.
		Х								BM-76431	Hub,	fan			1	2		Opt.	High mount fan with 3" pilot, 12 1/4" fan center, .429:1 ratio, fan mounting face 8.440.
										BM-76456	Hub,	fan			1	2		Opt.	Same as BM-75818 except has 154519 pulley, 146648 shaft.
										BM-	Hub,	fan	(15	8519)		2		Opt.	Use with fans mounted on the crankshaft.
Interchar	geab	.е !	lo.	1   6	anc	l No		2 0	de s	ign.									

#### FAN HUB

Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.
	FAN HUB (LOW MOUNT) GROUP A	V6V8				FAN HUBS (CONT'D) GROUP E	V6V8		
BM-71346 BM-71347 S-313 142143 153125	Hub, fan (140879) Hub, fan (140879) Key, hub Ring, retaining Spacer, fan	1 1 1 1 1 1	2 2 2 2 2	2 2 3 4 5	BM-78993 158466	Same as Group A except: Hub, fan Hub, pulley	1 1 1 1 1		
	FAN HUB (HIGH MOUNT) GROUP A					GROUP F Same as Group A except:			
BM-75818 S-103-D S-604 143085 BM-73891 143116	Hub, fan Capscrew, fan to hub Lockwasher, fan Spacer, pilot Hub, pulley Bearing	1 1 6 6 6 6 1 1 1 1 1 1	2 2 2 2 2	6 7 8	BM-78268 158780	Hub, fan Hub, pulley	1 1 1		
116759 143108 149366 67532 146650 S-510	Bearing Gasket Hub, pulley Nut, shaft Nut, shaft Pin, cotter		2 2 2 2	10 11 12 13 14 15		GROUP G Same as Group A except:			
106276 149369 67526 146651 S-911-B	Seal, oil Shaft Washer, clamp Washer, clamp Plug, pipe	1 1 1 1 2 2 1 1 2 2	2 2 2 2	16 17 18 19	BM-79555 157184 157776 S-112 S-604 157185 158554	Hub, fan Hub, pulley Shaft Capscrew Lockwasher Pulley, generator drive Support, fan hub GROUP H	1 1 1 1 6 6 6 6 6 1 1 1		
	GROUP B					Same as Group A except:			
BM-73285 150067	Same as Group A except:  Hub, fan Hub, pulley (8" diameter)			20	BM-76456 154519 146648	Hub, fan Pulley Shaft	1 1 1 1 1 1		
	GROUP C Same as Group A except;				BM-76431 S-16093	GROUP I Hub, fan Bearing, ball		2 2	30
BM-74769 152661	Hub, fan Hub, pulley	1 1 1		21	141771 S-103-D 67547 142189 67532 142176 S-604	Bearing, ball Bearing, ball Capscrew, hub or pulley Gasket, hub to pulley Hub, fan Nut, shaft Nut, huglock Lockwasher, hub to pulley	1 1 6 9	2 2 2 2 2 2	31 6 32 33 34 35 7
	GROUP D Same as Group A except:				S-911-B 154316 120334 67546	Plug, pipe Pulley, fan Shaft Washer, shaft		2 2 2 2	36 37 38
BM-77838 158258	Hub, fan Hub, pulley	1 1 1 1 1		22	BM-	GROUP J (158519)	) 1 1	2	

#### FAN BRACKET

				is	sved	1-63
Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref. No.
		BRACKET	V6	V8		
V6-200,	156122	Bracket, fan	1	1	2	39
V8-265	158305	Bracket, fan	1	1	2	40
	154526	Bracket, fan	1	1	2	41
V8-265	155995	Bracket, fan (CI)	1	1	2	
V6-200,	160206	Bracket, fan hub (similar to 158305 except provides 21 3/4" fan center)			į	
V8-265	100200	21 3/4" fan center)	1	1	2	
				; }		
						E
				ļ		
				1		
•						
			!	1	1	1

### 08.04.1 Page 2 issued 1-63 MISCELLANEOUS AND MOUNTING PARTS

Engine Model	Part Number		Part Name		No. Req.	Fig. No.	Re No
			BELTS	V6	V8		
		For holts not shown so	e application Chart page 1 Group 13.08				
V6-200,	157857	Belt, fan (CI)	application onale page 1 Gloup 13.00	2	2		
V8 <b>-</b> 265	158474	Belt, fan (use with F:	rean air compressor)	2	2		1
	100114	bere, ran (doe with r.	room dir compressor)				
			COUPLING				-
V6-200, V8-265	157083	Coupling, flexible (u	se with remote mounted fan)	1	1		
			SCREWS	,			
V6-200, V8-265	64290-A	Screw, fan adjusting	1/2-13, UNC-2A 5 3/16"	1	1	2	42
			H A R D W A R E				
	S-103-D	Capscrew	3/8-16, UNC-2A 1 1/4"				
	S-119	Capscrew	5/16-18, UNC-2A 1 1/4"				
	S-604	Lockwasher	3/8"				
	S-605	Lockwasher	5/16"				

08.05 Page 1 issued 1-63

				is	sued	1-6
Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref. No.
-·· <del></del>		SPACER, FAN	V6	V8		
76-200, 78-265	143085	Spacer, fan (Std. CI)	1	1	<u>.</u>	
/8-265	119211	Spacer, fan (Std. CI)		1		
V6-200	66440	Spacer, fan (Std. CI)	1			
						:

#### THERMOSTAT HOUSING

Engine Model	No. Cyl.	R	P	Engine Application BI CI I IP P M G					on	M	Part G Number		Part Name		No. Req.	Fig. No.	Ref. No.	Use	Remarks
MUUCI	UJI.	F	D	T	UI	<u> </u>	ır	Ť	T	IM	<u>"</u>	Wallengt .		rait Name	ney.	nu.	110.	038	NGMAI NS
														ERMOSTAT IOUSING					
/6 <b>-</b> 200	6	X										157646	Housing,	thermostat	1			Std.	
/6 <b>-</b> 200	6				х							155983	Housing,	thermostat	2			Std.	
18-265	8	x										157647	Housing,	thermostat	1	3	1	Std.	
18-265	8				х							155983	* Housing,	thermostat	2			Std.	
/T8-370	8									х		157129	Housing,	thermostat	1			Std.	
<b>/6-</b> 200	6	X										150019	Housing,	thermostat	1			Opt.	Has tapped hole install 45° angle valve for heater take-off.
/6-200	6	X										160208	Housing,	thermostat	1			Opt.	Same as 157646 except outlet flange rotated to clear 21 1/4' fan center.
/6-200	6	X										160250	Housing,	thermostat	1			Opt.	Same as 157646 except has 3/4" N.P.T. in 1 5/8 dia. boss.
/6-200	6	×										152438	Housing,	thermostat	1			Opt.	By-pass blocked remote torque coverter cooler.
/8-265	8	X										152744	Housing,	thermostat	1			Opt.	
/8-265	8	X										160209	Housing,	thermostat	1			Opt.	Same as 160208 except has by-p
/8-265	8	X										160249	Housing,	thermostat	1			Opt	Same as 157647 except with 3/4 N.P.T. in 1 5/8 dia. boss.
· Not i	tero	;ha	ng	e al	ble	e 1/	lo.	1	а	nd	N	o. 2 desig	n						

#### WATER CONNECTIONS

Engine Model	No. Cyl.	В	Er Bl	gine Cl	Applica I IP	ation P	M G	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Use	Remarks
									WATER CONNECTIONS					
V6-200	6	Х						140347	Connection, water outlet	2	3	2	Std.	
V8-265	8	Х						140347	Connection, water outlet	2	3	2	Std.	
V6-200	6	Х						BM-77717	Connection, water crossover	1			Std.	Straight out to rear.
V8-265	8	Х						BM-77718	Connection, water	1			Std.	Straight out to rear.
<b>V6-</b> 200	6			х				140348	Cover, water outlet	2			Std	
V8-265	8			Х				140348	Cover, water outlet	2			Std	
V6-200	6			Х				158149	Connection, water	1			Std	
V8-265	8			Х				158149	Connection, water	1			Std	
VT8-370	8						Х	157130	Connection, water	1			Std	
VT8-370	8						Х	157131	Connection, water	1			Std	
V6-200, V8-265	6,8	Х						156870	Connection, water outlet	1			Opt	Routes tube over gear cover low on the L.B. side
V6-200, V8-265	6,8	х						156866	Connection, water	1			Opt	Routes tube behi gear cover to cl a direct driven steering pump.
	:							156867	Connection, water	1			Opt	
V6-200, V8-265	6,8	Х						160216	Connection, water outlet	1			Opt	Outlet straight up.
V6-200, V8-265	6,8	х						159575	Connection, water outlet	1			Opt	Use with Vickers VT-M-27-LI pump.
						and the same of th								
										:				

#### THERMOSTAT

						d 1-63	
Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref. No.	
<del></del>			V6	V8		_	
		THERMOSTAT					
/6-200, /8-265	140669 *		1	1	3	3	
76-200, 78-265	135675	Thermostat (170° - 185° F) (CI)	2	2			
/T8-370-M	146076	Thermostat (160° - 175° F)		1			
/T8-370-M	158313	Support, thermostat housing		1			
			ļ				
			ļ			į.	

Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref. No.
		CLAMP, HOSE	٧6	V8		
V6-200, V8-265, VT8-370-M	43828-A *	Clamp, hose, thermostat housing outlet	4	4	3	4
V6-200, V8-265, VT8-370-M	43828-B *	Clamp, hose, water crossover pipe	4	4	3	5
VT8-370-M	43828-D	Clamp, hose (For 157131 connection)		2		
VT8-370-M	68152	Clamp, hose		2		
		COCK, DRAIN				
V6-200, V8-265	S-962-E	Cock, drain	1	1	3	6
		COVER				
V6-200, V8-265	147729	Cover, housing (2 1/4" water outlet)	1	1	3	7
V6-200, V8-265	158767	Cover, housing (Also used as lifting bracket)	1	1		
V6-200, V8-265	158006	Cover, water connection (Std. CI)	2	2		
V6-200, V8-265	158007	Cover, water outlet (Std. CI)	2	2		
V6-200, V8-265	155285	Cover, housing (2 $1/4$ " water outlet. Locates center line of the outlet 1.85" above top surface of housing at $20^{\circ}$ toward centerline of engine in a horizontal plane.	1	1		
V6-200, V8-265	140325	Cover, housing (2" water outlet)	1	1		
V6-200, V8-265	154589	Cover, housing (2" water outlet forward and in)	1	1		
						ı
* Interchar	ngeable No la	d No. 2 design.				

				is	sued	1-63
Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref. No.
		GASKET	<b>V</b> 6	V8		
V6-200, V8-265, VT8-370-M	139675 *	Gasket, water crossover connection	3	3	3	8
V6-200, V8-265, VT8-370-M	140514 *	Gasket, thermostat housing to cylinder head	1	1	3	9
V6-200, V8-265, VT8-370-M	140514 *	Gasket, water outlet cover	2	. 2	3	9
V6-200, V8-265, VT8-370-M	140329 *	Gasket, thermostat housing cover	1	1	3	10
V6-200, V8-265, VT8-370	155984	Gasket, thermostat housing (Std. CI, M)	2	2		
V6-200, V8-265	140515	Gasket, water crossover connection (CI)	2	2		
VT8-370-M	9221	Gasket, water crossover		1		
V6-200, V8-265,	154643	HOOK, LIFTING  Hook, lifting	2	2		
		HOSE				]
V6-200, V8-265, VT8-370-M	63495 *		2	2	3	11
V6-200, V8-265, VT8-370-M	61554 *	Hose, thermostat housing outlet	1	1	3	12
VT8-370-M	110980	Hose, water connection		1		
	HS0402700MS	Hose		1		
	HS0403000MS	Hose		1		
* Interchan	geable No. 1 an	d No. 2 housing.				
	<u> </u>		1	<u> </u>	-	<u> </u>

Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref No.
		PIPES	V6	V8		
116,000	140407					
V6-200, V8-265	140687	* Pipe, water crossover (Std.)	1	1	3	13
V6-200, V8-265	158157	Pipe, water crossover (CI)	1	1		
V6-200, V8-265	158158	Pipe, water crossover (CI)	1	1		
VT8-370-M	157133	Pipe, water by-pass		1		
V6-200, V8-265	156173	Pipe, water crossover (low contour on L.B. side)	1	1		
V6-200, V8-265	156868	Tube, water crossover (Routes behind the gear cover to clear a direct driven steering pump)	1	1		
V6-200, V8-265	156869	Tube, water crossover (Routes over the gear cover low on the L.B. side)	1	1		
		HARDWARE				
	S-931-C	Bushing				
	S-102-D	Capscrew 3/8-16, UNC-2A 3"			3	14
	S-103-D	Capscrew 3/8-16, UNC-2A 1 1/4"				
	S-112	Capscrew 3/8-16, UNC-2A 1"			3	15
	S-117	Capscrew 3/8-16, UNC-2A 3/4"				
	S-120	Capscrew 3/8-16, UNC-2A 1 3/4"			3	16
	S-163	Capscrew 3/8-16, UNC-2A 3 1/4"		ļ		
	108707	Capscrew 3/8-16, UNC-2A 1 1/2"				
	69318-A	Elbow				
	S-604	Lockwasher 3/8"			3	17
	S-945	Nipple				
	S-908	Plug, pipe 3/8"				
	S-915-A	Plug, pipe 1/2"			3	18
	S-985-A	Plug, pipe 1/4"			3	19
	S-1042-A	Tee				
	S-930-E	Tee				
	S-602	Washer 3/8"				
	<u> </u>			1	1	

#### CORROSION RESISTOR

Engine	No.			Eng	ine	Appli	icati	ion			Part			No	.   1	ig.	Ref.		issued
Engine Model	Cyl.	В	Bl	Ci		Appli 1P	j	P	M	6	Number		Part Name	Rec	.   N	ig. Io.	No.	USe	Remarks
													ROSION Sistor						
-200	6	x		>	(						132716	Resistor,	corrosion	1		4		Std.	
3-265	8	x		>						ļ	132716	Resistor,	corrosion	1		4		Std.	
T8-370	8								x		132716	Resistor,	corrosion	1		4		Std.	
							THE THE PERSON NAMED IN COLUMN 1												

#### CORROSION RESISTOR

Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.
	CORROSION RESISTOR	V6 V8							
	GROUP A								
2716 32717 0223 32718 32732 32730 32719 98675 32731 '0233	Resistor, corrosion Body, corrosion resistor Capscrew, cover to body Cover, corrosion resistor Element, corrosion re- sistor Gasket, cover Plate, corrosion resistor Plug, drain Spring, corrosion resistor Washer, cover to body	1 1 1 1 2 2 1 1 1 1 1 2 2 2 1 1 1 1 2 2 2 2	4 4 4 4 4 4	1 2 3 4 5 6 7 8 9		·			

			····	is	sved	1-63
Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref No.
			V6	V8		
		BRACKET				
V6-200, V8-265	156474	Bracket, mounting	1	1		
V8 203	160368	Bracket, mounting (mounts filter on top of engine)	1			
VT8-370-M	156846	Bracket		1		
		CLAMP, HOSE				
V6-200,	69465	Clamp, hose	1	1		
V8-265, VT8-370-M	43828	Clamp, hose	4	4		
		CONNECTOR				
V6-200, V8-265, VT8-370	134325	Connector, elbow	2	2		
		HOSE				
VT8-370	144018	Hose		1		
	139479	Hose		1		
		SPACERS				
VT8-370-M	68368	Spacer		2		
		VALVE				
V6-200, V8-265, VT8-370-M	157098	Valve		1		
		HARDWARE				
	S-141	Capscrew 3/8-16, UNC-2A 2 3/4"				
	S-167-A	Capscrew 1/4-20, UNC-2A 7/8"				
	S-600	Lockwasher 1/4"				
	S-604	Lockwasher 3/8"				ļ
	S-631	Washer, plain 9/32"				

#### TORQUE CONVERTER COOLER

Engine Model	No.			Eng	ine /	Appli	catio	OR	6	Part Number		No.	Fig.	Ref.		
Model	Cyl.	В	BI	CI	1	IP	P	M	G	Number	Part Name	Req.	No.	No.	Use	Remarks
											TORQUE CONVERTER COOLER					
T8-370	8							)	x	111957	Cooler, torque converte:	r   1			Std.	
T8 <b>-</b> 370	8							)	X	160068	Cooler, oil	1			Std.	For Marine gear
								-								
													-			
					-											
						1. 22.047										
					4											

### 08.09.1 Page 2 MISCELLANEOUS AND MOUNTING PARTS

Engine Model	Part Number		Part Name	No Rec	. Fig. . No.	Re No
		TOI	RQUE CONVERTER COOLER			
VT8-370	160066	Bracket, cooler				
	43828-D	Clamp, hose			2	
	159179	Cover, cooler	(rear)		ı	
	159178	Cover, cooler	(front)		L	
	103535	Flange, cooler			2	
	68210	Gasket, connect	ion		2	
	137076	Gasket, front o	cover		1	
	68209	Gasket			2	
	159312	Hose			1	
				:		
			CAPSCREWS			
	S-103-D	Capscrew	3/8-16, UNC-2A 1 1/4"			
	S-115	Capscrew	5/16-18, UNC-2A 7/8"			
	S-126	Capscrew	3/8-16, UNC-2A 2 1/2"			
	S-137	Capscrew	3/8-16, UNC-2A 2"			
			LOCKWASHERS			
	S-604	Lockwasher	3/8"			
	S-605	Lockwasher	5/16"			

08.09.1 Page 3

Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref No.					
			V6	8V							
		GEAR OIL COOLER									
/T8 <b>-</b> 370	43828 <b>-</b> C	Clamp, hose		4							
	160068	Cooler, gear		1	-						
	159180	Cover		1							
	159181	Cover		1							
	63241 <b>-</b> J	Hose		2							
	160059	Support		1							
	160060	Support		1							
	BM-79033	Tube, heat exchanger		1							
	İ										
	2										

#### HEAT EXCHANGER

				13	sped	1-0
Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref No.
			V6	8.0		
		HEAT EXCHANGER				
VT8-370-M	159306	Brace		1		
	135588	Cap, filler		1		
	43828-C	Clamp, hose		2		
	S-962-E	Cock, drain		2		
	157128	Connection, outlet		1		
	137059	Cover		1		
	159179	Cover, engine oil cooler, rear		1		
	68241	Electrode, zinc		3		
	137077	Element		1		
	137067	Gasket, support cover to heat exchanger		1		
	137076	Gasket, outlet connection		1		
	158330	Gasket, cover to outlet connection		1		
	137155	Gasket, element to housing		1		
	135585	Gasket, pressure valve		1		
	63241 <b>-</b> L	Hose		1		
	137052	Housing		1		
	S-2902	Neck		1		
	137074	"O" ring		1		
	137075	"O" ring		1		
	157135	Support		1		
	BM-78488	Tube and flange		1		
	135587	Valve, pressure		1		
			3			
				}		

Engi <del>ne</del> Model	Part Number		Part Name	No. Req.	Fig. No.	R
			HARDWARE			
			CAPSCREWS			
	S-102-D	Capscrew	3/8-16, UNC-2A 3"			
	S-103-D	Capscrew	3/8-16, UNC-2A 1 1/4"			
	S-112	Capscrew	3/8-16, UNC-2A 1"			
	S-172-B	Capscrew	3/8-16, UNC-2A 1 1/8"			
	103023	Capscrew	7/16-14, UNC-2A 1"			
			LOCKWASHERS		į	
	S-604	Lockwasher	3/8"			
	s-607	Lockwasher	.190"			
	S-610	Lockwasher	7/16"			
			NUTS			
	S-223	Nut	3/8"			
	S-225	Nut	3/8"			
			SCREWS			
	131449	Screws	No. 10-24, 1/2"			
	142686	Screw, adjustin				
			WASHERS			
	S-602	Washer	13/32"			
	S-622	Washer	15/32"			

#### SEA WATER PUMP

	Ι										T					issued 1-63
Engine Model	No. Cyl.	В	В	Eng C	ine /	Applic IP	atior P	M	G	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Use	Remarks
T8-370	8							х		21731	Pump, water	1			Std.	Jabsco, Model 3570
			ļ	ŀ												
		ļ														
						1										
												ļ				
														<u> </u>		
									1							
		-			-											

#### SEA WATER PUMP

Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.
		V6 V	8						
	SEA WATER PUMP								
21731	Pump, sea water	1						1	Ì
102661 102660	Bearing, ball Body, pump	1 1							
130756	Cam	1						1	1
105598	Cover, end	1					ı		
130761	Ferrule	1							
105594	Gasket, cover	1 1							
130765 21601-R	Gasket, seal Impeller, pump (hot	1 1					1		
21001 11	water)	1	1						
S-327	Key, shaft	1					j		
130762	"O" ring	1						İ	
130757 S-16255	Pin, dowel Ring, snap	1	j						1
102665	Ring, snap	1					-	1	
21601-A	Screw, filister head	1 6	5						
130763	Seal	1							
S-16103	Seal hearing	1 1							
112054 112001	Seal, bearing Seal, splined	1							
130764	Seat, seal	1	.						,
102664	Shaft	1	.			·			
21601-H	Slinger	1							
130759 130760	Washer Washer	1							
130758	Wearplate	ı				ļ			
151898	Impeller (cold water)	1							
		1					į		
			1				Ì		
							-		1
		1							
		1	-				]		
		1							-
			1				ł		1
							ļ		
								1	
			1						
							1		
			-						
				ļ					
		1							
								1	
									1
									-
						·			
			[						
		1					1	1	

Page 3

	<del></del>			į is	sved	1-63
Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref. No.
VT8-370	154318	BELTS Belts, sea water pump and water pump	<b>V</b> 6	V8		
VT8-370	158325	BRACKETS Bracket, pump		1		
VT8-370	120789	CONNECTIONS Connection, inlet		1		
VT8-370	70186	GASKETS Gasket, pump		2		
VT8-370	159739	PULLEYS Pulley, sea water pump		1		
VT8-370	BM-78054	TUBES Tube and flange		1		
		HARDWARE CAPSCREWS				
	S-103-D S-112	Capscrew 3/8-16, UNC-2A 1 1/4" Capscrew 3/8-16, UNC-2A 1"				
	S-604	LOCKWASHER Lockwasher 3/8"				
	S-221	<b>NUTS</b> Nut 3/8"				
	S-658	WASHERS Washer, plain 21/32"				


18.11.1 Page 4

ed 1-63 Engine Model	Part Number	Part Name	No. Req.	Fig. No.	Re No
		KITS, REPAIR			
VT8-370-M	146893	Kit, major repair			
		•			
!					
!					
			ļ		

# Group 09

drive units

you own the best . . repair with the best genuine CUMMINS

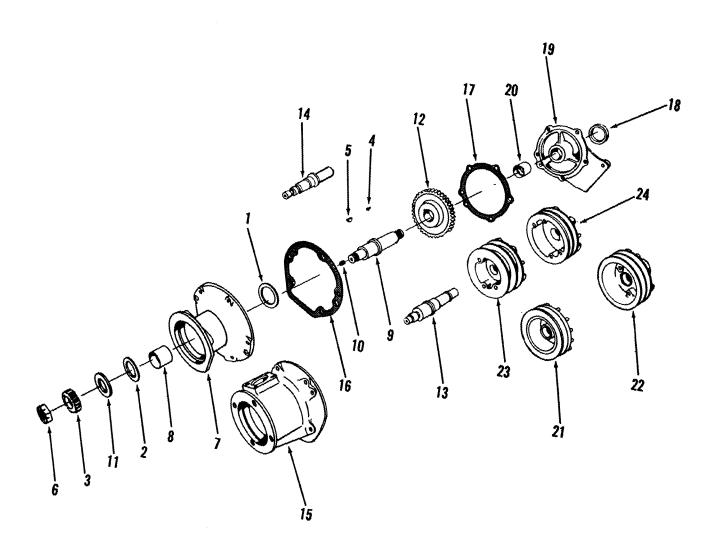

#### FUEL PUMP DRIVE

Engine No. Model Cvl.				E	ngin	ie A	ppli	cati	ion			Part					No.	Fig.	Ref.	Γ	issued 1-63
Model	Cyl.	B	E	31	CI	1	IP	F	)	M	G	Number	<u> </u>	Par	t Name		Req.	No.	No.	Use	Remarks
													FUEL	PU	MP	DRIVE					
V6-200, V8-265	6,8				Х							BM-74957	Drive,	fuel	pump		1			Std.	Use on engines without compressor.
V6 <b>-</b> 200	6	Х										BM-74524	Drive,	fuel	pump		1			Opt.	Use on engines without compressor. Same as BM-74957
V8-265	8	x										BM-74524	Drive,	fuel	pump		1			Opt.	except has 150079 s Rear drive.
V6-200, V8-265	6,8	x										BM-75287	Drive,	fuel	pump		1			Opt.	Same as BM-74524 less drive gear.
VT8-370	8									X		BM-78129	Drive,	fuel	pump		1			Std.	Extended drive. Same as BM-74524 except has 154176 shaft.
V6-200, V8-265	6,8							The standard of the standard o				BM-79052	Drive,	fuel	pump		1			Opt.	Use on engines without compressor, with Woodward governor.
	7		THE STATE OF THE S									ВМ-	Drive,	fuel	pump		1			Opt.	Same as BM-79052 except has 161079 extended drive shaft for rear mounted pulley.
				-																	
			- Maria																		
									-	and the same of th											
į																					

#### FUEL PUMP DRIVE

Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.
	FUEL PUMP DRIVE	V6V8				FUEL PUMP DRIVE (CONT'D)	V6V8		
BM-75287 116388 116389 102975 S-308 S-316 105297 BM-73432 116391 BM-75286 S-911-B 116390	Drive, fuel pump Bearing, thrust Bearing, thrust Coupling, drive Key, pulley Key, pulley Locknut, shaft Support and bushing (150064) Bushing, support Shaft and plug (151576) Plug, pipe Washer, clamping	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1 2 3 4 5 6 7 8 9	BM-79052 S-16069 102974 150139 151292 S-306 70897 103502 158763 114644 158764 S-670	GROUP E  Drive, fuel pump and Woodward governor Bearing, ball Coupling, half Gear, fuel pump drive, main Gear, governor drive Key, gear Nut, shaft Ring, retaining Shaft, drive Spacer, governor drive gear Support, drive Washer, plain, shaft		1 1	12
BM-74524 150139	Same as Group A except:  Drive, fuel pump Gear, drive  GROUP C	1 1 1		12	BM- 161079	GROUP F  Same as Group D except:  Drive, fuel pump and Woodward governor Shaft, drive	1 1 1	1	
BM-78129 150139 154176	Same as Group A except:  Drive, fuel pump Gear, drive Shaft, drive		l .	12 13					
BM-74957 150079 150139	GROUP D  Same as Group A except:  Drive, fuel pump Shaft Gear	1 1 1 1 1							

		T			sued	
Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Ref. No.
		ADADTED	V6	V8		
	DW 70414	ADAPTER  (150070) (mounts on extended chaft)	,			
/6-200, /8-265	BM-78416	Adapter, fuel pump drive (159079) (mounts on extended shaft)	1	1		
	147297	Sleeve	1	1		
		COVER				
V6-200, V8-265	154915	Cover, fuel pump support (use with 154911 support when drive pulley is omitted)	1	1		
		GASKET			-	
V6-200, V8-265	139845	Gasket, front support to gear cover	1	1	1	16
V6-203	139846	Gasket, rear support to gear cover	1	1	1	17
		SEAL, OIL				
V6-200,	146909	Seal, oil (2 3/8" O.D.) Use with extended shaft	1	1		
V8-265	140896	Seal, oil (2 $1/2$ " O.D.) Use with extended shaft	1	1	1	18
		SUPPORT				
V6-200,	BM-78027	Support, fuel pump drive (154911)	1	1		
V8-265	BM-71356	Support, fuel pump drive (139915)	1	1		
	BM-74038	Support, fuel pump drive (147440)	1	1	1	19
	144800	Bushing, support	1	1	1	20
	:					

09.03 Page 4 issued 1-63

#### FUEL PUMP DRIVE PULLEYS


Eng. Mod.	Illu Ref.	ıs. No.	Part No.	No. Grooves	Belt Size	Dia.	Remarks
V6	1	21	BM-74076 (151625)	1	3/4"	6"	
V8	1	21	BM-74075 (147262)	1	3/4"	6"	
V6	1	22	BM-74909 (153121)	2	11/16"	7"	For Vickers VT-16 pump. Same as 148693 except timing marks
V8	1	22	BM-74437 (148693)	2	11/16"	7"	For 148694 hydraulic pump
V6							
V8	1	23	BM-77013 (157649)	2	11/16"	7"	Same as 148693 except barring lugs ground down
V6							
V8	1	24	BM-77900 (158153)	2	11/16"	7"	Same as 148693 except has (4) tapped holes
V6							( · , copped notes
V8			BM-74072 (151578)	2		9 <del>1</del> "	Has special Poly-U belt groove. Requires 151576 shaft and SAE No. 2 or smaller flywheel housing
VT8-370			BM-78499 (157346)	1	3/4"	8 11/32"	Std.

All pulleys contain (1) 147297 sleeve.

## Group 10

### intake system

genuine CUMMINS parts

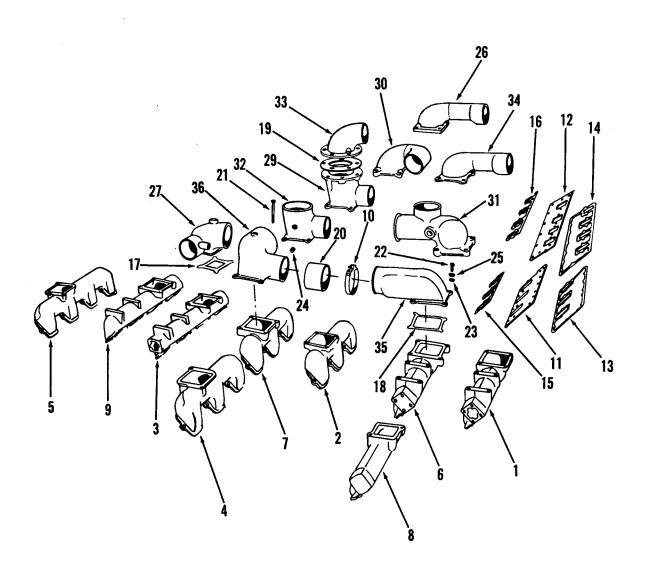

AIR INTAKE MANIFOLDS AND CONNECTIONS Figure 1

#### AIR INTAKE MANIFOLD

	Τ	Γ							ļ			<u> </u>	1	Γ.		issued 1-63
Engine Model	No. Cyi.	В	BI	Engii Cl	ne A i	pplic IP	atio P	N M	G	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Use	Remarks
											AIR INTAKE MANIFOLD					
V6-200	6	х								156499	Manifold, intake	1	1	1	Std.	L.B. front not drilled and tap- ped. Supersedes 155299. Also re- quires 156350, 156349, 156809 or 156808 connection, 156348 gasket.
V6-200	6	X		x						156498	Manifold, intake	1	1	2	Std	R.B. Supersedes 154997. Also re- quires 156350, 156349, 156809 cr 156808 connection, 156348 gasket.
V8 <b>-</b> 265	8	х		х						156497	Manifold, intake	2	1	3	Std	Supersedes 154998. Also requires connections and gasket listed above.
V8-265	8			Х						156497	Manifold, intake	1	1	3	Std.	R.B.
V8-265	8			Х						159572	Manifold, intake	1			Std.	L.B.
VT8-370	8							х		156497	Manifold, intake	2	1	3	Std.	
V6-200	6			Х						153606	Manifold, intake	1	1	4	Std.	
V6-200	6	X								156506	Manifold, intake	1			Opt.	L.B. front drilled and tapped. Supersedes 155300. Also requires connections and gasket listed above.
V8-265	8	х								153579	Manifold, intake	2	1	5	Opt.	
										156436	Manifold, intake	2			Opt.	
V6-200	6									155299	Manifold, intake	1	1	6	I.R.	L.B. Superseded by 156499.
V6-200	6									154997	Manifold, intake	1	1	7	I.R.	R.B. Superseded by 156498.
V6-200	6		-			,				155300	Manifold, intake	1	1	8	I.R.	L.B. Superseded by 156506.
V8-265	8									154998	Manifold, intake	2	1	9	I.R.	Superseded by 156497.
					See See See See See See See See See See											

10.01.1 Page 2 issued 1-63

AIR INTAKE MANIFOLD CONNECTION

Engine Model	No. Cyl.	В	BI	ngine Cl	Appi	lication P P	n M	G	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Use	Remarks
	'									CONNECTION					
6-200	6	Х		Х					156350	Connection, air crossover	1	1	26	Std.	Supersedes 15540 Use with 156497, 156498, 156499, 156506, 156436 manifolds.
/8 <b>-</b> 265	8	х		х					156350	Connection, air crossover	1	1	26	Std.	
/6 <b>-</b> 200	6	Х							156349	Connection, air intake	1	1	27	Std.	Supersedes 15529 Use with manifol listed above.
/8-265	8	Х				ļ			156349	Connection, air intake	1	1	27	Std.	
/6-200 /8-265	6,8	Х		Х					156352	Connection, air intake	1	1	27	Std.	
/8-265	8	х					-		156358	Connection, air intake	1			Opt.	Same as 155294 except has pro- visions for air compressor tube
/T8 <b>-</b> 370	8						x		157112	Connection, air intake	1			Std	
6-200	6	Х							156809	Connection, air intake	1	1	29	Opt.	Supersedes 1549 Use with manifo listed above.
/6-200, /8-265	6,8								155306	Connection, air intake	1	1	30	Opt.	L.B.
0-203									155307	Connection, air intake	1	1	31	Opt.	R.B.
		X							156808	Connection, air intake	1	1	32	Opt.	Points straight up. Supersedes 158049. Use wit manifolds liste above.
									156351	Connection, air intake	1	1	33	Opt.	Mounts on 15490 crossover, poin 45° toward from and away from R.B. of engine.
									159084	Connection, air crossover	1	1	34	Opt.	R.B. Like 15540 except with hos connection for compressor intahose.
									159085	Connection, air crossover	1	1	26	Opt.	Similar to 1563 except with hos connection for compressor inta hose.
									155407	Connection, air crossover	1	1	35	I.R.	Superseded by 156350.
									155294	Connection, air intake	1		36	I.R.	Superseded by

#### AIR INTAKE MANIFOLD CONNECTION

Engine Model	No. Cyl.		3 B	En	igino Ci	e Aj	pplic IP	atio P	n M	£	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Use	Remarks
mouti	-	+	, , 	Τ	J1	•	<u>'</u>	•	<b>,,,</b>	<u>.</u>	31411901	, are traine	1104-				
												CONNECTION					
											154901	Connection, air intake	1			I.R.	Superseded by
								ı			i i	,					156809.
6-200	6										158928	Connection, air intake	1			Opt.	R.B. or use when dual air cleaner
																	are used without
																	R.B. and L.B.
'6 <b>-</b> 200	6										158929	Connection, air intake	1			Opt.	L.B. Use when du air cleaners are used without a
																	crossover between R.B. and L.B.
			***************************************														
			,														
			l														
		١															

10.01.2 Page 4 issued 1-63

Engine Model	Part Number		Part Name		No. Req.	Fig. No.	Ref. No.
			CLAMP, HOSE	V6	8V		
V6-200,	125740	Clamp, air con		2	2	1	10
V8-265		,				_	
			PLATES, COVER				
V6-200	154227	Plate, push tu	be cover	2		1	11
V8-265, VT8-370	154226	Plate, push tu	be cover		2	1	12
			GASKET				
V6-200	151740	Gasket, push t	ube cover plate	2		1	13
V8-265	151707	Gasket, push t	ube cover plate		2	1	14
V6-200	154397	Gasket, intake	manifold	2		1	15
V8-265	154396	Gasket, intake	manifold		2	1	16
V6-200, V8-265, VT8-370	156348	Gasket, air co 156352, 156809	nnection (Use with 156349, 156350, , 156808 connections)	2	2	1	17
	155314		nnection (I.R. Use with 155294, 155407, , 154901, 158049 connections)	2	2	1	18
V8-265	156659	Gasket, air co	nnection (Use with 156351 connection)		1	1	19
			HOSE				
V6-200, V8-265	64015	Hose, connecti	on	1	1	1	20
			HARDWARE				
	S-105	Capscrew	3/8-16, UNC-2A 3 1/2"			1	21
	S-174-B	Capscrew	3/8-16, UNC-2A 1 3/8"			1	22
	S-604	Lockwasher	3/8"			1	23
	S-911-B	Plug, pipe	1/8"			1	24
	S-602	Washer	13/32"			1	25
					1		

#### AIR CLEANER

																	issued 1-63
Engine Model	No. Cyl.	В	BI	Engi Cl	ne Aj	pplic IP	ation P	M	G	Part Number		Part Name	No. Req.	Fig. No.	Ref. No.	use	Remarks
											AIR	CLEANER					
V6 <b>-</b> 200	6	х								106833	Cleaner,	air	1			Std.	12" dia. Dry type
V8 <b>-</b> 265	8	х								106833	Cleaner,	air	1			Std.	12" dia. Dry type
V8-265	8			Х						151606	Cleaner,	air	1			Std.	Donaclone. 10" dia.
V8-265	8			х						151609	Cleaner,	air	1			Std.	Donaclone. 14" dia.
······································	1																

#### AIR CLEANER

Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.
	AIR CLEANER	V6 V8							
06833 107135 106837 107136 107137 107134	GROUP A  Cleaner, air (12" diameter) Cover, shell Element assembly Gasket, element Gasket, flange Shell, cleaner								
150763 150771 150767 150757 133757 150772 150756 150747 150758 150766 133763 152792	GROUP B  Cleaner, air Body, lower Body, upper Cap, restriction Clamp, body Clamp, cup Clip, cover Cover, inner Cover assembly Cup assembly Element (P10-0853) Gasket, cover Cover Gasket, element Gasket, body and cup Screw Washer								
51606 151798 150781 133743 150779 133737 133745 150778 150778 150780 150782 133742	Cleaner, air Body, lower Body, upper Clamp, body and cup Cover, inner Cover, assembly Cup assembly Element (P10-1066) Gasket, cover Cover Gasket, element Gasket, body and cup								
* Also inc	luded in 151606.								

10.04.1 Page 3

	_		· · · · · ·	is	sved	1-
Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Re No
		ADAPTER	V6	V8		
V6-200,	106126	Adapter, air cleaner	1	1		
V8-265						
		BRACES AND BRACKETS				
<i>1</i> 6-200	155318	Brace, bracket	1			
	155308	Bracket, air cleaner (L.B.)	1			
	155309	Bracket, air cleaner (R.B.)	1			
		(155308, 155309, 155318 to be used with dual air cleaners)	ļ			1
	160093	Brace, air cleaner (use with dual air cleaners without crossover between L.B. and R.B.)	1			
		CLAMP, HOSE				
V6-200, V8-265	125741	Clamp, hose	4	4		
/8 <b>-</b> 265	125740	Clamp, hose (CI) Requires (3) 125741				
		HOSE				
/6-200, /8-265	103808	Hose, flexible	2	2		
		PLATE				
/6-200, /8-265	155317	Plate, bracket (use with dual air cleaners)	2	2		
		STRAP				
/6 <b>-</b> 200, /8 <b>-</b> 265	105916	Strap, cleaner	2	2		
76-200 76-200	66079	Strap, cleaner (CI)	2		 	
<b>'8-</b> 265	106220	Strap, cleaner (CI)		2		
8-265	151613	REDUCER Reducer (CI)				
200	101015	Neducer (61)		1		
				,		
				ŀ		
				}. 		

#### TURBOCHARGER

Engine Model	No.		ומ	Eng	gine	Ap	plica	ation	M	r	Part Number	Part Name	No Rec	. Fi	g.	Ref. No.	Use	Remarks
model	Cyl.	R	pi		·I	1	ır	r	M	u	Number			.   111	<u>'                                    </u>	NV.	O36	roundi na
												TURBOCHARGER						
T8-370	8	St. St. St. St. St. St. St. St. St. St.				1 to 1 to 1 to 1 to 1 to 1 to 1 to 1 to			X		вм <b>-</b> 785 <b>88</b>	Turbocharger	1				Std.	T-590. Inverted rear mounted.
			1777										-					10.06.
												EXHAUST OUTLE CONNECTIONS	1					
T <b>8-</b> 370	8								X		BM-67263	Connection, exhaust out	let 1				Std	
						The second secon												

#### TURBOCHARGER

TURBOCHARGER   1	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Part Number	Part Name	No. Req.	Fig. No.	Re
EMM-78588   Turbocharger   1   Bearing, thrust   1   1   1   1   1   1   1   1   1		THERMCHARCED	V8							
123797   Bearing, thrust		IORBOCHARGER								
102912			1							
turbine casing Capscrew, main casing to to turbine casing Capscrew, ront plate to main casing 116437 Capscrew, spacer 3 124673 Casing, exhaust 1 145078 Casing, turbine 1 1885-7580 Casing, main 1 123780 Casing, main 1 123780 Casing, main 1 123780 Casing, main 1 123780 Casing, main 1 123780 Casing, main 1 103307 Plug, pipe 2 16269 Cocknut, nozzle ring 4 16269 Cocknut, nozzle ring 4 16269 Cocknut, nozzle ring 4 16269 Cocknut, nozzle ring 5 1600 Cocknut, rozzle ring 8 1600 Cocknut, rozzle ring 8 1600 Cocknut, rozzle ring 9 1600 Cocknut, rozzle ring 1 1600 Allandor rozzle ring 1 1600 Allandor rozzle ring 1 1600 Allandor rozzle ring 1 1600 Allandor rozzle ring 1 1600 Allandor rozzle ring 1 1600 Allandor rozzle ring 1 1600 Allandor rozzle ring 1 1600 Allandor rozzle ring 1 1600 Allandor rozzle ring 1 1600 Allandor rozzle ring 1 1600 Allandor rozzle ring 1 1600 Allandor rozzle ring 1 1600 Allandor rozzle ring 1 1600 Allandor rozzle ro				Ì						
102171   Capscrew, main casing to to turbine casing   Capscrew, front plate to main casing   Capscrew, spacer   3   Capscrew, spacer   3   Capscrew, spacer   3   Casing, exhaust   1   Casing, exhaust   1   Casing, main   1   Casing   Cockwasher, main casing   Cockwasher, main casing   Cockwasher, main casing   Cockwasher, spacer   3   Cockplate, exhaust to   East   Casing, main   Casing   Cockplate, exhaust to   East   Casing, main   Casing   Cockplate, exhaust to   Casing   Casing, main   Casing   Casing   Casing, main   Casing	102912		8	ł	1		Ì		İ	1
The casing		turbine casing					Į.			
116437   Capscrew, front plate to main casing casing casing capscrew, nozzle ring 4   Capscrew, spacer 3   Casing, exhaust 1   Casing, exhaust 1   Casing, main 1   Casing, main 1   Casing, main 1   Casing, main 1   Casing, main 1   Casing, main 1   Casing, main 1   Casing, main 1   Casing, main 1   Casing, main 2   Casing, main 2   Casing, main 2   Casing, main 2   Casing, main 2   Casing, main 3   Casing, main 3   Casing, main 4   Casing, main 2   Casing, main 2   Casing, main 2   Casing, main 3   Casing, main 4   Casing, main 4   Casing, main 4   Casing, main 6   Casing, main 7   Casing, main 8   Casing, main 9   Casing, main 1   Casing 4   Casing, main 6   Casing 1   Casing, main 6   Casing 1   Casing, main 7   Casing 1   Casing, main 1   Casing 1   Casing 1   Casing, main 1   Casing 1   Casing, main 1   Casing 1   Casing, main 2   Casing 1   Casing, main 1   Casing 1   Casing, main 1   Casing 1   Casing, main 2   Casing 1   Casing, main 2   Casing, main 1   Casing 1   Casing, main 1   Casing 1   Casing, main 2   Casing, main 1   Casing 1   Casing, main 1   Casing, main 1   Casing, main 1   Casing, main 1   Casing, main 1   Casing 1   Casing, main 1   Casi	102171		8	ł					)	
to main casing S-168-C Capscrew, spacer 3 145078 168-T80 16257										
116437   Capscrew, nozzle ring   4	S-102		8							
S-16B-C	11/407			ļ	j					
124573				}						
145078   Casing, turbine   1   167790   Casing, main   1   134368   Casing, main   1   134368   Casing, main   1   134368   Casing, main   1   134368   Casing, main   1   134368   Casing, main   1   134368   Casing, main   1   134368   Casing, main   1   152780   Casket, heat shield   2   153728   Casket, heat shield   2   153728   Casket, heat shield   2   16269   Lockwasher, main casing   8   10 to turbine casing   8   10 to turbine casing   1   10 to main casing   1   10 cockplate, exhaust to   8   11 turbine casing   1   129516   Coid, coil restrictor   2   159224   Plate, diffuser   1   143365   Plate, oil seal   1   122656   Plate, oil seal   1   122656   Plate, amme   1   118349   Plug, oil inlet   1   118349   Plug, oil inlet   1   118349   Plug, oil finlet   1   118349   Plug, oil seal   1   14   Rotor and shaft   1   1   mpeller   1   1   %   Nut   1   1   %   Shaft   1   1   1   1   1   1   1   2   1   1   3   1   1   4   Sleeve   1   4   Wheel   1   4   Wheel   1   4   Wheel   1   4   Wheel   1   4   Screw, diffuser plate   4   5   13195   Seal, ring   1   103302   Seal, diffuser plate   4   118376   Shim, exhaust casing   AR   109382   Shim, exhaust casing   AR   109383   Shim, exhaust casing   AR   109383   Shim, exhaust casing   AR   100399   Soacer, thrust washer   1   5   Socer   Socer, thrust washer   1   5   Socer   Socer   1   5   Socer   1   5   Socer   1   5   Socer   1   5   Socer										1
BM-57850   Casing, main			1		İ				-	
125780   Bearing   1   134368   Casing, main   1   1   1   1   1   1   1   1   1						Į.				
134268					]	]		İ		-
103307										1
153728   Casket, heat shield   2								ĺ		
116269   Lockmut, nozzle ring										
S-605 Lockwasher, main casing to turbine casing S-605 Lockwasher, front plate to main casing S-600 Lockwasher, spacer 3 Lockwasher, spacer 3 Lockplate, exhaust to 8 turbine casing Lockplate, exhaust to 8 turbine casing 129516 Orifice, oil restrictor 2 Plate, diffuser 1 1 134365 Plate, front 1 1 126568 Plate, oil seal 1 1 126568 Plate, name 1 1 18349 Plug, oil inlet 1 1 118350 "O" ring 1 1 16660 Ring, nozzle 1 Rotor and shaft 1 Impeller 1 Impeller 1 Impeller 1 Impeller 1 Impeller 1 Impeller 1 Impeller 1 Impeller 1 Impeller 1 Impeller 1 Impeller 1 Impeller 1 Impeller 1 Impeller 1 Impeller 1 Impeller 1 Impeller 1 Impeller Impell										
S-605   Lockwasher, front plate   8										
S-605 Lockwasher, front plate to main casing solves and state to main casing lockwasher, spacer lockwasher, spacer lockwasher, spacer lockplate, exhaust to turbine casing lockplate, exhaust to turbine casing lockplate, exhaust to turbine casing lockplate, exhaust to turbine casing lockplate, exhaust to turbine casing lockplate, exhaust to turbine casing lockplate, exhaust to turbine casing lockplate, and lockplate, and lockplate loc	0 000								1	1
to main casing   S-600   Lockwasher, spacer   3   141937   Lockwasher, spacer   3   Lockplate, exhaust to   8   turbine casing   129516   Orifice, oil restrictor   2   159224   Plate, diffuser   1   134365   Plate, front   1   122658   Plate, oil seal   1   1   18349   Plue, oil seal   1   18350   Plate, name   1   18350   "O" ring   1   18550   Plate, oil seal   1   1   18560   Ring, nozzle   1   1   1   1   1   1   1   1   1	S-605		1 8							
S-600			-	1						
141937	S-600		1 3	ĺ	1	•			Ì	1
Turbine casing										
159224										
159224	129516	Orifice, oil restrictor	2	1	1					1
12836	159224	Plate, diffuser	1	1	İ	1			1	
18836	134365	Plate, front	1	1		-		İ		
118350										
118350 "O" ring 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1						1		
16660   Ring, nozzle   1   Rotor and shaft   1					ì	ľ		}	1	1
## Nut					1					
<pre>#</pre>					1					
* Nut Shaft 1 * Shaft 1 * Sleeve 1 * Washer 1 * Wheel 1 142129 Retainer, bearing 1 152869 Ring, oil seal 1 5-2267 Screw, name plate 4 5-1400 Screw, diffuser plate 4 113195 Seal, ring 1 109392 Seal, diffuser plate 1 153769 Shield, outer 1 101494 Shim, exhaust casing (.005) 109382 Shim, exhaust casing (.015) 123799 Spacer, thrust washer 1 5-626 Washer, plate to main 8		1			İ			1		
* Shaft  * Sleeve  * Washer  * Wheel  142129 Retainer, bearing 152869 Ring, oil seal 5-2267 Screw, name plate 4 Screw, diffuser plate 113195 Seal, ring 109392 Seal, diffuser plate 153769 Shield, outer 124650 Shield, inner 101494 Shim, exhaust casing 101494 Shim, exhaust casing (.005)  109382 Shim, exhaust casing (.010)  109383 Shim, exhaust casing (.015)  123799 Spacer, thrust washer 5-626 Washer, casing to turbine casing S-626 Washer, plate to main  8				}	ł	ł			1	
* Sleeve	*									1
* Wheel  1	*				1	<b>!</b>			ł	
# Wheel 1 142129 Retainer, bearing 1 152869 Ring, oil seal 1 S-2267 Screw, name plate 4 S-1400 Screw, diffuser plate 4 113195 Seal, ring 1 109392 Seal, diffuser plate 1 153769 Shield, outer 1 124650 Shield, inner 1 101494 Shim, exhaust casing AR (.005) 109382 Shim, exhaust casing AR (.010) 109383 Shim, exhaust casing AR (.015) 123799 Spacer, thrust washer 1 S-626 Washer, casing to turbine casing S-626 Washer, plate to main 8	* •									
142129       Retainer, bearing       1         152869       Ring, oil seal       1         S-2267       Screw, name plate       4         S-1400       Screw, diffuser plate       4         113195       Seal, ring       1         109392       Seal, diffuser plate       1         153769       Shield, outer       1         124650       Shield, inner       1         101494       Shim, exhaust casing       AR         (.005)       AR         (.010)       AR         109382       Shim, exhaust casing       AR         (.015)       AR         123799       Spacer, thrust washer       1         S-626       Washer, casing to       8         turbine casing       8         S-626       Washer, plate to main       8	×	£	1		ł	}			1	
152869	140100									
S-2267   Screw, name plate   4   4   13195   Seal, ring   1   109392   Seal, diffuser plate   1   153769   Shield, outer   1   101494   Shim, exhaust casing   AR   (.005)   Shim, exhaust casing   AR   (.010)   Shim, exhaust casing   AR   (.015)   Spacer, thrust washer   1   Spacer, thrust washer   1   Spacer, casing to   turbine casing   Seale   Washer, plate to main   8   Screw, name plate   4   4   4   4   4   4   4   4   4					1					
S-1400   Screw, diffuser plate   4   113195   Seal, ring   1   1   1   1   1   1   1   1   1									1	ľ
113195   Seal, ring   1   1   1   1   1   1   1   1   1					1			1		
109392   Seal, diffuser plate   1   153769   Shield, outer   1   1   1   1   1   1   1   1   1				1				ŀ		
153769   Shield, outer   1   1   1   1   1   1   1   1   1			1	1						
124650   Shield, inner   1   1   1   1   1   1   1   1   1			1							1
101494 Shim, exhaust casing (.005) 109382 Shim, exhaust casing (.010) 109383 Shim, exhaust casing (.015) 123799 Spacer, thrust washer 1 S-626 Washer, casing to turbine casing S-626 Washer, plate to main 8			1							
(.005) Shim, exhaust casing (.010) 109383 Shim, exhaust casing AR (.015) 123799 Spacer, thrust washer 1 S-626 Washer, casing to turbine casing S-626 Washer, plate to main 8			1					1		
109382   Shim, exhaust casing (.010) 109383   Shim, exhaust casing (.015) 123799   Spacer, thrust washer 1   S-626   Washer, casing to turbine casing   S-626   Washer, plate to main   8	101.7.		''''		1					
109383 Shim, exhaust casing (.015) 123799 Spacer, thrust washer 1 S-626 Washer, casing to turbine casing S-626 Washer, plate to main 8	109382	Shim, exhaust casing	AR							
(.015) 123799 Spacer, thrust washer 1 S-626 Washer, casing to 8 turbine casing S-626 Washer, plate to main 8	100383		A D			ľ		j.		
S-626 Washer, casing to 8 turbine casing S-626 Washer, plate to main 8	109363		I AR							
S-626 Washer, casing to 8 turbine casing S-626 Washer, plate to main 8	123799		1							
turbine casing S-626 Washer, plate to main 8				1						
S-626 Washer, plate to main 8						ĺ		1		
	S-626		8					1		
				1		l				
			1							
* Sold in balanced rotor assembly only.	* 6017	to balanced retar second:	ļ.,,			ł				

#### EXHAUST OUTLET CONNECTION

10.06.1 Page 3 issued 1-63

							13	sved	1-0
Part Number	Part Name	No. Req.	Fig. No.	Ref. No.	Part Number	Part Name	No. Req.	Fig. No.	Ref. No.
	EXHAUST OUTLET	V8							
	CONNECTIONS								
BM-67263	Connection, exhaust Outlet	1							
102912	Capscrew, connection	8							
106322 68908	Gasket, connection Lockplate, connection	1 8							
BM-67233	Tube and flange	1							
114020 126566	Coupling, pipe Flange	1 1							
127869	Tube	1							
									}
								ŀ	
								-	
		ĺ							
				Ì					
				}	<b>.</b>				
		Ì							
					<u> </u>				
					:				
					ļ		l		1
		-							
		1							
					ĺ				
							1		

10.06.2 Page 4 issued 1-63

Engine Model	Part Number	Part Name		No. Req.	Fig. No.	Re No
		BRACES		V8		
VT8-370	157115	Brace, turbocharger		1		
	157114	Brace, turbocharger		1		
		BRACKET				
VT8-370	114307	Bracket, tube clamp		1		100
		CLAMPS				
√T8 <b>-</b> 370	107460	Clamp, hose		1		
	69911 <b>-</b> A	Clamp, hose		3		
		CONNECTIONS				
VT8 <b>-</b> 370	118347	Connection		1		
	118350	"O" ring		1		
		E L B O W S				
√T8-370	110048	Elbow		1		
	136838	Elbow		1		
	121229	Elbow		3		
		GASKET				
/T8-370	114753	Gasket, turbocharger		1		
		LOCKWIRES				
T8-370	127473	Lockwire, heat blanket		2		
·mo:		STUDS				
T8-370	123656	Stud, turbocharger to exhaust manifold		6		
			1	1	1	

	T				Υ	seed	
Engine Model	Part Number		Part Name		No. Req.	Fig. No.	Re: No
			HARDWARE				
			LOCKWASHERS				
	S-112	Capscrew	3/8-16, UNC-2A 1"				
	S-172-B	Capscrew	3/8-16, UNC-2A 1 1/8"				
	108707	Capscrew	3/8-16, UNC-2A 1 1/2"				
			0.0000000				
			CAPSCREWS				
	S-604	Lockwasher	3/8"				
			NUTS				
	107440	Nut					
	S-225	Nut	3/8"				
			WAGUEDO				
			WASHERS				
	S-602	Washer, plain	13/32"				
				j			

10.06.2 Page 6

Engine Model	Part Number	Part Name	No. Req.	Fig. No.	Re No
		BLANKET	V8		
VT8-370	121896	Blanket, turbocharger heat	1		
	127451	Blanket, turbocharger heat	1		
	1				