

VOL. 2

**NUMERICAL INDEX
GROUP SHEETS**

**A United
Delco
Line**

Revised to March 1, 1971

(Replaces Numerical Index
September 1, 1970)

Numerical Index of Complete Units

Delco-Remy

Service Parts Catalog

NOTE

Units not shown are special or early production units not included in this catalog, but for which information will be supplied upon request.

For Units and Catalog Sheets not listed in this Index, see Index of Discontinued Units.

Model No.	Name	Group	Model No.	Name	Group	Model No.	Name	Group
187-U	Ignition Coil	41	704-5	Cranking Motor	17	977-D to Z	Generator	77
404-T to Z	Starting Switch	30	709	Cranking Motor	18-A	978 to 981	Generator	18
405-A to E	Starting Switch	30	710	Cranking Motor	17	1285-93-94	Control Switch	1
406-A to P	Starting Switch	30	712	Cranking Motor	20	1319	Control Switch	1
407-A-C	Switch	105	713	Cranking Motor	17	1333	Control Switch	1
407-D	Switch	100	717	Cranking Motor	17	1335-6	Magnetic Switch	2
407-E-F-G	Switch	105	719	Cranking Motor	18-A	1349-50-52	Control Switch	1
407-H-J	Switch	100	720-Q to Z	Cranking Motor	34	1365	Control Switch	1
408-A	Starting Switch	30	721-A to P	Cranking Motor	34-A	1366-7-9	Magnetic Switch	2
412 to 14	Cranking Motor	12	722-A to Z	Cranking Motor	35	1370 to 72	Magnetic Switch	2
422 to 29	Cranking Motor	12	724-A to Z	Cranking Motor	43	1374-5	Control Switch	1
429-J-K	Switch	107	725 to 27	Cranking Motor	17	1377-79	Switch	106
429-V-Z	Switch	107	730	Cranking Motor	18-A	1380	Control Switch-Pull	1
430-F to R	Switch	107	732	Cranking Motor	20	1385 to 89	Switch	106
431-B to Y	Switch	107	733	Cranking Motor	18-A	1393	Control Switch-Pull	1
433-A	Switch	107	736	Cranking Motor	18-A	1394	Switch	106
435-A to V	Switch	107	736-B to Z	Cranking Motor	45	1395	Control Switch	1
443	Cranking Motor	12	737-A to Z	Cranking Motor	48	1398	Switch	106
446 to 50	Cranking Motor	12	739-A to L	Cranking Motor	51	1400	Switch	106
452	Cranking Motor	15	743	Cranking Motor	18-A	1405-07	Switch	106
453 to 56	Cranking Motor	12	744	Cranking Motor	17	1408	Control Switch	1
457	Cranking Motor	17	747	Cranking Motor	17	1415	Switch	106
473	Cranking Motor	15	752	Cranking Motor	18-A	1421 to 24	Magnetic Switch	2
473-B to H	Switch	109	754	Cranking Motor	18-A	1430-1	Magnetic Switch	2
475	Cranking Motor	15	756	Cranking Motor	17	1432	Magnetic Switch	4
483	Cranking Motor	15	761	Cranking Motor	18-A	1433	Switch	104
484	Cranking Motor	17	767	Cranking Motor	18-A	1434	Magnetic Switch	2
486-7	Cranking Motor	15	769	Cranking Motor	17	1435 to 37	Switch	106
494	Cranking Motor	15	773	Cranking Motor	18-A	1449	Switch	106
495	Cranking Motor	17	774	Cranking Motor	17	1450 to 77	Magnetic Switch	4
496	Cranking Motor	15	775	Cranking Motor	20	1481-2-5-6	Switch	4
541	Cranking Motor	17	780	Cranking Motor	18-A	1494 to 9	Magnetic Switch	4
542	Cranking Motor	15	782	Cranking Motor	17	1501-2	Switch	103
543	Cranking Motor	17	790	Cranking Motor	17	1503-8-9	Magnetic Switch	4
546	Cranking Motor	17	793-4-5	Cranking Motor	18-B	1504 to 7	Switch	103
548	Cranking Motor	17	797	Cranking Motor	20	1510	Switch	103
571-2	Cranking Motor	15	798	Cranking Motor	17	1511	Switch	104
573-4	Cranking Motor	17	799	Cranking Motor	18-A	1512 to 19	Switch	102
580	Cranking Motor	17	802 to 33	Cranking Motor	23	1520-5 & 8	Magnetic Switch	4
622-A to Z	Distributor	58	834 to 880	Cranking Motor	23-A	1521-23	Switch	102
623-A to T	Distributor	82	882 Up	Cranking Motor	23-B	1524	Switch	101
629-A to Z	Distributor	29	939-A to Y	Generator	57	1526-7	Switch	102
642-A to Z	Distributor	43	941-A to ZS	Generator	38	1530	Switch	102
644	Cranking Motor	15	942-A to J	Generator	49	1531	Switch	101
644-A to Z	Distributor	59	950-2-3	Generator	18	1532	Switch	102
649	Cranking Motor	17	954 to 956	Generator	18	1533 & 9	Magnetic Switch	4
658	Cranking Motor	18-A	957 to 959	Generator	18	1535	Switch	104
660	Cranking Motor	18-A	960 to 965	Generator	18	1536	Switch	101
663	Cranking Motor	20	966 to 967	Generator	18	1537	Switch	102
665-6	Cranking Motor	17	968-69	Generator	18	1538	Switch	104
667	Cranking Motor	18-A	971 to 973	Generator	18	1540-1-4-9	Magnetic Switch	4
681-A to W	Dist. Vacuum Control	3	974 to 977	Generator	18	1542	Switch	102

Delco-Remy

NUMERICAL INDEX OF COMPLETE UNITS

Model No.	Name	Group	Model No.	Name	Group	Model No.	Name	Group
1543	Switch	100	1100056-7-9	Delcotron* Gen.	87-B	1101000 to 14	Generator	88-R
1545 to 8	Switch	102	1100061-2-3-4	Delcotron* Gen.	87-B	1101015-18-19	Delcotron* Gen.	88-W
1551	Switch	103	1100065 to 68	Delcotron* Gen.	87-B	1101051 to 57	Generator	89
1552	Switch	101	1100301 Up	Generator	87-J	1101351 to 80	Generator	91
1553 & 8	Magnetic Switch	4	1100341 Up	Generator	87-K	1101381 to 418	Generator	91-A
1554	Switch	101	1100372 Up	Generator	87-L	1101419 Up	Generator	91-B
1555	Switch	103	1100400 to 34	Generator	87-M	1101651 to 81	Generator	93
1556-7-9	Switch	102	1100435 Up	Generator	87-N	1101682 to 88	Generator	93-A
1560	Magnetic Switch	4	1100451 Up	Generator	88	1101689 Up	Motor Gen.	93-K
1561	Switch	100	1100471-2	Generator	88-A	1101701 to 30	Generator	93-B
1562	Magnetic Switch	101	1100501 to 41	Generator	88-C	1101731 to 60	Generator	93-C
1563-4	Magnetic Switch	4	1100543 to 52	Delcotron* Gen.	88-D	1101762 Up	Generator	93-D
1565 to 7	Switch	103	1100553	Delcotron* Gen.	88-E	1101851 Up	Generator	93-F
1568	Switch	100	1100554	Delcotron* Gen.	88-D	1101863 to 75	Motor Gen.	93-J
1569	Solenoid Switch	5-E	1100557-8	Delcotron* Gen.	88-E	1101876 Up	Generator	93-G
1570-1	Magnetic Switch	4	1100559-60	Delcotron* Gen.	88-D	1101900 Up	Generator	93-G
1573	Solenoid Switch	5-E	1100566 Up	Delcotron* Gen.	88-E	1101914 Up	Generator	93-H
1574	Switch	100	1100574 Up	Delcotron* Gen.	88-D	1101926 to 34	Generator	93-J
4059 to 62	Distributor	23	1100586	Delcotron* Gen.	88-E	1101936 Up	Generator	93-J
4066-7	Distributor	25	1100588	Delcotron* Gen.	88-D	1101980 Up	Generator	93-K
4073	Distributor	25	1100590-1	Delcotron* Gen.	88-E	1102000 to 39	Generator	93-M
4079	Distributor	27	1100592	Delcotron* Gen.	88-D	1102040 Up	Generator	93-N
4082	Distributor	28	1100600 Up	Delcotron* Gen.	88-F	1102074 Up	Generator	93-P
4083	Distributor	25	1100615 to 18	Delcotron* Gen.	88-G	1102100 Up	Generator	93-Q
4085-6	Distributor	28	1100619	Delcotron* Gen.	88-H	1102140 Up	Generator	93-R
4089	Distributor	28	1100620 Up	Delcotron* Gen.	88-G	1102180 Up	Generator	93-S
4097	Distributor	28	1100653-4	Delcotron* Gen.	88-H	1102220 Up	Generator	93-T
4100	Distributor	28	1100655 Up	Delcotron* Gen.	88-J	1102261 Up	Generator	93-V
4101	Distributor	27	1100660 to 85	Delcotron* Gen.	88-J	1102308 Up	Generator	93-W
4107-8	Distributor	25	1100686 Up	Delcotron* Gen.	88-K	1102357	Generator	95
4109	Distributor	28	1100700 Up	Delcotron* Gen.	88-K	1102401 to 30	Generator	96
4117	Distributor	28	1100717 to 20	Delcotron* Gen.	88-L	1102432 Up	Generator	96-A
4121-4	Distributor	25	1100721-22	Delcotron* Gen.	88-H	1102501 to 30	Generator	96-C
4134	Distributor	25	1100723 Up	Delcotron* Gen.	88-L	1102531 Up	Generator	96-D
4140	Distributor	28	1100732	Delcotron* Gen.	88-H	1102651 to 80	Generator	98
4141	Distributor	25	1100733 to 52	Delcotron* Gen.	88-L	1102681 to 714	Generator	98-A
4142	Distributor	28	1100753 Up	Delcotron* Gen.	88-M	1102715 to 44	Generator	98-B
4144	Distributor	28	1100791 Up	Delcotron* Gen.	88-N	1102745 to 66	Generator	98-C
4145	Distributor	25	1100800 to 5	Delcotron* Gen.	88-N	1102769	Generator	98-D
4146	Distributor	28	1100806	Delcotron* Gen.	88-H	1102770 to 75	Generator	98-C
4147	Distributor	23	1100807 Up	Delcotron* Gen.	88-N	1102776 to 798	Generator	98-D
4148	Distributor	25	1100825-6	Delcotron* Gen.	88-S	1102799	Generator	98-C
4149	Distributor	28	1100827-8	Delcotron* Gen.	88-P	1102803 to 15	Generator	98-D
4151-53	Distributor	25	1100830-2-3	Delcotron* Gen.	88-S	1102816 Up	Generator	98-E
4155-58	Distributor	28	1100834 Up	Delcotron* Gen.	88-P	1102823	Generator	98-C
4156	Distributor	27	1100851	Delcotron* Gen.	88-P	1102824-5-7	Generator	98-E
4162	Distributor	23	1100852 to 55	Delcotron* Gen.	88-S	1102830 to 3	Generator	98-E
4164-68	Distributor	25	1100856-7	Delcotron* Gen.	88-P	1102834	Generator	98-C
4169	Distributor	28	1100859	Delcotron* Gen.	88-S	1102835 Up	Generator	98-E
4170	Distributor	27	1100860	Delcotron* Gen.	88-P	1102950 to 80	Generator	98-K
4178 to 80	Distributor	28	1100861	Delcotron* Gen.	88-S	1102981 Up	Generator	98-L
4181 to 83	Distributor	25	1100862 to 4	Delcotron* Gen.	88-P	1103000 to 8	Generator	99
4187	Distributor	25	1100865	Delcotron* Gen.	88-S	1103009	Generator	99-A
4188	Distributor	28	1100870-1-5	Delcotron* Gen.	88-P	1103010	Generator	99
4189 to 91	Distributor	25	1100878-9	Delcotron* Gen.	88-P	1103011	Generator	99-A
4195 to 97	Distributor	25	1100880-1-2	Delcotron* Gen.	88-S	1103012-13	Generator	99
4199	Distributor	28	1100883	Delcotron* Gen.	88-T	1103014-15	Generator	99-A
4200	Distributor	23	1100884	Delcotron* Gen.	88-S	1103016	Generator	99
4202	Distributor	23	1100885-6	Delcotron* Gen.	88-T	1103017 to 19	Generator	99-A
4204-5	Distributor	28	1100888-9	Delcotron* Gen.	88-T	1103021-3	Generator	99-A
4207-8	Distributor	23	1100890	Delcotron* Gen.	88-S	1103026 to 32	Generator	99-A
4212	Distributor	28	1100891-2-3	Delcotron* Gen.	88-T	1105001 Up	Generator	101-A
4217	Distributor	28	1100895-6	Delcotron* Gen.	88-T	1105101 Up	Generator	101-E
4219	Distributor	28	1100897	Delcotron* Gen.	88-S	1105136 Up	Generator	101-F
4222-3	Distributor	28	1100899 up	Delcotron* Gen.	88-S	1105150 to 54	Generator	101-F
4226	Distributor	24-A	1100905 up	Delcotron* Gen.	88-T	1105155 Up	Generator	101-E
4227-8	Distributor	23	1100911-12	Delcotron* Gen.	88-S	1105201 Up	Generator	101-H
4232	Distributor	28	1100914-15	Delcotron* Gen.	88-V	1105225 to 39	Generator	102
4235-6	Distributor	23	1100916-17	Delcotron* Gen.	88-T	1105241	Generator	102
4237	Distributor	28	1100919-20	Delcotron* Gen.	88-V	1105376 Up	Generator	103-B
4239-40	Distributor	23	1100921	Delcotron* Gen.	88-T	1105501-2	Generator	104-C
4241	Distributor	28	1100922 to 30	Delcotron* Gen.	88-V	1105526 to 33	Generator	104-D
4243-44	Distributor	23	1100931 to 33	Delcotron* Gen.	88-T	1105726 to 50	Generator	104-K
4246-47	Distributor	23	1100934 to 37	Delcotron* Gen.	88-V	1105751 to 70	Generator	105
4256-57	Distributor	23	1100939	Delcotron* Gen.	88-T	1105776 to 782	Generator	105-A
5524 to 5528	Regulator	2	1100940	Delcotron* Gen.	88-V	1105851 to 80	Generator	105-B
5561 to 5580	Regulator	2	1100943-4	Delcotron* Gen.	88-T	1105881 to 900	Generator	105-C
5604 to 5633	Regulator	2-A	1100949-50	Delcotron* Gen.	88-V	1105902 to 30	Generator	106
5840 to 5899	Regulator	5	1100952 to 990	Generator	88-Q	1105931 to 49	Generator	106-A
5901 Up	Regulator	5-A	1100991 Up	Generator	88-R	1105950 Up	Generator	106-B
1100001 to 12	Generator	87				1106053-4	Generator	107-A
1100013 Up	Generator	87-A				1106101 Up	Generator	107-C

Delco-Remy

NUMERICAL INDEX OF COMPLETE UNITS

3

Model No.	Name	Group	Model No.	Name	Group	Model No.	Name	Group
1106251 to 58	Generator	110	1107496-7	Cranking Motor	53-D	1107734-5	Cranking Motor	53-L
1106451 to 61	Generator	111-B	1107498	Cranking Motor	52-N	1107736 to 38	Cranking Motor	53-K
1106501 to 18	Generator	111-D	1107499	Cranking Motor	53-D	1107739	Cranking Motor	53-J
1106526 to 48	Generator	112	1107501 to 4	Cranking Motor	53-C	1107740-41	Cranking Motor	53-K
1106576 to 600	Generator	113	1107506	Cranking Motor	53-D	1107742	Cranking Motor	53-L
1106626 to 56	Generator	113-B	1107507	Cranking Motor	53-C	1107743	Cranking Motor	53-K
1106658 to 66	Generator	113-C	1107508-9	Cranking Motor	53-E	1107744	Cranking Motor	53-L
1106676 Up	Generator	113-D	1107510	Cranking Motor	53-D	1107745 to 50	Cranking Motor	53-K
1106751 Up	Generator	114	1107511	Cranking Motor	53-E	1107751-2	Cranking Motor	53-L
1106801 to 30	Generator	114-B	1107512	Cranking Motor	53-D	1107753	Cranking Motor	53-K
1106832 to 50	Generator	114-C	1107513 to 15	Cranking Motor	53-E	1107754	Cranking Motor	53-L
1106851 Up	Generator	114-D	1107516	Cranking Motor	53-D	1107755 to 58	Cranking Motor	53-K
1106904 to 46	Generator	114-E	1107517 to 21	Cranking Motor	53-E	1107760	Cranking Motor	53-L
1106948 Up	Generator	114-G	1107522 to 24	Cranking Motor	53-D	1107761-2	Cranking Motor	53-K
1106976-7	Generator	114-H	1107525 to 32	Cranking Motor	53-E	1107763	Cranking Motor	53-L
1106978-9-80	Generator	114-G	1107533	Cranking Motor	53-D	1107764	Cranking Motor	53-K
1106981 Up	Generator	114-H	1107534 to 38	Cranking Motor	53-E	1107765-6	Cranking Motor	53-L
1106986 Up	Generator	114-J	1107539-40	Cranking Motor	53-D	1107767	Cranking Motor	53-K
1107001 to 30	Cranking Motor	52	1107541	Cranking Motor	53-E	1107769	Cranking Motor	53-L
1107031 to 60	Cranking Motor	52-A	1107542 to 44	Cranking Motor	53-D	1107770	Cranking Motor	53-K
1107061 to 91	Cranking Motor	52-B	1107545	Cranking Motor	53-E	1107771	Cranking Motor	53-L
1107092 to 127	Cranking Motor	52-C	1107546-7	Cranking Motor	53-D	1107772	Cranking Motor	53-K
1107131 to 57	Cranking Motor	52-D	1107548	Cranking Motor	53-E	1107773	Cranking Motor	53-L
1107159	Cranking Motor	52-E	1107549 to 51	Cranking Motor	53-D	1107774	Cranking Motor	53-K
1107162 Up	Cranking Motor	52-D	1107553-4	Cranking Motor	53-E	1107776-7	Cranking Motor	53-L
1107177 to 83	Cranking Motor	52-E	1107555 to 9	Cranking Motor	53-D	1107778 to 80	Cranking Motor	53-K
1107184-5	Cranking Motor	55	1107561	Cranking Motor	53-D	1107781 to 85	Cranking Motor	53-L
1107186-93	Cranking Motor	52-E	1107562	Cranking Motor	53-F	1107787-8	Cranking Motor	53-K
1107194	Cranking Motor	52-F	1107564	Cranking Motor	53-D	1107789 to 91	Cranking Motor	53-L
1107195 to 200	Cranking Motor	52-E	1107565	Cranking Motor	53-F	1107794	Cranking Motor	53-K
1107201	Cranking Motor	52-F	1107567	Cranking Motor	53-D	1107796	Cranking Motor	53-L
1107202	Cranking Motor	52-E	1107568-9; 70	Cranking Motor	53-F	1107798	Cranking Motor	53-K
1107203 to 9	Cranking Motor	52-F	1107571 Up	Cranking Motor	53-D	1107799-800	Cranking Motor	53-L
1107213	Cranking Motor	52-E	1107600	Cranking Motor	53-D	1107801 to 30	Cranking Motor	53-M
1107214-15	Cranking Motor	52-F	1107601 to 7	Cranking Motor	53-G	1107831 to 46	Cranking Motor	53-N
1107217-18	Cranking Motor	52-E	1107608 to 12	Cranking Motor	53-H	1107847 to 52	Cranking Motor	53-P
1107221 to 4	Cranking Motor	52-F	1107613	Cranking Motor	53-J	1107853 Up	Cranking Motor	53-Q
1107226-7	Cranking Motor	52-E	1107615-19	Cranking Motor	53-H	1107876-7	Cranking Motor	53-Q
1107228-9; 30	Cranking Motor	52-F	1107620 to 40	Cranking Motor	53-H	1107878	Cranking Motor	53-R
1107231	Cranking Motor	52-E	1107641	Cranking Motor	53-J	1107879	Cranking Motor	53-Q
1107233-4	Cranking Motor	52-F	1107642 to 51	Cranking Motor	53-H	1107880-1	Cranking Motor	53-R
1107235	Cranking Motor	52-H	1107652-3	Cranking Motor	53-J	1107882 to 85	Cranking Motor	53-Q
1107237	Cranking Motor	52-F	1107654	Cranking Motor	53-H	1107886-7	Cranking Motor	53-R
1107238-9	Cranking Motor	52-H	1107655	Cranking Motor	53-J	1107888 to 92	Cranking Motor	53-Q
1107242-5	Cranking Motor	52-F	1107656	Cranking Motor	53-H	1107893-4	Cranking Motor	53-R
1107246	Cranking Motor	52-H	1107657	Cranking Motor	53-J	1107895	Cranking Motor	53-Q
1107247 to 51	Cranking Motor	52-F	1107658-9	Cranking Motor	53-K	1107897	Cranking Motor	53-R
1107252 to 58	Cranking Motor	52-H	1107660-1	Cranking Motor	53-J	1107898	Cranking Motor	53-Q
1107259-60	Cranking Motor	52-F	1107663	Cranking Motor	53-K	1107899-900	Cranking Motor	53-R
1107261 to 65	Cranking Motor	52-H	1107664-5	Cranking Motor	53-J	1107902 to 30	Cranking Motor	54
1107266-68	Cranking Motor	52-F	1107666	Cranking Motor	53-K	1107931 to 60	Cranking Motor	54-A
1107270 to 75	Cranking Motor	52-J	1107667-8	Cranking Motor	53-J	1107962 to 999	Cranking Motor	54-B
1107276	Cranking Motor	52-H	1107670 to 77	Cranking Motor	53-K	1108001 to 16	Cranking Motor	54-B
1107277 to 82	Cranking Motor	52-J	1107678 to 81	Cranking Motor	53-J	1108021 Up	Cranking Motor	54-C
1107283	Cranking Motor	52-H	1107682	Cranking Motor	53-K	1108061 Up	Cranking Motor	54-D
1107284 Up	Cranking Motor	52-J	1107683	Cranking Motor	53-J	1108090 Up	Cranking Motor	54-E
1107290 to 95	Cranking Motor	52-J	1107684-5	Cranking Motor	53-K	1108101 to 30	Cranking Motor	54-F
1107296	Cranking Motor	52-H	1107686 to 89	Cranking Motor	53-J	1108131 Up	Cranking Motor	54-G
1107297-8-9	Cranking Motor	52-J	1107694	Cranking Motor	53-J	1108173 Up	Cranking Motor	54-H
1107300	Cranking Motor	52-J	1107695	Cranking Motor	53-K	1108180 to 88	Cranking Motor	54-J
1107301 to 8	Cranking Motor	52-K	1107696-7	Cranking Motor	53-J	1108190-91	Cranking Motor	54-J
1107309	Cranking Motor	52-H	1107698-9	Cranking Motor	53-K	1108195 Up	Cranking Motor	54-K
1107310 to 21	Cranking Motor	52-K	1107700	Cranking Motor	53-J	1108201 to 23	Cranking Motor	55
1107322	Cranking Motor	52-H	1107701-2-3	Cranking Motor	53-K	1108234	Cranking Motor	55-A
1107326	Cranking Motor	52-K	1107704	Cranking Motor	53-J	1108239-40	Cranking Motor	55-A
1107327-8	Cranking Motor	52-H	1107705	Cranking Motor	53-K	1108246	Cranking Motor	55-B
1107329 to 37	Cranking Motor	52-K	1107706-7	Cranking Motor	53-J	1108249 to 51	Cranking Motor	55-A
1107338	Cranking Motor	52-H	1107708	Cranking Motor	53-K	1108258-60	Cranking Motor	55-H
1107339 to 43	Cranking Motor	52-K	1107709-10	Cranking Motor	53-J	1108267	Cranking Motor	55
1107344 Up	Cranking Motor	52-L	1107711-12	Cranking Motor	53-L	1108273	Cranking Motor	55-B
1107358	Cranking Motor	52-H	1107713-14	Cranking Motor	53-K	1108300 to 30	Cranking Motor	55-C
1107359 to 65	Cranking Motor	52-L	1107716-17	Cranking Motor	53-L	1108331 Up	Cranking Motor	55-D
1107366	Cranking Motor	52-H	1107718	Cranking Motor	53-K	1108364 Up	Cranking Motor	55-E
1107367 to 78	Cranking Motor	52-L	1107719-20	Cranking Motor	53-L	1108395 Up	Cranking Motor	55-G
1107379 Up	Cranking Motor	52-M	1107721	Cranking Motor	53-K	1108400	Cranking Motor	55-G
1107401 to 30	Cranking Motor	53	1107722 to 24	Cranking Motor	53-L	1108401 Up	Cranking Motor	55-F
1107400	Cranking Motor	52-M	1107725	Cranking Motor	53-K	1108415 Up	Cranking Motor	55-G
1107431 Up	Cranking Motor	53-A	1107728-9	Cranking Motor	53-K	1108445 up	Cranking Motor	55-J
1107466 Up	Cranking Motor	53-B	1107731	Cranking Motor	53-L	1108451 to 70	Cranking Motor	56
1107476 Up	Cranking Motor	52-N	1107732-3	Cranking Motor	53-K	1108526 to 50	Cranking Motor	56-C

Delco-Remy

NUMERICAL INDEX OF COMPLETE UNITS

Model No.	Name	Group	Model No.	Name	Group	Model No.	Name	Group
1108551 to 92	Cranking Motor	57	1110278	Distributor	86-C	1111001 Up	Distributor	90-F
1108602 Up	Cranking Motor	57-B	1110279	Distributor	86-B	1111017 to 54	Distributor	90-H
1108635 Up	Cranking Motor	57-C	1110280-1	Distributor	86-C	1111055 Up	Distributor	90-J
1108653 Up	Cranking Motor	57-D	1110282-3	Distributor	86-B	1111093-4	Distributor	90-K
1108661 Up	Cranking Motor	57-E	1110284-5	Distributor	86-C	1111095	Distributor	93-B
1108676 to 78	Cranking Motor	58-A	1110286-7	Distributor	86-B	1111096 Up	Distributor	90-K
1108688	Cranking Motor	58-B	1110289 to 90	Distributor	86-C	1111111 Up	Distributor	90-K
1108691 Up	Cranking Motor	58-B	1110291	Distributor	86-B	1111146 Up	Distributor	90-L
1108701 to 30	Cranking Motor	59	1110292 Up	Distributor	86-C	1111183 Up	Distributor	90-M
1108731 to 40	Cranking Motor	59-A	1110300 to 308	Distributor	86-C	1111201 Up	Distributor	92
1108801 to 28	Cranking Motor	59-D	1110309	Distributor	86-B	1111237 Up	Distributor	90-N
1108831 Up	Cranking Motor	59-E	1110310 to 21	Distributor	86-D	1111266 Up	Distributor	90-P
1108851 to 80	Cranking Motor	59-F	1110322	Distributor	86-B	1111300	Distributor	90-P
1108881 Up	Cranking Motor	59-G	1110323 to 34	Distributor	86-D	1111301	Distributor	93
1108900 to 30	Cranking Motor	61	1110335	Distributor	86-B	1111302	Distributor	93-A
1108931 to 44	Cranking Motor	61-A	1110336 to 41	Distributor	86-D	1111303 to 9	Distributor	93-B
1108950 to 90	Cranking Motor	61-B	1110342	Distributor	86-B	1111310-11	Distributor	93-A
1108994 Up	Cranking Motor	61-C	1110343-4	Distributor	86-D	1111312	Distributor	93-B
1109000 to 30	Cranking Motor	62	1110346 Up	Distributor	86-E	1111316 Up	Distributor	93-B
1109040	Cranking Motor	62-A	1110351-8	Distributor	86-D	1111330	Distributor	90-Q
1109045 Up	Cranking Motor	62-B	1110359 to 75	Distributor	86-E	1111331	Distributor	93-B
1109100 to 30	Cranking Motor	63	1110376	Distributor	86-B	1111332 to 5	Distributor	90-Q
1109131 Up	Cranking Motor	63-A	1110377 Up	Distributor	86-E	1111336	Distributor	93-B
1109150 Up	Cranking Motor	63-B	1110387 to 400	Distributor	86-F	1111337-8	Distributor	93-B
1109225 Up	Cranking Motor	64-A	1110401 to 25	Distributor	87	1111339 Up	Distributor	90-Q
1109300 to 30	Cranking Motor	65	1110426 to 53	Distributor	87-A	1111346	Distributor	93-B
1109331 to 60	Cranking Motor	65-A	1110457 Up	Distributor	87-B	1111347-8-9	Distributor	93-D
1109400 to 9	Cranking Motor	66	1110501 to 15	Distributor	88	1111351-2-3	Distributor	93-B
1109440 Up	Cranking Motor	66-B	1110601 to 35	Distributor	89	1111354	Distributor	93-D
1109451 Up	Cranking Motor	67	1110636 to 39	Distributor	89-A	1111355	Distributor	93-B
1109501-3	Cranking Motor	67-C	1110640	Distributor	89-B	1111356-7	Distributor	93-D
1109504 to 6	Cranking Motor	67-B	1110643 to 46	Distributor	89-A	1111360-4-5	Distributor	93-C
1109507-8	Cranking Motor	67-C	1110801 to 11	Distributor	90	1111401 to 10	Distributor	94
1109509	Cranking Motor	67-B	1110812	Distributor	90-A	1111411-12	Distributor	94-A
1109510	Cranking Motor	67-C	1110813-14	Distributor	90	1111413	Distributor	94
1109511 to 13	Cranking Motor	67-B	1110815 to 50	Distributor	90-A	1111414-15	Distributor	94-A
1109514	Cranking Motor	67-C	1110852 to 55	Distributor	90-B	1111416	Distributor	94
1109517 Up	Cranking Motor	67-B	1110857-8-9	Distributor	90-C	1111418 Up	Distributor	94-A
1109600 Up	Cranking Motor	69	1110861 to 66	Distributor	90-B	1111435 Up	Distributor	94-B
1109624 Up	Cranking Motor	69-A	1110867-8	Distributor	90-C	1111450	Distributor	94-B
1109651 Up	Cranking Motor	70	1110869	Distributor	90-B	1111460-1	Distributor	94-B
1109691 Up	Cranking Motor	70-A	1110870-1	Distributor	90-C	1111462	Distributor	94-A
1109700 Up	Cranking Motor	70-B	1110872-3	Distributor	90-B	1111463 Up	Distributor	94-B
1109753	Cranking Motor	61	1110874	Distributor	90-C	1111477 Up	Distributor	94-C
1109755-7-8-9	Cranking Motor	70-M	1110875	Distributor	90-B	1111500	Distributor	94-C
1109762-65	Cranking Motor	70-D	1110876-7	Distributor	90-C	1111501 to 30	Distributor	95
1109800 Up	Cranking Motor	70-F	1110878 to 80	Distributor	90-B	1111531 to 59	Distributor	95-A
1109852 Up	Cranking Motor	70-G	1110883-4-7	Distributor	90-C	1111566-7	Distributor	95-A
1109861 Up	Cranking Motor	70-H	1110888-9	Distributor	90-B	1111579	Distributor	95-A
1109902 Up	Cranking Motor	70-K	1110890	Distributor	90-C	1111582	Distributor	95-B
1109950 to 60	Cranking Motor	70-L	1110891	Distributor	90-B	1111617-18	Distributor	95-C
1109961 to 66	Cranking Motor	70-M	1110894	Distributor	90-C	1111628-9	Distributor	95-C
1109967	Cranking Motor	70-L	1110896-7	Distributor	90-B	1111634-5	Distributor	95-C
1109968 to 75	Cranking Motor	70-M	1110898	Distributor	90-C	1111638	Distributor	95-D
1109976	Cranking Motor	70-L	1110899	Distributor	90-B	1111642	Distributor	95-C
1109977 to 80	Cranking Motor	70-M	1110905-6	Distributor	90-B	1111644-5	Distributor	95-D
1109982	Cranking Motor	70-L	1110907	Distributor	90-C	1111652-57	Distributor	95-C
1109983 Up	Cranking Motor	70-M	1110908	Distributor	90-B	1111660-1	Distributor	95-E
1110001 to 30	Distributor	85	1110909	Distributor	90-C	1111672-3	Distributor	95-C
1110031 to 60	Distributor	85-A	1110912 to 15	Distributor	90-C	1111676	Distributor	95-F
1110061 to 99	Distributor	85-B	1110919 to 20	Distributor	90-C	1111678-9	Distributor	95-C
1110100 to 130	Distributor	85-C	1110921-2	Distributor	90-B	1111680	Distributor	95-F
1110131 to 160	Distributor	85-D	1110923 to 27	Distributor	90-C	1111685-6	Distributor	95-C
1110161 to 200	Distributor	85-E	1110929 to 31	Distributor	90-C	1111688-9	Distributor	95-F
1110201 to 17	Distributor	86	1110932 to 34	Distributor	90-D	1111690	Distributor	95-C
1110219 Up	Distributor	86-A	1110935	Distributor	90-B	1111697	Distributor	97
1110248	Distributor	86-B	1110936	Distributor	90-D	1111701 to 25	Distributor	97-A
1110249	Distributor	86-A	1110937-8	Distributor	90-B	1111726 to 50	Distributor	105
1110250	Distributor	86-B	1110941 to 43	Distributor	90-D	1111751 to 82	Distributor	105-A
1110251-2-3	Distributor	86-A	1110946 to 49	Distributor	90-D	1111783 to 817	Distributor	105-B
1110254	Distributor	86-B	1110952 to 56	Distributor	90-D	1111818 to 60	Distributor	105-B
1110255 to 60	Distributor	86-A	1110957-8	Distributor	90-E	1111862 Up	Distributor	105-C
1110261 to 63	Distributor	86-B	1110959	Distributor	90-D	1111890 Up	Distributor	105-D
1110264-5	Distributor	86-A	1110960	Distributor	90-E	1111918	Distributor	105-E
1110266	Distributor	86-B	1110961 to 73	Distributor	90-D	1111919-20	Distributor	105-D
1110267 to 69	Distributor	86-C	1110975	Distributor	90-F	1111921	Distributor	105-E
1110270	Distributor	86-B	1110976	Distributor	90-E	1111922-3	Distributor	105-D
1110271-2	Distributor	86-C	1110977 to 79	Distributor	90-F	1111925 Up	Distributor	106-F
1110274-5-6	Distributor	86-A	1110980	Distributor	90-E	1111956 Up	Distributor	106-G
1110277	Distributor	86-B	1110981 Up	Distributor	90-F	1111986 Up	Distributor	106-H

*"A General Motors Trademark"

Delco-Remy

NUMERICAL INDEX OF COMPLETE UNITS

5

Model No.	Name	Group	Model No.	Name	Group	Model No.	Name	Group
1112000 up	Distributor	106-H	1113031 Up	Cranking Motor	71-A	1113830 to 32	Cranking Motor	79-D
1112017 to 50	Distributor	106-J	1113059	Cranking Motor	71-D	1113834 to 38	Cranking Motor	79-C
1112051 Up	Distributor	106-K	1113061 Up	Cranking Motor	71-B	1113840 Up	Cranking Motor	79-D
1112251 to 80	Distributor	106	1113089-90	Cranking Motor	71-D	1113875 to 84	Cranking Motor	79-E
1112281 to 99	Distributor	106-A	1113091 Up	Cranking Motor	71-B	1113885	Cranking Motor	79-C
1112300 to 6	Distributor	106-A	1113100-1	Cranking Motor	71-D	1113887 Up	Cranking Motor	79-E
1112307	Distributor	106-C	1113102-4	Cranking Motor	71-C	1113900 to 11	Cranking Motor	79-E
1112309 to 16	Distributor	106-A	1113105	Cranking Motor	71-E	1113912-13	Cranking Motor	79-C
1112317 to 19	Distributor	106-B	1113106	Cranking Motor	71-C	1113914 to 16	Cranking Motor	79-E
1112320	Distributor	106-C	1113108-9	Cranking Motor	71-C	1113917 to 42	Cranking Motor	79-F
1112321 to 4	Distributor	106-B	1113111	Cranking Motor	71-D	1113945	Cranking Motor	79-F
1112326 to 8	Distributor	106-C	1113112	Cranking Motor	71-E	1113946	Cranking Motor	79-C
1112329	Distributor	106-B	1113113-15	Cranking Motor	71-D	1113947 Up	Cranking Motor	79-F
1112330-1	Distributor	106-D	1113117-18	Cranking Motor	71-E	1113959 Up	Cranking Motor	79-G
1112332 to 5	Distributor	106-B	1113119-21	Cranking Motor	71-D	1113990 Up	Cranking Motor	79-H
1112340-1-2	Distributor	106-B	1113122	Cranking Motor	71-C	1114000 Up	Cranking Motor	79-L
1112336	Distributor	106-C	1113123	Cranking Motor	71-E	1114032 to 46	Cranking Motor	79-M
1112337-8	Distributor	106-B	1113124-26	Cranking Motor	71-D	1114047	Cranking Motor	79-N
1112339	Distributor	106-C	1113128-9	Cranking Motor	71-C	1114048-9	Cranking Motor	79-M
1112343	Distributor	106-D	1113130-1	Cranking Motor	71-D	1114051-2	Cranking Motor	79-N
1112345	Distributor	106-C	1113132	Cranking Motor	71-E	1114053	Cranking Motor	79-M
1112346	Distributor	106-B	1113133 to 39	Cranking Motor	71-D	1114054 to 59	Cranking Motor	79-N
1112347 to 50	Distributor	106-D	1113140	Cranking Motor	71-C	1114060	Cranking Motor	79-M
1112351 to 91	Distributor	107	1113142 Up	Cranking Motor	71-D	1114061 to 67	Cranking Motor	79-N
1112392 to 99	Distributor	107-A	1113152	Cranking Motor	71-E	1114068	Cranking Motor	79-M
1112400 Up	Distributor	107-A	1113153 to 6	Cranking Motor	71-D	1114069 Up	Cranking Motor	79-N
1112420 Up	Distributor	107-B	1113157 Up	Cranking Motor	71-F	1114088	Cranking Motor	79-P
1112443	Distributor	107-C	1113161	Cranking Motor	71-E	1114089	Cranking Motor	79-M
1112446 Up	Distributor	107-C	1113162-3-4	Cranking Motor	71-F	1114090 Up	Cranking Motor	79-P
1112475 Up	Distributor	107-D	1113165	Cranking Motor	71-C	1114100 Up	Cranking Motor	79-P
1112551 Up	Distributor	107-F	1113167 Up	Cranking Motor	71-F	1114118	Cranking Motor	79-M
1112581 Up	Distributor	107-G	1113178	Cranking Motor	71-E	1114119-20	Cranking Motor	79-P
1112601 to 13	Distributor	107-G	1113179 Up	Cranking Motor	71-F	1114121 Up	Cranking Motor	79-Q
1112614 to 19	Distributor	107-H	1113200-1	Cranking Motor	71-F	1114155 Up	Cranking Motor	79-R
1112620 to 24	Distributor	107-J	1113202 to 6	Cranking Motor	71-G	1114185 Up	Cranking Motor	79-S
1112625 to 27	Distributor	107-H	1113209 up	Cranking Motor	71-G	1114200 to 209	Switch	4
1112628	Distributor	107-J	1113301 Up	Cranking Motor	73	1114211	Switch	103-C
1112629	Distributor	107-H	1113330 Up	Cranking Motor	73-A	1114213 Up	Switch	4
1112631-2	Distributor	107-J	1113353	Cranking Motor	73-B	1114233 Up	Switch	4
1112633	Distributor	107-H	1113357 to 9	Cranking Motor	73-A	1114250	Switch	103-B
1112634 to 44	Distributor	107-J	1113364	Cranking Motor	73-A	1114251 to 53	Switch	103-C
1112645	Distributor	107-H	1113366-7-8	Cranking Motor	73-B	1114255 to 57	Switch	103-C
1112647 to 54	Distributor	107-J	1113369	Cranking Motor	73-A	1114261 Up	Switch	103-C
1112655 to 57	Distributor	107-H	1113370 to 73	Cranking Motor	73-B	1114274	Switch	103-B
1112658 to 61	Distributor	107-J	1113374	Cranking Motor	73-A	1114275	Switch	103-A
1112662 to 68	Distributor	107-K	1113375 Up	Cranking Motor	73-B	1114277 Up	Switch	103-C
1112670	Distributor	107-H	1113451 Up	Cranking Motor	74	1114290	Switch	103-C
1112671 Up	Distributor	107-K	1113501 to 17	Cranking Motor	76	1114292	Switch	103-B
1112700	Distributor	107-K	1113518 to 21	Cranking Motor	76-A	1114293 Up	Switch	103-C
1112701 to 3	Distributor	107-L	1113523-4	Cranking Motor	76	1114296	Switch	103-B
1112704 to 6	Distributor	107-M	1113525	Cranking Motor	76-A	1114299 Up	Switch	103-C
1112707	Distributor	107-L	1113526 to 30	Cranking Motor	76	1114300	Switch	103-B
1112708	Distributor	107-N	1113551 Up	Cranking Motor	77	1114304-6	Switch	103-C
1112709-10	Distributor	107-M	1113601 Up	Cranking Motor	78	1114307-10	Switch	103-B
1112711	Distributor	107-N	1113626	Cranking Motor	78-A	1114311 Up	Switch	103-B
1112712	Distributor	107-L	1113628	Cranking Motor	78-B	1114324 to 28	Switch	103-C
1112713-14	Distributor	107-M	1113631 Up	Cranking Motor	78-A	1114329	Switch	103-B
1112715	Distributor	107-L	1113638 Up	Cranking Motor	78-A	1114330 Up	Switch	103-C
1112716-18	Distributor	107-N	1113662 to 73	Cranking Motor	78-C	1114342 Up	Switch	103-D
1112720 to 22	Distributor	107-L	11137	Cranking Motor	78-D	1114400	Solenoid Switch	5-F
1112723-4	Distributor	107-M	11137	Cranking Motor	78-C	1114401-2	Switch	104
1112725 to 29	Distributor	107-L	1113680	Cranking Motor	78-C	1114403	Switch	5-G
1112730	Distributor	107-M	1113688	Cranking Motor	78-D	1114404	Switch	104
1112731-2	Distributor	107-L	1113689	Cranking Motor	78-D	1114407-8	Switch	5-F
1112734	Distributor	107-N	1113690	Cranking Motor	78-C	1114409	Switch	5-G
1112735	Distributor	107-L	1113691-3	Cranking Motor	78-D	1114410	Switch	110
1112737	Distributor	107-N	1113700 Up	Cranking Motor	79	1114411	Switch	5-G
1112738 to 40	Distributor	107-L	1113734 Up	Cranking Motor	79-A	1114413 Up	Switch	5-G
1112741-2	Distributor	107-M	1113761 Up	Cranking Motor	79-B	1114418	Switch	110
1112743 to 49	Distributor	107-L	1113797 Up	Cranking Motor	79-C	1114420 to 23	Switch	110
1112750-1	Distributor	107-M	1113818 to 20	Cranking Motor	79-D	1114425-7-9	Switch	110
1112752 Up	Distributor	107-P	1113823	Cranking Motor	79-C	1114437	Switch	110
1112760	Distributor	107-M	1113824 to 27	Cranking Motor	79-D	1114440-1	Switch	110
1112762 Up	Distributor	107-P	1113828	Cranking Motor	79-C	1114442-3-7	Switch	110
1112773-4	Distributor	107-M				1114600 Up	Cranking Motor	80
1112775	Distributor	107-P				1114612	Cranking Motor	80-F
1112788-9	Distributor	107-R				1114622	Cranking Motor	80-F
1112790	Distributor	107-Q				1114640-42	Cranking Motor	80-F
1112791	Distributor	107-M				1114644	Cranking Motor	80-G
1112792 Up	Distributor	107-Q				1114648-51	Cranking Motor	80-E

Delco-Remy

NUMERICAL INDEX OF COMPLETE UNITS

Model No.	Name	Group	Model No.	Name	Group	Model No.	Name	Group
1114654-55	Cranking Motor	80-F	1117756	Delcotron* Gen.	154	1118181-2	Switch	101-A
1114657	Cranking Motor	80-H	1117760-1	Delcotron* Gen.	153	1118183	Switch	103-A
1114660	Cranking Motor	80-H	1117763	Delcotron* Gen.	154	1118186-7-8	Switch	103-B
1114661-2	Cranking Motor	80-K	1117765-7	Delcotron* Gen.	153	1118191-2-3	Magnetic Switch	2-B
1114663-4	Cranking Motor	80-J	1117769 Up	Delcotron* Gen.	154	1118194	Switch	104
1114665-6	Cranking Motor	80-H	1117780	Delcotron* Gen.	153	1118195	Magnetic Switch	2-A
1115001	Ignition Coil	41	1117781	Delcotron* Gen.	154	1118196	Switch	104
1115002 to 8	†Amplifier	17	1117782	Delcotron* Gen.	153	1118197-8	Magnetic Switch	2-A
1115010	†Amplifier	17-A	1117783 to 6	Delcotron* Gen.	154	1118200	Magnetic Switch	2-B
1115011-12	Ignition Coil	41	1117787	Delcotron* Gen.	153	1118300 to 340	Regulator	6-C
1115015-16	†Amplifier	17-A	1118001	Solenoid Switch	5-E	1118341 to 94	Regulator	6-D
1115018-19-20	†Amplifier	17-A	1118002	Switch	102	1118395	Regulator	6-E
1115021 Up	Ignition Coil	41	1118003	Magnetic Switch	2-A	1118407-8-9-14-16	Regulator	10
1115343	Amplifier	17	1118004-5	Solenoid Switch	5-E	1118421	Regulator	7-A
1115500	Switch	104	1118006	Magnetic Switch	2-A	1118422	Regulator	8
1115501	Switch	103-B	1118007	Solenoid Switch	5-E	1118426 to 29	Regulator	5-B
1115503-6	Switch	2-B	1118008 to 12	Magnetic Switch	2-A	1118431 to 38	Regulator	5-B
1115507	Switch	104	1118013-14	Solenoid Switch	5-E	1118440-44	Regulator	5-B
1115508	Switch	103-B	1118016	Solenoid Switch	5-E	1118451 to 79	Regulator	2-C
1115509	Switch	100-A	1118017	Magnetic Switch	2-A	1118482 to 97	Regulator	2-D
1115510-11	Switch	103-B	1118019-21	Switch	102	1118501	Regulator	7
1115512	Switch	101-A	1118025-6	Switch	103	1118502	Regulator	8
1115513	Switch	103-B	1118027-8	Switch	101	1118503	Regulator	7
1115515 to 17	Switch	101-A	1118029	Switch	103	1118505 to 8	Regulator	8
1115518	Switch	103-B	1118030	Switch	104	1118509-10	Regulator	7
1115519	Switch	2-B	1118031	Switch	103	1118511	Regulator	8
1115522	Switch	103-B	1118032-3-4	Switch	104	1118512 to 24	Regulator	7
1115523-4	Switch	5-G	1118035-6-7-8	Switch	103	1118525	Regulator	8
1115801 Up	Relay	4	1118039	Switch	104	1118526 to 30	Regulator	7
1116001 Up	Dist. Vacuum Control	4	1118040	Switch	103	1118531-2	Regulator	9
1116252 to 99	Switch	107	1118041-2-3	Switch	101	1118533	Regulator	7
1116300 to 64	Switch	107	1118044	Switch	100	1118534	Regulator	8
1116368	Regulator	18	1118045-6	Switch	103	1118535	Regulator	7
1116370 Up	Regulator	18	1118047 to 51	Switch	101	1118536-7	Regulator	8
1116451 to 99	Switch	107	1118052	Switch	102	1118538-40	Regulator	7
1116501 Up	Switch	107	1118053	Switch	101	1118541	Regulator	8
1116600 Up	Switch	107	1118054-5	Switch	103	1118542	Regulator	9
1116751 Up	Relay	4	1118056	Switch	101	1118543	Regulator	7
1117001 to 29	Generator	120	1118057	Switch	104	1118544-5	Regulator	9
1117031 to 55	Generator	120-A	1118061-2	Switch	104	1118547	Regulator	8
1117056 to 60	Delcotron* Gen.	150-B	1118068-9	Switch	101	1118550	Regulator	7-A
1117061-2-3-4	Generator	150	1118072-3	Switch	101	1118554 Up	Regulator	7-A
1117065	Delcotron* Gen.	150-B	1118074-5	Switch	104	1118561	Regulator	8
1117070 to 85	Delcotron* Gen.	150-A	1118076	Switch	101	1118562-3	Regulator	7-A
1117086 to 90	Delcotron* Gen.	150-B	1118085	Switch	101	1118567	Regulator	7-A
1117091-2	Generator	150-A	1118088	Switch	103	1118572	Regulator	8
1117093 Up	Generator	150-B	1118090	Switch	101	1118573-4	Regulator	7-A
1117100 to 11	Generator	150-D	1118091	Switch	104	1118576 to 99	Regulator	7-B
1117114 to 19	Delcotron* Gen.	150-E	1118092-3-4	Switch	101	1118600-1-2-9-11	Regulator	8-B
1117120	Delcotron* Gen.	150-D	1118095-6	Switch	101-A	1118613	Regulator	7-C
1117121	Delcotron* Gen.	150-F	1118098-9	Switch	101-A	1118622	Regulator	7-C
1117122	Delcotron* Gen.	150-B	1118101	Switch	103	1118626	Regulator	7-C
1117123	Delcotron* Gen.	150-F	1118102	Switch	102	1118630-1-3	Regulator	7-C
1117124	Delcotron* Gen.	150-D	1118106	Solenoid Switch	5-E	1118638-9	Regulator	7-C
1117125 to 28	Delcotron* Gen.	150-E	1118108	Solenoid Switch	5-E	1118657	Regulator	7-C
1117130-1-2	Decotron* Gen.	150-F	1118109-12	Switch	102	1118658	Regulator	8-B
1117133	Decotron* Gen.	150-B	1118125-24	Magnetic Switch	2-B	1118662-67	Regulator	7-C
1117134-5	Delcotron* Gen.	150-F	1118125	Magnetic Switch	2-A	1118678-9-80	Regulator	7-C
1117136-7	Delcotron* Gen.	150-E	1118128	Switch	2-B	1118687-89	Regulator	7-C
1117138-9	Delcotron* Gen.	150-B	1118131-2	Solenoid Switch	5-E	1118691-2	Regulator	7-C
1117140	Delcotron* Gen.	150-E	1118133	Switch	103	1118695	Regulator	8
1117201 to 24	Generator	121	1118134	Solenoid Switch	5-E	1118696 to 98	Regulator	7-C
1117225 Up	Delcotron* Gen.	121-A	1118135-6-7	Switch	103-A	1118702 to 780	Regulator	6-E
1117303 to 30	Generator	122	1118138	Solenoid Switch	103-A	1118781 Up	Regulator	6-F
1117338 to 40	Generator	122	1118140	Switch	103-A	1118801	Switch	5-F
1117376 Up	Generator	122-B	1118141	Switch	102	1118803	Switch	5-G
1117401 Up	Generator	122-C	1118142	Magnetic Switch	2-A	1118806	Switch	103-B
1117479-80	Generator	122	1118143	Solenoid Switch	5-E	1118807	Switch	104
1117501 to 30	Generator	123	1118144-5-6	Switch	103-A	1118808	Switch	103-B
1117531 to 60	Generator	123-A	1118147	Solenoid Switch	5-E	1118810-11	Switch	103-C
1117561 Up	Generator	123-B	1118148	Switch	103-A	1118813	Switch	4
1117601 Up	Generator	124	1118149-51	Solenoid Switch	5-E	1118816	Switch	103-C
1117657 to 60	Generator	151	1118154-5	Solenoid Switch	5-E	1118820	Switch	4
1117661 to 65	Generator	152	1118156	Switch	103-A	1118821	Switch	103-C
1117666	Generator	151	1118159-60	Switch	5-F	1118822	Switch	5-G
1117667 to 70	Delcotron* Gen.	152	1118162-3-4	Switch	5-E	1118823	Switch	4
1117671	Generator	151	1118166	Switch	5-F	1118824	Switch	5-F
1117672 to 75	Generator	152	1118167-8	Switch	5-E	1118825 to 70	Regulator	6-G
1117677 to 86	Generator	152	1118170	Switch	5-F	1118871 to 910	Regulator	6-H
1117750-2-3-4	Delcotron* Gen.	153	1118171 to 7	Switch	101-A	1118911 Up	Regulator	6-J

Delco-Remy

NUMERICAL INDEX OF COMPLETE UNITS

7

Model No.	Name	Group	Model No.	Name	Group	Model No.	Name	Group
1119000 to 5	Regulator	6-K	1119935-6	Switch	103-C	1996487	Switch	30
1119122 Up	Regulator	6-K	1119937	Switch	101-A	1996491	Switch	105
1119200 Up	Regulator	6-L	1119938	Switch	103-A	1996495-6	Switch	30
1119302 Up	Regulator	6-L	1119939	Switch	101-A	1997014 Up	Switch	110
1119500 Up	Regulator	11	1119940	Switch	4	1997702	Switch	109
1119575 to 8	Regulator	6-M	1119943	Switch	2-B	1997706	Switch	110
1119600 Up	Regulator	6-N	1119946	Switch	103-C	1997708-12	Switch	107
1119636 Up	Regulator	6-P	1119948 to 51	Switch	101-A	1997719	Switch	110
1119757	Switch	2-A	1119956	Switch	5-G	1997733-4	Switch	107
1119760-1	Switch	103-B	1119959	Switch	2-B	1997735	Switch	106
1119767	Switch	103-B	1119960-1	Switch	101-A	1997740	Switch	110
1119772	Switch	5-E	1119965 to 67	Switch	103-C	1997743	Switch	107
1119773	Switch	103-A	1119968	Switch	103-B	1997744-5	Switch	110
1119774	Switch	103-B	1119970	Switch	4	1997746	Switch	106
1119775	Switch	2-B	1119971	Switch	103-A	1997748	Switch	107
1119777-8	Switch	103-B	1119972-3	Switch	5-F	1997750-1	Switch	110
1119780-1	Switch	103-B	1119974	Switch	103-C	1997761-2	Switch	110
1119784	Switch	103-A	1119975	Switch	103-B	1997764-66	Switch	110
1119788	Switch	103-A	1119981	Switch	4	1997770-77	Switch	107
1119789	Switch	103-B	1119985	Switch	5-G	1997780	Switch	109
1119793	Switch	103-B	1119986	Switch	103-C	1997781 to 6	Switch	107
1119794-5	Switch	5-G	1119997	Switch	103-B	1997797	Switch	107
1119796	Switch	104	1119998-9	Switch	103-C	1997807	Switch	107
1119797	Switch	103-B	1813397	Cranking Motor	54-A	1997819	Switch	110
1119798	Switch	103-C	1813399 to 401	Generator	98-C	1997841-4-5-6-9	Switch	110
1119799	Switch	4	1813458	Generator	98-C	1997855	Switch	110
1119803 to 6	Switch	101-A	1813481	Generator	98-C	1997859	Switch	110
1119812-13	Switch	101-A	1813611-12	Generator	98-C	1997870-4-5	Switch	110
1119817	Switch	104	1813624	Generator	98-C	1997879-80	Switch	110
1119818 to 20	Switch	103-B	1813663	Generator	98-C	1997882-5-7	Switch	110
1119821-23	Switch	104	1814169	Cranking Motor	54-A	1997893-5	Switch	110
1119826	Switch	104	1814231-2	Cranking Motor	54-A	1997899	Switch	109
1119828	Switch	4	1814510-20	Cranking Motor	53-H	1997924	Switch	110
1119829-30	Switch	5-G	1879797	Voltage Regulator	2-A	1997930 Up	Turn Signal Switch	111-A
1119832	Switch	101-A	1885555 (See 1111411)	Distributor	94-A	1998010-11-12	Switch	110
1119833	Switch	103-B	1885556 (See 1111412)	Distributor	94-A	1998016-18	Switch	110
1119834 to 36	Switch	101-A	1915777 (See 1111414)	Distributor	94-A	1998020	Switch	109
1119837	Switch	103-A	1917333 (See 1111558)	Distributor	94-A	1998021	Switch	110
1119840	Switch	103-B	1944377	Silicon Rectifier Power Misc.	1	1998026-29	Switch	110
1119841	Switch	2-B	1952626	Power Plant Misc.	1	1998031	Switch	110
1119844-5	Switch	100-A	1993301-8	Switch	110	1998039	Switch	110
1119846	Switch	2-B	1993327	Switch	110	1998108-17-18	Switch	110
1119848	Switch	101-A	1993388	Switch	110	1998131	Switch	110
1119850-1	Switch	101-A	1993471	Switch	110	1998146	Switch	110
1119852	Switch	103-B	1993536	Switch	110	1998151	Switch	108
1119853	Switch	101-A	1993558; 78	Switch	108	1998195	Switch	110
1119854	Switch	5-G	1993597	Switch	110	1998601 to 6	Light Switch	49
1119855 to 60	Switch	103-B	1993600-21-4; 38	Switch	110	1998607	Combination Switch	9-A
1119861 to 63	Switch	101-A	1993667-8; 76	Switch	110	1998608 to 14	Light Switch	49
1119864 to 67	Switch	2-B	1994001 to 17	Switch	108	1998615-16-17	Combination Switch	9-A
1119875	Switch	2-A	1994019 to 27	Switch	108	1998618-19-29	Control Switch	1
1119877	Switch	103-B	1994031 Up	Switch	108	1998620 to 27	Combination Switch	27
1119878	Switch	101-A	1994501 to 61	Switch	108	1998628	Light Switch	49
1119880	Switch	2-B	1994564 to 69	Switch	108	1998631 to 34	Switch	9-A
1119882 Up	Switch	103-B	1995001 to 68	Switch	108	1998636 to 39	Light Switch	49
1119886	Switch	2-B	1995501 to 47	Directional Switch	42	1998640-41	Combination Switch	9-A
1119887	Switch	2-B	1995548 to 54	Directional Switch	42-A	1998642	Light Switch	49
1119888-90	Switch	2-B	1995558	Switch	111	1998643	Combination Switch	9-A
1119891	Switch	2-B	1995559 to 62	Switch	42-A	1998644-5	Light Switch	49
1119892	Switch	2-B	1995563 to 62	Switch	111	1998646-7	Combination Switch	9-A
1119893	Switch	2-B	1995568	Switch	111	1998648-9	Light Switch	49
1119894-5	Switch	101-A	1995570 to 5	Switch	111	1998650	Switch	49
1119896	Switch	103-B	1995581 to 90	Switch	111	1998651	Switch	1
1119899	Switch	100-A	1995600 to 600	Switch	111-A	1998652	Switch	9-A
1119900-1-2	Switch	4	1995601 to 32	Switch	108	1998653	Switch	49
1119903	Switch	2-A	1995801 Up	Switch	111-A	1998654	Switch	1
1119905-6	Switch	103-B	1995900	Switch	111-A	1998655	Switch	49
1119907-8	Switch	4	1996001 to 81	Switch	106	1998661	Switch	110
1119909	Switch	2-A	1996086	Switch	106	1998678	Switch	110
1119910	Switch	103-B	1996090 Up	Switch	106	1998680-87	Switch	110
1119911	Switch	104	1996451-2	Switch	30	1998720 to 22	Switch	110
1119912	Switch	103-B	1996453	Switch	105	1998730	Switch	110
1119918	Switch	104	1996454-5	Switch	100	1998743-4	Switch	110
1119919	Switch	103-C	1996456	Switch	30	1998867	Vacuum Control	4
1119920	Switch	103-B	1996467	Switch	105	1998875	Vacuum Control	4
1119921	Switch	2-B	1996471	Switch	30	1998933	Switch	108
1119923	Switch	103-B	1996473-4	Switch	100	1999689 Up	Horn	20
1119927	Switch	4	1996475-6	Switch	30	1999944 to 46	Horn	20
1119928-9	Switch	2-B	1996477	Switch	100	9000011	Horn	20
1119932	Switch	2-B	1996478	Switch	30	9000236-9	Horn	20

Delco-Remy

NUMERICAL INDEX OF COMPLETE UNITS

Model No.	Name	Group	Model No.	Name	Group	Model No.	Name	Group
9000301 Up	Horn	20	9000580 to 7	Regulator	13		Motor Drives—Bendix	
9000400 Up	Horn	20	9000590 to 93	Regulator	16		Compression Spring	6
9000500 Up	Horn	20	9000595	Regulator	13		Motor Drives—Heavy	
9000551	Regulator	15	9000596	Reg.-Trans.	7-A		duty clutch	7
9000552	Regulator	13	9000597	Regulator	15		Motor Drives—Bendix	
9000553	Regulator	14	9000598	Regulator	13		friction clutch	9
9000554	Regulator	13		Advance Arms—				
9000555 to 7	Regulator	14		Pages 1-2-3-4-5-6..	1	STANDARD HARDWARE FASTENERS		
9000558	Regulator	13		Motor Drives—Bendix	1			
9000559	Regulator	15		Motor Drives—Bendix	1-A	Screws and Bolts	Page 1	
9000560 Up	Regulator	13		Motor Drives—Bendix		Nuts and Lockwashers	Page 3	
9000573	Regulator	15		Motor Drives—Bendix		Cotter Pins and Woodruff Keys ..	Page 5	
9000574	Regulator	13		Special	5			
9000575 to 9	Regulator	14		Motor Drives—Clutch	4			

Numerical Index of Discontinued DELCO-REMY UNITS AND CATALOG SHEETS

Catalog group sheets listed in this Index are no longer supplied in the DELCO-REMY MASTER CATALOG. They may be removed from your present catalog and filed elsewhere for reference.

(U) are units listed separately under respective group without a group number.

(*) Units having no parts lists issued.

REBUILT CRANKING MOTORS			Model No.	Name	Group	Model No.	Name	Group
Model No.	For Parts See	Group	7-U	1102717	98-B	K-8-B	Horn	2
1-M	1107109	52-C	8-U	1102718	98-B	K-8-C	Horn	2
2-M	1107108	52-C	9-U	1102719	98-B	K-11	Horn	3
3-M	1108035	54-C	10-U	1100326	87-J	11-A	Generator	30
4-M	1107675	53-K	12-U	1102012	93-M	12-A	Generator	30
5-M	1107634	53-H	13-U	1100013	87-A	K-12-A	Horn	2
6-M	1107670	53-K	15-U	1102115	93-Q	K-12-B	Horn	2
7-M	1107890	53-Q	16-U	1102227	93-T	K-12-C	Horn	2
8-M	1107888	53-Q	18-U	1100018	87-A	K-14	Horn	3
9-M	1107273	52-J	21-U	1100321	87-J	K-15	Horn	3
10-M	1107274	52-J	22-U	1102122	93-Q	K-16-1300 to 1352	Horn	7
11-M	1108304	55-C	23-U	1102123	93-Q	K-16-1800 to 1815	Horn	7
12-M	1108307	55-C	24-U	1102256	93-T	K-16-2001 to 2017	Horn	7
13-M	1107260	52-F	26-U	1102231	93-T	K-16-2301 to 2303	Horn	7
14-M	1107242	52-F	27-U	1102318	93-W	16-A to C	Generator	31
15-M	1107957	54-A	28-U	1100028	87-A	K-17	Horn	8
16-M	1107631	53-H	32-U	1102164	93-R	17-A	Generator	30
17-M	1107641	53-J	34-U	1102317	93-W	K-18	Horn	3
18-M	1107700	53-J	35-U	1102175	93-R	18-A to C	Generator	31
19-M	1107781	53-L	36-U	1102181	93-S	K-18-B	Horn	3
20-M	1107796	53-L	37-U	1102186	93-S	K-19	Horn	3
21-M	1108303	55-C	38-U	1102168	93-R	K-20	Horn	5
22-M	1107270	52-J	39-U	1102251	93-T	K-20	Horn (Industrial)	5-A
23-M	1107638	53-H	40-U	1102315	93-W	K-21	Horn	4
24-M	1107665	53-J	41-U	1102313	93-W	K-22	Horn	13
25-M	1107776	53-L	52-U	1101052	93-W	K-22-B	Horn	13
26-M	1107266	52-F	60-U	1100502		24-1280 to 22	Horn	13
27-M	1107646		61-U	1102061		211 to 1924	Horn	18
28-M	1107667					Horn		6
29-M	1107882					Horn		6
30-M	1107893	53-Q				80	Horn	14
31-M	1107893	53-Q	85-U			100 to 1388	Horn	14
32-M	1107893	52-F	94-U			100 to 1400	Horn	14
33-M	1107893	52-F	97-U	1107893	93-D	100 to 1510	Horn	14
34-M	1107893	52-F	3-U	1107893		K-26-A 139 to 1390	Horn	14
35-M	1107893	52-F				K-26-B 141 to 1414	Horn	14
36-M	1107893	52-F				K-26-C-1415 to 1415	Horn	14
37-M	1107893	52-F				K-26-D-1731 to 1736	Horn	15
38-M	1107704	53-B				K-26-E-1475 to 1490	Horn	14
39-M	1107731	53-L				K-26-F-1451 to 1454	Horn	14
40-M	1107681	53-J				K-26-G-1761 to 2208	Horn	15
41-M	1107752	53-L				K-26-H-2251 to 2255	Horn	15
42-M	1107374	52-L				K-26-J-2351 to 2352	Horn	15
43-M	1107355	52-L				K-26-L-1601 to 1645	Horn	15
44-M	1107313	52-K				K-26-M-1701 to 1717	Horn	15
45-M	1107311	52-K				K-26-S-1540 to 1575	Horn	15
46-M	1107317	52-K				K-26-X-1381 to 1384	Horn	14
47-M	1107282	52-J				K-28	Horn	16
48-M	1107331	52-K				K-29	Horn	16
49-M	1107368	52-L				K-31-1355 to 1364	Horn	11
50-M	1107367	52-L				K-31-1836 to 1838	Horn	11
51-M	1107321	52-K				K-31-C-1365 to 1371	Horn	11
						K-31-L-1830 to 1835	Horn	11
						K-32-1350 to 1354	Horn	10
						K-33-1651 to 1658	Horn	17
						K-33-B-1851 to 1873	Horn	17
						K-33-C-1881 to 1910	Horn	17
						K-33-C-2031 to 2049	Horn	17
						K-33-C-2151 to 2156	Horn	17

REBUILT D. C. GENERATORS			Model No.	Name	Group
Model No.	For Parts See	Group	3-U	1100313	87-J
3-U	1102771	98-C	4-U	1102771	98-C
5-U	1102005	93-M			

REBUILT DELCO TRONS			Model No.	Name	Group
Model No.	For Parts See	Group	1100628		88-G
1100628		88-G	1100629		88-G
1100633		88-G	1100639		88-G
1100750		88-L			

NEW PRODUCTION UNITS			Model No.	Name	Group
Model No.	Name	Group	AA	Distributor	30
AB	Distributor	30	AC	Distributor	30
AD	Distributor	30	AF	Distributor	30
CA	Distributor	30	CB	Distributor	30
EA	Distributor	30	EC	Distributor	30
GA	Distributor	30	K-3	Horn	1

Delco-Remy

NUMERICAL INDEX OF DISCONTINUED UNITS

Model No.	Name	Group	Model No.	Name	Group	Model No.	Name	Group
K-33-D-1951 to 1963	Horn	17-B	177	Cranking Motor	2	245	Generator	6
K-33-F-2101 to 2122	Horn	17-B	178	Cranking Motor	1	245-A to H	Generator	33
K-33-G-1993 to 1998	Horn	17-C	178-B to N	Ignition Coil	6	246	Cranking Motor	7
K-33-S-2051 to 28086	Horn	17-A	179	Cranking Motor	3	247	Generator	3
K-34	Horn	12	180	Generator	1	247-A	Generator	33
64	Motor Generator	1	181	Cranking Motor	3	248	Cranking Motor	2
70	Motor Generator	5	182	Generator	6	248-A to C	Generator	33
72	Cranking Motor	1	183	Cranking Motor	2	249	Motor Generator	2
78	Motor Generator	8	184	Motor Generator	5	249-B	Generator	33
82	Motor Generator	7	185	Cranking Motor	2	249-C	Generator	33
84	Generator	5	186	Generator	6	249-D	Generator	33
85	Cranking Motor	1	187	Motor Generator	3	250	Generator	1
86	Cranking Motor	1	188	Motor Generator	7	251	Motor Generator	2
87	Generator	5	189	Cranking Motor	2	252	Cranking Motor	4
87-A	Distributor	30	190	Motor Generator	5	252-A	Generator	33
88-A	Distributor	30	191	Cranking Motor	7	253	Generator	2
89	Generator	5	192	Generator	6	254	Cranking Motor	7
92	Motor Generator	5	193	Motor Generator	3	254-A	Generator	33
94	Motor Generator	5	194	Cranking Motor	2	255	Motor Generator	2
95	Generator	5	197	Generator	1	255-A	Generator	33
96	Cranking Motor	1	198	Generator	1	255-B	Generator	33
97	Cranking Motor	1	199	Generator	6	256	Generator	2
98	Motor Generator	8	200	Cranking Motor	2	256-A	Generator	33
99	Generator	5	201	Generator	1	257	Generator	2
100	Cranking Motor	1	202	Cranking Motor	7	257-A to E	Generator	33
100-A to G	Distributor	30	202-A to C	Distributor	32	258	Generator	2
101	Generator	5	203	Generator	6	258-A-B	Generator	33
102	Cranking Motor	1	203-A to O	Distributor	32	259	Cranking Motor	1
103	Generator	5	204	Generator	6	260	Generator	3
103-A to E	Distributor	30	205	Cranking Motor	2	261 to 3	Cranking Motor	2
104	Cranking Motor	1	205-A to C	Distributor	32	264	Generator	1
104-A-B	Distributor	30	206	Generator	6	265	Generator	2
105	Generator	5	206-A to C	Distributor	32	266	Generator	2
106	Cranking Motor	1	207	Motor Generator	3	267	Generator	2
107	Cranking Motor	1	207-A to E	Distributor	32	268	Motor Generator	2
108-A to M	Distributor	31	208	Cranking Motor	3	269	Generator	3
109	Generator	5	208-A to E	Distributor	32	271	Cranking Motor	6
109-A to F	Distributor	31	209	Cranking Motor	2	272	Generator	2
110	Cranking Motor	1	209-A to E	Distributor	33	273	Generator	4
111	Generator	5	210	Generator	1	274	Cranking Motor	5
113	Generator	5	210-C	Distributor	33	275	Generator	2
114	Generator	5	211-A	Distributor	33	277	Cranking Motor	5
115	Motor Generator	5	212-A	Distributor	33	278	Cranking Motor	5
117	Motor Generator	5	213-A	Distributor	33	279	Generator	1
118	Generator	5	214-A	Distributor	33	280	Generator	2
120	Motor Generator	7	215-A to D	Distributor	33	282	Cranking Motor	5
121	Motor Generator	5	216-A	Distributor	33	283	Motor Generator	2
123	Generator	5	216-B	Distributor	33	284	Generator	10
125	Generator	3		Distributor	33	285	Generator	1
126	Cranking Motor			Cranking Motor	4	286	Cranking Motor	5
128	Motor Generator			Cranking Motor	2	287	Generator	4
130	Cranking Motor			Distributor	33	288	Generator	1
131	Generator			Generator	1	290	Generator	7
132	Generator			Motor	2	290-B	Cranking Motor	30
133	Generator				1	291	Generator	10
134	Generator			Cranking Motor	2	292	Cranking Motor	6
135	Generator	5		Generator	1	292-A	Cranking Motor	30
136	Cranking Motor	1		Cranking Motor	4	293	Generator	6
137	Generator	5	220	Generator	3	293-A to C	Cranking Motor	30
138	Generator	5	230	Cranking Motor			Generator	6
140	Motor Generator	7	230-A to G	Generator			Cranking Motor	30
141	Motor Generator	7	231	Motor Generator		295	Generator	4
148	Generator	5	231-A to C	Generator		296	Generator	4
149	Generator	5	232-A	Generator	32	296-A	Cranking Motor	30
153	Generator	5	233	Generator	1	297	Cranking Motor	8
156	Generator	5	233-A	Generator	32	298	Cranking Motor	5
157	Cranking Motor	1	234	Generator	1	298-A	Cranking Motor	30
161-A to D	Generator	31	234-A to E	Generator	32	299	Generator	7
162	Motor Generator	3	236	Motor Generator	2	299-A to C	Cranking Motor	30
163	Generator	5	237	Generator	6	300	Generator	2
164	Cranking Motor	3	237-A	Generator	32	300-A	Cranking Motor	30
165	Generator	1	238	Generator	1	301	Generator	2
165-A-B-C	Generator	30	238-A	Generator	32	303	Generator	4
166	Generator	1	239-A	Generator	32	303-A to D	Cranking Motor	30
166-A to C	Generator	31	240	Cranking Motor	2	304	Cranking Motor	7
167	Generator	5	240-A	Generator	32	304-A	Cranking Motor	30
168	Generator	6	241	Generator	6	305	Generator	1
168-A to F	Generator	31	241-A	Generator	32	305-A to E	Cranking Motor	30
169	Generator	1	242	Generator	6	306	Generator	8
170	Cranking Motor	4	243	Generator	1	306-A	Cranking Motor	30
171 to 174	Cranking Motor	2	243-A to F	Generator	32	307	Generator	8
176	Generator	1	244	Cranking Motor	2	307-A	Cranking Motor	30

Delco-Remy

NUMERICAL INDEX OF DISCONTINUED UNITS

3

Model No.	Name	Group	Model No.	Name	Group	Model No.	Name	Group
308	Generator	4	376-A to D	Distributor	35	529	Generator	12
308-A	Cranking Motor.....	30	377	Generator	11	529-A to Z	Ignition Coil.....	34
309	Generator	1	378	Cranking Motor.....	11	530	Generator	12
309-A	Cranking Motor.....	30	379	Generator	11	530-B to L	Ignition Coil.....	35
310	Cranking Motor.....	6	380	Generator	8	531	Generator	12
311	Generator	2	381	Cranking Motor.....	8	531-C	Ignition Coil.....	35
312	Generator	2	382	Cranking Motor.....	11	532	Generator	12
313	Cranking Motor.....	5	383	Generator	9	532-B & C	Ignition Coil.....	36
314	Cranking Motor.....	9	384	Generator	11	532-Z	Ignition Coil.....	36
315	Generator	7	385	Cranking Motor.....	10	533 to 8	Generator	14
316	Cranking Motor.....	9	386	Cranking Motor.....	10	533-D to Y	Ignition Coil.....	37
317	Generator	9	388	Cranking Motor.....	10	534-A to Z	Ignition Coil.....	38
318	Cranking Motor.....	4	389	Generator	U	535-A to L	Ignition Coil.....	39
319	Generator	2	390	Generator	11	536-A to Z	Ignition Coil.....	38
320	Cranking Motor.....	9	391	Generator	11	537-B to Y	Ignition Coil.....	38
321	Cranking Motor.....	9	392	Generator	8	538-A to Z	Ignition Coil.....	38-A
323	Cranking Motor.....	9	401 to 10	Generator	12	539	Generator	14
324	Generator	4	410-A to R	Current Limit Relay..	31	539-B to Z	Ignition Coil.....	40
325	Generator	7	411	Cranking Motor.....	13	540	Cranking Motor.....	16
326	Cranking Motor.....	5	415 to 19	Generator	13	540-A to R	Ignition Coil.....	40
327	Generator	10	420	Cranking Motor.....	11	544-5	Cranking Motor.....	16
328	Cranking Motor.....	5	421	Cranking Motor.....	14	545-A-B	Ignition Coil.....	39
329	Generator	10	425-A to V	Dual Lock	30	547; 9	Cranking Motor.....	16
330	Cranking Motor.....	11	426-A to V	Dual Lock	31	550	Generator	13
331 to 33	Generator	10	427-B to Z	Electrolock Switch....	32	550-A to F	Ignition Coil.....	6
334	Cranking Motor.....	9	428	Generator	11	551	Generator	15
335	Generator	2	430 to 40	Generator	13	551-A	Ignition Coil.....	5
336	Cranking Motor.....	11	440-A to E	Ignition Switch	30	552	Generator	15
338	Generator	10	442	Cranking Motor.....	13	552-A	Ignition Coil.....	5
339	Cranking Motor.....	10	444	Cranking Motor.....	11	553 to 60	Generator	13
340	Cranking Motor.....	10	445	Cranking Motor.....	8	553-A to E	Ignition Coil.....	5
341	Cranking Motor.....	7	458-9	Cranking Motor.....	16	561	Generator	15
342	Generator	10	460-A to D	Combination Switch ...	30	563 to 66	Generator	13
343	Generator	10	461-A to L	Combination Switch ...	30	567 to 69	Generator	15
344	Generator	2	461	Generator	14	570	Generator	14
345	Generator	10	463	Generator	14	575	Cranking Motor.....	16
346	Generator	10	464 to 69	Generator	12	576	Cranking Motor.....	13
347	Cranking Motor.....	10	470	Cranking Motor.....	16	577	Cranking Motor.....	11
348	Cranking Motor.....	9	470-A to T	Combination Switch ...	31	578-9	Cranking Motor.....	16
349	Cranking Motor.....	9	471	Cranking Motor.....	16	581 to 86	Cranking Motor.....	16
350	Cranking Motor.....	9	471-A to E	Combination Switch ...	31	587	Cranking Motor.....	11
350-A to C	Distributor	34	472	Cranking Motor.....	14	588-9	Cranking Motor.....	19
351-A	Distributor	34	472-A to P	Combination Switch ...	31	590	Cranking Motor.....	16
352	Generator	10	473-A	Combination Switch ...	31	591	Cranking Motor.....	11
352-A	Distributor	34	474	Cranking Motor.....	14	592 to 94	Cranking Motor.....	16
353	Generator	10	474-A to C	Combination Switch ...	32	595 to 98	Cranking Motor.....	19
353-A to F	Distributor	34	475-A to Z	Combination Switch ...	33	599	Cranking Motor.....	16
354	Cranking Motor.....	5	476-A to F	Combination Switch ...	33	600	Generator	86
354-A to D	Distributor	34	477	Cranking Motor.....	16	A-600 (DR. 1972029)	Regulator ...	6-Z
355	Cranking Motor.....	10	477-A to Z	Combination Switch ...	34	F-600 (DR. 1972030)	Regulator ...	6-Z
355-A to B	Distributor	34	478	Cranking Motor.....	13	601	Generator	86
356-C	Distributor	34	478-B to Y	Combination Switch ...	36	A-601 (DR. 1972032)	Regulator ...	6-Z
357	Generator	10	479	Cranking Motor.....	16	F-601 (DR. 1972031)	Regulator ...	6-Z
357-A	Distributor	34	479-A to Y	Combination Switch ...	34	602	Generator	86
358	Generator	2	480-A to F	Combination Switch ...	35	A-602 (DR. 1972033)	Regulator ...	6-Z
358-A to B	Distributor	34	480-L to Y	Light Switch	34	F-602 (DR. 1972049)	Regulator ...	6-Z
359	Generator	8	481-V-W-X	Light Switch	34	603	Generator	17
359-A	Distributor	34	481-Z	Combination Switch ...	34	A-603 (DR. 1972041)	Regulator ...	6-Z
360	Cranking Motor.....	9	482	Cranking Motor.....	16	F-603 (DR. 1972064)	Regulator ...	6-Z
360-A	Distributor	34	483	Dimmer Switch	30	604	Generator	15
361	Cranking Motor.....	9	484	Combination Switch ...	34	A-604 (DR. 1972060)	Regulator ...	6-Z
362	Cranking Motor.....	9	485	Cranking Motor.....	16	F-604 (DR. 1972067)	Regulator ...	6-Z
363	Generator	10	486	Light Switch	34	605 to 9	Generator	17
363-A to C	Distributor	34	486-B to Z	Lighting Switch	32	606-A to D	Distributor	36
364	Generator	9	487-A to R	Light Switch	33	A-605 (DR. 1972061)	Regulator ...	6-Z
365	Generator	8	488-9	Cranking Motor.....	11	F-605 (DR. 1972070)	Regulator ...	6-Z
366	Cranking Motor.....	8	490	Cranking Motor.....	11	A-606 (DR. 1972062)	Regulator ...	6-Z
366-A to Z	Distributor	35	490-A	Automatic Choke	2	A-607 (DR. 1972063)	Regulator ...	6-Z
367-A to C	Distributor	35	491 to 93	Cranking Motor.....	16	A-608 (DR. 1972065)	Regulator ...	6-Z
368	Cranking Motor.....	10	495-A to E	Choke Switch	30	A-609 (DR. 1972066)	Regulator ...	6-Z
368-A to D	Distributor	35	496-A to F	Choke Switch	30	610 to 15	Generator	14
369	Cranking Motor.....	10	497 to 99	Cranking Motor.....	16	616	Generator	15
369-A to C	Distributor	35	501 to 20	Generator	16	616-C to F	Distributor	36
370	Generator	11	522 to 25	Generator	12	617 to 19	Generator	17
371	Cranking Motor.....	10	525-A to G	Ignition Coil.....	31	620	Generator	14
373	Generator	11	526	Generator	12	621-2	Generator	12
374	Cranking Motor.....	10	526-E to Z	Ignition Coil.....	33	623 to 30	Generator	14
374-A to B	Distributor	35	527	Generator	12	624-A to C	Distributor	36
375	Generator	8	527-A	Ignition Coil.....	31	625-A to Z	Distributor	83
375-A to E	Distributor	35	528	Generator	12	626-A to X	Distributor	36
376	Generator	11	528-A to Z	Ignition Coil.....	32			

Delco-Remy

NUMERICAL INDEX OF DISCONTINUED UNITS

Model No.	Name	Group	Model No.	Name	Group	Model No.	Name	Group
627-A to C	Distributor	37	700	Cranking Motor	18	912-A to B	Generator	34
630-A-B	Distributor	38	700-B to C	Cranking Motor	31	913-A to H	Generator	34
631	Generator	17	701	Cranking Motor	19	914-A to B	Generator	34
631-A to F	Distributor	38	701-A	Cranking Motor	31	915-B to D	Generator	34
632	Generator	17	702	Cranking Motor	19-A	916-A to K	Generator	22-A
632-B to Z	Distributor	54	702-B	Cranking Motor	31	917-A to ZA	Generator	35
633	Generator	17	705-A to D	Cranking Motor	31	918-A to H	Generator	35-A
633-A to J	Distributor	38	706	Cranking Motor	18	919-A	Generator	35
634	Generator	17	707-8	Cranking Motor	19-A	920-A to B	Generator	36
634-A to B	Distributor	39	710-A to E	Cranking Motor	31	921-A to B	Generator	36
635	Generator	17	710-E	Cranking Motor	31-A	922-A to B	Generator	36
635-A to Z	Distributor	39	711	Cranking Motor	19-A	923-A to C	Generator	36
636	Generator	17	711-B to E	Cranking Motor	31	924-A to C	Generator	36
636-A to Y	Distributor	40	712-A to H	Cranking Motor	31	925-B to H	Generator	36-A
637	Generator	17	713-A to K	Cranking Motor	32	926-A to D	Generator	26
637-A to Y	Distributor	41	714	Cranking Motor	11	927-A to X	Generator	45
638	Generator	17	714-A to Z	Cranking Motor	41	928-A-B	Generator	21
638-A to G	Distributor	42	715	Cranking Motor	18	929-A-B	Generator	25
639	Generator	17	715-B to E	Cranking Motor	33	930-A to H	Generator	21
639-A to Z	Distributor	42	716-A to G	Cranking Motor	33-A	931-A to Z	Generator	27
640	Cranking Motor	18	717-A	Cranking Motor	33	932-A to D	Generator	23
640-A to Z	Distributor	44	718	Cranking Motor	19	933-A	Generator	36
641	Cranking Motor	18	718-A to Z	Cranking Motor	42	933-B to S	Generator	28
641-A to H	Distributor	45	720-A to Z	Cranking Motor	34	934-A to Z	Generator	22
642	Cranking Motor	18	720-1	Cranking Motor	19	935-A	Generator	36
643	Cranking Motor	19	721-A to D	Cranking Motor	34	935-B to Z	Generator	29
643-A to Z	Distributor	53	721	Cranking Motor	19	936-A to Z	Generator	24
645	Cranking Motor	19-A	722	Cranking Motor	19	937-A to Z	Generator	51
645-A to Z	Distributor	80	723-A to C	Cranking Motor	35-A	938-A to G	Generator	52
646	Cranking Motor	19-A	723	Cranking Motor	19	940-A to Z	Generator	37
646-A to B	Distributor	46	724	Cranking Motor	18	943-A to Z	Generator	39
647-A to L	Distributor	81	725-A to Z	Cranking Motor	36	944-A to Z	Generator	44
648	Cranking Motor	19	726-A to K	Cranking Motor	44	945-A to Z	Generator	40
648-A to B	Distributor	46	727-A to Z	Cranking Motor	47	946-A to S	Generator	41-A
649-A to Z	Distributor	84	728	Cranking Motor	18	947-A to K	Generator	41
650	Cranking Motor	19-A	728-A to X	Cranking Motor	40	948-A to Z	Generator	48
650-A to R	Distributor	50	729	Cranking Motor	18	949-A to Z	Generator	42
651	Cranking Motor	18	729-A to L	Cranking Motor	49	950-A to D	Generator	43
651-A to D	Distributor	51	730-A	Cranking Motor	50	951-A to D	Generator	43
652	Cranking Motor	19	731	Cranking Motor	18	953-D to Z	Generator	53
652-A to M	Distributor	52	732-A to C	Cranking Motor	37	954-A to B	Generator	54
653	Cranking Motor	19-A	734	Cranking Motor	18	955-A to Z	Generator	46
654-A	Distributor	46	734-A to Z	Cranking Motor	38	956-A to P	Generator	56
655	Cranking Motor	18	735	Cranking Motor	19-A	957-A to Z	Generator	47
656-A to Z	Distributor	56	735-B to C	Cranking Motor	37	958-A to F	Generator	58
657	Cranking Motor	19	736-A	Cranking Motor	37	959-A to Z	Generator	59
657-A to P	Distributor	47	737	Cranking Motor	19	960-A to J	Generator	60
658-A to Z	Distributor	48	738	Cranking Motor	19-A	961-A	Generator	43
659	Cranking Motor	19-A	738-A to Z	Cranking Motor	46	961-A to N	Generator	61
659-A to E	Distributor	49	739	Cranking Motor	19-A	965-A to Z	Generator	65
660-A to Z	Distributor	60	740	Cranking Motor	19-A	967-A to Z	Generator	67
661	Cranking Motor	18	740-A to G	Cranking Motor	37	968-A to Z	Generator	68
661-B to Z	Distributor	61	740-A to I	Cranking Motor	39-A	970-A to H	Generator	70
662	Cranking Motor	19-A	741	Cranking Motor	19-A	971-A to K	Generator	50
662-A to Y	Distributor	62	741-A to D	Cranking Motor	39	973-B to M	Generator	73
663-A to ZX	Distributor	63	742	Cranking Motor	19-A	975-A to C	Generator	50
664	Cranking Motor	18	742-A to C	Cranking Motor	19-A	975-F to Z	Generator	75
664-B to G	Distributor	64	743-A	Cranking Motor	19-A	977-B	Generator	50
665-A to Z	Distributor	65	745-6	Cranking Motor	18	977-A to F	Generator	78
666-B to E	Distributor	66	750	Cranking Motor	18	982 to Z	Generator	78-A
667-A-B-C-Z	Distributor	67	751	Cranking Motor	19-A	1045	Combination Switch	4
668	Cranking Motor	19-A	753 to 60	Cranking Motor	18	1048	Combination Switch	4
668-A to N	Distributor	68	760-A to C	Cranking Motor	39	1050-B to Z	Panel	4
669	Cranking Motor	19-A	762-3	Cranking Motor	19-A	1051-A-B-C	Fuse Panel	4
670 to 73	Generator	14	764	Cranking Motor	18	1057	Combination Switch	4
674	Generator	15	765	Cranking Motor	11	1058	Combination Switch	4
675	Generator	14	766; 8	Cranking Motor	19-A	1060	Combination Switch	5
676-7	Generator	15	770-1	Cranking Motor	18	1062	Combination Switch	5
678 to 80	Generator	14	772	Cranking Motor	19-A	1063	Combination Switch	U
680-A to Z	Dist. Vacuum Control	2	776	Cranking Motor	18	1065	Combination Switch	4
681	Generator	15	777	Cranking Motor	19-A	1066	Combination Switch	4
682-3	Generator	17	778 to 81	Cranking Motor	18	1067	Combination Switch	4
684	Generator	15	783	Cranking Motor	11	1069	Combination Switch	5
685-6	Generator	17	784-5	Cranking Motor	18	1070	Combination Switch	5
687	Generator	15	786	Cranking Motor	19-A	1071	Combination Switch	4
688 to 94	Generator	17	787 to 89	Cranking Motor	18	1072	Combination Switch	5
695	Generator	15	791; 6	Cranking Motor	19-A	1073	Combination Switch	4
696	Generator	17	901-A	Generator	34	1074	Combination Switch	5
696-A to H	Distributor	96	910-A to B	Generator	34	1075	Combination Switch	8
697 to 99	Generator	17	911-A	Generator	34	1076	Combination Switch	5

Delco-Remy

NUMERICAL INDEX OF DISCONTINUED UNITS

5

Model No.	Name	Group	Model No.	Name	Group	Model No.	Name	Group
1077	Combination Switch	5	1221	Combination Switch	7	2097	Ignition Coil	2
1078	Combination Switch	8	1222	Combination Switch	3	2101	Ignition Coil	2
1079	Combination Switch	5	1223	Combination Switch	3	2104-5	Ignition Coil	2
1081	Combination Switch	4	1224	Combination Switch	7	2107	Ignition Coil	2
1082	Combination Switch	5	1225	Combination Switch	3	2110	Ignition Coil	2
1083	Combination Switch	5	1226	Combination Switch	5	2111 to 13	Ignition Coil	2
1085	Combination Switch	5	1228 to 1231	Combination Switch	3	2115 to 17	Ignition Coil	2
1086	Combination Switch	4	1232 to 1234	Combination Switch	1	2118	Ignition Coil	3
1087	Combination Switch	4	1236	Combination Switch	5	2121	Ignition Coil	3
1088	Combination Switch	5		(Serviced by Lincoln)		2122	Ignition Coil	2
1089	Combination Switch	4	1237	Combination Switch	6	2123	Ignition Coil	3
1090	Combination Switch	4	1238 to 41	Combination Switch	1	2127	Ignition Coil	2
1092	Combination Switch	5	1242	Combination Switch	6	2128 to 30	Ignition Coil	3
1093	Combination Switch	5	1243 to 49	Combination Switch	1	2131	Ignition Coil	4
1094	Combination Switch	4	1250	Combination Switch	3	2134	Ignition Coil	3
1095	Combination Switch	8	1251	Combination Switch	3	2135	Ignition Coil	4
1099	Combination Switch	5	1252 to 61	Combination Switch	1	2137 to 42	Ignition Coil	3
1101	Combination Switch	5	1262	Combination Switch	3	2144 to 46	Ignition Coil	3
1102	Combination Switch	8	1263	Combination Switch	1	2150	Ignition Coil	2
1103 to 9	Combination Switch	4	1264	Combination Switch	1	2152-3	Ignition Coil	3
1112	Combination Switch	5	1265	Combination Switch	3	2155	Ignition Coil	3
1113	Combination Switch	4	1267 to 71	Combination Switch	1	2157-8	Ignition Coil	3
1118	Combination Switch	4	1272	Combination Switch	3	2159	Ignition Coil	4
1119	Combination Switch	5	1273	Combination Switch	1	2161	Ignition Coil	3
1120	Combination Switch	U	1275	Combination Switch	5	2162	Ignition Coil	4
1121	Combination Switch	4	1276 to 82	Combination Switch	1	2163	Ignition Coil	4
1123	Combination Switch	6	1283	Lighting Switch	1	2165	Ignition Coil	4
1124	Combination Switch	6	1284	Lighting Switch	1	2169	Ignition Coil	4
1126	Combination Switch	U	1286	Dimmer Switch	1	2170	Ignition Coil	2
1129	Combination Switch	5	1287 to 89	Combination Switch	1	2171	Ignition Coil	4
1130	Combination Switch	2	1290	Dimmer Switch	1	2173	Ignition Coil	1
1132	Combination Switch	5	1291	Combination Switch	1	2174	Ignition Coil	4
1133	Combination Switch	2	1292	Dimmer Switch	1	2175	Ignition Coil	2
1136	Combination Switch	2	1295	Combination Switch	9	2176 to 81	Ignition Coil	1
1137	Combination Switch	U	1297	Combination Switch	1	2182	Ignition Coil	5
1142	Combination Switch	5	1298	Combination Switch	1	2184 to 91	Ignition Coil	1
1143	Combination Switch	4	1299	Ignition Switch	2	2192 to 94	Ignition Coil	4
1144	Combination Switch	5	1301 to 3	Ignition Switch	2	2195	Ignition Coil	5
1145 to 9	Combination Switch	2	1305	Combination Switch	1	2196 to 97	Ignition Coil	4
1150	Combination Switch	5	1307	Combination Switch	1	2198 to 99	Ignition Coil	5
1151	Combination Switch	5	1310	Combination Switch	U	4001	Distributor	19
1152	Combination Switch	2	1311	Dimmer Switch	1	4002	Distributor	17
1153	Combination Switch	6	1312	Combination Switch	1	4003	Distributor	19
1154 to 7	Combination Switch	5	1318	Dimmer Switch	1	4004 to 4006	Distributor	17
1158	Combination Switch	2	1321	Combination Switch	9	4007	Distributor	19
1159	Combination Switch	3	1322	Dash Light Switch	1	4008 to 4009	Distributor	18
1160	Combination Switch	2	1323	Combination Switch	1	4010	Distributor	2
1161	Combination Switch	5	1324	Combination Switch	9	4011	Distributor	18
1162	Combination Switch	5	1325	Ignition Switch	2	4012	Distributor	19
1163	Combination Switch	5	1326	Combination Switch	9	4013	Distributor	17
1164 to 66	Combination Switch	2	1327	Combination Switch	9	4014	Distributor	1
1167	Combination Switch	5	1328	Dash Light Switch	1	4015	Distributor	17
1168 to 72	Combination Switch	2	1331	Combination Switch	9	4016	Distributor	18
1173	Combination Switch	5	1346	Combination Switch	10	4017	Distributor	17
1174	Combination Switch	2	1351	Dash Light Switch	1	4018	Distributor	17
1175	Combination Switch	5	1354	Combination Switch	1	4019	Distributor	17
1176	Combination Switch	2	1355	Combination Switch	9	4020	Distributor	10
1177	Combination Switch	2		Dash Light Switch	1	4021	Distributor	21
1178	Combination Switch	5		Combination Switch	1	4022	Distributor	19
1179	Combination Switch	5		Combination Switch	10	4023	Distributor	18
1180	Combination Switch	5	1364	Dash Light Switch	1	4024	Distributor	19
1181	Combination Switch	5	1373	Combination Switch	9	4026	Distributor	1
1182	Combination Switch	2	1376	Dash Light Switch	9	4027	Distributor	18
1183	Combination Switch	U	1381 to 3	Combination Switch	10	4028	Distributor	19
1184	Combination Switch	5	1390 to 2	Combination Switch	9	4029	Distributor	16
1185	(Serviced by Lincoln)		1396-7	Combination Switch	10	4030	Distributor	18
1189	Combination Switch	3	1399	Dash Light Switch	1	4031	Distributor	20
1191	Combination Switch	2	1401-2	Combination Switch	10	4032	Distributor	18
1192	Combination Switch	3	1403	Combination Switch	9	4033	Distributor	19
1194	Combination Switch	5	1404	Dash Lamp Switch	*	4036	Distributor	4
1195 to 99	Combination Switch	3	1406	Dash Lamp Switch	*	4038	Distributor	1
1203	Combination Switch	5	1412	Combination Switch	9	4039	Distributor	4
1204	Combination Switch	3	1413	Combination Switch	10	4040	Distributor	19
1205	Combination Switch	5	1420 to 48	Combination Switch	9	4041	Distributor	18
1207	Combination Switch	5	1550	Selector	*	4042	Distributor	18
1211	Combination Switch	3	1575 to 1610	Vacuum	5	4043	Distributor	19
1213	Combination Switch	3	1951 to 1958	Starting Switch	1	4044	Distributor	19
1214	Combination Switch	7	1963 to 1966	Starting Switch	1	4045	Distributor	20
1215	Combination Switch	5	2022	Ignition Coil	2	4047	Distributor	21
1216	Combination Switch	5	2045	Ignition Coil	2	4048	Distributor	20
1218 to 1220	Combination Switch	3	2092 to 95	Ignition Coil	2	4049	Distributor	21

Delco-Remy

NUMERICAL INDEX OF DISCONTINUED UNITS

 
Model No.	Name	Group	Model No.	Name	Group	Model No.	Name	Group
4050	Distributor	22	5134	Distributor	9	5283	Distributor	U
4051	Distributor	21	5135	Distributor	5	5284	Distributor	17
4052	Distributor	20	5141	Distributor	5	5286 to 87	Distributor	18
4053	Distributor	21	5142	Distributor	15	5288	Distributor	17
4054	Distributor	19	5147	Distributor	9	5289	Distributor	18
4055	Distributor	22	5148	Distributor	5	5290 to 91	Distributor	17
4056	Distributor	22	5150	Distributor	14	5292 to 93	Distributor	18
4057	Distributor	26	5151	Distributor	*	5294	Distributor	17
4058	Distributor	20	5152	Distributor	5	5295	Distributor	18
4063 to 65	Distributor	25	5153	Distributor	5	5296	Distributor	19
4069	Distributor	26	5158	Distributor	5	5297	Distributor	18
4070-1	Distributor	24	5160	Distributor	5	5298	Distributor	19
4071-X	Distributor	24	5166	Distributor	14	5299	Distributor	18
4072	Distributor	20	5167	Distributor	5	5513	Apparatus Box	1
4074-78	Distributor	24	5169	Distributor	2	5515	Apparatus Box	1
4075	Distributor	20	5171	Distributor	5	5519	Apparatus Box	1
4076	Distributor	21	5174	Distributor	2	5522	Apparatus Box	1
4077-8	Distributor	20	5175	Distributor	2	5523	Apparatus Box	1
4079	Distributor	27	5178	Distributor	2	5540 to 60	Regulator	3
4084	Distributor	26	5179	Distributor	2	5581 to 5600	Regulator	3
4087	Distributor	21	5183	Distributor	2	5634 to 49	Regulator	2-B
4088	Distributor	24	5186	Distributor	8	5661	Ignition Relay	1
4090 to 90-X	Distributor	27	5187	Distributor	5	5668	Cut-Out Relay	1
4092-3	Distributor	26	5188	Distributor	12	5677	Ignition Relay	1
4094	Distributor	19	5189	Distributor	12	5678	Cut-Out Relay	2
4096	Distributor	26	5190	Distributor	12	5680 to 84	Ignition Relay	1
4098-9	Distributor	24	5192	Distributor	2	5686 to 90	Cutout Relay	2
4101	Distributor	27	5193	Distributor	9	5693	Ignition Relay	1
4102 to 4	Distributor	24	5194	Distributor	1	5695 to 97	Circuit Breaker Relay	3
4105	Distributor	26	5195	Distributor	8	5698	Ignition Relay	1
4106	Distributor	27	5197	Distributor	12	5699	Cut-Out Relay	2
4110-11	Distributor	26	5198	Distributor	12	5702	Circuit Breaker Relay	1
4112-3	Distributor	24	5202	Distributor	8	5705	Circuit Breaker Relay	3
4114	Distributor	27	5203 to 5	Distributor	9	5706	Circuit Breaker Relay	1
4115-6	Distributor	24	5206	Distributor	14	5709	Circuit Breaker Relay	2
4118	Distributor	26	5207	Distributor	11	5714	Circuit Breaker Relay	1
4119	Distributor	27	5208	Distributor	2	5715	Cut-Out Relay	1
4122-3	Distributor	24	5209	Distributor	8	5716	Circuit Breaker Relay	2
4126 to 32	Distributor	24	5210	Distributor	1	5727	Circuit Breaker Relay	2
4133	Distributor	27	5211	Distributor	2	5731	Cut-Out Relay	1
4135 to 37	Distributor	27	5212	Distributor	9	5734	Circuit Breaker Relay	1
4138	Distributor	24	5213	Distributor	8	5738 to 42	Circuit Breaker Relay	1
4139	Distributor	27	5214	Distributor	11	5744 to 45	Cutout Relay	1
4143	Distributor	27	5215	Distributor	2	5746 to 47	Circuit Breaker Relay	1
4150	Distributor	24-A	5216	Distributor	8	5749	Circuit Breaker Relay	3
4152	Distributor	24-A	5218	Distributor	6	5753	Circuit Breaker Relay	2
4154	Distributor	24-A	5219	Distributor	16	5754	Cut-Out Relay	1
4156	Distributor	27	5221	Distributor	6	5755 to 56	Circuit Breaker Relay	2
4157	Distributor	24-A	5222 to 24	Distributor	9	5759	Circuit Breaker Relay	2
4159	Distributor	24-A	5225	Distributor	8	5761	Cut-Out Relay	1
4160	Distributor	26	5226	Distributor	16	5763 to 64	Cutout Relay	1
4161	Distributor	27	5227	Distributor	12	5765	Circuit Breaker Relay	2
4163	Distributor	26	5228	Distributor	6	5766	Cut-Out Relay	1
4170	Distributor	27	5232 to 33	Distributor	6	5767 to 70	Circuit Breaker Relay	2
4172 to 77	Distributor	24-A	5235	Distributor	16	5771 to 72	Cutout Relay	1
4179	Distributor	27	5239	Distributor	14	5778	Circuit Breaker Relay	2
4185	Distributor	24-A	5240	Distributor	6	5779	Circuit Breaker Relay	2
4186	Distributor	24-A	5242	Distributor	12	5800 to		
4193-4	Distributor	24-A	5243 to 44	Distributor	2			
4198	Distributor	24-A	5246	Distributor	16			
4201; 3	Distributor	25-A	5247	Distributor	11			
4209	Distributor	26	5249	Distributor	2	17002 to 03	Distributor	3
4210	Distributor	24-A	5250	Distributor	4	17004 to 07	Distributor	4
4211	Distributor	25-A	5251 to 52	Distributor	2	17008	Distributor	3
4213-14	Distributor	24-A	5253 to 54	Distributor	8	17009	Distributor	2
4215	Distributor	25-A	5255 to 57	Distributor	3	17010 to 21	Distributor	5
4216	Distributor	24-A	5258	Distributor	8	17022 to 24	Distributor	6
4218	Distributor	26	5259	Distributor	2	17025	Distributor	2
4220-1	Distributor	25-A	5260	Distributor	1	17026 to 38	Distributor	7
4224	Distributor	24-A	5261	Distributor	3	17039	Distributor	3
4225	Distributor	25-A	5262 to 63	Distributor	4	17040 to 41	Distributor	6
4226	Distributor	24-A	5264	Distributor	3	17042	Distributor	2
4229	Distributor	24-A	5265 to 66	Distributor	10	17044 to 45	Distributor	1
4230-1-4	Distributor	25-A	5267	Distributor	4	17046	Distributor	4
4242-5	Distributor	28-A	5268	Distributor	U	17047	Distributor	19
4248	Distributor	25-A	5270	Distributor	2	825215	Magnetic Switch	31
4249	Distributor	28-A	5272 to 75	Distributor	17	826619	Magnetic Switch	31
4250	Distributor	25-A	5276 to 77	Distributor	18	1105326-7	Generator	103
4252	Distributor	28-A	5278 to 79	Distributor	17	1105401	Generator	104
4258	Distributor	25-A	5280	Distributor	2	1106052	Generator	107-B
4238	Distributor	24-A	5281 to 82	Distributor	18	1106301 to 5	Generator	110-B
						1106351 to 53	Generator	110-D

Delco-Remy

NUMERICAL INDEX OF DISCONTINUED UNITS

7

Model No.	Name	Group	Model No.	Name	Group	Model No.	Name	Group
1106401 to 10	Generator	111	SPECIAL MODELS			SM1587	Solenoid Switch—Same as 1524 except use 1857399 Coil and Shell	
1108651	Cranking Motor.....	58	SM Generator 1001 to 1099.....	80-A		SM1599	Combination Switch—Same as 1401	
1109200 to 5	Cranking Motor.....	64	SM Generator 1102 to 1197.....	80-B		SM1600	Combination Switch—Same as 1402	
1114236 Up	Switch	4	SM Generator 1203 to 1298.....	80-C		SM1602	Cut-Out Relay	*
1117651-2	Generator	124-B	SM Generator 1301 to 1380.....	80-D		SM1739	Control Unit—Same as 5544 except use 1862922 Cover	*
1118201 to 39	Regulator	6	SM Generator 1385 to 1493.....	80-E		SM1902	Switch	*
1118240 to 80	Regulator	6-A	SM Generator 1503 to 1590.....	80-F		NORTHEAST GENERATORS		
1118281 to 99	Regulator	6-B	SM Generator 1591 to 1673.....	80-G		5003578 to 5006038	NE Generators	81
1840219	Magnetic Switch	31	SM Generator 1676 to 1758.....	80-H		5006050 to 5006343	NE Generators	82
1843761	Magnetic Switch	31	SM Generator 1764 to 1828.....	80-J		5006380 to 5006624	NE Generators	83
	Generator Clutches.....	1	SM Generator 1838 to 1899.....	80-K		5024349 to 5033080	NE Generators	84
	Generator Clutches.....	2	SM Generator 1900 to 1964.....	80-L		NORTHEAST DISTRIBUTORS		
	Motor Clutches.....	1	SM Cranking Motor 1002 to 1148.....	90-A		10386 to 10798	NE Distributor	100
	Motor Drives (Bendix Clutch)	2	SM Cranking Motor 1150 to 1295.....	90-B		10800 to 10837	NE Distributor	101
	Motor Drives (Clutch Type)	3	SM Cranking Motor 1307 to 1499.....	90-C		10840 to 10868-A	NE Distributor	102
1972029 Up	Regulator	6-Z	SM Cranking Motor 1502 to 1627.....	90-D		10871 to 10900	NE Distributor	103
1993503 to 686	Switch	112	SM Cranking Motor 1629 to 1749.....	90-E		5024838 to 5033450	NE Distributor	104
1997401	Current Limit Relay.....	31	SM Cranking Motor 1750 to 1869.....	90-F		NORTHEAST STARTING MOTORS		
1997808-900	Vacuum Switch	5	SM Cranking Motor 1879 to 1967.....	90-G		3581 to 6188	NE Starting Motors	105
1998086 to 9	Switch	112	SM Distributor 1009 to 1194.....	98-A		6215 to 6577	NE Starting Motors	106
1998099; 122	Vacuum Switch	5	SM Distributor 1200 to 1299.....	98-B		6585 to 6622-A	NE Starting Motors	107
1998147 to 86	Switch	112	SM Distributor 1302 to 1429.....	98-C		5024656 to 5032462	NE Starting Motors	107
1998194	Switch	5	SM Distributor 1283	98-D		Northeast Ignition Coils		108
1998658 to 737	Switch	112	SM Distributor 1432 to 1580.....	98-D		Northeast Cut-Out Relay.....		109
1998807 to 62	Hot Gas Valve	1	SM Distributor 1604 to 1716.....	98-E		Northeast Control Unit.....		110
1998869 to 88	Hot Gas Valve	1-A	SM Distributor 1726 to 1966.....	98-F		Northeast Ignition Units.....		111
1999501 Up	Horn	17-D	SM Coils	60		All other Northeast Equipment in old Northeast Catalog.		
1999551 to 89	Horn	17-C	SM Horns	40				
1999591 to 600	Horn	17-F	SM Switches	95				
1999601 to 28	Horn	17-E	SM1428 Apparatus Box	*				
1999631 Up	Horn	17-F	SM1443 Generator—Same as SM1565 except use 824377 Advance Arm					
1999700-1	Horn	19	SM1444 Generator—Same as 956-C except uses SM1464 Distributor					
1999721	Horn	17-F	SM1445 Generator—Same as 956-G except uses SM1465 Distributor					
1999753 Up	Horn	17-F	SM1471 Generator	*				
1999801 to 30	Horn	15-A	SM1477 Generator—Same as 956-M					
1999831 to 50	Horn	15-B	SM1480 Generator—Same as 956-N					
1999851 to 69	Horn	15-C	SM1527 Apparatus Box—Same as 5561					
1999870 Up	Horn	15-D	SM1553 Apparatus Box—Same as SM1428					
1999888	Horn	15-D	SM1559 Apparatus Box—Same as 5561					
1999890-1	Horn	15-D						
1999901 Up	Horn	7-A						
1999943	Horn	17-C						
1999971 Up	Horn	7-A						

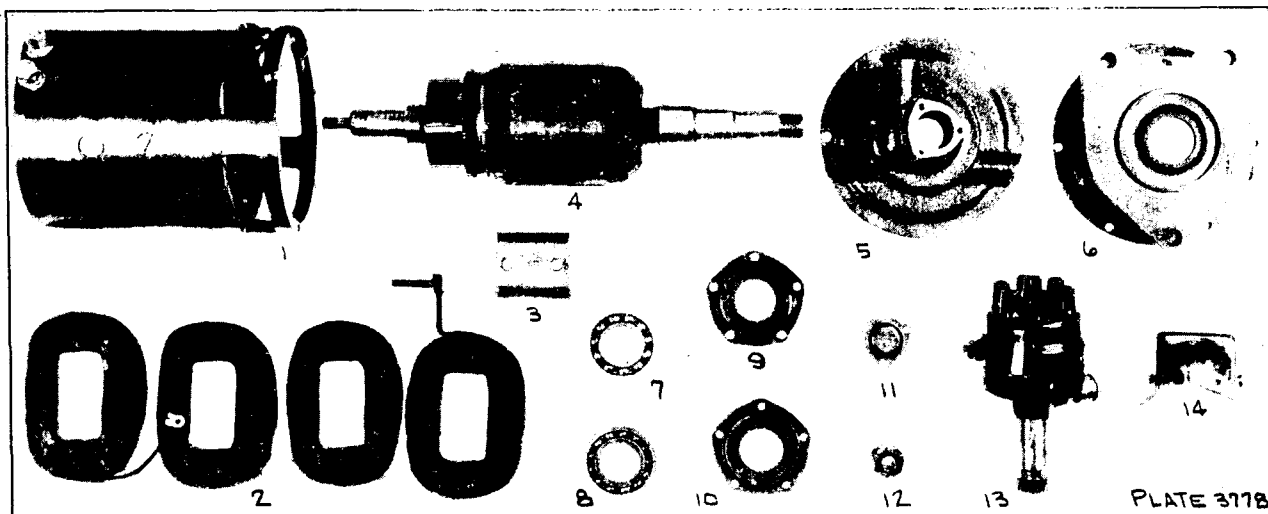


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame and Field Assembly	Field Coil Assembly 4 Coils	Pole Shoe	Armature	Commutator End Frame	Drive End Frame	Ball Bearing C.E.	Ball Bearing D.E.	Ball Bearing Re-tainer Plate C.E.	Ball Bearing Re-tainer Plate D.E.	Commutator End Cover Plate	Distributor Drive Gear	Distributor	Relay
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
551		1845292	823282	1845295	1848669	1848816	954517	903206	826430	827914	815868	822024	643-M	○
552		1845314	"	1849445	"	"	"	"	"	"	"	"	"	*265-B
561		1845292	"	1845295	"	"	"	"	"	"	"	"	"	○
567		1843992	"	1843997	826881	826878	"	954517	825251	826430	"	1848663	645-E	○
568		1845292	"	1863180	1863183	1863184	"	"	"	825251	"	"	"	○
569		18137	"	1863704	1863708	1863709	908505	908605	"	1863711	"	"	"	○
604		1843992	"	1869191	1865113	1860770	954517	954517	"	825251	"	"	"	"
616		"	"	1866975	828287	1860770	"	"	"	"	"	"	"	"
674		"	"	1847257	1865113	829174	"	"	"	"	"	"	"	○
676		1845292	"	1864943	1863183	1864945	"	"	"	"	"	"	"	○
677		18137	"	826085	826088	826087	"	"	"	"	"	"	"	○
681		"	"	"	"	"	"	"	"	"	"	"	"	○
684		1845292	"	827909	"	1835477	"	903206	"	827914	"	"	"	○
687		18137	"	"	826088	1841485	"	"	"	"	"	"	"	○
695		"	"	1844231	"	1844233	"	954517	"	1841877	"	"	"	○

*2 Used.

○Relay or Control Unit shipped separately. See Index for Model No.

 Delco-Remy SERVICE PARTS CATALOG

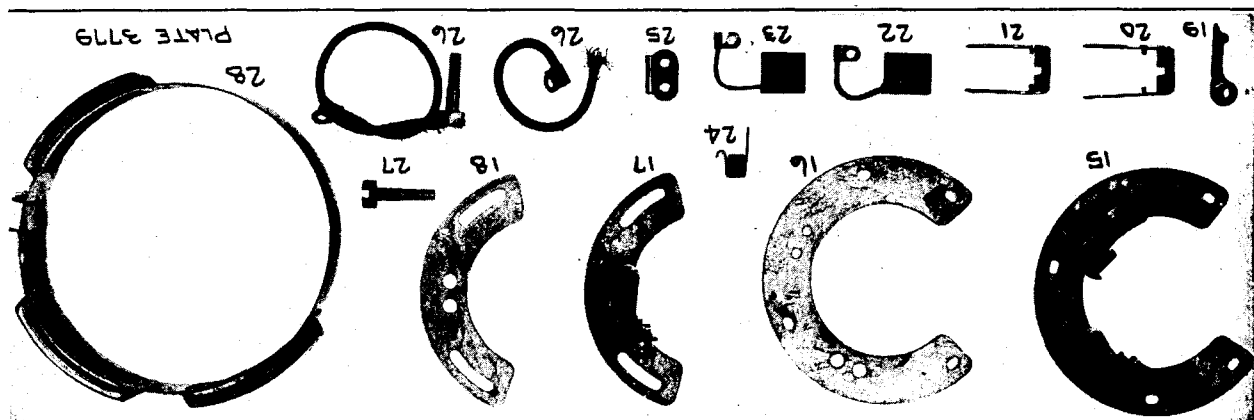

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Main Brush Plate Assembly	Main Brush Plate Only	Third Brush Plate Assembly	Third Brush Plate Only	Brush Arm	Brush Holder Main	Brush Holder Third	Main Brush	Third Brush	Brush Spring	Brush Terminal Bracket	Terminal Lead and Stud or Relay Lead	Terminal Stud Only	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
551	827912	826090	827913	826094	1878260	826091	825183	826092	825191	35777	825186	16574	35793	825261
552	"	"	"	"	"	"	"	"	"	"	"	828281	"	"
561	"	"	"	"	"	"	"	"	"	"	"	16574	35793	"
567	826089	"	826093	"	1878259	"	"	"	"	37000	"	826083	"	"
568	827912	"	827913	"	1878260	"	"	"	"	35777	"	"	"	"
569	"	"	826093	"	1878259	"	"	"	"	37000	"	"	"	"
604	826089	"	"	"	"	"	"	"	"	"	"	1865102	"	"
616	"	"	"	"	"	"	"	"	"	"	"	826083	"	"
674	"	"	"	"	"	"	"	"	"	"	"	1865102	"	"
676	827912	"	827913	"	1878260	"	"	"	"	35777	"	16574	"	"
677	"	"	"	"	"	"	"	"	"	"	"	"	"	"
681	826089	"	826093	"	1878259	"	"	"	"	37000	"	826083	"	"
684	827912	"	827913	"	1878260	"	"	"	"	35777	"	16574	"	"
687	826089	"	826093	"	1878259	"	"	"	"	37000	"	826083	825184	"
695	"	"	"	"	"	"	"	"	"	"	"	"	35793	"

MINOR PARTS SECTION

Name	Part No.	Used on Models
COLLARS AND COUPLINGS		
Brush Holder Space COLLAR (Sleeve).....	1878261	All
COUPLING—D.E.....	827543	681
Shaft SLEEVE—Outside—D.E.....	826884	567
Space COLLAR—Outside—D.E.....	1845301	551-552-561
Space COLLAR—Outside—D.E.....	826886	567
Space COLLAR—Inside—D.E.....	825253	567-569-604-616-674-677-681
Space COLLAR—C.E.....	826887	567-568-569-676
Space COLLAR—Outside—C.E.....	825254	568-616-676-681
Space COLLAR—Outside—D.E.....	825254	604-616-674-677-695
Space COLLAR—Outside—D.E.....	827916	684-687
LOCK WASHERS		
Ball Bearing Retainer Plate Screw LOCK WASHER—D.E.....	106497	551-552-561
Ball Bearing Retainer Plate Screw LOCK WASHER—D.E.....	114603	695
Ball Bearing Retainer Plate Screw LOCK WASHER—C.E.....	103319	567-568-569-604-616-674-676-677-681-684-687-695
Ball Bearing Retainer Plate Screw LOCK WASHER—C.E.....	802757	551-552-561-567
Ball Bearing Retainer Plate Screw LOCK WASHER—D.E.....	106497	684-687
Brush Holder Stud Nut LOCK WASHER.....	802731	All
Brush Holder Support Screw LOCK WASHER.....	802731	551-552-561-567-569
Brush Holder Support Screw LOCK WASHER.....	106497	568-569-604-616-674-676-677-681-684-687-695
Brush Lead Attaching Screw LOCK WASHER.....	106497	551-552-561-567-568-569-604-616-674-676-677-681-684-687-695
Brush Plate Clamp Screw LOCK WASHER—Third.....	802760	All
Brush Plate Clamp Screw LOCK WASHER—Main.....	106497	All
Commutator End Frame Attaching Screw LOCK WASHER.....	103319	551-552-561-569-604-616-674-676-677-681-684-687-695

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION


Name	Part No.	Used on Models
LOCK WASHERS—Continued		
Commutator End Cover Plate Screw LOCK WASHER	106497	551-552-561
Drive End Frame Screw LOCK WASHER	120380	551-561-567-568-569-604-674-681-684-687-695
Distributor Hold Down Screw LOCK WASHER	120380	551-552-561
Fan Attaching Screw LOCK WASHER	118874	604
Fan Belt Adjustment Bracket Screw LOCK WASHER	120380	604-674
Field Lead Terminal Screw LOCK WASHER	106497	551-552-561
Field Frame Screw LOCK WASHER	103321	695
Fuse Terminal Screw LOCK WASHER	802729	552
Gear Attaching Nut LOCK WASHER	110405	551-552-561
Mounting Bracket Screw LOCK WASHER	103321	568
Relay and Fuse Holder Mounting Screw LOCK WASHER	802729	552
Shaft Nut LOCK WASHER	103334	568-569-604-616-674-676-677-681
Shaft Nut LOCK WASHER	141557	695
Terminal Stud Nut LOCK WASHER	103320	All
NUTS		
Brush Holder Stud NUT	5024654	All
Cover Band Screw NUT	34816	All
Distributor Hold Down Screw NUT	134551	551-552-561
Fan Attaching NUT	1864554	616
Gear Attaching NUT—C.E.	122264	551-552-561
Ground Terminal Stud NUT	120369	604-674
Shaft NUT—D.E.	812692	551-552-561-684-687
Shaft NUT—C.E.	826888	567
Shaft NUT—D.E.	36035	568-569-616-674-676-677-681
Shaft NUT—Opp. C.E.	1841367	676
Shaft NUT—D.E.	103028	695
Shaft NUT—D.E.	1868077	604
Terminal Stud NUT	35813	All
SCREWS		
Advance Arm Hold Down SCREW	1847260	551-552-561
Ball Bearing Retainer Plate SCREW—C.E.	1853231	551-552-561
Ball Bearing Retainer Plate SCREW—D.E.	141604	567
Ball Bearing Retainer Plate SCREW—D.E.	1864533	551-552-561
Ball Bearing Retainer Plate SCREW—C.E.	1871522	567-568-569-604-616-674-676-677-681-684-687-695
Ball Bearing Retainer Plate SCREW—D.E.	132911	684-687
Ball Bearing Retainer Plate SCREW—D.E.	5017850	695
Brush Holder Stud.....	825184	551-552-561-567-568-569-604-616-674-676-677-681-684-687-695
Brush Holder Support SCREW	132911	All
Brush Lead Attaching SCREW	132892	All
Brush Plate Clamp Screw (Main).....	132903	All
Brush Plate Clamp SCREW (Third Hex Head).....	828288	All
Brush Plate Clamp SCREW (Third Fillister Head).....	826172	All
Commutator Cover Band SCREW	132923	All
Commutator End Cover Plate Attaching SCREW	1866970	551-552-561-616
Commutator End Frame Attaching SCREW	1872443	551-552-561-569-604-616-674-676-677-681-684-687-695
Drive End Frame Attaching SCREW	1872443	551-552-561-567-568-569-604-616-674-676-677-681-684-687-695
Fan Attaching SCREW	132969	604
Fan Belt Adjustment Bracket SCREW	213878	604-674
Field Frame SCREW	141610	681
Fuse Terminal SCREW	1904233	552
Mounting Bracket SCREW	141608	568
Pole Shoe SCREW	1886125	All
Relay and Fuse Holder Mounting SCREW	131958	552
WASHERS		
Advance Arm Hold Down Screw WASHER	813046	551-552-561
Brush Holder Insulating WASHER (2 Hole).....	825189	All
Brush Holder Space WASHER (2 Hole).....	825187	All
Brush Holder Stud Bushing WASHER (In Brush Plate).....	825190	All
Felt WASHER—C.E. (Between Ball Bearing and Gear).....	1836936	551-552-561-676
Felt WASHER—C.E. (In Retainer Plate).....	825197	551-552-561-567-568-604-616-674-676-677-681-684-687-695
Felt WASHER—D.E.	826321	695
Felt WASHER—D.E.	812685	551-552-561-684-687
Felt WASHER—Top of Distributor Well	1848687	551-552-561
Main Brush Clamp Screw Plain WASHER	834231	551-552-561-567-568-569-604-616-674-676-677-681-684-687-695
Shaft Nut Plain WASHER	32099	695

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
WASHERS—Continued		
Third Brush Clamp Screw Plain WASHER (.252x $\frac{3}{4}$ x $\frac{1}{8}$).....	815920	551-552-561-567-568-569-604-616-674-676-677-681-684-687-695
Third Brush Clamp Spring WASHER.....	35082	551-552-561-567-568-569-604-616-674-676-677-681-684-687-695
Third Brush Clamp Screw Plain WASHER (.250x.563x $\frac{1}{2}$).....	27041	551-552-561-567-568-569-604-616-674-676-677-681-684-687-695
Terminal Stud Insulation WASHER.....	35812	551-552-561-567-568-569-604-616-674-676-677-681-684-687-695
Terminal Stud Plain WASHER.....	1903092	551-552-561-567-568-569-604-616-674-676-677-681-684-687-695
MISCELLANEOUS		
Advance ARM Assembly.....	1842947	551-552-561
Advance Arm Hold Down SPRING.....	827234	551-552-561
Brush Holder Screw BUSHING (In Brush Holder).....	825185	551-552-561-567-568-569-604-616-674-676-677-681-684-687-695
Ball Bearing Retainer Plate GASKET—C.E.....	825260	551-552-561-567-568-569-604-616-674-676-677-681-684-687-695
Ball Bearing Retainer Plate GASKET—D.E.....	825260	551-552-561-567-568-604-616-674-681-684-687
Ball Bearing Plate GASKET—D.E.....	1863710	569
Ball Bearing Plate Dowel PIN—D.E.....	809062	569
Commutator End Cover Plate GASKET.....	1844012	551-552-561
Dowel PIN—C.E. and D.E.....	809593	All
Dowel PIN—To locate Cover Band.....	809062	674
Distributor Well BUSHING—C.E.....	1839652	551-552-561
FAN.....	1864553	616
FAN.....	1872904	604
Fan Belt BRACKET.....	1864997	604-674
Felt Washer Retainer PLATE—C.E.....	1843953	551-552-561-676
Felt Washer Retainer PLATE—C.E.—In Ball Bearing Retainer Plate.....	825196	551-552-561-567-568-569-604-616-674-677-681-684-687-695
Felt Washer Retainer PLATE—D.E.....	825196	567-604-616-674-676-677-681-695
Felt Washer Retainer PLATE—D.E.—In Ball Bearing Retainer Plate.....	1845302	551-552-561
Field Coil Insulating STRIP.....	812690	551-552-561-684-687
Field Coil Insulating STRIP.....	32330	551-552-561-567-568-604-616-676-677-681-684-687-695
Field Coil Insulating STRIP.....	1878114	674
Field Lead CLIP (To Fuse Assembly).....	833634	551-561
Fuse HOLDER and Fuse ASSEMBLY.....	1838401	552
FUSE.....	106653	552
Fuse COVER.....	813158	552
Fuse Connector LEAD.....	1838403	552
Grease CUP—C.E.....	1838358	551-552-561-569
Grease CUP—C.E. (Internal thread).....	1835517	561
Grease CUP—D.E. (Internal thread).....	1835517	551-552-561
Grease CUP—D.E.....	1864140	604-674
Ground Terminal STUD.....	1881086	674
Mounting BRACKET.....	1863177	568
Oil BAFFLE—D.E.....	1845300	551-552-561
Oil BAFFLE—D.E.....	817718	684-687
OILER—C.E. & D.E.....	826931	567-568-616-676-677-684-687-695
Oil THROWER—Outside—D.E.....	826885	567
Pipe NIPPLE—D.E.....	1838358	551-552-561
Pipe PLUG (C.E. Small).....	103877	551-552-561
Pipe PLUG (C.E. and D.E. Large).....	103884	551-552-561-567-568-569-604-616-674-676-677-681-684-687-695
Pipe PLUG (C.E.—Side of Distributor Well).....	103885	551-552-561
Pipe PLUG (Small C.E.—D.E.).....	125947	604-674-684
PULLEY.....	1865115	674
PULLEY.....	1864946	676
PULLEY—C.E.....	1863185	568
PULLEY and FAN.....	1872969	604
Relay Connector LEAD.....	1838389	552
Relay Lead BUSHING.....	828270	552
Relay Lead CLIP—To Main Brush.....	35941	552-567-568-569-604-616-674-676-677-681-684-687-695
Terminal CLIP—To 3rd Brush.....	200188	567-568-569-604-616-674-676-677-681-684-687-695
Terminal Stud Insulation BUSHING.....	35814	551-552-561-567-568-569-604-616-674-676-677-681-684-687-695
Woodruff KEY—C.E.....	124542	551-552-561
Woodruff KEY—D.E.....	113782	551-552-561-684-687
Woodruff KEY—Opp. C.E.....	106653	676
Woodruff KEY—For Fan.....	106749	616

 Parts not listed in this Catalog will not be sold separately.

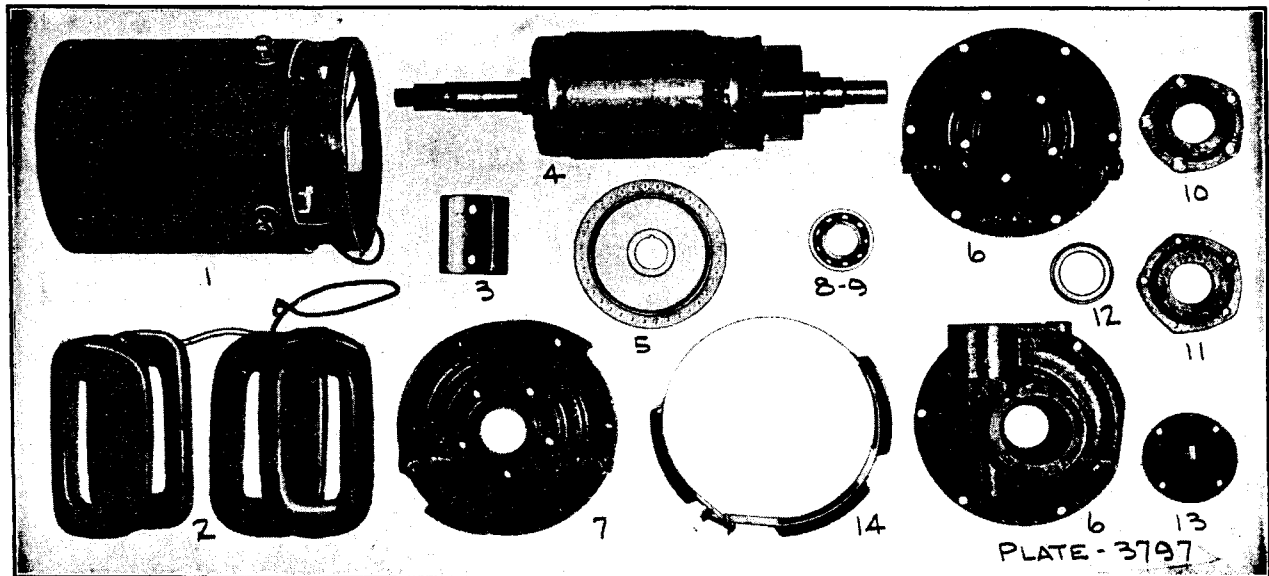


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame and Field Assembly	Field Coil Assembly	Pole Shoe	Armature	Fan	Commutator End Frame	Drive End Frame	Ball Bearing C.E.	Ball Bearing D.E.	Ball Bearing Retainer Plate C.E.	Ball Bearing Retainer Plate D.E.	Felt Washer Retainer Cup	End Cover Plate	Cover Band
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
603		1864900	1864901	1871333		1865111	829174	954517	908605	825251	1864906	825196		825261
605		"	"	1869044		1850666	1868688	"	"	"	"	"		1865470
606		"	"	1869551		1865111	1860770	"	"	"	"	"		825261
607		"	"	1868075		"	"	"	"	"	"	"		"
608		1843992	823282	1859016		"	"	"	954517	"	825251	"		"
609		"	"	"		"	"	"	"	"	"	"		"
617		827992	823281	1869682	825193	1869803	1869689	"	908605	"	"	"		"
618		1869627	1869632	1867820		1865111	1867642	"	954523	"	1869639	"		1838333
619		"	"	"		1857176	1900081	"	"	"	"	"		"
631		"	"	1869633		825236	"	"	"	"	"	"		"
632		"	"	"		"	"	"	"	"	"	"		"
633		827992	823281	1869682	825193	1869691	1867676	"	908605	"	"	"		825261
634		18099	"	825258	"	825236	825235	"	954517	"	825251	"		"
635		827992	"	1869800	"	1869803	1869689	"	908605	"	"	"		1838333
636		18099	"	"	"	"	"	"	"	"	"	"		"
637		"	"	1867684	"	825236	825868	"	954517	"	825251	"		825261
638		"	"	1850977	"	"	825235	"	"	"	"	"		"
639		"	"	825258	"	"	825868	"	"	"	"	"		"
682		1864900	1864901	1869551	1869553	1865111	1860770	954517	908605	825251	1864906	825196		825261
683		"	"	1864902		1864137	"	"	"	"	"	"		"
685		"	"	1871333		1850666	1868688	"	"	"	"	"		1865470
686		1871527	"	1871248		1858311	826037	"	"	"	"	"		"
688		1843992	823282	1859016		1864137	1860770	"	954517	"	825251	"		825261
689		"	"	"		1865111	"	"	"	"	"	"		"
690		1864900	1864901	1869551		"	"	"	908605	"	1864906	"		"
691		18137	823282	1867888	1867892	1867891	826878	"	954517	"	826430	825197		1865470
692		1864900	1864901	1868075		1864137	1860770	"	908605	"	1864906	825196		825261
693		"	"	1868797		"	"	"	"	"	"	"		"
694		"	"	1869551		1865111	"	"	"	"	"	"		"
696		"	"	1869044		1864137	"	"	"	"	"	"		"
697		18137	823282	1869110		"	"	"	954517	"	825251	"		"
698		"	"	1864134		"	"	"	"	"	"	"		"
699		1864900	1864901	1868075		"	1869376	"	908605	"	1864906	"		"

*1843953—Felt Washer Retainer Cup—Outer—C.E.

*Use 1873335 Armature for low cut-in. When 1873335 is used, set Current Regulator to an output of not more than 40 amps.

 Delco-Remy SERVICE PARTS CATALOG

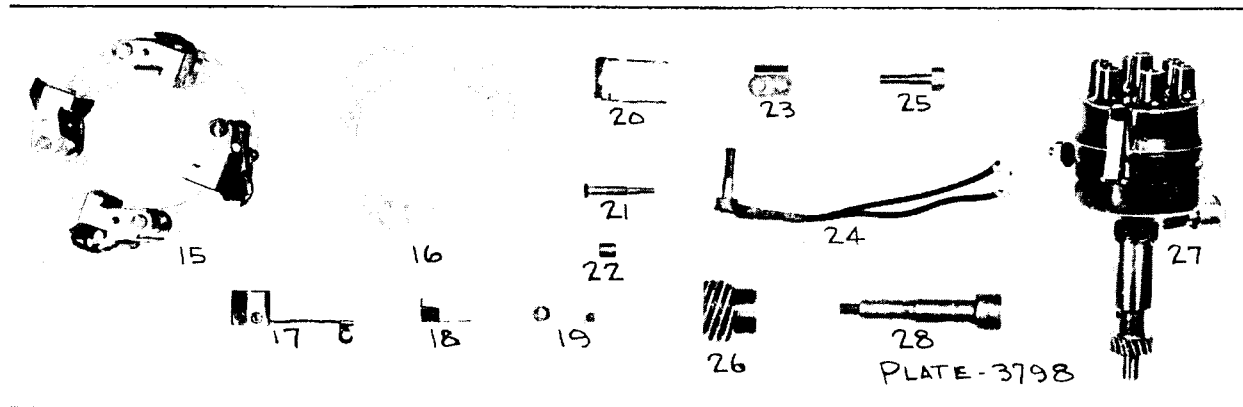

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Brush Plate less Brushes	Brush Plate Only	Brush	Brush Spring	Brush Lever	Brush Holder	Brush Holder Stud	Brush Holder Stud Space Sleeve	Brush Terminal Bracket	Terminal Stud and Lead Assembly	Terminal Stud Only	Gear on Armature Shaft	Dist.	Dist. Drive Shaft
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
603	825865	825192	825191	37000	1878259	825183	825184	1878261	825186	18100	35793			
605	1858381	1855476	"	"	"	"	"	"	"	1861277	"			
606	825865	825192	"	"	"	"	"	"	"	18100	"			
607	"	"	"	"	"	"	"	"	"	"	"			
608	"	"	"	"	"	"	"	"	"	"	"			
609	"	"	"	"	"	"	"	"	"	"	"			
617	825177	"	"	35777	1878260	"	"	"	"	827991	"			
618	1848561	1838338	1906901	1856527	1878258	1838339	1838345	1877917	"	18100	"			
619	1838337	"	"	1838341	1838339	"	"	"	"	"	"			
631	1848561	"	"	1856527	1878258	"	"	"	"	"	"			
632	"	"	"	"	"	"	"	"	"	"	"			
633	825177	825192	825191	35777	1878260	825183	825184	1878261	"	"	"			
634	"	"	"	"	"	"	"	"	"	"	"			
635	1848561	1838338	1906901	1856527	1878258	1838339	1838345	1877917	"	827991	"			
636	"	"	"	"	"	"	"	"	"	18100	"			
637	825865	825192	825191	37000	1878259	825183	825184	1878261	"	"	"			
638	825177	"	"	35777	1878260	"	"	"	"	"	"			
639	825865	"	"	37000	1878259	"	"	"	"	"	"			
682	825865	825192	825191	37000	1878259	825183	825184	1878261	825186	1861277	35793			
683	"	"	"	"	"	"	"	"	"	"	"			
685	"	"	"	"	"	"	"	"	"	"	"			
686	"	"	"	"	"	"	"	"	"	"	"			
688	"	"	"	"	"	"	"	"	"	826083	"			
689	"	"	"	"	"	"	"	"	"	18100	"			
690	"	"	"	"	"	"	"	"	"	"	"			
691	"	"	"	"	"	"	"	"	"	826083	825184			
692	"	"	"	"	"	"	"	"	"	1861277	35793			
693	"	"	"	"	"	"	"	"	"	"	"			
694	"	"	"	"	"	"	"	"	"	18100	"			
696	"	"	"	"	"	"	"	"	"	1861277	"			
697	"	"	"	"	"	"	"	"	"	826083	"			
698	"	"	"	"	"	"	"	"	"	"	"			
699	"	"	"	"	"	"	"	"	"	1861277	"			

MINOR PARTS SECTION


Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer Plate Screw—#12—D.E.	1904661	691
Lock Washer—Ball Bearing Retainer Plate Screw— $\frac{1}{4}$	120380	All
Lock Washer—Base Attaching Screw	103321	631-632-637
Lock Washer—Brush Holder Support Screw	802731	All
Lock Washer—Brush Plate Attaching Screw	106497	All
Lock Washer—Brush Holder Screw Nut	802731	All
Lock Washer—Brush Lead Attaching Screw	106497	All
Lock Washer—Commutator End Frame Screw	120380	All
Lock Washer—Drive End Frame Screw	120380	All
Lock Washer—Fan Attaching Screw	132969	607-608
Lock Washer—Fan Belt Adjustment Bracket Screw	120380	603-606-607-608-609-633-636-683-688-689-690-692-693-694-697-698-699
Lock Washer—Shaft Nut	103334	603-605-606-607-608-609-617-631-633-634-635-636-637-682-683-685-686-688-689-690-692-693-694-696-697-698-699
Lock Washer—Shaft Nut	114610	691
Lock Washer—Terminal Stud	103320	All
Lock Washer—Top of Field Frame	103319	692
NUTS		
Nut—Armature Shaft	36035	603-605-606-617-631-632-633-634-635-636-637-682-683-685-686-688-689-690-693-694-698
Nut—Armature Shaft	1864554	691
Nut—Armature Shaft	1868077	605-607-608-609-692-696-699
Nut—Armature Shaft—D.E.	125384	618-619
Nut—Brush Holder Stud	5024654	All
Nut—Commutator Cover Band Screw	34816	All
Nut—Ground Terminal Stud	120369	603-606-607-617-618-619-633-635-682-689-690-694
Nut—Terminal Stud	35813	All
SCREWS		
Screw—Ball Bearing Retainer Plate	1871604	618-619-631-632
Screw—Ball Bearing Retainer Plate ($\frac{1}{4}$ -28x $1\frac{1}{4}$ Hex. Hd.)	1871522	603-605-606-607-608-609-617-618-619-631-632-633-634-635-636-637-638-639-682-683-685-686-688-689-690-691-692-93-694-696-698-699
Screw—Ball Bearing Retainer Plate—D.E. (12-24x $\frac{5}{8}$ Fil. Hd.)	141604	691
Screw—Base Attaching	141608	631-632-637
Screw—Brush Holder Support	132903	All
Screw—Brush Plate Attaching	132903	All
Screw—Brush Lead Attaching	132892	All
Screw—Commutator Cover Band	132923	603-605-606-607-608-609-617-618-619-631-632-633-634-635-636-637-638-682-683-685-688-689-690-691-692-693-694-696-698-699
Screw—Commutator End Frame Attaching	214602	All
Screw—Drive End Frame Attaching	214602	603-605-606-607-608-609-618-619-631-632-682-683-685-686-688-689-690-691-692-693-694-696-698-699
Screw—Drive End Frame Attaching	1871654	617-633-634-635-636-637-638-639
Screw—Fan Attaching	132969	607-608
Screw—Fan Belt Adjustment Bracket	213878	603-606-607-608-609-633-636-673-688-689-690-692-693-694-696-697-698
Screw—Fan Belt Adjustment Bracket	1869377	699
Screw—Pole Shoe	1886125	All
Screw—Top of Field Frame	131238	692
WASHERS		
Washer—Brush Holder Space—2 hole	825187	All
Washer—Brush Plate Insulation—2 hole	825189	All
Washer—Felt—Inner—C.E. and D.E.	825197	All
Washer—Felt—C.E. Outer	1836936	686
Washer—Shaft Nut—Plain	1872618	618-619
Washer—Terminal Stud Insulation	35812	All
Washer—Terminal Stud Plain	1903092	All

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS		
BRACKET—Fan Belt Adjustment.....	1869688	633-636
BRACKET—Fan Belt Adjustment.....	1869646	683-692-696-699
BRACKET—Fan Belt Adjustment.....	1864139	688-693-697-698
BRACKET—Fan Belt Adjustment.....	1864997	603-606-607-608-609-689-690-694
*BRACKET—Generator Mounting.....	1867658	637
Brush Connector LEAD.....	1857103	688-691-697-698
BUSHING—Brush Holder Screw (Steel).....	825185	All
BUSHING—Brush Holder Screw Insulating—In Plate.....	825190	All
BUSHING—Terminal Stud Insulation.....	35814	All
COLLAR—Outside—D.E.....	1871250	686
COLLAR—Inside.....	1866761	617-633-635-636
COLLAR—Outside—D.E.....	826886	691
COLLAR—Outside—C.E.....	1869692	617-633-635-636
COLLAR—Inside—D.E.....	825253	608-609-618-619-631-632-634-637-639-688-689-691-697-698
COLLAR—Outside—D.E.....	825254	All
COLLAR—Inside—C.E.....	826887	617-633-691
Cotter PIN—Armature Shaft.....	108636	619
Dowel PIN—For locating Brush Plate.....	809062	All
Dowel PIN—For locating Cover Band.....	809062	603-606-609-617-619-633-635-636-682-690
Dowel PIN—C.E. and D.E.....	809593	All
FAN.....	1872904	607-608
GASKET—Ball Bearing Retainer Plate—D.E.....	1864907	603-605-606-607-682-683-685-686-690-692-693-694-696-699
GASKET—Ball Bearing Retainer Plate—D.E.....	1869641	618-619-631-632
GASKET—Ball Bearing Retainer Plate—C.E.....	825260	All
Grease CUP.....	1838358	617-618-619-633-635-636
Grease CUP.....	1864140	603-605-606-607-608-609-682-683-690-692-693-694-696-697-698-699
Ground Terminal STUD.....	1881086	603-606-609-617-618-619-633-635-682-689-690-694
INSULATION—Field Coil.....	37008	603-618-619-631-632-634-637
INSULATION—Field Coil.....	32330	603-606-607-608-609-682-683-685-686-688-689-691-692-694-696-698-699
INSULATION—Field Coil.....	1878114	689-690-694
Oil Well PLUG—C.E. & D.E.—Small.....	125947	603-606-607-608-609-617-618-619-631-632-633-634-635-636-637-638-639-682-683-685-686-688-689-690-693-694
Oil Well PLUG—C.E. & D.E.—Large.....	103884	603-605-606-607-608-609-617-618-619-631-632-633-634-635-636-637-638-639-682-683-685-686-688-689-690-693-694-696-697-698-699
OILER—C.E. & D.E.....	826931	631-632-637-638-639-691
Oil THROWER.....	826885	691
PIN—Shaft Nut—Cotter.....	108636	618
PULLEY.....	1872413	683
PULLEY.....	1871720	688-697
PULLEY.....	1871741	689
PULLEY.....	1863185	637
PULLEY.....	1871741	690
PULLEY.....	1867693	619
PULLEY and Fan.....	1864998	694
PULLEY and Fan.....	1866199	698
PULLEY and Fan.....	1872687	606
PULLEY and Fan.....	1872935	607-608
PULLEY and Fan.....	1869193	609
Shaft SLEEVE.....	826884	691
Street ELBOW.....	105423	605-683-692-693-696-699
Terminal CLIP to Brush.....	200188	603-605-607-608-609-618-619-631-632-633-634-635-636-637-638-639-682-683-685-686-688-689-690-691-692-693-694-697-698-699
Terminal CLIP to Ins. Brush.....	35941	688-697-698
Woodruff KEY (For Fan).....	1838095	617-633-634-635-636
Woodruff KEY.....	124544	637-638-639
Woodruff KEY.....	106749	691

 *Shipped separate.

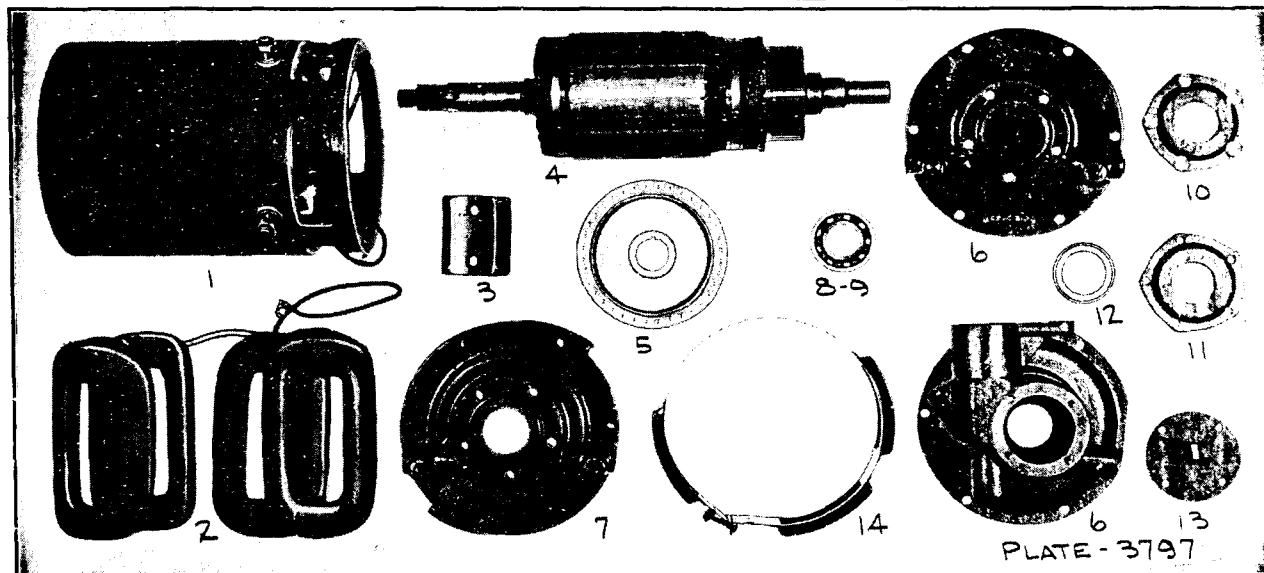


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame and Field Assembly	Field Coil Assembly	Pole Shoe	Armature	Fan	Commutator End Frame	Drive End Frame	Ball Bearing C.E.	Ball Bearing D.E.	Ball Bearing Retainer Plate C.E.	Ball Bearing Retainer Plate D.E.	Felt Washer Retainer Cup	End Cover Plate	Cover Band
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
950		18099	823281	1868316	825193	825236	825868	954517	954517	825251	825251	825196		1838333
952		1869627	1869632	1867820		1865111	1868612		954523		1869639			
953		"	"	"		825236	1900081	"	"	"	"	"		"
954		"	"	"		1857176	"	"	"	"	"	"		"
955		"	"	1869633	1879580	1869133	"	"	"	"	"	"		"
956		"	"	1869298		825236	"	"	"	"	"	"		"
957		"	"	1873099	1873107	1873102	1873106	"	"	"	"	†		1873104
958		1873343	"	1873344		1836322	1900081	"	"	"	"	"		1838333
959		"	"	1867820		825236	"	"	"	"	"	"		"
960		1869627	"	"		1857176	"	"	"	"	"	"		"
961		"	"	"		1865111	"	"	"	"	"	"		"
962		1865851	823281	1864039	825193	1869449	1864238	"	954517	"	1869639	"		"
963		18099	"	1877802	"	1858311	825868	"	"	"	825251	†		825261
964		1869627	1869632	1869633	1869134	1857176	1900081	"	954523	"	1869639	"		1838333
965		"	"	1867820		1865111	"	"	"	"	"	"		"
966		1873343	"	1869298		"	1868612	"	"	"	"	"		"
967		1869627	"	1879509		"	1879514	"	"	"	"	"		1873104
968		"	"	"		"	"	"	"	"	"	"		"
969		1873343	"	1879578	1879580	1879226	1900081	"	"	"	"	"		1838333
971		1873212	823281	1860451	825193	1865111	825868	"	954517	"	825251	"		825261
972		"	"	"	"	825236	"	"	"	"	"	"		"
973		1869627	1869632	1869633		"	1900081	"	954523	"	1869639	"		1838333
974		"	"	1867820		1865111	"	"	"	"	"	"		"
975		"	"	1869298	1872904	"	"	"	"	"	"	"		"
976		"	"	1867820		"	1868612	"	"	"	"	"		"
977		1873343	"	"		"	1900081	"	"	"	"	"		"
978		1869627	"	"		"	"	"	"	"	"	"		"
979		"	"	1869298		1883398	"	"	"	"	"	"		1873104
980		"	"	1873099	1873107	1873102	1873106	"	"	"	"	"		"
981		"	"	1879578		1882788	1868612	"	"	"	"	†		1838333

†1843953 is Outer—C.E.

 Delco-Remy
SERVICE PARTS CATALOG

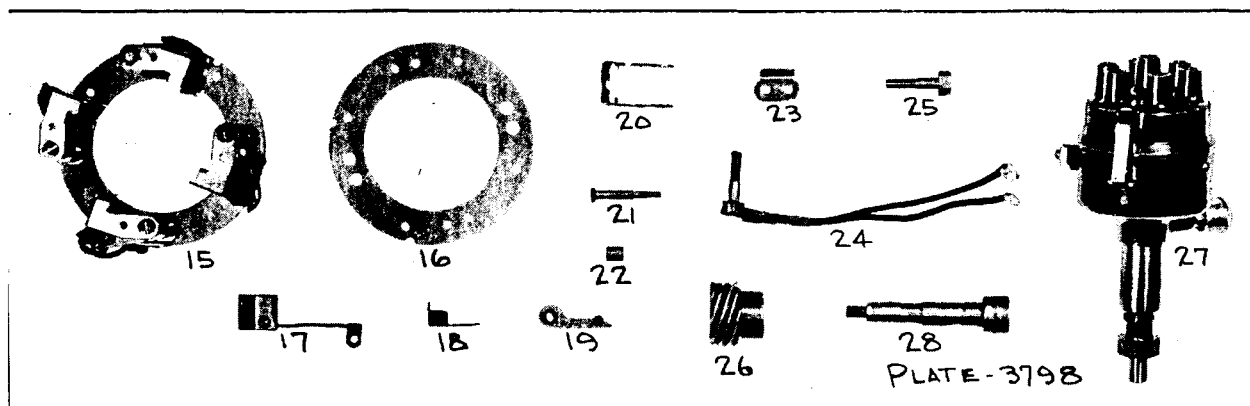

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Brush Plate less Brushes	Brush Plate Only	Brush	Brush Spring	Brush Lever or Arm	Brush Holder	Brush Holder Stud	Brush Holder Stud Space Sleeve	Brush Terminal Bracket	Terminal Stud and Lead Assembly	Terminal Stud Only	Gear on Arm Shaft	Dis-trib-utor	Dis-trib-utor Drive Shaft
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
950	1838337	1838338	1906901	1838341	*1877949	1838339	1838345	1877917	825186	18100	35793			
952	"	"	"	"	"	"	"	"	"	"	"			
953	1848561	"	"	1856527	*1878258	"	"	"	"	"	"			
954	1838337	"	"	1838341	*1877949	"	"	"	"	"	"			
955	1848561	"	"	1856527	*1878258	"	"	"	"	"	"			
956	"	"	"	"	"	"	"	"	"	"	"			
957	"	"	"	"	"	"	"	"	"	"	"			
958	1838337	"	"	1838341	*1877949	"	"	"	"	1861277	"			
959	1848561	"	"	1856527	*1878258	"	"	"	"	"	"			
960	1838337	"	"	1838341	*1877949	"	"	"	"	18100	"			
961	1848561	"	"	1856527	*1878258	"	"	"	"	"	"			
962	825865	825192	825191	37000	*1878259	825183	825184	1878261	"	"	"			
963	"	"	"	"	"	"	"	"	"	"	"			
964	1838337	1838338	1906901	1838341	1877949	1838339	1838345	1877917	"	"	"			
965	"	"	"	"	"	"	"	"	"	"	"			
966	"	"	"	"	"	"	"	"	"	1861277	"			
967	"	"	"	"	"	"	"	"	"	18100	"			
968	1848561	"	"	1856527	1878258	"	"	"	"	"	"			
969	"	"	"	"	"	"	"	"	"	"	"			
971	1858381	1855476	825191	37000	*1878259	825183	825184	1878261	"	1861277	"			
972	"	"	"	"	"	"	"	"	"	18100	"			
973	1848561	1838338	1906901	1856527	1878258	1838339	1838345	1877917	"	"	"			
974	1838337	"	"	1838341	1877949	"	"	"	"	"	"			
975	1848561	"	"	1856527	1878258	"	"	"	"	"	"			
976	1838337	"	"	1838341	1877949	"	"	"	"	"	"			
977	"	"	"	"	"	"	"	"	"	"	"			
978	"	"	"	"	"	"	"	"	"	"	"			
979	1883397	1883399	"	1856527	1878258	"	"	"	"	"	"			
980	1838337	1838338	"	1838341	1877949	"	"	"	"	"	"			
981	"	"	"	"	"	"	"	"	"	"	"			

*When replacing Brush Arm, if Space Sleeve is too long, reoperate length to .740 or use 1877917 Sleeve.

*When replacing Brush Arm, if Space Sleeve is too long, reoperate length to .412 or use 1878261 Sleeve.

MINOR PARTS SECTION


Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Air Filter Cover Stud.....	120380	979
Lock Washer—Ball Bearing Retainer Plate.....	120380	All
Lock Washer—Ball Bearing Retainer Plate—Shakeproof.....	114604	962
Lock Washer—Brush Lead Attaching Screw.....	106497	All
Lock Washer—Brush Plate Attaching Screw.....	106497	All
Lock Washer—Brush Holder Stud Nut.....	802731	All
Lock Washer—Brush Holder Support Screw.....	802731	All
Lock Washer—Commutator End Frame Screw.....	120380	All
Lock Washer—Coupling Clamp Bolt.....	120638	958
Lock Washer—Drive End Frame Attaching.....	120380	All
Lock Washer—Fan Attaching Screw.....	118874	975
Lock Washer—Fan Belt Adjustment Screw.....	120380	965-974-977
Lock Washer—Mounting Bracket Attaching Screw.....	103321	950-956-965-974-977-978
Lock Washer—Shaft Nut—C.E.....	804000	957-980
Lock Washer—Shaft Nut—D.E.....	103324	950-955-956-957-963-964-966-969-971-972-973-975-979-980-981
Lock Washer—Terminal Stud.....	103320	All
NUTS		
Nut—Air Filter Cover—Thumb.....	103127	979
Nut—Brush Holder Stud.....	5024654	All
Nut—Commutator Cover Band Screw.....	34816	All
Nut—Coupling Clamp Bolt.....	120368	958
Nut—Shaft—C.E.....	1841367	963
Nut—Shaft—C.E.....	806915	957-980
Nut—Shaft—C.E.....	36035	981
Nut—Shaft—D.E.....	36035	950-955-958-962-965-969-971-972-973
Nut—Shaft—D.E.....	125384	952-953-954-958-959-960-961-965-974-976-977-978
Nut—Shaft—D.E.....	1868077	956-963-966-969-975-979-980-981
Nut—Shaft—D.E.....	102649	967-968
Nut—Shaft—D.E.....	126024	957
Nut—Terminal Stud.....	35813	All
Nut—Terminal Stud—Ground.....	120369	952-959-961-972-974-975-976-977-979-981
SCREWS & STUDS		
Screw—Ball Bearing Retainer Plate—C.E.....	1871522	950-952-953-954-955-962-964-965-966-967-968-969-971-972-974-975-976-977-978-979-980-981
Screw—Ball Bearing Retainer Plate—D.E.....	1871522	950-958-959-961-963-971-972
Screw—Ball Bearing Retainer Plate—D.E.....	1871529	962
Screw—Ball Bearing Retainer Plate—D.E.....	1871604	952-953-954-955-956-958-959-960-961-964-965-966-969-973-974-975-976-977-978-979-981
Screw—Ball Bearing Retainer Plate—D.E.....	1865648	957-967-968-979-980
Screw—Brush Holder Support.....	1901838	All
Screw—Brush Lead Attaching.....	132892	All
Screw—Brush Plate Attaching.....	132903	All
Screw—Commutator Cover Band.....	132923	All
Screw—Commutator End Frame Attaching.....	214602	All
Screw—Coupling Clamp C.E.....	141609	958
Screw—Drive End Frame Attaching (1/4-28x2 1/4).....	1871654	950-962-963-971-972
Screw—Drive End Frame Attaching (1/4-28x3/4).....	214602	952-953-954-955-956-957-958-960-961-962-963-964-965-966-969-972-973-974-975-976-977-978-979-980-981
Screw—Drive End Frame Attaching (1/4-28x1 1/4).....	1871522	967-968
Screw—Fan Attaching.....	132969	975
Screw—Fan Belt Adjustment Bracket.....	123435	974-977
Screw—Fan Belt Adjustment Bracket.....	214602	965-978
Screw—Mounting Bracket Attaching.....	141608	950-956-965-974-977-978
Screw—Pole Shoe.....	1886125	All
Stud—Air Filter.....	1883401	979
Stud—Ground Terminal.....	1881086	952-959-961-972-974-975-976-977-979-981
WASHERS		
Washer—Brush Holder Ins. (2 hole).....	825189	All
Washer—Brush Holder Space (2 hole).....	825187	All
Washer—Felt—C.E. & D.E.....	825197	All
Washer—Felt—Outer—C.E.....	1836936	957-962-963-969-980-981
Washer—Shaft Nut—Plain.....	1872618	952-953-954-958-959-960-961-965-967-968-974-976-977-978
Washer—Shaft Nut—Plain.....	30205	963
Washer—Terminal Stud Insulation.....	35812	All
Washer—Terminal Stud Plain.....	1903092	All

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS		
ADAPTOR—Grease Cup—D.E.	1926750	957
AIR FILTER	*1528059	979
Air Filter COVER	1883400	979
BRACKET—Fan Belt Adjustment	1869688	965-974
BRACKET—Fan Belt Adjustment	1882189	977
BRACKET—Fan Belt Adjustment	1883000	978
BRACKET—Generator Mounting (Shipped separate)	1867658	950
BRACKET—Generator Mounting	1884869	965-974-977-978
BUSHING—Terminal Stud Ins.	35814	All
BUSHING—Brush Holder Screw Insul.—In Brush Plate	825190	All
BUSHING—Brush Holder Screw—Steel—In Brush Holder	825185	All
COLLAR—Inside—D.E.	825253	950-952-953-954-955-956-957-958-959-960-961-962-963-964-965-966-967-968-969-971-972-973-974-975-976-977-978-979-981
COLLAR—Outside—C.E.	1835492	958
COLLAR—Outside—D.E.	825254	950-952-953-954-955-956-958-959-960-961-962-963-964-965-966-969-971-972-973-974-975-976-977-979-981
COUPLING	825271	958
Cotter PIN	108636	954
Dowel PIN—C.E. & D.E.	809593	All
Dowel PIN—For Locating Brush Plate	809062	All
Dowel PIN—For Locating Cover Band	809062	952-959-960-961-969
GASKET—Ball Bearing Retainer Plate—C.E. (D.E. on 950)	825260	All
GASKET—Ball Bearing Retainer Plate—D.E.	1869641	952-953-954-955-956-957-958-959-960-961-964-965-966-967-968-969-974-975-976-977-978-979-981
GASKET—Ball Bearing Retainer Plate Screw—D.E.	114659	957-967-968
Grease CUP—C.E. only 952-966	1838358	952-954-957-960-961-965-967-968-971-974-975-976-977-978-981
Grease CUP—Use with Street Ell—D.E.	1864140	952-965-966
Insulation STRIP—Field Coil	37008	All
Oil SEAL—D.E.	1865517	957-967-968-980
OILER—C.E. & D.E.	826931	950-953-955-956-958-959-964-973-979
OILER—C.E.	18307	962-972
OILER—D.E.	826931	962-963-973
OILER—D.E.	18307	973
Pipe PLUG—Small	125947	950-952-953-954-955-956-958-959-960-961-962-963-964-965-966-967-968-971-972-973-974-975-976-977-978-981
Pipe PLUG—Large	103884	950-952-953-954-955-956-957-958-959-960-961-962-963-964-965-966-967-968-971-972-973-974-975-976-977-978-979-981
PULLEY	1863185	950
PULLEY	1864946	963
PULLEY & FAN	1868787	954
PULLEY & FAN (Single Groove)	1869642	956-973-979
PULLEY & FAN (Double Groove)	1885872	956
PULLEY & FAN	1882062	975
Street ELL—D.E.	105423	952-965-966
Terminal CLIP—To Brush	200188	All
Woodruff KEY—For Fan	124544	950-962-963-971-972
Woodruff KEY—C.E.	106751	963
Woodruff KEY—C.E.	124548	966-981

 *Must be purchased from AC Spark Plug Division. Their Type No. 4.

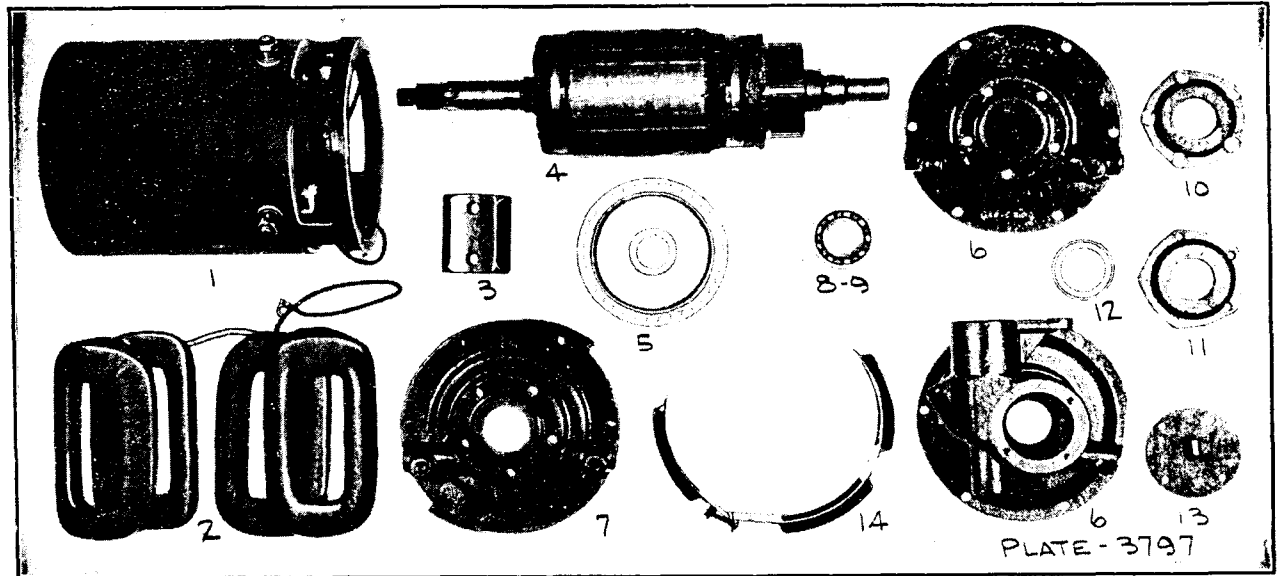

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame and Field Assembly	Field Coil Assembly	Pole Shoe	Armature	Fan	Commutator End Frame	Drive End Frame	Ball Bearing C.E.	Roller or Ball Bearing D.E.	Ball Bearing Retainer Plate C.E.	Bearing Retainer Plate D.E.	Felt Washer Retainer Cup	End Cover Plate	Cover Band
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
982		1869627	1869632	1867820		1865111	1869638	954517	954523	825251	1869639	825196		1838333
983		"	"	"		"	1883824	"	"	"	"	"		"
984		1888215	"	"		"	1869638	"	"	"	"	"		"
985		1883927	"	"		"	"	"	"	"	"	"		"
986		1869627	"	"		"	"	"	"	"	"	"		"
987		"	"	1869298	1872904	1883398	"	"	"	"	"	"		1873104
988		1873343	"	"		1865111	"	"	"	"	"	"		1838333
989		1869627	"	"		1883398	"	"	"	"	"	"		1873104
990		1884373	"	1867820		1865111	"	"	"	"	"	"		1838333
991		"	"	1884375		"	"	"	"	"	"	"		"
992		1869627	"	1869298		825236	"	"	"	"	"	"		"
993		"	"	1867820		1865111	"	"	"	"	"	"		"
994		"	"	1869298		"	"	"	"	"	"	"		"
995		1887733	"	1887734	1888468	1887737	1887738	"	189838	"	826430	"		1888469
998		"	"	1889627	"	1889610	1889622	"	×125744	†1889617	□1889625	"		"
999		"	"	"	"	"	"	"	×	†	□	"		"

 
× 190677 is Inner Race.

†1889617 is Inner Plate, 1889615 is Outer.

□1889625 is Inner Plate & Oil Seal, 1889623 is Outer Plate.

Delco-Remy

SERVICE PARTS CATALOG

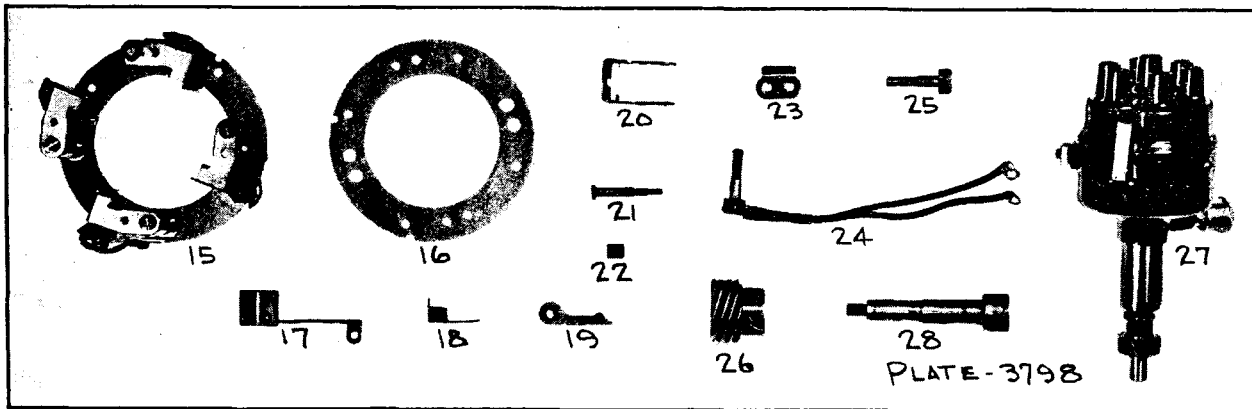

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

[illegible]

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Air Filter Cover Stud.....	120380	987-989
Lock Washer—Ball Bearing Retainer Plate Screw.....	120380	All except 995-998-999
Lock Washer—Ball Bearing Retainer Plate Screw—C.E.....	120217	995-998-999
Lock Washer—Brush Holder Stud Nut.....	802731	All
Lock Washer—Brush Holder Support Screw.....	802731	All
Lock Washer—Brush Lead Attaching Screw.....	106497	All
Lock Washer—Brush Plate Attaching Screw.....	106497	All
Lock Washer—Commutator End Frame Screw.....	120380	All except 995-998-999
Lock Washer—Commutator End Frame Screw.....	1900310	995-998-999
Lock Washer—Drive End Frame Attaching.....	120380	All except 995-998-999
Lock Washer—Drive End Frame Screw.....	1900310	995-998-999
Lock Washer—Fan Attaching Screw.....	118874	987-988
Lock Washer—Fan Belt Adjustment Screw.....	120380	982-984-985-986-993
Lock Washer—Fan Belt Adjustment Screw.....	103320	983
Lock Washer—Fan Shroud Attaching Screw.....	120214	995-998-999
Lock Washer—Mounting Bracket Attaching Screw.....	103321	982-984-985-986-988-993
Lock Washer—Roller Bearing Retainer Plate Screw—D.E.....	120217	995-998-999
Lock Washer—Shaft Nut—C.E.....	1888439	995-998-999
Lock Washer—Shaft Nut—D.E.....	103324	987-988-989-992-994
Lock Washer—Terminal Stud.....	120214	All
NUTS		
Nut—Air Filter Cover—Thumb.....	103127	987-989
Nut—Brush Holder Stud.....	5024654	All
Nut—Commutator Cover Band Screw.....	34816	All
Nut—Shaft—C.E.....	1911324	995-998-999
Nut—Shaft—D.E.....	125384	982-983-984-985-986-990-991-992-993
Nut—Shaft—D.E.....	1868077	987-988-989-992-994
Nut—Terminal Stud.....	35813	All
Nut—Terminal Stud—Ground.....	120369	983-984-986-987-988-989-990-991-992-993-994
SCREWS & STUDS		
Screw—Ball Bearing Retainer Plate—C.E.....	1871522	982-983-984-985-986-987-988-990-991-992-993-994
Screw—Ball Bearing Retainer Plate—C.E.....	1886130	995
Screw—Ball Bearing Retainer Plate—C.E.....	1889613	998-999
Screw—Ball Bearing Retainer Plate—D.E.....	1871604	982-983-984-985-986-987-988-989-990-991-992-993-994
Screw—Brush Holder Support.....	132911	All
Screw—Brush Lead Attaching.....	132892	All
Screw—Brush Plate Attaching.....	132903	All
Screw—Commutator Cover Band.....	132923	All
Screw—Commutator End Frame Attaching.....	181566	All except 983-995-998-999
Screw—Commutator End Frame Attaching.....	1883827	983
Screw—Commutator End Frame Attaching.....	214602	995-998-999
Screw—Drive End Frame Attaching (1/4-28x3/4).....	181566	982-984-985-986-987-988-989-990-991-992-993-994
Screw—Drive End Frame Attaching (1/4-28x1).....	1883827	983
Screw—Drive End Frame Attaching.....	181566	995-998-999
Screw—Fan Attaching.....	132969	987-988
Screw—Fan Belt Adjustment Bracket.....	181566	982-984-985-986-993
Screw—Fan Belt Adjustment Bracket.....	145527	983
Screw—Fan Shroud Attaching.....	133043	995-998-999
Screw—Fan Shroud Plate Attaching.....	120585	995
Screw—Fan Shroud Plate Attaching.....	133767	998-999
Screw—Mounting Bracket Attaching.....	141608	982-984-985-986-988-993
Screw—Pole Shoe.....	1886125	All
Screw—Roller Bearing Retainer Plate—D.E.....	120216	995
Screw—Roller Bearing Retainer Plate—D.E.....	1889621	998-999
Stud—Air Filter.....	1883401	987-989
Stud—Ground Terminal.....	1881086	983-984-986-987-988-989-990-991-992-993-994
WASHERS		
Washer—Brush Holder—Insulation (2 hole).....	825189	All
Washer—Brush Holder—Space (2 hole).....	825187	All
Washer—Felt—C.E. & D.E.....	825197	All
Washer—Shaft Nut—Plain.....	1872618	982-983-984-985-986-990-991-992-993
Washer—Terminal Stud—Insulation.....	35812	All
Washer—Terminal Stud—Plain.....	1903092	All


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS		
AIR FILTER.....	*1528059	987-989
Air Filter COVER.....	1883400	987-989
BRACKET—Commutator End Frame Support.....	1883826	983
BRACKET—Fan Belt Adjustment.....	1882189	984
BRACKET—Fan Belt Adjustment.....	1883000	986-988-993
BRACKET—Fan Belt Adjustment—C.E.....	1872308	982
BRACKET—Fan Belt Adjustment—C.E.....	1883825	983
BRACKET—Fan Belt Adjustment—D.E.....	1883661	982
BRACKET—Fan Belt Adjustment.....	1883932	985
BRACKET—Generator Mounting.....	1884654	985
BRACKET—Generator Mounting.....	1884869	982 984-986 993
BRACKET—Generator Mounting.....	1884530	988
BUSHING—Brush Holder Screw—Insul.—In Brush Plate.....	825190	All
BUSHING—Brush Holder Screw—Steel—In Brush Holder.....	825185	All
BUSHING—Terminal Stud Insul.....	35814	All except 995-998-999
BUSHING—Terminal Stud Insul.....	1900087	995-998-999
COLLAR—Space—Inside—C.E.....	826887	995
COLLAR—Space—Inside—C.E.....	1889620	998-999
COLLAR—Space—Inside—D.E.....	825253	982-983-984-985-986-987-988-989-990-991-992-993-994
COLLAR—Space—Outside—C.E.....	1887740	995
COLLAR—Space—Outside—C.E.....	1889619	998-999
COLLAR—Space—Outside—D.E.....	825254	982-983-984-985-986-987-988-989-990-991-992-993-994
Dowel PIN—C.E. & D.E.....	809593	All
Dowel PIN—For Locating Brush Plate.....	809062	All
Dowel PIN—For Locating Cover Band.....	809062	984
Fan SHROUD.....	1887742	995
Fan SHROUD.....	1889608	998
Fan SHROUD.....	1889362	999
Fan Shroud PLATE.....	1887741	995-998
Fan Shroud PLATE.....	1889662	999
GASKET—Ball Bearing Retainer Plate—C.E.....	825260	All except 998-999
GASKET—Ball Bearing Retainer Plate—C.E.....	1889614	998-999
GASKET—Ball Bearing Retainer Plate—D.E.....	1869641	982-983-984-985-986-987-988-989-990-991-992-993-994
GASKET—Roller Bearing Retainer Plate—D.E.....	825260	995
GASKET—Roller Bearing Retainer Plate—D.E.....	1889624	998-999
Grease CUP—C.E.....	1838358	982-986-987-989-990-991-993-994-995
Grease CUP—C.E.....	1864140	983-984-985-988
Grease CUP—C.E.....	1860863	998-999
Grease CUP—D.E.....	1864140	983-984-985-988
Grease CUP—D.E.....	1838358	982-986-987-989-990-991-993-994-995
Insulation STRIP—Field Coil.....	37008	All
OILER—C.E. & D.E.....	826931	992
OIL SEAL—D.E.....	1865517	995
OIL SEAL—D.E.....	1889633	998-999
Pipe PLUG—Large.....	103884	982-983-984-985-986-987-988-989-990-991-992-993-994
Pipe PLUG—Small.....	125947	982-983-984-985-986-988-990-991-992-993-994-998-999
Pipe PLUG.....	143992	995
PULLEY & FAN.....	1882062	987
†SLEEVE—on Armature Shaft.....	1884323	990
Street ELL—D.E.....	105423	983-985
Terminal CLIP—To Brush.....	200188	All
Terminal SHIELD.....	1883930	985-995-998-999
Terminal SHIELD—“A” Terminal.....	1888213	984
Terminal SHIELD—“F” Terminal.....	1888212	984
Terminal Shield CAP.....	1883931	985-995-998-999
Woodruff KEY—C.E.....	124545	995-998-999
Woodruff KEY—D.E.....	124549	991

†Shipped separately for 990 only.

 *Must be purchased from AC Spark Plug Division. Their Type No. 4.

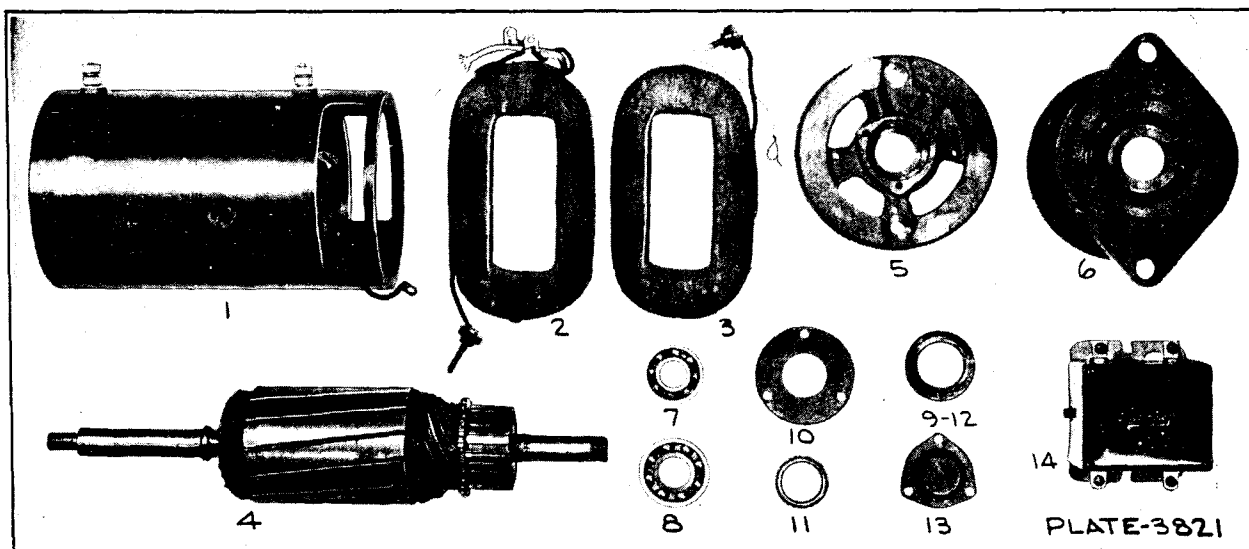

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame and Field	Field Coil Set (2 Coils)	Armature	Commutator End Frame	Drive End Frame	Ball Bearing or Bushing—C.E.	Ball Bearing or Bushing—D.E.	Ball Bearing Retainer Plate—C.E.	Ball Bearing Retainer Plate—D.E.	Felt Washer Retainer Cup—C.E.	Felt Washer Retainer Plate—D.E.	Commutator Cover Plate	Relay or Control Unit
⊕	1	2-3	4	5	6	7	8	9	10	11	12	13	14
934-A		*1902117	1861215	1861519	1861219	908503	903204		820707	37078	820709		X
934-B		*1902118	1861370	"	"	"	"		"	"	"		X
934-C		*1902117	1861983	1861240	1862748	"	"		"	"	"		X
934-D		*1902118	1861702	"	"	"	"		"	"	"		X
934-E		*1902117	1861517	1872424	1862160	903203	"		"	"	"	816212	X
934-F		* " ^Δ	1861561	"	1872425	"	"		"	"	"	"	X
934-G		*1902118	1862000	"	"	"	"		"	"	"	"	X
934-H		*1902117	1863138	1861519	1855291	908503	"		"	"	"	1859796	X
934-J		*1902118	1863740	"	1865114	"	"		"	"	"	"	X
934-K		*1902117	1864047	1864046	1864049	"	"		"	"	"	1850320	X
934-L		*1902118	1864035	"	"	"	"		"	"	"	"	X
934-M		*1902117	1864250	1861519	1856940	"	"		"	"	"	"	X
934-N		*1902118	1864258	"	"	"	"		"	"	"	"	X
934-P		*1902117	1864322	"	1864324	"	"		"	"	"	"	X
934-R		*1902118	1864329	"	"	"	"		"	"	"	"	X
934-S		*1902117	1864281	"	1871728	"	954517		1841877	"	825196		X
934-T		*1902118	1864328	"	"	"	"		"	"	"		X
934-U		*1902117	1861762	"	1865114	"	903204		820707	"	820709		X
934-V		*1902118	1864861	"	1856940	"	"		"	"	"		X
934-W		*1902117	1864709	"	"	"	"		"	"	"		X
934-X		*1902118	1864709	"	"	"	"		"	"	"		X
934-Y		*1902117	1864795	1864794	1864790	"	"		"	"	"	1850320	X
934-Z		* " [□]	1871364	1872424	1872425	903203	"		"	"	"	816212	X

*Lead 1902134 also required.

 
^ΔUse 1861517 for High Speed service.

[⊕]For parts of Service Generator Packages see "Service Generators and Packages."

xControl Unit not part of Generator—See Index or Special Generator & Package—Group 1 for Model No.

[□]When replacing original Armature (1861561) with 1871364 also supply 1—1871366 Pulley & Fan, 1—103047 Shaft nut, 1—811381 Shaft Washer, 1—103373 Cotter Pin and change name plate to 916-F.

Delco-Remy
SERVICE PARTS CATALOG

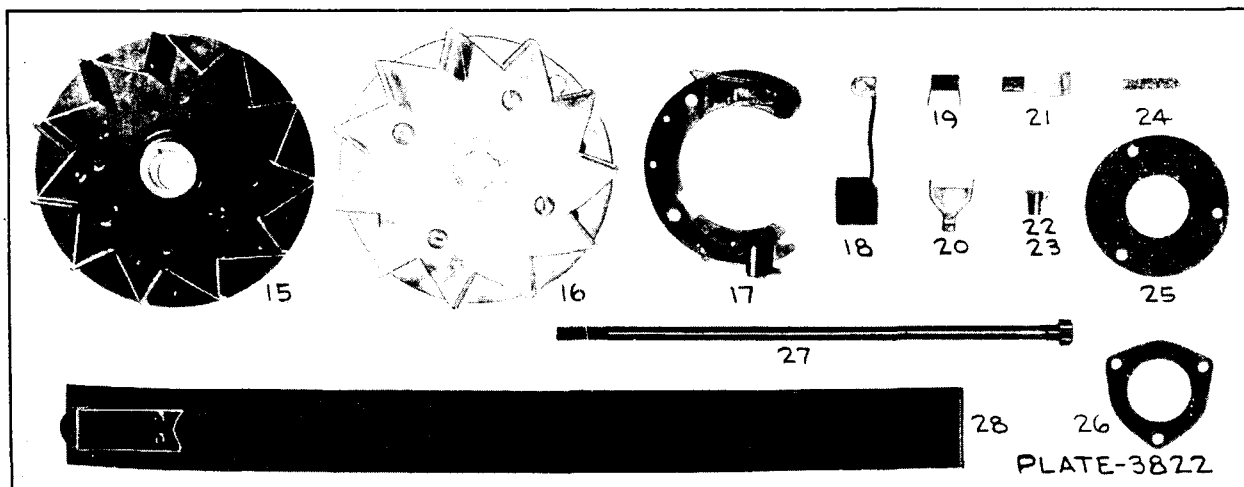

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Fan	Pulley	Brush Plate	Brush	Brush Spring	Brush Arm	Brush Holder Clip and Tube	Oiler—D.E.	Oiler—C.E.	Oil Wick—C.E.	Ball Bearing Re-tainer Plate Gasket	Commutator End Cover Gasket	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
934-A	1885089		1857213	1856494	1850760	1850759		113702	113702		820708		37070	1918012
934-B	"		"	"	"	"		"	"		"		"	"
934-C	"		1858586	"	1856992	"		"	"		"		1883865	"
934-D	"		"	"	"	"		"	"		"		"	"
934-E	1856936	1861520	1857213	"	1850760	"		"	"	29047	"	1835457	37070	"
934-F	†	†	"	"	"	"		"	"	"	"	"	"	"
934-G	†	†	"	"	"	"		"	"	"	"	"	"	"
934-H	1858604	1860275	"	"	"	"		"	"	"	"	"	1842289	"
934-J	1885089		"	"	"	"		"	"	"	"	"	1883865	"
934-K	1864050		"	"	"	"		"	"	"	"	1850321		"
934-L	"		"	"	"	"		"	"	"	"	"	"	"
934-M	1885089		"	"	"	"		"	"	"	"	"	1855683	"
934-N	"		"	"	"	"		"	"	"	"	"	"	"
934-P	"		"	"	"	"		"	"	"	"	"	37070	"
934-R	"		"	"	"	"		"	"	"	"	"	"	"
934-S	"		"	"	"	"		"	"	"	"	"	"	"
934-T	"		"	"	"	"		"	"	"	"	"	"	"
934-U	"		"	"	"	"		"	"	"	"	"	1883865	"
934-V	"		"	"	"	"		"	"	"	"	"	1855683	"
934-W	1864713		"	"	"	"		"	"	"	"	"	"	"
934-X	"		"	"	"	"		"	"	"	"	"	"	"
934-Y	1864050		"	"	"	"		"	"	"	"	1850321	"	"
934-Z	1856936	1864854	"	"	"	"		"	"	29047	"	1835457	37070	"

†Pulley and Fan Assembly.

‡Pulley and Fan Assembly.

1861564 Pulley for Dodge T-12 Intercity Delivery and Plymouth State Police.

1861565 Pulley for Dodge T-12 Truck—Door Delivery.

1861568 Pulley for Plymouth and Dodge City Police.

1861566 Pulley for T-13, T-14, T-15 Intercity Truck.

1861567 Pulley for T-13, T-14, T-15, T-21, T-22 Door to Door Delivery.

1864088 Pulley for Double Belt for T-16 Door to Door Delivery.

1863097 Pulley for Double Belt for T-16 Intercity Trucks.

°Shipped separate for White Truck.

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer Plate Screw.....	106497	934-A-B-C-W-X
Lock Washer—Ball Bearing Retainer Plate Screw.....	138479	934-S-T
Lock Washer—Ball Bearing Retainer Plate Screw.....	1880781	934-D-E-F-G-H-J-K-L-M-N-P-R-U-V-Y
Lock Washer—Brush Plate Attaching Screw.....	106497	All
Lock Washer—Brush Lead Attaching Screw.....	1904377	All
Lock Washer—Commutator End Frame Attaching.....	120380	934-K-L-Y
Lock Washer—Control Unit Ground Lead Screw.....	120380	All
Lock Washer—Distributor Hold Down.....	120380	934-Y
Lock Washer—Drive End Frame Attaching Screw.....	120380	934-K-L-Y
Lock Washer—End Cover Plate Attaching Screw.....	106497	934-D-E-F-G-H-K-L-Y
Lock Washer—Fan Attaching Screw.....	131184	934-E-F-Z
Lock Washer—Generator Mounting Bolt.....	110405	934-F-G
Lock Washer—Thru Bolt.....	120638	934-A-B-C-D-E-F-G-H-J-M-N-P-R-S-T-V-W-X-Z
Lock Washer—Shaft Nut.....	804000	934-F-G-H-J-M-N-P-R-S-T-U-V-Z
Lock Washer—Shaft Nut.....	110405	934-K-L-M-N-Y
Lock Washer—Terminal Stud Nut.....	1904661	All
Lock Washer—Wire Clamp Screw.....	120380	934-E-F-G-Z
NUTS		
Nut—Generator Mounting Bolt.....	272121	934-F-G
Nut—Hose Coupling.....	1864341	934-M-N
Nut—Shaft—C.E.....	806915	934-A-B-C-D-J-M-N-S-T-U-V-Z
Nut—Shaft—C.E.....	272121	934-K-L-M-N-Y
Nut—Shaft—D.E.....	806915	934-D-E-F-G-H-P-R
Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{9}{16}$ x $\frac{3}{4}$ Hex. Castle).....	1917570	934-A-B-C-E-J-K-L-S-T-U-V
Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{9}{16}$ x $\frac{1}{4}$ Hex.).....	1874909	934-T
Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{9}{16}$ x $\frac{3}{4}$ Hex. Semi-castle).....	1841367	934-T
Nut—Shaft—Use only with 1861567 Fan and Pulley.....	1861585	934-F-G
Nut—Terminal Stud.....	121743	All
SCREWS		
Screw—Ball Bearing Retainer Plate.....	1904370	All except 934-C-D-J-S-T
Screw—Ball Bearing Retainer Plate.....	5017850	934-C-D-J-S-T
Screw—Brush Plate Attaching.....	1904370	All
Screw—Brush Lead Attaching.....	141541	All
Screw—Commutator End Frame Attaching.....	1845831	934-K-L-Y
Screw—Control Unit Ground Lead.....	132243	All
Screw—Control Unit Mounting.....	126158	934-K-L
Screw—Distributor Hold Down.....	121815	934-Y
Screw—Drive End Frame Attaching.....	1864052	934-K-L-Y
Screw—End Cover Attaching.....	1904370	934-E-F-G-H-K-L-Y
Screw—Fan Attaching (12-24x $\frac{3}{8}$).....	132969	934-E-F-Z
Screw—Fan Attaching (12-24x $\frac{1}{4}$ Rd. hd.).....	132960	934-F
Screw—Generator Mounting Bolt.....	106292	934-F
Screw—Pole Shoe.....	1843646	All
Screw—Wire Clamp.....	132243	934-E-F-G-Z
WASHERS		
Washer—Brush Arm Space.....	1857412	All
Washer—Control Unit Mounting Screw.....	1901928	934-K-L
Washer—Distributor Hold Down.....	826958	934-Y
Washer—Felt—C.E.....	37077	934-A-B-C-D-E-F-G-H-J-M-N-P-R-S-T-U-V-W-X-Y-Z
Washer—Felt—D.E.....	820706	934-F-G-H-J-K-L-M-N-P-R-U-V-W-X-Y-Z
Washer—Felt—D.E.....	825197	934-S-T
Washer—Felt—Top of Distributor Well.....	1848687	934-K-L-Y
Washer—Space—Inside—D.E.....	822644	934-A-B-C-D-E-F-G-H-J-M-N-P-R-U-V-W-X-Z
Washer—Shaft Nut Plain—D.E.....	30205	934-A-B
Washer—Shaft Nut Plain—D.E.....	834750	934-M-N
Washer—Shaft Nut Plain—D.E.....	807405	934-C-J-U
Washer—Shaft Nut Plain—D.E.....	811381	934-K-L-S-T-V-Y
Washer—Terminal Stud Insulation.....	1858753	All
Washer—Terminal Stud Plain.....	1881409	All
Washer—Oil Thrower—D.E.....	816348	934-P-R
MISCELLANEOUS		
Advance Arm DIAL.....	815095	934-Y
Advance ARM Assem.....	1838617	934-Y
BUSHING—Bottom of Distributor Well.....	1850317	934-K-L
COLLAR—Outside—D.E.....	1844575	934-C-D-J-U

Parts not listed in this Catalog will not be sold separately.


MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
COLLAR—Inside—C.E.....	37837	934-A-B-C-D-J-M-N-P-R-S-T-U-V-W-X
COLLAR—Oil Throwing.....	1839007	934-A-B-K-L-Y
COLLAR—Outside—D.E.....	1845008	934-E-F-G-Z
COLLAR—Outside—D.E.....	1864990	934-V
COLLAR—Inside—C.E.....	1863141	934-H
COLLAR—Outside—D.E.....	1863140	934-H
COLLAR—C.E.....	817224	934-K-L-Y-Z
COLLAR—Outside—D.E.....	1842982	934-Y
COLLAR—Oil Thrower.....	1857941	934-S-T
COLLAR—Outside—D.E.....	825254	934-S-T
COLLAR—Outside—D.E.....	1858603	934-W-X
COLLAR—Outside—D.E.....	1864255	934-M-N
COLLAR—Outside—D.E.— $\frac{3}{4}$ " O.D.....	816350	934-P-R
COLLAR—Outside—D.E.— $1\frac{1}{8}$ " O.D.....	1864325	934-P-R
COLLAR—Outside—C.E.....	37830	934-W-X
DISTRIBUTOR.....	*649-E	934-Y
Distributor Drive GEAR.....	1850322	934-K-L-Y
Dowel PIN—C.E.....	809062	All
Dowel PIN—D.E.....	809062	934-A-B-C-D-E-F-G-M-N-P-R-S-T-U-V-W-X-Y-Z
Felt Washer RETAINER—Top of Distributor Well.....	1850617	934-K-L-Y
FRAME and BRACKET.....	1863135	934-H
GENERATOR PACKAGE (Inc. 934-K Gen. 6V.).....	1863783	934-K
GENERATOR PACKAGE (Inc. 934-L Gen. 12V.).....	1863784	934-L
GENERATOR APPLICATION PACKAGE.....	1863775	934-K-L
Oil BAFFLE.....	1847361	934-A-B
Oil BAFFLE.....	1837897	934-C-D-J-U
Oil BAFFLE.....	1838047	934-K-L-Y
Pipe PLUG—Side of Distributor Well.....	103877	934-K-L-Y
Pole SHOE.....	37734	All
Terminal STUD and BUSHING.....	1858749	All
Terminal CLIP—To Brush.....	200182	934-C-D-E-F-G-H-J-K-L-M-N-P-R-S-T-V-Y-Z
Wire CLAMP.....	1860459	934-E-F-G
Wiring HARNESS—Control Unit to Generator.....	1862765	934-K-L
Wiring HARNESS—Control Unit to Ammeter.....	1862766	934-K-L
Wiring Harness CLAMP.....	1860459	934-K-L-Z
Woodruff KEY—C.E.....	124545	934-A-B-C-D-H-J-N-S-T-U-V-W-X
Woodruff KEY—C.E.....	124542	934-K-L-Y
Woodruff KEY—D.E.....	124548	934-A-B-C-D-J-K-L-U-Y
Woodruff KEY—D.E.....	124545	934-K-L-V-Y-Z
Woodruff KEY—D.E.....	124546	934-M-N-S-T-V

*For parts of Distributor see Distributor parts sheet.

Revised to March 15, 1971

 SERVICE PARTS CATALOG

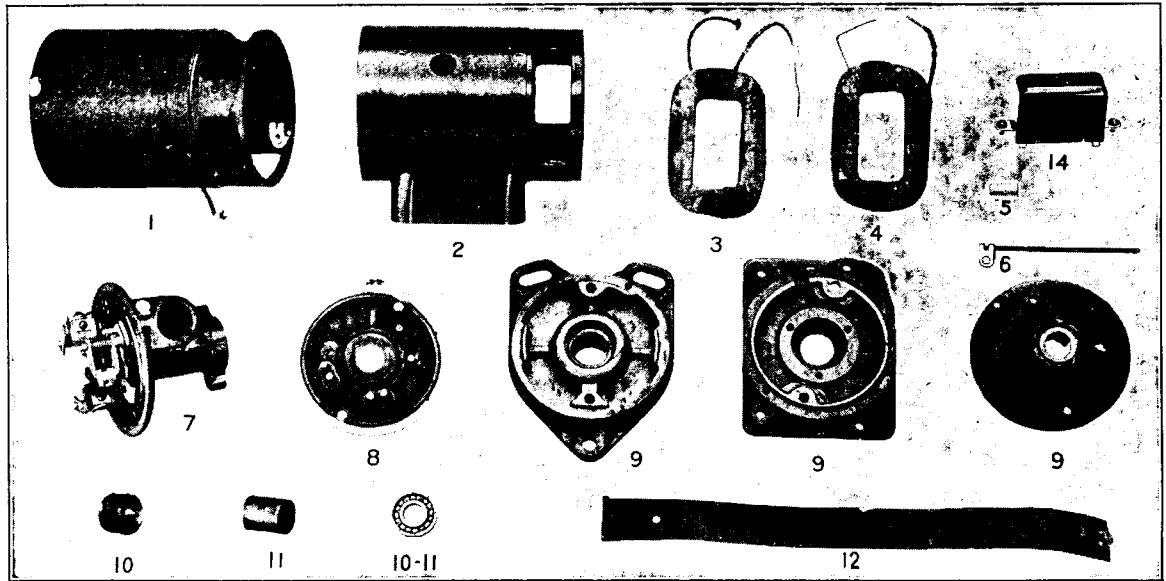

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame and Field Assembly	Frame and Base Assembly	Field Coil (Connected to Third Brush)	Field Coil (Connected to Thermostat or Grd.)	Relay Lead and Terminal Stud Bushing	Brush to Relay Lead	Commutator End Bearing and Brush Assembly	Commutator End Frame and Pins	Drive End Frame	Bushing or Ball Bearing C.E.	Bushing or Ball Bearing D.E.	Commutator Band	Ignition Distributor Complete	Relay§
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
941-A			814978	814977	812891	812004		814980	817326	954378	810252	814992		265-B
941-B			"	"	"	"		815010	815045	"	810641	"		"
941-C			"	"	"	813116		815862	815867	954519	901203	816340		"
941-D			"	"	"	812004		815857	822123	954378	811096	"		"
941-E			"	"	"	809966		814930	815015	"	954378	"		"
941-F			"	"	"	812004		1845819	816210	"	810641	"		"
941-G			"	"	"	"		814980	"	"	"	"		"
941-H			816241	816240	"	"		1854889	"	"	"	"		"
941-H-12			820912	820911	"	"		816243	"	"	"	"		267-D
941-J			814978	814977	"	"		1845819	816469	"	954378	"		265-B
941-K			"	"	"	809966		1849981	817505	954519	"	"		"
941-L			"	"	"	812004		816729	817399	"	"	"		"
941-M			"	"	"	"		1908871	817535	812823	811096	"		"
941-N			"	"	"	"		814980	817592	954378	817117	"	x	"
941-P			817797	816240	"	817798		817801	816469	954519	901203	"		"
941-Q			814978	814977	"	812004		814980	816210	954378	810641	"		"
941-R			"	"	"	"		815862	816469	954519	954378	"		"
941-S			"	"	"	"		1849981	"	"	"	"		"
941-T			816241	816240	"	809966		1849984	"	"	"	"		"
941-U			814978	814977	"	812004		1908871	817223	812823	"	"		"
941-V			"	"	"	"		1849981	818140	954519	"	"		"
941-W			"	"	"	"		1849981	816469	"	"	"		"
941-X			"	"	"	813116		818420	818300	"	811096	"		"
941-Y			"	"	"	812004		1849981	817879	954519	954378	"		"
941-Z			"	"	"	"		1845819	815854	954378	811096	"		"
941-ZS			"	"	"	"		814980	"	"	"	"		"

§Internal parts of Relay are not sold separately.

 
°811096 is a Bronze Bushing. Where Durex Bushing is used (O.D. 1 $\frac{3}{8}$ ") it is necessary to replace complete Drive End Frame.

□941-ZS has same parts as 941-Z, and is identical except output set lower.

‡Also supplied 265-F (Crosswise Mounting).

*Also supplied 265-G (Crosswise Mounting).

‡816340 is 14 $\frac{1}{4}$ " long, 1861502 used on later models is 14 $\frac{1}{2}$ " long.

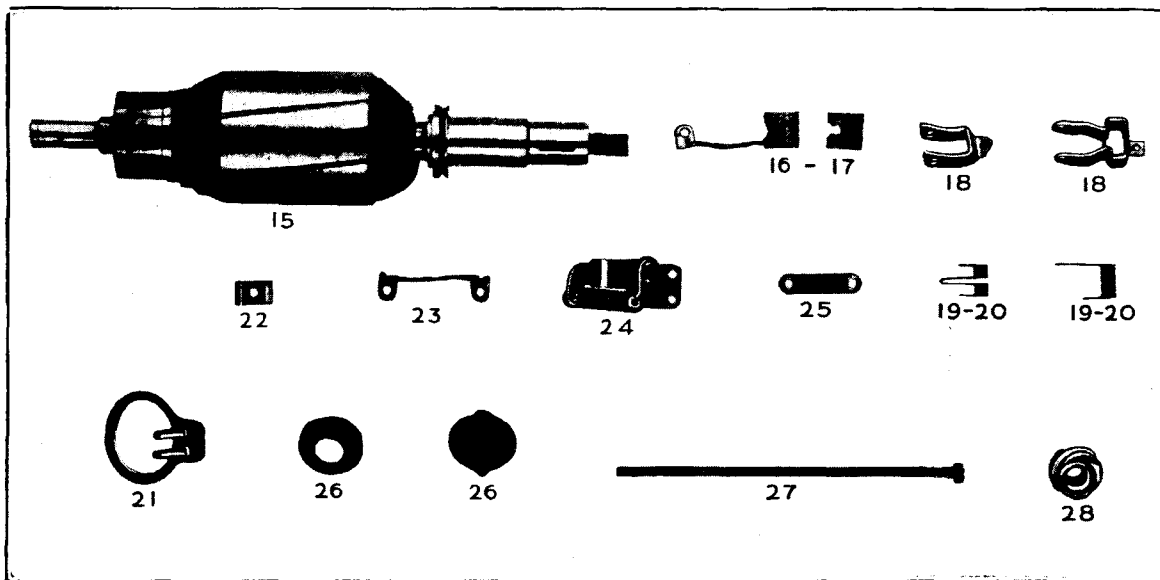

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Arma- ture	Main Brush	Third Brush	Brush Holder	Brush Spring (3rd and Ground)	Brush Spring (Insu- lated Main)	Third Brush Plate	Third Brush Plate Clamp	Brush Ground Lead	Ther- mostat Assem- bly	Ther- mostat Resist- ance	Dust Cap C.E.	Thru Bolt	Distrib- utor Drive Gear
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
941-A	814988	820517	820517	809642	809644	809658	809698	817532	809688	814994	810922	81498	1908680	
941-B	815047	812715	812715	812711	812712	812712	1837026	"	"	"	"	"	"	"
941-C	815864	"	"	"	"	"	"	"	"	816496	807180	815868	"	"
941-D	815852	"	"	"	"	"	"	"	"	814994	810922	814985	"	"
941-E	815016	820517	820517	809642	809644	809658	809698	"	809688	"	"	"	"	"
941-F	816208	"	"	"	"	"	"	"	"	"	"	816212	"	"
941-G	"	"	"	"	"	"	"	"	"	"	"	"	"	"
941-H	"	"	"	"	809658	809644	809936	"	"	816260	810922	"	"	"
941-H-12	820909	809637	809637	"	"	"	"	"	"	"	"	"	"	"
941-J	1886821	820517	820517	"	809644	809658	809698	"	"	814994	"	814985	"	"
941-K	817503	"	"	"	"	"	"	"	"	817910	817911	815868	"	"
941-L	"	"	"	"	"	"	"	"	"	"	"	816733	"	"
941-M	817533	"	"	"	"	"	"	"	"	"	"	817219	"	"
941-N	817590	"	"	"	"	"	"	"	"	814994	810922	816212	"	"
941-P	817799	812715	812715	812711	812712	812712	812831	"	"	818893	807180	815868	"	"
941-	816208	820517	820517	809642	809644	809658	809698	"	809688	"	817911	816212	"	"
941-R	817793	812715	812715	812711	812712	812712	1837026	"	"	814994	810922	815868	"	"
941-S	"	820517	820517	809642	809644	809658	809698	"	809688	"	"	"	"	"
941-T	"	"	"	"	809658	809644	809658	"	"	828900	817911	"	"	"
941-U	817807	"	"	"	809644	809658	80	"	"	"	"	817219	"	"
941-V	815864	"	"	"	"	"	"	"	"	817910	817911	815868	"	"
941-W	817788	"	"	"	"	"	"	"	"	817911	810922	"	"	"
941-X	817533	812715	812715	812711	812712	812712	1837026	"	"	"	"	817219	"	"
941-Y	817877	820517	820517	809642	809644	809658	809698	"	809688	"	"	815868	"	"
941-Z	819548	"	"	"	"	"	"	"	"	817910	817911	814985	"	"
941-ZS	"	"	"	"	"	"	"	"	"	"	"	"	"	"

MINOR PARTS SECTION

Name	Part No.	Used on Models
COLLARS AND COUPLINGS		
COUPLING—D.E. (Center).....	810694	941-A-S-W
COUPLING—D.E. (Generator end).....	810563	941-L
COUPLING—D.E. (Generator end).....	812090	941-E
COUPLING—D.E. (Generator end).....	817506	941-K
COUPLING (Pump).....	812211	941-S-W
Coupling COLLAR.....	818015	941-P

Parts not listed in this Catalog will not be sold separately.

Revised to March 15, 1971

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
COLLARS AND COUPLINGS—Continued		
Shaft Extension COLLAR.....	813005	941-C
Shaft Extension COLLAR.....	816350	941-V
Space COLLAR—C.E.....	811681	941-A-B-D-E-F-G-H-J-Q-N-Z
Space COLLAR—C.E.....	809953	941-E-J-K-L-R-S-T-W
Space COLLAR—D.E.....	813279	941-G-Q
Space COLLAR—D.E.....	813281	941-P
Space COLLAR—Outside—C.E.....	815049	941-B-D-Z
Space COLLAR—Outside—C.E.....	815012	941-E-J
Space COLLAR—Outside—D.E.....	810653	941-C
Space COLLAR—Outside—D.E.....	817224	941-U-Y
Space COLLAR—Outside—D.E.....	816349	941-V
KEYS		
Armature Shaft KEY—No. 5 ($\frac{5}{8}$ " dia.) Nickel.....	124545	941-U-Y
Armature Shaft KEY—No. 6 ($\frac{5}{8}$ " dia.).....	124546	941-E-J-K-L-N-R-S-T-W-Z-ZS
Armature Shaft KEY—No. 8 ($\frac{3}{4}$ " dia.).....	124548	941-D-F-G-H-Q-Z-ZS
Armature Shaft KEY—No. 9 ($\frac{3}{4}$ " dia.).....	106751	941-M-X
LOCK WASHERS		
Armature Shaft Nut LOCK WASHER—D.E. ($\frac{1}{2}$ — $\frac{1}{8}$ x $\frac{3}{32}$).....	802764	941-R
Armature Shaft Nut LOCK WASHER—D.E. ($\frac{1}{2}$ — $\frac{1}{8}$ x $\frac{3}{32}$).....	1915265	941-U-Y
Armature Shaft Nut LOCK WASHER—D.E. ($\frac{1}{2}$ — $\frac{1}{8}$ x $\frac{3}{32}$).....	141556	941-S-T-W
Ball Bearing Retainer Screw LOCK WASHER—D.E. ($\frac{3}{32}$ x $\frac{3}{16}$).....	1962276	941-C-E-J-K-L-P-R-S-T-U-V-W-Y
Brush Screw LOCK WASHER—No. 6 ($\frac{3}{16}$ x $\frac{3}{32}$).....	456413	941-A-E-F-G-H-J-K-L-M-N-Q-R-S-T-U-V-W-Y-Z-ZS
Brush Lead Screw LOCK WASHER—No. 6 (.143x $\frac{3}{32}$ x $\frac{1}{2}$).....	1914816	All
Brush Ground Lead Screw LOCK WASHER—No. 8—32.....	453844	All
Brush Holder Screw LOCK WASHER.....	1914816	941-B-C-D-M-N-P-R-X
Coil Bracket Screw LOCK WASHER ($\frac{1}{2}$ — $\frac{1}{8}$ x $\frac{1}{16}$).....	141554	941-B-D-Q-V-S
Coil Fastening Screw LOCK WASHER.....	9421423	941-V-S-W
Coil Fastening Screw LOCK WASHER.....	9421423	941-B-Q-S-W-V
Dust Cap Screw LOCK WASHER—No. 10.....	453435	941-A-B-C-D-E-F-G-H-J-K-L-Q-R-S-T-V-W-Y-Z-ZS
Dust Cap Screw LOCK WASHER—No. 8—32.....	453844	941-H-M-V-X
Field Ground Screw LOCK WASHER (.169— $\frac{3}{32}$ x $\frac{1}{2}$), was originally X788—6—32.....	453844	941-G-M-Q-U-V-X-Y
Fuse Holder LOCK WASHER ($\frac{1}{2}$ — $\frac{3}{8}$ x $\frac{3}{16}$).....	802763	941-P
Relay Fastening Screw LOCK WASHER (.169— $\frac{3}{32}$ x $\frac{1}{2}$).....	453844	All
Third Brush Clamp Screw LOCK WASHER.....	453435	All
Thermostat Fastening Screw LOCK WASHER—No. 5 ($\frac{3}{16}$ x $\frac{1}{2}$).....	456413	All
Thermostat Resistance Screw LOCK WASHER—No. 6 (.143x.330 O.D.x $\frac{3}{32}$).....	802730	All
Thermostat Terminal Screw LOCK WASHER—No. 6 (.143x $\frac{3}{32}$ x $\frac{1}{2}$).....	1914816	All
Thru Bolt LOCK WASHER.....	9421424	All
NUTS		
Armature Shaft NUT—C.E.....	814983	941-A-B-D-Z-ZS
Armature Shaft NUT—C.E. ($\frac{1}{2}$ —20x $\frac{3}{4}$ x $\frac{3}{8}$ thk.).....	114496	941-F-G-H-N-Q
Armature Shaft NUT—D.E. (20x $\frac{3}{4}$ x $\frac{3}{8}$).....	1917570	941-D-F-G-H-M-Q-X-Z-ZS
Armature Shaft NUT—D.E. ($\frac{1}{2}$ —20x $\frac{3}{8}$ x $\frac{1}{4}$).....	122264	941-J-L-R-S-T-W
Armature Shaft NUT—D.E. (.669—20x $\frac{1}{2}$ x $\frac{1}{4}$).....	1915172	941-B-C-D-U-Y
Chain Set Screw NUT.....	802818	941-C
Chain Set Screw NUT.....	134551	941-X
OIL THROWERS		
Oil BAFFLE.....	820547	941-F-G-H-Q-Z-ZS
Oil THROWER.....	816348	941-V
Oil THROWER.....	824961	941-M
OIL WICKS		
Oil WICK.....	1947350	941-M-U-X
Oil WICK—C.E.....	1919851	941-A-B-D-E-F-G-H-J-K-N-P-R-S-T-Q-V-W-Y-Z-ZS
Oil WICK—D.E.....	802696	941-G-H-Q
Oil WICK (Round Disc).....	816732	941-L
PINS		
Brush Holder Cotter PIN.....	119981	941-B-C-D-P-R-X
Bushing Dowel PIN—C.E.....	809640	941-Z-ZS
Bushing Dowel PIN—D.E.....	809640	941-A-B-D-F-G-H-M-N-Q-X-Z-ZS
Dowel PIN—C.E.....	809062	All
Dowel PIN—D.E.....	809593	All
Main Brush Holder PIN.....	817313	941-C-M-U-X
Main Brush Holder PIN and INSULATION.....	812016	All
Main Brush Holder Stop PIN.....	817314	941-H-M-U
Main Brush Holder Stop PIN.....	818400	941-C-X
Main Brush Holder Stop PIN and INSULATION.....	812829	941-B-C-D-P-R-X


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION


Name	Part No.	Used on Models
RETAINER PLATES OR RINGS		
Main Brush Holder Stop PIN and INSULATION.....	812015	941-H-L-M-N-R-S-T-U-V-W-Y-Z-ZS
Oil Wick PIN.....	114877	941-F-G-H-Q
Third Brush Plate Stop PIN.....	1849986	941-F-J-K-S-V-W-Y-Z
Third Brush Plate Stop PIN.....	1840738	941-H-T
Third Brush Spring Washer PIN.....	809614	All
Ball Bearing Felt Washer Retainer PLATE—Outside—D.E.....	819104	941-E-J-K-L-P-R-S-T-U-V-W-Y
Ball Bearing Retainer PLATE—Outside—C.E.....	809960	941-A-B-C-D-E-F-G-H-J-Q-Z-ZS
Ball Bearing Retainer PLATE—Outside—D.E.....	817500	941-E-L
Ball Bearing Retainer PLATE—Outside—D.E.....	812044	941-C-J-K-P-R-S-T-U-V-Y
Ball Bearing Retainer PLATE.....	1855702	941-W
Ball Bearing or Gear Retaining RING.....	810499	941-C
Felt Washer RETAINER—Inner—C.E.....	810465	941-L
Felt Washer RETAINER—Outer—C.E.....	816731	941-L
Felt Washer RETAINER and Space CUP.....	810259	941-N
SCREWS		
Ball Bearing Retainer Plate SCREW—D.E. (10—32x $\frac{3}{8}$).....	115431	941-C-E-J-K-L-P-R-S-T-U-V-W-Y
Brush Fastening SCREW (6—32x $\frac{1}{2}$).....	454154	All except 941-B-C-D-H-M-P-R-V-X
Brush Lead SCREW (6—32x $\frac{5}{16}$).....	454329	941-B-C-D-P-R-X
Brush Holder Fastening SCREW (6—32x $\frac{3}{16}$).....	454329	941-B-C-D-P-R-X
Chain Fastening SCREW ($\frac{1}{2}$ —20x1 $\frac{1}{4}$) sq. hd.....	102435	941-C
Chain Fastening SCREW.....	102436	941-X
Coil Bracket Fastening SCREW ($\frac{5}{16}$ —18x $\frac{1}{16}$).....	141549	941-B-D-Q-V
Coil Fastening SCREW ($\frac{1}{4}$ x20—3 $\frac{1}{8}$).....	115353	941-B-D-Q-S-V-W
Commutator Cover Band SCREW (10—32x $\frac{3}{4}$).....	115490	941-C
Dust Cap SCREW—C.E. (10—32x $\frac{3}{8}$).....	115431	941
Dust Cap SCREW—C.E. (8—32x $\frac{5}{16}$).....	115607	941-M-U-X
Field Lead Ground SCREW (8—32).....	115607	941-G-M-Q-S-V-W-X-Y
Ground SCREW—Brush Lead (8—32x $\frac{5}{16}$).....	115607	All
Ground Lead SCREW (6—32).....	453978	941-H
Pole Piece SCREW ($\frac{3}{8}$ —24 thd.).....	828675	All
Relay Fastening and Terminal SCREW (8—32x $\frac{3}{8}$).....	115434	All
Thermostat Resistance and Fastening SCREW (6—32x $\frac{5}{16}$).....	454329	All
Thermostat Terminal Lead SCREW (6—32x $\frac{5}{16}$).....	454329	All
Third Brush Clamp SCREW (10—32x $\frac{5}{8}$).....	9416183	All
WASHERS		
Armature Shaft Nut WASHER ($\frac{3}{4}$ —1 $\frac{1}{4}$ x $\frac{1}{8}$ thk.).....	1926782	941-D-F-G-H-Q-Z-ZS
Armature Shaft Nut WASHER ($\frac{3}{4}$ —1 $\frac{1}{4}$ x $\frac{3}{32}$ thk.).....	1934383	941-M-N-X
Armature Shaft WASHER ($\frac{3}{4}$ — $\frac{7}{8}$ x $\frac{1}{8}$ thk.).....	1938744	941-S-T-W
Brush Screw WASHER (.144 I.D.— $\frac{1}{2}$ x $\frac{1}{8}$ thk.).....	809551	All except B-C-D-P-R-V-X
Ball Bearing Space WASHER (.675x $\frac{1}{8}$ x $\frac{3}{32}$ thk.).....	809945	941-C-E-J-K-L-P-R-S-T-V-W-Y
End Play WASHER—Outside—D.E. (1.005 I.D.— $\frac{1}{8}$ thk.).....	811099	941-M-X
End Play WASHER—Inside—D.E. (1.005 I.D.—.005 thk.).....	807736	941-M-X
Felt WASHER—Inside—C.E.....	810466	941-L
Felt WASHER—D.E. ($\frac{3}{8}$ x1 $\frac{1}{8}$ x $\frac{1}{8}$ thk.).....	809961	941-C-E-J-K-L-P-R-S-T-U-V-W-Y
Felt WASHER—Outside—C.E.....	816732	941-L
Felt WASHER—D.E. ($\frac{1}{8}$ I.D.x1 $\frac{1}{4}$ x $\frac{5}{16}$ thk.).....	810258	941-N
Felt WASHER—C.E.....	815042	941-A-B-D-Z-ZS
Fuse Connector WASHER.....	816936	941-P
Thermostat Terminal Screw WASHER (.144x $\frac{3}{16}$ x $\frac{3}{32}$ thk.).....	24336	All except 941-G-M-P-Q-U-V-X-Y
Third Brush Plate Spring WASHER—Special.....	809824	All
MISCELLANEOUS		
Coil BRACKET.....	811467	941-B-D-Q
Coil BRACKET.....	816344	941-V
End Cover GASKET.....	817220	941-M-U-X
End Cover GASKET—C.E.....	1844012	941-C-K-P-R-S-T-V-W-Y
End Cover GASKET—C.E.....	457	941-F-G-H-N-Q
Field Lead CLIP—Brush End.....	7	All
Field Lead CLIP (Third Brush).....		All
Frame STUD.....	810	941-L
FUSE.....	816482	941-P
Fuse HOLDER.....	816481	941-P
Fuse SPRING.....	810670	941-P
Ground Lead CLIP.....	831187	All except 941-B-D
OILER—C.E.....	114998	941-C-D-E-F-G-H-J-K-N-P-Q-R-S-T-V-W-Y-Z-ZS
OILER—C.E.....	113702	941-M-U-X
OILER—D.E.....	815641	941-L
OILER—D.E. (.315 dia.).....	114998	941-A-B-C-E-J-K-P-R-S-T-W-Y
OILER—D.E. (.255 dia.).....	113702	941-E-J-T-U-W
Oil Hole PLUG.....	816315	941-M-U-X
Oil Hole PLUG—D.E.....	811878	941-G-Q

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS--Continued		
Pole SHOE.....	816331	All
Relay COVER.....	813158	265-B
Relay Ground LEAD.....	812653	941-A-H
Relay Ground Lead CLIP.....	812652	941-A
Relay Lead CLIP—Brush End.....	200188	All
Relay Lead CLIP—Relay End.....	200181	All
Retainer Plate GASKET—D.E.....	819105	941-C-K-P-R-S-T-U-V-Y
Retainer Plate GASKET—D.E.....	1912008	941-W
Space CAP—C.E.....	814984	941-A-B-D-F-G-H-N-Q-Z-ZS

 

 *Shipped separately.
 †Relay or Control Unit sold separately. See Car Index for Model No.
 ‡Field Coil set.



○Use Brush Set 1880998.

MINOR PARTS SECTION

Parts not listed in this Catalog will not be sold separately.

Revised to July 1, 1968

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS—Continued		
Lock Washer—Fuse Holder.....	802763	946-B-G
Lock Washer—Field Lead Ground Screw.....	453844	946-C-D-H-J-N-P-S
Lock Washer—Gear Retaining Plate Screw.....	9421423	946-A
Lock Washer—Main Brush Plate Screw.....	453844	940-K
Lock Washer—Relay Attaching Screw.....	453844	946-A-B-C-D-E-F-G-H-J-L-M-N-P-R-S
Lock Washer—Resistance Connector Clamp Screw.....	453844	946-R
Lock Washer—Resistance Ground Terminal Screw.....	1962276	946-R
Lock Washer—Shaft Nut.....	1915265	946-B-C-D-E-G-H-J-K-L-M-N-P-R-S
Lock Washer—Shaft Nut.....	802764	946-F
Lock Washer—Third Brush Clamp Screw.....	453435	946-A-B-C-D-E-F-G-H-J-K-L-M-N-P-R-S
Lock Washer—Thermostat Attaching Screw.....	456413	946-A-F-R
Lock Washer—Thermostat Resistance Screw.....	1914816	946-A-F-R
Lock Washer—Thermostat Terminal Screw.....	1914816	946-A-F-R
Lock Washer—Terminal Stud Nut.....	1914579	946-E-K-L-M
Lock Washer—Thru Bolt.....	9421423	946-A
Lock Washer—Thru Bolt.....	9421424	946-B-C-D-E-F-G-H-J-K-L-M-N-P-R-S
NUTS		
Nut—Cover Band Screw.....	453433	946-E-K-L-M
Nut—Distributor Clamp Stud.....	453848	946-A
Nut—Resistance Ground Terminal.....	115295	946-R
Nut—Shaft.....	1915172	946-B-C-D-E-G-H-J-K-L-M-N-P-R-S
Nut—Shaft.....	122264	946-F
Nut—Shaft.....	1917570	946-H
Nut—Terminal Stud.....	121743	946-E-K-L-M
SCREWS		
Screw—Ball Bearing Retainer Plate—10-32x $\frac{3}{8}$	1914580	946-A-B-C-D-E-F-G-H-J-K-L-M-N-P-R-S
Screw—Brush Attaching.....	453986	946-A-C-D-E-F-J-L-M-N-P-R-S
Screw—Brush Attaching—Main.....	9417096	946-B-G-H
Screw—Brush Attaching—Third.....	9417096	946-B-G-H
Screw—Brush Lead—6-32x $\frac{1}{8}$	453978	946-A-B-C-D-E-F-G-H-J-K-L-M-N-P-R-S
Screw—Cover Band.....	132143	946-E-K-L-M
Screw—Distributor Mounting—10-32x $\frac{1}{8}$	113807	946-A
Screw—Distributor Clamp.....	802771	946-A
Screw—Distributor Mounting Stud.....	817362	946-A
Screw—End Cover Plate.....	1914580	946-B-F-G
Screw—End Cover Plate—C.E.....	453418	946-C-D-E-J-L-M-N-P-R-S
Screw—End Cover Plate—C.E.....	115434	946-K
Screw—Fuse Connector Terminal.....	132745	946-B-G
Screw—Ground—Field Lead.....	115607	946-C-D-H-J-N-P-S
Screw—Gear Retaining Plate.....	100109	946-A
Screw—Main Brush Plate.....	115434	946-K
Screw—Pole Piece— $\frac{3}{8}$ -24.....	828675	946-A-B-C-D-E-F-G-H-J-K-L-M-N-P-R-S
Screw—Relay Mounting.....	115434	946-A
Screw—Relay Mounting.....	115436	946-B-C-D-E-F-H-J-L-M-P-R-S
Screw—Resistance Ground Terminal Clamp.....	141594	946-R
Screw—Third Brush Clamp—10-32x $\frac{5}{8}$	9416183	946-A-B-E-F-G-H-L-M-R
Screw—Third Brush Clamp.....	142729	946-C-D-J-N-P-S
Screw—Third Brush Plate Clamp.....	141602	946-K
Screw—Thermostat Attaching.....	454329	946-A-F
Screw—Thermostat Terminal.....	454329	946-A
Screw—Thermostat Terminal.....	453978	946-F-R
Screw—Thermostat Resistance.....	141542	946-A-F-R
WASHERS		
Washer—Ball Bearing Space—Inside—D.E.....	809945	946-A-B-C-D-E-F-G-J-K-L-M-N-P-S
Washer—Brush Arm Space.....	1857412	946-K
Washer—Brush Screw.....	809551	946-A-C-D-E-F-J-L-M-N-P-R-S
Washer—Felt—D.E.....	809961	946-A-B-C-D-E-F-G-J-K-L-M-N-P-R-S
Washer—Felt—C.E.....	812880	946-A
Washer—Felt—D.E.—Inside.....	820706	946-H
Washer—Fuse Connector Space.....	816936	946-B-G
Washer—Gear Space.....	810416	946-A
Washer—Resistance Ground Terminal Screw—Plain.....	807699	946-R
Washer—Resistance Ground Terminal Insulation—Inside.....	806818	946-R
Washer—Resistance Ground Terminal Insulation.....	802861	946-R
Washer—Resistance Ground Terminal Stud—Plain Outside.....	1902988	946-R


*Distributor is mounted in Generator but shipped separately.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
WASHERS—Continued		
Washer—Shaft Nut.....	1914589	946-H
Washer—Space—Outside.....	822644	946-H
Washer—Terminal Stud Insul.....	1858753	946-E-K-L-M
Washer—Terminal Stud Plain.....	826319	946-E-K-L-M
Washer—Thermostat Terminal Screw.....	24336	946-A
Washer—Third Brush Plate Spring.....	809824	946-A-B-C-D-E-F-G-H-J-L-M-N-P-R-S
MISCELLANEOUS		
BRACKET—Third Brush Terminal.....	820103	946-B-G-H
COLLAR—Outside—D.E.....	817224	946-C-E-J-K-L-M-R
COLLAR—Outside—C.E.....	1864125	946-F
COLLAR—Outside—D.E.....	809953	946-F-R
COLLAR—Inside—C.E.....	817234	946-A
COLLAR—C.E.....	811681	946-B-F-G-H
COLLAR—Outside—D.E.....	1858603	946-B-D-G-H-N-P-S
COLLAR—Outside—D.E.....	1836194	946-H
*DISTRIBUTOR Assembly.....	*634-B	946-A
Distributor Mounting BRACKET.....	816955	946-A
Distributor GEAR (Generator).....	816956	946-A
FAN—D.E. (Shipped separate for 946-A-B-G-N).....	1858604	946-B-C-D-G-J-N-P-S
FAN—C.E.....	1864264	946-H
FUSE.....	816482	946-B-G
Fuse HOLDER.....	816481	946-B-G
Fuse SPRING.....	810670	946-B-G
Fuse CONNECTOR.....	816478	946-B-G
Fuse Connector Insulation BUSHING.....	817162	946-B-G
Frame STUD.....	817093	946-A
GASKET—Ball Bearing Retainer Plate.....	1912008	946-B-C-D-E-G-J-L-N-P-R
GASKET—Ball Bearing Retainer Plate.....	819105	946-F-K-M
GASKET—Ball Bearing Retainer Plate.....	820708	946-H
GASKET—End Cover.....	817220	946-C-D-E-J-K-L-M-N-P-R-S
LEAD—Relay Connector.....	1850025	946-L-M
Main Brush PLATE.....	1873956	946-K
OILER—C.E.....	113702	946-B-C-D-E-G-J-K-L-M-N-P-R-S
OILER—D.E.....	125609	946-B-C-D-G-H-J-N-P-S
OILER—D.E.....	113702	946-E-F-H-K-L-M-R
Oil WICK—C.E.....	1947350	946-B-G
Oil WICK—C.E.....	1947350	946-C-D-E-J-K-L-M-N-P-R-S
PIN—Dowel—D.E.....	809593	946-A-B-C-D-E-G-H-J-L-N-P-R-S
PIN—Dowel—C.E.....	809062	946-A-B-C-D-E-F-G-H-J-K-L-M-N-P-R-S
PIN—Main Brush Holder Hinge.....	817313	946-B-C-D-E-F-G-H-J-L-M-N-P-R-S
PIN and Insulation—Main Brush Holder.....	812016	946-A-B-C-D-E-F-G-H-J-L-M-N-P-R-S
PIN—Main Brush Holder Stop.....	817314	946-A-B-C-D-E-F-G-H-J-L-M-N-P-R-S
PIN and Insulation—Brush Holder Stop.....	812015	946-A-B-C-D-E-F-G-H-J-L-M-N-P-R-S
PIN—Third Brush Plate Spring Washer.....	809614	946-A-B-C-D-E-F-G-H-J-L-M-N-P-R-S
PLUG—Oil Hole—C.E.....	816315	946-C-D-E-J-K-L-M-N-P-R-S
Pole SHOE.....	816950	946-A
Pole SHOE.....	816331	946-C-D-E-J-K-L-M-N-P-R-S
Pole SHOE.....	813496	946-F
Pole SHOE.....	816331	946-B-G-H
PULLEY—D.E. (Shipped separate).....	1860275	946-B
PULLEY (Shipped separate).....	1864305	946-G
PULLEY.....	1860712	946-J
PULLEY (Shipped separate).....	1867189	946-N
PULLEY.....	1867190	946-P
PULLEY.....	1871721	946-S
Resistance Ground Terminal Stud Insulating BUSHING.....	805448	946-R
Resistance Ground Terminal STUD and LEAD.....	1838150	946-R
Resistance Ground Terminal Stud CONNECTOR.....	1838151	946-R
Resistance Ground Terminal Stud Connector COLLAR.....	1838152	946-R
Terminal CLIP—Field Lead—Brush End.....	200144	946-A
Terminal CLIP—To Thermostat.....	200144	946-F
Terminal CLIP—To Ground.....	200144	946-C-D-H-J-N-P-R-S
Terminal CLIP—To Brush and Fuse.....	200182	946-B-C-D-E-F-G-H-J-K-L-N-P-R-S
Terminal CLIP—To Relay.....	200188	946-B-F-G
Terminal CLIP—To Relay.....	200154	946-C-D-E-H-J-N-P-R-S
Terminal STUD.....	1858749	946-E-K-L-M
Terminal STUD and LEAD Assem.....	1858754	946-J-L-M
Third Brush Plate Stop PIN.....	1849986	946-E
Third Brush Plate Clamp SPRING.....	1850771	946-K
Woodruff KEY—No. 6.....	124546	946-A-F
Woodruff KEY—D.E.....	124545	946-B-C-D-E-G-J-K-L-M-N-P-R-S
Woodruff KEY—D.E.....	124548	946-H

 Parts not listed in this Catalog will not be sold separately.

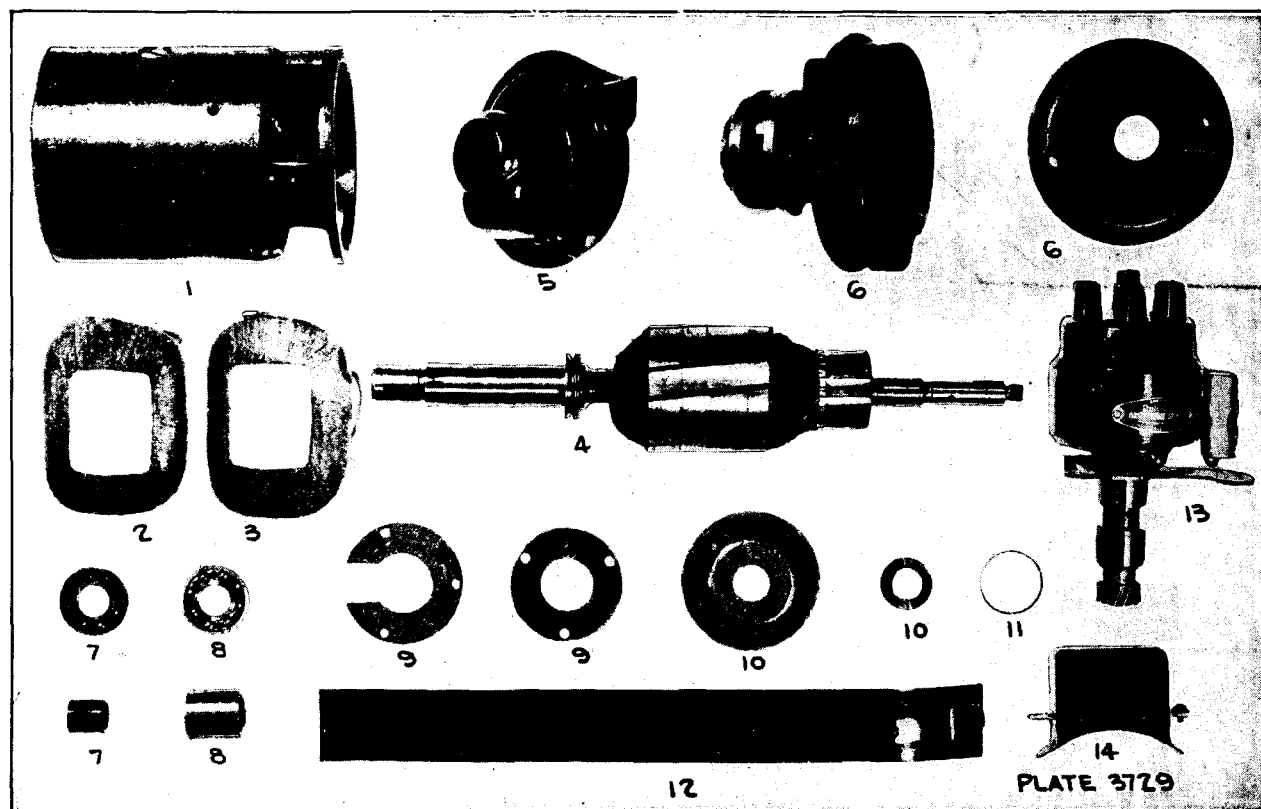

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame and Field Assembly	Field Coil to 3rd Brush	Field Coil to Thermostat or Ground	Armature	Commutator End Frame	Drive End Frame	Bearing or Bushing C.E.	Ball Bearing or Bushing D.E.	Ball Bearing or Oil Retainer Plate D.E.	Oil Baffle or Oil Ring D.E.	Oil Thrower C.E.	Commutator Cover Band	Distributor Complete	Relay
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
942-A		814978	814977	817773	817770	817775	812823	810641		816214		1861502	374-B	265-B
942-B		"	"	820620	820135	820625	"					"	637-Y	"
942-C		"	"	817773	818928	822022	"	810641		828157		"	375-C	"
942-D		"	"	"	820135	"	"	"		"		"	639-C	"
942-E		"	"	"	*1864573	817775	"	"		816214		"	635-J	"
942-F		"	"	"	"	"	"	"		"		"	635-J	"
942-G		"	"	1849419	1850400	1842981	"	901204	820707	1838047		"	629-K	265-G
942-H		"	"	"	1850410	"	"	"	"	"		"	629-T	"
942-J		"	"	"	1863213	"	"	"	"	"	1839007	"	625-C	"

 
*638-G Distributor is used for HCS.

□ For Armature having length of bearing shoulder 1 1/4" use 816214 Oil Baffle.

For Armature having length of bearing shoulder 1 1/2" use 812223 Oil Baffle.

* When replacing 825105 original die cast Commutator End Frame with 1864573 cast iron also use 1857232 Advance Arm; 820315 Ground Lead; 820107 Brush Plate Clamp; 111118 Screw and omit Distributor Support Screw and Lock Washer.

Delco-Remy
SERVICE PARTS CATALOG

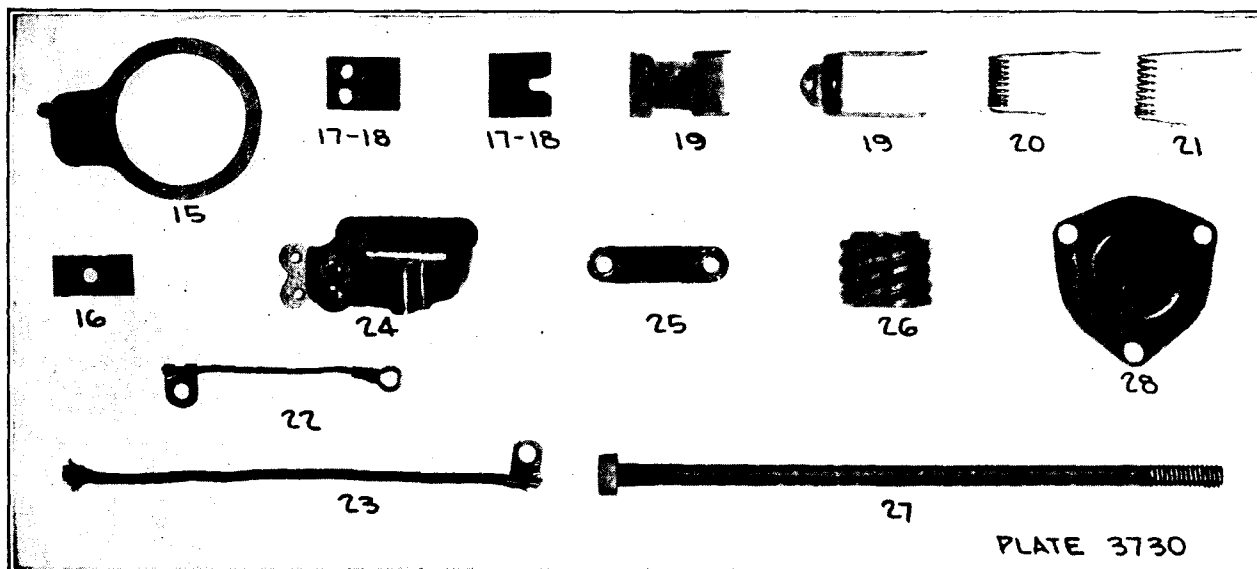

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Third Brush Plate	Third Brush Plate Clamp	Main Brush	Third Brush	Brush Holder	Brush Spring Third and Ground	Brush Spring Insulation Main	Brush Ground Lead	Brush to Relay Lead	Thermostat Assembly or Resistance Support	Resistance	Distributor Drive Gear	Thru Bolt	Dust Cap C.E.
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
942-A	809698	817532	809637	809637	809642	809644	809658	809688	809966			1842095	812201	816212
942-B	"	"	"	"	"	"	"	"	812004			820640	815018	"
942-C	"	"	"	"	"	"	"	"	"			822024	"	"
942-D	"	"	"	"	"	"	"	"	"			"	"	"
942-E	"	"	"	"	"	"	"	"	809966			1842095	"	"
942-F	"	"	820517	820517	"	"	"	"	"	1838153	1838155	"	812201	"
942-G	"	"	"	"	"	"	"	"	1847387	"	"	"	"	"
942-H	"	820107	"	"	"	"	"	820315	"	"	"	"	1849779	"
942-J	"	"	"	"	"	"	"	"	812004	"	"	1840774	"	1850320

*1850320 is flat Dust Cap. 816212 is cup shaped.
Resistance Regulator.

Revised to March 1, 1936

SERVICE PARTS CATALOG


MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer Plate Screw.....	802731	942-G-H-J
Lock Washer—Brush Attaching Screw.....	106495	All
Lock Washer—Brush Ground Lead Screw.....	802729	All
Lock Washer—Brush Ground Lead Screw.....	106496	942-J
Lock Washer—Brush Lead Screw.....	1904377	All
Lock Washer—Coil Base Attaching Screw.....	103320	942-A-B-C-D-E
Lock Washer—Distributor Clamp Screw.....	120380	All
Lock Washer—Distributor Hold Down Screw.....	120380	942-H
Lock Washer—Distributor Support Screw.....	1874495	942-G
Lock Washer—Dust Cap Screw.....	106497	All
Lock Washer—Dust Cap Screw—for Flat Plate.....	802729	942-H
Lock Washer—Field Lead Ground Screw.....	802729	942-A-B-C-D-E
Lock Washer—Gear Retainer Nut.....	110405	942-A-B-C-D-E-F-G-H
Lock Washer—Relay Mounting Screw.....	802729	All
Lock Washer—Resistance Attaching Screw.....	1904377	942-F-H-J
Lock Washer—Resistance Connector Clamp Screw.....	802729	942-F-G-H-J
Lock Washer—Resistance Ground Terminal Stud.....	802731	942-F-G-H-J
Lock Washer—Resistance Support Mounting Screw.....	106495	942-F-G-H-J
Lock Washer—Resistance Terminal Screw.....	1904377	942-F-G-H-J
Lock Washer—Shaft Nut—C.E.....	120380	942-J
Lock Washer—Third Brush Plate Clamp Screw.....	106497	All
Lock Washer—Thru Bolt.....	120638	All
NUTS		
Nut—Armature Shaft—D.E.....	1917570	942-A-B-C-D-E-F-G-H-J
Nut—Distributor Hold Down Screw.....	134551	942-H
Nut—Distributor Support Screw.....	802818	942-G
Nut—End Frame Adjusting Screw Lock.....	818430	942-B
Nut—Gear Retaining.....	122264	942-A-B-C-D-E-F-G-H-J
Nut—Resistance Ground Terminal Stud ($\frac{1}{8}$).....	5024654	942-F-G-H
Nut—Resistance Ground Terminal Stud.....	115295	942-J
BOLTS AND SCREWS		
Bolt—Distributor Clamp.....	802771	942-A-B-C-D-E
Bolt—Distributor Clamp.....	113956	942-F
Screw—Brush Attaching.....	115903	All
Screw—Brush Attaching.....	1862803	942-J
Screw—Brush Ground.....	115607	All
Screw—Brush Lead.....	141540	All
Screw—Ball Bearing Retainer Plate.....	1904370	942-G-H-J
Screw—Coil Base Attaching.....	141549	942-A-B-C-D-E
Screw—Distributor Hold Down.....	813044	942-D-E-F-G
Screw—Distributor Hold Down (Automatic Control).....	1867893	942-H
Screw—Distributor Hold Down (Manual Control).....	1847260	942-H
Screw—Distributor Hold Down.....	121815	942-J
Screw—Distributor Support.....	1844206	942-G
Screw—Dust Cap Attaching—C.E.....	1904370	All
Screw—Dust Cap—For Flat Plate.....	115607	942-H
Screw—End Frame Adjusting.....	102436	942-B
Screw—Field Lead Ground.....	115607	942-A-B-C-D-E
Screw—Pole Shoe ($\frac{3}{8}$ —24 ANF thd.).....	828675	All
Screw—Relay Mounting.....	115436	All
Screw—Resistance Attaching.....	141541	942-F-G-H-J
Screw—Resistance Ground Terminal Stud Connector.....	141594	942-F-G-H-J
Screw—Resistance Support Attaching.....	141541	942-F-G-H-J
Screw—Resistance Terminal.....	141540	942-F-G-H
Screw—Third Brush Plate Clamp.....	141543	942-A-B-C-D-E-F-G
Screw—Third Brush Plate Clamp.....	111118	942-H-J
WASHERS		
Washer—Distributor Hold Down Spring.....	813046	942-D-E-F-G-H
Washer—Distributor Hold Down Screw.....	826958	942-H-J
Washer—Felt—D.E.....	820706	942-G-H-J
Washer—Plain—Armature Shaft Nut.....	811381	942-A-B-C-D-E-F-G-H-J
Washer—Plain—Brush Attaching.....	809551	942-A-B-C-D-E-F-G-H-J
Washer—Relay Terminal Screw.....	812674	942-B
Washer—Resistance Ground Terminal Stud Fibre Bushing (.312 O.D.).....	805448	942-F-G-H-J
Washer—Resistance Ground Terminal Stud Insulation— Outside ($\frac{3}{8}$ O.D.).....	802861	942-F-G-H-J
Washer—Resistance Ground Terminal Stud Insulation.....	806818	942-J

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
WASHERS—Continued		
Washer—Resistance Ground Terminal Stud Steel ($\frac{1}{8}$ O.D.).....	834231	942-F-G-H-J
Washer—Resistance Ground Terminal Stud Steel (.406 O.D.).....	807699	942-F-G-H-J
Washer—Shim.....	810265	942-A-C-D-E
Washer—Shim.....	810935	942-A-C-D-E
Washer—Shim—D.E.....	807736	942-B
Washer—Space—Inside—D.E.....	822644	942-G-H-J
Washer—Third Brush Plate Spring.....	809824	All
Washer—Thrust—D.E.....	811099	942-B
MISCELLANEOUS		
Advance ARM Assembly.....	820317	942-D
Advance ARM Assembly (use with cast iron C.E. Frame).....	1857232	942-E
Advance ARM Assembly (use with die cast C.E. Frame).....	825107	942-E
Advance ARM Assembly.....	824877	942-F
Advance ARM Assembly.....	1842947	942-G
Advance ARM Assembly (Automatic Control).....	1877947	942-H
Advance ARM Assembly (Manual Control).....	1841061	942-H
Advance ARM Assembly.....	1838617	942-J
Advance Arm DIAL.....	815095	942-H-J
Ball Bearing Retainer Plate GASKET.....	820708	942-G-H-J
Brush Holder Hinge PIN.....	817313	942-H-J
Brush Holder Hinge PIN and INSULATION.....	812016	All
Brush Holder Stop PIN.....	817314	942-H-J
Brush Holder STOP PIN and INSULATION.....	812015	All
Coil Adapter BASE.....	811467	942-A-C
Coil Adapter BASE.....	816344	942-B-D-E
Distributor Hold Down SPRING.....	813045	942-C-E-F-G
Distributor Hold Down SPRING.....	827234	942-H
Distributor SUPPORT.....	820137	942-B-D-F
Distributor SUPPORT.....	825109	942-E
Distributor SUPPORT.....	1842983	942-G
Distributor Well PLUG—C.E.....	103865	942-H
Dowel PIN—C.E.....	809062	All
Dowel PIN—D.E.....	809593	All
Dowel PIN (Bushing).....	1849200	942-A-E-H-J
Dowel PIN (Bushing)—D.E.....	809640	942-A-F
Dust Plate GASKET—C.E.—For Cupped Plate.....	1835457	942-A-B-C-D-E-F-G-H
Dust Plate GASKET—C.E.—For Flat Plate.....	1850321	942-A-E-F-H-J
Felt Washer Retainer PLATE.....	820709	942-G-H-J
Field Lead CLIP—To Resistance.....	831187	942-H
Low Tension LEAD.....	811837	942-F
Oil BAFFLE—D.E.....	816214	942-A-E-F
Oil BAFFLE—D.E.....	828157	942-C-D
Oil Hole PLUG—C.E.....	103884	942-A-B-C-D-E-F-G-H-J
Oil Hole PLUG—D.E.....	811878	942-A-C-D-E-F
OILER—C.E.....	113702	942-B-C-D-H-J
OILER—C.E.....	114998	942-A-E-F-G-H-J
OILER—D.E.....	113702	942-G
Oil WICK—D.E.....	802696	942-A-C-D-E-F
Oil Wick PIN.....	114877	942-A-C-D-E-F
Oil WICK and SPRING—C.E.....	809591	942-A-B-C-D-E-F-G-H-J
Pipe PLUG.....	103865	942-J
Pole SHOE.....	816331	942-A-B-C-D-E-F-G-H-J
Relay Ground SPRING.....	820421	942-A-C
Relay Lead BUSHING.....	812891	All
Relay Lead CLIP.....	200181	942-A-B-C-D-E-F-G-H
Relay Lead CLIP.....	200154	942-H-J
Resistance Ground Terminal CONNECTOR.....	1838151	942-F-G-H-J
Resistance Ground Terminal STUD and LEAD Assembly.....	1838150	942-F-G-H-J
Resistance Ground Terminal Stud INSULATION—Inside.....	806818	942-F-G
Resistance Ground Terminal Stud Space COLLAR.....	1838152	942-F-G-H-J
Space COLLAR—Between Oil Baffle and Ball Bearing.....	1839007	942-G-H
Space COLLAR—Outside—D.E.....	1842982	942-G-H-J
Third Brush Plate Spring Washer PIN.....	809614	All
Terminal CLIP—To Brush.....	200182	942-J
Terminal CLIP—To Resistance.....	200144	942-J
Woodruff KEY (Gear)—C.E.....	124542	942-A-B-C-D-E-F-G-H-J
Woodruff KEY—D.E.....	103906	942-A-B-D-F-G-H-J

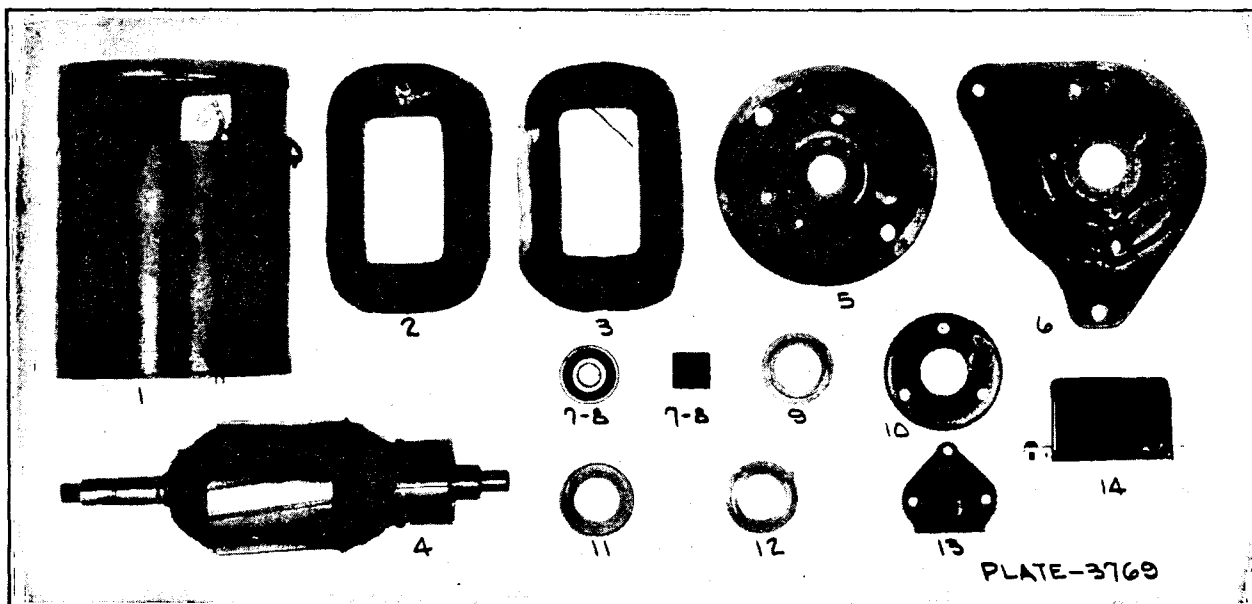 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame and Field Assembly	Field Coil to Third Brush	Field Coil to Thermostat or Ground	Armature	Commutator End Frame	Drive End Frame	Ball Bearing or Bushing C.E.	Ball Bearing or Bushing D.E.	Ball Bearing Retainer Plate C.E.	Ball Bearing Retainer Plate D.E.	Space Cup or Felt Washer Retainer C.E.	Felt Washer Retainer Plate or Cup D.E.	Commutator End Cover Plate	Relay
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
953-D		814978	814977	817799	1849981	816469	954519	954378		1911263		819104	815868	265-B
953-E		"	"	1841365	814980	817592	954378	817117	809960		814984	810259	816212	265-G
953-G		814978	"	1873534	1908871	1841472	812823	901204		820707		820709	820524	"
953-H		1843411	"	1843403	814980	816469	954378	954378	809960	1911263		819104	814985	265-B
953-J		814978	814977	1873534	1908871	1841472	812823	901204		820707		820709	820524	265-B
953-K		824604	824603	1844698	817513	825403	954519	954378	809960	1911263			815868	267-D
953-L		1835628	1835627	1835629	814980	816469	954378	"	"	"		819104	814985	"
953-M		814978	814977	1845808	818420	1843731	812823	901204		820707		1837371	820524	265-B
953-N		"	"	828520	1908871	817879	"	954378		1911263		819104	"	265-B
953-P		824604	824603	1845978	1845819	1839475	954378	"		817500	809960		814985	267-D
953-R		814978	814977	1847673	1845819	1845821	"	901204		820707		820709	816212	265-B
953-S		"	"	817807	1908871	817223	812823	954378		1911263		819104	820524	265-G
953-T		1835269	1853506	1853509	1853520	1843014	"	"		"		"	"	265-H
953-U		816241	816240	1847673	1854889	1845821	954378	901204		820707		820709	816212	265-B
953-V		1835269	1853506	1855590	1849981	817879	954519	954378		1911263		819104	815868	"
953-W		"	1853506	1855609	1849971	817775	954378	810641	809960				814985	"
953-X		820912	820911	1855594	1849984	817879	954519	954378		1911263		819104	815868	267-D
953-Y		814978	814977	1855679	1837644	1855682	954378	954517	809960	1855689		825196	814985	265-B
953-Z		824604	824603	1855594	1849981	817879	954519	954378		1911263		819104	815868	267-D

Delco-Remy
SERVICE PARTS CATALOG

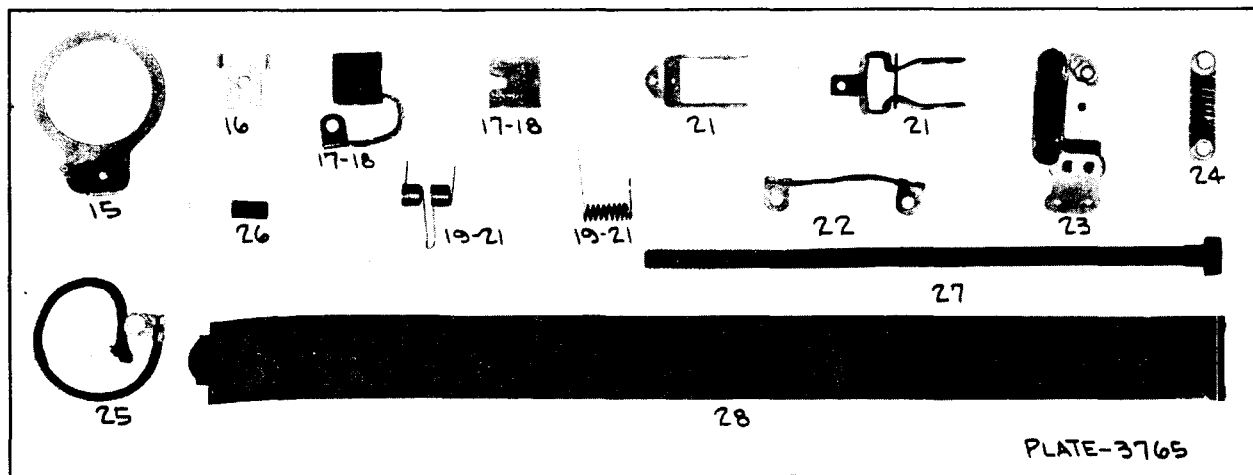 


PLATE-3765

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Third Brush Plate	Third Brush Plate Clamp	Main Brush	Third Brush	Brush Spring Insu- lated Main	Brush Spring Third and Ground	Brush Holder	Brush Ground Lead	Thermo- stat	Thermo stat Resist- ance	Relay Lead	Relay Lead Rushing	Thru Bolt	Commu- tator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
953-D	809698	817532	820517	820517	809658	809644	809642	809688	814994	810922	812004	812891	1908680	816340
953-E	"	"	"	"	"	"	"	"	"	"	809966	"	1908680	"
953-G	"	"	"	"	"	"	"	"	824726	807180	809966	"	1915090	"
953-H	"	"	"	"	"	"	"	"	"	"	"	"	1908680	"
953-J	809698	817532	820517	820517	809658	809644	809642	809688	814994	810922	812004	"	1915090	816340
953-K	"	"	809637	809637	"	"	"	"	817910	817911	812004	"	"	"
953-L	"	"	"	"	"	"	"	"	814994	810922	"	"	1908680	"
953-M	1837026	"	812715	812715	812712	812712	812711	809688	816496	807180	809966	"	"	"
953-N	809698	"	820517	820517	809658	809644	809642	"	816496	807180	809966	"	"	"
953-P	"	"	809637	809637	"	"	"	"	1838153	1838155	816411	"	"	"
953-R	"	"	820517	820517	"	"	"	"	814994	810922	812004	"	"	1872638
953-S	"	"	"	"	"	"	"	"	824726	807180	812004	"	"	816340
953-T	1909151	1850770	1866148	1850768	1903871	1946798	809642	809688	816260	810922	809966	"	1915090	1872638
953-U	809936	817532	820517	820517	809644	809658	"	"	"	"	812004	"	1908680	816340
953-V	809698	"	"	"	809658	809644	"	"	"	"	"	"	"	"
953-W	"	"	"	"	"	"	"	"	"	"	809966	"	"	"
953-X	809936	"	809637	809637	809644	809658	"	"	816260	810922	809966	"	"	"
953-Y	809698	"	820517	820517	809658	809644	"	"	1835571	817911	812004	"	1927071	"
953-Z	"	"	809637	809637	"	"	"	"	814994	810922	"	"	815012	"

Revised to July 1, 1968

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
COLLARS		
Oil Throwing COLLAR—Inside—C.E.	811681	953-P-W-Y
Oil Throwing COLLAR—Outside—D.E.	1845822	953-R
Oil Throwing COLLAR—Outside—D.E.	1843732	953-M
Oil Throwing COLLAR—Outside—D.E.	1853095	953-T
Oil Throwing COLLAR—Outside—D.E.	1854891	953-U
Resistance Ground Terminal Space COLLAR	1838152	953-P
Space COLLAR—Outside—C.E.	815049	953-Y
Space COLLAR—Outside—C.E.	815012	953-P
Space COLLAR—Outside—D.E.	1839476	953-P
Space COLLAR—Outside—C.E.	820394	953-H
Space COLLAR—Outside—D.E.	809953	953-H-X-Z
Space COLLAR—Outside—D.E.	816349	953-K
Space COLLAR—Outside—D.E.	813281	953-D-L
Space COLLAR—Outside—D.E.	818015	953-D
Space COLLAR—Outside—D.E.	810653	953-N
Space COLLAR—Outside—D.E.	824608	953-L
Space COLLAR—Outside—D.E.	1836194	953-G-J
Space COLLAR—Outside—D.E. (Sleeve)	816350	953-K
Space COLLAR—Outside—D.E. (Sleeve)	828521	953-N
Space COLLAR—Outside—C.E.	817224	953-L-S-V-W
KEYS		
Woodruff KEY—No. 8— $\frac{3}{4}$ " Diameter	103906	953-G-J-R-U-W
Woodruff KEY—No. 5— $\frac{5}{8}$ " Diameter	103905	953-H-S-V
Woodruff KEY—D.E.	106749	953-E-T
Woodruff KEY—C.E.	124546	953-L-P-W-X-Z
LOCK WASHERS		
Armature Shaft Guard LOCK WASHER	9421427	953-L
Armature Shaft Nut LOCK WASHER	1915265	953-V
Armature Shaft Nut LOCK WASHER	141556	953-X-Z
Ball Bearing Retainer Plate Screw LOCK WASHER	1962276	953-D-H-K-L-M-N-P-R-S-T-U-V-X-Z
Ball Bearing Retainer Plate Screw LOCK WASHER	453435	953-G-J-Y
Brush Attaching Screw LOCK WASHER— $6-3/64 \times 1/32$	456413	All
Brush Lead Screw LOCK WASHER— $6-143 \times 3/32 \times 1/32$	1914816	All
Brush Ground Screw LOCK WASHER	453844	953-M-U-X
Brush Plate Attaching Screw LOCK WASHER	453844	953-X
End Frame Cover Screw LOCK WASHER	453435	953-D-E-H-K-L-P-U-V-W-Y-Z
End Frame Cover Screw LOCK WASHER	453844	953-G-J-M-N-S-T
Field Lead Ground Screw LOCK WASHER	453844	953-M-T-V-W
Fuse Holder LOCK WASHER	802729	953-Y
Relay Attaching Screw LOCK WASHER	453844	All
Relay Terminal Screw LOCK WASHER	453844	953-T
Resistance Attaching Screw LOCK WASHER	1914816	953-P
Resistance Regulator Mounting Screw LOCK WASHER	141550	953-P
Resistance Terminal Screw LOCK WASHER	1914816	953-P
Resistance Ground Terminal Stud Nut LOCK WASHER	1962276	953-P
Resistance Ground Terminal Connector Clamp Screw LOCK WASHER	453844	953-P
Thermostat Resistance Screw LOCK WASHER	1914816	953-D-E-G-H-J-K-L-N-R-S-U-X-Y-Z
Thermostat Mounting Screw LOCK WASHER	141550	953-D-E-G-H-J-K-L-N-R-S-U-X-Y-Z
Thermostat Terminal Screw LOCK WASHER	1914816	953-D-E-G-H-J-K-L-N-R-S-U-X-Y-Z
Third Brush Clamp Screw LOCK WASHER	141552	All except 953-T
Thru Bolt LOCK WASHER	9421424	All except 953-R-Z
Thru Bolt LOCK WASHER	141556	953-R-Z
NUTS		
Armature Shaft NUT—D.E.	1917035	953-E
Armature Shaft NUT—D.E.	1917540	953-G-J-L-R-U
Armature Shaft NUT—D.E.	1915172	953-H-S-V
Armature Shaft NUT—D.E.	272073	953-T
Armature Shaft NUT—D.E.	1841367	953-W
Armature Shaft NUT	122264	953-X-Z
Ball Bearing Retainer NUT	1917035	953-E
Resistance Ground Terminal NUT	5024654	953-P


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
PINS		
Coupling PIN.....	820711	953-P
Main Brush Holder PIN.....	817313	All except 953-T-U
Main Brush Holder PIN and Insulation.....	812016	All except 953-T
Main Brush Holder Stop PIN.....	817314	All except 953-M-U
Main Brush Holder Stop PIN.....	818400	953-M
Main Brush Holder Stop PIN and Insulation.....	812829	953-M
Main Brush Holder Stop PIN and Insulation.....	812015	All except 953-T-M
Brush Holder Cotter PIN.....	107761	953-M
Dowel PIN—D.E.....	809593	All
Dowel PIN—C.E.....	809062	All
Bushing Dowel PIN.....	809640	953-E-W
Oil Wick PIN.....	114877	953-W
Third Brush Plate Stop PIN.....	1849986	953-D-K
Third Brush Spring Washer PIN.....	809614	953-D-E-G-H-J-K-L-M- N-P-R-S-U-V-W-X-Y-Z
Shaft Nut Cotter PIN.....	31411	953-L
SCREWS		
Brush Attaching SCREW—6-32 x 1/2.....	454154	All
Brush Lead SCREW—6-32 x 5/16.....	454329	953-M
Brush Lead SCREW—6-32 x 3/16.....	453978	All except 953-M-T
Brush Lead Attaching SCREW.....	141542	953-T
Brush Ground SCREW.....	115607	953-M-U-X
Brush Plate Attaching SCREW—Main.....	115434	953-T
Ball Bearing Retainer Plate SCREW—D.E.....	1914580	All except 953-D-R-U
Ball Bearing Retainer Plate SCREW—D.E.....	100763	953-D
Ball Bearing Retainer Plate SCREW—D.E.....	5017850	953-R-U
Commutator Cover Band SCREW.....	132923	953-R-U
End Frame Cover SCREW—C.E.....	1914580	953-D-E-K-L-P-R-U-V- W-X-Y-Z
End Frame Cover SCREW—C.E.....	115607	953-G-J-M-N-S-T
Field Lead Ground SCREW—8-32.....	115607	953-L-T-V-W
Pole Piece SCREW—3/4-24 Thread.....	1913960	All
Relay Mounting SCREW.....	115436	All
Relay Terminal SCREW.....	453418	953-T
Resistance Attaching SCREW.....	454329	953-P
Resistance Ground Terminal Clamp SCREW.....	141594	953-P
Resistance Regulator Terminal SCREW.....	453978	953-P
Resistance Regulator Mounting SCREW.....	454329	953-P
Thermostat Mounting SCREW.....	454329	All except 953-P-M-T-V-W
Thermostat Resistance SCREW.....	141542	All except 953-P-M-T-V-W
Thermostat Terminal SCREW—6-32 x 3/16.....	453978	953-D-E-G-H-J-K-N-R-S- Y-Z
Third Brush Clamp SCREW.....	141602	953-T
Third Brush Clamp SCREW—10-32 x 5/4.....	9416183	All except 953-L-T
Third Brush Clamp SCREW.....	811622	953-L
WASHERS		
Armature Shaft Nut WASHER—D.E.....	1914589	953-E-G-W
Armature Shaft Nut WASHER.....	1934383	953-J-R-U
Armature Shaft Nut WASHER.....	1926782	953-L
Armature Shaft Nut WASHER.....	1938744	953-T-X-Z
Ball Bearing Space WASHER—D.E.....	809945	953-D-H-K-L-N-P-S-T-V- X-Z
Ball Bearing Space WASHER—Inside—D.E.....	822644	953-G-J-M-R-U
Ball Bearing Space WASHER—Inside—D.E.....	1845626	953-Y
Brush Arm WASHER.....	1857412	953-T
Brush Screw WASHER.....	809551	All
Felt WASHER—D.E.....	809961	953-G-M-P-S-T-V-X-Z
Felt WASHER—D.E.....	820706	953-D-H-J-K-L-N-R-U
Felt WASHER—D.E.....	810258	953-E
Felt WASHER—D.E.....	825197	953-Y
Felt WASHER—C.E.....	815042	953-H-L-P-W-Y
Guard WASHER.....	810411	953-L
Oil Thrower WASHER.....	816348	953-K
Resistance Ground Terminal Stud Insulation WASHER—Outside.....	802861	953-P
Resistance Ground Terminal Stud Plain WASHER—Outside.....	1902988	953-P
Resistance Ground Terminal Stud Insulation WASHER—Inside.....	806818	953-P
Resistance Ground Terminal Stud Plain WASHER—Inside.....	807699	953-P
Third Brush Plate Spring WASHER.....	809824	All

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS		
Ball Bearing Retainer Plate GASKET.....	819105	953-H-K-L-N-S-T-V-X-Z
Ball Bearing Retainer Plate GASKET.....	820708	953-G-J-M-R-U
Ball Bearing Retainer Plate GASKET.....	1855690	953-Y
Ball Bearing Retainer Plate GASKET.....	1912008	953-D
Brush ARM.....	1904365	953-T
COUPLING—D.E.....	1839478	953-P
CLIP—Relay End.....	200181	All except 953-S
CLIP—Relay End.....	200154	953-G-S-T-U-X
CLIP—To Relay.....	200182	953-Z
CLIP—Brush End.....	200182	All except 953-S
CLIP—Brush End.....	200181	953-S-T-V-W-X-Y-Z
CLIP—Field Lead—Third Brush.....	200144	All
End Cover Plate GASKET.....	1835457	953-P-U
End Frame Cover GASKET.....	817220	953-G-J-M-N-S-T
End Frame Cover GASKET.....	1844012	953-D-K-V-X-Z
FRAME and BASE.....	816466	953-D
Field Lead CLIP (Brush End).....	200144	All
FUSE.....	816482	953-Y
Fuse SPRING.....	810670	953-Y
Fuse HOLDER.....	816481	953-Y
Main Brush Plate ASSEMBLY.....	1850748	953-T
Oil BAFFLE.....	1839477	953-E-P
Oil BAFFLE.....	820547	953-R-U
Oil BAFFLE—D.E.....	1848704	953-Y
Oil BAFFLE.....	816214	953-W
Oil BAFFLE.....	1837897	953-M
OILER—D.E.....	113702	953-D-G-H-J-L-M-N-P-R-S-T-U-V-X-Z
OILER—C.E.....	113702	953-M-N-T
OILER—C.E.....	114998	953-D-E-H-K-L-P-R-U-V-W-X-Z
OILER—C.E. and D.E.....	1838433	953-Y
Oil Hole PLUG.....	811878	953-W
Oil WICK—C.E.....	1947350	953-G-J-M-N-S-T
Oil WICK—C.E.....	1919851	953-D-E-H-K-L-P-R-U-V-W-X-Z
Oil WICK.....	802696	953-W
Oil Wick PLUG—C.E.....	816315	953-G-J-M-N-S-T
Pole PIECE.....	813496	All except 953-G-H-S
Pole PIECE.....	1849018	953-G-H-S
Relay COVER.....	813158	All
Resistance Ground Terminal Stud BUSHING.....	805448	953-P
Resistance Ground Terminal CONNECTOR.....	1838151	953-P
Shaft GUARD.....	824607	953-L
Third Brush Plate Clamp SPRING.....	1850771	953-T

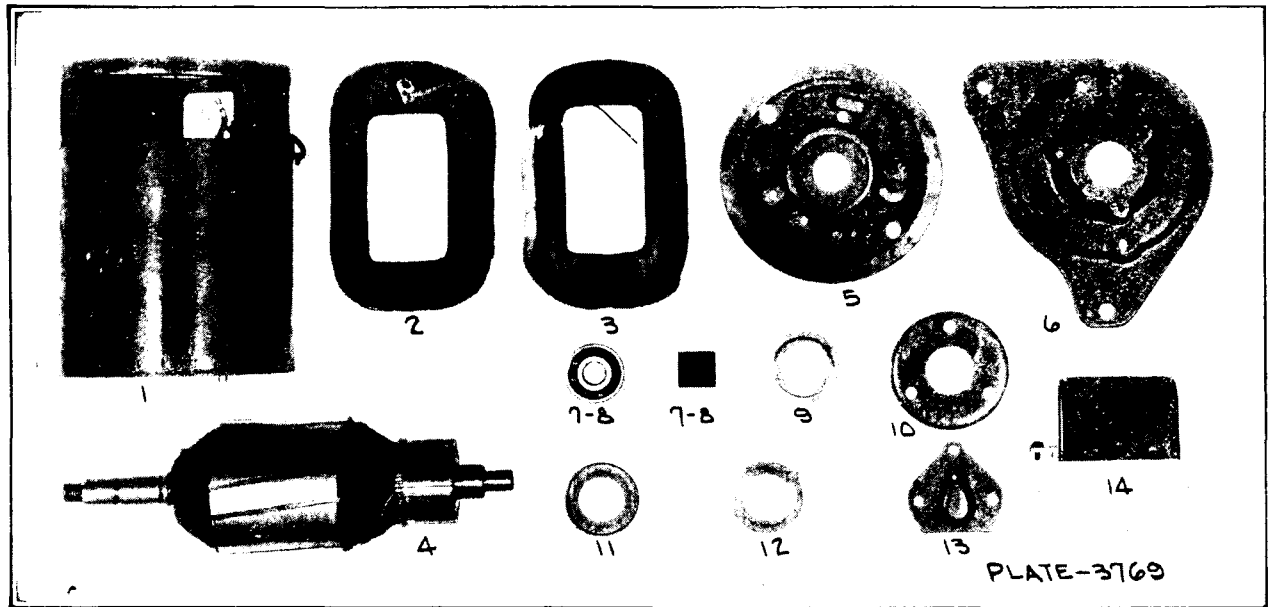 


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame Field Assembly	Field Coil to Third Brush	Field Coil to Control Unit or Thermostat	Armature	Commutator End Frame	Drive End Frame	Ball Bearing or Bushing C.E.	Ball Bearing or Bushing D.E.	Ball Bearing Retainer Plate C.E.	Ball Bearing Retainer Plate D.E.	Space Cup or Felt Washer Retainer C.E.	Felt Washer Retainer Plate D.E.	Commutator End Cover Plate	Relay or Control Unit
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
939-A		†1902101	†	1853483	1845819	816469	954378	954378		1911263	809960	819104	814985	5540
939-B		"	†	1857748	"	816210	"	810641	814984		"		816212	"
939-C		"	†	1857599	"	815015	"	954378		817500	"	809960	814985	"
939-D		†1902103	†	1857792	"	1837920	"	817117	814984		"	810259	816212	267-E
939-E		†1902103	†	1847673	1845819	1858464	"	901204		820707		820709	"	265-B
939-F		"	†	817877	1849981	817879	954519	954378		1911263		819104	815868	"
939-G		"	†	1862141	1908871	"	812823	"		"		"	1914222	"
939-H		†1902103	†	820909	1845819	816210	954378	810641	809960		1855702		816212	267-A
939-J		"	†	1864558	1864090	1841472	908503	901204		820707		820709		267-E
939-K		†1902104	†	1835629	1845819	817879	954378	954378		1911263	809960	819104	814985	267-D
939-L		†1902103	†	1865502	"	1837920	"	817117	814984		"	810259	816212	267-E
939-M		"	†	1880350	1878431	1866947	812823	901204		820707		820709	1914222	*5586
939-N		†1902101	†	1847673	1845819	1845821	954378	"		"		"	816212	*5540
939-P		"	†	"	1854889	"	"	"		"		"	"	"
939-R		"	†	"	"	"	"	"		"		"	"	270-C
939-S		"	†	"	1845819	"	"	"		"		"	"	"
939-T		†1902102	†	817877	1849981	817879	954519	954378		1911263		819104	815868	"
939-U		†1902101	†	817807	1908871	1908869	812823	"		"		"	1914222	265-G
939-V		†1902103	†	828167	1859576	1859579	"	"		"		"	"	267-D
939-X		†1902101	†	1883074	1908871	1841472	"	901204		820707		820709	"	265-G
939-Y		†1902103	†	1863682	1849981	1837640	954519	"		"		1837371	815868	267-D

*For parts see Control Unit—Group 3.

†1902101, 1902102, 1902103 & 1902104 are Field Coil Sets (2 coils).

 Delco-Remy
SERVICE PARTS CATALOG

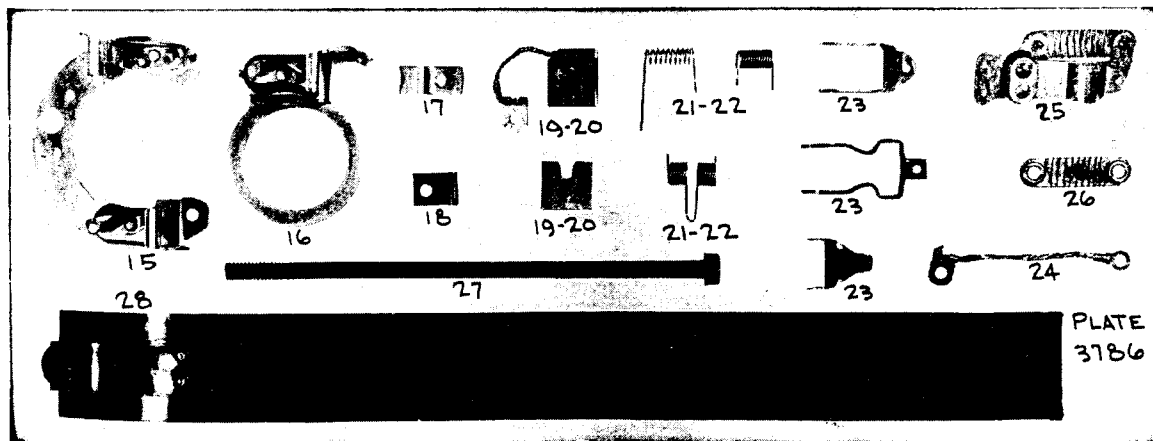

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Main Brush Plate	Thrd Brush Plate	Thrd Brush Plate Clamp	Thrd Brush Plate Clamp Spring	Main Brush	Thrd Brush	Main Brush Spring	Thrd or Ground Brush Spring	Brush Holder or Arm	Brush Ground Lead	Thermostat	Thermostat Resistance	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
939-A	-----	809698	817632	-----	820517	820517	809658	809644	809642	809688	-----	-----	1908680	816340
939-B	-----	"	"	-----	"	"	"	"	"	"	-----	-----	"	"
939-C	-----	"	"	-----	"	"	"	"	"	"	-----	-----	"	"
939-D	-----	"	"	-----	809637	809637	"	"	"	"	814994	810922	"	"
939-E	-----	"	"	-----	820517	820517	"	"	"	"	"	"	"	1872638
939-F	-----	"	"	-----	"	-----	"	"	"	"	-----	-----	"	"
939-G	-----	"	"	-----	"	-----	"	"	"	"	-----	-----	"	1861502
939-H	-----	"	"	-----	809637	-----	"	"	"	"	814994	810922	"	816340
939-J	-----	"	"	-----	1845987	1845987	820101	820100	1845988	820315	-----	-----	1915090	1861502
939-K	-----	"	"	-----	809637	809637	809658	809644	809642	809688	814994	810922	1908680	"
939-L	-----	"	"	-----	"	"	"	"	"	"	817910	817911	817593	"
939-M	-----	"	"	-----	"	"	"	"	"	"	-----	-----	1908680	"
939-N	-----	"	"	-----	820517	820517	"	"	"	"	-----	-----	"	1872638
939-P	-----	809936	"	-----	"	"	809644	809658	"	"	-----	-----	"	"
939-R	-----	"	"	-----	"	"	"	"	"	"	-----	-----	1915090	"
939-S	-----	809698	"	-----	○	○	809658	809644	"	"	-----	-----	1908680	"
939-T	-----	"	"	-----	820517	820517	"	"	"	"	-----	-----	"	1861502
939-U	-----	"	"	-----	"	"	"	"	"	"	824726	807180	"	"
939-V	-----	"	"	-----	809637	809637	"	"	"	"	†1838153	1838155	"	"
939-X	-----	"	"	-----	820517	-----	"	"	"	"	824726	807180	1915090	"
939-Y	-----	"	"	-----	809637	-----	"	"	"	"	817910	817911	"	"

†Resistance Regulator Assembly.

○Use 1880998 Brush Set.

Revised to March 15, 1971

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Ball Bearing Retainer Plate Screw LOCK WASHER.....	453435	939-J-X
Ball Bearing Retainer Plate Screw LOCK WASHER.....	1962276	939-A-C-E-F-G-K-M-N-P-R-S-T-U-V-Y
Brush Attaching Screw LOCK WASHER.....	456413	939-A-B-C-D-E-F-G-H-K-L-M-N-P-R-S-T-U-V-X-Y
Brush Attaching Screw LOCK WASHER.....	22817	939-J
Brush Lead Screw LOCK WASHER.....	1914816	939-A-B-C-D-E-F-G-H-J-K-L-M-N-P-R-S-T-U-V-X-Y
Control Unit Mounting Screw LOCK WASHER.....	138479	939-A-B-C-M-N-P
End Cover Plate Screw LOCK WASHER.....	453435	939-A-B-C-D-E-F-H-K-L-N-P-S-T-Y
End Cover Plate Screw LOCK WASHER.....	453844	939-M-U-V-X
End Cover Plate Screw LOCK WASHER.....	1904377	939-R
Ground Screw LOCK WASHER.....	453844	939-G-R
Relay Mounting Screw LOCK WASHER.....	453844	939-D-E-F-G-H-J-K-L-R-S-U-V-X-Y
Relay Terminal Screw LOCK WASHER.....	453844	939-L-R-S-U
Resistance Regulator Ground Terminal Stud LOCK WASHER.....	1962276	939-V
Resistance Regulator Ground Connector Screw LOCK WASHER.....	453844	939-V
Shaft Guard LOCK WASHER.....	9421427	939-K
Shaft Nut LOCK WASHER.....	9421424	939-E
Shaft Nut LOCK WASHER.....	1915265	939-F-J-M-T-U-V
Terminal Stud Nut LOCK WASHER.....	1914579	939-F-G-R-S-T
Third Brush Plate Clamp Screw LOCK WASHER.....	453435	939-A-B-C-D-E-F-G-H-J-K-L-M-N-P-R-S-T-U-V-X-Y
Thru Bolt LOCK WASHER.....	9421424	939-A-B-C-D-G-H-J-K-L-M-N-P-R-S-T-U-V-X-Y
Thermostat Attaching Screw LOCK WASHER.....	456413	939-D-E-H-K-L-U-V-X-Y
Thermostat Resistance Screw LOCK WASHER.....	1914816	939-D-E-H-K-L-U-V-X-Y
Thermostat Terminal Screw LOCK WASHER.....	1914816	939-D-E-H-K-L-U-V-X-Y
Field Lead Screw LOCK WASHER.....	453844	939-J
NUTS		
Ball Bearing Retainer NUT—C.E.....	114496	939-B-D-H-L
Cover Band Screw NUT.....	453433	939-E-F-N-P-R-S
Resistance Ground Terminal Stud NUT.....	453433	939-V
Shaft NUT—D.E.....	1917570	939-B-D-E-H-J-K-P-R-S-Y
Shaft NUT—D.E.....	1915172	939-F-G-J-M-T-U-V
Shaft NUT—D.E.....	1841367	939-L-X
Terminal Stud NUT.....	121743	939-G-R-S-T
SCREWS		
Ball Bearing Retainer Plate SCREW—D.E.....	1904829	939-A-C-E-F-G-H-J-K-M-N-P-S-T-U-V-X
Ball Bearing Retainer Plate SCREW—D.E.....	1904370	939-Y
Brush Attaching SCREW—Main.....	9417096	939-J
Brush Attaching SCREW—Third.....	9417096	939-J
Brush Attaching SCREW.....	1862803	939-A-B-C-D-E-F-G-H-K-L-M-N-P-R-S-T-U-V-X-Y
Brush Lead Attaching SCREW.....	453978	939-A-B-C-D-E-F-G-H-K-L-M-N-P-R-S-T-U-V-X-Y
Commutator Cover Band SCREW.....	132143	939-E-N P-R-S
Control Unit Mounting SCREW.....	132900	939-A-B-C-M-N-P
End Cover Plate SCREW.....	1914579	939-A-B-C-D-E-F-K-L-N-P-R-S-T-Y
End Cover Plate SCREW.....	453418	939-M-R-U-V-X
End Cover Plate SCREW.....	132900	939-P-R
Ground SCREW—Field Lead.....	453418	939-F-G-J-R
Pole Shoe SCREW.....	1843646	All
Pole Shoe SCREW.....	1914570	939-Y
Relay Mounting SCREW.....	131958	939-D-E-F-H-J-K-L-R-S-U-V-X-Y
Relay Terminal SCREW.....	1881998	939-L-U
Relay Terminal SCREW.....	453418	939-S
Resistance Regulator Ground Connector SCREW.....	132760	939-V
Thermostat Attaching SCREW.....	454329	939-D-E-H-K-L-U-V-X-Y
Thermostat Resistance SCREW.....	141541	939-D-E-H-K-L-U-V-X-Y
Thermostat Terminal SCREW.....	453978	939-D-E-H-K-L-U-V-X-Y
Third Brush Plate Clamp SCREW.....	9416183	939-A-B-C-D-E-F-G-H-L-M-N-P-R-S-T-U-V-X-Y
Third Brush Plate Clamp SCREW.....	142729	939-J-M
Third Brush Plate Clamp SCREW—Hex.....	811622	939-K

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
WASHERS		
Brush Attaching Screw Plain WASHER.....	809551	All
Control Unit Mounting Screw Plain WASHER.....	1856056	939-A-B-C-M-N-P
Felt WASHER—C.E.....	815042	939-A-C-K
Felt WASHER—D.E.....	820706	939-E-J-M-N-P-R-S-X-Y
Felt WASHER—D.E.....	809961	939-A-C-F-G-K-T-U-V
Felt WASHER—D.E.....	810258	939-D-L
Resistance Regulator Ground Terminal Stud WASHER.....	807699	939-V
Resistance Regulator Ground Terminal Stud Insulation WASHER.....	806818	939-V
Resistance Regulator Ground Terminal Stud Bushing WASHER.....	825190	939-V
Resistance Regulator Ground Terminal Stud WASHER—Outside.....	802861	939-V
Resistance Regulator Ground Terminal Stud WASHER—Plain.....	1902988	939-V
Shaft Guard Plain WASHER.....	810411	939-K
Shaft Nut Plain WASHER.....	1926782	939-B-H-K
Shaft Nut Plain WASHER.....	1934383	939-D-E-N-P-R-S-Y
Shaft Nut Plain WASHER.....	1914589	939-J-L-X
Space WASHER—D.E.—Inside.....	809945	939-A-C-F-G-K-T-U-V
Space WASHER—D.E.—Inside.....	822644	939-E-J-M-N-P-R-S-X-Y
Third Brush Plate Spring WASHER.....	809824	939-A-B-C-D-E-F-G-H-J-K-L-M-N-P-R-S-T-U-V-X-Y
Terminal Stud Ins. WASHER.....	1858753	939-G-R-S-T
Terminal Stud WASHER.....	826319	939-G-R-S-T
MISCELLANEOUS PARTS		
Brush Holder Hinge PIN.....	817313	939-A-B-C-D-E-F-G-J-K-L-M-N-S-T-U-V-X-Y
Brush Holder Stop PIN.....	817314	939-A-B-C-D-E-F-G-J-K-L-M-N-S-T-U-V-X-Y
Brush Holder Hinge PIN and INSULATION.....	812016	939-A-B-C-D-E-F-G-J-K-L-M-N-P-R-S-T-U-V-X-Y
Brush Holder Stop PIN and INSULATION.....	812015	939-A-B-C-D-E-F-G-J-K-L-M-N-P-R-S-T-U-V-X-Y
BUSHING—For Relay Lead.....	812891	939-A-B-C-D-E-F-H-K-L-M-N-P-U-V-X-Y
COUPLING.....	812090	939-C
Coupling PIN.....	820711	939-C
Cotter PIN.....	31411	939-K
Dowel PIN—For Bushing.....	809640	939-B-D-H-L
Dowel PIN—C.E.....	809062	All
Dowel PIN—D.E.....	809593	939-A-B-C-D-E-F-H-J-K-L-M-N-P-R-U-V-X-Y
FAN—C.E.....	1864264	939-J
FRAME and BASE.....	1853487	939-A
GASKET—Ball Bearing Retainer Plate.....	1912008	939-A-F-G-K-T-U-V
GASKET—Ball Bearing Retainer Plate.....	820708	939-E-J-N-P-R-S-X-Y
GASKET—End Cover Plate.....	1835457	939-B-D-E-H-L-N-P-R-S
GASKET—End Cover Plate.....	1844012	939-F-T
GASKET—End Cover Plate.....	817220	939-G-M-U-V-X
*Generator Space PLATE.....	1864841	939-K
LEAD—Brush to Relay.....	812004	939-A-B-C-F-H-K-U-Y
LEAD—Brush to Relay.....	809966	939-D-L-N-V
LEAD—Brush to Relay.....	809966	939-E-X
LEAD—Brush to Relay.....	1856609	939-P-X
LEAD—Relay Ground.....	812653	939-M
OILER—D.E.....	113702	939-A-E-F-G-J-K-N-P-R-S-T-U-V-X-Y
OILER—C.E.....	113702	939-M-U-V-X
OILER—C.E.....	1880642	939-A-B-C-D-E-F-H-K-L-N-P-R-T-Y
OILER—C.E.....	125609	939-J-M
Oil WICK—C.E.....	1919851	939-A-B-C-D-E-F-H-K-L-N-P-R-T-Y
Oil WICK—D.E.....	802696	939-B-H
Oil WICK.....	1947350	939-G-M-U-V-X
Oil Wick PIN.....	114877	939-B-H
Oil Hole PLUG—D.E.....	811878	939-B-H
Oil Hole PLUG—C.E.....	816315	939-G-M-U-V-X


*Shipped separate.

Revised to March 15, 1971

SERVICE PARTS CATALOG

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
Oil Throwing COLLAR.....	1845822	939-E-N-P-S
Oil Throwing COLLAR.....	1854891	939-P-R
Oil Throwing COLLAR.....	1838185	939-Y
Oil BAFFLE.....	820457	939-B-E-H-N-P-R-S
Oil BAFFLE.....	1837897	939-Y
Oil BAFFLE—Outside—D.E.....	1919657	939-X
Pole SHOE.....	816331	939-A-B-C-D-E-F-H-J-K-L-M-N-P-R-S-T-U-V-X-Y
Pole SHOE.....	1862140	939-G
Relay Connector LEAD.....	1869871	939-R
Relay Connector LEAD.....	1914187	939-R-S
Relay COVER.....	1859786	939-R-S
Relay Cover CLAMP.....	1859787	939-R-S
Resistance Regulator Terminal CONNECTOR.....	1838151	939-V
Resistance Regulator Terminal Connector Space COLLAR.....	1838152	939-V
Resistance Regulator Ground Terminal STUD and LEAD.....	1838150	939-V
Shaft SLEEVE—D.E.—Outside.....	1869793	939-A
Shaft SLEEVE.....	824608	939-K
Shaft GUARD.....	824607	939-K
Space COLLAR—C.E.—Inside.....	811681	939-A-B-C-D-H-J-K
Space COLLAR—C.E.—Outside.....	815049	939-A
Space COLLAR—D.E.—Outside.....	809953	939-C
Space COLLAR—D.E.—Outside.....	813281	939-A-K-L
Space COLLAR—C.E.—Outside.....	815012	939-C
Space COLLAR—D.E.—Outside.....	817224	939-F-G-K-T-U-V
Space COLLAR—Outside—C.E.....	1858603	939-J
Space COLLAR—Outside—D.E.....	1836194	939-J
Space COLLAR—Outside—D.E.....	1863561	939-M
Terminal CLIP—To Main Brush and Field.....	200181	939-A-B-C-D
Terminal CLIP—To Third Brush and Ground.....	200182	939-D-E-F-G-H-J-K-L-M-N-P-R-S-T-U-V-X-Y
Terminal CLIP—To Third Brush.....	1857108	939-A-B-C
Terminal CLIP—To Generator Terminal or Relay.....	200188	939-A-B-C-H-K-M-N
Terminal CLIP—To Field or Relay.....	200154	939-A-D-E-F-J-L-M-U-X
Terminal CLIP—To Thermostat.....	200144	939-E-F
Terminal CLIP—To R.H. to Relay.....	200188	939-N-V-Y
Terminal CLIP—To Control Unit.....	200154	939-N
Terminal CLIP—To Main Brush.....	200144	939-P-U-X
Terminal CLIP—To Control Unit.....	200181	939-P
Terminal STUD and LEAD Assem.....	1858754	939-G-R-S-T
Terminal STUD Only.....	1858749	939-G-R-S-T
Third Brush Plate Stop PIN.....	1849986	939-A-B-H
Third Brush Plate Spring Washer PIN.....	809614	939-A-C-D-E-F-G-H-J-K-L-M-R-S-T-U-V-X-Y
Third Brush Terminal BRACKET.....	820103	939-J
Woodruff KEY—D.E.....	124548	939-B-E-H-J-N-P-R-S-X-Y
Woodruff KEY—C.E.....	124546	939-A-C-D-K
Woodruff KEY—D.E.....	124545	939-F-G-M-T-U-V
Woodruff KEY—D.E.....	125543	939-D-L

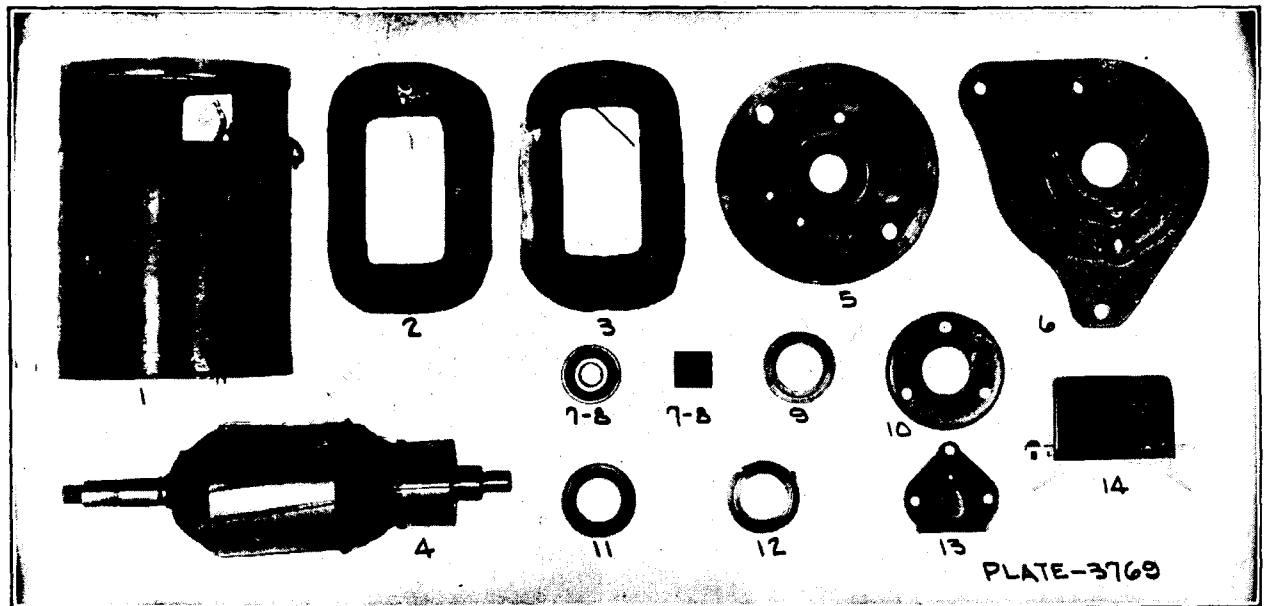 


Illustrations are of Typical Parts only, which may vary in detail. For Parts not illustrated see Minor Parts Section

Model No.	Frame and Field Assembly	Field Coil to Third Brush	Field Coil	Armature	Commutator End Frame	Drive End Frame	Ball Bearing or Bushing —C.E.	Ball Bearing or Bushing —D.E.	Ball Bearing Retainer Plate —C.E.	Ball Bearing Retainer Plate —D.E.	Felt Washer Retainer Plate —C.E.— Outside	Felt Washer Retainer Plate —D.E.	Commutator End Cover Plate	Control Unit or Relay
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
967-A		1838577	1845109	1836971	*1836969	1839441	812823	954378		1911263		819104	820524	264-F
967-B		"	"	"	1841923	817223	"	"		"		"	"	264-D
967-C		"	"	"	817216	"	"	"		"		"	"	265-H
967-D		"	"	"	"	"	"	"		"		"	"	"
967-E		"	"	"	"	"	"	"		"		"	"	"
967-G		"	"	1853544	1853547	1853549	954378	954521		820707		820709	816212	265-G
967-J		828453	828454	1854143	1840707	1854144	812823	"		"		1837371	820524	265-H
967-L		1838577	1853523	1855966	1856146	1855740	"	954378		1911263		809960	"	5544
967-M		"	1855982	1844827	1855962	817879	"	"		"		819104	"	265-S
967-N		1856139	1856141	"	1856146	"	"	"		"		"	"	5548
967-P		1838577	1853523	1836971	1850746	1866419	"	954378		"		"	820524	5550
967-R		816324	816325	1856630	1856478	1854144	"	954521		820707		1837371	820524	265-U
967-S		1837040	1857406	1857410	1857409	816210	954378	810641	814984				816212	5540
967-T		816324	816325	1856630	1840707	1854144	812823	954521		820707		1837371	820524	265-G
967-U		1837040	1857406	1856994	1856988	1856996	954378	"		"		820709	816212	5540
967-V		816324	816325	1845816	1845819	1845821	"	"		"		"	"	265-B
967-W		821443	821444	1842504	1849981	817879	954519	954378		1911263		819104	815868	267-D
967-X		"	"	1858543	1849971	1837920	954378	817117	814984		809960	810259	816212	267-E
967-Y		828453	828454	1848618	817529	1841472	812823	954521		820707		820709	820524	265-G
967-Z		1859090	1859091	1859092	1859068	"	908503	"		"		"	"	5540

*Use 1849930 Commutator End Frame when Fuse is used.

 ‡5595 Control Unit with heavy duty relay is used on later model generators.

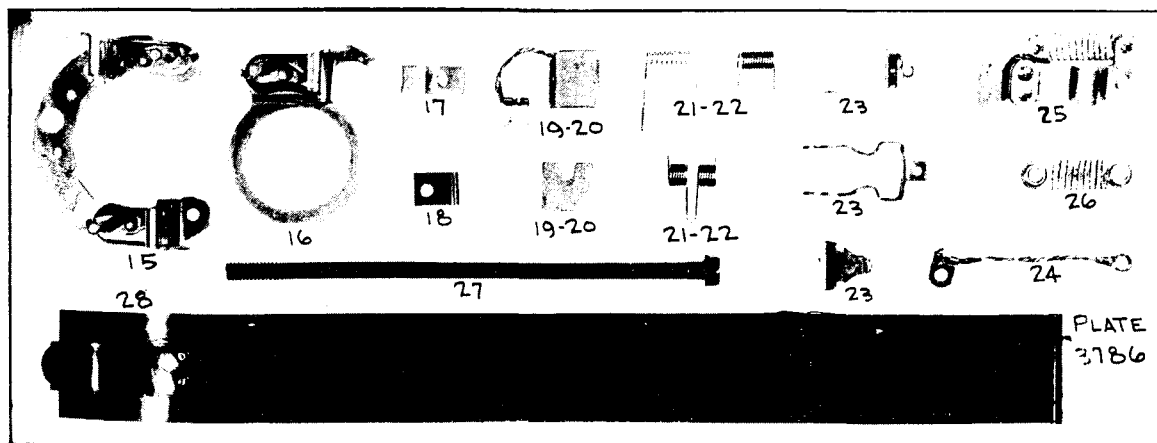

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Main Brush Plate	Thrd Brush Plate	Thrd Brush Plate Clamp	Thrd Brush Plate Clamp Spring	Main Brush	Thrd Brush	Main Brush Spring	Thrd or Ground Brush Spring	Brush Holder or Arm	Brush Ground Lead	Thermostat	Thermostat Resistance	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
967-A		1837026	817532		1836970	812715	812712	812712	812711				809763	816340
967-B		"	"		812715	"	"	"	"		820768	807180	"	"
967-C		809698	"		1845987	35288	820101	820100	1845988	820315	824726	"	"	"
967-D		"	"		"	"	"	"	"	"	"	"	"	"
967-E		"	"		"	"	"	"	"	"	"	"	"	"
967-G		809698	817532		820517	820517	809658	809644	809642	809688	†1838153	1838155	809763	"
967-J		1837026	"		812715	812715	812712	812712	812711		816496	807180	812291	"
967-L	1850748	1850763	1850770	1850771	1866148	1850768	1850760	1850767	1850759				"	"
967-M	1853020	"	"	"	"	"	"	"	"				"	"
967-N	1850748	"	"	"	"	"	"	"	"				"	"
967-P	"	"	"	"	"	"	"	"	"				809763	1856151
967-R		1837026	817532		812715	812715	812712	812712	812711		1856503	807180	812291	816340
967-S	1856989	1856990	1850770	1850771	1866148	1850768	1856992	1856993	1850759				"	"
967-T		1837026	817532		812715	812715	812712	812712	812711		816496	807180	"	"
967-U		1856989	1856990	1850770	1850771	1866148	1850768	1856992	1856993	1850759			"	"
967-V		809698	817532		820517	820517	809658	809644	809642	809688	814994	810922	"	†1845823
967-W		"	"		809637	809637	"	"	"	"	816496	807180	809763	816340
967-X		"	"		"	"	"	"	"	"	"	"	818800	"
967-Y		"	"		820517	820517	"	"	"	"	814994	810922	812291	"
967-Z	1873956	1850763	1857187	1850771	1866148	1850768	1850760	1850767	1850759				"	"

†Resistance Regulator.

‡Half of band.

816340 is 14 $\frac{1}{4}$ " long. 1861502 which is 14 $\frac{1}{4}$ " long is used on later models.

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Ball Bearing Retainer Plate Screw LOCK WASHER.....	802731	All except 967-Z
Ball Bearing Retainer Plate Screw LOCK WASHER.....	106497	967-Z
Brush Lead Attaching Screw LOCK WASHER.....	802730	All
Brush Ground Lead Screw LOCK WASHER.....	802729	967-A-B-J-T
Brush Attaching Screw LOCK WASHER—2 Hole.....	22817	967-C-D-E
Brush Attaching Screw LOCK WASHER.....	106495	967-G-V-W-Y
Control Unit Mounting Screw LOCK WASHER.....	138479	967-L-P-S-U-Z
Control Unit Mounting Screw LOCK WASHER.....	106496	967-N
Control Unit Terminal Screw LOCK WASHER.....	106496	967-L-N-U
Control Unit Terminal Screw LOCK WASHER.....	121841	967-P
End Cover Plate Screw LOCK WASHER.....	802729	All except 967-S-U-V-W
End Cover Screw LOCK WASHER.....	106497	967-G-S-U-V-W-X
Fan Attaching Screw LOCK WASHER.....	118874	967-P
Field Lead Ground Screw LOCK WASHER.....	802729	967-A
Fuse Holder LOCK WASHER.....	802763	967-A-B-M
Fuse Holder Screw LOCK WASHER.....	802729	967-A-B
Fuse Stop Plate Attaching Screw LOCK WASHER.....	802730	967-M
Fuse Stop Plate Terminal Screw LOCK WASHER.....	802730	967-M
Main Brush Plate Attaching Screw LOCK WASHER.....	106496	967-L-M-N-P-S-Z
Relay Terminal Screw LOCK WASHER.....	802729	967-B-J-M-R
Relay Mounting Screw LOCK WASHER.....	802729	967-A-B-C-D-E-G-J-M-T-V-W-X-Y
Resistance Ground Terminal Nut LOCK WASHER.....	802731	967-G
Resistance Ground Terminal Stud Connector Clamp LOCK WASHER.....	802729	967-G
Resistance Screw LOCK WASHER.....	802730	967-G
Regulator Attaching Screw LOCK WASHER.....	106495	967-G
Regulator Terminal Screw LOCK WASHER.....	802730	967-G
Shaft Nut LOCK WASHER.....	106496	967-W
Shaft Nut LOCK WASHER.....	804000	967-A-B-C-D-E-P-Z
Terminal Stud Nut LOCK WASHER.....	802731	967-R
Thermostat Attaching Screw LOCK WASHER.....	106495	967-B-C-D-E-J-R-T-V-W-X-Y
Thermostat Resistance Screw LOCK WASHER.....	802730	967-B-C-D-E-J-R-T-V-W-X-Y
Thermostat Terminal Screw LOCK WASHER.....	802730	967-B-C-D-E-J-R-T-V-W-X-Y
Third Brush Clamp Screw LOCK WASHER.....	106497	967-A-B-C-D-E-G-J-L-M-P-R-S-T-U-V-W-X-Y
Third Brush Clamp Screw LOCK WASHER.....	106496	967-Z
Thru Bolt LOCK WASHER.....	108579	All
NUTS		
Ball Bearing Retainer NUT.....	114496	967-S-X
Cover Band Screw NUT.....	120614	967-V
Resistance Ground Terminal Stud NUT.....	115295	967-G
Set Screw NUT.....	124824	967-D
Shaft NUT—C.E.....	806915	967-A-B-C-D-E-P-Z
Shaft NUT—D.E.....	1917570	967-G-J-R-S-T-U-V-X-Y-Z
Shaft NUT.....	122264	967-W
Terminal Stud NUT.....	5024654	967-R
SCREWS		
Ball Bearing Retainer Plate SCREW.....	115431	All
Brush Ground Lead SCREW.....	115607	967-A-B-J-T
Brush Lead Attaching SCREW.....	141541	967-A-J-R
Brush Lead Attaching SCREW.....	141542	967-B-L-M-N-P-Z
Brush Lead Attaching SCREW.....	141540	967-C-D-E-G-T-V-W-X-Y
Brush Attaching SCREW—Main.....	820102	967-C-D-E
Brush Attaching SCREW—Third.....	820102	967-C-D-E
Brush Attaching SCREW—Third.....	115903	967-G-V-W-X-Y
Commutator Cover Band SCREW.....	115556	967-P
Commutator Cover Band SCREW.....	132923	967-V
Control Unit Mounting SCREW.....	121832	967-N
Control Unit Mounting SCREW.....	132900	967-L-N-P-S-U-Z
Control Unit Terminal SCREW.....	121832	967-L-N-U
End Cover Plate SCREW.....	115607	All except 967-L-S-U-V-W
End Cover Plate SCREW.....	115434	967-L-W
End Cover Plate SCREW.....	115431	967-G-S-U-V-X
Fan Attaching SCREW.....	132964	967-V-P
Field Lead Ground SCREW.....	115607	967-A
Fuse Holder SCREW.....	141547	967-A-B
Fuse Stop Plate Attaching SCREW.....	107697	967-M-R
Fuse Stop Plate Terminal SCREW.....	141540	967-M
Main Brush Plate Attaching SCREW.....	115434	967-L-M-N-P-S-U-Z
Oil Filler Tube Set SCREW.....	102719	967-D


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
SCREWS—Continued		
Pole Shoe SCREW.....	828675	All
Relay Mounting SCREW.....	115436	967-A-B-C-D-E-G-J-M-R-T-V-W-X-Y
Relay Terminal SCREW.....	121749	967-B-J-R
Relay Terminal SCREW.....	115607	967-M
Relay Terminal SCREW.....	121832	967-A
Resistance Connector Clamp STUD—Ground Terminal.....	141594	967-G
Resistance Regulator Attaching SCREW.....	141541	967-G
Resistance Regulator Terminal SCREW.....	141540	967-G
Third Brush Plate Clamp SCREW.....	141543	967-A-B-C-D-E-G-J-R-T-V-W-X-Y
Third Brush Plate Clamp SCREW.....	141602	967-L-M-N-P-S-U
Third Brush Plate Clamp SCREW.....	115434	967-Z
Thermostat Attaching SCREW.....	141541	967-B-C-D-E-J-R-T-V-W-X-Y
Thermostat Resistance Attaching SCREW.....	141542	967-B-C-D-E-G-J-R-T-V-W-X-Y
Thermostat Terminal SCREW.....	141540	967-B-C-D-E-J-R-T-V-W-X-Y
WASHERS		
Ball Bearing Space WASHER.....	809960	967-S
Brush Attaching Screw WASHER.....	809551	967-V-W-X-Y
Brush Arm Space WASHER.....	1857412	967-L-M-N-P-S-U-Z
Control Unit Mounting Screw Plain WASHER.....	1856056	967-L-N-P-S-U-Z
Felt WASHER—D.E.....	809961	967-A-B-C-D-E-G-L-M-N-P-W
Felt WASHER—D.E.....	820706	967-G-J-R-T-U-V-Y-Z
Felt WASHER—D.E.....	810258	967-X
Fuse Stop Plate Attaching Screw Insulation WASHER.....	834398	967-M
Fuse Stop Plate Attaching Screw Plain WASHER.....	833960	967-M
Resistance Ground Terminal Stud WASHER—Inside.....	807699	967-G
Resistance Ground Terminal Stud Insulation WASHER—Inside.....	806818	967-G
Resistance Ground Terminal Stud Bushing WASHER.....	805448	967-G
Resistance Ground Terminal Stud Insulation WASHER.....	802861	967-G
Resistance Ground Terminal Stud WASHER—Outside.....	834231	967-G
Shaft Nut WASHER—D.E.....	807405	967-S
Shaft Nut Plain WASHER.....	811381	967-G-J-R-T-U-V-X
Shaft Nut Plain WASHER.....	834750	967-W
Shaft Nut Plain WASHER.....	30205	967-Y-Z
Space WASHER—D.E.—Inside.....	809945	967-A-B-C-D-E-L-M-N-P-W
Space WASHER—D.E.—Inside.....	822644	967-G-J-T-U-V-Y-Z
Space WASHER—D.E.—Inside.....	822645	967-R
Terminal Stud Insulating WASHER—Outside.....	802861	967-R
Terminal Stud Plain WASHER—Outside.....	834231	967-R
Terminal Stud WASHER (Bent)—Inside.....	807699	967-R
Terminal Stud Insulation WASHER—Inside (Bent).....	806818	967-R
Third Brush Plate Spring WASHER.....	809824	967-B-C-D-E-G-J-R-T-V-W-X-Y
MISCELLANEOUS		
Ball Bearing Retainer Plate GASKET.....	1912008	967-P-E
Ball Bearing Retainer Plate GASKET.....	819105	967-A-B-C-D-L-M-N-W
Ball Bearing Retainer Plate GASKET.....	820708	967-G-J-R-T-U-V-Y-Z
Brush Holder Spring Washer PIN.....	809614	967-A-B-C-D-E-J-R
Brush Holder Cotter PIN.....	107761	967-A-J-R-T
Brush Holder Hinge PIN.....	817313	967-A-B-C-D-E-G-J-T-V-W-X-Y
Brush Holder Hinge PIN and INSULATION.....	812016	967-A-B-C-D-E-G-J-R-T-V-W-X-Y
Brush Holder Stop PIN.....	818400	967-A-B-J-T
Brush Holder Stop PIN.....	817314	967-C-D-E-G-V-W-X-Y
Brush Holder Stop PIN and INSULATION.....	812829	967-A-B-J-R-T
Brush Holder Stop PIN and INSULATION.....	812015	967-C-D-E-G-V-W-X-Y
Dowel PIN—C.E.....	809062	All
Dowel PIN—D.E.....	809593	All
Dowel PIN—For D.E. Bushing.....	809640	967-S-X
End Cover Plate GASKET.....	917220	All except 967-S
End Cover GASKET.....	1835457	967-G-S-U-V-X
End Cover GASKET.....	1844012	967-W
FAN.....	1859069	967-Z
FAN Only.....	1856968	967-P
FRAME and BASE.....	1841849	967-W
FUSE.....	816482	967-A-B-M
Fuse HOLDER.....	816481	967-A-B-M
Fuse SPRING.....	810670	967-A-B-M
Fuse Stop Insulation PLATE.....	1855964	967-M
Fuse Stop PLATE.....	1855965	967-M
Generator BRACKET.....	1850722	967-C for Chevrolet

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
Generator BRACKET.....	1850808	967-C for Olds
Generator BRACKET.....	1850807	967-D for Pontiac
OILER.....	113702	All
OILER—C.E.....	114998	967-V-W-X
OILER—C.E.....	125609	967-Z
Oil Filler Tube ADAPTOR.....	1850821	967-D
Oil BAFFLE.....	816348	967-L
Oil BAFFLE—D.E.....	820547	967-U-V
Oil BAFFLE.....	816214	967-S
Oil Hole PLUG.....	816315	All except 967-S
Oil Hole PLUG.....	811878	967-S
Oil WICK.....	804076	All except 967-S
Oil WICK—C.E.....	802692	967-V-W-X
Oil WICK—C.E.....	804077	967-G-S-U
Oil WICK—D.E.....	802696	967-S
Oil Wick PIN.....	114877	967-S
Oil Throwing COLLAR.....	811681	967-S
Oil Throwing COLLAR—D.E.....	1854891	967-U
Oil Throwing COLLAR—Outside—D.E.....	1845822	967-V
Pole SHOE.....	816323	967-A-G-S-U-X-Y
Pole SHOE.....	1849756	967-B-C-D-E-J-L-M-N-P-R-T-Z
PULLEY—Chevrolet.....	1850140	967-C
PULLEY—Pontiac.....	1850849	967-D
PULLEY—Chrysler.....	1857154	967-P
Relay COVER.....	1848740	967-A-B
Resistance Ground TERMINAL and LEAD.....	1838150	967-G
Resistance Ground Terminal Stud CONNECTOR.....	1838151	967-G
Resistance Ground Terminal Space COLLAR.....	1838152	967-G
Relay LEAD.....	812234	967-A-B
Relay LEAD.....	810397	967-C-D-E-W-X
Relay LEAD.....	1847387	967-J-M-R-T
Relay LEAD.....	1856609	967-L-S-Y
Relay LEAD.....	812004	967-V-P
Relay LEAD.....	809966	967-G-U
Relay LEAD.....	821449	967-Z
Relay Shunt LEAD.....	812004	967-R
Relay Lead BUSHING.....	812891	All
Shaft SLEEVE.....	1858457	967-L
Shaft SLEEVE.....	828521	967-M-N
Space COLLAR.....	817224	967-A-B-C-D-E-P
Space COLLAR.....	822645	967-J-R-T
Space COLLAR.....	816349	967-L
Space COLLAR.....	810653	967-M-N
Space COLLAR.....	809953	967-W
Space COLLAR.....	1853550	967-G
Space COLLAR—D.E.—Outside.....	1836194	967-Y-Z
Space COLLAR—C.E.—Inside.....	811681	967-Y-Z
Terminal CLIP—Relay Lead to Thermostat.....	200144	967-R
Terminal CLIP—To Relay or Control Unit.....	200188	967-A-B-L-N-V
Terminal CLIP—To Relay or Control Unit.....	200154	967-C-D-E-G-J-N-M-P-R-T-W-X
Terminal CLIP—To Brush.....	200182	All
Terminal CLIP—Field Lead to Brush.....	200181	967-A-S-V-W
Terminal CLIP—To Ground or Thermostat.....	200188	967-A-C-D-E-G
Terminal CLIP—To Ground or Thermostat.....	200144	967-J-R-T-V-Y
Terminal CLIP—To Main Brush.....	200144	967-S-U
Terminal CLIP—To Third Brush.....	1857108	967-G-S-V
Terminal CLIP—To Third Brush.....	200144	967-J-P-R-T
Terminal CLIP—To Generator Terminal.....	200154	967-S-U-W-Z
Terminal CLIP—To Generator Terminal.....	200188	967-Z
Terminal CLIP—To Field Terminal.....	200181	967-U
Terminal STUD and LEAD.....	1838150	967-R
Terminal Stud Insulation BUSHING.....	805448	967-R
Thermostat—to L.H. Main Brush LEAD.....	1838636	967-R
Third Brush Spring Washer PIN.....	809614	967-A-B-C-D-E-G-J-T-V-W-X-Y
Third Brush Plate Stop PIN.....	1840738	967-B-J-R-T
Third Brush Terminal BRACKET.....	820103	967-C-D-E
Woodruff KEY.....	103905	967-A-B-C-D-E-P-Z
Woodruff KEY.....	103906	967-J-R-T-U-V-Y-Z
Woodruff KEY—D.E.....	124546	967-X

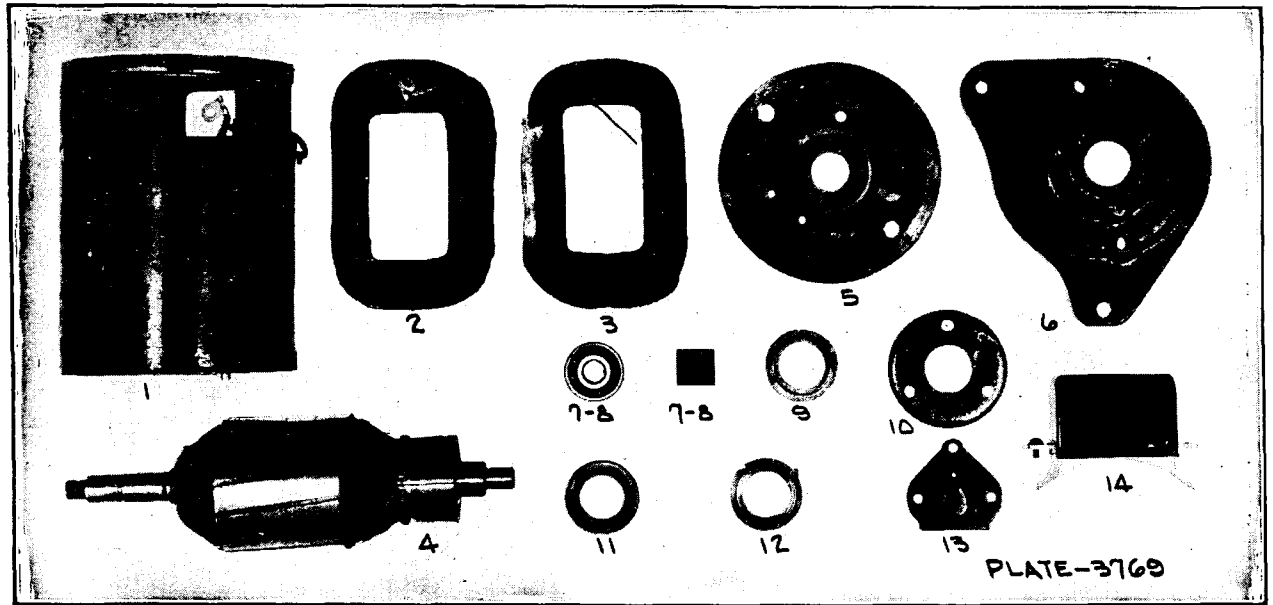 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame and Field Assembly	Field Coil to Third Brush	Field Coil to Thermostat Resistance or Ground	Armature	Commutator End Frame	Drive End Frame	Ball Bearing or Bushing C.E.	Ball Bearing or Bushing D.E.	Ball Bearing Retainer Plate C.E.	Ball Bearing Retainer Plate D.E.	Space Cup or Felt Retainer C.E.	Felt Washer Retainer Plate or Cup D.E.	Cover Plate C.E.	Relay
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
973-B		1845251	1845252	1845257	1845255	1845263	954378	903204		1905807	37078	820709	816212	265-G
973-D		"	"	1847357	"	1847359	"	954517		1905643	"	825196	"	"
973-E		"	1848575	"	1847254	"	"			"	"	"	"	"
973-F		"	"	1845257	"	1849444	"	903204		1905807	"	820709	"	"
973-G		1850067	1850068	1847357	"	1847359	"	954517		1905643	"	825196	"	"
973-H		"	"	1856495	1856488	1849277	"	"		"	"	"	"	267-A
973-J		1845251	1848575	1857467	"	1845702	"	"		"	"	"	"	265-C
973-K		1857596	1857595	1857597	1857512	1849277	"	"		"	"	"	"	267-A
973-L		1845251	1866494	1866495	1866498	1847359	908503	"		"	"	"	"	5816
973-M		"	1869724	1869725	1869728	1869729	"	1869730		1869730			1869826	†

*See Generator Package 1869867 for mounting parts—In Generator Package Sheet.

†1869729 Drive End Frame has been redesigned to use:

- 125609 Oiler,
- 908505 Single Shielded Ball Bearing,
- 1866075 Ball Bearing Retainer Plate,
- 1872049 Ball Bearing Retainer Plate Gasket,
- 1878233 Space Washer (Inside—D.E.).

The part number of the package including 1869729 Drive End Frame and all of the above parts for making this change is 1878234.

†Control Unit not part of Generator. See Generator Package No. 1869735.

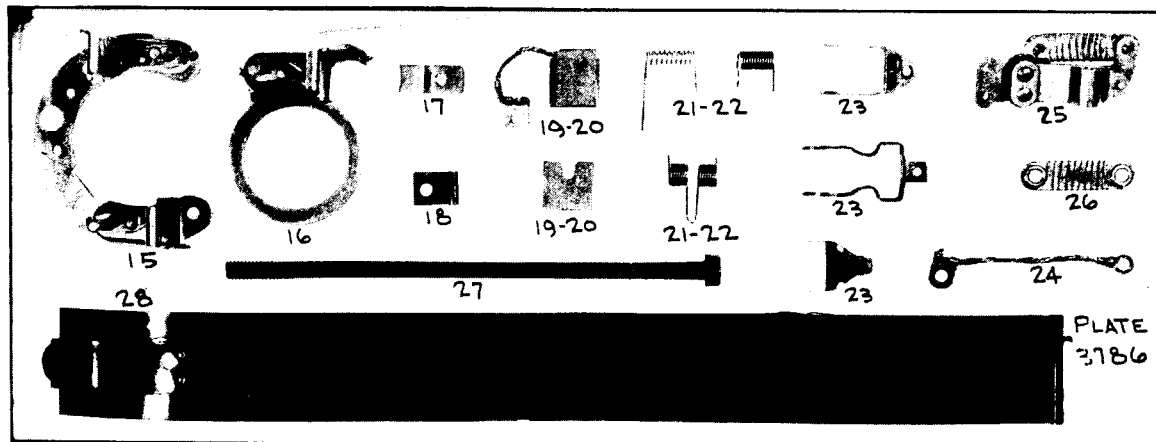 


PLATE
3786

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Main Brush Plate	Third Brush Plate	Third Brush Plate Clamp	Third Brush Plate Clamp Spring	Main Brush	Third Brush	Main Brush Spring	Third or Ground Brush Spring	Brush Holder or Arm	Brush Ground Lead	Thermostat	Thermostat Resistance	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
973-B		1842769	1843965		829073	829073	812712	812712	812711		820531	807180	812291	1842763
973-D		"	"		"	"	"	"	"		"	"	"	"
973-E		"	"		"	"	"	"	†	"			"	"
973-F		"	"		"	"	"	"	†	"			"	"
973-G		"	"		"	"	"	"	†	"			"	"
973-H	1856491	1856439	1905082	1856500	1856494	1850768	1903871	1850767	1850769				"	"
973-J	"	"	"	"	"	"	"	"	"				"	"
973-K	1857513	1857514	"	"	"	"	1903870	1856993	"				"	"
973-L	1857213	1856489	1857187	"	"	1850786	1903871	1850767	"				1845053	"
973-M	"				"		"		"				818300	"

†1844684 Grounded Brush Holder.