

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Ball Bearing Retainer Plate Screw LOCK WASHER.....	106497	All except 973-H-J-K
Ball Bearing Retainer Plate Screw LOCK WASHER.....	802731	973-II-J-K-M
Brush Lead Ground Screw LOCK WASHER.....	802729	973-B-D-E-F-G
Brush Lead Attaching Screw LOCK WASHER.....	1904377	973-B-D-E-F-G-H-J-K-L
Brush Plate Attaching Screw LOCK WASHER.....	106497	973-H-J-K-L-M
Control Unit Mounting LOCK WASHER.....	138479	973-L
End Cover Screw LOCK WASHER.....	106497	All
Fuse Connector Clamp Screw LOCK WASHER.....	106497	973-H-J-K
Relay Mounting Screw LOCK WASHER.....	802729	973-B-D-H
Shaft Nut LOCK WASHER.....	804000	973-L-M
Terminal Stud Nut LOCK WASHER.....	1874493	973-E-F-G-H-J-K-M
Thermostat Resistance Screw LOCK WASHER.....	1904377	973-B-D
Thermostat Attaching Screw LOCK WASHER.....	106495	973-B-D
Thermostat Terminal Screw LOCK WASHER.....	1904377	973-B-D
Third Brush Plate Clamp Screw LOCK WASHER.....	106497	All
Third Brush Plate Clamp Screw LOCK WASHER.....	106496	973-L
Thru Bolt LOCK WASHER.....	120638	All
Shaft Nut LOCK WASHER (use with 1872967 Pulley).....	138571	973-M
Wiring Harness Clamp Screw LOCK WASHER.....	120380	973-M
NUTS		
Shaft NUT—D.E.....	1917570	973-D-E-G-H-J-K-L
Terminal Stud NUT.....	134551	973-E-F-G-H-J-K-M
Shaft NUT—C.E.....	806915	973-L
Shaft NUT—D.E.....	806915	973-M
Shaft NUT—D.E. (use with 1872967 Pulley).....	1872968	973-M
SCREWS		
Ball Bearing Retainer Plate SCREW.....	141602	973-B-D-E-F-G-H-J-K-L
Ball Bearing Retainer Plate SCREW.....	1866970	973-M
Brush Lead Ground SCREW.....	115607	973-B-D-E-F-G
Brush Lead Attaching SCREW.....	141541	973-B-D-E-F-G-M
Brush Lead Attaching SCREW.....	141542	973-H-J-K-L
Brush Plate Attaching SCREW (Main).....	1866970	973-H-J-K-L-M
Control Unit Mounting SCREW.....	132900	973-L
End Cover Attaching SCREW.....	1866970	All
Fuse Connector Clamp Attaching SCREW.....	142210	973-H-J-K
Pole Shoe SCREW.....	1864510	All except 973-L
Relay Mounting SCREW.....	115436	973-B-D-H
Third Brush Plate Clamp SCREW.....	142729	All
Third Brush Plate Clamp SCREW.....	141602	973-H-J-K
Third Brush Plate Clamp SCREW.....	115434	973-L
Thermostat Resistance SCREW.....	141542	973-B-D
Thermostat Attaching SCREW.....	141541	973-B-D
Thermostat Terminal SCREW.....	141540	973-B-D
Wiring Harness Clamp SCREW.....	132243	973-M
WASHERS		
Brush Arm Space WASHER.....	1857412	973-H-J-K-L-M
Control Unit Mounting Screw WASHER.....	1901454	973-L
Felt WASHER—C.E.....	37077	973-B-D-E-F-G-H-J-K-L
Felt WASHER—D.E.....	820706	973-B-F
Felt WASHER—D.E.....	825197	973-D-E-F-G-H-J-K-L
Fuse Tension Spring WASHER.....	1843713	973-H-J-K
Shaft Nut Plain WASHER.....	811381	973-D-G-H-K-L
Shaft Nut Plain WASHER.....	30205	973-E
Shaft Nut WASHER.....	807405	973-J
Space WASHER—Inside—D.E.....	822644	973-B-F
Space WASHER—Inside—D.E.....	1845626	973-D-E-G-H-J-K-L
*Space WASHER—Inside—D.E.....	1878233	973-M
Terminal Stud Insulation WASHER.....	810501	973-D-E-G-H-J-K-M
Terminal Stud Plain WASHER.....	834560	973-D-E-G-H-J-K-M
Third Brush Plate Spring WASHER.....	809824	973-B-D-E-F-G

 
*Use with single shielded Ball Bearing only.

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS		
Ball Bearing Retainer Plate GASKET—D.E.	825260	973-D-E-G-H-J-K-L
Ball Bearing Retainer Plate GASKET—D.E.	820708	973-B-F
*Ball Bearing Retainer Plate GASKET—D.E.	1872049	973-M
Brush Holder PIN	817313	973-B-D
Brush Holder Stop PIN	818400	973-B-D
Brush Holder PIN and INSULATION	812016	973-B-D-E-F-G
Brush Holder Stop PIN and INSULATION	812829	973-B-D-E-F-G
Cotter PIN (In Brush Holder)	107761	973-B-F 973-B-F
COLLAR—Outside—D.E.	1836194	973-B-F
Dowel PIN—C.E.	809062	973-B-D-E-F-G-H-J-K-L-M
End Cover GASKET—C.E.	1835457	973-B-D-E-F-G-H-J-K
End Cover GASKET—C.E.	1872050	973-M
FAN	1872400	973-L
FUSE and CONNECTOR Assembly	1849107	973-H-J-K
FUSE Only	115375	973-H-J-K
Fuse Insulation TUBE	1847347	973-H-J-K
Fuse Connector BODY	1845912	973-H-J-K
Fuse Connector CAP	1836869	973-H-J-K
Fuse Tension SPRING	1836876	973-H-J-K
Fuse BUSHING and FERRULE	1860926	973-H-J-K
Fuse Connector CLAMP	1849110	973-H-J-K
LEAD Assembly—Relay to Terminal Stud	1849109	973-H-K
LEAD Assembly—Relay to Terminal Stud	1850025	973-J
OILER—D.E.	113702	973-B-D-E-G-H-J-K-L
OILER—C.E.	113702	973-B-D-E-F-G-H-J-L
OILER—C.E. & D.E.	125609	973-M
Oil Throwing COLLAR	1849262	973-J
Oil WICK—C.E.	29047	973-H-J-K-L
Oil BAFFLE—D.E.	816214	973-J
Oil BAFFLE—D.E.	1847361	973-D-E-G-L
Oil Throwing COLLAR—Outside	1847360	973-D-E-G-L
Pole SHOE	1845253	973-B-D-E-F-G-H-J-K-M
Pipe PLUG	103877	973-B-F
PULLEY (Single Groove)	1869731	973-M
*PULLEY (Opt. Double Groove)	1872967	973-M
Relay LEAD	821407	973-B-L
Relay LEAD	812004	973-D
Relay Lead BUSHING	812891	973-B-D-L
Relay Lead CLIP	200188	973-B-D-L
Space COLLAR—Outside D.E.	1849278	973-H-K
Space COLLAR—Inside D.E.	37837	973-L
Terminal STUD Only	810459	973-E-F-G-H-J-K-M
Terminal Stud Lock CLIP—Inside	820516	973-E-F-G-H-J-K-M
Terminal CLIP—To Main Brush	200181	973-D-E-F-G-H-K
Terminal CLIP—To Third Brush	804561	973-D-E
Terminal CLIP—To Third Brush	200144	973-H
Terminal CLIP—To Main Brush	200182	973-J-L-M
Terminal CLIP—To Third Brush	1857108	973-J-K
Terminal CLIP—To Control Unit	200154	973-L
Terminal STUD and LEAD Assembly	1848591	973-E-F-G
Terminal STUD and LEAD Assembly	810585	973-H-J-M
Terminal STUD and LEAD Assembly	1835265	973-K
Terminal STUD—Insulation STRIP	1905652	973-D-E-G-H-J-K-M
Terminal Stud BUSHING	1905683	973-E-F-G-H-J-K-M
Third Brush Plate Clamp SPRING—Lower	1856500	973-L
Third Brush Stop PIN	1840607	973-B
Third Brush Spring Washer PIN	809614	All
Wiring Harness CLAMP	1860459	973-M
Woodruff KEY	103906	973-B-D-E-F-G-J
Woodruff KEY—D.E.	124546	973-H-K
Woodruff KEY—C.E.	124545	973-L
Woodruff KEY—D.E.	124548	973-L-M

*In Package 1872966.

*Use with single shielded Bearing only.

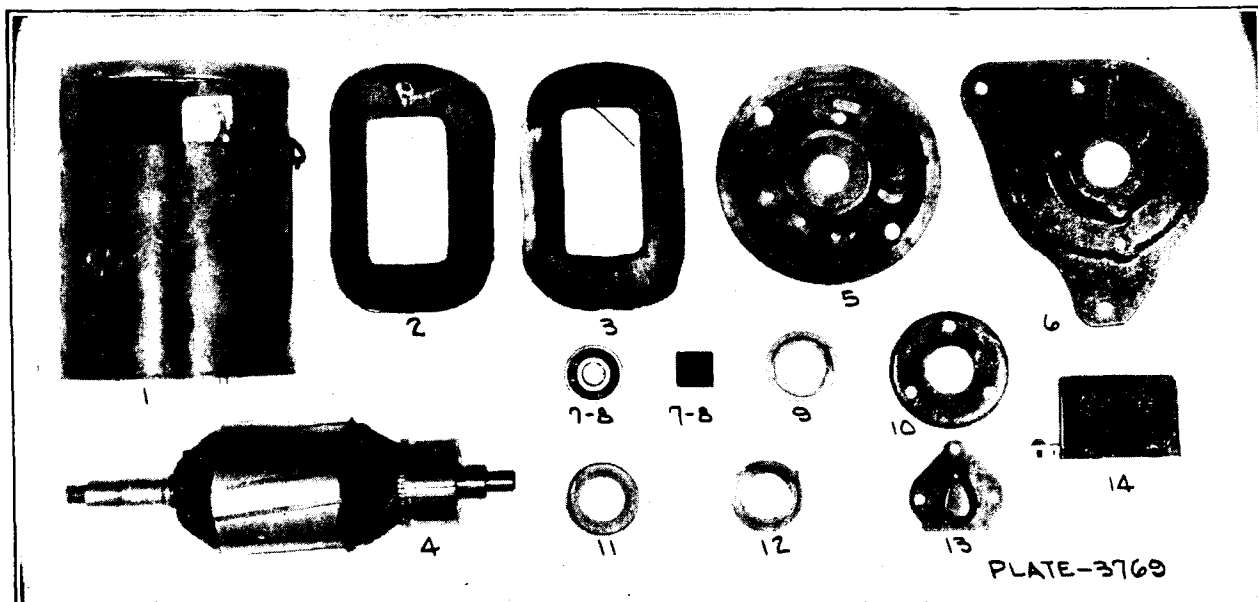

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame and Field Assembly	Field Coil to Third Brush	Field Coil to Control Unit	Armature	Commutator End Frame	Drive End Frame	Ball Bearing or Bushing C.E.	Ball Bearing or Bushing D.E.	Ball Bearing Retainer Plate C.E.	Ball Bearing Retainer Plate D.E.	Felt Washer Retainer or Space Cup C.E.	Felt Washer Retainer D.E.	Commutator End Cover Plate	Relay or Control Unit
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
977-D		1853378	1857802	1857943	1857804	1857805	954378	954517		1838692	37078	825196	816212	†5581
977-E		1857909	1857910	1857911	1856488	1857916	"	"		1841877	"	"	"	*
977-F		"	1858108	1858109	1858111	1858113	"	"		"	"	"	"	°5779
977-G		1853378	1858453	1858450	1856488	1849277	908503	"		1838692	"	"	814985	†5582
977-H		1850816	1858582	1858583	1857512	1858587	954378	"		"	"	"	816212	†5581
977-J		1853378	1850961	1859044	1856488	"	"	"		"	"	"	"	*
977-K		"	1850152	1859073	1859076	1859077	"	"		"	"	"	"	x5534
977-L		"	"	1859060	"	"	"	"		"	"	"	"	"
977-M		"	1850961	1859301	1864830	1859305	"	"		"	"	"	"	*
977-N		"	"	1859349	1856488	1849277	"	"		"	"	"	"	*
977-P		"	1853379	1858450	1856488	"	908503	"		"	"	"	814985	*
977-R		1850816	1850815	1858583	1857512	1858587	954378	"		"	"	"	816212	*
977-S		1847247	1861293	1861295	1861298	1861299	908503	"		"	"	"	814985	*
977-T		1857909	1857910	1861396	1857914	1849277	954378	"		"	37078	"	816212	*
977-U		1850816	1850815	1862211	1862214	1847147	908503	"		1841877	"	"	"	*
977-V		1847649	1847650	1862220	"	"	"	"		"	"	"	"	*
977-W		1857909	1857910	1863281	1857914	1849277	954378	"		1838692	"	"	816212	*
977-X		"	"	1863481	1856920	1845625	"	"		"	"	"	"	*
977-Y		1847649	1847650	1863761	1857512	1847147	"	"		1841877	"	"	"	*
977-Z		1847247	1850374	1857508	1856488	1849277	"	"		1838692	"	"	"	*

xFor parts see Apparatus Box—Group 2.

 
†For parts see Control Unit—Group 3.

*Relay or Control Unit not part of Generator. See Car Index.

°To "F" Terminal.

°For parts see Advance Writeup on 5779.

Delco-Remy
SERVICE PARTS CATALOG

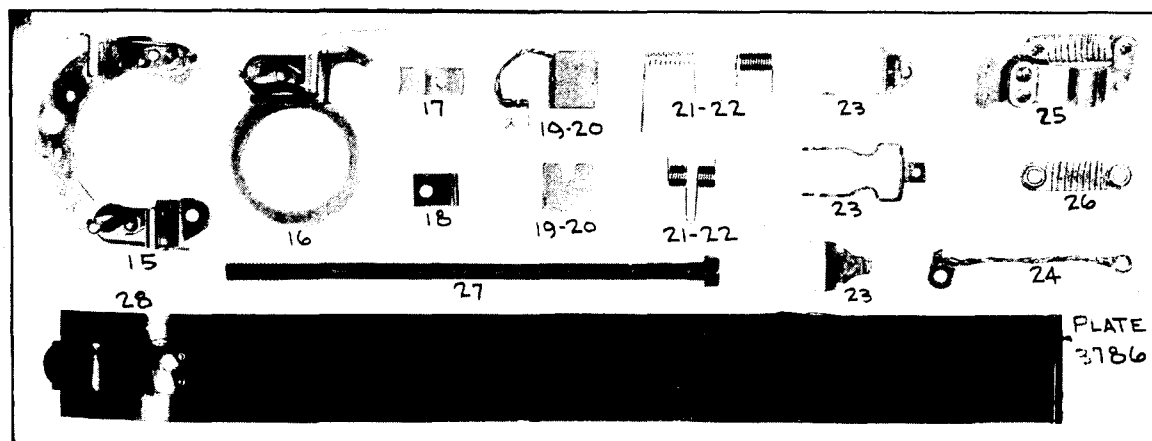

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Main Brush Plate	Third Brush Plate	Third Brush Plate Clamp	Third Brush Plate Clamp Spring	Main Brush	Third Brush	Main Brush Spring	Third Brush Spring	Brush Holder or Arm	Brush Ground Lead	Thermostat	Thermostat Resistance	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
977-D	1857213	1907872	1905082	1905561	1856494	1850768	1903871	1946798	1904365				1842765	1842763
977-E	1857915				"	"	"		"				"	"
977-F		1842759	1843965		829073	829073	812712	812712	812711				37070	"
977-G	1857213	1907872	1905082	1905561	1856494	1850768	1903871	1946798	1904365				1842765	"
977-H	1858586	1907719	"	"	"	"	1908829	1903870	"				"	"
977-J	1856491	1907872	"	"	"	"	1903871	1946798	"				"	"
977-K	"	"	"	"	"	"	"	"	"				37070	"
977-L	"	"	"	"	"	"	"	"	"				"	"
977-M	"	"	"	"	"	"	"	"	"				1842765	"
977-N	"	"	"	"	"	"	"	"	"				"	"
977-P	1857213	"	"	"	"	"	"	"	"				"	"
977-R	1858586	1857514	"	"	"	"	"	1903870	"				"	1873723
977-S	1856491	1907872	"	"	"	"	1908829	1946798	"				"	1842763
977-T	1857915				"	"	"	"	"				"	"
977-U	1857513	1907719	1857187	1905561	"	1850768	1908829	1903870	"				37070	"
977-V	"	1857514	"	"	"	"	"	"	"				"	"
977-W	1857915				"	"	1903871		"				1842765	"
977-X	"				"	"	"		"				37070	"
977-Y	1857513	1857514	1905082	1905561	"	1850768	1908829	1903870	"				1842765	"
977-Z	1856491	1907872	"	"	"	"	1903871	1946798	"				"	"

Revised to Nov. 1, 1968

SERVICE PARTS CATALOG

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer Plate Screw.....	1962276	977-D-G-H-J-K-L-M-N-P-R-S-T-W-X-Z
Lock Washer—Ball Bearing Retainer Plate Screw.....	114603	977-E-F-U-V-Y
Lock Washer—Brush Plate Attaching Screw—Main.....	453435	977-D-E-G-H-J-K-L-M-N-P-R-S-T-U-V-W-X-Y-Z
Lock Washer—Brush Plate Clamp Screw—Third.....	453435	977-D-F-G-H-J-K-L-M-N-P-R-S-Y-Z
Lock Washer—Brush Plate Clamp Screw—Third.....	453844	977-U-V
Lock Washer—Brush Lead Attaching Screw.....	1914816	All
Lock Washer—Control Unit Mounting Screw.....	138479	977-D-H
Lock Washer—Control Unit Mounting Screw.....	453844	977-G
Lock Washer—End Cover Plate Screw.....	453435	All
Lock Washer—Fan Attaching Screw.....	1914579	977-M-S
Lock Washer—Ground Strap Screw.....	453435	977-E-W-X
Lock Washer—Shaft Nut.....	1915265	977-D-U-V
Lock Washer—Shaft Nut—D.E.....	103334	977-N-S
Lock Washer—Shaft Nut—D.E.....	811381	977-W
Lock Washer—Thru Bolt.....	9421424	All
Lock Washer—Terminal Stud Nut.....	9421423	977-F-J-M-N-P-R-S-T-U-V-W-X-Y-Z
Lock Washer—Relay or Control Unit Mounting Screw.....	1962276	977-F-K-L
NUTS		
Nut—Cover Band Screw.....	453433	977-R
Nut—Shaft—Semi-castle ($\frac{1}{2}$ -20x $\frac{5}{8}$).....	1917035	977-E-F
Nut—Shaft—D.E. or C.E.....	1915172	977-D-U-V
Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{5}{8}$ x $\frac{3}{4}$).....	1917570	977-E-F-H-J-K-L-M-R-T-U-V-W-X-Y-Z
Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{5}{8}$ x $1\frac{1}{4}$).....	1917034	977-E-F
Nut—Shaft—D.E.....	451079	977-N-S
Nut—Terminal Stud.....	134551	977-E-F-J-M-N-P-R-T-U-V-W-X-Y-Z
Nut—Terminal Stud.....	121743	977-S
SCREWS		
Screw—Apparatus Box Mounting.....	115433	977-K-L
Screw—Ball Bearing Retainer Plate.....	141602	All except 977-E-F-U-V-Z
Screw—Ball Bearing Retainer Plate.....	5017850	977-E-F-U-V-Y
Screw—Brush Plate Attaching—Main.....	1914580	977-D-E-G-H-J-K-L-M-N-P-R-S-U-V-W-X-Y-Z
Screw—Brush Plate Clamp Screw—Third.....	141602	977-D-G-H-J-K-L-M-N-P-R-S-Y-Z
Screw—Brush Plate Clamp Screw—Third.....	115434	977-U-V
Screw—Brush Plate Clamp Screw—Third.....	142729	977-F
Screw—Brush Lead Attaching.....	141542	977-D-E-G-H-J-K-L-M-N-P-S-T-U-V-W-X-Y-Z
Screw—Brush Lead Attaching.....	454329	977-F
Screw—Control Unit Mounting.....	132900	977-D-H
Screw—Control Unit Mounting.....	453461	977-G
Screw—Cover Band.....	453479	977-R
Screw—End Cover Plate Attaching—10-32x $\frac{3}{4}$	115431	All except 977-S
Screw—End Cover Plate Attaching—10-32x $\frac{1}{2}$	141602	977-S
Screw—Fan Attaching.....	132964	977-M-S
Screw—Ground Strap.....	1914530	977-E-W-X
Screw—Pole Shoe.....	1864510	All
Screw—Relay Mounting.....	141602	977-F
Screw—Relay Base Mounting.....	141602	977-F
WASHERS		
Washer—Brush Arm Space.....	1914741	977-D-E-G-H-J-M-N-P-R-S-T-U-V-W-X-Y-Z
Washer—Control Unit Mounting Screw.....	1856056	977-D-H
Washer—Felt—C.E.....	37077	977-D-E-F-G-H-J-K-L-M-N-P-R-T-U-V-W-X-Y-Z
Washer—Felt—D.E.....	825197	977-D-E-F-G-H-J-K-L-M-N-P-R-S-T-U-V-W-X-Y-Z
Washer—Ground Strap Screw.....	1902988	977-E-W-X
Washer—Shaft Nut.....	1934383	977-E-F-H-J-K-L-M-R-T-U-V-Y-Z
Washer—Space—Inside—D.E.....	1845626	977-D-H-J-K-L-M-P-R-S-T-W-X-Z
Washer—Terminal Stud Insulation.....	810501	977-E-F-J-M-N-P-R-T-U-V-W-X-Y-Z
Washer—Terminal Stud Plain.....	1905125	977-E-F-J-M-N-P-R-T-U-V-W-X-Y-Z
Washer—Third Brush Plate Spring.....	809824	977-F
Washer—Terminal Stud Insulation.....	1858753	977-S
Washer—Terminal Stud Plain.....	1858752	977-S

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS		
BASE—Relay Adaptor.....	1858114	977-F
Brush Holder HINGE PIN and INSULATION.....	812016	977-F
Brush Holder STOP PIN and INSULATION.....	812829	977-F-K-L
BUSHING—Terminal Stud.....	1905683	977-E-F-J-M-N-P-R-T-U-V-W-X-Y-Z
BUSHING—Control Unit Lead.....	812891	977-D-G-H
CLIP—To Third Brush.....	200181	977-F
CLIP—To Third Brush.....	200182	977-D-E-G-H-J-K-L-M-N-W-X-Y
CLIP—To Main Brush.....	200182	977-F-H-J-K-L-M-N-U-V-Z
CLIP—To Main Brush.....	1857108	977-D-E-G
CLIP—To Generator Terminal.....	200154	977-D-G-H-K-L
CLIP—To Field Terminal.....	200188	977-D-G-H-K-L
CLIP—on Terminal Stud.....	37837	977-U-V
CLIP—on Terminal Stud.....	114044	977-E-X
COLLAR—Oil Throwing.....	1859045	977-J
COLLAR—Outside—D.E.....	1859078	977-K-L
COLLAR—Outside—D.E.....	1845627	977-X
COLLAR—Outside—D.E.....	1856568	977-G-P
COLLAR—Outside—D.E.....	1849278	977-D-M-N-S-T-W-Z
COLLAR—Outside—D.E.....	825254	977-E-F-U-V-Y
COLLAR—Outside—C.E.....	1856567	977-G-P-S
COLLAR—Inside—C.E.....	817224	977-S
COTTER PIN—Brush Holder.....	107761	977-F
COTTER PIN—D.E.....	103373	977-M
Dowel PIN.....	809062	All
FAN and PULLEY Assembly.....	1859306	977-M
FAN and PULLEY Assembly.....	1861300	977-S
FAN Only.....	1856936	977-M-S
FAN.....	1868908	977-U-V
FRAME and BRACKET.....	1864225	977-Z
GASKET—End Cover.....	1835457	977-D-E-F-G-H-J-K-L-M-N-P-R-S-T-W-X-Y-Z
GASKET—Ball Bearing Plate.....	825260	977-D-G-H-J-K-L-M-N-P-R-S-T-W-X-Z
Grease CUP.....	1860863	977-S
Ground STRAP.....	1857917	977-E-W-X
LEAD ASSEMBLY—Relay to Negative Terminal.....	1849109	977-F
LEAD—Control Unit.....	1857806	977-D
LEAD—Control Unit.....	809966	977-H
LEAD—To Control Unit.....	816411	977-K-L
LEAD—To Relay.....	821407	977-G
OILER—C.E. and D.E.....	113702	977-D-E-F-G-H-J-K-L-M-N-P-R-T-U-V-W-X-Y-Z
Oil WICK—C.E.....	1947350	977-D-E-G-H-J-K-L-M-N-P-R-T-U-V-W-X-Y-Z
Oil BAFFLE—D.E.....	816214	977-H-J-R
Oil Throwing COLLAR—D.E.....	1858588	977-H-R
Oil Throwing COLLAR.....	1857941	977-E-F
Oil Throwing COLLAR—Inside—D.E.....	1843942	977-U-V-Y
PIN—Third Brush Plate Spring Washer.....	809614	977-F
Pole SHOE.....	1842744	All
Relay Lead Support STRIP.....	1857807	977-D-S
Terminal STUD and LEAD Assembly.....	1861294	977-S
Terminal STUD and LEAD Assembly.....	1848591	977-F
Terminal STUD and LEAD Assembly.....	1835265	977-U-V-Y
Terminal STUD Only—Positive and Negative Terminal.....	810459	977-E-F-J-M-N-P-R-T-U-V-W-X-Y-Z
Terminal STUD Only—Field Terminal.....	810459	977-E
Terminal STUD Only.....	1858749	977-S
Terminal Stud Lock CLIP—For Field Terminal.....	1854058	977-E-T-W-X
Terminal Stud INSULATION—For Field Terminal.....	1905652	977-E-T-W-X
Terminal Stud Lock CLIP—For 810459.....	820516	977-E-F-J-M-N-P-R-T-U-V-W-X-Y-Z
Terminal Stud INSULATION—For 810459.....	1905652	977-E-F-J-M-N-P-R-T-U-V-W-X-Y-Z
Woodruff KEY.....	103905	977-D-U-V
Woodruff KEY—D.E.....	103906	977-E-F-H-J-K-L-M-R-T-U-V-X-Y
Woodruff KEY—D.E.....	124546	977-W-Z

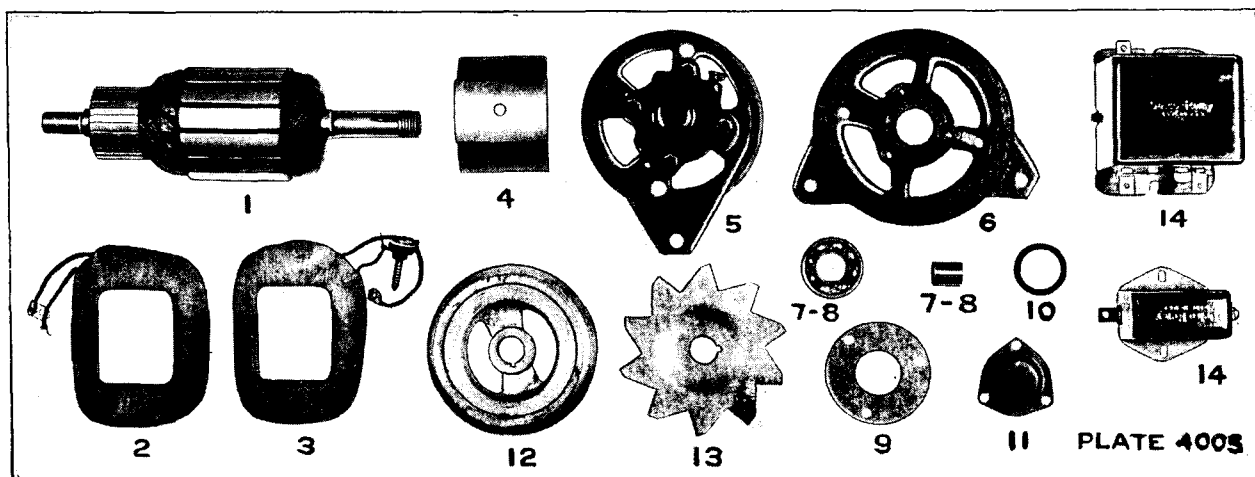 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Arma-ture	Field Coil R.H.	Field Coil L.H.	Pole Shoe	Commu-tator End Frame	Drive End Frame	Bushing or Ball Bearing C.E.	Bushing or Ball Bearing D.E.	Ball Bearing Retainer Plate D.E.	Felt Washer Retainer Plate D.E.	Commu-tator Cover Plate	Pulley	Fan	Relay or Control Unit
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1100001	1871826	1902105		1864037	1957635	1910404	812823	954378	1911263	819104	1914222	†	†	×
1100002	"	"		"	"	1878691	"	"	"	"	"	1871669	1866400	×
1100003	"	"		"	"	1910404	"	"	"	"	"	1885475	1866400	×
1100004	1871826	"		"	"	"	"	"	"	"	"	"	"	×
1100005	1871826	"		"	"	1878691	"	"	"	"	"	1868307	1866400	×
1100006	1868760	"		"	"	1910404	"	"	"	"	"	"	"	×
1100007	1871826	"		"	"	1878691	"	"	"	"	"	1869289	1866400	×
1100008	"	"		"	"	1910404	"	"	"	"	"	1866403	"	×
1100009	"	"		"	"	"	"	"	"	"	"	1871669	"	×
1100010	"	"		"	"	"	"	"	"	"	"	1872406	"	×
1100011	"	"		"	1880975	1880976	"	"	"	"	"	"	"	×
1100012	"	"		"	1882744	1882104	"	"	"	"	"	1924619	1866400	×

^Field Coil Set.

*See Car Index for Model No.—Not part of Generator.


†1871819 Pulley and 1866400 Fan shipped separately for Radio Generator

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer Plate Screw.....	1962276	1100001-2-3-4-5-6-7-8-9-10-11-12
Lock Washer—Brush Lead Attaching Screw.....	1914816	1100001-2-3-4-5-6-7-8-9-10-11-12
Lock Washer—Brush Plate Attaching Screw.....	453844	1100001-2-3-4-5-6-7-8-9-10-11-12
Lock Washer—Cover Plate Screw—C.E.....	453844	1100001-2-3-4-5-6-7-8-9-10-11-12
Lock Washer—Fan Attaching Screw.....	1914579	1100003
Lock Washer—Terminal Stud Nut.....	1914579	1100001-2-3-4-5-6-7-8-9-10-11-12
Lock Washer—Thru Bolt Nut.....	9421424	1100001-2-3-4-5-6-7-8-9-10-11-12
Lock Washer—Shaft Nut.....	1915265	1100001-2-3-4-5-7-8-9-10-11-12
Lock Washer—Wiring Harness Clamp Screw.....	9421423	1100001-3-4-5-7-8-10-12
NUT		
Nut—Terminal Stud.....	121743	1100001-2-3-4-5-6-7-8-9-10-11-12
Nut—Shaft—D.E.....	1915172	1100001-2-3-4-5-7-8-9-10-11-12
Nut—Shaft—D.E.....	1917570	1100006
SCREWS		
Screw—Ball Bearing Retainer Plate.....	1914580	1100001-2-3-4-5-6-7-8-9-10-11-12
Screw—Brush Plate Attaching.....	1888975	1100001-2-3-4-5-6-7-8-9-10-11-12
Screw—Brush Lead Attaching.....	454329	1100001-2-3-4-5-6-7-8-9-10-11
Screw—End Cover Plate.....	1888975	1100001-2-3-4-5-6-7-8-9-10-11-12

 Delco-Remy
SERVICE PARTS CATALOG

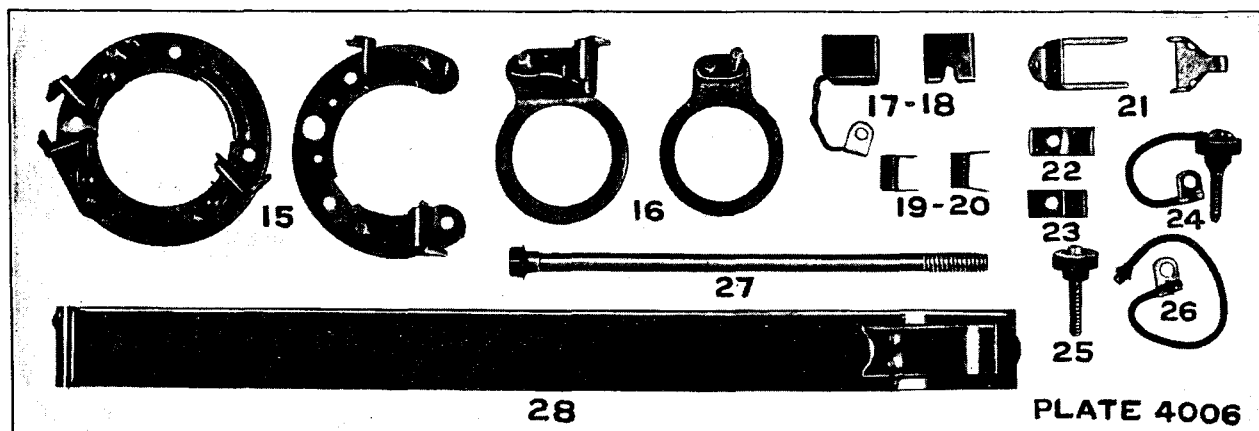

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model No.	Main Brush Plate	Third Brush Plate	Main Brush	Third Brush	Main Brush Spring	Third or Ground Brush Spring	Brush Holder or Tension Lever	Third Brush Plate Clamp	Third Brush Plate Clamp Spring	Terminal Stud and Lead	Terminal Stud Only	Relay Lead	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
1100001	1871806		1866148	1906940	1903871	1946798	1904365			1858754	1858749		1908680	816340
1100002	"		"	"	"	"	"			"	"		"	"
1100003	"		"	"	"	"	"			"	"		"	"
1100004	"		"	"	"	"	"			"	"		"	"
1100005	"		"	"	"	"	"			"	"		"	"
1100006	"		"	"	"	"	"			"	"		"	"
1100007	"		"	"	"	"	"			"	"		"	"
1100008	"		"	"	"	"	"			"	"		"	"
1100009	"		"	"	"	"	"			"	"		"	"
1100010	"		"	"	"	"	"			"	"		"	"
1100011	"		"	"	"	"	"			"	"		"	1861502
1100012	"		"	"	"	"	"			"	"		"	816340

^For complete Brush Set order Part No. 1857963.

MINOR PARTS SECTION

Name	Part No.	Used on Models
SCREWS—Continued		
Screw—Fan Attaching.....	132964	1100003
Screw—Pole Shoe.....	1913960	All
Screw—Wiring Harness Clamp.....	132243	1100001-3-4-5-7-8-10-12
WASHERS		
Washer—Brush Arm Space.....	1857412	1100001-2-3-4-5-6-7-8-9-10-11-12
Washer—Felt—D.E.....	809961	1100001-2-3-4-5-6-7-8-9-10-11-12
Washer—Space—Inside—D.E.....	809945	1100001-2-3-4-5-6-7-8-9-10-11-12
Washer—Terminal Stud Plain.....	826319	1100001-2-3-4-5-6-7-8-9-10-11-12
Washer—Terminal Stud—Insulation.....	1858753	1100001-2-3-4-5-6-7-8-9-10-11-12
Washer—Shaft Nut—Plain.....	1934383	1100006
MISCELLANEOUS		
COLLAR—Outside—D.E.....	1858603	1100001-2-5-6-7-8-9-10-11-12
COLLAR—Outside—D.E.....	817224	1100003-4
COLLAR—(Used with pressed steel pulley).....	1858603	1100003
Dowel PIN—C.E.....	809062	1100001-2-3-4-5-6-7-8-9-10-11-12
Dowel PIN—D.E.....	809593	1100001-2-3-4-5-6-7-8-9-10-11-12
GASKET—Ball Bearing Retainer Plate.....	1912008	1100001-2-3-4-5-6-7-8-9-10-11-12
GASKET—Cover Plate—C.E.....	817220	1100001-2-3-4-5-6-7-8-9-10-11-12
OILER—C.E.....	113702	1100001-2-3-4-5-6-7-8-9-10-11-12
OILER—D.E.....	125609	1100001-2-3-4-5-6-7-8-9-10-11-12
Oil WICK—C.E.....	1947350	1100001-2-3-4-5-6-7-8-9-10-11-12
Oil Hole PLUG—C.E.....	816315	1100001-2-3-4-5-6-7-8-9-10-11-12
Terminal CLIP—To Brush.....	200182	1100001-2-3-4-5-6-7-8-9-10-11-12
Woodruff KEY.....	124545	1100001-2-3-4-5-6-7-8-9-10-11-12
Wiring Harness CLAMP.....	1860459	1100003-12

 Parts not listed in this catalog will not be sold separately.

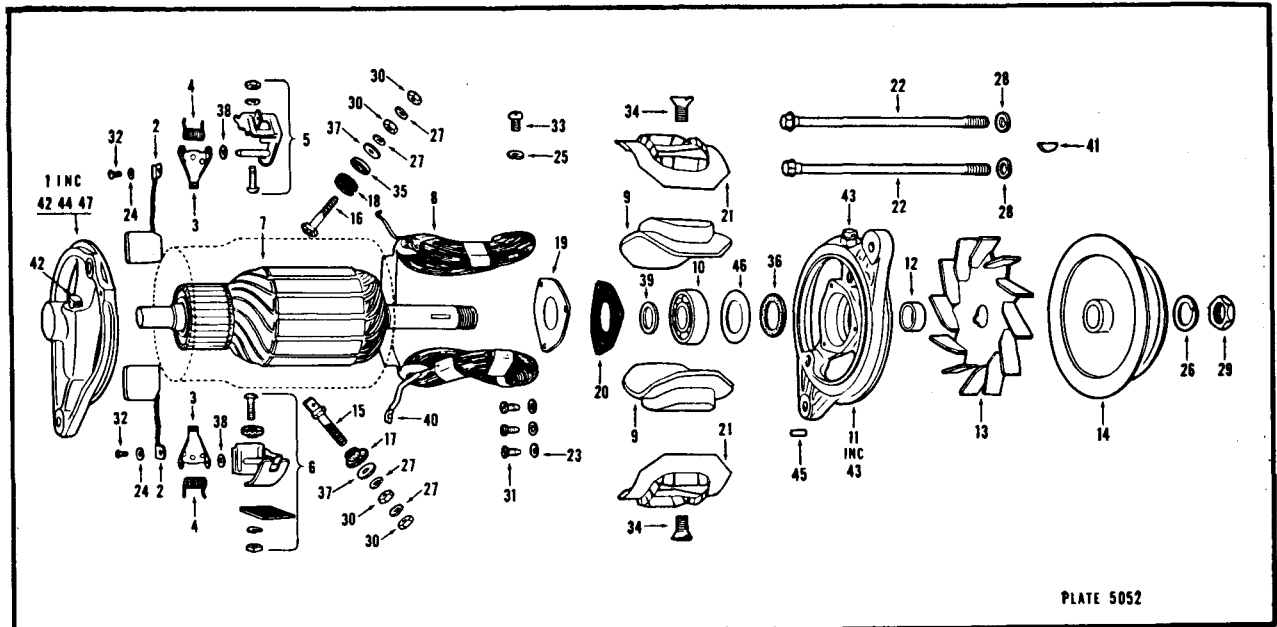

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame C.E.	Brush	Arm Brush	Spring Brush	Holder (Pkg.) Ground Brush	Holder (Pkg.) Insul. Brush	Coil Field Assembly	Shoe Pole	Ball Bearing D.E.	Frame D.E.
	1	2	3	4	5	6	7	8	9	10
1100013.....	1933933	1932506	1944373	1908829	1925378	1925379	1921351	1921356	1931258	954378
1100016.....	1922184	"	"	1908829	"	"	"	"	"	1922185
1100018.....	1933933	1923295	"	1908829	"	"	1925348	1925691	"	1910404
1100019.....	"	"	"	"	"	"	1921351	1921356	"	"
1100021.....	1921979	"	"	"	"	"	1925960	"	"	1882433
1100023.....	Same parts as 1100013									
1100024.....	Same parts as 1100018									
1100025.....	1951512	1932506	1944373	1908829	1825378	1925379	1921351	1921356	1931258	907503
1100027.....	1947336	"	"	"	"	"	"	"	"	1925097
1100028.....	1933933	1923295	"	1908829	"	"	1921351	1925691	"	954378
1100029.....	1951512	1932506	"	1908829	"	"	1921351	1921356	"	907503
1100030.....	Same parts as 1100028									1953882
1100031.....	1951512	1923295	1944373	1908829	1925378	1925379	1921351	1925691	1931258	954378
1100032.....	"	1932506	"	1908829	"	"	1921351	1921356	"	907503
1100033.....	"	"	"	"	"	"	"	"	"	"
1100034.....	"	"	"	"	"	"	"	"	"	"
1100035.....	1929513	"	"	"	"	"	1935522	"	"	"
1100036.....	1951512	"	"	"	"	"	1921351	"	"	"
1100037.....	"	"	"	"	"	"	"	"	"	"
1100038.....	1947336	"	"	"	"	"	"	"	"	1925097
1100039.....	1951512	"	"	"	"	"	"	"	"	1953882
1100040.....	1913822	1923295	1944373	"	1925378	1925379	1913852	"	"	954521
1100041.....	"	1932506	"	"	"	"	"	1939076	"	1926987
1100042.....	1951512	"	1944373	"	1925378	1925379	1921351	1921356	"	907503
1100043.....	1935265	"	"	"	"	"	1927482	"	"	"
1100044.....	1946595	"	"	"	"	"	1946593	"	"	1908869
1100045.....	1947336	"	"	"	"	"	1947352	"	"	1947341
1100046.....	"	"	"	"	"	"	1947802	"	"	"
1100047.....	1951512	"	"	"	"	"	1921351	"	"	1953882
1100048.....	1947336	"	"	"	"	"	1921351	"	"	1925097
1100051.....	1951512	"	"	"	"	"	1921351	"	"	1953882
1100052.....	1951512	"	"	"	"	"	"	"	"	"
1100053.....	1953880	"	"	"	"	"	1958108	"	"	"
1100054.....	1953880	"	"	"	"	"	1958108	"	"	1925097
1100055.....	1951512	"	"	"	"	"	1921351	"	"	1953882

Delco-Remy SERVICE PARTS CATALOG

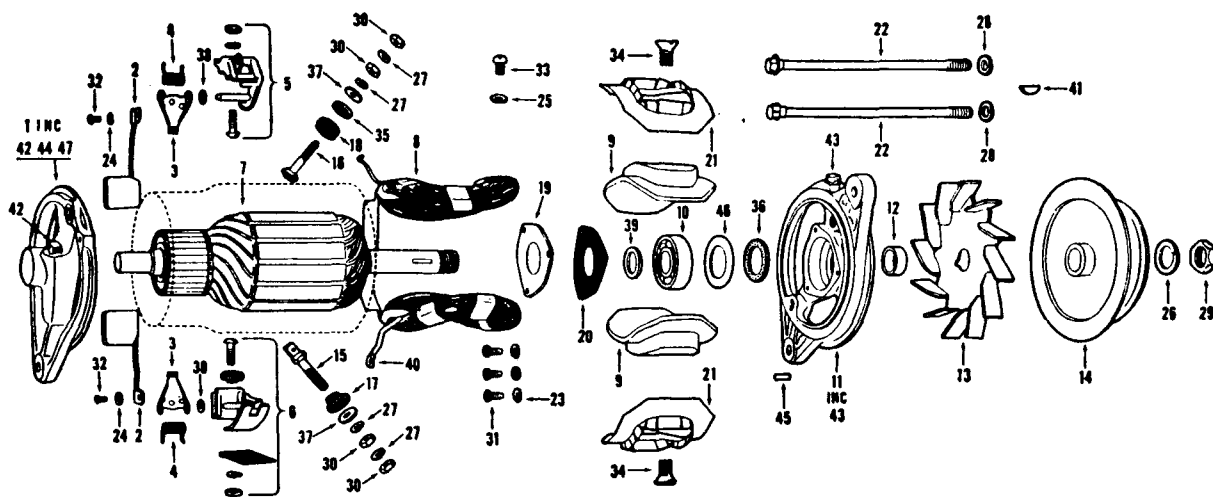 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space — D.E.	Fan	Pulley or Pulley & Fan	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coil	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1100013	817224			1923284	1858749	1921362		1911263	1912008	1914491	1908680
1100016	1858603			"	"	"		"	"	"	"
1100018	817224			"	"	"		"	"	"	"
1100019	1858603	1866400	1924619	"	"	"		"	"	"	"
1100021	"	"	1911978	"	"	"		"	"	"	"
1100023	Same parts as 1100013										
1100024	Same parts as 1100018										
1100025	1858603			1923284	1858749	1921362		1911263	1912008	1914491	1908680
1100027	"		1924689	"	"	"		"	"	"	"
1100028	†		"	"	"	"		"	"	"	"
1100029	1858603		1911978	"	"	"		"	"	"	"
1100030	Same parts as 1100028										
1100031	1858603	1866400	1924619	1923284	1858749	1921362		1911263	1912008	1914491	1908680
1100032	"	"	1869130	"	"	"		"	"	"	"
1100033	"		"	"	"	"		"	"	"	"
1100034	"	1866400	1915571	"	"	"		"	"	"	"
1100035	"		"	"	"	"		"	"	"	1908680
1100036	"		1911978	"	"	"		"	"	"	1908680
1100037	"		"	"	"	"		"	"	"	"
1100038	"		1911978	"	"	"		"	"	"	"
1100039	"		"	"	"	"		"	"	"	"
1100040		1914960		1923284	1858749	"		1905807	820708	"	1908680
1100041	"	"		"	"	"		"	"	"	"
1100042	"		1924689	1923284	1858749	"		1911263	1912008	"	1908680
1100043	"		"	"	"	"		"	"	"	"
1100044	817224		1946594	"	"	"		"	"	"	"
1100045	1858603		"	"	"	"		"	"	"	"
1100046	"		"	"	"	"		"	"	"	"
1100047	"		1943516	"	"	"		"	"	"	"
1100048	"		1912939	"	"	"		"	"	"	"
1100051	"		1943516	"	"	"		"	"	"	"
1100052	"		1921939	"	"	"		"	"	"	"
1100053	"		"	"	"	"		"	"	"	"
1100054	"		"	"	"	"		"	"	"	"
1100055	"		"	"	"	"		"	"	"	"

†Use 1858603 Collar, also 815660 Space Washer when necessary.

*Included with 1858749 Stud.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCKWASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	1962276	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3; 52
—	Lock Washer—Brush Holder Screw	1914579	All
24	Lock Washer—Brush Lead Screw	1914816	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 42-3-4-5-6-7-8; 51-2
24	Lock Washer—Brush Lead Screw	456413	1100053-4-5
24	Lock Washer—Brush Lead Screw	1914816	1100040-1
—	Lock Washer—Fan Attaching—C.E.	1915173	1100040-1
25	Lock Washer—Field Frame Screw	9421423	1100013-18-19; 21-8; 31
—	Lock Washer—Oil Well Cover Screw	453844	1100043
—	Lock Washer—Regulator Attaching Screw	138479	1100016; 27-9; 32-3-4-5-6-7-8-9; 43-7
26	Lock Washer—Shaft Nut—D.E.	1915265	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 42-3-5-6; 55
26	Lock Washer—Shaft Nut—D.E.	1941978	1100044-7-8; 51-2-3-4
27	Lock Washer—Terminal Stud	1914579	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 42-3-4-5-6-7-8; 51-2-3-4-5
27	Lock Washer—Terminal Stud	1914579	1100040-1
28	Lock Washer—Thru Bolt	9421424	1100013-16-18-19; 21-5-7-8-9; 31-2-3-6-7-8-9; 40-1-2-3-4-5-6-7-8; 51-2-3-4-5
NUTS			
—	Nut—Brush Holder Screw	121743	All
—	Nut—Fan Attaching—C.E.	1915172	1100040-1; 55
29	Nut—Shaft—D.E.	1915172	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9
29	Nut—Shaft—D.E.	1917035	1100040-1
—	Nut—Shaft—D.E.	1915172	1100042-3-4-5-6-7-8; 51-2-3-4
30	Nut—Terminal	121743	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3-4; 52
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 42-3-4-5-6-7-8; 51-2-3-4-5
31	Screw—Ball Bearing Retainer Plate	5017850	1100040-1
—	Screw—Brush Holder Attaching	455290	All
32	Screw—Brush Lead Attaching	453460	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 42-3-4-5-6-7-8; 51-2
32	Screw—Brush Attaching	454458	1100053-4-5
32	Screw—Brush Lead Attaching	453460	1100040-1
33	Screw—Field Frame	225377	1100013-18-19; 21-8; 31
—	Screw—Oil Well Cover	454408	1100043
34	Screw—Pole Shoe	1913960	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3-4-5-6-7-8; 51-2-3-4-5
—	Screw—Regulator Attaching	132900	1100016; 27-9; 32-3-4-5-6-7-8-9; 43-7
WASHERS			
35	Washer—Insul.—Field Terminal Stud	1858753	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3-4-5-6-7-8; 51-2-3-4-5
—	Washer—Felt—C.E.	1927447	1100025-7-9; 32-3-4-6-7-8-9; 42-3-4-5-6-7-8; 51
—	Washer—Felt—C.E.	37077	1100040-1
—	Washer—Felt—C.E.	815042	1100053-4
36	Washer—Felt—D.E.	809961	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 44-5-6-7-8; 51-2-3-4-5
36	Washer—Felt—D.E.	820706	1100040-1
—	Washer—Plain—Regulator Attaching Screw	1856056	1100016; 27-9; 32-3-4-5-6-7-8-9; 43-7
37	Washer—Plain—Terminal Stud	826319	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 53-4-5-6-7-8; 51-2-3-4-5
37	Washer—Plain—Terminal Stud	1919583	1100040-1-2
—	Washer—Shaft Nut—D.E.	1914589	1100040-1
38	Washer—Space—Brush Arm	1857412	1100013-18-19; 21-8; 31
38	Washer—Space—Brush Arm	1904368	1100016; 25-7-9; 32-3-4-5-6-7-8-9; 42-3-4-5-6-7-8; 51-2
38	Washer—Space—Brush Arm	1914741	1100040-1
38	Washer—Space—Inside—D.E.	1915086	1100040-1
39	Washer—Space—Inside—D.E.	809945	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 53-4-5-6-7-8; 51-2-3-4-5
—	Washer—Space—Outside—D.E.	815660	1100028; 45-6


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
MISCELLANEOUS			
—	BAFFLE—C.E.	1915167	1100040-1
—	BALL BEARING—C.E.	904751	1100035; 40-1; 53-4
—	BUSHING—C.E.	812823	1100021
—	BUSHING—C.E.	1927446	1100043
40	CLIP—Terminal—To Brush	200382	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 42-3-4-5-6-7-8; 51-2-3-4-5
40	CLIP—Terminal—To Brush	200346	1100040-1
—	COLLAR—Inside—C.E.	1915169	1100040-1
—	COVER—Oil Well	1914222	1100043
—	CUP—Felt Retainer—C.E.	809960	1100053-4
—	CUP—Felt Retainer—C.E.	1927448	1100025-7-9; 32-3-4-6-7-8-9; 42-3-4-5-6-7-8; 51
—	GASKET—Oil Well Cover	817220	1100043
—	KEY—Woodruff—C.E.	124543	1100040-1
41	KEY—Woodruff—D.E.	124545	1100013-16-18-19; 21-5-7-9; 31-2-3-4-5-6-7-8-9; 42-3-4-5-6-7-8; 51-2-3-4-5
41	KEY—Woodruff—D.E.	124548	1100040-1
—	LEAD—"A" Terminal to Regulator	1911481	1100038-9
—	LEAD—"A" Terminal to Regulator	1911485	1100016; 29; 32-3-5-6-7; 43-4
—	LEAD—"A" Terminal to Regulator	1917571	1100027
—	LEAD—"A" Terminal to Regulator	1914185	1100034
—	LEAD—"F" Terminal to Regulator	1911485	1100016; 27-9; 32-8; 43
—	LEAD—"F" Terminal to Regulator	1911481	1100034-5-6; 47
—	LEAD—"F" Terminal to Regulator	1914185	1100037-9
*42	OILER—C.E.	113702	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3-4-5-6-7-8; 51-2-3-5
43	OILER—D.E.	125609	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3-7-8; 51-2-3-4
43	OILER—D.E.	1880635	1100044
44	PIN—Dowel—C.E.	809062	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3-4-5-6-7-8; 51-2-3-4-5
45	PIN—Dowel—D.E.	809593	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3-4-5-6-7-8; 51-2-3-4-5
—	PIN—Dowel—In Field Frame	820369	1100021
46	PLATE—Felt Retainer—D.E.	819104	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 42-3-4-7-8; 51-2-3-4-5
46	PLATE—Felt Retainer—D.E.	820709	1100040-1
46	PLATE—Felt Retainer—D.E.	809960	1100045-6
—	PLUG—Bearing Well—C.E.	1948326	1100053-4
—	PLUG—Felt—C.E.	823551	1100053
—	PLUG—Felt—D.E.	823551	1100055
—	REGULATOR	*1118786	1100027
—	REGULATOR	*1118790	1100016; 29; 32-3-4-5-6-7-8-9; 43-7
—	RETAINER—Felt—C.E.	37078	1100040-1
—	RETAINER—Wick—C.E.	1953202	1100045-6; 52-5
—	RING—Bearing Clamp—C.E.	1929959	1100035; 40-1; 53-4
—	SEAL—Oil—C.E.	1945697	1100052-5
—	SPACER—Fan—C.E.	1913688	1100040-1
—	SPACER—Outside—C.E.	1913689	1100040-1
—	SUPPORT—Wick—C.E.	1962216	1100045-6; 52-5
—	THROWER—Oil	1939088	1100040-1
—	THROWER—Oil	1947344	1100045-6
47	WICK—Oil—C.E.	1947350	All
—	WICK—Oil—D.E.	823551	1100016; 25-7-9; 32-3-4-5-6-7-8-9; 42-3-7-8; 51-2-3-4
—	WICK—Oil—D.E.	1947350	1100044

*For parts see Regulator—Group 6-F.

 *Later units use extra capacity Oiler 1931191.

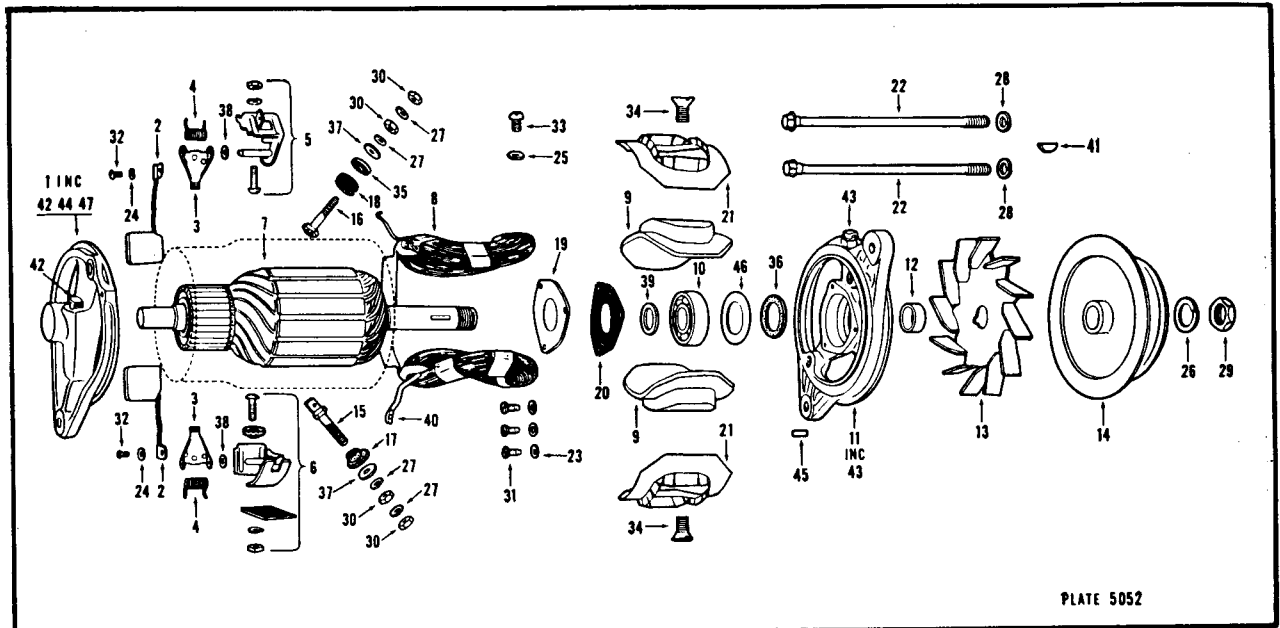

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame C.E.	Brush	Arm Brush	Spring Brush	Holder (Pkg.) Ground Brush	Holder (Pkg.) Insul. Brush	Armature Assembly	Coil Field Assembly	Shoe Pole	Ball Bearing D.E.	Frame D.E.
	1	2	3	4	5	6	7	8	9	10	11
1100013.....	1933933	1932506	1944373	1908829	1925378	1925379	1921351	1921356	1931258	954378	1910404
1100016.....	1922184	"	"	1908829	"	"	"	"	"	"	1922185
1100018.....	1933933	1923295	"	1908829	"	"	1925348	1925691	"	"	1910404
1100019.....	"	"	"	"	"	"	1921351	1921356	"	"	"
1100021.....	1921979	"	"	"	"	"	1925960	"	"	"	1882433
1100023.....	Same parts as 1100013										
1100024.....	Same parts as 1100018										
1100025.....	1951512	1932506	1944373	1908829	1825378	1925379	1921351	1921356	1931258	907503	1953882
1100027.....	1947336	"	"	"	"	"	"	"	"	1925097	"
1100028.....	1933933	1923295	"	1908829	"	"	1921351	1925691	"	954378	1910404
1100029.....	1951512	1932506	"	1908829	"	"	1921351	1921356	"	907503	1953882
1100030.....	Same parts as 1100028										
1100031.....	1951512	1923295	1944373	1908829	1925378	1925379	1921351	1925691	1931258	954378	1953882
1100032.....	"	1932506	"	1908829	"	"	1921351	1921356	"	907503	"
1100033.....	"	"	"	"	"	"	"	"	"	"	"
1100034.....	"	"	"	"	"	"	"	"	"	"	"
1100035.....	1929513	"	"	"	"	"	1935522	"	"	"	"
1100036.....	1951512	"	"	"	"	"	1921351	"	"	"	"
1100037.....	"	"	"	"	"	"	"	"	"	"	"
1100038.....	1947336	"	"	"	"	"	"	"	"	"	1925097
1100039.....	1951512	"	"	"	"	"	"	"	"	"	1953882
1100040.....	1913822	1923295	1944373	"	1925378	1925379	1913852	"	"	954521	1926987
1100041.....	"	1932506	"	"	"	"	"	1939076	"	"	"
1100042.....	1951512	"	1944373	"	1925378	1925379	1921351	1921356	"	907503	1953882
1100043.....	1935265	"	"	"	"	"	1927482	"	"	"	"
1100044.....	1946595	"	"	"	"	"	1946593	"	"	"	1908869
1100045.....	1947336	"	"	"	"	"	1947352	"	"	"	1947341
1100046.....	"	"	"	"	"	"	1947802	"	"	"	"
1100047.....	1951512	"	"	"	"	"	1921351	"	"	"	1953882
1100048.....	1947336	"	"	"	"	"	1921351	"	"	"	1925097
1100051.....	1951512	"	"	"	"	"	1921351	"	"	"	1953882
1100052.....	1951512	"	"	"	"	"	"	"	"	"	"
1100053.....	1953880	"	"	"	"	"	1958108	"	"	"	"
1100054.....	1953880	"	"	"	"	"	1958108	"	"	"	1925097
1100055.....	1951512	"	"	"	"	"	1921351	"	"	"	1953882

Delco-Remy **SERVICE PARTS CATALOG**

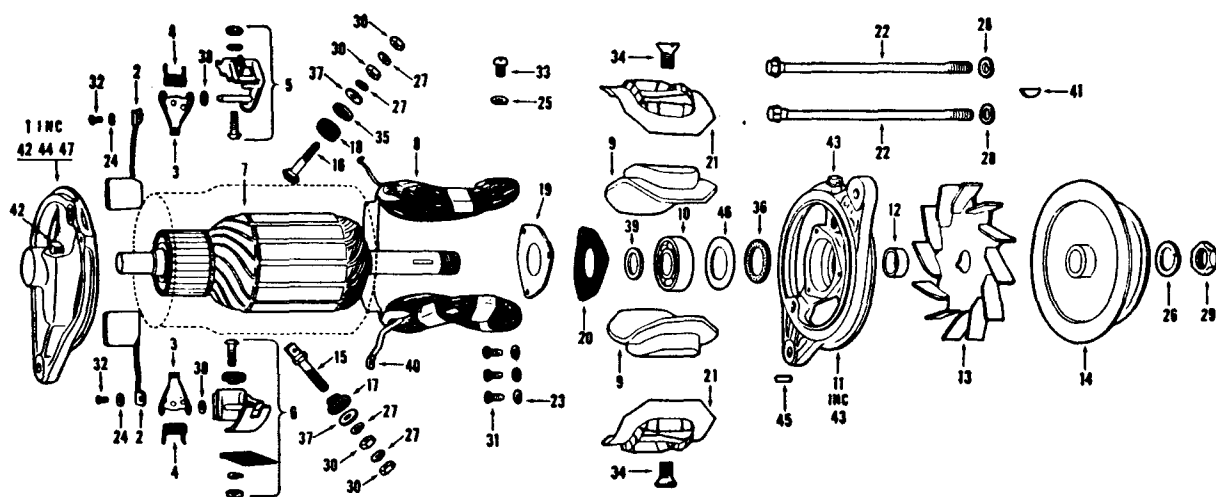 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space — D.E.	Fan	Pulley or Pulley & Fan	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coil	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1100013	817224			1923284	1858749	1921362		1911263	1912008	1914491	1908680
1100016	1858603			"	"	"		"	"	"	"
1100018	817224			"	"	"		"	"	"	"
1100019	1858603	1866400	1924619	"	"	"		"	"	"	"
1100021	"		1911978	"	"	"		"	"	"	"
1100023	Same parts as 1100013										
1100024	Same parts as 1100018										
1100025	1858603			1923284	1858749	1921362		1911263	1912008	1914491	1908680
1100027	"		1924689	"	"	"		"	"	"	"
1100028	†			"	"	"		"	"	"	"
1100029	1858603		1911978	"	"	"		"	"	"	"
1100030	Same parts as 1100028										
1100031	1858603	1866400	1924619	1923284	1858749	1921362		1911263	1912008	1914491	1908680
1100032	"	"	1869130	"	"	"		"	"	"	"
1100033	"			"	"	"		"	"	"	"
1100034	"	1866400	1915571	"	"	"		"	"	"	"
1100035	"			"	"	"		"	"	"	1908680
1100036	"		1911978	"	"	"		"	"	"	1908680
1100037	"			"	"	"		"	"	"	"
1100038	"		1911978	"	"	"		"	"	"	"
1100039	"		"	"	"	"		"	"	"	"
1100040		1914960		1923284	1858749	"		1905807	820708	"	1908680
1100041		"		"	"	"		"	"	"	"
1100042	"		1924689	1923284	1858749	"		1911263	1912008	"	1908680
1100043	"			"	"	"		"	"	"	"
1100044	817224		1946594	"	"	"		"	"	"	"
1100045	1858603			"	"	"		"	"	"	"
1100046	"			"	"	"		"	"	"	"
1100047	"		1943516	"	"	"		"	"	"	"
1100048	"		1912939	"	"	"		"	"	"	"
1100051	"		1943516	"	"	"		"	"	"	"
1100052	"		1921939	"	"	"		"	"	"	"
1100053	"			"	"	"		"	"	"	"
1100054	"			"	"	"		"	"	"	"
1100055	"			"	"	"		"	"	"	"

†Use 1858603 Collar, also 815660 Space Washer when necessary.

*Included with 1858749 Stud.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCKWASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	1962276	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3; 52
—	Lock Washer—Brush Holder Screw	1914579	All
24	Lock Washer—Brush Lead Screw	1914816	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 42-3-4-5-6-7-8; 51-2
24	Lock Washer—Brush Lead Screw	456413	1100053-4-5
24	Lock Washer—Brush Lead Screw	1914816	1100040-1
—	Lock Washer—Fan Attaching—C.E.	1915173	1100040-1
25	Lock Washer—Field Frame Screw	9421423	1100013-18-19; 21-8; 31
—	Lock Washer—Oil Well Cover Screw	453844	1100043
—	Lock Washer—Regulator Attaching Screw	138479	1100016; 27-9; 32-3-4-5-6-7-8-9; 43-7
26	Lock Washer—Shaft Nut—D.E.	1915265	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 42-3-5-6; 55
26	Lock Washer—Shaft Nut—D.E.	1941978	1100044-7-8; 51-2-3-4
27	Lock Washer—Terminal Stud	1914579	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 42-3-4-5-6-7-8; 51-2-3-4-5
27	Lock Washer—Terminal Stud	1914579	1100040-1
28	Lock Washer—Thru Bolt	9421424	1100013-16-18-19; 21-5-7-8-9; 31-2-3-6-7-8-9; 40-1-2-3-4-5-6-7-8; 51-2-3-4-5
NUTS			
—	Nut—Brush Holder Screw	121743	All
—	Nut—Fan Attaching—C.E.	1915172	1100040-1; 55
29	Nut—Shaft—D.E.	1915172	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9
29	Nut—Shaft—D.E.	1917035	1100040-1
—	Nut—Shaft—D.E.	1915172	1100042-3-4-5-6-7-8; 51-2-3-4
30	Nut—Terminal	121743	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3-4; 52
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 42-3-4-5-6-7-8; 51-2-3-4-5
31	Screw—Ball Bearing Retainer Plate	5017850	1100040-1
—	Screw—Brush Holder Attaching	455290	All
32	Screw—Brush Lead Attaching	453460	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 42-3-4-5-6-7-8; 51-2
32	Screw—Brush Attaching	454458	1100053-4-5
32	Screw—Brush Lead Attaching	453460	1100040-1
33	Screw—Field Frame	225577	1100013-18-19; 21-8; 31
—	Screw—Oil Well Cover	454408	1100043
34	Screw—Pole Shoe	1913960	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3-4-5-6-7-8; 51-2-3-4-5
—	Screw—Regulator Attaching	132900	1100016; 27-9; 32-3-4-5-6-7-8-9; 43-7
WASHERS			
35	Washer—Insul.—Field Terminal Stud	1858753	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3-4-5-6-7-8; 51-2-3-4-5
—	Washer—Felt—C.E.	1927447	1100025-7-9; 32-3-4-6-7-8-9; 42-3-4-5-6-7-8; 51
—	Washer—Felt—C.E.	37077	1100040-1
—	Washer—Felt—C.E.	815042	1100053-4
36	Washer—Felt—D.E.	809961	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 44-5-6-7-8; 51-2-3-4-5
36	Washer—Felt—D.E.	820706	1100040-1
—	Washer—Plain—Regulator Attaching Screw	1856056	1100016; 27-9; 32-3-4-5-6-7-8-9; 43-7
37	Washer—Plain—Terminal Stud	826319	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 53-4-5-6-7-8; 51-2-3-4-5
37	Washer—Plain—Terminal Stud	1919583	1100040-1-2
—	Washer—Shaft Nut—D.E.	1914589	1100040-1
38	Washer—Space—Brush Arm	1857412	1100013-18-19; 21-8; 31
38	Washer—Space—Brush Arm	1904368	1100016; 25-7-9; 32-3-4-5-6-7-8-9; 42-3-4-5-6-7-8; 51-2
38	Washer—Space—Brush Arm	1914741	1100040-1
38	Washer—Space—Inside—D.E.	1915086	1100040-1
39	Washer—Space—Inside—D.E.	809945	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 53-4-5-6-7-8; 51-2-3-4-5
—	Washer—Space—Outside—D.E.	815660	1100028; 45-6


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
MISCELLANEOUS			
—	BAFFLE—C.E.	1915167	1100040-1
—	BALL BEARING—C.E.	904751	1100035; 40-1; 53-4
—	BUSHING—C.E.	812823	1100021
—	BUSHING—C.E.	1927446	1100043
40	CLIP—Terminal—To Brush	200382	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 42-3-4-5-6-7-8; 51-2-3-4-5
40	CLIP—Terminal—To Brush	200346	1100040-1
—	COLLAR—Inside—C.E.	1915169	1100040-1
—	COVER—Oil Well	1914222	1100043
—	CUP—Felt Retainer—C.E.	809960	1100053-4
—	CUP—Felt Retainer—C.E.	1927448	1100025-7-9; 32-3-4-6-7-8-9; 42-3-4-5-6-7-8; 51
—	GASKET—Oil Well Cover	817220	1100043
—	KEY—Woodruff—C.E.	124543	1100040-1
41	KEY—Woodruff—D.E.	124545	1100013-16-18-19; 21-5-7-9; 31-2-3-4-5-6-7-8-9; 42-3-4-5-6-7-8; 51-2-3-4-5
41	KEY—Woodruff—D.E.	124548	1100040-1
—	LEAD—"A" Terminal to Regulator	1911481	1100038-9
—	LEAD—"A" Terminal to Regulator	1911485	1100016; 29; 32-3-5-6-7; 43-4
—	LEAD—"A" Terminal to Regulator	1917571	1100027
—	LEAD—"A" Terminal to Regulator	1914185	1100034
—	LEAD—"F" Terminal to Regulator	1911485	1100016; 27-9; 32-8; 43
—	LEAD—"F" Terminal to Regulator	1911481	1100034-5-6; 47
—	LEAD—"F" Terminal to Regulator	1914185	1100037-9
*42	OILER—C.E.	113702	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3-4-5-6-7-8; 51-2-3-5
43	OILER—D.E.	125609	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3-7-8; 51-2-3-4
43	OILER—D.E.	1880635	1100044
44	PIN—Dowel—C.E.	809062	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3-4-5-6-7-8; 51-2-3-4-5
45	PIN—Dowel—D.E.	809593	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 40-1-2-3-4-5-6-7-8; 51-2-3-4-5
—	PIN—Dowel—In Field Frame	820369	1100021
46	PLATE—Felt Retainer—D.E.	819104	1100013-16-18-19; 21-5-7-8-9; 31-2-3-4-5-6-7-8-9; 42-3-4-7-8; 51-2-3-4-5
46	PLATE—Felt Retainer—D.E.	820709	1100040-1
46	PLATE—Felt Retainer—D.E.	809960	1100045-6
—	PLUG—Bearing Well—C.E.	1948326	1100053-4
—	PLUG—Felt—C.E.	823551	1100053
—	PLUG—Felt—D.E.	823551	1100055
—	REGULATOR	*1118786	1100027
—	REGULATOR	*1118790	1100016; 29; 32-3-4-5-6-7-8-9; 43-7
—	RETAINER—Felt—C.E.	37078	1100040-1
—	RETAINER—Wick—C.E.	1953202	1100045-6; 52-5
—	RING—Bearing Clamp—C.E.	1929959	1100035; 40-1; 53-4
—	SEAL—Oil—C.E.	1945697	1100052-5
—	SPACER—Fan—C.E.	1913688	1100040-1
—	SPACER—Outside—C.E.	1913689	1100040-1
—	SUPPORT—Wick—C.E.	1962216	1100045-6; 52-5
—	THROWER—Oil	1939088	1100040-1
—	THROWER—Oil	1947344	1100045-6
47	WICK—Oil—C.E.	1947350	All
—	WICK—Oil—D.E.	823551	1100016; 25-7-9; 32-3-4-5-6-7-8-9; 42-3-7-8; 51-2-3-4
—	WICK—Oil—D.E.	1947350	1100044

*For parts see Regulator—Group 6-F.

 *Later units use extra capacity Oiler 1931191.

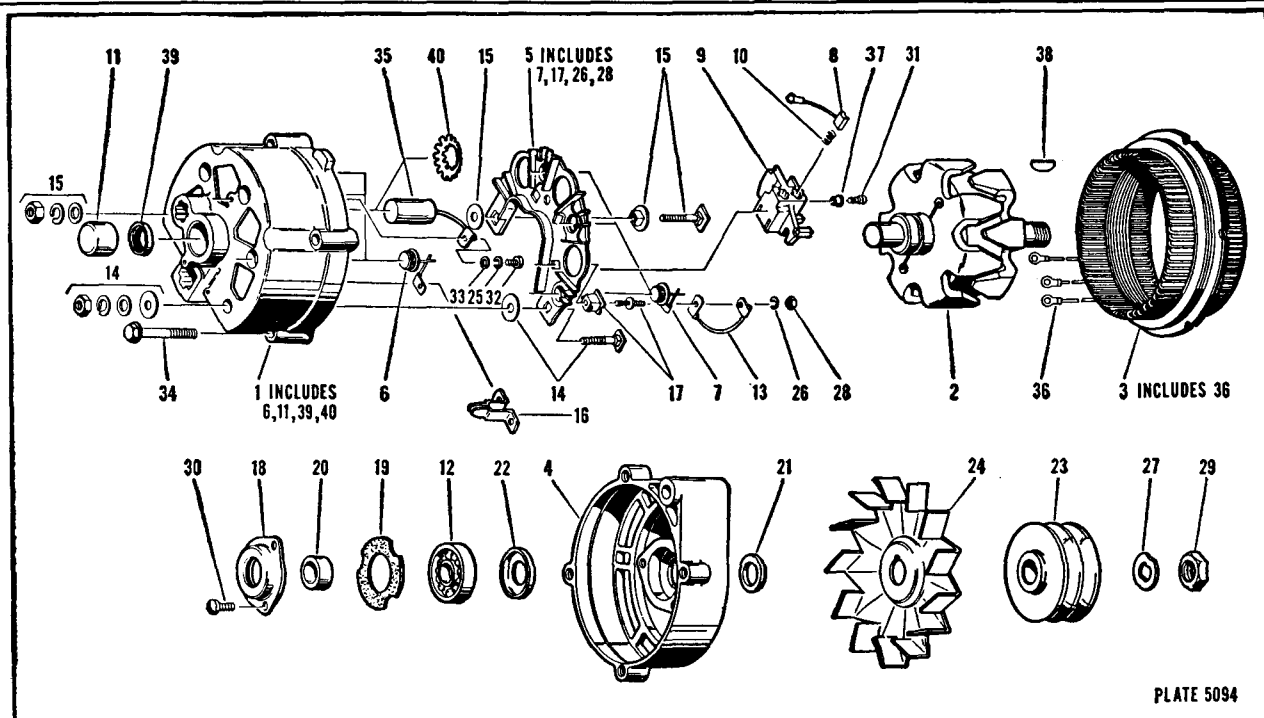

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame — S.R.E.	Rotor — Assem.	Stator — Assem.	Frame — D.E.	Heat Sink — Assem.	Diode	Diode	Brush	Holder — Brush	Spring — Brush	Bearing — S.R.E.	Bearing — D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1100056.....	1971701	1969036	1962025	1969043	1971703	1964354	1964353	×	×	1964117	7451782	907940
1100057.....	1971702	1969064	1959381	1969066	"	"	"	■	■	"	"	"
1100059.....	1969329	1970513	"	1970515	1959828	"	"	■	■	"	7451763	904722
1100061.....	1971701	1971264	1971220	1969043	1971703	"	"	■	■	"	7451782	907940
1100062.....	1971702	1971260	"	1969066	"	"	"	■	■	"	"	"
1100063.....	1969329	800080	1962025	1970515	1959828	"	"	■	■	"	7451763	904722
1100064.....	1964858	800080	"	"	●	"	"	■	■	"	"	908020
1100065.....	1964858	1970513	1959381	"	●	"	"	■	■	"	"	"
1100066.....	1971701	800830	1962025	1969043	1971703	"	"	■	■	"	7451782	907940
1100067.....	801058	"	1962025	"	801057	"	"	■	■	"	"	"
1100068.....	1969329	800080	1962025	1970515	1959828	"	"	■	■	"	7451763	908020
1100071.....	1971701	800830	"	1969043	1971043	"	"	■	■	"	7451782	907940
1100074.....	1969329	1851893	1971220	1970515	1959828	"	"	■	■	"	7451931	908020

■ Serviced by 1964682 Brush Holder and Brush Assem.

* Serviced by 1970140 Brush Holder & Brush Assem.

• Serviced by 1964858 S.R.E. Frame and Heat Sink Assembly.

*A General Motors Trademark

□ Also includes Illus. No. 35.

Delco-Remy
SERVICE PARTS CATALOG

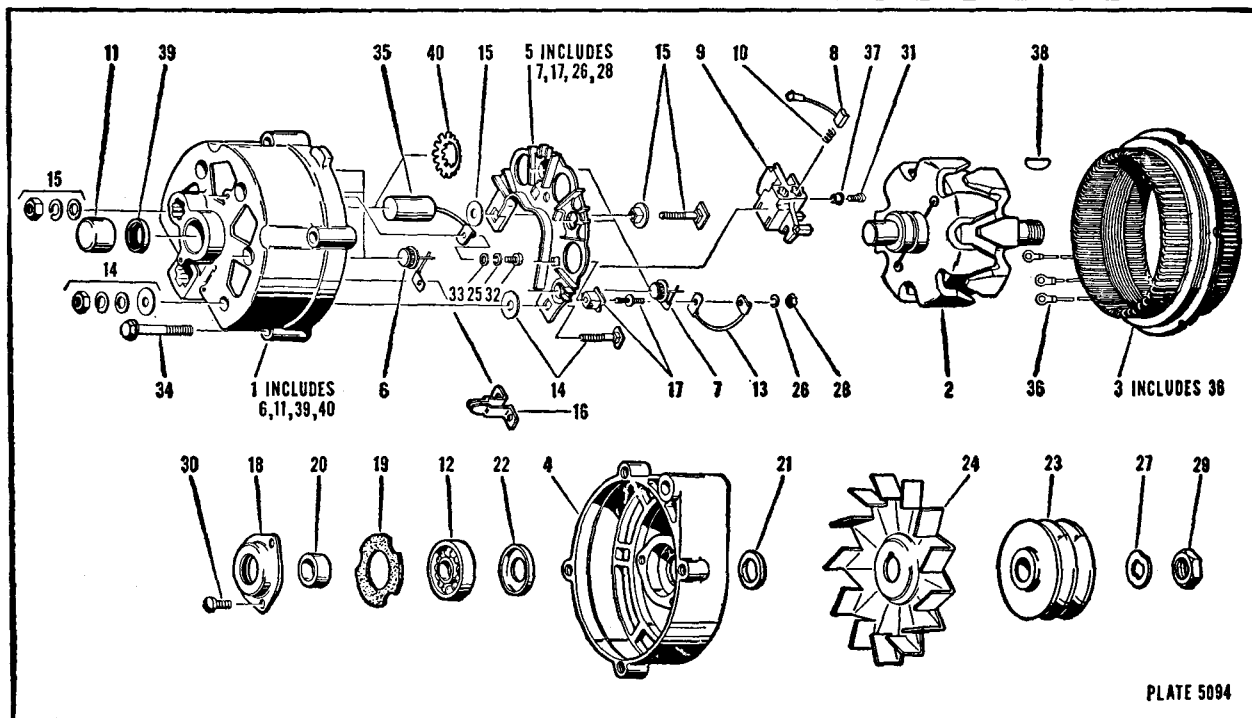 


PLATE 5094

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Lead — Light Indctr.	Term. Pkg. — Battery	Term. Pkg. — Ground	Terminal — Fld. Or. Ind. Lt.	Terminal Pkg. — Diode Junction	Brg. Re-tainer — Assem.	Gasket	Collar — Inside	Collar — Outside	Grease Slinger	Pulley	Fan
	13	14	15	16	17	18	19	20	21	22	23	24
1100056.....		1971704	○		1959834	1961867	1955663	1970384	1969046			1969034
1100057.....		"	○		"	"	"	"	"			1969069
1100059.....		1959832	1959833		"	1970610			1970589	1970590		1970593
1100061.....		1971704	○		"	1961867	1955663	1970384	1969046			1969034
1100062.....		"	○		"	"	"	"	"			1969069
1100063.....		1959832	1959833		"	1970610			1970589	1970590		1970593
1100064.....		"	"		"	"			"	"		"
1100065.....		"	"		"	"			"	"		"
1100066.....		1971704	○		"	1961867	1955663	1970384	1969046			1969034
1100067.....		"	○		"	"	"	"	"			"
1100068.....		1959832	1959833		"	1970610			1970589	1970590		1970593
1100071.....		1971704	○		"	1961867	1955663	1970384	1969046			1969034
1100074.....		1959832	1959833		"	1970610			1970589	1970590		1970593

*A General Motors Trademark


○1971705 Is a Relay Terminal Package

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
—	Lock Washer—Ball Brg. Retainer Plate Attach.	453435	1100064-5-8; 71-4
—	Lock Washer—Brush & Reg. Lead Screws.....	453844	1100056
25	Lock Washer—Capacitor Terminal & Heat Sink.....	1847933	1100071-4
25	Lock Washer—Capacitor Terminal Heat Sink.....	9419392	1100056-7-9; 61-2-3-4-5-6-7
26	Lock Washer—Diode Junction Terminal.....	1846819	1100071-4
26	Lock Washer—Diode Junction Terminal.....	9419392	All
—	Lock Washer—Ground Screw.....	453435	1100056-7; 62; 71
—	Lock Washer—Reg. Heat Sink Screw.....	9427826	1100056
27	Lock Washer—Shaft Nut—D.E.....	1905406	All
NUTS			
28	Nut—Diode Junction Terminal.....	453434	All
29	Nut—Shaft D.E.....	9418881	All
SCREWS			
30	Screw—Ball Brg. Retainer Plate Attaching.....	132839	1100071-4
30	Screw—Ball Brg. Retainer Attaching.....	159920	1100064-5-8; 74
30	Screw—Ball Brg. Retainer Attaching.....	1965104	All except 1100068
31	Screw—Brush Holder Attaching.....	1970144	1100056
31	Screw—Brush Holder Attaching.....	1957501	1100057-9; 61-2-3-4-5-6-7-8; 71
—	Screw—Brush & Reg. Lead Attaching.....	453647	1100056
32	Screw—Capacitor Terminal.....	132768	1100059; 63-4-5-8; 74
32	Screw—Capacitor Term. & Heat Sink Attach.....	1916336	1100056-7; 61-2; 71
—	Screw—Ground.....	132900	1100056-7; 61-2-6-7-71
—	Screw—D.E. Shroud Attaching.....	274937	1100057; 62
—	Screw—Regulator Heat Sink Attaching.....	9427825	1100056
—	Screw—Regulator Attaching to Heat Sink.....	9427801	1100056
WASHERS			
—	Washer—Felt—D.E.....	1955660	1100056-7; 61-2-6-7; 71
—	Washer—Insul. Capacitor Screw.....	1959523	1100059; 63-4-5-8; 74
—	Washer—Insul.—Brush Holder Attaching Screw.....	1970149	1100056-9
—	Washer—Plain—Reg. Heat Sink Screw.....	1881252	1100056
—	Washer—Insul. Reg. Heat Sink Screw.....	1970138	1100056
33	Washer—Plain—Capacitor Terminal & Heat Sink.....	815540	1100056-7; 63-4-5-6-7-8; 71-4
—	Washer—Spring—Brush Holder Attaching Screw.....	9419392	All except 1100071-4
—	Washer—Spring—Brush Holder Attach. Screw.....	1847933	1100071-4
MISCELLANEOUS			
34	BOLT—Thru.....	1956975	All
—	BUSHING—Mtg. Hinge—S.R.E.....	1969062	1100056-7; 61-2-6-7; 71
35	CAPACITOR.....	1959455	All
—	CONNECTOR—Strap—Relay Term. to Diode Junc.....	1969073	1100056-7; 61-2-6-7; 71
36	CLIP—Stator Lead Terminal.....	1846548	All
—	DAMPENER—Heat Sink.....	1969055	1100056-7; 61-2-6-7; 71
—	DUST SHIELD—D.E.....	1969070	1100057; 62
—	HEAT SINK—Regulator.....	1970135	1100056
—	INSULATOR—Capacitor Term. Screw & Heat Sink.....	1959389	All
—	INSULATOR—Cap. Term. & Heat Sink Attach.....	1969052	1100056-7; 61-2-6-7; 71
—	PIN—Dowel—S.R.E.....	455150	1100056-7; 61-2-6-7; 71
—	PLATE—Felt retainer—D.E.....	1955664	1100056-7; 61-2-6-7; 71
—	PLUG—Expansion—S.R.E.....	1969056	1100056-7; 61-2-6-7; 71
39	SEAL—S.R.E. Bearing.....	1961323	All
—	SEAL—Terminal.....	1970722	1100056-2-6
—	SEAL—Rotor Shaft.....	1969042	1100056-7; 61-2-6-7; 71
—	SHROUD—D.E.....	1969068	1100057; 62
—	TUBE—Insul. Reg. Heat Sink Screw.....	1970139	1100056; 62
—	REGULATOR (Service by Complete Replacement).....	1116379	1100056
40	RETAINER—Capacitor Retaining Spring.....	1960750	All

 *A General Motors Trademark

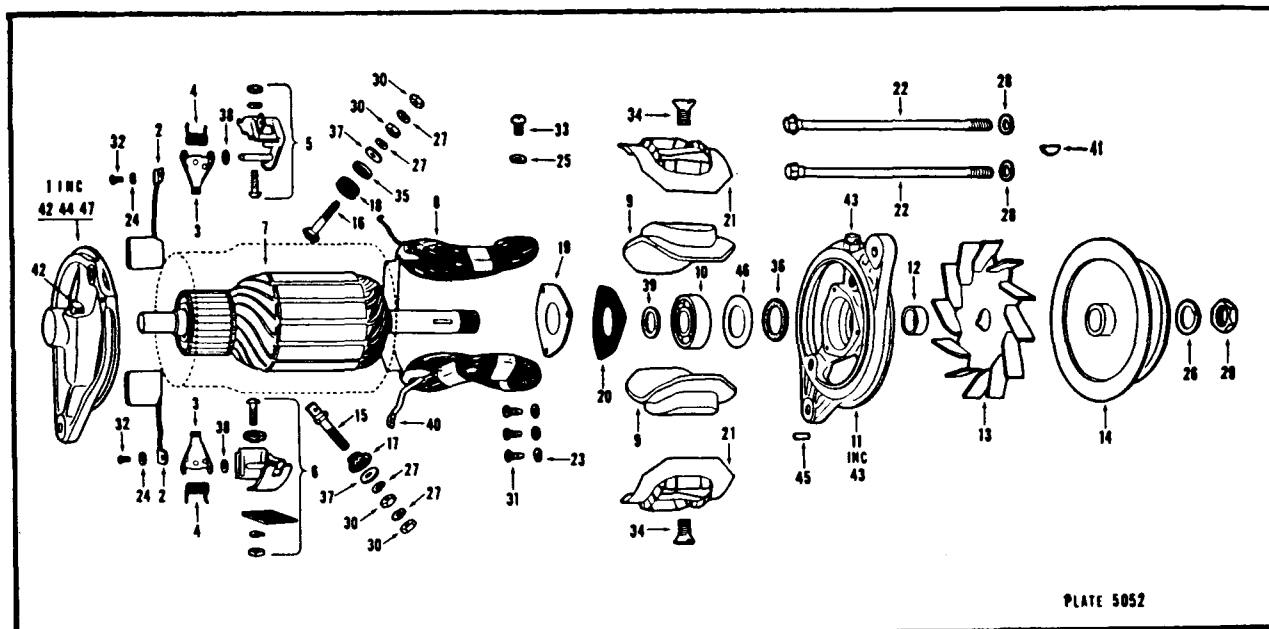

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame — C.E.	Brush	Arm — Brush	Spring — Brush	Holder — (Pkg.) Ground Brush	Holder — (Pkg.) Insul. Brush	Armature	Coll — Field Assembly	Shoe — Pole	Ball Bearing — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1100301	1932054	1932506	1944373	1916324	1925378	1925379	1923626	1923625	1914618	954378	1922185
1100304	1940001	"	"	"	"	"	1928952	"	"	"	1934300
1100305	1951512	"	"	"	"	"	817807	"	"	907503	1910404
1100306	"	1923295	"	"	"	"	1947352	"	"	"	1953882
1100307	"	"	"	"	"	"	"	"	"	"	"
1100309	1947336	1932506	"	"	"	"	817807	"	"	"	1925097
1100310	1933933	"	"	"	"	"	1928952	"	"	954378	1910404
1100313	1940001	1923295	"	"	"	"	"	"	"	"	1934300
1100314	1951512	1932506	"	"	"	"	817807	"	"	907503	1953882
1100315	"	"	"	"	"	"	1871826	"	"	"	"
1100316	"	"	"	"	"	"	817807	"	"	"	"
1100317	1947336	"	"	"	"	"	"	"	"	"	1925097
1100318	Same parts as 1100310										
1100319	Same parts as 1100313										
1100321	1933113	1932506	1944373	1916324	1925378	1925379	1928952	1923625	1914618	954378	1933109
1100322	1929513	"	"	"	"	"	1933202	"	"	907503	1953882
1100323	1921979	1923295	"	"	"	"	1925960	"	"	954378	1882433
1100324	1933933	1932506	"	"	"	"	1928952	"	"	"	1910404
1100326	"	"	"	"	"	"	"	"	"	"	"
1100327	1929513	"	"	"	"	"	1933202	"	"	907503	1953882
1100328	1935265	"	"	"	"	"	1932746	"	"	"	"
1100332	1951512	1906984	"	"	"	"	817807	"	"	"	"
1100333	1940001	1923295	"	"	"	"	1928952	"	"	954378	1934300
1100334	1951512	1932506	"	"	"	"	817807	"	"	907503	1953882
1100335	"	"	"	"	"	"	"	"	"	"	"
1100336	1933933	"	"	"	"	"	1928952	"	"	954378	1910404
1100337	1951512	1923295	"	"	"	"	"	"	"	"	1953882
1100338	1913822	"	"	"	"	"	1913852	"	"	954521	1926987
1100339	"	"	"	"	"	"	"	1946117	"	"	"

Delco-Remy SERVICE PARTS CATALOG

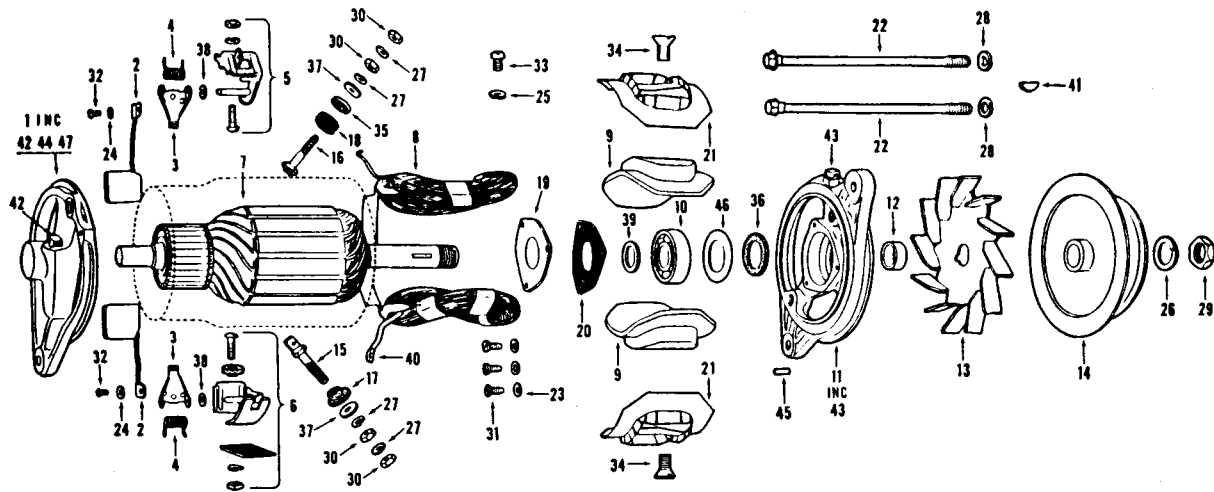 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space — D.E.	Fan	Pulley or Pulley & Fan	Stud "A" Terminal	Stud "F" Terminal	Bushing — Insul. "A" Terminal	Bushing — Insul. "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coil	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1100301.....	1858603			1923284	1858749	1921362		1911263	1912008	1914491	1908680
1100304.....	"		1924689	"	"	"		"	"	"	"
1100305.....	"			"	"	"		"	"	"	"
1100306.....	"			"	"	"		"	"	"	"
1100307.....	"			"	"	"		"	"	"	"
1100309.....	"		1924689	"	"	"		"	"	"	"
1100310.....	"			"	"	"		"	"	"	"
1100313.....	"			"	"	"		"	"	"	"
1100314.....	"		1911978	"	"	"		"	"	"	"
1100315.....	"			"	"	"		"	"	"	"
1100316.....	"			"	"	"		"	"	"	"
1100317.....	"			"	"	"		"	"	"	"
1100318.....	Same parts as 1100310										
1100319.....	Same parts as 1100313										
1100321.....	1858603			1923284	1858749	1921362		1911263	1912008	1914491	1908680
1100322.....	"			"	"	"		"	"	"	"
1100323.....	"		1924689	"	"	"		"	"	"	"
1100324.....	"			"	"	"		"	"	"	"
1100326.....	"			"	"	"		"	"	"	"
1100327.....	"			"	"	"		"	"	"	"
1100328.....	"	1866400	1945759	"	"	"		"	"	"	"
1100332.....	"			"	"	"		"	"	"	"
1100333.....	"	1866400	1936435	"	"	"		"	"	"	"
1100334.....	"		1911233	"	"	"		"	"	"	"
1100335.....	"		1911978	"	"	"		"	"	"	"
1100336.....	"		1924689	"	"	"		"	"	"	"
1100337.....	"	1866400	1911985	"	"	"		"	"	"	"
1100339.....				"	"	"		1905807	820708	"	"
1100339.....				"	"	"		"	"	"	"

*Included with 1858749 Stud.

Revised to July 1, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	1962276	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7-8-9
—	Lock Washer—Brush Holder Screw	1914579	All
24	Lock Washer—Brush Lead Screw	1914816	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7-8-9
—	Lock Washer—End Cover Plate Screw—C.E.	453844	1100328
—	Lock Washer—Fan Attaching	1915173	1100338-9
25	Lock Washer—Field Frame Screw	9421423	1100304; 10-13; 21-3-4-6; 33-6-7
—	Lock Washer—Regulator Attaching Screw	138479	1100301-6-7-9; 14-15-16-17; 22-7-8; 34-5
26	Lock Washer—Shaft Nut—D.E.	1915265	1100301-4-5-9; 10-13-14-15-16-17; 21-2-3-7-8; 32-3-4-5-6-7
26	Lock Washer—Shaft Nut—D.E.	1941978	1100324-6
27	Lock Washer—Terminal Stud	1914579	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7-8-9
28	Lock Washer—Thru Bolt	9421424	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7-8-9
NUTS			
—	Nut—Brush Holder Screw	121743	All
—	Nut—Fan Attaching—C.E.	1915172	1100338-9
29	Nut—Shaft—D.E.	1915172	1100301-4-5-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7
29	Nut—Shaft—D.E.	1917570	1100306-7
29	Nut—Shaft—D.E.	1917035	1100338-9
30	Nut—Terminal	121743	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7-8-9
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7
31	Screw—Ball Bearing Retainer Plate—D.E.	5017850	1100338-9
—	Screw—Brush Holder Attaching	455290	All
32	Screw—Brush Lead Attaching	453460	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7
32	Screw—Brush Lead Attaching	453460	1100338-9
—	Screw—End Cover Plate Attaching—C.E.	454408	1100328
33	Screw—Field Frame	225577	1100304; 10-13; 21-3-4-6; 33-6-7
34	Screw—Pole Shoe	1913960	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7-8-9
—	Screw—Regulator Attaching	132900	1100301-6-7-9; 14-15-16-17; 22-7-8; 34-5
WASHERS			
35	Washer—Insul.—Field Terminal Stud	1858753	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7-8-9
—	Washer—Felt—C.E.	1927447	1100305-6-7-9; 14-15-16-17; 28; 34-5
—	Washer—Felt—C.E.	37077	1100338-9
36	Washer—Felt—D.E.	809961	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7
36	Washer—Felt—D.E.	820706	1100338-9
—	Washer—Plain—Regulator Attaching Screw	1856056	1100301-6-7-9; 14-15-16-17; 22-7-8; 34-5
37	Washer—Plain—Terminal Stud	826319	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7
37	Washer—Plain—Terminal Stud	1954452	1100338-9
—	Washer—Shaft Nut—D.E.	1914589	1100306-7; 38-9
38	Washer—Space—Brush Arm	1857412	1100304; 10-13; 21-3-4-6; 33-6-7
38	Washer—Space—Brush Arm	1904368	1100301-5-6-7-9; 14-15-16-17; 22-7-8; 32-4-5
38	Washer—Space—Brush Arm	1914741	1100338-9
39	Washer—Space—Inside—D.E.	809945	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7
39	Washer—Space—Inside—D.E.	822644	1100338-9
MISCELLANEOUS			
—	BAFFLE—C.E.	1915167	1100338-9
—	BALL BEARING—C.E.	904751	1100322-7; 38-9
—	BUSHING—C.E.	812823	1100323
—	BUSHING—C.E.	1927446	1100328

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
40	CLIP—Terminal—To Brush.....	200382	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7
40	CLIP—Terminal to Brush.....	200346	1100338-9
—	COLLAR—Inside—C.E.....	1915169	1100338-9
—	CUP—Felt Retainer—C.E.....	1927448	1100305-6-7-9; 14-15-16-17; 28; 34-5
—	FAN—C.E.....	1866400	1100338-9
—	GASKET—End Cover Plate—C.E.....	817220	1100328
—	KEY—Woodruff—C.E.....	124543	1100338-9
41	KEY—Woodruff—D.E.....	124545	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7
41	KEY—Woodruff—D.E.....	124548	1100338-9
—	LEAD—"A" Terminal to Regulator.....	1911485	1100301-6-7-14-15-16; 22-7-8; 35
—	LEAD—"A" Terminal to Regulator.....	1917571	1100309
—	LEAD—"A" Terminal to Regulator.....	1914185	1100317
—	LEAD—"F" Terminal to Regulator.....	1911485	1100301-6-7-9; 14-17; 22-7; 34
—	LEAD—"F" Terminal to Regulator.....	1914185	1100315-16; 28-; 35
42	OILER—C.E.....	113702	1100301-4-5-6-7-9; 13-14-15-16-17; 22-3-4-7; 32-3-4-5-7
42	OILER—C.E.....	9416777	1100310
42	OILER—C.E.....	125609	1100321-6-8; 36-8-9
43	OILER—D.E.....	125609	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-22-3-4-6-7-8; 32-3-4-5-6-7
43	OILER—D.E.....	113702	1100338-9
44	PIN—Dowel—C.E.....	809062	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7-8-9
45	PIN—Dowel—D.E.....	809593	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7-8-9
—	PIN—Dowel—In Field Frame.....	820369	1100323
—	PLATE—End Cover—C.E.....	1914222	1100328
46	PLATE—Felt Retainer—D.E.....	819104	1100301-4-5-6-7-9; 10-13-14-15-16-17; 21-2-3-4-6-7-8; 32-3-4-5-6-7
46	PLATE—Felt Retainer—D.E.....	820709	1100338-9
—	PLUG—Oil Hole—C.E.....	1911097	1100321-6-8
—	REGULATOR.....	*1118783	1100309
—	REGULATOR.....	*1118791	1100301-6-7; 14-15-16-17; 22-7-8; 34-5
—	RETAINER—Felt—C.E.....	37078	1100338-9
—	RING—Bearing Clamp—C.E.....	1929959	1100322-7; 38-9
—	SPACER—Fan—C.E.....	1913688	1100338-9
—	SPACER—Outside—C.E.....	1913689	1100338-9
—	THROWER—Oil—D.E.....	1919657	1100338
—	THROWER—Oil.....	1939088	1100339
47	WICK—Oil—C.E.....	1947350	All
—	WICK—Oil—D.E.....	823551	1100301-5-6-7-9; 14-15-16-17; 22-7-8; 32-4-5

*For parts see Regulator—Group 6-E.

*If C.E. Oiler hole is $\frac{3}{16}$ " dia. use 125609; for $\frac{1}{4}$ " dia. use 113702. Some later units use extra capacity Oiler 1931191.

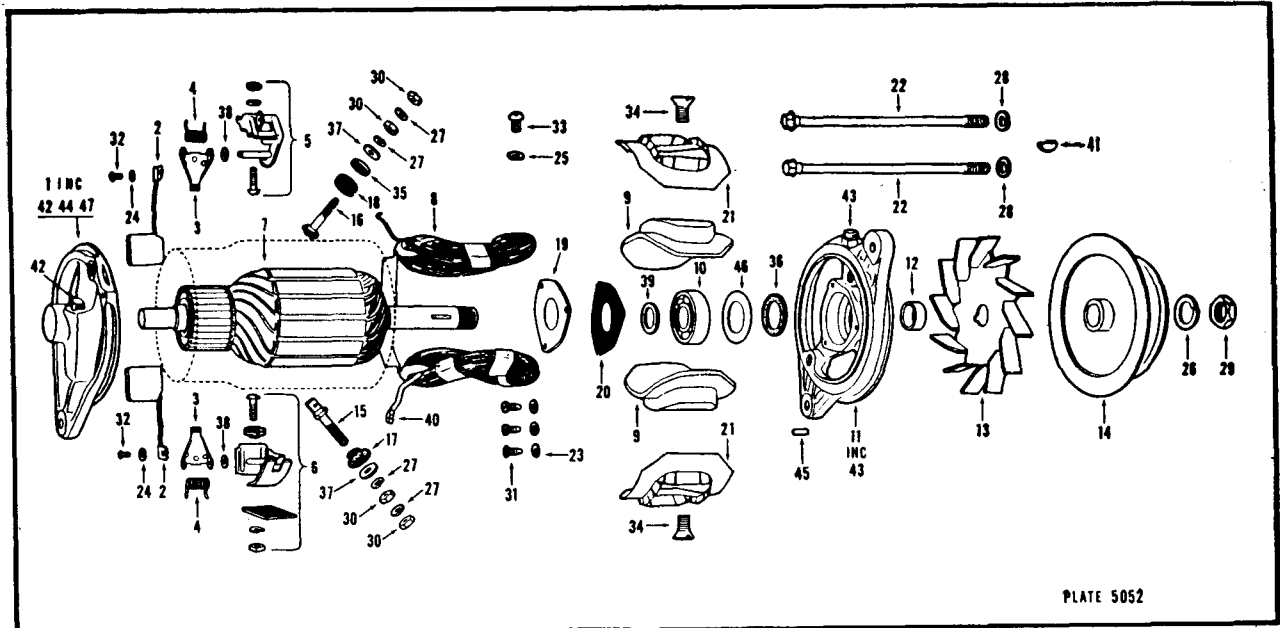 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame C.E.	Brush	Arm Brush	Spring Brush	Holder (Pkg.) Ground Brush	Holder (Pkg.) Insul. Brush	Armature	Coil Field Assembly	Shoe Pole	Ball Bearing D.E.	Frame D.E.
	1	2	3	4	5	6	7	8	9	10	11
1100341.....	1947336	1932506	1944373	1916324	1925378	1925379	817807	1923625	1914618	907503	1925097
1100342.....	1951512	"	"	"	"	"	1928952	"	"	"	1953882
1100344.....	"	1932506	"	"	"	"	"	"	"	"	"
1100345.....	1929513	"	"	"	"	"	1933202	"	"	"	"
1100346.....	1951512	1923295	"	"	"	"	1947352	"	"	"	1881874
1100347.....	"	"	"	"	"	"	"	"	"	"	1953882
1100348.....	"	1932506	"	"	"	"	817807	"	"	"	"
1100349.....	"	"	"	"	"	"	"	"	"	"	"
1100350.....	"	"	"	"	"	"	"	"	"	"	"
1100351.....	1942630	"	"	1946798	"	"	1942626	1922700	"	900529	817879
1100352.....	1951512	"	"	1916324	"	"	817807	1923625	"	907503	1953882
1100353.....	1935265	"	"	"	"	"	1932746	"	"	"	"
1100354.....	1951512	1923295	"	"	"	"	1928952	"	"	"	"
1100355.....	"	1932506	"	"	"	"	817807	"	"	954378	"
1100356.....	"	"	"	"	"	"	"	"	"	907503	"
1100357.....	1933933	"	"	"	"	"	1948086	1946117	"	954378	1945332
1100358.....	1951512	"	"	"	"	"	1928952	1923625	"	907503	1953882
1100359.....	1935265	"	"	"	"	"	1932746	"	"	"	"
1100360.....	1951512	"	"	"	"	"	817807	"	"	"	"
1100361.....	1946595	1923295	"	"	"	"	1925348	"	"	"	1908869
1100362.....	1935265	1932506	"	"	"	"	1932746	"	"	"	1953882
1100363.....	"	"	"	"	"	"	817807	"	"	"	"
1100364.....	"	"	"	"	"	"	"	"	"	"	"
1100365.....	1953880	1923295	"	"	"	"	1946903	"	"	954378	"
1100366.....	1942630	"	"	1946798	"	"	1946782	1922700	"	900529	817879
1100367.....	1947336	"	"	1916324	"	"	817807	1923625	"	907503	1925097
1100368.....	1947336	"	"	"	"	"	1947352	"	"	"	1947341
1100369.....	1951512	1932506	"	"	"	"	817807	"	"	"	1953882
1100370.....	1947614	"	"	"	"	"	"	"	1914618	"	1929171
1100371.....	1951512	"	"	"	"	"	"	"	"	"	1953882

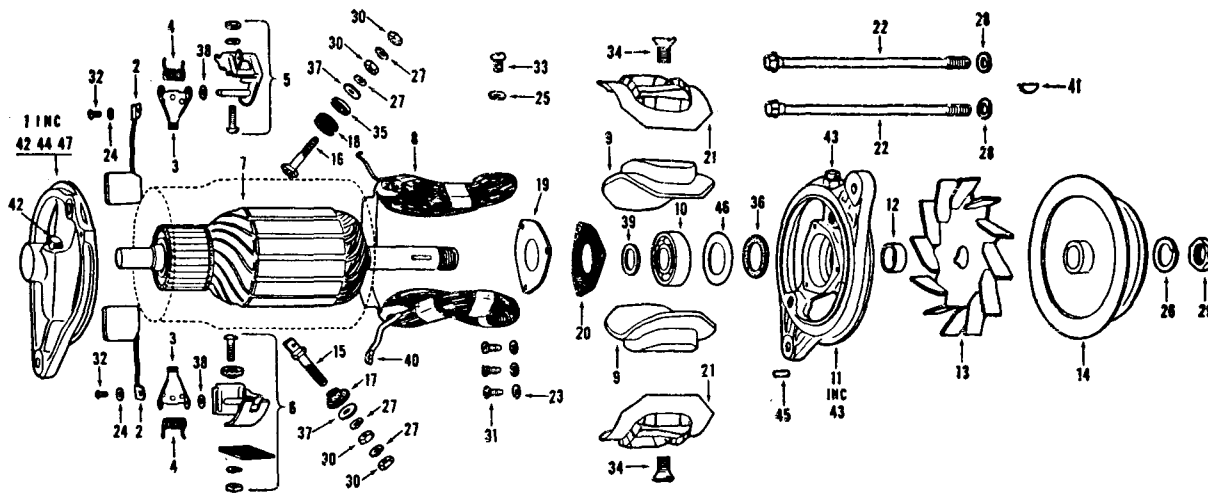 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space — D.E.	Fan	Pulley or Pulley & Fan	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	* Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coil	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1100341.....	1858603		1911233	1923284	1858749	1921362		1911263	1912008	1914491	1908680
100342.....	"			"	"	"		"	"	"	"
1100344.....	"	1866400	1945759	"	"	"		"	"	"	"
1100345.....	"			"	"	"		"	"	"	"
1100346.....	"			"	"	"		"	"	"	"
1100347.....	"			"	"	"		"	"	"	"
1100348.....	"	1866400	1945759	"	"	"		"	"	"	"
1100349.....	"			"	"	"		"	"	"	"
1100350.....	"	1866400	1940343	"	"	"		"	"	"	"
1100351.....	817224			"	"	"		"		"	1915090
1100352.....	1858603	1866400	1940343	"	"	"		"	1912008	"	1908680
1100353.....	"			"	"	"		"	"	"	"
1100354.....	"			"	"	"		"	"	"	"
1100355.....	"		1943516	"	"	"		"	"	"	"
1100356.....	"			"	"	"		"	"	"	"
1100357.....	"			"	"	"		"	"	"	"
1100358.....	"			"	"	"		"	"	"	"
1100359.....	"	1866400	1942911	"	"	"		"	"	"	"
1100360.....	"	"	1945759	"	"	"		"	"	"	"
1100361.....	817224		1947620	"	"	"		"	"	"	"
1100362.....	1858603	1866400	1946716	"	"	"		"	"	"	"
1100363.....	"	1944437	1942943	"	"	"		"	"	"	"
1100364.....	"	1866400	1946716	"	"	"		"	"	"	"
1100365.....	"		1911985	"	"	"		"	"	"	"
1100366.....	817224			"	"	"		"		"	1915090
1100367.....	1858603	1944437	1946594	"	"	"		"	1912008	"	1908680
1100368.....	"			"	"	"		"	"	"	"
1100369.....	"	1866400	1947417	"	"	"		"	"	"	"
1100370.....	"	1944437	1961291	"	"	"		"	"	"	"
1100371.....	"	1944437	1947813	"	"	"		"	"	"	"

*Included with 1858749 Stud.

Revised to July 1, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	1962276	1100341-2-4-5-6-7-8-9; 50-1-2-3-4-5-6-8; 60
24	Lock Washer—Brush Lead Screw	1914816	1100341-2-4-5-6-7-8-9; 50-1-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1
—	Lock Washer—Field Frame Ground	1914579	1100353
—	Lock Washer—Field Frame Ground	9421423	1100354; 65
—	Lock Washer—Oil Well Cover Attaching	453844	1100353; 59; 62-3-4 -
—	Lock Washer—Regulator Attaching Screw	138479	1100360; 69; 70
26	Lock Washer—Shaft Nut—D.E.	1915265	1100341-2-4-5-6-8-9; 50-2-8; 68
26	Lock Washer—Shaft Nut—D.E.	1941978	1100349; 50-2-3-4-5-6-7-9; 60-5-9
26	Lock Washer—Shaft Nut—D.E.	1915265	1100351; 66
27	Lock Washer—Terminal Stud	1914579	1100341-2-4-5-6-7-8-9; 50-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-7-8-9; 70-1
27	Lock Washer—Terminal Stud	1914579	1100351; 66
28	Lock Washer—Thru Bolt	9421424	1100341-2-4-6-7-8-9; 50-1-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1
NUTS			
—	Nut—Field Frame—Ground	121743	1100353
—	Nut—Field Frame—Ground	225577	1100354
29	Nut—Shaft—D.E.	1915172	1100341-2-4-5-6-8-9; 50-2-3-4-5-6-8-9; 60-1-2-3-4-5-8-9; 70-1
29	Nut—Shaft—D.E.	1914308	1100346-7
29	Nut—Shaft—D.E.	1915172	1100351; 66
29	Nut—Shaft—D.E.	1947830	1100357
30	Nut—Terminal	121743	1100341-2-4-5-6-7-8-9; 50-1-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1100341-2-4-5-6-7-8-9; 50-1-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1
32	Screw—Brush Lead Attaching	453460	1100341-2-4-5-6-7-8-9; 50-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-7-8-9; 70-1
32	Screw—Brush Lead Attaching	453460	1100351; 66
—	Screw—Field Frame Ground	225577	1100365
—	Screw—Oil Well Cover Attaching	454408	1100353; 59; 62-3-4
34	Screw—Pole Shoe	1913960	1100341-5-6-7-8-9; 50-1-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1
34	Screw—Pole Shoe	1940326	1100342-4
—	Screw—Regulator Attaching	132900	1100341-4-8-9; 50-2; 60; 69; 70
WASHERS			
35	Washer—Insul.—Field Terminal Stud	1858753	1100341-2-4-5-6-7-8-9; 50-1-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1
—	Washer—Felt—C.E.	1927447	1100341-2-4-5-8; 50-2-3-4-5-6-8-9; 60-1-2-3-4-7-8-9; 70-1
36	Washer—Felt—D.E.	809961	1100341-2-4-6-7-8-9; 50-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-7-8-9; 70-1
—	Washer—Plain—Regulator Attaching Screw	1856056	1100341-4-8-9; 50-2; 60; 70-1
37	Washer—Plain—Terminal Stud	826319	1100341-2-4-5-6-7-8-9; 50-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-7-8-9; 70-1
37	Washer—Plain—Terminal Stud	1954452	1100351; 66
—	Washer—Space—Ball Bearing—D.E.	1861589	1100351; 66
38	Washer—Space—Brush Arm	1904368	1100341-2-4-5-6-7-8-9; 50-2-3-5-6-8-9; 60-1-2-3-4-7-8-9; 71
38	Washer—Space—Brush Arm	1914741	1100351; 66
38	Washer—Space—Brush Arm	1857412	1100357; 65
39	Washer—Space—Inside—D.E.	809945	1100341-2-4-5-6-7-8-9; 50-1-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1
—	Washer—Space—Outside—D.E.	1838472	1100368
—	Washer—Spring—Shaft Nut	1941978	1100361-2-3-4; 70-1
MISCELLANEOUS			
—	BAFFLE—Fan—D.E.	1877887	1100367
—	BALL BEARING—C.E.	904751	1100345; 65
—	BALL BEARING—C.E.	900529	1100351; 66
—	BUSHING—C.E.	1927446	1100342; 53; 62-3-4
40	CLIP—Terminal—To Brush	200382	1100341-2-4-5-6-7-8-9; 50-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-7-8-9; 70-1

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION


Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
—	CLIP—Terminal to Brush.....	200346	1100351; 66
—	COVER—Oil Well—C.E.....	1914222	1100353-9; 62-3-4
—	CUP—Felt Retainer—C.E.....	1927448	1100341-2-4-8; 50-2-3-4-5-6-8-9; 60-1-2-3-4-7-8-9; 70-1
—	GASKET—Oil Well—Cover—C.E.....	817220	1100353; 59; 62-3-4
41	KEY—Woodruff—D.E.....	124545	1100341-2-4-5-6-7-8-9; 50-1-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1
—	LEAD—"A" Terminal to Regulator.....	1914185	1100341-4; 52; 69
—	LEAD—"A" Terminal to Regulator.....	1911485	1100348-9; 50; 60
—	LEAD—"F" Terminal to Regulator.....	1914185	1100370
—	LEAD—"F" Terminal to Regulator.....	1911485	1100341-4-8-9; 50-2; 60; 70
—	LEAD—"F" Terminal to Regulator.....	1914187	1100369
42	OILER—C.E.....	113702	1100341-2-4-5-6-7-8-9; 50-2-3-4-5-6-7-8; 60-7-8-9; 70-1
42	OILER—C.E.....	125609	1100359; 61-2-3-4-5
43	OILER—D.E.....	125609	1100341-2-4-5-6-7-8-9; 50-2-3-4-5-6-7-8-9; 60-2-3-4-5-7-9; 70-1
43	OILER—D.E.....	113702	1100361
44	PIN—Dowel—C.E.....	809062	1100341-2-4-5-6-7-8-9; 50-1-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1
45	PIN—Dowel—D.E.....	809593	1100341-2-4-5; 53-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1
—	PIN—Dowel—In Field Frame.....	820369	1100351; 66
46	PLATE—Felt Retainer—D.E.....	819104	1100341-2-4-5-6-7-8-9; 50-2-3-4-5-7-8-9; 60-1-2-3-4-5-7-9; 70-1
—	PLATE—Felt Washer Retainer.....	809960	1100368
—	PLUG—C.E.....	1911097	1100353-7-9; 62-3-4
—	PLUG—Expansion—C.E.....	1950252	1100365
—	REGULATOR.....	*1118791	1100341-8-9; 50; 70
—	REGULATOR.....	*1118792	1100344; 52; 60
—	REGULATOR.....	□1118991	1100369
—	RETAINER—Wick—C.E.....	1953202	1100368
—	RING—Bearing Clamp—C.E.....	1929959	1100345; 51; 65-6
—	THROWER—Oil—D.E.....	1947344	1100368
—	WICK—Felt—D.E.....	823551	1100341-4-5; 53-4-5-6-8-9; 62-3-4-5-7-9; 70-1
47	WICK—Oil—C.E.....	1947350	All
—	WICK—Oil—D.E.....	823551	1100341-2-4-6-7-8-9; 50-2; 60
—	WICK—D.E.....	1947350	1100361

*For parts see Regulator—Group 6-F.

□For parts see Regulator—Group 6-J.

Revised to July 1, 1969

 SERVICE PARTS CATALOG

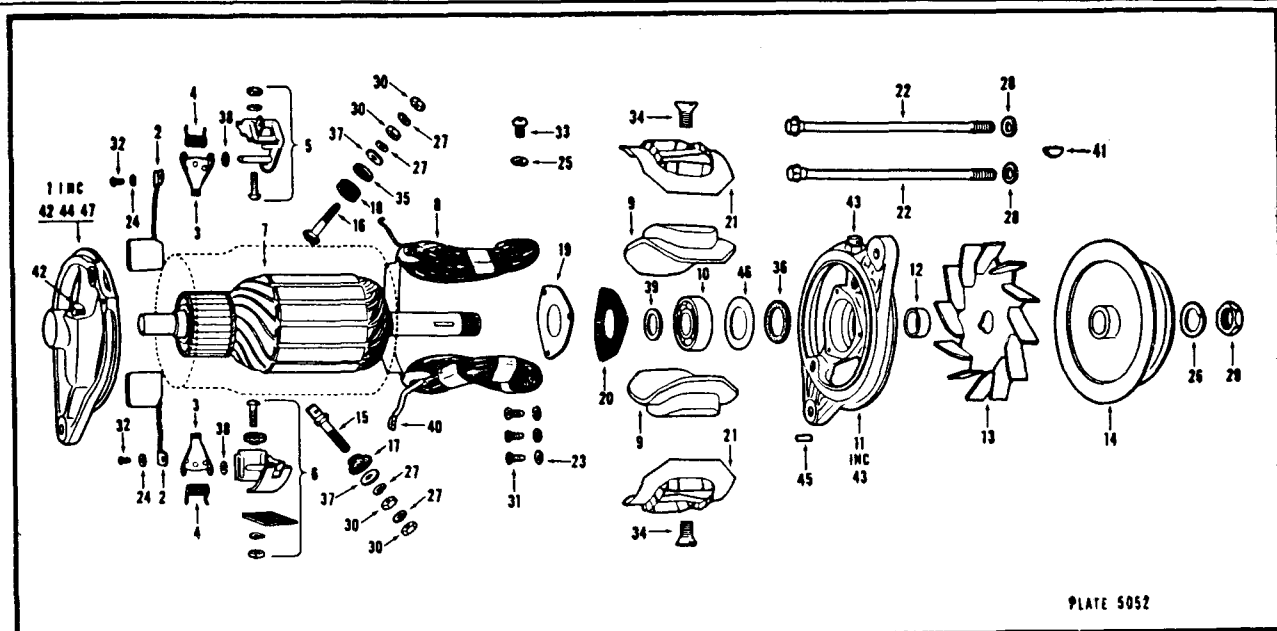

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame C.E.	Brush	Arm Brush	Spring Brush	Holder (Pkg.) Ground Brush	Holder (Pkg.) Insul. Brush	Armature	Coil Field Assembly	Shoe Pole	Ball Bearing D.E.	Frame D.E.
	1	2	3	4	5	6	7	8	9	10	11
1100372.....	1951512	1906956	1944373	1916324	1925378	1925379	1946903	1923625	1914618	954378	1933109
1100373.....	1939984	1906937	"	"	"	"	"	"	"	"	1934300
1100374.....	1953880	1923295	"	"	"	"	"	1953879	"	"	1953882
1100376.....	1939984	"	"	"	"	"	"	1923625	"	"	1934300
1100377.....	1953880	1932506	"	"	"	"	"	"	"	"	1953882
1100378.....	1948012	"	"	"	"	"	"	"	"	"	1933109
1100379.....	1935265	"	"	"	"	"	1932746	"	"	907503	1953882
1100380.....	1953880	"	"	"	"	"	1949917	1950084	"	900529	"
1100381.....	1951512	"	"	"	"	"	817807	1923625	"	907503	"
1100382.....	"	"	"	"	"	"	1971826	"	"	"	"
1100383.....	1945261	"	"	"	"	"	817807	"	"	"	1944267
1100384.....	1951512	1923295	"	"	"	"	1928952	"	"	"	1953882
1100385.....	1935265	1932506	"	"	"	"	1932746	"	"	"	"
1100386.....	1951434	"	"	"	"	"	1948086	1946117	"	953478	1951438
1100387.....	1954334	"	"	"	"	"	1949917	1923625	"	907503	1950634
1100388.....	1927451	1932506	"	"	"	"	1928952	"	"	954378	1953882
1100389.....	1951273	1932506	"	"	"	"	1951267	1951277	"	"	1951265
1100390.....	1953880	"	"	"	"	"	1949917	1923625	"	907503	1953882
1100391.....	"	"	"	"	"	"	1946903	"	"	"	"
1100392.....	"	"	"	"	"	"	"	"	"	"	"
1100393.....	1951273	"	"	"	"	"	1951267	1951277	"	954378	1951265
1100394.....	1951512	"	"	"	"	"	1928952	1923625	"	907503	1953882
1100395.....	"	"	"	"	"	"	"	"	"	"	"
1100396.....	"	"	"	"	"	"	817807	"	"	"	"
1100397.....	"	"	"	"	"	"	"	"	"	"	"
1100398.....	1953880	"	"	"	"	"	1949917	"	"	"	"
1100399.....	1951909	"	"	"	"	"	817807	"	"	"	1951908

Delco-Remy SERVICE PARTS CATALOG

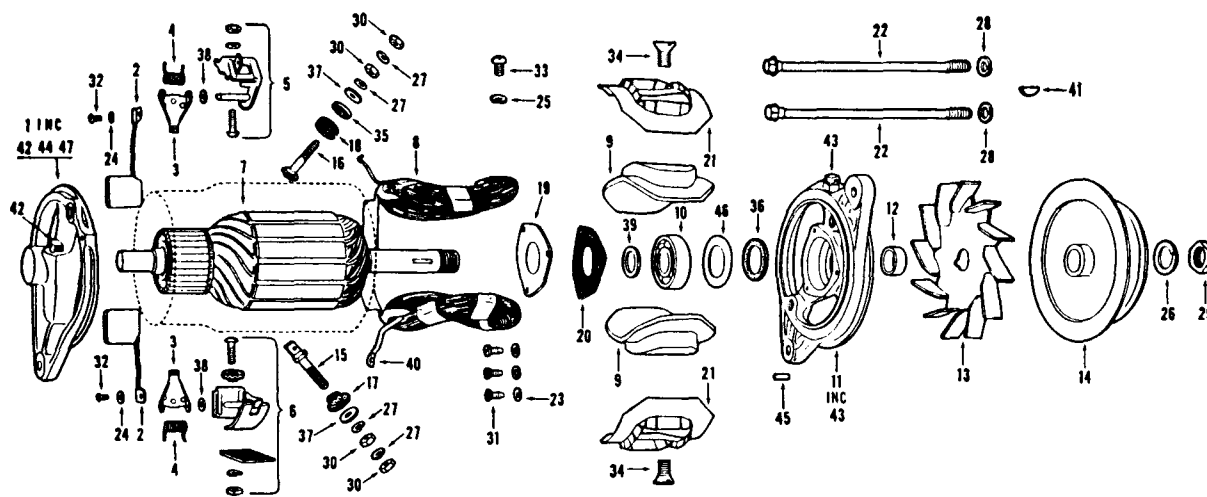 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space D.E.	Fan	Pulley or Pulley & Fan	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	* Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coil	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1100372	1858603			1923284	1858749	1921362		1911263	1912008	1914491	1908680
1100373	"			"	"	"		"	"	"	"
1100374	"			"	"	"		"	"	"	"
1100376	"			"	"	"		"	"	"	"
1100377	"			"	"	"		"	"	"	"
1100378	"			"	"	"		"	"	"	"
1100379	"			"	"	"		"	"	"	"
1100380	"	1944437	1949916	"	"	"		"	1912008	"	"
1100381	"			"	"	"		"	"	"	"
1100382	"	1944437	1950392	"	"	"		"	"	"	"
1100383	"	1966990	1946716	"	"	"		"	"	"	"
1100384	"		1943516	"	"	"		"	"	"	"
1100385	"	1944437	1950420	"	"	"		"	"	"	"
1100386	"			"	"	"		"	"	"	"
1100387	"		1943516	"	"	"		"	"	"	"
1100388	"		1911978	"	"	"		"	"	"	"
1100389	"	1944437	1949355	"	"	"		"	"	"	"
1100390	"	"	1950392	"	"	"		"	"	"	"
1100391	"		1943516	"	"	"		"	"	"	"
1100392	"			"	"	"		"	"	"	"
1100393	"	1944437	1949355	"	"	"		"	"	"	"
1100394	"		1943516	"	"	"		"	"	"	"
1100395	"			"	"	"		"	"	"	"
1100396	"			"	"	"		"	"	"	"
1100397	"			"	"	"		"	"	"	"
1100398	"			"	"	"		"	"	"	"
1100399	"			"	"	"		"	"	"	"

*Included with 1858749 stud.

Revised to July 1, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate—D.E.	1962276	1100374; 86-8; 94-5-6-7
24	Lock Washer—Brush Lead Screw	1914816	All
—	Lock Washer—Field Frame Ground	9421423	1100372-3-4-6-7-8; 88; 93
—	Lock Washer—Harness Clamp Screw	138537	1100389
—	Lock Washer—Oil Well Cover Attaching	453844	1100379; 85
—	Lock Washer—Regulator Attaching Screw	138479	1100379; 81-2; 90-6-7-8
26	Lock Washer—Shaft Nut—D.E.	1915265	1100372-3-4-6-7-8-9; 81-7; 98
26	Lock Washer—Shaft Nut—D.E.	1941978	1100380-2-3-4-5-6-8-9; 90-1-2-3-4-5-6-7-9
27	Lock Washer—Terminal Stud	1914579	All
28	Lock Washer—Thru Bolt	120638	All
NUTS			
29	Nut—Shaft—D.E.	1915172	1100372-3-4-6-7-8-9; 80-1-2-3-4-5-7-8-9; 90-1-2-3-4-5-6-7-8-9
29	Nut—Shaft—D.E.	1947830	1100386
30	Nut—Terminal	121743	All
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.	1914580	All
32	Screw—Brush Lead Attaching	453460	All
—	Screw—Field Frame—Ground	225577	1100372-3-4-6-7-8; 88; 93
—	Screw—Harness Clamp	225577	1100389
—	Screw—Oil Well Cover Attaching	454408	1100379; 85
34	Screw—Pole Shoe	1913960	All
—	Screw—Regulator Attaching	132900	1100379; 81-2; 90-6-7-8
WASHERS			
35	Washer—Insul.—Field Terminal Stud	1858753	All
—	Washer—Felt—C.E.	1927447	1100379; 81-2-3-4-5; 91-6-7-9
—	Washer—Felt—C.E.	815042	1100387; 90-2-8
36	Washer—Felt—D.E.	809961	All
—	Washer—Plain—Regulator Attaching Screw	1856056	1100379; 81-2-90-6-7-8
37	Washer—Plain—Terminal Stud	826319	All
38	Washer—Space Brush Arm	1857412	1100372-3-4-6-7-8-9; 80-1-2-4-5-6-7-8-9; 93
38	Washer—Space Brush Arm	1914741	1100383; 90-1-2-4-5-6-7-8-9
39	Washer—Space—Inside—D.E.	809945	All
MISCELLANEOUS			
—	BALL BEARING—C.E.	904751	1100372-3-4-6-7-8; 87-9; 90-1-2-3-8
—	BALL BEARING—C.E.	900529	1100380
—	BUSHING—C.E.	1927446	1100379; 83-4-5
—	CLAMP—Harness	1860459	1100389
40	CLIP—Terminal—To Brush	200382	All except 1100380
40	CLIP—Terminal—To Brush	200346	1100380
—	COVER—Oil Well—C.E.	1914222	1100379; 85
—	CUP—Felt Retainer—C.E.	1927448	1100379; 81-2-3-4-5; 91-6-7-9
—	GASKET—Oil Well—Cover—C.E.	817220	1100379
41	KEY—Woodruff—D.E.	124545	All
—	LEAD—"A" Terminal to Regulator	1914185	1100379; 90-7-8
—	LEAD—"A" Terminal to Regulator	1911485	110038-2; 96
—	LEAD—"F" Terminal to Regulator	1911485	1100379; 96-7
—	LEAD—"F" Terminal to Regulator	1914187	1100383; 90-8
—	LEAD—"F" Terminal to Regulator	1914185	1100381
42	OILER—C.E.	113702	1100381-2-3-4; 96-7
42	OILER—C.E.	125609	1100379; 85-7; 90-1-2-4-5-8-9
42	OILER—C.E.	125609	1100372-3-4-6-7-8; 89; 93
43	OILER—D.E.	125609	1100372-3-4-6-7-8-9; 81-2-3-4-5-6-7-8-9; 90-1-2-3-4-5-6-7-8-9
42	OILER—C.E.	113702	1100386-8
44	PIN—Dowel—C.E.	809062	All
45	PIN—Dowel—D.E.	809593	All
—	PLATE—Felt Retainer—C.E.	809960	1100387; 90-2-8
46	PLATE—Felt Retainer—D.E.	819104	All
—	PLUG—Bearing Well—C.E.	1948326	1100372-3-4-6-7-8; 80-7-9; 90-1-2-3-8
—	PLUG—C.E.	1911097	1100379; 83-6
—	REGULATOR	*1118791	1100379; 96
—	REGULATOR	*1118792	1100381; 97


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
—	REGULATOR.....	*1118991	1100382; 90-8
—	RETAINER—Oil Seal—C.E.....	1953202	1100394-5-9
—	RING—Bearing Clamp—C.E.....	1929959	1100372-3-4-6-7-8; 80-7-9; 90-1-3-8
—	SEAL—Oil—C.E.....	1945697	1100394-5
47	WICK—Oil—C.E.....	1947350	1100379; 81-2-3-4-5-6-8; 94-5-6-7-9
47	WICK—Oil—C.E.....	823551	1100390-1-2-8
—	WICK—Oil—D.E.....	823551	1100374-7-9; 81-2-3-4-5-7-3; 90-1-2-4-5-6-7-8-9

*For parts see Regulator—Group 6-F.

 *For parts see Regulator—Group 6-J.

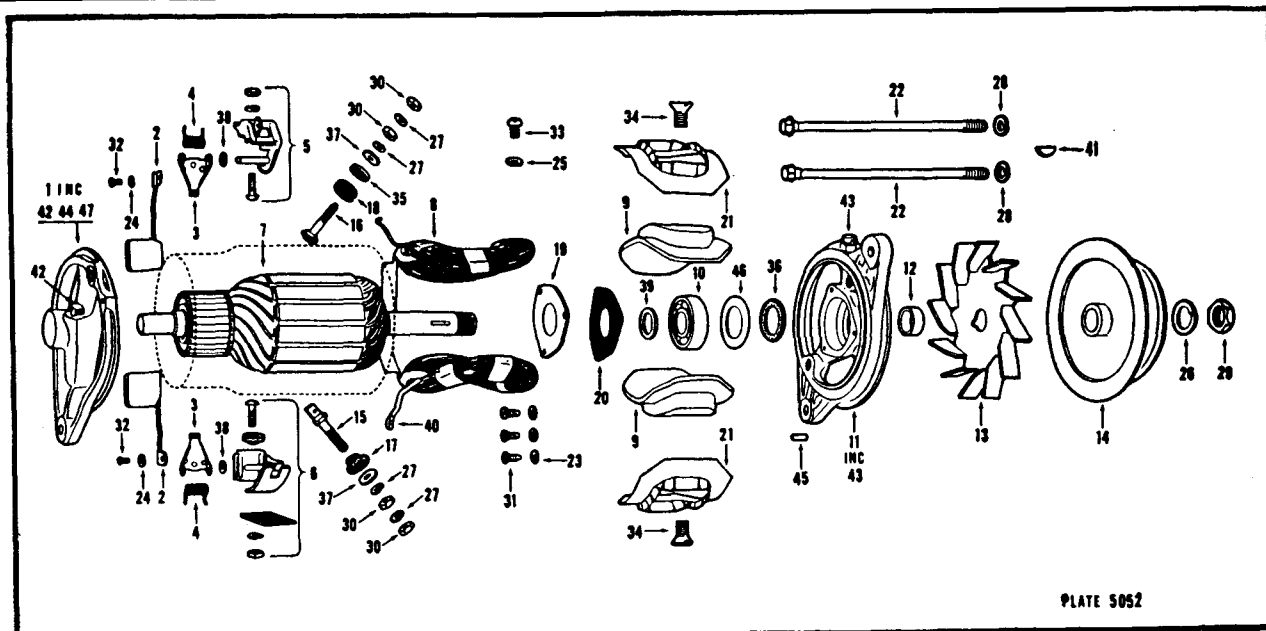

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame — C.E.	Brush	Arm — Brush	Spring — Brush	Holder — (Pkg.) — Ground Brush	Holder — (Pkg.) — Insul. Brush	Armature	Coll — Field — Assembly	Shoe — Pole	Ball Bearing — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1100400.....	1951512	1932506	1944373	1916324	1925378	1925379	1928952	1923625	1931258	907503	1953882
1100401.....	"	"	"	"	"	"	"	"	"	"	"
1100402.....	1952344	"	"	"	"	"	"	"	"	"	1950634
1100403.....	1954334	"	"	"	"	"	1946903	"	"	"	"
1100404.....	1951512	"	"	"	"	"	1928952	"	"	"	1953882
1100407.....	1953880	"	"	"	"	"	1962923	"	"	"	"
1100408.....	1951512	"	"	"	"	"	1921351	1953879	"	"	"
1100409.....	"	"	"	"	"	"	1928952	1923625	"	"	"
1100410.....	"	"	"	"	"	"	817807	"	"	"	"
1100411.....	1946595	"	"	"	"	"	1925348	"	"	"	1908869
1100412.....	1945261	"	"	"	"	"	1921351	"	"	"	1944267
1100413.....	1953880	"	"	"	"	"	1949917	1950084	"	900529	1953882
1100414.....	1951512	"	"	"	"	"	1871826	1946117	"	907503	1871693
1100415.....	1935265	"	"	"	"	"	1927482	1923625	"	"	1953882
1100416.....	1957555	"	"	"	"	"	1928952	"	"	954378	1957553
1100417.....	1951512	"	"	"	"	"	817807	"	"	907503	1953882
1100418.....	1951909	"	"	"	"	"	"	"	"	"	1951908
1100419.....	1953880	"	"	"	"	"	1946903	"	"	954378	1957313
1100420.....	"	"	"	"	"	"	"	"	"	907503	1953882
1100421.....	1957555	"	"	"	"	"	1928952	"	"	954378	1957553
1100422.....	1951909	"	"	"	"	"	"	"	"	907503	1951908
1100423.....	1953880	"	"	"	"	"	1946903	"	"	"	1925097
1100424.....	1945261	"	"	"	"	"	817807	"	"	"	1953882
1100425.....	1959149	"	"	"	"	"	1959147	"	"	"	"
1100426.....	1951512	"	"	"	"	"	1928952	"	"	"	"
1100427.....	"	"	"	"	"	"	1962922	"	"	"	"
1100428.....	1951909	"	"	"	"	"	1928952	"	"	"	1951908
1100429.....	1953880	"	"	"	"	"	1962923	"	"	"	1953882
1100430.....	1951512	"	"	"	"	"	1928952	"	"	"	"
1100431.....	"	"	"	"	"	"	"	"	"	"	"
1100432.....	1935265	"	"	"	"	"	1962056	"	"	"	"
1100434.....	"	"	"	"	"	"	"	"	"	"	"

Delco-Remy **SERVICE PARTS CATALOG**

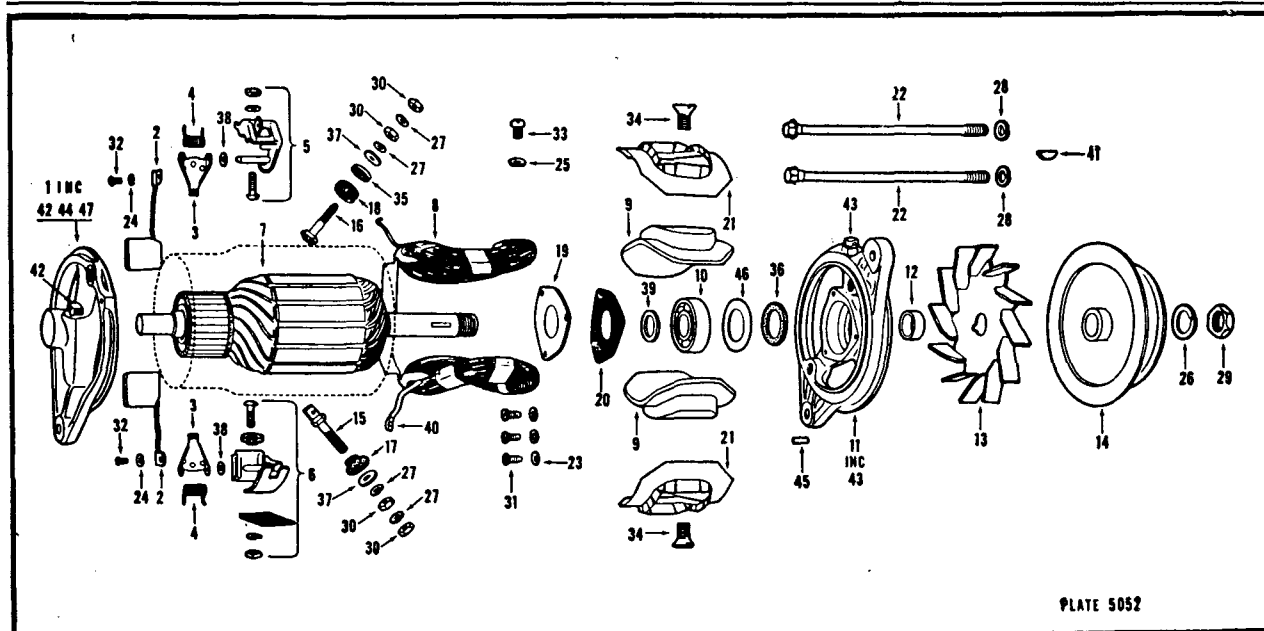 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space — D.E.	Fan	Pulley or Pulley & Fan	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coll	Bolt — Thru
	12	18	14	15	16	17	18	19	20	21	22
1100400.....	1858603		1911978	1923284	1858749	1921362		1911263	1912008	1914491	1908680
1100401.....	"			"	"	"		"	"	"	"
1100402.....	"		1943516	"	"	"		"	"	"	"
1100403.....	"			"	"	"		"	"	"	"
1100404.....	"	1944437	1950420	"	"	"		"	"	"	"
1100407.....	"	"	1950392	"	"	"		"	"	"	"
1100408.....	"	"	1949355	"	"	"		"	"	"	"
1100409.....	"		1921939	"	"	"		"	"	"	"
1100410.....	"			"	"	"		"	"	"	"
1100411.....	817224		1952882	"	"	"		"	"	"	"
1100412.....	1858603	1944437	1956232	"	"	"		"	"	"	"
1100413.....	"			"	"	"		"	"	"	"
1100414.....	"			"	"	"		"	1912008	"	"
1100415.....	"		1943516	"	"	"		"	"	"	"
1100416.....	Δ		1921939	"	"	"		1955494	"	"	"
1100117.....	1858603		1911978	"	"	"		1911263	"	"	"
1100418.....	"	1944437	1957758	"	"	"		"	"	"	"
1100419.....	Δ	"	1946594	"	"	"		1955494	"	"	"
1100420.....	1858603			"	"	"		1911263	"	"	"
1100421.....	Δ			"	"	"		1955494	"	"	"
1100422.....	1858603		1943516	"	"	"		1911263	"	"	"
1100423.....	"			"	"	"		"	"	"	"
1100424.....	"	1866400	1946716	"	"	"		"	"	"	"
1100425.....	"			"	"	"		"	"	"	"
1100426.....	"			"	"	"		"	"	"	"
1100427.....	"	1944437	1960481	"	"	"		"	"	"	"
1100428.....	"	"	1961291	"	"	"		"	"	"	"
1100429.....	"	"	1960481	"	"	"		"	"	"	"
1100430.....	"	"	1949357	"	"	"		"	"	"	"
1100431.....	"		1943516	"	"	"		"	"	"	"
1100432.....	"	1944437	1949357	"	"	"		"	"	"	"
1100434.....	"	1866400	1942911	"	"	"		"	"	"	"

^ΔUse 1959991 Collar (Outside). and 1861591 Collar (inside).

*Included with 1858749 Stud.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
24	Lock Washer—Brush Lead Attaching Screw.....	456413	1100413-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-4
24	Lock Washer—Brush Lead Attaching Screw.....	1914816	1100400-1-2-3-4-7-8-9-10-11-12
25	Lock Washer—Field Frame.....	9421423	1100416; 21; 30-2
—	Lock Washer—Oil Well Cover Attach. Screw.....	453844	1100415; 32
—	Lock Washer—Regulator Attaching Screw.....	138479	1100407-10-17; 28
—	Lock Washer—Shaft Nut—C.E.....	1913743	1100425
26	Lock Washer—Shaft Nut—D.E.....	1915265	1100401-4-10-13-14; 21-5
26	Lock Washer—Shaft Nut—D.E.....	1941978	1100400-2-3-4-7-8-9-11-12-15-16-17-18-19; 20-2-3-4-6-7-8-9; 30-1-2-4
27	Lock Washer—Terminal Stud.....	1914579	1100400-1-2-3-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-4
28	Lock Washer—Thru Bolt.....	9421424	1100400-1-2-3-4-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-4
NUTS			
—	Nut—Shaft—C.E.....	1915172	1100425; 34
29	Nut—Shaft—D.E.....	1915172	1100400-1-2-3-4-7-8-9-10-11-12-13-14-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2
29	Nut—Shaft—D.E.....	806914	1100416
30	Nut—Terminal.....	121743	1100400-1-2-3-4-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-4
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.....	1914580	1100400-1-2-3-4-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3
32	Screw—Brush Lead Attaching.....	453460	1100400-1-2-3-4-7-8-9-10-11-12-16; 21
32	Screw—Brush Lead Attaching.....	454458	1100413-14-15-17-18-19; 20-2-3-4-5-6-7-8-9; 30-1-2-4
33	Screw—Field Frame.....	1956358	1100416; 21
33	Screw—Field Frame.....	225577	1100430-2
—	Screw—Oil Well Cover Attaching.....	454408	1100415; 32-4
34	Screw—Pole Shoe.....	1913960	1100400-1-2-3-4-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-4
—	Screw—Regulator Attaching.....	132900	1100407; 10-17; 28
WASHERS			
35	Washer—Insul.—Field Terminal Stud.....	1858753	1100400-1-2-3-4-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-4
—	Washer—Felt—C.E.....	1927447	1100400-4-8-10-11-12-14-15-17-18; 24-6; 30-1-2-4
—	Washer—Felt—C.E.....	1957559	1100416; 21
—	Washer—Felt—C.E.....	815042	1100403-7; 20-3-9
36	Washer—Felt—D.E.....	809961	1100400-1-2-3-4-7-8-9-10-11-12-13-14-15-17-18; 20-2-3-4-7-8-9; 30-1-2-4
—	Washer—Plain—Regulator Attaching Screw.....	1856056	1100407-10-17; 28
37	Washer—Plain—Terminal Stud.....	826319	1100400-1-2-3-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-4
—	Washer—Plug—C.E.....	1957555	1100416
38	Washer—Space—Brush Arm.....	1914741	1100400-1-2-3-4-7-8-9-10-11
—	Washer—Space—C.E.....	809945	1100425
39	Washer—Space—Inside—D.E.....	809945	1100400-1-2-3-4-7-8-9-10-11-12-13-14-15-17-18; 20-2-3-4-5-6-7-8-9; 30-1-2-4
MISCELLANEOUS			
—	BALL BEARING—C.E.....	904751	1100403-7; 19; 20-3-9
—	BALL BEARING—C.E.....	900529	1100413; 25
—	BUSHING—C.E.....	1927446	1100404; 12-15; 24-6; 30-1-2-4
40	CLIP—Terminal—To Brush.....	200382	1100400-1-2-3-4-7-8-9-10-11-12-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-4
40	CLIP—Terminal—To Brush.....	200346	1100413
—	COLLAR—Fan—C.E.....	1913689	1100425
—	COVER—Oil Well—C.E.....	1914222	1100415; 32-4
—	CUP—Felt Retainer—C.E.....	809960	1100420-3-9

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
—	MISCELLANEOUS—Continued		
—	CUP—Felt Retainer—C.E.....	1927448	1100400-4-8-10-11-12-14-15-17-18; 24-6; 30-1-2-4
—	GASKET—Oil Well Cover—C.E.....	817220	1100415; 32-4
41	KEY—Woodruff—D.E.....	124545	1100400-1-2-3-4-7-8-9-10-11-12-13-14-15-17-18-19; 20-2-3-4-5-6-7-8-9; 30-1-2-4
—	LEAD—"A" Terminal to Regulator.....	1911485	1100410; 28
—	LEAD—"F" Terminal to Regulator.....	1911485	1100410-17; 28
—	LEAD—"A" Terminal to Regulator.....	1914185	1100407-17
—	LEAD—"F" Terminal to Regulator.....	1914187	1100407
42	OILER—C.E.....	113702	1100400-2-4-8-10-11-12-14-17-18; 22-4-6-7-8; 30-1-2
42	OILER—C.E.....	125609	1100401-3-7-9-10-15; 20-9; 32-4
43	OILER—D.E.....	125609	1100400-1-2-3-4-7-8-9; 10-12-14-15-17-18; 20-2-3-4-5-6-7-8-9; 30-1-2-4
43	OILER—D.E.....	113702	1100411
44	PIN—Dowel—C.E.....	809062	1100400-1-2-3-4-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-4
45	PIN—Dowel—D.E.....	809593	1100400-1-2-3-4-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2
—	PLATE—Felt Retainer—C.E.....	809960	1100403-7
46	PLATE—Felt Retainer—D.E.....	819104	1100400-1-2-3-4-7-8-9-10-11-12-13-14-15-17-18; 20-2-3-4-5-6-7-8-9; 30-1-2-4
—	PLUG—Bearing Well—C.E.....	1948326	1100403-7; 13-19; 20-9
—	PLUG—Oil—D.E.....	823551	1100414; 34
—	PLUG—C.E.....	1911097	1100412; 22-4-8; 32-4
—	REGULATOR.....	*1118791	1100410; 28
—	REGULATOR.....	*1118792	1100417
—	REGULATOR.....	□1118991	1100407
—	RETAINER—Felt—C.E.....	1957560	1100416; 21
—	RETAINER—Oil Seal—C.E.....	1953202	1100401-2-4-8-9; 18; 22-7-8
—	RING—Bearing Clamp—C.E.....	1929959	1100403-7; 13; 19; 23-5-9
—	SEAL—Oil—C.E.....	1945697	1100401-2-9; 22-7-8
—	SHIELD—Trash—C.E.....	*1958832	1100425
—	SLINGER—Grease—D.E.....	1947344	1100416
—	SPACER—Fan—C.E.....	1913688	1100425
47	WICK—Oil—C.E.....	823551	1100420
47	WICK—Oil—C.E.....	1947350	1100400-1-2-4-8-9; 10-11-14-15-16-17-18; 21-2-6-7-8; 30-1-2-4
—	WICK—Oil—D.E.....	823551	1100400-1-2-3-4-7-8-9; 10-15-17-18; 22-3-4-5-6-7-8-9; 30-1-2
—	WICK—Oil—D.E.....	1947350	1100411

*For parts see Regulator—Group 6-F.

□For parts see Regulator—Group 6-J.

*Later units with collar welded to trash shield use 1961243.

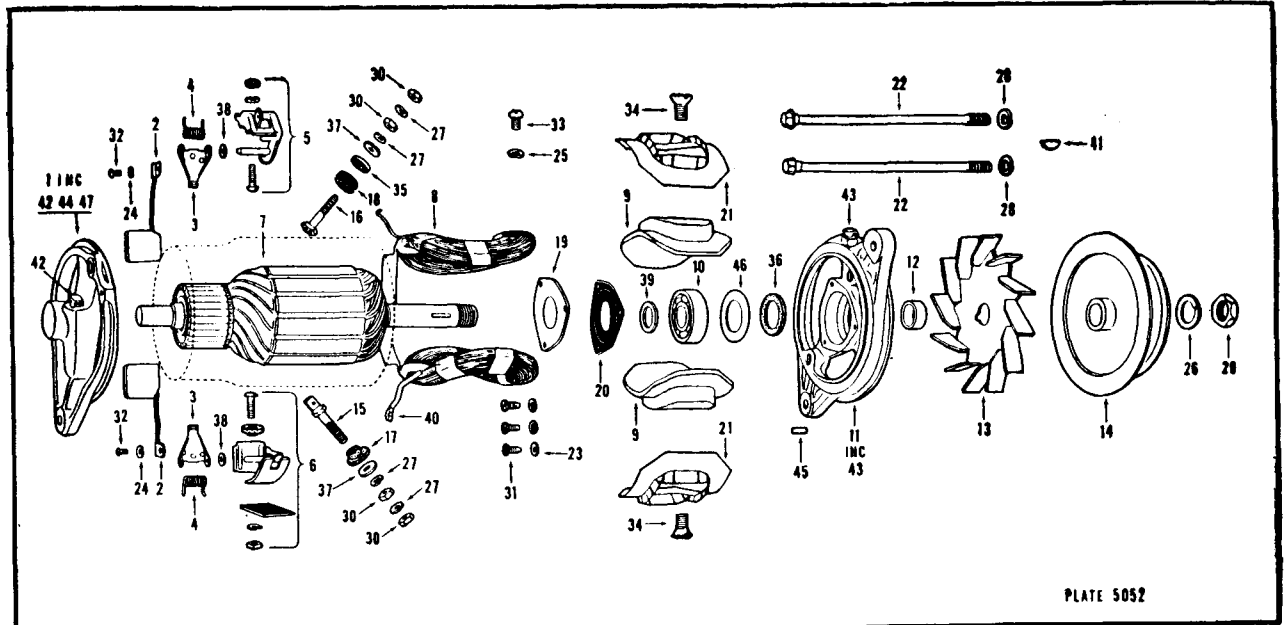 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame — C.E.	Brush	Arm — Brush	Spring — Brush	Holder — (Pkg.) Ground Brush	Holder — (Pkg.) Insul. Brush	Armature	Coll — Field — Assembly	Shoe — Pole	Ball Bearing — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1100435.....	1935265	1932506	1944373	1916324	1925378	1925379	1962056	1923625	1914618	907503	1953882
1100436.....	1951512	"	"	"	"	"	1928952	"	"	"	"
1100437.....	1945261	"	"	"	"	"	"	"	"	"	1944267
1100438.....	"	"	"	"	"	"	"	"	"	"	1953882
1100439.....	1935265	"	"	"	"	"	1962056	"	"	"	"
1100440.....	1929513	"	"	"	"	"	1933202	"	"	"	"
1100441.....	1951512	"	"	"	"	"	1928952	"	"	"	"
1100112.....	1953880	1906956	"	"	"	"	1946903	"	"	"	"
1100443.....	1935265	1932506	"	"	"	"	1962056	"	"	"	"
1100444.....	1953880	"	"	1916324	"	"	1962923	"	"	"	"
1100445.....	"	"	"	"	"	"	"	"	1931258	"	"
1100447.....	1951512	"	"	"	"	"	1967252	"	"	"	"
1100118.....	1943662	"	"	1916324	"	"	1958108	"	"	"	1951261
1100449.....	1951909	"	"	1916324	"	"	1928952	"	"	"	1951908
1100450.....	1953880	"	"	"	"	"	1962923	"	"	"	1953882

Delco-Remy

SERVICE PARTS CATALOG

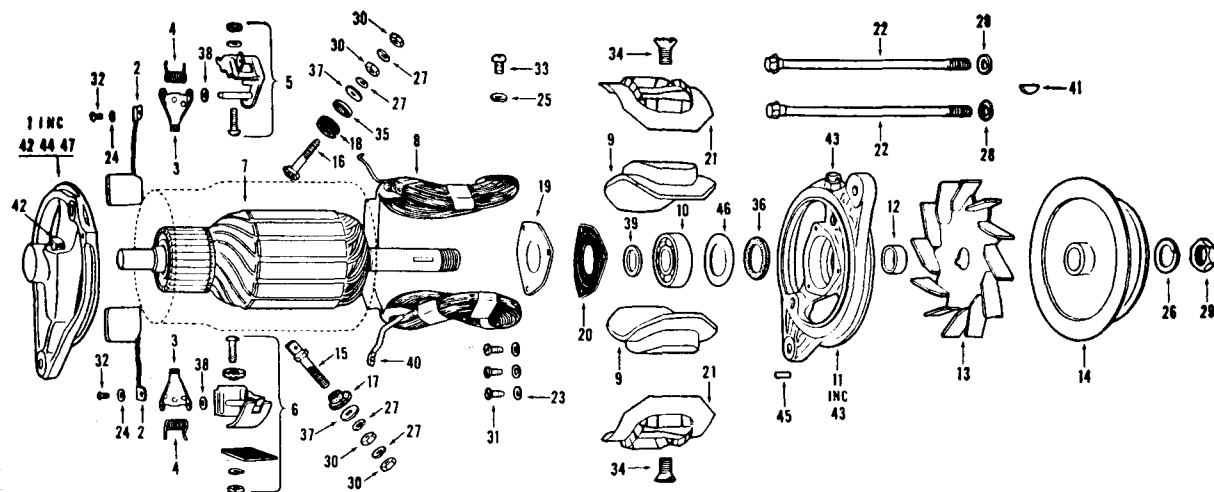 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space — D.E.	Fan	Pulley or Pulley & Fan	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coll	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1100435.....	1858603	1866400	1946716	1923284	1858749	1921362		1911263	1912008	1914491	1908680
1100436.....	"	"	"	"	"	"		"	"	"	"
1100437.....	"	1966990	"	"	"	"		"	"	"	"
1100438.....	"	1866400	"	"	"	"		"	"	"	"
1100439.....	"	"	"	"	"	"		"	"	"	"
1100440.....	"	"	"	"	"	"		"	"	"	"
1100441.....	"	"	1911233	"	"	"		"	"	"	"
1100442.....	"	"	"	"	"	"		"	"	"	"
1100443.....	"	1944437	1950420	"	"	"		"	"	"	"
1100444.....	"	"	1950392	"	"	"		"	"	"	"
1100445.....	"	"	1947417	"	"	"		"	"	"	"
1100447.....	"	"	"	"	"	"		"	"	"	"
1100448.....	817224	"	"	"	"	"		"	"	"	"
1100449.....	1858603	"	"	"	"	"		"	"	"	"
1100450.....	"	1944437	1871871	"	"	"		"	"	"	"

*Included with 1858749 Stud.

Revised to March 15, 1971

SERVICE PARTS CATALOG


MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
24	Lock Washer—Brush Lead Attaching Screw.....	31044	1100444-5
24	Lock Washer—Brush Lead Attaching Screw.....	456413	1100435-6-8-9; 40-1-2-3-7-8-9; 50
24	Lock Washer—Brush Lead Attaching Screw.....	1914816	1100437
25	Lock Washer—Field Frame—Ground.....	9421423	1100439; 48
—	Lock Washer—Oil Well Cover Attach. Screw.....	453844	1100435-9; 43
—	Lock Washer—Regulator Attaching Screw.....	138479	1100440-1-4-5; 50
26	Lock Washer—Shaft Nut—D.E.....	1915265	1100440-9
26	Lock Washer—Shaft Nut—D.E.....	1941978	1100435-6-7-8-9; 41-2-3-4-5-7-8; 50
27	Lock Washer—Terminal Stud.....	1914579	1100435-6-7-8-9; 41-2-3-4-5-7-8.9; 50
28	Lock Washer—Thru Bolt.....	9421424	1100435-6-7-8-9; 41-2-3-4-5-7-8.9; 50
NUTS			
—	Nut—Shaft—C.E.....	1915172	1100442
29	Nut—Shaft—D.E.....	1915172	1100435-6-7-8-9; 40-1-4-5-7-8-9; 50
30	Nut—Terminal.....	121743	All
30	Nut—Terminal.....	1915172	1100443
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.....	1914580	1100435-6-7-8-9; 40-1-4-5-8-9; 50
32	Screw—Brush Lead Attaching.....	453460	1100442-8
32	Screw—Brush Lead Attaching.....	454458	1100435-6-7-8-9; 40-1-2-3-4-5-7-9; 50
33	Screw—Field Frame Ground.....	225577	1100439; 48
—	Screw—Oil Well Cover Attaching.....	454408	1100435-9; 43
34	Screw—Pole Shoe.....	1913960	1100435-6-7-8-9; 40-1-2-3-4-5-7-8; 50
—	Screw—Regulator Attaching.....	132900	1100440-1
—	Screw—Regulator Attaching.....	178451	1100444-5; 50
WASHERS			
35	Washer—Insul.—Field Terminal Stud.....	1858753	All
—	Washer—Felt—C.E.....	1927447	1100435-6-7-8-9; 41-3
—	Washer—Felt—C.E.....	815042	1100444-5; 50
36	Washer—Felt—D.E.....	809961	All
—	Washer—Plain—Regulator Attaching Screw.....	1856056	1100440-1-4-5; 50
37	Washer—Plain—Terminal Stud.....	826319	All
39	Washer—Space—Inside—D.E.....	809945	All
MISCELLANEOUS			
—	BALL BEARING—C.E.....	904751	1100440-2-4-5-8; 50
—	BUSHING—C.E.....	1927446	1100435-7-8-9; 41-3
40	CLIP—Terminal—To Brush.....	200382	1100435-6-7-8-9; 40-1-2-3
—	COVER—Oil Well—C.E.....	1914222	1100435-9; 43
—	CUP—Felt Retainer—C.E.....	1927448	1100435-6-7-8-9; 41-3
—	CUP—Felt Retainer—C.E.....	809960	1100444-5; 50
—	GASKET—Oil Well Cover—C.E.....	817220	1100435-9; 43
41	KEY—Woodruff—D.E.....	124545	All
—	LEAD—"A" Terminal to Regulator.....	1911485	1100440-1-4-5; 50
—	LEAD—"F" Terminal to Regulator.....	1911485	1100440-1
—	LEAD—"F" Terminal to Regulator.....	1914187	1100444-5; 50
42	OILER—C.E.....	113702	1100438; 40-1-7-9
42	OILER—C.E.....	125609	1100435-9; 43-4-5; 50
43	OILER—D.E.....	125609	1100435-6-7-8-9; 40-1-3-4-5-7-9; 50
43	OILER—D.E.....	113702	1100436-7
44	PIN—Dowel—C.E.....	809062	1100435-6-7-8-9; 40-1-2-3-4-5-7-8-9; 50
45	PIN—Dowel—D.E.....	809593	1100435-6-7-8-9; 41-2-3-4-5-7-8-9; 50
46	PLATE—Felt Retainer—D.E.....	819104	1100435-6-7-8-9; 40-1-2-3-4-5-7-8-9; 50
—	PLUG—Bearing Well—C.E.....	1948326	1100442-4-5-8; 50
—	PLUG—C.E.....	1911097	1100435-6-7-8-9; 43-9
—	REGULATOR.....	1118792	1100440
—	REGULATOR.....	1118983	1100441
—	REGULATOR.....	1118991	1100444-5; 50
—	RETAINER—Oil Seal—C.E.....	1953202	1100436; 47-9
—	RING—Bearing Clamp—C.E.....	1929959	1100440-2-4-5-8-50
—	SLINGER—Grease—D.E.....	1947344	1100442-8
47	WICK—Oil—C.E.—Felt.....	823551	1100440-4-5-7; 50
47	WICK—Oil—C.E.....	1947350	1100435-7-8-9; 41-3-7-9
—	WICK—Oil—D.E.....	823551	11435-6-7-8-9; 40-1-3-4-5-9; 50
—	Oil SEAL—C.E.....	1945697	1100447-9

□ For parts see Regulator—Group 6-J.

 ▲ For Parts see Regulator—Group 6-F

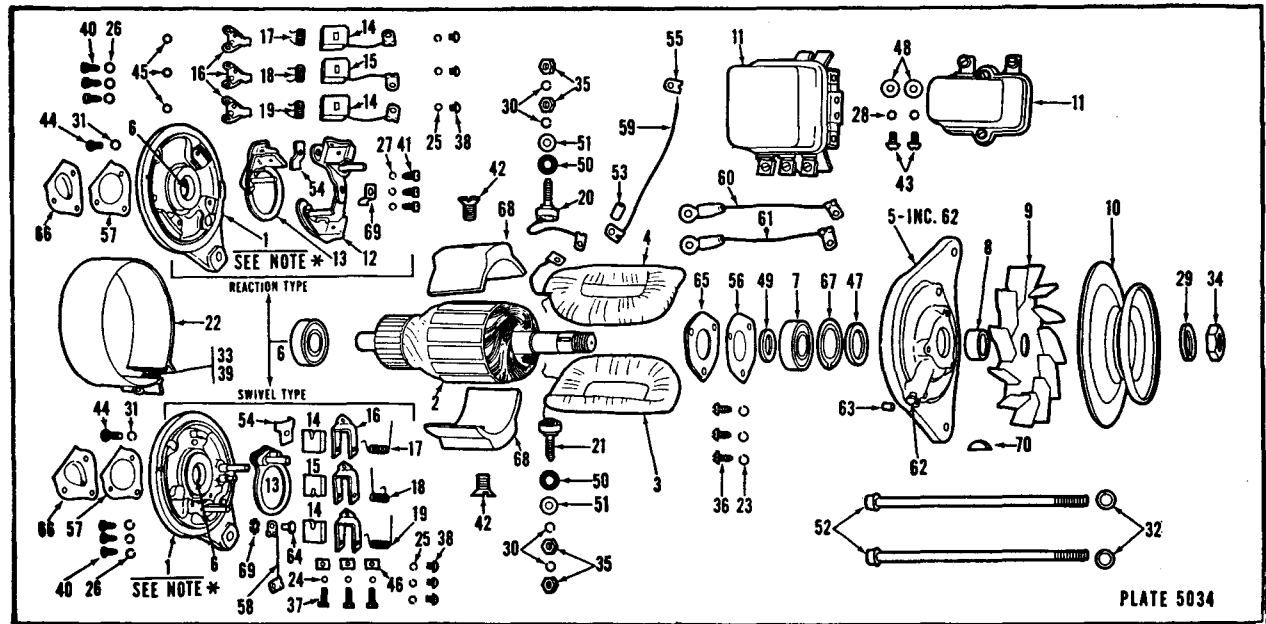

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	* Frame C.E.	Armature	Coil Field L.H.	Coil Field R.H.	Frame D.E.	Bushing or Ball Bearing C.E.	Ball Bearing D.E.	Collar Outside D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1100451.....	1860033	1869508	1902105		1871699	908503	954517	825254	1859069		†5542
1100452.....	1858530	1871826			1878691	812823	954378	1858603			1116755
1100453.....	"	"	"		"	"	"	"	1858604	1869130	
1100454.....	1869174	"	"		1869168	"	"	"	1866400	1869146	
1100455.....	1858530	"	"		1878691	"	"	"	"	1869289	1867781
1100456.....	"	"	"		1953882	"	"	"	"	1872406	‡5850
1100458.....	1859068	1864262	"		1841472	908503	954521	1836194	1864264		
1100459.....	1858530	1871826	"		1953882	812823	954378	1858603	1866400	1872406	1867781
1100460.....	1878689	"	"		1878691	"	"	"	"		
1100461.....	1858530	"	"		1873830	"	"	817224		1862200	1867781
1100462.....	1878767	1871759	"		"	"	"	"		"	1867781
1100463.....	1913822	1879111	"		1845821	908503	954521	1854891	1866400		
1100464.....	1858530	1871826	"		1838678	812823	954378	817224			1867781
1100465.....	1849981	1879481	"		817879	954519	"	813281			"
1100466.....	1871757	1871759	"		1878691	812823	"	1858603	1858604		
1100467.....	1864174	1871826	"		1883296	"	"	"			
1100468.....	1878689	"	"		1953882	"	"	"			‡5850
1100469.....	1886133	1871759	"		1859040	"	"	"			
1100470.....	1929118	1913852	"		1841472	904756	954139		1858604		

‡Model 60-U Generator has same parts as Model 1100460.

 
†For parts see Regulator—Group 3.

‡For parts see Regulator—Group 5.

°Shipped separately.

°Field Coil Set (2 coils).

*C.E. Frames includes where necessary: Bushing, Oiler, Oil Wick, Oil Hole Plug, Dowel Pin and Brush Pins.

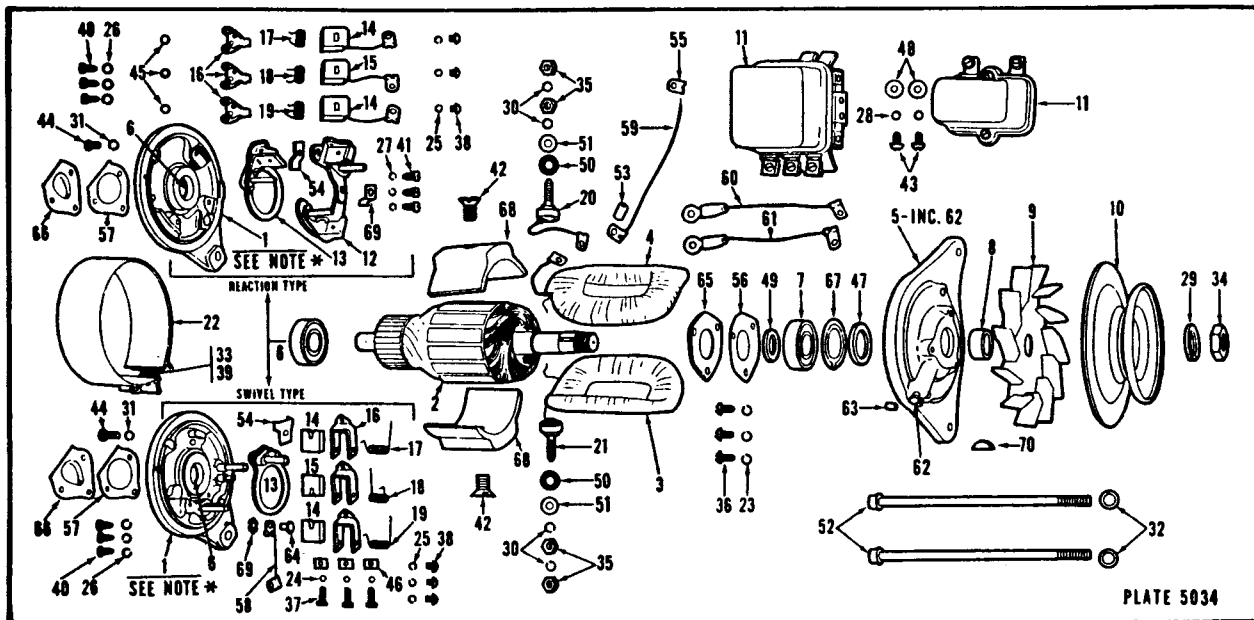

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Brush Plate — Main	Brush Plate — 3rd	Brush — Main	Brush — 3rd	Arm or Holder	Spring — R.H. — Main	Spring — 3rd	Spring — L.H. — Main	Terminal Stud and Lead	Terminal Stud Only	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1100451.....	1908999	1856990	△1866148	△1906940	1904365	1908829	1903870	1908829			1861502
1100452.....	1908550	1859144	"	"	"	1903871	1946798	1903871		1858749	"
1100453.....	1866417		"	"	"	"	"	"	1858754	"	"
1100454.....			"	"	"	"	"	"	"	"	"
1100455.....	1908550	1859146	"	"	"	"	"	"		"	"
1100456.....	"	1859144	"	"	"	"	"	"		"	"
1100458.....	1866417		"	"	"	"	"	"	1858754	"	"
1100459.....	1908550	1859146	"	"	"	"	"	"		"	"
1100460.....		1873958	"	"	"	"	"	"	1858754	1858749	816340
1100461.....	"	1909151	"	"	"	"	"	"			1861502
1100462.....	1908999	1856990	"	"	"	1908829	1903870	1908829			"
1100463.....	1879109		"	"	"	"	"	"	1858754	1858749	816340
1100464.....	1908550	1909151	"	"	"	1903871	1946798	1903871			1861502
1100465.....		809698	○	○	809642	809658	809644	809644			816340
1100466.....	1879109		1866148	△1906940	1904365	1908829	1903870	1908829	1858754	1858749	1861502
1100467.....	1908550	1859144	"	"	"	1903871	1946798	1903871	"	"	"
1100468.....	"	"	"	"	"	"	"	"	"	"	"
1100469.....	1879109		"	"	"	1908829	1903870	1908829	1858754	1858749	"
1100470.....	1866417		"	"	"	1903871	1946798	1903871	"	"	"

△For complete Brush Set order Part No. 1857963.

○For complete Brush Set order Part No. 1880998.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	114603	1100451
23	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	1962276	1100452-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70
24	Lock Washer—Brush Attaching Screw	456413	1100465
25	Lock Washer—Brush Lead Screw	1914816	1100451-2-3-4-5-8-9; 60-1-2-3-4-5-6-7-8-9; 70
26	Lock Washer—End Cover Plate Screw	453844	1100452-3-4-5-6-9; 60-1-2-4-6-7-8-9
26	Lock Washer—End Cover Plate Screw	453435	1100465
....	Lock Washer—Ground Lead Screw	9421423	1100460
....	Lock Washer—Ground Lead Screw	453844	1100461-2-4-5
27	Lock Washer—Main Brush Plate Screw	453844	1100451-2-3-4-5-6-8-9; 60-1-2-3-4-6-7-8-9; 70
28	Lock Washer—Regulator Mounting Screw	138479	1100451-6; 68
28	Lock Washer—Regulator Mounting Screw	453435	1100460
28	Lock Washer—Relay Mounting Screw	453844	1100452-5-9; 61-2-4
....	Lock Washer—Shaft Nut—C.E.	1915265	1100451-8; 63
....	Lock Washer—Shaft Nut—C.E.	1913696	1100463-5
....	Lock Washer—Shaft Nut—C.E.	1913743	1100470
29	Lock Washer—Shaft Nut—D.E.	1915265	1100452-3-4-5-6-9; 60-1-2-4-7-8-9
30	Lock Washer—Terminal Stud	1914579	1100452-3-4-5-8; 60-3-6-7-9; 70
31	Lock Washer—Third Brush Plate Clamp Screw	453844	1100451
31	Lock Washer—Third Brush Plate Clamp Screw	453435	1100452-5-6-9; 60-1-2-4-7-8
32	Lock Washer—Thru Bolt	9421424	1100451-2-3-4-5-6-8-9; 60-3-4-5-6-7-8-9; 70
NUTS			
....	Nut—Shaft—C.E.	1915172	1100451-8; 63
34	Nut—Shaft—D.E.	1917570	1100451-8; 63
34	Nut—Shaft—D.E.	1915172	1100452-3-4-5-6-9; 60-1-2-4-7-8-9; 70
34	Nut—Shaft—D.E.	1917035	1100470
35	Nut—Terminal	121743	1100452-3-4-5-8; 60-3-6-7-9; 70
SCREWS			
36	Screw—Ball Bearing Retainer Plate	5017850	1100451-8; 63; 70
36	Screw—Ball Bearing Retainer Plate	1914580	1100452-3-4-5-6-9; 60-1-2-4-5-6-7-8-9
37	Screw—Brush Attaching	453986	1100465
38	Screw—Brush Lead Attaching	453460	1100451-2-3-4-5-6-8-9; 60-1-2-4-6-7-8-9; 70
38	Screw—Brush Lead Attaching	453978	1100465
40	Screw—End Cover Plate—C.E.	454408	1100452-3-4-6-9; 60-1-2-4-6-7-8-9
40	Screw—End Cover Plate—C.E.	1914580	1100465
....	Screw—Field Lead Ground	132243	1100460
....	Screw—Field Lead Ground	453418	1100461-2-4-5
41	Screw—Main Brush Plate Attaching	454408	1100451-2-3-4-5-6-8-9; 60-1-2-3-4-6-7-8-9; 70
42	Screw—Pole Shoe	1913960	All
43	Screw—Regulator Mounting	132900	1100451-6; 60-8
43	Screw—Relay Mounting	453418	1100452-5-9; 61-2-4-5
44	Screw—Third Brush Plate Clamp	435429	1100451-2-5; 61-2-4
44	Screw—Third Brush Plate Clamp	141602	1100459; 60-7-8
WASHERS			
45	Washer—Brush Arm Space	1857412	1100451-2-3-4-5-6-8-9; 60-1-2-3-4-6-7-8-9; 70
46	Washer—Brush Attaching Screw	809551	1100465
....	Washer—Felt—C.E.	37077	1100470
47	Washer—Felt—D.E.	825197	1100451
47	Washer—Felt—D.E.	809961	1100452-3-4-6-9; 60-1-2-4-5-6-7-8-9
47	Washer—Felt—D.E.	820706	1100458; 63; 70
48	Washer—Regulator Mounting Screw	1856056	1100451-6; 68
....	Washer—Shaft Nut—D.E. (Plain)	1934383	1100451
....	Washer—Shaft Nut—D.E. (Plain)	1914589	1100458; 70
....	Washer—Shaft Nut—D.E. (Plain)	1926782	1100463
49	Washer—Space—Inside—D.E.	809945	1100452-3-4-5-6-9; 60-1-2-4-5-6-7-8-9
49	Washer—Space—Inside—D.E.	822644	1100458; 63; 70
....	Washer—Space—Outside—D.E.	1838472	1100460
50	Washer—Terminal Stud—Insul.	1858753	1100452-3-4-5-8; 60-3-6-7-9; 70
51	Washer—Terminal Stud—Plain	826319	1100452-3-4-5-8; 60-3-6-7-9; 70


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
MISCELLANEOUS			
52	BOLT—Thru.....	1908680	1100451-2-3-4-5-6-9; 60-1-2-4-5-6-7-8-9
52	BOLT—Thru.....	1915090	1100458; 63; 70
.....	BUSHING—Insul. Terminal Stud.....	*	1100452-3-4-5-6-8; 60-3-6-7-9; 70
53	BUSHING—Insul. Relay Lead.....	812891	1100451-2-5-6-9; 61-2-4-5-8
54	CLAMP—Third Brush Plate.....	1857187	1100451
54	CLAMP—Third Brush Plate.....	1850770	1100452-5-6-9; 60-1-4-7-8
54	CLAMP—Third Brush Plate.....	817532	1100465
.....	COLLAR—Space—Inside—C.E.....	811681	1100451-8; 63
.....	COLLAR—Space—Inside—C.E.....	1915169	1100470
.....	COLLAR—Space—Outside—C.E.....	1858603	1100458
.....	COLLAR—Oil Throwing—Inside—D.E.....	1843942	1100451
.....	CLIP—Terminal—To Brush.....	200182	1100451-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70
.....	CLIP—Terminal—Field Coil to Ground.....	200144	1100461-2-4-5
55	CLIP—Terminal—To Regulator.....	200188	1100451
55	CLIP—Terminal—To Relay.....	200154	1100451-2-5-6-9; 61-4-5-8
55	CLIP—Terminal—To Relay.....	200188	1100462
.....	CUP—Felt Retainer—C.E.....	37078	1100470
56	GASKET—Ball Bearing Retainer Plate.....	1912008	1100452-3-4-5-6-9; 60-1-2-4-5-6-7-8-9
56	GASKET—Ball Bearing Retainer Plate.....	820708	1100458; 63; 70
57	GASKET—End Cover Plate—C.E.....	817220	1100452-3-4-5-6-9; 60-1-2-4-6-7-8-9
57	GASKET—End Cover Plate—C.E.....	1844012	1100465
58	LEAD—Brush Ground.....	809688	1100465
59	LEAD—Relay.....	809966	1100451
59	LEAD—Relay.....	812004	1100452-5-9; 61-4-5
59	LEAD—Relay.....	816411	1100456; 68
59	LEAD—Relay.....	809966	1100462
.....	OILER—C.E.....	125609	1100451-8; 63
.....	OILER—C.E.....	113702	1100452-3-4-5-6-9; 60-1-2-4-6-7-8-9
.....	OILER—C.E.....	1880642	1100465
62	OILER—D.E.....	125609	1100452-3-4-5-6-9; 60-1-2-6-7-8-9
62	OILER—D.E.....	113702	1100463-4
.....	PIN—Brush Holder Hinge.....	817313	1100465
.....	PIN—Brush Holder Stop.....	817314	1100465
.....	PIN (& Insulation)—Brush Holder Hinge.....	812016	1100465
.....	PIN (& Insulation)—Brush Holder Stop.....	812015	1100465
.....	PIN—Third Brush Plate Stop.....	1849986	1100465
.....	PIN—Dowel—C.E.....	809062	1100451-2-3-4-6-9; 60-1-2-3-4-5-6-7-8-9; 70
63	PIN—Dowel—D.E.....	809593	1100451-2-3-4-5-6-8-9; 60-1-2-3-4-6-7-8-9; 70
64	PIN—Third Brush Plate Tension Spring.....	809614	1100465
65	PLATE—Ball Bearing Retainer—D.E.....	1841877	1100451
65	PLATE—Ball Bearing Retainer—D.E.....	1911263	1100452-3-4-5-6-9; 60-1-2-4-5-6-7-8-9
65	PLATE—Ball Bearing Retainer—D.E.....	820707	1100458; 63; 70
.....	PLATE—Baffle (Fan) C.E.....	1869265	1100463
.....	PLATE—Baffle (Fan).....	1913854	1100470
66	PLATE—End Cover—C.E.....	1914222	1100452-3-4-5-6-9; 60-1-2-4-6-7-8-9
66	PLATE—End Cover—C.E.....	815868	1100465
67	PLATE—Felt Retainer—D.E.....	825196	1100451
67	PLATE—Felt Retainer—D.E.....	819104	1100452-3-4-5-6-9; 60-1-2-4-5-6-7-8-9
67	PLATE—Felt Retainer—D.E.....	820709	1100458; 63; 70
.....	PLUG—Oil Hole—C.E.....	816315	1100452-3-4-5-6-9; 60-1-2-4-6-7-8-9
68	SHOE—Pole.....	1853592	1100451-2-3-4-5-6-8-9; 61-2-4-5-6-7-8-9; 70
68	SHOE—Pole.....	1864037	1100460-3
.....	SLEEVE—Shaft—Outside—D.E.....	1869793	1100465
.....	SPACER—Fan—C.E. (Inner).....	1913688	1100470
.....	SPACER—Fan—C.E. (Outer).....	1913689	1100470
69	SPRING—Third Brush Plate Tension.....	1850771	1100451-2-5-6-9; 60-1-2-4-7-8-9
69	SPRING—Third Brush Plate Tension.....	809824	1100465
.....	THROWER—Oil—D.E.....	820547	1100463
.....	THROWER—Oil—D.E.....	1919657	1100470
.....	WICK—Felt—C.E.....	1947350	1100452-3-4-5-6-9; 60-1-2-4-6-7-8-9
.....	WICK—Felt—C.E.....	1919851	1100465
.....	Woodruff KEY—C.E.....	124545	1100451-8; 63
.....	Woodruff KEY—C.E.....	124543	1100470
70	Woodruff KEY—D.E.....	124546	1100451
70	Woodruff KEY—D.E.....	124545	1100452-3-4-5-6-9; 60-1-2-4-6-7-8-9
70	Woodruff KEY—D.E.....	124548	1100458; 63; 70

*Included with 1858749 Stud.

 Items not listed in this Catalog will not be sold separately.

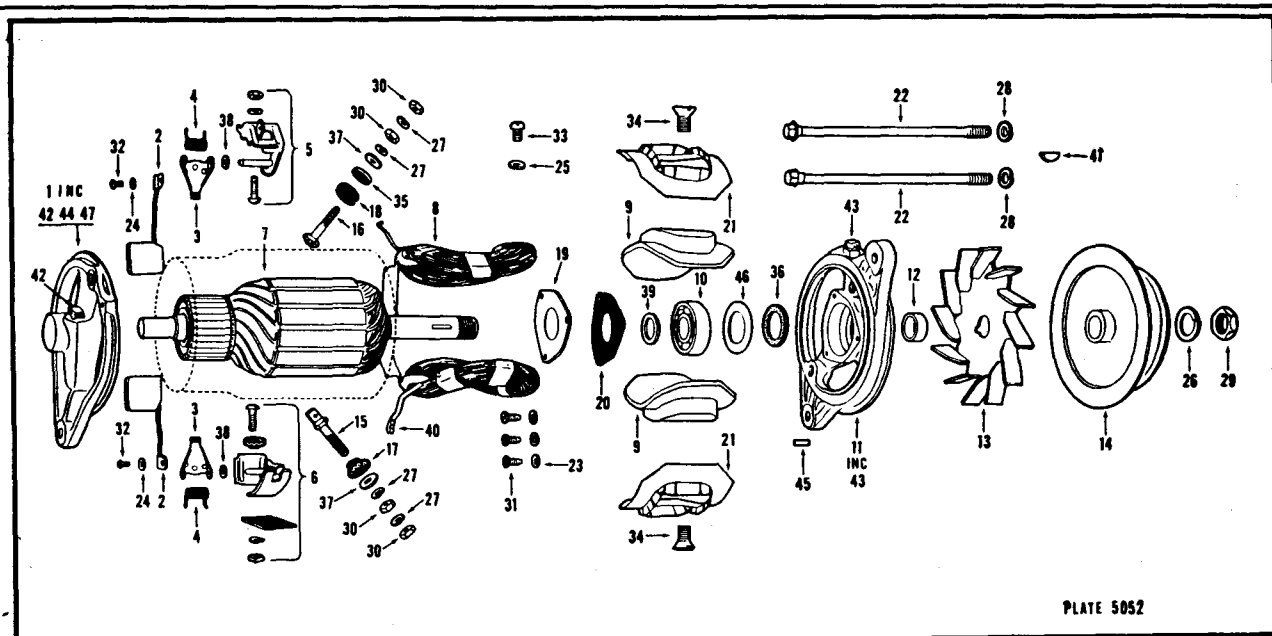

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame — C.E.	Brush	Arm — Brush	Spring — Brush	Holder — (Pkg.) — Ground Brush	Holder — (Pkg.) — Insul. Brush	Armature	Coil — Field — Assembly	Shoe — Pole	Ball Bearing — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1100471.....	1971153	1932506	1944373	1916324	1925378	1925379	1971152	1953879	1931258	907503	1925097
1100472.....	"	"	"	"	"	"	"	"	"	"	1953882

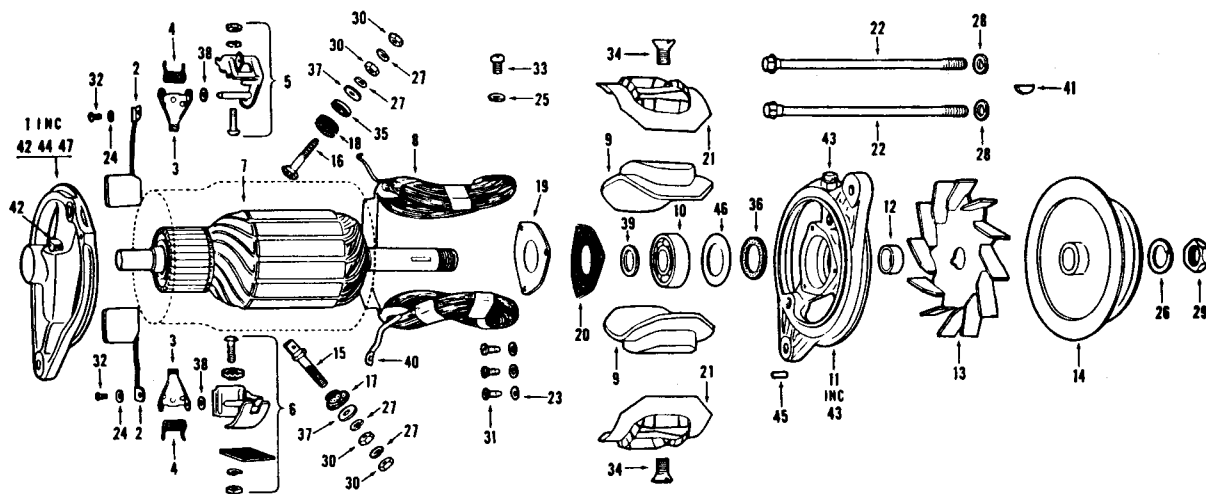 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model	Collar — Space — D.E.	Fan	Pulley or Pulley & Fan	Stud — "A" Terminal	"Stud" — "F" Terminal	Bushing — Insul. — "A" Terminal	* Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coil	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
100471	1858603	1944437	1947620	1923284	1858749	1921362		1911263	1912008	1914491	1908680
100472	"			"	"	"		"	"	"	"

*Included with 1858749 Stud.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
24	Lock Washer—Brush Lead Attaching Screw.....	456413	1100471-2
26	Lock Washer—Shaft Nut—D.E.....	1915265	1100472
26	Lock Washer—Shaft Nut—D.E.....	1941978	1100471
—	Lock Washer—Shaft Nut—C.E.....	1913743	1100471-2
27	Lock Washer—Terminal Stud.....	1914579	1100471-2
28	Lock Washer—Thru Bolt.....	9421424	1100471-2
NUTS			
—	Nut—Shaft—C.E.....	1915172	1100471-2
29	Nut—Shaft—D.E.....	1915172	1100471-2
30	Nut—Terminal.....	121743	1100471-2
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.....	1914580	1100471-2
32	Screw—Brush Lead Attaching.....	454458	1100471-2
34	Screw—Pole Shoe.....	1913960	1100471-2
WASHERS			
35	Washer—Insul.—Field Terminal Stud.....	1858753	1100471-2
—	Washer—Space—C.E.....	809945	1100471-2
36	Washer—Felt—D.E.....	809961	1100471-2
37	Washer—Plain—Terminal Stud.....	826319	1100471-2
39	Washer—Space—Inside—D.E.....	809945	1100471-2
MISCELLANEOUS			
—	BALL BEARING—C.E.....	900529	1100471-2
41	KEY—Woodruff—C.E.....	427261	1100471-2
41	KEY—Woodruff—D.E.....	124545	1100471-2
43	OILER—D.E.....	125609	1100471-2
44	PIN—Dowel—C.E.....	809062	1100471-2
45	PIN—Dowel—D.E.....	809593	1100471-2
46	PLATE—Felt Retainer—D.E.....	819104	1100471-2
—	RING—Bearing Clamp—C.E.....	1929959	1100471-2
—	WICK—Oil—D.E.....	823551	1100471-2
—	SHIELD—Trash—C.E.....	1961234	1100471-2
—	SPACER—Fan—C.E.....	1913688	1100471-2

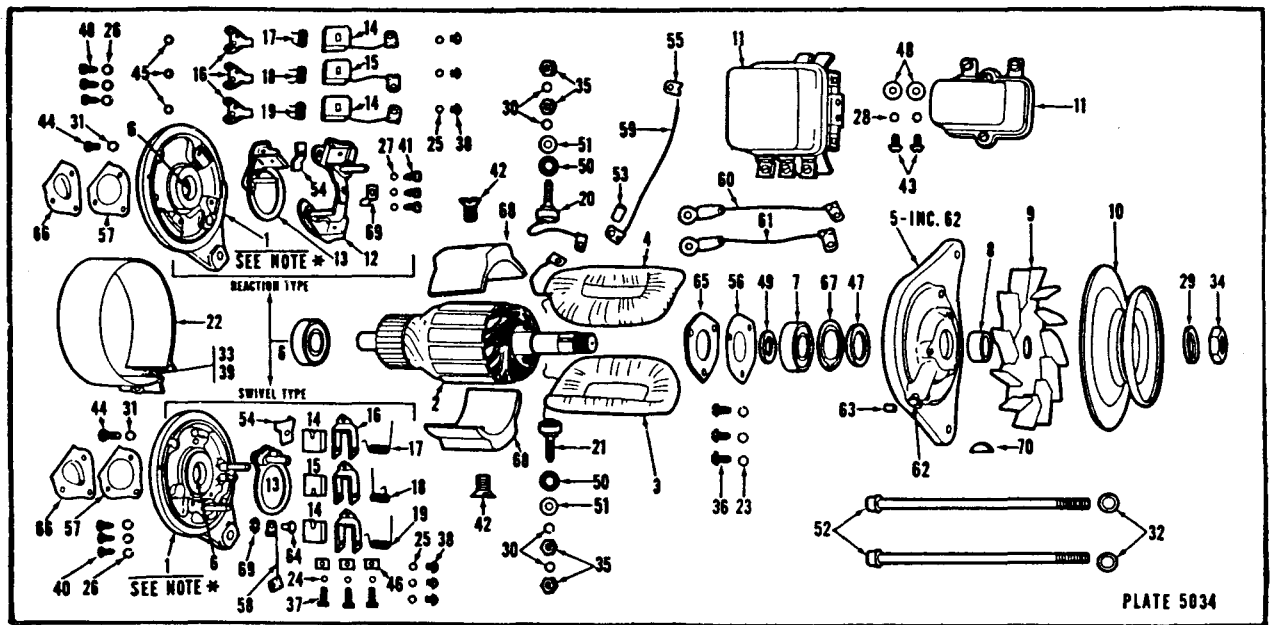 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame — C.E.	Armature	Coll — Field — L.H.	Coll — Field — R.H.	Frame — D.E.	Bushing or Ball Bearing — C.E.	Ball Bearing — D.E.	Collar — Outside — D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1100501	1853830	1947802	*1913554		1873830	812823	954378	817224			
1100502	1878689	1871826			1878691			1858603			
1100503	Same parts as 1100502										
1100504	1908871	1921351	*1913554		1855960	812823	954378	817224			†1118790
1100505		1917164			1908869						
1100506	1882356	"	"		1882358	"	"	"			"
1100507	1908871	"	"		1908869	"	"	"			"
1100508	"	"	"		817223	"	"	"			"
1100509	817529	1921351	"		1912438	"	"	"		1912440	
1100511	1908871	1872608	"		1908869	"	"	"			*5851
1100512	"	817807	*1913554		"	"	"	"			*5864
1100513	822652	1918178	*1918177		"	"	"	"			†1118790
1100516	1908871	1917164	*1913554		1873830	"	"	"			"
1100517	"	"	"		817223	"	"	"			"
1100518	1879202	1918178	*1918177		1886920	"	"	"			
1100520	1879153	1919460	*1913554		1841472	"	954521	1836194			
1100522	1910918	1919460	*1918177		"	"	"	"			
1100523	1908871	1921351	*1913554		1855960	"	954378	817224		1912440	
1100526	1853830	"	"		817223	"	"	"			
1100527	1908871	"	"		1908869	"	"	"			†1118790
1100528	822652	1918178	*1918177		1873830	"	"	"			†
1100529	1908871	1927482	*1913554		1855960	"	"	"		1912440	
1100530	"	"	"		"	"	"	"		1946716	
1100531	1853830	1921351	"		1873830	"	"	"			
1100532	"	"	"		"	"	"	"		1931727	†1118790
1100534	"	1947352	"		"	"	"	"			
1100535	"	1921351	"		"	"	"	"			†1118790
1100536	"	"	"		"	"	"	"		1947813	†
1100537	"	"	+		"	"	"	"		†	"
1100538	"	817807	+		"	"	"	"		†	"
1100539	"	1921351	+		"	"	"	"		1947813	
1100540	1910918	1918178	*1918177		"	"	"	"			*1118786
1100541	1853830	1921351	*1913554		1855960	"	"	"			1119578

 
*C.E. Frame includes where necessary: Bushing, Oiler, Oil Wick, Oil Hole Plug, Dowel Pin and Brush Pins.

†Field Coil set (2 coils).

*For parts see Regulator—Group 5.

†For parts see Regulator—Group 6-F.

*For parts see Regulator—Group 6-E.

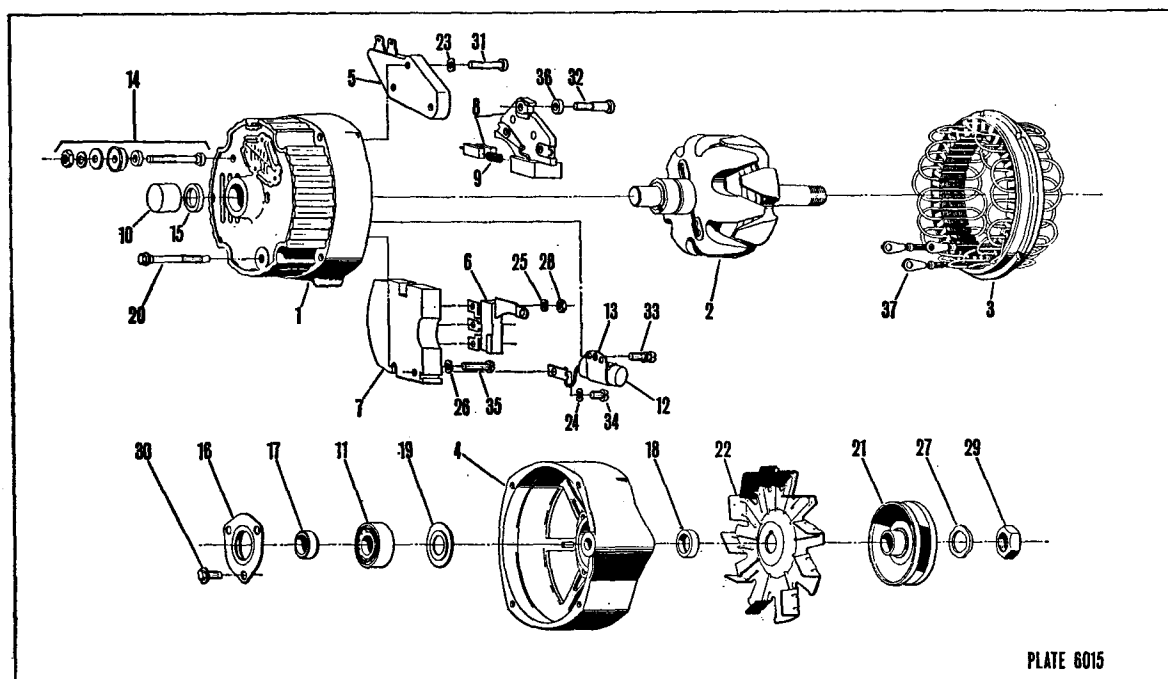

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	*Frame — S.R.E.	Rotor — Assem.	^Δ Stator — Assem.	Frame — D.E.	Regu- lator —	Diode — Trio	Recti- fier — Bridge	□Brush & Holder — Assem.	Spring — Brush	Bearing — S.R.E.	Bearing — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1100543.....	1846523	1971990	1971986	800135	1116387	1971528	1971987	801466	1964117	7451763	907998
1100544.....	"	"	1971639	"	"	"	"	"	"	"	"
1100545.....	"	1846657	1971986	"	"	"	"	"	"	"	"
1100546.....	"	1971990	800137	"	"	"	"	"	"	"	"
1100547.....	"	"	1971986	"	"	"	"	"	"	"	"
1100548.....	"	"	1971639	"	"	"	"	"	"	"	"
1100549.....	"	"	800137	"	"	"	"	"	"	"	"
1100550.....	"	"	1971986	"	"	"	"	"	"	"	"
1100552.....	"	"	800137	"	"	"	"	"	"	"	"
1100554.....	"	1846657	1971639	"	"	"	"	"	"	"	"
1100559.....	"	"	1971986	"	"	"	"	"	"	"	"
1100560.....	"	1971990	800137	"	"	"	"	"	"	"	"
1100574.....	"	"	"	"	"	"	"	"	"	7451931	"
1100575.....	"	"	1971986	"	"	"	"	"	"	"	"
1100576.....	"	"	"	"	1116385	"	"	"	"	"	"
1100577.....	"	"	"	"	"	"	"	"	"	"	"
1100588.....	"	"	"	"	1116387	"	"	"	"	"	"
1100592.....	"	1846657	1971639	"	"	"	"	"	"	"	"

*Includes Illus. 10 & 15.

^ΔIncludes Illus. 37.

□Includes Illus. 9.

* A General Motors Trademark.

Delco Remy
SERVICE PARTS CATALOG

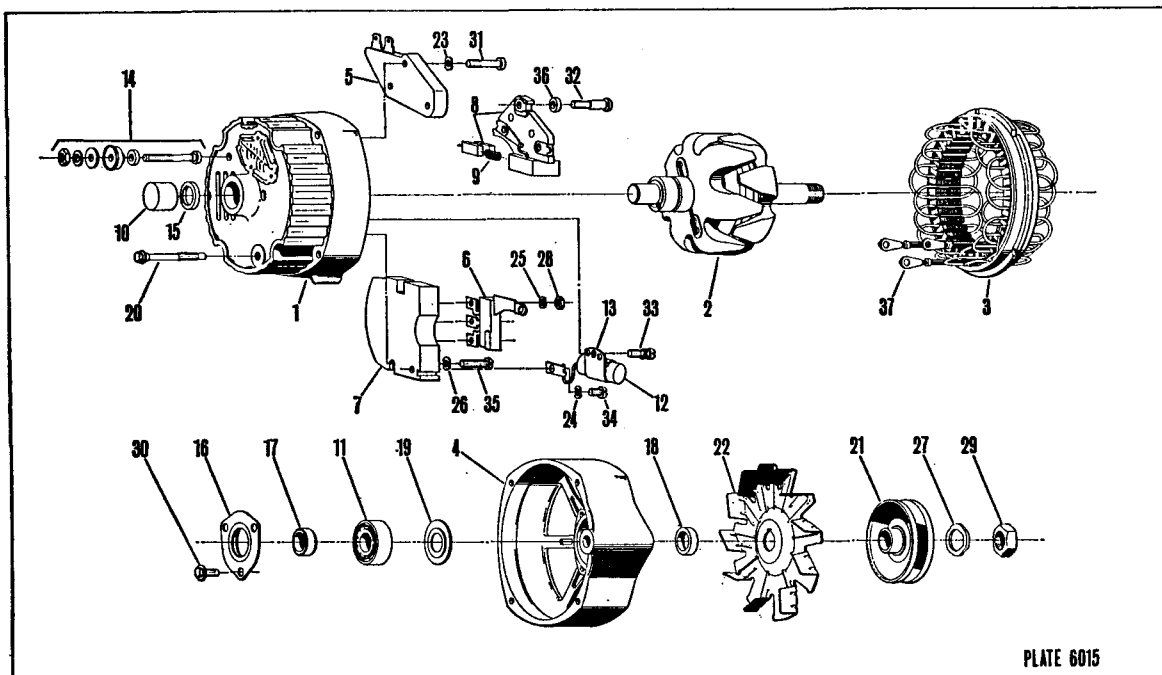 


PLATE 6015

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Capacitor —	Bracket — Cap.	Term. Pkg. — Battery	Seal — Bear.	Bear. Retainer — Assem.	Collar — Inside	Collar — Outside	Slinger — Grease	Bolt — Thru	Pulley —	Fan —
	12	13	14	15	16	17	18	19	20	21	22
1100543.....	801824	1869573	1846900	1961323	1971993	1963139	1959991	800832	1956975		
1100544.....	"	"	"	"	"	"	"	"	"		
1100545.....	"	"	"	"	"	"	1970474	"	"	1949355	800594
1100546.....	"	"	"	"	"	"	"	"	"	"	"
1100547.....	"	"	"	"	"	"	1959991	"	"		
1100548.....	"	"	"	"	"	"	"	"	"		
1100549.....	"	"	"	"	"	"	1970474	"	"	1949355	800594
1100550.....	"	"	"	"	"	"	"	"	"	1964758	"
1100552.....	"	"	"	"	"	"	"	"	"	1949357	"
1100554.....	"	"	"	"	"	"	1959991	"	"		
1100559.....	"	"	"	"	"	"	1970474	"	"	1949355	800594
1100560.....	"	"	"	"	"	"	"	"	"	"	"
1100574.....	"	"	"	"	"	"	"	"	"	1846787	"
1100575.....	"	"	"	"	"	"	1959991	"	"	1949355	"
1100576.....	"	"	"	"	801506	"	"	"	"	1965904	1966990
1100577.....	"	"	"	"	"	"	"	"	"	"	1959703
1100588.....	"	"	"	"	1971993	"	"	"	"		
1100592.....	"	"	"	"	"	"	1970474	"	"	1949357	1966990

* A General Motors Trademark.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used On
LOCK WASHERS			
—	Lock Washer—Ball Brg. Retainer Plate Screw -----	9419634	1100576-7
23	Lock Washer—Brush Hldr. Attach. Screw -----	9419392	All except 1100574-5-6-7; 88; 92
23	Lock Washer—Brush Holder Attach. Screw -----	1847933	1100574-5-6-7; 88; 92
25	Lock Washer—Rectifier Bridge Nut -----	9419392	All except 1100574-5-6-7; 88; 92
25	Lock Washer—Rectifier Bridge Nut -----	1847933	1100574-5-6-7; 88; 92
26	Lock Washer—Rectifier Bridge Attach. Screw -----	9419392	All except 1100574-5-6-7; 88; 92
26	Lock Washer Rectifier Bridge Attach. Screw -----	1847933	1100574-5-6-7; 88; 92
27	Lock Washer—Shaft Nut—D.E. -----	1941978	All
—	Lock Washer—S.R.E. Cover Screw -----	9419634	1100576-7
NUTS			
28	Nut—Rectifier Bridge -----	453434	All
29	Nut—Shaft D.E. -----	1915172	All
SCREWS			
30	Screw—Ball Bearing Retainer Attach. -----	1965104	All except 1100576-7
30	Screw—Ball Brg. Retainer Plate Attach. -----	9411396	1100576-7
31	Screw—Brush Holder Attach. Grd. -----	1971519	All
32	Screw (Insulated)—Brush Holder Attach. -----	1846864	All
33	Screw (& Lock Washer)—Capacitor Bracket Attach. -----	453849	All except 1100574-5-6-7; 88; 92
33	Screw (& Lock Washer)—Capacitor Bracket Attach. -----	454430	1100574-5-6-7; 88; 92
35	Screw—Rectifier Bridge Attach. -----	436698	All except 1100574-5-6-7; 88; 92
35	Screw—Rectifier Bridge Attach. -----	1847940	1100574-5-6-7; 88
—	Screw—S.R.E. Cover -----	9431903	1100576-7
WASHERS			
—	Washer—Batt. Terminal—Neoprene Sponge -----	801495	1100576-7
MISCELLANEOUS			
—	CLIP—Regulator Terminal Shorting -----	801493	1100576-7
—	CLIP—Ground Screw -----	801591	1100576-7
—	CLIP—Stator Lead -----	1846548	1100588; 92
37	CLIP—Stator Lead -----	1959532	All except 1100588; 92
—	COVER ASSEM.—S.R.E. -----	1851178	1100576-7
—	GASKET—D.E. Screen Assem. -----*		
—	SCREEN ASSEM. -----	1851176	1100576-7
—	SCREEN—S.R.E. Cover -----	1851177	1100576-7

* Service with Screen Assem. 1851176.

* A General Motors Trademark.

 Parts not listed in this Catalog will not be sold separately.

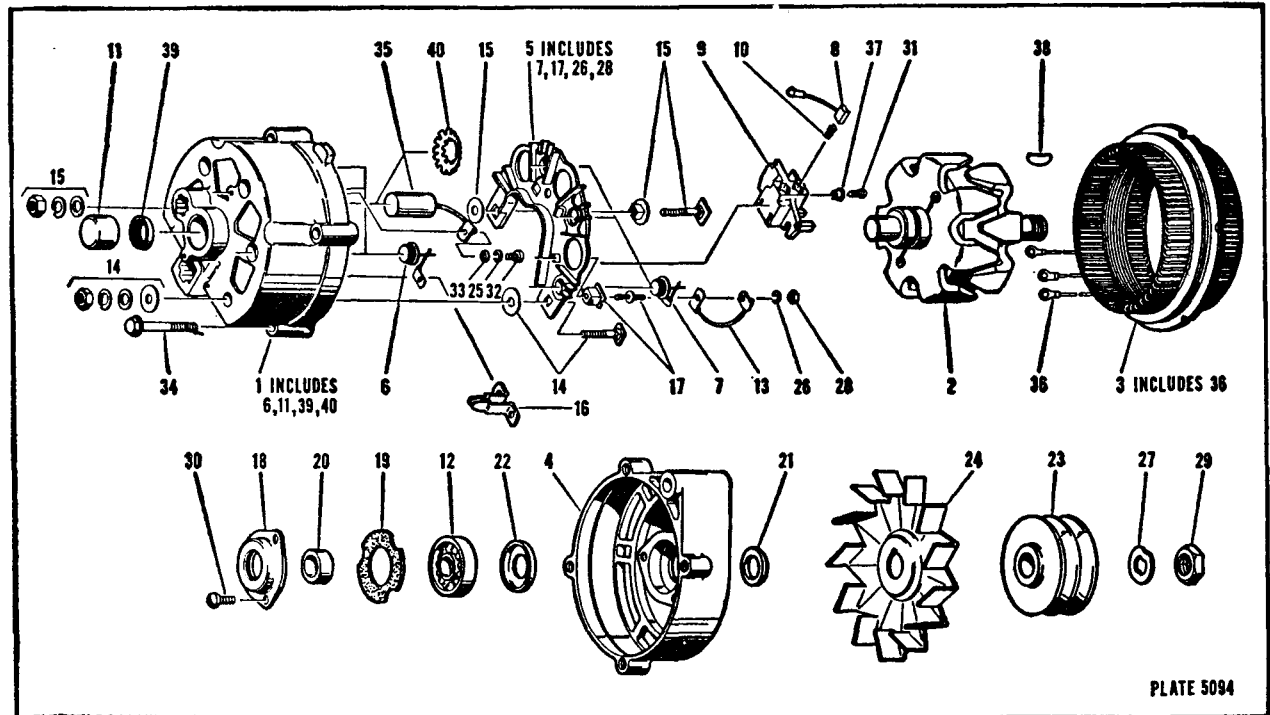

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model No.	# Frame S.R.E.	Rotor Assem.	Stator Assem.	Frame D.E.	Heat Sink Assem.	Diode	Diode	Brush	Holder Brush	Spring Brush	Bearing S.R.E.	Bearing D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1100553.....	800396	1958565	1962025	1959917	1959828	1959830	1959829	■	■	“	7451763	907996
1100557.....	“	“	“	“	“	“	“	■	■	“	“	“
1100558.....	“	“	1959381	“	“	“	“	■	■	“	“	“
1100566.....	“	“	“	“	“	“	“	■	■	“	“	“
1100567.....	“	“	“	“	“	“	“	■	■	“	“	“
1100568.....	“	“	1962025	“	“	“	“	■	■	“	“	“
1100569.....	“	“	“	“	“	“	“	■	■	“	“	“
1100570.....	“	“	“	“	“	“	“	■	■	“	“	“
1100571.....	“	“	“	“	“	“	“	■	■	“	“	“
1100572.....	“	“	“	“	“	“	“	■	■	“	“	“
1100586.....	1970918	1851354	1959381	1970595	“	1964354	1964353	■	■	“	“	908019
1100590.....	800396	1958565	1962025	1959917	“	1959830	1959829	■	■	“	“	907996
1100591.....	“	“	“	“	“	“	“	■	■	“	“	“

■ Serviced by 1964682 Brush Holder and Brush Assem.

Also includes Illustration No. 35.

*A General Motors Trademark.

 Delco-Remy SERVICE PARTS CATALOG

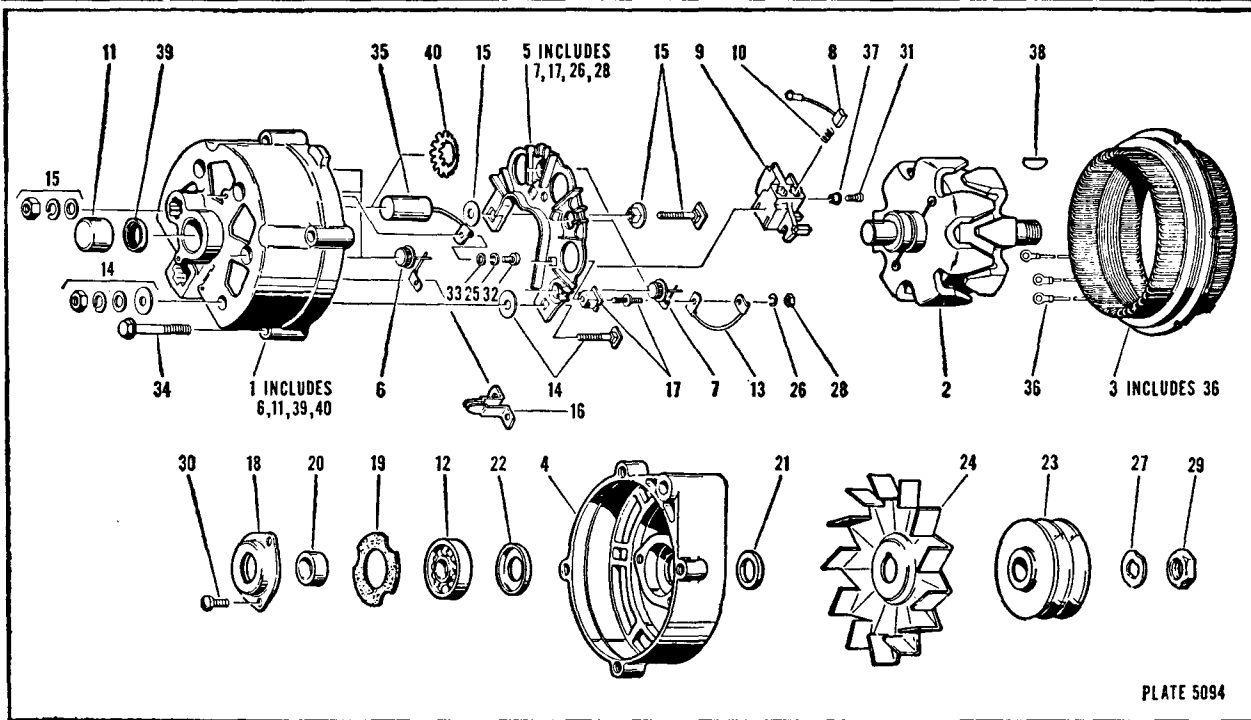

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Lead — Light Indctr.	Terminal Pkg. — Battery	Terminal Pkg. — Ground	Terminal — Fld. Or. Ind. Lt.	Terminal Pkg. — Diode Junction	Brg. Retainer — Assem.	Gasket	Collar — Inside	Collar — Outside	Grease Slinger	Pulley	Fan
	13	14	15	16	17	18	19	20	21	22	23	24
1100553.....		1959832	1959833		1959834	1955494	1912008	1963139	1959991	800832	800260	800594
1100557.....		"	"		"	"	"	"	"	"	1949355	"
1100558.....		"	"		"	"	"	"	"	"	"	"
1100566.....		"	"		"	"	"	"	1970474	"	1949355	1966990
1100567.....		"	"		"	"	"	"	"	"	"	"
1100568.....		"	"		"	"	"	"	1959991	"	1939845	800594
1100569.....		"	"		"	"	"	"	1970474	"	1949355	1966990
1100570.....		"	"		"	"	"	"	1959991	"	1939845	800594
1100571.....		"	"		"	"	"	"	"	"	"	"
1100572.....		"	"		"	"	"	"	1970474	"	1846787	1966990
1100586.....		"	"		"	"	"	"	1959991	"	"	"
1100590.....		"	"		"	"	"	"	"	800832	1949355	1966990
1100591.....		"	"		"	"	"	"	"	"	"	"

*A General Motors Trademark.


Revised to September 1, 1970

SERVICE PARTS CATALOG
MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
25	Lock Washer—Spring Capacitor Terminal Screw.....	1847933	1100586; 90-1
25	Lock Washer—Spring Capacitor Terminal Screw.....	9419392	All except 1100586; 90-1
26	Lock Washer—Diode Junction Terminal.....	9419392	All
26	Lock Washer—Shaft Nut—D.E.....	1847933	1100586; 90-1
27	Lock Washer—Diode Junction Terminal.....	1941978	1100557-8; 66-7-8-9; 70-1-2; 86; 90-1
27	Lock Washer—Shaft Nut—D.E.....	1944314	1100553
NUTS			
28	Nut—Diode Junction Terminal.....	453434	All
29	Nut—Shaft D.E.....	1915172	1100557-8; 66-7-8-9; 70-1-2; 86; 90-1
29	Nut—Shaft D.E.....	1969206	1100553
SCREWS			
30	Screw—Ball Brg. Retainer Attaching.....	1965104	All
31	Screw—Brush Holder Attaching.....	1957501	All
32	Screw—Heat Sink.....	132768	All
WASHERS			
—	Washer—Insl. Heat Sink Screw.....	1959523	All
33	Washer—Plain—Heat Sink Screw.....	815540	All
—	Washer—Spring—Brush Holder Attaching Screw.....	9419392	All except 1100586; 90-1
—	Washer—Spring—Brush Holder Attach. Screw.....	1847933	1100586; 90-1
MISCELLANEOUS			
34	BOLT—Thru.....	1956975	All
35	CAPACITOR.....	1959455	All
36	CLIP—Stator Lead Terminal.....	1959532	All
36	CLIP—Stator Lead Terminal.....	1846548	1100590-1
—	INSULATOR—Heat Sink Term. Screw.....	1959389	All
39	RETAINER— (& Felt)—S.R.E.....	1959790	All
40	SPRING—Capacitor Retaining.....	1960750	All

 *A General Motors Trademark.

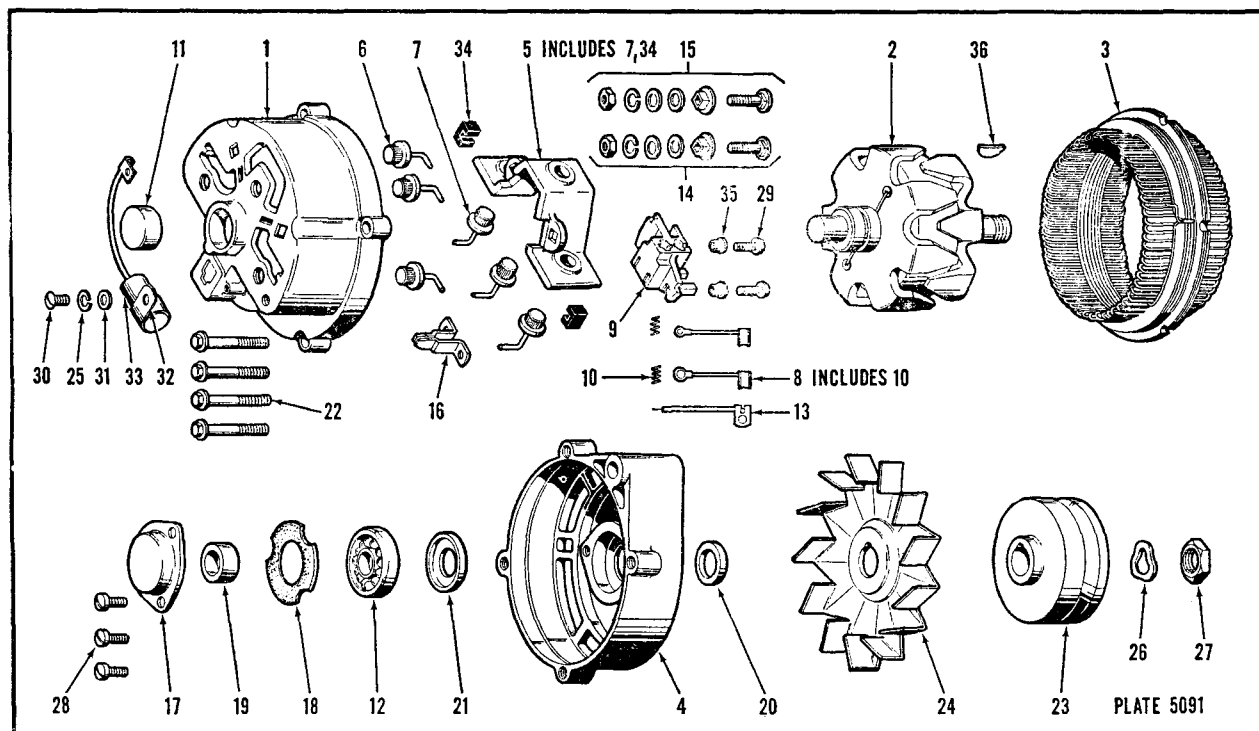

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame S.R.E.	Rotor Assem.	Stator Assem.	Frame D.E.	Heat Sink Assem.	Diode	Diode	Brush	Holder Brush	Spring Brush	Bearing S.R.E.	Bearing D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1100600.....	△1958227	1956963	1958230	1956961	1958228	⊙1958232	□1958231	x1958197	1959978	1955519	7451326	95437 [⊙]
1100601.....	△ " "	" "	1958229	" "	" "	⊙ " "	□ " "	x " "	" "	" "	" "	" "
1100613.....	△ " "	" "	1958230	" "	" "	⊙ " "	□ " "	x " "	" "	" "	" "	" "

 
⊙Negative Diode

□Positive Diode

xPackage—Includes 2 Brushes & 2 Springs

△Includes Illus. 6, 11

*A General Motors Trademark

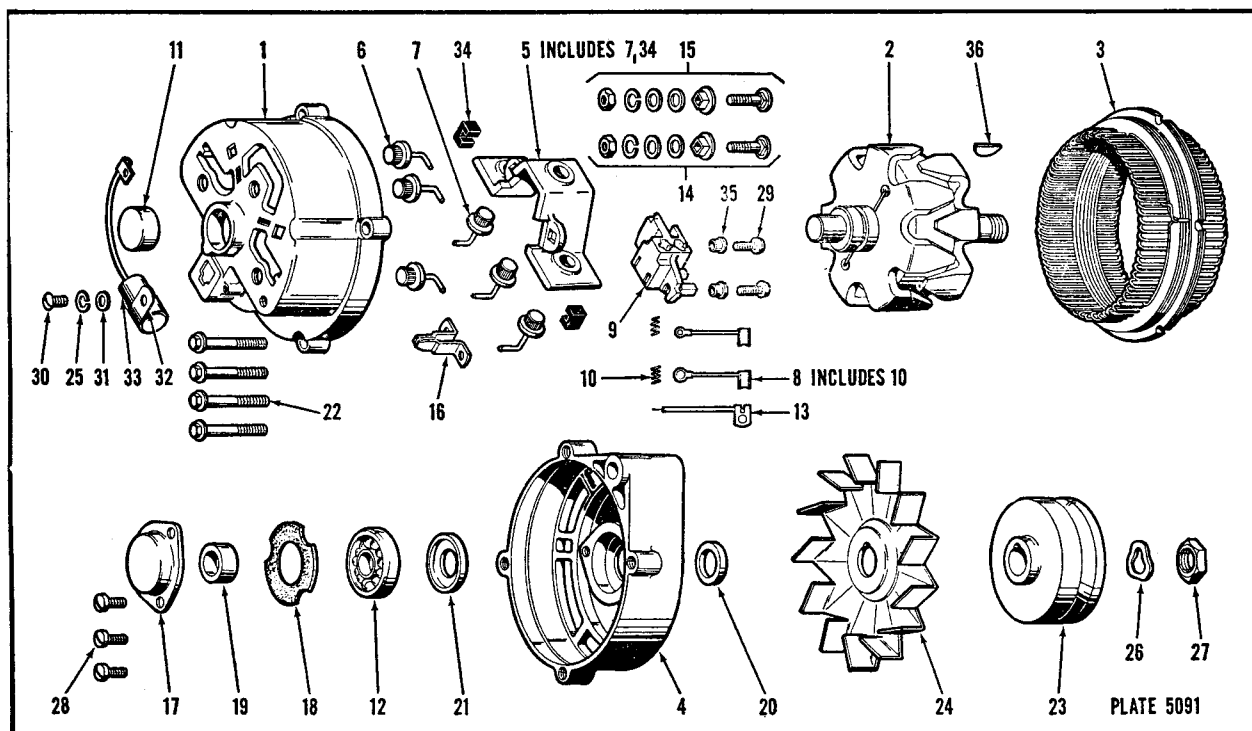

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Lead — Light Indicator	Terminal Pkg. — Battery	Terminal Pkg. — Ground	Terminal — Fld. or Ind. Lt.	Brg. Retainer — Assem.	Gasket	Collar — Inside	Collar — Outside	Grease Slinger	Bolt — Thru	Pulley	Fan
	13	14	15	16	17	18	19	20	21	22	23	24
1100600.....	1958235	1959832	1958234	1956982	1955494	1912008	1963139	1955819	1947344	1956975	—	—
1100601.....	"	"	"	"	"	"	"	"	"	"	—	—
1100613.....	"	"	"	"	"	"	"	"	"	"	1958095	1940994

*A General Motors Trademark

Parts not listed in this Catalog will not be sold separately.

Revised to August 1, 1964

SERVICE PARTS CATALOG

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	LOCKWASHERS		
25	Lockwasher—Capacitor attaching screw -----	453435	All
26	Lockwasher—Shaft Nut—D.E. -----	1941978	All
	NUTS		
27	Nut—Shaft—D.E. -----	1915172	1100600-1; 13
	SCREWS		
28	Screw—Ball Brg. Retainer Attaching -----	1962686	All
29	Screw—Brush Holder Attaching -----	1957501	All
30	Screw—Capacitor Attaching -----	159920	All
	WASHERS		
31	Washer—Plain—Capacitor Attaching Screw -----	34896	All
	MISCELLANEOUS		
32	BRACKET—Capacitor -----	1917585	All
33	CAPACITOR -----	1958204	All
34	DAMPER—Heat Sink Vibration -----	1957454	All
35	INSULATOR—Brush Holder Screw -----	1957562	All
36	KEY—Woodruff D.E. -----	124545	All

 
*A General Motors Trademark

Parts not listed in this Catalog will not be sold separately.

Revised to October 1, 1968

Delco-Remy SERVICE PARTS CATALOG

DELCO-TRON* GENERATOR
Group 88-G
Models 1100615 to 1100652
Page 1

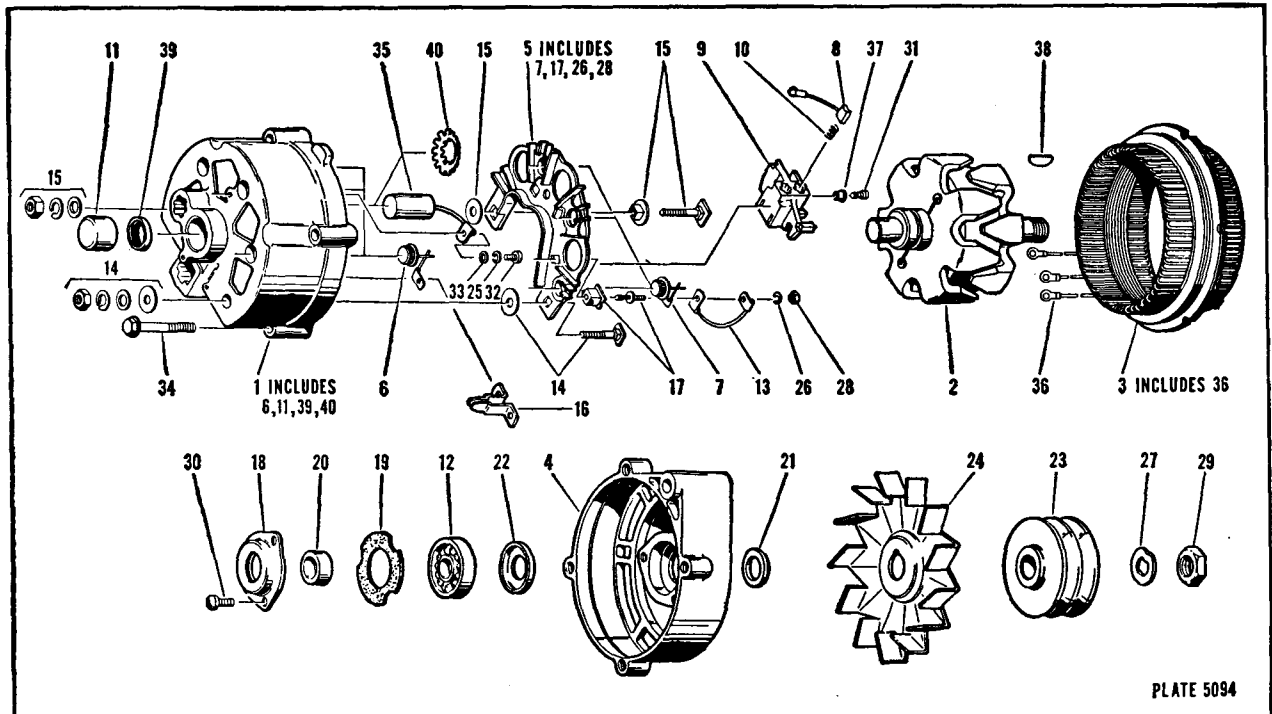

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	* Frame S.R.E.	Rotor Assem.	Stator Assem.	Frame D.E.	Heat Sink Assem.	Diode	Diode	Brush	Holder Brush	Spring Brush	Bearing S.R.E.	Bearing D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1100615.....	1959827	1958565	1959381	1956961	1959828	1959830	1959829	1958197	1959978	1964117	7451326	954378
1100616.....	"	"	1959531	1959917	"	"	"	"	"	"	"	"
1100617.....	"	"	"	"	"	"	"	"	"	"	"	"
1100618.....	"	"	"	1956961	"	"	"	"	"	"	"	"
1100620.....	"	"	1959381	"	"	"	"	"	"	"	"	"
1100621.....	"	"	1959531	1959917	"	"	"	"	"	"	"	"
1100622.....	"	"	"	"	"	"	"	"	"	"	"	"
1100623.....	"	"	1959381	"	"	"	"	"	"	"	"	"
1100624.....	"	"	"	"	"	"	"	"	"	"	"	"
1100625.....	"	"	"	"	"	"	"	"	"	"	"	"
1100627.....	"	1958565	1959531	"	"	"	"	"	"	"	"	"
1100628.....	"	"	1959381	"	"	"	"	"	"	"	"	"
1100629.....	"	"	"	"	"	"	"	"	"	"	"	"
1100630.....	"	"	"	"	"	"	"	"	"	"	"	"
1100631.....	"	"	"	"	"	"	"	"	"	"	"	"
1100632.....	"	"	"	"	"	"	"	"	"	"	"	"
1100633.....	"	1958565	1959531	"	"	"	"	"	"	"	"	"
1100634.....	"	"	1959381	"	"	"	"	"	"	"	"	"
1100635.....	"	"	"	"	"	"	"	"	"	"	"	"
1100636.....	"	"	"	"	"	"	"	"	"	"	"	"
1100637.....	"	"	"	"	"	"	"	"	"	"	"	"
1100638.....	"	"	"	"	"	"	"	"	"	"	"	"
1100639.....	1965279	1964695	"	1964819	"	"	"	○	○	"	"	"
1100640.....	1959827	1958565	"	1959917	"	"	"	1958197	1959978	"	"	"
1100642.....	"	"	"	"	"	"	"	"	"	"	"	"
1100646.....	"	"	"	"	"	"	"	"	"	"	"	"

(Continued on Page 2)

*Also includes Illus. No. 35.
○Use 1964682 Brush Holder & Brush for service.
*A General Motors Trademark

Delco-Remy
SERVICE PARTS CATALOG

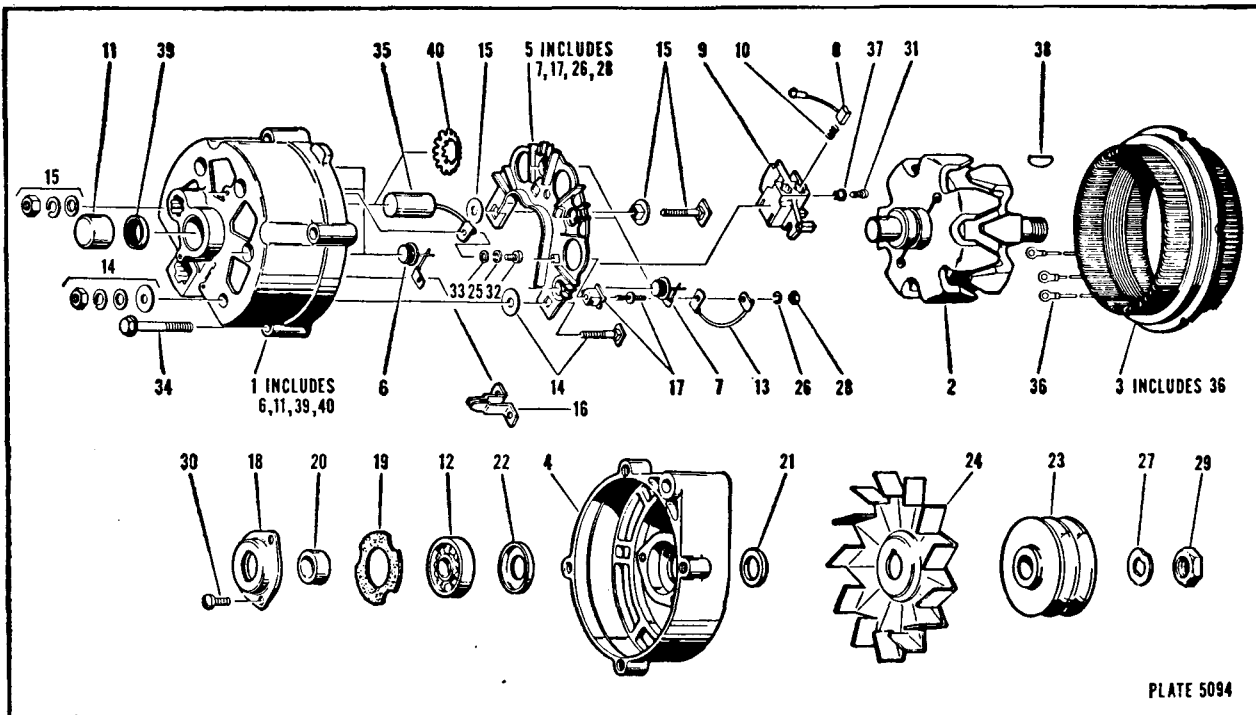 


PLATE 5094

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame — S.R.E.	Rotor — Assem.	Stator — Assem.	Frame — D.E.	Heat Sink — Assem.	Diode	Diode	Brush	Holder — Brush	Spring — Brush	Bearing — S.R.E.	Bearing — D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1100647.....	1959827	1958565	1959381	1959917	1959828	1959830	1959829	1958197	1959978	1964117	7451326	954378
1100648.....	"	1958565	1959531	"	"	"	"	"	"	"	"	"
1100649.....	"	"	1959381	"	"	"	"	"	"	"	"	"
1100650.....	"	"	1962025	"	"	"	"	"	"	"	"	"
1100651.....	"	"	1959381	"	"	"	"	"	"	"	"	"
1100652.....	"	*1964563	1959531	1962561	"	"	"	†	†	"	"	905920
.....												
.....												
.....												
.....												

*Also includes Illus. No. 35.

*See Footnote Page 4.

†Use 1965276 Brush Holder & Brush Assem.

*A General Motors Trademark

Delco-Remy

DELCOTRON* GENERATOR

Group 88-G

Models 1100615 to 1100652

Page 3

Revised to October 1, 1968

SERVICE PARTS CATALOG

Model No.	Lead — Light Indctr.	Terminal Pkg. — Battery	Terminal Pkg. — Ground	Terminal Pkg. — Fld. Or. Ind. Lt.	Terminal Pkg. — Diode Junction	Brg. Retainer — Assem.	Gasket	Collar — Inside	Collar — Outside	Grease Slinger	Pulley	Fan
	13	14	15	16	17	18	19	20	21	22	23	24
1100615.....	1959969	1959832	1959833	1956982	1959834	1955494	1912008	1963139	1959991	1947344		
1100616.....	"	"	"	"	"	"	"	"	"	"	1962934	1960423
1100617.....	"	"	"	"	"	"	"	"	"	"	1919355	1966990
1100618.....	"	"	"	"	"	"	"	"	"	"		
1100620.....	"	"	"	"	"	"	"	"	"	"	1958095	1966990
1100621.....	"	"	"	"	"	"	"	"	"	"	1949357	1960423
1100622.....	"	"	"	"	"	"	"	"	"	"	1944312	1966990
1100623.....	"	"	"	"	"	"	"	"	"	"	1949355	"
1100624.....	"	"	"	"	"	"	"	"	"	"	"	"
1100625.....	"	"	"	"	"	"	"	"	"	"	1949357	1960423
1100627.....	"	"	"	"	"	"	"	"	"	"	1949358	1966990
1100628.....	"	"	"	"	"	"	"	"	"	"		
1100629.....	"	"	"	"	"	"	"	"	"	"		
1100630.....	"	"	"	"	"	"	"	"	"	"		
1100631.....	"	"	"	"	"	"	"	"	"	"	1949355	1966990
1100632.....	"	"	"	"	"	"	"	"	"	"	1949358	"
1100633.....	"	"	"	"	"	"	"	"	"	"	"	"
1100634.....	"	"	"	"	"	"	"	"	"	"	"	"
1100636.....	"	"	"	"	"	"	"	"	"	"	"	1960423
1100637.....	"	"	"	"	"	"	"	"	"	"	"	"
1100638.....	"	"	"	"	"	"	"	"	"	"	1960536	"
1100639.....	"	"	"	"	"	"	"	"	"	"		
1100640.....	1959969	"	"	1956982	"	"	"	"	"	"		
1100642.....	"	"	"	"	"	"	"	"	"	"	1961291	1966990
1100646.....	"	"	"	"	"	"	"	"	"	"	1947620	"
1100647.....	"	"	"	"	"	"	"	"	"	"	"	"
1100648.....	"	"	"	"	"	"	"	"	"	"	1949357	1960423
1100649.....	"	"	"	"	"	"	"	"	"	"	1961988	"
1100650.....	"	"	"	"	"	"	"	"	"	"	1945357	"
1100651.....	"	"	"	"	"	"	"	"	"	"	1949358	"
1100652.....	"	"	"	"	"	*1963213		*1963211	1953253			

*See Footnote Page 4.

*A General Motors Trademark

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
—	Lock Washer—Brush Holder Attaching Screw.....	9419392	All
25	Lock Washer—Capacitor Terminal Screw.....	9419392	All
26	Lock Washer—Diode Junction Terminal.....	9419392	All
27	Lock Washer—Shaft Nut—D.E.....	1941978	All except 1100622; 52
27	Lock Washer—Shaft Nut—D.E.....	1944314	1100622
NUTS			
28	Nut—Diode Junction Terminal.....	120622	All except 1100652
28	Nut—Diode Junction Terminal.....	9418854	1100652
29	Nut—Shaft—D.E.....	1911324	All except 1100622; 52
29	Nut—Shaft—D.E.....	1944313	1100622
29	Nut—Shaft—D.E.....	1956405	1100652
29	Nut—Shaft—D.E.....	1961271	1100639
SCREWS			
30	Screw—Ball Brg. Retainer Attaching.....	1956984	All except 1100652
30	Screw—Ball Brg. Retainer Attaching.....	1961526	1100652
30	Screw—Ball Brg. Retainer Attaching.....	1962686	1100639
31	Screw—Brush Holder Attaching.....	1957501	All except 1100652
31	Screw—Brush Holder Attaching.....	1961530	1100652
32	Screw—Capacitor Terminal.....	132768	All except 1100652
32	Screw—Capacitor Terminal.....	9418855	1100652
WASHERS			
—	Washer—Insl. Capacitor Screw.....	1959523	All
33	Washer—Plain—Capacitor Terminal Screw.....	815540	All
—	Washer—Spring—Brush Holder Attaching Screw.....	9419392	All
—	Washer—Spring—Capacitor Terminal Screw.....	9419392	1100652
—	Washer—Spring—Diode Junction Terminal.....	9419392	1100652
MISCELLANEOUS			
34	BOLT—Thru.....	1956975	All
35	CAPACITOR.....	1959455	All
36	CLIP—Stator Lead Terminal.....	1959532	All
—	COLLECTOR & Spring Assem.—D.E.....	*1952241	1100652
37	INSULATOR—Brush Holder Screw.....	1957562	All
—	INSULATOR—Capacitor Term. Screw.....	1959389	All
38	KEY—Woodruff—D.E.....	124545	All except 1100623-4; 31-2-4-6-7-8; 42-6-7-8; 50-1
—	"O" RING—D.E.....	1916644	1100652
39	RETAINER (& FELT)—S.R.E.....	1959790	All
—	RING—Collector—D.E.....	*1952244	1100652
—	SEAL—Oil Ball Brg.—D.E.....	1954120	1100652
40	SPRING—Capacitor Retaining.....	1960750	All

*If the unit has two Shaft Collars and washer type Collector Ring on inboard side of D.E. Ball Bearing, it must be updated to latest design by ordering the following parts:

1962559 Rotor Assem.
1963213 Bearing Retainer Plate
1963211 Collar
1952241 Collector & Spring
1952244 Collector Ring

Current design units have one shaft collar and formed type Collector Ring on inboard side of D.E. Ball Bearing. For these units order individual parts as required.

 
*A General Motors Trademark

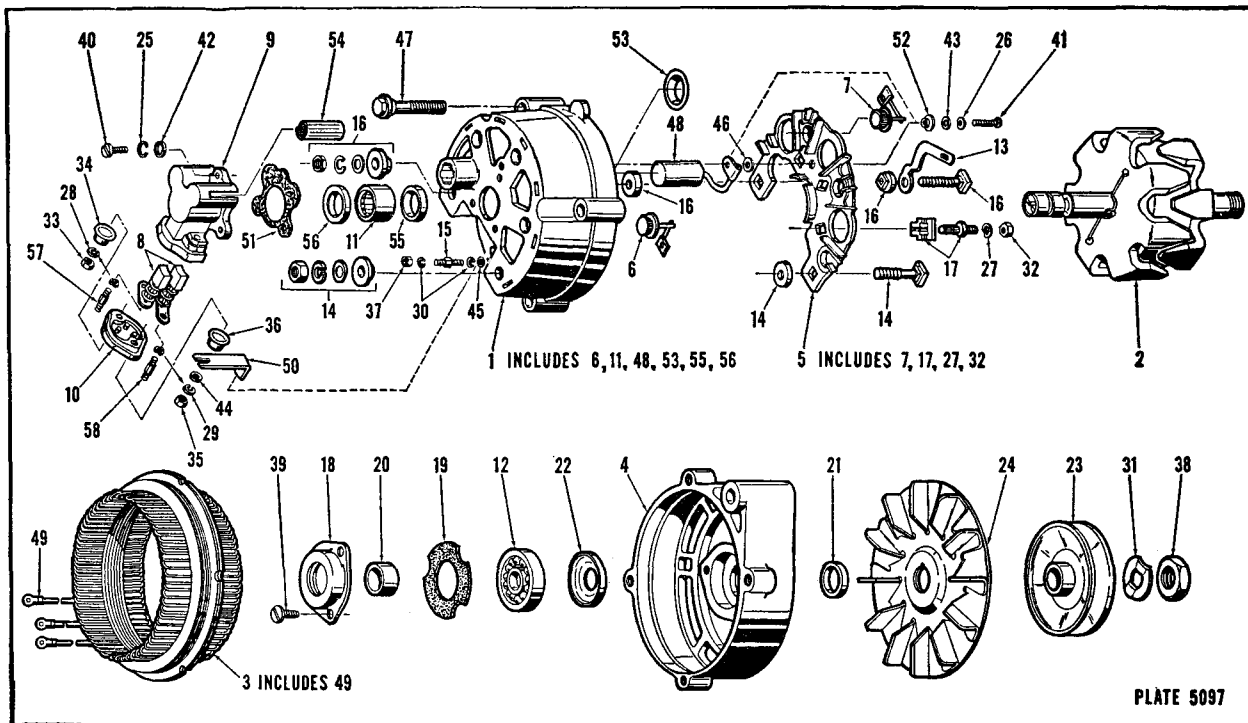

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame — S.R.E.	Rotor — Assem.	Stator — Assem.	Frame — D.E.	Heat Sink — Assem.	Diode	Diode	Brush	Holder — Brush	Cover — Brush Holder	Bearing — S.R.E.	Bearing — D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
△1100619.....	1961537	1965532	1959381	1961780	1961538	1959830	1959829	△1946832	△1963433	△1963434	9418385	954378
1100653.....	1963707	"	"	"	1963705	1959829	1959830	△ "	△ "	△ "	"	"
△1100654.....	1961537	"	"	"	1961538	1959830	1959829	△ "	△ "	△ "	"	"
1100721.....	"	1965532	"	"	"	"	"	△ "	△1963474	△ "	"	"
1100722.....	"	"	"	"	"	"	"	△ "	△ "	△ "	"	"
1100732.....	"	"	"	"	"	"	"	△ "	△ "	△ "	"	"
1100806.....	"	"	"	"	"	"	"	△ "	△ "	△ "	"	"

 △When ordering brushes, brush holder or related parts, inspect unit. If the field and ground brush terminals are NOT secured at bottom of brush holder by nuts; order re-operation Brush Holder Package 1963419.

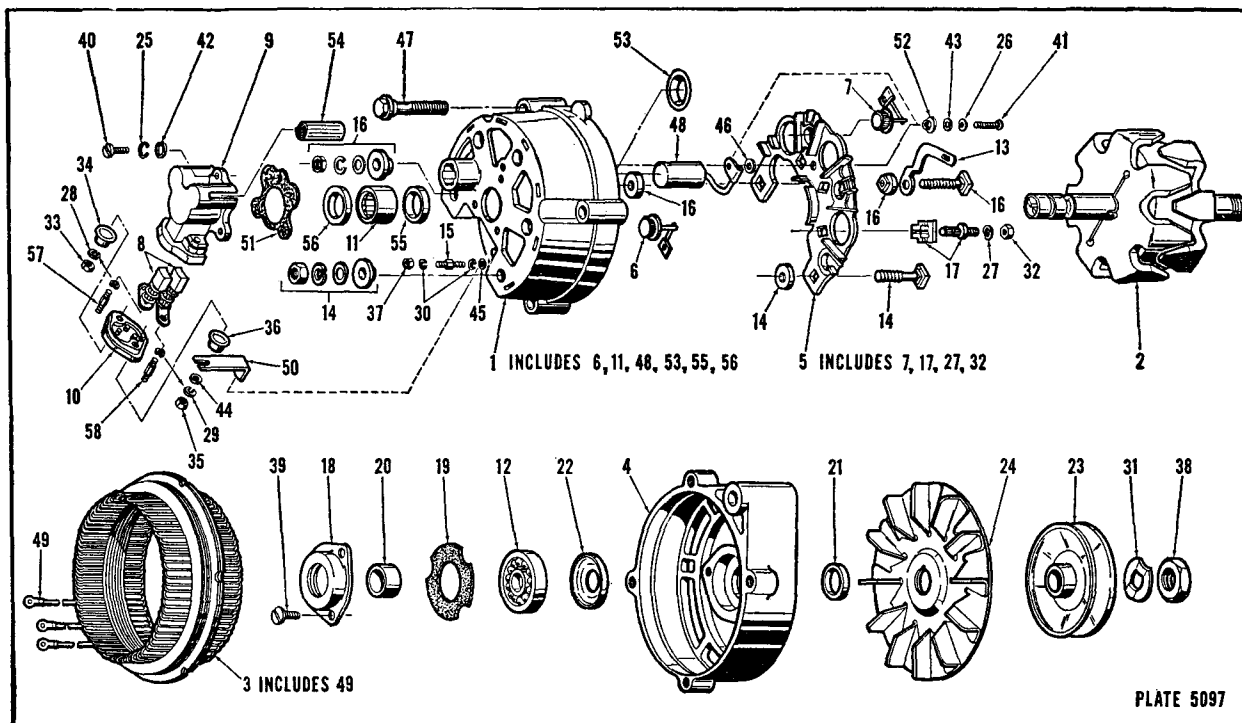

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Conn.	Terminal Pkg. — Battery	Terminal — Ground	Terminal Pkg. — Relay	Terminal Pkg. — Diode Junction	Bearing Retainer — Assem.	Gasket	Collar — Inside	Collar — Outside	Grease Slinger	Pulley	Fan
	13	14	15	16	17	18	19	20	21	22	23	24
1100619.....	1959696	1959832	1960941	1961541	1959834	1955494	1912008	1963139	1959991	1947344	1949358	1959703
1100653.....	"	"	"	"	"	"	"	"	"	"	1949358	1959703
1100654.....	"	"	"	"	"	"	"	"	"	"	1965904	1965208
1100721.....	"	"	"	"	"	"	"	"	"	"	"	"
1100722.....	"	"	"	"	"	"	"	"	"	"	"	"
1100732.....	"	"	"	"	"	"	"	"	"	"	1965904	1959703
1100806.....	"	"	"	"	"	"	"	"	"	"	"	"

*A General Motors Trademark

Parts not listed in this Catalog will not be sold separately.

Revised to July 1, 1967

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
25	Lock Washer—Brush Holder Attaching Screw	1946143	All
26	Lock Washer—Capacitor Terminal Screw	9419392	All
27	Lock Washer—Diode Junction Terminal	9419392	All
28	Lock Washer—Field Terminal (Wave Type)	9419634	All
—	Lock Washer—Field Term.—Underside (Spring Type)	1963436	All
—	Lock Washer—Field Term.—Underside (External Tooth)	138479	All
29	Lock Washer—Grd. Brush Term. (Wave Type)	9419634	All
—	Lock Washer—Grd. Brush Term.—Underside (Spring Type)	1963436	All
—	Lock Washer—Grd. Brush Term.—Underside (External Tooth)	138479	All
30	Lock Washer—Ground Terminal	1946143	All
31	Lock Washer—Shaft Nut—D.E.	1941978	All
NUTS			
32	Nut—Diode Junction Terminal	120622	All except 1100806
32	Nut—Diode Junction Terminal	453434	1100806
33	Nut—Field Terminal	453433	All
34	Nut—Field Terminal Sealing	1963435	All
35	Nut—Ground Brush Terminal	453433	All
36	Nut—Ground Brush Terminal Sealing	1963435	All
37	Nut—Ground Terminal	120622	All
38	Nut—Shaft—D.E.	1915172	All
SCREWS			
39	Screw—Ball Brg. Retainer Plate Attach.	1965104	All
40	Screw—Brush Holder Attach.	9419310	All
41	Screw—Capacitor Terminal	132768	All
WASHERS			
42	Washer—Plain—Brush Holder Attach. Screw	807295	All
43	Washer—Plain—Capacitor Term. Screw	815540	1100721-22; 32
43	Washer—Plain—Capacitor Term. Screw	1937873	All
44	Washer—Plain—Ground Brush Terminal	807295	All except 1100806
44	Washer—Plain—Ground Brush Terminal	1919042	1100806
45	Washer—Plain—Ground Terminal	810794	All except 1100806
45	Washer—Plain—Ground Terminal	1900466	1100806
46	Washer—Insul.—Capacitor Term. Screw	1959523	All
MISCELLANEOUS			
47	BOLT—Thru	1956975	All
48	CAPACITOR	1959455	All
49	CLIP—Stator Lead Terminal	1959532	All
50	CONNECTOR—Ground Terminal	1963432	All
51	GASKET—Brush Holder	1961118	All
52	INSULATOR—Capacitor Term. Screw	1959389	All
—	KEY—Woodruff	124545	All
53	RETAINER—Capacitor	1960750	All
54	SCREEN—Flame Arrester	1961809	All
55	SEAL—Bearing—S.R.E.—Inner	1959790	All
56	SEAL—Bearing—S.R.E.—Outer	1961323	All
57	TERMINAL—Field	1963429	All
58	TERMINAL—Ground Brush	1963429	All

*A General Motors Trademark

^When ordering brushes, brush holder or related parts, inspect unit. If the field and ground brush terminals are NOT secured at bottom of brush holder by nuts; order re-operation Brush Holder Package 1963419.

Revised to December 1, 1965

 SERVICE PARTS CATALOG

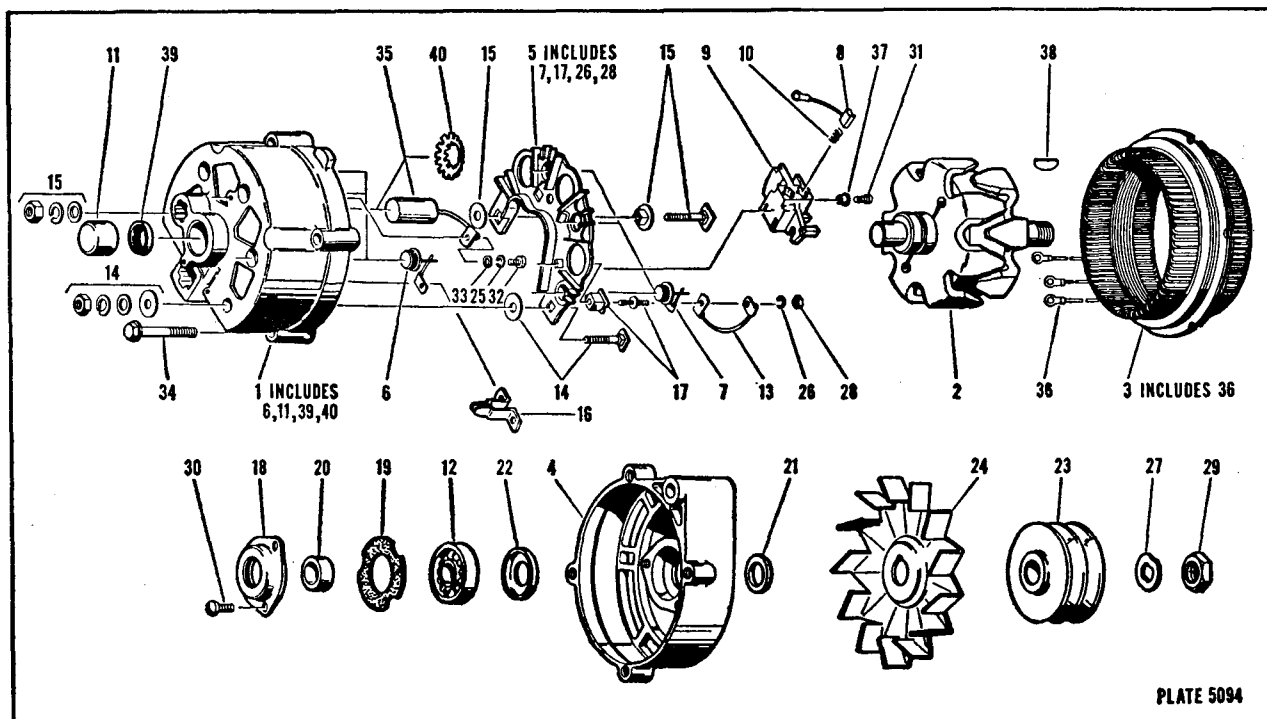

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	* Frame — S.R.E.	Rotor — Assem.	Stator — Assem.	Frame — D.E.	Heat Sink — Assem.	Diode	Diode	Brush	Holder — Brush	Spring — Brush	Bearing — S.R.E.	Bearing — D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1100655.....	1959827	1958565	1959531	1959917	1959828	1959830	1959829	1958197	1959978	1964117	7451326	954378
1100656.....	"	1958565	1959381	"	"	"	"	"	"	"	"	"
1100657.....	"	1958565	1959531	"	"	"	"	"	"	"	"	"
1100658.....	"	"	"	"	"	"	"	"	"	"	"	"
1100659.....	"	1958565	1959381	"	"	"	"	"	"	"	"	"
1100660.....	"	1964512	1959531	"	"	"	"	†	†	"	"	905920
1100661.....	"	1958565	"	"	"	"	"	1858197	1959978	"	"	954378
1100662.....	"	1958565	1959381	"	"	"	"	"	"	"	"	"
1100663.....	"	"	"	"	"	"	"	"	"	"	"	"
1100664.....	"	1958565	1959531	"	"	"	"	"	"	"	"	"
1100665.....	"	"	"	"	"	"	"	"	"	"	"	"
1100667.....	"	1964563	1961531	1962561	"	"	"	†	†	"	"	905920
1100668.....	"	1958565	1959381	1959917	"	"	"	1858197	1959978	"	"	954378
1100669.....	"	"	"	"	"	"	"	"	"	"	"	"
1100670.....	"	"	"	"	"	"	"	"	"	"	"	"
1100671.....	"	1958565	1959531	"	"	"	"	"	"	"	"	"
1100672.....	"	"	"	"	"	"	"	"	"	"	"	"
1100674.....	"	1964119	1964122	"	"	"	"	"	"	"	"	"
1100675.....	"	1958565	1959381	"	"	"	"	"	"	"	"	"
1100676.....	"	"	"	"	"	"	"	"	"	"	"	"
1100677.....	"	1958565	1959531	"	"	"	"	"	"	"	"	"
1100678.....	"	"	1959381	"	"	"	"	"	"	"	"	"
1100679.....	"	"	1959531	"	"	"	"	"	"	"	"	"
1100680.....	"	"	1959381	"	"	"	"	"	"	"	"	"
1100681.....	"	"	1959531	"	"	"	"	"	"	"	"	"
1100682.....	"	"	"	"	"	"	"	"	"	"	"	"
1100683.....	"	"	1959381	"	"	"	"	"	"	"	"	"
1100684.....	"	1964119	1964122	"	"	"	"	"	"	"	"	"
1100685.....	1964351	1964221	1959531	"	1964352	1964354	1964353	†	†	"	"	905920

*Also includes Illus. No. 35.

*A General Motors Trademark

†Served by 1965276 Brush Holder & Brush Assem.

ELCOTRON* GENERATOR

Group 88-J
Models 1100655 Up
Page 2

Delco-Remy SERVICE PARTS CATALOG

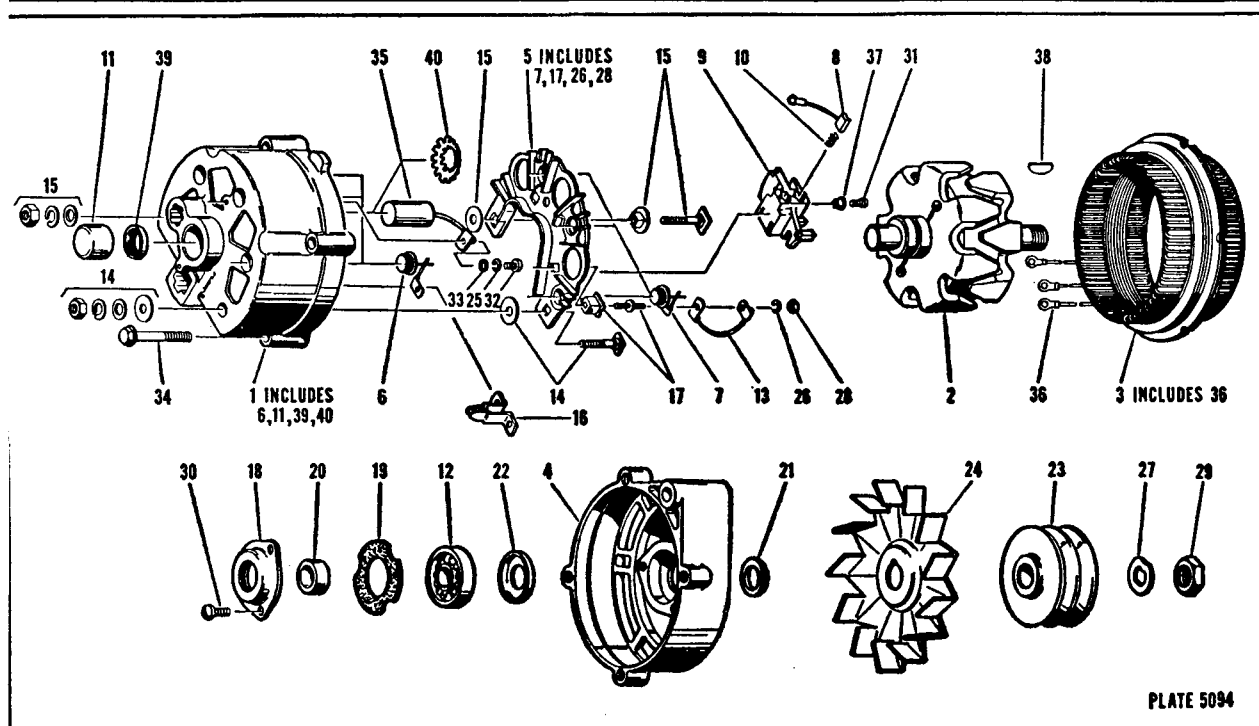 


PLATE 5094

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Lead — Light Indctr.	Terminal Pkg. — Battery	Terminal Pkg. — Ground	Terminal — Fld. Or. Ind. Lt.	Terminal Pkg. — Diode Junction	Brg. Retainer Assem.	Gasket	Collar — Inside	Collar — Outside	Grease Slinger	Pulley	Fan
	13	14	15	16	17	18	19	20	21	22	23	24
1100655.....	1959969	1959832	1959833	1956982	1959834	1955494	1912008	1963139	1959991	1947344	1961988	1960423
1100656.....	"	"	"	"	"	"	"	"	"	"	1949357	1940994
1100657.....	"	"	"	"	"	"	"	"	"	"	"	"
1100658.....	"	"	"	"	"	"	"	"	"	"	1962998	"
1100659.....	"	"	"	"	"	"	"	"	"	"	1949357	"
1100660.....	"	"	"	"	"	1963213	"	1963211	"	"	"	"
1100661.....	"	"	"	"	"	1955494	1912008	1963139	"	1947344	1961408	1940994
1100662.....	"	"	"	"	"	"	"	"	"	"	1949355	"
1100663.....	"	"	"	"	"	"	"	"	"	"	"	"
1100664.....	"	"	"	"	"	"	"	"	"	"	1961408	"
1100665.....	"	"	"	"	"	"	"	"	"	"	"	"
1100667.....	"	"	"	"	"	"	"	"	"	"	"	"
1100668.....	"	"	"	"	"	1963213	"	1963211	1953253	"	"	"
1100669.....	"	"	"	"	"	1955494	1912008	1963139	1959991	1947344	"	"
1100670.....	"	"	"	"	"	"	"	"	"	"	"	"
1100671.....	"	"	"	"	"	"	"	"	"	"	1949355	1940994
1100672.....	"	"	"	"	"	"	"	"	"	"	1949357	1960423
1100674.....	"	"	"	"	"	"	"	"	"	"	"	1940994
1100675.....	"	"	"	"	"	"	"	"	"	"	"	1960423
1100676.....	"	"	"	"	"	"	"	"	"	"	1962998	1940994
1100677.....	"	"	"	"	"	"	"	"	"	"	1962934	1960423
1100678.....	"	"	"	"	"	"	"	"	"	"	1962998	1940994
1100679.....	"	"	"	"	"	"	"	"	"	"	1963942	"
1100680.....	"	"	"	"	"	"	"	"	"	"	1949357	"
1100681.....	"	"	"	"	"	"	"	"	"	"	"	"
1100682.....	"	"	"	"	"	"	"	"	"	"	1962998	"
1100683.....	"	"	"	"	"	"	"	"	"	"	1949357	"
1100684.....	"	"	"	"	"	"	"	"	"	"	"	"
1100685.....	"	"	"	"	"	1963213	"	1963211	"	"	"	"

*A General Motors Trademark

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
25	Lock Washer—Capacitor Terminal Screw.....	9419392	All
26	Lock Washer—Diode Junction Terminal.....	9419392	All
27	Lock Washer—Shaft Nut—D.E.....	1941978	All except 1100667; 79
27	Lock Washer—Shaft Nut—D.E.....	1944314	1100679
NUTS			
28	Nut—Diode Junction Terminal.....	120622	All except 1100660-7; 85
28	Nut—Diode Junction Terminal.....	9418854	1100660-7; 85
29	Nut—Shaft—D.E.....	1915172	1100655-6-7-8-9; 60-1-2-3-4-5-8-9; 70-1-2-4-5-6-7-8; 80-1-2-3-4-5
29	Nut—Shaft—D.E.....	1944313	1100679
29	Nut—Shaft—D.E.....	1956405	1100667
SCREWS			
30	Screw—Ball Brg. Retainer Attaching.....	1961526	1100660-7; 85
30	Screw—Ball Brg. Retainer Attaching.....	1965104	All except 1100660-7
31	Screw—Brush Holder Attaching.....	1957501	All except 1100660-7; 85
31	Screw—Brush Holder Attaching.....	1961530	1100660-7; 85
32	Screw—Capacitor Terminal.....	132768	All except 1100660-7
32	Screw—Capacitor Terminal.....	9418855	1100660-7; 85
WASHERS			
—	Washer—Insl. Capacitor Screw.....	1959523	All
33	Washer—Plain—Capacitor Terminal Screw.....	815540	All
—	Washer—Spring—Brush Holder Attaching Screw.....	9419392	All
MISCELLANEOUS			
34	BOLT—Thru.....	1956975	All except 1100660-7
34	BOLT—Thru (2 $\frac{1}{4}$ " long).....	1961521	1100660-7; 85
34	BOLT—Thru (3 $\frac{1}{2}$ " long).....	1961522	1100660; 85
35	CAPACITOR.....	1959455	All
36	CLIP—Stator Lead Terminal.....	1959532	All
—	COLLECTOR & Spring Assem.—D.E.....	*1952241	1100660-7; 85
37	INSULATOR—Brush Holder Screw.....	1957562	All
—	INSULATOR—Capacitor Term. Screw.....	1959389	All
38	KEY—Woodruff—D.E.....	124545	1100667
—	"O" RING—D.E.....	1916644	1100667
39	RETAINER (& Felt)—S.R.E.....	1959790	All
—	RING—Collector—D.E.....	*1952244	1100660-7; 85
—	SEAL—Oil Ball Brg.—D.E.....	1954120	1100667
—	SPACER—D.E.....	1961523	1100660
40	SPRING—Capacitor Retaining.....	1960750	All

*If the unit has two Shaft Collars and washer type Collector Ring on inboard side of D.E. Ball Bearing, it must be updated to latest design by ordering the following parts:

1962559 Rotor Assem.
 1963213 Bearing Retainer Plate
 1963211 Collar
 1952241 Collector & Spring
 1952244 Collector Ring

Current design units have one shaft collar and formed type Collector Ring on inboard side of D.E. Ball Bearing. For these units order individual parts as required.

*A General Motors Trademark

Delco-Remy

DELCO-TRON* GENERATOR


Group 88-K

Models 1100686 to 716

Page 1

Revised to July 1, 1969

 SERVICE PARTS CATALOG

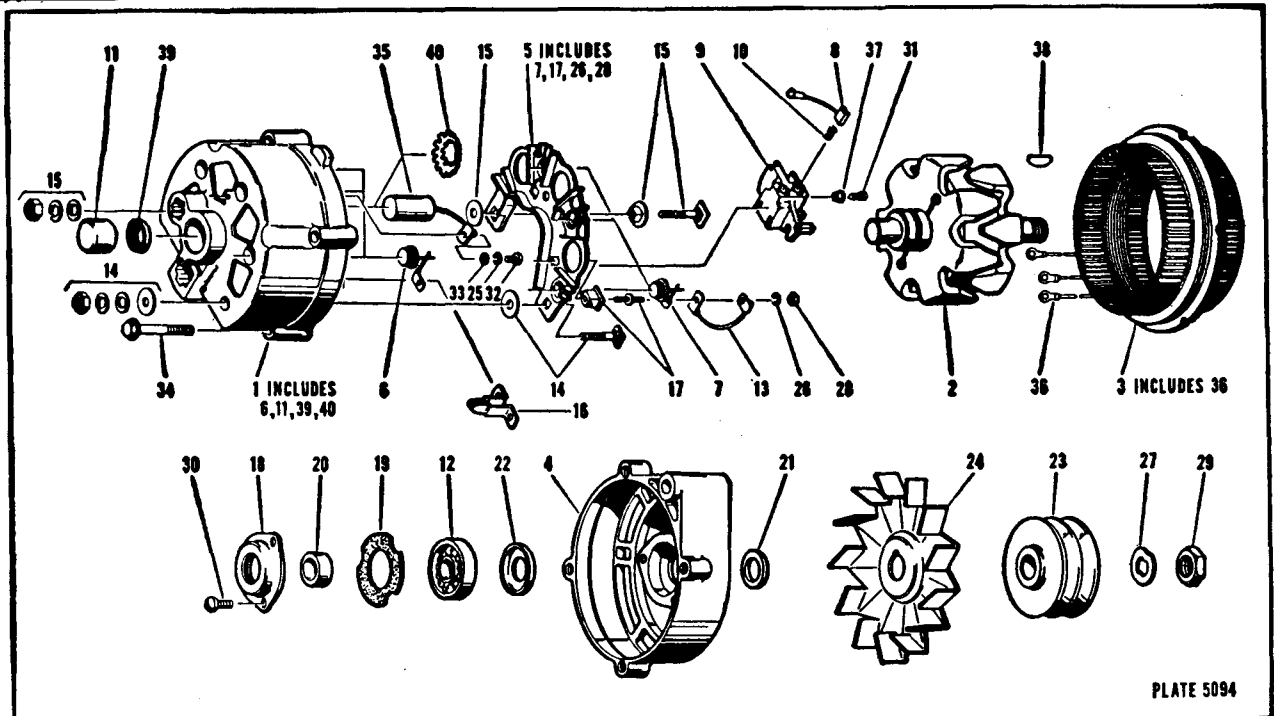

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	* Frame — S.R.E.	Rotor — Assem.	Stator — Assem.	Frame — D.E.	Heat Sink — Assem.	Diode	Diode	Brush	Holder — Brush	Spring — Brush	Bearing — S.R.E.	Bearing — D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1100686	800396	1958565	1959531	1959917	1959828	1959830	1959829	△	△	1964117	7451326	954378
1100687	"	"	1959381	"	"	"	"	△	△	"	"	"
1100688	"	"	"	"	"	"	"	△	△	"	"	"
1100689	"	"	"	"	"	1964354	1964353	△	△	"	"	"
1100690	"	"	1959531	"	"	"	"	△	△	"	"	"
1100691	"	"	1959381	"	"	1959830	1959829	△	△	"	"	"
1100692	"	"	1959531	"	"	"	"	△	△	"	"	"
1100693	"	"	1959381	"	"	"	"	△	△	"	"	"
1100694	"	"	1959531	"	"	"	"	△	△	"	"	"
1100695	"	"	1959381	"	"	"	"	△	△	"	"	"
1100696	"	"	"	"	"	"	"	△	△	"	"	"
1100697	"	1964119	1964122	"	"	"	"	△	△	"	"	"
1100698	1965279	1958565	1964702	1964819	"	"	"	△	△	"	"	"
1100699	800396	"	1959381	1959917	"	"	"	△	△	"	"	"
1100700	"	"	1959531	"	"	"	"	△	△	"	"	"
1100701	"	"	"	"	"	"	"	△	△	"	"	"
1100702	"	1964119	1964122	"	"	"	"	△	△	"	"	"
1100703	"	"	"	"	"	"	"	△	△	"	"	"
1100704	"	1958565	1959381	"	"	"	"	△	△	"	"	"
1100705	"	"	"	"	"	"	"	△	△	"	"	"
1100706	"	"	"	"	"	"	"	△	△	"	"	"
1100707	"	"	1959531	"	"	"	"	△	△	"	"	"
1100708	"	"	1959381	"	"	"	"	△	△	"	"	"
1100709	"	"	1959531	"	"	"	"	△	△	"	"	"
1100710	"	"	"	"	"	"	"	△	△	"	"	"
1100711	○	"	1959381	"	○	"	"	△	△	"	"	"
1100713	800396	"	1959531	"	1959828	"	"	△	△	"	"	"
1100714	"	"	1959381	"	"	"	"	△	△	"	"	"
1100715	○	1964563	1961531	1962561	○	1964354	1964353	†	†	"	"	905920
1100716	○	"	1959531	"	○	"	"	†	†	"	"	"

*A General Motors Trademark

*Also includes Illus. No. 35.

○Served by 1964858 S.R.E. Frame & Heat Sink Assem.

△Served by 1964682 Brush Holder and Brush Assem.

†Served by 1965276 Brush Holder and Brush Assem.

Delco-Remy **SERVICE PARTS CATALOG**

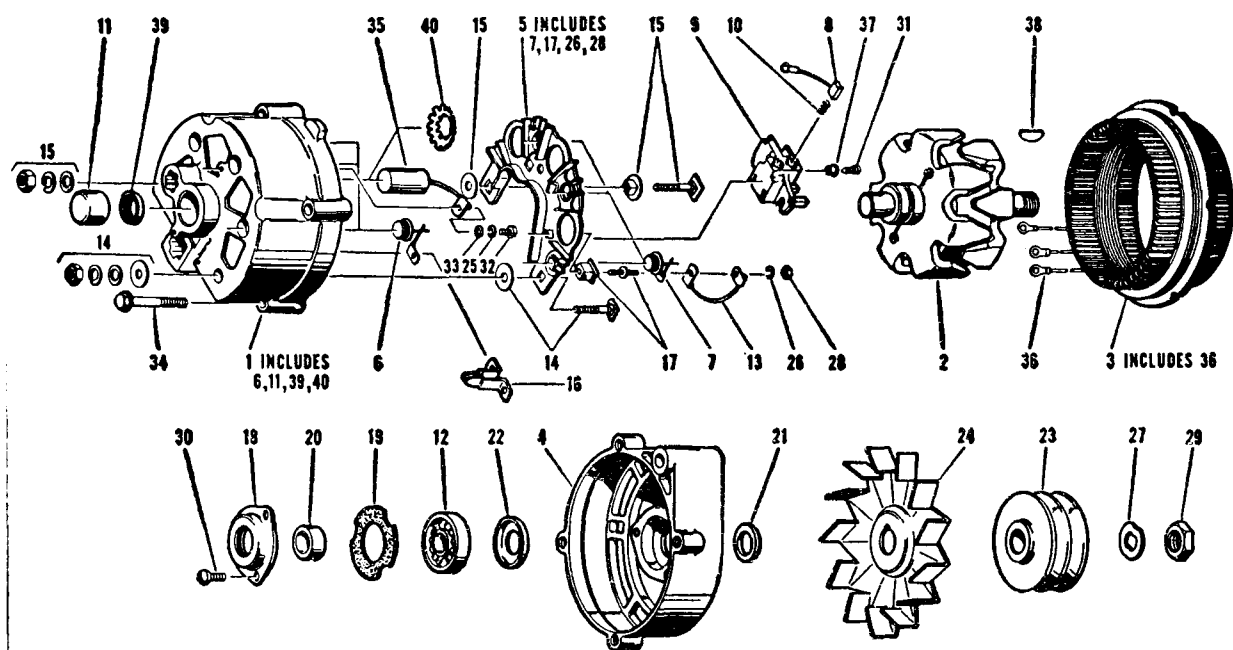 


PLATE 5094

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Lead — Light Indctr.	Terminal Pkg. — Battery	Terminal Pkg. — Ground	Terminal — Fld. Or. Ind. Lt.	Terminal Pkg. — Diode Junction	Brg. Retainer — Assem.	Gasket	Collar — Inside	Collar — Outside	Grease Slinger	Pulley	Fan
	13	14	15	16	17	18	19	20	21	22	23	24
1100686		1959832	1959833		1959834	1955494	1912008	1963139	1959991	1947344	1964464	1966990
1100687		"	"		"	"	"	"	"	"		
1100688		"	"		"	"	"	"	"	"		
1100689		"	"		"	"	"	"	"	"		
1100690		"	"		"	"	"	"	"	"		
1100691		"	"		"	"	"	"	"	"	1949355	1966990
1100692		"	"		"	"	"	"	"	"	"	"
1100693		"	"		"	"	"	"	"	"		
1100694		"	"		"	"	"	"	"	"		
1100695		"	"		"	"	"	"	"	"		
1100696		"	"		"	"	"	"	"	"		
1100697		"	"		"	"	"	"	"	"		
1100698		"	"		"	"	"	"	"	"		
1100699		"	"		"	"	"	"	"	"	1949357	1966990
1100700		"	"		"	"	"	"	"	"	"	"
1100701		"	"		"	"	"	"	"	"	1949355	"
1100702		"	"		"	"	"	"	"	"	1949357	1966990
1100703		"	"		"	"	"	"	"	"	1949355	"
1100704		"	"		"	"	"	"	"	"	1949357	"
1100705		"	"		"	"	"	"	"	"	1949355	"
1100706		"	"		"	"	"	"	"	"	1964758	"
1100707		"	"		"	"	"	"	"	"	1961408	"
1100708		"	"		"	"	"	"	"	"	1949355	"
1100709		"	"		"	"	"	"	"	"	1961408	"
1100710		"	"		"	"	"	"	"	"	1963942	"
1100711	1959969	"	"	1956982	"	"	"	"	"	"		
1100713	"	"	"	"	"	"	"	"	"	"	1964758	"
1100714	"	"	"	"	"	"	"	"	"	"	1949355	"
1100715	"	"	"	"	"	1963213	"	1963211	1953253	"		
1100716	"	"	"	"	"	"	"	"	"	"		

*A General Motors Trademark

Parts not listed in this Catalog will not be sold separately.

Revised to July 1, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
25	Lock Washer—Capacitor Terminal Screw.....	9419392	All
26	Lock Washer—Diode Junction Terminal.....	9419392	All
27	Lock Washer—Shaft Nut—D.E.....	1941978	All except 1100710
27	Lock Washer—Shaft Nut—D.E.....	1944314	1100710
NUTS			
28	Nut—Diode Junction Terminal.....	120622	All except 1100715-16
28	Nut—Diode Junction Terminal.....	9418854	1100715-16
29	Nut—Shaft—D.E.....	1915172	All except 1100698; 710
29	Nut—Shaft—D.E.....	1944313	1100710
29	Nut—Shaft—D.E.....	1956405	1100716-16
29	Nut—Shaft—D.E.....	1961271	1100698
SCREWS			
30	Screw—Ball Brg. Retainer Attaching.....	1961526	1100715-16
30	Screw—Ball Brg. Retainer Attaching.....	1962686	All
31	Screw—Brush Holder Attaching.....	1957501	All
32	Screw—Capacitor Terminal.....	132768	All except 1100715-16
32	Screw—Capacitor Terminal.....	9418855	1100715-16
WASHERS			
—	Washer—Insl. Capacitor Screw.....	1959523	All
33	Washer—Plain—Capacitor Terminal Screw.....	815540	All
—	Washer—Spring—Brush Holder Attaching Screw.....	9419392	All
MISCELLANEOUS			
34	BOLT—Thru.....	1956975	All except 1100715-16
34	BOLT—Thru (2 $\frac{1}{8}$ " long).....	1961521	1100715-16
35	CAPACITOR.....	1959455	All
36	CLIP—Stator Lead Terminal.....	1959532	All
—	COLLECTOR & Spring Assem.—D.E.....	1952241	1100715-16
—	INSULATOR—Capacitor Term. Screw.....	1959389	All
38	KEY—Woodruff—D.E.....	124545	1100715-16
—	"O" RING—D.E.....	1916644	1100715-16
39	RETAINER (& Felt)—S.R.E.....	1959790	All
—	RING—Collector—D.E.....	1952244	1100715-16
—	SEAL—Oil Ball Brg.—D.E.....	1967650	1100715-16
—	SPACER—D.E.....	1961523	1100701-6-7; 13-14
40	SPRING—Capacitor Retaining.....	1960750	All

*A General Motors Trademark

Revised to June 1, 1969

 SERVICE PARTS CATALOG

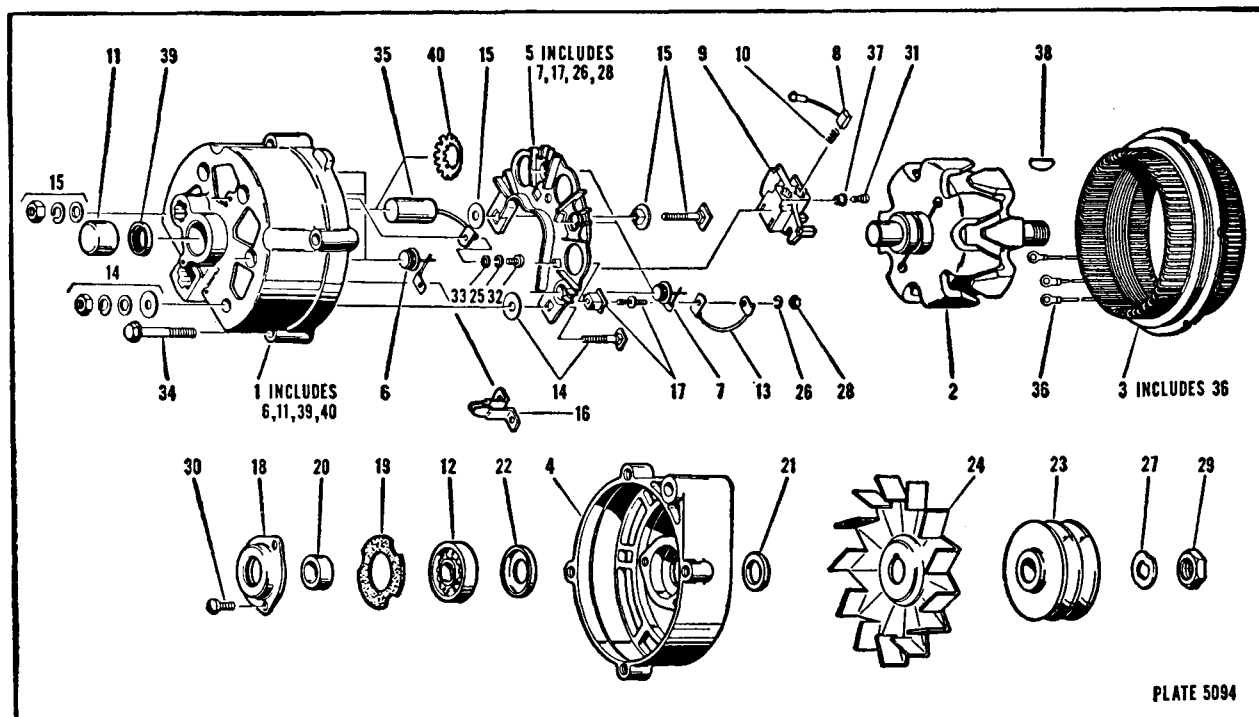

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame S.R.E.	Rotor Assem.	Stator Assem.	Frame D.E.	Heat Sink Assem.	Diode	Diode	Brush	Holder Brush	Spring Brush	Bearing S.R.E.	Bearing D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1100717.....	1964858	1964512	1961531	1959917	●	1964354	1964353	†	†	1964117	7451326	905920
1100718.....	"	1964221	1959531	"	"	"	"	†	†	"	"	"
1100719.....	800396	1958565	1959381	"	1959828	1959830	1959829	†	†	"	"	954378
1100720.....	"	"	"	"	"	"	"	†	†	"	"	"
1100723.....	1964858	1965258	1959531	1962561	●	1964354	1964353	†	†	"	"	905920
1100724.....	800396	1958565	"	1959917	1959828	1959830	1959829	▲	▲	"	"	954378
1100725.....	"	"	1959381	"	"	"	"	▲	▲	"	"	"
1100726.....	"	"	1959531	"	"	"	"	▲	▲	"	"	"
1100727.....	"	"	1959381	"	"	"	"	▲	▲	"	"	"
1100728.....	"	"	1959531	"	"	"	"	▲	▲	"	"	"
1100729.....	"	"	1959381	"	"	"	"	▲	▲	"	"	"
1100730.....	"	"	1959531	"	"	"	"	▲	▲	"	"	"
1100731.....	"	"	1959381	"	"	"	"	▲	▲	"	"	"
1100733.....	"	"	1959531	"	"	"	"	▲	▲	"	"	"
1100734.....	"	"	1959381	"	"	"	"	▲	▲	"	"	"
1100735.....	1965892	1965812	"	"	"	"	"	▲	▲	"	9423945	"
1100736.....	800396	1958565	"	"	"	"	"	▲	▲	"	7451326	"
1100737.....	"	"	1959531	"	"	"	"	▲	▲	"	"	"
1100738.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100739.....	"	"	1959381	"	"	"	"	▲	▲	"	"	"
1100740.....	"	1964119	1964122	"	"	"	"	▲	▲	"	"	"
1100741.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100742.....	"	1958565	1962025	"	"	1964354	1964353	▲	▲	"	"	"
1100744.....	"	"	1959381	"	"	1959830	1959829	▲	▲	"	"	"
1100745.....	"	"	1959531	"	"	"	"	▲	▲	"	"	"

(Continued on Page 2)

†Served by 1965276 Brush Holder and Brush Assem.

▲Served by 1964682 Brush Holder and Brush Assem.

●Served by 1964858 S.R.E. Frame & Heat Sink Assem.

*A General Motors Trademark

*Also includes Illustration No. 35.

ELCOTRON* GENERATOR

roup 88-L
odels 1100717 Up
age 2

Delco-Remy

SERVICE PARTS CATALOG

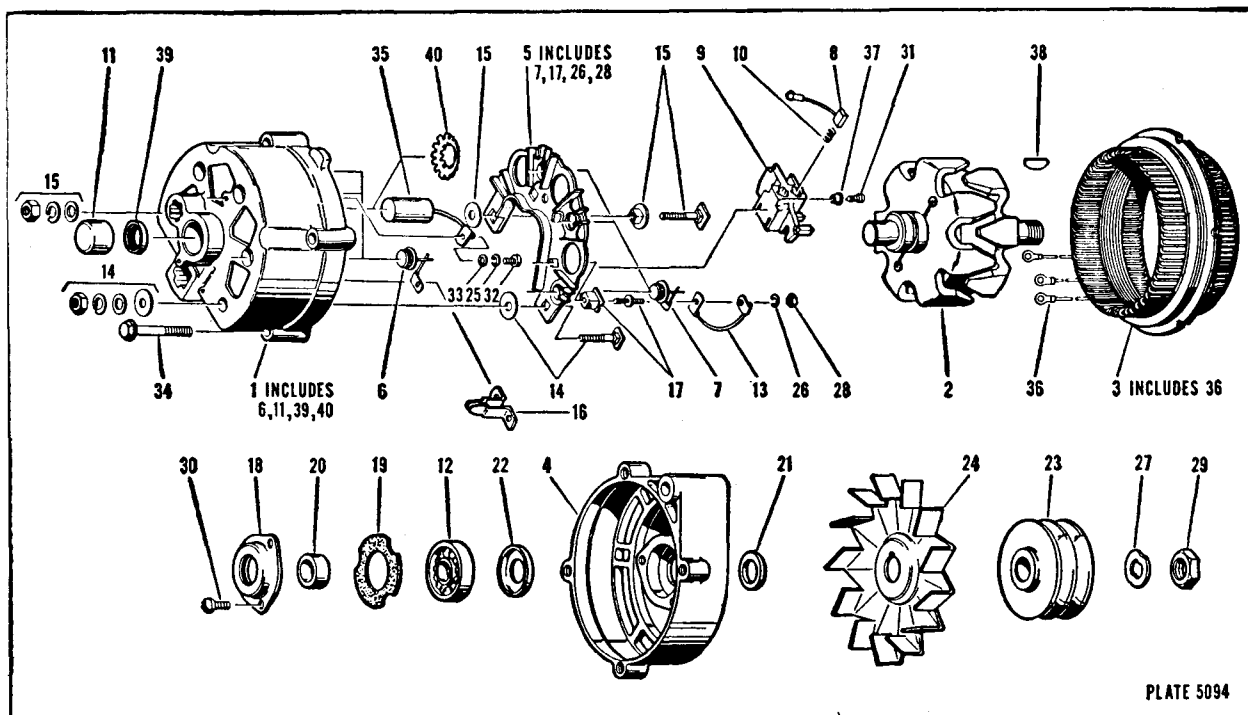 


PLATE 5094

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	* Frame S.R.E.	Rotor Assem.	Stator Assem.	Frame D.E.	Heat Sink Assem.	Diode	Diode	Brush	Holder Brush	Spring Brush	Bearing S.R.E.	Bearing D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1100747.....	1964858	1964221	1959531	1959917	•	1964354	1964353	†	†	1964117	7451326	905920
1100748.....	1969329	1966476	1959381	"	1959828	"	"	†	†	"	"	900529
1100749.....	1964858	1964512	1959531	"	•	1959830	1959829	†	†	"	"	905920
1100750.....	800396	1958565	1962025	"	1959828	1964354	1964353	†	†	"	"	954378
1100751.....	"	1966614	1959381	"	"	1959830	1959829	†	†	"	"	904751
1100752.....	"	1958565	1959531	"	"	"	"	†	†	"	"	954378
.....												
.....												
.....												
.....												

†Serviced by 1965276 Brush Holder and Brush Assem.

•Serviced by 1964682 Brush Holder and Brush Assem.

*Serviced by 1964858 S.R.E. Frame & Heat Sink Assem.

*A General Motors Trademark

*Also includes Illustration No. 35.

Delco-Remy

DELCOTRON* GENERATOR

Group 88-L

Models 1100717 Up

Page 3

Revised to June 1, 1969

SERVICE PARTS CATALOG

Model No.	Lead — Light Indctr.	Terminal Pkg. — Battery	Terminal Pkg. — Ground	Terminal — Fld. Or. Ind. Lt.	Terminal Pkg. — Diode Junction	Brg. Retainer — Assem.	Gasket	Collar — Inside	Collar — Outside	Grease Slinger	Pulley	Fan
	13	14	15	16	17	18	19	20	21	22	23	24
1100717		1959832	1959833		1959834	1963213		1953211				
1100718		"	"		"	"		"	1959991			
1100719		"	"		"	1955494	1912008	1963139	"	1947344		
1100720		"	"		"	"	"	"	"	"		
1100723		"	"		"	1963213		1963211				
1100724		"	"		"	1955494	1912008	1963139	1959991	1947344		
1100725		"	"		"	"	"	"	"	"	1949355	1966990
1100726		"	"		"	"	"	"	"	"	"	"
1100727		"	"		"	"	"	"	"	"	1949357	"
1100728		"	"		"	"	"	"	"	"	"	"
1100729		"	"		"	"	"	"	"	"	"	"
1100730		"	"		"	"	"	"	"	"	1965504	"
1100731		"	"		"	"	"	"	"	"	1961291	"
1100733		"	"		"	"	"	"	"	"	1949355	"
1100734		"	"		"	"	"	"	"	"	"	"
1100735		"	"		"	"	"	"	"	"		
1100736		"	"		"	"	"	"	"	"	1966002	1966990
1100737		"	"		"	"	"	"	"	"	"	"
1100738		"	"		"	"	"	"	"	"	1966003	"
1100739		"	"		"	"	"	"	"	"	1966002	"
1100740		"	"		"	"	"	"	"	"	1966003	"
1100741		"	"		"	"	"	"	"	"	1964758	"
1100742		"	"		"	"	"	"	"	"	"	"
1100744		"	"		"	"	"	"	"	"	1964758	1966990
1100745		"	"		"	"	"	"	"	"	1964758	"
1100747		"	"		"	1963213		1963211	"			
1100748		"	"		"	1955494	1912008	1963139	"			
1100749		"	"		"	1963213		1963211	"			
1100750		"	"		"	1955494	"	1963139	"	1947344		
1100751		"	"		"	"	"	"	"			
1100752		"	"		"	"	"	"	"	1947344	1966787	1966990

*A General Motors Trademark

Delco-Remy

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCKWASHERS			
25	Lock Washer Capacitor Terminal Screw.....	9419392	All except 1100720-5; 31-5
26	Lock Washer—Diode Junction Terminal.....	9419392	All
27	Lock Washer—Shaft Nut—D.E.....	1941978	1100717-18-19; 20-4-5-6-7-8-9; 30-1-3-4-5-6-7-8-9; 40-1-2-4-5-8-9; 50-1-2
NUTS			
28	Nut—Diode Junction Terminal.....	120622	All except 1100717-18; 23
28	Nut—Diode Junction Terminal.....	9418854	1100717-18; 23; 47-9
29	Nut—Shaft D.E.....	1915172	All except 1100723
29	Nut—Shaft D.E.....	1956405	1100723
SCREWS			
30	Screw—Ball Brg. Retainer Attaching.....	1961526	1100717-18; 23; 47-9
30	Screw—Ball Brg. Retainer Attaching.....	1965104	1100719; 20-4-5-6-7-8-9; 30-1-3-4-5-6-7-8-9; 40-1-2-5-8; 50-1-2
31	Screw—Brush Holder Attaching.....	1957501	1100719; 20-4-5-6-7-8-9; 30-1-3-4-5-6-7-8-9; 40-1-2-4-5-8-9; 50-1-2
31	Screw—Brush Holder Attaching.....	1961530	1100717-18; 23; 47
32	Screw—Capacitor Terminal.....	132768	1100719; 24-5-6-7-8-9; 30-1-3-4-5-6-7-8-9; 40-1-2-4-5-8; 50-1-2
32	Screw—Capacitor Terminal.....	9418855	1100717-18; 23; 47-9
32	Screw—Heat Sink Attaching.....	132768	1100720-5; 31-5
WASHERS			
—	Washer—Insul. Capacitor Screw.....	1959523	All except 1100720-5; 31-5
—	Washer—Insul.—Heat Sink Attaching.....	1959523	1100720-5; 31-5
33	Washer—Plain—Capacitor Terminal Screw.....	815540	All except 1100720-5; 31-5
33	Washer—Plain—Heat Sink Attaching.....	815540	1100720-5; 31-3-4-5
—	Washer—Spring—Brush Holder Attaching Screw.....	9419392	All
—	Washer—Spring—Heat Sink Attaching.....	9419392	1100720-5; 31-5
MISCELLANEOUS			
34	BOLT—Thru.....	1956975	1100719; 20-4-5-6-7-8-9; 30-1-3-4-5-6-7-8-9; 40-1-2-4-8; 50-1-2
34	BOLT—Thru (2 $\frac{1}{8}$ " long).....	1961521	1100717-18; 23; 47-9
34	BOLT—Thru (3 $\frac{1}{4}$ " long).....	1961522	1100717-18; 47
35	CAPACITOR.....	1959455	All except 1100720-5; 31-5
36	CLIP—Stator Lead Terminal.....	1959532	All
—	COLLECTOR & Spring Assem.—D.E.....	1952241	1100717-18; 23; 47-9
—	INSULATOR—Capacitor Term. Screw.....	1959389	All except 1100720-5; 31-5
—	INSULATOR—Heat Sink Attaching.....	1959389	1100720-5; 31-5
38	KEY—Woodruff—D.E.....	124545	1100723
—	"O" RING—D.E.....	1916644	1100723
39	RETAINER (& Felt)—S.R.E.....	1959790	All except 1100748
39	SEAL—S.R.E. Bearing.....	1961323	1100748
—	RING—Collector—D.E.....	1952244	1100717-18; 23; 47-9
—	SEAL—Oil Ball Brg.—D.E.....	1967650	1100723
—	SHIELD—Dust—D.E.....	1966613	1100751
—	SHIELD—Dust—S.R.E.—Inside.....	1966617	1100751
—	SHIELD—Dust—Thru Bolt.....	1966618	1100751
—	SPACER—D.E.....	1961523	1100717-18; 47
—	SPACER—Thru Bolt.....	1966619	1100751
40	SPRING—Capacitor Retaining.....	1960750	All except 1100720-5; 31-5

*A General Motors Trademark