

Revised to Nov. 1, 1968

SERVICE PARTS CATALOG

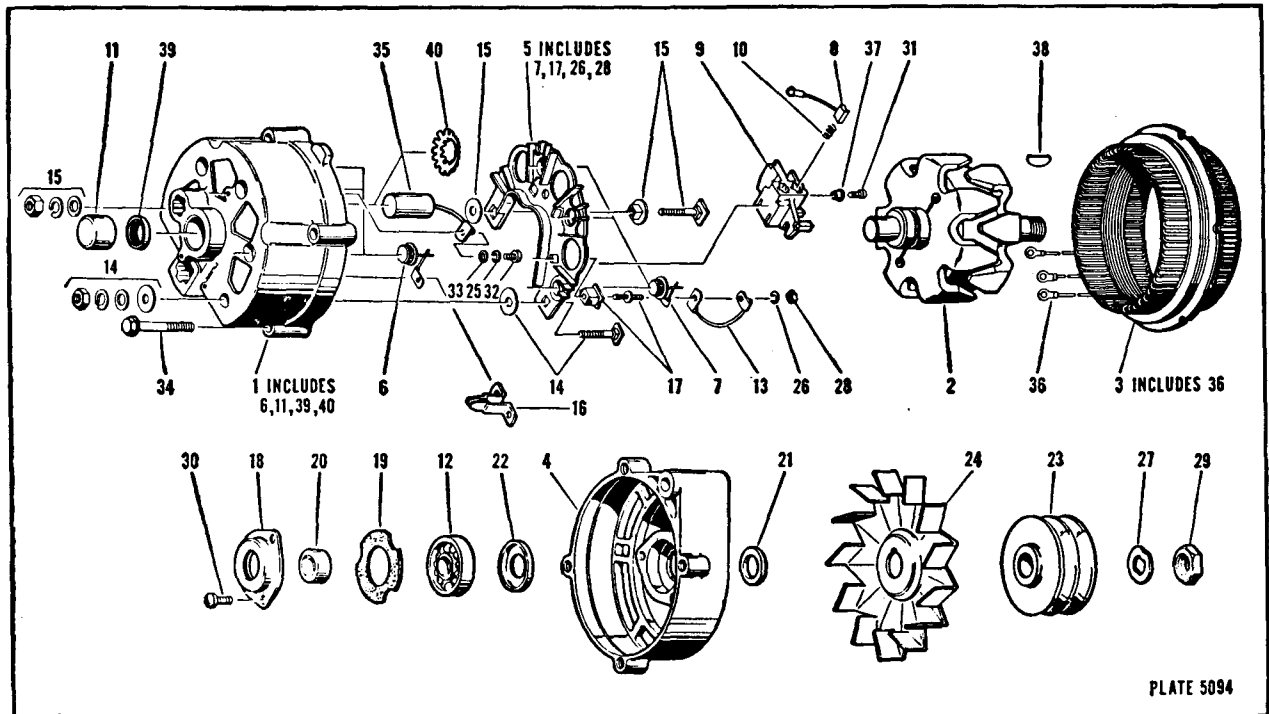 


PLATE 5094

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	* Frame S.R.E.	Rotor Assem.	Stator Assem.	Frame D.E.	Heat Sink Assem.	Diode	Diode	Brush	Holder Brush	Spring Brush	Bearing S.R.E.	Bearing D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1100753.....	1964858	1965258	1961531	1962561	•	1964354	1964353	†	†	1964117	7451326	905020
1100758.....	1959827	1964119	1962025	1959917	1959828	1959830	1959829	▲	▲	“	“	954378
1100759.....	“	1958565	1959531	“	“	“	“	▲	▲	“	“	“
1100760.....	“	“	“	“	“	“	“	▲	▲	“	“	“
1100761.....	“	1958565	1959381	“	“	“	“	▲	▲	“	“	“
1100762.....	“	“	“	“	“	“	“	▲	▲	“	“	“
1100763.....	“	1964119	1962025	“	“	“	“	▲	▲	“	“	“
1100764.....	“	“	“	“	“	“	“	▲	▲	“	“	“
1100765.....	“	1958565	1959381	“	“	“	“	▲	▲	“	“	“
1100767.....	“	“	“	“	“	“	“	▲	▲	“	“	“
1100768.....	“	“	“	“	“	“	“	▲	▲	“	“	“
1100769.....	“	“	“	“	“	“	“	▲	▲	“	“	“
1100770.....	“	“	1959531	“	“	“	“	▲	▲	“	“	“
1100771.....	“	“	1959381	“	“	“	“	▲	▲	“	“	“
1100772.....	“	“	“	“	“	“	“	▲	▲	“	“	“
1100773.....	1965892	1965812	“	“	“	“	“	▲	▲	“	9423945	“
1100774.....	1959827	1958565	“	“	“	“	“	▲	▲	“	7451326	“
1100775.....	“	“	1959381	“	“	“	“	▲	▲	“	“	“
1100776.....	“	1964119	1964122	“	“	“	“	▲	▲	“	“	“
1100777.....	“	1958565	1959531	“	“	“	“	▲	▲	“	“	“
1100778.....	1964858	“	“	“	•	1959830	1959829	▲	▲	“	“	“
1100779.....	1959827	“	1959381	“	1959828	“	“	▲	▲	“	“	“
1100780.....	“	1964119	1964122	“	“	“	“	▲	▲	“	“	“
1100781.....	“	1958565	1959381	“	“	“	“	▲	▲	“	7451326	“
1100782.....	“	“	1959531	“	“	“	“	▲	▲	“	“	“
1100786.....	1964858	“	“	1961780	•	“	“	▲	▲	“	“	954378
1100787.....	1959827	“	1962025	1959917	1959828	“	“	▲	▲	“	“	“
1100788.....	“	“	1959381	“	“	“	“	▲	▲	“	7451763	“
1100790.....	“	“	1962025	“	“	“	“	▲	▲	“	7451326	954378

 
†Serviced by 1965276 Brush Holder and Brush Assem.

▲Serviced by 1964682 Brush Holder and Brush Assem.

*Also includes Illus. No. 35.

•Serviced by 1964858 S.R.E. Frame & Heat Sink Assem.

*A General Motors Trademark.

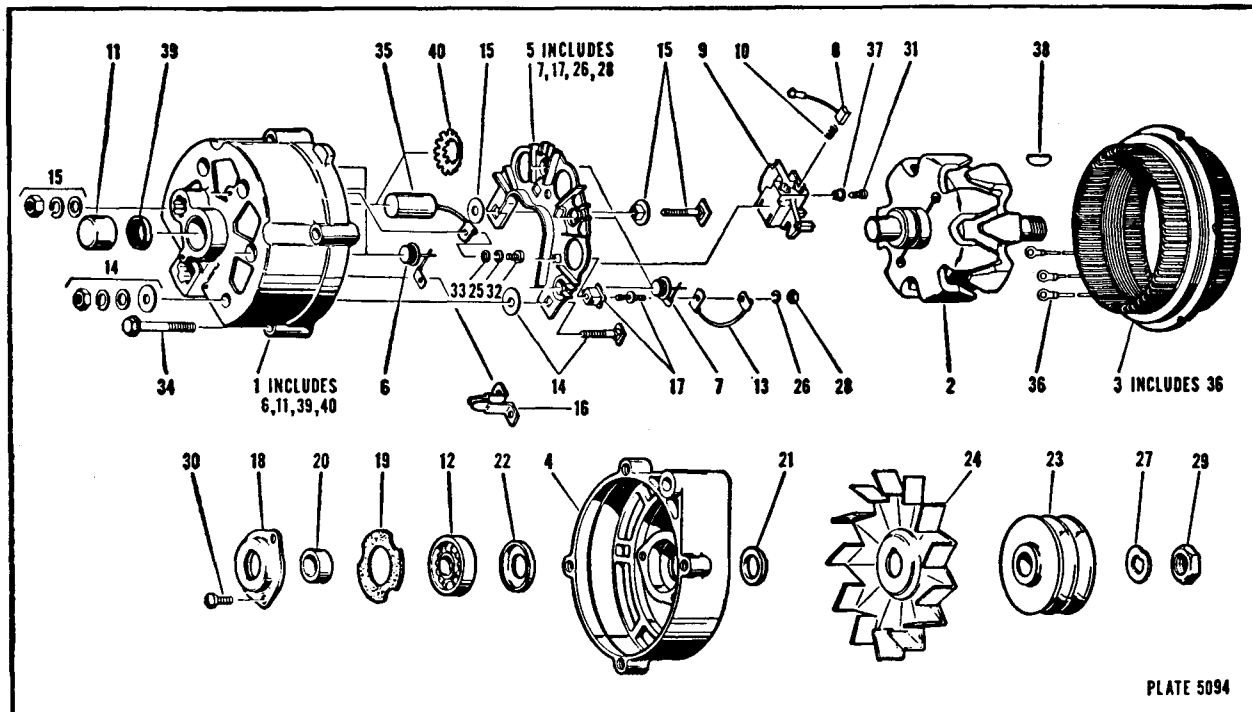

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Lead — Light Indctr.	Terminal Pkg. — Battery	Terminal Pkg. — Ground	Terminal — Fld. Or. Ind. L.t.	Terminal Pkg. — Diode Junction	Brg. Retainer — Assem.	Gasket	Collar — Inside	Collar — Outside	Grease Slinger	Pulley	Fan
	13	14	15	16	17	18	19	20	21	22	23	24
1100753		1959832	1959833		1959834	1963213		1963211	1953253			
1100754		"	"		"	1955494	1912008	1963139	1959991	1947344	1949357	1966990
1100759		"	"		"	"	"	"	"	"	1967152	"
1100760		"	"		"	"	"	"	"	"	1949355	"
1100761		"	"		"	"	"	"	"	"	"	1966990
1100762		"	"		"	"	"	"	"	"	1964758	"
1100763		"	"		"	"	"	"	"	"	1966003	"
1100764		"	"		"	"	"	"	"	"	"	"
1100765		"	"		"	"	"	"	"	"	1949355	1966990
1100767		"	"		"	"	"	"	"	"	1949357	1966990
1100768		"	"		"	"	"	"	"	"	1967651	"
1100769		"	"		"	"	"	"	"	"	"	"
1100770		"	"		"	"	"	"	"	"	"	"
1100771		"	"		"	"	"	"	"	"	"	"
1100772		"	"		"	"	"	"	"	"	1961988	1966990
1100773		"	"		"	"	"	"	"	"	1946716	"
1100774		"	"		"	"	"	"	"	"	1961408	1966990
1100775		"	"		"	"	"	"	"	"	1949358	1966990
1100776		"	"		"	"	"	"	"	"	1968193	1966990
1100777		"	"		"	"	"	"	"	"	1949355	"
1100778		"	"		"	"	"	"	"	"	"	"
1100779		"	"		"	"	"	"	"	"	1952882	1966990
1100780		"	"		"	"	"	"	"	"	1965504	1966990
1100781		"	"		"	"	"	"	"	"	1968354	"
1100782		"	"		"	"	"	"	"	"	"	"
1100786		"	"		"	"	"	"	"	1947344	"	"
1100787		"	"		"	"	"	"	"	"	1949355	1966990
1100788		"	"		"	"	"	"	"	"	1949358	"
1100790		"	"		"	"	"	"	"	1947344	1961408	"

*A General Motors Trademark.

Parts not listed in this catalog will not be sold separately.

Revised to Nov. 1, 1968

SERVICE PARTS CATALOG

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
25	Lock Washer—Capacitor Terminal Screw.....	9419392	All
26	Lock Washer—Diode Junction Terminal.....	9419392	All
27	Lock Washer—Shaft Nut—D.E.....	1941978	All except 1100753
NUTS			
28	Nut—Diode Junction Terminal.....	120622	1100758-9; 60-1-2-3-4-5-7-8-9; 70-1-2-4-5-6-7-9; 80-3-9
28	Nut—Diode Junction Terminal.....	453434	1100773; 8-81-2-6-7-8; 90
29	Nut—Diode Junction Terminal.....	9418854	1100753
29	Nut—Shaft D.E.....	1915172	1100758-9; 60-1-2-3-4-5-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2-6-7-8; 90
29	Nut—Shaft D.E.....	1956405	1100753
SCREWS			
30	Screw—Ball Brg. Retainer Attaching.....	1961526	1100753
30	Screw—Ball Brg. Retainer Attaching.....	1965104	1100758-9; 60-1-2-3-4-5-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2-6-7; 90
31	Screw—Brush Holder Attaching.....	1957501	All except 1100753
31	Screw—Brush Holder Attaching.....	1961530	1100753
32	Screw—Capacitor Terminal.....	132768	All
WASHERS			
—	Washer—Insl. Capacitor Screw.....	1959523	All
33	Washer—Plain—Capacitor Terminal Screw.....	815540	All
—	Washer—Spring—Brush Holder Attaching Screw.....	9419392	All
MISCELLANEOUS			
34	BOLT—Thru.....	1956975	1100758-9; 60-1-2-3-4-5-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2-6-7; 90
34	BOLT—Thru (2½" long).....	1961521	1100753
35	CAPACITOR.....	1959455	All
36	CLIP—Stator Lead Terminal.....	1959532	All
—	COLLECTOR & Spring Assem.—D.E.....	1952241	1100753
—	INSULATOR—Capacitor Term. Screw.....	1959389	All
38	KEY—Woodruff—D.E.....	124545	1100753
—	"O" RING—D.E.....	1916644	1100753
39	RETAINER (& Felt)—S.R.E.....	1959790	All
—	RING—Collector—D.E.....	1952244	1100753
—	SEAL—Oil Ball Brg.—D.E.....	1967650	1100753
40	SPRING—Capacitor Retaining.....	1960750	All

*A General Motors Trademark

Revised to July 1, 1969

 SERVICE PARTS CATALOG

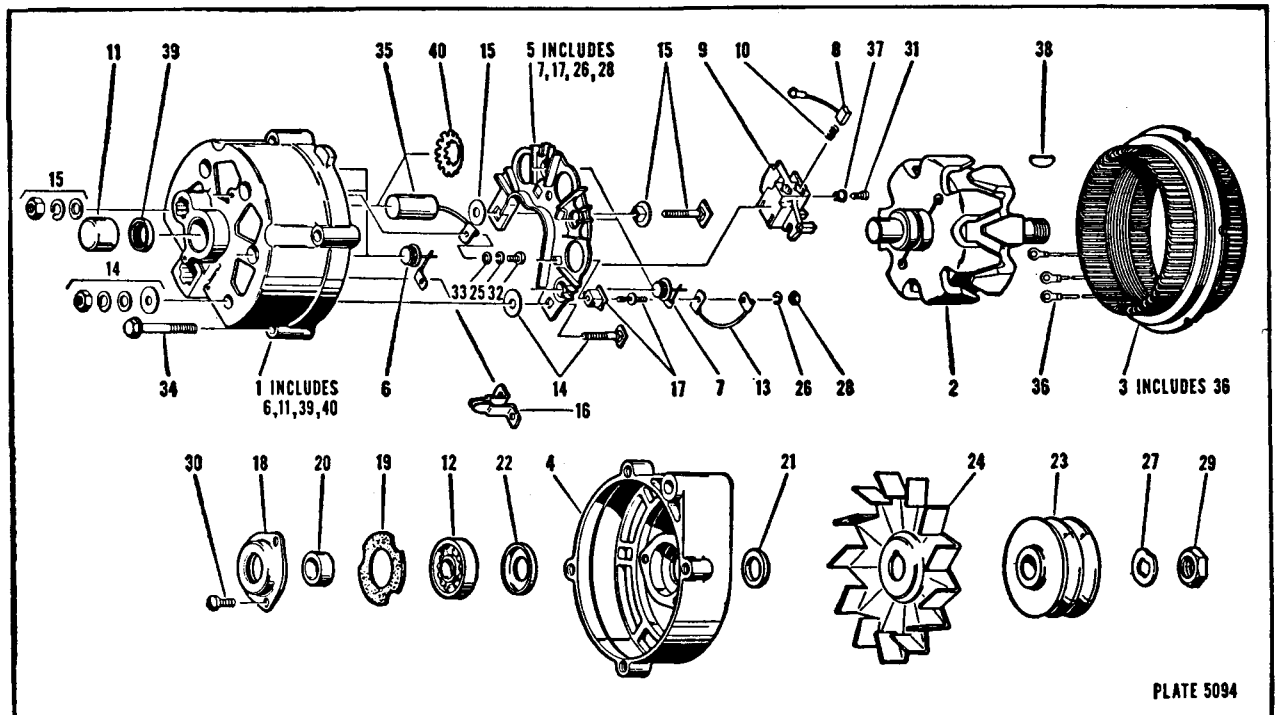

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame — S.R.E.	Rotor — Assem.	Stator — Assem.	Frame — D.E.	Heat Sink — Assem.	Diode	Diode	Brush	Holder — Brush	Spring — Brush	Bearing — S.R.E.	Bearing — D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1100791.....	1969329	1958565	1959531	1959917	1959828	1964354	1964353	▲	▲	1964117	7451326	904751
1100792.....	1964858	1964221	1961531	"	"	"	"	†	†	"	"	905920
1100793.....	800396	1958565	1962025	"	1959828	"	"	▲	▲	"	"	954378
1100794.....	"	"	1959381	"	"	"	"	▲	▲	"	7451763	"
1100795.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100796.....	"	"	1962025	"	"	"	"	▲	▲	"	"	"
1100797.....	"	1964119	1964122	"	"	"	"	▲	▲	"	"	"
1100798.....	1970520	1958565	1959381	1970151	"	"	"	×	×	"	"	"
1100799.....	"	"	1959531	"	"	"	"	×	×	"	"	"
1100800.....	"	"	"	"	"	"	"	×	×	"	"	"
1100801.....	"	"	1959381	"	"	"	"	×	×	"	"	"
1100802.....	800396	"	1959531	1959917	"	"	"	▲	▲	"	"	"
1100803.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100804.....	"	"	1962025	"	"	"	"	▲	▲	"	"	"
1100805.....	1969329	"	1959381	"	"	1964354	1964353	▲	▲	"	"	904751
1100807.....	"	"	"	1970525	"	"	"	▲	▲	"	"	"
1100808.....	"	"	1959531	"	"	"	"	▲	▲	"	"	"
1100809.....	1970520	"	"	1970151	"	1959830	1959829	×	×	"	"	954378
1100810.....	800396	"	1962025	1959917	"	1964354	1964353	▲	▲	"	"	"
1100812.....	1970918	1966614	1959381	1970595	"	"	"	▲	▲	"	"	904751
1100813.....	800396	1958565	"	1959917	"	1959830	1959829	▲	▲	"	"	954378
1100814.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100815.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100816.....	"	"	1962025	"	"	"	"	▲	▲	"	"	"
1100817.....	"	"	"	"	"	1964354	1964353	▲	▲	"	"	"
1100818.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100819.....	"	"	1959381	"	"	1959830	1959829	▲	▲	"	"	"
1100820.....	1969329	"	"	"	"	1964354	1964353	▲	▲	"	"	904751
1100821.....	1965892	1965812	"	"	"	1959830	1959829	▲	▲	"	9423945	"
1100822.....	"	"	"	"	"	"	"	▲	▲	"	"	"

†Served by 1965276 Brush Holder and Brush Assem.

▲Served by 1964682 Brush Holder and Brush Assem.

●Served by 1964858 S.R.E. Frame & Heat Sink Assem.

*Served by 1970140 Brush Holder & Brush Assem.

*A General Motors Trademark

□Also includes Illus. No. 35.

ELCOTRON* GENERATOR

roup 88-N
odels 1100791 Up
age 2

Delco-Remy

SERVICE PARTS CATALOG

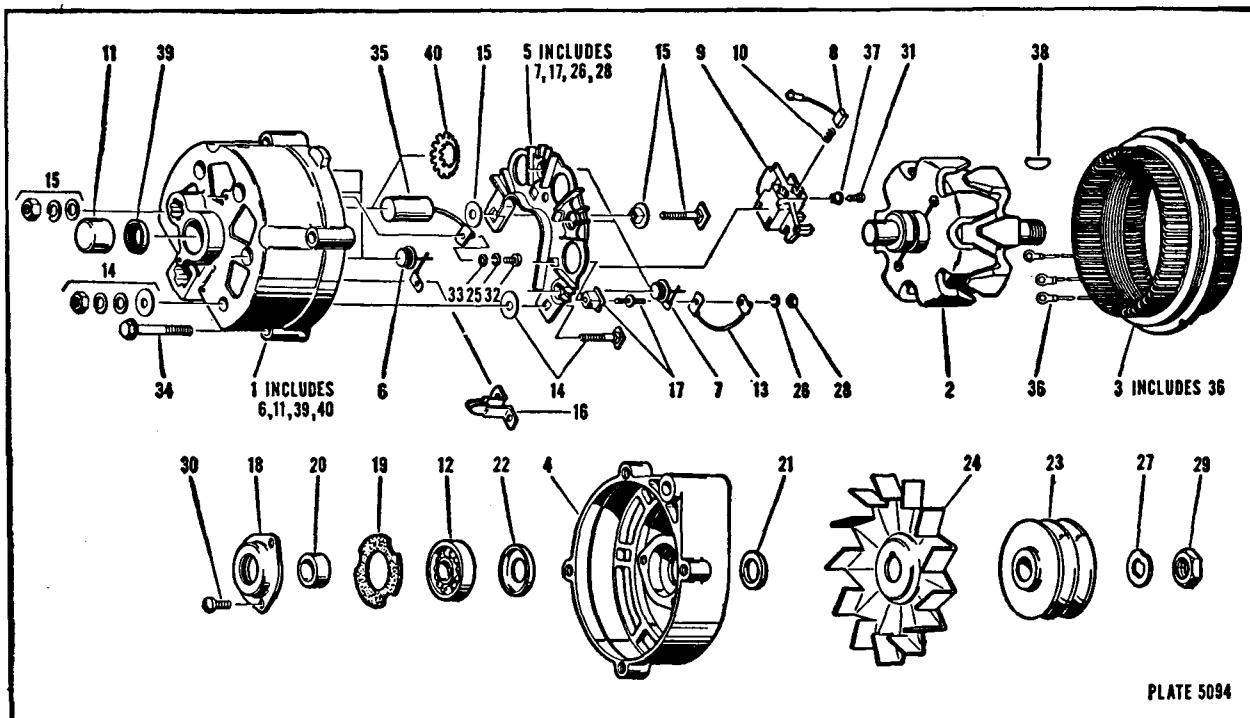 


PLATE 5094

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Lead — Light Indctr.	Term. Pkg. — Battery	Term. Pkg. — Ground	Terminal — Fld. Or. Ind. Lt.	Terminal Pkg. — Diode Junction	Brg. Re-tainer — Assem.	Gasket	Collar — Inside	Collar — Outside	Grease Slinger	Pulley	Fan
	13	14	15	16	17	18	19	20	21	22	23	24
1100791.....		1959832	1959833		1959834	1955494	1912008	1963139	1959991			
1100792.....		"	"		"	1963213		1963211	"			
1100793.....		"	"		"	1955494	1912008	1963139	"			1969448
1100794.....		"	"		"	"	"	"	1970474	"	1949357	1966990
1100795.....		"	"		"	"	"	"	"	"	"	"
1100796.....		"	"		"	"	"	"	1959991	"	1949355	1969448
1100797.....		"	"		"	"	"	"	"	"	1961408	1966990
1100798.....		"	"		"	"	"	"	"	"	1967651	"
1100799.....		"	"		"	"	"	"	"	"	"	"
1100800.....		"	"		"	"	"	"	"	"	1949357	"
1100801.....		"	"		"	"	"	"	"	"	"	"
1100802.....		"	"		"	"	"	"	"	"	1966787	"
1100803.....		"	"		"	"	"	"	"	"	1949357	"
1100804.....		"	"		"	"	"	"	"	"	"	"
1100805.....		"	"		"	"	"	"	"	"	"	"
1100807.....		"	"		"	"	"	"	"	"	"	"
1100808.....		"	"		"	"	"	"	"	"	"	"
1100809.....		"	"		"	"	"	"	"	1947344	"	"
1100810.....		"	"		"	"	"	"	"	"	1939845	1969448
1100812.....		"	"		"	"	"	"	"	"	"	"
1100813.....		"	"		"	"	"	"	1970474	1947344	1970830	1966990
1100814.....		"	"		"	"	"	"	"	"	1970831	"
1100815.....		"	"		"	"	"	"	"	"	1970830	"
1100816.....		"	"		"	"	"	"	"	"	"	"
1100817.....		"	"		"	"	"	"	"	"	1970832	"
1100818.....		"	"		"	"	"	"	"	"	1969432	1969448
1100819.....		"	"		"	"	"	"	1959991	"	1939845	1966990
1100820.....		"	"		"	"	"	"	"	"	1961988	"
1100821.....		"	"		"	"	"	"	"	"	1946716	"
1100822.....		"	"		"	"	"	"	"	"	"	"

*A General Motors Trademark

parts not listed in this catalog will not be sold separately.

Revised to July 1, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCKWASHERS			
—	Lock Washer—Brush & Reg. Lead Screws.....	453844	1100798-9; 800-1-9
25	Lock Washer Capacitor Terminal Screw.....	9419392	All
26	Lock Washer—Diode Junction Terminal.....	9419392	All
—	Lock Washer—Reg. Heat Sink Screw.....	9427826	1100798-9; 800-1-9
27	Lock Washer—Shaft Nut—D.E.....	1941978	All
—	Lock Washer—Reg. Attach. to Heat Sink.....	456413	1100800-1-9
NUTS			
28	Nut—Diode Junction Terminal.....	453434	All except 1100792
28	Nut—Diode Junction Terminal.....	9418854	1100792
29	Nut—Shaft D.E.....	1915172	All
SCREWS			
30	Screw—Ball Brg. Retainer Attaching.....	1961526	1100792
30	Screw—Ball Brg. Retainer Attaching.....	1965104	All except 1100792
31	Screw—Brush Holder Attaching.....	1970144	1100798-9; 800-1-9
31	Screw—Brush Holder Attaching.....	1957501	1100791-3-4-5-6-7; 802-3-4-5-7-8; 10-12-13-14-15-16-17-18-19-20-1-2
31	Screw—Brush Holder Attaching.....	1961530	1100792
—	Screw—Brush & Reg. Lead Attaching.....	453418	1100798-9; 800-1-9
32	Screw—Capacitor Terminal.....	132768	All except 1100792
32	Screw—Capacitor Terminal.....	9418855	1100792
—	Screw—Regulator Heat Sink Attaching.....	9427825	1100798-9; 800-1-9
—	Screw—Regulator Attaching to Heat Sink.....	453338	1100798-9; 800-1-9
WASHERS			
—	Washer—Insul. Capacitor Screw.....	1959523	All
—	Washer—Insul.—Brush Holder Attaching Screw.....	1970149	1100798-9; 800-1-9
—	Washer—Plain—Reg. Heat Sink Screw.....	1881252	1100798-9; 800-1-9
—	Washer—Insul. Reg. Heat Sink Screw.....	1970138	1100798-9; 800-1-9
33	Washer—Plain—Capacitor Terminal Screw.....	815540	All
—	Washer—Spring—Brush Holder Attaching Screw.....	9419392	All
MISCELLANEOUS			
34	BOLT—Thru.....	1956975	All except 1100792
34	BOLT—Thru (2½" long).....	1961521	1100792
34	BOLT—Thru.....	1961522	1100792
35	CAPACITOR.....	1959455	All
36	CLIP—Stator Lead Terminal.....	1959532	All
—	COLLECTOR & Spring Assem.—D.E.....	1952241	1100792
—	HEAT SINK—Regulator.....	1970135	1100798-9; 800-1-9
—	INSULATOR—Capacitor Term. Screw.....	1959389	All
39	SEAL—Roller Bearing.....	1959790	1100792-3-4-5-6-7; 802-3-4-10-12-13-14-15-16-17-18-19-20-1-2
39	SEAL—S.R.E. Bearing.....	1961323	1100791-8-9; 800-1-5-7-8-9; 20-1-2
—	SPACER—Thru Bolt.....	1961523	1100792
—	RING—Collector—D.E.....	1952244	1100792
—	REGULATOR (Service by Complete Replacement).....	1116379	1100798-9; 800-1-9
40	RETAINER—Capacitor Retaining.....	1960750	All

*A General Motors Trademark

Revised to June 1, 1969

 SERVICE PARTS CATALOG

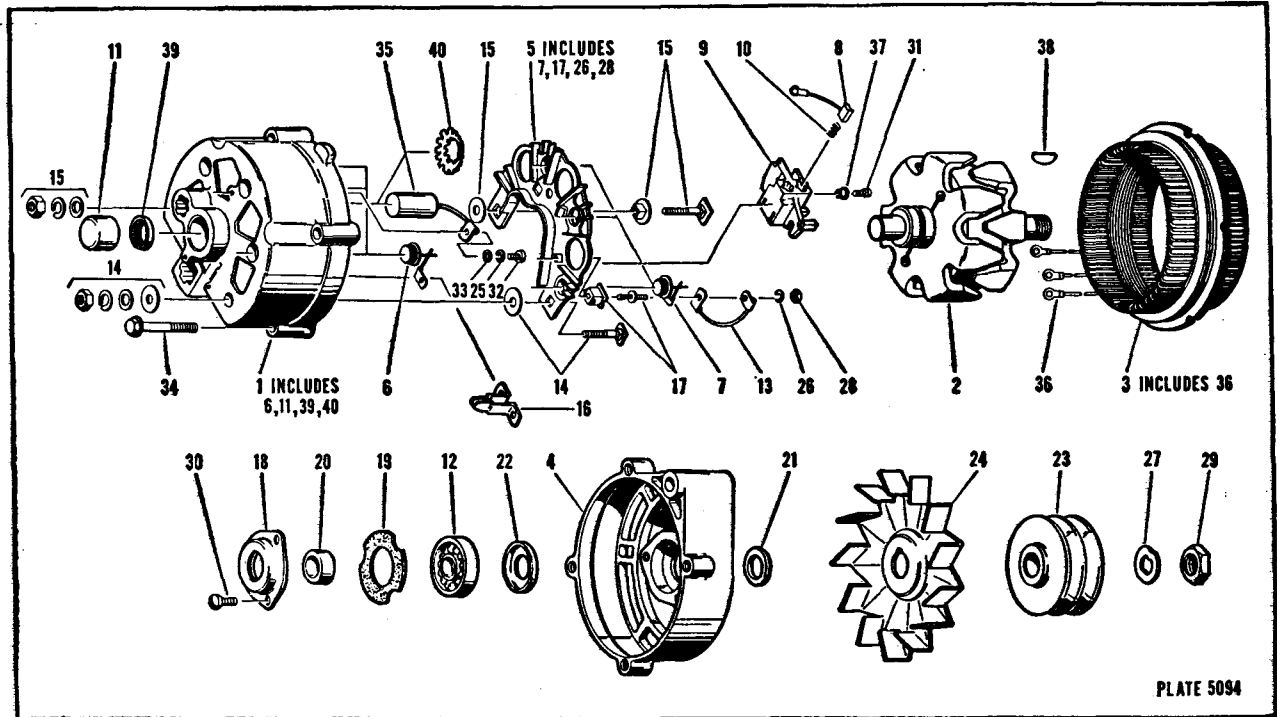

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	# Frame S.R.E.	Rotor Assem.	Stator Assem.	Frame D.E.	Heat Sink Assem.	Diode	Diode	Brush	Holder Brush	Spring Brush	Bearing S.R.E.	Bearing D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1100827.....	1970918	1966614	1959381	1970595	1959828	1964354	1964353	▲	▲	1964117	7451763	904751
1100828.....	1969329	1958565	"	1959917	"	"	"	▲	▲	"	"	"
1100834.....	800396	"	"	"	"	1959830	1959829	▲	▲	"	"	954378
1100836.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100837.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100838.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100839.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100841.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100842.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100843.....	"	"	1962025	"	"	"	"	▲	▲	"	"	"
1100845.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100846.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100847.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100849.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100851.....	"	1964119	1964122	"	"	"	"	▲	▲	"	"	"
1100856.....	800396	1958565	1962025	"	"	"	"	▲	▲	"	"	"
1100857.....	1969329	"	1959381	"	"	1964354	1964353	▲	▲	"	"	904751
1100860.....	800396	"	1962025	"	"	1959830	1959829	▲	▲	"	"	954378
1100862.....	"	"	1959381	"	"	"	"	▲	▲	"	"	"
1100863.....	"	"	1959531	"	"	"	"	▲	▲	"	"	"
1100864.....	"	"	1959381	"	"	"	"	▲	▲	"	"	"
1100870.....	"	"	1962025	"	"	"	"	▲	▲	"	"	907996
1100871.....	1969329	"	1959381	1970525	"	1964354	1964353	▲	▲	"	"	908019
1100875.....	800396	"	"	1959917	"	1959830	1959829	▲	▲	"	"	907996
1100878.....	"	"	"	"	"	"	"	▲	▲	"	"	"
1100879.....	1959827	"	"	"	"	"	"	▲	▲	"	"	"
.....												
.....												
.....												
.....												

*Serviced by 1964682 Brush Holder and Brush Assem.

#Also includes Illustration No. 35.

*A General Motors Trademark.

Delco-Remy SERVICE PARTS CATALOG

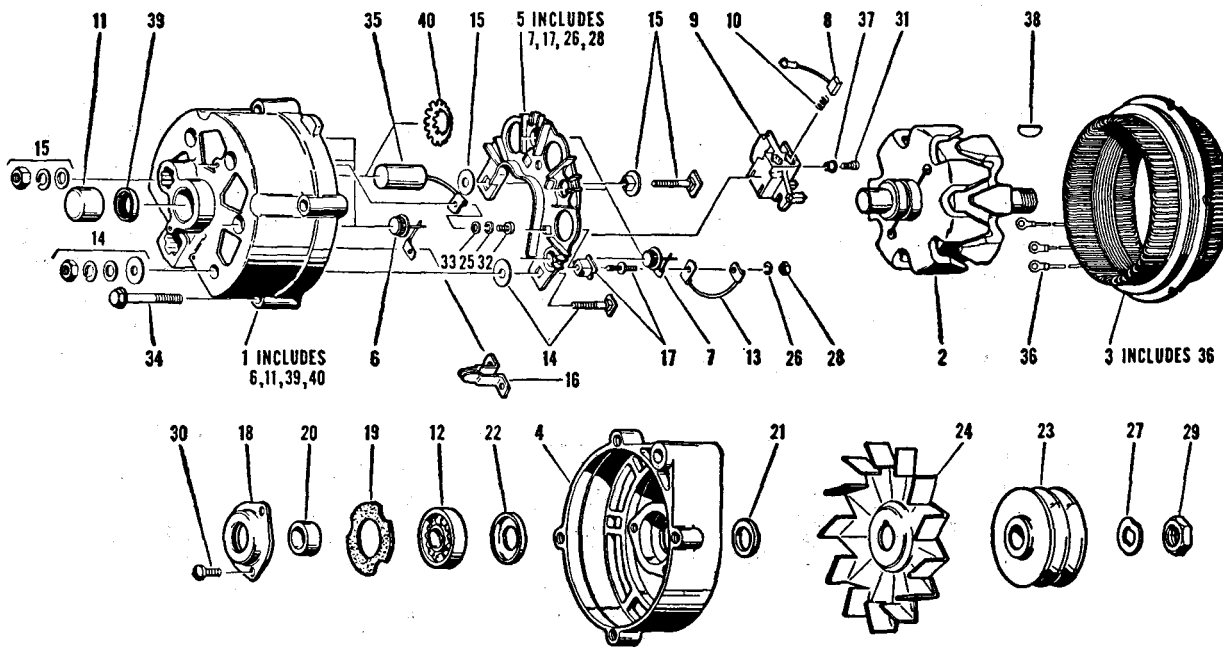 


PLATE 5094

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Lead — Light Indctr.	Terminal Pkg. — Battery	Terminal Pkg. — Ground	Terminal — Fld. Or. Ind. Lt.	Terminal Pkg. — Diode Junction	Brg. Retainer — Assem.	Gasket	Collar — Inside	Collar — Outside	Grease Slinger	Pulley	Fan
	13	14	15	16	17	18	19	20	21	22	23	24
1100827		1959832	1959833		1959834	1955494	1912008	1963139	1959991			1966990
1100828		"	"		"	"	"	"	"		1946716	"
1100834		"	"		"	"	"	"	1970474	1947344	1949357	"
1100836		"	"		"	"	"	"	"	"	1970830	"
1100837		"	"		"	"	"	"	"	"	1970831	"
1100838		"	"		"	"	"	"	1959991	"		
1100839		"	"		"	"	"	"	1970474	"	1949357	1966990
1100841		"	"		"	"	"	"	"	"	1970830	"
1100842		"	"		"	"	"	"	1959991	"		
1100843		"	"		"	"	"	"	1970474	"	1949355	1966990
1100845		"	"		"	"	"	"	1970474	"	800260	"
1100846		"	"		"	"	"	"	1959991	"	1939845	"
1100847		"	"		"	"	"	"	"	"	1969432	"
1100849		"	"		"	"	"	"	"	"		
1100851		"	"		"	"	"	"	"	"	1949355	1966990
1100856		"	"		"	"	"	"	"	"	"	"
1100857		"	"		"	"	"	"	"	"	800513	"
1100860		"	"		"	"	"	"	"	1947344	1944312	"
1100862		"	"		"	"	"	"	"	"	1949357	1966990
1100863		"	"		"	"	"	"	"	"	"	"
1100864		"	"		"	"	"	"	"	"	"	"
1100870		"	"		"	"	"	"	"	"	1949357	1966990
1100871		"	"		"	"	"	"	"	"		
1100875		"	"		"	"	"	"	"	1947344	801211	800594
1100878		"	"		"	"	"	"	"	"	1949355	1966990
1100879		"	"		"	"	"	"	"	"	"	"

*A General Motors Trademark.

Parts not listed in this catalog will not be sold separately.

Revised to June 1, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
25	Lock Washer—Spring Capacitor Terminal Screw.....	9419392	All
26	Lock Washer—Diode Junction Terminal.....	9419392	All
27	Lock Washer—Shaft Nut—D.E.....	1941978	All except 1100845; 60
27	Lock Washer—Shaft Nut—D.E.....	1944314	1100845; 60
NUTS			
28	Nut—Diode Junction Terminal.....	453434	All
29	Nut—Shaft D.E.....	1915172	All except 1100845-9; 60
29	Nut—Shaft D.E.....	1969206	1100845
29	Nut—Shaft—D.E.....	1911324	1100849
29	Nut—Shaft D.E.....	1944313	1100860
SCREWS			
30	Screw—Ball Brg. Retainer Attaching.....	1965104	All
31	Screw—Brush Holder Attaching.....	1957501	All
32	Screw—Heat Sink.....	132768	All
WASHERS			
—	Washer—Insl. Heat Sink Screw.....	1959523	All
33	Washer—Plain—Heat Sink Screw.....	815540	All
—	Washer—Spring—Brush Holder Attaching Screw.....	9419392	All
—	Washer—Spring—Heat Sink Attaching.....	9419392	1100827-8
MISCELLANEOUS			
34	BOLT—Thru.....	1956975	All
35	CAPACITOR.....	1959455	All
36	CLIP—Stator Lead Terminal.....	1959532	All
—	INSULATOR—Heat Sink Term. Screw.....	1959389	All
39	RETAINER (& Felt)—S.R.E.....	1959790	All except 1100828; 57; 71
39	RETAINER—(& Felt)—S.R.E.....	1961323	1100828; 57; 71
40	SPRING—Capacitor Retaining.....	1960750	All
—	SEAL—Terminal—S.R.E.....	1970033	1100827
—	SHIELD—Vibration—S.R.E.....	1966617	1100827

*A General Motors Trademark.

Revised to June 1, 1969

SERVICE PARTS CATALOG

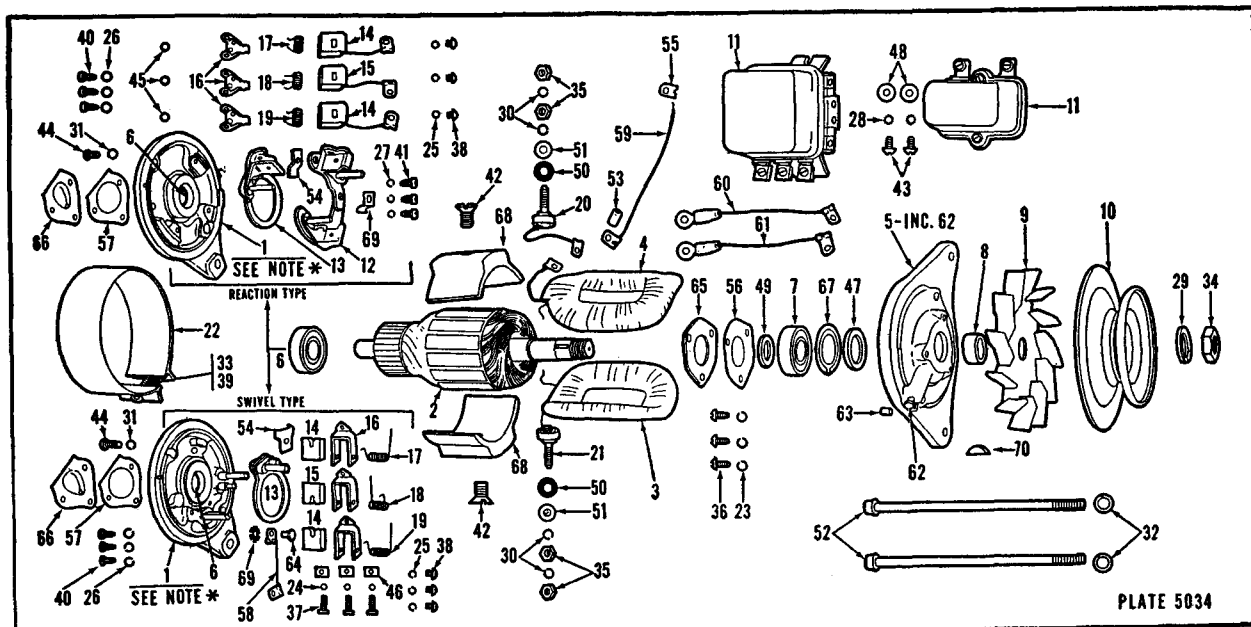 


PLATE 5034

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	*Frame C.E.	Arma-ture	Coil Field L.H.	Coil Field R.H.	Frame D.E.	Bushing or Ball Bearing C.E.	Ball Bearing D.E.	Collar Outside D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1100952.....	1879696	1916797	†1916792		817223	812823	954521	1836194			x1118440
1100953.....	1908871	1872608	†1922700		1855960	"	954378	817224			†1118791
1100954.....	"	"	"		1908869	"	"	"			"
1100955.....	1882356	"	"		1882358	"	"	"			"
1100956.....	1908871	"	"		817223	"	"	"			"
1100957.....	1845819	1877933	"		1845821	954378	954521	1845822			x1118440
1100958.....	"	1886821	"		816469	"	954378	809953			"
1100959.....	1853830	1909152	†1922700		1914277	812823	"	817224			+ 5907
1100960.....	1910918	1910913	†1918076		"	"	"	"			"
1100961.....	1879153	1855429	†1918031		1879154	"	"	"			1872508
1100962.....	1886919	1884120	†1913732		1886920	"	"	"			® 5891
1100963.....	1853830	"	"		1873830	"	"	"			"
1100964.....	"	1947352	"		1908869	"	"	"			"
1100965.....	1908871	1855429	"		817223	"	"	"			® 5897
1100966.....	"	"	"		1855960	"	"	"			x1118440
1100968.....	"	1872608	"		1873830	"	"	"			†1118791
1100969.....	1845819	1835629	"		817879	954378	"	813281			
1100971.....	1908871	1878273	"		1874338	812823	"	1874339			
1100972.....	"	1878415	"		1873830	"	"	817224			
1100973.....	1880975	1872608	"		1880976	"	"	1858603			
1100979.....	1886919	1855429	"		1886920	"	"	817224			
1100981.....	1908871	1872608	"		1873830	"	"	"			* 5838
1100983.....	"	1907416	†1921632		1841472	"	954521	"			x1118440
1100986.....	"	1878273	†1913732		1874338	"	954378	1874339			1872508
1100987.....	"	"	"		"	"	"	"			* 5838
1100988.....	1853830	1924971	†1922700	"	"	"	"	"			†1118306
1100990.....	"	1884120	"		1873830	"	"	1858603			+ 5886

®For parts see Regulator—Group 5.

†For parts see Regulator—Group 6-C.

*For parts see Regulator—Group 5-A.

*C.E. Frame includes where necessary: Bushing, oiler, oil wick, oil hole plug, dowel pin and Brush pins.

 
†Field coil set (2 coils).

*For parts see Regulator—Group 4.

†For parts see Regulator—Group 6-F.

*For parts see Regulator—Group 5-B.

Delco-Remy SERVICE PARTS CATALOG

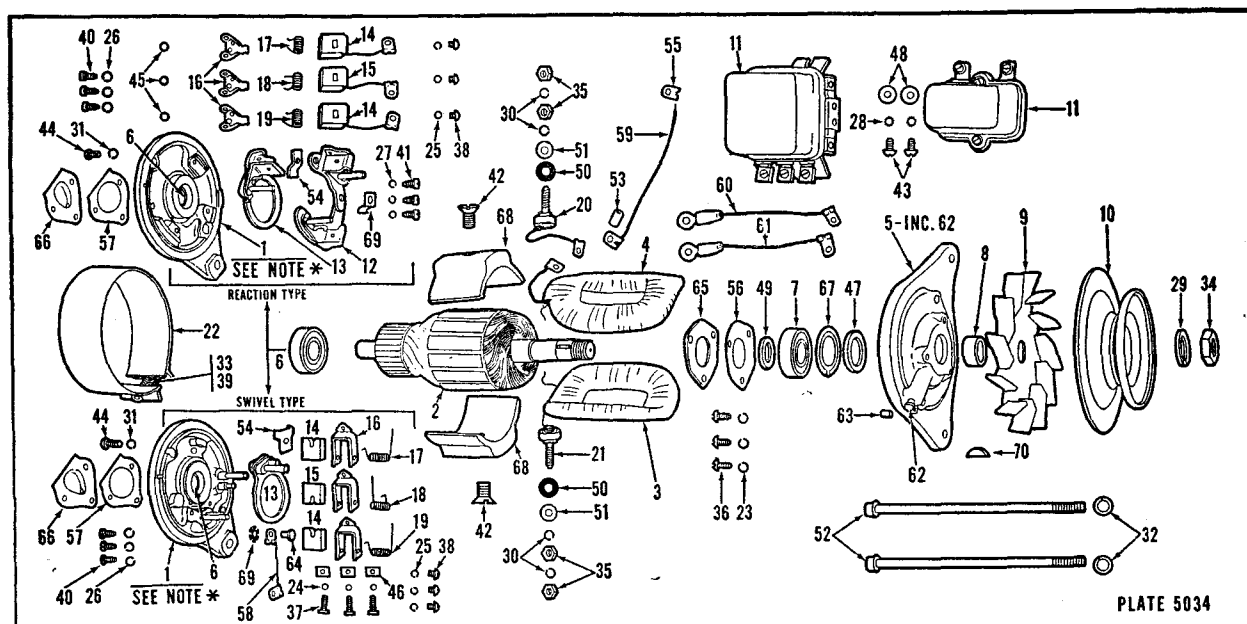

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Brush Plate Main	Brush Plate 3rd	Brush Main	Brush 3rd	Arm or Holder Brush	Spring R.H. Main	Spring 3rd	Spring L.H. Main	Terminal Stud & Lead	Terminal Stud only	Band Cover
	12	13	14	15	16	17	18	19	20	21	22
1100952		809936	809637	809637	809642	809658	809658	809644			1861502
1100953		809698	"	"	"	"	809644	"	1858754	1858749	1872638
1100954		"	"	"	"	"	"	"	"	"	"
1100955		"	"	"	"	"	"	"	"	"	"
1100956		"	"	"	"	"	"	"	"	"	"
1100957		"	"	"	"	"	"	"	"	"	"
1100958		"	"	"	"	"	"	"	"	"	"
1100959	1908563	1909151	▲1906984	▲1906940	1904365	1903871	1946798	1903871	1858749	"	"
1100960	1909591	1910916	"	"	"	1916324	1903870	1916324	"	"	"
1100961	1908550	1909151	"	"	"	1903871	1946798	1903871			1861502
1100962	"	"	"	"	"	"	"	"	1858754	1858749	1872638
1100963	"	"	"	"	"	"	"	"	"	"	"
1100964	1913565		▲1906984	"	"	"	"	"	"	"	"
1100965		809698	809637	809637	809642	809658	809644	809644	"	"	"
1100966		"	"	"	"	"	"	"	"	"	"
1100968		"	"	"	"	"	"	"	"	"	"
1100969		"	"	"	"	"	"	"	"	"	"
1100971		"	"	"	"	"	"	"	"	"	"
1100972		"	"	"	"	"	"	"	"	"	"
1100973	1871806		▲1906984	▲1906940	1904365	1903871	1946798	1903871	"	"	1861502
1100979	1908550	1909151	"	"	"	"	"	"	"	"	1872638
1100981		809698	809637	809637	809642	809658	809644	809644	"	"	"
1100983		"	820517	820517	"	"	"	"			"
1100986		"	809637	809637	"	"	"	"	1858754	1858749	"
1100987		"	"	"	"	"	"	"	"	"	"
1100988	1913565		▲1906984	▲1906940	1904365	1903871	1946798	1903871	"	"	"
1100990	1908550	1909151	"	"	"	"	"	"	"	"	"

▲For complete brush set order part No. 1857963.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E. -----	1962276	1100952-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-3-6-7-8; 90
24	Lock Washer—Brush Attaching Screw -----	456413	1100952-3-4-5-6-7-8; 65-6-8-9; 71-2; 81-2-6-7
25	Lock Washer—Brush Lead Screw -----	1914816	1100952-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-3-6-7-8; 90
—	Lock Washer—Brush Ground Lead Screw -----	453844	1100952
26	Lock Washer—End Cover Plate Screw—C.E. -----	453844	1100952-3-4-5-6-9; 60-1-2-3-4-5-6-8; 71-2-3-9; 81-3-6-7-8; 90
26	Lock Washer—End Cover Plate Screw—C.E. -----	453435	1100957-8; 69
—	Lock Washer—Field Lead Ground Screw -----	453844	1100961
27	Lock Washer—Main Brush Plate Screw -----	453844	1100959; 60-1-2-3-4; 73-9; 88; 99
28	Lock Washer—Relay Mtg. Screw -----	453844	1100961; 71; 86
28	Lock Washer—Regulator Mtg. Screw -----	138479	1100952-3-4-5-6-7-8-9; 60-2-3-5-6-8; 71-2; 83-7-8; 90
28	Lock Washer—Regulator Mtg. Screw -----	178378	1100981
29	Lock Washer—Shaft Nut—D. E. -----	1915265	1100952-3-4-5-6-7-8-9; 60-2-3-5-6-8; 71-2; 73; 81
29	Lock Washer—Shaft Nut—D. E. -----	802764	1100958
29	Lock Washer—Shaft Nut—D. E. -----	9421427	1100969
30	Lock Washer—Terminal Stud Nut -----	1914579	1100953-4-5-6-7-8-9; 60-2-3-4-5-6-8-9; 71-2-3-9; 81-6-7-8; 90
31	Lock Washer—3rd Brush Plate Clamp Screw -----	453435	1100952-3-4-5-6-7-8; 61-2-3-5-6-8-9; 71-2-3-9; 81-3-6-7; 90
31	Lock Washer—3rd Brush Plate Clamp Screw -----	453844	1100959; 60
32	Lock Washer—Thru Bolt -----	9421424	1100952-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-3-6-7-8; 90
NUTS			
33	Nut—Cover Band Screw -----	453433	1100953-4-5-6-7-8-9; 60-2-3-4-5-6-8-9; 71-2-3-9; 81-3-6-7-8; 90
—	Nut—Shaft—C.E. -----	1917570	1100969
34	Nut—Shaft—D.E. -----	1917035	1100952; 83
34	Nut—Shaft—D.E. -----	1915172	1100953-4-5-6; 61-5-6-8; 73-9; 81
34	Nut—Shaft—D.E. -----	1917570	1100957-9; 60-2-3; 90
34	Nut—Shaft—D.E. -----	114495	1100958
34	Nut—Shaft—D.E. -----	1914308	1100964; 72
35	Nut—Terminal Stud -----	121743	1100953-4-5-6-7-8-9; 60-2-3-4-5-6-8-9; 71-2-3-9; 81-6-7-8; 90
—	Nut—3rd Brush Plate Clamp Screw -----	134376	1100959; 60
SCREWS			
36	Screw—Ball Bearing Retainer Plate—D.E. -----	1914580	1100952-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-3-6-7-8; 90
37	Screw—Brush Attaching -----	453986	1100952-3-4-5-6-7-8; 65-6-8-9; 71-2; 81-3-6-7
38	Screw—Brush Lead Attaching -----	453978	1100952-3-4-5-6-7-8; 62-3-5-6-8-9; 71-2; 81-3-6-7; 90
38	Screw—Brush Lead Attaching -----	453460	1100959; 60-1-4; 73-9; 88
—	Screw—Brush Ground Lead Attaching -----	453418	1100952
39	Screw—Cover Band -----	132143	1100953-4-5-6-7-8-9; 60-2-3-4-5-6-8-9; 71-2-9; 81-3-6-7-8; 90
40	Screw—End Cover Plate—C.E. -----	454408	1100952-3-4-5-6-8-9; 60-1-2-3-4-5-6-8; 71-2-3-9; 81-3-6-7-8; 90
40	Screw—End Cover Plate—C.E. -----	1914580	1100957; 69
—	Screw—Field Lead Ground -----	453418	1100961
41	Screw—Main Brush Plate Attaching -----	454408	1100959; 60-1-2-3-4; 73-9; 88
42	Screw—Pole Shoe -----	1913960	1100952-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-3-6-7-8; 90
43	Screw—Regulator Mtg. -----	132900	1100952-3-4-5-6-7-8-9; 60-2-3-5-6-8; 83-7-8; 90
43	Screw—Regulator Mtg. -----	453319	1100971-2; 81
43	Screw—Relay Mtg. -----	453418	1100961; 71; 86
44	Screw—3rd Brush Plate Clamp -----	9416183	1100952-3-4-5-6-7-8; 65-6-8; 71-2; 81-3-6-7
44	Screw—3rd Brush Plate Clamp -----	454408	1100959; 60
44	Screw—3rd Brush Plate Clamp -----	453464	1100961-2-3; 79; 90
44	Screw—3rd Brush Plate Clamp -----	37872	1100969

Parts not listed in this Catalog will not be sold separately.


MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
WASHERS			
45	Washer—Brush Arm Space -----	1914741	1100959; 60
45	Washer—Brush Arm Space -----	1857412	1100961-2-3-4; 79; 88; 90
46	Washer—Brush Attaching Screw -----	809551	1100952-3-4-5-6-7-8; 65-6-8-9; 71-2-3; 81-3-6-7
—	Washer—Felt—C.E. -----	815042	1100958; 69
47	Washer—Felt—D.E. -----	820706	1100952-7; 83
47	Washer—Felt—D.E. -----	809961	1100953-4-5-6-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-6-7-8; 90
—	Washer—Plain—Shaft Nut—C.E. -----	1926782	1100969
—	Washer—Plain—Shaft Nut—D.E. -----	30205	1100952-9; 60-2-3; 83; 90
—	Washer—Plain—Shaft Nut—D.E. -----	1934383	1100957
—	Washer—Plain—D.E. -----	810411	1100969
48	Washer—Plain—Regulator Mtg. -----	1856056	1100952-3-4-5-6-7-8-9; 60-2-3-5-6-8; 71-2; 83-7-8; 90
49	Washer—Space—Inside—D.E. -----	822644	1100952-7; 83
49	Washer—Space—Inside—D.E. -----	809945	1100953-4-5-6-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-6-7-8; 90
50	Washer—Terminal Stud Insulation -----	1858753	1100953-4-5-6-7-8; 60-2-3-4-5-6-8-9; 71-2-3-9; 81-6-7-8; 90
51	Washer—Terminal Stud Plain -----	826319	1100953-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-6-7-8; 90
MISCELLANEOUS			
—	BAFFLE—Dust—D.E. -----	1927533	1100990
—	BAFFLE—Oil—D.E. -----	820547	1100957
—	BAFFLE—Oil—D.E. -----	1919657	1100983
52	BOLT—Thru -----	1915090	1100952; 83
52	BOLT—Thru -----	1908680	1100953-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-6-7-8; 90
53	BUSHING—For Lead In Field Frame -----	812891	1100952; 61; 83
—	BUSHING—Insulator Terminal Stud -----	*	1100953-4-5-6-7-8-9; 60-2-3-4-5-6-8-9; 71-2-3-9; 81-6-7-8; 90
54	CLAMP—3rd Brush Plate -----	817532	1100952-3-4-5-6-7-8; 65-6-8-9; 71-2; 81-3-6-7
54	CLAMP—3rd Brush Plate -----	1857187	1100959; 60
54	CLAMP—3rd Brush Plate -----	1850770	1100961-2-3; 79; 90
—	CLIP—Terminal—To Brush -----	200182	1100952-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-3-6-7-8; 90
55	CLIP—Terminal—To Regulator -----	200154	1100952
55	CLIP—Relay Lead -----	200191	1100961; 83
—	COLLAR—Space—Inside—C.E. -----	811681	1100958; 69
—	COLLAR—Space—Outside—C.E. -----	815049	1100958
—	COLLAR—Space—Outside—C.E. -----	817224	1100969
—	COUPLING—Drive -----	1839478	1100971
—	COUPLING—Drive -----	1923470	1100986-7-8
56	GASKET—Ball Bearing Plate—D.E. -----	820708	1100952-7; 83
56	GASKET—Ball Bearing Plate—D.E. -----	1912008	1100953-4-5-6-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-6-7-8; 90
57	GASKET—End Cover Plate—C.E. -----	817220	1100952-3-4-5-6-9; 60-1-2-3-4-5-6-8; 71-2-3-9; 81-3-6-7-8; 90
57	GASKET—End Cover Plate—C.E. -----	1835457	1100957
—	GUARD—Shaft—D.E. -----	824607	1100969
—	INSULATOR—Field Coil -----	1914491	1100952-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-3-6-7-8; 90
—	INSULATOR—Terminal -----	1921362	1100959
58	LEAD—Brush Ground -----	809688	1100952-3-4-5-6-7-8; 65-6-8-9; 71-2; 81-3-6-7
59	LEAD—Brush to Relay -----	812004	1100961
59	LEAD—Brush to Relay or Regulator -----	809966	1100952; 83
60	LEAD—"A" Terminal to Regulator or Relay -----	1911485	1100953-4-6; 60-2-8
60	LEAD—"A" Terminal to Regulator -----	1914185	1100957; 66
60	LEAD—"A" Terminal to Regulator -----	1914192	1100958; 65; 81
60	LEAD—"A" Terminal to Regulator -----	1914187	1100959; 63; 90
60	LEAD—"A" Terminal to Regulator -----	1914211	1100988
60	LEAD—"A" Terminal to Regulator or Relay -----	1914187	1100986-7
60	LEAD—"A" Terminal to Regulator or Relay -----	1914185	1100955
61	LEAD—"F" Terminal to Regulator or Relay -----	1911485	1100955-6; 60-2

*Included with 1858749 Stud.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS (Continued)		
61	LEAD—"F" Terminal to Regulator or Relay -----	1911481	1100953-4; 68
61	LEAD—"F" Terminal to Regulator or Relay -----	1914185	1100955-9; 63-5; 81-7; 90
61	LEAD—"F" Terminal to Regulator -----	1914192	1100957; 66
61	LEAD—"F" Terminal to Regulator -----	1915076	1100958
61	LEAD—"F" Terminal to Regulator -----	1914211	1100988
—	OILER—C.E. -----	114998	1100957-8; 69
—	OILER—C.E. -----	113702	1100952-3-4-5-6-9; 60-1-2-3-4-5-6-8; 71-2-3-9; 81-6-7-8; 90
—	OILER—C.E. -----	1882716	1100983
62	OILER—D.E. -----	113702	1100952-3-4-5-6-7-8; 61-2-4-5-6-9; 79; 83
62	OILER—D.E. -----	125609	1100959; 60-3-8; 71-2-3; 81-6-7-8; 90
—	PIN—Brush Holder Hinge -----	817313	1100953-4-5-6-7-8; 65-6-8-9; 71-2; 81-3-6-7
—	PIN—Brush Holder Stop -----	817314	1100953-4-5-6-7-8; 65-6-8-9; 71-2; 81-3-6-7
—	PIN—(& Insulation) Brush Holder Hinge -----	812016	1100952-3-4-5-6-7-8; 65-6-8-9; 71-2; 81-3-6-7
—	PIN—(& Insulation) Brush Holder Stop -----	812015	1100952-3-4-5-6-7-8; 65-6-8-9; 71-2; 81-3-6-7
—	PIN—Cotter—Shaft Nut—C.E. -----	31411	1100969
—	PIN—Coupling—D.E. -----	820711	1100971; 86-7-8
—	PIN—Dowel—C.E. -----	809062	1100952-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-3-6-7-8; 90
63	PIN—Dowel—D.E. -----	809593	1100952-3-4-5-6-7-9; 60-1-2-3-4-5-6-8; 71-2-3-9; 81-3-6-7-8; 90
—	PIN—3rd Brush Plate Stop -----	1840738	1100955
64	PIN—3rd Brush Plate Tension Spring -----	809614	1100952-3-4-5-6-7-8; 65-6-8-9; 71-2; 81-3-6-7
65	PLATE—Bearing Retainer—D.E. -----	1910396	1100959
65	PLATE—Bearing Retainer—D.E. -----	820707	1100952-7; 83
65	PLATE—Bearing Retainer—D.E. -----	1911263	1100953-4-5-6-8; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-6-7-8; 90
66	PLATE—End Cover—C.E. -----	1914222	1100952-3-4-5-6-9; 60-1-2-3-4-5-6-8; 71-2-3-9; 81-3-6-7-8; 90
66	PLATE—End Cover—C.E. -----	816212	1100957
66	PLATE—End Cover—C.E. -----	814985	1100958; 69
—	PLATE—Felt Retainer—C.E. -----	809960	1100958; 69
67	PLATE—Felt Retainer—D.E. -----	820709	1100952-7; 83
67	PLATE—Felt Retainer—D.E. -----	819104	1100953-4-5-6-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-3-6-7-8; 90
—	PLUG—Oil Hole—C.E. -----	1911097	1100952-3-4-5-6-9; 60-1-2-3-4-5-6-8; 71-2-3-9; 81-3-6-7-8; 90
—	SLEEVE—Shaft Guard—D.E. -----	824608	1100969
68	SHOE—Pole -----	1931258	1100952-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-9; 81-3-6-7-8; 90
69	SPRING—3rd Brush Plate Tension -----	809824	1100952-3-4-5-6-7-8; 65-6-8-9; 71-2; 81-3-6-7
69	SPRING—3rd Brush Plate Tension -----	1850771	1100959; 60-1-2-3; 79; 90
—	WICK—C.E. -----	1947350	1100952-3-4-5-6-9; 60-1-2-3-4-5-6-8; 71-2-3-9; 81-3-6-7-8; 90
—	WICK—C.E. -----	1919851	1100957-8; 69
—	WOODRUFF KEY—C.E. -----	124546	1100958; 69
70	WOODRUFF KEY—D.E. -----	124548	1100952-7; 83
70	WOODRUFF KEY—D.E. -----	124545	1100953-4-5-6-9; 60-1-2-3-4-5-6-8; 71-2-3-9; 81; 90
70	WOODRUFF KEY—D.E. -----	124546	1100958; 86-7-8

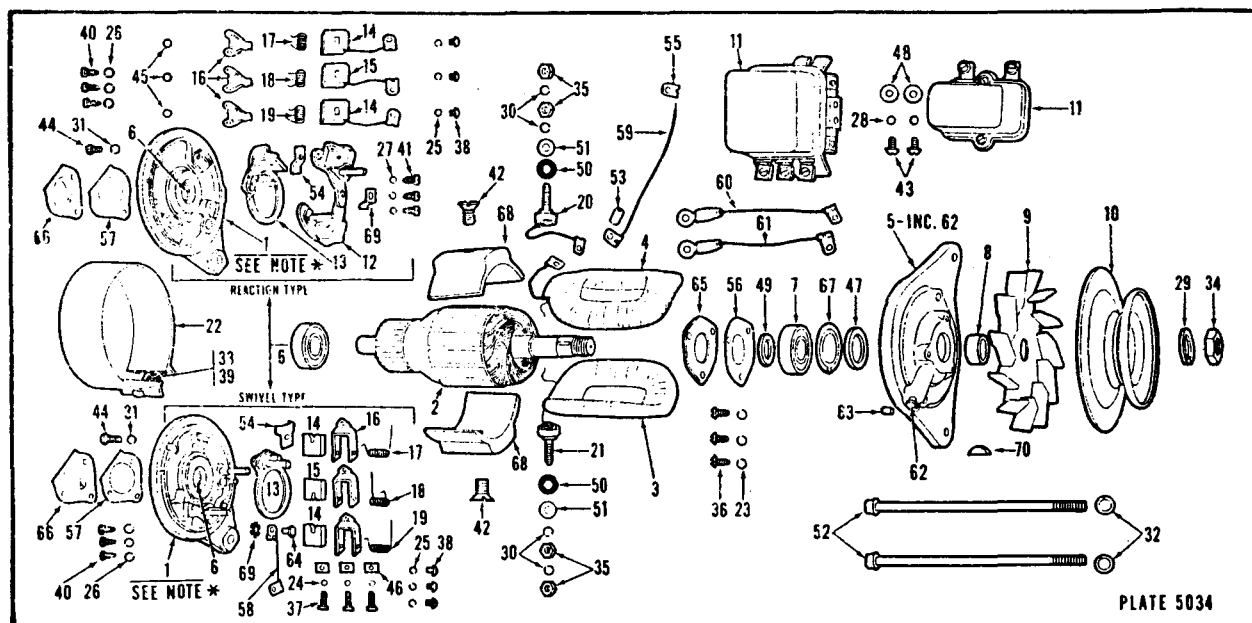 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	*Frame C.E.	Armature	Coil Field L.H.	Coil Field R.H.	Frame D.E.	Bushing or Ball Bearing C.E.	Ball Bearing D.E.	Collar — Outside D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1100991.....	1908871	1872608	†1922700		1855960	812823	954378	817224			
1100992.....	"	"	"		1873830	"	"	"			▲1118306
1100993.....	1886919	"	"		1886920	"	"	"			○1118791
1100994.....	1853830	"	"		1873830	"	"	"			○"
1100995.....	"	"	"		"	"	"	"		1931727	
1100996.....	1853830	817807	"		"	"	"	"			
1100997.....	"	1947352	"		"	"	"	"			
1100998.....	1908871	1932746	"		1855960	"	"	"		1946716	
1100999.....	822652	1935144	"		1838678	"	"	"			○1118791
1101000.....	1853830	1872608	"		1873830	"	"	"		1931727	*1118983
1101001.....	1853830	1932746	"		"	"	"	"			○1118791
1101002.....	1853830	1872608	"		"	"	"	"			*1118983
1101003.....	1878431	"	"		817223	"	"	"			
1101004.....	1879153	"	"		1879154	"	"	"			
1101005.....	1908871	"	"		1855960	"	"	"		1942943	
1101006.....	1853830	"	"		"	"	"	"			○1118792
1101007.....	"	"	"		1838678	"	"	"			
1101009.....	"	"	"		1873830	"	"	"			*1118983
1101010.....	1856146	1883685	"		1841472	"	954521	1836194			
1101011.....	1853830	1932746	"		1873830	"	954378	817224		1947813	
1101012.....	"	817807	"		1855960	"	"	1858603		1949041	
1101013.....	"	1872608	"		"	"	"	817224			*1118991
1101014.....	1917741	1918345	"		1855960	"	"	1914247			†1118299

†Field Coil Set (2 coils).

▲For parts see Regulator—Group 6-C.

○For parts see Regulator—Group 6-F.

*For parts see Regulator—Group 6-J.

*C.E. Frame includes where necessary: Bushing, Oiler, Oil Wick, Oil Hole Plug, Dowel Pin and Brush Pins.

†For parts see Regulator—Group 6-B.

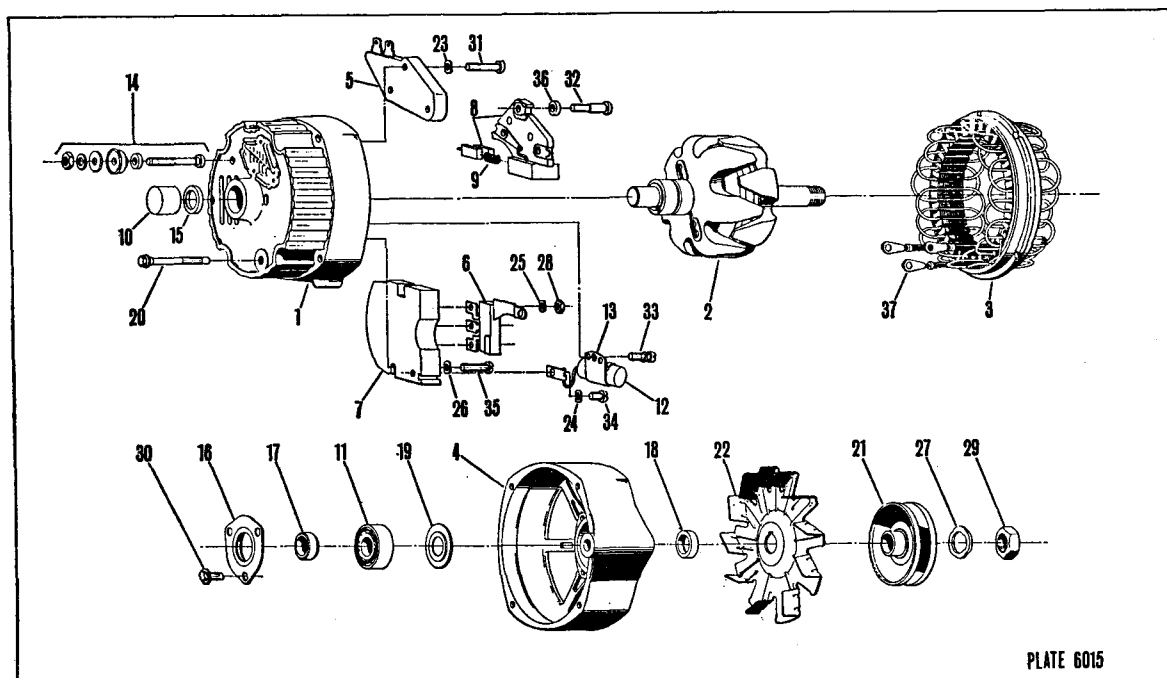 


PLATE 6015

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.


Model No.	*Frame — S.R.E.	Rotor — Assem.	^Δ Stator — Assem.	Frame — D.E.	Regu- lator —	Diode — Trio	Recti- fier — Bridge	□Brush & Holder — Assem.	Spring — Brush	Bearing — S.R.E.	Bearing — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1100825.....	1971526	1971990	1971639	800135	1116380	1971528	1971987	1971521	1964117	7451763	907998
1100826.....	"	"	1971986	"	"	"	"	"	"	"	"
1100830.....	"	"	800137	"	"	"	"	"	"	"	"
1100832.....	"	"	1971986	"	"	"	"	"	"	"	"
1100833.....	"	"	"	"	"	"	"	"	"	"	"
1100852.....	"	"	800137	"	"	"	"	"	"	"	"
1100853.....	"	"	1971986	"	"	"	"	"	"	"	"
1100854.....	"	"	1971639	"	"	"	"	"	"	"	"
1100855.....	"	"	800137	"	"	"	"	"	"	"	"
1100859.....	"	"	1971986	"	"	"	"	"	"	"	"
1100861.....	"	"	1971639	"	"	"	"	"	"	"	"
1100865.....	"	"	800137	"	"	"	"	"	"	"	"
1100880.....	801309	"	1971986	"	1116384	"	"	801466	"	"	"
1100881.....	1971526	"	"	"	1116380	"	"	1971521	"	"	"
1100882.....	"	"	1971639	"	"	"	"	"	"	"	"
1100884.....	801309	"	"	"	1116384	"	"	801466	"	"	"
1100890.....	"	"	800137	"	"	"	"	"	"	"	"
1100894.....	1846111	"	1971986	"	1116385	"	"	"	"	"	"
1100897.....	801309	"	1971639	"	1116384	"	"	"	"	"	"
1100899.....	"	"	1971986	"	"	"	"	"	"	"	"
1100900.....	"	"	"	"	"	"	"	"	"	"	"
1100901.....	"	"	"	"	"	"	"	"	"	"	"
1100902.....	"	"	"	"	"	"	"	"	"	"	"
1100903.....	"	"	800137	"	"	"	"	"	"	"	"
1100904.....	"	"	1971639	"	"	"	"	"	"	"	"
1100911.....	"	"	800137	"	"	"	"	"	"	"	"
1100912.....	1846111	"	1971986	"	1116385	"	"	"	"	"	"

* Includes Illus. 10 & 15.

^Δ Includes Illus. 37.

□ Includes Illus. 9.

 * A General Motors Trademark.

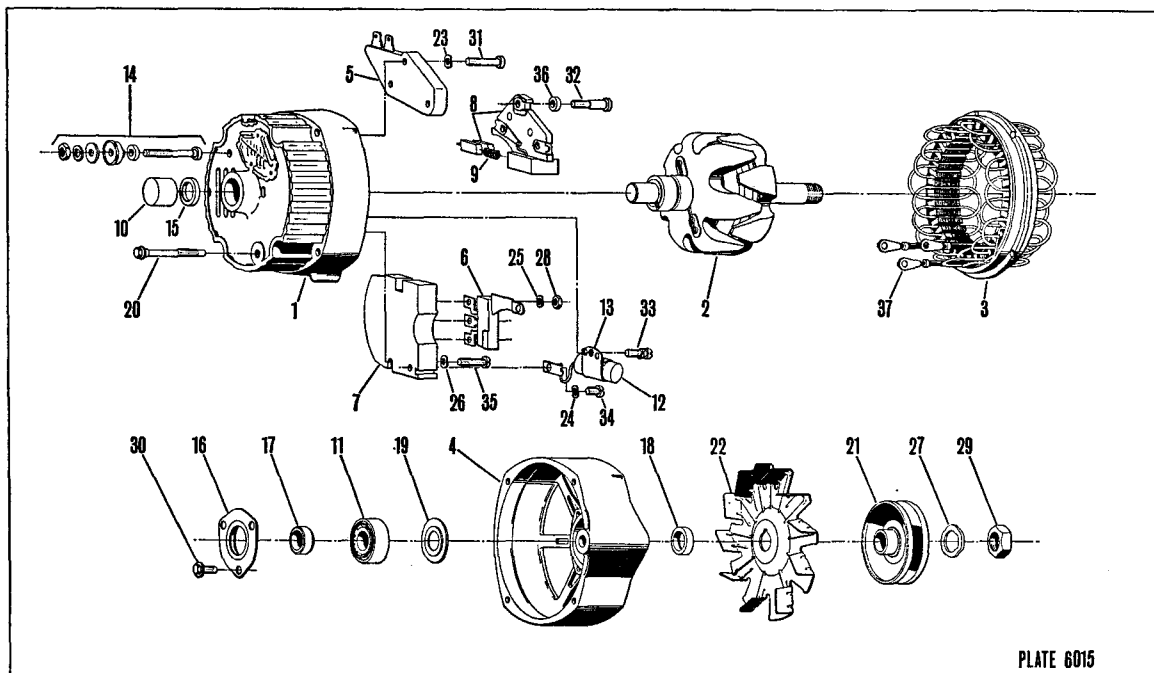

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Capac- itor —	Bracket — Cap.	Term. Pkg. — Battery	Seal — Bear.	Bear. Re- tain- er — Assem.	Collar — Inside	Collar — Outside	Slinger — Grease	Bolt — Thru	Pulley —	Fan —
	12	13	14	15	16	17	18	19	20	21	22
1100825	1971411	1869573	1971704	1961323	1971993	1963139	1959991	800832	1956975		
1100826	"	"	"	"	"	"	1970474	"	"		
1100830	"	"	"	"	"	"	1959991	"	"	1949357	1966990
1100832	"	"	"	"	"	"	"	"	"	"	"
1100833	"	"	"	"	"	"	"	"	"		
1100852	"	"	"	"	"	"	"	"	"	1949355	1966990
1100853	"	"	"	"	"	"	"	"	"	"	"
1100854	"	"	"	"	"	"	"	"	"	1949357	"
1100855	"	"	"	"	"	"	"	"	"		
1100859	"	"	"	"	"	"	1970474	"	"	800367	1966990
1100861	"	"	"	"	"	"	1959991	"	"	1964758	"
1100865	"	"	"	"	"	"	"	"	"	1968354	"
1100880	"	"	"	"	"	"	"	"	"	1949355	"
1100881	"	"	"	"	"	"	"	"	"		
1100882	"	"	"	"	"	"	"	"	"		
1100884	"	"	"	"	"	"	"	"	"		
1100890	"	"	"	"	"	"	1970474	"	"	1949355	1966990
1100894	"	"	"	"	801506	"	1959991	"	"	1965904	"
1100897	"	"	"	"	1971993	"	"	"	"		
1100899	"	"	"	"	"	"	"	"	"		
1100900	"	"	"	"	"	"	"	"	"		
1100901	"	"	"	"	"	"	1970474	"	"	1949357	1966990
1100902	"	"	"	"	"	"	1959991	"	"	1949355	"
1100903	"	"	"	"	"	"	"	"	"	"	"
1100904	"	"	"	"	"	"	"	"	"	"	"
1100911	801824	"	"	"	"	"	1970474	"	"	1964758	"
1100912	1971411	"	"	"	801506	"	1959991	"	"	1965904	1959703

* A General Motors Trademark.

arts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used On
LOCK WASHERS			
—	Lock Washer—Ball Brg. Retainer Plate Screw -----	9419634	1100894; 912
23	Lock Washer—Brush Hldr. Attach. Screw -----	9419392	All
24	Lock Washer—Capacitor Lead Attach. Screw -----	9419392	All except 1100825-6; 30-2-3; 52-3-4-5-9; 61-5; 81-2; 912
25	Lock Washer—Rectifier Bridge Nut -----	9419392	All
26	Lock Washer—Rectifier Bridge Attach. Screw -----	9419392	All
27	Lock Washer—Shaft Nut—D.E. -----	1941978	All
—	Lock Washer—S.R.E. Cover Screw -----	9419634	1100894; 912
NUTS			
28	Nut—Rectifier Bridge -----	453434	All
29	Nut—Shaft D.E. -----	1915172	All
SCREWS			
30	Screw—Ball Bearing Retainer Attach. -----	1965104	All Except 1100894; 912
30	Screw—Ball Brg. Retainer Plate Attach. -----	9411396	1100894; 912
31	Screw—Brush Holder Attach. -----	1971519	All
32	Screw (Insulated)—Brush Holder Attach. -----	1971518	All
33	Screw (& Lock Washer)—Capacitor Bracket Attach. -----	453849	All
34	Screw—Capacitor Lead Attach. -----	9422873	All except 1100825-6; 30-2-3; 52-3-4-5-9; 61-5; 81-2; 912
35	Screw—Rectifier Bridge Attach. -----	436698	All
—	Screw—S.R.E. Cover -----	9431903	1100894; 912
WASHERS			
—	Washer—Batt. Terminal—Neoprene Sponge -----	801495	1100894; 912
36	Washer—Brush Holder Insul. Screw -----	1970149	All
MISCELLANEOUS			
—	CLIP—Regulator Terminal Shorting -----	801493	1100894; 912
—	CLIP—Ground Screw -----	801591	1100894; 912
37	CLIP—Stator Lead -----	1959532	All
—	COVER ASSEM.—S.R.E. -----	801489	1100894; 912
—	GASKET—D.E. Screen Assem. -----	801858	1100894
—	SCREEN ASSEM. -----	801860	1100894; 912
—	SCREEN—S.R.E. Cover -----	801859	1100894; 912

 
* A General Motors Trademark.

Parts not listed in this Catalog will not be sold separately.

Revised to September 1, 1970

Delco-Remy SERVICE PARTS CATALOG

DELCO-TRON* GENERATOR
Group 88-T
Page 1

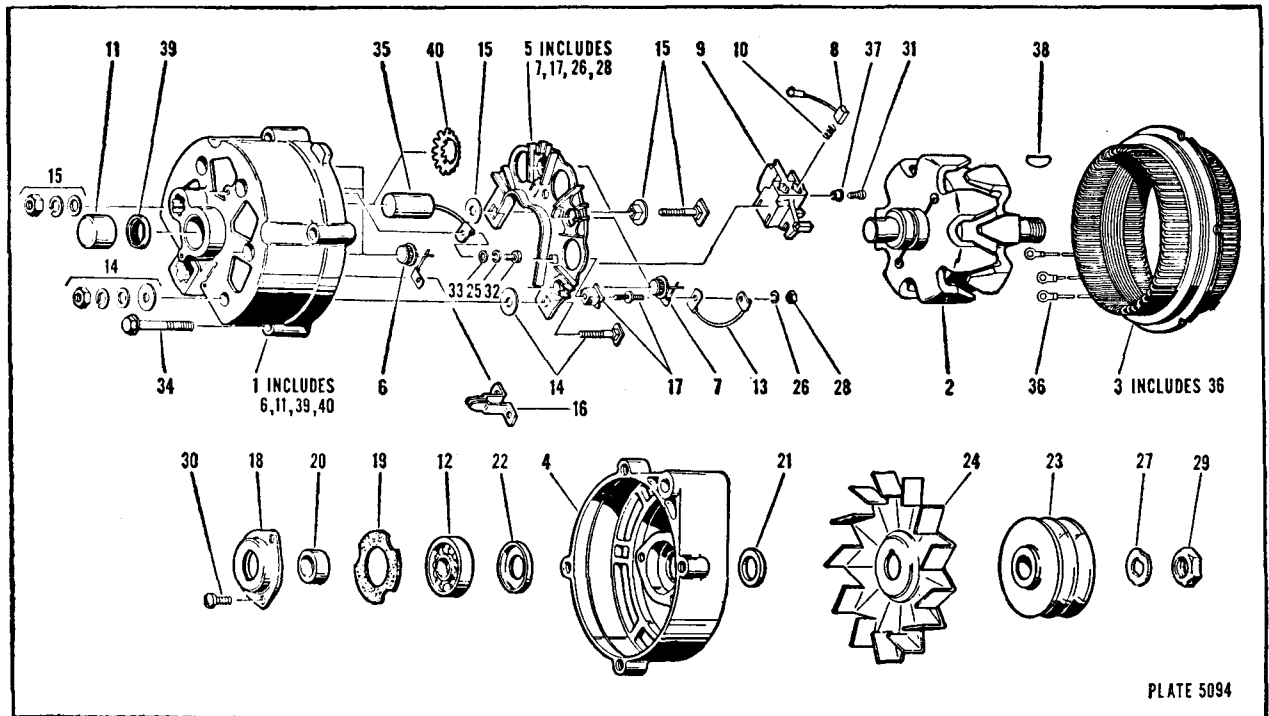

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	# Frame S.R.E.	Rotor Assem.	Stator Assem.	Frame D.E.	Heat Sink Assem.	Diode	Diode	Brush	Holder Brush	Spring Brush	Bearing S.R.E.	Bearing D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1100883.....	1969329	1958565	1962025	1959917	1959828	1964354	1964353	■	■	1964117	7451763	908019
1100885.....	800396	1964119	1964122	"	"	1959830	1959829	■	■	"	"	907996
1100886.....	"	1958565	1962025	"	"	"	"	■	■	"	"	"
1100888.....	"	"	1959381	"	"	"	"	■	■	"	"	"
1100889.....	"	"	1962025	"	"	"	"	■	■	"	"	"
1100891.....	"	"	"	"	"	"	"	■	■	"	"	"
1100892.....	"	"	"	"	"	"	"	■	■	"	"	"
1100893.....	"	"	"	"	"	"	"	■	■	"	"	"
1100895.....	"	"	"	"	"	"	"	■	■	"	"	"
1100896.....	"	"	1959381	"	"	"	"	■	■	"	"	"
1100905.....	"	"	"	"	"	"	"	■	■	"	"	"
1100906.....	"	"	1962025	"	"	"	"	■	■	"	"	"
1100907.....	"	"	"	"	"	"	"	■	■	"	"	"
1100908.....	"	"	1959381	"	"	"	"	■	■	"	"	"
1100909.....	"	"	1962025	"	"	"	"	■	■	"	"	"
1100910.....	"	"	"	"	"	"	"	■	■	"	"	"
1100916.....	1969329	"	"	"	"	1964354	1964353	■	■	"	"	"
1100917.....	800396	"	"	"	"	1959830	1959829	■	■	"	"	"
1100921.....	"	"	"	"	"	"	"	■	■	"	"	"
1100931.....	"	"	"	"	"	"	"	■	■	"	"	"
1100932.....	"	"	"	"	"	"	"	■	■	"	"	"
1100933.....	"	"	"	"	"	"	"	■	■	"	"	"
1100939.....	"	"	"	"	"	"	"	■	■	"	"	"
1100943.....	"	"	1959381	"	"	"	"	■	■	"	"	"
1100944.....	"	"	"	"	"	"	"	■	■	"	"	"

*Serviced by 1964682 Brush Holder and Brush Assem.

Also includes Illustration No. 35.

*A General Motors Trademark.

Delco-Remy

SERVICE PARTS CATALOG

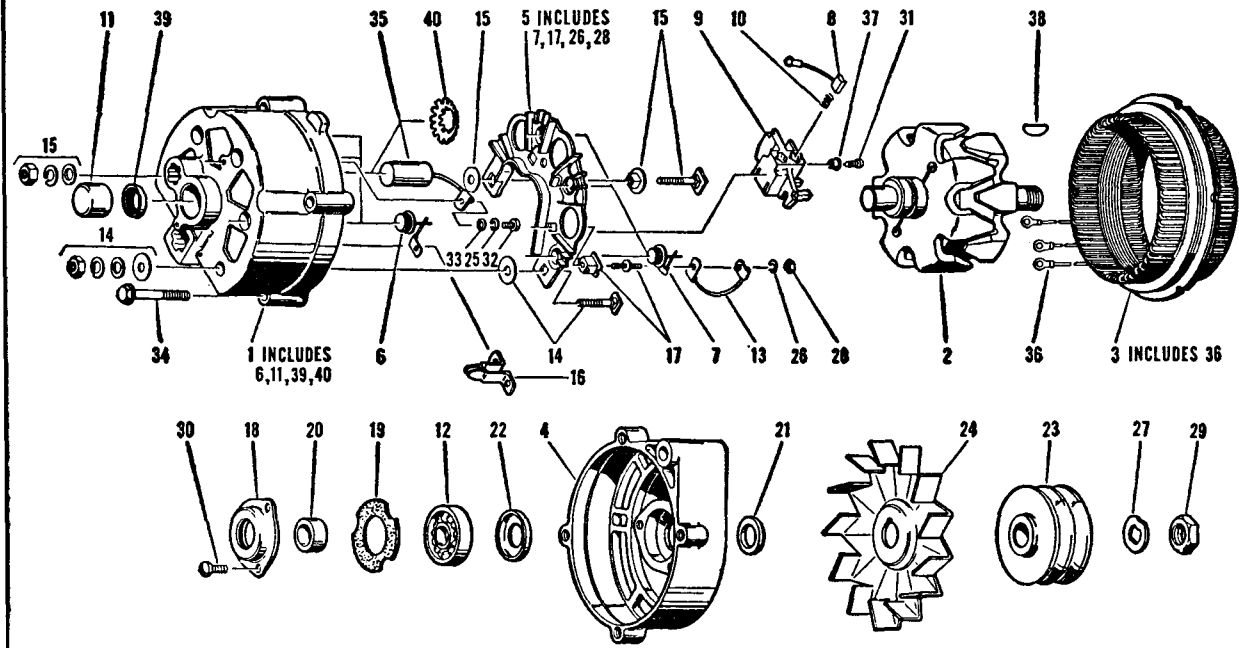 


PLATE 5094

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Lead Light Indctr.	Terminal Pkg. — Battery	Terminal Pkg. — Ground	Terminal Fld. Or. Ind. Lt.	Terminal Pkg. — Diode Junction	Brg. Retainer — Assem.	Gasket	Collar — Inside	Collar — Outside	Grease Slinger	Pulley	Fan
	13	14	15	16	17	18	19	20	21	22	23	24
1100883		1959832	1959833		1959834	1955494	1912008	1963139	1959991			
1100885		"	"		"	"	"	"	1970474	1947344	1949355	1966990
1100886		"	"		"	"	"	"	1959991	"	1939845	800594
1100888		"	"		"	"	"	"	1970474	"	1964758	1966990
1100889		"	"		"	"	"	"	"	"	1949355	
1100891		"	"		"	"	"	"	"	"	1964758	"
1100892		"	"		"	"	"	"	"	"	1966787	1966990
1100893		"	"		"	"	"	"	1959991	"	1939845	800594
1100895		"	"		"	"	"	"	"	"	1949357	1966990
1100896		"	"		"	"	"	"	1970474	"	1969431	"
1100905		"	"		"	"	"	"	"	"	1949355	"
1100906		"	"		"	"	"	"	"	"	"	"
1100907		"	"		"	"	"	"	1959991	"	1939845	800594
1100908		"	"		"	"	"	"	1970474	"	"	"
1100909		"	"		"	"	"	"	"	"	1949355	1966990
1100910		"	"		"	"	"	"	"	"	1939845	800594
1100916		"	"		"	"	"	"	1959991	"	1970830	1966990
1100917		"	"		"	"	"	"	1970474	800832	1949355	800594
1100921		"	"		"	"	"	"	1959991	1947344	1939845	"
1100931		"	"		"	"	"	"	"	800832	1969431	"
1100932		"	"		"	"	"	"	"	"	"	"
1100933		"	"		"	"	"	"	"	"	"	"
1100939		"	"		"	"	"	"	"	"	1949355	"
1100943		"	"		"	"	"	"	1970474	"	"	"
1100944		"	"		"	"	"	"	"	"	1846787	"

*A General Motors Trademark.


MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
	LOCK WASHERS		
25	Lock Washer—Spring Capacitor Terminal Screw.....	9419392	All
26	Lock Washer—Diode Junction Terminal.....	9419392	All
27	Lock Washer—Shaft Nut—D.E.....	1941978	1100883-5-6-8-9; 91-2-3-5; 905-6-7-8-9; 10; 16-17; 21; 39; 43-4
27	Lock Washer—Shaft Nut—D.E.....	1944314	1100896; 931-2-3
	NUTS		
28	Nut—Diode Junction Terminal.....	453434	All
29	Nut—Shaft D.E.....	1915172	1100883-5-6-8-9; 91-2-3-5; 905-6-7-8-9; 10; 16-17; 21; 39; 43-4
29	Nut—Shaft D.E.....	1944313	1100896; 931-2-3
	SCREWS		
30	Screw—Ball Brg. Retainer Attaching.....	1965104	All
31	Screw—Brush Holder Attaching.....	1957501	All
32	Screw—Heat Sink.....	132768	All
	WASHERS		
—	Washer—Insl. Heat Sink Screw.....	1959523	All
33	Washer—Plain—Heat Sink Screw.....	815540	All
—	Washer—Spring—Brush Holder Attaching Screw.....	9419392	All
—	Washer—Spring—Heat Sink Attaching.....	9419392	All
	MISCELLANEOUS		
34	BOLT—Thru.....	1956975	All
35	CAPACITOR.....	1959455	All
36	CLIP—Stator Lead Terminal.....	1959532	All
—	INSULATOR—Heat Sink Term. Screw.....	1959389	All
39	RETAINER (& Felt)—S.R.E.....	1959790	All except 1100883
39	RETAINER (& Felt)—S.R.E.....	1961323	1100883
40	SPRING—Capacitor Retaining.....	1960750	All

*A General Motors Trademark.

 Delco Remy SERVICE PARTS CATALOG

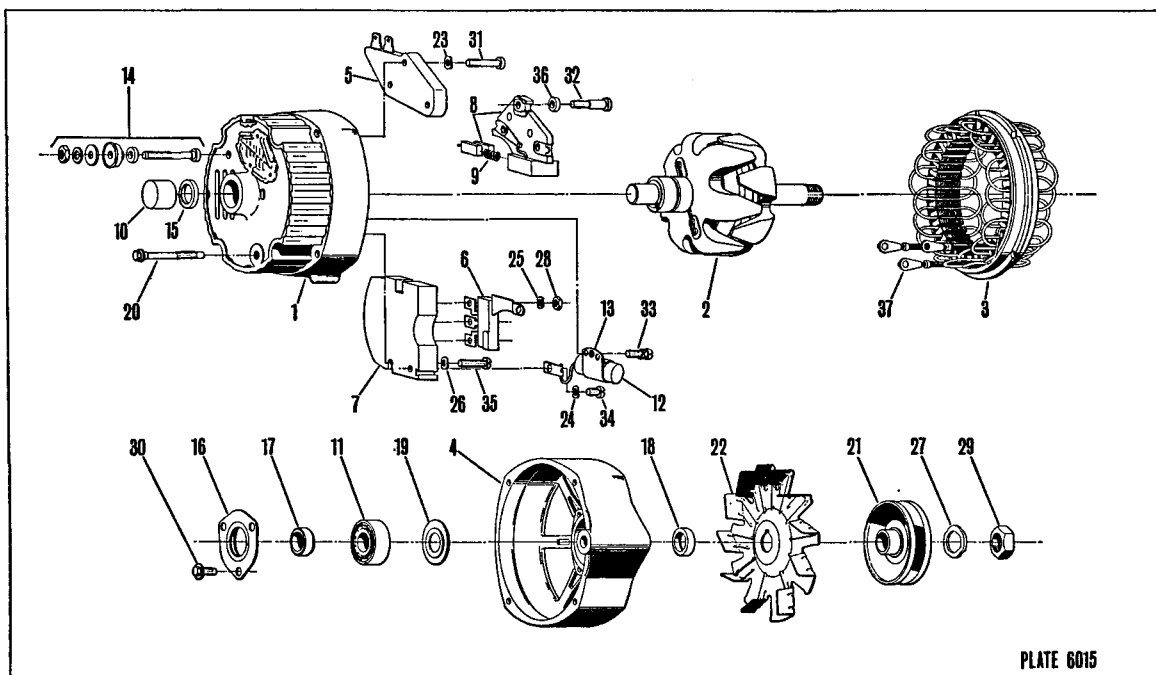

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Capacitor —	Bracket — Cap.	Term. Pkg. — Battery	Seal — Bear.	Bear. Re-tainer — Assem.	Collar — Inside	Collar — Outside	Slinger — Grease	Bolt — Thru	Pulley —	Fan —
	12	13	14	15	16	17	18	19	20	21	22
1100914.....	1971411	1869573	1971704	1961323	801506	1963139	1959991	800832	1956975	1965904	1966990
1100915.....	"	"	"	"	"	"	"	"	"	"	1959703
1100919.....	801824	"	"	"	1971993	"	1970474	"	"	1964758	1966990
1100920.....	"	"	1846900	"	"	"	"	"	"	1966787	"
1100922.....	"	"	1971704	1961323	"	"	"	"	"	1949355	1966990
1100923.....	"	"	"	"	"	"	"	"	"	"	"
1100924.....	"	"	1846900	"	"	"	1959991	"	"	1969431	800594
1100926.....	"	"	"	"	"	"	1970474	"	"	1949355	"
1100927.....	"	"	"	"	"	"	"	"	"	1949357	"
1100928.....	"	"	"	"	"	"	"	"	"	"	"
1100929.....	"	"	"	"	"	"	"	"	"	1949355	"
1100930.....	"	"	1971704	"	"	"	1959991	"	"	"	"
1100934.....	"	"	1846900	"	"	"	1970474	"	"	1949355	800594
1100935.....	"	"	"	"	"	"	1959991	"	"	"	"
1100936.....	"	"	"	"	"	"	"	"	"	1965551	"
1100937.....	"	"	"	"	"	"	"	"	"	1949355	"
1100940.....	"	"	"	"	"	"	"	"	"	"	"
1100949.....	"	"	"	"	"	"	"	"	"	"	"
1100950.....	"	"	1971704	"	"	"	"	"	"	1970831	"

* A General Motors Trademark.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used On
LOCK WASHERS			
—	Lock Washer—Ball Brg. Retainer Plate Screw -----	9419634	1100914-15
23	Lock Washer—Brush Hldr. Attach. Screw -----	9419392	All except 1100920
23	Lock Washer—Brush Holder Attach. Screw -----	1847933	1100920
25	Lock Washer—Rectifier Bridge Nut -----	9419392	All except 1100920
25	Lock Washer—Rectifier Bridge Nut -----	1847933	1100920
26	Lock Washer—Rectifier Bridge Attach. Screw -----	9419392	All except 1100920
26	Lock Washer—Rectifier Bridge Attach. Screw -----	1847933	1100920
27	Lock Washer—Shaft Nut—D.E. -----	1941978	All except 1100924
27	Lock Washer—Shaft Nut—D.E. -----	1944314	1100924
—	Lock Washer—S.R.E. Cover Screw -----	9419634	1100914-15
NUTS			
28	Nut—Rectifier Bridge -----	453434	All
29	Nut—Shaft D.E. -----	1915172	All except 1100924
29	Nut—Shaft—D.E. -----	1944313	1100924
SCREWS			
30	Screw—Ball Bearing Retainer Attach. -----	1965104	1100919; 20-2-3-4-6-7-8-9; 30-4-5-6-7; 40-9; 50
30	Screw—Ball Brg. Retainer Plate Attach. -----	9411396	1100914-15
31	Screw—Brush Holder Attach. (Grd.) -----	1971519	All
32	Screw (Insulated)—Brush Holder Attach. -----	1971518	1100914-15-19; 20-2-3-4-6-7-8; 30
32	Screw—Brush Holder Attach (Insul.) -----	1846864	1100920-9; 37; 40-9; 50
33	Screw (& Lock Washer)—Capacitor Bracket Attach. -----	453849	All except 1100920
33	Screw (& Lock Washer) Capacitor Bracket -----	454430	1100920
35	Screw—Rectifier Bridge Attach. -----	436698	All
—	Screw—S.R.E. Cover -----	9431903	1100914-15
WASHERS			
—	Washer—Batt. Terminal—Neoprene Sponge -----	801495	1100914-15
36	Washer—Brush Holder Insul. Screw -----	1970149	1100914-15-19; 22-3-4-6-7-8; 30-4-5-6; 50
MISCELLANEOUS			
—	CLIP—Regulator Terminal Shorting -----	801493	1100914-15
—	CLIP—Ground Screw -----	801591	1100914-15
37	CLIP—Stator Lead -----	1959532	All
—	COVER ASSEM.—S.R.E. -----	801489	1100914-15
—	GASKET—D.E. Screen Assem. -----*	—	1100914-15
—	SCREEN ASSEM. -----	1851176	1100914-15
—	SCREEN—S.R.E. Cover -----	801859	1100914-15

* Service with Screen Assem. 1851176.

* A General Motors Trademark.

Parts not listed in this Catalog will not be sold separately.

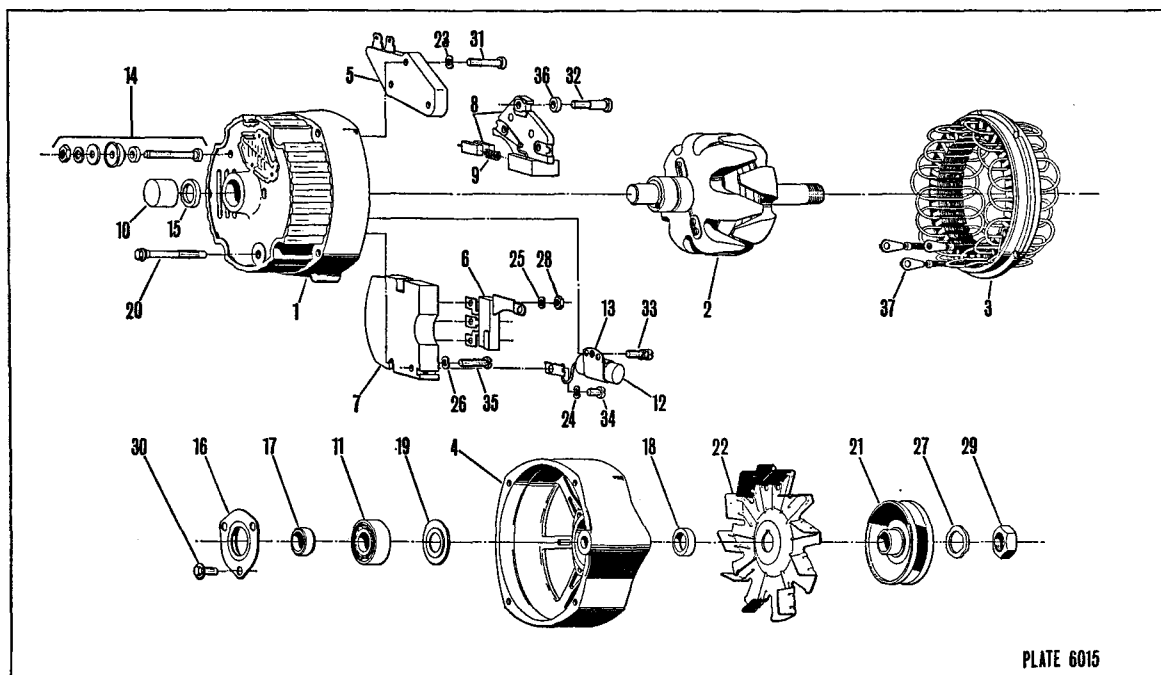 


PLATE 6015

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.


Model No.	*Frame — S.R.E.	Rotor — Assem.	^Δ Stator — Assem.	Frame — D.E.	Regu- lator —	Diode — Trio	Recti- fier — Bridge	[□] Brush & Holder — Assem.	Spring — Brush	Bearing — S.R.E.	Bearing — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1101015.....	801813	801792	801818	801806	1116387	801817	801816	801466	1964117	7451763	907998
1101018.....	"	"	"	"	"	"	"	"	"	"	"
1101019.....	"	"	"	"	"	"	"	"	"	"	"

[□]Includes Illus. 9.

^{*}Includes Illus. 10 & 15.

^ΔIncludes Illus. 37.

 * A General Motors Trademark.

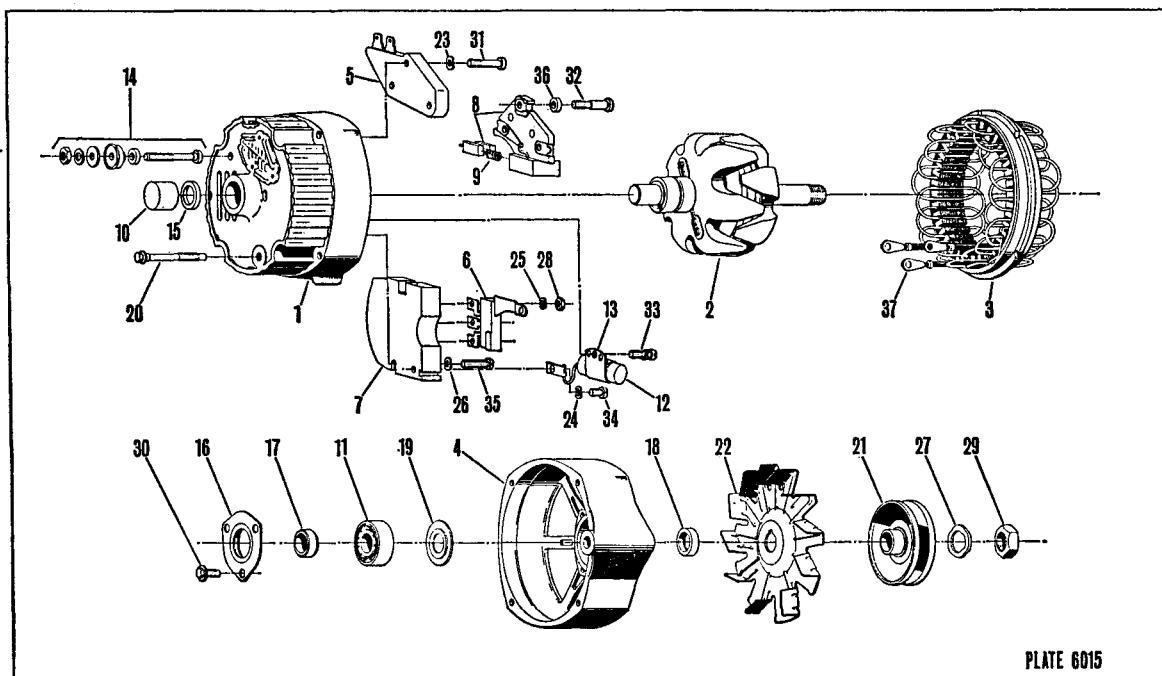

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Capac- itor —	Bracket — Cap.	Term. Pkg. — Battery	Seal — Bear.	Bear. Re- tain- er — Assem.	Collar — Inside	Collar — Outside	Slinger — Grease	Bolt — Thru	Pulley —	Fan —
	12	13	14	15	16	17	18	19	20	21	22
1101015.....	801824	1869573	1846901	1961323	1971993	1963139	1959991	800832	801810	1949357	801808
1101018.....	"	"	"	"	"	"	"	"	"	1970830	"
1101019.....	"	"	"	"	"	"	"	"	"	—	—

* A General Motors Trademark.

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used On
LOCK WASHERS			
23	Lock Washer—Brush Hldr. Attach. Screw -----	9419392	1101015-18-19
25	Lock Washer—Rectifier Bridge Nut -----	9419392	1101015-18-19
26	Lock Washer—Rectifier Bridge Attach. Screw ----	9419392	1101015-18-19
27	Lock Washer—Shaft Nut—D.E. -----	1941978	1101015-18-19
NUTS			
28	Nut—Rectifier Bridge -----	453434	1101015-18-19
29	Nut—Shaft D.E. -----	1915172	1101015-18-19
SCREWS			
30	Screw—Ball Bearing Retainer Attach. -----	1965104	1101015-18-19
—	Screw—Batt. Term. Connector -----	9422873	1101015-18-19
31	Screw—Brush Holder Attach. -----	1971519	1101015-18-19
32	Screw—Brush Holder Attach. (Insulated) -----	1846864	1101018-19
32	Screw (Insulated)—Brush Holder Attach. -----	1971518	1101015
33	Screw (& Lock Washer)—Capacitor Bracket Attach. -----	453849	1101015-18-19
35	Screw—Rectifier Bridge Attach. -----	436698	1101015-18-19
WASHERS			
36	Washer—Brush Holder Insul. Screw -----	1970149	1101015
—	Washer—Spring—Batt. Term. Connector Screw ----	9419392	1101015-18-19
MISCELLANEOUS			
—	BUSHING—S.R.E. Mtg. Hinge -----	1846578	1101015-18-19
37	CLIP—Stator Lead -----	801828	1101015-18-19
—	CONNECTOR—Batt. Term to Rect. Bridge -----	801815	1101015-18-19

* A General Motors Trademark.

Revised to July 1, 1968

 SERVICE PARTS CATALOG

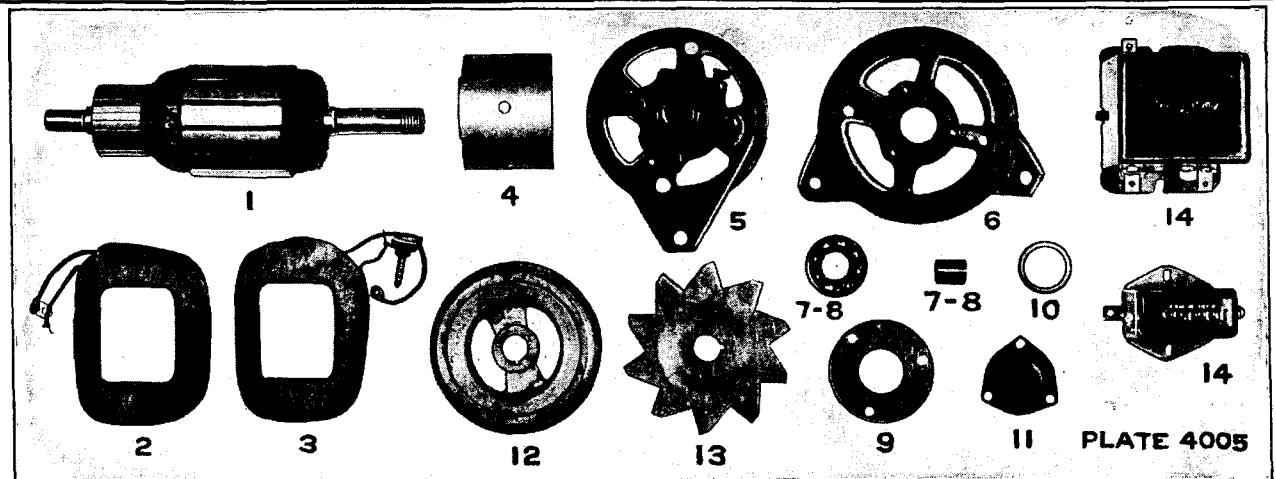

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Arma- ture	Field Coil R.H.	Field Coil L.H.	Pole Shoe	Commu- tator End Frame	Drive End Frame	Bushing or Ball Bearing C.E.	Bushing or Ball Bearing D.E.	Ball Bearing Re- tainer Plate D.E.	Felt Washer Re- tainer Plate D.E.	Commu- tator End Cover Plate	Pulley	Fan	Relay or Control Unit
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1101051	1871826	*1869430		1878172	1878689	1866730	812823	954378	1911263	819104	1914222	1868324	1866400	†
1101052	"	"		"	1882744	1868286	"	"	"	"	"	*1924619	"	†
1101053	"	"		"	"	"	"	"	"	"	"	1868367	"	†
1101054	"	"		"	1878689	1866730	"	"	"	"	"	1868074	"	†
1101055	"	"		"	1882744	1868286	"	"	"	"	"	1866403	"	†
1101056	"	"		"	1878689	1866730	"	"	"	"	"	1873849	"	†
1101057	Same parts as 1101052													
52-U	Same parts as 1101052													

*Field Coil Set.

†See Index for Model No.—Not part of Generator.


*Use 1871591 Pulley for Slow Speed City Service.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer Plate Screw.....	1962276	1101051-2-3-4-5-6
Lock Washer—Brush Plate Attaching Screw.....	453844	1101051-2-3-4-5-6
Lock Washer—Brush Lead Attaching Screw.....	1914816	1101051-2-3-4-5-6
Lock Washer—Control Unit Ground Lead Screw.....	9421423	1101051-2-3-4-5
Lock Washer—Commutator End Cover Plate.....	453844	1101051-2-3-4-5-6
Lock Washer—Field Frame Screw.....	9421423	1101056
Lock Washer—Shaft Nut—D.E.....	1913696	1101051-6
Lock Washer—Shaft Nut—D.E.....	1915265	1101051-2-3-4-5
Lock Washer—Terminal Stud.....	1914579	1101051-2-3-4-5-6
Lock Washer—Thru Bolt.....	9421424	1101051-2-3-4-5-6
NUTS		
Nut—Shaft—D.E.....	1915172	1101051-2-3-4-5-6
Nut—Terminal Stud.....	121743	1101051-2-3-4-5-6
SCREWS		
Screw—Ball Bearing Plate—D.E.....	1914580	1101051-2-3-4-5-6
Screw—Brush Plate Attaching.....	1888975	1101051-2-3-4-5-6
Screw—Brush Lead Attaching.....	141542	1101051-2-3-4-5-6
Screw—Commutator End Cover Plate.....	1888975	1101051-2-3-4-5-6
Screw—Control Unit Ground.....	132243	1101051-2-3-4-5
Screw—In Field Frame.....	132243	1101051-6
Screw—Pole Shoe.....	1913960	1101051-2-3-4-5-6

 Delco-Remy
SERVICE PARTS CATALOG

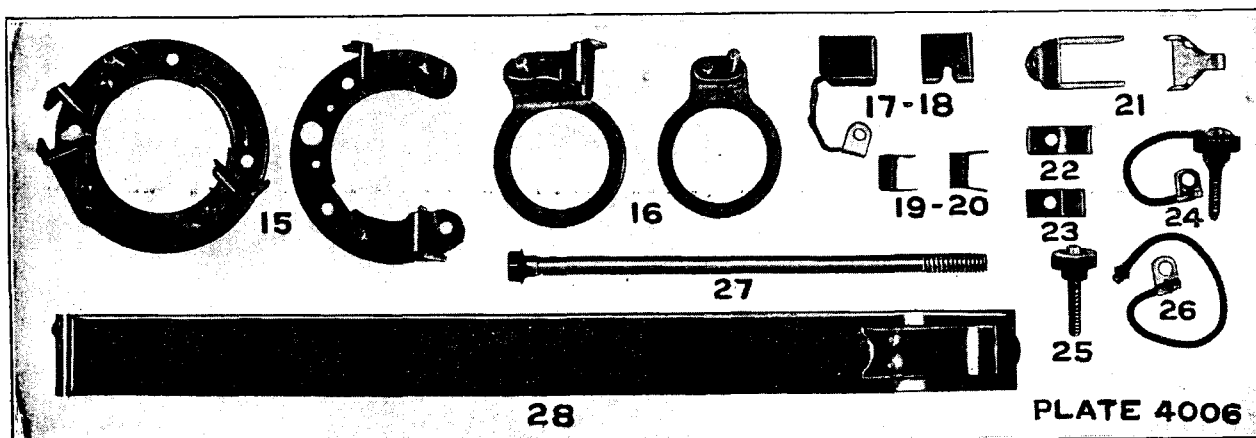

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Main Brush Plate	Third Brush Plate	Main Brush	Third Brush	Main Brush Spring R.H. Ins.	Third Brush Spring L.H. Gr.	Third Brush Plate Clamp Upper	Third Brush Plate Clamp Spring	Brush Holder or Arm	Terminal Stud and Lead	Terminal Stud Only	Relay Lead	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
1101051	1871806		1866148	1906940	1903871	1946798			1904365	1858754	1858749		1908680	816340
1101052	"		"	"	"	"			"	"	"		"	"
1101053	"		"	"	"	"			"	"	"		"	"
1101054	"		"	"	"	"			"	"	"		"	"
1101055	"		"	"	"	"			"	"	"		"	"
1101056	"		"	"	"	"			"		"		"	x


*For units requiring Air Scoop, discard standard Cover Band (816340) and use 1874740 Cover Band (Front) and 1874741 (Rear).
For complete Brush Set order Part No. 1857963.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
WASHER		
Washer—Brush Arm Space.....	1857412	1101051-2-3-4-5-6
Washer—Felt—D.E.....	809961	1101051-2-3-4-5-6
Washer—Space—Inside—D.E.....	809945	1101051-2-3-4-5-6
Washer—Terminal Stud—Ins.....	1858753	1101051-2-3-4-5-6
Washer—Terminal Stud—Plain.....	826319	1101051-2-3-4-5-6
MISCELLANEOUS		
COLLAR—Outside—D.E.....	1858603	1101051-2-3-4-5-6
Dowel PIN—D.E.....	809593	1101051-2-3-4-5-6
Dowel PIN—C.E.....	809062	1101051-2-3-4-5-6
GASKET—Ball Bearing Retainer Plate—D.E.....	1912008	1101051-2-3-4-5-6
GASKET—End Cover Plate—C.E.....	817220	1101051-2-3-4-5-6
OILER—D.E.....	125609	1101051-2-3-4-5-6
OILER—C.E.....	113702	1101051-2-3-4-5-6
Oil WICK—C.E.....	1947350	1101051-2-3-4-5-6
Oil Hole PLUG—C.E.....	816315	1101051-2-3-4-5-6
Terminal CLIP—to 3rd Brush.....	200144	1101051-2-3-4-5
Terminal CLIP—to Main Brush.....	200182	1101051-2-3-4-5-6
Wiring Harness CLAMP.....	1860459	1101052-3-5
Woodruff KEY—D.E.....	124545	1101051-2-3-4-5-6

 Parts not listed in this catalog will not be sold separately.

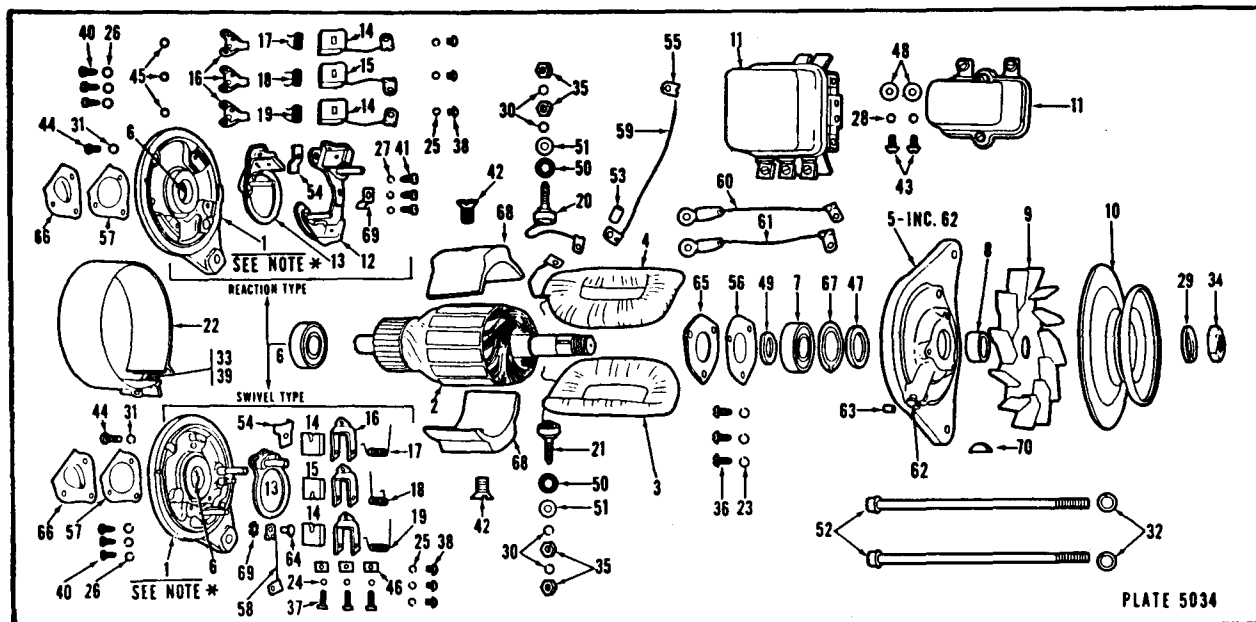

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	* Frame C.E.	Armature	▲ Field Coil L.H.	Field Coil R.H.	Frame D.E.	Bushing or Ball Bearing C.E.	Ball Bearing D.E.	Collar Outside D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1101351	1908871	1841027	1902102		817228	812823	954378	817224		1859798	270-C
1101352	1864662	1868759	1902101		1859579						†5839
1101353	1908871	1841027	1902102		817223	"	"	"			*5540
1101354	"	"	"		1908869	"	"	"			270-C
1101355	"	1873054	"		†1873830	"	"	"			*1116766
1101356	"	1841027	"		817223	"	"	"			*1116809
1101357	"	"	"		†1873830	"	"	"		1880895	"
1101358	"	1873054	"		"	"	"	"			"
1101359	1853830	1841027	"		817223	"	"	"			"
1101360	1859961	1854856	"		1910404	"	"	1858603			265-H
1101361	1879153	1873534	"		1841472	"	954521	1836194			265-G
1101362	1910918	"	"		"	"	"	"			"
1101363	1908871	1841027	"		1873830	"	954378	817224			270-C
1101364	1878706	"	"		1908869	"	"	"			"
1101365	822652	"	"		817223	"	"	"			"
1101366	1908871	"	"		†1873830	"	"	"			"
1101367	"	"	"		817223	"	"	"		1947813	*5851
1101368	1879202	"	"		1886920	"	"	"			"
1101369	1908871	1873054	"		†1873830	"	"	"			†5839
1101370	822652	1841027	"		817223	"	"	"			*5851
1101371	1882356	"	"		1882358	"	"	"			*1116809
1101372	1908871	1883074	"		1841472	"	954521	1836194			*5851
1101373	1908871	1841027	"		1873830	"	954378	817224		1880895	"
1101374	"	"	"		817223	"	"	"		1883223	*5889
1101375	1883279	1883276	"		"	908503	"	"		1947813	*5851
1101376	1879153	1883685	"		1841472	812823	954521	1836194			"
1101377	1882356	1841027	"		1882358	"	954378	817224			†5839
1101378	1908871	"	"		†1873830	"	"	"			*1116809
1101379	"	"	"		"	"	"	"			*5851
1101380	1885064	1885061	"		817223	908503	"	"		1947813	"

*For parts see Regulator—Group 3.

†For parts see Regulator—Group 4.

*For parts see Regulator—Group 5.

 
*C.E. Frame includes where necessary: Bushing, Oiler, Oil Wick, Oil Hole Plug, Dowel Pin & Brush Pins.

†When Drive End Frame with two Oilers is used 1874929 Felt Washer Retainer Plate with two oil passages must also be used.

*For parts see Miscellaneous Relay—Group 4.

†Field Coil Set (2 coils).

Delco-Remy SERVICE PARTS CATALOG

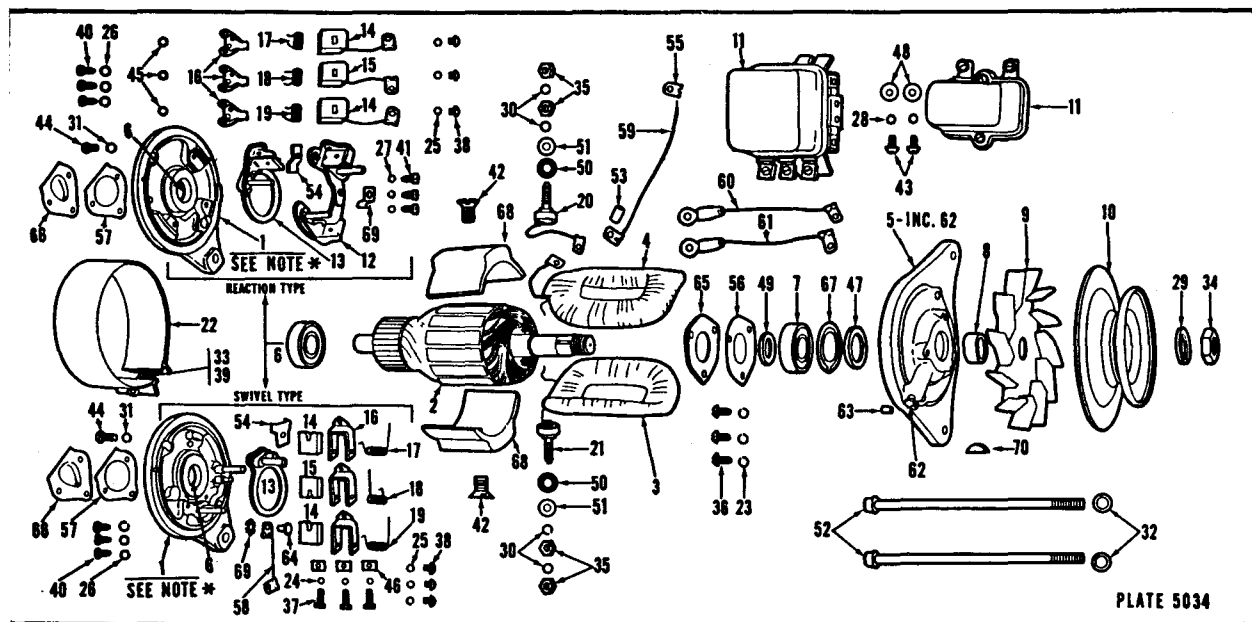

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

	Brush Plate — Main	Brush Plate — 3rd	Brush — Main	Brush — 3rd	Arm or Holder Brush	Spring — R.H. — Main	Spring — 3rd	Spring — L.H. — Main	Terminal Stud & Lead	Terminal Stud Only	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1101351.....		809698	820517	820517	809642	809658	809644	809644	1858754	1858749	1872638
1101352.....		"	"	"	"	"	"	"	"	"	"
1101353.....		"	"	"	"	"	"	"	"	"	"
1101354.....		"	"	"	"	"	"	"	"	"	"
1101355.....		"	"	"	"	"	"	"	"	"	"
1101356.....		"	"	"	"	"	"	"	"	"	"
1101357.....		"	"	"	"	"	"	"	"	"	"
1101358.....		"	"	"	"	"	"	"	"	"	"
1101359.....	1908550	1909151	^1906984	^1906940	1904365	1903871	1946798	1903871	"	"	"
1101360.....		809698	820517	820517	809642	809658	809644	809644			1861502
1101361.....	1908550	1850763	^1906984	^1906940	1904365	1903871	1946798	1903871			"
1101362.....	1908999	1910916	"	"	"	1916324	1903870	1856992			"
1101363.....		809698	"	"	809642	809658	809644	809644	1858754	1858749	1872638
1101364.....			820517	820517	"	"	"	"	"	"	"
1101365.....		809936	"	"	"	"	809658	"	"	"	"
1101366.....		809698	"	"	"	"	809644	"	"	"	"
1101367.....		"	820517	820517	"	"	"	"	"	"	"
1101368.....	1908999	1910916	^1906984	^1906940	1904365	1916324	1903870	1856992	"	"	"
1101369.....		809698	"	"	809642	809658	809644	809644	"	"	"
1101370.....		809936	"	"	"	"	809658	"	"	"	"
1101371.....		809698	"	"	"	"	809644	"	"	"	"
1101372.....		"	820517	820517	"	"	"	"			1861502
1101373.....		"	"	"	"	"	"	"	1858754	1858749	1872638
1101374.....		"	820517	820517	"	"	"	"	"	"	"
1101375.....		"	"	"	"	"	"	"	"	"	"
1101376.....	1908550	1909151	^1906984	^1906940	1904365	1903871	1946798	1903871	"	"	"
1101377.....		809698	"	"	809642	809658	809644	809644	"	"	"
1101378.....		"	"	"	"	"	"	"	"	"	"
1101379.....		"	"	"	"	"	"	"	"	"	"
1101380.....		"	820517	820517	"	"	"	"	"	"	"

^For complete Brush Set order Part No. 1857963.

°For complete Brush Set order Part No. 1880998.

Revised to September 1, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.....	1962276	1101351-2-3-4-5-6-7-8-9; 60-1-3-4-5-6-7-8-9; 70-1-3-4-5-7-8-9; 80
23	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.....	453435	1101362; 72
24	Lock Washer—Brush Attaching Screw.....	456413	1101351-2-3-4-5-6-7-8; 60-3-4-5-6-7-9; 70-1-2-3-4-5-7-8-9; 80
....	Lock Washer—Brush Ground Lead Screw.....	453844	1101352; 65; 70
25	Lock Washer—Brush Lead Attaching Screw.....	1914816	All
26	Lock Washer—Cover Plate Screw—C.E.....	453844	1101351-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-6-7-8-9
26	Lock Washer—Cover Plate Screw—C.E.....	1962276	1101375; 80
....	Lock Washer—Field Lead Ground Screw.....	453844	1101359; 60-1-2
27	Lock Washer—Main Brush Plate Attaching Screw.....	453844	1101359; 61-2-8; 76
28	Lock Washer—Regulator Attaching Screw.....	138479	1101352-3; 67-9; 70-2-3-4-5-8; 80
28	Lock Washer—Relay Attaching Screw.....	453844	1101351-4-6-7; 60-1-2-3-4-5-6; 71-7-9
28	Lock Washer—Relay Attaching Screw.....	138479	1101355
29	Lock Washer—Shaft Nut—D.E.....	1915265	1101351-3-4-5-7-8-9; 60-3-4-5-6-7-8-9; 70-1-3-4-5-7-8-9; 80
30	Lock Washer—Terminal Stud Nut.....	1914579	1101351-2-3-4-5-6-7-8-9; 63-4-5-6-7-8-9; 70-1-3-4-5-6-7-8-9; 80
31	Lock Washer—Third Brush Plate Clamp Screw.....	453435	All
32	Lock Washer—Thru Bolt.....	9421424	All
NUTS			
33	Nut—Cover Band Screw.....	453433	All except 1101360-1-2; 72
34	Nut—Shaft—D.E.....	1915172	1101351-3-4-6-7-9; 60-3-4-5-6-7-8; 70-1-3-4-5-7-8-9; 80
34	Nut—Shaft—D.E. ($\frac{1}{4}$ -20x $\frac{1}{4}$ Slotted).....	1917570	1101352-5-8; 61-2-9; 76
34	Nut—Shaft—D.E. ($\frac{1}{4}$ -20x $\frac{1}{4}$ Hex. hd.).....	1914308	1101355-8; 69
34	Nut—Shaft—D.E.....	1841367	1101372
35	Nut—Terminal Stud.....	121743	1101351-2-3-4-5-6-8-9; 63-4-5-6-7-8-9; 70-1-3-4-5-6-7-8-9; 80
SCREWS			
36	Screw—Ball Bearing Retainer Plate.....	1914580	All
37	Screw—Brush Attaching.....	453986	All except 1101359; 61-2
....	Screw—Brush Ground Lead.....	453418	1101352; 65; 70
38	Screw—Brush Lead Attaching.....	453978	1101351-2-3-4-5-6-7-8; 60-3-4-5-6-7-8-9; 70-1-2-3-4-5-7-8-9; 80
38	Screw—Brush Lead Attaching.....	453460	1101359; 61-2; 76
39	Screw—Cover Band.....	132143	All except 1101360-1-2; 72
40	Screw—Cover Plate—C.E.....	1914580	1101375; 80
40	Screw—Cover Plate—C.E.....	454408	All except 1101375; 80
....	Screw—Field Lead Ground.....	453418	1101359; 60-1-2
41	Screw—Main Brush Plate Attaching.....	454408	1101359; 61-2-8; 76
42	Screw—Pole Shoe.....	1913960	All
43	Screw—Regulator Mounting.....	132900	1101352-3; 67-9; 70-2-3-4-5-8; 80
43	Screw—Relay Mounting.....	453418	1101351-4-6-7; 60-1-2-3-4-5-6; 71-9
43	Screw—Relay Mounting.....	132900	1101355
43	Screw—Relay Mounting.....	121831	1101377
44	Screw—Third Brush Plate Clamp.....	1915806	1101359; 61-2
44	Screw—Third Brush Plate Clamp.....	9416183	1101351-2-3-4-5-6-7-8; 63-4-5-6-7-9; 70-1-2-3-4-5-7-8-9; 80
44	Screw—Third Brush Plate Clamp.....	142729	1101360
44	Screw—Third Brush Plate Clamp.....	1858119	1101368
44	Screw—Third Brush Plate Clamp.....	453464	1101376
WASHERS			
45	Washer—Brush Arm—Space.....	1857412	1101359; 61-2-8; 76
46	Washer—Brush Attaching Screw.....	809551	1101351-2-3-4-5-6-7-8; 60-3-4-5-6-7-9; 70-2-3-4-5-7-8-9; 80
47	Washer—Felt—D.E.....	809961	1101351-2-3-4-5-6-7-8-9; 60-3-4-5-6-7-8-9; 70-1-3-4-5-7-8-9; 80
47	Washer—Felt—D.E.....	820706	1101361-2; 72-6
48	Washer—Regulator Mounting Screw.....	1856056	1101352-3; 67-9; 74-5-8; 80
48	Washer—Relay Mounting Screw.....	1856056	1101355-7-9; 70-2-3
....	Washer—Shaft Nut—D.E.....	30205	1101352-5-8; 61-2-9; 76
49	Washer—Space—Inside—D.E.....	809945	1101351-4-5-6-7-8-9; 60-3-4-5-6-7-8-9; 70-1-3-4-5-7-8-9; 80
49	Washer—Space—Inside—D.E.....	822644	1101361-2; 72-6
50	Washer—Terminal Stud Insulation.....	1858753	1101351-3-4-5-6-7-8-9; 63-4-5-6-7-8-9; 70-1-3-4-5-6-7-8-9; 80
50	Washer—Terminal Stud Insulation.....	1868032	1101352
51	Washer—Terminal Stud Plain.....	826319	1101351-3-4-5-6-7-8-9; 63-4-5-6-7-8-9; 70-1-3-4-5-6-7-8-9; 80


Parts not listed in this catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS		
52	BAFFLE—Oil—D.E.	1838047	1101361-2
52	BOLT—Thru.	1908680	All except 1101361-2; 72-6
52	BOLT—Thru.	1915090	1101361-2; 72-6
53	BUSHING—Relay Lead	812891	1101360-1-2; 72
54	CLAMP—Third Brush Plate	817532	1101351-2-3-4-5-6-7-8; 60-3-4-5-6-7-9; 70-1-2-3-4-5-7-8-9; 80
54	CLAMP—Third Brush Plate	1850770	1101359; 61-2-8; 76
54	CLIP—Terminal—To Brush	200182	All
54	CLIP—Terminal—Field Lead to Ground	200144	1101360
55	CLIP—Terminal—To Regulator	200191	1101372
55	CLIP—Terminal—To Relay	200154	1101360-1-2
55	COLLAR—Inside—C.E.	811681	1101375; 80
56	GASKET—Ball Bearing Retainer Plate—D.E.	1912008	1101351-2-3-4-5-6-7-8-9; 60-3-4-5-6-7-8-9; 70-1-3-4-5-7-8-9; 80
56	GASKET—Ball Bearing Retainer Plate—D.E.	820708	1101361-2; 72-6
57	GASKET—Cover Plate—C.E.	817220	All
58	LEAD—Brush Ground	809688	1101351-2-3-4-5-6-8; 60-3-4-5-6-7-9; 70-1-2-3-4-5-7-8-9; 80
59	LEAD—Relay	812004	1101360
59	LEAD—Relay	1856609	1101361; 72
59	LEAD—Relay	1878251	1101362
60	LEAD—"A" Terminal to Regulator or Relay	1868761	1101352
60	LEAD—"A" Terminal to Regulator or Relay	1914192	1101353-5-7; 65; 79
60	LEAD—"A" Terminal to Regulator or Relay	1872088	1101370
60	LEAD—"A" Terminal to Regulator or Relay	1914187	1101351-4-6; 63-4; 71
60	LEAD—"A" Terminal to Regulator or Relay	1911485	1101355; 67-9; 73-4-5-8; 80
61	LEAD—"F" Terminal to Regulator or Relay	1914187	1101351-2-3-4; 73
61	LEAD—"F" Terminal to Regulator or Relay	1872661	1101370
61	LEAD—"F" Terminal to Regulator or Relay	1914192	1101355; 67-9; 74-5-8; 80
62	OILER—C.E.	113702	All
62	OILER—D.E.	113702	1101351-2-3-4-6-9; 61-2-4-5-7-8; 70-1-2-3-4-5-6-7; 80
62	OILER—D.E.	125609	1101355-7-8; 60-3-6-9; 73-8-9
62	PIN—Brush Holder Hinge	817313	1101351-2-3-4-5-6-7-8; 60-3-4-6-7-9; 71-2-3-4-5-7-8-9; 80
62	PIN—Brush Holder Stop	817314	1101351-2-3-4-5-6-7-8; 60-3-4-6-7-9; 71-2-3-4-5-7-8-9; 80
62	PIN (& Insulation)—Brush Holder Hinge	812016	1101351-2-3-4-5-6-7-8; 60-3-4-5-6-7-9; 70-1-2-3-4-5-7-8-9; 80
62	PIN (& Insulation)—Brush Holder Stop	812015	1101351-2-3-4-5-6-7-8; 60-3-4-5-6-7-9; 70-1-2-3-4-5-7-8-9; 80
63	PIN—Dowel—C.E.	809062	All
63	PIN—Dowel—D.E.	809593	All
64	PIN—Third Brush Plate Tension Spring	809614	1101351-2-3-4-5-6-7-8; 60-3-4-5-6-7-9; 70-1-2-3-4-5-7-8-9; 80
64	PIN—Third Brush Plate Stop	1840738	1101352-5-8; 64-9; 78
65	PLATE—Ball Bearing Retainer—D.E.	1911263	All except 1101361-2; 72-6
65	PLATE—Ball Bearing Retainer—D.E.	820707	1101361-2; 72-6
66	PLATE—End Cover—C.E.	1914222	All except 1101375; 80
66	PLATE—End Cover—C.E.	1859796	1101375; 80
67	PLATE—Felt Retainer—D.E.	819104	All except 1101361-2; 72-6
67	PLATE—Felt Retainer—D.E.	820709	1101361-2; 72-6
67	PLUG—Oil Hole—C.E.	816315	All except 1101375; 80
68	SHOE—Pole	816331	All
69	SPRING—Third Brush Plate Tension	1850771	1101359; 61-2-8; 76
69	SPRING—Third Brush Plate Tension	809824	1101351-2-3-4-5-6-7-8; 60-3-4-5-6-7-9; 70-1-2-3-4-5-7-8-9; 80
70	WICK—Oil—C.E.	1947350	All except 1101375; 80
70	Woodruff KEY—D.E.	124545	1101351-2-3-4-5-6-7-8-9; 60-3-4-6-7-8-9; 70-1-3-4-5-7-8-9; 80
70	Woodruff KEY—D.E.	124548	1101361-2; 72-6

Revised to April 1, 1968

 SERVICE PARTS CATALOG

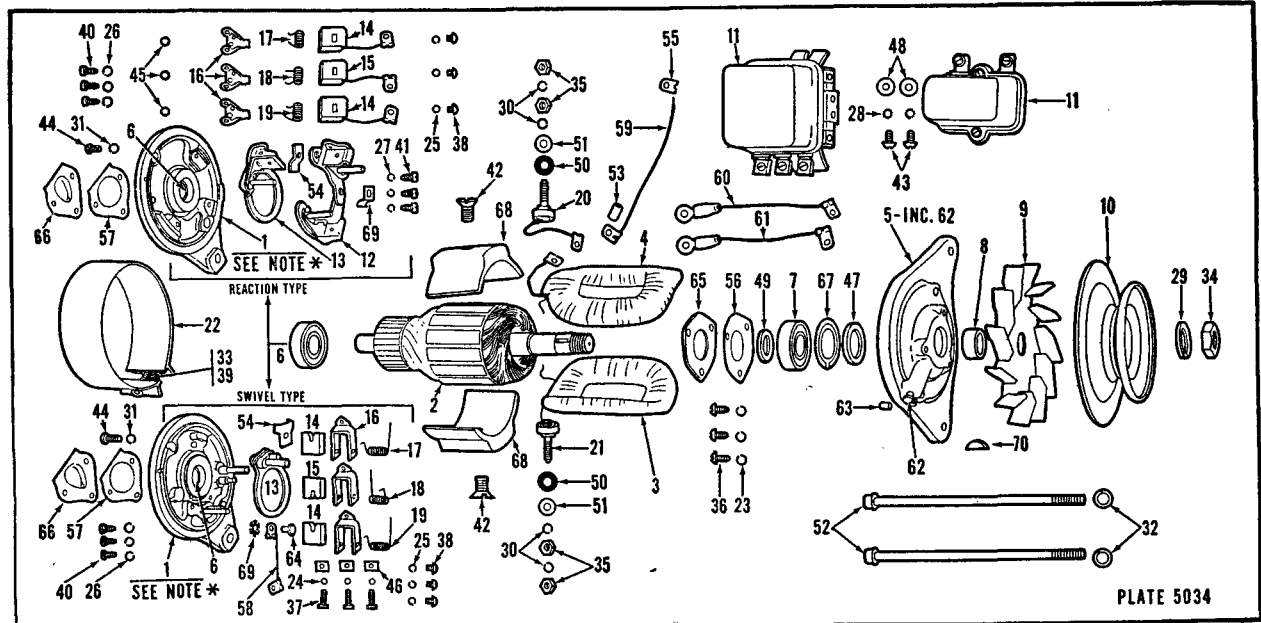

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section

Model	Frame C. E. *	Arma- ture	Coil Field L. H.	Coil Field R. H.	Frame D. E.	Bushing or Ball Bearing C. E.	Ball Bearing D. E.	Collar Outside D. E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1101381	1908871	1841027	*1902102		817223	812823	954378	817224			x 5851
1101382	"	"	"		1873830	"	"	"			x 5893
1101383	"	1924971	"		1874338	"	"	1874339			x 5839
1101384	"	1841027	"		†1873830	"	"	817224			x 5894
1101385	"	"	"		817223	"	"	"			†1116809
1101386	"	"	"		†1873830	"	"	"			x 5851
1101387	"	"	"		817879	"	"	"			x 5889
1101388	"	"	"		817223	"	"	"			†1118265
1101390	1882356	"	*1909070		1882358	"	"	"			"
1101391	1908871	"	"		1855960	"	"	"			"
1101392	"	1883074	*1902102		1841472	"	954521	"			x 5851
1101393	"	1841027	*1909070		1855960	"	954378	817224			†1118305
1101397	"	"	"		1908869	"	"	"			x 5851
1101398	"	"	"		1838678	"	"	"			x 5894
1101399	1853830	"	*1902102		817223	"	"	"			"
1101400	1850145	1849419	"		1842981	"	954521	□1839007			†1118305
1101401	1908871	1841027	*1909070		817223	"	954378	817224			x 5851
1101402	"	"	*1902102		"	"	"	"			x 5894
1101403	"	"	"		"	"	"	"			"
1101404	"	"	*1909070		1912438	"	"	"		1912440	"
1101406	"	"	+ "		817223	"	"	"			†1118305
1101408	"	1883074	*1913554		1841472	"	954521	"			x 5851
1101409	1853830	1841027	"		817223	"	954378	817224			"
1101411	1908871	"	"		1838678	"	"	"			*1118790
1101413	"	"	+ "		†1873830	"	"	"		1880895	†1116809
1101414	"	"	"		"	"	"	"		"	x 5851
1101415	"	"	"		"	"	"	"		"	†1116809
1101416	"	"	"		"	"	"	"		"	x 5894
1101417	"	1883074	*1918063		1841472	"	954521	"		"	x 5851
1101418	1853830	1841027	*1913554		817223	"	954378	817224		"	"

*C. E. Frame includes where necessary: Bushing, oiler, oil wick, oil hole plug, dowel pin & Brush pins.

□Use 1842892 between oil baffle & gear

*Field Coil Set (2 coils).

•For parts see Regulator—Group 4.

xFor parts see Regulator—Group 5.

•For parts see Relay—Group 4.

 
†When Drive End Frame with two Oilers is used, also use 1874929 Felt Washer Retainer Plate.

†For parts see Regulator—Group 6-A.

•For parts see Regulator—Group 6-C.

*For parts see Regulator—Group 6-F.

Delco-Remy SERVICE PARTS CATALOG

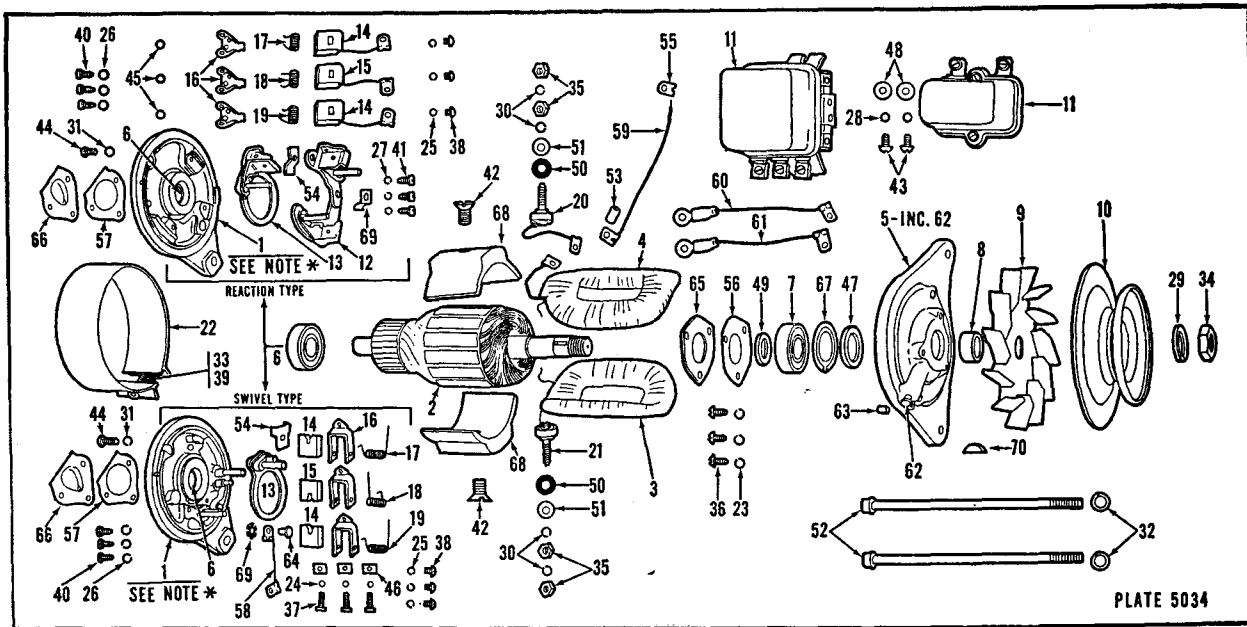

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Brush Plate Main	Brush Plate 3rd	Brush Main	Brush 3rd	Arm or Holder Brush	Spring R. H. Main	Spring 3rd	Spring L. H. Main	Terminal Stud & Lead	Terminal Stud Only	Band Cover
	12	13	14	15	16	17	18	19	20	21	22
1101381		809698	820517	820517	809642	809658	809644	809644	1858754	1858749	1872638
1101382		"	"	"	"	"	"	"	"	"	"
1101383		"	"	"	"	"	"	"	"	"	"
1101384		"	"	"	"	"	"	"	"	"	"
1101385		"	"	"	"	"	"	"	"	"	"
1101386		"	"	"	"	"	"	"	"	"	"
1101387		"	"	"	"	"	"	"	"	"	"
1101388		"	820517	820517	"	"	"	"	"	"	"
1101390		"	"	"	"	"	"	"	"	"	"
1101391		"	"	"	"	"	"	"	"	"	"
1101392		"	820517	820517	"	"	"	"	"	"	"
1101393		"	"	"	"	"	"	"	1858754	1858749	"
1101397		"	"	"	"	"	"	"	"	"	"
1101398		"	"	"	"	"	"	"	"	"	"
1101399	1908550	1909151	▲1866148	▲1906940	1904365	1903871	1946798	1903871	"	"	"
1101400		809698	820517	820517	809642	809658	809644	809644	"	"	1861502
1101401		"	"	"	"	"	"	"	"	"	1872638
1101402		"	"	"	"	"	"	"	"	"	"
1101403		"	"	"	"	"	"	"	"	"	"
1101404		"	"	"	"	"	"	"	"	"	"
1101406		"	"	"	"	"	"	"	"	"	"
1101408		"	820517	820517	"	"	"	"	"	"	"
1101409	1908550	1909151	▲1866148	▲1906940	1904365	1903871	1946798	1903871	"	"	"
1101411		809698	"	"	809642	809658	809644	809644	1858754	1858749	"
1101413		"	"	"	"	"	"	"	"	"	"
1101414		"	"	"	"	"	"	"	"	"	"
1101415		"	"	"	"	"	"	"	"	"	"
1101416		"	"	"	"	"	"	"	"	"	"
1101417		809698	820517	820517	"	"	"	"	"	"	"
1101418	1908550	1909151	▲1866148	▲1906940	1904365	1903871	1946798	1903871	1858754	1858749	"

▲For complete brush set order part No. 1857963.
○For complete brush set order part No. 1880998.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Ilus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E. -----	1962276	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9; 400-1-2-3-4-6-8-9-11-13-14-15-16-17-18
24	Lock Washer—Brush Attaching Screw -----	456413	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8; 400-1-2-3-4-6-8-11-13-14-15-16-17
25	Lock Washer—Brush Lead Screw -----	1914816	1101381-2-3-4-5-6-7-8; 90-1-2-7-8-9; 400-1-2-3-4-6-8-9-11-13-14-15-16-17-18
	Lock Washer—Dist. Hold Down Screw -----	9421423	1101400
26	Lock Washer—End Cover Plate Screw—C.E. -----	453435	1101400
26	Lock Washer—End Cover Plate Screw—C.E. -----	453844	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8; 401-2-3-4-6-8-9-11-13-14-15-16-17-18
27	Lock Washer—Main Brush Plate Screw -----	453844	1101399; 409-18
	Lock Washer—Mounting Bracket Screw -----	9421423	1101404
28	Lock Washer—Regulator Mtg. Screw -----	138479	1101381-2-3-4-6-7-8; 90-1-2-3-7-8; 400-1-2-3-6-8-9-11-14-16-17
28	Lock Washer—Relay Mtg. Screw -----	453844	1101385; 413-15
	Lock Washer—Shaft Nut—C.E. -----	9421426	1101400
29	Lock Washer—Shaft Nut—D.E. -----	1915265	1101381-2-4-5-6-7-8; 90-1-3-7-8-9; 401-2-3-4-6-9-11-13-14-15-16-18
30	Lock Washer—Terminal Stud Nut -----	1914579	1101381-2-3-4-5-6-7-8; 90-1-3-7-8-9; 400-1-2-3-4-6-8-9-11-13-14-15-16-18
31	Lock Washer—3rd Brush Plate Clamp Screw -----	453435	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9; 400-1-2-3-4-6-8-9-11-13-14-15-16-17-18
32	Lock Washer—Thru Bolt -----	9421424	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9; 400-1-2-3-4-6-8-9-11-13-14-15-16-17-18
NUTS			
33	Nut—Cover Band Screw -----	453433	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9; 401-2-3-4-6-8-9-11-13-14-15-16-17-18
	Nut—Shaft—C.E. -----	114495	1101400
34	Nut—Shaft—D.E.—(Slotted) -----	1917035	1101392; 408-17
34	Nut—Shaft—D.E. -----	1917570	1101400
34	Nut—Shaft—D.E. -----	1915172	1101381-2-3-4-5-6-7-8; 90-1-3-7-8-9; 401-2-3-4-6-9-11-13-14-15-16-18
35	Nut—Terminal Stud -----	121743	1101381-2-3-4-5-6-7-8; 90-1-3-7-8-9; 400-1-2-3-4-6-8-9-11-13-14-15-16-18
SCREWS			
36	Screw—Ball Bearing Retainer Plate—D.E. -----	1914580	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9; 400-1-2-3-4-6-8-9-11-13-14-15-16-17-18
37	Screw—Brush Attaching -----	453986	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8; 400-1-2-3-4-6-8-11-13-14-15-16-17
38	Screw—Brush Lead Attaching -----	453460	1101399; 409-18
38	Screw—Brush Lead Attaching -----	453978	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8; 400-1-2-3-4-6-8-11-13-14-15-16-17
39	Screw—Cover Band -----	132143	1101381-2-3-4-5-6-7; 90-1-2-3-7-8-9; 401-2-3-4-6-8-9-11-13-14-15-16-17-18
	Screw—Dist. Hold Down -----	120854	1101400
40	Screw—End Cover Plate—C.E. -----	1914580	1101400
40	Screw—End Cover Plate—C.E. -----	454408	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9; 401-2-3-4-6-8-9-11-13-14-15-16-17-18
41	Screw—Main Brush Plate Attaching -----	454408	1101399; 409-18
	Screw—Mounting Bracket Attaching -----	1913179	1101404
42	Screw—Pole Shoe -----	1913960	All
43	Screw—Regulator Mtg. -----	132900	1101381-2-3-4-6-7-8; 90-1-2-3-7-8; 400-1-2-3-6-8-9-11-14-16-17
43	Screw—Relay Mtg. -----	453418	1101385; 413-15
44	Screw—3rd Brush Plate Clamp -----	453464	1101399; 409-18
44	Screw—3rd Brush Plate Clamp -----	111118	1101400
44	Screw—3rd Brush Plate Clamp -----	9416183	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8; 401-2-3-4-6-8-11-13-14-15-16-17
WASHERS			
45	Washer—Brush Arm Space -----	1857412	1101399; 409-18
46	Washer—Brush Attaching Screw -----	809551	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8; 401-2-3-4-6-8-11-13-14-15-16-17
47	Washer—Felt—D.E. -----	820706	1101392; 400-8-17
47	Washer—Felt—D.E. -----	809961	1101381-2-3-4-5-6-7-8; 90-1-3-7-8-9; 401-2-3-4-6-9-11-13-14-15-16-18
	Washer—Plain—Dist. Hold Down Screw -----	826958	1101400

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION


Illus. No.	Name	Part No.	Used on Models
WASHERS (Continued)			
	Washer—Plain—Shaft Nut—D.E.	30205	1101392; 408-17
	Washer—Plain—Shaft Nut—D.E.	1934383	1101400
48	Washer—Plain—Regulator Mtg.	1856056	1101381-2-3-4-6-7-8; 90-1-2-3-7-8; 401-2-3-4-6-8-9-11-14-16-17
49	Washer—Space—Inside—D.E.	822644	1101392; 400-8-17
49	Washer—Space—Inside—D.E.	809945	1101381-2-3-4-5-6-7-8; 90-1-3-7-8-9; 401-2-3-4-6-9-11-13-14-15-16-18
50	Washer—Terminal Stud Insulation	1858753	1101381-2-3-4-5-6-7-8; 90-1-2-7-8-9; 400-1-2-3-4-6-8-9-11-13-14-15-16-18
51	Washer—Terminal Stud Plain	826319	1101381-2-3-4-5-6-7-8; 90-1-2-7-8-9; 400-1-2-3-4-6-8-9-11-13-14-15-16-18
MISCELLANEOUS			
	ARM Assem. Advance	1877947	1101400
	BAFFLE—Oil—D.E.	1919657	1101392; 408-17
	BAFFLE—Oil—D.E.	1838047	1101400
	BRACKET—Generator Mtg.	1912439	1101404
52	BOLT—Thru	1915090	1101392; 408-17
52	BOLT—Thru	1849779	1101400
52	BOLT—Thru	1908680	1101381-2-3-4-5-6-7-8; 90-1-3-7-8-9; 401-2-3-4-6-9-11-13-14-15-16-18
53	BUSHING—For Lead In Field Frame	812891	1101392; 417
	BUSHING—Insulator Terminal Stud	*	All except 1101392; 417
54	CLAMP—3rd Brush Plate	1850770	1101399; 409-18
54	CLAMP—3rd Brush Plate	820107	1101400
54	CLAMP—3rd Brush Plate	817532	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8; 401-2-3-4-6-8-11-13-14-15-16-17
	CLIP—Terminal—To Brush	200182	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9; 400-1-2-3-4-6-8-9-11-13-14-15-16-17-18
55	CLIP—Terminal—To Regulator	200191	1101392; 400-8-17
	COUPLING—D.E.	1839478	1101383
	*DISTRIBUTOR	*629-T	1101400
56	GASKET—Ball Bearing Plate—D.E.	820708	1101392; 400-8-17
56	GASKET—Ball Bearing Plate—D.E.	1912008	1101381-2-3-4-5-6-7-8; 90-1-3-7-8-9; 401-2-3-4-6-9-11-13-14-15-16-18
57	GASKET—End Cover Plate—C.E.	1850321	1101400
57	GASKET—End Cover Plate—C.E.	817220	1101381-2-3-4-5-6-7-8; 90-1-2-7-8-9; 401-2-3-4-6-9-11-13-14-15-16-17-18
	GEAR—Dist. Drive	1842095	1101400
	INSULATOR—Field Coil	1914491	1101408-9-11-13-14-15-16-17-18
58	LEAD—Brush Ground	820315	1101400
58	LEAD—Brush Ground	809628	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8; 401-2-3-4-6-8-11-13-14-15-16-17
59	LEAD—Brush To Regulator	821407	1101392; 417
60	LEAD—"A" Terminal to Regulator or Relay	1911485	1101381-2-6-8; 90-1-3-7-8; 401-2-3-6
60	LEAD—"A" Terminal to Regulator or Relay	1860368	1101383
60	LEAD—"A" Terminal to Regulator or Relay	1873937	1101384
60	LEAD—"A" Terminal to Regulator or Relay	1914192	1101387; 413
60	LEAD—"A" Terminal to Regulator or Relay	1872661	1110385
60	LEAD—"A" Terminal to Regulator or Relay	1914185	1101408-16
60	LEAD—"A" Terminal to Regulator or Relay	1915076	1101409
60	LEAD—"A" Terminal to Regulator or Relay	1917571	1101411
60	LEAD—"A" Terminal to Regulator or Relay	1914187	1101414-15
61	LEAD—"F" Terminal to Regulator or Relay	1914192	1101381-2-4-6-8; 402-3-9; 14
61	LEAD—"F" Terminal to Regulator or Relay	1911485	1101401-6-11
61	LEAD—"F" Terminal to Regulator or Relay	1850025	1101383
61	LEAD—"F" Terminal to Regulator or Relay	1878133	1101387
61	LEAD—"F" Terminal to Regulator or Relay	1911481	1101390-1-7-8
61	LEAD—"F" Terminal to Regulator or Relay	1868761	1101393
61	LEAD—"F" Terminal to Regulator or Relay	1914185	1101408
62	OILER—C.E.	1882716	1101392; 417
62	OILER—C.E.	113702	1101381-2-3-4-5-6-7-8; 90-1-3-7-8-9; 400-1-2-3-4-6-8-9-11-13-14-16
62	OILER—D.E.	113702	1101399; 400-2-3-8-9-15-17-18
62	OILER—D.E.	125609	1101382-3-4-6-13-14-15-16
62	OILER—D.E.	113702	1101381-5-7-8; 90-1-2-3-7-8; 401-4-6-11

*For parts see Distributor Group #29.

*Included with 1858749 Stud.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS (Continued)		
	PIN—Brush Holder Hinge -----	817313	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8; 401-2-3-4-6-8-11-13-14-15-16-17
	PIN—Brush Holder Stop -----	817314	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8; 401-2-3-4-6-8-11-13-14-15-16-17
	PIN—(& Insulation) Brush Holder Hinge -----	812016	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8; 400-1-2-3-4-6-8-11-13-14-15-16-17
	PIN—(& Insulation) Brush Holder Stop -----	812015	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9, 400-1-2-3-4-6-8-11-13-14-15-16-17
	PIN—Dowel—C.E. -----	809062	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9 400-1-2-3-4-6-8-9-11-13-14-15-16-17-18
	PIN—Dowel—For Bushing—C.E. -----	1849200	1101400
63	PIN—Dowel—D.E. -----	809593	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9 400-1-2-3-4-6-8-9-11-13-14-15-16-17-18
	PIN—Coupling—D.E. -----	820711	1101383
	PIN—3rd Brush Plate Stop -----	1840738	1101383
64	PIN—3rd Brush Plate Tension Spring -----	809614	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9, 400-1-2-3-4-6-8-11-13-14-15-16-17
65	PLATE—Bearing Retainer—D.E. -----	820707	1101392; 400-8-17
65	PLATE—Bearing Retainer—D.E. -----	1911263	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9, 401-2-3-4-6-9-11-13-14-15-16-18
66	PLATE—End Cover—C.E. -----	1850320	1101400
66	PLATE—End Cover—C.E. -----	1914222	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9 401-2-3-4-6-8-9-11-13-14-15-16-17-18
67	PLATE—Felt Retainer—D.E. -----	820709	1101392; 400-8-17
67	PLATE—Felt Retainer—D.E. -----	819104	1101381-2-3-4-5-6-7-8; 90-1-3-7-8-9; 401-2-3-4-6-9-11-13-14-15-16-18
	PLUG—Oil Hole—C.E. -----	1911097	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9 401-2-3-4-8-9-11-13-14-15-16-17-18
	PLUG—Pipe—C.E. (Slotted) -----	103884	1101400
	PLUG—Pipe—C.E. (Sq. Hd.) -----	103877	1101400
68	SHOE—Pole -----	816331	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9; 400-1-2-3-4-6
68	SHOE—Pole -----	1931248	1101408-9-11-13-14-15-16-17-13
69	SPRING—3rd Brush Plate Tension -----	1850771	1101399; 409-18
69	SPRING—3rd Brush Plate Tension -----	809824	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8; 400-1-2-3-4-6-8-11-13-14-15-16-17
	WICK (& Spring)—C.E. -----	809591	1101400
	WICK—C.E. -----	1947350	1101381-2-3-4-5-6-7-8; 90-1-2-3-7-8-9; 401-2-3-4-6-8-9-11-13-14-15-16-17-18
	WOODRUFF KEY—C.E. -----	124542	1101400
70	WOODRUFF KEY—D.E. -----	124546	1101383
70	WOODRUFF KEY—D.E. -----	124548	1101392; 400-8-17
70	WOODRUFF KEY—D.E. -----	124545	1101381-2-4-5-6-7-8; 90-1-3-7-8-9; 401-2-3-4-6-9-11-13-14-15-16-18

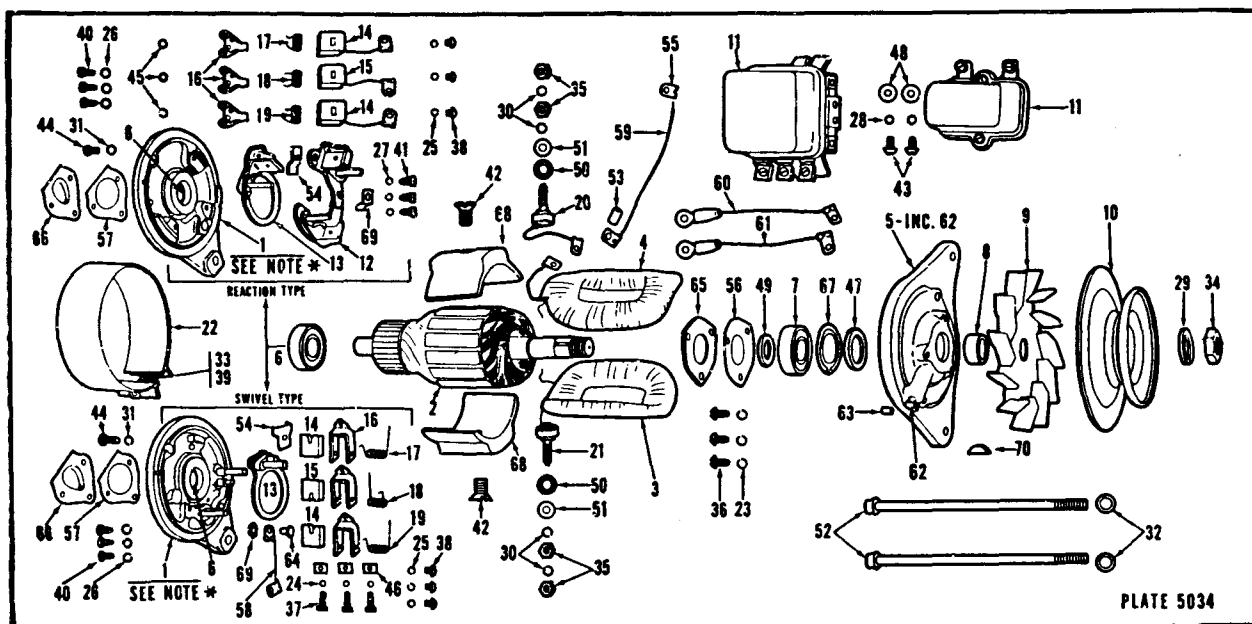 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	* Frame C.E.	Armature	Field Coil L.H.	Field Coil R.H.	Frame D.E.	Bushing or Ball Bearing C.E.	Ball Bearing D.E.	Collar — Outside D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1101419.....	1908871	1841027	1913554		817223	812823	954378	817224			*5851
1101420.....	1879153	1883685	"		1917997	"	954521	1917998			
1101421.....	1908871	1841027	"		817223	"	954378	817224		1947813	*5851
1101422.....	"	"	"		1873830	"	"	"		"	*5839
1101423.....	"	1873054	"		"	"	"	"			
1101425.....	"	1841027	"		1908869	"	"	"			*1116809
1101426.....	"	"	"		817879	"	"	"			"
1101429.....	1879202	"	1921337		1886920	"	"	"			
1101430.....	1908871	"	1913554		1873830	"	"	"			*5893
1101431.....	"	1883074	"		1841472	"	954521	"			

*Field Coil Set (2 coils).

*For parts see Regulator—Group 4.

*For parts see Regulator—Group 5.

*For parts see Relay—Group 4.

*C.E. Frame includes where necessary: Bushing, Oiler, Oil Wick, Oil Hole Plug, Dowel Pins and Brush Pins.

Delco-Remy

SERVICE PARTS CATALOG

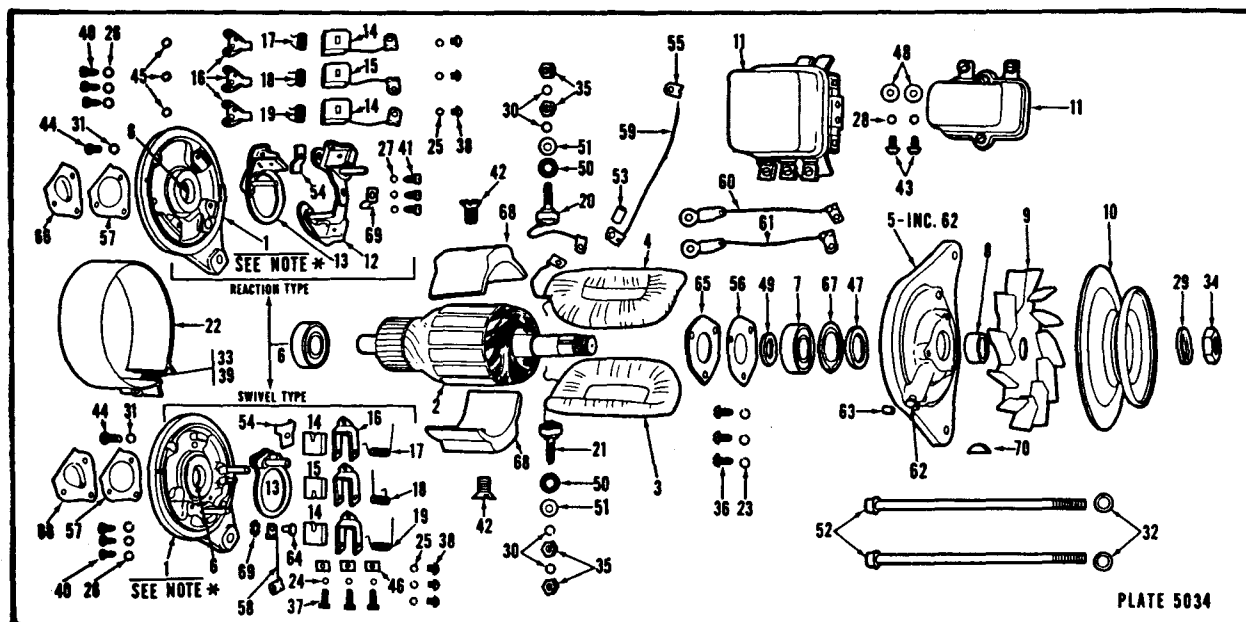 


PLATE 5034

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Brush Plate — Main	Brush Plate — 3rd	Brush — Main	Brush — 3rd	Arm or Holder — Brush	Spring — R.H. — Main	Spring — 3rd	Spring — L.H. — Main	Terminal Stud and Lead	Terminal Stud Only	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1101419.....		809698	○	○	809642	809658	809644	809644	1858754	1858749	1872638
1101420.....	1908550	1909151	△1906984	△1906940	1904365	1903871	1946798	1903871	"	"	"
1101421.....		809698	○	○	809642	809658	809644	809644	"	"	"
1101422.....		"	○	○	"	"	"	"	"	"	"
1101423.....		"	○	○	"	"	"	"	"	"	"
1101425.....		"	○	○	"	"	"	"	"	"	"
1101426.....		"	○	○	"	"	"	"	"	"	"
1101429.....	1856989	1910916	△1906984	△1906940	1904365	1916324	1856993	1856992	"	"	"
1101430.....		809698	○	○	809642	809658	809644	809644	"	"	"
1101431.....		"	○	○	"	"	"	"	"	"	"

△For complete Brush Set order Part No. 1857963.

○For complete Brush Set order Part No. 1880998.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw.....	1962276	1101419; 20-1-2-3-5-6-9; 30-1
24	Lock Washer—Brush Attaching Screw.....	456413	1101419; 21-2-3-5-6; 30-1
25	Lock Washer—Brush Lead Screw.....	1914816	1101419; 20-1-2-3-5-6-9; 30-1
26	Lock Washer—End Cover Plate Screw—C.E.....	453844	1101419; 20-1-2-3-5-6-9; 30-1
27	Lock Washer—Main Brush Plate Screw.....	453844	1101429-9
28	Lock Washer—Regulator Attaching Screw.....	138479	1101419; 21-2-3; 30
28	Lock Washer—Relay Attaching Screw.....	453844	1101425-6
29	Lock Washer—Shaft Nut—D.E.....	1915265	1101419; 21-2-3-5-6-9; 30
30	Lock Washer—Terminal Stud Nut.....	1914579	1101419; 20-1-2-3-5-6-9; 30-1
31	Lock Washer—Third Brush Plate Clamp Screw.....	453435	1101419; 20-1-2-3-5-6-9; 30-1
32	Lock Washer—Thru Bolt.....	9421424	1101419; 20-1-2-3-5-6-9; 30-1
NUTS			
33	Nut—Cover Band Screw.....	453433	1101419; 20-1-2-3-5-6-9; 30-1
34	Nut—Shaft—D.E.....	1915172	1101419; 21-2-5-6-9; 30
34	Nut—Shaft—D.E.....	1917570	1101420
34	Nut—Shaft—D.E.....	1914308	1101423
34	Nut—Shaft—D.E.....	1917035	1101431
35	Nut—Terminal Stud.....	121743	1101419; 20-1-2-3-5-6-9; 30-1
SCREWS			
36	Screw—Ball Bearing Retainer Plate—D.E.....	1914580	1101419; 20-1-2-3-5-6-9; 30-1
37	Screw—Brush Attaching.....	453986	1101419; 21-2-3-5-6; 30-1
38	Screw—Brush Lead Attaching.....	453978	1101419; 21-2-3-5-6-9; 30-1
38	Screw—Brush Lead Attaching.....	453460	1101420
39	Screw—Cover Band.....	132143	1101419; 20-1-2-3-5-6-9; 30-1
40	Screw—End Cover Plate—C.E.....	454408	1101419; 20-1-2-3-5-6-9; 30-1
41	Screw—Main Brush Plate Attaching.....	454408	1101420-9
42	Screw—Pole Shoe.....	1913960	1101419; 20-1-2-3-5-6-9; 30-1
43	Screw—Regulator Attaching.....	132900	1101419; 21-2; 30
43	Screw—Relay Attaching.....	453418	1101425-6
43	Screw—Regulator Attaching.....	453319	1101423
44	Screw—Third Brush Plate Clamp.....	9416183	1101419; 21-2-3-5-6; 30-1
44	Screw—Third Brush Plate Clamp.....	453464	1101420
44	Screw—Third Brush Plate Clamp.....	454443	1101429
WASHERS			
45	Washer—Brush Arm Space.....	1857412	1101420-9
46	Washer—Plain—Brush Attaching Screw.....	809551	1101419; 21-2-3-5-6; 30-1
47	Washer—Felt—D.E.....	809961	1101419; 21-2-3-5-6-9; 30
47	Washer—Felt—D.E.....	820706	1101431
48	Washer—Regulator Attaching.....	1856056	1101419; 21-2-3; 30
49	Washer—Plain—Shaft Nut—D.E.....	30205	1101420; 31
49	Washer—Space—Inside—D.E.....	822644	1101420; 31
49	Washer—Space—Inside—D.E.....	809945	1101419; 21-2-3-5-6-9; 30
50	Washer—Insul.—Terminal Stud.....	1858753	1101419; 21-2-3-5-6-9; 30-1
51	Washer—Plain—Terminal Stud.....	826319	1101419; 21-2-3-5-6-9; 30-1
MISCELLANEOUS			
52	BAFFLE—Oil—D.E.....	1919657	1101431
52	BOLT—Thru.....	1908680	1101419; 21-2-3-5-6-9; 30
52	BOLT—Thru.....	1886685	1101420
52	BOLT—Thru.....	1915090	1101431
54	BUSHING—Insul. Terminal Stud.....	*	1101419; 20-1-2-3-5-6-9; 30-1
54	CLAMP—Third Brush Plate.....	817532	1101419; 21-2-3-5-6; 30-1
54	CLAMP—Third Brush Plate.....	1850770	1101420-9
56	CLIP—Terminal—To Brush.....	200182	1101419; 20-1-2-3-5-6-9; 30-1
56	GASKET—Ball Bearing Retainer Plate—D.E.....	820708	1101420; 31
56	GASKET—Ball Bearing Retainer Plate—D.E.....	1912008	1101419; 21-2-3-5-6-9; 30
57	GASKET—End Cover Plate—C.E.....	817220	1101419; 20-1-2-3-5-6-9; 30-1
57	INSULATOR—Field Coil.....	1914491	1101419; 20-1-2-3-5-6-9; 30-1
58	LEAD—Brush Ground.....	809688	1101419; 21-2-3-5-6; 30-1
60	LEAD—"A" Terminal to Regulator or Relay.....	1914185	1101422
60	LEAD—"A" Terminal to Regulator or Relay.....	1911485	1101419
60	LEAD—"A" Terminal to Regulator or Relay.....	1914185	1101421
60	LEAD—"A" Terminal to Regulator or Relay.....	1914211	1101430
60	LEAD—"A" Terminal to Relay.....	1914187	1101425

*Included with 1858749 Stud.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
60	LEAD—"A" Terminal to Relay.....	1914187	1101426
61	LEAD—"F" Terminal to Regulator or Relay.....	1914192	1101419; 21-2; 30
.....	OILER—C.E.....	113702	1101419; 20-1-2-3-5-6-9; 30-1
62	OILER—D.E.....	125609	1101422-3; 30
62	OILER—D.E.....	113702	1101419; 20-1-5-6-9; 31
.....	PIN—Brush Holder Hinge.....	817313	1101419; 21-2-3-5-6; 30-1
.....	PIN—Brush Holder Stop.....	817314	1101419; 21-2-3-5-6; 30-1
.....	PIN (& Insulation)—Brush Holder Hinge.....	812016	1101419; 21-2-3-5-6; 30-1
.....	PIN (& Insulation)—Brush Holder Stop.....	812015	1101419; 21-2-3-5-6; 30-1
.....	PIN—Dowel—C.E.....	809062	1101419; 20-1-2-3-5-6-9; 30-1
63	PIN—Dowel—D.E.....	809593	1101419; 20-1-2-3-5-9; 30-1
64	PIN—Third Brush Plate Tension Spring.....	809614	1101419; 21-2-3-5-6; 30-1
65	PLATE—Ball Bearing Retainer—D.E.....	1911263	1101419; 21-2-3-5-6-9; 30
65	PLATE—Ball Bearing Retainer—D.E.....	820707	1101420; 31
66	PLATE—End Cover—C.E.....	1914222	1101419; 20-1-2-3-5-6-9; 30-1
67	PLATE—Felt Retainer—D.E.....	819104	1101419; 21-2-3-5-6-9; 30
67	PLATE—Felt Retainer—D.E.....	820709	1101431
.....	PLUG—Oil Hole—C.E.....	1911097	1101419; 20-1-2-3-5-6-9; 30-1
.....	SEAL—Oil—D.E.....	1917999	1101420
68	SHOE—Pole.....	1931258	1101419; 20-1-2-3-5-6-9; 30-1
69	SPRING—Third Brush Plate Tension.....	1850771	1101420-9
69	SPRING—Third Brush Plate Tension.....	809824	1101419; 21-2-3-5-6; 30-1
.....	WICK—Oil—C.E.....	1947350	1101419; 20-1-2-3-5-6-9; 30-1
70	Woodruff KEY—D.E.....	124545	1101419; 21-2-3-5-6-9; 30
70	Woodruff KEY—D.E.....	124548	1101420; 31

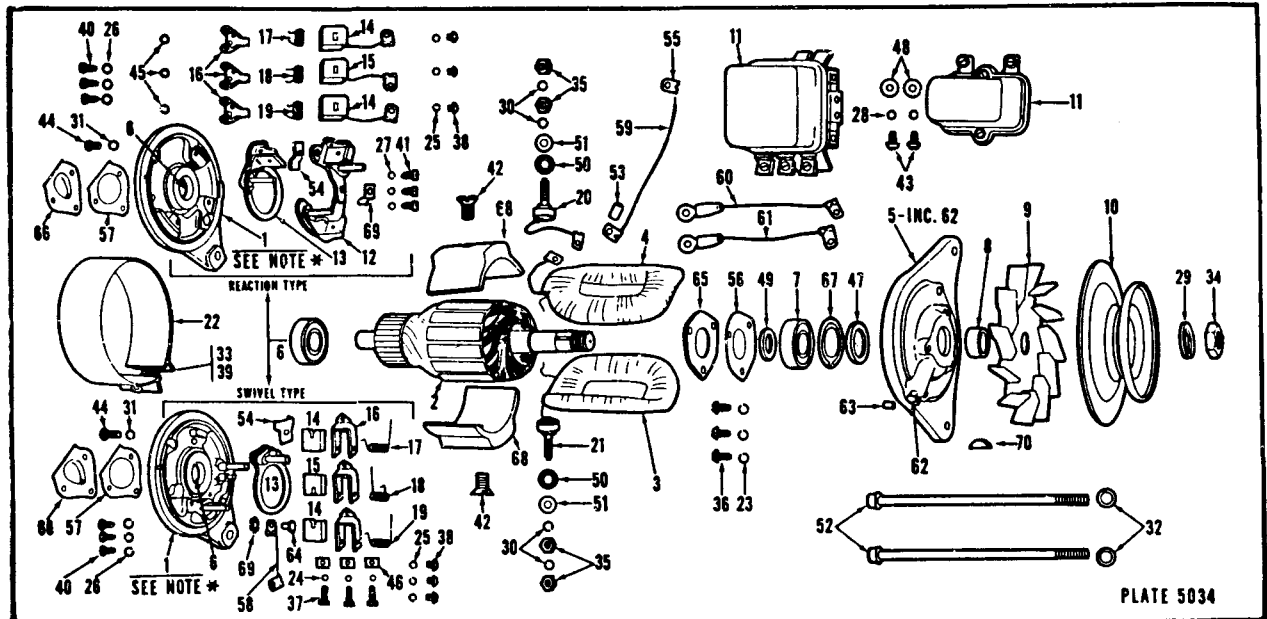 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame — C.E.	Armature	Field Coil — L.H.	Field Coil — R.H.	Frame — D.E.	Bushing or Ball Bearing — C.E.	Ball Bearing — D.E.	Collar — Outside — D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1101419	1908871	1841027	1913554		817223	812823	954378	817224			*5851
1101420	1879153	1883685	"		1917997	"	954521	1917998			
1101421	1908871	1841027	"		817223	"	954378	817224		1947813	*5851
1101422	"	"	"		1873830	"	"	"		"	*5839
1101423	"	1873054	"		"	"	"	"			
1101425	"	1841027	"		1908869	"	"	"			^1116809
1101426	"	"	"		817879	"	"	"			"
1101429	1879202	"	1921337		1886920	"	"	"			
1101430	1908871	"	1913554		1873830	"	"	"			*5893
1101431	"	1883074	"		1841472	"	954521	"			

 
† Field Coil Set (2 coils).

• For parts see Regulator—Group 4.

* For parts see Regulator—Group 5.

^ For parts see Relay—Group 4.

* C.E. Frame includes where necessary: Bushing, Oiler, Oil Wick, Oil Hole Plug, Dowel Pins and Brush Pins.

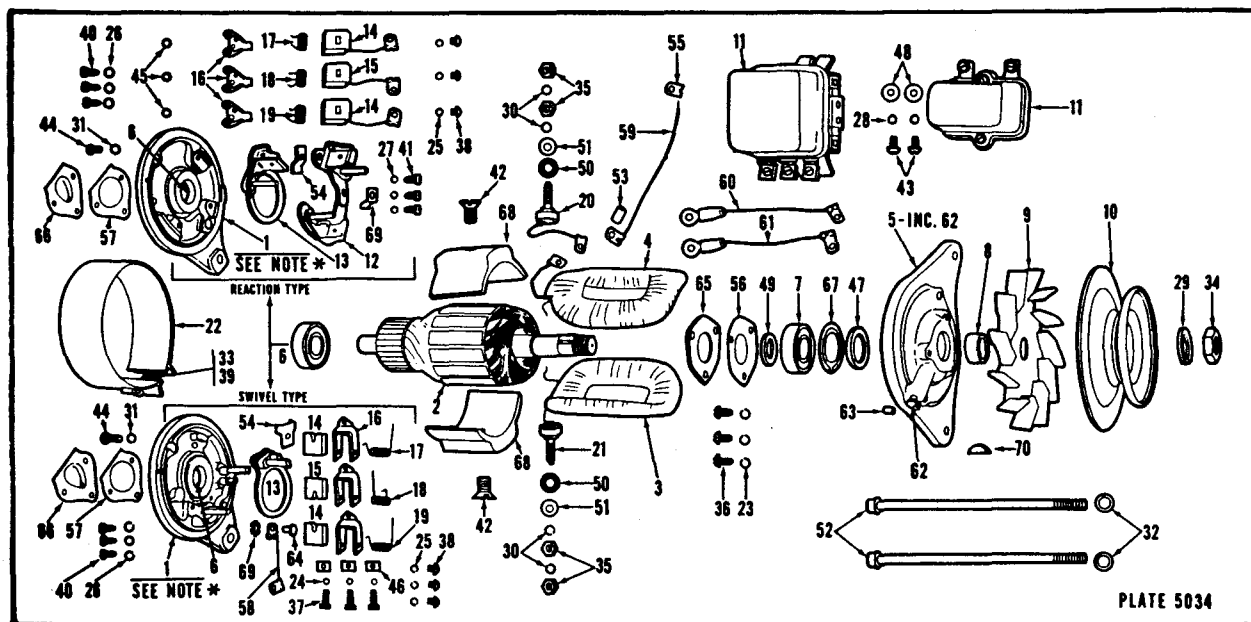

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Brush Plate — Main	Brush Plate — 3rd	Brush — Main	Brush — 3rd	Arm or Holder — Brush	Spring — R.H. — Main	Spring — 3rd	Spring — L.H. — Main	Terminal Stud and Lead	Terminal Stud Only	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1101419.....		809698	○	○	809642	809658	809644	809644	1858754	1858749	1872638
1101420.....	1908550	1909151	△1906984	△1906940	1904365	1903871	1946798	1903871	"	"	"
1101421.....		809698	○	○	809642	809658	809644	809644	"	"	"
1101422.....		"	○	○	"	"	"	"	"	"	"
1101423.....		"	○	○	"	"	"	"	"	"	"
1101425.....		"	○	○	"	"	"	"	"	"	"
1101426.....		"	○	○	"	"	"	"	"	"	"
1101429.....	1856989	1910916	△1906984	△1906940	1904365	1916324	1856993	1856992	"	"	"
1101430.....		809698	○	○	809642	809658	809644	809644	"	"	"
1101431.....		"	○	○	"	"	"	"	"	"	"

△For complete Brush Set order Part No. 1857963.

○For complete Brush Set order Part No. 1880998.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw.....	1962276	1101419; 20-1-2-3-5-6-9; 30-1
24	Lock Washer—Brush Attaching Screw.....	456413	1101419; 21-2-3-5-6; 30-1
25	Lock Washer—Brush Lead Screw.....	1914816	1101419; 20-1-2-3-5-6-9; 30-1
26	Lock Washer—End Cover Plate Screw—C.E.....	453844	1101419; 20-1-2-3-5-6-9; 30-1
27	Lock Washer—Main Brush Plate Screw.....	453844	1101429-9
28	Lock Washer—Regulator Attaching Screw.....	138479	1101419; 21-2-3; 30
28	Lock Washer—Relay Attaching Screw.....	453844	1101425-6
29	Lock Washer—Shaft Nut—D.E.....	1915265	1101419; 21-2-3-5-6-9; 30
30	Lock Washer—Terminal Stud Nut.....	1914579	1101419; 20-1-2-3-5-6-9; 30-1
31	Lock Washer—Third Brush Plate Clamp Screw.....	453435	1101419; 20-1-2-3-5-6-9; 30-1
32	Lock Washer—Thru Bolt.....	9421424	1101419; 20-1-2-3-5-6-9; 30-1
NUTS			
33	Nut—Cover Band Screw.....	453433	1101419; 20-1-2-3-5-6-9; 30-1
34	Nut—Shaft—D.E.....	1915172	1101419; 21-2-5-6-9; 30
34	Nut—Shaft—D.E.....	1917570	1101420
34	Nut—Shaft—D.E.....	1914308	1101423
34	Nut—Shaft—D.E.....	1917035	1101431
35	Nut—Terminal Stud.....	121743	1101419; 20-1-2-3-5-6-9; 30-1
SCREWS			
36	Screw—Ball Bearing Retainer Plate—D.E.....	1914580	1101419; 20-1-2-3-5-6-9; 30-1
37	Screw—Brush Attaching.....	453986	1101419; 21-2-3-5-6; 30-1
38	Screw—Brush Lead Attaching.....	453978	1101419; 21-2-3-5-6-9; 30-1
38	Screw—Brush Lead Attaching.....	453460	1101420
39	Screw—Cover Band.....	132143	1101419; 20-1-2-3-5-6-9; 30-1
40	Screw—End Cover Plate—C.E.....	454408	1101419; 20-1-2-3-5-6-9; 30-1
41	Screw—Main Brush Plate Attaching.....	454408	1101420-9
42	Screw—Pole Shoe.....	1913960	1101419; 20-1-2-3-5-6-9; 30-1
43	Screw—Regulator Attaching.....	132900	1101419; 21-2; 30
43	Screw—Relay Attaching.....	453418	1101425-6
43	Screw—Regulator Attaching.....	453319	1101423
44	Screw—Third Brush Plate Clamp.....	9416183	1101419; 21-2-3-5-6; 30-1
44	Screw—Third Brush Plate Clamp.....	453464	1101420
44	Screw—Third Brush Plate Clamp.....	454443	1101429
WASHERS			
45	Washer—Brush Arm Space.....	1857412	1101420-9
46	Washer—Plain—Brush Attaching Screw.....	809551	1101419; 21-2-3-5-6; 30-1
47	Washer—Felt—D.E.....	809961	1101419; 21-2-3-5-6-9; 30
47	Washer—Felt—D.E.....	820706	1101431
48	Washer—Regulator Attaching.....	1856056	1101419; 21-2-3; 30
.....	Washer—Plain—Shaft Nut—D.E.....	30205	1101420; 31
49	Washer—Space—Inside—D.E.....	822644	1101420; 31
49	Washer—Space—Inside—D.E.....	809945	1101419; 21-2-3-5-6-9; 30
50	Washer—Insul.—Terminal Stud.....	1858753	1101419; 21-2-3-5-6-9; 30-1
51	Washer—Plain—Terminal Stud.....	826319	1101419; 21-2-3-5-6-9; 30-1
MISCELLANEOUS			
.....	BAFFLE—Oil—D.E.....	1919657	1101431
52	BOLT—Thru.....	1908680	1101419; 21-2-3-5-6-9; 30
52	BOLT—Thru.....	1886685	1101420
52	BOLT—Thru.....	1915090	1101431
.....	BUSHING—Insul. Terminal Stud.....	*	1101419; 20-1-2-3-5-6-9; 30-1
54	CLAMP—Third Brush Plate.....	817532	1101419; 21-2-3-5-6; 30-1
54	CLAMP—Third Brush Plate.....	1850770	1101420-9
.....	CLIP—Terminal—To Brush.....	200182	1101419; 20-1-2-3-5-6-9; 30-1
56	GASKET—Ball Bearing Retainer Plate—D.E.....	820708	1101420; 31
56	GASKET—Ball Bearing Retainer Plate—D.E.....	1912008	1101419; 21-2-3-5-6-9; 30
57	GASKET—End Cover Plate—C.E.....	817220	1101419; 20-1-2-3-5-6-9; 30-1
.....	INSULATOR—Field Coil.....	1914491	1101419; 20-1-2-3-5-6-9; 30-1
58	LEAD—Brush Ground.....	809688	1101419; 21-2-3-5-6; 30-1
60	LEAD—"A" Terminal to Regulator or Relay.....	1914185	1101422
60	LEAD—"A" Terminal to Regulator or Relay.....	1911485	1101419
60	LEAD—"A" Terminal to Regulator or Relay.....	1914185	1101421
60	LEAD—"A" Terminal to Regulator or Relay.....	1914211	1101430
60	LEAD—"A" Terminal to Relay.....	1914187	1101425

*Included with 1858749 Stud.


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
60	LEAD—"A" Terminal to Relay.....	1914187	1101426
61	LEAD—"F" Terminal to Regulator or Relay.....	1914192	1101419; 21-2; 30
62	OILER—C.E.....	113702	1101419; 20-1-2-3-5-6-9; 30-1
62	OILER—D.E.....	125609	1101422-3; 30
62	OILER—D.E.....	113702	1101419; 20-1-5-6-9; 31
---	PIN—Brush Holder Hinge.....	817313	1101419; 21-2-3-5-6; 30-1
---	PIN—Brush Holder Stop.....	817314	1101419; 21-2-3-5-6; 30-1
---	PIN (& Insulation)—Brush Holder Hinge.....	812016	1101419; 21-2-3-5-6; 30-1
---	PIN (& Insulation)—Brush Holder Stop.....	812015	1101419; 21-2-3-5-6; 30-1
---	PIN—Dowel—C.E.....	809062	1101419; 20-1-2-3-5-6-9; 30-1
63	PIN—Dowel—D.E.....	809593	1101419; 20-1-2-3-5-9; 30-1
64	PIN—Third Brush Plate Tension Spring.....	809614	1101419; 21-2-3-5-6; 30-1
65	PLATE—Ball Bearing Retainer—D.E.....	1911263	1101419; 21-2-3-5-6-9; 30
65	PLATE—Ball Bearing Retainer—D.E.....	820707	1101420; 31
66	PLATE—End Cover—C.E.....	1914222	1101419; 20-1-2-3-5-6-9; 30-1
67	PLATE—Felt Retainer—D.E.....	819104	1101419; 21-2-3-5-6-9; 30
67	PLATE—Felt Retainer—D.E.....	820709	1101431
---	PLUG—Oil Hole—C.E.....	1911097	1101419; 20-1-2-3-5-6-9; 30-1
---	SEAL—Oil—D.E.....	1917999	1101420
68	SHOE—Pole.....	1931258	1101419; 20-1-2-3-5-6-9; 30-1
69	SPRING—Third Brush Plate Tension.....	1850771	1101420-9
69	SPRING—Third Brush Plate Tension.....	809824	1101419; 21-2-3-5-6; 30-1
---	WICK—Oil—C.E.....	1947350	1101419; 20-1-2-3-5-6-9; 30-1
70	Woodruff KEY—D.E.....	124545	1101419; 21-2-3-5-6-9; 30
70	Woodruff KEY—D.E.....	124548	1101420; 31

Revised to September 1, 1969

 SERVICE PARTS CATALOG

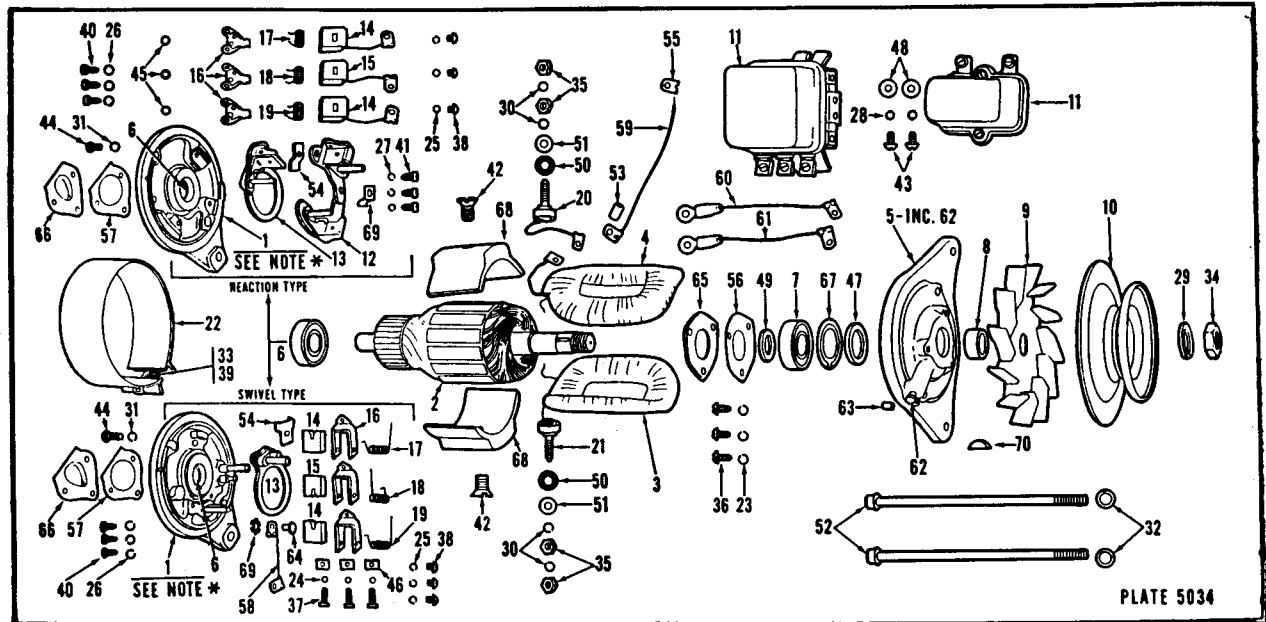

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	* Frame C.E.	Armature	Field Coil L.H.	Field Coil R.H.	Frame D.E.	Bushing or Ball Bearing C.E.	Ball Bearing or Bushing D.E.	Collar Outside D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1101651.....	1908871	817807	*1902101		1866419	812823	954378	1858603			*5540
1101652.....	817770	1871041	"		1859040		"	"	1858604		
1101653.....	1849981	1867659	"		"	954519	"	817224	"		
1101654.....	1878431	817807	1861311	1861310	1878691	812823	"	1858603			1867781
1101655.....	1869332	1869334	*1902101		1845821	908503	954521	1854891	1859069		
1101656.....	1908871	817907	"		1908869	812823	954378	817224			270-C
1101657.....	"	1872608	*1902102		"	"	"	"			*5851
1101658.....	1871063	1856894	*1902101		817879	954143	"	809953			1867781
1101659.....	1908871	1873534	"		1841472	812823	954521	1836194			270-C
1101660.....	1849984	1873755	"		817879	954519	954378	809953			1867781
1101661.....	1854889	1847673	"		1845821	954378	954521	1854891			*5839
1101662.....	1908871	1883074	"		1841472	812823	"	"			
1101663.....	1845819	1886821	"		817879	954378	954378	809953			*5864
1101664.....	1849981	1877775	"		1877777	954519	"	1877778			1867781
1101665.....	1877968	824625	*1902103		1837920	954378	817117	1878547			"
1101666.....	1845819	1847673	*1902101		1845821	"	954521	1845822			*5839
1101667.....	1854889	"	"		"	"	"	1854891			"
1101668.....	"	"	"		"	"	"	"			*5883
1101669.....	1845819	1841365	"		1837920	"	817117	"			*5839
1101671.....	1908871	817807	"		1908869	812823	954378	817224			*5864
1101672.....	1845819	1847673	"		1845821	954378	954521	1845822			*5883
1101673.....	817770	1842281	"		1837640	812823	"	1838185			1867781
1101674.....	1845819	1886821	"		817879	954378	954378	809953			1116809
1101675.....	1849981	817877	"		"	954519	"	817224			
1101677.....	1908871	1883074	"		1841472	812823	954521	1836194			*5839
1101678.....	1849981	817788	"		817879	954519	954378	809953			"
1101679.....	"	"	"		"	"	"	"			*5893
1101680.....	1854889	1900639	"		1845821	954378	954521	1854891			*5851
1101681.....	1900251	1900253	"		1900254	954143	954157	1900257			"

*C.E. Frame includes where necessary: Bushing, Oiler, Oil Wick, Oil Hole Plug, Dowel Pin and Brush Pins.

@See Regulator—Group 3 for parts.

 
^See Regulator—Group 4 for parts.

*See Regulator—Group 5 for parts.

†Field Coil Set (2 coils).

□See Relay—Group 4 for parts.

Delco-Remy
SERVICE PARTS CATALOG

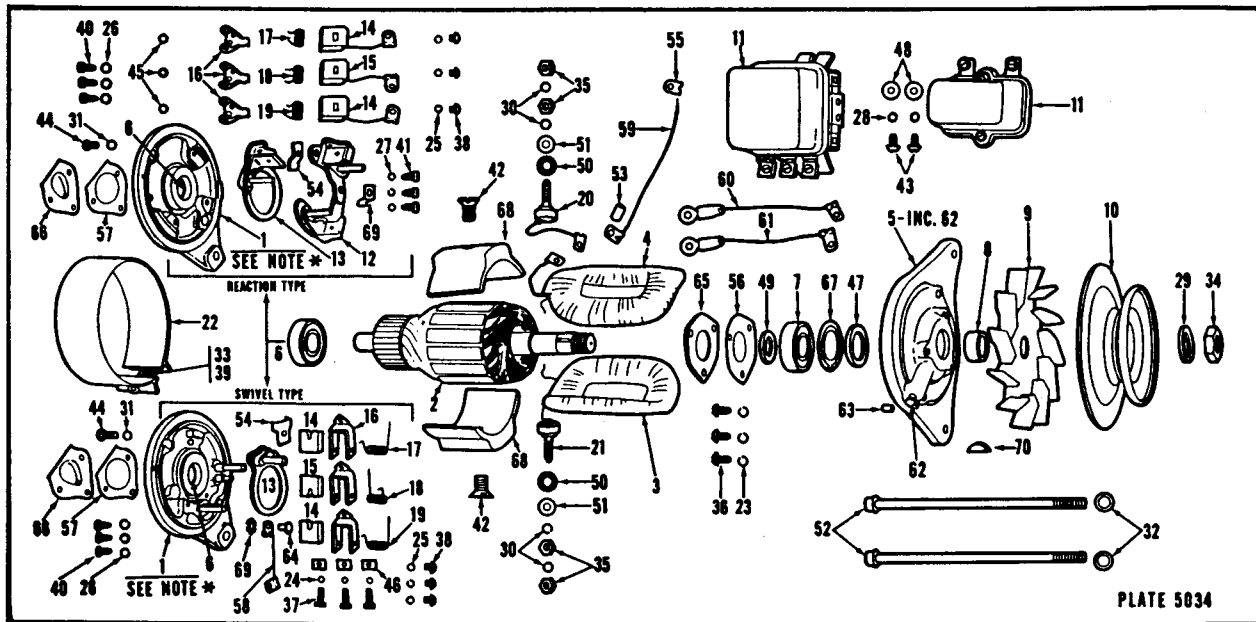

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Brush Plate — Main	Brush Plate — 3rd	Brush — Main	Brush — 3rd	Arm or Holder — Brush	Spring — R.H. — Main	Spring — 3rd	Spring — L.H. — Main	Terminal Stud and Lead	Terminal Stud Only	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1101651.....		809698	○	○	809642	809658	809644	809644			1861502
1101652.....		"	○	○	"	"	"	"	1858754	1858749	1869249
1101653.....		"	"	"	"	"	"	"	"	"	"
1101654.....		"	1845987	1845987	1845988	820101	820100	820100			1861502
1101655.....		809936	○	○	809642	809658	809658	809644	1858754	1858749	"
1101656.....		809698	○	○	"	"	809644	"	"	"	1872638
1101657.....		"	○	○	"	"	"	"	"	"	"
1101658.....		809936	○	○	"	"	809658	"			1861502
1101659.....		809698	○	○	"	"	809644	"	1858754	1858749	1872638
1101660.....		809936	○	○	"	"	809658	"			1861502
1101661.....		"	○	○	"	"	"	"			"
1101662.....		809698	○	○	"	"	809644	"			"
1101663.....		"	○	○	"	"	"	"			"
1101664.....		"	○	○	"	†1904688	†1904685	†1904685			816340
1101665.....		809936	○	○	"	809658	809644	809644			1872638
1101666.....		809698	○	○	"	†1904688	†1904684	†1904685	1858754	1858749	1872638
1101667.....		809936	○	○	"	809658	809658	809644	"	"	"
1101668.....		"	○	○	"	†1904688	†1904688	†1904685	"	"	"
1101669.....		809698	○	○	"	809658	809644	809644			1861502
1101671.....		"	○	○	"	"	"	"	1858754	1858749	1872638
1101672.....		"	○	○	"	"	"	"	"	"	"
1101673.....		"	○	○	"	"	"	"			1861502
1101674.....		"	○	○	"	"	"	"	1858754	1858749	1872638
1101675.....		"	○	○	"	"	"	"	"	"	"
1101677.....		"	○	○	"	"	"	"			1861502
1101678.....		"	○	○	"	"	"	"	1858754	1858749	1872638
1101679.....		"	○	○	"	"	"	"	"	"	"
1101680.....		809936	○	○	"	"	809658	"	"	"	"
1101681.....		"	○	○	"	"	"	"	"	"	1900255

†When replacing Brush Spring, also supply 1904687—Bushing (Brush Spring).

○Complete Brush Set Part No. 1880998.

Revised to September 1, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
—	Lock Washer—Ball Bearing Retainer Screw—C.E.	138599	1101665
23	Lock Washer—Ball Bearing Retainer Plate—D.E.	1962276	1101651-2-3-4-5-6-7-8; 60-1-3-4-6-7-8; 71-2-3-4-5-8-9; 80-1
23	Lock Washer—Ball Bearing Retainer Plate—D.E.	453435	1101659; 62; 77
24	Lock Washer—Brush Attaching Screw	456413	1101651-2-3-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 71-2-3-4-5-7-8-9; 80-1
24	Lock Washer—Brush Attaching Screw	22817	1101654
25	Lock Washer—Brush Lead Screw	1914816	All
—	Lock Washer—Brush Ground Lead Screw	453844	1101651-2-5-6-8; 60-1-5-7-8; 80-1
—	Lock Washer—Distributor Clamp Screw	9421423	1101652; 73
26	Lock Washer—End Cover Plate Screw—C.E.	453344	1101651-4-7-9; 62; 71-2-7
26	Lock Washer—End Cover Plate Screw—C.E.	453435	1101652-3-8; 60-1-3-5-6-7-8-9; 73-4-5-8-9; 80-1
—	Lock Washer—Field Lead Ground Screw	453844	1101654; 60-4
28	Lock Washer—Regulator Attaching Screw	138479	1101652-7; 61-3-6-7-8-9; 71-2-7-8-9; 80-1
28	Lock Washer—Regulator Attaching Screw	178378	1101662
28	Lock Washer—Relay Attaching Screw	453844	1101654-6-8-9; 60-4-5; 73-4
—	Lock Washer—Shaft Nut—C.E.	9421426	1101652-8; 60-9; 73-8
29	Lock Washer—Shaft Nut—D.E.	1915265	1101651-2-3-4-5-6-7; 64; 71-5
29	Lock Washer—Shaft Nut—D.E.	802764	1101663; 74
30	Lock Washer—Terminal	1914579	1101652-3-5-6-7-9; 66-7-8; 71-2-5-8-9; 80-1
31	Lock Washer—Third Brush Plate Clamp Screw	453435	All
32	Lock Washer—Thru Bolt	9421424	All
—	Lock Washer—Thermostat Attaching Screw	456413	1101658; 65; 73
—	Lock Washer—Thermostat Resistance Screw	1914816	1101658; 65; 73
—	Lock Washer—Thermostat Terminal Screw	456413	1101658; 65; 73
NUTS			
33	NUT—Cover Band Screw	453433	1101656-7-9; 64-6-7-8; 71-2-4-5-8-9; 80-1
—	NUT—Shaft—C.E.	122264	1101652-8; 73
—	NUT—Shaft—C.E.	114496	1101669
34	NUT—Shaft—D.E.	1915172	1101651-2-3-4-5-6-7; 64; 71-5
34	NUT—Shaft—D.E.	1917570	1101655-9; 61-5-6-7-8; 80-1
34	NUT—Shaft—D.E.	114495	1101658-9; 63; 74-8-9
34	NUT—Shaft—D.E.	1841367	1101662-9; 77
35	NUT—Terminal	121743	1101652-3-5-6-7-9; 66-7-8; 71-2-4-5-8-9; 80-1
SCREWS			
—	Screw—Ball Bearing Retainer—C.E.	31202	1101665
36	Screw—Ball Bearing Retainer Plate—D.E.	453418	1101651-2-3-4-5-6-7-8-9; 60-1-2-3; 71-3-4-5-7-8
36	Screw—Ball Bearing Retainer Plate—D.E.	5017850	1101664-6-7-8; 72; 80-1
36	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1101679
37	Screw—Brush Attaching	453986	1101651-2-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 71-2-3-4-5-7-8-9; 80-1
37	Screw—Brush Attaching	9417096	1101654
38	Screw—Brush Lead Attaching	453978	All
—	Screw—Brush Ground Lead	453418	1101652-8; 60-1-5-7-8; 80-1
39	Screw—Cover Band	132143	1101656-7-9; 64-6-7-8; 71-2-4-5-8-9; 80-1
—	Screw—Distributor Clamp	802771	1101652; 73
—	Screw—Distributor Clamp	1847260	1101658
40	Screw—End Cover Plate—C.E.	453418	1101651-2-4-6-7-9
40	Screw—End Cover Plate—C.E.	1914580	1101653-7-8; 60-1-2-3-4-5-6-7-8-9; 72-3-4-5-8-9; 80-1
40	Screw—End Cover Plate—C.E.	454408	1101671-7
—	Screw—Field Lead Ground	453418	1101654; 60-4
42	Screw—Pole Shoe	1913960	All
43	Screw—Regulator Attaching	453319	1101651-7; 61-2-3-6-7-8-9; 71-2-7-8-9; 80-1
43	Screw—Relay Attaching	453418	1101654-6-8-9; 60-4-5; 73-4
—	Screw—Resistance Bracket Attaching	454329	1101673
44	Screw—Third Brush Plate Clamp	9416183	1101651-2-3-6-7-9; 60-1-2-3-4-5-6-7-8-9; 71-2-3-4-5-7-8-9; 80-1
44	Screw—Third Brush Plate Clamp	142729	1101654-5
44	Screw—Third Brush Plate Clamp	111118	1101658
—	Screw—Thermostat Attaching	454329	1101658; 65
—	Screw—Thermostat Terminal	141542	1101658; 65; 73
—	Screw—Thermostat Resistance Attaching	453978	1101658; 65; 73

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
WASHERS			
—	Washer—Ball Bearing Retainer Screw—C.E.	37148	1101665
—	Washer—Ball Bearing Space—C.E.	1888761	1101681
46	Washer—Brush Attaching Screw	809551	All except 1101654
—	Washer—Distributor Hold Down Screw	813046	1101658
—	Washer—Felt—C.E.	815042	1101663; 74
47	Washer—Felt—D.E.	809961	1101651-2-3-4-6-8; 60-3; 71-4-5-8-9
47	Washer—Felt—D.E.	820706	1101655-9; 61-2-6-7-8; 72-3-7; 80
47	Washer—Felt—D.E.	810258	1101665-9
48	Washer—Regulator Attaching Screw	1856056	1101651-7; 61-2-3-6-7-8-9; 71-2-7-8-9; 80-1
—	Washer—Shaft Nut—D.E.	1934383	1101655; 61-5-6-7-8; 73; 80-1
—	Washer—Shaft Nut—D.E.	1938744	1101658; 60; 78-9
—	Washer—Shaft Nut—D.E.	30205	1101659; 62-9; 77
—	Washer—Space—Inside—C.E.	809960	1101669
49	Washer—Space—Inside—D.E.	809945	1101651-2-3-4-6-7-8; 60-3-4; 71-4-5-8-9
49	Washer—Space—Inside—D.E.	822644	1101655-9; 61-2-6-7-8; 80
—	Washer—Space—Under Distributor	819460	1101673
50	Washer—Terminal Stud—Insulation	1858753	1101652-3-5-6-7-9; 66-7-8; 71-2-4-5-8-9; 80-1
51	Washer—Terminal Stud—Plain	826319	1101652-3-5-6-7-9; 66-7-8; 71-2-4-5-8-9; 80-1
MISCELLANEOUS			
—	ARM—Assembly Advance	*829892	1101658
—	BAFFLE—Oil—D.E.	820547	1101655; 61-6-7-8; 72; 80-1
—	BAFFLE—Oil—D.E.	1919657	1101662
—	BAFFLE—Oil—D.E.	1837897	1101673
52	BOLT—Thru	1908680	1101651-2-3-4-6-7-8; 60-3-4-5-9; 71-4-5-8-9
52	BOLT—Thru	1915090	1101655-9; 61-2-6-7-8; 72-3-7; 80-1
—	BRACKET—Third Brush Terminal	820103	1101654-7
—	BUSHING—Brush Spring	1904687	1101664-6-8
53	BUSHING—Relay Lead	812891	1101651-4-8; 60-1-2-3-4-9; 73-7
54	CLAMP—Third Brush Plate	817532	All except 1101658
54	CLAMP—Third Brush Plate	820107	1101658
—	CLIP—Terminal—To Brush	200182	All
—	CLIP—Terminal—To Ground or Thermostat	200144	1101654-8; 60-4; 73
55	CLIP—Terminal—To Regulator or Relay	200154	1101651-4; 61-5; 73
55	CLIP—Terminal—To Regulator or Relay	200191	1101652-8; 60-3-4-9; 77
55	CLIP—Terminal—To Regulator or Relay	200181	1101661
—	COLLAR—Inside—C.E.	811681	1101655; 63-9; 74
—	COLLAR—Inside—C.E.	1860031	1101658
—	COLLAR—Inside—C.E.	815049	1101663
—	COLLAR—Outside—C.E.	815049	1101674
—	CUP—Bearing Space—C.E.	814984	1101669
—	DISTRIBUTOR	□625-A	1101652; 73
56	GASKET—Ball Bearing Retainer Plate—D.E.	1912008	1101651-2-3-4-6-7-8; 60-3-4; 71-4-5-7-9
56	GASKET—Ball Bearing Retainer Plate—D.E.	820708	1101655-9; 61-2-6-7-8; 72-3-7; 80
57	GASKET—C.E.—Cover Plate	817220	1101651-4-6-7-9; 62; 71-7
57	GASKET—C.E.—Cover Plate	1844012	1101653; 60-4; 75-8-9
57	GASKET—C.E.—Cover Plate	1835457	1101665-6-7-8-9; 72-3; 80
57	GASKET—C.E.—Cover Plate	1850321	1101658
—	GEAR—Distributor Drive	1840774	1101652-8; 73
58	LEAD—Brush Ground	809688	All
59	LEAD—Relay	809966	1101651-4; 61-3-5; 77
59	LEAD—Relay	821004	1101658; 64; 73
59	LEAD—Relay	812004	1101660
59	LEAD—Relay	1856609	1101662-9
60	LEAD—"A" Terminal to Relay or Regulator	1914187	1101656-9; 71; 80
60	LEAD—"A" Terminal to Relay or Regulator	1868761	1101657
60	LEAD—"A" Terminal to Relay or Regulator	1878133	1101666-7; 81
60	LEAD—"A" Terminal to Relay or Regulator	1878218	1101668
60	LEAD—"A" Terminal to Relay or Regulator	1868761	1101672
60	LEAD—"A" Terminal to Relay or Regulator	1914192	1101678-9
61	LEAD—"F" Terminal to Relay or Regulator	1914187	1101657
61	LEAD—"F" Terminal to Relay or Regulator	1878133	1101666-7; 78-9; 81
61	LEAD—"F" Terminal to Relay or Regulator	1868761	1101668; 71-2; 80
61	LEAD—"F" Terminal to Relay or Regulator	1914187	1101674

*For parts see Advance Arm—Group 1.


□For parts see Distributor—Group 83.

Revised to September 1, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
—	OILER—C.E.	113702	1101651-4-5-6-7-9; 62; 71-7
—	OILER—C.E.	1880642	1101652-3; 60-1-3-4-5-6-7-8-9; 72-3-4-5-8-9; 80
—	OILER—C.E.	125609	1101655
62	OILER—D.E.	125609	1101651-2-4
62	OILER—D.E.	113702	1101653-7-8-9; 60-1-2-3-4-6-7-8; 71-2-3-4-5-7-8-9; 80
—	PIN—Brush Holder Hinge	817313	1101651-3-4-6-7-9; 62-3-4-6-9; 71-2-4-5-7-8-9
—	PIN—Brush Holder Stop	817314	1101651-3-4-6-9; 62-3-4-6-9; 71-2-4-5-7-8-9
—	PIN (& Insulation)—Brush Holder Hinge	812016	All
—	PIN (& Insulation)—Brush Holder Stop	812015	All
—	PIN—Dowel—C.E.	809062	All
63	PIN—Dowel—D.E.	809593	1101651-4-5-6-7-8-9; 61-2-3-5-6-7-8-9; 71-2-3-4-5-7-8-9; 80-1
—	PIN—Dowel (For Bushing) C-E	1849200	1101652; 73
—	PIN—Dowel (For Bushing) D.E.	809640	1101665-9
64	PIN—Third Brush Plate Spring Washer	809614	All
—	PIN—Third Brush Plate Stop	1849986	1101663; 74-8-9
65	PLATE—Ball Bearing Retainer—D.E.	1911263	1101651-2-3-4-6-7-8; 60-3-4; 71-4-5-8-9
65	PLATE—Ball Bearing Retainer—D.E.	820707	1101655-9; 61-2-6-7-8; 72-3-7; 80
65	PLATE—Ball Bearing Retainer—D.E.	1869891	1101681
66	PLATE—End Cover—C.E.	1914222	1101651-4-6-7-9; 71-7
66	PLATE—End Cover—C.E.	186212	1101652; 61-2-5-6-7-8-9; 72-3; 80-1
66	PLATE—End Cover—C.E.	815868	1101653; 60-4; 75-8-9
66	PLATE—End Cover—C.E.	1850320	1101658
66	PLATE—End Cover—C.E.	814985	1101663; 74
—	PLATE—Felt Retainer—C.E.	809960	1101663; 74
67	PLATE—Felt Retainer—D.E.	819104	1101651-2-3-4-6-7-8; 60-3; 71-4-5-8-9
67	PLATE—Felt Retainer—D.E.	820709	1101655-9; 61-2-6-7-8; 72-7; 80
67	PLATE—Felt Retainer—D.E.	810259	1101655-9
67	PLATE—Felt Retainer—D.E.	1837371	1101673
—	PLUG—Oil Hole—C.E.	1911097	1101651-4-6-7-9; 62; 71-7
—	PLUG—Pipe—C.E.	103884	1101652-4
—	PLUG—Pipe Side of Distributor Well	103877	1101658
—	SEAL—Oil—D.E.	1871382	1101664
68	SHOE—Pole	816331	All except 1101654
68	SHOE—Pole	1853592	1101654
—	RESISTANCE Only	810922	1101658; 65; 73
—	RESISTANCE (& Bracket) Assembly	1881392	1101673
—	SPRING—Distributor Hold Down	827234	1101658
—	THERMOSTAT	816260	1101658; 65
—	WICK—Oil—C.E.	1947350	1101651-4-6-7-9; 62; 71-7
—	WICK—Oil—C.E.	1919851	1101653; 60-1-3-4-5-6-7-8-9; 72-4-5-8-9; 80
—	WICK—Oil (& Spring) C.E.	809591	1101652; 73
—	WICK—Oil—D.E.	1947350	1101666-7
—	Woodruff KEY—C.E.	124542	1101652-8; 73
—	Woodruff KEY—C.E.	124545	1101655
—	Woodruff KEY—C.E.	124546	1101663; 74
70	Woodruff KEY—D.E.	124545	1101651-2-3-4-6-7; 64; 71-5
70	Woodruff KEY—D.E.	124548	1101655-9; 61-2-5-6-7-8; 72-3-7; 80-1
70	Woodruff KEY—D.E.	124546	1101658; 60-3; 74-8-9
70	Woodruff KEY—D.E.	124543	1101669

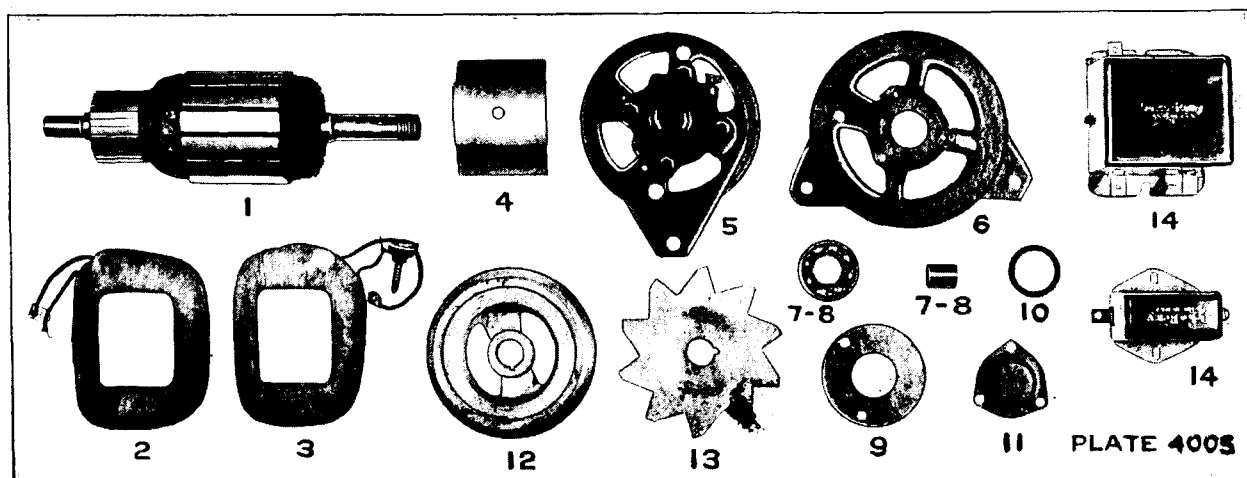 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Arma- ture	Field Coil R.H.	Field Coil L.H.	Pole Shoe	Commu- tator End Frame	Drive End Frame	Bushing or Ball Bearing C.E.	Bushing or Ball Bearing D.E.	Ball Bearing Re- tainer Plate D.E.	Felt Washer Re- tainer Plate D.E.	Commu- tator Cover Plate	Pulley	Fan	Relay or Control Unit
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1101682	1847673	*1902101		816331	1854889	1845821	954378	954521	820707	820709	816212			*5839
1101683	1842281	*1902101		"	817770	1837640	812823	"	"	"	"			265-G
1101685	1855609	*1902102		"	1845819	817775	954378	810641			814985			†5861
1101686	817590	*1902101		"	"	1837920	"	817117			816212			*5839
1101688	1842281	*1913554		1914618	817770	1837640	812823	954521	820707	820709	"			○1118790

 
*For parts see Regulator—Group 4.

†For parts see Regulator—Group 5.

○For parts see Regulator—Group 6-F.

*Field Coil Set.

Delco-Remy
SERVICE PARTS CATALOG

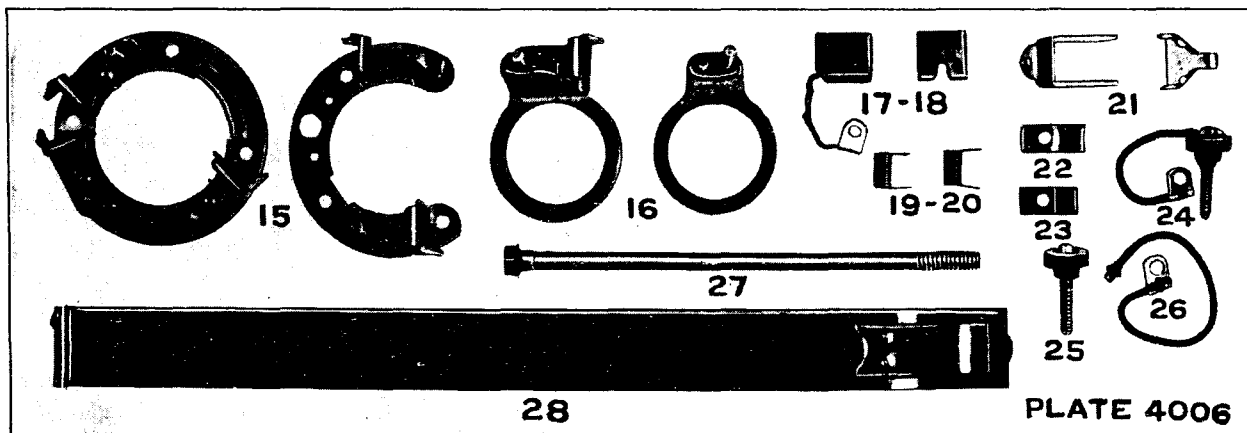

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Main Brush Plate	Third Brush Plate	Main Brush	Third Brush	Main Brush Spring	Third or Ground Brush Spring	Brush Holder or Tension Lever	Third Brush Plate Clamp	Third Brush Plate Clamp Spring	Terminal Stud and Lead	Terminal Stud Only	Relay Lead	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
1101682		809936	820517	820517	1904685	1904688	809642	817532		1858754	1858749		1915090	1872638
1101683		809698	"	"	809658	809644	"	"		"	"	812004	"	1861502
1101685		"	"	"	"	"	"	"		"	"		1908680	1872638
1101686		"	"	"	"	"	"	"		"	"	1856609	"	1861502
1101688		"	□	□	"	"	"	"	809644	1858754	1858749		1915090	1872638

Use Brush Set 1880998

Revised to Aug. 15, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	1962276	1101682-3
Lock Washer—Brush Attaching Screw	131044	1101682-3-5-6-8
Lock Washer—Brush Lead Attaching Screw	1914816	1101682-3-5-6-8
Lock Washer—Brush Ground Lead Screw	453844	1101682-3-8
Lock Washer—Distributor Clamp Screw	9421423	1101683-8
Lock Washer—End Cover Plate Screw—C.E.	453435	1101682-3-5-6-8
Lock Washer—Field Lead Screw—To Thermostat	1914816	1101683
Lock Washer—Regulator Mounting Screw	138479	1101682-5-6
Lock Washer—Relay Mounting Screw	453844	1101683
Lock Washer—Shaft Nut—C.E.	9421426	1101683-8
Lock Washer—Terminal Stud Nut	1914579	1101682-5-8
Lock Washer—Thermostat Attaching Screw	456413	1101683
Lock Washer—Thermostat Resistance Attaching Screw	1914816	1101683
Lock Washer—Third Brush Plate Clamp Screw	453435	1101682-3-5-6-8
Lock Washer—Thru Bolt	9421424	1101682-3-5-6-8
NUTS		
Nut—Cover Band Screw	453433	1101682-5-8
Nut—Gear Attaching	272121	1101688
Nut—Shaft—C.E.	122264	1101683
Nut—Shaft—C.E.	114496	1101686
Nut—Shaft—D.E.	1917570	1101682-3-6-8
Nut—Shaft—D.E.	1841367	1101685
Nut—Terminal Stud	121743	1101682-5-8
SCREWS		
Screw—Ball Bearing Retainer Plate—D.E.	5017850	1101682
Screw—Ball Bearing Retainer Plate—D.E.	1914580	1101683-8
Screw—Brush Attaching	453986	1101682-3-5-6-8
Screw—Brush Lead Attaching	453978	1101682-3-5-6-8
Screw—Brush Ground Lead	453418	1101682-3-8
Screw—Cover Band	453479	1101682-5-8
Screw—Distributor Clamp	802771	1101683-8
Screw—End Cover Plate—C.E.	1914580	1101682-3-5-6-8
Screw—Field Lead to Thermostat	453978	1101683
Screw—Pole Shoe	1913960	1101682-3-5-6-8
Screw—Relay Mounting	453418	1101683
Screw—Regulator Mounting	132900	1101682-5-6-8
Screw—Thermostat Attaching	459329	1101683
Screw—Thermostat Resistance Attaching	132688	1101683
Screw—Third Brush Plate Clamp	9416183	1101682-3-5-6-8
WASHERS		
Washer—Ball Bearing Space—C.E.	809960	1101686
Washer—Brush Arm Space	1857412	1101688
Washer—Felt—C.E.	815042	1101685
Washer—Felt—D.E.	820706	1101682-3-8
Washer—Felt—D.E.	810258	1101686
Washer—Insulating—Terminal Stud	1858753	1101682-5-8
Washer—Plain—Brush Attaching	809551	1101682-3-5-6-8
Washer—Plain—Regulator Mounting Screw	1856056	1101682-5-6-8
Washer—Plain—Shaft Nut—D.E.	1934383	1101682-3-6-8
Washer—Plain—Shaft Nut—D.E.	1914589	1101685
Washer—Plain—Terminal Stud	826319	1101682-5-8
Washer—Shakeproof—Regulator Mounting	138479	1101688
Washer—Space—Inside—D.E.	822644	1101682-3-8
Washer—Spring—Third Brush Plate	809824	1101682-5-6
MISCELLANEOUS		
Brush Holder Hinge PIN	817313	1101685-6
Brush Holder Hinge PIN & INSULATION	812016	1101682-3-5-6-8
Brush Holder Stop PIN	817314	1101685-6
Brush Holder Stop PIN & INSULATION	812015	1101682-3-5-6-8
BUSHING—Brush Spring	1904687	1101682
BUSHING—Insul. Terminal Stud	*	1101688
BUSHING—Relay Lead	812891	1101683-6

*Included with 1858749 Stud.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
COLLAR—Oil Throwing—D.E.	1854891	1101682
COLLAR—Oil Throwing—D.E.	1838185	1101683-8
COLLAR—Space—Inside—C.E.	811681	1101685-6
COLLAR—Space—Outside—C.E.	817224	1101685
CUP—Ball Bearing—Space—C.E.	814984	1101686
CUP—Felt Washer Retainer—D.E.	810259	1101686
DISTRIBUTOR (For parts see Distributor Group 95-A)	1111532	1101683-8
Dowel PIN—Bushing—C.E.	1849200	1101683
Dowel PIN—C.E.	809062	1101682-3-5-6-8
Dowel PIN—D.E.	809593	1101682-3-5-6-8
Dowel PIN—Bushing—D.E.	809640	1101685-6
GASKET—Ball Bearing Retainer Plate—D.E.	820708	1101682-3-8
GASKET—End Cover Plate—C.E.	1835457	1101682-3-6-8
GEAR—Distributor Drive	1840774	1101683-8
INSULATION—Field Coil	1914491	1101688
LEAD—"A" Terminal to Regulator	1878133	1101682-5
LEAD—"A" Terminal to Regulator	1914185	1101688
LEAD—Brush Ground	809688	1101682-3-5-6-8
LEAD—"F" Terminal to Regulator	1878133	1101682
LEAD—"F" Terminal to Regulator	1868217	1101685
LEAD—"F" Terminal to Regulator	1911485	1101688
OILER—C.E.	114998	1101682-3-5-6-8
OILER—D.E.	113702	1101682-3-8
Oil BAFFLE—D.E.	820547	1101682
Oil BAFFLE—D.E.	1837897	1101683-8
Oil BAFFLE—D.E.	820547	1101685
Oil WICK—C.E.	1919851	1101682-5-6
Oil WICK—D.E.	1947350	1101682
Oil WICK—D.E.	802696	1101685
Oil WICK & SPRING	809591	1101683-8
PIN—Oil Wick—D.E.	114877	1101685
PIN—Third Brush Plate Spring Washer	809614	1101682-3-5-6
PIN—Third Brush Plate Stop	1849986	1101685-6
Pipe PLUG—C.E.	103884	1101683-8
PLATE—Felt Washer Retainer—C.E.	809960	1101685
PLUG—Oil Hole—D.E.	811878	1101685
RESISTANCE—Thermostat	808767	1101683
Terminal CLIP—To Brush	200182	1101682-3-5-6
Terminal CLIP—To Brush	200362	1101688
Terminal CLIP—To Relay	200154	1101683
Terminal CLIP—Field Lead	200144	1101683
Terminal CLIP—To Regulator	200191	1101686
THERMOSTAT Assembly	1901604	1101683
Woodruff KEY—C.E.	124542	1101683-8
Woodruff KEY—C.E.	124546	1101685
Woodruff KEY—D.E.	124548	1101682-3-5-8
Woodruff KEY—D.E.	124546	1101686

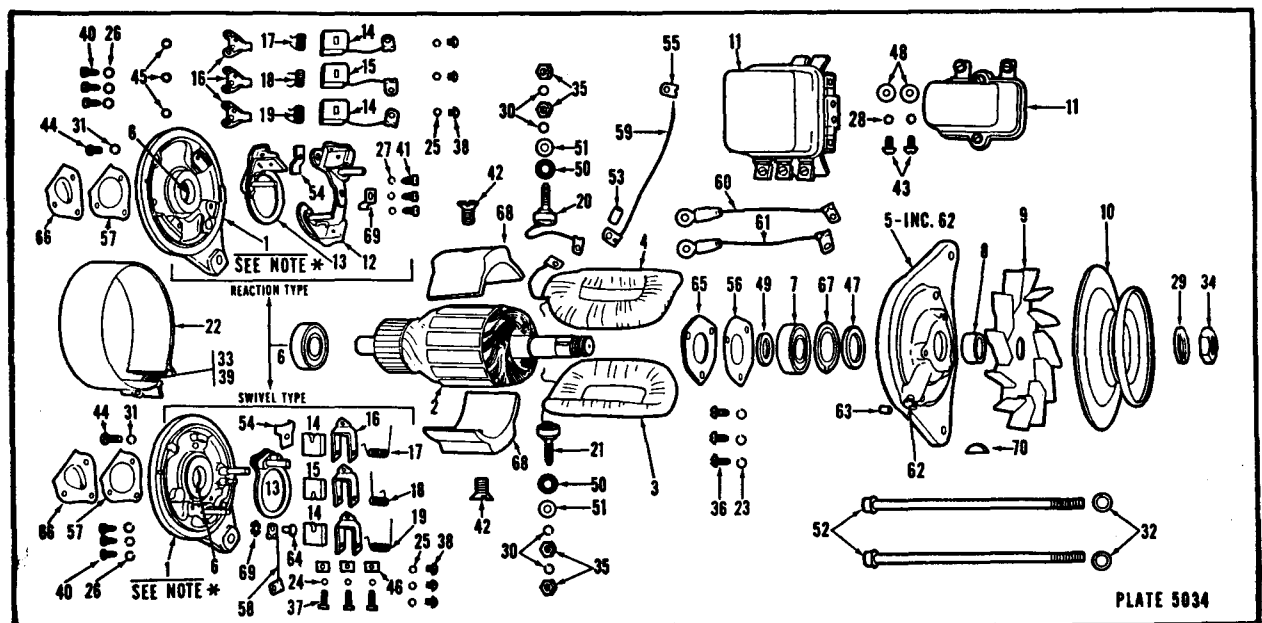 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame C.E.	Armature	Field Coil L.H.	Field Coil R.H.	Frame D.E.	Bushing or Ball Bearing C.E.	Bushing or Ball Bearing D.E.	Collar — Outside D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1101701.....	1864824	1867625	1902103		1864831	908503	954521	†1842982			267-E
1101702.....	1859068	1867689	"		1871380	"	"	1871381	1859069		
1101703.....	1845819	820909	"		816210	954378	810641				1872508
1101704.....	"	1886821	"		817879	"	954378	809953			267-A
1101705.....	1864662	1868764	"		1859579	812823	"	817224			*5838
1101706.....	"	828167	"		"	"	"	"			‡5586
1101707.....	1869166	1855429	1902104		1869168	"	"	1858603	1866400	1869146	
1101708.....	1861379	1872039	1902103		1859040	908503	"	"			267-D
1101709.....	1845819	1886821	"		817879	954378	"	809953			†1118440
1101710.....	1908871	1872659	"		"	812823	"	817224		1872660	1872508
1101711.....	1849981	1855594	"		"	954519	"	809953			"
1101712.....	1908871	828167	"		1873830	812823	"	817224			*5838
1101713.....	1845819	1874037	"		1871380	954378	954521	1871381			"
1101714.....	1957635	1855429	1902104		1878691	812823	954378	1858603			
1101715.....	1908871	1874336	1902103		1874338	"	"	1874339			†1116777
1101716.....	1874774	828167	"		1874776	"	"	817224		1885475	†1118440
1101717.....	1845819	1886821	"		817879	954378	"	809953			1872508
1101718.....	"	1877550	"		1837640	"	954521	1838185			267-A
1101719.....	1849981	1855594	"		817879	954519	954378	809953			†1118440
1101720.....	1908871	1877870	"		1878691	812823	"	817224			1872508
1101721.....	1845819	1877933	"		1845821	954378	954521	1845822			†1118440
1101722.....	1849981	1878276	1902104		817879	954519	954378	813281			"
1101723.....	822652	1878171	"		817223	812823	"	817224			1872508
1101724.....	1908871	1878273	"		1874338	"	"	1874339			
1101725.....	"	1878415	"		‡1873830	"	"	817224			†1116777
1101726.....	"	"	"		"	"	"	"			
1101727.....	1878689	1855429	"		"	"	"	"		1862200	267-E
1101728.....	1878767	1878171	"		"	"	"	"		"	"
1101729.....	1879153	1855429	"		1879154	"	"	"			267-D
1101730.....	1886919	"	"		1886920	"	"	"			

†For parts see Regulator—Group 3.

*For parts see Regulator—Group 4.

‡For parts see Regulator—Group 5-B.

*C.E. Frame includes where necessary: Bushing, Oiler, Oil Wick, Oil Hole Plug, Dowel Pin and Brush Pins.

 
‡When Drive End Frame with two Oilers is used, 1874929 Felt Washer Retainer Plate with two oil passages must also be used.

†For parts see Relay—Group 4.

‡Also use 1839007 Oil Throwing Collar.

*Field Coil Set (2 coils).

Delco-Remy SERVICE PARTS CATALOG

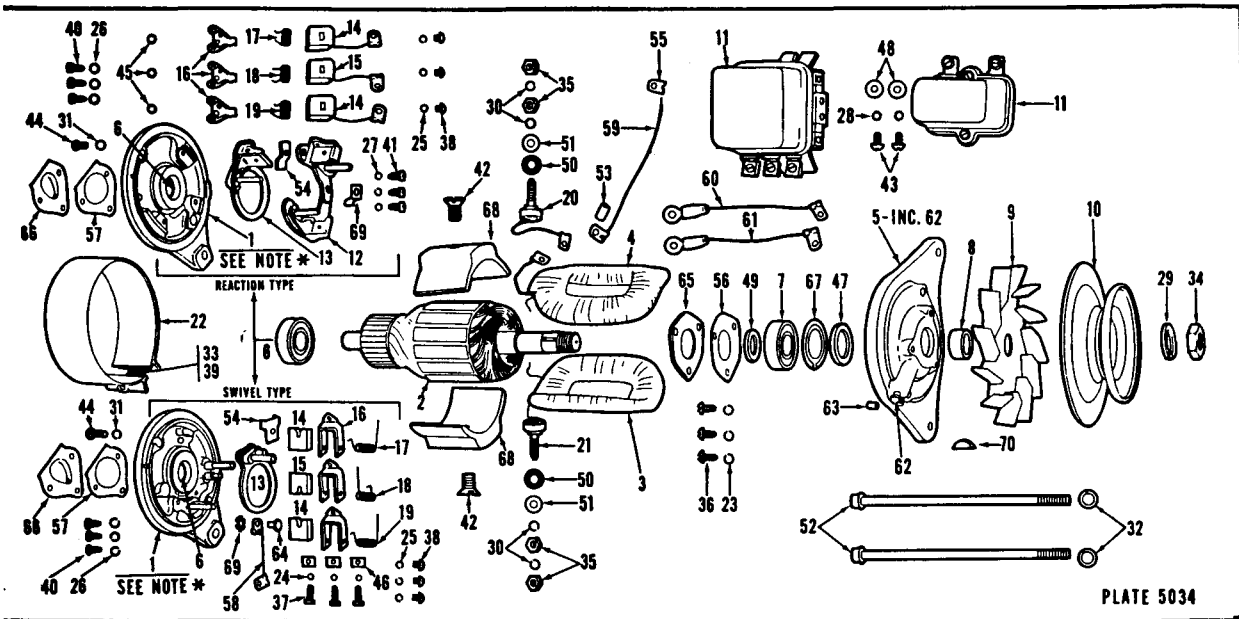

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Brush Plate — Main	Brush Plate — 3rd	Brush — Main	Brush — 3rd	Arm or Brush Holder	Spring — R.H. — Main	Spring — 3rd	Spring — L.H. — Main	Terminal Stud & Lead	Terminal Stud Only	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1101701.....		809698	809637	809637	809642	809658	809644	809644			1869249
1101702.....	1908550	1909151	^Δ 1906984	^Δ 1906940	1904365	1903871	1946798	1903871	1858754	1858749	1861502
1101703.....		809698	809637	809637	809642	809658	809644	809644			1872638
1101704.....			"	"	"	"	"	"			816340
1101705.....		"	"	"	"	"	"	"	1858754	1858749	1872638
1101706.....		"	"	"	"	"	"	"			1861502
1101707.....	1871806		^Δ 1906984	^Δ 1906940	1904365	1903871	1946798	1903871	1858754	1858749	"
1101708.....		809698	809637	809637	809642	809658	809644	809644			"
1101709.....		"	"	"	"	"	"	"			816340
1101710.....		"	"	"	"	"	"	"	1858754	1858749	1872638
1101711.....		"	"	"	"	"	"	"	"	"	"
1101712.....		"	"	"	"	"	"	"	"	"	"
1101713.....		"	"	"	"	"	"	"			1861502
1101714.....	1871806		^Δ 1906984	^Δ 1906940	1904365	1903871	1946798	1903871	1858754	1858749	816340
1101715.....		809698	809637	809637	809642	809658	809644	809644	"	"	1872638
1101716.....	1908550	1909151	^Δ 1906984	^Δ 1906940	1904365	1903871	1846798	1903871	"	"	"
1101717.....		809698	809637	809637	809642	809658	809644	809644	"	"	"
1101718.....		"	"	"	"	"	"	"			1861502
1101719.....		"	"	"	"	"	"	"			816340
1101720.....		"	"	"	"	"	"	"	1858754	1858749	1872638
1101721.....		"	"	"	"	"	"	"			1861502
1101722.....		"	"	"	"	"	"	"			816340
1101723.....		809936	"	"	"	"	809658	"	1858754	1858749	1872638
1101724.....		809698	"	"	"	"	809644	"	"	"	"
1101725.....		"	"	"	"	"	"	"	"	"	"
1101726.....		"	"	"	"	"	"	"	"	"	"
1101727.....	1908550	1854074	^Δ 1906984	^Δ 1906940	1904365	1903871	1946798	1903871			1861502
1101728.....	1909151	1910916	"	1850768	"	1916324	1903870	1908829			"
1101729.....	1908550	1909151	"	"	"	1903871	1946798	1903871			"
1101730.....	"	"	"	"	"	"	"	"	1858754	1858749	1872638

^ΔFor complete Brush Set order Part No. 1857963.

Revised to Aug. 15, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw.....	138479	1101702; 13
23	Lock Washer—Ball Bearing Retainer Plate Screw.....	1962276	1101701-4-5-6-7-8-9; 10-11-12-14-15-16-17-18-19; 20-1-3-4-5-6-7-9; 30
24	Lock Washer—Brush Attaching Screw.....	456413	1101701-3-4-5-6-8-9; 10-11-12-13-15-17-18-19; 20-1-2-3-4-5-6
.....	Lock Washer—Brush Ground Lead Screw.....	453844	1101701-5-6; 23-9
25	Lock Washer—Brush Lead Attaching Screw.....	1914816	1101701-2-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-18-19; 20-3-4-5-6-8-9; 30
26	Lock Washer—C.E. Cover Plate Screw.....	453435	1101701-3-4-8-9; 11-13-17-18-19; 21-2-3
26	Lock Washer—C.E. Cover Plate Screw.....	456413	1101705-6-7; 10-14-16; 20
26	Lock Washer—C.E. Cover Plate Screw.....	453844	1101724-5-6-7-8-9; 30
.....	Lock Washer—Distributor Hold Down Screw.....	9421423	1101701
.....	Lock Washer—Field Lead Ground Screw.....	453844	1101701; 17
.....	Lock Washer—Fuse Connector to Field Lead Screw.....	453844	1101708
.....	Lock Washer—Fuse Holder.....	802763	1101708
.....	Lock Washer—Generator Mounting Base Screw.....	142248	1101710
27	Lock Washer—Main Brush Plate Screw.....	453844	1101702-7; 14-16; 27-8-9; 30
28	Lock Washer—Regulator Attaching Screw.....	138479	1101705-6-9; 12-16-19; 21-2; 30
28	Lock Washer—Regulator Attaching Screw.....	178378	1101713
28	Lock Washer—Relay Attaching Screw.....	453844	1101701-3; 10-11-17-18; 20-3-4-7-8-9
28	Lock Washer—Relay Attaching Screw.....	138479	1101715; 25
.....	Lock Washer—Shaft Nut—C.E.....	9421426	1101701
.....	Lock Washer—Shaft Nut—C.E.....	1915265	1101702-6-7-8; 12-14-16
29	Lock Washer—Shaft Nut—D.E.....	1915265	1101720-3-5-6-7-8-9; 30
29	Lock Washer—Shaft Nut—D.E.....	802764	1101704-9; 17
29	Lock Washer—Shaft Nut—D.E.....	9421426	1101711-19
30	Lock Washer—Terminal Stud.....	1914579	1101702-3-5-7-9; 11-12-14-15-16-17; 20-3-4-6; 30
.....	Lock Washer—Thermostat Attaching Screw.....	456413	1101703-4; 10-11-18
.....	Lock Washer—Thermostat Resistance Screw.....	1914816	1101703-4; 10-11-18
.....	Lock Washer—Thermostat Terminal Screw.....	1914816	1101703-4; 10-11-18
31	Lock Washer—Third Brush Plate Clamp Screw.....	453435	1101701-3-4-5-6-8-9; 10-11-12-13-15-16-17-18-19; 20-1-2-3-4-5-6-7-9; 30
32	Lock Washer—Thru Bolt.....	9421424	All
NUTS			
33	Nut—Cover Band Screw.....	453433	1101703-5; 10-11-12-15-16-17; 20-3-4-5-6; 30
.....	Nut—Shaft—C.E.....	114495	1101701-9; 11-17
.....	Nut—Shaft—C.E.....	1915172	1101702-6-7-8; 12-14-16
.....	Nut—Shaft—C.E.....	1917035	1101703
34	Nut—Shaft—D.E.....	114495	1101711-19
34	Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{1}{4}$ Slotted).....	1917570	1101701-2-3-5; 21-5-6
34	Nut—Shaft—D.E.....	1917035	1101710-13
34	Nut—Shaft—D.E.....	1915172	1101720-3-7-8-9; 30
34	Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{1}{4}$ Hex.).....	1914308	1101725-6
35	Nut—Terminal Stud.....	121743	1101702-3-5-7-9; 11-13-14-15-16-17; 20-3-4-6; 30
SCREWS			
36	Screw—Ball Bearing Retainer Plate.....	5017850	1101702; 13
36	Screw—Ball Bearing Retainer Plate.....	1914580	1101701-4-5-6-7-8-9; 10-11-12-14-15-16-17-18-19; 20-1-2-3-4-5-6-8-9; 30
37	Screw—Brush Attaching.....	453986	1101701-3-4-5-6-8-9; 10-11-12-13-15-16-18-19; 20-1-2-3-4-5-6
.....	Screw—Brush Ground Lead.....	453418	1101701-5-6; 23; 29
38	Screw—Brush Lead Attaching.....	453978	1101701-3-4-5-6-7-8-9; 10-11-12-13-15-16-17-18-19; 20-1-2-3-4-5-6; 30
38	Screw—Brush Lead Attaching.....	453460	1101702; 14
38	Screw—Brush Lead Attaching.....	454329	1101729
39	Screw—Cover Band (10-32x $1\frac{1}{4}$).....	132143	1101703-5; 10-11-12-15-16-17; 20-3-4-5-6; 30
39	Screw—Cover Band (10-32x $1\frac{1}{4}$).....	435429	1101711-17
40	Screw—C.E.—Cover Plate.....	1914580	1101701-3-4-8-9; 11-13-17-18-19; 21-2
40	Screw—C.E.—Cover Plate.....	454408	1101705-6-7; 12-14-15-16; 20-3-4-5-7-8-9; 30
40	Screw—C.E.—Cover Plate.....	453418	1101710
.....	Screw—Distributor Hold Down.....	121815	1101701
.....	Screw—Field Lead Ground.....	453418	1101701; 17
.....	Screw—Fuse Connector to Field Lead.....	453304	1101708

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
SCREWS—Continued			
.....	Screw—Generator Mounting Base.....	122104	1101710
41	Screw—Main Brush Plate Attaching.....	454408	1101707; 14-15-16; 27-8-9; 30
41	Screw—Main Brush Plate Attaching.....	453461	1101702
42	Screw—Pole Shoe.....	1843646	All
43	Screw—Regulator Attaching.....	453319	1101705-6-9; 12-13-16-19; 21-2; 30
43	Screw—Relay Attaching.....	453418	1101701-3-4-8; 10-11-17-18; 20-3-4-7-9
43	Screw—Relay Attaching.....	132900	1101715; 25
.....	Screw—Thermostat Attaching.....	454329	1101703-4; 10-11-18
.....	Screw—Thermostat Terminal.....	453978	1101703-4; 10-11-18
.....	Screw—Thermostat Resistance Attaching.....	453460	1101703-4; 10-11-18
44	Screw—Third Brush Plate Clamp.....	111118	1101701
44	Screw—Third Brush Plate Clamp.....	453461	1101702
44	Screw—Third Brush Plate Clamp.....	9416183	1101703-4-5-6-8-9; 10-11-12-13-15-17-18-19; 20-1-2-3-4-5-6
44	Screw—Third Brush Plate Clamp.....	435429	1101716; 27-8-9; 30
WASHERS			
45	Washer—Brush Arm—Space.....	1857412	1101702-7; 14-16; 29; 30
46	Washer—Brush Attaching Screw.....	809551	1101701-3-4-5-6-8-9; 10-11-12-15-17-18-19; 20-1-2-3-4-5-6
.....	Washer—Distributor Hold Down Screw.....	826958	1101701
.....	Washer—Felt—C.E.....	37077	1101701
.....	Washer—Felt—C.E.....	815042	1101704-9; 17-18
47	Washer—Felt—D.E.....	820706	1101701; 18; 21
47	Washer—Felt—D.E.....	809961	1101704-5-6-8-9; 10-11-12-14-15-16-17-19; 20-2-3-4-5-6-7-8-9; 30
.....	Washer—Felt—Top of Distributor Well.....	1848687	1101701
.....	Washer—Felt Retainer—Top of Distributor Well.....	1850617	1101701
48	Washer—Regulator Attaching Screw.....	1856056	1101708-9; 12-13-16-19; 21-2; 30
48	Washer—Relay Attaching Screw.....	1856056	1101715; 25
.....	Washer—Shaft Nut—D.E.....	1934383	1101701-2; 21
.....	Washer—Shaft Nut—D.E.....	1856056	1101710-13; 25-6
.....	Washer—Shaft Nut—D.E.....	1926782	1101703
.....	Washer—Shaft Nut—D.E.....	1938744	1101711-19
49	Washer—Space—Inside—D.E.....	822644	1101701; 18
49	Washer—Space—Inside—D.E.....	809945	1101704-5-6-7-8-9; 10-11-12-14-15-16-17-19; 20-2-3-4-5-6-7-8-9; 30
50	Washer—Terminal Stud—Insul.....	1858753	1101702-3-5-7; 10-11-12-14-15-16-17; 20-3-4-5-6; 30
51	Washer—Terminal Stud—Plain.....	826319	1101702-3-5-7; 10-11-12-14-15-16-17; 20-3-4-5-6; 30
MISCELLANEOUS			
.....	ARM Assembly—Advance.....	1838617	1101701
.....	BAFFLE—Oil—D.E.....	1838047	1101701
.....	BAFFLE—Oil—D.E.....	820547	1101703
.....	BAFFLE—Oil—D.E.....	1837897	1101718
.....	BAFFLE—Oil—D.E.....	820547	1101721
.....	BASE—Generator Mounting.....	1872842	1101710
52	BOLT—Thru.....	1909173	1101701
52	BOLT—Thru.....	1908680	1101702-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-19; 20-1-2-3-4-5-6-7-8-9; 30
52	BOLT—Thru.....	1915090	1101718
.....	BUSHING—Bottom of Distributor Well.....	1850317	1101701
.....	BUSHING—Fuse Connector Insulation.....	817162	1101708
53	BUSHING—For Lead in Field Frame.....	812891	1101701-4-6-8-9; 13-18-19; 21-2-7-8-9
54	CLAMP—Third Brush Plate.....	820107	1101701
54	CLAMP—Third Brush Plate.....	1857187	1101702
54	CLAMP—Third Brush Plate.....	817532	1101703-4-5-6-8-9; 10-11-12-13-15-17-18-19; 20-1-2-3-4-5-6
54	CLAMP—Third Brush Plate.....	1850770	1101716; 27-8-9; 30
.....	CLIP—Terminal—To Brush & Ground.....	200182	All
.....	CLIP—Terminal Field Lead to Ground.....	200144	1101727-8-9
55	CLIP—Terminal—To Relay or Regulator.....	200154	1101701-6-8
55	CLIP—Terminal—To Relay or Regulator.....	200191	1101704-6-9; 13-18-19; 21-2-8-9
.....	COLLAR—Inside—C.E.....	811681	1101702-3-4-8-9; 17-18
.....	COLLAR—Inside—C.E.....	1858603	1101701
.....	COLLAR—Outside—C.E.....	815049	1101704-9; 17-18
.....	CONNECTOR—Fuse.....	816478	1101708
.....	COUPLING—D.E.....	1839478	1101715; 24


MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
....	CUP—Ball Bearing Space.....	814984	1101703
....	CUP—Felt Washer—Retainer.....	37078	1101701
....	DIAL—Advance Arm.....	815095	1101701
....	†DISTRIBUTOR.....	†649-E	1101701
....	FUSE.....	816482	1101708
56	GASKET—Ball Bearing Retainer Plate—D.E.....	820708	1101701; 18; 21
56	GASKET—Ball Bearing Retainer Plate—D.E.....	1912008	1101704-5-6-7-8-9; 10-11-12-14-15-16-17-19; 20-2-3-4-5-6-7-8-9; 30
57	GASKET—C.E. Cover Plate.....	1850321	1101701
57	GASKET—C.E. Cover Plate.....	1835457	1101703; 13; 21
57	GASKET—C.E. Cover Plate.....	817220	1101705-6-7; 10-12-14-15-16; 20-3-4-5-6-7-8-9; 30
57	GASKET—C.E. Cover Plate.....	1844012	1101711-19; 22
....	GEAR—Distributor Drive.....	1850322	1101701
....	HOLDER—Fuse.....	816481	1101708
58	LEAD—Brush Ground.....	820315	1101701
58	LEAD—Brush Ground.....	809688	1101703-4-5-6-8-9; 10-11-12-13-17-18-19; 20-1-2-3-4-5-6
59	LEAD—Relay.....	809966	1101701-6-9; 19; 21-2-8
59	LEAD—Relay.....	812004	1101704; 18; 27-9
59	LEAD—Relay.....	1902134	1101708
59	LEAD—Relay.....	821449	1101713
60	LEAD—"A" Terminal to Relay or Regulator.....	1914187	1101703-5; 10-11-16-17; 20-4; 30
60	LEAD—"A" Terminal to Relay or Regulator.....	1872661	1101710
60	LEAD—"A" Terminal to Relay or Regulator.....	1868761	1101712
60	LEAD—"A" Terminal to Relay or Regulator.....	1914185	1101715
60	LEAD—"A" Terminal to Relay or Regulator.....	1911485	1101725
61	LEAD—"F" Terminal to Relay or Regulator.....	1914187	1101712-15-16; 30
61	LEAD—"F" Terminal to Relay or Regulator.....	1914192	1101723-5
....	OILER—C.E.....	1880642	1101703-4-9; 11-13-17-18-19; 21-2
....	OILER—C.E.....	113702	1101701-5-6-7-8; 10-12-14-15-16; 20-3-5-6-9; 30
62	OILER—C.E.....	125609	1101702-7-8; 12-14-16; 24
62	OILER—D.E.....	113702	1101701-4-5-6-9; 10-17-18-19; 20-1-2-3-9; 30
62	OILER—D.E.....	1880642	1101711
62	OILER—D.E.....	125609	1101715; 24-5-6-7-8
....	PIN—Brush Holder Hinge.....	817313	1101701-3-4-5-6-8-9; 10-11-12-13-15-17-18-19; 20-1-2-4-5-6
....	PIN—Brush Holder Stop.....	817314	1101701-3-4-5-6-8-9; 10-11-12-13-15-17-18-19; 20-1-2-4-5-6
....	PIN (& Insulation)—Brush Holder Hinge.....	812016	1101701-3-4-5-6-8-9; 10-11-12-13-15-17-18-19; 20-1-2-4-5-6
....	PIN (& Insulation)—Brush Holder Stop.....	812015	1101701-3-4-5-6-8-9; 10-11-12-13-15-17-18-19; 20-1-2-4-5-6
....	PIN—Cotter—Shaft Nut.....	103373	1101710
....	PIN—Coupling—D.E.....	820711	1101715; 24
....	PIN—Dowel—C.E.....	809062	1101704-5-6-7-8-9; 10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30
....	PIN—Dowel—For Bushing—D.E.....	809640	1101703
63	PIN—Dowel—D.E.....	809593	1101701-2-3-4-5-6; 12-13-14-15-16-18; 20-1-3-4-5-6-7-8-9; 30
....	PIN—Oil Wick—D.E.....	114877	1101703
....	PIN—Third Brush Plate Stop.....	1849986	1101703-4-9; 11-17-19; 22
....	PIN—Third Brush Plate Stop.....	1840738	1101715
64	PIN—Third Brush Tension Spring.....	809614	1101701-3-4-5-6-8; 10-11-12-13-15-17-18-19; 20-1-2-3-4-5-6
65	PLATE—Ball Bearing Retainer—D.E.....	820707	1101701; 18; 21
65	PLATE—Ball Bearing Retainer—D.E.....	1871383	1101702; 13
65	PLATE—Ball Bearing Retainer—D.E.....	1911263	1101704-5-6-7-8-9; 10-11-12-14-15-16-17-19; 20-2-3-4-5-6-7-8-9; 30
....	PLATE—Ball Bearing Space—C.E.....	809960	1101703-4; 18
66	PLATE—End Cover—C.E.....	1850320	1101701
66	PLATE—End Cover—C.E.....	816212	1101703; 13; 21
66	PLATE—End Cover—C.E.....	814985	1101704-9; 17-18
66	PLATE—End Cover—C.E.....	1914222	1101705-6-7; 10-12-14-15-16; 20-3-4-5-6-7-8-9; 30

†For parts see Distributor—Group 84.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
66	PLATE—End Cover—C.E.	1859796	1101708
66	PLATE—End Cover—C.E.	815868	1101711-19; 22
67	PLATE—Felt Retainer—C.E.	809960	1101717
67	PLATE—Felt Retainer—D.E.	820709	1101701; 18; 21
67	PLATE—Felt Retainer—D.E.	819104	1101704-5-6-7-8-9; 10-11-12-14-15-16-17-19; 20-2-3-4-5-6-7-8-9; 30
---	PLUG—Oil Hole—C.E.	816315	1101705-6-7; 10-12-14-15-16; 20-3-4-5-6-7-8-9; 30
---	PLUG—Oil Hole—D.E.	811878	1101703
---	PLUG—Pipe—Side of Distributor Well	103877	1101701
---	RESISTANCE—Thermostat	810922	1101703-4; 10-11-18
---	SEAL—Oil—Inside—D.E.	1871382	1101702; 13
68	SHOE—Pole	816331	All
---	SLEEVE—Shaft—D.E.	1869793	1101722
---	SPRING—Fuse	810670	1101708
69	SPRING—Third Brush Plate Tension	809824	1101701-3-4-5-6-8-9; 10-11-12-13-15-17-18-19; 20-1-2-3-4-5-6
69	SPRING—Third Brush Plate Tension	1850771	1101702-16; 27-8-9; 30
---	THERMOSTAT Assembly	814994	1101703-4; 10-11-18
---	WICK—Oil—C.E.	1919851	1101703-4-9; 11-13-17-18-19; 21-2
---	WICK—Oil—C.E.	1947350	1101705-6-7; 10-12-14-15-16; 20-3-4-5-6-7-8-9; 30
---	WICK—Oil—D.E.	802696	1101703
---	Woodruff KEY—C.E.	124542	1101701
---	Woodruff KEY—C.E.	124545	1101702-5-6-7-8; 27-8
---	Woodruff KEY—C.E.	124546	1101704; 17-18
70	Woodruff KEY—D.E.	124548	1101701-3; 10; 21
70	Woodruff KEY—D.E.	124546	1101702-4-9; 11-15-17-19; 24
70	Woodruff KEY—D.E.	124545	1101712-14-16; 20-3-5-6-9; 30
70	Woodruff KEY—D.E.	106749	1101713

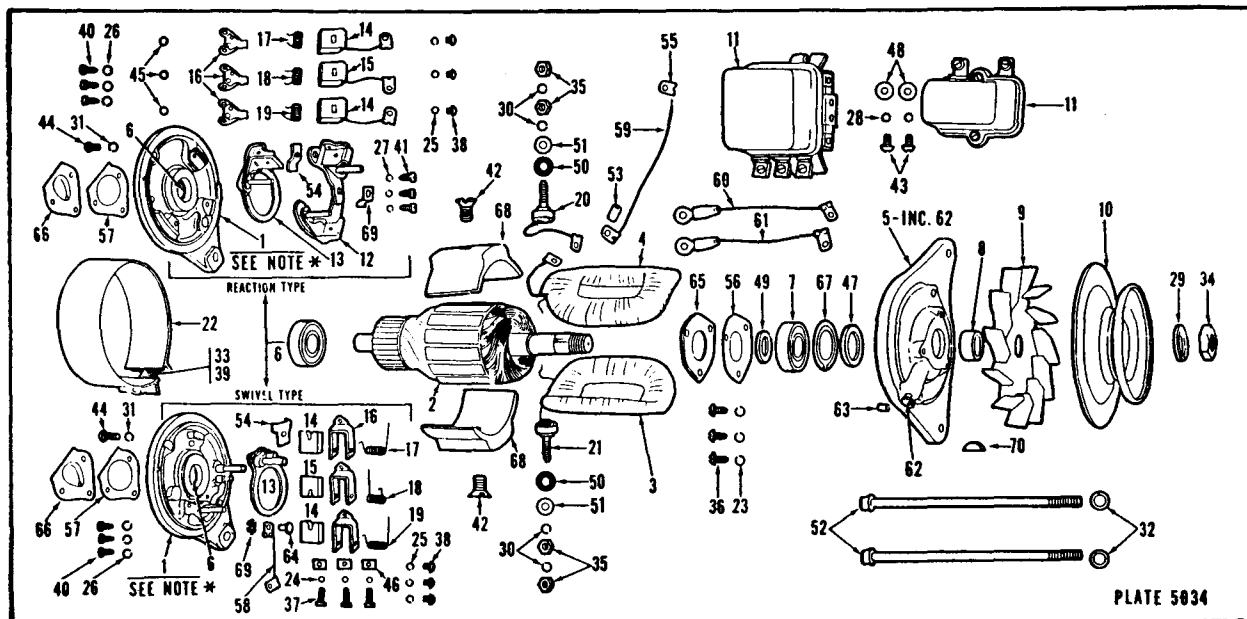 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame — C.E.	Arma- ture	Field Coil — L.H.	Field Coil — R.H.	Frame — D.E.	Bushing or Ball Bearing — C.E.	Ball Bearing — D.E.	Collar — Outside — D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1101731.....	1879202	1878171	1902140		1886920	812823	954378	817224			
1101732.....	1908871	1880350	"		1880351	"	954521	1863561			*5838
1101733.....	1879696	1879698	1902103		1879699	"	954378	1858603			1118440
1101734.....	1879670	1855429	1902104		1879671	"	"	817224			"
1101735.....	1878689	"	"		1908869	"	"	"			267-E
1101736.....	1880975	"	"		1880976	"	"	1858603			
1101737.....	1908871	1878273	"		1874338	"	"	1874339			*5838
1101738.....	"	1878415	"		†1873830	"	"	817224			x "
1101739.....	"	1855429	"		817879	"	"	"			•1872508
1101740.....	822652	1878171	"		817223	"	954378	1858603			1118440
1101741.....	"	"	"		†1873830	"	"	"			*5838
1101742.....	1908871	1855429	"		"	"	"	"			x "
1101743.....	1854889	1882727	"		1845821	954378	954521	1854891			1118440
1101744.....	1882744	1855429	"		1868286	812823	954378	1858603			
1101745.....	1849981	1883147	"		1837640	954519	954521	1838185			*5838
1101746.....	1908871	1855429	"		1908869	812823	954378	817224			•1872508
1101747.....	"	"	"		817223	"	"	"			^5849
1101748.....	1850145	1883846	"		1842981	"	954521	1842982			267-E
1101749.....	1886919	1884120	"		1886920	"	954378	817224			^5891
1101750.....	1868284	1855429	"		1882104	"	"	1858603	1866400	1924619	
1101751.....	1879153	1878415	"		1879154	"	"	817224			1118440
1101752.....	1853830	1884120	"		1873830	"	"	"			^5891
1101753.....	1886919	1855429	"		1886920	"	"	"			1118440
1101754.....	1845819	1886821	"		817879	954378	"	809953			"
1101755.....	1882356	1855429	"		1882358	812823	"	817224			•1872508
1101756.....	1908871	"	"		817223	"	"	"			• "
1101757.....	"	1878415	"		†1873830	"	"	"			^5895
1101758.....	"	1878273	"		1874338	"	"	1874339			•1116777
1101759.....	1849981	1855594	1902103		817879	954519	"	809953			267-D
1101760.....	1845819	1902150	"		1845821	954378	954521	1845822			1118440

□Field Coil Set (2 coils).

•For parts see Relay—Group 4.

*C.E. Frame includes where necessary: Bushing, Oiler, Oil Wick, Oil Hole Plug, Dowel Pin and Brush Pins.

 
†When D.E. Frame with 2 Oilers is used, also use 1874929Felt Washer Retainer Plate which has 2 oil passages.

°For parts see Regulator—Group 5-B.

*For parts see Regulator—Group 4.

^For parts see Regulator—Group 5.

Delco-Remy **SERVICE PARTS CATALOG**

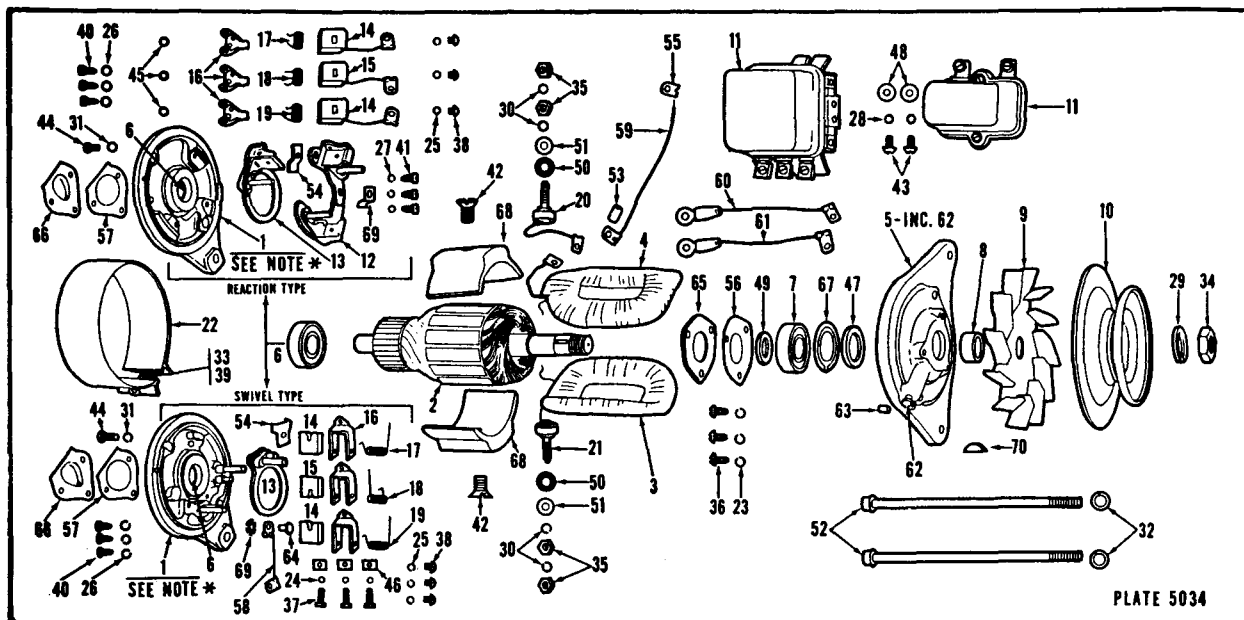

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Brush Plate — Main	Brush Plate — 3rd	Brush — Main	Brush — 3rd	Arm or Brush Holder	Spring — R.H. — Main	Spring — 3rd	Spring — L.H. — Main	Terminal Stud & Lead	Terminal Stud Only	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1101731	1908999	1910916	△1906984	△1906940	1904365	1916324	1903870	1856992	1858754	1858749	1872638
1101732		809698	809637	809637	809642	809658	809644	809644	"	"	"
1101733		809936	"	"	"	"	809658	"	"	"	"
1101734	1853020	1909151	△1906984	△1906940	1904365	1903871	1946798	1903871	1858754	1858749	"
1101735	1908550	"	"	"	"	"	"	"	"	"	1861502
1101736	1871806	"	"	"	"	"	"	"	1858754	1858749	"
1101737		809698	809637	809637	809642	809658	809644	809644	"	"	1872638
1101738		"	"	"	"	"	"	"	"	"	"
1101739		"	"	"	"	"	"	"	"	"	"
1101740		809936	"	"	"	"	809658	"	"	"	"
1101741		"	"	"	"	"	"	"	"	"	"
1101742		809698	"	"	"	"	809644	"	"	"	"
1101743		809936	"	"	"	"	809658	"	"	"	"
1101744	1871806	"	△1906984	△1906940	1904365	1903871	1946798	1903871	"	"	1861502
1101745		809698	809637	809637	809642	809658	809644	809644	"	"	1872638
1101746		"	"	"	"	"	"	"	"	"	"
1101747		"	"	"	"	"	"	"	"	"	"
1101748		"	"	"	"	"	"	"	"	"	1861502
1101749	1908550	1909151	△1906984	△1906940	1904365	1903871	1946798	1903871	1858754	1858749	1872638
1101750	1871806	"	"	"	"	"	"	"	"	"	816340
1101751	1908550	1909151	"	"	"	"	"	"	"	"	1872638
1101752	"	"	"	"	"	"	"	"	"	"	"
1101753	"	"	"	"	"	"	"	"	"	"	"
1101754		809698	809637	809637	809642	809658	809644	809644	1858749	"	"
1101755		"	"	"	"	"	"	"	1858754	"	"
1101756		"	"	"	"	"	"	"	"	"	"
1101757		"	"	"	"	"	"	"	"	"	"
1101758		"	"	"	"	"	"	"	"	"	"
1101759		"	"	"	"	"	"	"	"	"	1861502
1101760		"	"	"	"	"	"	"	"	"	"


△For complete Brush Set order Part No. 1857963.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.....	1962276	All
24	Lock Washer—Brush Attaching Screw.....	456413	1101731-3-7-8-9; 40-1-2-3-5-6-7-8; 54-5-6-7-8-9; 60
....	Lock Washer—Brush Ground Lead Attaching Screw.....	453844	1101733-9; 40-3-8
25	Lock Washer—Brush Lead Attaching Screw.....	1914816	All
....	Lock Washer—Distributor Clamp Screw.....	9421423	1101748
....	Lock Washer—Distributor Hold Down Screw.....	9421423	1101748
26	Lock Washer—End Cover Plate Screw—C.E.....	453844	1101731-2-3-4-5-6-7-8-9; 40-1-2-4-6-7-9; 50-1-2-3-5-6-7-8
26	Lock Washer—End Cover Plate Screw—C.E.....	453435	1101743-5-8; 54-9; 60
....	Lock Washer—Field Lead Ground Screw.....	453844	1101748
....	Lock Washer—Field Lead to Thermostat Screw.....	1914816	1101759
27	Lock Washer—Main Brush Plate Attaching Screw.....	453844	1101731-4-5-6; 44-9; 50-1-2-3
28	Lock Washer—Regulator Attaching Screw.....	138479	1101731-2-3-4-7-8; 40-1-3-7-9; 50-1-2-3-4-7; 60
28	Lock Washer—Regulator Attaching Screw.....	1878378	1101742
28	Lock Washer—Relay Attaching Screw.....	453844	1101735-9; 46-8; 55-6-9
28	Lock Washer—Relay Attaching Screw.....	138479	1101758
....	Lock Washer—Shaft Nut—C.E.....	9421426	1101748
29	Lock Washer—Shaft Nut—D.E.....	1915265	1101731-4-5-6-8-9; 40-1-2-4-6-7; 50-1-3-5-6-7
29	Lock Washer—Shaft Nut—D.E.....	802764	1101754
29	Lock Washer—Shaft Nut—D.E.....	9421426	1101759
30	Lock Washer—Terminal Stud.....	1914579	1101731-2-4-6-7-8-9; 40-1-2-3-4-5-6-7-9; 50-1-2-3-4-5-6-7-8
....	Lock Washer—Thermostat Attaching Screw.....	456413	1101759
....	Lock Washer—Thermostat Resistance Screw.....	1914816	1101759
31	Lock Washer—Third Brush Plate Clamp Screw.....	453435	1101731-2-3-4-5-7-8-9; 40-1-2-3-4-6-7-9; 51-2-3-4-5-6-7-8-9; 60
32	Lock Washer—Thru Bolt.....	9421424	All
NUTS			
33	Nut—Cover Band Screw.....	453433	1101731-2-3-4-7-8-9; 40-1-2-3-5-6-7-9; 51-2-3-4-5-6-7-8
....	Nut—Shaft—C.E.....	272121	1101748
34	Nut—Shaft—D.E.....	1915172	1101731-4-5-6-9; 40-1-2-4-6-7; 50-3-5-6
34	Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{1}{4}$ slotted).....	1917570	1101732-3-8; 43-5-8-9; 51-2-7; 60
34	Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{1}{4}$ hex. hd.).....	1914308	1101738; 51-7
34	Nut—Shaft—D.E.....	114495	1101754-9
35	Nut—Terminal Stud.....	121743	1101731-2-4-6-7-8-9; 40-1-2-3-4-5-6-7-9; 50-1-2-3-4-5-6-7-8
SCREWS			
36	Screw—Ball Bearing Retainer Plate—D.E.....	1914580	All
37	Screw—Brush Attaching.....	453986	1101731-3-7-8-9; 40-1-2-3-4-6-7-8; 54-5-6-7-8-9; 60
....	Screw—Brush Ground Lead.....	453418	1101733-9; 40-1-2-3-8
38	Screw—Brush Lead Attaching.....	453978	1101731-2-3-4-7-8-9; 40-1-2-3-5-6-7-8-9; 52-3-4-5-6-7-8-9; 60
38	Screw—Brush Lead Attaching.....	453460	1101736; 44; 50
38	Screw—Brush Lead Attaching.....	454329	1101735; 51
39	Screw—Cover Band.....	132143	1101731-2-3-4-7-8-9; 40-1-2-3-5-6-7-9; 51-2-3-4-5-6-7-8
....	Screw—Distributor Clamp.....	453660	1101748
....	Screw—Distributor Hold Down.....	120854	1101748
40	Screw—End Cover Plate—C.E.....	454408	1101731-2-3-4-5-6-7-8-9; 40-1-2-4-6-7-9; 50-2-3-5-6-7-8
40	Screw—End Cover Plate—C.E.....	1914580	1101743-5-8; 54-9; 60
....	Screw—Field Lead Ground.....	453418	1101748
....	Screw—Field Lead to Thermostat.....	453978	1101759
41	Screw—Main Brush Plate Attaching.....	454408	1101731-4-5-6; 44-9; 50-1-2-3
42	Screw—Pole Shoe.....	1913960	All
43	Screw—Regulator Attaching.....	453319	1101731-2-3-4-7-8; 40-2-3-5-7-9; 50-1-2-3-4-7; 60
43	Screw—Relay Attaching.....	453418	1101735-9; 46-8; 55-6-9
43	Screw—Relay Attaching.....	132900	1101758
....	Screw—Thermostat Attaching.....	454329	1101759
....	Screw—Thermostat Resistance Attaching.....	453460	1101759
44	Screw—Third Brush Plate Clamp.....	1915806	1101731-4
44	Screw—Third Brush Plate Clamp.....	9416183	1101732-3-7-8-9; 40-1-2-3-4-6-7; 54-5-6-7-8-9; 60

 Parts not listed in this Catalog will not be sold separately.

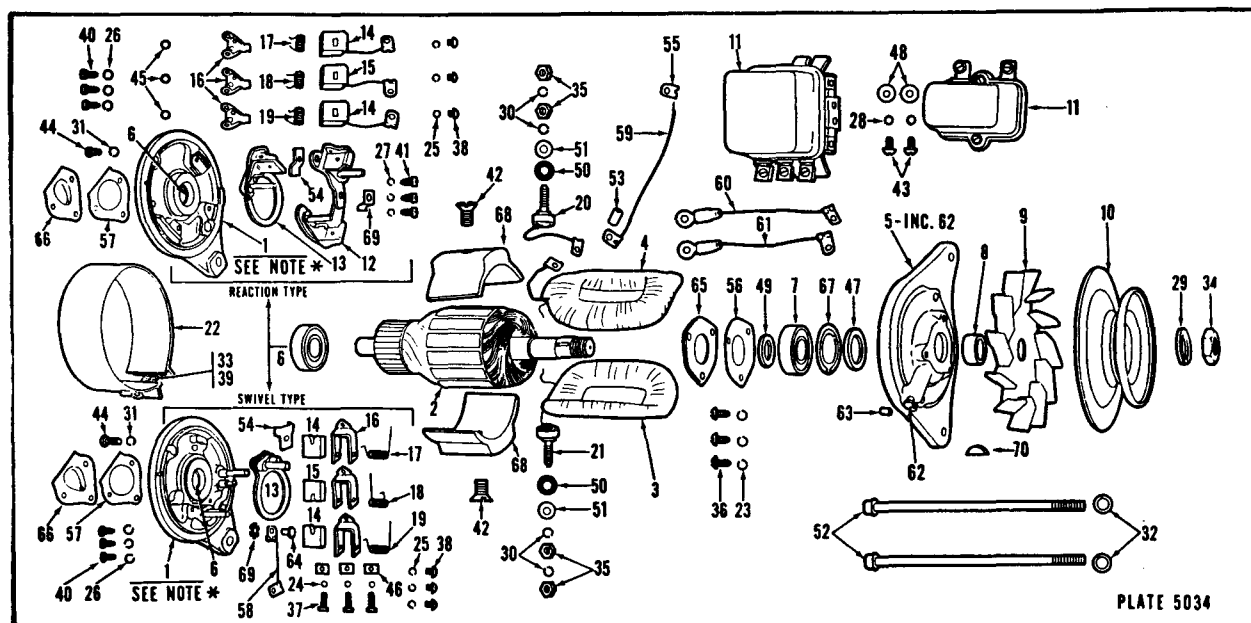

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame — C.E.	Arma- ture	Field Coil — L.H.	Field Coil — R.H.	Frame — D.E.	Bushing or Ball Bearing — C.E.	Ball Bearing — D.E.	Collar — Outside — D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1101762.....	1882744	1902915	*1902103		1882104	812823	954378	1858603	1866400	1924619	
1101766.....	1905661	1905664	*1902104		1905665	"	"	"	1905262	1905666	
1101767.....						"	"	"			
1101768.....	1849981	1855590	"		1864317	954519	954143	1863792			
1101769.....	1906868	1906871	"		1906872	812823	954378	1874339			*5902
1101770.....	1853830	1907327	"		1873830	"	"	817224			*5903
1101771.....	1908871	1907416	"		1841472	"	954521				†1118440
1101774.....	1853830	1909152	"		1873830	"	954378	817224			*5907
1101775.....	1908871	1855429	"		1855960	"	"	"			□1118266
1101776.....	1841828	1909557	"		817879	954378	"	809953			†1118440
1101777.....	1882356	1855429	"		1882358	812823	"	817224			□1118266
1101778.....	1908871	1909820	"		817879	"	"	"		1872660	†1118440
1101779.....	"	1855429	"		1855960	"	"	"			"
1101780.....	1910918	1910913	"		1873830	"	"	"			*5907
1101781.....	1849984	1885412	"		817879	954519	"	"			
1101782.....	1908871	1878273	"		1874338	812823	"	1874339			□1118266
1101783.....	"	1855429	"		1908869	"	"	817224			△1118306
1101784.....	"	"	"		817223	"	"	"			

*Field Coil Set (2 coils).

 
†For parts see Regulator—Group 5-B.

*For parts see Regulator—Group 5-A.

□For parts see Regulator—Group 6-A.

△For parts see Regulator—Group 6-C.

Delco-Remy **SERVICE PARTS CATALOG**

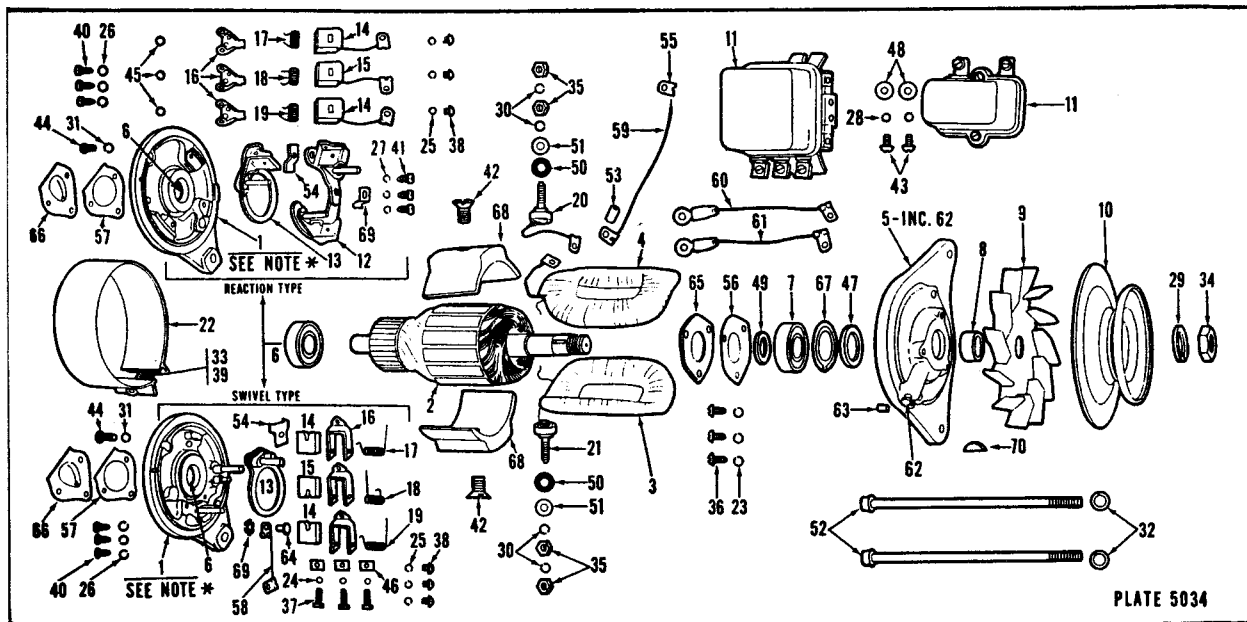

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Brush Plate — Main	Brush Plate — 3rd	Brush — Main	Brush — 3rd	Arm or Brush Holder	Spring — R.H. — Main	Spring — 3rd	Spring — L.H. — Main	Terminal Stud & Lead	Terminal Stud Only	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1101762.....	1902726		1856494	1906940	1904365	1903871	1946798	1903871	1858754	1858749	816340
1101766.....	1905662		△1906984	△	1907652	"	1903872	"	1904658	"	"
1101767.....	1905718		"	"	"	"	"	"	"	"	"
1101768.....		809698	809637	809637	809642	809658	809644	809644	1858754	1858749	1861502
1101769.....		1905197	"	"	1905204	1905208	1905205	1905205	"	"	1872638
1101770.....	1905085	1905096	1904849	1905089	1904365	1905084	1905034	1905084	"	"	"
1101771.....		809698	809637	809637	809642	809658	809644	809644	"	"	1861502
1101771.....	1909563	1909151	△1906984	△1906940	1907652	1903871	1946798	1903871	1858754	1858749	1872638
1101775.....		809698	809637	809637	809642	809658	809644	809644	"	"	"
1101776.....		809936	"	"	"	"	809658	"	"	"	"
1101777.....		809698	"	"	"	"	809644	"	"	"	"
1101778.....		"	"	"	"	"	"	"	"	"	"
1101779.....		"	"	"	"	"	"	"	"	"	"
1101780.....	1909591	1910916	△1906984	△1906940	1904365	1916324	1903870	1916324	1858749	"	"
1101781.....		809936	809637	809637	809642	809658	809658	809644	1858754	"	"
1101782.....		809698	"	"	"	"	809644	"	"	"	"
1101783.....		"	"	"	"	"	"	"	"	"	"
1101784.....		"	"	"	"	"	"	"	"	"	"

△For complete Brush Set order Part No. 1857963.