

Revised to November 1, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	1962276	1101762-6-7-8-9; 70-1-4-5-6-7-8-9; 80-1-2-3-4
....	Lock Washer—Base Attaching Screw	9421425	1101778
24	Lock Washer—Brush Attaching Screw	456413	1101768-9; 71-5-6-7-8-9; 81-2-3-4
....	Lock Washer—Brush Ground Lead Screw	453844	1101776; 81
25	Lock Washer—Brush Lead Attaching Screw	1914816	All
26	Lock Washer—End Cover Plate Screw—C.E.	453844	1101762-6-7-9; 70-1-4-5-7-8-9; 82-3-4
26	Lock Washer—End Cover Plate Screw—C.E.	453435	1101768; 76; 81
27	Lock Washer—Main Brush Plate Attaching Screw	453844	1101762-6-7; 70-4; 80
28	Lock Washer—Regulator Attaching Screw	138479	1101769; 70-1-4-5-6-7-8-9; 80-3-4
29	Lock Washer—Shaft Nut—D.E.	1915265	1101762-8; 75-6-7; 81-3-4
29	Lock Washer—Shaft Nut—D.E.	802764	1101776
30	Lock Washer—Terminal Stud	1914579	All except 1101771
31	Lock Washer—Third Brush Plate Clamp Screw	453435	1101768-9; 70-1-5-6-7-8-9; 81-2-3-4
31	Lock Washer—Third Brush Plate Clamp Screw	453844	1101774; 80
32	Lock Washer—Thru Bolt	9421424	All
....	Lock Washer—Top of Field Frame	9421423	1101762-6-7
NUTS			
33	Nut—Cover Band Screw	453433	1101769; 70-4-5-6-7-8-9; 80-1-2-3-4
34	Nut—Shaft—D.E.	1915172	1101762-6-7-8; 75-7-9; 81-3-4
34	Nut—Shaft—D.E.	1917570	1101770-4; 80
34	Nut—Shaft—D.E.	1917035	1101771-8
34	Nut—Shaft—D.E.	114995	1101776
35	Nut—Terminal Stud	121743	All except 1101771
....	Nut—Third Brush Plate Clamp Screw	134536	1101774
SCREWS			
36	Screw—Ball Bearing Retainer Plate—D.E.	1914580	All
....	Screw—Base Attaching	122104	1101778
37	Screw—Brush Attaching	453986	1101768-9; 71-5-6-7-8-9; 81-2-3-4
....	Screw—Brush Ground Lead	453418	1101776; 81
38	Screw—Brush Lead Attaching	453460	1101762
38	Screw—Brush Lead Attaching	454329	1101766-7; 74; 80
38	Screw—Brush Lead Attaching	453978	1101768-9; 70-1-5-6-7-8-9; 81-2-3-4
39	Screw—Cover Band	132143	1101769; 70-4-5-6-7-8-9; 80-1-2-3-4
40	Screw—End Cover Plate Attaching—C.E.	454408	1101762-6-7-9; 70-1-4-5-7-8-9; 80-2-3-4
40	Screw—End Cover Plate Attaching—C.E.	1914580	1101768; 76; 81
41	Screw—Main Brush Plate Attaching	454408	1101762-6-7; 70-4; 80
42	Screw—Pole Shoe	1913960	All
43	Screw—Regulator Attaching	132900	1101769; 70-1-4-5-6-7-8-9; 80-3-4
44	Screw—Third Brush Plate Clamp	9416183	1101768-9; 71-5-6-7-8-9; 81-2-3-4
44	Screw—Third Brush Plate Clamp	453468	1101770
44	Screw—Third Brush Plate Clamp	454408	1101774; 80
....	Screw—Top of Field Frame	132243	1101762-6-7
WASHERS			
45	Washer—Brush Arm Space	1857412	1101762
45	Washer—Brush Arm Space	1914741	1101766-7; 70-4; 80
46	Washer—Brush Attaching Screw	809551	1101768-9; 71-5-6-7-8-9; 81-2-3-4
....	Washer—Felt—C.E.	815042	1101776
47	Washer—Felt—D.E.	809961	1101762-6-7-9; 70-4-5-6-7-8-9; 80-1-2-3-4
47	Washer—Felt—D.E.	820706	1101771
48	Washer—Regulator Attaching Screw	1856056	1101769; 70-1-4-5-6-7-8-9; 80-3-4
....	Washer—Shaft Nut—D.E.	30205	1101770-1-4-8; 80
49	Washer—Space—Inside—D.E.	809945	1101762-6-7-9; 70-4-5-6-7-8-9; 80-1-2-3-4
49	Washer—Space—Inside—D.E.	1861589	1101768
49	Washer—Space—Inside—D.E.	822664	1101771
50	Washer—Terminal Stud—Insul.	1858753	1101762-8; 74-5-6-7-8-9; 80-1-2-3-4
50	Washer—Terminal Stud—Insul.	1902746	1101766-7-9; 70
51	Washer—Terminal Stud—Plain	826319	1101762-6-7-8-9; 70-4; 75-6-7-8-9; 80-1-2-3-4
MISCELLANEOUS			
....	BASE—Mounting	1872842	1101778
52	BOLT—Thru	1908680	1101762-6-7-8-9; 70-4-5-6-7-8-9; 80-1-2-3-4
52	BOLT—Thru	1915090	1101771
53	BUSHING—Insul.—For Lead in Field Frame	812891	1101771
....	BUSHING—Insul. Terminal Stud	*	1101766-7

*Included with 1858749 Stud.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION


Illustration No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
54	CLAMP—Third Brush Plate.....	817532	1101768-9; 71-5-6-7-8; 81-2-3-4
54	CLAMP—Third Brush Plate.....	1850770	1101770
54	CLAMP—Third Brush Plate.....	1857187	1101774; 80
----	CLAMP—Wiring Harness.....	1860459	1101762
----	CLAMP—Wiring Harness.....	1905010	1101766-7
----	CLIP—Terminal to Brush.....	200182	1101762-6-7-9; 70-1-4-5-7-8-9; 80-1-2-3-4
55	CLIP—Terminal to Relay.....	200191	1101771
----	COLLAR—Space—Inside—C.E.....	811681	1101776
----	COLLAR—Space—Outside—C.E.....	815049	1101776
----	COUPLING—Drive.....	1906873	1101769
----	COUPLING—Drive.....	1839478	1101782
56	GASKET—Ball Bearing Retainer Plate—D.E.....	1912008	1101762-6-7-9; 70-4-5-6-7-8-9; 80-1-2-3-4
56	GASKET—Ball Bearing Retainer Plate—D.E.....	820708	1101771
57	GASKET—End Cover Plate—C.E.....	817220	1101762-6-7-9; 70-1-4-5-7-8-9; 80-2-3-4
57	GASKET—End Cover Plate—C.E.....	1844012	1101768; 81
58	LEAD—Brush Ground.....	809688	1101768-9; 71-5-6-7-8-9; 81-2-3-4
59	LEAD—Relay.....	809966	1101771
60	LEAD—"A" Terminal to Relay or Regulator.....	1914185	1101769
60	LEAD—"A" Terminal to Relay or Regulator.....	1911485	1101770-4-5-7; 80-3-4
60	LEAD—"A" Terminal to Relay or Regulator.....	1914187	1101778
60	LEAD—"A" Terminal to Relay or Regulator.....	1878133	1101779
61	LEAD—"F" Terminal to Relay or Regulator.....	1914187	1101769
61	LEAD—"F" Terminal to Relay or Regulator.....	1914185	1101770-4-5-7; 80-3
61	LEAD—"F" Terminal to Relay or Regulator.....	1868761	1101778
61	LEAD—"F" Terminal to Relay or Regulator.....	1914187	1101779
61	LEAD—"F" Terminal to Relay or Regulator.....	1911485	1101784
----	OILER—C.E.....	113702	1101762-6-7-9; 70-1-4-5-7-8-9; 82-3-4
----	OILER—C.E.....	114998	1101768; 76
----	OILER—C.E.....	113702	1101780
----	OILER—C.E.....	1880642	1101781
62	OILER—D.E.....	125609	1101762-6-7-9; 70-4-9; 82
62	OILER—D.E.....	113702	1101771-5-6-7-8-9; 81-3-4
----	Oil THROWER—D.E.....	1919657	1101771
----	PIN—Brush Holder Hinge.....	817313	1101768-9; 71-5-7-8-9; 82-3-4
----	PIN—Brush Holder Stop.....	817314	1101768-9; 71-5-7-8-9; 82-3-4
----	PIN (& Insulation)—Brush Holder Hinge.....	812016	1101768-9; 71-5-6-7-8-9; 81-2-3-4
----	PIN (& Insulation)—Brush Holder Stop.....	812015	1101768-9; 71-5-6-7-8-9; 81-2-3-4
----	PIN (Cotter)—Shaft Nut—D.E.....	103373	1101778
----	PIN—Coupling.....	1906864	1101769
----	PIN—Coupling.....	820711	1101782
----	PIN—Dowel—C.E.....	809062	1101762-6-7-8-9; 80-1-3-4
63	PIN—Dowel—D.E.....	809593	1101762-9; 70-1-4-5-7-9; 80-2-3-4
----	PIN—Third Brush Plate Stop.....	1840738	1101777
64	PIN—Third Brush Plate Tension Spring.....	809614	1101768-9; 71-5; 81-2-3-4
65	PLATE—Ball Bearing Retainer—D.E.....	1911263	1101762-9; 70-5-6-7-8-9; 81-2-3-4
65	PLATE—Ball Bearing Retainer—D.E.....	1910396	1101766-7; 74; 80
65	PLATE—Ball Bearing Retainer—D.E.....	1861590	1101768
65	PLATE—Ball Bearing Retainer—D.E.....	820707	1101771
66	PLATE—End Cover—C.E.....	1914222	1101762-6-7-9; 70-1-4-5-7-8-9; 80-2-3-4
66	PLATE—End Cover—C.E.....	815868	1101768; 81
66	PLATE—End Cover—C.E.....	814985	1101776
----	PLATE—Felt Retainer—C.E.....	809960	1101776
67	PLATE—Felt Retainer—D.E.....	819104	1101762-6-7-9; 70-4-5-6-7-8-9; 80-1-2-3-4
67	PLATE—Felt Retainer—D.E.....	820709	1101771
----	PLUG—Oil Hole—C.E.....	1911097	1101768; 71-5-6-7-8-9; 80-2-3-4
68	SHOE—Pole.....	816331	All
69	SPRING—Third Brush Plate Tension.....	809824	1101768-9; 71-5-6-7-8-9; 81-2-3-4
69	SPRING—Third Brush Plate Tension.....	1850771	1101770-4; 80
----	WICK—Oil—C.E.....	1947350	1101762-6-7-8-9; 70-1-4-5-6-7-8-9; 80-2-3-4
----	WICK—Oil—C.E.....	1919851	1101776; 81
70	Woodruff KEY—C.E.....	124546	1101776
70	Woodruff KEY—D.E.....	124545	1101762-6-7-8; 70-1-4-5-7-8-9; 80-1-2-3-4
70	Woodruff KEY—D.E.....	124548	1101769; 76

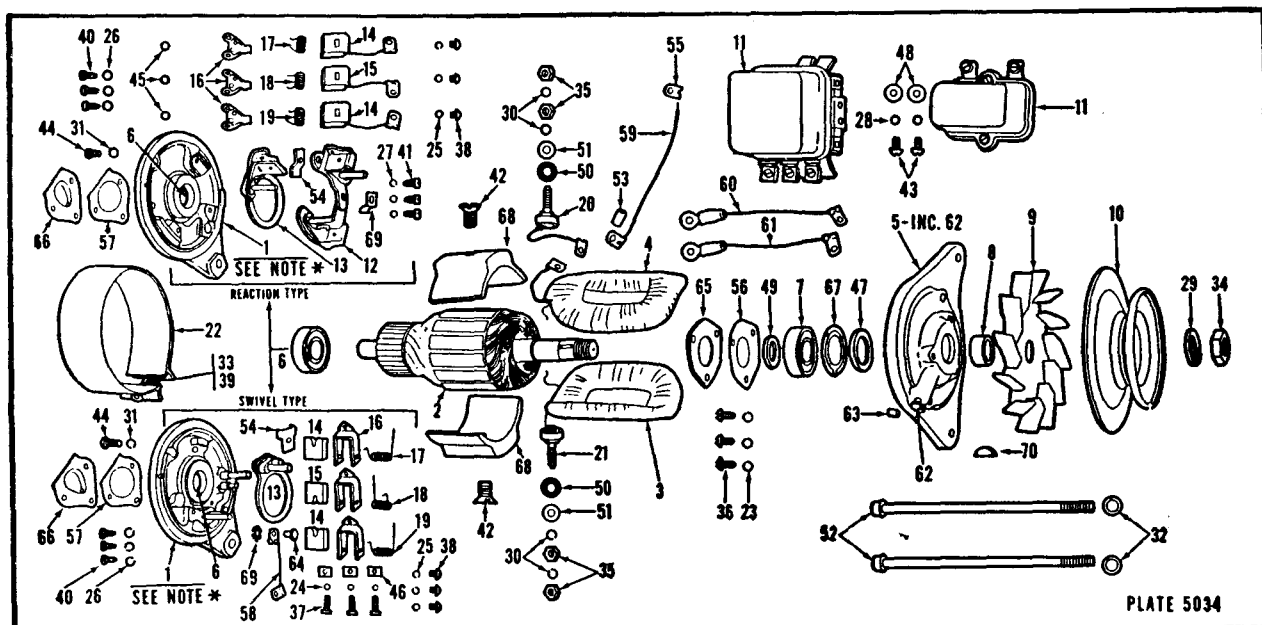 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	* Frame — C.E.	Armature	Coil — Field — L.H.	Coil — Field — R.H.	Frame — D.E.	Bushing or Ball Bearing — C.E.	Ball Bearing — D.E.	Collar — Outside — D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1101851.....	1908871	1917296	*1905668		×1873830	812823	954378	817224			
1101852.....	"	"	"		1908869	"	"	"			
1101853.....	"	"	"		817879	"	"	"			
1101854.....	"	"	"		×1873830	"	"	"		1885651	
1101855.....	"	1917296	*1916744		817879	"	"	"			
1101856.....	1853830	"	"		1873712	"	"	"			
1101857.....	1908871	"	"		1908869	"	"	"			
1101858.....	"	"	"		×1873830	"	"	"		1885651	
1101859.....	1925748	"	*1925098		1925097		"	1858603		1911978	
1101860.....	1908871	"	*1916744		1908869	812823	"	817224			
1101862.....	1929118	1929119	*1925098		1926987	904751	954521		1858604		
1101866.....	1853830	1917296	*1922488		×1873830	812823	954378	817224			
1101867.....	1957635	"	+ "		1953882	1927446	907503	1858603	1944437	1939886	

 *C.E. Frame includes where necessary: Bushing, Oiler, Oil Wick, Oil Hole Plug, Dowel Pin and Brush Pins.
 *When D.E. Frame with two oilers is used, also use 1874929 Felt Retainer Plate which has two oil passages.
 *Field Coil Set (2 coils).

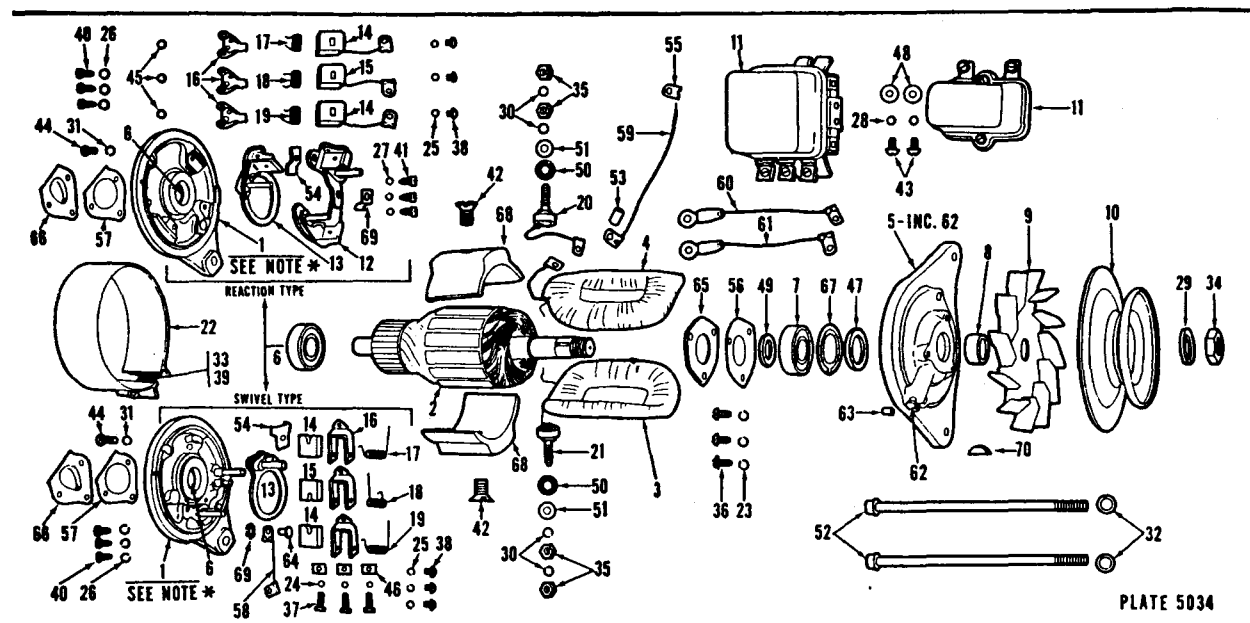

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Brush Plate — Main	Brush Plate — 3rd	Brush — Main	Brush — 3rd	Arm or Holder — Brush	Spring — R.H. — Main	Spring — 3rd	Spring — L.H. — Main	Terminal Stud & Lead	Terminal Stud Only	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1101851		809698	○	○	809642	809658	809644	809644	1858754	1858749	1872638
1101852		"	"	"	"	"	"	"	"	"	"
1101853		"	"	"	"	"	"	"	"	"	"
1101854		"	"	"	"	"	"	"	"	"	"
1101855		"	"	"	"	"	"	"	"	"	"
1101856	1913565		*1906984	*1906940	1904365	1903871	1946798	1903871	"	"	"
1101857		809698	○	○	809642	809658	809644	809644	"	"	"
1101858		"	"	"	"	"	"	"	"	"	"
1101859			1906984		1944373	1916542		1878184			1861502
1101860		809698	○	○	809642	809658	809644	809644	1858754	"	1872638
1101862	1878177		1906984		1944373	1916542		1878184		"	1861502
1101866	"		1878249		"	"		"	1858754	"	1872638
1101867	"		"		"	"		"	"	"	1861502

○For complete Brush Set order Part No. 1880998.

*For complete Brush Set order Part No. 1933194.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	1962276	1101851-2-3-4-5-6-7-8-9; 60-2-6
24	Lock Washer—Brush Attaching Screw	456413	1101851-2-3-4-5-7-8; 60
25	Lock Washer—Brush Lead Screw	1914816	1101851-2-3-4-5-6-7-8-9; 60-2-6-7
26	Lock Washer—End Cover Plate Screw—C.E.	453844	1101851-2-3-4-5-6-7-8; 60-6-7
27	Lock Washer—Brush Plate Attaching Screw	453844	1101856; 62-6-7
.....	Lock Washer—Shaft Nut—C.E.	1913743	1101862
29	Lock Washer—Shaft Nut—D.E.	1915265	1101851-2-3-4-5-6-7-8-9; 60-6
.....	Lock Washer—Shaft Nut—D.E.	1941978	1101867
30	Lock Washer—Terminal Stud	1914579	1101851-2-3-4-5-6-7-8-9; 60-2-6-7
31	Lock Washer—Third Brush Plate Clamp Screw	453435	1101851-2-3-4-5-7-8; 60
32	Lock Washer—Thru Bolt	9421424	1101851-2-3-4-5-6-7-8-9; 60-2-6-7
NUTS			
33	Nut—Cover Band Screw	453433	1101851-2-3-4-5-6-7-8; 60-6
.....	Nut—Shaft—C.E.	1915172	1101862
34	Nut—Shaft—D.E.	1915172	1101851-2-3-4-5-6-7-8-9; 60-6
34	Nut—Shaft—D.E.	1917035	1101862
35	Nut—Terminal Stud	121743	1101851-2-3-4-5-6-7-8-9; 60-2-6-7
SCREWS			
36	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1101851-2-3-4-5-6-7-8-9; 60-2-6-7
37	Screw—Brush Attaching	453986	1101851-2-3-4-5-7-8; 60
38	Screw—Brush Lead Attaching	453978	1101851-2-3-4-5-7-8; 60
38	Screw—Brush Lead Attaching	453460	1101856-9; 62-6-7
39	Screw—Cover Band	132143	1101851-2-3-4-5-6-7-8; 60
39	Screw—Cover Band	453479	1101866
40	Screw—End Cover Plate Attaching—C.E.	454408	1101851-2-3-4-5-6-7-8; 60-6-7
41	Screw—Brush Plate Attaching	454408	1101856; 62-6-7
42	Screw—Pole Shoe	1913960	1101851-2-3-4-5-6-7-8-9; 60-2-6-7
44	Screw—Third Brush Plate Clamp	9416183	1101851-2-3-4-5-7-8; 60
WASHERS			
45	Washer—Brush Arm Space	1857412	1101856-9; 62-6
46	Washer—Brush Attaching Screw	809551	1101851-2-3-4-5-7-8; 60
.....	Washer—Felt—C.E.	37077	1101862
.....	Washer—Felt—C.E.	1927447	1101867
47	Washer—Felt—D.E.	809961	1101851-2-3-4-5-6-7-8-9; 60-6-7
47	Washer—Felt—D.E.	820706	1101862
.....	Washer—Plain—Shaft Nut—D.E.	1914589	1101862
49	Washer—Space (Inside)—D.E.	809945	1101851-2-3-4-5-6-7-8-9; 60-6-7
49	Washer—Space (Inside)—D.E.	822644	1101862
50	Washer—Terminal Stud—Insulation	1858753	1101851-2-3-4-5-6-7-8-9; 60-2-6-7
51	Washer—Terminal Stud—Plain	826319	1101851-2-3-4-5-6-7-8-9; 60-2-6-7
51	Washer—Field Terminal—Plain (1 1/4 x 3/4)	1914289	1101860
MISCELLANEOUS			
.....	BAFFLE (& Collar)—Oil—D.E.	1919657	1101862
52	BOLT—Thru	1905673	1101851-2-3-4-5-6-7-8-9; 60-2-6-7
.....	BUSHING—Terminal Stud	*	1101851-2-3-4-5-6-7-8-9; 60-2-6-7
54	CLAMP—Third Brush Plate	817532	1101851-2-3-4-5-7-8; 60
.....	CLIP—Terminal to Brush	200182	1101851-2-3-4-5-6-7-8-9; 60-2
.....	CLIP—Terminal to Brush	200362	1101866-7
.....	COLLAR—Fan—Space—C.E. (Inner)	1913688	1101862
.....	COLLAR—Fan—Space—C.E. (Outer)	1913689	1101862
.....	COLLAR—Space—Inside—C.E.	1913316	1101862
.....	CUP—Felt Retainer—D.E.	37078	1101862
56	GASKET—Ball Bearing Retainer Plate—D.E.	1912008	1101851-2-3-4-5-6-7-8-9; 60-6-7
56	GASKET—Ball Bearing Retainer Plate—D.E.	820708	1101862-7
57	GASKET—End Cover Plate—C.E.	817220	1101851-2-3-4-5-6-7-8; 60-6-1
.....	INSULATOR—Field Coil	1916748	1101855-6-7-9; 60-2-6-7
58	LEAD—Brush Ground	809688	1101851-2-3-4-5-7-8; 60
.....	OILER—C.E.	113702	1101851-2-3-4-5-6-7-8-9; 60-6-7
.....	OILER—C.E.	1883503	1101862
62	OILER—D.E.	125609	1101851-4-6-8-9; 66-7
62	OILER—D.E.	113702	1101852-3-5-7; 60-2


*Included with 1858749 Stud.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
....	PIN—Brush Holder Hinge.....	817313	1101851-2-3-4-5-7-8; 60
....	PIN—Brush Holder Stop.....	817314	1101851-2-3-4-5-7-8; 60
....	PIN (& Insulation)—Brush Holder Hinge.....	812016	1101851-2-3-4-5-7-8; 60
....	PIN (& Insulation)—Brush Holder Stop.....	812015	1101851-2-3-4-5-7-8; 60
....	PIN—Dowel—C.E.....	809062	1101851-2-3-4-5-6-7-8-9; 60-2-6-7
63	PIN—Dowel—D.E.....	809593	1101851-2-3-4-5-7-8-9; 60-2-6-7
64	PIN—Third Brush Plate Spring.....	809614	1101851-2-3-4-5-7-8; 60
65	PLATE—Ball Bearing Retainer—D.E.....	1911263	1101851-2-3-4-5-6-7-8-9; 60-6-7
65	PLATE—Ball Bearing Retainer—D.E.....	820707	1101862
66	PLATE—End Cover—C.E.....	1914222	1101851-2-3-4-5-6-7-8; 60-6-7
67	PLATE—Felt Retainer—D.E.....	*819104	1101851-2-3-4-5-6-7-8-9; 60-6-7
67	PLATE—Felt Retainer—D.E.....	820709	1101862
....	PLUG—Oil Hole—C.E.....	1911097	1101851-2-3-4-5-6-7-8; 60-7
....	PLUG—Oil Hole—C.E.....	816315	1101866
....	PLUG—Wick—D.E.....	823551	1101867
....	RETAINER—Felt Washer—C.E.....	1927448	1101867
68	SHOE—Pole.....	1887590	1101851-2-3-4
68	SHOE—Pole.....	1916747	1101855-6-7-8-9; 60-2-6-7
69	SPRING—Third Brush Plate Tension.....	809824	1101851-2-3-4-5-7-8; 60
....	STUD—Field Terminal.....	1858749	1101867
....	WICK—Oil—C.E.....	1947350	1101851-2-3-4-5-6-7-8-9; 60-6-7
....	Woodruff KEY—C.E.....	124543	1101862
70	Woodruff KEY—D.E.....	124545	1101851-2-3-4-5-6-7-8-9; 60-6-7
70	Woodruff KEY—D.E.....	124548	1101862

 *When D.E. Frame with two oilers is used, use 1874929 Felt Retainer Plate which has two oil passages.

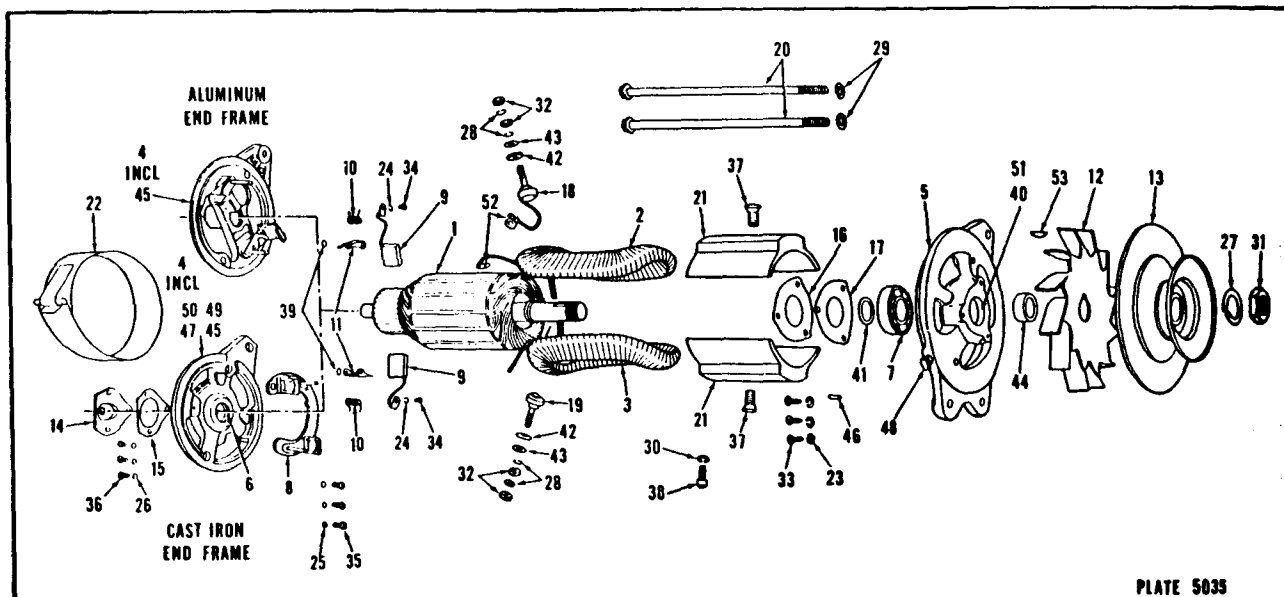

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil — R.H.	Field Coil — L.H.	Frame — C.E.	Frame — D.E.	Ball Bearing — C.E.	Ball Bearing — D.E.	Plate — Brush	Brush	Spring — Brush	Arm — Brush
	1	2	3	4	5	6	7	8	9	10	11
1101876.....	1908551	1908546	1908546	1886682	1908563	954162	954143	1908550	1906984	1903871	1850759
1101877.....	1908677	†1902104	1908837	1943590	1908842	..	..	1908999	..	1903720	..
1101878.....	1908840	1908836	1908837	1943590	1908842	..	..	1908999	..	1903720	..
1101879.....	1948952	†1902104	1908837	1886682	1908553	..	..	1908550	..	1903871	..
1101880.....	1909177	1905215	1905216	..	..	..	..	..	..	..	..
1101881.....	1925950	1908546	1908546	..	1887592	..	..	..	..	..	..
1101882.....	1948980	†1902104	..	..	..	..	..	..	..	..	..
1101884.....	1921451	†1917288	..	1917293	..	..	..	1908999	..	1903720	..
1101885.....	1917727	1905215	1905216	1886682	1908553	..	..	1908550	..	1903871	..
1101886.....	1919652	†1902104	..	..	..	..	..	..	..	..	..
1101887.....	1919652	†1919649	..	..	..	..	..	..	..	..	..
1101888.....	1939820	..	..	..	..	..	..	..	..	..	..
1101889.....	1921451	†1922226	..	..	1887592	..	..	..	..	..	..
1101890.....	1922490	†1922488	..	..	1908553	..	..	..	..	..	..
1101891.....	1922814	†1922813	..	1943590	1908842	..	..	1908999	..	1903720	..
1101892.....	1928664	†1925031	..	..	1925832	..	..	..	..	..	..
1101893.....	1925406	†1917288	..	..	1908842	..	..	..	..	1903720	..
1101894.....	1925793	†1919649	..	1886682	1908553	..	..	1908550	..	1903871	..
1101895.....	1925810	†1925031	..	1943590	1925832	..	..	1908999	..	1903720	..
1101896.....	1925950	†1922488	..	1886682	1887592	..	..	1908550	..	1903871	..
1101897.....	1928664	†1925031	..	1943590	1925832	..	..	1908999	..	1903720	..
1101898.....	1926679	†1919649	..	1886682	1908553	..	..	1908550	..	1903871	..
1101899.....	1927842	†1922813	..	1943590	1925832	..	..	1908999	..	1903720	..
1101900.....	1928664	†1925031	..	..	..	..	..	..	..	..	..
1101901.....	1928648	†1917288	..	..	..	..	..	..	..	..	..
1101903.....	1925406	..	..	..	..	..	..	..	..	..	..
1101904.....	1929704	†1929703	..	..	..	..	..	..	..	..	..
1101905.....	1930314	..	..	..	..	..	..	..	..	..	..
1101906.....	..	†	..	..	..	..	..	..	..	..	..
1101908.....	1939820	†1919649	..	1886682	1908553	..	..	1908550	..	1903871	..
1101909.....	1945122	†1925031	..	1943590	1925832	..	..	1908999	..	1903720	..
1101910.....	1940978	†1922813	..	1917293	1908553	..	..	..	..	..	..
1101911.....	1930314	†1929703	..	1943590	1925832	..	..	..	..	..	..
1101912.....	1945122	†1925031	..	..	..	..	..	..	..	..	..
1101913.....	1928664	†	..	..	..	..	..	..	..	..	..

†Field Coil Set (2 coils).

Delco-Remy SERVICE PARTS CATALOG

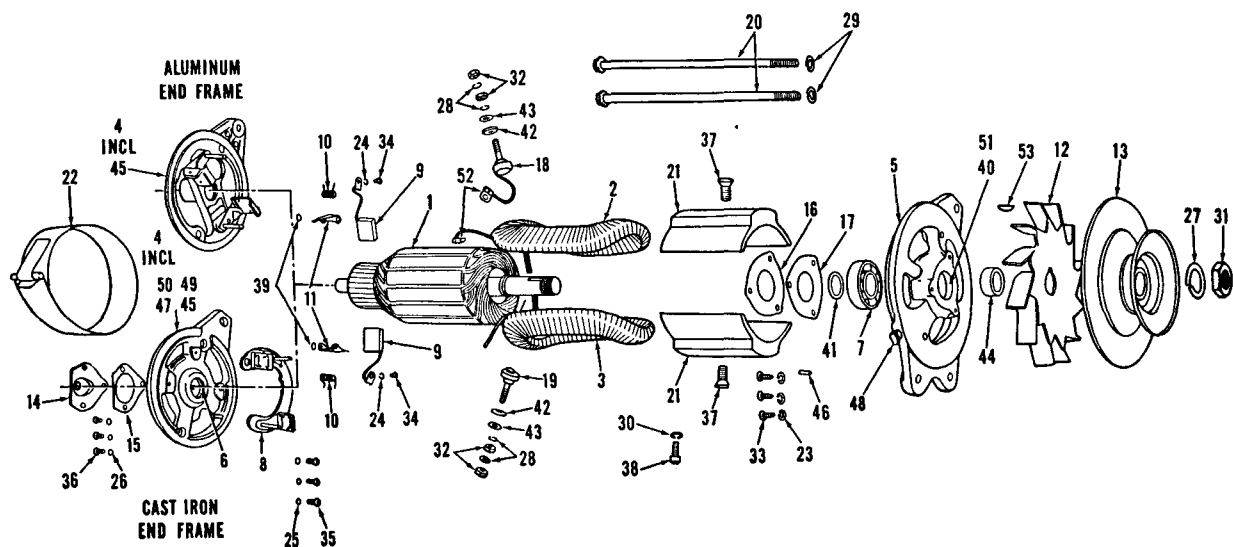 


PLATE 5035

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Fan — C.E. or D.E.	Pulley	Plate — Cover — C.E.	Gasket — Cover Plate	Plate — Bearing Retainer	Gasket — Retainer Plate	Terminal Stud & Lead	Terminal Stud Only	Bolt — Thru	Shoe — Pole	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1101876					1927844		*1858749	1858749	1908556	1887590	1908554
1101877					"		"	"	1908680	813496	"
1101878		1908843			"		1909159	"	1908844	1887590	1910131
1101879					"		*1858749	"	1909173	813496	1908554
1101880					"		"	"	1909179	1877894	"
1101881					"		"	"	1908844	1887590	"
1101882					"		"	"	1908680	813496	"
1101884					"		1909159	"	"	1914618	"
1101885					"		*1858749	"	1909179	1877894	"
1101886					"		"	"	1909173	813496	"
1101887					"		"	"	"	1914618	"
1101888					"		"	"	"	"	"
1101889					"		"	"	1908680	"	"
1101890					"		"	"	1908556	1916747	"
1101891		1908843			"		1909159	"	1908844	"	1910131
1101892					"		*1858749	"	1908680	1914618	"
1101893		1908843			"		1909159	"	"	"	"
1101894					"		*1858749	"	1909173	"	1908554
1101895					"		"	"	1908680	"	1910131
1101896					"		"	"	1908844	1916747	1908554
1101897		1908843			"		1909159	"	1908680	1914618	1910131
1101898					"		*1858749	"	1909173	"	1908554
1101899		1908843			"		1909159	"	1908844	1916747	1910131
1101900		"			"		"	"	1908680	1914618	"
1101901					"		"	"	"	"	"
1101903					"		"	"	"	"	"
1101904					"		*1858749	"	1886685	1939902	"
1101905		1908843			"		"	"	"	"	"
1101906					"		"	"	"	"	"
1101908					"		"	"	1909173	1914618	1908554
1101909					"		"	"	1908680	"	1910131
1101910					1927844		1909159	"	1908556	1916747	"
1101911			1943589		"		*1858749	"	1886685	1939902	"
1101912			"		"		"	"	1908680	1914618	"
1101913			"		"		"	1858749	"	"	"

*Stud only.

Parts not listed in this Catalog will not be sold separately.


MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Plate Screw—D.E.	1914123	All
24	Lock Washer—Brush Lead Screw	131044	All
25	Lock Washer—Brush Plate Screw	453844	All
—	Lock Washer—Cover Plate Attaching Screw	453844	1101911-12-13
27	Lock Washer—Shaft Nut—D.E.	1915265	1101878; 81-2-3-5-7; 904
27	Lock Washer—Shaft Nut—D.E.	1914978	1101911-12-13
28	Lock Washer—Terminal Stud	1914579	All
29	Lock Washer—Thru Bolt	9421424	All
30	Lock Washer—Top of Field Frame	9421423	1101906; 11
NUTS			
—	Nut—Cover Band Screw	453433	All except 1101908
—	Nut—Cover Band Screw	453284	1101908
31	Nut—Shaft—D.E.	1915172	1101878; 81-2-3-5-7; 904-11-12-13
31	Nut—Shaft—D.E.	272073	1101877
31	Nut—Shaft—D.E. (Nylon Insert)	1935548	1101892-5-9; 900-1-3-5-6-9
32	Nut—Terminal	121743	All
SCREWS			
33	Screw—Ball Bearing Retainer Plate—D.E.	5017850	All
34	Screw—Brush Lead Attaching	453460	All
35	Screw—Brush Plate Attaching	454408	All
—	Screw—Cover Band	132923	All
—	Screw—Cover Plate Attaching	453418	1101911-12-13
37	Screw—Pole Shoe	1913960	All
38	Screw—Top of Field Frame	132243	1101906; 11
WASHERS			
39	Washer—Brush Arm Space	1857412	All
—	Washer—Plain—Shaft Nut—D.E.	1938744	1101877
41	Washer—Space—Inside—D.E.	809945	All
42	Washer—Insulation—Terminal Stud	1858753	1101876-7-8-9; 80-1-2-5-6; 90-1-6-9; 904-5-6; 10-11
42	Washer—Insulation—Terminal Stud	1902746	1101884-7-8-9; 92-3-4-5-7-8; 900-1-3-8-9; 12-13
43	Washer—Plain—Terminal Stud	826319	All
MISCELLANEOUS			
—	BUSHING—Insulation—Terminal Stud	*	All
44	COLLAR—Space—Outside—D.E.	824616	1101877; 81-2-4-9; 96
44	COLLAR—Space—Outside—D.E.	1861591	1101878; 91-2-3-5-7-9; 900-1-3-4-5-6-9; 11-12-13
—	COLLECTOR—Static	1927843	1101899; 900-1-5-6; 11
45	Dowel PIN—C.E.	1886684	All
46	Dowel PIN—D.E.	1886684	All
—	INSULATOR—Field Coil	1914491	1101884-7-8-9; 92-3-4-5-7-8; 900-1-3-8-9; 12-13
—	INSULATOR—Field Coil	1916748	1101890-1-6-9; 910
—	INSULATOR—Field Coil	1912073	1101904-4-5-6; 11
—	OIL SEAL—D.E.	1871382	1101877; 81-2-4-9; 96
—	OIL SEAL—D.E. (Furnished by engine mfr.)		1101876-9; 80-5-6-7-8
52	Terminal CLIP—To Brush (L.H.)	200242	1101876-7-9; 80-1-2-4-5-6-7-8-9; 90-2-3-4-5-6-7-8-9; 900-1-3-4-5-6; 11-12-13
52	Terminal CLIP—To Brush (R.H.)	455613	1101878; 91-9; 900-1-3-4-5-6; 10
52	Terminal CLIP—To Brush	200362	1101908-9; 10-11-12-13
53	Woodruff KEY—D.E.	124545	1101878; 91-2-3-5-7-9; 900-1-3-4-5-6-8-9; 11-12-13
53	Woodruff KEY—D.E.	189576	1101877
53	Woodruff KEY—D.E.	124542	1101876-9; 80-1-2-4-5-6-7-8-9; 94-6
53	Woodruff KEY—D.E.	1940790	1101890-8; 910
—	Ring—Static Collector	1920734	1101899; 900-1-3-5; 11

*Included with 1858749 Stud.

Revised to April 1, 1971

 
SERVICE PARTS CATALOG

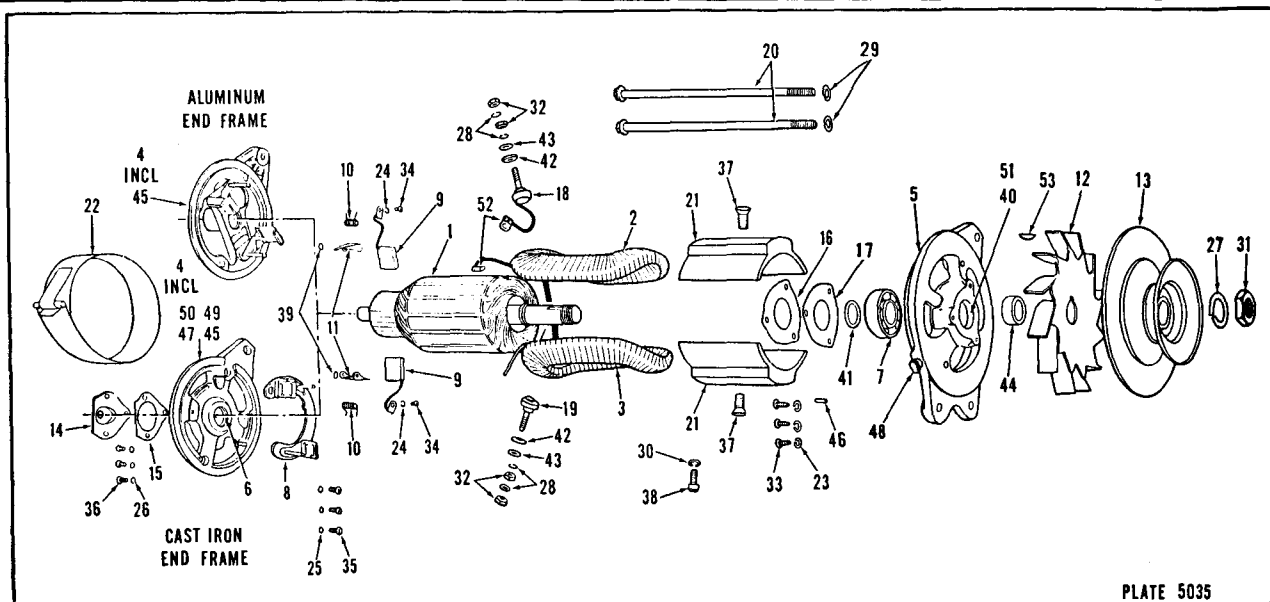

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil R.H.	Field Coil L.H.	Frame C.E.	Frame D.E.	Ball Bearing C.E.	Ball Bearing D.E.	Plate Brush	Brush	Spring Brush	Arm Brush
	1	2	3	4	5	6	7	8	9	10	11
1101914.....	1944122	†1925031		1917293	1908553	954162	954143	1908999	1906984	1916324	1904365
1101915.....	1945122	†		1943590	1925832	"	954162	"	"	"	"
1101916.....	1947523	†1922226		1886682	1908553	"	954143	1908550	"	1903871	"
1101917.....	1948952	†		"	"	"	"	"	"	"	"
1101918.....	1948980	†1919649		"	1887592	"	"	"	"	"	"
1101919.....	1922490	†1922488		"	1908553	"	"	"	"	"	"
1101920.....	1958068	†1958072		"	1887592	"	"	"	"	"	"
1101921.....	1961351	†1961355		1943590	1961272	"	"	1908999	"	1916324	"
1101922.....	1963393	†1963397		"	"	"	"	"	"	"	"
1101923.....	1846744	†1919649		1846746	1925832	"	"	1908550	"	1903871	"

 †Field Coil Set (2 coils).

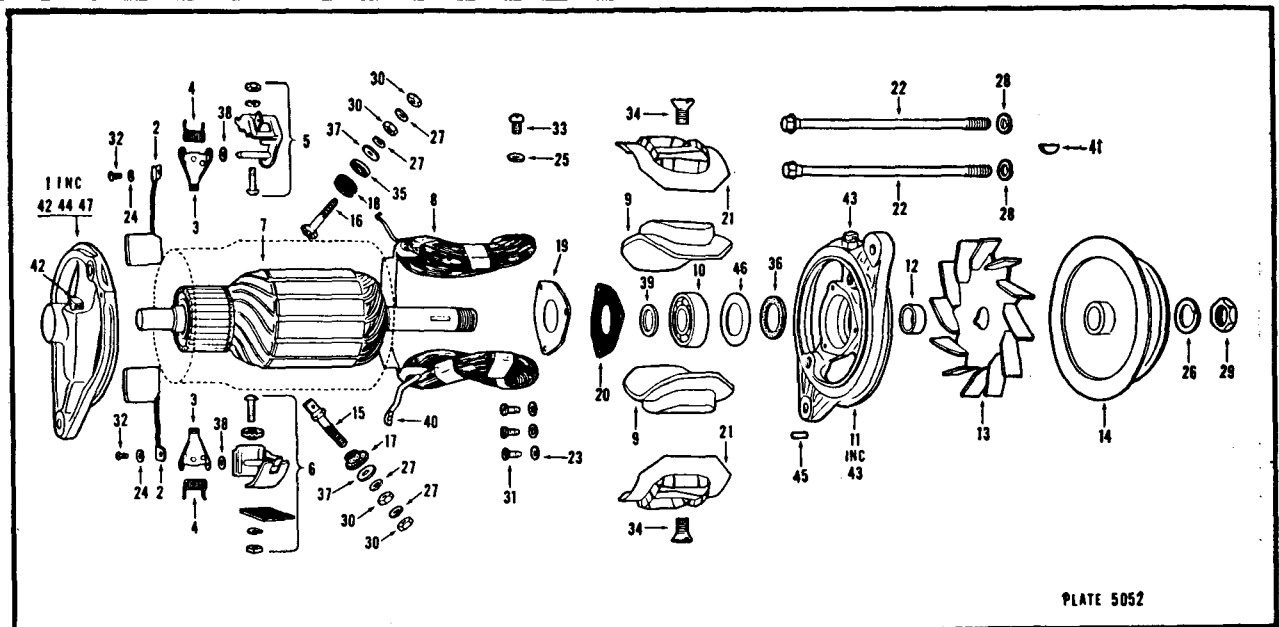

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame C.E.	Brush	Arm Brush	Spring Brush	Holder (Pkg.) Ground Brush	Holder (Pkg.) Insul. Brush	Armature	Coil Field Assembly	Shoe Pole	Ball Bearing D.E.	Frame D.E.
	1	2	3	4	5	6	7	8	9	10	11
1101868.....	800213	1946427	1944373	1916324	1940421	1940422	800212	+	1939902	954378	1962412
1101864.....	"	"	"	"	"	"	"	+	"	907996	"
1101868.....	1939907	"	"	"	"	"	1939954	x	1931258	"	"
1101869.....	1962414	"	"	"	"	"	1939904	+	1939902	"	1962417
1101870.....	1939907	"	"	"	"	"	"	+	"	"	1962412
1101871.....	"	"	"	"	"	"	1939954	x	1931258	"	"
1101872.....	1962414	"	"	"	"	"	1939904	+	1939902	"	1962417
1101873.....	1939907	"	"	"	"	"	1939954	x	1931258	"	1962412
1101874.....	"	"	"	"	"	"	1939904	+	1939902	"	"
1101875.....	800213	"	"	"	"	"	800212	+	"	"	"
1101926.....	1939907	"	"	"	"	"	1939904	+	"	"	1873830
1101927.....	"	"	"	"	"	"	1939954	x	Δ	"	"
1101928.....	"	"	"	"	"	"	1939904	+	1939902	"	"
1101929.....	"	"	"	"	"	"	1939954	x	Δ	"	"
1101930.....	"	"	"	"	"	"	"	x	Δ	"	"
1101931.....	"	"	"	"	"	"	"	x	Δ	"	"
1101932.....	"	"	"	"	"	"	"	x	Δ	"	"
1101933.....	"	"	"	"	"	"	"	x	Δ	"	"
1101934.....	1943357	"	"	"	"	"	1939904	+	1939902	"	1879671
1101936.....	1939907	"	"	"	"	"	1939954	1955597	1931258	"	1873830
1101938.....	1953880	"	"	"	"	"	1939904	+	1939902	"	1953882
1101939.....	1939907	"	"	"	"	"	1939954	x	Δ	900529	1951261
1101940.....	"	"	"	"	"	"	1939904	+	1939902	"	1873830
1101941.....	"	"	"	"	"	"	1939954	x	Δ	954378	"
1101942.....	"	"	"	"	"	"	1939954	x	Δ	900529	1951261
1101943.....	"	"	"	"	"	"	"	x	Δ	954378	1873830
1101944.....	1953880	"	"	"	"	"	"	x	Δ	"	1953882
1101945.....	1939907	"	"	"	"	"	1939904	+	1939902	"	1873830
1101947.....	1943357	"	"	"	"	"	"	+	"	"	1879671
1101948.....	1939907	"	"	"	"	"	1939954	Δ	Δ	"	1873830
1101949.....	"	"	"	"	"	"	1939904	+	1939902	"	"
1101950.....	"	"	"	"	"	"	1939954	Δ	Δ	907055	1855960
1101951.....	"	"	"	"	"	"	1939904	Δ	1939902	954378	"

(Continued on Page 2)

*R.H. Coil is 1939889—L.H. Coil is 1939890.

*R.H. Coil is 1939952—L.H. Coil is 1955597.

*Plain Pole Shoe is 1914618 and 1931258 has notched end.

*1101936 used as motor only.

*R.H. Coil is 1951672—L.H. Coil is 1951673.

*R.H. Coil is 1955270—L.H. Coil is 1955271.

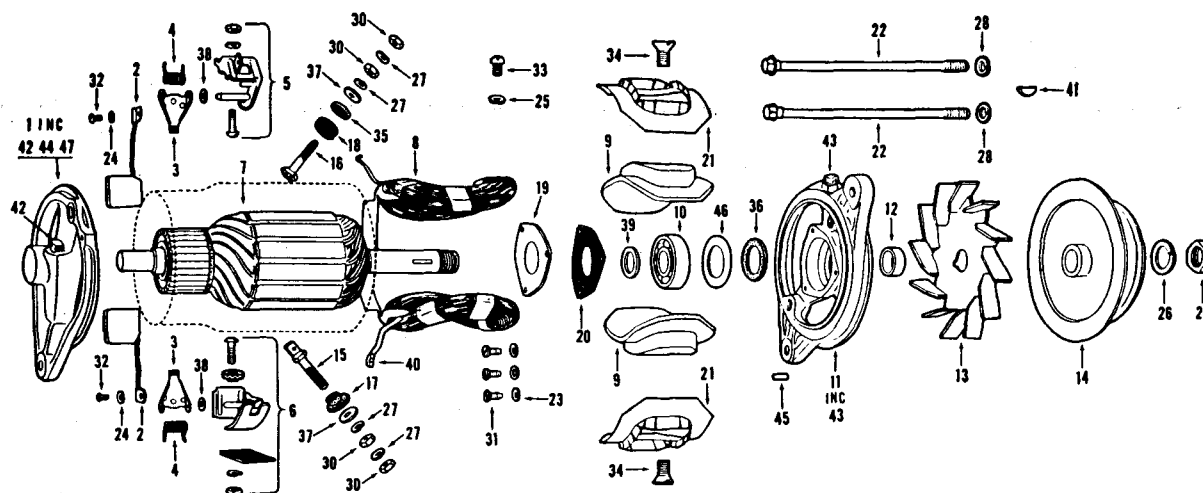 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame — C.E.	Brush	Arm — Brush	Spring — Brush	Holder — (Pkg.) — Ground Brush	Holder — (Pkg.) — Insul. Brush	Armature	Coil — Field — Assembly	Shoe — Pole	Ball Bearing — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1101952.....	1953880	1946427	1944373	1916324	1940421	1940422	1939904	+	1939902	954378	1953882
1101953.....	1939907	"	"	"	"	"	"	+	"	"	1873830
1101954.....	1953880	"	"	"	"	"	"	○	*	904751	1953882
1101955.....	1939907	"	"	"	"	"	"	△	*	954378	1855960
1101956.....	1957073	"	"	"	"	"	1939954	x	△	904751	1873830
1101957.....	1939907	"	"	"	"	"	"	x	△	954378	1873712
1101958.....	1957144	"	"	"	"	"	"	x	△	904751	1957143
1101959.....	1958247	"	"	"	"	"	"	x	△	"	1879671
1101960.....	"	"	"	"	"	"	1939904	+	*	"	"
1101961.....	1939907	"	"	"	"	"	1939904	+	*	954378	1873830
1101962.....	1956268	"	"	"	"	"	1939954	x	△	"	1956265
1101963.....	1953880	"	"	"	"	"	"	x	△	"	1953882
1101964.....	"	"	"	"	"	"	1939904	+	*	"	"
1101965.....	1939907	"	"	"	"	"	"	+	*	"	1873830
1101966.....	"	"	"	"	"	"	"	+	*	"	"
1101967.....	1939907	"	"	"	"	"	"	△	*	"	1962410
1101968.....	"	"	"	"	"	"	1939954	x	△	"	1962412
1101969.....	1962414	"	"	"	"	"	1939904	+	*	"	1962417
1101970.....	1939907	"	"	"	"	"	"	+	*	"	1962412
1101971.....	"	"	"	"	"	"	"	+	*	"	"
1101972.....	"	"	"	"	"	"	1939954	x	△	"	"
1101973.....	"	"	"	"	"	"	1939904	+	*	"	"
1101974.....	"	"	"	"	"	"	1939954	x	△	"	"
1101975.....	"	"	"	"	"	"	"	x	△	"	"
1101976.....	"	"	"	"	"	"	"	1939951	1931258	"	"
1101977.....	1953880	"	"	"	"	"	1939904	+	*	"	1957313
1101978.....	1939907	"	"	"	"	"	"	+	*	"	1962412
1101979.....	1953880	"	"	"	"	"	1939954	x	△	"	1957313

°R.H. Coil is 1956914—L.H. Coil is 1939890.

*R.H. Coil is 1939889—L.H. Coil is 1939890.

*R.H. Coil is 1939952—L.H. Coil is 1955597.

*Plain Pole Shoe is 1911961 and 1939902 has notched end.

△Plain Pole Shoe is 1914618 and 1931258 has notched end.

*R.H. Coil is 1951672—L.H. Coil is 1951673.

*R.H. Coil is 1955270—L.H. Coil is 1955271.

Revised to October 1, 1969

SERVICE PARTS CATALOG

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model	Collar — Space — D.E.	Fan	Pulley	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	* Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coil	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1101863	1959991			1858749	1858749	1921362		1955494	1912008	1912073	809763
1101864	"		1949358	"	"	"		"	"	"	"
1101868	"			"	"	"		"	"	1914491	1908680
1101869	"			"	"	"		"	"	1912073	809763
1101870	"			"	"	"		"	"	"	"
1101871	"			"	"	1921362		"	"	1914491	1908680
1101872	"			"	"	"		"	"	1912073	809763
1101873	"		1949358	"	"	"		"	"	1914491	1908680
1101874	"		"	"	"	"		"	"	1912073	809763
1101875	"			"	"	"		"	"	"	"
1101926	1858603		1945744	1939891	"	"		1911263	"	"	"
1101927	"			"	"	"		"	"	1914491	1915090
1101928	"			"	"	"		"	"	1912073	809763
1101929	"		1946594	"	"	"		"	"	1914491	1908680
1101930	"		"	"	"	"		"	"	"	"
1101931	817224		1945744	"	"	"		"	"	"	"
1101932	1858603			"	"	"		"	"	"	"
1101933	"			"	"	"		"	"	"	"
1101934	"			"	"	"		"	"	1912073	809763
1101936	"				1939891	"		"	"	1914491	1908680
1101938	"	1858604	1945774	1939891	1858749	"		"	"	1912073	809763
1101939	"			"	"	"		"	"	1914491	1908680
1101940	"			"	"	"		"	1912008	1912073	809763
1101941	"		1946594	"	"	"		"	"	1914491	1908680
1101942	"			"	"	"		"	"	"	"
1101943	"		1939845	"	"	"		"	1912008	"	"
1101944	"			"	"	"		"	"	"	"
1101945	"		1947620	"	"	"		"	"	1912073	809763
1101947	"			"	"	"		"	"	"	"
1101948	"			"	"	"		"	"	1914491	1908680
1101949	"			"	"	"		"	"	1912073	809763
1101950	"			"	"	"		"	"	1914491	1908680
1101951	"			"	"	"		"	"	1912073	809763
1101952	817224			"	"	"		"	"	"	"

(Continued on page 4)

*1939891 is Motor Terminal.

*Included with 1858749 Stud.

 Delco-Remy SERVICE PARTS CATALOG

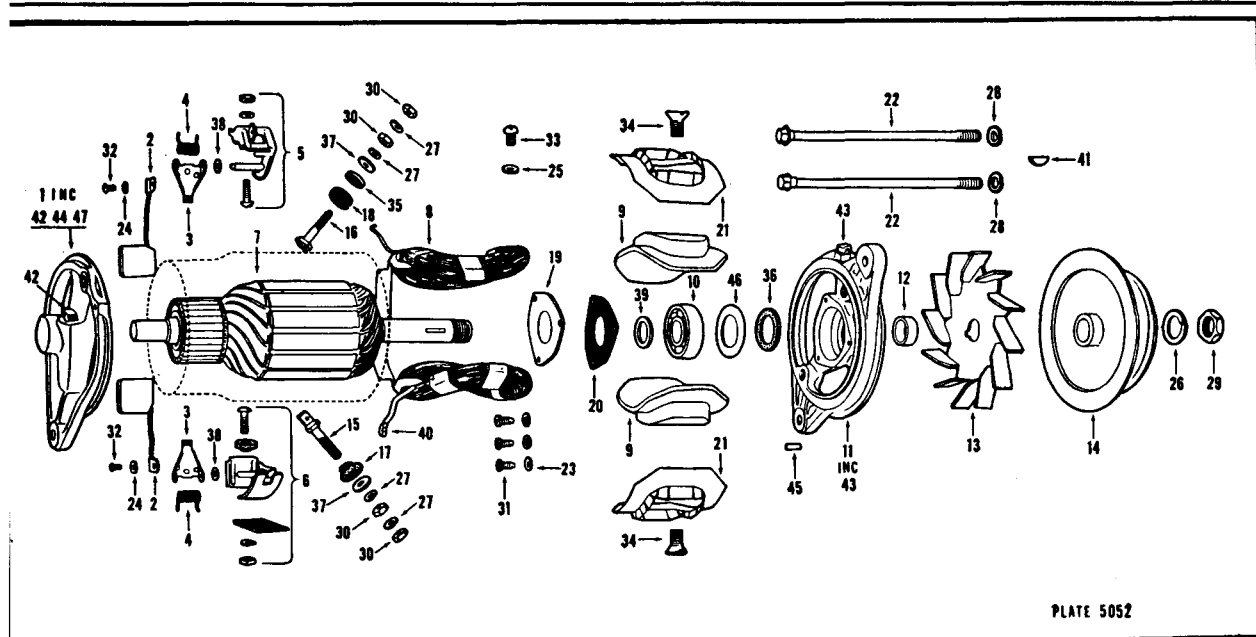

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space — D.E.	Fan	Pulley	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	* Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coil	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1101953.....	1858603		1945744	"	"	"	"	"	"	"	"
1101954.....	"	1944437	"	*1921860	"	"	"	"	"	"	"
1101955.....	1858603		1947620	1939891	1858749	1921362	"	1911263	1912008	1912073	809763
1101956.....	"			"	"	"	"	"	"	1914491	1908680
1101957.....	"			"	"	"	"	"	"	"	"
1101958.....	"			"	"	"	"	"	"	"	"
1101959.....	"			"	"	"	"	"	"	"	"
1101960.....	"			"	"	"	"	"	"	1912073	809763
1101961.....	"			"	"	"	"	"	"	"	"
1101962.....	"			"	"	"	"	"	"	1914491	1908680
1101963.....	"			"	"	"	"	"	"	"	"
1101964.....	"	1858604		"	"	"	"	"	"	1912073	809763
1101965.....	"			"	"	"	"	"	"	"	"
1101966.....	"			"	"	"	"	"	"	"	"
1101967.....	1959991			"	"	"	"	1955494	"	"	"
1101968.....	"			"	"	"	"	"	"	1914491	1908680
1101969.....	"			"	"	"	"	"	"	1912073	809763
1101970.....	"			"	"	"	"	"	"	"	"
1101971.....	"		1945744	"	"	"	"	"	"	"	"
1101972.....	"			"	"	"	"	"	"	1914491	1908680
1101973.....	"			"	"	"	"	"	"	1912073	809763
1101974.....	"			"	"	"	"	"	"	1914491	1908680
1101975.....	"			"	"	"	"	"	"	"	"
1101976.....	"			"	"	"	"	"	"	"	"
1101977.....	"	1944437	1945744	"	1858749	"	"	"	"	1912073	809763
1101978.....	"			"	"	"	"	"	"	"	"
1101979.....	"			"	"	"	"	"	"	1914491	1908680

*Included with 1858749 Stud.

Revised to October 1, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	1962276	1101926-7-8-9; 30-1-2-3-4-6; 40-1-7-8
24	Lock Washer—Brush Lead Screw	1914816	All
—	Lock Washer—Regulator Attaching	138479	1101868-9; 70-1-2; 926-7-8-9; 33-4; 40-1-2-3; 59; 60-1-9; 71-2-3-5-8
—	Lock Washer—Regulator Attaching	1962276	1101863
26	Lock Washer—Shaft Nut—D.E.	1915265	1101863-4-8-9; 70-1-2-3-5; 926-7-8-9; 30-1-6; 40-7-8-9; 50-1-2-7-8-9; 60-1-2-8
27	Lock Washer—Terminal Stud	1914579	All
28	Lock Washer—Thru Bolt	9421424	All
NUTS			
29	Nut—Shaft—D.E.	1915172	All
30	Nut—Terminal	121743	All
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.	1914580	All
32	Screw—Brush Lead Attaching	453460	1101926-7-8-9; 30-1-2-3-6-8-9; 40-1-2-3-4-5-7-8-9; 50-1-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9
32	Screw—Brush Lead Attaching	454329	1101863-4-8-9; 70-1-2-3-4; 927; 32-3-4-6-8-9; 40-1-2-3-4-5-7-8-9; 50-1-2-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9
32	Screw—Brush Lead Attaching	456413	1101875
34	Screw—Pole Shoe	1968396	All
—	Screw—Regulator Attaching	178451	1101863-8-9; 70-1-2; 926-7-8-9; 33-4; 40-1-2-3; 59; 60-1-9; 71-2-3-5-8
WASHERS			
35	Washer—Insul.—Field Terminal Stud	1858753	All
36	Washer—Felt—D.E.	809961	1101926-7-8-9; 30-1-2-3-4-6-8; 40-1-3-5-7-8-9; 50-1-2-3-4-5-7-9; 60-1-2-3-4-5-6
—	Washer—Felt—C.E.	1957559	1101863-4; 75
—	Washer—Felt—Large I.D.	1957075	1101956-8-9; 60
—	Washer—Felt—Small I.D.	1957076	1101956-8-9; 60
—	Washer—Plain—Regulator Attaching	1856056	1101868-9; 70-1-2; 926-7-8-9; 33; 40-1-2-3; 59; 60-1-9; 71-2-3-5-8
37	Washer—Plain—Terminal Stud	826319	1101863-4-8-9; 70-1-2-3-4-5; 926-7-8-9; 30-1-2-3-4-6-8-9; 40-1-2-3-4-5-7-8-9; 50-1-63-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9
38	Washer—Space—Brush Arm	1857412	1101926-7-8-9; 30-1-2-3-4-6-8-9; 40-1-2-3-4-5-7-8-9; 50-1-2-3-4-5
39	Washer—Space—Inside—D.E.	809945	1101926-7-8-9; 30-1-2-3-4-6-8-9; 40-1-2-3-4-5-7-8-9; 50-1-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6
—	Washer—Space—Outside—D.E.	809960	1101942
—	Washer—Spring—Shaft Nut—D.E.	1941978	1101874-932-3-8; 41-3-5; 52-3-4-5
—	Washer—Spring—Shaft Nut—D.E.	1888439	1101939; 42-4; 79
MISCELLANEOUS			
—	BALL BEARING—C.E.	904751	1101868-9; 70-1-2-3-4; 926-7-8-9; 30-1-2-3-4-6-8; 40-1-3-4-5-7-8-9; 52-3-4-7-8; 62-3-4-7-8-9; 70-1-2-3-4-5-6-7-8-9
—	BALL BEARING—C.E.	900529	1101939; 42
—	BALL BEARING—C.E.	907055	1101950-1-5; 61-5-6
—	BALL BEARING—C.E.	907338	1101956-8-9; 60
40	CLIP—Terminal—To Brush	200382	1101926-8; 34; 53
40	CLIP—Terminal—To Brush	200346	1101927-9; 30-1-2-3-8-9; 40-1-2-3-4-5-7-8-9; 50-1-2-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-7-8-9
—	COLLAR—Space (Inside—D.E.)	1861591	1101863-4-8-9; 70-1-2-3-4; 967-8-9; 70-1-2-3-4-5-6-7-8-9
—	BUSHING—"A" Terminal—Inside	1939894	All
41	KEY—Woodruff—D.E.	124545	1101863-4-8-9; 70-1-2-3-4; 926-7-8-9; 30-1-2-3-4-6-8-9; 40-1-2-3-4-5-6-7-8-9; 50-1-2; 63-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9
—	LEAD—"A" Terminal to Regulator	1911485	1101863; 70-1; 927-9; 33-4; 42-3; 69; 75


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
—	LEAD—"A" Terminal to Regulator.....	1914187	1101961
—	LEAD—"A" Terminal to Regulator.....	1914185	1101868-9; 1101872; 960; 71-2-3-8
—	LEAD—"A" Terminal to Regulator.....	1917571	1101959
—	LEAD—"F" Terminal to Regulator.....	1914185	1101863; 71; 926-7-8; 40-3; 59; 61; 71-2
—	LEAD—"F" Terminal to Regulator.....	1914187	1101870; 929; 41-2; 73-5
—	LEAD—"F" Terminal to Regulator.....	1911485	1101868-9; 933; 41
—	LEAD—"F" Terminal to Regulator.....	1917571	1101872; 934; 60-9
—	LEAD—Terminal to Field.....	1914185	1101940; 78
42	OILER—C.E.....	125609	1101926-7-8-9; 30-1-2-3-4-6-8; 40-1-3-4-5-7-8-9; 50-1-2-3-4-5-6-7; 61-2-3-4-5-6
42	OILER—C.E.....	1957071	1101956-8-9; 60
43	OILER—D.E.....	1957071	1101956-8-9; 60
43	OILER—D.E.....	125609	1101926-7-8-9; 30-1-2-3-4-6-8; 40-1-3-4-5-7-8-9; 52-3-4-6-7; 61-3-4-5-6
43	OILER—D.E.....	113702	1101950-1-5
44	PIN—Dowel—C.E.....	809062	All
45	PIN—Dowel—D.E.....	809593	All
46	PLATE—Felt Retainer—D.E.....	819104	1101926-7-8-9; 30-1-2-3-4-6-8; 40-1-3-5-7-8-9; 50-1-2-3-4-5-9; 60-1-3-4-5-6
—	PLUG—Bearing Well.....	1948326	1101868-9; 70-1-2-3-4; 943-4-5-7-8-9; 50-1-2-3-4-5-6-7-9; 60-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9
—	PLUG—Wick—C.E.....	1911097	1101863-4; 75
—	PLUG—Bearing Well—C.E.....	1946750	1101961
—	PLUG—C.E.....	823551	1101956-8-9; 60
—	PLUG—D.E.....	823551	1101944; 52-8-9; 60-3-4
—	PLUG—Expansion.....	1950252	1101932-4-6-8-9 40-1-2
—	REGULATOR*	1118983	1101870-1-2; 926-8; 33; 40-2-3; 61; 71-3-5-8
—	REGULATOR*	1118791	1101927-9; 34; 41; 59; 60-9; 72
—	REGULATOR*	1118983	1101868
—	RETAINER—C.E.....	1957560	1101863-4; 75
—	RING—Bearing—C.E.....	1929959	All Except 1101960-1-2
—	SLINGER—Grease—D.E.....	1947344	1101863-4-8-9; 70-1-2-3-4-5; 967-8-9; 70-1-2-3-4-5-6-7-8-9
—	WICK—C.E.....	1947350	1101863-4; 75

*For parts see Regulator—Group 6-J.

 □For parts see Regulator—Group 6-F

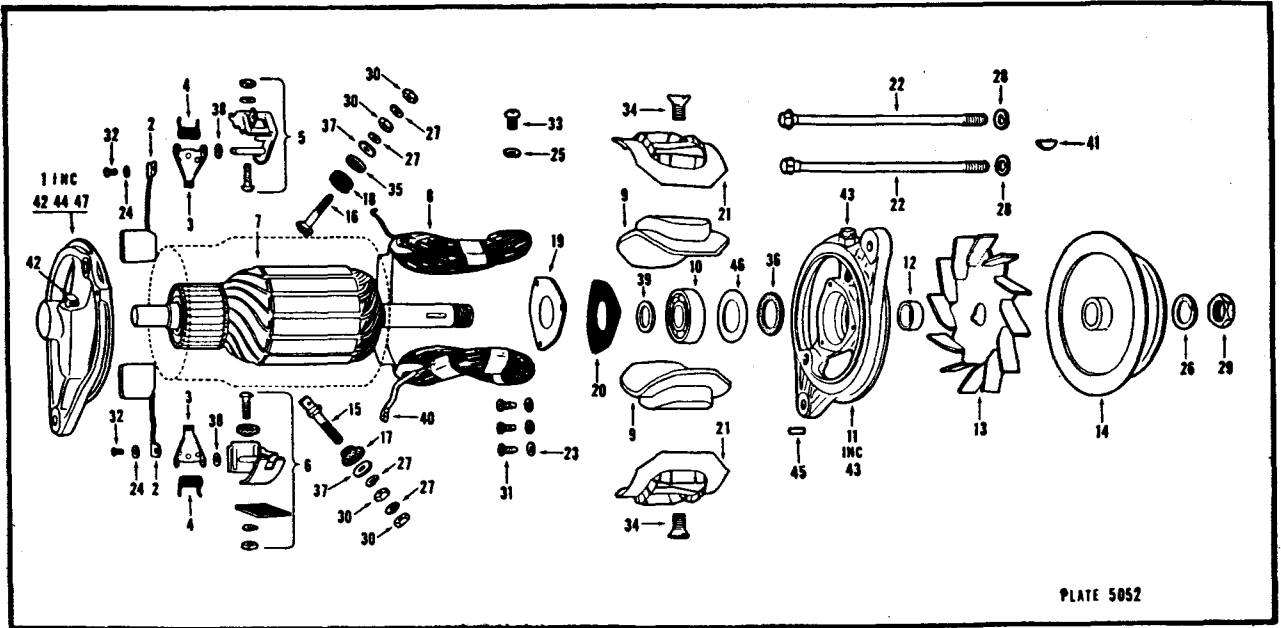

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame — C.E.	Brush	Arm — Brush	Spring — Brush	Holder — (Pkg.) — Ground Brush	Holder — (Pkg.) — Insul. Brush	Armature	Coil — Field — Assembly	Shoe — Pole	Ball Bearing — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1101689.....	800213	1946427	1944373	1916324	1940421	1940422	800212	+	1939902	907996	1962412
1101690.....	"	"	"	"	"	"	800306	+	"	"	"
1101691.....	"	"	"	"	"	"	"	+	"	"	"
1101693.....	1939907	"	"	"	"	"	1939904	+	"	"	"
1101694.....	800213	"	"	"	"	"	800964	x	1931258	"	"
1101695.....	"	"	"	"	"	"	"	x	"	"	"
1101696.....	"	"	"	"	"	"	"	x	"	"	"
1101697.....	"	"	"	"	"	"	"	x	"	"	"
1101698.....	1939907	"	"	"	"	"	1939904	+	1939902	"	1962410
1101699.....	800213	"	"	"	"	"	800964	x	1931258	"	1962412
1101980.....	1939907	"	"	1908829	"	"	1939904	+	1939902	"	"
1101981.....	1962414	"	"	"	"	"	"	+	"	"	1962417
1101982.....	1939907	"	"	"	"	"	1939954	+	1931258	"	1962412
1101983.....	1946437	"	"	"	"	"	1965042	+	1939902	"	1957313
1101984.....	1939907	"	"	"	"	"	1939904	+	"	"	1962412
1101985.....	1953880	"	"	"	"	"	"	o	"	"	1957313
1101986.....	1939907	"	"	"	"	"	1965042	+	"	"	1962410
1101987.....	1962414	"	"	"	"	"	1939954	x	1931258	"	1962417
1101988.....	1939907	"	"	"	"	"	1965042	+	1939902	"	1962412
1101989.....	1962427	"	"	"	"	"	1939954	x	1931258	"	1962430
1101990.....	1953880	"	"	"	"	"	"	x	"	"	1957313
1101991.....	"	"	"	"	"	"	1965042	+	1939902	"	"
1101992.....	1939907	"	"	"	"	"	1939904	+	"	"	1962412
1101993.....	"	"	"	"	"	"	1965042	+	"	"	"
1101994.....	"	"	"	"	"	"	1939954	x	1931258	"	"
1101995.....	"	"	"	"	"	"	1939904	+	1939902	"	1962410
1101996.....	"	"	"	"	"	"	1939904	+	"	"	1962412
1101997.....	"	"	"	"	"	"	1939904	+	1939902	"	1962410
1101998.....	"	"	"	"	"	"	"	+	"	"	"
1101999.....	1962414	"	"	"	"	"	"	+	"	"	1962417

*R.H. Coil is 1939889—L.H. Coil is 1939890.
 *R.H. Coil is 1939952—L.H. Coil is 1955597.
 *R.H. Coil is 1951672—L.H. Coil is 1951673.
 *R.H. Coil is 1955270—L.H. Coil is 1955271.
 °R.H. Coil is 1956914—L.H. Coil is 1939890.

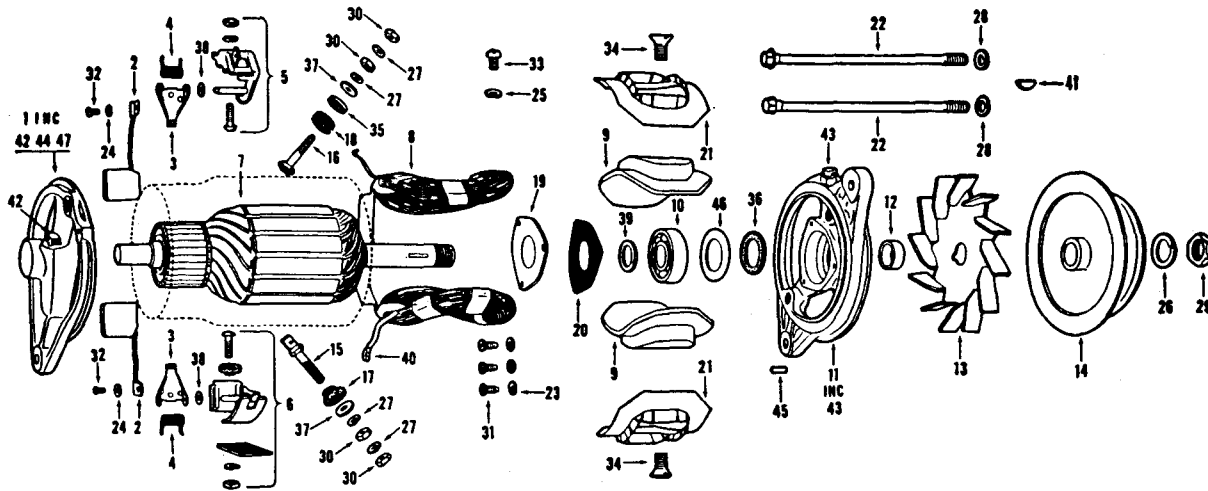 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space — D.E.	Fan	Pulley	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coil	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1101689	1959991		1947620	1858749	1858749	1921362		1955494	1912008	1912073	809763
1101690	"			"	"	"		"	"	"	"
1101691	"			"	"	"		"	"	"	"
1101693	"			"	"	"		"	"	"	"
1101694	"			"	"	"		"	"	1914491	1908680
1101695	"		1949358	"	"	"		"	"	"	"
1101696	"			"	"	"		"	"	"	"
1101697	"			"	"	"		"	"	"	"
1101698	"			"	"	"		"	"	1912073	809763
1101699	"		1947620	"	"	"		"	"	1914491	1908680
1101980	"		"	1939891	"	"		"	"	1912073	809763
1101981	"			"	"	"		"	"	"	"
1101982	"			"	"	"		"	"	1914491	1908680
1101983	"			"	"	"		"	"	1912073	809763
1101984	"		1945744	"	"	"		"	"	"	"
1101985	"	1944437	"	"	"	"		"	"	"	"
1101986	"		1944639	"	"	"		"	"	"	"
1101987	"			"	"	"		"	"	1914491	1908680
1101988	"			"	"	"		"	"	1912073	809763
1101989	"			"	"	"		"	"	1914491	1908680
1101990	"	"	"	"	"	"		"	"	"	"
1101991	"	1944437		"	"	"		"	"	1912073	809763
1101992	"			"	"	"		"	"	"	"
1101993	"			"	"	"		"	"	"	"
1101994	"			"	"	"		"	"	1914491	1908680
1101995	"			1858749	"	"		"	"	1912073	809763
1101996	"			"	"	"		"	"	"	"
1101997	"			"	"	"		"	"	"	"
1101998	"			"	1950238	"		"	"	"	"
1101999	"			"	"	"		"	"	"	"

*Included with 1858749 Stud.

○Motor terminal stud also 1939891.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
24	Lock Washer—Brush Lead Screw.....	1914816	All
—	Lock Washer—Lead Attach—Terminal to Reg.....	1914579	1101698-9; 1101998
—	Lock Washer—Regulator Attaching.....	138479	1101987-8; 94-5-8-9
26	Lock Washer—Shaft Nut—D.E.....	1941978	1101694-5-9
26	Lock Washer—Shaft Nut—D.E.....	1915265	1101690-1-3-6-7-8; 995-6-9
—	Lock Washer—Regulator Attaching.....	1962276	1101693-8
27	Lock Washer—Terminal Stud.....	1914579	All
28	Lock Washer—Thru Bolt.....	9421424	All
NUTS			
29	Nut—Shaft—D.E.....	1915172	1101689; 90-1-3-5-6-7-8-9; 981-2-3-4-5-6-7-8-9; 90-1-2-3-4-5-6-7-8-9
—	Nut—Lead Attach—Terminal to Reg.....	121743	1101998
30	Nut—Terminal.....	121743	All
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.....	1914580	All
32	Screw—Brush Lead Attaching.....	454329	All except 1101690-4-5
32	Screw—Brush Lead Attaching.....	456413	1101690-4-5
34	Screw—Pole Shoe.....	1968396	All
—	Screw—Regulator Attaching.....	178451	1101690-8; 987-8; 94-5-8-9
WASHERS			
35	Washer—Insul.—Field Terminal Stud.....	1858753	All
—	Washer—Plain—Regulator Attaching.....	1856056	1101987-8; 94-5-8-9
37	Washer—Plain—Terminal Stud.....	826319	All
—	Washer—Felt—C.E.....	1957559	1101689; 90-1-4-5-6-7
—	Washer—Spring—Shaft Nut—D.E.....	1941978	1101689; 95; 980-4-5-6
—	Washer—Spring—Shaft Nut—D.E.....	1888439	1101981-2-3-7-8-9; 90-1-2-3
MISCELLANEOUS			
—	BALL BEARING—C.E.....	904751	1101698-980-1-2-3-4-5-6-7-8-9; 90-1-2-3-4-5-6-7-8-9
—	BUSHING—"A" Terminal—Inside.....	1939894	All
40	CLIP—Terminal—To Brush.....	200346	1101980-1-2-3-4-5-6-7-8-9; 90-1-2-3-4
—	COLLAR—Space (Inside)—D.E.....	1861591	All
41	KEY—Woodruff—D.E.....	124545	All
—	LEAD—"A" Terminal to Regulator.....	1911485	1101693-8; 995-8
—	LEAD—"A" Terminal to Regulator.....	1914187	1101988; 94
—	LEAD—"A" Terminal to Regulator.....	1917571	1101987-9
—	LEAD—"F" Terminal to Regulator.....	1911485	1101994
—	LEAD—"F" Terminal to Regulator.....	1914185	1101693-8; 987-8; 95-9
—	Lead—"F" Terminal to Regulator.....	1914187	1101998
44	PIN—Dowel—C.E.....	809062	All
45	PIN—Dowel—D.E.....	809593	All
—	PLUG—Bearing Well.....	1948326	1101698-980-1-2-3-4-5-6-7-8-9; 90-1-2-3-4-7-8
—	PLUG—Wick—C.E.....	1911097	1101689; 90-1-4-5-6-7-9
—	RETAINER—Cup—C.E.....	1957560	1101689; 90-1-4-5-6-7-9
—	REGULATOR*	1118991	1101693-8
—	REGULATOR*	1118983	1101988; 94-5-9
—	REGULATOR*	1118791	1101987; 98
—	RING—Bearing—C.E.....	1929959	All
—	SLINGER—Grease—D.E.....	1947344	All
—	STUD—Terminal Shunt Coil to Field.....	1923056	1101985
—	WICK—C.E.....	1947350	1101689; 90-1-4-5-6-7-9

*For parts see Regulator—Group 6-J.


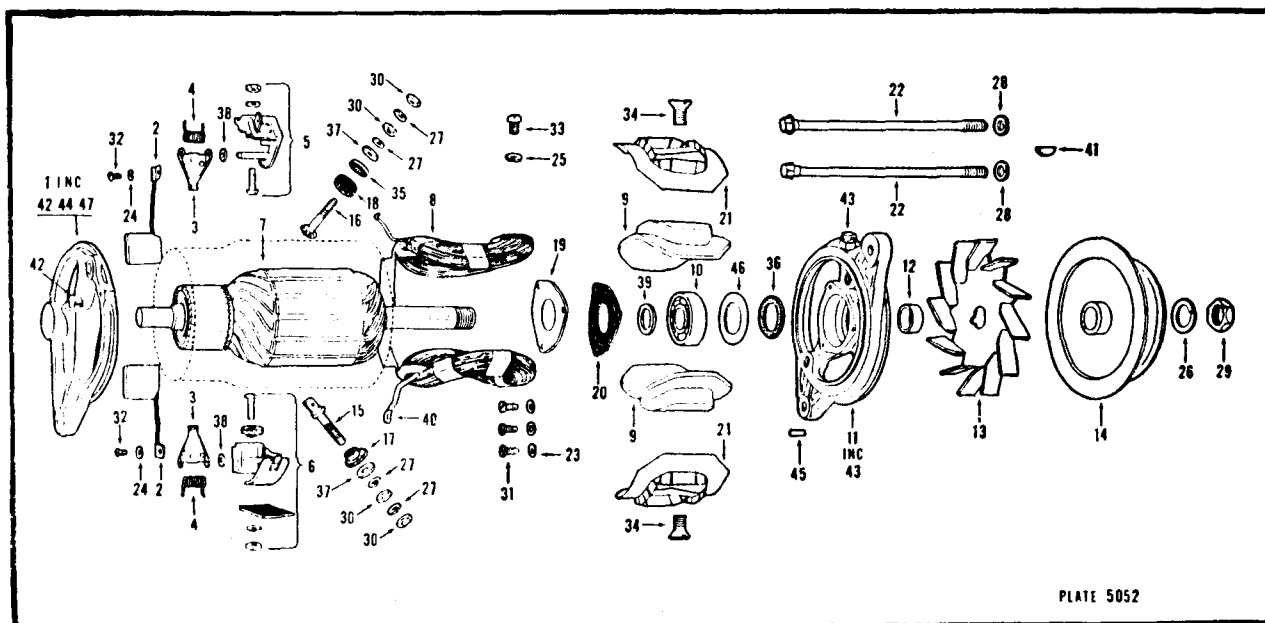 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame — C.E.	Brush	Arm — Brush	Spring — Brush	Holder — (Pkg.) Ground Brush	Holder — (Pkg.) Insul. Brush	Armature	Coil Field — Assembly	Shoe — Pole	Ball Bearing — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1102000	1962926	1932506	1914373	1908829	1925278	1925379	1962845	1922701	1939902	904793	1962929
1102002	1933933	1923295	"	"	"	"	1923535	"	"	954378	1910404
1102003	"	1932506	"	"	"	"	"	"	"	"	"
1102005	"	"	"	"	"	"	"	"	"	"	"
1102006	1925204	1923295	"	"	"	"	1940161	"	"	"	"
1102007	"	"	"	"	"	"	"	"	"	"	"
1102008	1923933	"	"	"	"	"	1923535	"	"	"	"
1102009	1927451	"	"	"	"	"	1927182	"	"	"	1953882
1102010	Same parts as 1102005			"	"	"	"	"	"	"	"
1102011	1933933	1923295	"	"	"	"	1923535	"	"	954378	1910404
1102012	1940001	"	"	"	"	"	"	"	"	"	1934300
1102013	1922184	"	"	"	"	"	1927182	"	"	"	1922185
1102014	1933933	1932506	"	"	"	"	1923535	"	"	"	1910404
1102018	1940001	"	"	"	"	"	"	"	"	"	1934300
1102020	1929513	"	"	"	"	"	1940313	"	"	"	1910404
1102021	1933933	1923295	"	"	"	"	1923535	"	"	"	1953882
1102022	"	"	"	"	"	"	"	"	"	"	1910404
1102023	"	"	"	"	"	"	1913666	"	"	"	1953882
1102024	1927451	"	"	"	"	*	"	1941451	"	"	1903862
1102025	1929513	1932506	"	"	"	"	1940313	1922701	"	"	1953882
1102026	1925204	1923295	"	"	"	"	1931537	"	"	904792	1932495
1102027	1951230	"	"	"	"	"	1930814	"	"	954378	1929568
1102028	1933933	"	"	"	"	"	1923535	"	"	"	1910404
1102029	Same parts as 1102012			"	"	"	"	"	"	"	"
1102030	1925204	1932506	"	"	"	"	1931911	"	"	954378	1910404
1102031	1940001	1923295	"	"	"	"	1933734	"	"	"	1934300
1102032	1932054	"	"	"	"	"	1927182	"	"	907503	1922185
1102033	1927451	"	"	"	"	"	"	"	"	"	1953882
1102034	1925204	"	"	"	"	"	1940161	"	"	954378	1910404
1102038	1925204	1932506	"	"	"	"	1931911	"	"	"	1881874
1102039	1951230	"	"	"	"	"	1932900	"	"	"	1880976

 *Two required.

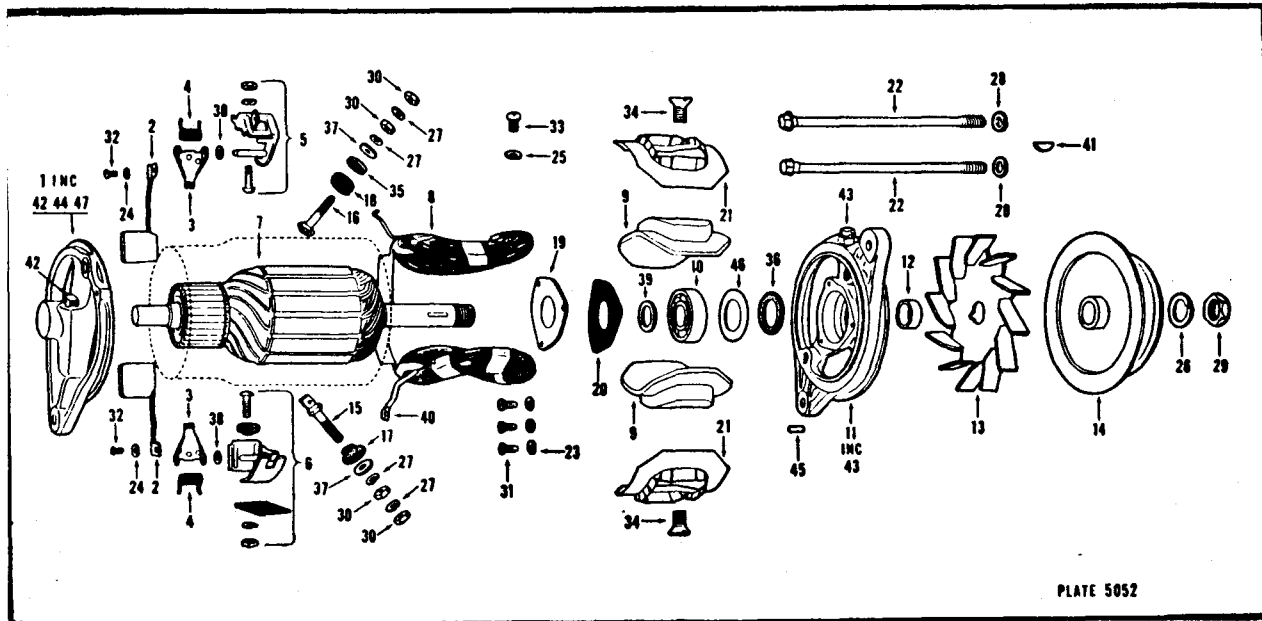

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space — D.E.	Fan	Pulley	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	* Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coil	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1102000.....	1863561			1923284	1858749	1921362		820707		1912073	809763
1102002.....	1858603		1911978	"	"	"		1911263	1912008	"	"
1102003.....	"		1924689	"	"	"		"	"	"	"
1102005.....	"		"	"	"	"		"	"	"	"
1102006.....	"	1866400	1925212	"	"	"		"	"	"	"
1102007.....	"	"	1925287	"	"	"		"	"	"	"
1102008.....	"		1924689	"	"	"		"	"	"	"
1102009.....	"		"	"	"	"		"	"	"	"
1102010.....	Same parts as 1102005		"	"	"	"		"	"	"	"
1102011.....	1858603	1866400	1925287	"	"	"		"	"	"	"
1102012.....	"		"	"	"	"		"	"	"	"
1102013.....	"		"	"	"	"		"	"	"	"
1102014.....	"		"	"	"	"		"	"	"	"
1102015.....	"		1924689	"	"	"		"	"	"	"
1102020.....	"		"	"	"	"		"	"	"	"
1102021.....	"	1866400	1929969	"	"	"		"	"	"	"
1102022.....	"		1924689	"	"	"		"	"	"	"
1102023.....	"		"	"	"	"		"	"	"	"
1102024.....	"		"	"	"	"		"	"	"	"
1102025.....	"		"	"	"	"		"	"	"	"
1102026.....	1932494			"	"	"		820707	1932492	"	"
1102027.....	1858603	1866400	1929764	"	"	"		1911263	1912008	"	"
1102028.....	"	"	1925212	"	"	"		"	"	"	"
1102030.....	"		"	"	"	"		"	"	"	"
1102031.....	"		1924689	"	"	"		"	"	"	"
1102032.....	"		"	"	"	"		"	"	"	"
1102033.....	"		"	"	"	"		"	"	"	"
1102034.....	"		"	"	"	"		"	"	"	"
1102035.....	"		"	"	"	"		"	"	"	"
1102039.....	"	1937227	1929764	"	"	"		"	"	"	"

*Included with 1858749 Stud.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION


Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
—	Lock Washer—Adaptor Attaching Screw.....	9421424	1102025
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.....	1962276	1102000-2-3-5-6-7-8-9; 11-12-13-14-18; 20-1-2-3-4-5-6-7-8; 30-1-2-3-4-8-9
—	Lock Washer—Brush Holder Screw.....	1914579	All
24	Lock Washer—Brush Lead Screw.....	456413	1102000
24	Lock Washer—Brush Lead Screw.....	1914816	1102002-3-5-6-7-8-9; 11-12-13-14-18; 20-1-2-3-4-5-6-7-8; 30-1-2-3-4-8-9
25	Lock Washer—Field Frame Screw.....	9421423	1102000-2-3-5-7-9; 11-12-13-14-18; 20-1-2-3-4-5-6-7; 30-1-2-3-4-8-9
25	Lock Washer—Field Frame Screw.....	138537	1102006-8; 28
—	Lock Washer—Gear Case Attaching.....	453435	1102025
26	Lock Washer—Shaft Nut—D.E.....	1915265	1102003-5-6-7-8; 12-14-18; 20-1-2-3-4-5-7-8; 30-1-2-3-4-8-9
26	Lock Washer—Shaft Nut—D.E.....	1913696	1102002; 11
27	Lock Washer—Terminal Stud.....	1914579	1102000-2-3-5-6-7-8-9; 11-12-13-14-18; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-8-9
28	Lock Washer—Thru Bolt.....	9421424	1102002-3-5-6-7-8-9; 11-12-13-14-18; 21-2-3-4-6-7-8; 30-1-2-3-4-8
NUTS			
—	Nut—Brush Holder Screw.....	121743	All
29	Nut—Shaft—D.E.....	1915172	1102002-3-5-6-7-8; 11-12-14-18; 20-1-2-3-4-5-7-8; 30-1-2-3-4-8-9
29	Nut—Shaft—D.E.....	1917570	1102009; 13; 26
29	Nut—Shaft—D.E.....	9417735	1102000
—	Nut—Spur Gear Attaching.....	1930849	1102025
30	Nut—Terminal.....	121743	1102002-3-5-6-7-8-9; 11-12-13-14-18; 20-1-2-3-4-5-6-7-8; 30-1-2-3-4-8-9
SCREWS			
—	Screw—Adaptor Attaching.....	122022	1102025
31	Screw—Ball Bearing Retainer Plate—D.E.....	1914580	1102000-2-3-5-6-7-8-9; 11-12-13-14-18; 20-1-2-3-4-5-6-7-8; 30-1-2-3-4-8-9
—	Screw—Brush Holder Attaching.....	455290	All
32	Screw—Brush Lead Attaching.....	453460	1102002-3-5-6-7-8-9; 11-12-13-14-18; 20-1-2-3-4-5-6-7-8; 30-1-2-3-4-8-9
32	Screw—Brush Lead Attaching.....	454458	1102000
33	Screw—Field Frame.....	225577	1102000-2-3-5-6-7-8-9; 11-12-13-14-18; 20-1-2-3-4-5-6-7-8; 30-1-2-3-4-8-9
—	Screw—Gear Case Attaching.....	159920	1102025
34	Screw—Pole Shoe.....	1913960	1102000-2-4-5-6-7-8-9; 11-12-13-14-18; 20-1-2-3-4-5-6-7-8; 30-1-2-3-4-8-9
WASHERS			
35	Washer—Insul.—Field Terminal Stud.....	1858753	1102000-2-3-5-6-7-8-9; 11-12-13-14-18; 20-1-2-3-4-5-6-7-8; 30-1-2-3-4-8-9
—	Washer—Felt—C.E.....	1927447	1102032-3
36	Washer—Felt—D.E.....	809961	1102002-3-5-6-7-8-9; 11-12-13-14-18; 20-1-2-3-4-5-7-8; 30-1-2-3-4-8-9
36	Washer—Felt—D.E.....	820706	1102000
—	Washer—Plain—Shaft Nut—D.E.....	1934383	1102000-9; 13; 26
37	Washer—Plain—Terminal Stud.....	826319	1102000-2-3-5-6-7-8-9; 11-12-13-14-18; 20-1-2-3-4-5-6-7-8; 30-1-2-3-4-8-9
—	Washer—Plain—Adaptor Attaching Screw.....	1883734	1102025
—	Washer—Plain—Gear Case Attaching Screw.....	807295	1102025
38	Washer—Space—Brush Arm.....	1857412	1102002-3-5-6-7-8-9; 11-12-13-14-18; 20-1-2-3-5-6-7-8; 30-1-4-8-9
38	Washer—Space—Brush Arm.....	1904368	1102024; 32-3
39	Washer—Space—Inside—D.E.....	809945	1102002-3-5-6-7-8-9; 11-12-13-14-18; 20-1-2-3-4-5-7-8; 30-1-2-3-4-8-9
39	Washer—Space—Inside—D.E.....	822644	1102000; 26
—	Washer—Space—Spur Gear.....	815540	1102025
MISCELLANEOUS			
—	ADAPTOR—Tachometer Drive.....	1930846	1102025
—	BALL BEARING—C.E.....	900529	1102000
—	BALL BEARING—C.E.....	908503	1102006-7
—	BALL BEARING—C.E.....	904751	1102020-5-6; 30-4-8

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
—	BUSHING—Spur Gear Case.....	1930850	1102025
—	CASE—Tachometer Drive.....	1930847	1102025
—	CLAMP—Harness.....	1860459	1102006-8; 28
40	CLIP—Terminal—To Brush.....	200382	1102000-2-3-5-6-7-8-9; 11-12-13-14-18; 20-1-2-3-4-5-6-7-8; 30-1-2-3-4-8-9
—	COLLAR—Space—Outside—D.E.....	1863561	1102000
—	CUP—Felt Retainer—C.E.....	1927488	1102032-3
—	GASKET—Tachometer Drive Adaptor.....	1930848	1102025
—	GEAR—Tachometer Drive.....	1930853	1102025
—	GEAR—Spur.....	1930852	1102025
41	KEY—Woodruff—D.E.....	124545	1102000-2-3-5-6-7-8-9; 11-12-13-18; 20-1- 2-3-4-6-7-8; 30-1-2-3-8-9
*42	OILER—C.E.....	113702	1102002-3-5-8-9; 11-12-13-18; 20-1-2-3-4- 5-8; 31
42	OILER—C.E.....	9416777	1102014
*42	OILER—C.E.....	125609	1102006-7; 26-7; 30-4-8-9
42	OILER—C.E.....	113702	1102032-3
43	OILER—D.E.....	125609	1102002-3-5-6-7-8-9; 11-12-13-14-18; 20- 1-2-3-4-5-6-7-8; 30-1-2-3-4-8-9
44	PIN—Dowel—C.E.....	809062	1102000-2-3-5-6-7-8-9; 11-12-13-14-18; 20-1-2-3-4-5-6-7-8; 30-1-2-3-4-8-9
45	PIN—Dowel—D.E.....	809593	1102000-2-3-5-6-7-8-9; 11-12-13-14-18; 20-1-3-4-5-6-7-8; 30-1-2-3-4-8-9
46	PLATE—Felt Retainer—D.E.....	819104	1102002-3-5-6-7-8-9; 11-12-13-14-18; 20- 1-2-3-4-5-7-8; 30-1-2-3-4-8-9
46	PLATE—Felt Retainer—D.E.....	820709	1102000
—	PLUG—Bearing Well—C.E.....	1948326	1102000
—	RING—Bearing—C.E.....	1929959	1102000; 20-5; 26; 30-4-8
—	SHAFT—Spur Gear.....	1930854	1102025
47	WICK—Oil—C.E.....	1947350	1102002-3-5-8-9; 11-12-13-14-18; 21-2-3- 4-8; 31-2-3
—	WICK—Oil—D.E.....	823551	1102032-3

 *If C.E. Oiler hole dia. is $\frac{3}{16}$ " use 125609. For $\frac{1}{4}$ " dia. use 113702. Some later units use 1931191 extra capacity Oiler.

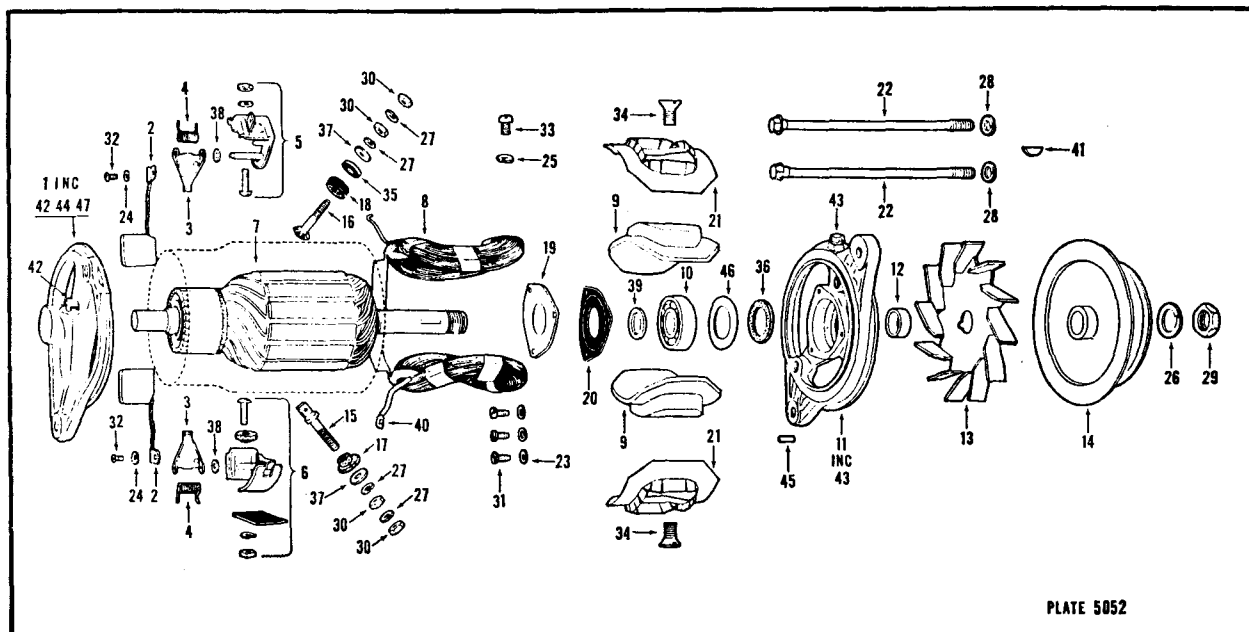

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame — C.E.	Brush	Arm — Brush	Spring — Brush	Holder — (Pkg.) Ground Brush	Holder — (Pkg.) Insul. Brush	Armature	Coil — Field — Assembly	Shoe — Pole	Ball Bearing — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1102040.....	1953880	1923295	1944373	1908829	1925378	1925379	1957588	1922701	1939902	954378	1953882
1102041.....	1934131	1932506	"	"	"	"	1940313	"	"	"	1933109
1102042.....	1933113	"	"	"	"	"	1923535	"	"	"	"
1102043.....	1934131	"	"	"	"	"	1940313	"	"	"	"
1102044.....	1927451	1923295	"	"	"	"	1923535	"	"	"	1953882
1102045.....	1923069	"	"	"	"	"	"	"	"	"	1929171
1102046.....	1953880	1932506	"	"	"	"	1931911	1931686	"	"	"
1102049.....	1921979	1923295	"	"	"	"	1932292	1922701	"	"	1882433
1102050.....	1951230	1932506	"	"	"	"	1932900	1931686	"	"	1880976
1102051.....	1933933	"	"	"	"	"	"	1922701	"	"	1938790
1102052.....	1934298	1923295	"	"	"	"	"	"	"	"	1934300
1102053.....	1923069	1932506	"	"	"	"	"	"	"	"	1938790
1102054.....	1934298	"	"	"	"	"	"	"	"	"	1934300
1102055.....	"	"	"	"	"	"	"	"	"	"	"
1102056.....	1935260	"	"	"	"	"	1940313	"	"	"	1933109
1102057.....	Same parts as 1102042 except D.E. Frame										1929171
1102059.....	1925204	1932506	1944373	1908829	1925378	1925379	1940161	1922701	1939902	907503	1953882
1102060.....	1933933	"	"	1908829	"	"	1935778	1935779	1939902	954378	1938790
1102061.....	"	"	"	"	"	"	1932900	1922701	1939902	"	"
1102062.....	1946595	"	"	"	"	"	"	"	"	"	1873830
1102063.....	1933933	"	"	"	"	"	1923535	"	"	"	1910404
1102065.....	"	1923295	"	"	"	"	"	"	"	"	"
1102066.....	1940050	1932506	"	"	"	"	1932900	"	"	"	1935794
1102067.....	1938787	"	"	"	"	"	"	"	"	"	1938790
1102068.....	1929513	1923295	"	1908829	"	"	1935989	"	"	907503	1953882
1102069.....	1933933	"	"	1908829	"	"	1932900	"	"	954378	1938790
1102070.....	1934298	1932506	"	"	"	"	"	"	"	"	1934300
1102071.....	"	"	"	"	"	"	"	"	"	"	"
1102072.....	1927451	"	"	"	"	"	1841982	"	"	"	1953882
1102073.....	1934298	"	"	"	"	"	1932900	"	"	"	1934300

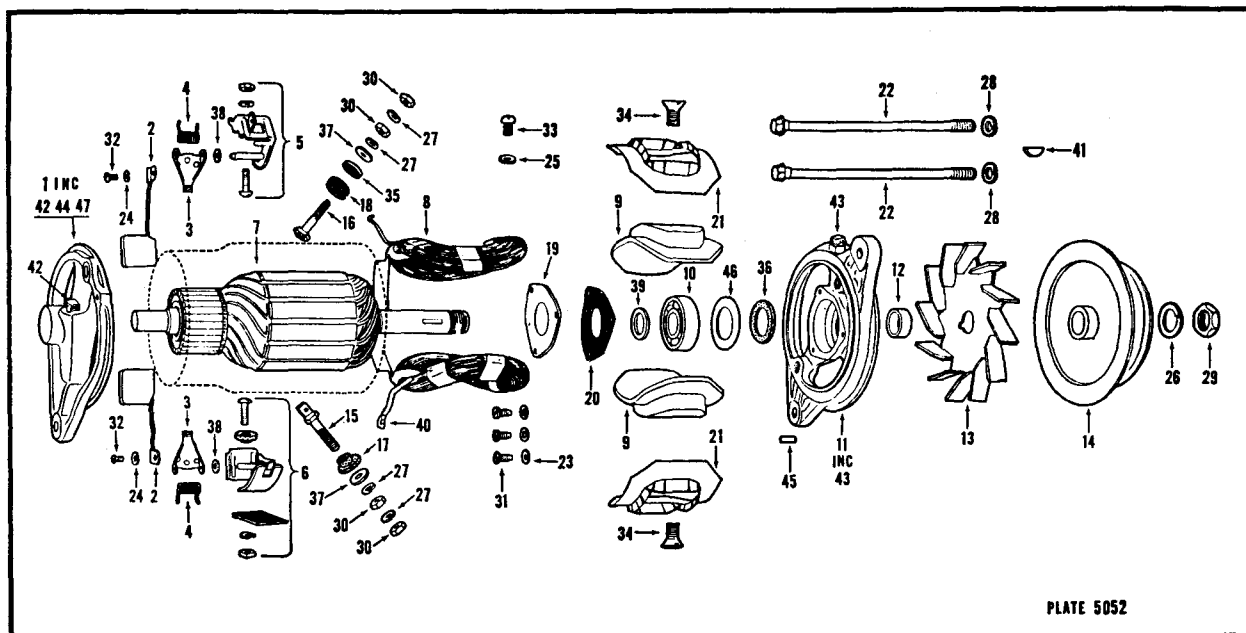 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space — D.E.	Fan	Pulley or Pulley & Fan	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coll	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1102040.....	1858603			1923284	1858749	1921362		1911263	1912008	1912073	809763
1102041.....	"			"	"	"		"	"	"	"
1102042.....	"			"	"	"		"	"	"	"
1102043.....	"			"	"	"		"	"	"	"
1102044.....	"			"	"	"		"	"	"	"
1102045.....	"			"	"	"		"	"	"	"
1102046.....	"			"	"	"		"	"	"	"
1102049.....	"	1944437	1949355	"	"	"		"	"	"	"
1102050.....	"			"	"	"		"	"	"	"
1102051.....	"	1937227	1925212	"	"	"		"	"	"	"
1102052.....	"	1940994	1935804	"	"	"		"	"	"	"
1102053.....	"	"	1949358	"	"	"		"	"	"	"
1102054.....	"		"	"	"	"		"	"	"	"
1102055.....	"			"	"	"		"	"	"	"
1102056.....	"			"	"	"		"	"	"	"
1102057.....	Same parts as 1102042 except D.E. Frame										
1102059.....	1858603			1923284	1858749	1921362		1911263	1912008	1912073	"
1102060.....	"	1940994	1949358	"	"	"		"	"	"	"
1102061.....	"			"	"	"		"	"	"	"
1102062.....	817224			"	"	"		"	"	"	"
1102063.....	1858603		1924689	"	"	"		"	"	"	"
1102065.....	"	1866400	1921091	"	"	"		"	"	"	"
1102066.....	"		1936622	"	"	"		"	"	"	"
1102067.....	"	1937227	3732547	"	"	"		"	"	"	"
1102068.....	"			"	"	"		"	"	"	"
1102069.....	"	1940994	1949358	"	"	"		"	"	"	"
1102070.....	"	"	"	"	"	"		"	"	"	"
1102071.....	"	1937227	1936435	"	"	"		"	"	"	"
1102072.....	"			"	"	"		"	"	"	"
1102073.....	"		1935804	"	"	"		"	"	"	"

* Included with 1958749 Stud

MINOR PARTS SECTION


Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
—	Lock Washer—Adaptor Attaching Screw.....	9421424	1102043
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.....	1962276	1102040-1-2-3-4-5-6-9; 50-1-2-3-4-5-9; 60-6-7-9; 70
—	Lock Washer—Brush Holder Screw.....	1914579	All
24	Lock Washer—Brush Lead Screw.....	1914816	All
25	Lock Washer—Field Frame Screw.....	9421423	1102040-1-2-3-4-5-6-9; 50-4-5-6-9; 60-2-3-5-7-8-9; 70-1-2-3
25	Lock Washer—Field Frame Screw.....	138537	1102051-3; 61-6
—	Lock Washer—Gear Case Attaching.....	453435	1102043
26	Lock Washer—Shaft Nut—D.E.....	1915265	1102041-2-3-4-5-6-9; 50-1-2-3-4-5-6-9; 61-2-3-5-6-7-8; 70-1-2-3
26	Lock Washer—Shaft Nut—D.E.....	1913696	1102060-9
27	Lock Washer—Terminal Stud.....	1914579	All
28	Lock Washer—Thru Bolt.....	9421424	All
NUTS			
—	Nut—Brush Holder Screw.....	121743	All
29	Nut—Shaft—D.E.....	451071	1102040
29	Nut—Shaft—D.E.....	1915172	1102041-2-3-4-5-6-9; 50-1-2-3-4-5-6-9; 60-1-2-3-5-6-7-8-9; 70-1-2-3
—	Nut—Spur Gear Attaching.....	1930849	1102043
30	Nut—Terminal.....	121743	All
SCREWS			
—	Screw—Adaptor Attaching.....	122022	1102043
31	Screw—Ball Bearing Retainer Plate—D.E.....	1914580	1102040-1-2-3-4-5-6-9; 50-1-2-3-4-5-9; 60-6-7-9; 70
—	Screw—Brush Holder Attaching.....	455290	All
32	Screw—Brush Lead Attaching.....	453460	All
33	Screw—Field Frame.....	225577	1102040-1-2-3-4-5-6-9; 50-1-2-3-4-5-6-9; 60-1-2-3-5-6-7-8-9; 70-1-2-3
—	Screw—Gear Case Attaching.....	159920	1102043
34	Screw—Pole Shoe.....	1913960	All
WASHERS			
35	Washer—Insul.—Field Terminal Stud.....	1858753	All
—	Washer—Felt—C.E.....	815042	1102059
36	Washer—Felt—D.E.....	809961	All
—	Washer—Plain—Shaft Nut—D.E.....	1934383	1102040
37	Washer—Plain—Terminal Stud.....	826319	All
—	Washer—Plain—Adaptor Attaching Screw.....	1883734	1102043
—	Washer—Plain—Gear Case Attaching Screw.....	807295	1102043
38	Washer—Space—Brush Arm.....	1857412	1102040-1-2-3-4-5-6-9; 50-1-2-3-4-5-6; 60-1-2-3-5-6-7-9; 70-1-2-3
38	Washer—Space—Brush Arm.....	1904368	1102059; 68
39	Washer—Space—Inside—D.E.....	809945	1102040-1-2-3-4-5-6-9; 50-1-2-3-4-5-6-9; 60-1-2-3-5-6-7-8-9; 70-1-2-3
—	Washer—Space—Spur Gear.....	1905125	1102043
MISCELLANEOUS			
—	ADAPTOR—Tachometer Drive.....	1930846	1102043
—	BALL BEARING—C.E.....	904751	1102040-1-3-6; 59; 68
—	BUSHING—Spur Gear Case.....	1930850	1102043
—	CASE—Tachometer Drive.....	1930847	1102043
—	CLAMP—Harness.....	1860459	1102051-3; 61-6
40	CLIP—Terminal—To Brush.....	200382	All
—	GASKET—Tachometer Drive Adaptor.....	1930848	1102043
—	GEAR—Tachometer Drive.....	1930853	1102043
—	GEAR—Spur.....	1930852	1102043
41	KEY—Woodruff—D.E.....	124545	1102040-1-2-3-4-6-9; 50-1-2-3-4-5-6-9; 60-1-2-3-5-6-7-8-9; 70-1-2-3
*42	OILER—C.E.....	113702	1102041-3-4-5-9; 53-6; 60-3-5-6-9; 72
*42	OILER—C.E.....	125609	1102040-2-5-6; 50-1-2-4-5; 61-2-7; 70-1-3
42	OILER—C.E. (with Gasket Cap).....	1880641	1102059; 62
42	OILER—C.E.....	113702	1102068

*If C.E. Oiler hole is $\frac{1}{8}$ " dia. use 125609. For $\frac{1}{4}$ " dia. hole use 113702. Some later units use extra capacity Oiler 1931191.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
43	OILER—D.E.....	125609	1102040-1-2-3-4-6-9; 50-1-2-3-4-5-6-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3
44	PIN—Dowel—C.E.....	809062	All
45	PIN—Dowel—D.E.....	809593	All
—	PIN—Dowel—Mounting.....	820369	1102049
—	PLATE—Felt Retainer—C.E.....	809960	1102059
46	PLATE—Felt Retainer—D.E.....	819104	1102040-1-2-3-4-5-6-9; 50-1-2-3-4-5-6-9; 60-1-2-3-5-6-7-8-9; 70-1-2-3
—	PLUG—Oil Hole—C.E.....	1911097	1102051-2-4-5; 62-7; 70-3
—	RING—Bearing—C.E.....	1929959	1102040-1-3-6; 56-9; 68
—	SHAFT—Spur Gear.....	1930854	1102043
47	WICK—Oil—C.E.....	1947350	1102044-5-9; 51-2-3-4-5; 60-1-2-3-5-6-7-8- 9; 70-1-2-3
—	WICK—Oil—D.E.....	823551	1102059; 62-8

 [illegible]

Delco-Remy

SERVICE PARTS CATALOG

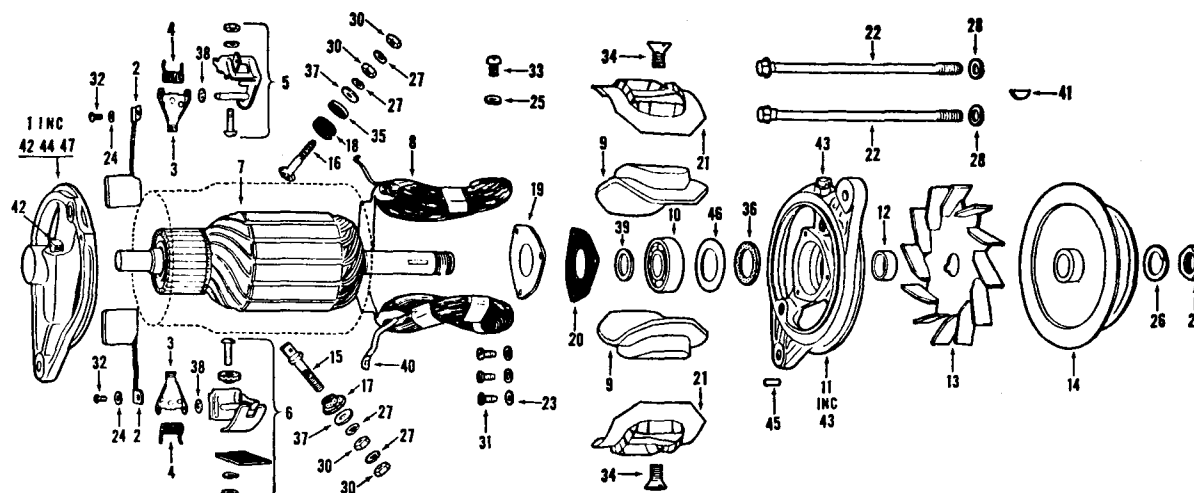 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

[illegible]

*Included with 1858749 Stud.


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	1962276	1102074-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-7-9
24	Lock Washer—Brush Lead Screw	1914816	1102074-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-7-9
25	Lock Washer—Field Frame Screw	9421423	1102074-5-6-7-8-9; 80-2-3-4-5-6-7-8; 91-2-3-4-9
25	Lock Washer—Field Frame Screw	138537	1102081
26	Lock Washer—Shaft Nut—D.E.	1915265	1102074-5-6-7-8-9; 81-3-4-5-7-8; 91-2-3-4
26	Lock Washer—Shaft Nut—D.E.	1913696	1102080-2-6; 99
26	Lock Washer—Shaft Nut—D.E.	1914978	1102096-7
27	Lock Washer—Terminal Stud	1914579	1102074-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-7-9
27	Lock Washer—Terminal Stud	1914579	1102075-6
28	Lock Washer—Thru Bolt	9421424	1102074-5-6-7-8-9; 80-1-2-3-5-6-7-8; 92-6-7-9
NUTS			
29	Nut—Shaft—D.E.	1915172	1102074-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-7-9
30	Nut—Terminal	121743	1102074-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-7-9
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1102074-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-9
32	Screw—Brush Lead Attaching	453460	1102074-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-7-9
32	Screw—Brush Lead Attaching	453460	1102075-6
33	Screw—Field Frame	225577	1102074-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-9
34	Screw—Pole Shoe	1913960	1102074-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-7-9
WASHERS			
35	Washer—Insul.—Field Terminal Stud	1858753	1102074-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-7-9
—	Washer—Felt—C.E.	1927447	1102075-6
36	Washer—Felt—D.E.	809961	1102074-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-9
37	Washer—Plain—Terminal Stud	826319	1102074-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-7-9
37	Washer—Plain—Terminal Stud	1954452	1102075-6
38	Washer—Space—Brush Arm	1857412	1102074-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-7-9
38	Washer—Space—Brush Arm	1914741	1102075-6
39	Washer—Space—Inside—D.E.	809945	1102074-5-6-7-8; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-7-9
MISCELLANEOUS			
—	BALL BEARING—C.E.	904751	1102075; 84; 91-3-4
—	CLAMP—Harness	1860459	1102081
40	CLIP—Terminal—To Brush	200382	1102074-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-7-8
41	KEY—Woodruff—D.E.	124545	1102074-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-9
*42	OILER—C.E.	113702	1102080-1-2-4-6; 94
*42	OILER—C.E.	125609	1102074-5-7-8-9; 83-5-7-8; 91-2-3-6-7-9
43	OILER—D.E.	125609	1102074-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-7-9
44	PIN—Dowel—C.E.	809062	1102074-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-7-9
45	PIN—Dowel—D.E.	809593	1102074-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-7-9
46	PLATE—Felt Retainer—D.E.	819104	1102074-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 91-2-3-4-6-9
*—	PLUG—Expansion—C.E.	1939884	1102091-3
—	PLUG—Felt Wick—D.E.	823551	1102094
—	PLUG—Oil Hole—C.E.	1911097	1102074-7-8-9; 87; 92-6-7
—	RETAINER—Felt Washer—C.E.	1927448	1102075-6
—	RING—Bearing—C.E.	1929959	1102075-6; 84; 91-3-4
47	WICK—Oil—C.E.	1947350	1102074-7-8-9; 80-1-2-3-5-6-7-8; 92-6-7-9

*If C.E. Oiler hole is $\frac{1}{8}$ " dia. use 125609. For $\frac{1}{4}$ " dia. use 113702. Some later units used extra capacity oiler 1931191.

 *If plug dia. is $1\frac{1}{2}$ " use 1948326.

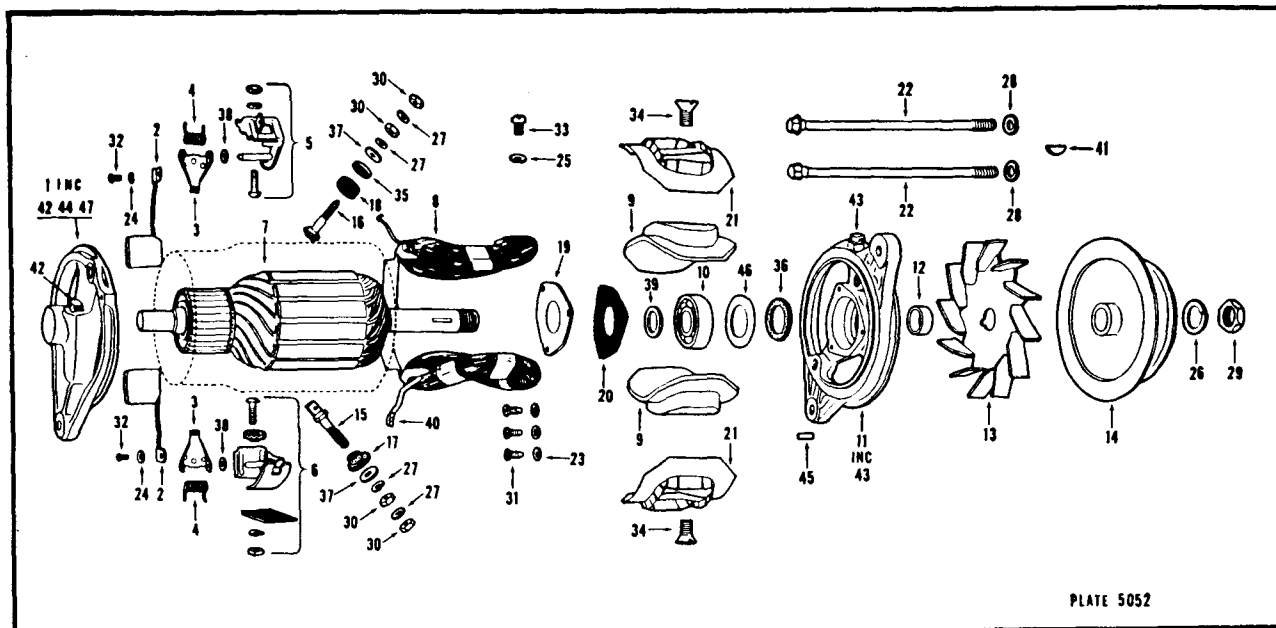

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

[illegible]

Delco-Remy SERVICE PARTS CATALOG

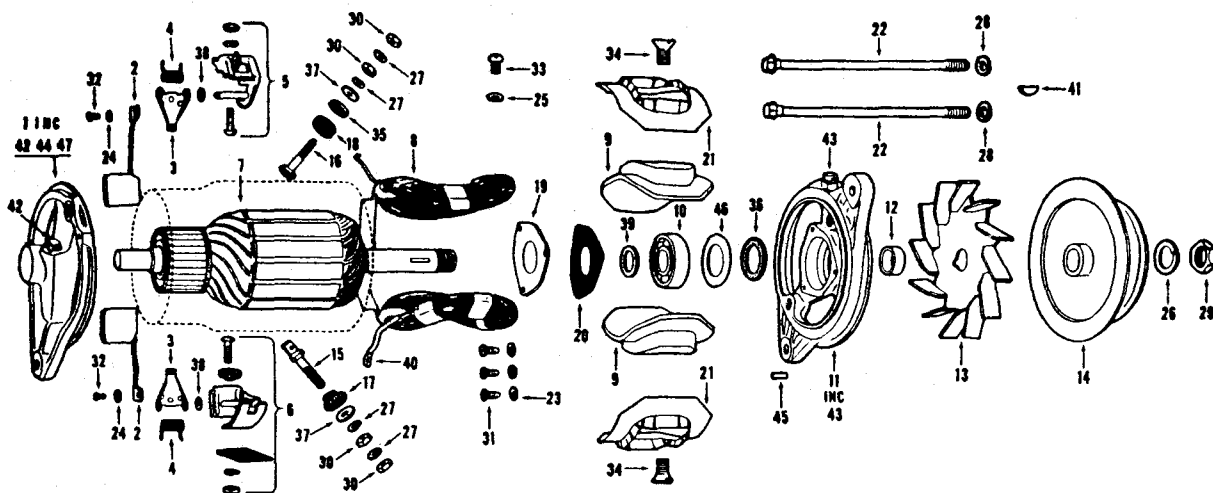 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space D.E.	Fan	Pulley or Pulley & Fan	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coil	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1102100.....	1858603	1966990	1949358	1923284	1858749	1921362		1911263	1912008	1912073	809763
1102101.....	"	"	1939845	"	"	"		"	"	"	"
1102102.....	"	"	"	"	"	"		"	"	"	"
1102103.....	"	"	1949355	"	"	"		"	"	"	"
1102104.....	"	"	1961291	"	"	"		"	"	"	"
1102105.....	"	"	1941757	"	"	"		"	"	"	"
1102106.....	"	"	1940343	"	"	"		"	"	"	"
1102107.....	"	"	1924689	"	"	"		"	"	"	"
1102108.....	"	1866400	1936435	"	"	"		"	"	"	"
1102109.....	"	1966990	1943222	"	"	"		"	"	"	"
1102113.....	"		1924689	"	"	"		"	"	"	"
1102114.....	"		"	"	"	"		"	"	"	"
1102115.....	"		"	"	"	"		"	"	"	809763
1102116.....	1914247		"	"	"	"		1934457	"	"	"
1102117.....	"		"	"	"	"		"	"	"	"
1102118.....	1836194			"	"	"		1905807	820708	"	"
1102119.....	1858603			"	"	"		1934457	1912008	"	"
1102120.....	"			"	"	"		1911263	"	"	"
1102121.....	"			"	"	"		"	"	"	"
1102122.....	"			"	"	"		"	"	"	"
1102123.....	"			"	"	"		"	"	"	"
1102124.....	"			"	"	"		"	"	"	"
1102125.....	"			"	"	"		"	"	"	"
1102127.....	"	1966990	1949355	"	"	"		"	"	"	"
1102128.....	"			"	"	"		"	"	"	"
1102129.....	"			"	"	"		"		"	"
1102132.....	"			"	"	"		"	1912088	"	"
1102134.....	"	1966990	1943222	"	"	"		"	"	"	"
1102135.....	"	"	1949355	"	"	"		"	"	"	"
1102136.....	817224			"	"	"		"	"	"	"
1102138.....	1858603	1966990	1944312	"	1858749	"		"	"	"	"
1102139.....	"		1924689	"	"	"		"	"	"	"

Included with 1858749 Stud.

Parts not listed in this catalog will not be sold separately.

Revised to September 1, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.....	1962276	1102100-1-2-3-4-5-6-7-8-9; 13-14-15-16-17-18-19; 20-2-3-4-5-7-8-9; 32-4-5-6-9
24	Lock Washer—Brush Lead Screw.....	1914816	1102100-1-2-3-4-5-6-7-8-9; 13-14-15-16-17-18-19; 20-2-3-4-5-7-8-9; 32-4-5-6-8-9
25	Lock Washer—Field Frame Screw.....	9421423	1102100-2-4-5-6-7-8-9; 13-16-17-18-19; 20-3-4-5-7-8-9; 32-4-6-9
25	Lock Washer—Field Frame Screw.....	138537	1102101-3; 22; 35-8
26	Lock Washer—Shaft Nut—D.E.....	1915265	1102101-2-3-4-6-7-8; 13-14-16-17; 19; 32-6
26	Lock Washer—Shaft Nut—D.E.....	1913696	1102100-9
26	Lock Washer—Shaft Nut—D.E.....	1941978	1102105; 15; 20-2-3-4-5-7
27	Lock Washer—Terminal Stud.....	1914579	1102100-1-2-3-4-5-6-7-8-9; 13-14-15-16-17-18; 20-2-3-4-5-7-8-9; 32-4-5-6-8-9
28	Lock Washer—Thru Bolt.....	9421424	1102102-7-8-9; 13-14-16-17-18-19; 20-4-5-8-9; 34-6
28	Lock Washer—Thru Bolt.....	1913696	1102100
NUTS			
29	Nut—Shaft—D.E.....	1915172	1102100-1-2-3-4-5-6-7-8-9; 13-14-15-16-17-19; 20-2-3-4-5-7-8; 32-4-5-6-9
29	Nut—Shaft—D.E.....	1917035	1102118; 29
29	Nut—Shaft—D.E.....	1944313	1102138
30	Nut—Terminal.....	121743	1102100-1-2-3-4-5-6-7-8-9; 13-14-15-16-17-18-19; 20-2-3-4-5-7-8-9; 32-4-5-6-8-9
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.....	1914580	1102100-1-2-3-4-5-6-7-8-9; 13-14-15-16-17-18-19; 20-2-3-4-5-7-8-9; 32-4-5-6-8-9
32	Screw—Brush Lead Attaching.....	453460	1102100-1-2-3-4-5-6-7-8-9; 13-14-15-16-17-18-19; 20-2-3-4-5-7-8-9; 32-4-5-6-8-9
33	Screw—Field Frame.....	225577	1102100-1-2-3-4-5-6-7-8-9; 13-16-17-18-19; 20-2-3-4-5-7-8-9; 32-4-5-6-8-9
34	Screw—Pole Shoe.....	1913960	1102101-2-3-4-5-6-7-8-9; 13-14-15-16-17-18-19; 20-2-3-4-5-7-8-9; 32-4-5-6-8
34	Screw—Pole Shoe.....	825675	1102100
WASHERS			
35	Washer—Insul.—Field Terminal Stud.....	1858753	1102100-1-2-3-4-5-6-7-8-9; 13-14-15-16-17-18-19; 20-2-3-4-5-7-8-9; 32-4-5-6-8-9
36	Washer—Felt—D.E.....	809961	1102100-1-2-3-4-5-6-7-8-9; 13-14-15-16-17-19; 20-2-4-5-7; 32-4-5-6-8-9
—	Washer—Plain—Shaft Nut—D.E.....	1934383	1102129
37	Washer—Plain—Terminal Stud.....	826319	1102100-1-2-3-4-5-6-7-8-9; 13-14-15-19; 20-2-3-4-5-7-8-9; 32-4-5-6-8-9
37	Washer—Plain—Terminal Stud.....	826319	1102116-17-18
—	Washer—Shaft Nut—D.E.....	30205	1102118
38	Washer—Space—Brush Arm.....	1857412	1102100-1-3-4-5-6-7-8-9; 13-14-15; 20-2-3-4-5-7; 32-4-5-6-8-9
38	Washer—Space—Brush Arm.....	1914741	1102102; 16-17-18-19; 28-9
39	Washer—Space—Inside—D.E.....	809945	1102100-1-2-3-4-5-7-8-9; 13-14-15-19; 20-2-3-4-5-7-8-9; 32-4-5-7-8-9;
39	Washer—Space—Inside—D.E.....	1914213	1102116-17
39	Washer—Space—Inside—D.E.....	822644	1102118
—	Washer—Spring—Shaft Nut—D.E.....	1941978	1102128; 32-4-5-9
—	Washer—Spring—Shaft Nut—D.E.....	1944314	1102138
MISCELLANEOUS			
—	BALL BEARING—C.E.....	904751	1102101-2-3-4-5-6; 15-16-17-18-19; 20-2-3-7; 32-5-8
—	BALL BEARING—C.E.....	900529	1102128-9
—	BRACKET—C.E.....	1943608	1102124; 39
—	BUSHING—C.E.....	812823	1102113
—	CLAMP—Harness.....	1860459	1102101; 22; 38
40	CLIP—Terminal—To Brush.....	200382	1102100-1-3-4-5-7-8-9; 13-14-15; 20-2-3-4-5-7-8-9; 32-4-5-8-9
40	CLIP—Terminal—To Brush.....	200346	1102102; 16-17-18-19; 36

Parts not listed in this catalog will not be sold separately.

MINOR PARTS SECTION

Illustration No.	Name	Part No.	Used on Models
41	MISCELLANEOUS—Continued		
	KEY—Woodruff—D.E.....	124545	1102100-1-2-3-4-5-6-7-8-9; 13-16-17-18-19; 20-2-3-4-5-7-8-9; 32-4-5-6-8-9
42	OILER—C.E.....	113702	1102115
42	OILER—C.E.....	125609	1102100-1-2-3-4-5-6-7-8-9; 13-14-16-17; 20-2-3-4-5-7; 32-4-5-6-8-9
43	OILER—D.E.....	125609	1102100-1-2-3-4-5-6-7-8-9; 13-14-15-16-17-19; 20-2-3-4-5-7; 34-5-6-8-9
44	PIN—Dowel—C.E.....	809062	1102100-1-2-3-4-5-6-7-8-9; 13-14-15-16-17-18-19; 20-2-3-4-5-7-8-9; 32-4-5-6-8-9
45	PIN—Dowel—D.E.....	809593	1102100-1-2-3-4-5-6-7-8-9; 13-14-15-16-17-18-19; 20-2-3-4-5-7-8-9; 32-4-5-6-8-9
46	PLATE—Felt Retainer—D.E.....	819104	1102100-1-2-3-4-5-6-7-8-9; 13-14-15-16-17-19; 20-2-3-4-5-7; 32-4-5-6-8-9
—	PLUG—Expansion—C.E.....	1950252	1102101-3-4-5-6; 22-3-7-8-9; 32-5-8
*—	PLUG—Expansion—C.E.....	1948326	1102119
—	PLUG—Expansion—C.E.....	1911097	1102136
—	RING—Bearing—C.E.....	1929959	1102101-2-3-4-5-6; 15-16-17-18-19; 20-2-3-7-8-9; 32-5-8
47	WICK—Oil—C.E.....	1947350	1102100-7-8-9; 13-14; 24-5; 34-6-9
—	WICK—D.E.....	823551	1102120

*If C. E. Oiler hole dia. is $\frac{3}{16}$ " use 125609; for $\frac{1}{4}$ " use 113702. Some later units use extra capacity Oiler 1931191.

*If Plug is $1\frac{1}{32}$ " dia. use 1948326.


[illegible]

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
*42	OILER—C.E.....	113702	1102140-2-4-6-7-8; 50-8-9; 71-2
*42	OILER—C.E.....	125609	1102141-3-5; 52; 63-4-5-6-7-8-9; 70-3-4-5-6-7
43	OILER—D.E.....	125609	1102140-1-2-3-4-5-6-7-8; 50-2-8-9; 63-4-5-6-7-8-9; 70-1-2-3-4-5-6-7
44	PIN—Dowel—C.E.....	809062	1102140-1-2-3-4-5-6-7-8; 50-2-3-8-9; 63-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9
45	PIN—Dowel—D.E.....	809593	1102140-1-2-3-4-5-6-7-8; 50-2-3-8-9; 63-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9
—	PIN—Dowel—Mounting.....	820369	1102159
46	PLATE—Felt Retainer—D.E.....	819104	1102140-1-2-3-4-5-6-7-8; 50-2-8-9; 63-4-5-6-7-8-9; 70-1-2-3-4-5-6
46	PLATE—Felt Retainer—D.E.....	820709	1102153; 77
*—	PLUG—Expansion—C.E.....	1950252	1102141-3-5; 63-5-6-9; 75
—	PLUG—Expansion—C.E.....	1948326	1102164-6-8; 70-3-4-6-7
—	PLUG—Oil Hole—C.E.....	1911097	1102158; 71-2
—	RING—Bearing—C.E.....	1929959	1102141-3-5; 53; 63-4-5-6-7-8-9; 70-3-4-5-6-7-8-9
47	WICK—Oil—C.E.....	1947350	1102140-2-4-6-7-8; 40; 50-2-8-9; 71-2
—	WICK—D.E.....	823551	1102146-8; 67

*If Plug dia. is $1\frac{1}{8}$ " use 1948326

 *If C.E. Oiler hole is $\frac{3}{16}$ " use 125609; for $\frac{1}{4}$ " dia. use 113702. Some later units use extra capacity oiler 1931191.

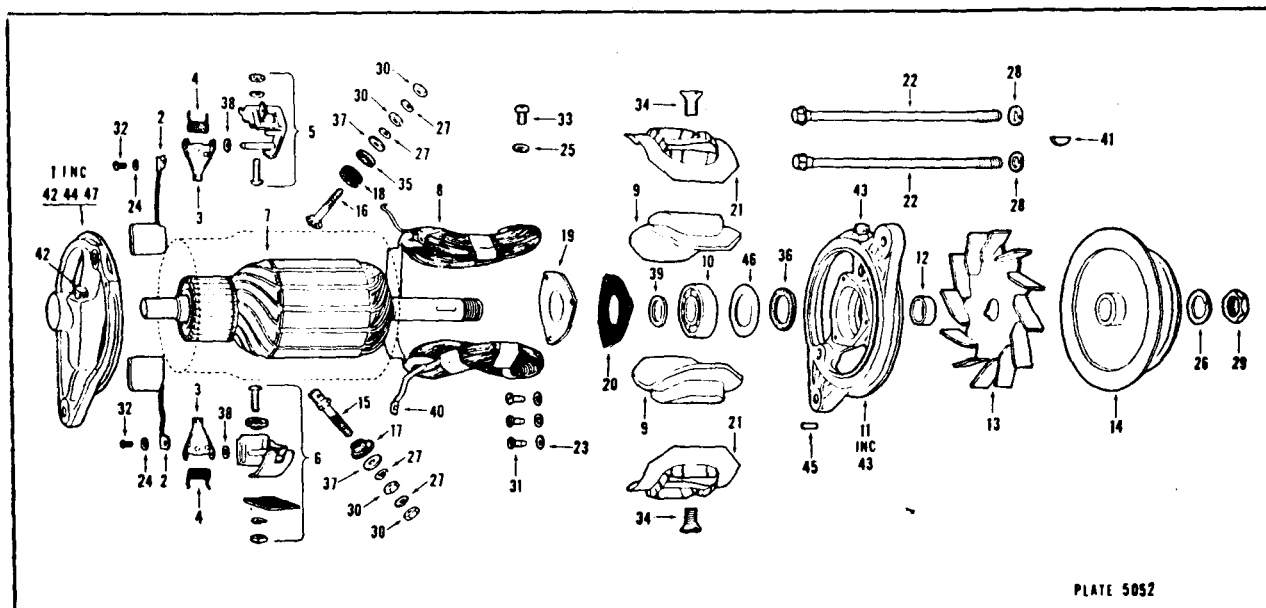

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Frame — C.E.	Brush	Arm — Brush	Spring — Brush	Holder — (Pkg.) — Ground Brush	Holder — (Pkg.) — Insul. Brush	Armature	Coll — Field — Assembly	Shoe — Pole	Ball Bearing — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1102180.....	1947905	1932506	1944373	1908829	1925378	1925379	1940313	1922701	1939902	954378	1873830
1102181.....	1946720	"	"	"	"	"	1946719	"	"	"	1948003
1102182.....	1939984	"	"	"	"	"	1948007	"	"	"	1934300
1102183.....	1946720	"	"	"	"	"	1946719	"	"	"	1938790
1102184.....	1939984	"	"	"	"	"	1948007	"	"	"	1934300
1102186.....	1948012	"	"	"	"	"	1946931	"	"	"	1933109
1102187.....	1944265	"	"	"	"	"	1939837	1935779	"	"	1944267
1102188.....	1953880	"	"	"	"	"	1946931	1922701	"	907503	1953882
1102189.....	1939984	"	"	"	"	"	1946719	"	"	954378	1934300
1102190.....	1948013	"	"	"	"	"	"	"	"	"	1943036
1102191.....	1953880	1923295	"	"	"	"	1946931	"	"	907503	1953882
1102192.....	"	1932506	"	"	"	"	1939837	1935779	"	954378	1938790
1102193.....	1947605	"	"	"	"	"	1962845	1922701	"	904793	1948912
1102194.....	1938787	"	"	"	"	"	1923535	"	"	954378	1949106
1102197.....	1944265	"	"	"	"	"	1939837	1935779	"	"	1944267
1102198.....	1946720	"	"	"	"	"	1949193	"	"	"	1938790
1102199.....	1949248	"	"	"	"	"	1946719	1922701	"	"	1938790
1102200.....	1946720	"	"	"	"	"	"	"	"	"	"
1102201.....	1953880	"	"	1946798	"	"	1957588	"	"	900529	1953882
1102202.....	1949749	1906956	"	1908829	"	"	1946719	"	"	"	1949748
1102203.....	1949248	1932506	"	"	"	"	1946931	"	"	954378	1910404
1102204.....	1946720	"	"	"	"	"	"	"	"	"	"
1102205.....	1950320	1932506	"	1916324	"	"	1950317	"	"	900529	1950318
1102206.....	"	"	"	1908829	"	"	"	"	"	"	"
1102209.....	1927451	"	"	"	"	"	1841982	"	"	954378	1953882
1102210.....	1953880	"	"	"	"	"	1950357	"	"	"	"
1102213.....	1932054	"	"	"	"	"	1841982	"	"	"	1922185
1102214.....	1951230	"	"	"	"	"	"	"	"	"	1880976
1102215.....	1951615	"	"	"	"	"	1939837	1935779	"	"	1951613
1102216.....	1943662	"	"	"	"	"	1940161	1922701	"	900529	1951261
1102217.....	1946720	"	"	"	"	"	1946719	1931686	"	954378	1925097
1102219.....	"	"	"	"	"	"	1946931	1950708	"	"	1910404

Delco-Remy SERVICE PARTS CATALOG

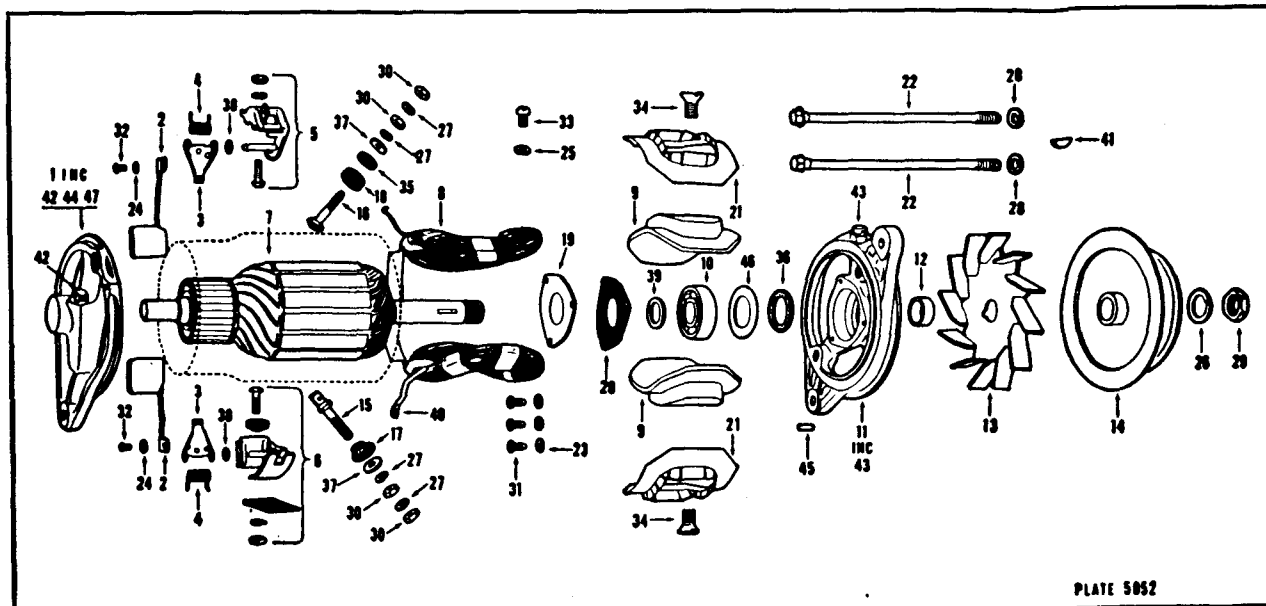 


PLATE 5852

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space — D.E.	Fan	Pulley or Pulley & Fan	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	* Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coll	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1102180.....	817224			1923284	1858749	1921362		1911263	1912008	1912073	809763
1102181.....	1858603	1966990	1936622	"	"	"		"	"	"	"
1102182.....	"		1911233	"	"	"		"	"	"	"
1102183.....	"	1966990	1949358	"	"	"		"	"	"	"
1102184.....	"			"	"	"		"	"	"	"
1102186.....	"			"	"	"		"	"	"	"
1102187.....	"	1966990	1961408	"	"	"		"	"	"	"
1102188.....	"			"	"	"		"	"	"	"
1102189.....	"			"	"	"		"	"	"	"
1102190.....	"			"	"	"		"	"	"	"
1102191.....	"			"	"	"		"	"	"	"
1102192.....	"			"	"	"		"	"	"	"
1102193.....	1863561			"	"	"		820707		"	"
1102194.....	1858603		1943516	"	"	"		1911263	1912008	"	"
1102197.....	"	1966990	1944312	"	"	"		"	"	"	"
1102198.....	"	"	1939845	"	"	"		"	"	"	"
1102199.....	"	"	1947620	"	"	"		"	"	"	"
1102200.....	"	"	"	"	"	"		"	"	"	"
1102201.....	"			"	"	"		"	"	"	"
1102202.....	"			"	"	"		"	"	"	"
1102203.....	"	1944437	1947620	"	"	"		"	"	"	"
1102204.....	"	"	"	"	"	"		"	"	"	"
1102205.....	817224			"	"	"		"		"	"
1102206.....	"			"	"	"		"		"	"
1102209.....	1858603			"	"	"		"	1912008	"	"
1102210.....	"			"	"	"		"	"	"	"
1102212.....	"			"	"	"		"	"	"	"
1102214.....	"			"	"	"		"	"	1914491	"
1102215.....	"	1966990	1944312	"	"	"		"	"	1912073	"
1102216.....	817224			"	"	"		"	"	"	"
1102217.....	1858603	1966990	1949358	"	"	"		"	"	"	"
1102219.....	"	1944437	1947254	"	"	"		"	"	"	"

*Included with 1858749 Stud.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer—D.E.	1962276	1102188; 91; 93; 214-16
24	Lock Washer—Brush Lead Screw	1914816	All
25	Lock Washer—Field Frame Screw	9421423	All
26	Lock Washer—Shaft Nut—D.E.	1915265	1102180-4-6-8-9; 90-1-2; 205-6-9; 10-13-14-16
26	Lock Washer—Shaft Nut—D.E.	1941978	1102181-2-3-7; 94-8-9; 200-2-3-4
27	Lock Washer—Terminal Stud	1914579	All
28	Lock Washer—Thru Bolt	9421424	All
NUTS			
29	Nut—Shaft—D.E.	1915172	1102180-1-2-3-4-6-7-8-9; 90-1-2; 200-2-3-4-5-6-9; 10-13-14-16-17-19
29	Nut—Shaft—D.E.	1917035	1102201
29	Nut—Shaft—D.E.	1944313	1102197; 215
29	Nut—Shaft—D.E.	9417735	1102193
30	Nut—Terminal	121743	All
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.	1914580	All
32	Screw—Brush Lead Attaching	453460	All
—	Screw—Coupling Attaching	456755	1102205-6
33	Screw—Field Frame	225577	All
34	Screw—Pole Shoe	1913960	All
WASHERS			
35	Washer—Insul.—Field Terminal Stud	1858753	All
—	Washer—Felt—C.E.	815042	1102188; 98
36	Washer—Felt—D.E.	809961	All except 1102193; 201; 14
36	Washer—Felt—D.E.	820760	1102193
—	Washer—Plain—Shaft Nut	1934383	1102193; 201
—	Washer—Plain—Shaft Nut	1944314	1102197; 215
37	Washer—Plain—Terminal Stud	826319	All
—	Washer—Space—Ball Bearing—D.E.	1861589	1102201-5-6
38	Washer—Space—Brush Arm	1857412	All except 1102188; 93; 201
38	Washer—Space—Brush Arm	1914741	1102201
38	Washer—Space—Brush Arm	1904368	1102188; 93;
—	Washer—Space—Inside—C.E.	809945	1102198
39	Washer—Space—Inside—D.E.	809945	All except 1102193
39	Washer—Space—Inside—D.E.	822644	1102193
—	Washer—Spring—Ball Bearing	1947761	1102205-6
—	Washer—Spring—Shaft Nut—D.E.	1941978	1102217-19
MISCELLANEOUS			
—	BALL BEARING—C.E.	904751	1102180-1-2-3-4-6-7-8-9; 90-1-2-7-8; 200; 15-17-19
—	BALL BEARING—C.E.	900529	1102193; 201-2; 16
—	BALL BEARING—C.E.	954378	1102199; 203
—	BALL BEARING—C.E.	907186	1102205-6
—	CLAMP—Harness	1860459	1102181; 97; 215
40	CLIP—Terminal—To Brush	200382	All
—	COLLAR—Outside—C.E.	1874339	1102198
—	COUPLING—C.E.	1950322	1102205-6
—	Grease SLINGER—C.E.	1947344	1102199; 203
41	KEY—Woodruff—D.E.	124545	All
*42	OILER—C.E.	113702	1102180; 94; 209
*42	OILER—C.E.	125609	1102181-2-3-4-6-7-8-9; 90-1-2-7-8; 200-4-9; 14-15-19
43	OILER—D.E.	125609	All except 1102210
43	OILER—D.E.	1880641	1102180-8; 210; 13
44	PIN—Dowel—C.E.	809062	All
45	PIN—Dowel—D.E.	809593	All
—	PIN—Dowel—Mounting	820369	1102198

*If C. E. Oiler hole dia. is $\frac{1}{8}$ " use 125609; for $\frac{3}{4}$ " dia. use 113702.

Parts not listed in this catalog will not be sold separately.

MINOR PARTS SECTION


Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
—	PLATE—Felt Retainer—C.E.	809960	1102188; 98
46	PLATE—Felt Retainer—D.E.	819104	All except 1102193; 201
46	PLATE—Felt Retainer—D.E.	820709	1102193
—	PLUG—Expansion—C.E.	1939884	1102182
—	PLUG—Expansion—C.E.	1948326	1102181-2-3-4-6-7-8-9; 90-2-3-7-8-9; 200-1-2-3-4; 15-16-17-19
—	PLUG—Oil Hole—C.E.	1911097	1102194; 214
—	RING—Bearing—C.E.	1929959	All except 1102194; 205-6; 10; 14
—	RETAINER—Felt—C.E.	1949195	1102198
47	WICK—Oil—C.E.	823551	1102188; 209; 10-13
—	WICK—C.E.	1947350	1102194; 209; 13-14
—	WICK—D.E.	823551	1102188; 209; 10-13

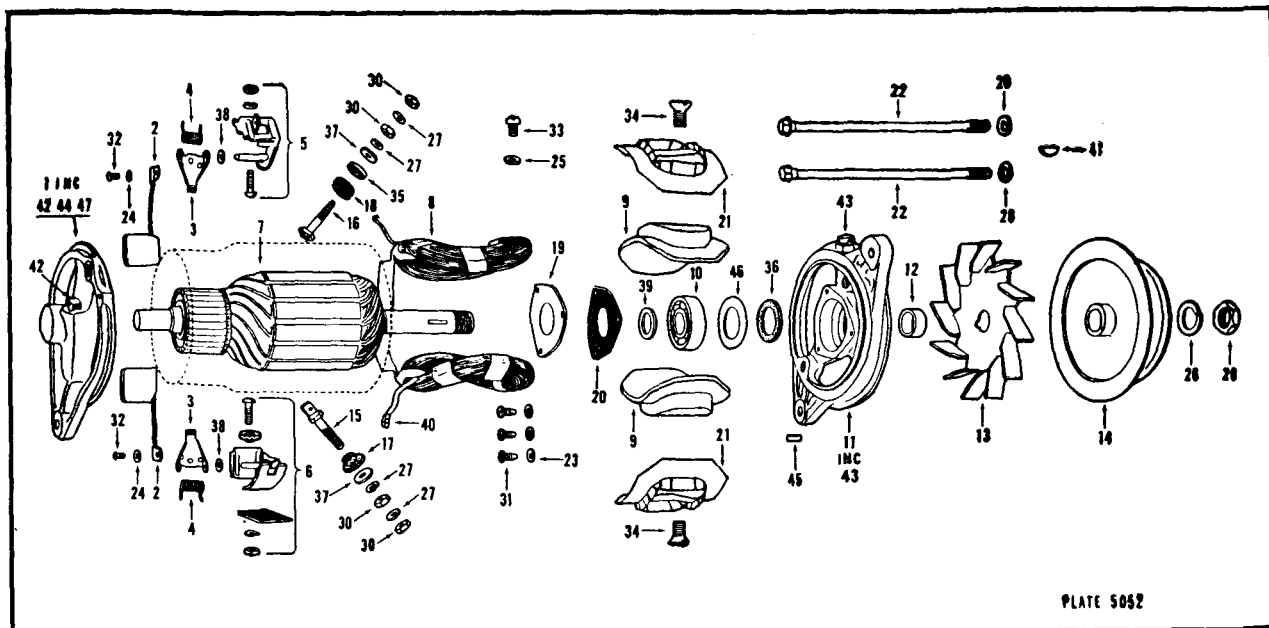 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame — C.E.	Brush	Arm — Brush	Spring — Brush	Holder — (Pkg.) — Ground Brush	Holder — (Pkg.) — Insul. Brush	Armature	Coil — Field — Assembly	Shoe — Pole	Ball Bearing — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1102220	1939984	1932506	1944373	1916324	1925378	1925379	1939837	1935779	1939902	954378	1934300
1102222	1946720	1923295	"	"	"	"	1940161	1922701	"	"	1910404
1102223	1942605	1932506	"	"	"	"	1939837	1935779	"	"	1939885
1102224	1953880	"	"	"	"	"	1946931	1922701	"	"	1953882
1102225	1946595	"	"	"	"	"	1935778	"	"	"	1873830
1102226	1933933	"	"	"	"	"	1958598	"	"	"	1945332
1102227	1951434	1946429	"	"	"	"	"	"	"	"	1951438
1102228	1932054	1932506	"	"	"	"	1963977	"	"	"	1922185
1102229	1952779	"	"	"	"	"	1952777	"	"	907503	1952778
1102230	1946720	"	"	"	"	"	1939837	1935779	"	954378	1925097
1102231	1944265	"	"	"	"	"	"	"	"	"	1944267
1102235	1951273	"	"	"	"	"	1948005	1922701	"	"	1951265
1102236	"	"	"	"	"	"	"	"	"	"	"
1102237	"	"	"	"	"	"	1946931	"	"	"	"
1102239	1953398	"	"	"	"	"	1932900	"	"	900529	1953128
1102240	1949248	"	"	"	"	"	1946719	"	"	954378	1938790
1102241	*1938726	"	"	"	"	"	"	"	"	"	*1941163
1102242	1951273	"	"	"	"	"	1948005	"	"	"	1951265
1102243	1939907	1946429	"	"	"	"	1948007	"	"	"	1872830
1102244	1929513	1932506	"	"	"	"	1953439	"	"	907503	1953882
1102245	1957575	"	"	"	"	"	1946719	"	"	954378	1938790
1102246	"	"	"	"	"	"	1939837	1935779	"	"	"
1102248	1933933	"	"	"	"	"	1923535	1922701	"	"	1910404
1102249	1953868	1923295	"	"	"	"	1953866	"	"	"	1953882
1102250	1946720	1932506	"	"	"	"	1946719	"	"	"	1925097
1102251	1953880	"	"	"	"	"	1946931	"	"	"	1953882
1102254	1953398	"	"	"	"	"	1932900	"	"	"	1954187
1102255	"	"	"	1916324	"	"	1883110	"	"	"	"
1102256	1951615	"	"	"	"	"	1939837	1935779	"	"	1951613
1102257	1946720	"	"	"	"	"	1946719	1922701	"	"	1925097
1102260	1946595	"	"	"	"	"	1841982	"	"	"	1873830

 
*Mounting Bushings in end frame mounting hinge holes not supplied by Delco-Remy.

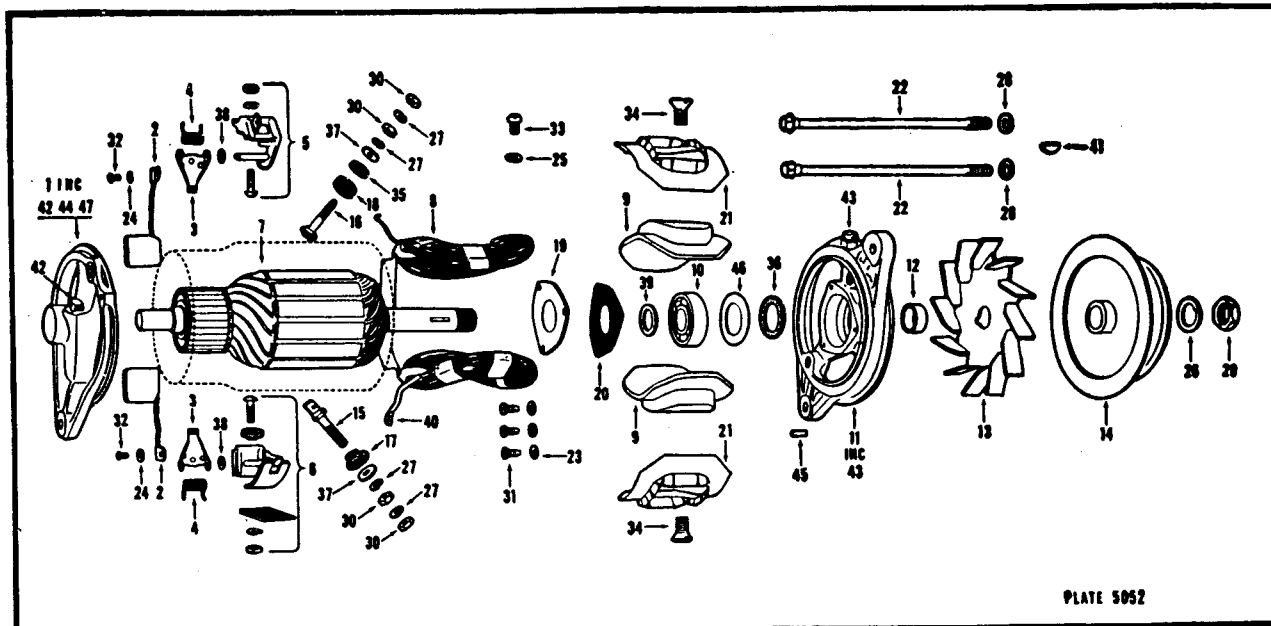

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame — C.E.	Brush	Arm — Brush	Spring — Brush	Holder — (Pkg.) — Ground Brush	Holder — (Pkg.) — Insul. Brush	Coil — Field — Assembly	Shoe — Pole	Ball Bearing — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10
1102261.....	1944265	1932506	1878183	1908829	1925378	1925379	1939837	1935779	1939902	954378
1102263.....	1949248	"	"	"	"	"	1946931	1922701	"	1910404
1102261.....	"	"	"	"	"	"	1946719	"	"	1938790
1102265.....	"	"	"	"	"	"	"	"	"	"
1102266.....	1953880	"	"	"	"	"	1946931	"	"	1953882
1102267.....	1951273	"	"	"	"	"	"	"	"	1951265
1102268.....	1947303	"	"	"	"	"	1940161	"	"	1947307
1102269.....	1938787	"	"	"	"	"	1932900	"	"	1938790
1102270.....	1957575	"	"	"	"	"	1946719	"	"	1938790
1102271.....	"	"	"	"	"	"	1939837	1953779	"	"
1102272.....	1946595	"	"	"	"	"	1841982	1922701	"	1873830
1102273.....	1953880	"	"	"	"	"	1946931	"	"	1953882
1102274.....	1946720	"	"	"	"	"	1948005	"	"	1938790
1102275.....	1955632	"	"	"	"	"	1953866	"	"	1873830
1102276.....	1946720	"	"	"	"	"	1946719	1922701	"	1955808
1102277.....	1958498	"	"	"	"	"	1939837	1936779	"	1955813
1102279.....	"	"	"	"	"	"	"	"	"	"
1102280.....	1939907	"	"	"	"	"	1948007	1922701	"	1873830
1102281.....	1943662	"	"	"	"	"	1939837	"	"	1951261
1102282.....	1951512	1923295	"	"	"	"	1930573	"	"	1953882
1102287.....	1953880	1932506	"	"	"	"	1957094	"	"	1953882
1102288.....	"	"	"	1916324	"	"	1941997	"	"	"
1102293.....	1946720	"	"	1908829	"	"	1939837	1935779	"	1955808
1102299.....	1957555	"	"	"	"	"	1923525	1922701	"	1957553
1102300.....	1957575	"	"	"	"	"	1946719	"	"	1938790
1102301.....	"	"	"	"	"	"	1939837	1935779	"	"
1102302.....	1949248	"	"	"	"	"	1946719	1922701	"	1948003
1102303.....	"	"	"	"	"	"	"	"	"	1938790
1102304.....	"	"	"	"	"	"	"	"	"	"
1102306.....	1953880	"	"	"	"	"	1957588	"	"	1953882
1102307.....	1951273	"	"	"	"	"	1948005	"	"	1951265
.....										
.....										

 Delco-Remy
SERVICE PARTS CATALOG

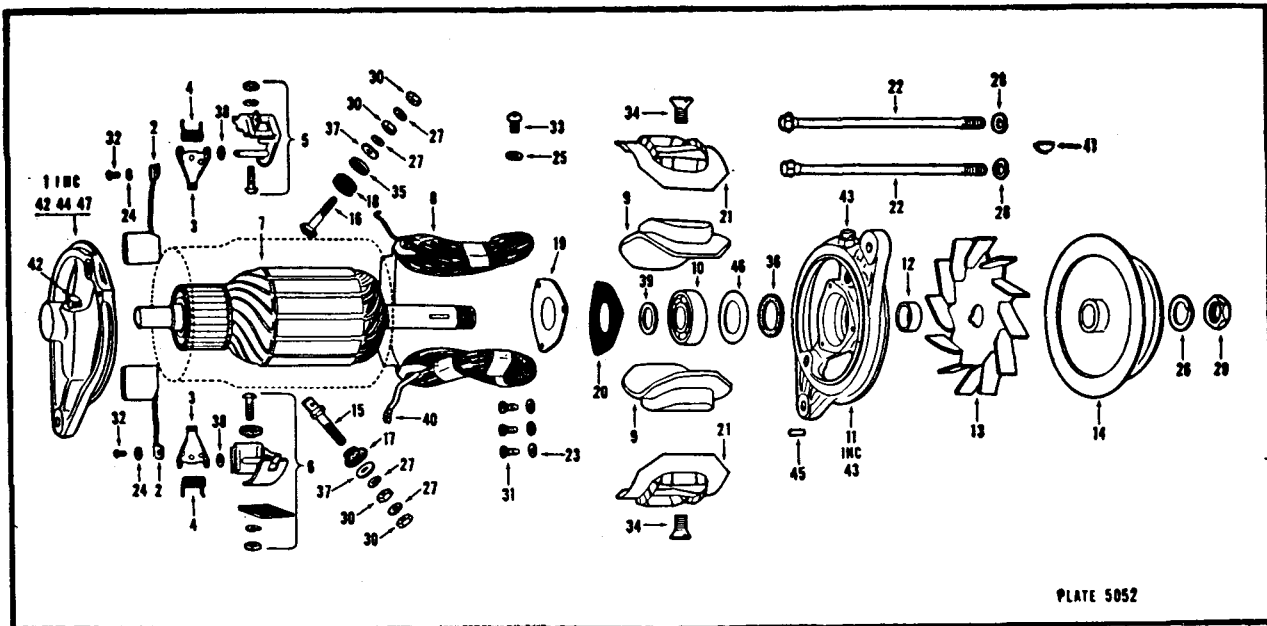

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space — D.E.	Fan	Pulley or Pulley & Fan	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	* Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coil	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1102261.....	1858603	1966990	1929969	1923284	1858749	1921362		1911263	1912008	1912073	809763
1102263.....	"	1944437	1947620	"	"	"		"	"	"	"
1102264.....	"	1966990	"	"	"	"		"	"	"	"
1102265.....	"	1960423	"	"	"	"		"	"	"	"
1102266.....	"	1944437	1952882	"	"	"		"	"	"	"
1102267.....	"	"	1949357	"	"	"		"	"	"	"
1102268.....	"			"	"	"		"	"	"	"
1102269.....	"			"	"	"		"	"	"	"
1102270.....	"			"	"	"		"	"	"	"
1102271.....	"			"	"	"		"	"	"	"
1102272.....	817224			"	"	"		"	"	"	"
1102273.....	1858603	1944437	1946594	"	"	"		"	"	"	"
1102274.....	"	1966990	1949358	"	"	"		"	"	"	"
1102275.....	817224			"	"	"		"	"	"	"
1102276.....	x	1966990	1949358	"	"	"		1955494	"	"	"
1102277.....	o	"	1961408	"	"	"		"	"	"	"
1102279.....	x	"	1929969	"	"	"		"	"	"	"
1102280.....	817224			"	"	"		1911263	"	"	"
1102281.....	"		1956916	"	"	"		"	"	"	"
1102282.....	1858603			"	"	"		"	"	"	"
1102287.....	"			"	"	"		"	"	"	"
1102288.....	"			"	"	"		"	"	"	"
1102293.....	x	1966990	1939990	"	"	"		1955494	"	"	"
1102299.....	x		1921939	"	"	"		"	"	"	"
1102300.....	1858603	1966990	1947620	"	"	"		1911263	"	"	"
1102301.....	"	"	1949355	"	"	"		"	"	"	"
1102302.....	"	"		"	"	"		"	"	"	"
1102303.....	"	"	1947620	"	"	"		"	"	"	"
1102304.....	"	1960423		"	"	"		"	"	"	"
1102306.....	"			"	"	"		"	"	"	"
1102307.....	"	1944437	1949355	"	"	"		"	"	"	"

*Outside Collar Part No. 1959991; Inside Collar is Part No. 1861591.

oOutside Collar Part No. 1858603; Inside Collar is Part No. 1861591.


*Included with 1858749 Stud.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION


Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
24	Lock Washer—Brush Lead Screw.....	1914816	All except 1102270-6; 87-8; 99; 306
24	Lock Washer—Brush Lead Screw.....	456413	1102270-6; 87-8; 99; 306
25	Lock Washer—Field Frame Screw.....	9421423	All except 1102268; 74; 302
25	Lock Washer—Field Frame Screw.....	138537	1102302-7
26	Lock Washer—Shaft Nut—D.E.....	1915265	1102269; 72-5; 80-2-7-8
26	Lock Washer—Shaft Nut—D.E.....	1941978	All except 1102269; 72-5; 80-2-7-8; 306
27	Lock Washer—Terminal Stud.....	1914579	All
28	Lock Washer—Thru Bolt.....	9421424	All except 1102261; 70-1-7; 300-1
NUTS			
29	Nut—Shaft—D.E.....	1915172	All
—	Nut—Shaft—D.E.....	9417735	1102306
30	Nut—Terminal.....	121743	All
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.....	1914580	All
32	Screw—Brush Lead Attaching.....	453460	All
33	Screw—Field Frame.....	225577	All except 1102268; 74
34	Screw—Pole Shoe.....	1913960	All
WASHERS			
35	Washer—Insul.—Field Terminal Stud.....	1858753	All
—	Washer—Felt—C.E.....	815042	1102287-8
—	Washer—Felt—C.E.....	1927447	1102282
—	Washer—Felt—C.E.....	1957559	1102299
36	Washer—Felt—D.E.....	809961	All except 1102276-7-9; 93-9
—	Washer—Plain—Shaft Nut—D.E.....	1934383	1102306
37	Washer—Plain—Terminal Stud.....	826319	All
38	Washer—Space—Brush Arm.....	1857412	All except 1102282; 306
39	Washer—Space—Inside—D.E.....	809945	All except 1102276-7-9; 93-9
MISCELLANEOUS			
—	BALL BEARING—C.E.....	900529	1102281
—	BALL BEARING—C.E.....	904751	1102261-8; 70-1-4-5-6-7-9; 80-7-8; 93; 300-1-6
—	BALL BEARING—C.E.....	954378	All except 1102261-8-9; 72; 302-3-4-6-7
—	BUSHING—C.E.....	1927446	1102282
—	CLAMP—Top of Field Frame.....	1860459	1102302-7
40	CLIP—Terminal—To Brush.....	200382	All
—	CUP—Felt Retainer—C.E.....	809960	1102287-8
—	CUP—Felt Retainer—C.E.....	1927448	1102282
—	CUP—Wick Retainer—C.E.....	1953202	1102282
41	KEY—Woodruff—D.E.....	124545	All except 1102268
*42	OILER—C.E.....	113702	1102269; 75; 82
*42	OILER—C.E.....	125609	1102261-8; 70-1-2-4; 80-7-8; 300-6
43	OILER—D.E.....	125609	All except 1102276; 93-9; 300
44	PIN—Dowel—C.E.....	809062	All
45	PIN—Dowel—D.E.....	809593	All
46	PLATE—Felt Retainer—D.E.....	819104	All except 1102276-7-9; 93-9
—	PLUG—Expansion—C.E.....	1948326	All except 1102269; 72; 82; 99
—	PLUG—Felt—Oil—C.E.....	823551	1102266; 73; 82-7-8; 306
—	PLUG—Washer—C.E.....	1957561	1102299
—	PLUG—Oil Hole—C.E.....	1911097	1102269; 72
—	RING—Bearing—C.E.....	1929959	All except 1102269; 72; 82; 99
—	SLINGER—Grease—C.E.....	1947344	All except 1102268-9; 72; 82; 306
—	SLINGER—Grease—D.E.....	1947344	1102276-7-9; 93-9
47	WICK—Oil—C.E.....	1947350	1102269; 72; 99
—	WICK—Oil—C.E.....	1947350	1102282

 *If C.E. Oiler hole dia. is $\frac{1}{8}$ " use 125609; for $\frac{1}{4}$ " dia. use 113702.



Model	Frame — C.E.	Brush	Arm — Brush	Spring — Brush	Holder — (Pkg.) — Ground Brush	Holder — (Pkg.) — Insul. Brush	Armature	Coil — Field — Assembly	Shoe — Pole	Ball Bearing — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1102308.....	1953880	1932506	1944373	1916324	1925378	1925379	1950357	1922701	1912725	954378	1953882
1102309.....	1942605	"	"	"	"	"	1957855	1935779	1939902	"	1942604
1102310.....	1951273	"	"	"	"	"	1948005	1922701	1912725	"	1958022
1102311.....	1953880	"	"	"	"	"	1950357	"	"	"	1953882
1102312.....	1957555	"	"	"	"	"	1923535	"	"	"	1957553
1102313.....	1946720	"	"	"	"	"	1946719	"	"	"	1955808
1102314.....	1944265	"	"	"	"	"	1939837	1935779	1939902	"	1955813
1102315.....	1957575	"	"	"	"	"	1946719	1922701	1912725	"	1938790
1102316.....	1949248	"	"	"	"	"	"	"	"	"	"
1102317.....	1951273	"	"	"	"	"	1948005	"	"	"	1951265
1102318.....	1957575	"	"	"	"	"	1939837	1935779	1939902	"	1938790
1102319.....	1953880	"	"	"	"	"	1946719	1922701	1912725	"	1878691
1102326.....	1951273	"	"	"	"	"	1948005	"	"	"	1957309
1102327.....	1949248	"	"	"	"	"	1946719	"	"	"	1938790
1102328.....	1953880	"	"	"	"	"	"	"	"	"	1878691
1102329.....	"	"	"	"	"	"	1940161	"	"	"	1957313
1102331.....	1960389	"	"	"	"	"	1952297	"	"	"	1960388
1102332.....	1946720	"	"	"	"	"	1948005	"	"	"	1938790
1102333.....	1957555	1906956	"	"	"	"	1923535	1923537	"	"	1957553
1102334.....	1959149	1932506	"	"	"	"	1938539	1922701	"	"	1957313
1102336.....	1951434	1946429	"	"	"	"	1958598	"	"	"	1951438
1102337.....	1951512	1932506	"	"	"	"	1963977	"	"	907503	1953882
1102338.....	1943662	"	"	"	"	"	1950357	"	"	900529	1951261
1102339.....	"	"	"	"	"	"	1939837	"	"	"	"
1102340.....	"	"	"	"	"	"	1940161	"	"	907503	"
1102341.....	1949919	"	"	"	"	"	1957094	"	"	"	1953882
1102343.....	1946595	"	"	"	"	"	1935778	"	1939902	954378	1873830
1102344.....	1942605	"	"	"	"	"	1957855	1935779	"	"	1939885
1102345.....	1953880	"	"	"	"	"	1971779	1922701	"	907503	1953882

 Delco-Remy SERVICE PARTS CATALOG

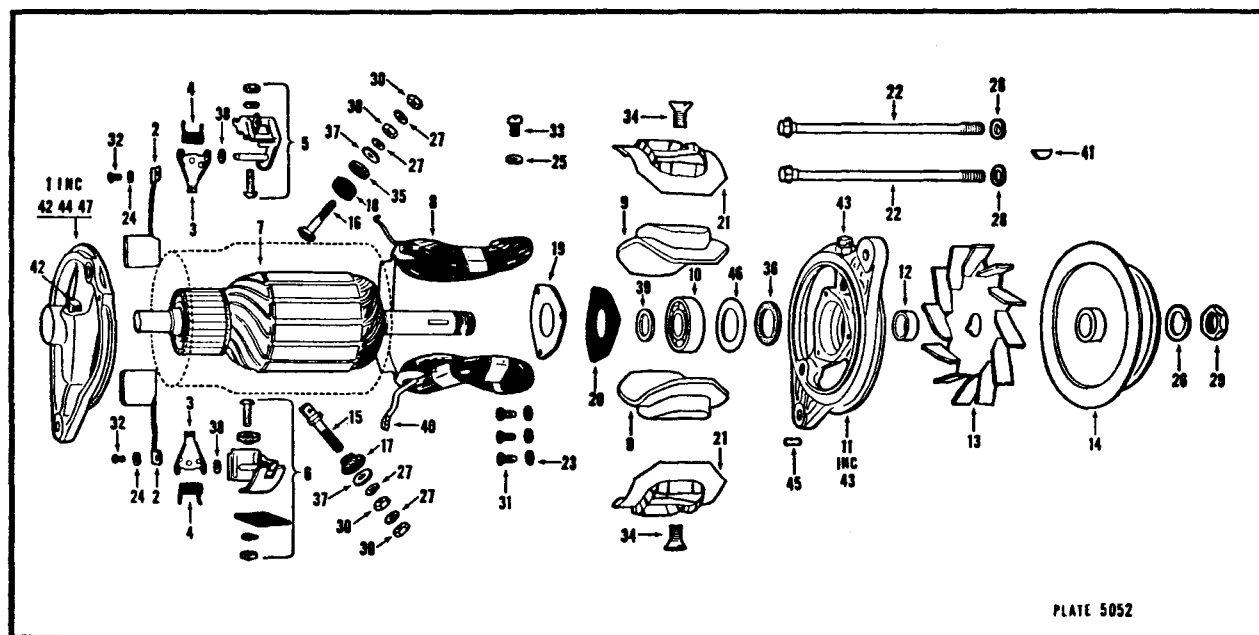

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space — D.E.	Fan	Pulley or Pulley & Fan	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coil	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1102308.....	1858603	1944437	1957429	1923284	1858749	1921362		1911263	1912008	1912073	809763
1102309.....	"	"	"	"	"	"		"	"	"	"
1102310.....	"	1944437	1949355	"	"	"		"	"	"	"
1102311.....	"	"	"	"	"	"		"	"	"	"
1102312.....	x	"	"	"	"	"		1955494	"	"	"
1102313.....	x	"	"	"	"	"		"	"	"	"
1102314.....	x	"	"	"	"	"		"	"	"	"
1102315.....	1858603	"	"	"	"	"		1911263	"	"	"
1102316.....	"	"	"	"	"	"		"	"	"	"
1102317.....	"	"	"	"	"	"		"	"	"	"
1102318.....	"	"	"	"	"	"		"	"	"	"
1102319.....	"	1966990	1952882	"	"	"		"	"	"	"
1102320.....	x	1944437	1949355	"	"	"		1955494	"	"	"
1102321.....	1858603	1940343	1939842	"	"	"		1911263	"	"	"
1102322.....	"	"	"	"	"	"		"	"	"	"
1102323.....	x	"	"	"	"	"		1955494	"	"	"
1102324.....	817224	"	1961054	"	"	"		1911263	"	"	"
1102325.....	1858603	"	"	"	"	"		"	"	"	"
1102326.....	1861591	1944437	1949358	"	"	"		1955494	"	"	"
1102327.....	x	"	"	"	"	"		"	"	"	"
1102328.....	"	"	"	"	"	"		"	"	"	"
1102329.....	1858603	"	"	"	"	"		1911263	"	"	"
1102330.....	"	"	"	"	"	"		"	"	"	"
1102331.....	817224	"	"	"	"	"		"	"	"	"
1102332.....	"	"	"	"	"	"		"	"	"	"
1102333.....	"	"	"	"	"	"		"	"	"	"
1102334.....	"	"	"	"	"	"		"	"	"	"
1102335.....	"	"	"	"	"	"		"	"	"	"
1102336.....	1858603	"	"	"	"	"		1911263	"	"	"
1102337.....	"	"	"	"	"	"		"	"	"	"
1102338.....	817224	"	"	"	"	"		"	"	"	"
1102339.....	"	"	"	"	"	"		"	"	"	"
1102340.....	"	"	"	"	"	"		"	1912008	"	"
1102341.....	1858603	"	"	"	"	"		"	"	"	"
1102342.....	817224	"	"	"	"	"		"	"	"	"
1102343.....	1858603	"	"	"	"	"		"	"	"	"
1102344.....	"	"	"	"	"	"		"	"	"	"
1102345.....	"	"	"	"	"	"		"	"	"	"


*1955819 Collar—Outside and
1861591 Collar—Inside
*Included with 1858749 Stud.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
24	Lock Washer—Brush Lead Screw.....	1914816	1102309-10
24	Lock Washer—Brush Lead Screw.....	456413	1102308-11-12-13-14-15-16-17-18-19; 26-7-8-9; 31-2-3-4-6-7-8; 43-4-5
25	Lock Washer—Field Frame Screw.....	9421423	All except 1102310-17; 32
25	Lock Washer—Field Frame Screw.....	138599	1102310-17
—	Lock Washer—Shaft Nut—C.E.....	1913743	1102334
26	Lock Washer—Shaft Nut—D.E.....	1915265	1102309-11-12; 29; 34-7-8; 43-4-5
26	Lock Washer—Shaft Nut—D.E.....	1941978	All except 1102309-11-12; 29; 34-7-8; 43
27	Lock Washer—Terminal Stud.....	1914579	All
28	Lock Washer—Thru Bolt.....	9421424	1102308-10-11-12-13-16-17-19; 26-7-8-9; 31-2-3-4-6-7-8-9; 40-1-3-4-5
NUTS			
—	Nut—Shaft Nut—C.E.....	1915172	1102334
29	Nut—Shaft Nut—D.E.....	1947830	1102336
29	Nut—Shaft—D.E.....	1915172	All except 1102336
30	Nut—Terminal.....	121743	All
SCREWS			
31	Screw—Ball Bearing Retainer Plate Attach.....	1914580	All
32	Screw—Brush Lead Attaching.....	453460	All except 1102337
32	Screw—Brush Lead Attaching.....	454458	1102337
33	Screw—Field Frame.....	225577	All except 1102332
34	Screw—Pole Shoe.....	1913960	All
WASHERS			
35	Washer—Insul.—Field Terminal Stud.....	1858753	All
—	Washer—Felt—C.E.....	1957559	1102312; 33
—	Washer—Felt—C.E.....	815042	1102345
36	Washer—Felt—D.E.....	809961	All except 1102313-14; 26-9; 33-4
37	Washer—Plain—Terminal Stud.....	826319	All
39	Washer—Space—Inside—D.E.....	809945	1102308-9-10-11-15-16-17-18-19; 27-8-9; 31-3-6-7-8-9; 40-1-3-4-5
MISCELLANEOUS			
—	BALL BEARING—C.E.....	900529	1102334-8-9
—	BALL BEARING—C.E.....	904751	1102308-9-11-13-14-15-18; 26-9; 32; 40-1-4-5
—	BALL BEARING—C.E.....	954378	1102310-16-17-19; 27-8
—	BALL BEARING—D.E.....	907503	1102345
—	CLAMP—Top of Field Frame.....	1860459	1102310-17
—	CLAMP—Bearing—C.E.....	1929959	1102345
40	CLIP—Terminal—To Brush.....	200382	All
—	COLLAR—Shaft (Outside—D.E.).....	1955819	1102333
—	Grease SLINGER—C.E.....	1947344	1102312-13-14-16-17-19; 27-8
—	Grease SLINGER—D.E.....	1947344	1102326-9; 33-4
—	KEY—Woodruff—C.E.....	427261	1102334
41	KEY—Woodruff—D.E.....	124545	All except 1102332-6
42	OILER—C.E.....	125609	All except 1102310-13-14-16-17; 31
42	OILER—C.E.....	113702	1102331-6
43	OILER—D.E.....	113702	1102331
43	OILER—D.E.....	125609	1102309-10-16-17-18; 26; 32-6; 43-4-5
43	OILER—D.E.....	1880641	1102308-11; 37
44	PIN—Dowel—C.E.....	809062	All
45	PIN—Dowel—D.E.....	809593	All
46	PLATE—Felt Retainer—D.E.....	819104	All except 1102313; 29
—	PLUG—C.E.....	1911097	1102331-4; 43
—	PLUG—Expansion—C.E.....	1948326	1102309-10-13-14-15-16-17-18; 32-8-9; 40-1-4-5
—	PLUG—Washer—C.E.....	1957561	1102333
—	PLUG—Felt—C.E.....	823551	1102345
—	PLUG—Bearing Well.....	1848326	1102345
—	RETAINER—Felt Washer—C.E.....	1957560	1102312; 33
—	RETAINER—Wick—C.E.....	1953202	1102331-7
—	RETAINER—Felt—C.E.....	809960	1102345
—	RING—Bearing—C.E.....	1929959	All except 1102331-3
—	SEAL—Oil—C.E.....	1945697	1102337
—	SHIELD & COLLAR Assembly.....	1961243	1102334
—	SPACER—Fan—C.E.....	1913688	1102334
47	WICK—Oil—C.E.....	1947350	1102312; 31; 33; 43
—	WICK—D.E.....	823551	1102308-11; 37; 43-5

 Parts not listed in this Catalog will not be sold separately.

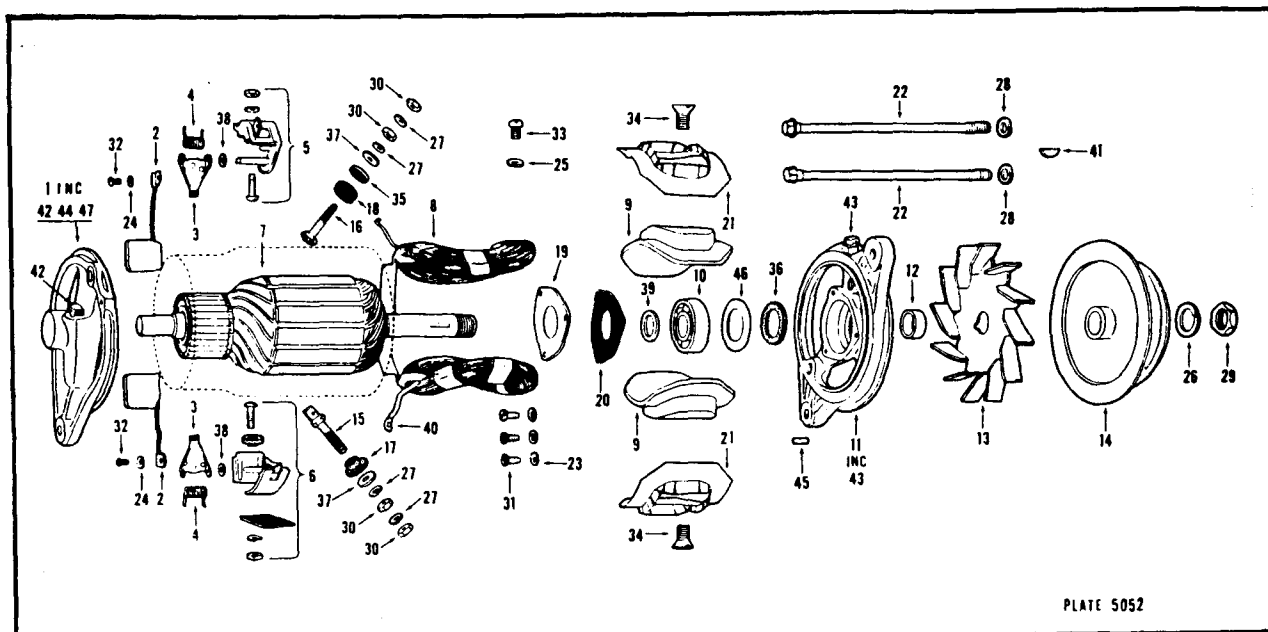

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame — C.E.	Brush	Arm — Brush	Spring — Brush	Holder — (Pkg.) Ground Brush	Holder — (Pkg.) Insul. Brush	Armature	Coil — Field — Assembly	Shoe — Pole	Ball Bearing — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1102357.....	All component parts of this unit same as 1100357 Generator listed in Generator—Group 87-K										

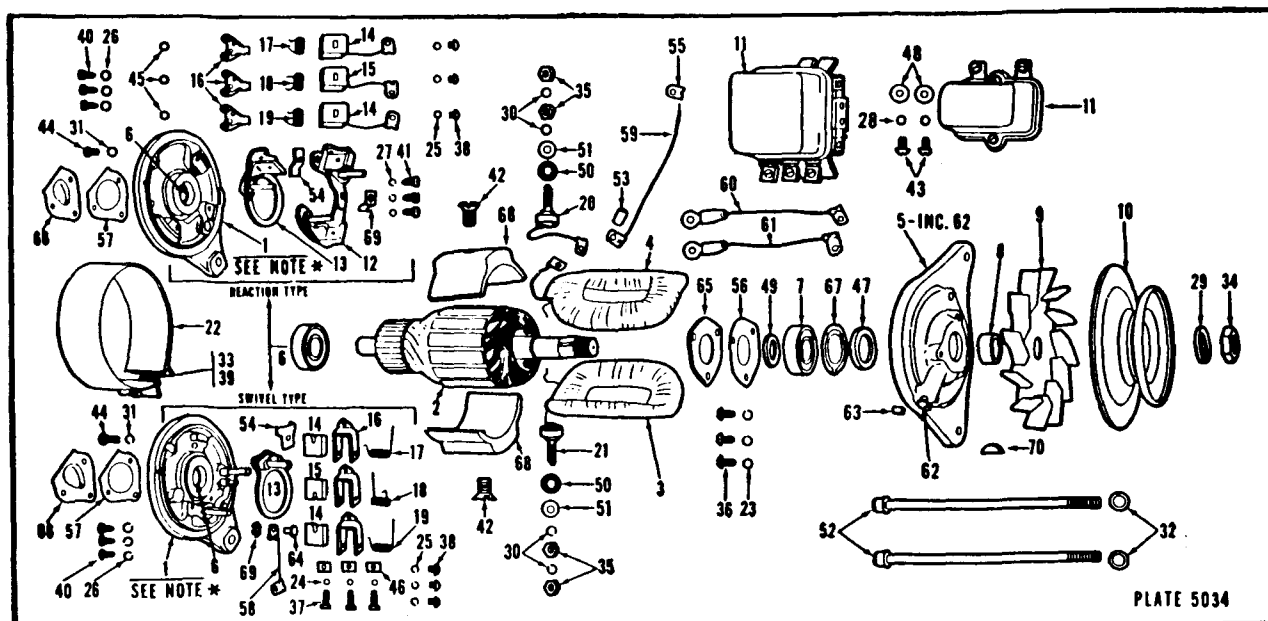 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame — C.E.	Armature	Field Coil — L.H.	Field Coil — R.H.	Frame — D.E.	Bushing or Ball Bearing — C.E.	Ball Bearing or Bushing — D.E.	Collar — Outside — D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1102401	1864315	1864312	1902108		1864317	954162	954143	1861591			
1102402	1878689	1841982	"		1953882	812823	954378	1858603	1858604	1867825	
1102403	"	"	"		1878691	"	"	"	"	1864177	5800
1102404	1859068	1868988	1902107		1841472	908503	954521	1836194	1864264		15540
1102405	1845819	1856861	1902109		822643	954378	"	1839007			265-B
1102406	1866744	1866741	1902108		1872218	954143	954143				
1102407	1878689	1841982	"		1953882	812823	954378	1858603	1858604	1864177	5800
1102408	"	"	"		1878691	"	"	"	1866400	1872602	"
*1102410	*1801179	1862807	"		817879	"	"	817224			
1102411	1866744	1872944	1902109		1872946	954143	954143				
1102412	1849971	819048	1902107		817775	954378	810641				1116809
1102413	1878689	1841982	1902108		1953882	812823	954378	1858603			15581
1102414	1874220	1872944	1902109		1872946	954143	954143				
1102415	1878689	1933667	"		1878691	812823	954378	1858603	1866400	1873939	15581
1102416	1849981	1877895	1902108		1837640	954519	954521	1838185			265-B
1102417	1878689	1841982	"		1881874	812823	954378	1858603			5800
1102418	1882744	"	"		1868286	"	"	"	1866400	1873939	
1102419	1878689	"	"		1878691	"	"	"	"	1872602	*5890
1102420	1856988	1883782	1902109		817879	954378	"	"			265-B
1102421	1857422	1883782	"		"	"	"	"			"
1102422	"	1886011	"		1845821	"	954521	1845822			*5890
1102423	1878689	1933667	"		1878691	812823	954378	1858603			*5892
1102424	1863830	1871715	"		1873830	"	"	817224			*5864
1102425	1908045	1915869	"		1845821	954378	954521	1845822			
1102426	1908086	1915876	"		"	"	"	1854891			
1102427	1908045	1913712	1922702		1877777	"	954378	1877778			
1102428	1856988	1883782	"		817879	"	"	1858603			1867781
1102429	1908045	1915869	"		1845821	"	954521	1845822			
1102430	1908086	1915876	"		"	"	"	1854891			

†See Regulator—Group 3 for parts.

 
‡See Regulator—Group 4 for parts.

*See Regulator—Group 5 for parts.

*C.E. Frame includes where necessary: Bushing, Oiler, Oil Wick, Oil Hole Plug, Dowel Pins and Brush Pins.

*Field Coil Set (2 coils).

*Serviced by G.M. Canada.

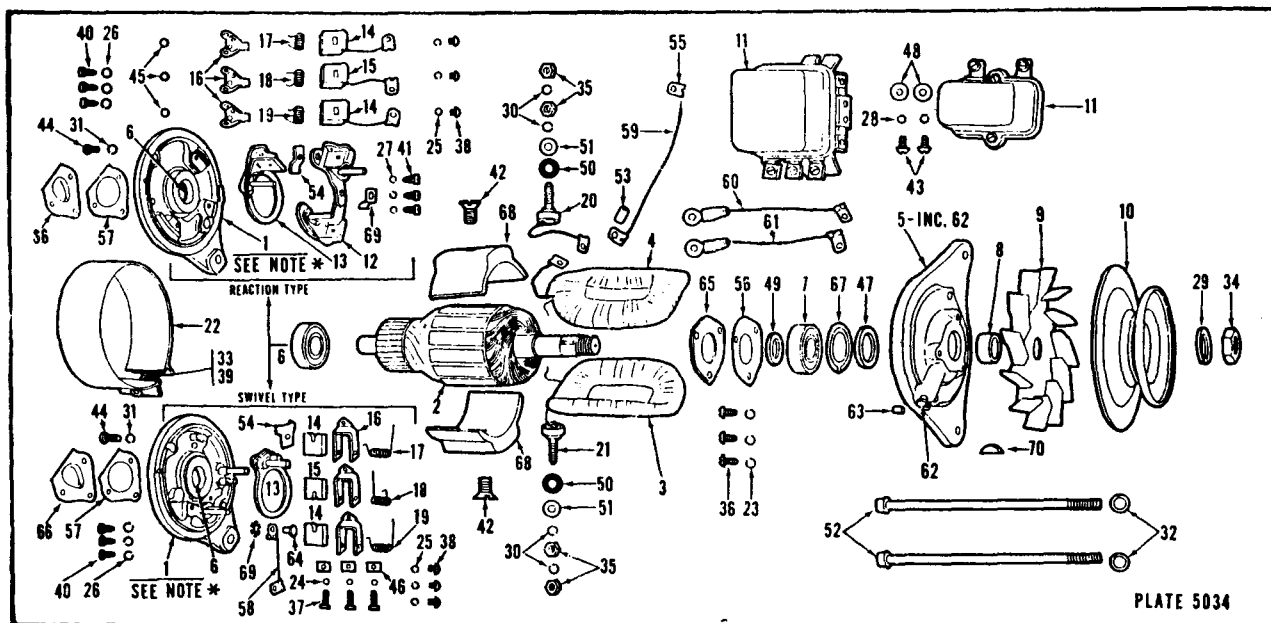


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

[illegible]

*C.E. Frame includes where necessary: Bushing, Oiler, Oil Wick, Oil Hole Plug, Dowel Pins and Brush Pins.

 *Field Coil Set (2 coils).

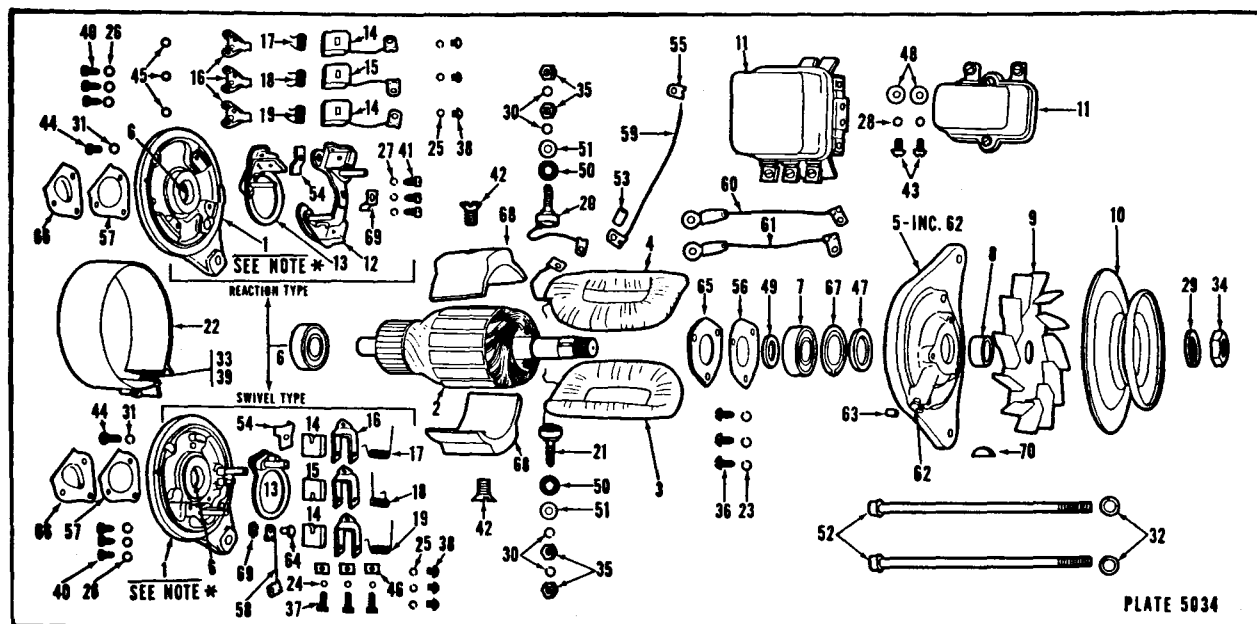

Illustrations are of Typical Parts only, which may vary in detail. For Parts not illustrated see Minor Parts Section.

Model No.	Brush Plate — Main	Brush Plate — 3rd	Brush — Main	Brush — 3rd	Arm or Holder — Brush	Spring — R.H. — Main	Spring — 3rd	Spring — L.H. — Main	Terminal Stud and Lead	Terminal Stud Only	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1102432	1908550	1909151	^A 1866148	^A 1906940	1904365	1903871	1946798	1903871	1858754	1858749	816340


^AFor complete Brush Set order Part No. 1857963.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous sections for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw.....	1962276	1102432
25	Lock Washer—Brush Lead Screw.....	1914816	1102432
26	Lock Washer—End Cover Plate Screw—C.E.....	453844	1102432
27	Lock Washer—Main Brush Plate Screw.....	453844	1102432
29	Lock Washer—Shaft Nut—D.E.....	1915265	1102432
30	Lock Washer—Terminal Stud Nut.....	1914579	1102432
31	Lock Washer—Third Brush Plate Clamp Screw.....	453435	1102432
32	Lock Washer—Thru Bolt.....	9421424	1102432
....	Lock Washer—Top of Field Frame.....	9421423	1102432
NUTS			
34	Nut—Shaft—D.E.....	1915172	1102432
35	Nut—Terminal Stud.....	121743	1102432
SCREWS			
36	Screw—Ball Bearing Retainer Plate—D.E.....	1914580	1102432
38	Screw—Brush Lead Attaching.....	453460	1102432
40	Screw—End Cover Plate—C.E.....	454408	1102432
41	Screw—Main Brush Plate Attaching.....	454408	1102432
42	Screw—Pole Shoe.....	1913960	1102432
44	Screw—Third Brush Plate Clamp.....	453464	1102432
44	Screw—Top of Field Frame.....	132243	1102432
WASHERS			
45	Washer—Brush Arm Space.....	1857412	1102432
47	Washer—Felt—D.E.....	809961	1102432
49	Washer—Space—Inside—D.E.....	809945	1102432
50	Washer—Insul.—Terminal Stud.....	1858753	1102432
51	Washer—Plain—Terminal Stud.....	1954452	1102432
MISCELLANEOUS			
52	BOLT—Thru.....	809763	1102432
....	BUSHING—Insul. Terminal Stud.....	*1885090	1102432
54	CLAMP—Third Brush Plate.....	1850770	1102432
....	CLIP—Terminal—To Brush.....	200182	1102432
56	GASKET—Ball Bearing Retainer Plate—D.E.....	1912008	1102432
57	GASKET—End Cover Plate—C.E.....	817220	1102432
....	INSULATOR—Field Coil.....	1912073	1102432
....	OILER—C.E.....	113702	1102432
62	OILER—D.E.....	125609	1102432
65	PLATE—Ball Bearing Retainer—D.E.....	1911263	1102432
66	PLATE—End Cover—C.E.....	1914222	1102432
67	PLATE—Felt Retainer—D.E.....	819104	1102432
....	PLUG—Oil Hole—C.E.....	1911097	1102432
68	SHOE—Pole.....	1912725	1102432
69	SPRING—Third Brush Plate Tension.....	1850771	1102432
....	WICK—Oil—C.E.....	1947350	1102432
70	Woodruff KEY—D.E.....	124545	1102432

 *Included with 1858749 Stud

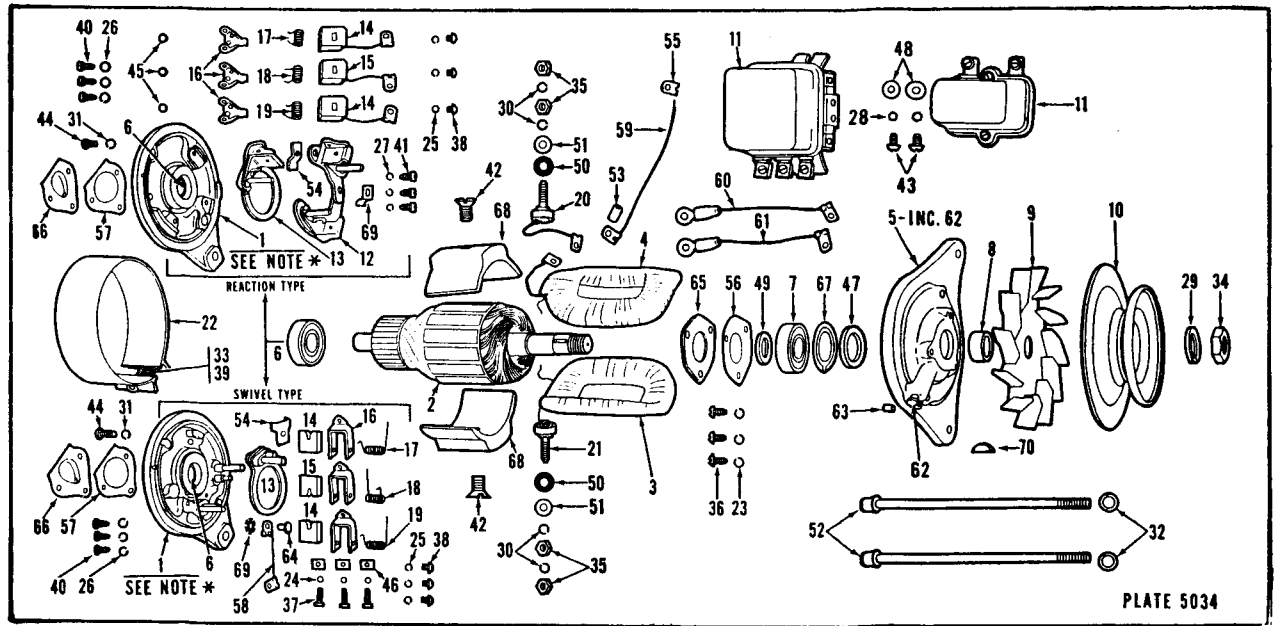

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	* Frame — C.E.	Armature	Field Coil — L.H.	Field Coil — R.H.	Frame — D.E.	Bushing or Ball Bearing — C.E.	Ball Bearing or Bushing — D.E.	Collar or Outside — D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1102501.....	1908871	1864505	1902110		1841472	812823	954521	1836194			1872508
1102502.....	1859792	1868614	"		1859040	908503	954378	1861648	1864265		*5886
1102503.....	1849984	1853445	"		817879	954519	954522	809953			1872508
1102504.....	1849981	1864025	"		"	"	954378	1858603			"
1102505.....	1845819	1878135	"		1845821	954378	954521	1845822			°5838
1102506.....	1866744	1869096	"		1866746	954143	954143	1858603			
1102507.....	1854889	1863632	"		822643	954378	954521	1843783			1872508
1102508.....	"	"	"		"	"	"	"			°5849
1102509.....	1849981	1842504	"		817879	954519	954378	809953			*5886
1102510.....	1866744	1869096	"		1872218	954143	954143				
1102511.....	1845819	819048	"		817775	954378	810641				1872508
1102512.....	1850908	1853439	"		822643	908503	954521	1843783			"
1102513.....	1866744	1869096	"		1872946	954143	954143				"
1102514.....	1849981	1837317	"		1837640	954519	954521	1838185			°5838
1102515.....	1845819	1873874	"		1871380	903203	"	1871381			"
1102516.....	1849981	1842504	"		817879	954519	954378	809953			
1102517.....	1874220	1869096	"		1872946	954143	954143				
1102518.....	1854889	1874991	"		1845821	954378	954521	1854891			°5838
1102519.....	1845819	1845816	"		1858464	"	"	1845822			1872508
1102520.....	"	1877919	"		1871380	"	"	1871381			"
1102521.....	1845819	1878164	"		1845821	"	"	1845822			°5838
1102522.....	1854889	1878217	"		"	"	"	1854891			*5882
1102523.....	1841828	1879193	"		"	"	"	"			°5838
1102524.....	1849981	1842504	"		817879	954519	954378	809953			
1102525.....	1845819	1878135	"		1845821	954378	954521	1845822			*5882
1102526.....	1849984	1881730	"		817879	954519	954378	809953			°5586
1102527.....	1845819	1882166	"		1871380	954378	954521	1871381			°5838
1102528.....	1856988	1883791	"		817879	"	954378	1858603			1872508
1102529.....	1857422	1883802	"		"	"	"	"			"
1102530.....	1845819	1884326	"		1845821	"	954521	1845822			"

*For parts see Regulator—Group 3.

°For parts see Regulator—Group 4.

*For parts see Regulator—Group 5.

 
*C.E. Frame includes where necessary: Bushing, Oiler, Oil Wick, Oil Hole Plug, Dowel Pin and Brush Pins.

*Field Coil Set (2 coils).

[illegible]

*For parts see Regulator—Group 4.

SERVICE PARTS CATALOG

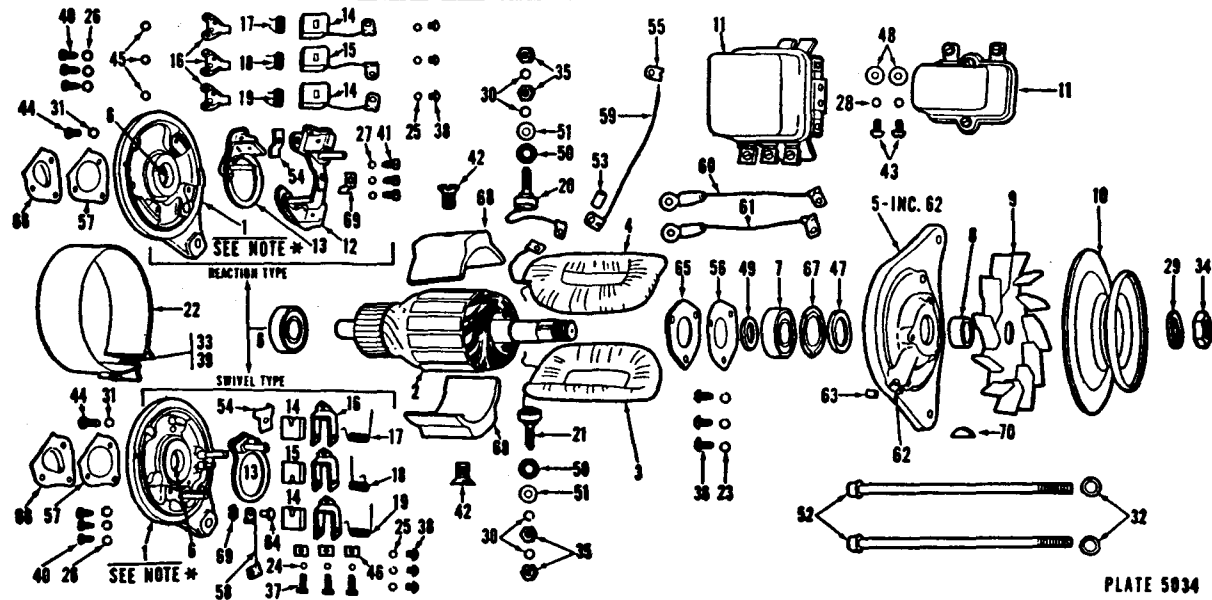

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

[illegible]

^For complete Brush Set order Part No. 1857963.

Revised to October 1, 1966

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Ret. Plate Screw—D.E.	1962276	1102531-3-4-5-6-7-8-9; 40-1-6
24	Lock Washer—Brush Attaching Screw	456413	1102531-5
25	Lock Washer—Brush Ground Lead Screw	453844	1102531-5
26	Lock Washer—Brush Lead Screw	1914816	1102531-3-4-5-6-7-8-9; 40-1-6
26	Lock Washer—End Cover Plate Screw	453435	1102531-5-6-7; 40-1
26	Lock Washer—End Cover Plate Screw	453844	1102534-8-9; 46
27	Lock Washer—Main Brush Plate Screw	453844	1102533-4-6-7-8-9; 40-1-6
28	Lock Washer—Regulator Attaching Screw	138479	1102531-5-6; 41
29	Lock Washer—Shaft Nut—D.E.	802764	1102531-5
29	Lock Washer—Shaft Nut—D.E.	1915265	1102534-8-9; 46
30	Lock Washer—Terminal Stud	1914579	1102531-3-4-5-6-7-8-9; 40-1-6
31	Lock Washer—Third Brush Plate Clamp Screw	453435	1102531-4-5-6-7-8-9; 40-1-6
32	Lock Washer—Thru Bolt	9421424	1102531-3-4-5-6-7-8-9; 40-1-6
32	Lock Washer—Top of Field Frame Screw	9421423	1102534-8-9; 40-6
NUTS			
33	Nut—Cover Band Screw	453433	1102531-5-6-7; 40-1
34	Nut—Shaft—D.E.	122264	1102531-5
34	Nut—Shaft—D.E.	125245	1102533
34	Nut—Shaft—D.E.	1914308	1102534-8
34	Nut—Shaft—D.E.	1917570	1102536-7; 40-1
34	Nut—Shaft—D.E.	1915172	1102539; 46
35	Nut—Terminal	121743	1102531-3-4-5-6-7-8-9; 40-1-6
35	Nut—Terminal (Elastic stop)	1886691	1102533
SCREWS			
36	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1102531-4-5-8-9; 46
36	Screw—Ball Bearing Retainer Plate—D.E.	5017850	1102533-6-7; 40-1
37	Screw—Brush Attaching	453986	1102531-5
37	Screw—Brush Ground Lead Attaching	453418	1102531-5
38	Screw—Brush Lead Attaching	453978	1102531-5
38	Screw—Brush Lead Attaching	453460	1102533-4-6-7-8-9; 40-1-6
39	Screw—Cover Band	132143	1102531-5-6-7; 40-1
40	Screw—End Cover Plate—C.E.	1914580	1102531-5-6-7; 40-1
40	Screw—End Cover Plate—C.E.	454408	1102534-8-9; 46
41	Screw—Main Brush Plate Attaching	454408	1102533-4-6-7-8-9; 40-1-6
42	Screw—Pole Shoe	1913960	1102531-3-4-5-6-7-8-9; 40-1-6
43	Screw—Regulator Attaching	132900	1102531-5-6; 41
44	Screw—Third Brush Plate Clamp	9416183	1102531-5
44	Screw—Third Brush Plate Clamp	453464	1102534-6-7-8-9; 40-1-6
44	Screw—Top of Field Frame	132243	1102534-8-9; 40-6
WASHERS			
45	Washer—Brush Arm Space	1857412	1102533-4-6-7-8-9; 40-1-6
46	Washer—Brush Attaching Screw Plain	809551	1102531-5
47	Washer—Felt—C.E.	815042	1102531
47	Washer—Felt—D.E.	809961	1102531-4-5-8-9; 46
47	Washer—Felt—D.E.	820706	1102536-7; 40-1
48	Washer—Regulator Attaching Screw	1856056	1102531-5-6; 41
49	Washer—Space—Inside—D.E.	809945	1102531-3-4-5-8-9; 46
49	Washer—Space—Inside—D.E.	822644	1102536-7; 40-1
49	Washer—Shaft Nut—D.E.	1888262	1102533
49	Washer—Shaft Nut—D.E.	1934383	1102536-7; 40-1
50	Washer—Insulation—Terminal Stud	1858753	1102531-3-4-5-6-7-8-9; 40-1-6
51	Washer—Plain—Terminal Stud	826319	1102531-3-4-5-6-7-8-9; 40-1-6
MISCELLANEOUS			
52	BAFFLE—Oil—D.E.	820547	1102536-7; 40-1
52	BOLT—Thru	809763	1102531-4-5-8-9; 46
52	BOLT—Thru	1886685	1102533
52	BOLT—Thru	812291	1102536-7; 40-1
54	BUSHING—Insulation—Terminal Stud	*	1102531-3-4-5-6-7-8-9; 40-1-6
54	CLAMP—Third Brush Plate	817532	1102531-5
54	CLAMP—Third Brush Plate	1850770	1102534-6-7-8-9; 40-1-6
54	CLIP—Terminal—To Brush	200362	1102531-3-4-5-6-7-8-9; 40-1-6
54	COLLAR—Space—Inside—C.E.	811681	1102531-6-7; 40-1

*Included with 1858749 Stud.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION


Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
56	GASKET—Ball Bearing Retainer Plate—D.E.	1912008	1102531-4-5-8-9; 46
56	GASKET—Ball Bearing Retainer Plate—D.E.	820708	1102536-7; 40-1
57	GASKET—End Cover Plate—C.E.	817220	1102534-8-9; 46
57	GASKET—End Cover Plate—C.E.	1844012	1102535
57	GASKET—End Cover Plate—C.E.	1835457	1102536-7; 40-1
	INSULATOR—Field Coil	1912073	1102540-1-6
58	LEAD—Brush Ground	809688	1102531-5
60	LEAD—"A" Terminal to Regulator	1880353	1102531-5
61	LEAD—"F" Terminal to Regulator	1880353	1102531-5
	OILER—C.E.	1880642	1102531-5
	OILER—C.E.	113702	1102534-6-7-8-9; 40-1-6
62	OILER—D.E.	113702	1102531-4-5-6-7-8-9; 40-1
62	OILER—D.E.	125609	1102546
	PIN (& Insulation)—Brush Holder Hinge	812016	1102531-5
	PIN (& Insulation)—Brush Holder Stop	812015	1102531-5
	PIN—Cover Band Locating	1886690	1102533
	PIN—Dowel—C.E.	809062	1102531-4-5-6-7-8-9; 40-1-6
	PIN—Dowel—C.E.	1886684	1102533
63	PIN—Dowel—D.E.	1886684	1102533
63	PIN—Dowel—D.E.	809593	1102536-7; 40-1-6
64	PIN—Third Brush Plate Tension Spring	809614	1102531-5
65	PLATE—Ball Bearing Retainer—D.E.	1911263	1102531-4-5-8-9; 46
65	PLATE—Ball Bearing Retainer—D.E.	1927844	1102533
65	PLATE—Ball Bearing Retainer—D.E.	820707	1102536-7; 40-1
66	PLATE—End Cover—C.E.	814985	1102531
66	PLATE—End Cover—C.E.	1914222	1102534-8-9; 46
66	PLATE—End Cover—C.E.	815868	1102535
66	PLATE—End Cover—C.E.	816212	1102536-7; 40-1
	PLATE—Felt Retainer—C.E.	809960	1102531
67	PLATE—Felt Retainer—D.E.	819104	1102531-4-5-8-9; 46
67	PLATE—Felt Retainer—D.E.	820709	1102536-7; 40-1
	PLUG—Oil Hole—C.E.	1911097	1102534-8-9; 46
	SEAL—Oil—D.E.	1871382	1102533
68	SHOE—Pole	816323	1102531-4-5-6-7-8-9
68	SHOE—Pole	1877894	1102533
68	SHOE—Pole	1939902	1102540-1-6
69	SPRING—Third Brush Plate Tension	809824	1102531-5
69	SPRING—Third Brush Plate Tension	1850771	1102534-6-7-8-9; 40-1-6
	WICK—Oil—C.E.	802692	1102531-5
	WICK—Oil—C.E.	1947350	1102534-6-7-8-9; 40-1-6
70	Woodruff KEY—D.E.	124546	1102531-5
70	Woodruff KEY—D.E.	189576	1102533
70	Woodruff KEY—D.E.	124545	1102534-8-9; 46
70	Woodruff KEY—D.E.	124548	1102536-7; 40-1

Delco-Remy

SERVICE PARTS CATALOG

Revised to August 1, 1968

 GENERATOR—Group 98
Models 1102651 to 1102680
Models *62-U, 72-U—Page 1

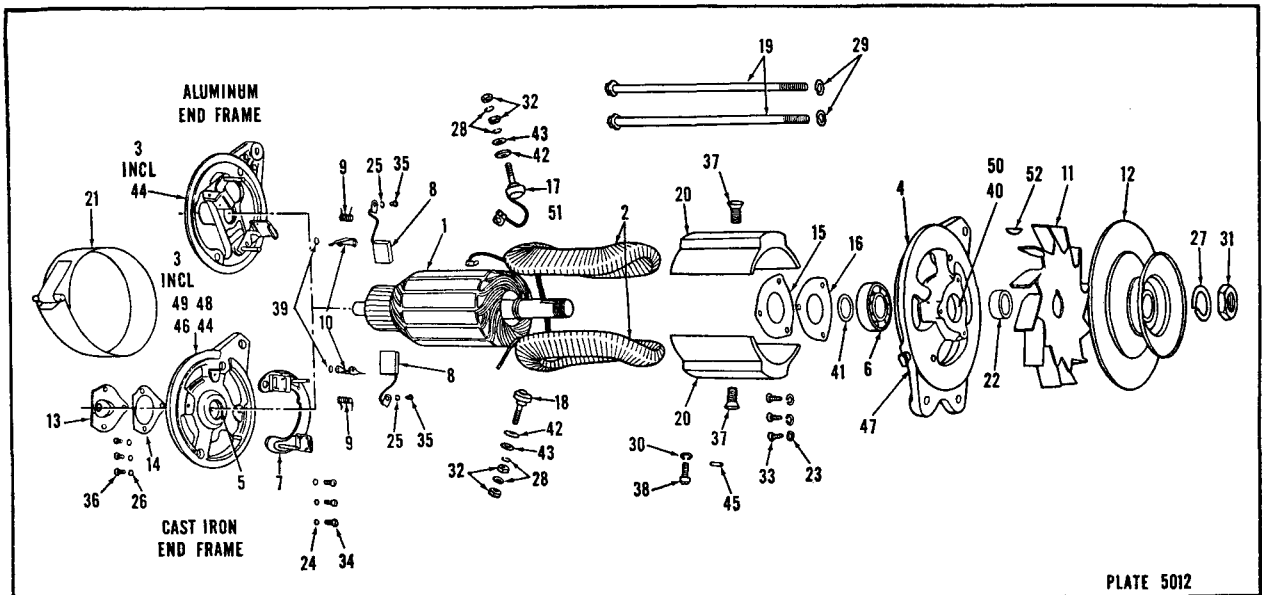

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil Set	Frame — C.E.	Frame — D.E.	Bushing or Ball Bearing — C.E.	Ball Bearing — D.E.	Plate — Brush	Brush	Spring — Brush	Arm — Brush	Fan — C.E. or D.E.
	1	2	3	4	5	6	7	8	9	10	11
1102651.....	1868601	1902109	1869263	1868600	954143	954143	1908550	1866148	1903871	1904365	1866400
1102652.....	1913666	"	1878689	1866730	812823	954378	"	"	"	"	"
1102653.....	"	"	1858530	1865308	"	"	"	"	"	"	1858604
1102654.....	1873866	"	1878689	1866730	"	"	"	"	"	"	1866400
1102655.....	1874318	"	1877720	1873872	954143	954143	"	"	"	"	"
1102656.....	1873866	"	1858530	1910404	812823	954378	"	"	"	"	"
1102657.....	1921235	1902111	1878689	1866730	"	"	"	"	"	"	"
1102658.....	"	"	1877862	1868286	"	"	"	"	"	"	"
1102659.....	"	"	1878689	1887768	"	"	"	"	"	"	1866400
1102660.....	"	"	1858530	1910404	"	"	"	"	"	"	"
1102661.....	"	"	1878689	1878214	"	"	1878177	1878249	1916542	1944373	1866400
1102662.....	1877806	"	1882744	1868286	"	"	"	"	"	"	"
1102663.....	"	"	1882744	"	"	"	"	"	"	"	1866400
1102664.....	1921235	"	1913990	1910404	"	"	"	"	"	"	"
1102665.....	"	"	"	"	"	"	"	"	"	"	"
1102666.....	1878429	"	1877720	1873872	954143	954143	1878177	"	"	"	"
1102667.....	1921235	"	1913990	1910404	812823	954378	"	"	"	"	"
1102668.....	1877806	"	1882744	1868286	"	"	1878177	"	"	"	1866400
1102669.....	"	"	1882744	"	"	"	"	"	"	"	"
1102670.....	1923091	"	1913990	1910404	"	"	"	"	"	"	"
1102671.....	1921235	"	"	"	"	"	"	"	"	"	1866400
1102672.....	"	"	"	1878691	"	"	"	"	"	"	"
1102673.....	"	"	"	1910404	"	"	"	"	"	"	1866400
1102674.....	"	"	"	"	"	"	"	"	"	"	"
1102675.....	1881288	"	1881291	1845821	908503	954521	1878177	"	"	"	1866400
1102676.....	"	"	1913822	"	"	"	1908999	1866148	1908829	1904365	1881297
1102677.....	1857866	"	1913990	1910404	812823	954378	"	1878249	1916542	1944373	"
1102678.....	1921235	"	"	"	"	"	"	"	"	"	1866400
1102679.....	1877806	"	1882744	1868286	"	"	1878177	"	"	"	"
1102680.....	1921235	"	1913990	1910404	"	"	"	"	"	"	"

*See Footnote Page 4

*Parts for 62-U are same as for 1102662.

*Parts for 72-U are same as for 1102672.

 
†Use package 1913812 to bring generator up to date, with fan keyed to shaft.

*Use 1878177 Brush Plate with cast iron end frame only.

†Shipped separate.

Delco-Remy

SERVICE PARTS CATALOG

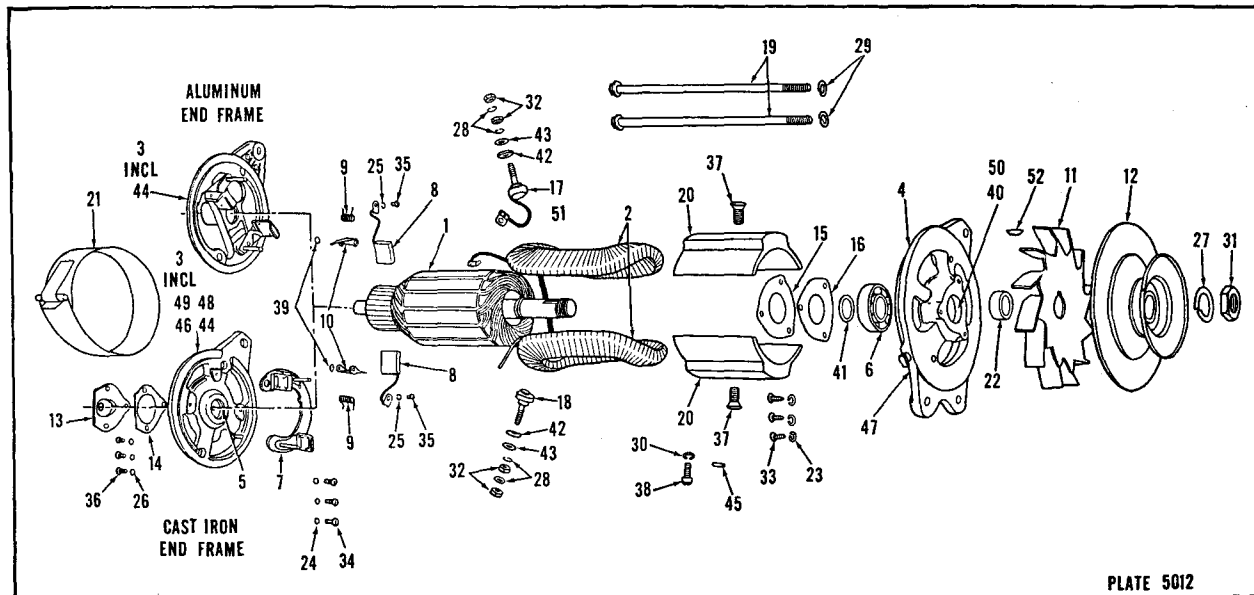

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Pulley	Plate — C.E. Cover	Gasket — C.E. Cover Plate	Plate — Bearing Retainer — D.E.	Gasket — Retainer Plate — D.E.	Terminal — Stud and Lead	Terminal — Stud Only	Thru Bolt	Pole Shoe	Cover Band	Collar — Outside — D.E.
	12	13	14	15	16	17	18	19	20	21	22
1102651.....	1868603			▲1861590	■	1858754	1858749	809763	1849756	816340	*
1102652.....	1868074	1914222	817220	1911263	1912008	"	"	1886685	"	"	1858603
1102653.....	1873935	"	"	"	"	"	"	809763	"	"	"
1102654.....	†1873849	"	"	"	"	"	"	1886685	"	†1874740	"
1102655.....	1873873			1861590	"	"	"	809763	"	816340	1863792
1102656.....	1873935	1914222	817220	1911263	"	"	"	"	"	"	1858603
1102657.....		"	"	"	"	"	"	"	1877894	"	"
1102658.....		"	"	"	"	"	"	"	"	"	"
1102659.....	▲1877888	"	"	"	"	"	"	"	"	"	"
1102660.....		"	"	"	"	"	"	"	"	"	"
1102661.....	1878203	"	"	"	"	"	"	1886685	"	†	"
1102662.....	†1878206	"	"	"	"	"	"	809763	1879216	"	1858603
1102663.....	1878203	"	"	"	"	"	"	"	1877894	"	"
1102664.....	1871669	"	"	"	"	"	"	"	"	"	1858603
1102665.....	1885475	"	"	"	"	"	"	"	"	"	"
1102666.....	1873873	"	"	1861590	"	"	"	"	1879216	"	1863792
1102667.....		"	"	1911263	"	"	"	"	1877894	"	817224
1102668.....	1922348	"	"	"	"	"	"	"	1879216	"	"
1102669.....	1878600	"	"	"	"	"	"	"	"	"	"
1102670.....		"	"	"	"	"	"	"	1877894	"	"
1102671.....	1879407	"	"	"	"	"	"	"	"	"	"
1102672.....		"	"	"	"	"	"	"	"	"	"
1102673.....	1880645	"	"	"	"	"	"	"	"	"	"
1102674.....		"	"	"	"	"	"	"	"	"	"
1102675.....				820707	820708	"	"	1886685	"	"	1845822
1102676.....				"	"	"	"	"	"	"	1854891
1102677.....		1914222	817220	1911263	1912008	"	"	809763	"	"	1858603
1102678.....	1878206	"	"	"	"	"	"	"	"	"	"
1102679.....	1881877	"	"	"	"	"	"	"	1879216	"	"
1102680.....	1882080	"	"	"	"	"	"	"	1877894	"	"

▲See footnote Page 4.

†Shipped separate.

‡1874740 is front Vent Strap; 1874741 is rear Vent Strap—used on 1940 models.

*Use 817224 with unshielded ball bearing; use 1863792 with double shielded bearing.

■Use 1909121 with unshielded ball bearing only.

▲When double groove pulley is required use 1879114.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	1962276	All
24	Lock Washer—Brush Plate Attaching Screw	453844	All
25	Lock Washer—Brush Lead Attaching Screw	1914816	All
26	Lock Washer—End Cover Plate Screw—C.E.	453844	All except 1102668; 75
	Lock Washer—Shaft Nut—C.E.	1915265	1102671
	Lock Washer—Shaft Nut—C.E.	1913696	1102651-5-6
	Lock Washer—Shaft Nut—C.E.	1913743	1102651-2-4-5; 66
27	Lock Washer—Shaft Nut—D.E.	1913696	1102675
27	Lock Washer—Shaft Nut—D.E.	1915265	1102653-6-7-8-9; 60-1-6-7; 71-2-3-4-5-6-7-8-9; 80
28	Lock Washer—Terminal Stud	1914579	All
29	Lock Washer—Thru Bolt	9421424	All
30	Lock Washer—Top of Field Frame Screw	9421423	All
	Lock Washer—Vent Tube Attaching Screw	453435	1102651
NUTS			
	Nut—Shaft—C. E.	1915172	1102651-5; 71-6
31	Nut—Shaft—D.E.	1915172	1102652-3-4-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 72-3-4-5-7-8-9; 80
31	Nut—Shaft—D.E.	1917570	1102670-5-6
32	Nut—Terminal Stud	121743	All
SCREWS			
33	Screw—Ball Bearing Retainer Plate—D.E.	1914580	All except 1102675
33	Screw—Ball Bearing Retainer Plate—D.E.	5017850	1102675
34	Screw—Brush Plate Attaching	1888975	All
35	Screw—Brush Lead Attaching	453460	All
36	Screw—End Cover Plate—C.E.	1888975	All except 1102651-5-9; 68; 75
36	Screw—End Cover Plate	1882717	1102668
37	Screw—Pole Shoe	1913960	All
38	Screw—Top of Field Frame	132243	All
	Screw—Vent Tube Attaching	1914580	1102651
WASHERS			
	Washer—Ball Bearing Space—D.E.	1861589	1102651
39	Washer—Brush Arm Space	1857412	All
40	Washer—Felt—D.E.	*809961	1102651-3-4-6-7-8; 60-1-2-3-4-5-7-8-9; 70-1-2-3-4-7-8-9; 80
40	Washer—Felt—D.E.	820706	1102675-6
	Washer—Shaft Nut—Plain—D.E.	1926782	1102675-6
	Washer—Shaft Nut—Plain—D.E.	1934383	1102670
41	Washer—Space—Inside—D.E.	*809945	1102651-2-3-4-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-7-8-9; 80
41	Washer—Space—Inside—D.E.	822644	1102675-6
	Washer—Space—Outside—D.E.	1838472	1102672
42	Washer—Terminal Stud—Ins.	1858753	All
43	Washer—Terminal Stud—Plain	1954452	All
MISCELLANEOUS			
	*APPLICATION PACKAGE	1877797	1102657
	*APPLICATION PACKAGE	1877974	1102659
	*APPLICATION PACKAGE	1878725	1102658
	COLLAR—Inside—C.E.	1860031	1102651-5; 66
	COLLAR—Inside—C.E.	811681	1102675-6
	COLLAR—Outside—C.E.	1858603	1102651-5; 61-4-6; 76
	COLLAR—Outside—D.E.	1863793	1102651-5; 66
	COLLAR—Space—Between Fan and C.E. Frame	1913801	1102675
	COLLAR—Space—Between Fan and Nut	1913689	1102675
44	Dowel PIN—C.E.	809062	All
45	Dowel PIN—D.E.	809593	All
	Fan BAFFLE—C.E.	1869265	1102651-5; 60; 76

*Use with double shielded Ball Bearing, in 1102651.

*Use with unshielded Ball Bearing, in 1102651.

*See Special Optional Generator and Package sheet for parts.

*Use package 1913812 to bring generator up to date with fan keyed to shaft.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
	Fan BAFFLE.....	1877887	1102659
	Oil BAFFLE.....	820547	1102675-6
46	OILER—C.E.....	113702	1102652-3-4-6-7-8-9; 60-1-3-4-5-7-9; 70-1-2-3-4-5-6-7-8; 80
47	OILER—C.E.....	1882716	1102662-8; 79
47	OILER—D.E.....	125609	All except 1102675-6
46	OILER—D.E.....	113702	1102675-6
48	Oil WICK—C.E.....	1947350	All
49	Oil Hole PLUG—C.E.....	816315	1102652-3-4-6-7-8-9; 60-1-2-3-4-5-7-8-9; 70-1-2-3-4-7-8-9; 80
	PLATE—Fan Baffle.....	1877887	1102675
50	PLATE—Felt Retainer—D. E.....	819104	1102651-2-3-4-6-7-8-9; 60-1-2-3-4-5-7-8-9; 70-1-2-3-4-7-8-9; 80
50	PLATE—Felt Retainer—D. E.....	820709	1102675-6
51	Terminal CLIP—To Brush.....	200182	1102652-4-5-6-7-8-9; 62-3-4-5-6; 71-2-7-8-9; 80
	Vent TUBE (Shipped separate).....	1843117	1102651
	Wiring Harness CLAMP.....	1860459	1102662-3-9
	Woodruff KEY—C.E.....	106749	1102675
52	Woodruff KEY—D.E.....	124545	All except 1102675-6
52	Woodruff KEY—D.E.....	124548	1102675-6

□ Use package 1913812 to bring generator up to date with fan keyed to shaft.

▲ 1868600 Drive End Frame originally had an oiler and was used with 954378 Ball Bearing. On later units the oiler was omitted and 954143 double shielded Ball Bearing was used. When replacing Drive End Frame with oiler with one without oiler also use 1873201 Ball Bearing, 1861589 Space Washer, 1863792 Space Collar and 1861590 Ball Bearing Retainer Plate.

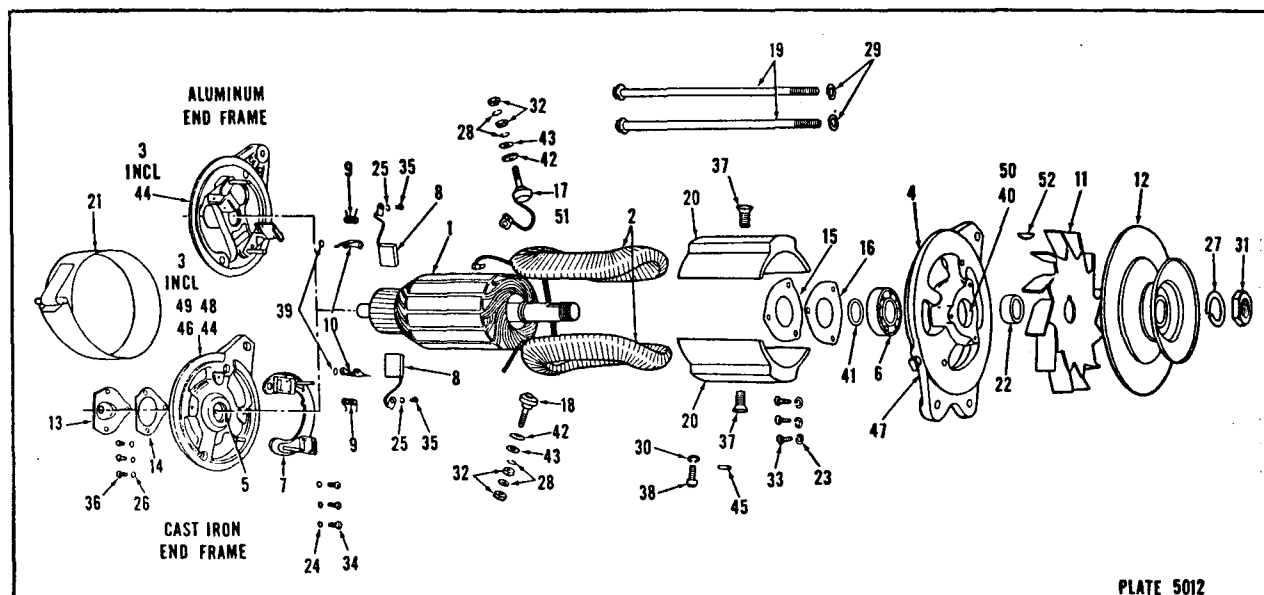 



PLATE 5012

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil Set	Frame — C.E.	Frame — D.E.	Bushing or Bearing — C.E.	Ball Bearing — D.E.	Plate — Brush	Brush	Spring — Brush	Arm — Brush	Fan — C.E. or D.E.
	1	2	3	4	5	6	7	8	9	10	11
1102681.....	1921235	1902111	1882744	1868286	812823	954378	1878177	1872249	1916542	1944373	1866400
1102682.....	"	"	1913990	1882501	"	"	*	"	"	"	"
1102683.....	"	"	1878689	1882433	"	"	1878177	"	"	"	"
1102684.....	1949193	"	1866174	"	954378	"	"	"	"	"	1866400
1102685.....	1882701	"	1881291	822643	908603	903204	"	"	"	"	1966400
1102686.....	1921235	"	1878689	1878214	812823	954378	"	"	"	"	1866400
1102687.....	1883110	"	1903863	1953882	"	"	1908999	1866148	1908829	1904365	"
1102688.....	1857866	"	1913990	1881874	"	"	*	1878249	1916542	1944373	"
1102689.....	1883753	"	1881291	1871380	908603	903204	1878177	"	"	"	1966400
1102690.....	1884168	"	"	1841472	"	"	"	"	"	"	"
1102691.....	1921235	"	1913990	1953882	812823	954378	*	"	"	"	1866400
1102692.....	"	"	"	1881874	"	"	1878177	"	"	"	"
1102693.....	"	"	1878689	1878214	"	"	"	"	"	"	1866400
1102694.....	"	"	"	"	"	"	"	"	"	"	"
1102697.....	1905800	"	"	1859040	"	"	"	"	"	"	"
1102699.....	1921235	"	1913990	1910404	"	"	"	"	"	"	1866400
1102700.....	1935778	1911962	"	"	"	"	"	"	"	"	"
1102701.....	1921235	1902111	"	"	812823	"	*	"	"	"	"
1102702.....	1911454	"	1911452	1882433	443930	"	"	"	"	"	1866400
1102704.....	1935778	1911962	1911973	1929171	"	"	"	"	"	"	"
1102705.....	1921235	1902111	1913990	1910404	"	"	"	"	"	"	"
1102706.....	1935778	1911962	"	"	"	"	"	"	"	"	"
1102707.....	"	"	"	"	"	"	"	"	"	"	"
1102708.....	"	"	1882744	1868286	812823	"	1878177	"	"	"	"
1102709.....	"	"	"	"	"	"	"	"	"	"	"
1102710.....	1921235	1912654	1913990	1910404	"	"	"	"	"	"	"
1102711.....	"	"	"	"	"	"	"	"	"	"	"
1102712.....	1932292	"	1878689	1882433	812823	"	1878177	"	"	"	1866400
1102713.....	1921235	"	1957635	1910404	"	"	"	"	"	"	"
1102714.....	"	"	"	1953882	"	"	"	"	"	"	"

*Use 1878177 Brush Plate with cast iron end frame only.

 Delco-Remy
SERVICE PARTS CATALOG

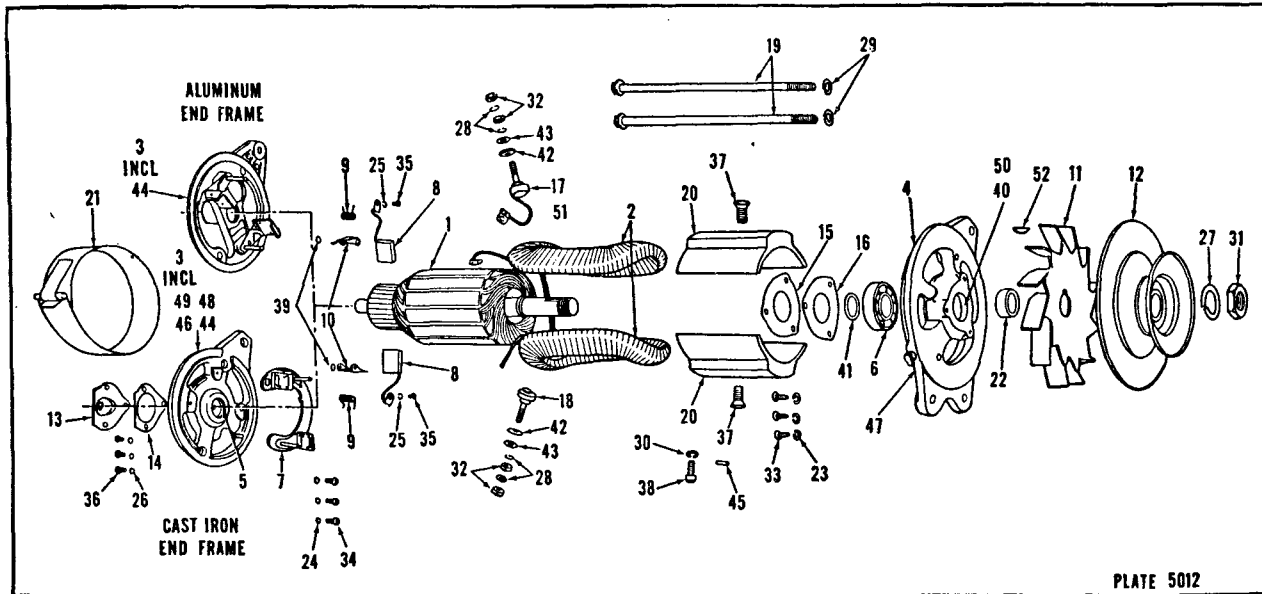

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Pulley	Plate — C.E. Cover	Gasket — C.E. Cover Plate	Plate — Bearing Retainer — D.E.	Gasket — Retainer Plate — D.E.	Terminal — Stud and Lead	Terminal — Stud Only	Thru Bolt	Pole Shoe	Cover Band	Collar — Outside — D.E.
	12	13	14	15	16	17	18	19	20	21	22
1102681.....	1882298	1914222	817220	1911263	1912008	1858754	1858749	809763	1877894	816340	1858603
1102682.....	1924619	"	"	"	"	"	"	"	"	"	"
1102683.....											
1102684.....	1882592	814985	1835457	"	"	"	"	"	"	"	"
1102685.....				820707	820708	"	"	"	"	"	1839007
1102686.....	1882988	1914222	"	1911263	1912008	"	"	1886685	"	"	1858603
1102687.....		"	"	"	"	"	"	809763	"	"	"
1102688.....		"	"	"	"	"	"	"	"	"	"
1102689.....				1871383		"	"	809763	"	"	1871381
1102690.....				820707	820708	"	"	812291	"	"	□
1102691.....	*1866403	1914222	817220	1911263	1912008	"	"	809763	"	"	1858603
1102692.....		"	"	"	"	"	"	"	"	"	"
1102693.....	1878203	"	"	"	"	"	"	1886685	"	"	"
1102694.....	1882988	"	"	"	"	"	"	"	"	"	"
1102697.....		"	"	"	"	"	"	809763	"	"	"
1102699.....	1924619			"	"	"	"	"	"	"	"
1102700.....	1911978			"	"		1858749	"	1912725	"	"
1102701.....	1885475	1914222	817220	"	"	1858754	1858749	"	1877894	"	"
1102702.....	1882592			"	"	"	"	"	"	"	"
1102704.....	1911978			"	"		1858749	"	1912725	"	"
1102705.....	1911985			"	"		1858749	"	1877894	"	"
1102706.....	1871669			"	"		1858749	"	1912725	"	"
1102707.....	1882080			"	"		"	"	"	"	"
1102708.....	1922348	1914222	817220	"	"		"	"	"	"	"
1102709.....	1881877	"	"	"	"		"	"	"	"	"
1102710.....				"	"		"	"	"	"	817224
1102711.....	1885475			"	"		"	"	"	"	1858603
1102712.....	1882592	1913595	817220	"	"		"	"	"	"	"
1102713.....	1808645	1914222	817220	"	"		"	"	"	"	"
1102714.....		"	"	"	"		"	"	"	"	"

□Use 1885356 Oil Baffle (and Collar).

*When 1102691 is used on Federal Truck Model 16-K for U.S. Navy use Pulley 1885075.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate—D.E.....	1962276	1102681-2-3-4-5-6-7-8; 90-1-2-3-4-7-9; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
23	Lock Washer—Ball Bearing Retainer Plate—D.E.....	114603	1102689
25	Lock Washer—Brush Lead Attaching Screw.....	1914816	1102681-2-3-4-5-6-7-8-9; 90-1-2-3-4-7-9; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
24	Lock Washer—Brush Plate Attaching Screw.....	453844	1102681-2-3-4-5-6-7-8-9; 90-1-2-3-4-7; 701-8-9-12-13-14
26	Lock Washer—End Cover Plate Screw—C.E.....	453844	1102682-3-6-7-8; 91-2-3-4-7; 701-8-9-12-13-14
26	Lock Washer—End Cover Plate Screw—C.E.....	453435	1102684
26	Lock Washer—Shaft Nut—C.E.....	1915265	1102685-9; 90
27	Lock Washer—Shaft Nut—D.E.....	1915265	1102681-2-3-4-7-8; 91-2-9; 701-2-4-5-6-7-8-9-10-11-12-13-14
27	Lock Washer—Shaft Nut—D.E.....	1913696	1102686; 93-4; 700
27	Lock Washer—Shaft Nut—D.E.....	802764	1102697
28	Lock Washer—Terminal Stud.....	1914579	1102681-2-3-4-5-6-7-8-9; 90-1-2-3-4-7-9; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
29	Lock Washer—Thru Bolt.....	9421424	1102681-2-3-4-5-6-7-8-9; 90-1-2-3-4-7-9; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
30	Lock Washer—Top of Field Frame.....	9421423	1102681-2-3-4-5-6-7-8-9; 90-1-2-3-4-7-9; 700-1-2-4-5-6-9-10-11-12-13-14
30	Lock Washer—Top of Field Frame.....	138537	1102708-9
NUTS			
31	Nut—Shaft—D.E.....	1915172	1102681-2-3-4-6-7-8-9; 90-1-2-3-4-9; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
31	Nut—Shaft—D.E.....	1917570	1102685-9; 90
31	Nut—Shaft—D.E.....	122264	1102697
32	Nut—Terminal Stud.....	121743	1102681-2-3-4-5-6-7-8-9; 90-1-2-3-4-7-9; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
SCREWS			
33	Screw—Ball Bearing Plate—D.E.....	1914580	1102681-2-3-4-5-6-7-8; 91-2-3-4-7-9; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
33	Screw—Ball Bearing Retainer Plate—D.E.....	5017850	1102689; 90
35	Screw—Brush Lead Attaching.....	453460	1102681-2-3-4-5-6-7-8-9; 90-1-2-3-4-7-9; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
34	Screw—Brush Plate Attaching.....	454408	1102681-2-3-4-5-6-7-8-9; 90-1-2-3-4-7; 701-8-9-12-13-14
36	Screw—Dowel—In Field Frame.....	820369	1102684; 702-12
36	Screw—End Cover Plate—C.E.....	1882717	1102681
36	Screw—End Cover Plate—C.E.....	454408	1102682-3-6-8; 91-2-3-4-7; 701-8-9-12-13-14
36	Screw—End Cover Plate—C.E.....	1914580	1102684
37	Screw—Pole Shoe.....	1913960	1102681-2-3-4-5-6-7-8-9; 90-1-2-3-4-7-9; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
38	Screw—Top of Field Frame.....	132243	1102681-2-3-4-5-6-7-8-9; 90-1-2-3-4-7-9; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
WASHERS			
39	Washer—Brush Arm Space.....	1857412	1102681-2-3-4-5-6-7-8-9; 90-1-2-3-4-7-9; 700-1-2-4-5-6-7-10-11-12-13-14
	Washer—Felt—C.E.....	1911456	1102702
	Washer—Felt—C.E.....	815042	1102684
40	Washer—Felt—D.E.....	820706	1102685; 90
40	Washer—Felt—D.E.....	809961	1102681-2-3-4-6-7-8; 91-2-3-4-7-9; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
	Washer—Shaft Nut—Plain—D.E.....	1934383	1102685-9
	Washer—Shaft Nut—Plain—D.E.....	1914589	1102690
41	Washer—Space—Inside—D.E.....	809945	1102681-2-3-4-6-7-8; 91-2-3-4-7-9; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
41	Washer—Space—Inside—D.E.....	822644	1102685; 90
42	Washer—Terminal Stud—Insulating.....	1858753	All
43	Washer—Terminal Stud—Plain.....	826319	All

Parts not listed in this Catalog will not be sold separately.


MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS		
	BUSHING—Ins. Terminal Stud.....	*	1102700-4-6-7-8-9-10-11-12-13-14
	CLAMP—Wiring Harness.....	1860459	1102708-9
	COLLAR—Space—Inside—C.E.....	811681	1102684-5-9; 90
	COLLAR—Space—Outside—C.E.....	815049	1102684
	COLLAR—Space—Outside—C.E.....	1858603	1102685-9; 90
	CUP—Felt Washer Retainer.....	1911457	1102702
44	Dowel PIN—C.E.....	809062	1102681-2-3-4-5-6-7-8-9; 90-1-2-3-4-7-9; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
45	Dowel PIN—D.E.....	809593	1102681-2-3-4-5-6-7-8-9; 90-1-2-3-4-7-9; 700-1-2-4-5-6-7-8-9-10-12-13-14
	INSULATOR—Between Coil & Pole Shoe.....	1912073	1102700-4-6-7-8-9-10-11-13-14
49	Oil Hole PLUG.....	816315	1102681-2-3-5-6-7-8; 91-2-3-4-7; 701-8-9-11-12-13-14
	Oil BAFFLE—D.E.....	1838047	1102685
	Oil BAFFLE (and Collar)—D.E.....	1919657	1102690
46	OILER—C.E.....	125609	1102685-9; 90
46	OILER—C.E.....	113702	1102682-3-4-6-7-8; 91-2-3-4-7
46	OILER—C.E.....	1882716	1102681
46	OILER—C.E.....	113702	1102699; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
47	OILER—D.E.....	125609	1102681-2-3-4-5-6-7; 99; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
47	OILER—D.E.....	113702	1102685; 90
	Oil SEAL—D.E.....	1871382	1102689
48	Oil WICK—C.E.....	1947350	1102681-2-3-4-6-7-8; 91-2-3-4-7; 701-8-9-12-13-14
48	Oil WICK—C.E.....	1936465	1102702
	PLATE—Felt Washer Retainer—C.E.....	809960	1102684
50	PLATE—Felt Washer Retainer—D.E.....	819104	1102681-2-3-4-6-7-8; 91-2-3-4-7-9; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
50	PLATE—Felt Washer Retainer—D.E.....	820709	1102685; 90
	PLATE—Fan Baffle.....	1869265	1102685-9; 90
51	Terminal CLIP—To Brush.....	200182	All
52	Woodruff KEY—D.E.....	124546	1102689
52	Woodruff KEY—D.E.....	124545	1102681-2-3-4-6-7-8; 91-2-3-4-7-9; 700-1-2-4-5-6-7-8-9-10-11-12-13-14
52	Woodruff KEY—D.E.....	124548	1102685; 90

*Included with 1958749 Stud.

Revised to November 1, 1969

 
SERVICE PARTS CATALOG

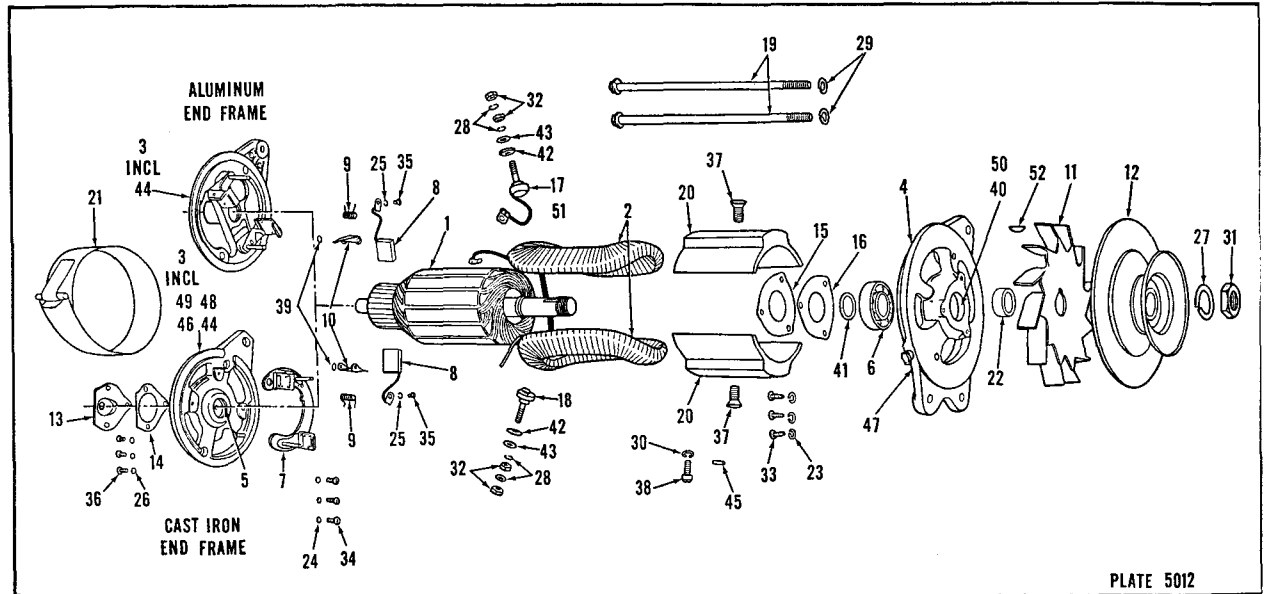

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil Set	Frame — C.E.	Frame — D.E.	Bushing or Ball Bearing — C.E.	Ball Bearing — D.E.	Plate — Brush	Brush	Spring — Brush	Arm — Brush	Fan — C.E. or D.E.
	1	2	3	4	5	6	7	8	9	10	11
1102715.....	1935778	1911962	1913990	1910404		954378		1878249	1916542	1944373	1866400
1102716.....	1923091	1912654	1957635	"	812823	"	1878177	"	"	"	
1102717.....	1935778	1911962	1913990	"	"	"	"	"	"	"	
1102718.....	1912599	"	1882744	1868286	812823	"	1878177	"	"	"	
1102719.....	1921235	1912654	1913990	1910404		"		"	"	"	
1102720.....	1884168	"	1913517	1841472	904756	954139	1878177	"	"	"	1866400
1102721.....	1921235	"	1957635	1910404	812823	954378	"	"	"	"	"
1102722.....	1932900	"	"	1881874	"	"	"	"	"	"	
1102723.....	"	1911962	"	"	"	"	"	"	"	"	
1102724.....	1905800	1912654	1878689	1859040	"	"	"	"	"	"	
1102725.....	1881288	1911962	1913517	1913519	904756	954139	"	"	"	"	1866400
1102726.....	1932900	"	1957635	1953882	812823	907503	"	"	"	"	
1102727.....	1883110	1913757	1871757	"	"	954378	1908999	1906984	1916324	1904365	
1102728.....	1921235	1912654	1913990	1910404		"		1878249	1916542	1944373	1866400
1102729.....	1935778	1911962	1913990	"		"		"	"	"	"
1102730.....	1932292	1912654	1878689	1882433	812823	"	1878177	"	"	"	
1102731.....	1935778	1911962	1957635	1953882	"	"	"	"	"	"	
1102732.....	1921235	1912654	"	"	"	"	"	"	"	"	1866400
1102733.....	"	"	1913990	1910404	"	"		"	"	"	
1102734.....	1915869	1911962	1915868	1913519	904756	954139	1878177	1906984	"	"	
1102735.....	1915876	1915871	1915875	"	"	"	1908999	"	1916324	1904365	
1102736.....	1877806	1916402	1882744	1868286	812823	954378	1878177	1878249	1916542	1944373	
1102737.....	1921235	"	1913990	1910404	"	"	"	"	"	"	
1102738.....	"	1912654	1957635	1878691	812823	"	1878177	"	"	"	
1102739.....	"	"	"	"	"	"	"	"	"	"	1866400
1102740.....	Same	parts as	1102717								
1102741.....	Same	parts as	1102718								
1102742.....	Same	parts as	1102719								
1102743.....	Same	parts as	1102736								
1102744.....	Same	parts as	1102737								

 *1-U parts are same as for 1102718.
8-U parts are same as for 1102718.
9-U parts are same as for 1102719.

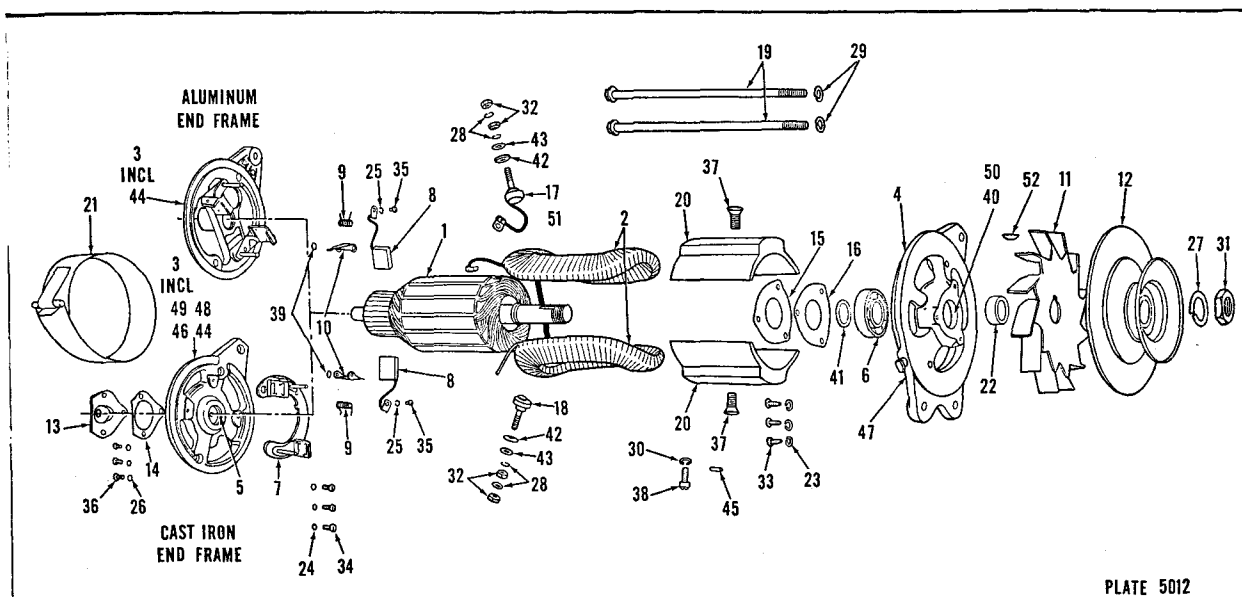

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Pulley	Plate — C.E. Cover	Gasket — C.E. Cover Plate	Plate — Bearing Retainer — D.E.	Gasket — Retainer Plate — D.E.	Terminal — Stud and Lead	Terminal — Stud Only	Thru Bolt	Pole Shoe	Cover Band	Collar — Outside — D.E.
	12	13	14	15	16	17	18	19	20	21	22
1102715	1911985			1911263	1912008		1858749	809763	1939902	816340	1858603
1102716		1914222	817220	"	"		"	"	"	"	"
1102717				"	"		"	"	"	"	"
1102718		1914222	817220	"	"		"	"	"	"	"
1102719				"	"		"	"	"	"	"
1102720				820707	820708		"	812291	"	"	
1102721	1921091	1914222	817220	1911263	1912008		"	809763	"	"	1858603
1102722		"	"	"	"		"	"	"	"	"
1102723		"	"	"	"		"	"	"	"	"
1102724		"	"	"	"		"	"	"	"	"
1102725				820707	820708		"	1886685	"	"	1845822
1102726		1914222	817220	1911263	1912008		"	809763	"	"	1858603
1102727		"	"	"	"		"	"	"	"	"
1102728	1921091			"	"		"	"	"	"	"
1102729	1879310			"	"		"	"	"	"	817224
1102730	1911978	1913595	817220	"	"		"	"	"	"	1858603
1102731		1914222	"	"	"		"	"	"	"	"
1102732	1924619	"	"	"	"		"	"	"	"	"
1102733	1946594			"	"		"	"	"	"	"
1102734		816212	1835457	820707	820708		"	812291	"	1872638	1845822
1102735		"	"	"	"		"	"	"	"	1854891
1102736		1914222	817220	1911263	1912008		"	809763	1914618	816340	1858603
1102737				"	"		"	"	"	"	"
1102738		1914222	817220	"	"		"	"	1939902	"	"
1102739	1924619	"	"	"	"		"	"	"	"	"
1102740	Same	parts as	1102717								
1102741	Same	parts as	1102718								
1102742	Same	parts as	1102719								
1102743	Same	parts as	1102736								
1102744	Same	parts as	1102737								

*When 1102721 is used by Federal with Hercules J & D Eng. and air compressor use 1885075 Pulley.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E. -----	1962276	1102715-16-17-18-19-20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5-6-7-8-9
24	Lock Washer—Brush Plate Attaching Screw -----	453844	1102716-18-20-1-2-3-4-5-6-7; 30-1-2-4-5-6-8-9
25	Lock Washer—Brush Lead Attaching Screw -----	1914816	1102715-16-17-18-19-20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5-6-7-8-9
26	Lock Washer—End Cover Plate Screw—C.E. -----	453844	1102716-18-21-2-3-4-6-7; 30-1-2-6-8-9
26	Lock Washer—End Cover Plate Screw—C.E. -----	453435	1102734-5
—	Lock Washer—Shaft Nut—C.E. -----	1913743	1102720-5
27	Lock Washer—Shaft Nut—D.E. -----	1915265	1102715-17-18-19-21-2-3-6-7-8-9; 30-1-2-3-6-7-8-9
27	Lock Washer—Shaft Nut—D.E. -----	802764	1102724
28	Lock Washer—Terminal Stud -----	1914579	1102715-16-17-18-19-20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5-6-7-8-9
29	Lock Washer—Thru Bolt -----	9421424	1102715-16-17-18-19-20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5-6-7-8-9
30	Lock Washer—Top of Field Frame Screw -----	9421423	1102715-16-17-18-19-20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5-6-7-8-9
30	Lock Washer—Top of Field Frame Screw -----	138537	1102718
NUTS			
—	Nut—Cover Band Screw -----	453433	1102734-5
—	Nut—Shaft—C.E. -----	1915172	1102720-5
31	Nut—Shaft—D.E. -----	1915172	1102715-17-18-19-21-2-3-6-7-8-9; 30-1-2-3-6-7-8-9
31	Nut—Shaft—D.E. -----	1917570	1102716-20-5; 34-5
31	Nut—Shaft—D.E. -----	114495	1102724
32	Nut—Terminal Stud -----	121743	1102715-16-17-18-19-20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5-6-7-8-9
SCREWS			
33	Screw—Ball Bearing Retainer Plate—D.E. -----	1914580	1102715-16-17-18-19-21-2-3-4-6-7-8-9; 30-1-2-3-6-7-8-9
33	Screw—Ball Bearing Retainer Plate—D.E. -----	5017850	1102720-5; 34-5
34	Screw—Brush Lead Attaching -----	454408	1102716-18-20-1-2-3-4-5-6-7; 30-1-2-4-5-6-8-9
35	Screw—Brush Lead Attaching -----	453460	1102715-16-17-18-19-20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5-6-7-8-9
—	Screw—Cover Band -----	453479	1102734-5
—	Screw—Dowel—In Field Frame -----	820369	1102730
36	Screw—End Cover Plate—C.E. -----	454408	1102716-18-21-2-3-4-6-7; 30-1-2-6-8
36	Screw—End Cover Plate—C.E. -----	1914580	1102734-5
37	Screw—Pole Shoe -----	1913960	1102715-16-17-18-19-20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5-6-7-8-9
38	Screw—Top of Field Frame -----	132243	1102715-16-17-18-19-20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5-6-7-8-9
WASHERS			
39	Washer—Brush Arm Space -----	1857412	1102715-16-17-18-19-20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5-6-7-8-9
—	Washer—Felt—C.E. -----	37077	1102720-5
40	Washer—Felt—D.E. -----	809961	1102715-16-17-18-19-21-2-3-4-6-7-8-9; 30-1-2-3-6-7-8-9
40	Washer—Felt—D.E. -----	820706	1102720-5; 34-5
—	Washer—Shaft Nut—Plain—D.E. -----	1914589	1102720
—	Washer—Shaft Nut—Plain—D.E. -----	1934383	1102716; 25; 34-5
41	Washer—Space—Inside—D.E. -----	809945	1102715-16-17-18-19-21-2-3-4-6-7-8-9; 30-1-2-3-6-7-8-9
41	Washer—Space—Inside—D.E. -----	822644	1102720-5; 34-5
—	Washer—Space—Outside—D.E. -----	1838472	1102717-19; 37
42	Washer—Terminal Stud—Ins. -----	1858753	1102715-16-17-18-19-20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5-6-7-8-9
43	Washer—Terminal Stud—Plain -----	826319	1102715-16-17-18-19-20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5-6-7-8-9
MISCELLANEOUS			
—	BAFFLE—Oil—D.E. -----	820547	1102725; 34-5

Parts not listed in this Catalog will not be sold separately.


MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
—	MISCELLANEOUS—(Continued)		
—	BUSHING—Insulation—Terminal -----	↑	All
—	COLLAR—Space—Between Fan & Frame -----	1913688	1102720-5
—	COLLAR—Space—Between Fan & Nut -----	1913689	1102720-5
—	COLLAR—Space—Inside—C.E. -----	1913316	1102720-5; 34-5
—	CUP—Felt Retainer—C.E. -----	37078	1102720-5
44	Dowel PIN—C.E. -----	809062	All
45	Dowel PIN—D.E. -----	809593	All
—	INSULATION—Between Field Coil & Pole Shoe ----	1912073	1102715-16-17-18-19-20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5-8-9
—	INSULATION—Between Field Coil & Pole Shoe ----	1914491	1102736-7
46	OILER—C.E. -----	113702	1102715-16-17-19-21-2-3-4-6-7-8-9; 30-1-2-3-8-9
46	OILER—C.E. -----	1882716	1102718; 36-7
47	OILER—D.E. -----	125609	1102715-16-17-18-19-21-2-3-4-6-7-8-9; 30-1-2-3-6-7-8-9
—	Oil THROWER—D.E. -----	1919657	1102720
48	Oil WICK—C.E. -----	1947350	1102716-18-21-2-3-4-6-7; 30-1-2-6-8-9
49	Oil Hole PLUG—C.E. -----	816315	1102716-18-21-2-3-4-6-7; 30-1-2-6-8-9
—	PLATE—Fan Baffle -----	1877887	1102720-5
50	PLATE—Felt Retainer—D.E. -----	819104	1102715-16-17-18-19-21-2-3-4-6-7-8-9; 30-1-2-3-6-7-8-9
50	PLATE—Felt Retainer—D.E. -----	820709	1102720-5; 34-5
51	Terminal CLIP—To Brush -----	200182	1102715-16-17-18-19-20-1-2-3-4-5-6-7-8-9; 30
—	Wiring Harness CLAMP -----	1860459	1102718; 36
—	Woodruff KEY—C.E. -----	124543	1102720-5
52	Woodruff KEY—D.E. -----	124545	1102715-16-17-18-19-21-2-3-4-6-7-8-9; 30-1-2-3-6-7-8-9
52	Woodruff KEY—D.E. -----	124548	1102720-5; 34-5

†Included with 1858749 Stud.

Revised to October 1, 1966

 
SERVICE PARTS CATALOG

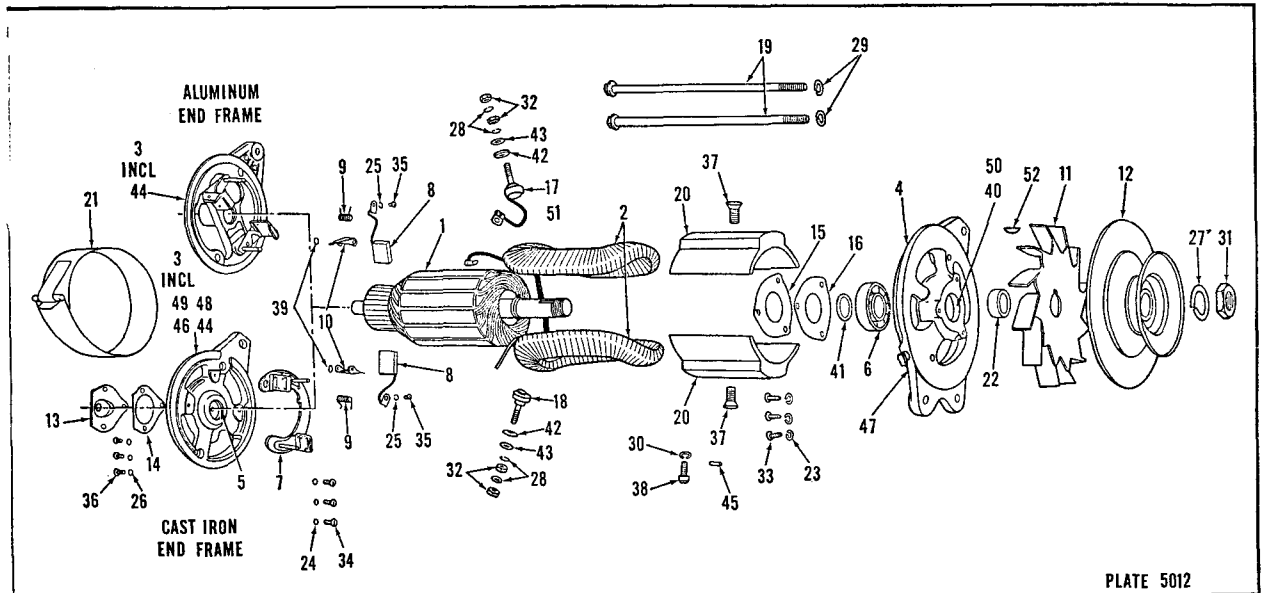

Illustrations are of Typical Parts only. For parts not numbered, or illustrated see Minor Parts Section.

Model No.	Arma- ture	Field Coil Set	Frame — C.E.	Frame — D.E.	Bushing or Ball Bearing — C.E.	Ball Bearing — D.E.	Plate — Brush	Brush	Spring — Brush	Arm — Brush	Fan — C.E. or D.E.
	1	2	3	4	5	6	7	8	9	10	11
1102745	1935778	1911962	1913990	1910404		954378		1878249	1916542	1944373	
1102746	1923003	"	1957635	"	812823	"	1878177	"	"	"	
1102747	1935778	"	1913990	"		"		"	"	"	1866400
1102748	1917175	"	1878689	1882433	812823	"	1878177	"	"	"	
1102749	1921235	1912654	1913990	1910404		"		"	"	"	
1102750	1935778	1911962	"	"		"		"	"	"	
1102751	1923091	1912654	1878689	1882433	812823	"	1878177	"	"	"	
1102752	1935778	1911962	1957635	1953882	"	"	"	"	"	"	1866400
1102753	"	"	1913990	1909118		"		"	"	"	
1102754	"	"	1882744	1868286	812823	"	1878177	"	"	"	
1102757	"	"	1913990	1910404	"	"		"	"	"	1866400
1102761	1921235	1912654	1920337	1920337	"			"	"	"	
1102766	Same	parts as	1102704	in Group	98-B			"	"	"	
1102770	1921621	1911962	1920337	1910404		954378		"	1916542	1944373	
1102771	1935778	"	1920603	1911976		"		"	"	"	
1102773	1921621	"	1913990	1910404		"		"	"	"	
1102774	"	"	1882744	1868286	812823	"	1878177	"	"	"	
1102775	"	"	1913990	1910404		"		"	"	"	
1102799	1935778	1922702	1853830	1873830	812823	"	1878177	"	"	"	
1102823	"	1922701	1883479	1868286	"	"	1908999	1866148	1908829	1904365	
1102834	"	1920824	1853830	1873830	"	"	1878177	1878249	1916542	1944373	
*1813399	1921351	1916402	1913990	1910404		"		"	"	"	
*1813400	1935778	1922702	"	"		"		"	"	"	
*1813401	"	"	"	"		"		"	"	"	
*1813458	"	"	"	"		"		"	"	"	
*1813481	"	*1912711	1882744	1868286	812823	"	1878177	"	"	"	
*1813611	"	"	1913990	1910404		"		"	"	"	
*1813612	1923535	1922701	"	"		"		"	"	"	
*1813624	1925348	*1813478	"	"		"		"	"	"	
*1813663	1935778	*1912711	"	1925295		"		"	"	"	

 * Serviced by U. M. S. Div. Canada.

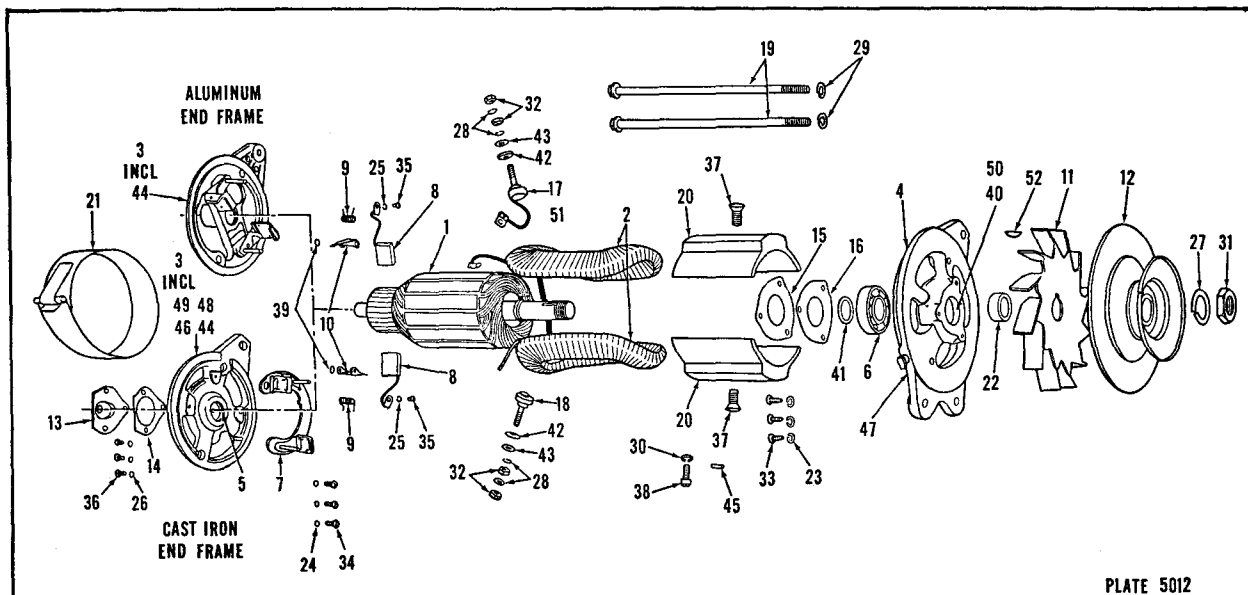

Illustrations are of Typical Parts only. For parts not numbered, or illustrated see Minor Parts Section.

Model No.	Pulley	Plate — C.E. Cover	Gasket — C.E. Cover	Plate — Bearing Retainer D.E.	Gasket — Retainer Plate D.E.	Terminal — Stud and Lead	Terminal — Stud only	Bolt — Thru	Shoe — Pole	Band — Cover	Collar — Outside D.E.
	12	13	14	15	16	17	18	19	20	21	22
1102745	1911978			1911263	1912008		1858749	809763	1912725	816340	1858603
1102746		1914222	817220	"	"		"	"	"	"	"
1102747	1878306			"	"		"	"	"	"	"
1102748	1911978	1913595	817220	"	"		"	"	"	"	"
1102749				"	"		"	"	"	"	817224
1102750	1885475			"	"		"	"	"	"	1858603
1102751		1913595	817220	"	"		"	"	"	"	"
1102752	1866403	1914222	"	"	"		"	"	"	"	"
1102753	1921091			"	"		"	"	"	"	"
1102754	1911978	1914222	817220	"	"		"	"	"	"	"
1102757	1925294			"	"		"	"	"	"	"
1102761				"	"		"	"	"	"	817224
1102770	1911978			"	"		"	"	"	"	1858603
1102771				"	"		"	"	"	"	"
1102773	1911978			"	"		"	"	"	"	"
1102774	1921939	1914222	817220	"	"		"	"	"	"	"
1102775	1885475			"	"		"	"	"	"	"
1102799		1914222	817220	"	"		"	"	"	1872638	817224
1102823		"	"	"	"		"	"	"	816340	1858603
1102834		"	"	"	"		"	"	"	1872638	817224
1813399				"	"		"	1908680	1914618	816340	"
1813400	1885475			"	"		"	809763	1912725	"	1858603
1813401	1921939			"	"		"	"	"	"	"
1813458	1911978			"	"		"	"	"	"	"
1813481	1924689	1914222	817220	"	"		"	"	"	"	"
1813611				"	"		"	"	"	"	817224
1813612	1924689			"	"		"	"	"	"	1858603
1813624				"	"		"	1908680	1914618	"	817224
1813663	1925294			"	"		"	809763	1912725	"	1858603

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and descriptions.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate		
	Screw—D.E. -----	1962276	All except 1102834
24	Lock Washer—Brush Plate Attaching Screw -----	453844	1102746-8; 51-2-4; 74; 99; 823; 34; 1813481
25	Lock Washer—Brush Lead Attaching Screw -----	1914816	All
26	Lock Washer—End Cover Plate Screw—C.E. -----	453844	1102746-8; 51-2-4; 74; 99; 823; 34; 1813481
27	Lock Washer—Shaft Nut—D.E. -----	1915265	All
27	Lock Washer—Shaft Nut—D.E. -----	1913696	1102770
—	Lock Washer—Terminal Attaching -----	453435	1102834
—	Lock Washer—Terminal Shield Attaching -----	453844	1102834
—	Lock Washer—Terminal Shield Cover Screw -----	453844	1102834
28	Lock Washer—Terminal Stud -----	453435	1102834
28	Lock Washer—Terminal Stud -----	1914579	All except 1102746
29	Lock Washer—Thru Bolt -----	9421424	All
30	Lock Washer—Top of Field Frame Screw -----	9421423	1102745-6-7-8-9; 50-1-2-3-7; 61; 70-1-3-5; 99; 1813399; 400-1; 58; 611-12; 624; 63
30	Lock Washer—Top of Field Frame Screw -----	138537	1102754; 74; 1813481
NUTS			
—	Nut—Cover Band Screw -----	453433	1102799; 834
31	Nut—Shaft—D.E. -----	1915172	All except 1102746
31	Nut—Shaft—D.E. -----	1917570	1102746
32	Nut—Terminal Stud -----	453433	1102834
32	Nut—Terminal Stud -----	121743	All except 1102834
SCREWS			
33	Screw—Ball Bearing Retainer Plate—D.E. -----	1914580	All
34	Screw—Brush Plate Attaching -----	454408	1102746-8; 51-2-4; 74; 99; 823; 34; 1813481
35	Screw—Brush Lead Attaching -----	453460	All
—	Screw—Cover Band -----	132143	1102799; 834
—	Screw—Dowel—In Field Frame -----	820369	1102748; 51
36	Screw—End Cover Plate—C.E. -----	454408	1102746-8; 51-2-4; 74; 99; 823; 34; 1813481
37	Screw—Pole Shoe -----	1913960	All
—	Screw—Terminal Attaching -----	9411511	1102834
—	Screw—Terminal Shield Attaching -----	453302	1102834
—	Screw—Terminal Shield Cover Attaching -----	453804	1102834
38	Screw—Top of Field Frame -----	132243	All except 1102834
WASHERS			
39	Washer—Brush Arm Space -----	1857412	All
40	Washer—Felt—D.E. -----	809961	All
—	Washer—Plain—Terminal Attaching -----	807295	1102834
—	Washer—Shaft Nut—Plain—D.E. -----	1934383	1102746
41	Washer—Space—Inside—D.E. -----	809945	All
42	Washer—Terminal Stud—Ins. -----	1858753	All except 1102834
43	Washer—Terminal Stud—Plain -----	826319	All except 1102834
MISCELLANEOUS			
—	BUSHING—Insulation—Terminal Stud -----	x	All except 1102834
—	CLAMP—Wiring Harness -----	1860459	1102754; 74
—	CLIP—Terminal "A" Terminal -----	200347	1102834
—	CLIP—Terminal (To Brush) -----	200362	1102823; 34
—	COVER—Terminal Shield -----	1920691	1102834
44	Dowel PIN—C.E. -----	809062	All
45	Dowel PIN—D.E. -----	809593	All
—	INSULATOR—Armature Lead -----	1926766	1102834
—	INSULATION—Between Field Coil & Pole Shoe --	1912073	1102745-6-7-8-9; 50-1-2-3-4-7; 61; 70-1-3-4-5; 99; 823; 34; 1813401; 58; 81; 611-12; 63
—	INSULATION—Between Field Coil & Pole Shoe --	1914491	1813399; 624
—	LEAD—Assembly—Terminal to Field -----	1916844	1102834
46	OILER—C.E. -----	* 113702	All
47	OILER—D.E. -----	125609	All
48	Oil WICK—C.E. -----	1947350	1102746-8; 51-2-4; 74; 99; 823; 34; 1813481
48	Oil WICK—C.E. -----	1947350	1102745-7-9; 50-3-7; 61; 70-1-3-5; 1813399; 400-1; 58; 611-12; 624; 63


* For Extra Capacity Oiler use 9416777

x Included with 1858749 Stud

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS— (Continued)		
49	Oil Hole PLUG—C.E. -----	1911097	1102746-8; 51-2-4; 823; 34; 1813481
50	PLATE—Felt Retainer—D.E. -----	819104	All
—	PLATE—Support—Terminal -----	1923837	1102834
—	PLATE—Terminal Shield -----	1920676	1102834
—	SHIELD Terminal -----	1920680	1102834
51	Terminal CLIP—To Brush -----	200182	All except 1102834
—	TERMINAL Plate Assembly -----	1920677	1102834
52	Woodruff KEY—D.E. -----	124545	All

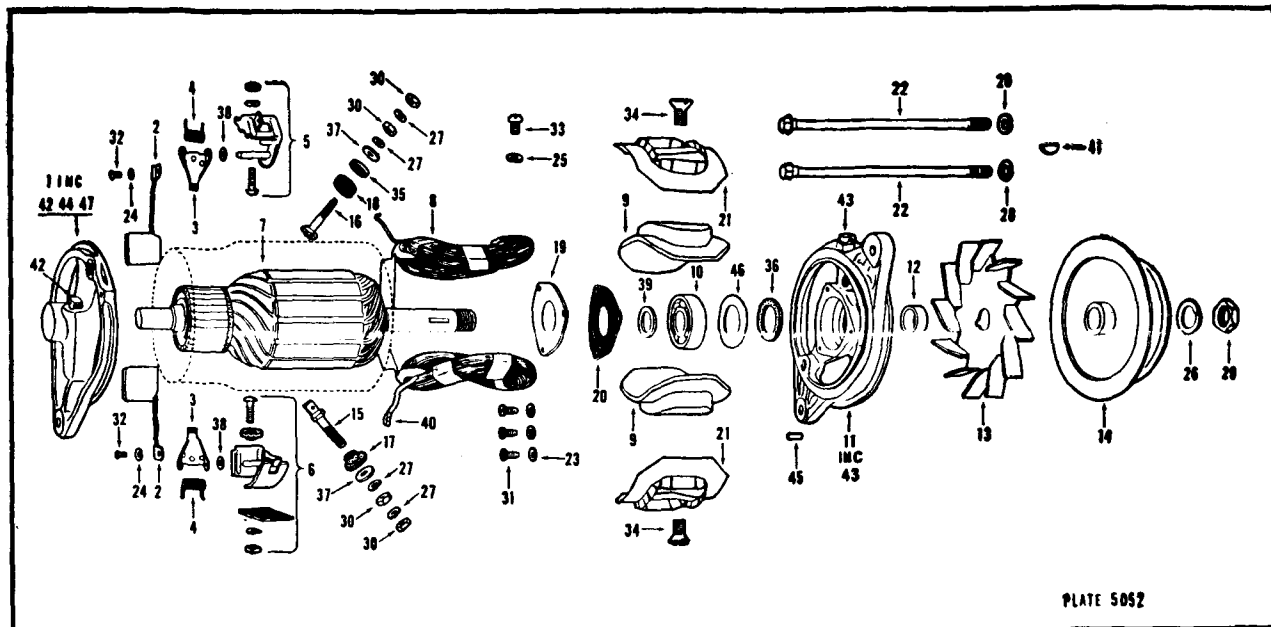 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame C.E.	Brush	Arm Brush	Spring Brush	Holder (Pkg.) Ground Brush	Holder (Pkg.) Insul. Brush	Armature	Coll Field Assembly	Shoe Pole	Ball Bearing D.E.	Frame D.E.
	1	2	3	4	5	6	7	8	9	10	11
1102769.....	1933933	1923295	1944373	1916324	1925378	1925379	1935778	1922702	1939902	954378	1910404
1102776.....	1921979	"	"	"	"	"	1913597	1922382	"	"	1882433
1102777.....	"	"	"	"	"	"	1917175	1922702	"	"	"
1102778.....	1933933	"	"	"	"	"	1935778	"	"	"	1910404
1102779.....	1932054	"	"	"	"	"	"	"	"	"	1922185
1102780.....	1933933	"	"	"	"	"	"	"	"	"	1910404
1102781.....	"	"	"	"	"	"	"	"	"	"	"
1102782.....	"	"	"	"	"	"	"	"	"	"	"
1102784.....	1932054	"	"	"	"	"	1935778	"	"	"	1922185
1102785.....	1933933	"	"	"	"	"	1935778	"	"	"	1910404
1102786.....	"	"	"	"	"	"	1912599	"	"	"	"
1102787.....	"	"	"	"	"	"	1935778	"	"	"	1953882
1102788.....	1927451	"	"	"	"	"	1923003	"	"	"	1910404
1102789.....	1933933	"	"	"	"	"	1921235	1922382	"	"	"
1102793.....	"	"	"	"	"	"	1924893	1922702	"	"	"
1102794.....	"	"	"	"	"	"	1935778	"	"	"	1925295
1102797.....	"	"	"	"	"	"	"	"	"	"	"
1102798.....	1925723	"	"	"	"	"	"	"	"	"	1925722
1102803.....	Same parts as 1102785.....										
1102804.....	Same parts as 1102771—Group 98-C.....										
1102805.....	Same parts as 1102784.....										
1102806.....	Same parts as 1102797.....										
1102807.....	Same parts as 1102798.....										
1102808.....	1933933	1923295	1944373	1916324	1925378	1925379	1921235	1922382	1939902	954378	1910404
1102810.....	"	"	"	"	"	"	"	"	"	"	"
1102811.....	"	"	"	"	"	"	1935778	1922702	"	"	"
1102812.....	1932054	"	"	"	"	"	"	"	"	"	1922185
1102813.....	1930924	"	"	"	"	"	1932263	"	"	"	1910404
1102814.....	1925913	"	"	"	"	"	1931517	"	"	907503	"
1102815.....	1921979	"	"	"	"	"	1917175	"	"	954378	1882433


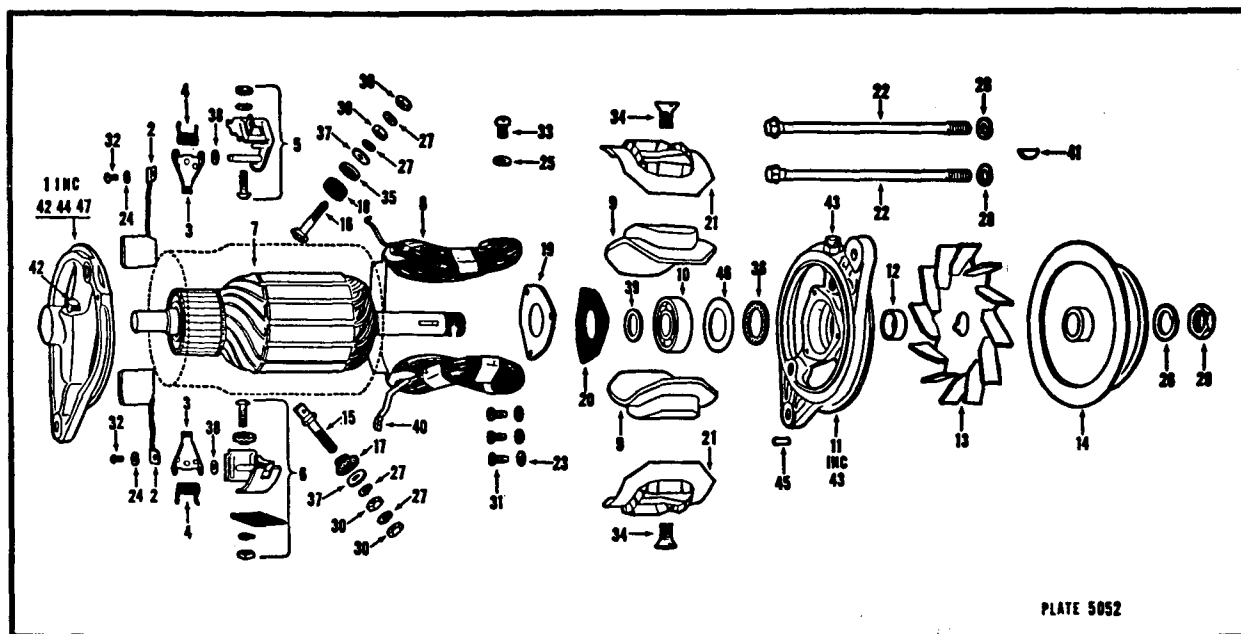 


PLATE 5052

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame — C.E.	Brush	Arm — Brush	Spring — Brush	Holder — (Pkg.) — Ground Brush	Holder — (Pkg.) — Insul. Brush	Armature	Field — Assembly	Coil Shoe — Pole	Ball Bearing — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11
1102816.....	1925204	1923295	1944373	1908829	1925378	1925379	1940161	1922702	1939902	954378	1910404
1102818.....	"	"	"	"	"	"	1932263	"	"	"	1953882
1102819.....	1921979	"	"	"	"	"	1932292	"	"	"	1882433
1102820.....	1927451	"	"	"	"	"	1921621	"	"	"	1953882
1102821.....	1951512	"	"	1908829	"	"	1932900	"	"	907503	"
1102822.....	1921979	"	"	1908829	"	"	1917175	"	"	954378	1882433
1102824.....	1929513	"	"	1908829	"	"	1931517	"	"	907503	1953882
1102825.....	1939184	"	"	"	"	"	1939837	"	"	"	"
1102827.....	1954334	"	"	"	"	"	"	"	"	954378	1922185
1102830.....	1943662	"	"	"	"	"	1943666	"	"	907057	1943665
1102831.....	1933933	"	"	1908829	"	"	1935778	"	"	954378	1910404
1102832.....	"	"	"	1908829	"	"	"	"	"	"	"
1102833.....	1946595	1932506	"	"	"	"	"	"	"	"	1873830
1102835.....	1951512	1923295	"	1908829	"	"	1963977	"	"	907503	1953882
1102836.....	1946720	"	"	"	"	"	1949193	○	"	954378	1938790
1102837.....	"	"	"	"	"	"	1949193	"	"	"	"
1102838.....	1951512	"	"	1908829	"	"	1932900	"	"	907503	1953882

 ○1864866 Field Coil—L.H.; 1864865—Field Coil—R.H.

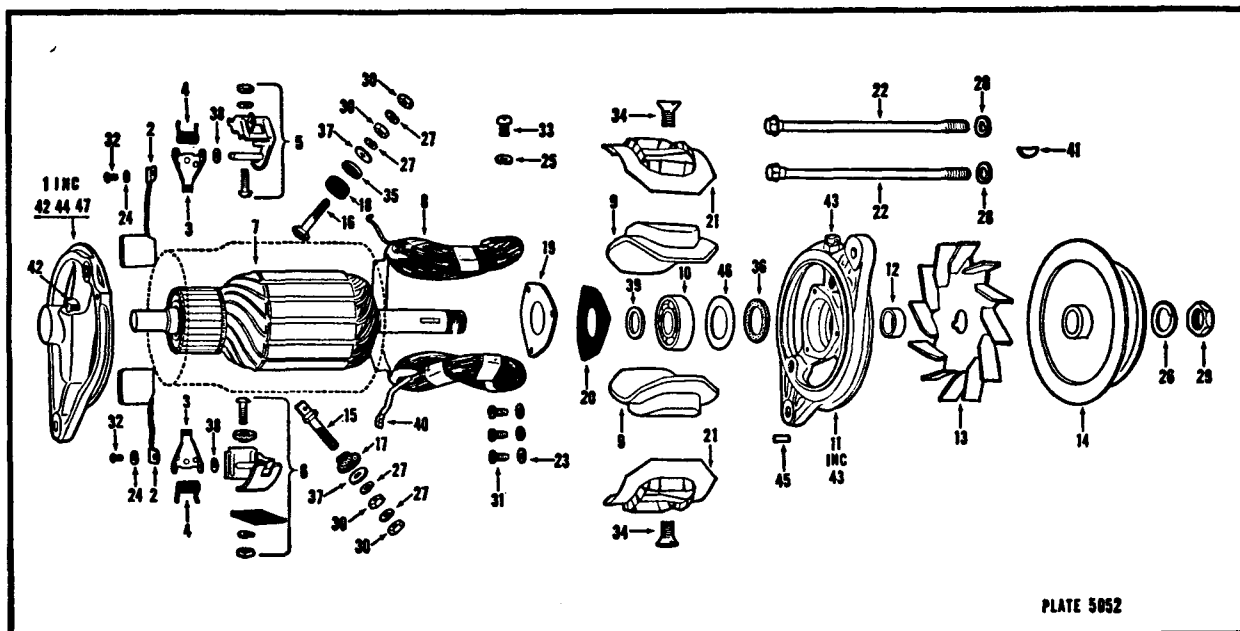

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space — D.E.	Fan	Pulley	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coil	Bolt — Thru
	12	13	14	15	16	17	18	19	20	21	22
1102816	1858603			1923284	1858749	1921362		1911263	1912008	1912073	809763
1102818	"			"	"	"		"	"	"	"
1102819	"		1924689	"	"	"		"	"	"	"
1102820	"			"	"	"		"	"	"	"
1102821	"			"	"	"		"	"	"	"
1102822	"			"	"	"		"	"	"	"
1102824	"			"	"	"		"	"	"	"
1102825	"			"	"	"		"	"	"	"
1102827	"			"	"	"		"	"	"	"
1102830	1863561			"	"	"		820707		"	"
1102831	1858603	1944437	1946594	"	"	"		"	"	"	"
1102832	"	"	1947254	"	"	"		"	"	1914491	"
1102833	817224		"	"	"	"		"	"	"	"
1102835	1858603		"	"	"	"		"	"	1912073	"
1102836	"	1966990	1939845	"	"	"		"	"	"	"
1102837	"	"	"	"	"	"		"	"	"	"
1102838	"			"	"	"		1911263	"	"	"

*Included with 1858749 Stud.

Revised to May 1, 1968

SERVICE PARTS CATALOG

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate		
	Screw—D.E.	1962276	1102816-18-19; 20-1-2-4-5-7; 30-3-5-6
—	Lock Washer—Brush Holder Screw	1914579	All
24	Lock Washer—Brush Lead Screw	1914816	1102816-19; 20-1-2-4-5-7; 30-1-2-3
24	Lock Washer—Brush Lead Screw	456413	1102838
25	Lock Washer—Field Frame Screw	9421423	1102816-19; 20-1-2-4-5-7; 30-1-2-3-5-6-7-8
26	Lock Washer—Shaft Nut—D.E.	1915265	1102816-19; 20-1-2-4-5-7; 33-5-8
27	Lock Washer—Terminal Stud	1914579	1102816-19; 20-1-2-4-5-7; 30-1-2-3-5-6-7
28	Lock Washer—Thru Bolt	9421424	1102816-18-19; 20-1-2-5-7; 30-1-2-3-5-6-7-8
28	Lock Washer—Thru Bolt	1914579	1102824
NUTS			
—	Nut—Brush Holder Screw	121743	All
29	Nut—Shaft—D.E.	1917570	1102818
29	Nut—Shaft—D.E.	1915172	1102816-19; 20-1-2-4-5-7; 31-2-3-5-6-7-8
29	Nut—Shaft—D.E.	1917035	1102830
30	Nut—Terminal	121743	1102816-18-19; 20-1-2-4-5-7; 30-1-2-3-5-6-7
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1102816-18-19; 20-1-2-4-5-7; 30-1-2-3-5-6-7-8
—	Screw—Brush Holder Attaching	455290	All
32	Screw—Brush Lead Attaching	453460	1102816-18-19; 20-1-2-4-5-7; 30-1-2-3-5-6-7
32	Screw—Brush Lead Attaching	454458	1102838
—	Screw—Field Frame Dowel	820369	1102819; 22; 36-7
33	Screw—Field Frame	225577	1102816-18-19; 20-1-2-4-5-7; 30-1-2-3-5-6-7-8
34	Screw—Pole Shoe	1913960	1102816-18-19; 20-1-2-4-5-7; 30-1-2-3-5-6-7-8
WASHERS			
35	Washer—Insul.—Field Terminal Stud	1858753	1102816-18-19; 20-1-2-4-5-7; 30-1-2-3-5-6-7-8
—	Washer—Felt—C.E.	1927447	1102821; 35-8
—	Washer—Felt—C.E.	815042	1102825; 36-7
36	Washer—Felt—D.E.	809961	1102816-18-19; 20-1-2-4-5-7; 31-2-3-5-6-7-8
36	Washer—Felt—D.E.	820706	1102830
—	Washer—Plain—Shaft Nut—D.E.	1934383	1102818; 30
37	Washer—Plain—Terminal Stud	1954452	1102816-18-19; 20-1-2-4-5-7; 30-1-2-3-5-6-7-8
38	Washer—Space—Brush Arm	1857412	1102816-18-19; 20-1-7; 30-1-2-3-6-7
38	Washer—Space—Brush Arm	1914741	1102821-4-5; 35
38	Washer—Space—Inside—C.E.	809945	1102836-7
39	Washer—Space—Inside—D.E.	809945	1102816-18-19; 20-1-2-4-5-7; 31-2-3-5-6-7-8
39	Washer—Space—Inside—D.E.	822644	1102830
—	Washer—Spring—Shaft Nut—D.E.	1941978	1102831-2-6-7
MISCELLANEOUS			
—	BALL BEARING—C.E.	904751	1102816-18; 24-5; 36-7
—	BALL BEARING—C.E.	907058	1102830
—	BALL BEARING—C.E.	904751	1102827
—	BUSHING—C.E.	812823	1102819
—	BUSHING—C.E.	1927446	1102838
40	CLIP—Terminal—To Brush	200382	1102816-18-19; 20-1-2-4-5-7; 30-1-2-3-5-6-7-8
40	CLIP—Terminal—To Brush	200362	1102836
—	COLLAR—Shaft—C.E.	1874339	1102836-7
—	CUP—Felt Washer Retainer—C.E.	1927448	1102821; 35-8
41	KEY—Woodruff—D.E.	124545	1102816-18-19; 20-1-2-7; 30-1-2-3-5-6-7-8
42	OILER—C.E.	125609	1102816-18; 25-7; 31-2-3-6-7
42	OILER—C.E.	113702	1102819; 20-21-2-4; 31-2-5-8

*If Plug dia. is 1 $\frac{1}{8}$ use 1948326.


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
43	OILER—D.E.....	125609	All
44	PIN—Dowel—C.E.....	809062	1102816-18-19; 20-1-2-4-5-7; 30-1-2-3-5-6-7-8
45	PIN—Dowel—D.E.....	809593	1102816-18-19; 20-1-2-4-5-7; 30-1-2-3-5-6-7-8
—	PLATE—Felt Retainer—C.E.....	809960	1102825; 36-7
46	PLATE—Felt Retainer—D.E.....	819104	1102816-18-19; 20-1-2-4-5-7; 33-5-6-7-8
46	PLATE—Felt Retainer—D.E.....	820709	1102830
—	PLUG—C.E.....	1911097	1102833
—	*PLUG—Expansion—C.E.....	1939884	1102827; 30
—	PLUG—Expansion—C.E.....	1948326	1102836-7
—	RETAINER—Felt—C.E.....	1949195	1102836-7
—	RING—Bearing Clamp.....	1929959	1102816-18; 24-5-7; 30
—	WICK—C.E.....	823551	1102827; 35-8
47	WICK—Oil—C.E.....	1947350	1102819; 20-1-2-4; 31-2; 33-5
—	WICK—Oil—D.E.....	823551	1102821-5; 33

Revised to March 15, 1971

 SERVICE PARTS CATALOG

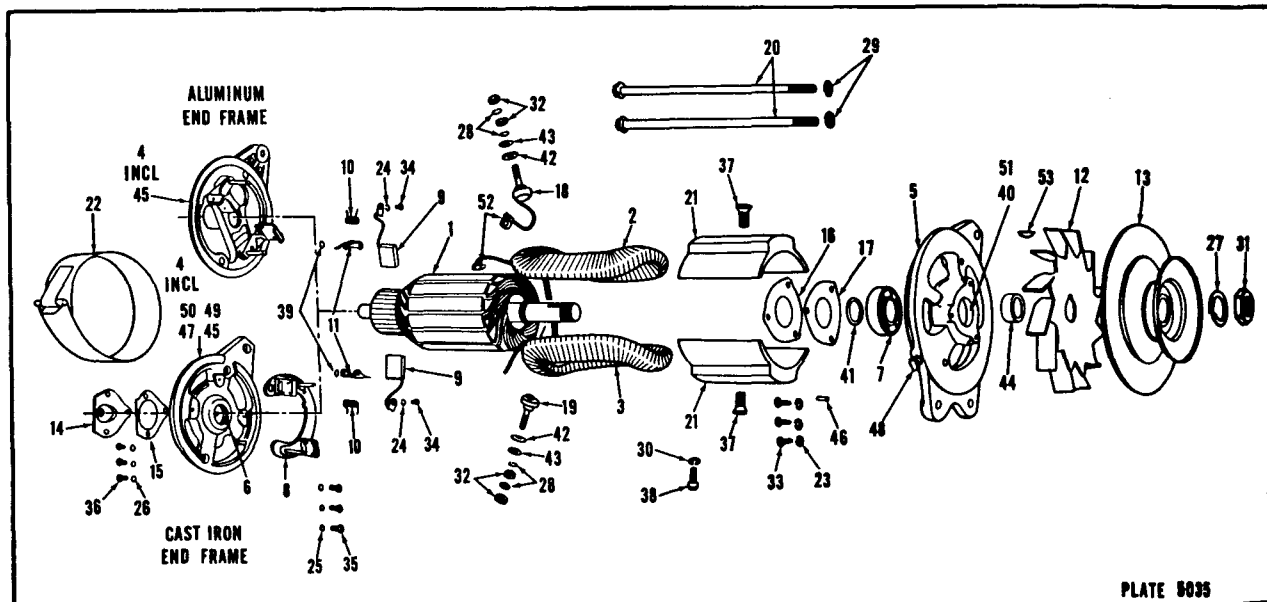

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil — R.H.	Field Coil — L.H.	Frame — C.E.	Frame — D.E.	Bushing or Ball Bearing — C.E.	Ball Bearing — D.E.	Plate — Brush	Brush	Spring	Arm — Brush
	1	2	3	4	5	6	7	8	9	10	11
1102950.....	1907650	□1922701		1871757	1953882	812823	954378	1908999	1906984	1916324	1904365
1102951.....	1841982	1869314	1969313	1878689	"	"	"	1908550	"	1903871	"
1102952.....	"	"	"	"	"	"	"	"	"	"	"
1102953.....	1879291	1879293	1879294	1913990	"	"	"	*	1878249	1916542	1944373
1102954.....	1841982	"	"	"	"	"	"	*	"	"	"
1102955.....	"	"	"	"	"	"	"	*	"	"	"
1102956.....	1907650	1880525	1880526	1871757	"	"	"	1908999	1906984	1916324	1904365
1102957.....	1913673	"	"	1913822	1845821	908503	954521	1908550	"	1903871	"
1102958.....	1882325	1879293	1879294	1881291	"	"	"	1908550	"	1903871	"
1102959.....	1841982	"	"	1878689	1887768	812823	954378	1878177	1878249	1916542	1944373
1102960.....	1907650	1880525	1880526	1883479	1868286	"	"	1908999	1906984	1916324	1904365
1102961.....	1884164	1879293	1879294	1881291	825403	908503	"	1878177	1878249	1916542	1944373
1102962.....	1841982	"	"	1878689	1882433	812823	"	"	"	"	"
1102963.....	1907650	1880525	1880526	1871757	1953882	"	"	1904663	1904849	1905034	1904365
1102965.....	1905221	1905215	1905216	1957635	"	"	"	1905220	1904828	1905219	1944373
1102967.....	1879291	1879293	1879294	1878689	1905711	"	"	1878177	1878249	1916542	1944373
1102968.....	1913580	"	"	1907596	1874338	908503	"	1908550	1906984	1903871	1904365
1102970.....	1907650	1880525	1880526	1871757	1953882	812823	"	1907654	"	1916324	1904365
1102971.....	1907803	1905215	1905216	1957635	"	"	"	1908550	"	1903871	"
1102972.....	1907650	1880525	1880526	1871757	"	"	"	1909591	"	1916324	"
1102978.....	1913580	"	"	1913692	1874338	"	"	1909563	"	1903871	"
1102974.....	1911738	1879293	1879294	1911736	1910404	954143	"	"	1878249	1916542	1944373
1102975.....	1921235	"	"	1957635	"	812823	"	1878177	"	"	"
1102976.....	1913666	□1922701		"	"	"	"	"	"	"	"
1102977.....	1921235	"	"	"	"	"	"	"	"	"	"
1102978.....	1913580	"	"	1913692	1874338	904756	954298	"	"	"	"
1102979.....	1913666	"	"	1878689	1882433	812823	954378	"	"	"	"
1102980.....	1907650	□1913647		1871757	1953882	"	"	1907654	1906984	1916324	1904365

□Set of 2 coils.

*Use 1878177 Brush Plate with cast iron End Frame only.

Delco-Remy **SERVICE PARTS CATALOG**

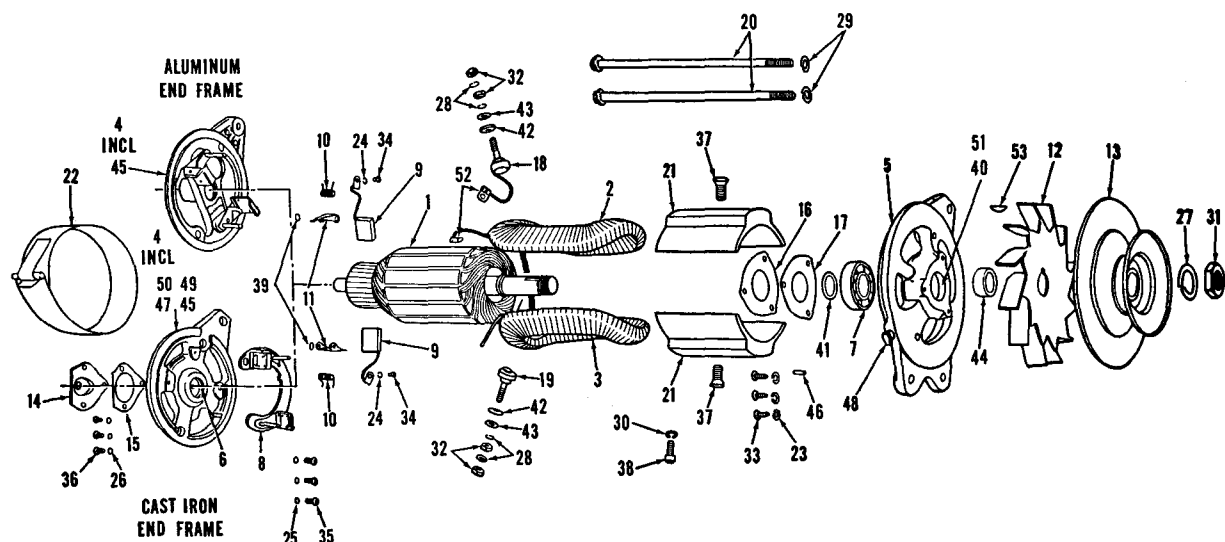 


PLATE 5035

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Fan — C.E. or D.E.	Pulley	Plate — Cover — C.E.	Gasket — Cover Plate	Plate — Bearing Retainer	Gasket — Retainer Plate	Terminal — Stud & Lead	Terminal — Stud Only	Bolt — Thru	Shoe — Pole	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1102950.....			1914222	817220	1911263	1912008		1858749	809763	1939902	816340
1102951.....	1858604	1873935	"	"	"	"	*1858754	"	"	816323	"
1102952.....	1866400	1873935	"	"	"	"	"	"	"	"	"
1102953.....			"	"	"	"	"	"	"	1877894	"
1102954.....	1866400	1879407	"	"	"	"	"	"	"	"	"
1102955.....			"	"	"	"	"	"	"	"	"
1102956.....			"	"	"	"	"	"	"	"	"
1102957.....	1881297				820707	820708	"	"	1886685	"	"
1102958.....	1866400				"	"	"	"	"	"	"
1102959.....	"	1877888	1914222	817220	1911263	1912008	"	"	809763	"	"
1102960.....			"	"	"	"	"	"	"	"	"
1102961.....	1866400				"	"	"	"	"	"	"
1102962.....			1914222	817220	"	"	"	"	812291	"	"
1102963.....			"	"	"	"	"	"	809763	"	"
1102965.....			"	"	"	"	1858749	"	"	"	1915168
1102967.....			"	"	"	"	*1858754	"	"	"	816340
1102968.....	1866400				"	"	"	"	"	"	"
1102970.....			1914222	817220	1910396	"	1858749	"	1886685	"	"
1102971.....			"	"	"	"	"	"	809763	"	"
1102972.....			"	"	"	"	"	"	"	"	"
1102973.....			"	"	"	"	"	"	"	"	"
1102974.....					1911263	"	*1858754	"	"	"	"
1102975.....			1914222	817220	"	"	"	"	"	"	"
1102976.....			"	"	"	"	"	"	"	1939902	"
1102977.....			"	"	"	"	"	"	"	"	"
1102978.....	1866400				"	"	"	"	1886685	"	"
1102979.....			1914222	817220	"	"	"	"	809763	"	"
1102980.....			"	"	1911263	"	1858749	"	"	"	"

*Terminal Stud only.

Revised to March 15, 1971

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate—D.E.	1962276	All
24	Lock Washer—Brush Lead Screw	1914816	All
25	Lock Washer—Brush Plate Screw	453844	1102950-1-2-3-4-5-6-7-8-9; 60-1-2-3-5-7-8; 70-1-3-5-6-7-8-9; 80
26	Lock Washer—End Cover Plate Screw—C.E.	453844	1102950-1-2-3-4-5-6-9; 60-2-3-5-7; 70-1-2-3-5-6-7-9; 80
....	Lock Washer—Shaft Nut—C.E.	1915265	1102957-8; 61; 74
....	Lock Washer—Shaft Nut—C.E.	1913743	1102978
....	Lock Washer—Shaft Nut—D.E.	1915265	1102950-1-2-4-5-6-9; 60-2-3-5-8; 70-1-2-3-4-5-6-7-9; 80
28	Lock Washer—Terminal Stud	1914579	All
29	Lock Washer—Thru Bolt	9421424	1102950-1-2-3-4-5-6-7-8-9; 60-1-2-3-5-7-8; 71-2-3-4-5-6-7-8-9; 80
29	Lock Washer—Thru Bolt	1914816	1102970
30	Lock Washer—Field Frame Screw	9421423	1102950-1-2-3-4-5-6-7-8-9; 60-1-2-7-8; 72-3-4-5-6-7-8-9; 80
30	Lock Washer—Field Frame Screw	1902782	1102965
NUTS			
....	Nut—Shaft—C.E.	1915172	1102957-8; 61; 74
31	Nut—Shaft—D.E.	1917570	1102953-7-8; 67
31	Nut—Shaft—D.E.	1915172	1102950-1-2-4-5-6-9; 60-2-3-5-8; 70-1-2-3-4-5-6-7-8-9; 80
32	Nut—Terminal Stud	121743	1102950-1-2-3-4-5-6-7-8-9; 60-1-2-7-8; 74-5-6-7-8-9
32	Nut—Terminal Stud	115596	1102963-5-8; 70-1-2-3; 80
SCREWS			
33	Screw—Ball Bearing Retainer Plate—D.E.	1914580	All
33	Screw—Ball Bearing Retainer Plate—D.E.	5017850	1102958
34	Screw—Brush Lead	453460	1102950-1-2-3-4-5-6-7-8-9; 60-1-2-7-8; 74-5-6-7-8-9
34	Screw—Brush Lead	454329	1102963-5; 70-1-2-3; 80
35	Screw—Brush Plate Attaching	454408	1102950-1-2-3-4-5-6-7-8-9; 60-1-2-3-5-7-8; 70-1-2-3-5-6-7-8-9; 80
36	Screw—End Cover Plate—C.E.	453418	1102953-4
36	Screw—End Cover Plate—C.E.	454408	1102950-1-2-5-6-9; 60-2-3-5-7-8; 70-1-2-5-6-7-9; 80
37	Screw—Pole Shoe	1913960	All
38	Screw—Field Frame	132243	1102950-1-2-3-4-5-6-7-8-9; 60-1-2-5-7-8; 72-3-4-5-6-7-8; 80
38	Screw—Field Frame (Hex. hd.)	453418	1102979
WASHERS			
39	Washer—Brush Arm Space	1857412	1102950-1-2-3-4-7-8-9; 60-1-2-7-8; 74-5-6-7-8-9
39	Washer—Brush Arm Space	1904368	1102963-5; 70-1-2-3; 80
....	Washer—Felt—C.E.	37077	1102978
40	Washer—Felt—D.E.	809961	1102950-1-2-3-4-5-6-9; 60-1-2-3-5-7-8; 70-1-2-3-4-5-6-7-8-9; 80
40	Washer—Felt—D.E.	820706	1102957-8
....	Washer—Oil Throwing—D.E.	816348	1102961
....	Washer—Shaft Nut—D.E.	1926782	1102957-8
....	Washer—Shaft Nut—D.E.	1934383	1102953; 67
....	Washer—Space—Inside—C.E.	809945	1102974
41	Washer—Space—Inside—D.E.	809945	1102950-1-2-3-4-5-6-9; 60-1-2-3-5-7-8; 70-1-2-3-4-5-6-7-8-9; 80
41	Washer—Space—Inside—D.E.	822644	1102957-8
42	Washer—Terminal Stud—Insulated	1858753	1102950-1-2-3-4-5-6-7-8-9; 60-1-2-7-8; 71-2-3-4-5-6-7-8-9; 80
42	Washer—Terminal Stud—Insulated	1902746	11029635; 70
43	Washer—Terminal Stud—Plain	826319	All

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS		
----	BAFFLE—Oil—D.E.	820547	1102957-8
----	BUSHING—Terminal Stud Insulation	*	All
----	CLAMP—Wiring Harness	1860459	1102960
----	COLLAR—Space—C.E.—Between Fan & Frame	1913688	1102978
----	COLLAR—Space—C.E.—Between Fan & Nut	1913689	1102978
----	COLLAR—Space—Inside—C.E.	811681	1102957-8; 61-8
----	COLLAR—Space—Inside—C.E.	1913316	1102978
----	COLLAR—Space—Outside—C.E.	1858603	1102957-8; 61-8; 70
44	COLLAR—Space—Outside—D.E.	1858603	1102950-1-2-3-4-5-6-9; 60-2-3-5-7; 71-2-3-4-5-6-7-9; 80
44	COLLAR—Space—Outside—D.E.	816349	1102961
44	COLLAR—Space—Outside—D.E.	1874339	1102968; 78
44	COLLAR—Oil Throwing—D.E.	1854891	1102957
44	COLLAR—Oil Throwing—D.E.	1845822	1102958
----	COUPLING—D.E.	1839478	1102968; 78
----	CUP—Felt Retainer—C.E.	37078	1102978
45	Dowel PIN—C.E.	809062	All
46	Dowel PIN—D.E.	809593	All
----	INSULATOR—Field Coil	1912073	1102950; 76-7-8-9; 80
47	OILER—C.E.	113702	1102950-1-2-3-4-5-6-9; 62-3-5-7; 70-1-2-3-5-6-7-9; 80
47	OILER—C.E.	125609	1102957-8; 61-8
47	OILER—C.E.	815641	1102960
48	OILER—D.E.	125609	1102950-1-2-3-4-5-6-9; 62-3-5-7-8; 70-1-2-3-4-5-6-7-9; 80
48	OILER—D.E.	113702	1102957-8-61
48	OILER—D.E.	1883503	1102960
49	Oil WICK—C.E.	1947350	1102950-1-2-3-4-5-6-9; 60-2-3-5-7; 70-1-2-3-4-5-6-7-9; 80
50	Oil Hole PLUG—C.E.	1911097	1102950-1-2-3-4-5-6-9; 60-2-3-5-7; 70-1-2-3-4-5-6-7-9; 80
----	PIN—Coupling—D.E.	820711	1102968; 78
----	PLATE—Fan Baffle	1869265	1102957-8; 61-8
----	PLATE—Fan Baffle	1877887	1102959; 78
51	PLATE—Felt Retainer—D.E.	819104	1102950-1-2-3-4-5-6-9; 60-2-3-5-7-8; 70-1-2-3-4-5-6-7-8-9; 80
51	PLATE—Felt Retainer—D.E.	820709	1102957-8
51	PLATE—Felt Retainer—D.E.	809960	1102961
----	SLEEVE—Shaft—D.E.	816350	1102961
52	Terminal CLIP—To Brush	200182	All
----	Woodruff KEY—C.E.	124545	1102974
----	Woodruff KEY—C.E.	124543	1102978
53	Woodruff KEY—D.E.	124545	1102950-1-2-3-4-5-6-9; 60-2-3-5-7; 70-1-2-3-4-5-6-7-9; 80
53	Woodruff KEY—D.E.	124548	1102957-8
53	Woodruff KEY—D.E.	124546	1102968; 78

*Included with 1858749 Stud.


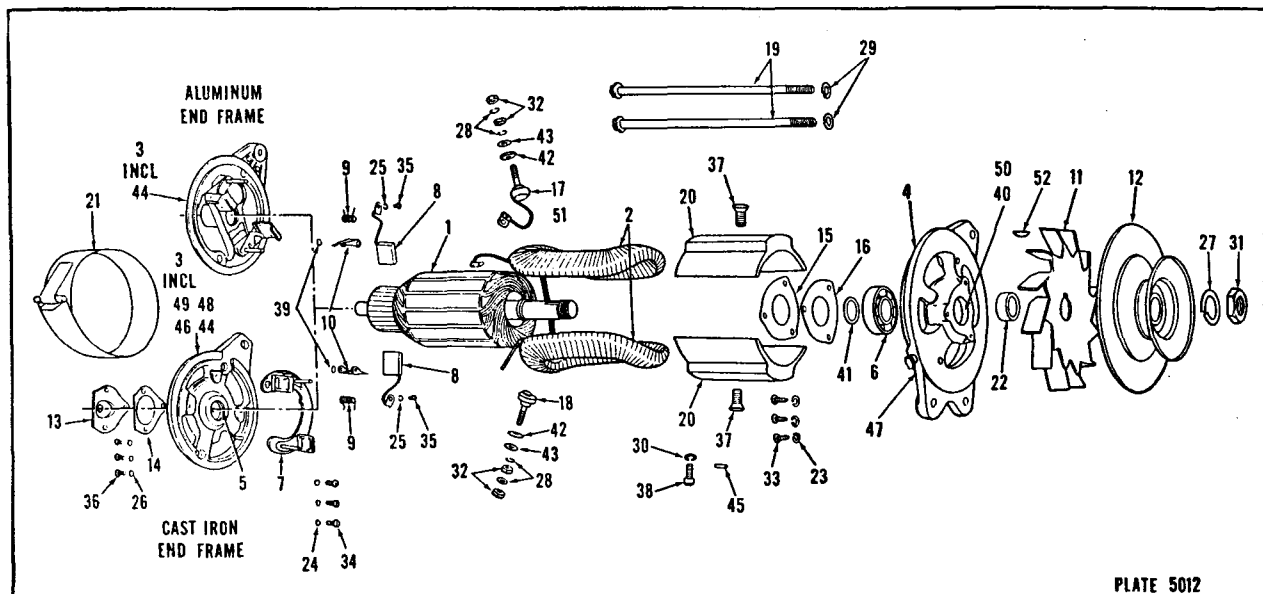 


PLATE 5012

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil Set	Frame — C.E.	Frame — D.E.	Bushing or Bearing — C.E.	Ball Bearing — D.E.	Plate — Brush	Brush	Spring — Brush	Arm — Brush	Fan — C.E. or D.E.
	1	2	3	4	5	6	7	8	9	10	11
1102981.....	1913666	1913663	1957635	1953882	812823	954378	1913754	1878249	1916542	1944373	
1102982.....	1921035	1913647	1903863	"	"	"	1909591	1906984	1903871	1904365	
1102983.....	1913666	1913663	1957635	"	"	"	1909563	"	"	"	
1102984.....	1913673	1913670	1913822	1859293	904756	954139	1908999	1866148	1908829	1904365	1866400
1102985.....	1913652	1922701	1957635	1910404	812823	954378	1878177	1878249	1916542	1944373	
1102987.....	1913666	"	1878689	1882433	"	"	"	"	"	"	
1102988.....	1907650	1913670	1886133	"	"	"	1908999	1866148	1908829	1904365	
1102996.....	1913666	1922701	1957635	1881874	"	"	1878177	1878249	1916542	1944373	1866400
1102997.....	1907650	"	1886133	1882433	"	"	1908999	1866148	1908829	1904365	

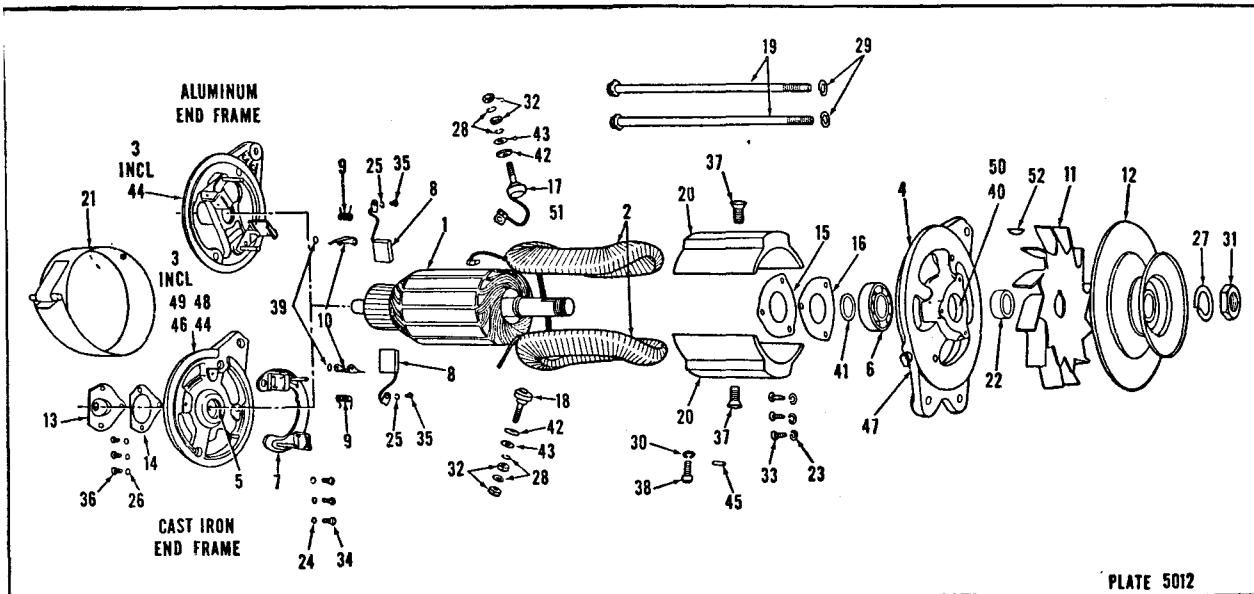 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Pulley	Plate — C.E. Cover	Gasket — C.E. Cover Plate	Plate — Bearing Retainer — D.E.	Gasket — Retainer Plate — D.E.	Terminal — Stud and Lead	Terminal — Stud Only	Thru Bolt	Pole Shoe	Cover Band	Collar — Outside — D.E.
	12	13	14	15	16	17	18	19	20	21	22
1102981.....		1914222	817220	1911263	1912008	*1858749	1858749	809763	1939902	816340	1858603
1102982.....		"	"	"	"	"	"	"	"	"	"
1102983.....		"	"	"	"	"	"	"	"	"	"
1102984.....				820707	820708		"	1886685	"	"	1854891
1102985.....		1914222	817220	1911263	1912008		"	809763	"	"	1858603
1102987.....		"	"	"	"		"	"	"	"	"
1102988.....		"	"	"	"		"	"	"	"	"
1102996.....	1915269	"	"	"	"		"	"	"	"	"
1102997.....		"	"	"	"		"	"	"	"	"

X Terminal Stud Only

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	1962276	1102981-2-3-4-5-7-8; 96-7
24	Lock Washer—Brush Plate Attaching Screw	4538844	1102981-2-3-4-5-7-8; 96-7
25	Lock Washer—Brush Lead Attaching Screw	1914816	1102981-2-3-4-5-7-8; 96-7
26	Lock Washer—End Cover Plate Screw—C.E.	453844	1102981-2-3-5-7-8; 96-7
27	Lock Washer—Shaft Nut—C.E.	1913743	1102984
27	Lock Washer—Shaft Nut—D.E.	1915265	1102981-2-3-7-8; 96-7
28	Lock Washer—Terminal Stud	1914579	1102981-2-3-4-5-7-8; 96-7
29	Lock Washer—Thru Bolt	9421424	1102981-2-3-4-5-7-8; 96-7
30	Lock Washer—Top of Field Frame Screw	9421423	1102981-2-3-4-5-7-8; 96-7
NUTS			
31	Nut—Shaft—C.E.	1915172	1102984
31	Nut—Shaft—D.E.	1915172	1102981-2-3-7-8; 96-7
31	Nut—Shaft—D.E.	1917570	1102984-5
32	Nut—Terminal Stud	121743	1102984-5-7-8; 96-7
32	Nut—Terminal Stud	115596	1102981-2-3
SCREWS			
33	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1102981-2-3-4-5-7-8; 96-7
34	Screw—Brush Plate Attaching	454408	1102981-2-3-4-5-7-8; 96-7
35	Screw—Brush Lead Attaching	453460	1102984-5-7-8; 96-7
35	Screw—Brush Lead Attaching	454329	1102981-2-3
36	Screw—End Cover Plate—C.E.	454408	1102981-2-3-5-7-8; 96-7
37	Screw—Pole Shoe	1913960	1102981-2-3-4-5-7-8; 96-7
38	Screw—Top of Field Frame	132243	1102981-2-3-4-5-7-8; 96-7
WASHERS			
39	Washer—Brush Arm Space	1857412	1102984-5-7-8; 96-7
39	Washer—Brush Arm Space	1904368	1102981-2-3
40	Washer—Felt—C.E.	37077	1102984
40	Washer—Felt—D.E.	809961	1102981-2-3-5-7-8; 96-7
40	Washer—Felt—D.E.	820706	1102984
41	Washer—Shaft Nut—Plain—D.E.	1934383	1102985
41	Washer—Shaft Nut—Plain—D.E.	1926782	1102984
41	Washer—Space—Inside—D.E.	809945	1102981-2-3-5-7-8; 96-7
41	Washer—Space—Inside—D.E.	822644	1102984
42	Washer—Terminal Stud—Insulated	1858753	1102981-2-3-4-5-7-8; 96-7
43	Washer—Terminal Stud—Plain	826319	1102984-5-7-8; 96-7
43	Washer—Terminal Stud—Plain	1954452	1102981-2-3
MISCELLANEOUS			
44	BAFFLE—Oil—D.E.	820547	1102984
44	BUSHING—Insulation—Terminal Stud	*	1102981-2-3-4-5-7-8; 96-7
44	COLLAR—Space—Between Fan & Frame	1913688	1102984
44	COLLAR—Space—Between Fan & Nut	1913689	1102984
44	COLLAR—Space—Inside—C.E.	1913316	1102984
44	CUP—Felt Retainer—C.E.	37078	1102984
44	Dowel PIN—C.E.	809062	All
45	Dowel PIN—D.E.	809593	All
45	INSULATION—Between Field Coil & Pole Shoe	1912073	1102981-2-3-4-5-7-8; 96-7
46	OILER—C.E.	113702	1102981-2-3-5-7-8; 96-7
47	OILER—D.E.	125609	1102981-2-3-5-7-8; 96-7
48	Oil WICK—C.E.	1947350	1102981-2-3-5-7-8; 96-7
49	Oil Hole PLUG—C.E.	1911097	1102981-2-3-5-7-8; 96-7
49	PLATE—Fan Baffle	1877887	1102984
50	PLATE—Felt Retainer—D.E.	819104	1102981-2-3-5-7-8; 96-7
50	PLATE—Felt Retainer—D.E.	820709	1102984
51	Terminal CLIP—To Brush	200182	1102981-2-3-4-5-7-8; 96-7
51	Woodruff KEY—C.E.	124543	1102984
52	Woodruff KEY—D.E.	124545	1102981-2-3-5-7-8; 96-7
52	Woodruff KEY—D.E.	124548	1102984

Included with 1858749 Stud