 


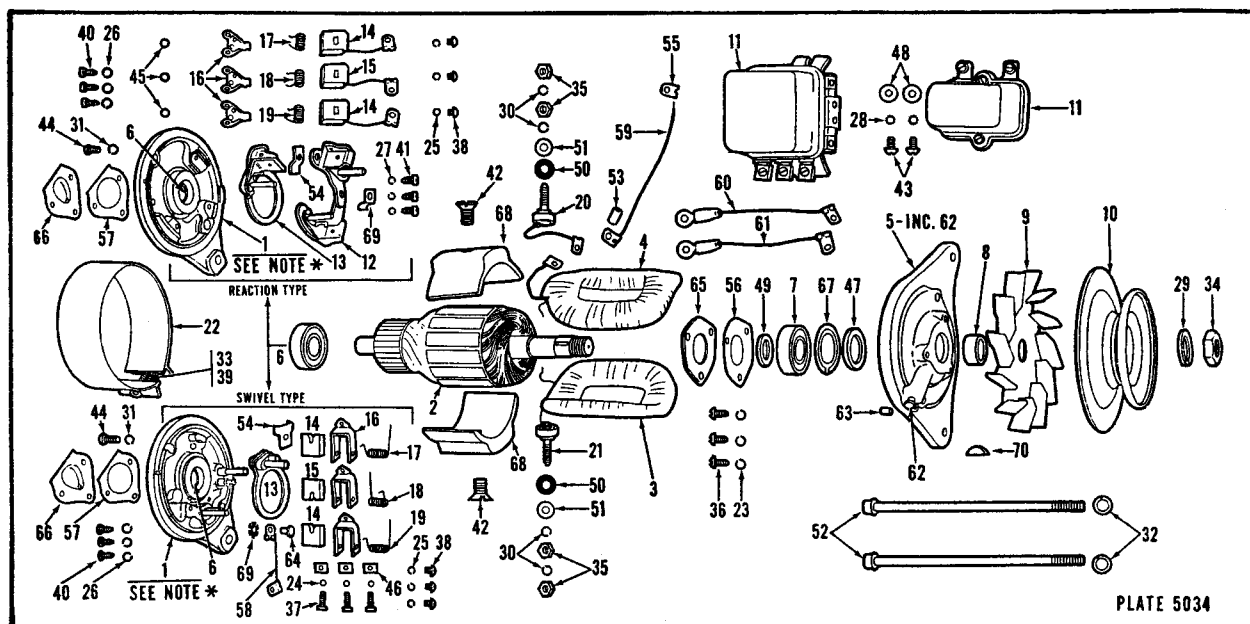

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.


Model No.	* Frame — C.E.	Armature	Coil Field — L.H.	Coil Field — R.H.	Frame — D.E.	Bushing or Ball Bearing — C.E.	Ball Bearing — D.E.	Collar — Outside D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1103000.....	1957635	1857866	*1922701		1881874	813823	954378	1858603			
1103001.....	1849441	1880395	*1902107		822643	908503	954521	1839007			1867781
1103004.....	1853830	1878415	*1923446		1838678	812823	954378	817224			
1103008.....	1886919	1930576	*1922226		1886920	"	"	"			
1103010.....	1853830	1878273	"		1874338	"	"	1874339			^A 1118797
1103012.....	1878689	1933667	*1933670		1882433	"	"	1858603			
1103013.....	1886133	1933661	*1933615		"	812823	"	"			
1103016.....	1941998	1942031	*1930886		1953882	904751	"	"			
.....											
.....											
.....											
.....											

*C.E. Frame includes (where necessary): Bushing, Oiler, Wick, Oil Hole Plug, Dowel Pin and Brush Pins.

*Field Coil Set (2 coils).

^AFor parts see Regulator—Group 6-F.

 Delco-Remy **SERVICE PARTS CATALOG**

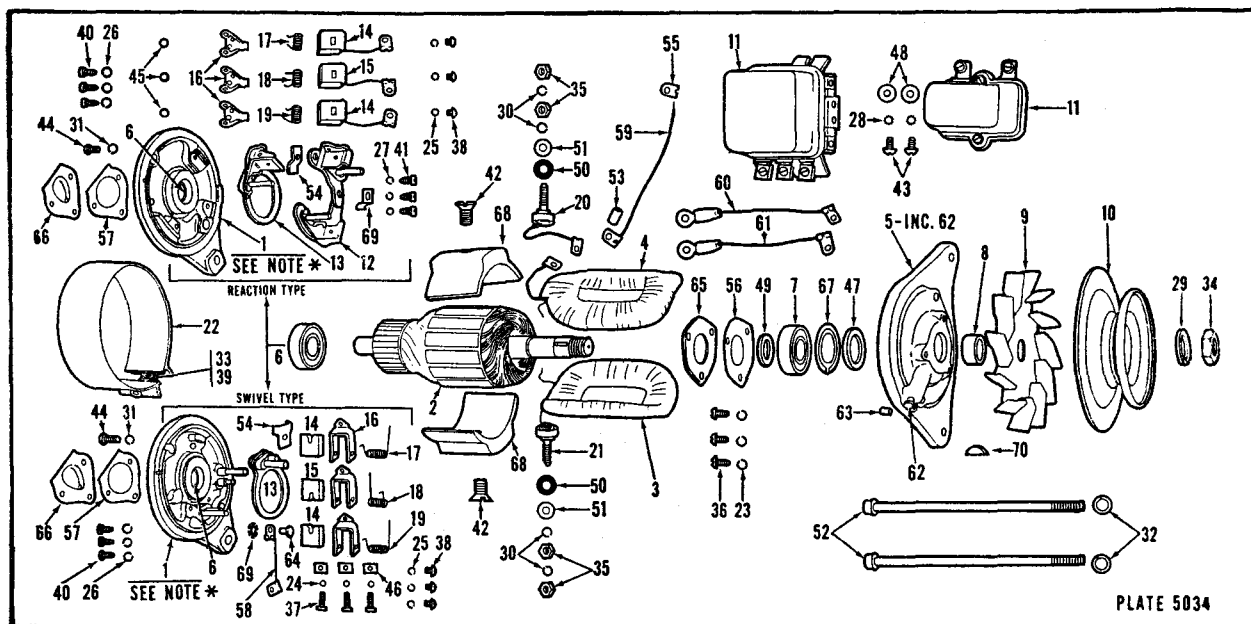

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Brush Plate — Main	Brush Plate — 3rd	Brush — Main	Brush — 3rd	Arm or Holder — Brush	Spring — R.H. — Main	Spring — 3rd	Spring — L.H. — Main	Terminal Stud and Lead	Terminal Stud Only	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1103000.....	1878177		1878249		1944373	1916542		1916542		1858749	816340
1103001.....		809698	○	○	809642	809658	809644	809644			1861502
1103004.....	1908550	1850763	1906984	1906940	1850759	1903871	1946798	1903871	1858754	1858749	1872638
1103008.....	"	"	"	"	"	"	"	"	"	"	"
1103010.....	"	"	"	"	"	"	"	"	"	"	"
1103012.....	1909563		"		1907652	1903871		1903871	1858749	1924903	816340
1103013.....	1909591		1906984		"	1908829		1908829	"	1858749	"
1103016.....			1932506		1944373	1916324		1916324		1858749	

°For complete Brush Set order Part No. 1880998.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	1962276	1103000-1-4-8-10-12-13-16
24	Lock Washer—Brush Attaching Screw	456413	1103001
.....	Lock Washer—Brush Ground Lead Screw	453844	1103001
25	Lock Washer—Brush Lead Attaching Screw	1914816	1103000-1-4-8-10-12-13-16
26	Lock Washer—End Cover Plate Screw—C.E.	453435	1103001
26	Lock Washer—End Cover Plate Screw—C.E.	453844	1103000-4-8-10-12-13
27	Lock Washer—Main Brush Plate Screw	453844	1103000-4-8-10-12-13
28	Lock Washer—Relay Attaching Screw	453844	1103001
28	Lock Washer—Regulator Attaching Screw	138479	1103010
.....	Lock Washer—Shaft Nut—C.E.	9421426	1103001
29	Lock Washer—Shaft Nut—D.E.	1915265	1103000-4-8-12-13-16
30	Lock Washer—Terminal Stud	1914579	1103000-4-8-10-12-13-16
.....	Lock Washer—Thermostat Attaching Screw	456413	1103001
.....	Lock Washer—Thermostat Resistance Screw	1914816	1103001
.....	Lock Washer—Thermostat Terminal Screw	1914816	1103001
31	Lock Washer—Third Brush Plate Clamp Screw	453435	1103000-4-8-10
32	Lock Washer—Thru Bolt	9421423	1103000-1-4-8-10-12-13
.....	Lock Washer—Top of Field Frame	9421423	1103000-12-13-16
NUTS			
33	Nut—Cover Band Screw	453433	1103004-8-10
.....	Nut—Shaft—C.E.	122264	1103001
34	Nut—Shaft—D.E.	1914308	1103004
34	Nut—Shaft—D.E.	1915172	1103000-4-8-12-13-16
35	Nut—Terminal	121743	1103000-4-8-10-12-13-16
SCREWS			
36	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1103000-1-4-8-10-12-13-16
37	Screw—Brush Attaching	1862803	1103001
.....	Screw—Brush Ground Lead	453418	1103001
38	Screw—Brush Lead Attaching	453460	1103000-4-8-10-16
38	Screw—Brush Lead Attaching	454329	1103012-13
39	Screw—Cover Band	132930	1103004-8-10
.....	Screw—Distributor Hold Down	1847260	1103001
40	Screw—End Cover Plate—C.E.	1914580	1103001
40	Screw—End Cover Plate—C.E.	454408	1103000-4-8-10-12-13
41	Screw—Main Brush Plate Attaching	454408	1103000-4-8-10-12-13
42	Screw—Pole Shoe	1913960	1103000-1-4-8-10-12-13-16
43	Screw—Relay Attaching	453418	1103001
43	Screw—Regulator Attaching	132900	1103010
.....	Screw—Thermostat Attaching	454329	1103001
.....	Screw—Thermostat Resistance Attaching	141542	1103001
.....	Screw—Thermostat Terminal	453978	1103001
44	Screw—Third Brush Plate Clamp	111118	1103001
44	Screw—Third Brush Plate Clamp	453464	1103004-8-10
.....	Screw—Top of Field Frame	132243	1103000-12-13
.....	Screw—Top of Field Frame	225577	1103016
WASHERS			
45	Washer—Brush Arm Space	1857412	1103000-4-8-10
45	Washer—Brush Arm Space	1904368	1103012
46	Washer—Brush Attaching Screw—Plain	809551	1103012-13-16
.....	Washer—Felt—C.E.	37077	1103001
47	Washer—Felt—D.E.	820706	1103001
47	Washer—Felt—D.E.	809961	1103000-4-8-10-12-13-16
.....	Washer—Felt—Top of Distributor Well	1848687	1103001
.....	Washer—Felt Retainer—Top of Distributor Well	1850617	1103001
.....	Washer—Plain—Distributor Hold Down Screw	813046	1103001
48	Washer—Plain—Regulator Attaching Screw	1856056	1103010
49	Washer—Space—Inside—D.E.	822644	1103001
49	Washer—Space—Inside—D.E.	809945	1103000-4-8-10-12-13-16
50	Washer—Insulation—Terminal Stud	1858753	1103000-4-8-10-12-13-16
51	Washer—Plain—Terminal Stud	1881409	1103000-4-8-10-12-13-16
MISCELLANEOUS			
.....	ARM Assembly—Advance	1841061	1103001
.....	BAFFLE—Oil—D.E.	1838047	1103001
52	BOLT—Thru	809763	1103000-12-13-16


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
52	BOLT—Thru.....	1849780	1103001
52	BOLT—Thru.....	1908680	1103004-8-10
----	Brush HOLDER Package—Insul.....	1925379	1103016
----	BUSHING—Armature Terminal.....	1921362	1103016
53	BUSHING—Insul. Relay Lead.....	812891	1103001
----	BUSHING—Insul. Terminal Stud.....	*	1103000-4-8-10-12-13-16
54	CLAMP—Third Brush Plate.....	820107	1103001
54	CLAMP—Third Brush Plate.....	1850770	1103004-8
----	CLIP—To Brush.....	200362	1103000-1-4-8-10-12-13
55	CLIP—To Relay.....	200188	1103001
----	CLIP—Terminal.....	200346	1103016
----	CLIP—To Thermostat.....	200144	1103001
----	COUPLING—Drive.....	Not D-R	1103001
----	COUPLING—Drive.....	1923470	1103010
----	CUP—Felt Retainer—C.E.....	37078	1103001
----	DISTRIBUTOR.....	†1110508	1103001
56	GASKET—Ball Bearing Retainer Plate—D.E.....	820708	1103001
56	GASKET—Ball Bearing Retainer Plate—D.E.....	1912008	1103000-4-8-10-12-13-16
57	GASKET—End Cover Plate—C.E.....	1850321	1103001
57	GASKET—End Cover Plate—C.E.....	817220	1103000-4-8-10-12-13
----	GEAR—Distributor Drive.....	1862924	1103001
----	INSULATOR—Field Coil.....	1914491	1103004-8-10
----	INSULATOR—Field Coil.....	1912073	1103000-12-13-16
58	LEAD—Brush Ground.....	820315	1103001
59	LEAD—Relay.....	812004	1103001
60	LEAD—"A" Terminal to Regulator.....	1914211	1103010
61	LEAD—"F" Terminal to Regulator.....	1914211	1103010
----	OILER—C.E.....	113702	1103000-1-4-8-10-12-13-16
62	OILER—D.E.....	113702	1103001-4-8
62	OILER—D.E.....	125609	1103000-10-12-13-16
----	PIN—Brush Holder Hinge.....	817313	1103001
----	PIN—Brush Holder Stop.....	817314	1103001
----	PIN (& Insulation)—Brush Holder Hinge.....	812016	1103001
----	PIN (& Insulation)—Brush Holder Stop.....	812015	1103001
----	PIN—Coupling—D.E.....	820711	1103001-10
----	PIN—Dowel—C.E.....	809062	1103000-1-4-8-10-12-13-16
63	PIN—Dowel—D.E.....	809593	1103000-1-4-8-10-12-13-16
64	PIN—Third Brush Plate Tension Spring.....	809614	1103001
65	PLATE—Ball Bearing Retainer—D.E.....	820707	1103001
65	PLATE—Ball Bearing Retainer—D.E.....	1911263	1103000-4-8-10
65	PLATE—Ball Bearing Retainer—D.E.....	1910396	1103012-13
65	PLATE—Ball Bearing Retainer—D.E.....	1934457	1103016
66	PLATE—End Cover—C.E.....	1850320	1103001
66	PLATE—End Cover—C.E.....	1914222	1103000-4-8-10
66	PLATE—End Cover—C.E.....	1914222	1103012-13
67	PLATE—Felt Retainer—D.E.....	820709	1103001
67	PLATE—Felt Retainer—D.E.....	819104	1103000-4-8-10-12-13-16
----	PLUG—Oil Hole—C.E.....	1911097	1103000-4-8-10-12-13
----	PLUG—Pipe—Side of Distributor Well.....	103877	1103001
----	RESISTANCE—Thermostat.....	810922	1103001
68	SHOE—Pole.....	816323	1103001
68	SHOE—Pole.....	1914618	1103004-8-10
68	SHOE—Pole.....	1911961	1103000-12-13-16
----	Slinger—Grease—D.E.....	1947344	1103031
----	SPRING—Distributor Hold Down.....	827234	1103001
69	SPRING—Third Brush Plate Tension.....	809824	1103001
69	SPRING—Third Brush Plate Tension.....	1850771	1103004-8-10
----	Terminal STUD—Armature.....	1923284	1103016
----	Terminal STUD—Return.....	1923284	1103016
----	THERMOSTAT.....	1844693	1103001
----	WICK—Oil—C.E.....	1947350	1103000-4-8-10-12-13
----	WICK—Oil—C.E.....	823551	1103016
----	Woodruff KEY—C.E.....	124542	1103001
70	Woodruff KEY—D.E.....	124545	1103000-4-8-12-13-16
70	Woodruff KEY—D.E.....	124546	1103010

†For parts see Distributor—Group 88.

 *Included with 1858749 Stud.

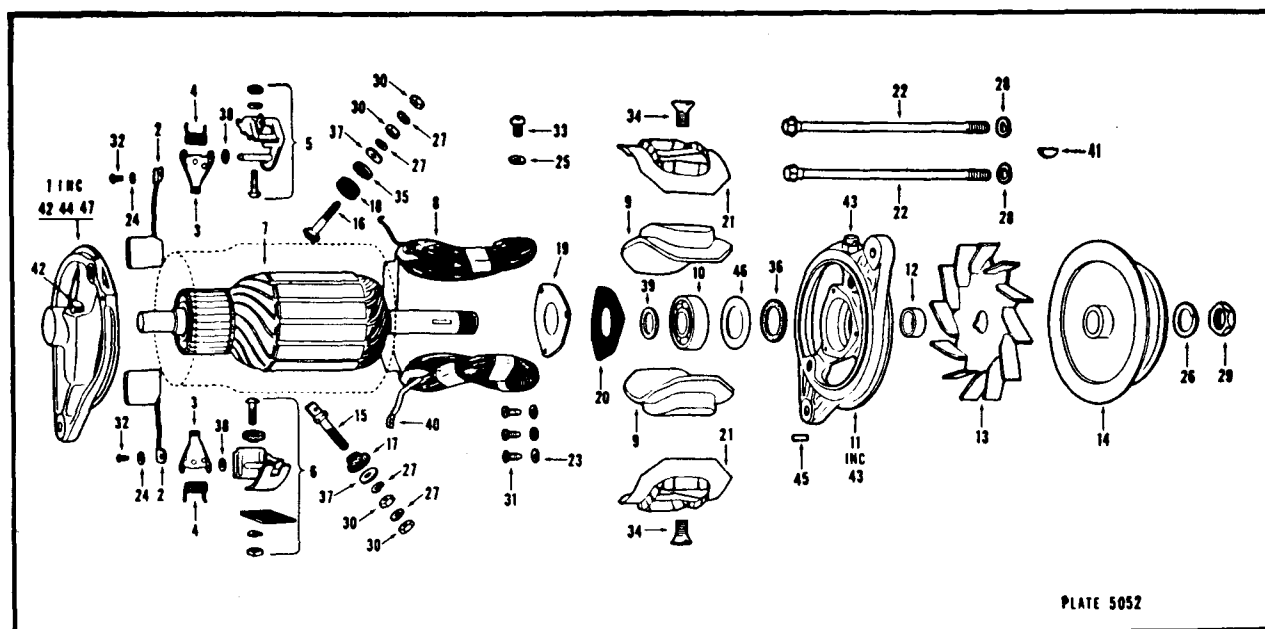


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

[illegible]

Delco-Remy

 SERVICE PARTS CATALOG

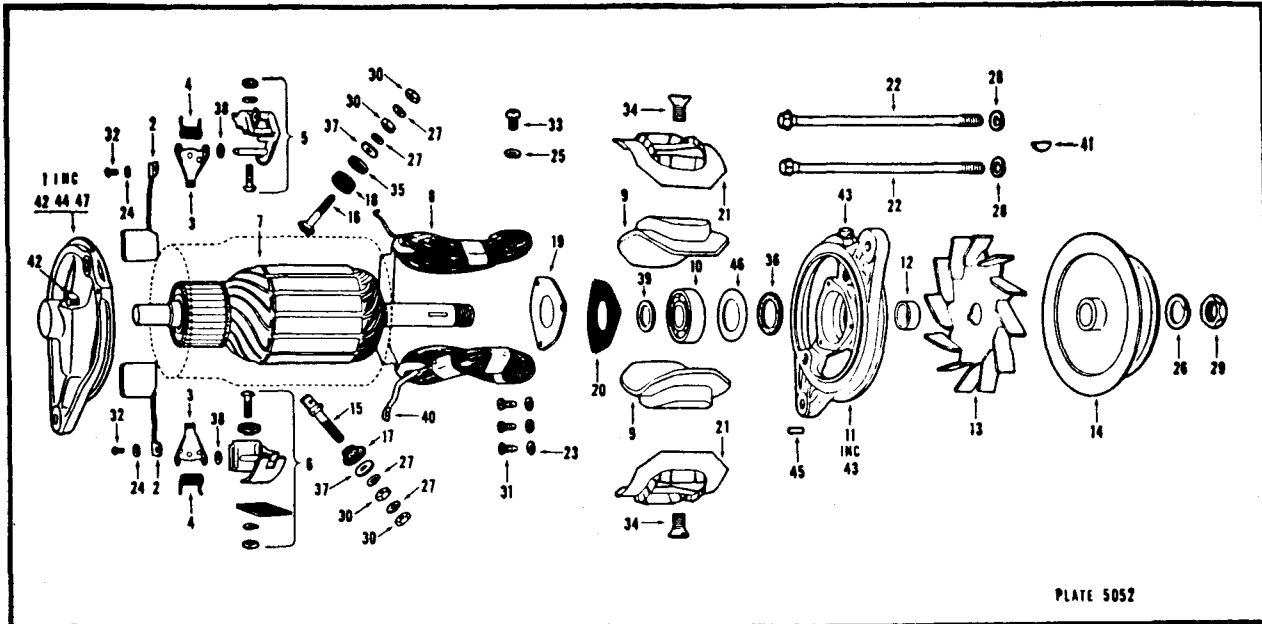

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Collar — Space — D.E.	Fan	Pulley	Stud — "A" Terminal	Stud — "F" Terminal	Bushing — Insul. — "A" Terminal	Bushing — Insul. — "F" Terminal	Plate — Retainer — D.E.	Gasket — Bearing Retainer	Insulator — Field Coil	Bolt — Thru
	12	18	14	15	16	17	18	19	20	21	22
1103009.....	1858603			1923284	1858749	1921362		1911263	1912008	1912073	809763
1103011.....			1933418	"	"	"		"	"	"	"
1103014.....	1858603			"	"	"		"	"	"	"
1103015.....	"			"	"	"		"	"	"	"
1103017.....	"			1923824	1858749	"		1934457	"	"	"
1103018.....	"			"	"	"		"	"	"	"
1103019.....	"			1923284	1858749	"		1911263	"	"	"
1103021.....	"		1949355	"	1858749	"		"	1912008	1914491	1908680
1103023.....	"			"	"	"		"	"	"	"
1103026.....	"	1944437	1949916	"	"	"		"		"	"
1103027.....	"			* " "	1858749	* " "		"	1912008	1912073	809763
1103028.....	"			"	"	"		"	"	"	"
1103029.....	"			"	1858749	"		"	"	1914491	1908680
1103030.....	"	1944437	1949357	"	"	"		"	"	"	"
1103031.....	"			"	1858749	"		"	1912008	1912073	809763
1103032.....	"			"	1858749	"		"	"	"	"
.....											
.....											
.....											
.....											

*A-1 & A-2 Terminals.

▲Included with 1858749 Stud.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate		
	Screw—D.E.	1962276	1103009-11-14-15-17-18-19; 21-3
	Lock Washer—Brush Holder Screw	1914579	All
24	Lock Washer—Brush Lead Screw	456413	1103014-15-19; 27-8-9; 30-1-2
24	Lock Washer—Brush Lead Screw	1914816	1103009-11-17; 21-3
25	Lock Washer—Field Frame Screw	9421423	1103009-11-14-15-17-18-19; 27-8-9; 31-2
26	Lock Washer—Shaft Nut—D.E.	1915265	1103009-11-14-15-17; 23-7-8; 31-2
26	Lock Washer—Shaft Nut—D.E.	1941978	1103018-19; 21-6-9; 30
27	Lock Washer—Terminal Stud	1914579	1103009-11-14-15-17-18-19; 21-3-6-7-8-9; 30-1-2
28	Lock Washer—Thru Bolt	9421424	1103009-11-14-15-18-19; 21-6-7-8-9; 30-1-2
NUTS			
	Nut—Brush Holder Screw	121743	All
29	Nut—Shaft—D.E.	1915172	1103009-11-14-15-17-18-19; 21-3-6-7-8-9; 30-1-2
30	Nut—Terminal	121743	1103009-11-14-15-17-18-19; 21-3-6-7-8-9; 30-1-2
SCREWS			
31	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1103009-11-14-15-17-18-19; 21-3-6-7-8-9; 30-1-2
	Screw—Brush Holder Attaching	455290	All
32	Screw—Brush Lead Attaching	453460	1103009-11-17-18; 21-3-6; 30
32	Screw—Brush Lead Attaching	454458	1103014-15-19; 27-8-9; 31-2
33	Screw—Field Frame	225577	1103009-11-14-15-17-18; 27-8; 30-1-2
34	Screw—Pole Shoe	1913960	1103009-11-14-15-17-18-19; 21-3-6-7-8-9; 30-1-2
WASHERS			
35	Washer—Insul.—Field Terminal Stud	1858753	1103009-11-14-15-17-18-19; 21-3-6-7-8-9; 30-1-2
	Washer—Felt—C.E.	815042	1107028-9; 31-2
	Washer—Felt—C.E.	1927447	1103015; 21
36	Washer—Felt—D.E.	809961	1103009-11-14-15-17-18; 21-3-6-7-8-9; 31-2
37	Washer—Plain—Terminal Stud	826319	1103009-11-14-15-17-18-19; 21-3-6-7-8-9; 30-1-2
	Washer—Space—Ball Bearing—D.E.	1861589	1103019; 30
38	Washer—Space—Brush Arm	1857412	1103009-11
38	Washer—Space—Brush Arm	1904368	1103014-15-17-18-19; 21-3-6-7
39	Washer—Space—Inside—D.E.	809945	1103009-11-14-15-17-18-19; 21-3-6-7-8-9; 30-1-2
MISCELLANEOUS			
	BAFFLE—Fan—D.E.	1877887	1103021
	BALL BEARING	904751	1103014
	BALL BEARING—C.E.	904751	1103017-18; 23-7-8-9; 31-2
	BALL BEARING—C.E.	900529	1103019; 26; 30
	BUSHING—Field Return—Terminal	1921362	1103021
	CLAMP—Bearing—C.E.	1929959	1103014-18-19; 23-6-7-8-9; 30-1-2
40	CLIP—Terminal	200362	1103027-8
40	CLIP—Terminal—To Brush	200382	1103009-11-14-19; 31
40	CLIP—Terminal—To Brush	200346	1103015-17-18; 21-3-6-9; 30
	CUP—Felt Washer—Retainer—C.E.	1927448	1103015; 21
41	KEY—Woodruff—D.E.	124545	1103009-11-14-15-17-18-19; 21-3-6-7-8-9; 30-1-2
42	OILER—C.E.	113702	1103009-11-15-17; 21-3-8; 32
42	OILER—C.E.	1916813	1103014; 27
42	OILER—C.E.	125609	1103018; 29; 31
43	OILER—D.E.	113702	1103028
43	OILER—D.E.	125609	1103009-11-15-17-18; 21-3-9; 31
43	OILER—D.E.	1916813	1103014; 27
44	PIN—Dowel—C.E.	809062	1103009-11-14-15-17-18-19; 21-3-6-7-8-9; 30-1-2
45	PIN—Dowel—D.E.	809593	1103009-11-14-15-17-18-19; 21-3-6-7-8-9; 30-1-2
46	PLATE—Felt Retainer—D.E.	819104	1103009-11-14-15-17-18; 21-3-6-7-8-9; 31-2
	PLATE—Felt Washer Retainer—C.E.	809960	1103028-9; 31

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
—	PLUG—Bearing Well—C.E.....	1948326	1103028-9; 30-1-2
x—	PLUG—Expansion—C.E.....	1950252	1103018-19; 26
—	PLUG—Pipe.....	103885	1103014; 27
—	STUD—Field Return—Terminal.....	1921369	1103021
47	WICK—Oil—C.E.....	1947350	1103009-11-14-15; 21-7
47	WICK—Oil—C.E.....	823551	1103017; 23;31
—	WICK—D.E.....	823551	1103014; 23-7-8-9; 31-2

*If Plug dia. is $1\frac{13}{32}$ " use 1948326.


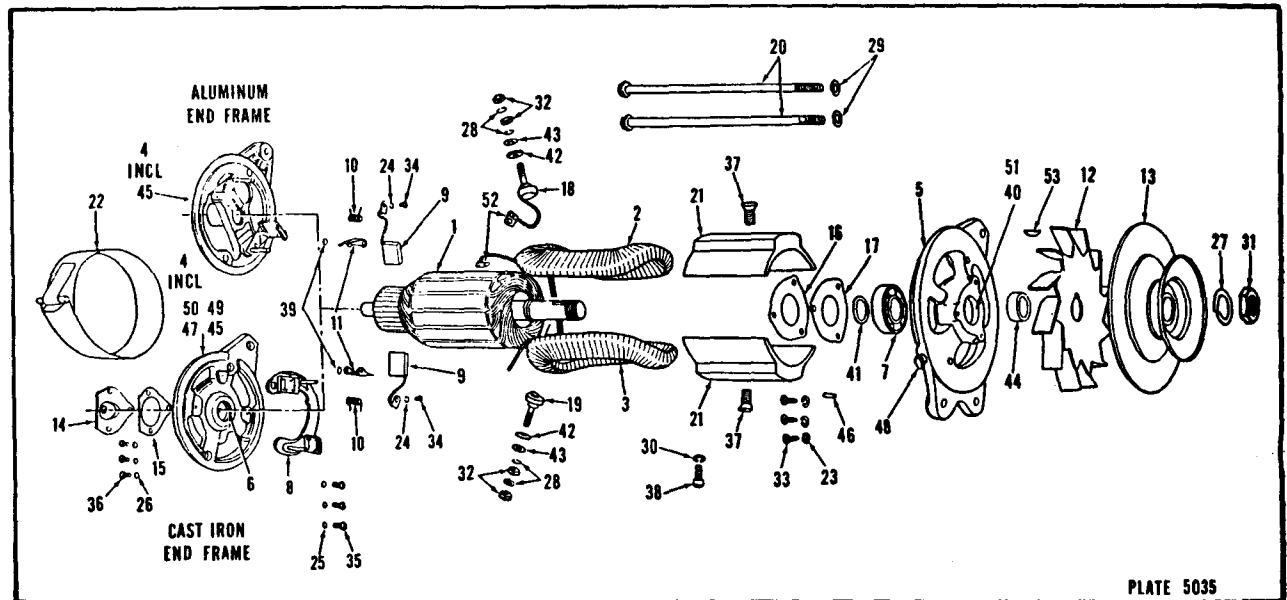 


PLATE 5035

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coll — R.H.	Field Coll — L.H.	Frame — C.E.	Frame — D.E.	Ball Bearing or Bushing — C.E.	Ball Bearing — D.E.	Plate — Brush	Brush	Spring — Brush	Arm — Brush
	1	2	3	4	5	6	7	8	9	10	11
1105001.....	1921621	1918002	1918003	1923025	1954985		954378		1906931	1916542	1944373
1105002.....	1945922	"	"	1947663	"	†908503	"		"	"	"
1105003.....	1923091	"	"	1918006	"	"	"		"	"	"
1105004.....	1919387	1923558	1923559	1931175	1910421	954259	954143		"	"	"
1105007.....	1925556	1918002	1918003	1932094	1954985	908503	954378		"	"	"
1105008.....	"	"	"	"	"	"	"		"	"	"
1105009.....	1945922	"	"	"	"	"	"		"	"	"
1105010.....	1927097	"	"	"	"	"	"		"	"	"
1105011.....	1945922	"	"	"	"	"	"		"	"	"
1105013.....	"	"	"	"	"	"	"		"	"	"
1105014.....	1925556	"	"	"	"	"	"		"	"	"
1105017.....	"	"	"	1928005	1928007	"	"		"	1903870	"
1105018.....	1937213	"	"	1937217	1936333	900529	900529		1932506	"	"
1105019.....	1943701	1943705	1943704	1931175	1930347	904751	"		1906931	1916542	"
1105020.....	1944252	1918002	1918003	1937217	1934553	907058	907056		1932506	1903870	"
1105021.....	1952191	1952188	1952189	1952145	1952192	900529	900529		"	1946798	"
1105052.....	1945105	1945098	1945099	1952232	1945101	"	"		1906931	1908829	"
1105053.....	"	"	"	"	"	"	"		"	"	"
1105054.....	1952240	1952237	1952238	"	"	"	"		"	"	"
1105055.....	"	"	"	"	"	"	"		"	"	"
1105056.....	"	1956001	1956002	1952232	"	"	"		"	"	"
1105057.....	"	1956295	1956296	"	"	"	"		"	"	"
.....											
.....											
.....											
.....											

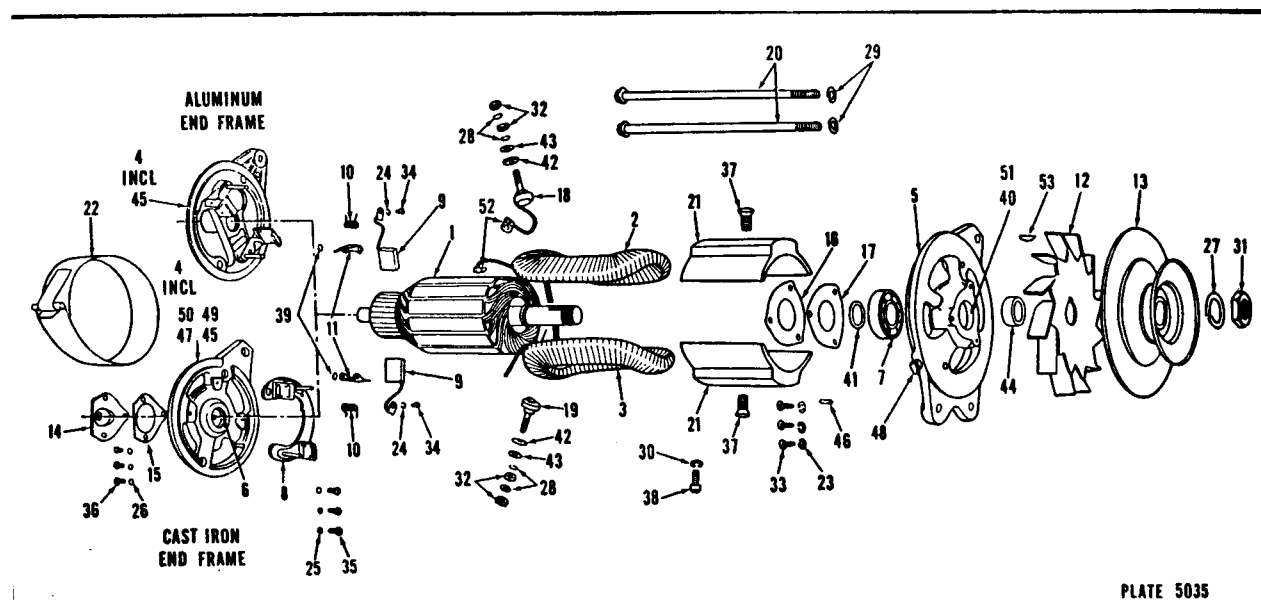 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Fan — C.E. or D.E.	Pulley	Plate — Cover — C.E.	Gasket — Cover Plate	Plate — Bearing Retainer — D.E.	Gasket — Retainer Plate	Terminal Stud & Lead	Terminal Stud Only	Bolt — Thru	Shoe — Pole	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1105001.....	1880558	1879310			1911263	1912008		1858749	1886685	1918004	1918012
1105002.....	"	"	816212	1835457	"	"		"	"	"	"
1105003.....					"	"		"	"	"	"
1105004.....			816212	1914753	1861590			"	"	"	"
1105007.....	1880558	1927272			1911263	1912008		"	"	"	"
1105008.....					"	"		"	"	"	"
1105009.....					"	"		"	"	"	"
1105010.....					"	"		"	"	"	"
1105011.....	1880558	1927272			"	"		"	"	"	"
1105013.....	"	1913926			"	"		"	"	"	"
1105014.....	"	"			"	"		"	"	"	"
1105017.....					"	"		"	"	"	1879530
1105018.....	1937227				"	"		"	809763	"	"
1105019.....					1861590			"	1886685	"	1918012
1105020.....	1937227				1935923			"	809763	"	1879530
1105021.....	"				1911263			"	"	"	"
1105052.....		1908843			1927844			"	1886685	"	1962896
1105053.....			1943589		"			"	"	"	"
1105054.....		1908843	"		1952245			"	"	"	"
1105055.....		"			"			"	"	"	"
1105056.....			1943589		"			"	"	"	"
1105057.....			"		"			"	"	"	"
.....											
.....											
.....											
.....											
.....											

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	1962276	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 20-1; 52-3-4-5-6-7
24	Lock Washer—Brush Lead Attaching Screw	1914816	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 20-1; 52-3-4-5-6-7
—	Lock Washer—Cover Attaching Screw	1962276	1105018; 20-1
26	Lock Washer—End Cover Plate Screw—C.E.	453435	1105002-4
—	Lock Washer—Fan Attaching Nut—C.E.	1913743	1105018; 20-1
27	Lock Washer—Shaft Nut—D.E.	1915265	1105001-2-7-8-9; 11-13-14-17-18-19; 21; 52
27	Lock Washer—Shaft Nut—D.E.	1941978	1105053-4-6-7
28	Lock Washer—Terminal Stud	1914579	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 20-1; 52-3-4-5-6-7
29	Lock Washer—Thru Bolt	9421424	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 20-1; 52-3-4-5-6-7
30	Lock Washer—Top of Field Frame	9421423	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 20-1
NUTS			
—	Nut—Cover Band Attaching	1935960	1105018; 20-1
—	Nut—Cover Band Attaching	453433	1105052-3-4-5-6-7
—	Nut—Fan Attaching—C.E.	1915172	1105018; 20-1
31	Nut—Shaft—D.E.	1915172	1105001-2-7-8-9; 11-13-14-17-18-19; 21; 53-4-6-7
31	Nut—Shaft—D.E.	1917570	1105003-4; 10
31	Nut—Shaft—D.E.	9418881	1105020
31	Nut—Shaft—D.E.	1935548	1105052-5
32	Nut—Terminal Stud	121743	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 20-1; 52-3-4-5-6-7
SCREWS			
—	Screw—Ball Bearing Retainer Plate—C.E.	1928811	1105056-7
33	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 20-1
33	Screw—Ball Bearing Retainer Plate—D.E.	5017850	1105052-3-4-5-6-7
34	Screw—Brush Lead Attaching	453460	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 20-1; 52-3-4-5-6-7
—	Screw—Cover Band Attaching	453979	1105056-7
—	Screw—Cover Attaching	1917123	1105018; 20-1
—	Screw—Cover Band Attaching	132923	1105018; 21; 52-3-4-5
—	Screw—Cover Band Attaching	453479	1105020
36	Screw—End Cover Plate—C.E.	1914580	1105002-4; 18
37	Screw—Pole Shoe	1914570	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 20-1; 52-3-4-5-6-7
38	Screw—Top of Field Frame	131238	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 20-1
WASHERS			
—	Washer—Ball Bearing Space—C.E.	1888761	1105002
—	Washer—Ball Bearing Space—D.E.	1861589	1105004; 19
39	Washer—Brush Arm Space	1857412	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 20-1; 52-3-4-5
40	Washer—Felt—D.E.	809961	1105001-2-3-7-8-9; 10-11-13-14-17
—	Washer—Shaft Nut—D.E.	1934383	1105003-4; 10
—	Washer—Shaft Nut—D.E.	1872618	1105020
—	Washer—Space—C.E.	809945	1105021
—	Washer—Space—D.E.	809945	1105018-19; 20
41	Washer—Space—Inside—D.E.	809945	1105001-2-3-7-8-9; 10-11-13-14-17-18; 21; 52-3
—	Washer—Space—Inside—D.E.	1838472	1105056-4-5-7
42	Washer—Terminal Stud—Insulation	1902746	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 20-1
42	Washer—Terminal Stud—Insulation	1858753	1105052-3-4-5-6-7
43	Washer—Terminal Stud—Plain	826319	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 20-1; 52-3-4-5-6-7
MISCELLANEOUS			
—	BUSHING—Insulation—Terminal (Inside)	*	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 20-1; 52-3-4-5-6-7
—	CLAMP—Bearing Retainer	1929959	1105018-19; 20-1; 52-5
—	COLLAR—Fan	1913689	1105018; 20-1

*Included with 1858749 Stud.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—(Continued)		
44	COLLAR—Space (Outside)—D.E.....	1858603	1105001-2-3-7-8-9; 10-11-13-14-17-18-19; 21
44	COLLAR—Space (Outside)—D.E.....	1861591	1105004
44	COLLAR—Space (Outside)—D.E.....	1946099	1105020
44	COLLAR—Space (Outside)—D.E.....	1914198	1105052-3-4-5-6-7
—	Collector—SPRING—D.E.....	1952241	1105054-5-6-7
—	Collector—RING—D.E.....	1952244	1105054-5-6-7
—	Collector—SPRING—D.E.....	1920738	1105052-3
—	COVER—C.E.....	1955831	1105018; 21
45	Dowel PIN—C.E.....	809062	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 20-1
46	Dowel PIN—D.E.....	809062	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 21; 53-6-7
47	OILER—C.E.....	113702	1105001-3
47	OILER—C.E.....	125609	1105002-7-8-9; 10-11-13-14-17
48	OILER—D.E.....	125609	1105001-2-3-7-8-9; 10-11-13-14-17
48	OILER—D.E.....	1880641	1105017
49	Oil WICK—C.E.....	1947350	1105001-3
51	RETAINER—Felt Washer—D.E.....	819104	1105001-2-3-7-8-9; 10-11-13-14-17
—	RING—Static Collector.....	1920734	1105052-3
—	SPACER—Fan.....	1913688	1105018; 20-1
52	Terminal CLIP—To Brush.....	200182	1105001-2-3-4-7-8-9; 10-11-13-14-17
52	Terminal CLIP—To Brush.....	200362	1105018-19; 20-1; 52-3-4-5-6-7
53	Woodruff KEY—C.E.....	427261	1105018; 20
53	Woodruff KEY—D.E.....	124545	1105001-2-3-4-7-8-9; 10-11-13-14-17-18-19; 21; 52-3-4-5-6-7
53	Woodruff KEY—D.E.....	124548	1105020


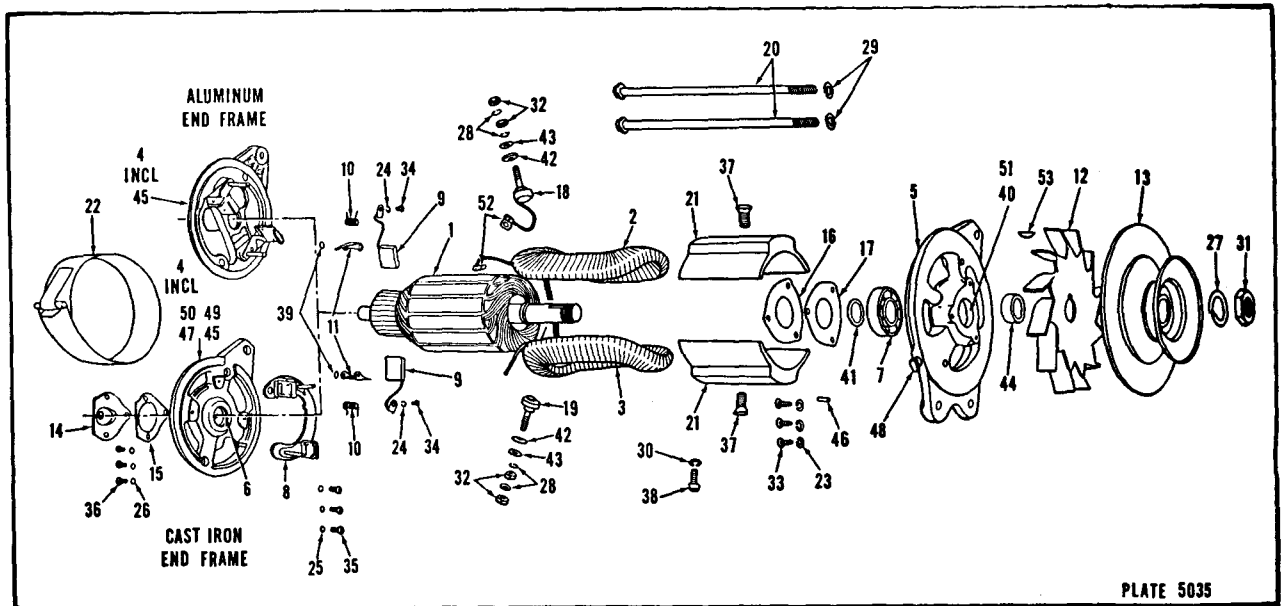 


PLATE 5035

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Armature	Field Coil — R.H.	Field Coil — L.H.	Frame — C.E.	Frame — D.E.	Ball Bearing or Bushing — C.E.	Ball Bearing — D.E.	Plate — Brush	Brush	Spring — Brush	Arm — Brush
	1	2	3	4	5	6	7	8	9	10	11
1105101.....	1933908	1923472	1923473	1930365	1912354	908503	954521		1906931	1916542	1944373
1105102.....	1934550	"	"	1934547	1934553	"	904722		1932506	"	"
1105103.....	1909096	"	"	1934442	1886525	904751	907504		1906931	"	"
1105105.....	1934581	"	"	1919302	1954985	"	954378		"	"	"
1105106.....	1934550	"	"	1935495	1935498	900529	904722		1932506	1903870	"
1105109.....	1940161	"	"	1936330	1936333	"	900529		"	"	"
1105110.....	1903852	1907361	1907362	1934442	1886525	904751	954521		1906931	1916542	"
1105111.....	1938209	1923472	1923473	1938207	1934553	900529	904722		1932506	1903870	"
1105112.....	1938539	"	"	1937217	1936333	"	900529		"	"	"
1105113.....	1940313	"	"	1938664	1954985	904751	954378		1906931	1916542	"
1105115.....	1948007	"	"	1919302	"	"	"		"	1903870	"
1105116.....	1940161	1955252	1955253	"	"	"	"		"	"	"
1105117.....	1939837	"	"	"	"	"	"		"	"	"
1105118.....	1940313	"	"	1938664	"	"	"		"	"	"
1105119.....	1941403	1920282	1920281	1941406	1936333	900529	904793		1932506	"	"
1105120.....	1934581	1944949	1944950	1931175	1930347	904751	900529		1906931	1916542	1944373
1105121.....	1950357	1945276	1945275	1936330	1936333	"	"		1932506	1903870	"
1105122.....	1945818	1951674	1945817	1945820	1945823	"	904793		"	1946798	"
1105123.....	1945922	1955252	1955253	1919302	1954985	"	954378		1906931	1916542	"
1105124.....	1945899	"	"	1938664	"	"	"		"	"	"
1105125.....	1939837	"	"	1919302	"	"	"		"	"	"
1105126.....	1938539	1923472	1923473	1937217	1936333	907058	907058		1932506	1903870	"
1105127.....	1962845	1955253	1955253	1947663	1947667	904751	954521		1906931	1916542	"
1105129.....	1962842	1923472	1923473	1962307	1948269	907055	907054		1946404	1947890	
1105130.....	1939837	1955252	1955253	1948748	1948738	900529	900529		1906931	1916542	1944373
1105131.....	"	"	"	"	"	"	"		"	"	"
1105132.....	1954853	"	"	1949173	1949168	"	"		"	"	"
1105134.....	1938209	1945276	1945275	1938207	1934553	"	904722		1932506	1903870	"
1105135.....	1950521	1950516	1950517	1950510	1950519	904751	954378		1906931	1908829	"
1105155.....	1962842	1923472	1923473	1962307	1962841	907055	907054		1946404	1947890	
1105156.....	1964393	1945816	1945817	1945820	1951775	907353	907334		1932506	1946798	1944373
1105157.....	1967085	1945276	1945275	1962307	1962313	907055	907054		1946404	1947890	
1105158.....	1964393	1968767	1968768	1968479	1968477	907353	"		1932506	1946798	"

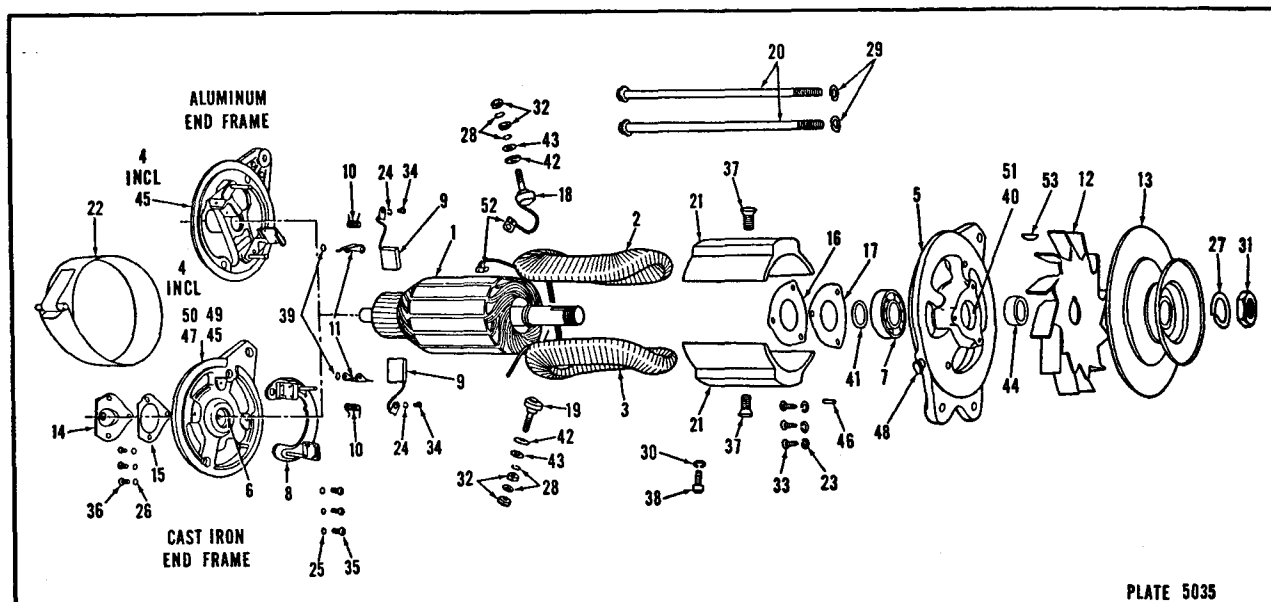 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Armature	Field Coil — R.H.	Field Coil — L.H.	Frame — C.E.	Frame — D.E.	Ball Bearing or Bushing — C.E.	Ball Bearing — D.E.	Plate — Brush	Brush	Spring — Brush	Arm — Brush
	1	2	3	4	5	6	7	8	9	10	11
1105136.....	1954853	1952252	1955253	1949173	1949168	900529	900529		1906931	1916542	1944373
1105137.....	1951674	1923472	1923473	1947273	1945823	"	904793		1932506	1856993	"
1105138.....	1950357	1952252	1955253	1948748	1948738	"	900529		1906931	1916542	"
1105139.....	1951669	1950516	1950517	1950510	1950519	904751	954378		"	1908829	"
1105140.....	1951720	1931902	1931903	1951723	1945823	900529	904793		1932506	"	"
1105141.....	1964393	1945816	1945817	1945820	1951775	907353	907334		"	1946798	"
1105142.....	1951674	"	"	"	1945823	900529	904793		"	1908829	"
1105143.....	1939837	1952252	1955253	1919302	1954985	904751	954378		1906931	1916542	"
1105144.....	1952566	1945816	1945817	1940448	1936333	900529	900529		1932506	1946798	"
1105145.....	1940161	1952252	1955253	1919302	1954985	904751	954378		1906931	1916542	"
1105146.....	1954853	"	"	1949173	1949168	900529	900529		1906931	"	"
1105147.....	1940161	1955252	1955253	1919302	1954985	904751	954378		1906931	"	"
1105148.....	1934581	1924628	1924726	1931175	1930347	"	900529		1906931	"	"
1105150.....	1954853	1952252	1955253	1919302	1954985	"	954378		"	"	"
1105151.....	1950357	"	"	1949173	1949168	900529	900529		"	"	"
1105152.....	1954853	"	"	1948748	1948738	"	"		"	"	"
1105153.....	1945922	"	"	1919302	1954985	904751	954378		"	"	"
1105154.....	1950357	"	"	1948748	1948738	900529	900529		"	"	"
.....											
.....											
.....											

[illegible]

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	1962276	All
24	Lock Washer—Brush Lead Attaching Screw	1914816	All
—	Lock Washer—Cover—C.E.	1962276	1105137; 41-2-4
—	Lock Washer—Fan Attaching Nut—C.E.	1913743	1105137; 40-1-2-4
27	Lock Washer—Shaft Nut—D.E.	1915265	1105143-4-7-8; 50-3
27	Lock Washer—Shaft Nut—D.E.	1944314	1105136-8; 51-2-4
28	Lock Washer—Terminal Stud	1914579	All
29	Lock Washer—Thru Bolt	9421424	All
30	Lock Washer—Top of Field Frame	9421423	1105137-9; 40-1-2-3-4-5-7-8; 50-3
NUTS			
—	Nut—Cover Band Screw	1935960	1105137; 41-2-4
—	Nut—Fan Attaching	1915172	1105137; 40-1-2-4
31	Nut—Shaft—D.E.	1917570	1105137; 40-1-2
31	Nut—Shaft—D.E.	1915172	1105143-4-5-7-8; 50-3
31	Nut—Shaft—D.E.	1949171	1105136-8; 51-2
31	Nut—Shaft—D.E.	1947830	1105139
31	Nut—Shaft—D.E.	1948740	1105146; 54
32	Nut—Terminal Stud	121743	All
SCREWS			
33	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1105136-8; 43-4-5-6-7-8; 50-1-2-3-4
33	Screw—Ball Bearing Retainer Plate Attaching	5017850	1105137; 40-1-2
34	Screw—Brush Lead Attaching	453460	All
—	Screw—Cover Attaching—C.E.	1917123	1105137; 41-2-4
—	Screw—Cover Band	453479	1105137; 41-2-4
37	Screw—Pole Shoe	1914750	All
38	Screw—Top of Field Frame	451031	1105137-9; 40-1-2-3-4-5-7-8; 50-3
WASHERS			
39	Washer—Brush Arm Space	1857412	1105136-7-8-9; 40-1-2-3-4-5-6-7-8
40	Washer—Felt—D.E.	809961	1105139; 43-5-7; 50-3
—	Washer—Shaft Nut—D.E.	1934383	1105137; 40-1-2
—	Washer—Shaft Nut—D.E.	1941978	1105139; 45
—	Washer—Space—Ball Bearing—D.E.	1861589	1105136-8; 46-8; 51-2-4
—	Washer—Space—Inside—C.E.	809945	1105137; 40-1-2-4-5-6
41	Washer—Space—Inside—D.E.	822644	1105137; 40-2
—	Washer—Space—Inside—D.E.	809945	1105136-8; 43-4-5-7-8; 50-1-2-3-4
—	Washer—Spring—Shaft Nut	1944314	1105146
42	Washer—Terminal Stud—Insulation	1902746	All
43	Washer—Terminal Stud—Plain	826319	All
MISCELLANEOUS			
—	BAFFLE—D.E.	1837897	1105137; 40-1-2
—	BUSHING—Insulation—Terminal—Inside	*	All
—	COLLAR—Fan	1913689	1105137; 40-4
—	COLLAR—Fan	1948756	1105141-2
—	COLLAR—Space—C.E. (Between Fan & Ball Brg.)	1951725	1105140
—	COLLAR—Space—Inside—D.E.	1952088	1105141
—	COLLAR—Space—Inside—D.E.	1944575	1105142
44	COLLAR—Space—Outside—D.E.	1858603	1105136-8-9; 43-4-5-6-7-8; 50-1-2-3-4
44	COLLAR—Space—Outside—D.E.	1844575	1105137; 40-1-2
—	COVER—C.E.	1955831	1105144
45	Dowel PIN—C.E.	809062	All
45	Dowel PIN—C.E.	809593	1105146
46	Dowel PIN—D.E.	809062	All
46	Dowel PIN—D.E.	809593	1105146
—	INSULATION—Field Coil	1912073	1105139; 50-4
47	OILER—C.E.	125609	1105143-5-7; 50-3
47	OILER—C.E.	113702	1105139
48	OILER—D.E.	125609	1105139; 43-5-7; 50-3
—	PLUG—Bearing Well—C.E.	1948326	1105136-8-9; 51-2-4
51	RETAINER—Felt Washer—D.E.	819104	1105139; 43-5-7; 50-3
—	RING—Bearing Clamp—C.E.	1929959	All
—	SEAL—Oil—Ball Bearing Retainer—D.E.	1948284	1105141
—	SPACER—Fan	1913688	1105137; 40-1-2-4
—	SPACER—Fan—D.E.	1861589	1105138
—	SPACER—Inside—D.E. (Between Brg. & Arm. Shaft)	1951666	1105141
52	Terminal CLIP—To Brush	200362	All
—	Woodruff KEY—C.E.	427261	1105137; 40-1-2-4
53	Woodruff KEY—D.E.	124548	1105137; 40-1-2
53	Woodruff KEY—D.E.	124545	1105136-8-9; 43-4-5-6-7-8; 51-2-4

*Included with 1858749 Stud.

Parts not listed in this Catalog will not be sold separately.

GENERATOR—Group 101-H
Models 1105201 to 22
Page 1

Page 1



Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

[illegible]

***Use 1948274 Plate—Retainer (outside) and 1954873 Plate—Retainer (inside).**

MINOR PARTS SECTION

Name	Part No.	Used on Models
SCREWS—Continued		
Screw—Field Lead Ground Screw.....	453319	1105213
Screw—Pole Shoe.....	1913960	1105201-2-3
Screw—Pole Shoe.....	1914750	1105204-5-6-7-8-9; 10-11-12-13-14-15-16-17-18-19; 20-1-2
Screw—Top of Field Frame.....	132243	1105201-4-5
Screw—Top of Field Frame.....	9411511	1105206-7-8-9; 10-12-13-14-15-16-17-18-19; 20-1-2
WASHERS		
Washer—Brush Arm Space.....	1857412	1105201-6-7-8-9; 10-11-12-14-16-17-18-19; 20-1
Washer—Brush Arm Space.....	1914741	1105204-5; 15; 22
Washer—D.E.....	1952066	1105219
Washer—Felt—C.E.....	37077	1105201
Washer—Felt—C.E.....	820106	1105202-3
Washer—Felt—D.E.....	820706	1105201-2-3
Washer—Felt—D.E. (Inside).....	809961	1105211-15; 22
Washer—Retainer—Felt—D.E.....	819104	1105215; 22
Washer—Shaft Nut—Plain—D.E.....	822644	1105201-2-3; 10-18
Washer—Shaft Nut—Plain—D.E.....	30205	1105201
Washer—Shaft Nut—Plain—D.E.....	1938744	1105202-3
Washer—Shaft Nut—Plain—D.E.....	1872618	1105204-5; 13-19
Washer—Shaft Nut—Plain—D.E.....	1934383	1105210-18
Washer—Space—Ball Bearing—D.E.....	1861589	1105206; 12-14; 21
Washer—Space—C.E.....	1914213	1105204-5
Washer—Space—C.E. (Inside).....	809945	1105218-19; 21-2
Washer—Space—D.E.....	1946069	1105216
Washer—Space—D.E. (Inside).....	809945	1105206-7-8-9; 10-11-12-13-14-15-16-17; 20
Washer—Space—D.E. (Inside).....	822644	1105218
Washer—Terminal Stud—Insul.....	1858753	1105201-2-3
Washer—Terminal Stud—Insul.....	1902746	1105204-5-6-7-8-9; 10-11-12-13-14-15-16-17-18-19; 20-1-2
Washer—Terminal Stud—Plain.....	1954452	1105201-2-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-18-19; 20-1-2
MISCELLANEOUS		
BAFFLE—D.E.....	1837897	1105210-18
BAFFLE—Oil—D.E.....	1948273	1105213
BUSHING—Bottom of Distributor Well.....	1838697	1105202-3
BUSHING—Hinge Mounting—C.E. & D.E.....	1948268	1105213
BUSHING—Hinge Mounting—D.E.....	1954844	1105219
CLAMP—Bearing—C.E.....	1929959	1105204-5-6-7-8-9; 10-11-12-13-14-15-16-17-18-19; 20-1-2
COLLAR—Ball Bearing—D.E.....	1948271	1105213
COLLAR—Fan—C.E.....	1913689	1105204-5-10-13-16-19
COLLAR—Fan—C.E.....	1948756	1105218
COLLAR—Inside—C.E.....	37837	1105201
COLLAR—Inside—C.E.....	809953	1105202-3
COLLAR—Outside—C.E.....	1843015	1105201
COLLAR—Oil Throwing—D.E.....	1839007	1105201
COLLAR—Oil Throwing—C.E.....	824409	1105202
COLLAR—Oil Throwing—C.E.....	824760	1105203
COLLAR—Space—D.E. (Outside).....	37830	1105202-3
COLLAR—Space—D.E. (Outside).....	1946069	1105204-5
COLLAR—Space—D.E. (Outside).....	1858603	1105206-7; 11-12-14-15; 20-1-2
COLLAR—Space—D.E. (Outside).....	817224	1105208-9; 17;
COLLAR—Space—D.E. (Outside).....	1844575	1105210-18
COLLAR—Space—D.E. (Outside).....	1954499	1105219
COVER—C.E.....	1955831	1105204-5
COVER—C.E.....	1948758	1105210-18
Dowel PIN—Ball Bearing Retainer.....	809062	1105213
Dowel PIN—C.E.....	809062	1105201-2-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-18-19; 20-1-2
Dowel PIN—D.E.....	809062	1105201-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-18-19; 20-1-2
Felt Washer—Retainer CUP—C.E.....	37078	1105201
GASKET—Ball Bearing Retainer Plate—C.E.....	820105	1105202-3

MINOR PARTS SECTION

 
Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
GASKET—Ball Bearing Retainer Plate—C.E.	1948279	1105213
GASKET—Ball Bearing Retainer Plate—D.E.	*1948276	1105213
GASKET—Ball Bearing Retainer Plate—D.E.	820708	1105201-2-3; 10-18
GASKET—Ball Bearing Retainer Plate—D.E.	1912008	1105211-15; 22
GASKET—Cover—C.E.—Attaching	1947888	1105213
GEAR—Distributor Drive	1840554	1105202-3
INSULATOR—Terminal	*	1105204-5-6-7-8-9; 10-11-12-13-14-15-16-17-18-19; 20-1-2
LEAD—Brush Ground	820315	1105202-3
LEAD—Brush to Ground	1947875	1105213
OILER—C.E.	113702	1105201-2-3; 22
OILER—C.E.	125609	1105211-15; 22
OILER—D.E.	113702	1105201-2-3
OILER—D.E.	125609	1105215; 22
Oil BAFFLE	1847361	1105201
PIN—Brush Holder Hinge	820095	1105202
PIN—Brush Holder Stop	820093	1105202
PIN & INSULATION—Brush Holder Hinge	820094	1105202-3
PIN & INSULATION—Brush Holder Stop	820092	1105202-3
PLATE—Ball Bearing Retainer—C.E.	1840566	1105202
PLATE—Ball Bearing Retainer—C.E.	1865116	1105203
PLATE—Ball Bearing Retainer—C.E.	1948277	1105213
PLATE—Distributor Mounting	36961	1105202-3
PLATE—Felt Washer Retainer—C.E.	34495	1105202-3
Pipe PLUG—Side of Distributor Well	35063	1105202-3
PLUG—Wick—C.E.	823551	1105215; 22
SEAL—Oil—Ball Bearing Retainer—C.E.	1948285	1105213
SEAL—Oil—Ball Bearing Retainer—D.E.	1948284	1105213
SPACER—Fan—C.E.	1913688	1105204-5-10-16-18-19
SPACER—Fan—C.E.	1948272	1105213
Terminal CLIP—To Brush	1857107	1105201-2-3
Terminal CLIP—To Brush	200362	1105204-5-6-7-8-9; 10-11-12-13-14-15-16-17-18; 20-1-2
WICK—C.E.	1947350	1105222
Woodruff KEY—C.E.	124544	1105202-3
Woodruff KEY—C.E.	427261	1105204-5; 10-13-16-18-19
Woodruff KEY—D.E.	124548	1105201-4-5; 10-13-16-18
Woodruff KEY—D.E.	124546	1105202-3; 19
Woodruff KEY—D.E.	124545	1105206-7-8-9; 11-12-14-15-17; 20-1-2

*If present ball bearing retainer plate does not make metal to metal contact with outer bearing race, order part No. 1948274 Retainer Plate Assem. (includes gasket).

*Included with 1858749 Stud.

Delco-Remy

SERVICE PARTS CATALOG

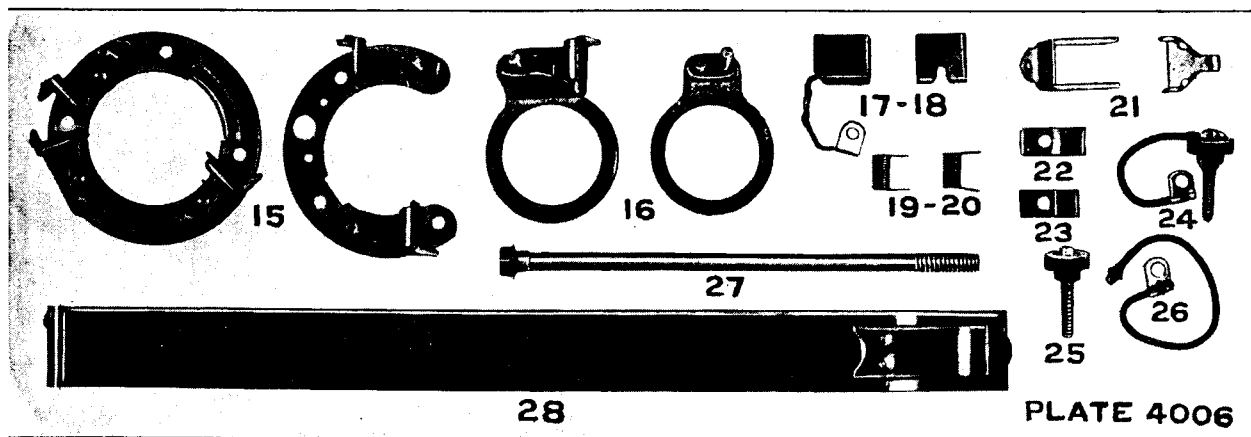

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Main Brush Plate	Third Brush Plate	Main Brush	Third Brush	Main Brush Spring	Thrd or Ground Brush Spring	Brush Arm	Third Brush Plate Clamp	Third Brush Plate Clamp Spring	Terminal Stud and Lead	Terminal Stud Only	Relay Lead	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
1105225			1906931		1908829		1944373			"	1858749		1886685	1918012
1105226	1908999	1856990	1866148	1906940	"	1903870	1904365	1850770	1850771	1858754	"		812291	1879530
1105227	1908550	1909151	"	"	1903871	1946798	"	"	"	"	"		"	"
1105228			1932506		1903870		1944373				"		809763	"
1105232			1906931		1916542		"				"		1886685	1918012
1105233			1932506		1903870		"				"		809763	1879530
1105235			1946404		1947890		1947873				"		"	○
1105236			1932506		1946798		1944373				"		"	1879530
1105237			1946404		1947890		1947873				"		"	○
1105238			"		"		"				"		"	○
1105239			"		"		"				"		"	○
1105241			"		"		"				"		"	○

^ΔFor complete Brush Set order Part No. 1857963.

©1947887 Cover Plate—2 required.

Revised to October 1, 1967

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer Plate Attach.—C.E.	453435	1105235-7-8-9; 41
Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	453435	1105235-7-8-9; 41
Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	1962276	1105225-6-7-8; 32-3-6
Lock Washer—Brush Lead Attaching Screw	1914816	1105225-6-7-8; 32-3-6
Lock Washer—Brush Lead Attaching Screw	1946143	1105235-7-8-9; 41
Lock Washer—C.E. Cover Attaching Screw	1962276	1105233-5-6-7-8-9; 41
Lock Washer—Cover Plate Attaching Screw	453844	1105235-7-8-9
Lock Washer—End Cover Plate Screw—C.E.	453435	1105226-7
Lock Washer—Fan—C.E. Attaching Nut	1913743	1105233-5-6-7-8-9; 41
Lock Washer—Ground Lead Attaching Screw	1962276	1105235-7-8-9; 41
Lock Washer—Main Brush Plate Attaching Screw	453844	1105226-7
Lock Washer—Shaft Nut	1872618	1105228
Lock Washer—Shaft Nut—D.E.	1915265	1105225; 32
Lock Washer—Third Brush Plate Clamp Screw	453435	1105226-7
Lock Washer—Terminal Stud	1914579	1105225-6-7-8; 32-3-5-6-7-8-9; 41
Lock Washer—Thru Bolt	9421424	1105225-6-7-8; 32-3-5-6-7-8-9; 41
Lock Washer—Top of Field Frame	174916	1105226-7
Lock Washer—Top of Field Frame	9421423	1105225-8; 32-3-5-6-7-8-9; 41
Lock Washer—Brush Lead Attaching Screw	453844	1105241
NUTS		
Nut—Brush Holder Attaching	5024654	1105235-7-8-9; 41
Nut—Cover Band	1935960	1105233-6
Nut—Cover Band Screw	453433	1105226-7
Nut—Fan—C.E.—Attaching	1915172	1105233-5-6-7-8-9; 41
Nut—Shaft—D.E.	9418881	1105233-7-8-9
Nut—Shaft—D.E.	1915172	1105225
Nut—Shaft—D.E.	1917570	1105226-7; 36
Nut—Shaft—D.E.	451079	1105228
Nut—Shaft—D.E.	9418881	1105235; 41
Nut—Terminal	121743	1105225-6-7-8; 35-6-7-8-9; 41
SCREWS		
Screw—Ball Bearing Retainer Plate Attaching—C.E.	9416183	1105235-7-8-9; 41
Screw—Ball Bearing Retainer Plate Attaching—D.E.	274946	1105235-7-8-9; 41
Screw—Ball Bearing Retainer Plate Attaching—D.E.	5017850	1105236
Screw—Ball Bearing Retainer Plate—D.E.	1914580	1105225-6-7-8; 32-3
Screw—Brush Holder Attaching	453337	1105235-7-8-9; 41
Screw—Brush Lead Attaching	453418	1105235-7-8-9; 41
Screw—Brush Lead Attaching	453460	1105225-6-7-8; 32-3-6
Screw—Cover Band	453479	1105226-7-8; 33-6
Screw—C.E. Cover Attaching	1917123	1105233-5-6-7-8-9; 41
Screw—Cover Plate Attaching	453418	1105235-7-8-9; 41
Screw—End Cover Attaching—C.E.	1914580	1105226-7
Screw—Ground Lead Attaching	453319	1105235-7-8-9; 41
Screw—Main Brush Plate Attaching	1888975	1105226-7
Screw—Third Brush Plate Clamp	141602	1105226-7
Screw—Pole Shoe	1864510	1105226-7
Screw—Pole Shoe	1914750	1105225-8; 32-3-5-6-7-8-9; 41
Screw—Top of Field Frame	9411511	1105225-6-7-8; 32-3-5-6-7-8-9; 41
WASHERS		
Washer—Brush Arm Space	1857412	1105226-7-8; 36
Washer—Shaft Nut—D.E.	1905406	1105233-5-7-8-9; 41
Washer—Shaft Nut Plain—D.E.	1934383	1105226-7; 36
Washer—Space—C.E.	809945	1105233-5-6-7-8-9; 41
Washer—Space—D.E.	1952066	1105228
Washer—Space (Inside) D.E.	809945	1105225; 32
Washer—Terminal Stud—Plain	826319	1105225-6-7-8; 32-3-5-6-7-8-9; 41
Washer—Terminal Stud—Insul.	1858753	1105226-7
Washer—Terminal Stud—Insul.	1902746	1105225-8; 32-3-5-6-7-8-9; 41
MISCELLANEOUS		
BAFFLE—D.E.	1837897	1105236
BAFFLE—Oil—D.E.	1948273	1105235-7-8-9; 41
BUSHING—C.E. Frame Hinge	1948385	1105235; 41
BUSHING—C.E. Hinge	1948268	1105237-8-9
BUSHING—D.E. Frame Hinge	1948268	1105238
BUSHING—D.E. Frame Hinge	1948385	1105235-7-9; 41


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
ISCELLANEOUS—Continued		
BUSHING—D.E. Frame Hinge.....	1954844	1105228
CLAMP—Bearing—C.E.....	1929959	1105225; 32-5-6-7-8-9
CLIP—Terminal—To Brush.....	200182	1105226-7
CLIP—Terminal—To Brush.....	200362	1105225-8; 32-3-5-6
COLLAR—Ball Bearing—D.E.....	1948271	1105235-7-8-9; 41
COLLAR—Fan.....	1913689	1105233; 41
COLLAR—Fan.....	1948756	1105236
COLLAR—Fan—C.E.....	1913689	1105235-7-8-9
COLLAR—Space (Inside—D.E.).....	1952088	1105236
COLLAR—Space (Outside—D.E.).....	1844575	1105236
COLLAR—Space (Outside—D.E.).....	1858603	1105225; 32
COLLAR—Space (Outside—D.E.).....	1946069	1105233
COLLAR—Space (Outside—D.E.).....	1902206	1105226-7
COLLAR—Space—D.E.....	1954499	1105228
COVER—C.E.....	1948281	1105235-7-8-9; 41
COVER—C.E.....	1948758	1105236
COVER—C.E.....	1955831	1105233
DOWEL PIN—C.E. & D.E.....	809062	1105225-6-7-8; 32-3-5-6
GASKET—Ball Bearing Retainer Plate—C.E.....	1948279	1105235-7-8-9; 41
GASKET—Ball Bearing Retainer Plate—D.E.....	1912008	1105225; 32
GASKET—Ball Bearing Retainer Plate—D.E.....	*1948276	1105235-7-8-9; 41
GASKET—Cover Plate.....	1947888	1105235-7-8-9; 41
GASKET—End Cover Plate—C.E.....	1835457	1105226-7
INSULATOR—Terminal.....	*	1105225-8; 32-3-5-6
LEAD—Brush to Ground.....	1947875	1105235-7-8-9; 41
LEAD—Field Terminal Ground.....	1904034	1105226-7
OILER—C.E.....	113702	1105225; 32
OILER—D.E.....	113702	1105232
OILER—D.E.....	125609	1105225
OIL SEAL—D.E.....	1889633	1105226-7
PIN—Dowel—Ball Bearing Retainer.....	809062	1105235-6-7-8-9; 41
PLATE—Ball Bearing Retainer—C.E.....	1948277	1105235-7-8-9; 41
PLATE—Felt Washer Retainer—D.E.....	819104	1105225; 32
PLUG—D.E.....	823551	1105233
RING—Bearing Retainer.....	1929959	1105228; 41
SEAL—Oil—Ball Bearing Retainer—C.E.....	1948285	1105235-7-8-9
SEAL—Oil—Ball Bearing Retainer—D.E.....	1948284	1105235-6-7-8-9; 41
SEAL—Oil Ball Bearing Retainer—C.E.....	1967650	1105241
SPACER—D.E. (Inside Between Brg. and Arm. Shaft).....	1951666	1105236
SPACER—Fan.....	1913688	1105233-6
SPACER—Fan—C.E.....	1948272	1105235-7-8-9; 41
WICK—C.E.....	1947350	1105225
WOODRUFF KEY—C.E.....	427261	1105233-5-6-7-8-9; 41
WOODRUFF KEY—D.E.....	124548	1105226-7; 33-5-6-7-8-9; 41
WOODRUFF KEY—D.E.....	124546	1105228
WOODRUFF KEY—D.E.....	124545	1105225; 32

*If present Ball Bearing Retainer Plate does not make metal to metal contact with Outer Bearing Race, order Part No. 1948274 Retainer Plate Assem. (Includes Gasket.)

 *Included with 1858749 Stud.

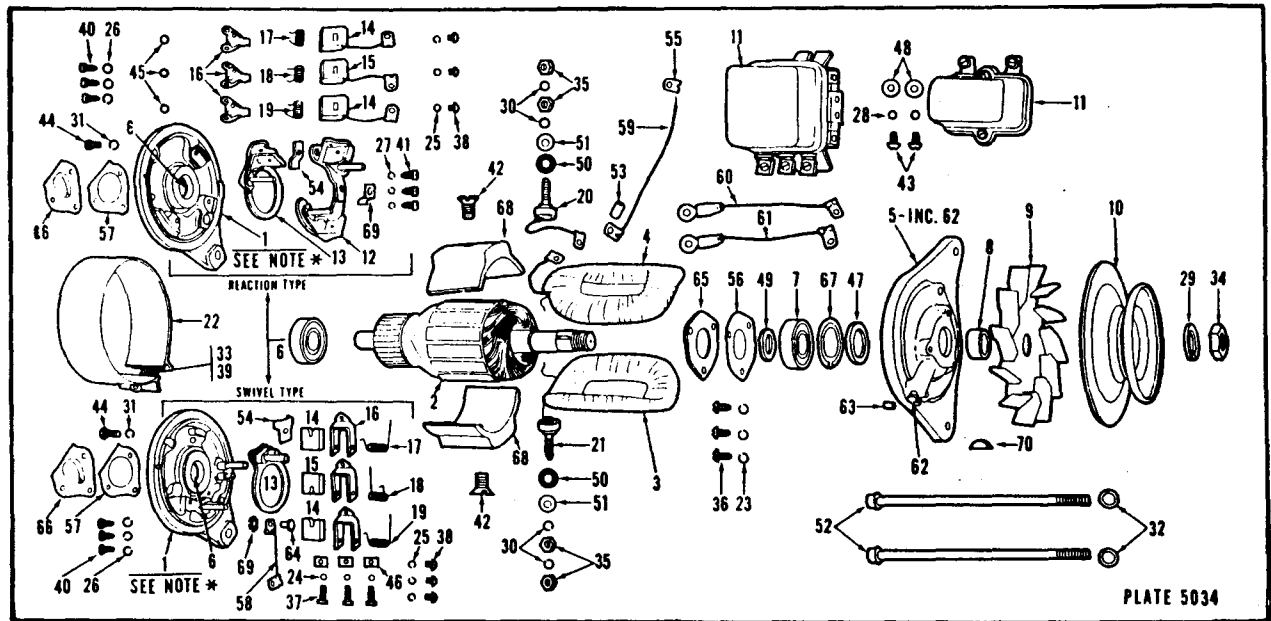

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	* Frame C.E.	Armature	Field Coil L.H.	Field Coil R.H.	Frame D.E.	Ball Bearing C.E.	Ball Bearing D.E.	Collar Outside D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1105376.....	1872896	1873825	1873824	1873823	1872898	954143	954143				
1105377.....	1879427	1871364	1902118		1879429	954378	954521	1845008			°5886
1105378.....	1873599	"	"	"	1873601	"	"	"			
1105379.....	1881304	1881301	"	"	1881306	"	"	1853650			°5849
1105380.....	1879427	1871364	"	"	1879429	"	"	1845008			
1105381.....	1901458	1901459	"	"	1901461	954259	954157	1845622			°5886
1105382.....	1902715	1903079	1902602	1903081	1886819	954378	954521	1845008	*1868751	*1869327	
1105383.....	1905576	1905769	1905768	1905767	1905578	"	"	"	†1905774	†1905770	
1105384.....	1907525	1909099	1902118		1907526	"	901304	1907527			°5886
1105385.....	1879427	1871364	"	"	1879429	954298	954139	1845008			° "
1105386.....	1879427	"	"	"	1879429	954378	954521	1916810			° "
1105390.....	1961159	1961164	1961155		1961161	904755	907435				

 
°For parts see Regulator—Group 5.

*1869327 is Pulley & Fan Assembly and includes 1868751 Fan.

†1905770 is Pulley & Fan Assembly and includes 1905774 Fan.

*C.E. Frame includes where necessary— Bushing, Oiler, Oil Wick, Oil Hole Plug, Dowel Pins and Brush Pins.

‡1961155 is Field Coil set (2 coils).

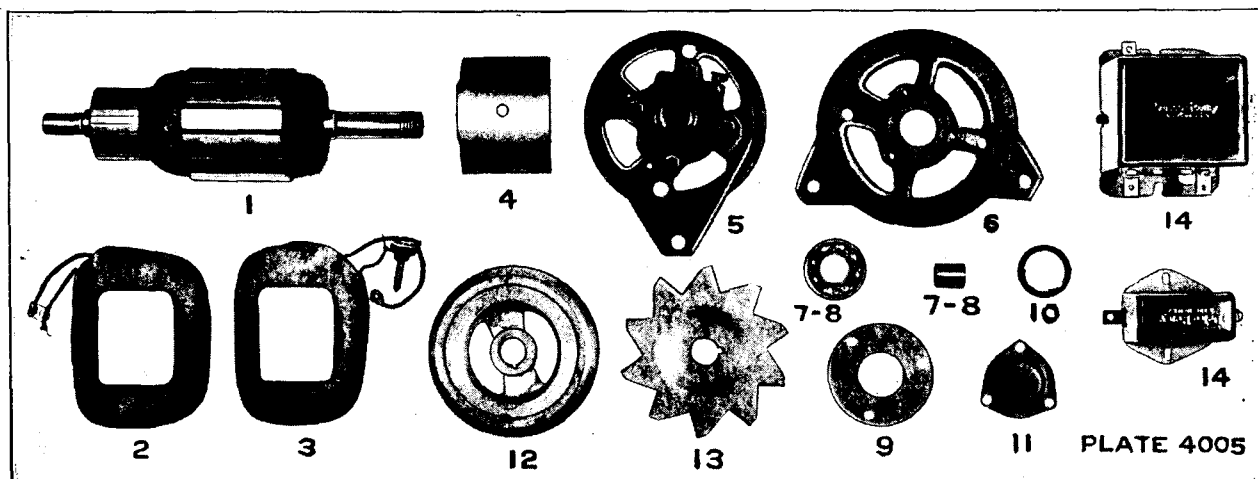


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Arma-ture	Field Coil R.H.	Field Coil L.H.	Pole Shoe	Commu-tator End Frame	Drive End Frame	Bushing or Ball Bearing C.E.	Bushing or Ball Bearing D.E.	Ball Bearing Retainer Plate D.E.	Felt Washer Retainer Plate	Commu-tator End Cover Plate	Pulley	Fan	Relay or Control Unit
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1105501	1865431	1865434	1865435	37734	1860604	1844571	908503	954521	820707	820709	1840555			
1105502	1877905	"	"	"	1861667	826072	"	"	"	"	"			

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	802731	1105501-2
Lock Washer—Ball Bearing Retainer Plate Screw—C.E.	106496	1105501-2
Lock Washer—Brush Attaching Screw (2 hole)	22817	1105501-2
Lock Washer—Brush Lead Attaching Screw	802730	1105501-2
Lock Washer—Commutator End Cover Plate Screw	802731	1105501-2
Lock Washer—Distributor Mounting Plate Nut	103320	1105501-2
Lock Washer—Shaft Nut—C.E.	1902494	1105501-2
Lock Washer—Shaft Nut—D.E.	110405	1105502
Lock Washer—Terminal Stud Nut	802760	1105501-2
Lock Washer—Thru Bolt	120638	1105501-2
Lock Washer—Wiring Harness Clamp Screw	120380	1105501-2
NUTS		
Nut—Distributor Mounting Plate Screw	120368	1105501-2
Nut—Shaft—C.E.	114496	1105501-2
Nut—Shaft	1917570	1105501
Nut—Shaft—D.E.	122264	1105502
Nut—Terminal Stud	134551	1105501-2
SCREWS		
Screw—Ball Bearing Retainer Plate—D.E.	1904370	1105501-2
Screw—Ball Bearing Retainer Plate—C.E.	1888975	1105501-2
Screw—Brush Attaching	820102	1105501-2
Screw—Brush Lead Attaching	141540	1105501-2
Screw—Commutator End Cover Plate	1904370	1105501-2
Screw—Distributor Mounting Plate	1838393	1105501-2
Screw—Pole Shoe	828675	All
Screw—Tachometer Drive Housing	1860618	1105501-2
Screw—Wiring Harness	115353	1105501-2

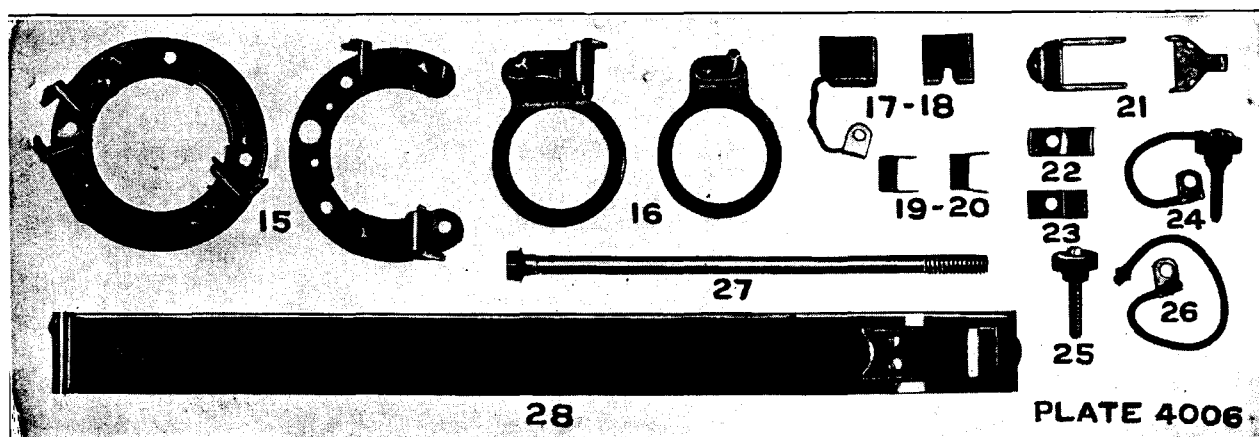 

Illustrations are of Typical Parts only, which may vary in detail. For Parts not illustrated see Minor Parts Section.


Model No.	Main Brush Plate	Third Brush Plate	Main Brush	Third Brush	Main Brush Spring R.H. Ins.	Third Brush Spring L.H. Gr.	Third Brush Plate Clamp Upper	Third Brush Plate Clamp Spring	Brush Holder or Arm	Terminal Stud and Lead	Terminal Stud	Relay Lead	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
1105501			34977		820101	820100			820099	1858602	818459		1883865	1918012
1105502			"		"	"			"	1868776†	"		37070	"

†810459 is for "F" Terminal; 1854060 is for "A" Terminal.

MINOR PARTS SECTION

Name	Part No.	Used on Models
VASHERS		
Washer—Felt—D.E.	820706	1105501-2
Washer—Felt—C.E.	820106	1105501-2
Washer—Felt—Retainer	34495	1105501-2
Washer—Shaft Nut	834750	1105502
Washer—Space—Inside—D.E.	822644	1105501-2
Washer—Terminal Stud—Insulation	810501	1105501-2
Washer—Terminal Stud—Plain	834560	1105501-2
MISCELLANEOUS		
BUSHING—Bottom of Distributor Well	1838697	1105501-2
BUSHING—Terminal Stud Insulation	1905683	1105501-2
CLIP—To Brush	200182	1105501-2
CLIP—Terminal Stud Lock	1854058	1105501-2
CLAMP—Wiring Harness	1860459	1105501-2
COLLAR—Oil Throwing	824409	1105501-2
COLLAR—Space—Inside—C.E.	809953	1105501-2
COLLAR—Space—Outside—D.E.	1844575	1105501
COLLAR—Space—Outside—D.E.	37830	1105502
Dowel PIN—C.E. & D.E.	809062	1105501-2
GASKET—Tachometer Drive Housing	1860617	1105501-2
GASKET—Ball Bearing Plate—C.E.	820105	1105501-2
GASKET—Ball Bearing Plate—D.E.	820708	1105501-2
GEAR—Distributor Drive	1859544	1105501-2
INSULATION—Terminal Stud—Strip	1905652	1105501-2
LEAD—Brush Ground	820315	1105501-2
OIL BAFFLE—D.E.	1837897	1105501
OILER—C.E. & D.E.	1880635	1105501-2
PIN—Brush Holder Hinge	820095	1105501
PIN—Brush Holder Stop	820093	1105501
PIN—Brush Holder Stop & Insulation	820092	1105501-2
PIN—Brush Holder Hinge & Insulation	820094	1105501-2
Pipe PLUG—Side of Distributor Well	35063	1105501-2
PLATE—Ball Bearing Retainer—C.E.	1840566	1105502
PLATE—Distributor Mounting	1861607	1105502
Tachometer Drive HOUSING	1860616	1105501-2
Woodruff KEY—D.E.	124548	1105501
Woodruff KEY—D.E.	124546	1105502
Woodruff KEY—C.E.	124544	1105501-2

 Parts not listed in this Catalog will not be sold separately.

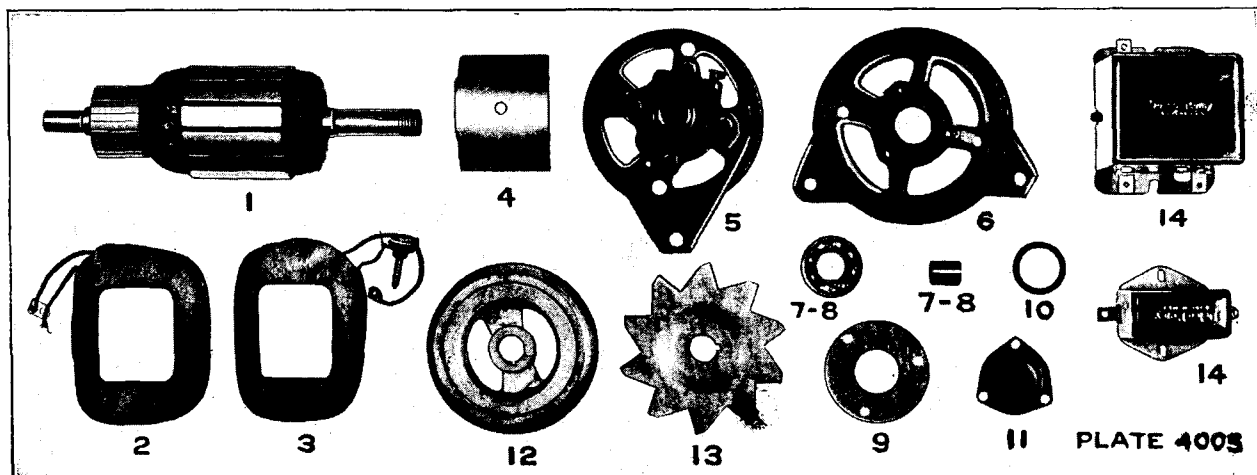


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Arma- ture	Field Coil R.H.	Field Coil L.H.	Pole Shoe	Commu- tator End Frame	Drive End Frame	Bushing or Ball Bearing C.E.	Bushing or Ball Bearing D.E.	Ball Bearing Re- tainer Plate D.E.	Felt Washer Re- tainer Plate D.E.	Commu- tator Cover Plate	Pulley	Fan	Relay or Control Unit
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1105526	1871364	1859625	1859626	37734	1861563	1872425	954378	954521	820707	820709	816212	1871830	1856936	x
1105527	1867623	"	"	"	1861519	1865114	908503	"	"	"	"	"	1885089	x
1105528	1861561	"	"	"	1868994	1868995	954378	"	"	"	816212	"	"	x
1105529	1872426	"	"	"	1872424	1872425	"	"	"	"	"	1872428	1868751	x
1105530	1872487	"	"	"	"	"	"	"	"	"	"	"	"	x
1105531	1872426	"	"	"	"	"	"	"	"	"	"	1872830	"	x
1105532	"	"	"	"	"	"	"	"	"	"	"	"	"	x
1105533	1886536	"	"	"	1861519	1863630	908503	"	"	"	"	"	1885089	x

*See Car Index for Model No. Not part of Generator.

 Delco-Remy
SERVICE PARTS CATALOG

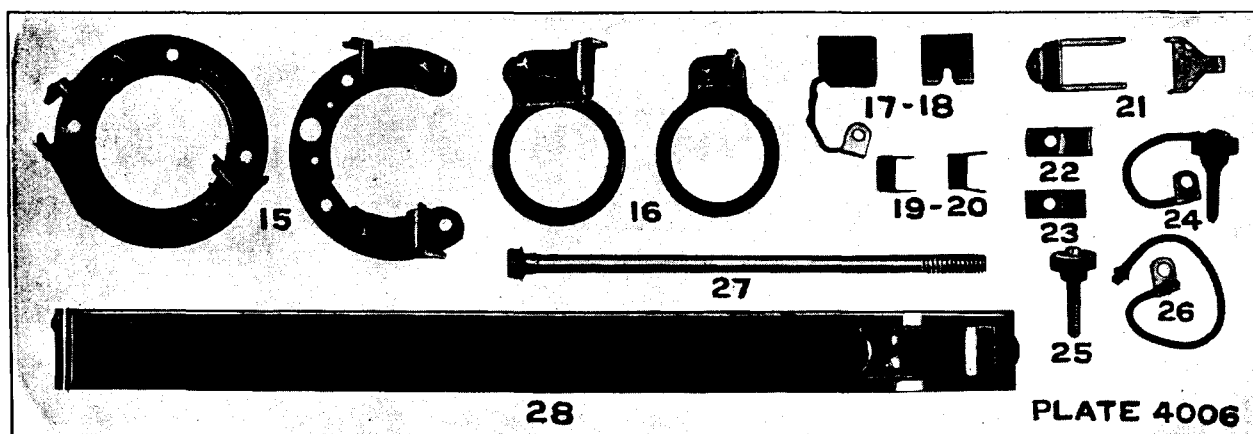


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Main Brush Plate	Third Brush Plate	Main Brush	Third Brush	Main Brush Spring	Third or Ground Brush Spring	Brush Holder or Tension Lever	Third Brush Plate Clamp	Third Brush Plate Clamp Spring	Terminal Stud and Lead	Terminal Stud Only	Relay Lead	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
1105526	1857213		1856494		1850760		1850759				1858749		37030	1918012
1105527	"		"		"		"				"		1883865	"
1105528	"		"		"		"				"		37070	"
1105529	"		"		"		"				"		"	"
1105530	"		"		"		"				"		"	"
1105531	"		"		"		"				"		"	"
1105532	"		"		"		"				"		"	"
1105533	"		"		"		"				"		1883865	"

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer—D.E.	1880781	1105526-7-8-9; 30-1-2-3
Lock Washer—Brush Plate Attaching	106497	1105526-7-8-9; 30-1-2-3
Lock Washer—Brush Lead	1904377	1105526-7-8-9; 30-1-2-3
Lock Washer—End Cover Plate Screw—C.E.	106497	1105526-8-9; 30-1-2
Lock Washer—Fan Attaching Screw	118874	1105526-9; 30-1
Lock Washer—Shaft Nut—C.E.	1888439	1105527-8; 33
Lock Washer—Terminal Stud Nut	1904661	1105526-7-8-9; 30-1-2-3
Lock Washer—Thru Bolt	120638	1105526-7-8-9; 30-1-2-3
Lock Washer—Top of Field Frame	120380	1105526-7-8-9; 30-1-2
NUTS		
Nut—Terminal Stud	121743	1105526-7-8-9; 30-1-2-3
Nut—Shaft—C.E.	1911324	1105527-8; 33
Nut—Shaft—D.E.	1917570	1105526-7-8-9; 30-1-2-3
SCREWS		
Screw—Ball Bearing Retainer Plate—D.E.	1904370	1105526-7-8-9; 30-1-2-3
Screw—Brush Plate Attaching	1904370	1105526-7-8-9; 30-1-2-3
Screw—Brush Lead Attaching	132688	1105526-8-9; 30-1-2-3
Screw—End Cover Plate—C.E.	1904370	1105526-7-8-9; 30-1-2
Screw—Fan Attaching	132969	1105526-9; 30-1
Screw—Pole Shoe	828675	1105526-7-8-9; 30-1-2-3
Screw—Top of Field Frame	132243	1105526-7-8-9; 30-1-2-3
WASHERS		
Washer—Brush Arm Space	1857412	1105526-7-8-9; 30-1-2-3
Washer—Felt—C.E.	37077	1105526-7-8-9; 30-1-2-3
Washer—Felt—D.E.	820706	1105526-7-8-9; 30-1-2-3
Washer—Space—Inside—D.E.	822644	1105526-7-8-9; 30-1-2-3
Washer—Terminal Stud—Insulation	1858753	1105526-7-8-9; 30-1-2-3
Washer—Terminal Stud—Plain	1881409	1105526-7-8-9; 30-1-2-3
Washer—Shaft Nut—Plain—D.E.	811381	1105526; 33
Washer—Shaft Nut—Plain—D.E.	807405	1105527
Washer—Shaft Nut—Plain—D.E.	30205	1105529; 30-1-2
MISCELLANEOUS		
COLLAR—Oil Throwing—D.E.	1838185	1105533
COLLAR—Space—Outside—D.E.	1844575	1105527
COLLAR—Space—Outside—D.E.	1845008	1105526-8-9; 30-1-2
COLLAR—Space—Inside—C.E.	37837	1105527; 33
Cotter PIN—Shaft Nut	103373	1105529; 30-1
Dowel PIN—C.E.	809062	1105526-7-8-9; 30-1-2-3
Dowel PIN—D.E.	809062	1105526-7-8-9; 30-1-2-3
Felt WICK—C.E.	29047	1105526-8-9; 30-1
Felt Washer Retainer CUP—C.E.	37078	1105526-7-8-9; 30-1-2-3
GASKET—End Cover Plate—C.E.	1835457	1105526-8-9; 30-1-2
GASKET—Ball Bearing Retainer Plate—D.E.	820708	1105526-7-8-9; 30-1-2-3
OILER—C.E.	1880635	1105526-7-8-9; 30-1-2-3
OILER—D.E.	1880635	1105526-7-8-9; 30-1-2-3
Oil BAFFLE—D.E.	1837897	1105527-9; 30-3
Terminal CLIP—To Brush	200182	1105526-7-8-9; 30-1-2-3
Woodruff KEY—C.E.	124545	1105527
Woodruff KEY—D.E.	124545	1105526-8-9; 30-1-2-3
Woodruff KEY—D.E.	124548	1105527; 33
Wiring Harness CLAMP	1860459	1105526-8-9; 30-1-2

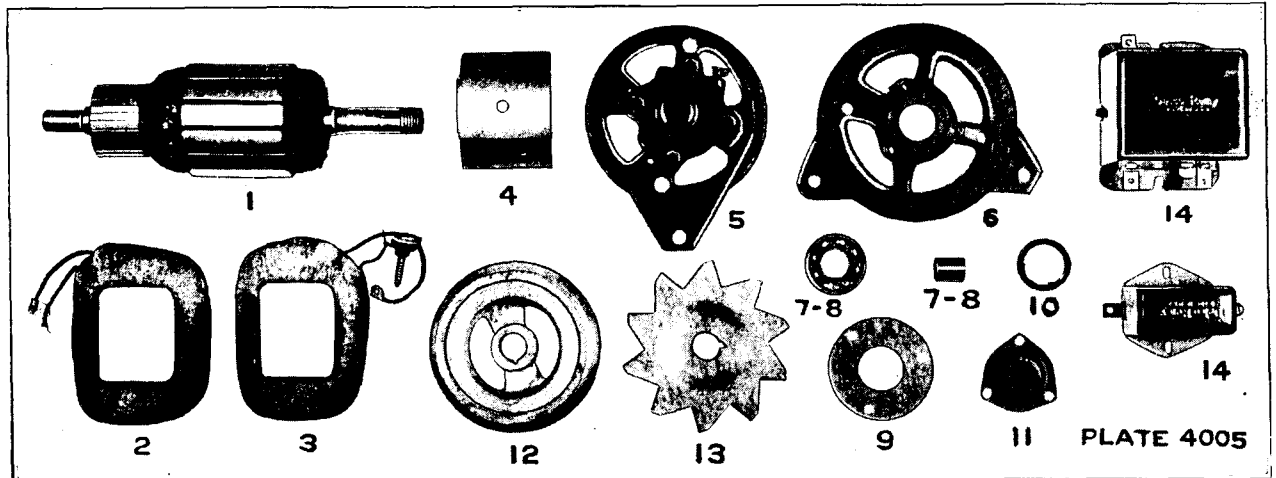 


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Arma- ture	Field Coil R.H.	Field Coil L.H.	Pole Shoe	Commu- tator End Frame	Drive End Frame	Bushing or Ball Bearing C.E.	Bushing or Ball Bearing D.E.	Ball Bearing Re- tainer Plate D.E.	Felt Washer Re- tainer Plate D.E.	Commu- tator End Cover Plate	Pulley	Fan	Relay or Control Unit
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1105726	1871538	1861368	1861369	37734	1861519	1886525	908503	954521	820707	820709			1885089	†
1105727	"	"	"	"	"	"	"	"	"	"			"	†
1105728	1867764	"	"	"	1867763	1867766	954378	"	"	"	816212		1859604	†
1105729	1864258	"	"	"	1861519	1886525	908503	"	"	"			1885089	†
1105730	1867764	"	"	"	1872424	1872425	954378	"	"	"	816212	1871830	1856936	†
1105731	1864258	"	"	"	1861218	1886525	908503	"	"	"			1885089	†
1105732	1867764	"	"	"	1872424	1872425	954378	"	"	"	816212	1871641	1856936	†
1105733	1862000	"	"	"	"	"	"	"	"	"			1869327	†
1105734	1872422	"	"	"	1872424	1872425	"	"	"	"	"	1872428	"	†
1105735	1872697	"	"	"	1872800	1872801	908503	"	"	"		1872802	1885089	†
1105736	1872817	1902118	1861701	"	1861240	1886525	"	"	"	"			"	†
1105738	1873349	"	1873348	"	1905939	1873144	954378	"	"	"	816212		"	†
1105739	1873607	1861368	1861369	"	1861519	1865114	908503	"	"	"			1885089	†
1105740	1874208	1874207	"	"	1874212	1874213	908505	954517	1838692	825196	1874216	1874214	1856936	†
1105741	1862000	1861368	"	"	1861519	1874919	954378	954521	820707	820709	816212			†
1105742	1878090	1902118	1861701	"	1861240	1871728	908503	954517	1841877	825196			1885089	
1105743	1878222	1861368	1861369	"	1861519	1886525	"	954521	820707	820709			"	
1105744	1878809	1874207	"	"	1874212	1874213	908505	954517	1838692	825196	1874216			
1105745	1879243	1902118	1861701	"	1861240	1886525	908503	954521	820707	820709			1885089	
1105746	1878222	1861368	1861369	"	1861519	1886525	"	"	"	"			"	
1105747	1864258	"	"	"	"	"	"	"	"	"			"	
1105748	1880298	1902118	1861701	"	1880300	1855291	"	"	"	"	1859796			
1105749	1880873	"	"	"	1861240	1880874	"	"	"	"			1885089	
1105750	1873349	"	"	"	1880300	1874919	954378	"	"	"	816212			

†Relay or Control Unit not part of Generator—See Index for Model No.

 Delco-Remy
SERVICE PARTS CATALOG

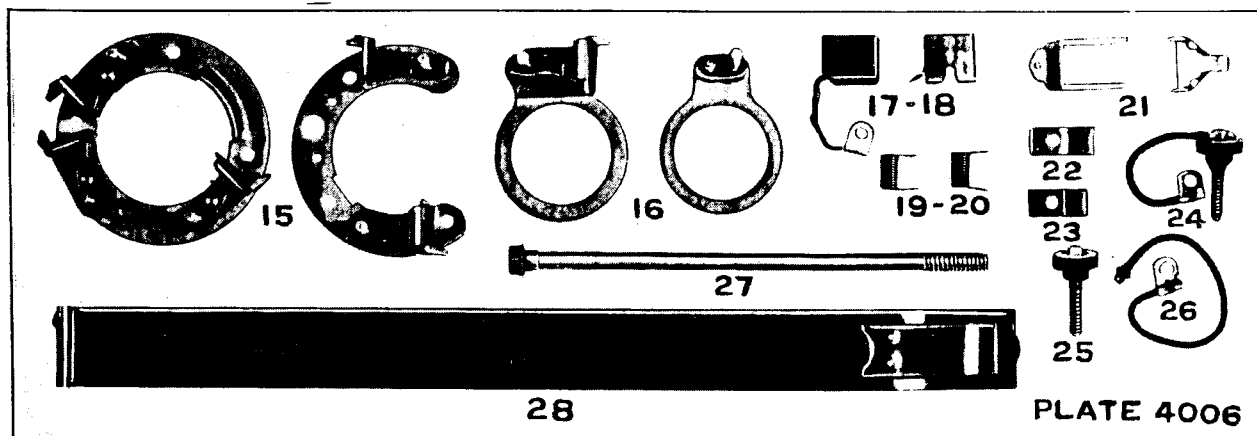

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Main Brush Plate	Third Brush Plate	Main Brush	Third Brush	Main Brush Spring	Third or Ground Brush Spring	Brush Holder or Tension Lever	Third Brush Plate Clamp	Third Brush Plate Clamp Spring	Terminal Stud and Lead	Terminal Stud Only	Relay Lead	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
1105726	1857213		1856191		1903871		1901365				1858749		1927071	1918012
1105727	"		"		"		"				"		"	"
1105728	"		"		"		"				"		37070	"
1105729	"		"		"		"				"		1927071	"
1105730	"		"		"		"				"		37070	1918012
1105731	"		"		"		"				"		1927071	"
1105732	"		"		"		"				"		37070	"
1105733	"		"		"		"				"		"	"
1105734	"		"		"		"				"		"	"
1105735	"		"		"		"				"		1927071	"
1105736	1858586		"		1908829		"				"		"	"
1105738	"		"		"		"			*1858749	"		37070	"
1105739	1857213		"		1903871		"			"	"		1883865	"
1105740	"		"		"		"			*1858749	"		"	"
1105741	"		"		"		"				"		1842289	"
1105742	1858586		"		1908829		"				"		37070	"
1105743	1857213		"		1903871		"				"		1927071	"
1105744	"		"		"		"			*1858749	"		1883865	"
1105745	1858586		1906922		1908829		"			"	"		1927071	"
1105746	1857213		1856494		1903871		"				"		"	"
1105747	"		"		"		"				"		"	"
1105748	1858586		"		1908829		"				"		1842289	"
1105749	"		"		"		"				"		1883865	"
1105750	"		"		"		"				"		37070	"

*Terminal Stud only

Revised to Jan. 1, 1967

SERVICE PARTS CATALOG

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous sections for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer—D.E.	453435	1105736; 43-4-5-6-7
Lock Washer—Ball Bearing Retainer—D.E.	114603	1105742
Lock Washer—Ball Bearing Retainer—D.E.	1962276	1105726-7-8-9; 30-1-2-4-5-8-9; 40-1-4-5-8-9; 50
Lock Washer—Brush Plate Screw	453435	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 40-1-2-3-4-5-6-7-8-9; 50
Lock Washer—Brush Lead Attaching	1914816	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 40-1-2-3-4-5-6-7-8-9; 50
Lock Washer—Commutator End Cover Plate	453435	1105728; 30-2-3-4-8; 40-1-4-8; 50
Lock Washer—Fan Attaching Screw	1914579	1105730-2-3-4; 40
Lock Washer—Fan Belt Adjustment Bracket Screw	9421425	1105726-7; 35; 47
Lock Washer—Generator Mounting Bracket Screw	9421425	1105726-7; 35; 47
Lock Washer—Shaft Nut—C.E.	1915265	1105726-7-9; 31-9; 49-50
Lock Washer—Shaft Nut—D.E.	9421426	1105731
Lock Washer—Shaft Nut—D.E.	1915265	1105733-5-6-9; 41-2-3-5-6-7-8
Lock Washer—Shaft Nut—D.E.	103334	1105740
Lock Washer—Terminal Stud Nut	1914579	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 40-1-2-3-4-5-6-7-8-9; 50
Lock Washer—Thru Bolt	9421424	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 40-1-2-3-4-5-6-7-8-9; 50
Lock Washer—Top of Field Frame	9421423	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 41-2-3-5-6-7-8-9; 50
NUTS		
Nut—Shaft—C.E.	1915172	1105726-7-9; 31-6-9; 41-5-6-9
Nut—Shaft—C.E.	1917035	1105740-2-4
Nut—Shaft—D.E.	1878833	1105744
Nut—Shaft—D.E.	1917570	1105726-7-8; 30-2-4-5-6-9; 43-6-9
Nut—Shaft—D.E.	122264	1105731
Nut—Shaft—D.E.	1915172	1105733-5; 42-3-4-6-7-8; 50
Nut—Shaft—D.E.	451079	1105740
Nut—Shaft—D.E.	1917034	1105742
Nut—Shaft—Hose Coupling	1864341	1105747
Nut—Terminal Stud	121743	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 40-1-2-3-4-5-6-7-8-9; 50
SCREWS		
Screw—Ball Bearing Retainer Plate—D.E.	1914580	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 41-3-5-6-7-8-9; 50
Screw—Ball Bearing Retainer Plate—D.E.	5017850	1105742
Screw—Ball Bearing Retainer Plate—D.E.	1915806	1105740-4
Screw—Brush Plate Attaching	1914580	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 40-1-2-3-4-5-6-7-8-9; 50
Screw—Brush Lead Attaching	453460	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 40-1-2-3-4-5-6-7-8-9; 50
Screw—Commutator End Cover Plate	1914580	1105728; 30-2-3-4-5-8; 40-1-4-8; 50
Screw—Fan Attaching	453336	1105730-2-3-4; 40
Screw—Fan Belt Adjustment Bracket	186479	1105726-7; 35; 43
Screw—Generator Mounting Bracket Attaching	186479	1105726-7; 35; 43
Screw—Pole Shoe	1913960	All
Screw—Top of Field Frame	132243	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 41-2-3-5-6-7-8-9; 50
WASHERS		
Washer—Brush Arm Space	1857412	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 40-1-2-3-4-5-6-7-8-9; 50
Washer—Felt—C.E.	37077	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 40-1-2-3-4-5-6-7-8-9; 50
Washer—Felt—D.E.	820706	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 41-3-5-6-7-8-9; 50
Washer—Felt—D.E.	825197	1105740-2-4
Washer—Shaft Nut—Plain—D.E.	1914589	1105726-7; 34-5-6; 40-3-4-6
Washer—Shaft Nut—Plain—D.E.	1938744	1105730
Washer—Shaft Nut—Plain—D.E.	1934383	1105730-2
Washer—Shaft Nut—D.E.	1926782	1105728; 39; 49
Washer—Shaft Nut—D.E.	1878834	1105744
Washer—Space—Inside—D.E.	822644	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 41-3-5-6-7-8-9; 50
Washer—Space—Inside—D.E.	1845626	1105740-4
Washer—Terminal Stud—Insulation	1858753	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 40-1-2-3-4-5-6-7-8-9; 50
Washer—Terminal Stud—Plain	826319	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 40-1-2-3-4-5-6-7-8-9; 50

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS		
BRACKET—Fan Belt Adjustment.....	1871844	1105726-7; 43
BRACKET—Fan Belt Adjustment.....	1872696	1105735
BRACKET—Generator Mounting.....	1871843	1105726-7; 43
BRACKET—Generator Mounting.....	1872695	1105735
COLLAR—Oil Throwing—Inside—D.E.....	1843942	1105742
COLLAR—Space—Inside—C.E.....	37837	1105726-7-9; 31-5-6-9; 42-3-5-6-7-9
COLLAR—Space—Inside—C.E.....	1863141	1105748
COLLAR—Space—Outside—D.E.....	1864255	1105729; 31; 47
COLLAR—Space—Outside—D.E.....	37830	1105726-7; 36; 43-6
COLLAR—Space—Outside—D.E.....	1836194	1105728
COLLAR—Space—Outside—D.E.....	1869717	1105736
COLLAR—Space—Outside—D.E.....	1845008	1105730-2-3-4-8; 41; 50
COLLAR—Space—Outside—D.E.....	1863140	1105735; 48
COLLAR—Space—Outside—D.E.....	1844575	1105739; 49
COLLAR—Space—Outside—D.E.....	1849278	1105740
COLLAR—Space—Outside—D.E.....	825254	1105742
COLLAR—Space—Outside—D.E.....	1879245	1105745
COLLAR—Space—Outside—D.E.....	1878811	1105744
COVER Plate—D.E.....	1866970	1105744
Cotter PIN—Shaft Nut—D.E.....	103373	1105730-2-4-5-6
Dowel PIN—C.E. & D.E.....	809062	1105726-7-8-9; 30-1-2-3-4-5-6-8; 40-1-2-3-4-5-6-7-8-9; 50
Dowel PIN—Side of Frame.....	820369	1105731
Felt Retainer CUP—C.E.....	37078	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 40-1-3-4-5-6-7-8-9; 50
GASKET—Ball Bearing Retainer Plate—D.E.....	820708	1105726-7-8-9; 30-1-2-3-4-5-6-8; 41-5-6-7-8-9; 50
GASKET—Ball Bearing Retainer Plate—D.E.....	825260	1105740-4
GASKET—Commutator End Cover Plate.....	1835457	1105728; 30-1-3-4-8; 41; 50
Grease CUP.....	1860863	1105735
Oil BAFFLE—D.E.....	1837897	1105739; 49
OILER—C.E.....	113702	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 40-1-2-3-4-5-6-7-9; 50
OILER—D.E.....	113702	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 40-1-3-4-5-6-7-9; 50
Oil WICK—C.E.....	1947350	1105728; 30-2-3-4-8; 41-8; 50
Terminal CLIP—To Brush.....	200182	1105726-7-8-9; 30-1-2-3-4-5-6-8-9; 40-1-2-3-4-5-6-7-8-9; 50
Wiring Harness CLAMP.....	1860459	1105728; 30-2-3-4-8; 41
Woodruff KEY—C.E.....	124545	1105726-7-9; 31-3-5; 45-6-7-9
Woodruff KEY—C.E.....	106751	1105740-4
Woodruff KEY—D.E.....	124546	1105726-7; 31-5; 42-3-6
Woodruff KEY—D.E.....	124545	1105728; 30-2-4-6-8-9; 41-2-3-8; 50
Woodruff KEY—D.E.....	124548	1105749
Woodruff KEY—D.E. (3/8x3/4).....	124543	1105745

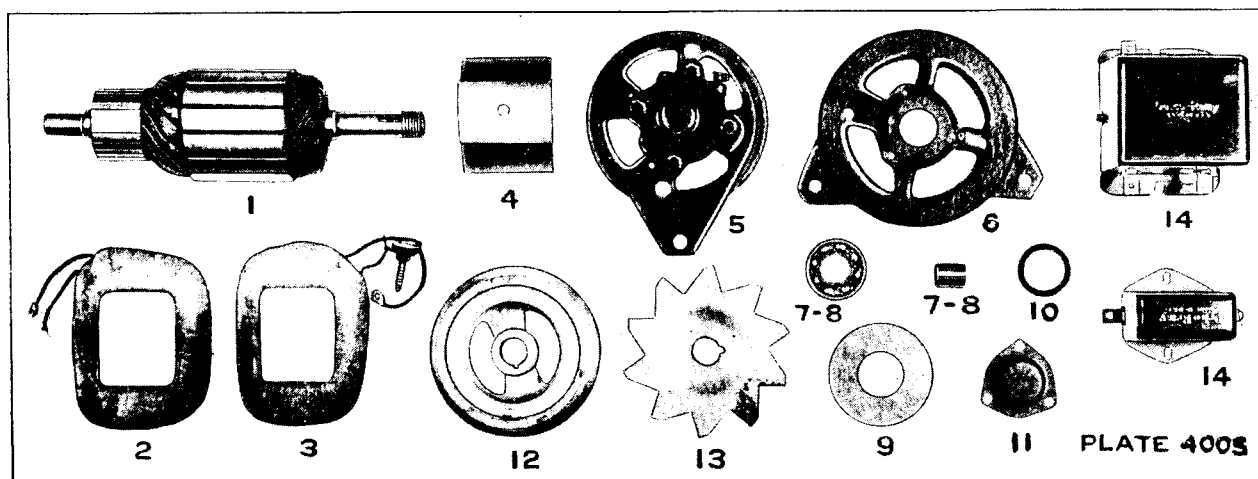 


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Arma- ture	Field Coil R.H.	Field Coil L.H.	Pole Shoe	Commu- tator End Frame	Drive End Frame	Bushing or Ball Bearing C.E.	Bushing or Ball Bearing D.E.	Ball Bearing Retainer Plate D.E.	Felt Washer Re- tainer D.E.	Commu- tator End Cover Plate	Pulley	Fan	Relay or Control Unit
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1105751	1868141	1868139	1868140	37734	1861765	1886525	908503	954521	820707	820709			1885089	
1105752	1861561	1859625	1869341	"	1872424	1872425	954378	"	"	"	816212			
1105753	1869370	1868139	1868140	"	1869373	"	"	"	"	"	"			
1105754	"	1873169	1873168	"	"	"	"	"	"	"	"			*1116768
1105755	1873143	1873140	1873139	"	1905439	1873144	"	"	"	"	"			"
1105756	1873600	1873169	1873597	"	1873599	1873601	"	"	"	"	"			
1105757	1873996	1873993	1873139	"	1873995	"	"	"	"	"	"			
1105758	1873600	1873169	1873597	"	1879427	1879429	"	"	"	"	"			
1105759	1873996	1873993	1873139	"	1874746	"	"	"	"	"	"			
1105760	1869370	1873169	1873168	"	1878525	1874919	"	"	"	"	"			*1116795
1105761	1873143	1873140	1873139	"	1881579	"	"	"	"	"	"			*1116768
1105762	1869370	1873169	1873168	"	1869373	1872425	"	"	"	"	"			*1116795
1105763	1873143	1873140	1873139	"	1905439	1873144	"	"	"	"	"			x "
1105764	1869370	1868139	1902713	"	1902715	1886819	"	"	"	"	"			
1105765	1903797	1873169	1903796	"	1903800	1902427	"	954517	1841877	825196	"			†5899
1105766	1905563	1905557	1905558	"	1905560	1872425	"	954521	1905807	820709	"			
1105767	"	"	1905574	"	1905576	1905578	"	"	"	"	"			
1105768	1905869	1873140	1873139	"	1905439	1905444	"	"	"	"	"			*1116859
1105769	1907720	"	"	"	"	"	"	"	"	"	"			x "
1105770	1907869	1873169	1873168	"	1905560	1872425	"	"	"	"	"			x "

*For parts see Relay—Group 4.

 †For parts see Regulator—Group 5.

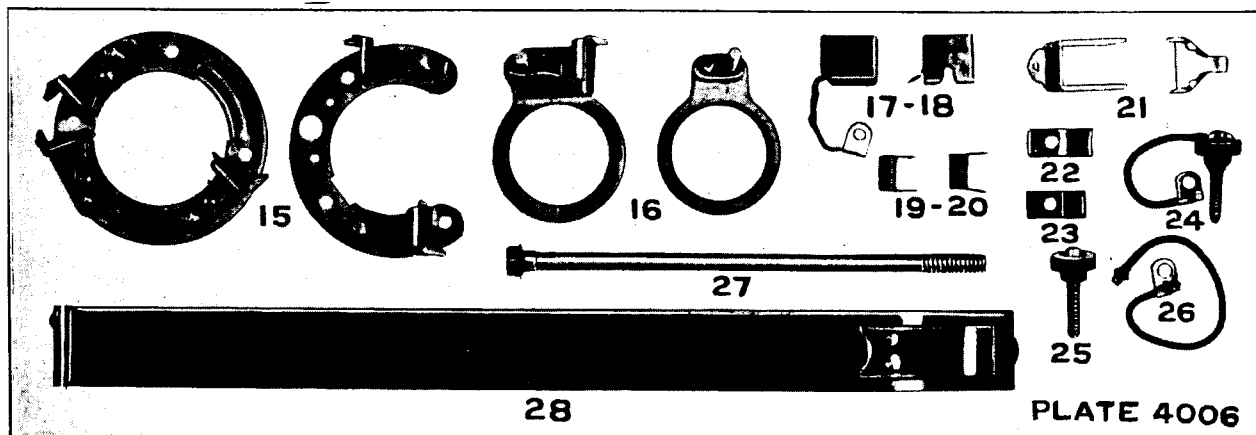

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Main Brush Plate	Third Brush Plate	Main Brush	Third Brush	Main Brush Spring	Third Brush Spring	Brush Holder or Arm	Third Brush Plate Clamp Upper	Third Brush Plate Clamp Spring Lower	Terminal Stud and Lead	Terminal Stud	Relay Lead R.H.	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
1105751	1857213	1907872	1856494	1906940	1903871	1946798	1904365	1857187	1905561		1858749		1927071	1918012
1105752	1857915		"	"	"	"	"	"	"		"		37070	"
1105753	1857213	1907872	"	1906940	"	1946798	"	1850770	1905561		"		"	"
1105754	1857915	"	"	"	"	"	"	"	"		"	+1856609	"	"
1105755	1862953	1907719	"	"	1908829	1903870	"	"	"		"	*809966	"	"
1105756	1857915	1907872	"	"	1903871	1946798	"	"	"	*1858749	"		"	"
1105757	1862953	1907719	"	"	1908829	1903870	"	"	"	"	"		"	"
1105758	1857915	1907872	"	"	1903871	1946798	"	"	"	"	"		"	"
1105759	1862953	1907719	"	"	1908829	1903870	"	"	"	"	"		"	"
1105760	1857915	1907872	"	"	1903871	1946798	"	1857187	"		"	*1865643	"	"
1105761	1862953	1907719	"	"	1908829	1903870	"	"	"		"	*809966	"	"
1105762	1857915	1907872	"	"	1903871	1946798	"	1850770	"		"	*1812004	"	"
1105763	1862953	1907719	"	"	1908829	1903870	"	"	"		"	*1883533	"	"
1105764	1857915	1907872	"	"	1903871	1946798	"	"	"	1858749	"		"	"
1105765	1903801	1909151	"	"	"	"	"	1857187	1850771	*1858749	"		"	1879530
1105766	1904363	1907872	"	"	1903871	1903872	1907652	1905082	1905561	1910360	1858749		"	1918012
1105767	1915776	"	"	"	"	"	"	"	"	"	"		"	"
1105768	1905867	1905868	"	"	1905034	1905084	"	"	"	"	"		"	"
1105769	1907717	1907719	"	"	1908829	1903870	1904365	"	"	"	"		"	"
1105770	1907871	1907872	"	"	1903871	1946798	"	"	"		"	*816411	"	"

+1865643 Left hand lead—6" long.

*1883533 Left hand lead—8" long.

*1865643 Left hand lead—To ground terminal of relay.

□ 818105 Left hand lead—To ground terminal of relay

* Terminal Stud only.

Revised to November 1, 1966

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer Plate.....	453135	1105751
Lock Washer—Ball Bearing Retainer Plate Screw.....	802731	1105752-3-4-5-6-7-8-9; 60-1-2-3-4
Lock Washer—Ball Bearing Retainer Plate Screw—D.E.....	138479	1105765
Lock Washer—Ball Bearing Retainer Plate Screw—D.E.....	1962276	1105766-7-8-9; 70
Lock Washer—Brush Lead Attaching Screw.....	1914816	1105751-2-3-4-5-6-7-8; 60-1-2-3-4-6-7-8-9; 70
Lock Washer—Brush Lead Attaching Screw.....	802731	1105759
Lock Washer—Brush Plate Screw.....	453435	1105751-2-3-4-5-6-7-8-9; 60-1-2-3-4
Lock Washer—Brush Plate Screw—Main.....	453844	1105765
Lock Washer—Brush Plate Screw—Main.....	453435	1105766-7-8-9; 70
Lock Washer—End Cover Plate Screw—C.E.....	453435	1105752-3-4-5-6-7-8-9; 60-1-2-3-4-6-7-8-9; 70
Lock Washer—Regulator Mounting Screw.....	138479	1105765
Lock Washer—Relay Mounting Screw.....	802729	1105754-5; 60-1-2-3
Lock Washer—Relay Mounting Screw.....	453844	1105768-9; 70
Lock Washer—Shaft Nut—D.E.....	804000	1105751-2-3-4-5; 60-1-2-3-4
Lock Washer—Shaft Nut—D.E.....	9421426	1105751
Lock Washer—Shaft Nut—D.E.....	1915265	1105766-7-8-9; 70
Lock Washer—Terminal Stud.....	1914579	1105751-2-3-6-7-8-9; 64-5-6-7-8-9
Lock Washer—Third Brush Plate Clamp Screw.....	453844	1105751; 60-1-5
Lock Washer—Third Brush Plate Clamp Screw.....	453435	1105753-4-5-6-7-8-9; 62-3-4-6-7-8-9; 70
Lock Washer—Thru Bolt.....	9421424	1105751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70
Lock Washer—Top of Field Frame.....	9421423	1105751-2-3-6-7-8-9; 64
Lock Washer—Top of Field Frame.....	1902782	1105766-7
NUTS		
Nut—Cover Band Screw.....	453433	1105765
Nut—Shaft—C.E.....	1915172	1105751
Nut—Shaft—D.E.....	122264	1105751
Nut—Shaft (Sleeve) Outside—D.E.....	1864341	1105751
Nut—Shaft—D.E.....	1915172	1105752-3-4-5; 60-1-2-3-4-6-7-8-9; 70
Nut—Shaft—D.E.....	1917570	1105756-7-8-9
Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{1}{4}$ x $1\frac{1}{4}$ Hex.).....	1874909	1105765
Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{1}{4}$ x $\frac{3}{4}$ Semi-castle).....	1841367	1105765
Nut—Terminal Stud.....	121743	1105751-2-3-6-7-9; 64-5
Nut—Terminal Stud.....	115596	1105766-7-8-9
Nut—Third Brush Plate Clamp Screw.....	134536	1105765
SCREWS		
Screw—Ball Bearing Retainer Plate—D.E.....	1914580	1105751-2-3-4-5-6-7-8-9; 60-1-2-3-4-6-7-8-9; 70
Screw—Ball Bearing Retainer Plate—D.E.....	5017850	1105765
Screw—Brush Lead Attaching.....	453460	1105751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5
Screw—Brush Lead Attaching.....	454329	1105766-7-8-9; 70
Screw—Brush Plate—Main.....	1914580	1105751-2-3-4-5-6-7-8-9; 60-1-2-3-4-6-7-8-9; 70
Screw—Brush Plate—Main.....	1888975	1105765
Screw—Brush Plate Clamp—Third.....	1888975	1105751
Screw—Brush Plate Clamp—Third.....	1915806	1105753-4-5-6-7-8
Screw—Brush Plate Clamp—Third.....	454408	1105765
Screw—Brush Plate Clamp—Third.....	453464	1105767-8-9
Screw—Brush Plate Clamp—Third.....	453168	1105766; 70
Screw—Brush Plate Clamp—Third—Upper.....	1902652	1105759; 62-3-4
Screw—Brush Plate Clamp—Third—Upper.....	1901833	1105760-1
Screw—Cover Band.....	453479	1105765
Screw—End Cover Plate—C.E.....	1914580	1105752-3-4-5-6-9; 60-1-2-3-4-5-6-7-8-9; 70
Screw—Pole Shoe.....	1913960	All
Screw—Regulator Mounting.....	132900	1105765
Screw—Relay Mounting.....	453418	1105754-5; 60-1-2-3-8-9; 70
Screw—Top of Field Frame.....	132243	1105751-2-3-6-7-8-9; 64-6-7
WASHERS		
Washer—Brush Arm Space.....	1857412	1105751-3-4-5-6-7-8-9; 60-1-2-3-4-5
Washer—Brush Arm Space.....	1914741	1105766-7-8-9; 70
Washer—Felt—C.E.....	37077	1105751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
WASHERS—Continued		
Washer—Felt—D.E.	820706	1105751-2-3-4-5-6-7-8-9; 60-1-2-3-4-6-7-8-9; 70
Washer—Felt—D.E.	825197	1105765
Washer—Plain—Regulator Mounting Screw	1856056	1105765
Washer—Space—Inside—D.E.	822644	1105751-2-3-4-5-6-7-8-9; 60-1-2-3-4-6-7-8-9; 70
Washer—Shaft Nut—Plain—D.E.	1938744	1105751
Washer—Shaft Nut—Plain—D.E.	1934383	1105756-7-8-9
Washer—Terminal Stud Insulation	1858753	1105751-2-3-6-7-8-9; 64-5
Washer—Terminal Stud Insulation	1902746	1105766-7-8-9
Washer—Terminal Stud Plain	826319	1105751-2-3-6-7-8-9; 64-5-7
Washer—Terminal Stud Plain	1954452	1105766-8-9
MISCELLANEOUS		
BUSHING—Relay Lead	812891	1105754-5; 60-1-2-3; 70
BUSHING—Terminal Stud Insulating	*	1105766-7-8
CLAMP—Wiring Harness	1860459	1105752; 64-6-7
COLLAR—Inside—C.E.	37837	1105751
COLLAR—Oil Throwing—Inside—D.E.	1857941	1105765
COLLAR—Outside—D.E.	1864255	1105751
COLLAR—Outside—D.E.	1845008	1105752-3-4-5-6-7-8-9; 60-1-2-3-4-6-7-8
COLLAR—Space—Outside—D.E.	825254	1105765
COLLAR—Space—Outside—D.E.	1863140	1105769; 70
Dowel PIN—C.E. & D.E.	809062	1105751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70
Felt Washer Retainer CUP	37078	1105751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70
Field Terminal Ground LEAD	1868217	1105751-3; 66
GASKET—Ball Bearing Retainer Plate—D.E.	820708	1105751-2-3-4-5-6-7-8-9; 60-1-2-3-4-6-7-8-9; 70
GASKET—Commutator End Cover	1835457	1105751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70
LEAD—"A" Negative Terminal to Regulator	1878183	1105765
LEAD—"A" Positive Terminal to Regulator	1872661	1105765
LEAD—"A" Terminal to Relay	1872924	1105768-9
LEAD—Field Terminal to Regulator	1872661	1105765
LEAD—Negative Terminal to Relay	1880353	1105768-9
OILER—C.E.	113702	1105751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70
OILER—D.E.	113702	1105751-2-3-4-5-6-7-8-9; 60-1-2-3-4-6-7-8-9; 70
Oil WICK—C.E.—Felt	1947350	1105752-3-4-5-6-7-8-9; 60-1-2-3-4-6-7-8-9; 70
Terminal CLIP—To Brush	200182	1105752-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70
Terminal CLIP—To Relay—L.H.	200154	1105754-5; 60-1-2-3; 70
Terminal CLIP—To Relay—R.H.	200191	1105754-5; 60-1-2-3; 70
Wiring Harness CLAMP	1860459	1105753-6-7-8-9
Woodruff KEY—C.E.	124545	1105751-2-3-4
Woodruff KEY—D.E.	124545	1105754-5-6-7-8-9; 60-1-2-3-4-6-7-8-9; 70
Woodruff KEY—D.E.	124546	1105751; 65

 
*Included with 1858749 Stud.

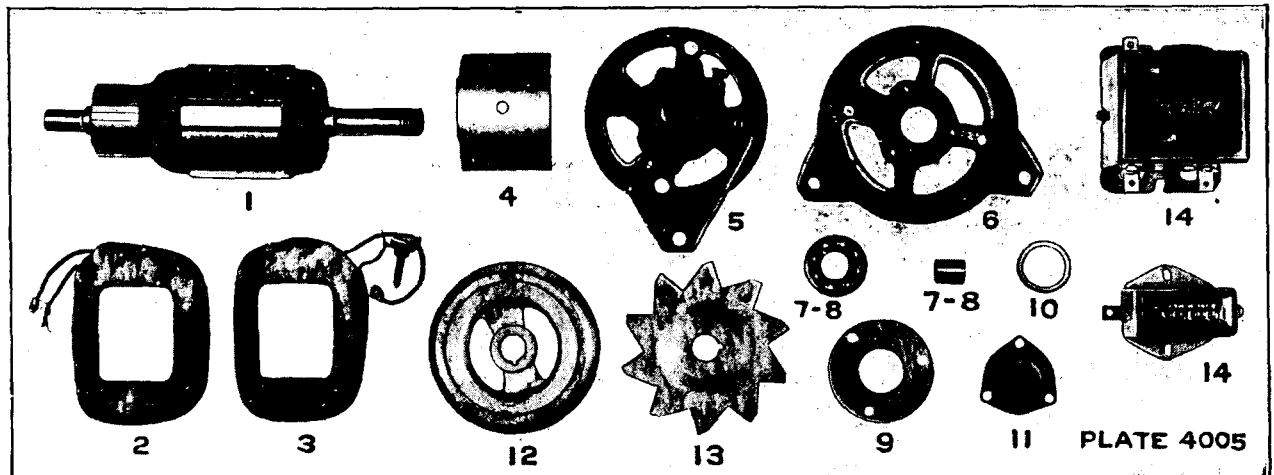

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Arma- ture	Field Coil R.H.	Field Coil L.H.	Pole Shoe	Commu- tator End Frame	Drive End Frame	Bushing or Ball Bearing C.E.	Bushing or Ball Bearing D.E.	Ball Bearing Retainer Plate D.E.	Felt Washer Retainer Plate D.E.	Commu- tator End Cover Plate	Pulley	Fan	Relay or Control Unit (Reg.)
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1105776	1883339	1861368	1861369	37734	1872424	1872425	954378	954521	820707	820709	816212	1872488	1868751	x
1105777	1864258	"	"	"	1861519	1886525	908503	"	"	"	"	"	1885089	x
1105778	1861702	1883538	1883537	"	1861240	1862748	"	"	"	"	"	"	"	x
1105779	1883788	1861368	1861369	"	1883842	1855291	"	"	"	"	1859796	"	"	x
1105780	1864328	1883906	1883907	"	1861519	1871728	"	954517	1841877	825196	1835646	"	1885089	x
1105781	1862000	1861368	1861369	"	1886818	1886819	954378	954521	820707	820709	816212	1869327	1868751	x
1105782	1863628	"	"	"	1861519	1863630	908503	"	"	1837371	"	"	1885089	x

 *See Car Index for Model No.—Not part of Generator.

[illegible]

Revised to September 1, 1969


SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	1962276	1105776-7-8-9; 81-2
Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	114603	1105780
Lock Washer—Brush Lead Screw	1914816	1105776-7-8-9; 80-1-2
Lock Washer—Brush Plate Attaching Screw	453435	1105776-7-8-9; 80-1-2
Lock Washer—Commutator End Cover Plate Screw	453435	1105776-9; 80-1
Lock Washer—Fan Attaching	1914579	1105776; 81
Lock Washer—Field Lead Ground Screw	453844	1105778; 80
Lock Washer—Shaft Nut—C.E.	1915265	1105777-8-9; 80-2
Lock Washer—Shaft Nut—D.E.	9421426	1105777
Lock Washer—Shaft Nut—D.E.	1915265	1105781
Lock Washer—Terminal Stud	1914579	1105776-7-8-9; 80-1-2
Lock Washer—Thru Bolt	9421424	1105776-7-8-9; 80-1-2
Lock Washer—Top of Field Frame	9421423	1105776-7-8-9; 80-1-2
NUTS		
Nut—Shaft—C.E.	1915172	1105777-8-9; 80-2
Nut—Shaft—D.E.	122264	1105777
Nut—Shaft—D.E.	1917570	1105776-8; 82
Nut—Shaft—D.E.	1915172	1105781
Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{1}{8}$ x $1\frac{1}{4}$ Hex)	1874909	1105780
Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{1}{8}$ x $\frac{3}{4}$ Semi-Castle)	1841367	1105780
Nut—Terminal Stud	121743	1105776-7-8-9; 80-1-2
SCREWS		
Screw—Ball Bearing Retainer Plate—D.E.	1914580	1105776-7-9; 81-2
Screw—Ball Bearing Retainer Plate—D.E.	5017850	1105778; 80
Screw—Brush Lead Attaching	453460	1105776-7-8-9; 80-1-2
Screw—Brush Plate Attaching	1914580	1105776-7-8-9; 80-1-2
Screw—Commutator End Cover Plate	1914580	1105776-9; 80-1
Screw—Fan Attaching	454533	1105776; 81
Screw—Field Lead Ground	115607	1105778; 80
Screw—Pole Shoe	828675	All
Screw—Top of Field Frame	132243	1105776-7-8-9; 80-1-2
WASHERS		
Washer—Brush Arm Space	1857412	1105776-7-8-9; 80-1-2
Washer—Felt—C.E.	37077	1105776-7-8-9; 80-1-2
Washer—Felt—D.E.	820706	1105776-7-8-9; 81-2
Washer—Felt—D.E.	825197	1105780
Washer—Shaft Nut—D.E.	1934383	1105782
Washer—Shaft Nut—Plain—D.E.	1926782	1105778
Washer—Shaft Nut—Plain—D.E.	30205	1105776
Washer—Shaft Nut—Plain—D.E.	1938744	1105777
Washer—Space—Inside—D.E.	822644	1105776-7-8-9; 81-2
Washer—Terminal Stud—Plain	826319	1105776-7-8-9; 80-1-2
Washer—Terminal Stud—Insulation	1858753	1105776-7-8-9; 80-1-2
MISCELLANEOUS		
COLLAR—Oil Throwing—D.E.	1857941	1105780
COLLAR—Oil Throwing—D.E.	1838185	1105782
COLLAR—Space—Inside—C.E.	37837	1105777-8; 80-2
COLLAR—Space—Inside—C.E.	1863141	1105779
COLLAR—Space—Outside—D.E.	1845008	1105776; 81
COLLAR—Space—Outside—D.E.	1864255	1105777
COLLAR—Space—Outside—D.E.	1844575	1105778
COLLAR—Space—Outside—D.E.	1863140	1105779
COLLAR—Space—Outside—D.E.	829254	1105780
Cotter PIN—Shaft Nut—D.E.	103373	1105776
Dowel PIN—C.E. & D.E.	809062	1105776-7-8-9; 80-1-2
Felt Washer Retainer CUP—C.E.	37078	1105776-7-8-9; 80-1-2
GASKET—Ball Bearing Retainer Plate—D.E.	820708	1105776-7-8-9; 81-2
GASKET—End Cover Plate—C.E.	1835457	1105776; 81
OILER—C.E.	113702	1105776-8-9; 80-1-2
OILER—D.E.	113702	1105776-7-8-9; 81-2
Oil BAFFLE	1837897	1105778; 82
Oil WICK—C.E.	1947350	1105776-9; 81
Terminal CLIP—To Brush	200182	1105776-7-8-9; 80-1-2
Wiring Harness CLAMP	1860459	1105776; 81
Woodruff KEY—C.E.	124545	1105777-8-9; 80-2
Woodruff KEY—D.E.	124546	1105777; 80
Woodruff KEY—D.E.	124548	1105778; 82
Woodruff KEY—D.E.	124545	1105777; 81

 Parts not listed in this Catalog will not be sold separately.

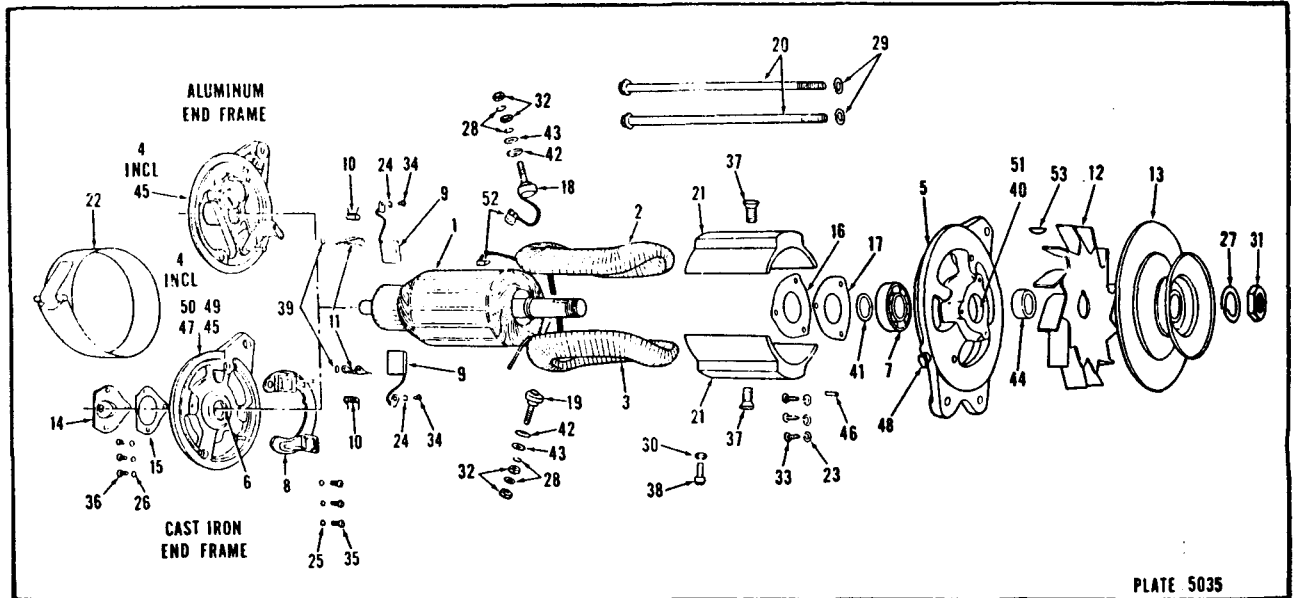

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil — R.H.	Field Coil — L.H.	Frame — C.E.	Frame — D.E.	Bushing or Ball Bearing — C.E.	Ball Bearing — D.E.	Plate — Brush	Brush	Spring — Brush	Arm — Brush
	1	2	3	4	5	6	7	8	9	10	11
1105851.....	1935778	1880537	1880538	1880541	1954985	812823	954378		1878249	1916542	1944373
1105852.....	"	"	"	1880885	1880887	"	"		"	"	"
1105853.....	"	"	"	1880943	1880945	"	"		"	"	"
1105854.....	1883136	1883133	1883132	1904267	1954985	"	"		"	"	"
1105855.....	"	1883703	1883704	"	"	"	"		"	"	"
1105856.....	1935778	"	"	1880541	"	"	"		"	"	"
1105857.....	"	"	"	1880885	1880887	"	"		"	"	"
1105858.....	"	"	"	1880943	1880945	"	"		"	"	"
1105859.....	1886523	1883133	1883132	1886518	1886525	908503	954521		"	"	"
1105860.....	1887047	"	"	1907314	1905527	954259	954143		"	"	"
1105861.....	"	"	"	"	"	"	"		"	"	"
1105862.....	1888493	"	"	"	"	"	"		"	"	"
1105863.....	1887047	"	"	"	"	"	"		"	"	"
1105864.....	"	"	"	"	"	"	"		"	"	"
1105865.....	"	1883703	1883704	1889713	1889711	"	"		"	"	"
1105866.....	1888493	1883133	1883122	1907314	1905527	"	"		"	"	"
1105867.....	1887047	"	"	"	"	"	"		"	"	"
1105868.....	1888493	"	"	"	"	"	"		"	"	"
1105869.....	1887047	"	"	"	"	"	"		"	"	"
1105870.....	1903424	"	"	1903421	"	"	"		"	"	"
1105871.....	1904269	"	"	1904267	"	812823	"		"	"	"
1105872.....	1883136	"	"	"	"	"	"		"	"	"
1105873.....	1904269	"	"	"	"	"	"		"	"	"
1105874.....	1905526	1905689	1905522	1905524	"	"	"		1904828	1905219	"
1105875.....	1908070	1883703	1883704	1902423	1902427	954143	954517		1878249	1916542	"
1105876.....	1908090	"	"	1907314	1954985	908503	954378		"	"	"
1105877.....	1887047	"	"	"	"	"	"		"	"	"
1105878.....	1910597	"	"	1909762	1910271	954143	954521		"	"	"
1105879.....	"	1909512	1909511	1910599	"	"	"		"	1908829	"
1105880.....	1909621	1883703	1883704	1902423	1902427	"	954517		"	1916542	"

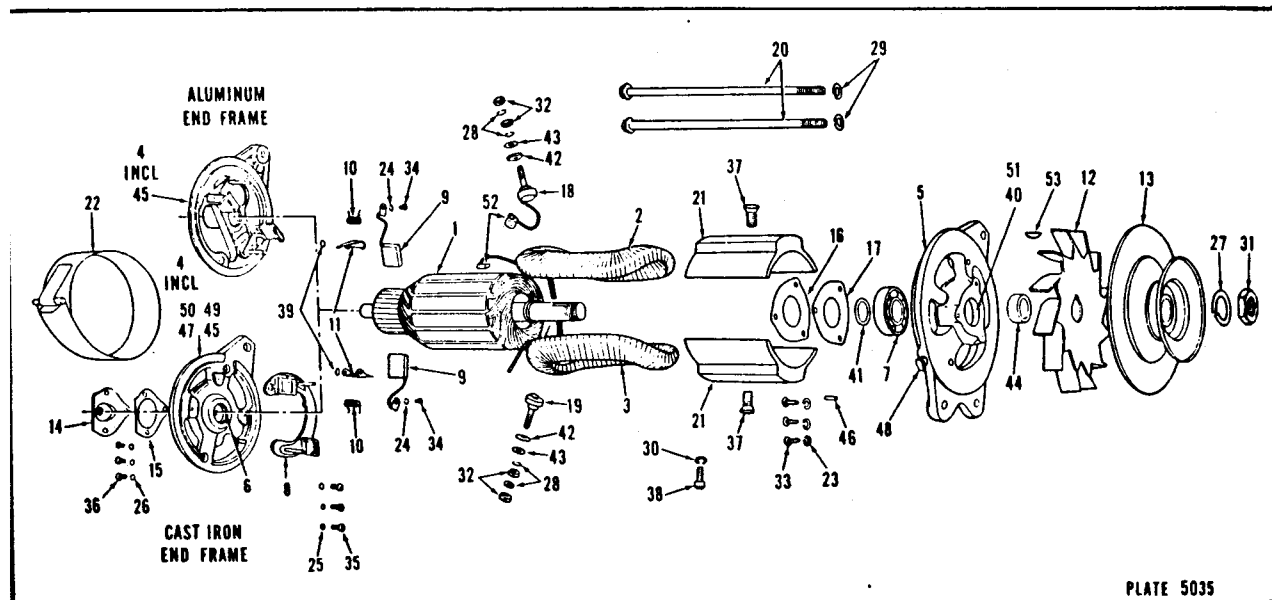 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Fan — C.E. or D.E.	Pulley	Plate — Cover — C.E.	Gasket — Cover Plate	Plate — Bearing Retainer — D.E.	Gasket — Retainer Plate	Terminal Stud & Lead	Terminal Stud Only	Bolt Thru	Shoe Pole	Band Cover
	12	13	14	15	16	17	18	19	20	21	22
1105851.....	*1880558		1904262	1880549	1911263	1912008	1858749	1858749	1886685	1880539	1918012
1105852.....	"		"	"	"	"	"	"	"	"	"
1105853.....	"	1877888	"	"	"	"	"	"	"	"	"
1105854.....	"	"	"	"	"	"	1858754	"	"	1903427	"
1105855.....	"	"	"	"	"	"	"	"	"	"	"
1105856.....	*"		"	"	"	"	1858749	"	"	"	"
1105857.....	*"		1884362	"	"	"	"	"	"	"	"
1105858.....	"	*1877888	1904262	"	"	"	"	"	"	"	"
1105859.....	"	"	"	"	820707	820708	"	"	809763	"	"
1105860.....	"	3660298	816212	1835457	1861590	"	1858754	"	1886685	"	"
1105861.....	"	1883325	"	"	"	"	"	"	"	"	"
1105862.....	"	1884360	"	"	"	"	"	"	"	"	"
1105863.....	"	1885191	"	"	"	"	"	"	"	"	"
1105864.....	*"	"	"	"	"	"	"	"	"	"	"
1105865.....	*"	"	"	"	"	"	"	"	"	"	"
1105866.....	"	"	"	"	"	"	"	"	"	"	"
1105867.....	1880558	1900437	"	"	"	"	"	"	"	"	"
1105868.....	"	1885191	"	"	"	"	"	"	"	"	"
1105869.....	"	1902330	"	"	"	"	"	"	"	"	"
1105870.....	*"	"	"	"	"	"	"	"	"	"	"
1105871.....	*"		1904262	1880549	"	"	"	"	"	"	"
1105872.....	*"		"	"	"	"	"	"	"	"	"
1105873.....	*"		"	"	"	"	"	"	"	"	"
1105874.....	*"		"	"	"	"	"	"	"	"	"
1105875.....	1903078				1841877	"	"	"	"	"	"
1105876.....	*1880558		816212	1835457	1911263	1912008	"	"	"	"	"
1105877.....	"		"	"	"	"	"	"	"	"	"
1105878.....	x				820707	820708	"	"	"	"	"
1105879.....	x				"	"	"	"	"	"	"
1105880.....	1903078				1841877	"	"	"	"	"	"

*Fan—Shipped separately.

*Use 1883710 double groove Pulley (optional).

*When replacing Fan & Baffle Assembly, use 1866400 Fan and 1877887 Baffle.

#Terminal Stud Only.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

 
Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Air Scoop Attaching Screw.....	453844	1105857
	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.....	1962276	1105851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-6-7-8-9
23	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.....	138479	1105875; 80
24	Lock Washer—Brush Lead Screw.....	1914816	All
26	Lock Washer—End Cover Plate Screw—C.E.....	453844	1105851-2-3-4-5-6-7-8; 71-2-3-4
26	Lock Washer—End Cover Plate Screw—C.E.....	453435	1105860-1-2-4-5-6-7-8-9; 70-6-7
	Lock Washer—Field Lead Ground Screw.....	453844	1105854-9; 60-1-2-3-4-6-7-8-9; 70-1-2-3-4
	Lock Washer—Shaft Nut—C.E.....	1915265	1105859; 78-9
	Lock Washer—Shaft Nut—C.E.....	1913696	1105875; 80
27	Lock Washer—Shaft Nut—D.E.....	1915265	1105851-2-3-6-7-8; 76
27	Lock Washer—Shaft Nut—D.E.....	9421426	1105859
27	Lock Washer—Shaft Nut—D.E.....	103343	1105875; 80
28	Lock Washer—Terminal Stud.....	1914579	All
29	Lock Washer—Thru Bolt.....	9421424	All
30	Lock Washer—Top of Field Frame.....	9421423	1105851-2-3; 65; 77
30	Lock Washer—Top of Field Frame.....	174916	1105854-5-6-7-8-9; 60-1-2-3-4-6-7-8-9; 70-1-2-3-4-5-6-8-9; 80
NUTS			
	Nut—Shaft—C.E.....	1915172	1105859; 75-8-9; 80
31	Nut—Shaft—D.E.....	1915172	1105851-2-3-6-7-8; 76
31	Nut—Shaft—D.E.....	1917570	1105854-5; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-7-8-9; 80
31	Nut—Shaft—D.E.....	122264	1105859
32	Nut—Terminal.....	121743	All
SCREWS			
	Screw—Air Scoop Attaching.....	454408	1105857
33	Screw—Ball Bearing Retainer Plate—D.E.....	1914580	1105851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-6-7
33	Screw—Ball Bearing Retainer Plate—D.E.....	5017850	1105875-8-9; 80
34	Screw—Brush Lead Attaching.....	453460	1105851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-5-6-7-8-9; 80
34	Screw—Brush Lead Attaching.....	454329	1105874
36	Screw—End Cover Plate Attaching—C.E.....	454408	1105851-2-3-4-5-6-7-8; 71-2-3-4
36	Screw—End Cover Plate Attaching—C.E.....	1914580	1105860-1-2-3-4-5-6-7-8-9; 70-6-7
	Screw—Field Lead Ground.....	453418	1105854-9; 60-1-2-3-4-6-7-8-9; 70-1-2-3
	Screw—Field Lead Ground.....	1904379	1105874
37	Screw—Pole Shoe.....	1914750	All
38	Screw—Top of Field Frame.....	132243	1105851-2-3; 65
38	Screw—Top of Field Frame.....	9411511	1105854-5-6-7-8-9; 60-1-2-3-4-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80
WASHERS			
	Washer—Ball Bearing Space—C.E.....	1908097	1105876-7
	Washer—Ball Bearing Space—D.E.....	1861589	1105860-1-2-3-4-5-6-7-8-9; 70-1-2-3-4
39	Washer—Brush Arm Space.....	1857412	1105851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 71-2-3-5-6-7-8-9; 80
39	Washer—Brush Arm Space.....	1914741	1105870-4
	Washer—Felt—C.E.....	37077	1105859
40	Washer—Felt—D.E.....	809961	1105851-2-3-4-5-6-7-8; 76-7
40	Washer—Felt—D.E.....	820706	1105859; 78-9
40	Washer—Felt—D.E.....	825197	1105875; 80
	Washer—Shaft Nut—D.E.....	1934384	1105854-5; 60-1-3-4-5-6-7-8-9; 70-1-3-4-7
	Washer—Shaft Nut—D.E.....	1938744	1105859
	Washer—Shaft Nut—D.E.....	1926782	1105862; 72-8-9
41	Washer—Space—Inside—D.E.....	809945	1105851-2-3-4-5-6-7-8; 76-7
41	Washer—Space—Inside—D.E.....	822644	1105859; 78-9
42	Washer—Insul.—Terminal Stud.....	1858753	1105851-2-3
42	Washer—Insul.—Terminal Stud.....	1902746	1105854-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80
43	Washer—Plain—Terminal Stud.....	826319	All
MISCELLANEOUS			
	BAFFLE—Oil—D.E.....	1837897	1105878-9
	BUSHING—Insul. Terminal Stud.....	*	All
	CLAMP—Wiring Harness.....	1860459	1105851-2-3-6-7-8

*Included with 1858749 Stud.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION


Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
.....	COLLAR—Oil Throwing—Inside—D.E.....	1857941	1105875; 80
.....	COLLAR—Space—Inside—C.E.....	37837	1105839
.....	COLLAR—Space—Inside—C.E.....	1902428	1105875-8-9; 80
.....	COLLAR—Space—Outside—C.E.....	1886520	1105859; 75-8-9; 80
44	COLLAR—Space—Outside—D.E.....	1858603	1105851-2-3-4-5-6-7-8; 76-7
44	COLLAR—Space—Outside—D.E.....	1861591	1105860-1-2-3-4-5-6-7-8-9; 70-1-2-3-4
44	COLLAR—Space—Outside—D.E.....	1864255	1105859
44	COLLAR—Space—Outside—D.E.....	825254	1105875; 80
44	COLLAR—Space—Outside—D.E.....	1844575	1105878-9
.....	CUP—Felt Retainer—C.E.....	37078	1105859
45	Dowel PIN—C.E.....	809062	All
46	Dowel PIN—D.E.....	809062	All
47	OILER—C.E.....	113702	1105851-2-3-4-5-6-7-8-9; 71-2-3-4
47	OILER—C.E.....	1882716	1105857
47	OILER—C.E.....	125609	1105877
48	OILER—D.E.....	125609	1105851-2-3-4-5-6-7-8; 77
48	OILER—D.E.....	113702	1105859; 76-8-9
49	Oil WICK—C.E.....	1947350	1105851-2-3-4-5-6-7-8; 71-2-3-4
50	Oil Hole PLUG—C.E.....	1911097	1105851-2-3-4-5-6-7-8; 71-2-3-4
.....	PIN—Cotter—Shaft Nut—D.E.....	103373	1105860-1-2-3-4-7-8-9; 71-2
.....	PLATE—Fan Baffle.....	1880946	1105853-6-7-8-9; 62
.....	PLATE—Fan Baffle.....	1877887	1105878-9
51	PLATE—Felt Retainer—D.E.....	819104	1105851-2-3-4-5-6-7-8; 76-7
51	PLATE—Felt Retainer—D.E.....	820709	1105859; 78-9
51	PLATE—Felt Retainer—D.E.....	825196	1105875; 80
52	Terminal CLIP—To Brush.....	200182	All
.....	Terminal CLIP—Field Lead to Ground.....	200182	1105854-9; 60-1-2-3-4-6-7-8-9; 70-1-2-3-4
53	Woodruff KEY—D.E.....	124545	1105851-2-3-4-5-6-7-8; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-6-7
53	Woodruff KEY—D.E.....	124546	1105859; 75; 80
53	Woodruff KEY—D.E.....	124548	1105878-9

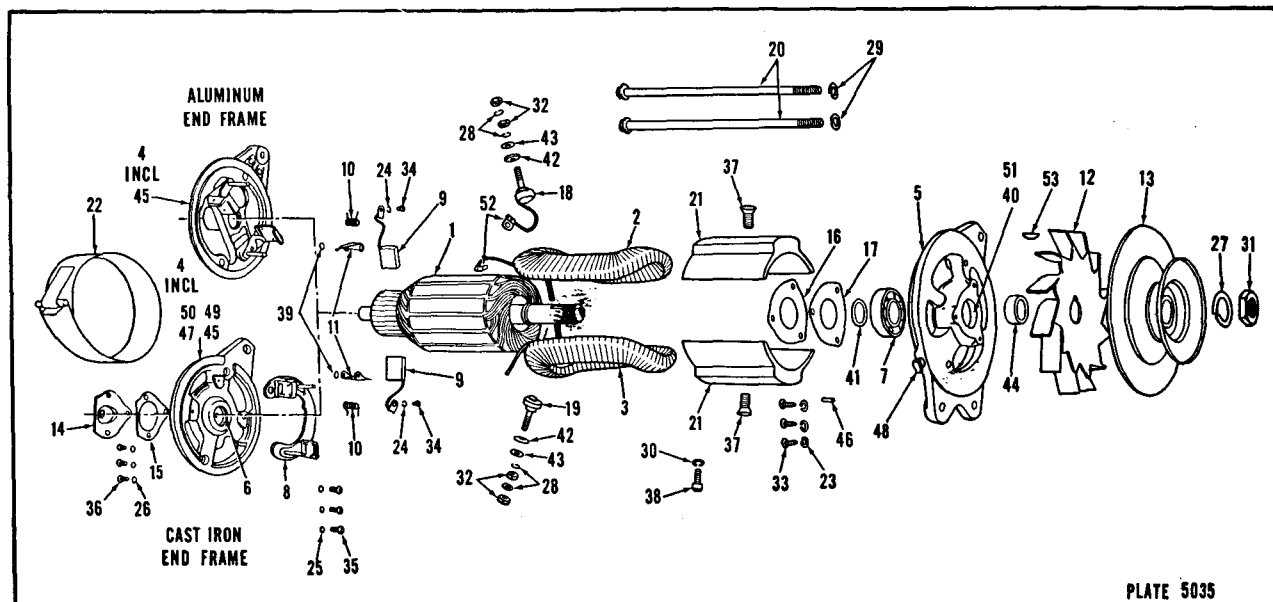

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil — R.H.	Field Coil — L.H.	Frame — C.E.	Frame — D.E.	Ball Bearing or Bushings — C.E.	Ball Bearing — D.E.	Plate — Brush	Brush	Spring — Brush	Arm — Brush
	1	2	3	4	5	6	7	8	9	10	11
1105881.....	1903852	1883703	1883704	1902423	1886525	954143	954521		1878249	1916542	1944373
1105882.....	1910100	"	"	1909762	"	"	"		"	"	"
1105883.....	1910133	"	"	1902423	1864324	"	"		"	"	"
1105884.....	1910601	"	"	1909762	1910271	"	"		"	"	"
1105885.....	1910597	1909512	1909511	1910599	"	"	"		"	1908829	"
1105886.....	1911883	"	"	1902423	1902427	"	954517		"	1916542	"
1105887.....	1908090	1883703	1883704	1907314	1954985	908503	954378		"	"	"
1105889.....	"	"	"	"	"	"	"		"	"	"
1105890.....	"	"	"	"	"	"	"		"	"	"
1105891.....	1919567	"	"	"	"	"	"		"	"	"
1105892.....	1921621	1918002	1918003	1918006	"		"		1906931	"	"
1105893.....	1921235	"	"	"	"		"		"	"	"
1105895.....	1919387	"	"	1947663	"	908503	"		"	"	"
1105896.....	1908090	"	"	"	"	"	"		"	"	"
1105897.....	1919567	"	"	"	"	"	"		"	"	"
1105898.....	1921621	"	"	1923025	"	812823	"		"	"	"
1105899.....	1945922	"	"	1947663	"	908503	"		"	"	"
1105900.....	1921621	"	"	1918006	"	"	"		"	"	"

 Delco-Remy SERVICE PARTS CATALOG

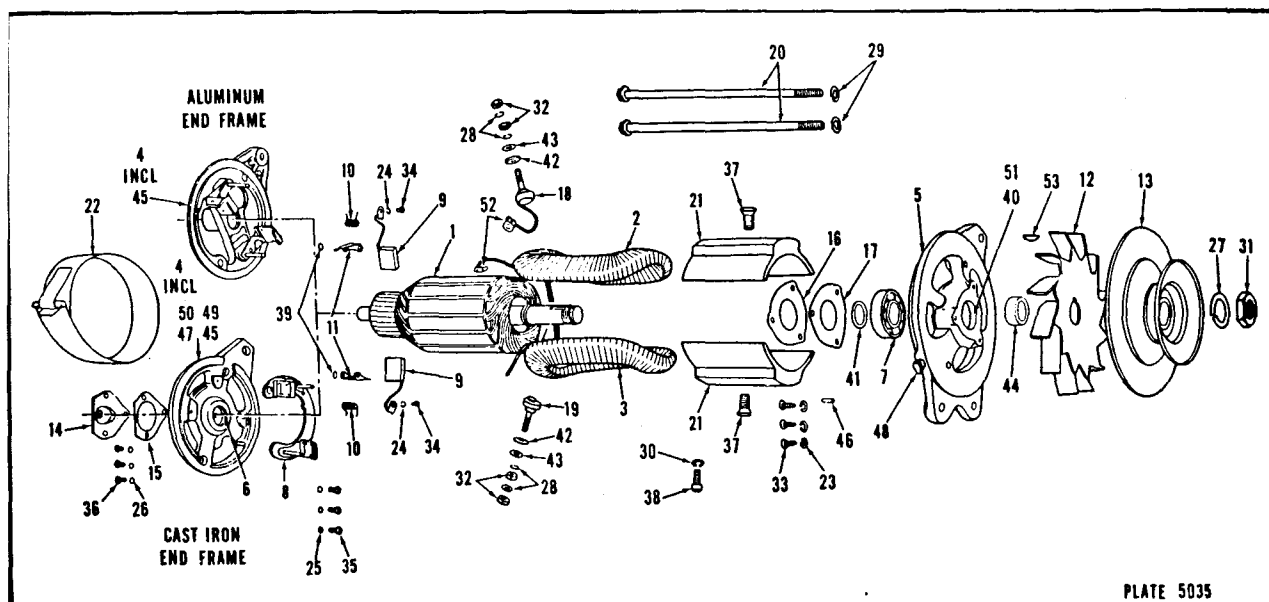

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Fan — C.E. or D.E.	Pulley	Plate — Cover — C.E.	Gasket — Cover Plate	Plate — Bearing Retainer — D.E.	Gasket — Retainer Plate	Terminal Stud & Lead	Terminal Stud Only	Bolt — Thru	Shoe — Pole	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1105881.....	1903078				820707	820708	1858754	1858749	809763	1903427	1918012
1105882.....	1872400				"	"	"	"	"	"	"
1105883.....	1903078				"	"	"	"	1886685	"	"
1105884.....	1872400				"	"	"	"	"	"	"
1105885.....	"				"	"	"	"	"	"	"
1105886.....	"				1841877	"	"	"	"	"	"
1105887.....			816212	1835457	1911263	1912008	"	"	"	"	"
1105889.....		1916554	"	"	"	"	"	"	"	"	"
1105890.....	1880558	1878206	"	"	"	"	"	"	"	"	"
1105891.....	"	1921091	"	"	"	"	"	"	"	"	"
1105892.....	"	"			"	"		"	"	1918004	"
1105893.....	"	"			"	"		"	"	"	"
1105895.....			816212	1835457	"	"		"	"	"	"
1105896.....		1916554	"	"	"	"		"	"	"	"
1105897.....			"	"	"	"		"	"	"	"
1105898.....					"	"		"	"	"	"
1105899.....			816212	1835457	"	"		"	"	"	"
1105900.....	1930022	1925294			"	"		"	"	"	"

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	1962276	1105881-2-3-4-5-7-9; 90-1-2-3-5-6-7-8-9; 900
23	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	138479	1105886
24	Lock Washer—Brush Lead Attaching Screw	1914816	1105881-2-3-4-5-6-7-9; 90-1-2-3-5-6-7-8-9; 900
26	Lock Washer—Cover Plate Screw—C.E.	453435	1105887-9; 90-1-5-6-7-9
.....	Lock Washer—Shaft Nut—C.E.	1913696	1105881-3
.....	Lock Washer—Shaft Nut—C.E.	1913743	1105882-4-5-6
27	Lock Washer—Shaft Nut—D.E.	9421426	1105881
27	Lock Washer—Shaft Nut—D.E.	1915265	1105887-9; 90-1-2-3-6-7-8-9; 900
28	Lock Washer—Terminal Stud	1914579	1105881-2-3-4-5-6-7-9; 90-1-2-3-5-6-7-8-9; 900
29	Lock Washer—Thru Bolt	9421423	1105881-2-3-4-5-6-7-9; 90-1-2-3-5-6-7-8-9; 900
30	Lock Washer—Top of Field Frame	174916	1105881-2-3-4-5-6-7-9
30	Lock Washer—Top of Field Frame	138537	1105890
30	Lock Washer—Top of Field Frame	9421423	1105891-2-3-5-6-7-8-9; 900
NUTS			
.....	Nut—Shaft—C.E.	1915172	1105881-2-3-4-5-6
31	Nut—Shaft—D.E.	1917570	1105882-4-5-6
31	Nut—Shaft—D.E. (Hex)	114495	1105881
31	Nut—Shaft—D.E. (Hose Coupling)	1864341	1105881
31	Nut—Shaft—D.E.	1915172	1105887-9; 90-1-2-3-6-7-8-9; 900
31	Nut—Shaft—D.E.	1917570	1105895
32	Nut—Terminal Stud	121743	1105881-2-3-4-5-6-7-9; 90-1-2-3-5-6-7-8-9; 900
SCREWS			
33	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1105881-2-3-7-9; 90-1-2-3-5-6-7-8-9; 900
33	Screw—Ball Bearing Retainer Plate—D.E.	5017850	1105884-5-6
34	Screw—Brush Lead Attaching	453460	1105881-2-3-4-5-6-7-9; 90-1-2-3-5-6-7-8-9; 900
36	Screw—Cover Plate Attaching—C.E.	1914580	1105887-9; 90-1-5-6-7-9
37	Screw—Pole Shoe	1914570	1105881-2-3-4-5-6-7-9; 90-1-2-3-5-6-7-8-9; 900
38	Screw—Top of Field Frame	9411511	1105881-2-3-4-5-6-7-9; 90-1-2-3-5-6-7-8-9; 900
WASHERS			
.....	Washer—Ball Bearing Space—C.E.	1888761	1105899
.....	Washer—Ball Bearing Space—C.E.	1908097	1105887-9; 90-1-5-6-7
39	Washer—Brush Arm Space	1857412	1105881-2-3-4-5-6-7-9; 90-1-2-3-5-6-7-8-9; 900
40	Washer—Felt—D.E.	820706	1105881-2-3-4-5
40	Washer—Felt—D.E.	809961	1105887-9; 90-1-2-3-5-6-7-8-9; 900
40	Washer—Felt—D.E.	825197	1105886
.....	Washer—Oil Thrower—D.E.	816348	1105883
.....	Washer—Shaft Nut—D.E.	1938744	1105881
.....	Washer—Shaft Nut—D.E.	1934383	1105882-4-5; 95
.....	Washer—Shaft Nut—D.E.	103343	1105886
41	Washer—Space—Inside—D.E.	822644	1105881-2-3-4-5
41	Washer—Space—Inside—D.E.	809945	1105887-9; 90-1-2-3-5-6-7-8-9; 900
.....	Washer—Space—Outside—D.E.	1909098	1105882
42	Washer—Terminal Stud—Insulation	1902746	1105881-2-3-4-5-6-7-9; 90-1-2-3-5-6-7-8-9; 900
43	Washer—Terminal Stud—Plain	826319	1105881-2-3-4-5-6-7-9; 90-1-2-3-5-6-7-8-9; 900
MISCELLANEOUS			
.....	BAFFLE—Oil—D.E.	1837897	1105884-5
.....	BUSHING—Insulation—Terminal (Inside)	*	1105881-2-3-4-5-6-7-9; 90-1-2-3-5-6-7-8-9; 900
.....	COLLAR—Oil Throwing (Inside)—D.E.	1843942	1105886
.....	COLLAR—Space (Inside)—C.E.	1902428	1105881-2-3-4-6
.....	COLLAR—Space (Outside)—C.E.	1886520	1105881-3
44	COLLAR—Space (Outside)—D.E.	1864255	1105881
44	COLLAR—Space (Outside)—D.E.	1864324	1105883
44	COLLAR—Space (Outside)—D.E.	1844575	1105884-5
44	COLLAR—Space (Outside)—D.E.	1858603	1105887-9; 90-1-2-3-5-6-7-8-9; 900

*Included with 1858749 Stud.


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
44	COLLAR—Space (Outside)—D.E.....	825254	1105886
45	Dowel PIN—C.E.....	809062	1105881-2-3-4-5-6-7-9; 90-1-2-3-5-6-7-8-9; 900
46	Dowel PIN—D.E.....	809062	1105881-2-3-4-5-6-7-9; 90-1-2-3-5-6-7-8-9; 900
47	OILER—C.E.....	125609	1105887-9; 90-1-5-6-7-9
47	OILER—C.E.....	113702	1105892-3-8; 900
48	OILER—D.E.....	113702	1105881-2-3-4-5
48	OILER—D.E.....	125609	1105887-9; 90-1-2-3-5-6-7-8-9; 900
49	Oil WICK—C.E.....	1947350	1105892-3-8; 900
51	RETAINER—Felt Washer—D.E.....	820709	1105881-2-3-4-5
51	RETAINER—Felt Washer—D.E.....	825196	1105886
51	RETAINER—Felt Washer—D.E.....	819104	1105887-9; 90-1-2-3-5-6-7-8-9; 900
52	SLEEVE—Shaft—D.E.....	816350	1105883
52	Terminal CLIP—To Brush.....	200182	1105881-2-3-4-5-6-7-9; 90-1-2-3-5-6-7-8-9; 900
53	Woodruff KEY—C.E.....	124545	1105882-4-5-6
53	Woodruff KEY—D.E.....	124546	1105881-2-6
53	Woodruff KEY—D.E.....	124548	1105884-5
53	Woodruff KEY—D.E.....	124545	1105887-9; 90-1-2-3-5-6-7-8-9; 900

Revised to March 15, 1971

 SERVICE PARTS CATALOG

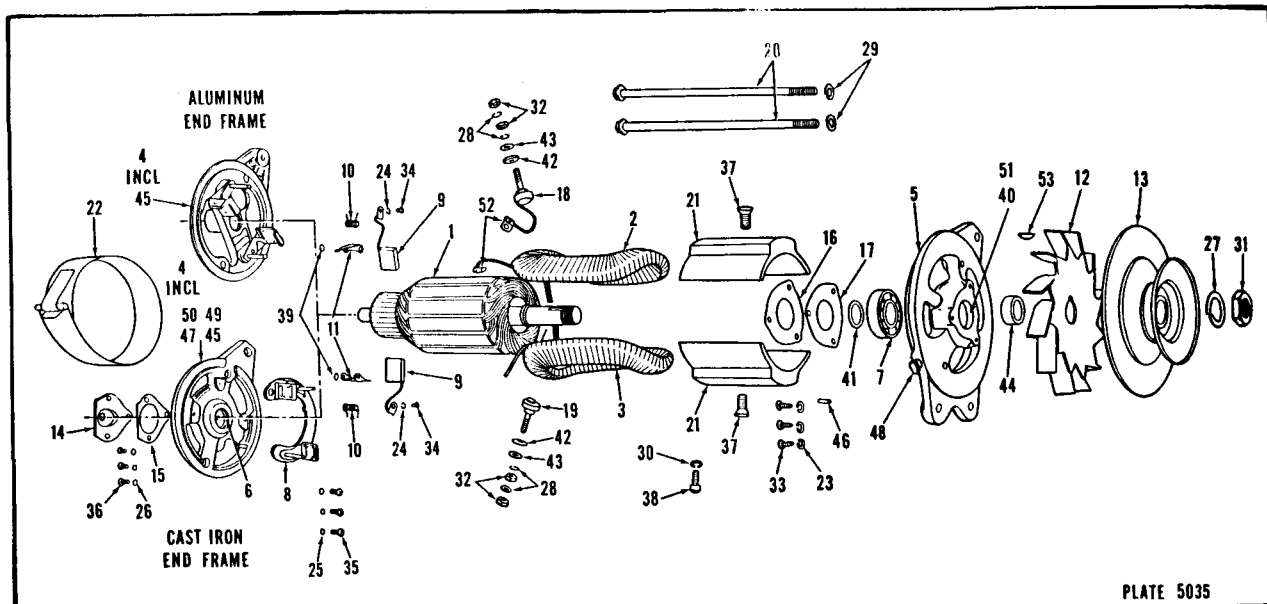


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil R.H.	Field Coil L.H.	Frame C.E.	Frame D.E.	Ball Bearing C.E.	Ball Bearing D.E.	Plate Brush	Brush	Spring Brush	Arm Brush
	1	2	3	4	5	6	7	8	9	10	11
1105902	1900329	1888248	1904836	1900326	1900328	954259	954143		1878249	1916542	1944373
1105903	1900685	"	"	"	1900616	954143	"		"	"	"
1105905	1888493	1901931	1901930	1907314	1954985	954259	"		"	"	"
1105906	1902218	x	x	1903421	1902220	"	954182		1904828	1905219	1944373
1105907	1902420	1901931	1901930	1902423	1902427	954143	903305		1878249	1916542	"
1105908	1904328	1888248	1904836	1904324	1900328	954259	954143		1904828	1905219	1944373
1105909	1888493	1907361	1907362	1907314	1954985	908503	954378		1878249	1916542	"
1105910	1962554	"	"	"	1907323	"	"		"	"	"
1105911	1910087	1908824	1908823	1908828	1886525	954143	954521		1906921	1916324	"
1105912	1909096	1907361	1907362	1902423	"	"	"		1878249	1916542	"
1105913	1908090	"	"	1907314	1954985	908503	954378		"	"	"
1105914	1902420	"	"	1902423	1902427	954143	954517		"	"	"
1105915	1888493	"	"	1889713	1889711	954259	954143		"	1916542	"
1105916	1910604	1908824	1908823	1910599	1910271	954143	954521		"	1916324	"
1105917	1903852	1907361	1907362	1902423	1886525	"	"		"	1916542	"
1105918	1910604	"	"	"	1910271	"	"		"	"	"
1105919	1910087	"	"	"	1886525	"	"		1906921	"	"
1105920	1910111	"	"	"	1864324	"	"		1878249	"	"
1105921	1908090	"	"	1910418	1910421	908503	954378		"	"	"
1105922	1910514	"	"	1926243	1881306	"	954521		"	"	"
1105923	1908090	"	"	1910782	1910780	"	954378		"	"	"
1105924	"	1908824	1908823	1910791	"	"	"		"	1916324	"
1105925	1910603	1907361	1907362	1902423	1910271	954143	954521		"	1916542	"
1105926	1910604	1908824	1908823	1908828	"	"	"		"	1916324	"
1105927	1910087	1907361	1907362	1902423	1911734	"	"		1906921	1916542	"
1105930	1888493	"	"	1907314	1954985	908503	954378		1878249	"	"

*Use 1902326 Field Frame & Assembly. Field Coil not serviced.

Delco-Remy

 SERVICE PARTS CATALOG

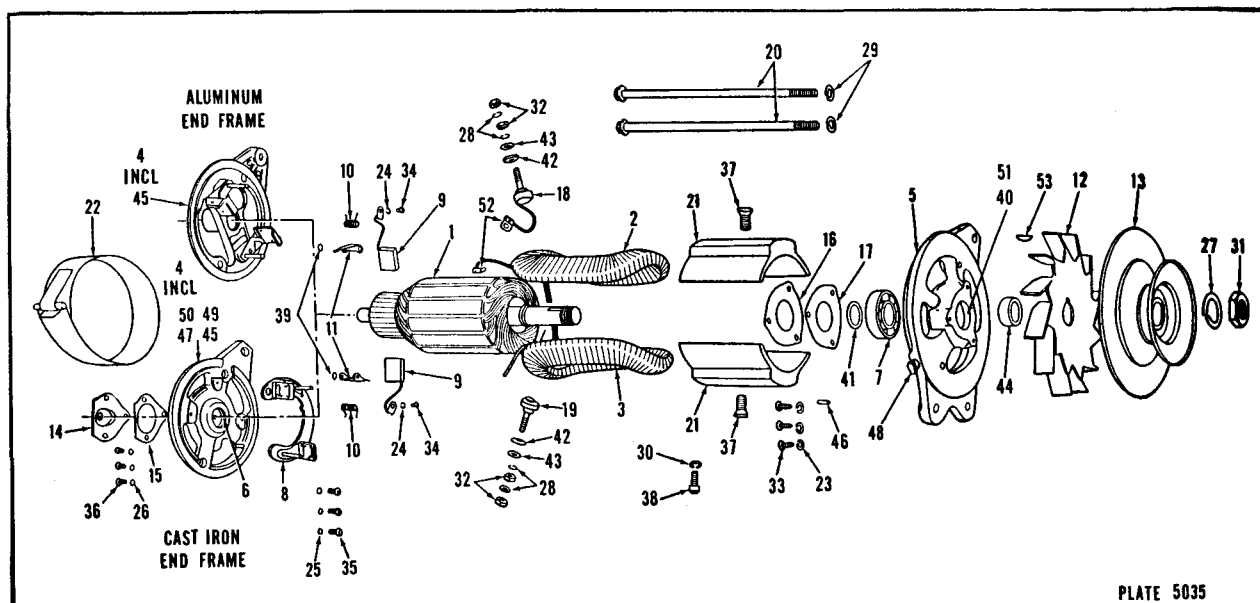

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

[illegible]

[□]Shipped separate. Not part of model.

^AWhen replacing Fan & Baffle Assembly, use 1866400 Fan & 1877887 Baffle Plate.

Revised to March 15, 1971

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw.....	1962276	1105902-3-5-6-9-10-11-12-13-15-16-17-18-19; 20-1-2-3-4-5-6-7; 30
23	Lock Washer—Ball Bearing Retainer Plate Screw.....	138479	1105907-14
24	Lock Washer—Brush Lead Screw.....	1914816	1105902-3-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7; 30
26	Lock Washer—End Cover Plate Screw—C.E.....	453435	1105902-3-5-6-8-9-10-13-15; 21-2-3-4; 30
....	Lock Washer—Field Lead Ground Screw.....	453844	1105905-7
....	Lock Washer—Filter Mounting Bracket Screw.....	138479	1105902
....	Lock Washer—Filter Mounting Bracket Screw.....	1904833	1105906-8
....	Lock Washer—Shaft Nut—C.E.....	1913696	1105907-14-16-17-19; 20-7
....	Lock Washer—Shaft Nut—C.E.....	1915265	1105911-18
....	Lock Washer—Shaft Nut—C.E.....	1913743	1105912; 25-6
27	Lock Washer—Shaft Nut—D.E.....	141706	1105902
27	Lock Washer—Shaft Nut—D.E.....	1904892	1105908
27	Lock Washer—Shaft Nut—D.E.....	1915265	1105913; 21-3-4
28	Lock Washer—Terminal Stud.....	1914579	1105902-3-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7; 30
29	Lock Washer—Thru Bolt.....	9421424	1105902-3-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7; 30
30	Lock Washer—Top of Field Frame.....	174916	1105902-3-5-6-7-8-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7
30	Lock Washer—Top of Field Frame.....	9421423	1105909-10; 30
NUTS			
....	Nut—Cover Band Screw.....	453433	1105922
....	Nut—Shaft—C.E.....	1917570	1105903
31	Nut—Shaft—D.E.....	1915172	1105902-8-11-12-13-14-16-17-18-19; 20-1-3-4-5-6-7
31	Nut—Shaft—D.E.....	1917570	1105903-5-7-9-10-12-14-15-16-18; 25-6; 30
31	Nut—Shaft—D.E.....	125834	1105906
31	Nut—Shaft—D.E. (Hose coupling).....	1864341	1105917
32	Nut—Terminal Stud.....	121743	1105902-3-5-7-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7; 30
32	Nut—Terminal Stud.....	115596	1105906-8
SCREWS			
33	Screw—Ball Bearing Retainer Plate—D.E.....	1914580	1105902-3-5-8-9-10-11-12-13-15-17-19; 20-1-2-3-4-7; 30
33	Screw—Ball Bearing Retainer Plate—D.E. (Flat head).....	133629	1105922
33	Screw—Ball Bearing Retainer Plate—D.E.....	453686	1105906
33	Screw—Ball Bearing Retainer Plate—D.E.....	5017850	1105907-14-16-18; 25-6
34	Screw—Brush Lead Attaching.....	453460	1105902-3-5-7-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7; 30
34	Screw—Brush Lead Attaching.....	1904380	1105906-8
....	Screw—Cover Band.....	453479	1105922
36	Screw—End Cover Plate—C.E.....	1914580	1105902-3-5-6-8-9-10-13-15; 21-2-3-4; 30
....	Screw—Field Lead Ground.....	1904233	1105905-7
....	Screw—Filter Mounting Bracket.....	453319	1105902-6-8
37	Screw—Pole Shoe.....	1914750	All
38	Screw—Top of Field Frame.....	131238	1105902-3-5-7-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7; 30
38	Screw—Top of Field Frame.....	454329	1105906-8
WASHERS			
....	Washer—Ball Bearing Space—C.E.....	1908097	1105909-10-13; 21-3-4; 30
....	Washer—Ball Bearing Space—D.E.....	1861589	1105902-3-5-8-15
39	Washer—Brush Arm Space.....	1857412	1105902-3-5-7-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7; 30
39	Washer—Brush Arm Space.....	1904368	1105906-8
40	Washer—Felt—D.E.....	825197	1105907-14
40	Washer—Felt—D.E.....	809961	1105909-10-13; 21-3-4; 30
40	Washer—Felt—D.E.....	820706	1105911-12-16-17-18-19; 20-2-5-6-7
....	Washer—Oil Thrower—D.E.....	816348	1105920
....	Washer—Shaft Nut—C.E.....	1926782	1105903
....	Washer—Shaft Nut—D.E.....	1926782	1105903-16-18; 25-6
....	Washer—Shaft Nut—D.E.....	103343	1105907-14
....	Washer—Shaft Nut—D.E.....	1934383	1105905-9-10-15; 30
....	Washer—Shaft Nut—D.E.....	1905406	1105906
....	Washer—Shaft Nut—D.E.....	1886900	1105912
41	Washer—Space—Inside—D.E.....	809945	1105909-10-13; 21-3-4; 30

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	WASHERS—Continued		
41	Washer—Space—Inside—D.E.	822644	1105911-12-16-17-18-19; 20-2-3-5-6-7
42	Washer—Terminal Stud Insulation	1902746	1105902-3-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7; 30
43	Washer—Terminal Stud Plain	826319	1105902-3-5-7-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7; 30
43	Washer—Terminal Stud Plain	1954452	1105906-8
	MISCELLANEOUS		
----	BAFFLE—Fan	1900688	1105903
----	BAFFLE—Fan	1877887	1105916-18
----	BAFFLE—Oil—D.E.	1837897	1105916-18; 25-6
----	BRACKET—Filter Mounting	1888256	1105902
----	BUSHING—Insul. Terminal Stud	*	All
----	COLLAR—Inside—C.E.	1902428	1105907-11-12-14-16-17-18-19; 20-5-6-7
----	COLLAR—Outside—C.E.	1860031	1105903
----	COLLAR—Outside—C.E.	1886520	1105907-11-14-16-17-18-19; 20-7
----	COLLAR—Inside—D.E.—Oil Thrower	1857941	1105907-14
44	COLLAR—Outside—D.E.	1861591	1105902-3-5-8-15
44	COLLAR—Outside—D.E.	825254	1105907-14
44	COLLAR—Outside—D.E.	1858603	1105909-10-13; 21-3-4; 30
44	COLLAR—Outside—D.E.	1864255	1105911-17-19; 27
44	COLLAR—Outside—D.E.	1909098	1105912
44	COLLAR—Outside—D.E.	1844575	1105916-18; 25-6
44	COLLAR—Outside—D.E.	1864325	1105920
44	COLLAR—Outside—D.E.	1853550	1105922
----	COUPLING—Drive—D.E.	1839478	1105922
45	Dowel PIN—C.E.	809062	All
46	Dowel PIN—D.E.	809062	All
47	OILER—C.E.	125609	1105909-10-13; 21-2-3-4; 30
48	OILER—D.E.	125609	1105909-10-13; 21-3-4; 30
48	OILER—D.E.	113702	1105911-12-16-17-18-19; 20-2-5-6-7
----	Oil WICK—D.E.	1947350	1105912
----	PIN—Drive Coupling	820711	1105922
----	SLEEVE—Shaft—D.E.	816350	1105920
51	RETAINER—Felt Washer—D.E.	825196	1105907-14
51	RETAINER—Felt Washer—D.E.	819104	1105909-10-13; 21-3-4; 30
51	RETAINER—Felt Washer—D.E.	820709	1105911-12-16-17-18-19; 20-2-5-6-7
52	Terminal CLIP—To Brush	200182	All
----	Terminal CLIP—Field Lead to Ground	200182	1105905-7
----	Woodruff KEY—C.E.	124546	1105903
----	Woodruff KEY—C.E.	124545	1105912; 25-6
53	Woodruff KEY—D.E.	124545	1105902-5-8-9-10-13-15; 21-3-4; 30
53	Woodruff KEY—D.E.	124546	1105903-7-12-14; 22
53	Woodruff KEY—D.E.	124543	1105911-19; 27
53	Woodruff KEY—D.E.	124548	1105916-18; 25-6

 Included with 1958749 Stud

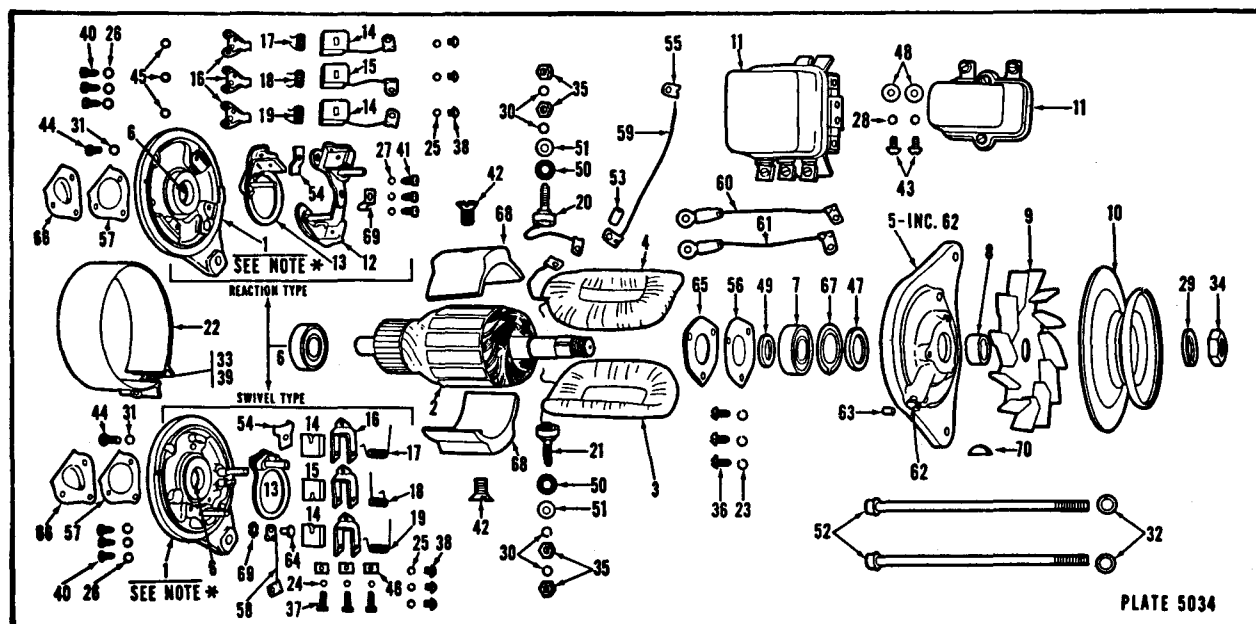

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model No.	* Frame C.E.	Armature	Field Coil L.H.	Field Coil R.H.	Frame D.E.	Ball Bearing C.E.	Ball Bearing D.E.	Collar — Outside D.E.	Fan	Pulley	Relay or Regulator
	1	2	3	4	5	6	7	8	9	10	11
1105950.....	1907314	1888493	1902318	1902317	1954985	954259	954143	1861591	1880558	1883325	
1105951.....	1910504	1910501	1910498	1910497	1902427	908503	954517	825254			*5899
1105952.....	"	1910762	1910761	"	1910765	"	954378	1858603			*1116843
1105953.....	1910771	1910778	1910777	1910776	"	"	"	"			"
1105954.....	1930365	1912352	1910498	1910497	1912354	"	954521	1909098			
1105957.....	1919346	1919349	1919343	1919344	1919348	"	"	1853550			†1118797
1105958.....	1907314	1908090	"	"	1905527	954259	954143	1861591	1880558	1878587	
1105963.....	1931175	1923359	"	"	1910421	"	"	"			
1105967.....	1910504	1912352	1924894	"	1912354	908503	954521	1909098			
1105969.....	1919302	1908090	1919343	"	1905527	954259	954143	1861591			
1105971.....	1926243	1926241	"	"	1881306	908503	954521	1853550			
1105976.....	1930857	1937383	1930860	1930861	1930855	"	907503	1858603			
1105977.....	1930365	1910762	1919343	1919344	1910765	"	954378	"			
1105979.....	1931175	1937383	1930860	1930861	1931173	"	907503	"			
1105981.....	1933853	"	1930236	1930237	1930347	"	954378	"			
1105982.....	1886518	1931641	"	"	1919348	"	954521	1853550	1872400		
1105983.....	1931899	1931901	1931903	1931902	1931173	904751	907503	1858603			
1105984.....	1886518	1932146	1930236	1930237	1910271	908503	954521	1844575	1872400		
1105985.....	1931175	1932144	1930860	1930861	1930347	904751	900529	1858603	1937276	1932627	
1105988.....	1930857	1937383	"	"	1930855	"	"	"			
1105990.....	1939511	1939523	1930236	1930237	1935498	900529	954554	1934554			
1105991.....	1940448	1940443	1931903	1931902	1936333	"	900529	1858603			
1105992.....	1937217	1940952	1930236	1930237	"	"	"	"			
1105994.....	1919302	1957094	"	"	1954985	904751	954378	"			
1105995.....	1941949	1941946	"	"	1941952	"	"	"			
1105997.....	1943614	1943617	"	"	1919348	"	954521	1853550			
1105998.....	1931175	1937383	1930860	1930861	1930347	"	900529	1858603			
1105999.....	1937217	1939523	1930236	1930237	1934553	907058	907056	1946069			

*C.E. Frame includes (where necessary): Bushing, Oiler, Wick.

*For parts see Relay—Group 4.

*For parts see Regulator—Group 5.

 †For parts see Regulator—Group 6-F.

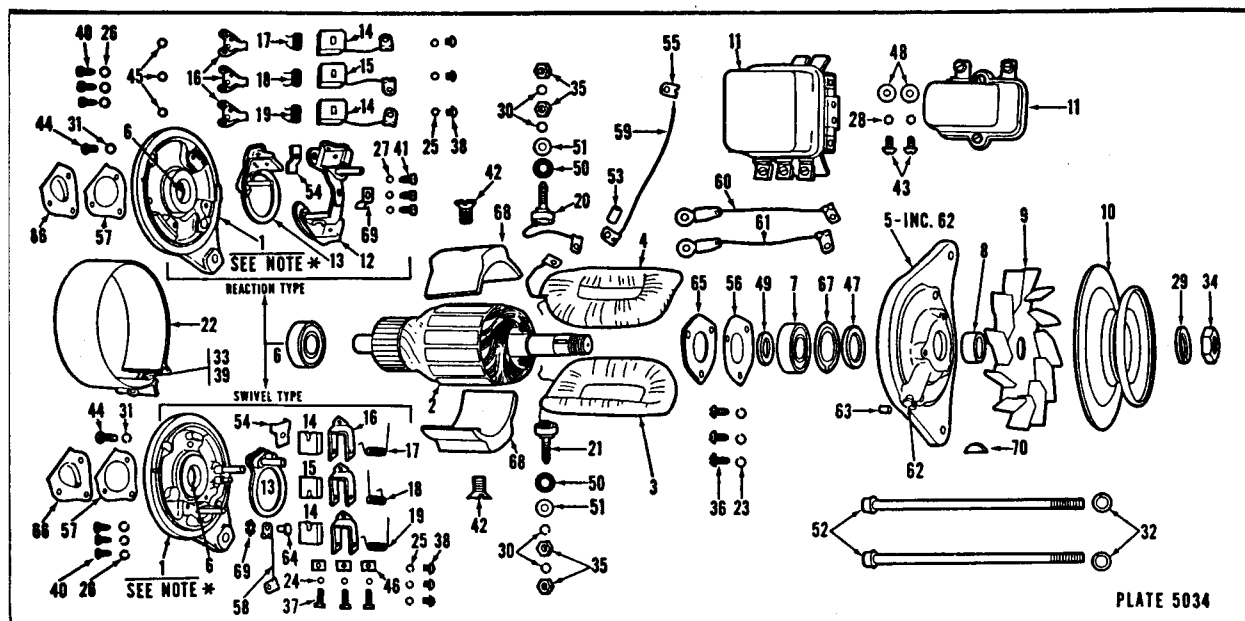

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model No.	Brush Plate — Main	Brush Plate — 3rd	Brush — Main	Brush — 3rd	Arm or Holder — Brush	Spring — R.H. — Main	Spring — 3rd	Spring — L.H. — Main	Terminal Stud and Lead	Terminal Stud Only	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1105950			1878249		1944373	1916542		1903555	1858754	1858749	1835646
1105951		1910505	"	1906940	"	"	1946798	1916542	"	"	1879530
1105952		"	"	"	"	"	"	"	"	"	"
1105953		1910773	"	"	"	1908829	1903870	1908829	"	"	"
1105954		1910505	"	"	"	1916542	1946798	1916542	"	"	"
1105957		"	1906931	"	"	"	"	"	"	"	"
1105958			1878249		1944373	1916542		1916542	"	"	1918012
1105963			1906931		"	1916542		1916542	"	"	"
1105967		1910505	1878249	1906940	"	"	1946798	"	"	"	1879530
1105969			1906931		1944373	"	"	"	"	"	1918012
1105971		1910505	"	1906940	"	"	1946798	"	"	"	1879530
1105976			"		1944373	"	"	"	"	"	1918012
1105977		1910505	"	1906940	"	"	1946798	"	1858754	"	1879530
1105979			"		1944373	"	"	"	"	"	1918012
1105981			"		"	"		"		"	"
1105982			1878249		"	1916542		1916542	1858754	"	"
1105983			1906931		"	1908829		1908829	"	"	"
1105984			1878249		"	1916542		1916542	"	"	"
1105985			1906931		"	"		1916542	"	"	"
1105988			"		"	"		"		"	"
1105990			1932506		"	1903870		1856993		"	1879530
1105991			"		"	1946798		1946798	1858754	"	"
1105992			"		"	1916542		1916542	"	"	"
1105994			1906931		"	"		"		"	1918012
1105995			1932506		"	1903870		1856993		"	1879530
1105997			"		"	"		"		"	"
1105998			1906931		"	1916542		1916542		"	1918012
1105999			1932506		"	1903870		1856993		"	1879530

*Use 1878183 for Main Brush (2), 1904365 for 3rd Brush (1).

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Ret. Plate Screw—D.E.	1962276	1105950-2-3-4-8; 63-7-9; 76-7-9; 81-3-4-5-8; 90-1-2-4-5-8-9
23	Lock Washer—Ball Bearing Ret. Plate Screw—D.E.	138479	1105951
25	Lock Washer—Brush Lead Screw	1914816	1105950-1-2-3-4-7-8; 63-7-9; 71-6-7-9; 81-2-3-4-5-8; 90-1-2-4-5-7-8-9
—	Lock Washer—Cover Attaching—C.E.	1962276	1105990-1-2-5-7-9
26	Lock Washer—End Cover Plate Screw—C.E.	453435	1105950-1-2-3-4-7-8; 63-7-9; 71-7
—	Lock Washer—Fan Attaching—C.E.	1913743	1105990-1-2-5-9
—	Lock Washer—Field Frame Screw	174916	1105950-4; 71-7
—	Lock Washer—Field Frame Screw	9421423	1105958; 63-9; 76-9; 81-2-3-4-5-8; 90-1-2-4-5-7-8-9
28	Lock Washer—Regulator Attaching Screw	138479	1105951-7
28	Lock Washer—Relay Attaching Screw	1914579	1105952-3
—	Lock Washer—Shaft Nut—C.E.	1913743	1105982-4; 97
29	Lock Washer—Shaft Nut—D.E.	1915265	1105952-3-8; 69; 76-7-9; 81-3-5-8; 91-2-4-5-8
30	Lock Washer—Terminal Stud	1914579	1105950-1-2-3-4-7-8; 63-7-9; 71-6-7-9; 81-2-3-4-5-8; 90-1-2-4-5-7-8-9
31	Lock Washer—Third Brush Plate Clamp Screw (#10)	453435	1105951-2-3-4-7; 67; 71-7
—	Lock Washer—Third Brush Plate Spring Screw (#8)	453844	1105951-2-3-4-7; 67; 71-7
32	Lock Washer—Thru Bolt	9421424	1105950-1-2-3-4-7-8; 63-7-9; 71-6-7-9; 81-2-3-4-5; 90-1-2-4-5-7-8-9
NUTS			
33	Nut—Cover Band	453433	1105977
—	Nut—Cover Band	1935960	1105990-1-2-5-9
—	Nut—Fan Attaching—C.E.	1915172	1105990-1-2-5-9
—	Nut—Shaft—C.E.	1915172	1105982-4; 97
34	Nut—Shaft—D.E.	1917570	1105950-4; 63-7; 84
34	Nut—Shaft—D.E. (1¼ hex.)	1917034	1105951
34	Nut—Shaft—D.E. (¾ hex.)	1917035	1105951
34	Nut—Shaft—D.E.	1915172	1105952-3-8; 69; 76-7-9; 81-3-5-8; 91-2-4-5-8
34	Nut—Shaft—D.E.	443344	1105990-9
35	Nut—Terminal Stud	121743	1105950-1-2-3-4-7-8; 63-7-9; 71-6-7-9; 81-2-3-4-5-8; 90-1-2-4-5-7-8-9
SCREWS			
36	Screw—Ball Bearing Retainer Plate—D.E.	1914580	1105950-2-3-4-8; 63-7-9; 76-7-9; 81-3-5; 90-1-2-4-5-8-9
36	Screw—Ball Bearing Retainer Plate—D.E.	5017850	1105951; 84-8
36	Screw—Ball Bearing Retainer Plate—D.E.	133629	1105957; 71; 82; 97
38	Screw—Brush Lead Attaching	453460	1105950-1-2-3-4-7-8; 63-7-9; 71-6-7-9; 81-2-3-4-5-8; 90-1-2-4-5-7-8-9
—	Screw—Cover Attaching—C.E.	1917123	1105990-1-2-5-7-9
39	Screw—Cover Band	453479	1105951-2-3-4-7; 67; 71-7; 99
—	Screw—Cover Band	132923	1105990-1-2-5-7
40	Screw—End Cover Plate—C.E.	1914580	1105950-1-2-3-4-7-8; 63-7-9; 71-7
—	Screw—Field Frame	131238	1105950-4-8; 63-9; 71-6-7-9; 81-2-3-4-5-8; 90-1-2-4-5-7-8-9
42	Screw—Pole Shoe	1914750	1105950-1-2-3-4-7-8; 63-7-9; 71-6-7-9; 81-2-3-4-5-8; 90-1-2-4-5-7-8-9
43	Screw—Regulator Attaching	132900	1105951-7
43	Screw—Relay Attaching	453418	1105952-3
44	Screw—Third Brush Plate Clamp (#10)	453468	1105951-2-3-4-7; 67; 71-7
—	Screw—Third Brush Plate Spring (#8)	453418	1105951-2-3-4-7; 67; 71-7
WASHERS			
—	Washer—Ball Bearing Space—C.E.	1908097	1105951-4-7; 67; 71-7
—	Washer—Ball Bearing Space—D.E.	1861589	1105950-8; 69; 88
45	Washer—Brush Arm Space	1857412	1105950-1-2-3-4-7-8; 63-7-9; 71-6-7-9; 81-2-3-4-5-8; 90-1-2-4-5-7-8-9
—	Washer—Felt—C.E.	37077	1105995-7
47	Washer—Felt—D.E.	825197	1105951
47	Washer—Felt—D.E.	809961	1105952-3; 76-7-9; 81-3; 94-5
47	Washer—Felt—D.E.	820706	1105954-7; 67; 71; 82-4; 97
48	Washer—Plain—Regulator Attaching Screw	1856056	1105951-7
—	Washer—Plain—Shaft Nut—D.E.	1934383	1105950-4; 63-7
—	Washer—Plain—Shaft Nut—D.E.	1926782	1105984
—	Washer—Plain—Shaft Nut—D.E.	1872618	1105990-9

 Parts not listed in this Catalog will not be sold separately.

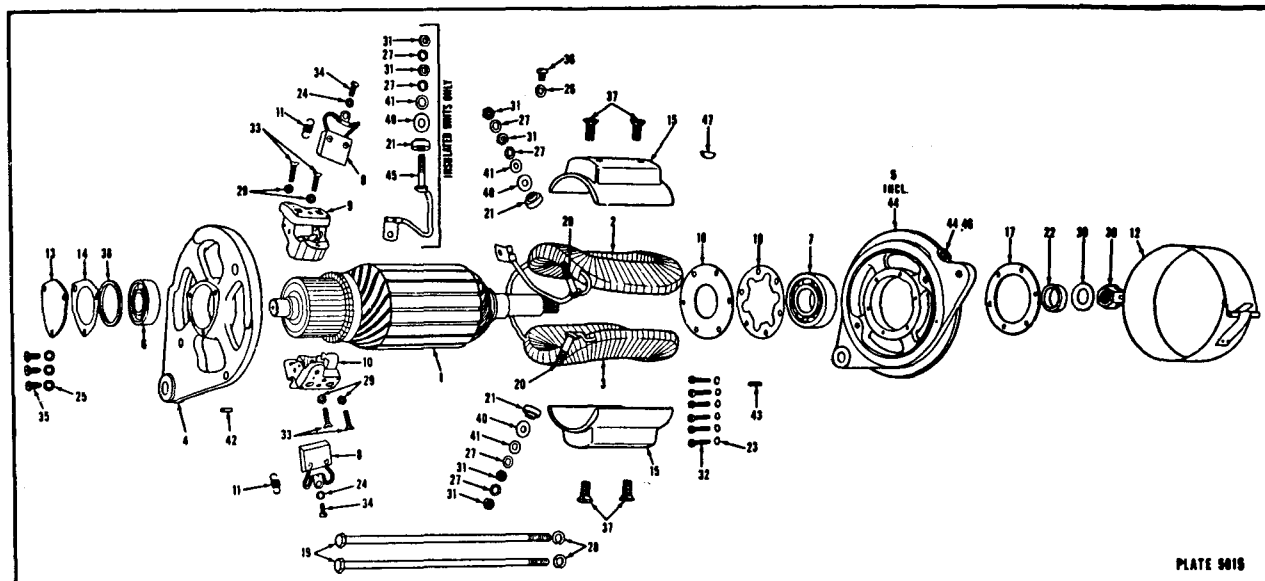

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil R.H.	Field Coil L.H.	Frame C.E.	Frame D.E.	Ball Bearing C.E.	Ball Bearing D.E.	Brush	Holder — Brush Insulated	Holder — Brush Grounded	Spring — Brush
	1	2	3	4	5	6	7	8	9	10	11
1106053.....	1911361	°1964190		1956327	1911262	954217	908605	x	x		x
1106054.....	"	"		1959309	1959310	954685	"	x	x		x
.....											
.....											
.....											


°Two coil set.

xGenerators indicated can be or may have been reoperated by application of Package No. 1953815 to increase brush life. Brushes are longer and springs are designed to accommodate them.

Reoperated Generators can be identified by type of cover for frame windows (Non-reoperated units have circular cover band; Reoperated units have four separate cover plates).

For parts order as follows (complete reoperation 1953815 Package)

Part Name	Non-Reoperated	Reoperated
Brush	1906911	1946406 (2 req'd)
Brush Holder (Insul.)	1909989	1948394
Brush Holder (Ground)	1909993	1948400
Brush Spring	1910033	1948396 (2 req'd)
Cover Band (or Plate)	1910011	1953862 (4 req'd)
Gasket (Cover Plate)		1953861 (4 req'd)
Screw (Cover Plate)		121749 (8 req'd)
Lock Washer (Cover Plate)		131182 (8 req'd)

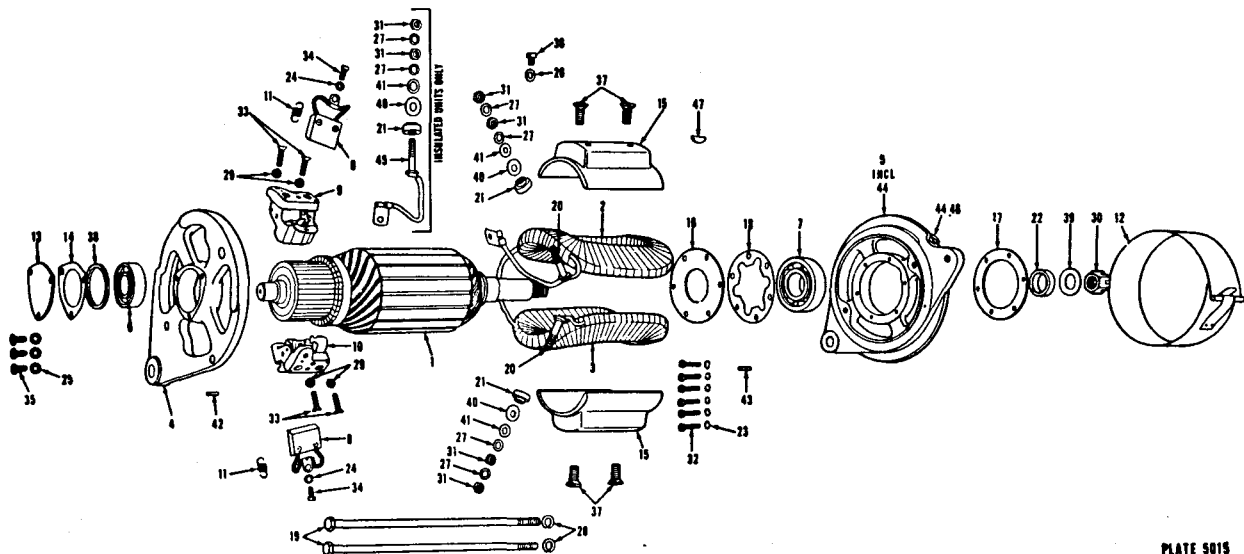 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cover Band	Plate — Cover C.E.	Gasket — Cover Plate C.E.	Pole Shoe	Plate Retainer Inner D.E.	Plate Retainer Outer D.E.	Gasket Retainer Plate D.E.	Thru Bolt	Stud — Terminal	Bushing — Terminal	Collar — Outside D.E.
	12	13	14	15	16	17	18	19	20	21	22
1106053.....	x	1910039	1835457	1909982	□		*1910014	1872411	1909988	1909995	1910035
1106054.....	x			"	1954873		1946631	"	"	"	"


□1931893 is a package replacing both inner and outer plates; later units w/inner plate only use 1946632 Plate.

*Later units w/4 mounting holes use 1946631 Gasket.

xFor part number see page 1.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	LOCK WASHERS		
24	Lock Washer—Brush Lead Attaching Screw.....	453435	1106053-4
25	Lock Washer—Cover Plate Attach. C.E.....	453435	1106053
27	Lock Washer—Terminal Stud.....	9421423	1106053-4
28	Lock Washer—Thru Bolt.....	9421424	1106053-4
	NUTS		
29	Nut—Brush Holder Screw.....	5024654	1106053-4
30	Nut—Shaft—D.E.....	9418881	1106053-4
31	Nut—Terminal Stud.....	134551	1106053-4
	SCREWS		
32	Screw—Ball Bearing Plate—D.E.....	1914580	1106053
33	Screw—Brush Holder Attaching.....	453337	1106053-4
34	Screw—Brush Lead Attaching.....	1914800	1106053-4
35	Screw—Cover Plate—C.E.....	274946	1106053
37	Screw—Pole Shoe.....	1914750	1106053-4
	WASHERS		
38	Spring, Washer—Ball Bearing Space—C.E.....	1935334	1106053-4
39	Washer—Shaft Nut—D.E.....	1872618	1106053-4
40	Washer—Terminal Stud—Insulating.....	1902746	1106053-4
41	Washer—Terminal Stud—Plain.....	1905125	1106053-4
	MISCELLANEOUS		
—	CLAMP—Bearing Retainer—C.E.....	1963355	1106053
42	Dowel PIN—C.E.....	809062	1106053-4
43	Dowel PIN—D.E.....	809062	1106053-4
—	OILER—C.E.....	113702	1106053-4
44	OILER—D.E.....	113702	1106053-4
45	Stud & Lead Assembly.....	1910880	1106053-4
—	WICK—Oil—C.E.....	1914750	1106053-4
46	WICK—Oil—D.E.....	1914750	1106053-4
47	Woodruff KEY—D.E.....	124548	1106053-4

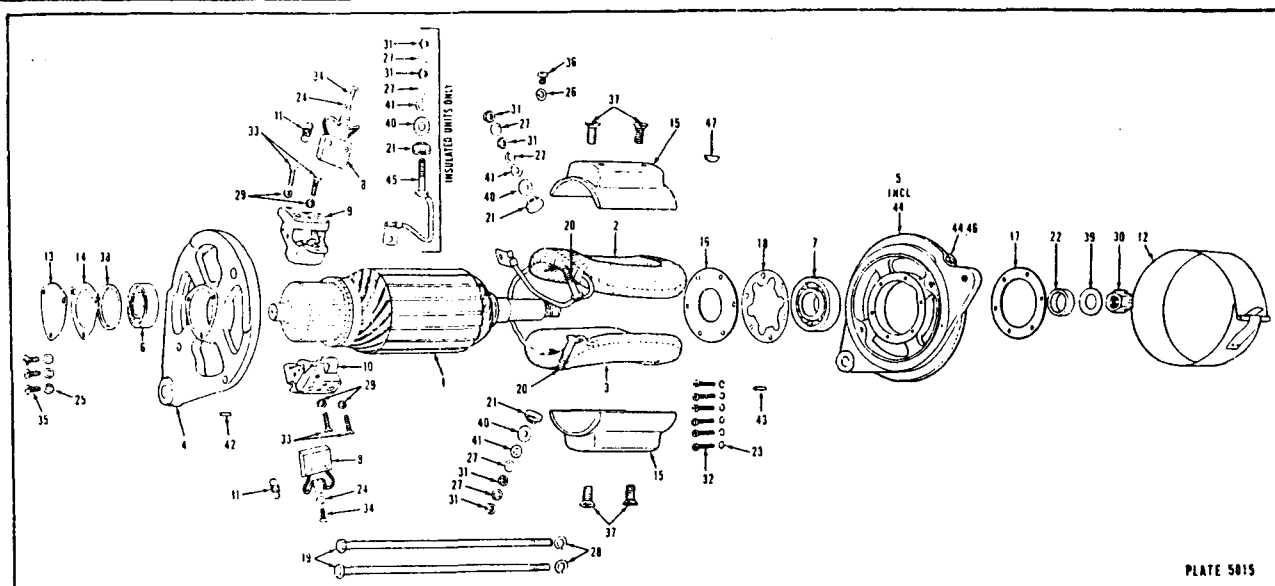 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coll R.H.	Field Coll L.H.	Frame C.E.	Frame D.E.	Ball Bearing C.E.	Ball Bearing D.E.	Brush	Holder — Brush Insulated	Holder — Brush Grounded	Spring — Brush
	1	2	3	4	5	6	7	8	9	10	11
1106101.....	1918751	1964184		1934453	1910013	954685	908605	X	X	X	X
1106102.....	"	"		1951495	1951061	"	"	X	X	X	X
1106103.....	1940415	"		1922024	1953296	"	"	X	X	X	X
1106104.....	"	"		1951062	1951061	"	"	X	X	X	X
1106105.....	1952037	"		1952016	1952015	907196	907054	1946406	1948394	1948400	1948394
1106106.....	1936778	"		1914501	1910013	954685	908605	X	X	X	X
1106107.....	1958135	"		1960848	1957292	907055	907054	1946406	1948394	1948400	1948396
1106108.....	1952037	"		1959207	1959206	907196	"	"	"	"	"
1106109.....	1958135	"		1960848	1060177	907055	907351	"	"	"	"
1106110.....	1952037	"		1960230	1952015	907196	"	"	"	"	"
1106111.....	1966812	"		1966552	1951061	▲	908605	1906979	X	X	X
1106112.....	"	"		"	"	▲	"	1946406	1948394	1948400	1967374

*See Footnote Page 4.

xGenerators indicated can be or may have been reoperated by application of Package No. 1953815 to increase brush life. Brushes are longer and springs are designed to accommodate them.

Reoperated Generators can be identified by type of cover for frame windows (Non-reoperated units have circular cover band; Reoperated units have four separate cover plates).

For parts order as follows (complete reoperation 1953815 Package)

Part Name	Non-Reoperated	Reoperated
Brush	1906911	1946406 (2 req'd)
Brush Holder (Insul.)	1909989	1948394
Brush Holder (Ground)	1909993	1948400
Brush Spring	1910033	1948396 (2 req'd)
Cover Band (or Plate)	1933978	1953862 (4 req'd)
Gasket (Cover Plate)		1953861 (4 req'd)
Screw (Cover Plate)		121749 (8 req'd)
Lock Washer (Cover Plate)		131182 (8 req'd)

For 1106102, 1106104 use 1906979.


*Two Coil Set.

▲7451640 is Outer Race and 7451641 is Inner Race.

Generator C.E. may be converted to Roller Bearing by application of Package No. 1966546; for parts replacement after conversion (x after model No.) order as follows:

C.E. Frame.....	1966546	(Includes parts indented)
Oil Seal.....	1966568	
Outer Race.....	7451640	
Plate—End Cover—C.E.....	1915847	
Inner Race.....	7451641	
Gasket—End Cover—C.E.....	1835457	

 Delco-Remy
SERVICE PARTS CATALOG

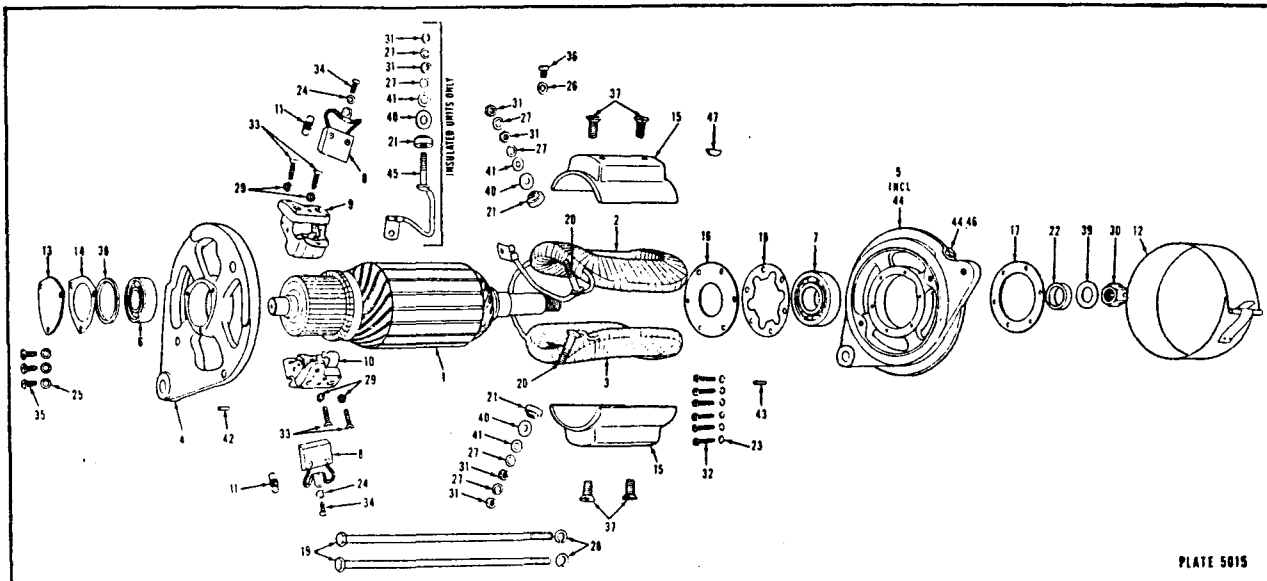

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cover Band	Plate — Cover C.E.	Gasket — Cover Plate C.E.	Pole Shoe	Plate — Retainer Inner D.E.	Plate — Retainer Outer D.E.	Gasket — Retainer Plate D.E.	Thru Bolt	Stud — Terminal	Bushing — Terminal	Collar — Outside D.E.
	12	13	14	15	16	17	18	19	20	21	22
1106101.....	X			1927964	1954873		1946631	1872411	1909988	1909995	1910035
1106102.....	X			"	"		"	"	"	"	"
1106103.....	X			"	"		*1910014	"	"	"	"
1106104.....	X	1915847	1835457	"	1954873		1946631	"	"	"	"
1106105.....	1948402	1952021	1952020	1927964	"	1948274		"	"	"	1948403
1106106.....	X			"	1954873		1946631	"	"	"	1910035
1106107.....	1948402			"	"			1912502	"	"	1957297
1106108.....	"	1952021	1952020	"	"	1948274		1872411	"	"	1948403
1106109.....	"			"	"			1912502	"	"	1957297
1106110.....	"	1952021	1952020	"	"	1948274		1872411	"		1948403
1106111.....	X	1910039	1968569	"	1946632		1946631	"	"	1909995	1910035
1106112.....	1967743	1915847	"	"	"		"	"	"	"	"
.....											
.....											
.....											

*1931893 is a package replacing both inner and outer plates; later units w/inner plate only use 1954873 Plate.

*Later units w/4 mounting holes use 1946631 Gasket.

xFor part number see page 1.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—End Cover Plate Attaching Screw.....	453435	1106104-5-8
24	Lock Washer—Ball Bearing Plate—D.E.....	453435	1106101-2-6; 12
—	Lock Washer—Ball Bearing Retainer Plate Attaching.....	453435	1106105-8; 11
—	Lock Washer—Ball Bearing Plate Attach. C.E.....	453435	1106107-9; 10-11-12
—	Lock Washer—Ball Bearing Retainer Attach. D.E.....	1962276	1106107-9
—	Lock Washer—Brush Cover Plate Attaching Screw.....	453844	1106105-8-9
—	Lock Washer—Brush Cover Plate Attaching Screw.....	1946143	1106105
—	Lock Washer—Brush Lead Attaching Screw.....	453435	1106101-2-3-4-5-6-7-8-9; 10-11-12
—	Lock Washer—C.E. Cover Attaching Screw.....	9421423	1106109
—	Lock Washer—Ground Screw.....	9421423	1106101-2-3-4-5-6-7-8-9; 11-12
—	Lock Washer—Lead Attaching to Terminal Plate.....	453435	1106110
—	Lock Washer—Shaft—C.E.....	1913743	1106107-9
—	Lock Washer—Shaft Nut—D.E.....	1872618	1106101-2-3-4-6-7
—	Lock Washer—Shield Attaching.....	453844	1106110
—	Lock Washer—Terminal Plate Attaching.....	453435	1106110
—	Lock Washer—Terminal Shield Cover Attaching.....	453844	1106110
27	Lock Washer—Terminal Stud.....	9421423	1106101-2-3-4-5-6-7-8-9; 11-12
28	Lock Washer—Thru Bolt.....	9421424	1106101-2-3-4-5-6-7-8-9; 10-11-12
—	Lock Washer—Thru Bolt Damper Screw.....	9421423	1106105-7-8-9; 10
NUTS			
29	Nut—Brush Holder Screw.....	5024654	1106101-2-3-4-5-6-7-8-9; 10-11-12
—	Nut—Cover Plate.....	131095	1106110
—	Nut—Lead Attaching—To Terminal Plate.....	453433	1106110
30	Nut—Shaft—D.E.....	9418881	1106101-2-3-4-5-6-8; 10-11-12
—	Nut—Shaft—C.E.....	1915172	1106107-9
30	Nut—Shaft—D.E.....	451027	1106107-9
31	Nut—Terminal Stud.....	134551	1106101-2-3-4-5-6-7-8-9; 11-12
SCREWS			
—	Screw—Ball Bearing Plate—C.E.....	9416183	1106107-9; 10
32	Screw—Ball Bearing Plate—D.E.....	*274946	1106103-5-8; 10
32	Screw—Ball Bearing Plate—D.E.....	9413363	1106101-2-4-6; 11-12
32	Screw—Ball Bearing Plate—D.E.....	5017850	1106107-9
—	Screw—Brush Cover Plate Attaching.....	453418	1106105-7-8-9; 10
33	Screw—Brush Holder Attaching.....	453337	1106101-2-3-4-5-6-7-8-9; 10-11-12
34	Screw—Brush Lead Attaching.....	1914800	1106101-2-3-4-5-6-7-8-9; 10-11-12
—	Screw—Cover—C.E. Attaching.....	190741	1106109
35	Screw—End Cover Plate Attaching.....	453468	1106104; 11
35	Screw—End Cover Plate Attaching.....	9416183	1106105-8
—	Screw—Ground—In Frame.....	132243	1106101-2-3-4-5-6-9; 11-12
—	Screw—Ground—In Frame.....	131383	1106107-8
37	Screw—Pole Shoe.....	1867938	1106101-2-3-4-5-6-7-8-9; 10-11-12
—	Screw—Shield Attaching.....	453302	1106110
—	Screw—Terminal Plate Attaching.....	453659	1106110
—	Screw—Terminal Shield Attaching.....	453804	1106110
—	Screw—Thru Bolt Damper.....	273656	1106105-7-8-9; 10
—	Screw—Ball Bearing Plate—C.E.....	453468	1106112
WASHERS			
38	Spring, Washer—Ball Bearing Space—C.E.....	1935334	1106103-4-6
—	Washer—(Inside)—D.E.....	1948407	1106105-7-8-9
—	Washer—Plain—C.E.....	1913830	1106109
—	Washer—Plain—Terminal Plate Attaching.....	807295	1106110
—	Washer—Shaft Nut—D.E.....	1905046	1106105-8-9; 10-11-12
40	Washer—Terminal Stud—Insulating.....	1902746	1106101-2-3-4-5-6-7-8-9; 11-12
41	Washer—Terminal Stud—Plain.....	1905125	1106101-2-3-4-5-6-7-8-9; 11-12
MISCELLANEOUS			
—	BAFFLE—D.E.....	1907768	1106107-9
—	BUSHING—Mounting Hinge—C.E. & D.E.....	1952017	1106105-8; 10
—	BUSHING—Mounting Hinge—D.E.....	1957670	1106108
—	CLAMP—Bearing—C.E.—(Rubber).....	1929959	1106101-2-5-7-8-9; 10
—	CLIP—Terminal—To Brush.....	200357	1106101-2-3-4-5-6-7-9

*Later units w/4 mounting hole retainer plate use 9413363 Screw.

□ Later units (w/Rectangular Clamp Groove) Require Part No. 1963355.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
—	MISCELLANEOUS—Continued		
—	COVER—(Shroud)—C.E.	1960653	1106109
—	COVER—Terminal Shield	1920691	1106110
42	Dowel PIN—C.E.	809062	1106101-2-3-4-5-6-7-9; 10-11-12
43	Dowel PIN—D.E.	809062	1106101-2-3-4-5-6-7-8-9; 10-11-12
—	FAN—C.E.	^b 1957301	1106107-9
—	FAN & PULLEY	1946350	1106106
—	FAN & PULLEY	1957220	1106105
—	GASKET—Brush—Cover Plate	1948401	1106105-7-9; 10
—	GASKET—Retainer—Ball Bearing—C.E.	1957299	1106107-9
—	GASKET—Outer Ball Brg. Retainer Plate—D.E.	^x 1948276	1106105-8; 10
—	INSULATION—Field Coil	1968167	1106108-9
—	LEAD—Assembly—Terminal to Brush	1929232	1106110
—	OILER—C.E.	113702	1106101-2-3-4-5; 11-12
44	OILER—D.E.	113702	1106101-2-3-4-5; 11-12
—	PLATE—Terminal Support	1923837	1106110
—	PLATE—Terminal Shield Mfg.	1920676	1106110
—	PLUG—C.E. Cover	432330	1106109
—	RETAINER—Plate & Seal—Ball Bearing—C.E.	^b 1957294	1106107-9
—	RING—Snap—Armature	1948389	1106105-8-9
—	SEAL—Oil—C.E.	1966554	1106111-12
—	SEAL—Oil—D.E.	1948284	1106107-9; 10
—	SHIELD—Terminal	1920680	1106111-12
—	SPACER—Fan—C.E.	^b 1957296	1106107-9; 10
—	TERMINAL PLATE ASSEMBLY	1920677	1106110
—	WICK—Oil—C.E.	1947350	1106101-2-3-4-5; 11-12
46	WICK—Oil—D.E.	1947350	1106101-2-3-4-5; 11-12
—	Woodruff KEY—C.E.	427261	1106107-9
47	Woodruff KEY—D.E.	124548	1106101-2-3-4-5-6-7-8-9; 10-11-12

*If present Ball Bearing retainer plate does not make metal to metal contact with outer bearing race, order Part No. 1948274 Retainer Plate Assem. (Includes gasket).

[®]Generator C.E. may be converted to roller bearing by application of Package No. 1968085 (For models 1106107, 1106109).

For replacement parts after conversion (* after model No.); order as follows:

C.E. Frame	1968098
Oil Seal—C.E. (Inner)	1966554
Outer Race	7451640
Inner Race	7451641
Fan—C.E.	1968100
Plate—Bearing Retainer—C.E.	1968102
Spacer—Fan—C.E.	1968104