


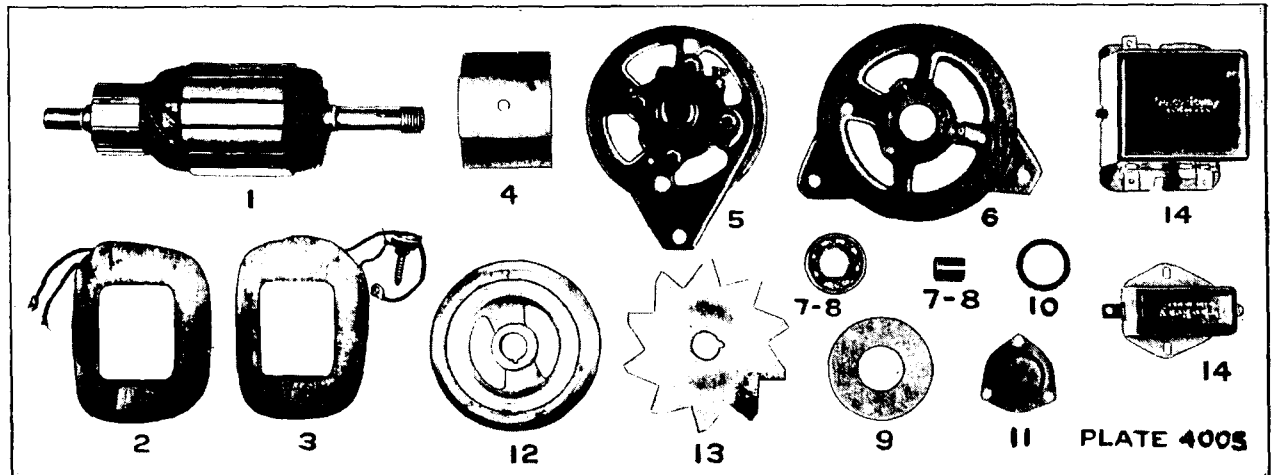

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model No.	Arma- ture	Field Coil R.H.	Field Coil L.H.	Pole Shoe	Commu- tator End Frame	Drive End Frame	Bushing or Ball Bearing C.E.	Bushing or Ball Bearing D.E.	Ball Bearing Retainer Plate D.E.	Felt Washer Retainer Cup D.E.	Commu- tator End Cover Plate	Pulley	Fan	Relay or Control Unit
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1106251	1867637	1853378	1857802	1842744	1857804	1857805	954378	954517	1838692	825196	816212			†5581
1106252	1872848	"	1853379	"	1864830	1859305	"	"	"	"	"			•
1106253	1862211	1873311	1850816	"	1862214	1847147	908503	"	1841877	"	"		1868908	•
1106254	1872348	1853378	1853379	"	1873307	1874169	954378	"	1838692	"	816212			•
1106255	"	"	"	"	"	1880572	"	"	"	"	"			•
1106256	1859044	"	1850961	"	1856488	1858587	"	"	"	"	"			•
1106257	1856921	"	1853379	"	1856920	1863782	"	"	"	"	"			•
1106258	1905858	*1902113		"	1905857	1905860	908504	"	"	"	1884518			•

†For parts see Control Unit—Group 3.

•Not part of Generator. See Index for Model No.

*Field Coil Set.

Delco-Remy
SERVICE PARTS CATALOG

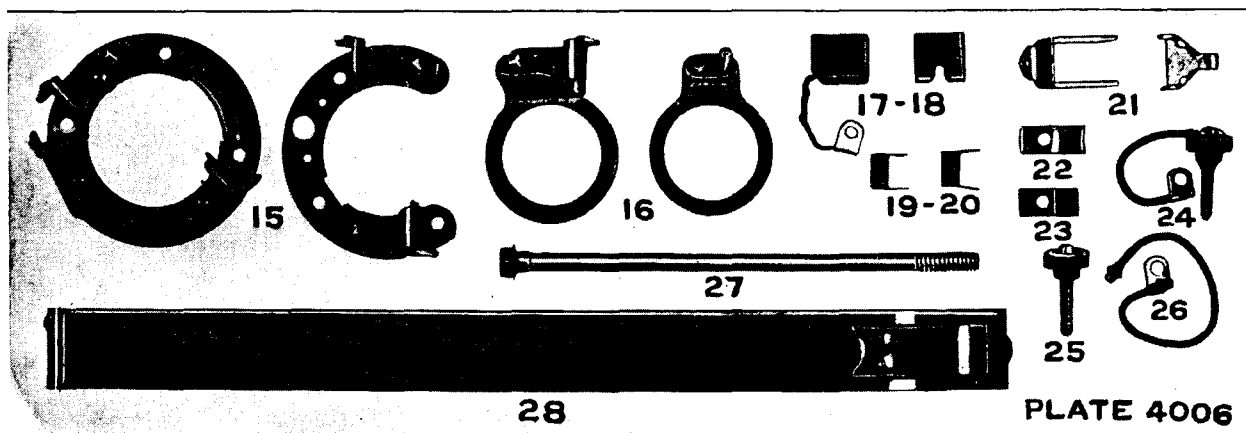

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Main Brush Plate	Third Brush Plate	Main Brush	Third Brush	Main Brush Spring	Third Brush Spring	Brush Holder or Tension Lever	Third Brush Plate Clamp Upper	Third Brush Plate Clamp Spring Lower	Terminal Stud and Lead	Terminal Stud	Relay Lead	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
106251	1857213	1907872	1856494	1906940	1903871	1946798	1904365	1850770	1905561			1857806	1883865	1842763
106252	"	1907872	"	"	"	"	"	"	"		810459	"	"	"
106253	1862953	1907719	"	"	1908829	1903870	"	1857187	"		"	"	37070	"
106254	1857213	1907872	"	"	1903871	1946798	"	1850770	"		"	"	1883865	"
106255	"	"	"	"	"	"	"	"	"		"	"	"	"
106256	"	1907872	"	"	"	"	"	"	"	1835265	"	"	"	1873723
106257	"	"	"	"	"	"	"	"	"	"	"	"	37070	"
106258	"	"	"	"	"	"	"	"	"	1835265	"	"	1883865	"

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	1962276	1106251-2-4-5-6-7-8
Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	114603	1106253
Lock Washer—Brush Lead Attaching Screw	1914816	1106251-2-3-4-5-6-7-8
Lock Washer—Commutator End Cover Plate Screw	453435	1106251-2-4-5-6-7-8
Lock Washer—Control Unit Mounting	138479	1106251
Lock Washer—Main Brush Plate Attaching Screw	453435	1106251-2-3-4-5-6-7-8
Lock Washer—Shaft Nut—D.E.	1915265	1106251-2
Lock Washer—Terminal Stud	9421423	1106252-3-4-5-6-7-8
Lock Washer—Third Brush Plate Clamp Screw	453435	1106251-2-4-6-7-8
Lock Washer—Third Brush Plate Clamp Screw	453844	1106253
Lock Washer—Thru Bolt	9421424	1106251-2-3-4-5-6-7-8
NUTS		
Nut—Cover Band Screw	453433	1106256-7-8
Nut—Shaft—C.E.	1917570	1106258
Nut—Shaft—D.E.	1915172	1106251-2-3-4-5-6-7
Nut—Shaft—D.E.	1915570	1106258
Nut—Terminal Stud	134551	1106252-3-4-5-6-7-8
SCREWS		
Screw—Ball Bearing Retainer Plate—D.E.	1866487	1106251-2-4-5-6-8
Screw—Ball Bearing Retainer Plate—D.E.	5017850	1106253
Screw—Ball Bearing Retainer Plate—D.E.	141602	1106257
Screw—Brush Lead Attaching	454329	1106251-2-3-4-5-6-7-8
Screw—Commutator End Cover Plate	1914580	1106251-2-4-5-6-7-8
Screw—Control Unit Mounting	132970	1106251
Screw—Cover Band	453479	1106256-7-8
Screw—Main Brush Plate Attaching	1914580	1106251-2-3-4-5-6-7-8
Screw—Pole Shoe	1914750	1106251-2-3-4-5-6-7-8
Screw—Third Brush Plate Clamp	1901840	1106251-2-4-5-6-7-8
Screw—Third Brush Plate Clamp	1901833	1106253
WASHERS		
Washer—Brush Arm Space	1857412	1106251-2-3-4-5-6-7-8
Washer—Control Unit Mounting Screw	1856056	1106251
Washer—Felt—C.E.	37077	1106251-2-3-4-5-6-7-8
Washer—Felt—D.E.	825197	1106251-2-3-4-5-6-7-8
Washer—Plain—Shaft Nut—C.E.	1934383	1106258
Washer—Plain—Shaft Nut—D.E.	1934385	1106252-3-4-5-6-7
Washer—Plain—Shaft Nut—D.E.	1889025	1106258
Washer—Space—Inside—D.E.	1845626	1106251-2-4-5-6-7-8
Washer—Terminal Stud Ins.	810501	1106252-3-4-5-6-7-8
Washer—Terminal Stud Plain	1905125	1106252-3-4-5-6-7-8
MISCELLANEOUS		
BUSHING—Relay Lead Ins.	812891	1106251
BUSHING—Terminal Stud	1905683	1106252-3-4-5-6-7-8
COLLAR—Oil Throwing—Inside—D.E.	1843942	1106253
COLLAR—Oil Throwing—Outside—D.E.	1859045	1106256
COLLAR—Oil Throwing—Outside—D.E.	1905861	1106258
COLLAR—Space—Outside—D.E.	1849278	1106251-2-4-5
COLLAR—Space—Outside—D.E.	825254	1106253
COLLAR—Space—Outside—D.E.	1845627	1106257
COLLAR—Space—Inside—C.E.	37837	1106253
Cotter PIN—Shaft Nut	103373	1106252
CUP—Felt Washer Retainer	37078	1106251-2-3-4-5-6-7-8
Dowel PIN—C.E. & D.E.	809062	1106251-2-3-4-5-6-7-8
GASKET—Ball Bearing Retainer Plate—D.E.	825260	1106251-2-4-5-6-7-8
GASKET—End Cover Plate	1835457	1106251-2-6-7
OILER—C.E.	113702	1106251-2-3-4-5-6-7-8
OILER—D.E.	113702	1106251-2-4-5-6-7-8
Oil BAFFLE—D.E.	816214	1106256
Oil BAFFLE—D.E.	1886896	1106258
Oil WICK—C.E.	1947350	1106251-2-3-4-5-6-7-8
Oil WICK—D.E.	1947350	1106258
PIN—Shaft Nut Cotter	103383	1106254-5
Relay Ground LEAD	812653	1106251
SUPPORT—Relay Lead	1857807	1106251

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
Terminal CLIP—to 3rd Brush.....	200182	1106251-2-3-6-8
Terminal CLIP—to Main Brush.....	1857108	1106251
Terminal CLIP—to Main Brush.....	200181	1106252-6-7-8
Terminal CLIP—R.H. to Relay.....	200154	1106251
Terminal CLIP—L.H. to Control Unit.....	200188	1106251
Terminal CLIP—Field Terminal.....	1854058	1106253
Terminal Stud Insulation STRIP.....	1905652	1106252-3-4-5-6-7-8
Terminal Stud LOCK CLIP.....	820516	1106252-3-4-5-6-7-8
Woodruff KEY—C.E.....	124545	1106253
Woodruff KEY—C.E.....	124548	1106258
Woodruff KEY—D.E.....	124545	1106251-2
Woodruff KEY—D.E.....	124548	1106253-4-5-6-7
Woodruff KEY—D.E.....	113782	1106258

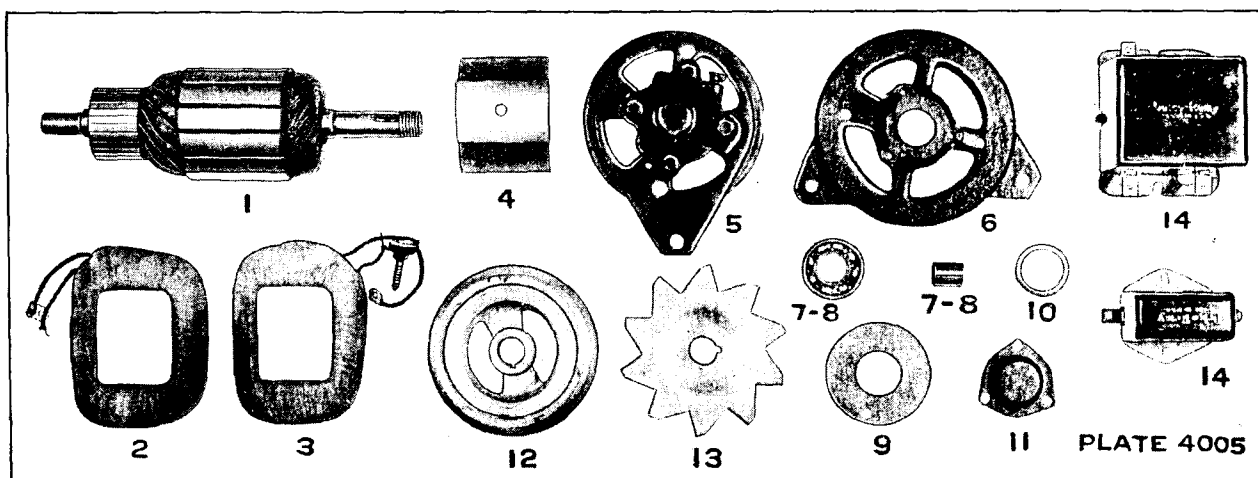


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Arma- ture	Field Coil R.H.	Field Coil L.H.	Pole Shoe	Commu- tator End Frame	Drive End Frame	Bushing or Ball Bearing C.E.	Bushing or Ball Bearing D.E.	Ball Bearing Re- tainer Plate D.E.	Felt Washer Re- tainer Plate D.E.	Commu- tator Cover Plate	Pulley	Fan	Relay or Control Unit
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1106301	1861295	1847247	1861293	1842744	1861298	1861299	908503	954517	1838692		814985	1867711	1856936	†
1106302	1868009	1847650	1847649	"	1857512	1858587	954378	"	"	825196	816212			†
1106303	1858338	1847247	1850374	"	1856488	1849277	908503	"	"	"	814985			†
1106304	1837119	1847117	1847118	"	1847254	1858324	954378	"	1841877	"	816212			†
1106305	1864631	1847650	1847649	"	1857512	1849277	908503	"	1838692	"	814985			†

†See Car Index for Model No. Not part of Generator.

Delco-Remy
SERVICE PARTS CATALOG

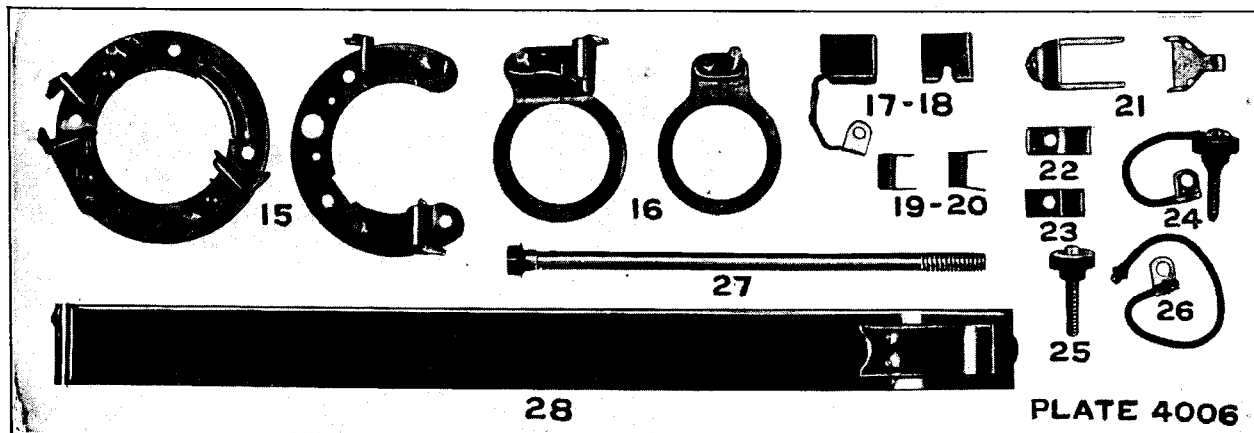

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Main Brush Plate	Third Brush Plate	Main Brush	Third Brush	Main Brush Spring	Third or Ground Brush Spring	Brush Holder or Tension Lever	Third Brush Plate Clamp	Third Brush Plate Clamp Spring	Terminal Stud and Lead	Terminal Stud Only	Relay Lead	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
1106301	1856491	1856489	1856494	1906940	1903871	1946798	1904365	1850770	1905561	1861294	1858749		1883865	1842763
1106302	1858586	1857514	"	"	1908829	1903870	"	"	"		810459		"	"
1106303	1856491	1856489	"	"	1903871	1946798	"	"	"		"		"	"
1106304		1842759	829073	829073	812712	812712	* 812711	1843965		1835265	"		37070	1873723
1106305	1857513	1857514	1856494	1906940	1908829	1903870	1904365	1850770	1905561	"	"		1883865	1842763

*812711 Brush Holder for 3rd & Insulated Main; 1844684 for Grounded Main.

Revised to August 1, 1968

SERVICE PARTS CATALOG

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer Plate—D.E.	1962276	1106301-2-3-5
Lock Washer—Ball Bearing Retainer Plate—D.E.	114603	1106304
Lock Washer—Brush Lead Attaching Screw	1914816	1106301-2-3-4-5
Lock Washer—Brush Lead Ground Screw	453844	1106304
Lock Washer—Commutator End Cover Plate Screw	453435	1106301-2-3-4-5
Lock Washer—Fan Attaching Screw	1914579	1106301
Lock Washer—Main Brush Plate Attaching Screw	453435	1106301-2-3-5
Lock Washer—Shaft Nut—D.E.	103324	1106301
Lock Washer—Terminal Stud	9421423	1106302-3-4-5
Lock Washer—Terminal Stud	1914579	1106301
Lock Washer—Third Brush Plate Clamp Screw	453435	1106301-2-3-4-5
Lock Washer—Thru Bolt	453435	1106301-2-3-4-5
NUTS		
Nut—Shaft—D.E.	1917570	1106302-3-4-5
Nut—Shaft—D.E.	451079	1106301
Nut—Terminal Stud	121743	1106301
Nut—Terminal Stud	141551	1106302-3-4-5
SCREWS		
Screw—Ball Bearing Retainer Plate—D.E.	435429	1106301-2-3-5
Screw—Ball Bearing Retainer Plate—D.E.	5017850	1106304
Screw—Brush Lead Attaching	454329	1116301-2-3-4-5
Screw—Brush Lead Ground	115607	1106304
Screw—Brush Plate Attaching—Main	1914580	1106301-2-3-5
Screw—Brush Plate Clamp—Third	141602	1106301-2-3-5
Screw—Commutator End Cover Plate	141602	1106301
Screw—Commutator End Cover Plate	1914580	1106302-3-4-5
Screw—Cover Band	453479	1106304
Screw—Fan Attaching	132964	1106301
Screw—Pole Shoe	1864510	1106301-2-3-4-5
Screw—Third Brush Plate Clamp	142729	1106304
WASHERS		
Washer—Felt—D.E.	825197	1106301-2-3-4-5
Washer—Felt—C.E.	820106	1106301
Washer—Felt—C.E.	37077	1106302-3-4-5
Washer—Shaft Nut—Plain—D.E.	1934383	1106302-3-4-5
Washer—Space—Brush Arm	1914741	1106301-2-3-5
Washer—Space—Inside—D.E.	1845626	1106301-2-3-5
Washer—Space—Outside—D.E.	1849278	1106305
Washer—Terminal Stud—Insulation	1858753	1106301
Washer—Terminal Stud—Insulation	810501	1106302-3-4-5
Washer—Terminal Stud—Plain	826319	1106301
Washer—Terminal Stud—Plain	1905125	1106302-3-4-5
Washer—Third Brush Plate Spring	809824	1106304
MISCELLANEOUS		
BUSHING—Terminal Stud Insulation	1905683	1106302-3-4-5
CLIP—To Brush	200182	1106301-2-3-4
CLIP—To Brush	810069	1106305
CLIP—Terminal Lock	820516	1106302-3-4-5
COLLAR—Oil Throwing—D.E.	1857941	1106304
COLLAR—Oil Throwing—Outside—D.E.	1858588	1106301
COLLAR—Space—Inside—C.E.	817224	1106301
COLLAR—Space—Outside—C.E.	1856567	1106301-3-5
COLLAR—Space—Outside—D.E.	1849278	1106301-3
COLLAR—Space—Outside—D.E.	825254	1106304
COTTER PIN—In Brush Holder	107761	1106304
CUP—Felt Washer Retainer—C.E.	37078	1106302-3-4-5
CUP—Felt Washer Retainer—D.E.	825196	1106301-2
Dowel PIN—C.E. & D.E.	809062	1106301-2-3-4-5
GASKET—End Cover Plate—C.E.	1835457	1106301-2-3-4-5
GASKET—Ball Bearing Retainer Plate—D.E.	825260	1106301-2-3-5
Grease CUP	1860863	1106301
Insulation STRIP—Terminal Stud	1905652	1106302-3-4-5
OILER—C.E.	113702	1106302-3-4-5
OILER—D.E.	113702	1106302-3-5

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
Oil WICK—C.E.....	1947350	1106302-3-5
Oil BAFFLE—D.E.....	816214	1106302
PIN—Brush Holder Hinge & Insulation.....	812016	1106304
PIN—Brush Holder Stop & Insulation.....	812015	1106304
PIN—Third Brush Plate Spring Washer.....	809614	1106304
SUPPORT—Terminal Lead.....	1857807	1106301
Woodruff KEY—C.E.....	124546	1106303-5
Woodruff KEY—D.E.....	124548	1106302-4
Woodruff KEY—D.E.....	124546	1106303-5

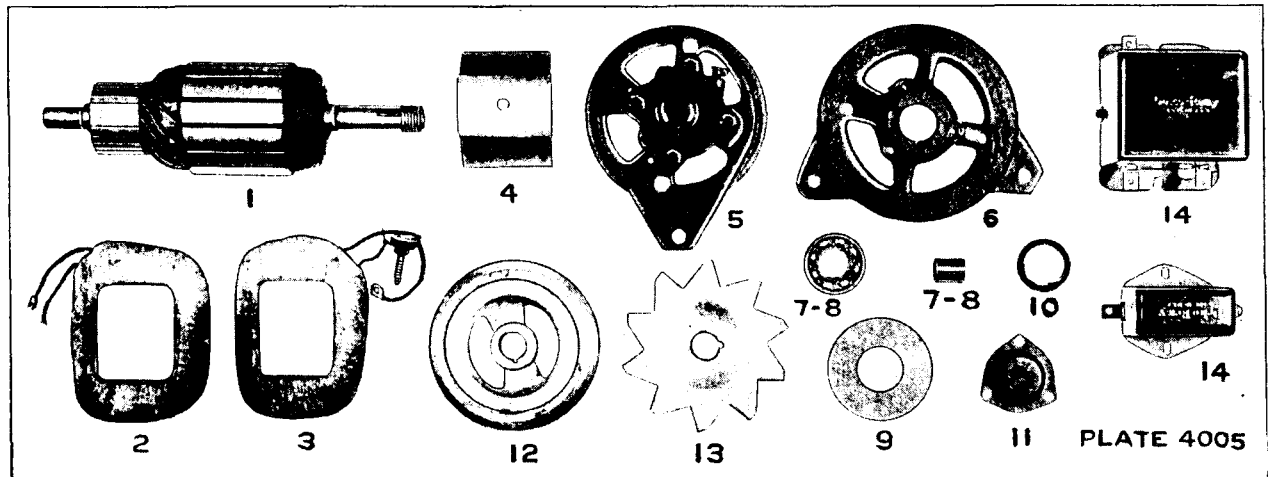

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Arma- ture	Field Coil R.H.	Field Coil L.H.	Pole Shoe	Commu- tator End Frame	Drive End Frame	Bushing or Ball Bearing C.E.	Bushing or Ball Bearing D.E.	Ball Bearing Re- tainer Plate D.E.	Felt Washer Re- tainer Cup D.E.	Commu- tator Cover Plate	Pulley	Fan	Relay or Control Unit
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1106451	*1872043	1847650	1847649	1842744	1872046	1872047	908503	908505	1866075		1872051			†
1106452	1873262	"	"	"	"	"	"	"	"		"			†
1106453	1873732	1847247	1850374	"	1873734	1849277	"	954517	1838692	825196	1840555			†
1106454	1873721	1847650	1847649	"	1873719	"	"	"	"	"	"			†
1106455	^1880476	1847247	1850374	"	1880475	1872047	"	908505	1866075		1872051			†
1106456	1883636	"	"	"	"	"	"	"	"		"			†
1106457	1886067	1886061	1886062	1866755	1886066	1886069	954143	954243	1869730		1887595	1886070		
1106458	1888310	1888317	1888318	1888313	1888760	1888763	"	"	"		1872051			
1106459	"	1900517	1900518	"	"	"	"	"	"		"	1902902		
1106460	1902792	1847117	1847118	1842744	1902794	1902789	908503	954517	1838692	825196			1872400	†
1106461	1888310	1888317	1888318	1906152	1906116	1906115	954143	954243	1906153					†
.....														
.....														
.....														
.....														
.....														


†Not part of Generator—see Index for Model No.

*Use 1873262 Armature—Opt. for constant high speed service.

^Use 1883636 Armature—Opt. for constant high speed service.

Delco-Remy

SERVICE PARTS CATALOG

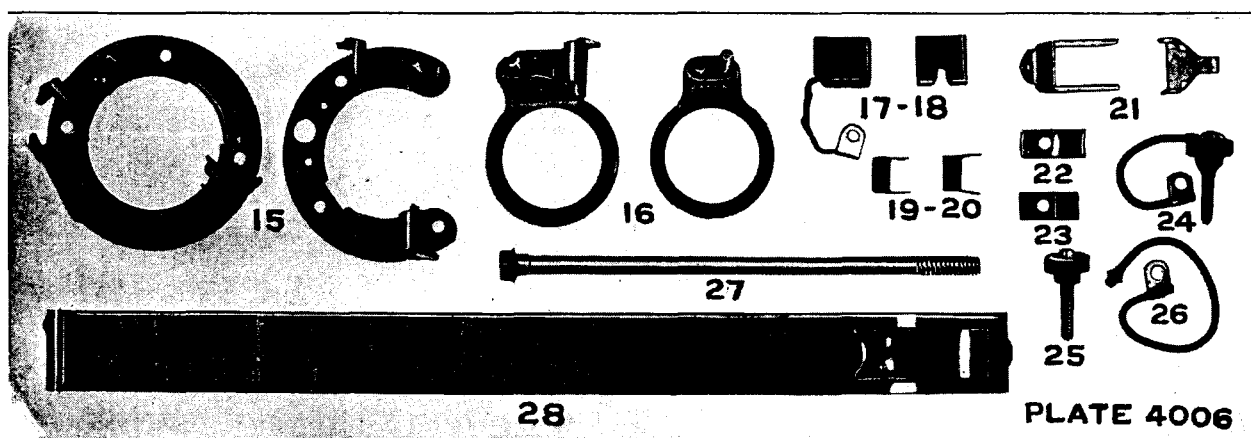

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

[illegible]

*1886063 Terminal Stud—"F" Terminal—10-32x $\frac{1}{4}$. 1886064 Terminal Stud—"A" Terminal— $\frac{1}{4}$ -20x $\frac{1}{4}$.

Revised to May 1, 1968

SERVICE PARTS CATALOG

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Baffle Plate Attaching Screw.....	453435	1106461
Lock Washer—Ball Bearing Retainer Plate Screw.....	1962276	1106451-2-3-4-5-6-7-8-9; 60-1
Lock Washer—Brush Lead Attaching Screw.....	1914816	1106451-2-3-4-5-6-7-8-9; 60-1
Lock Washer—Brush Plate Attaching Screw.....	453435	1106451-2-3-4-5-6-7-8-9; 60-1
Lock Washer—Commutator End Cover Plate—Shakeproof.....	138599	1106451-2-5-6
Lock Washer—Commutator End Cover Plate.....	1962276	1106453-4
Lock Washer—Commutator End Cover Plate.....	138599	1106457-8-9
Lock Washer—Distributor Mounting Plate Screw.....	9421424	1106453-4
Lock Washer—Field Lead Ground Screw.....	453844	1106457-8-9; 61
Lock Washer—Filter Mounting Bracket Screw.....	453435	1106459
Lock Washer—Generator Mounting Base Screw.....	9421425	1106457
Lock Washer—Mounting Base Attaching Screw.....	1914816	1106458; 61
Lock Washer—Shaft Nut—C.E.....	141557	1106453-4
Lock Washer—Shaft Nut—C.E.....	1915265	1106460
Lock Washer—Shaft Nut—D.E.....	103334	1106451-2-5-6
Lock Washer—Terminal Box Attaching Screw.....	453435	1106457-8; 61
Lock Washer—Terminal Box Base Attaching Screw.....	453435	1106457-8; 61
Lock Washer—Terminal Box Cover Screw.....	453435	1106457-8; 61
Lock Washer—Terminal Stud (1/4).....	9421423	1106451-2-3-4-5-6-7-8; 60-1
Lock Washer—Terminal Stud Nut (No. 10).....	453435	1106457-8; 61
Lock Washer—Thru Bolt.....	9421424	1106451-2-5-6-7-8-9; 60-1
Lock Washer—Top of Frame Screw.....	9421424	1106453-4
NUTS		
Nut—Distributor Mounting Plate Screw.....	120368	1106453-4
Nut—Shaft—C.E.....	1917035	1106453-4
Nut—Shaft—C.E.....	1915172	1106460
Nut—Shaft—D.E.....	451079	1106451-2-5-6
Nut—Shaft—D.E.....	1917570	1106453-4-7-8-9; 60
Nut—Shaft—D.E.....	1905890	1106461
Nut—Terminal Stud.....	134551	1106451-2-3-4-5-6-9; 60
Nut—Terminal Stud (1/4-20).....	120375	1106457-8
Nut—Terminal Stud (1/4-20).....	134551	1106461
Nut—Terminal Stud (10-32).....	5024654	1106457-8; 61
SCREWS		
Screw—Baffle Plate Attaching.....	5017850	1106461
Screw—Ball Bearing Retainer Plate—D.E.....	1914580	1106451-2-5-6
Screw—Ball Bearing Retainer Plate—D.E.....	435429	1106453-4
Screw—Ball Bearing Retainer Plate—D.E.....	5017850	1106457-8-9; 60-1
Screw—Brush Lead Attaching.....	454329	1106451-2-3-4-5-6-7-8-9; 60-1
Screw—Brush Plate Attaching.....	1914580	1106451-2-3-4-5-6-7-8-9; 60-1
Screw—Commutator Cover Band.....	132923	1106453-4
Screw—Commutator End Cover Plate.....	133629	1106451-2-5-6-7-8-9
Screw—Commutator End Cover Plate.....	1914580	1106453-4
Screw—Distributor Mounting Plate.....	1838393	1106453-4
Screw—Field Lead Ground.....	1904233	1106457-8-9
Screw—Field Lead Ground.....	1904379	1106461
Screw—Filter Mounting Bracket Attaching.....	1901839	1106459
Screw—Generator Mounting Base Attaching.....	1888073	1106457-8; 61
Screw—Pole Shoe.....	1914750	1106451-2-3-4-5-6-7-8-9; 60
Screw—Pole Shoe.....	1905650	1106461
Screw—Top of Field Frame.....	132243	1106453-4
Screw—Terminal Box Attaching.....	1905103	1106457-8; 61
Screw—Terminal Box Base Attaching.....	5017850	1106457-8; 61
Screw—Terminal Box Cover Attaching.....	5017850	1106457-8; 61

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
WASHERS		
Washer—Ball Bearing Space—C.E.	1888761	1106457-8-9; 61
Washer—Brush Arm Space	1857412	1106451-2-3-4-5-6-7-8-9; 60
Washer—Brush Arm Space	1914741	1106461
Washer—Felt—C.E.	37077	1106453-4; 60
Washer—Felt—Inside—D.E.	825197	1106453-4; 60
Washer—Shaft Nut—Plain	1934383	1106453-4-7-8-9; 60
Washer—Shaft Nut—Plain—D.E.	1934383	1106461
Washer—Space—Inside—D.E.	1845626	1106453-4; 60
Washer—Terminal Stud Insulating	810501	1106451-2-3-4-5-6-9; 60
Washer—Terminal Stud Plain—"A" Terminal	1905125	1106451-2-3-4-5-6-7-8-9; 60
Washer—Terminal Stud Plain—"F" Terminal	1902998	1106457-8
Washer—Terminal Stud Plain—"F" Terminal	1914741	1106461
MISCELLANEOUS		
BAFFLE—Oil—D.E.	1920746	1106460
BASE—Generator Mounting	1886059	1106457
BASE—Generator Mounting	1888312	1106458; 61
BASE—Terminal Box	1886071	1106457-8; 61
BOX—Terminal	1886073	1106457-8; 61
BRACKET—Filter Mounting	1888256	1106459
BUSHING—Distributor Well	1838697	1106453-4
BUSHING—Terminal Stud Ins.	1905683	1106451-2-3-4-5-6-9; 60
COLLAR—Oil Thrower—Outside—C.E.	1859045	1106460
COLLAR—Space—D.E.	1872048	1106451-2-5-6
COLLAR—Space—Inside—C.E.	37837	1106453-4
COLLAR—Space—Inside—C.E.	1862471	1106460
COLLAR—Space—Outside—D.E.	1849278	1106453-4
COTTER PIN—Shaft Nut	1888070	1106457-9
COVER—Terminal Box	1886074	1106457-8; 61
Distributor Drive GEAR	1873729	1106453-4
Distributor Mounting PLATE	36961	1106453-4
Dowel PIN—C.E. & D.E.	809062	1106451-2-3-4-6-7-8-9; 60-1
Felt Retainer CUP—C.E.	37078	1106453-4; 60
Felt WICK—C.E.	1947350	1106453-4; 60
Felt WICK—C.E.	1884157	1106451-2-5-6
Felt WICK—D.E.	1947350	1106451-2-5-6
GASKET—Ball Bearing—D.E.	1872049	1106451-2-5-6
GASKET—Ball Bearing—D.E.	825260	1106453-4; 60
GASKET—End Cover Plate—C.E.	1872050	1106451-2-5-6; 61
Grease PLUG—C.E.	35063	1106453-4
Insulation STRIP	1905652	1106451-2-3-4-5-6-9; 60
OILER—C.E.	1880641	1106451-2-5-6
OILER—C.E.	113702	1106453-4; 60
OILER—D.E.	113702	1106451-2-3-4-5-6; 60
PLATE—Baffle—C.E.	1904293	1106461
PLATE—Terminal Support	1886072	1106457-8; 61
SLEEVE—Terminal Box Insulation	1888237	1106457-8; 61
Terminal CLIP—To Brush	200182	1106451-2-5-6; 60
Terminal CLIP—To Brush	200181	1106459
Terminal CLIP—"A" Terminal (Shipped separately)	1882949	1106457-8
Terminal CLIP—"F" Terminal (Shipped separately)	1859665	1106457-8
Terminal CLIP—Field Lead to Ground	200182	1106457
Terminal CLIP—Field Lead to Ground	200181	1106458-9
Terminal CLIP—Terminal Lead to Brush & Ground	200181	1106457-8; 61
Terminal Lock CLIP	1853400	1106453-4
Terminal Stud Lock CLIP	820516	1106451-2-5-6-9; 60
Woodruff KEY—C.E.	124544	1106453-4
Woodruff KEY—C.E.	124545	1106460
Woodruff KEY—D.E.	106751	1106453-4
Woodruff KEY—D.E.	124548	1106457-8-9; 60-1

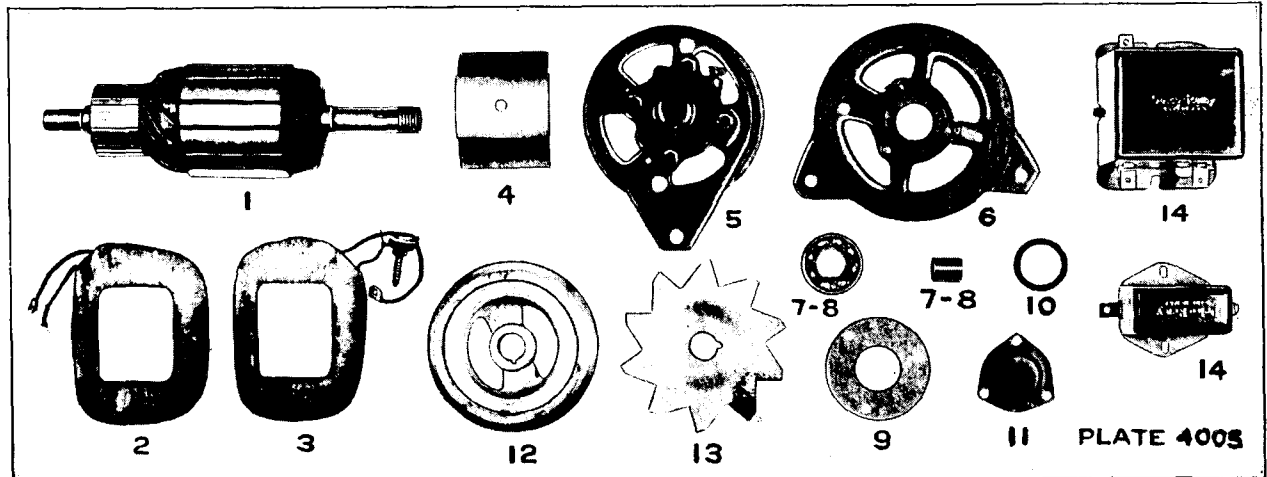

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model No.	Arma- ture	Field Coil R.H.	Field Coil L.H.	Pole Shoe	Commu- tator End Frame	Drive End Frame	Bushing or Ball Bearing C.E.	Bushing or Ball Bearing D.E.	Ball Bearing Re- tainer Plate D.E.	Felt Washer Re- tainer Cup D.E.	Commu- tator Cover Plate	Pulley	Fan	Relay or Control Unit
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1106501	1874165	1857909	1857910	1842744	1874168	1874166	954378	954517	1905643	825196	816212			†
1106502	1880301	"	1880303	"	1873734	1849277	908503	"	"	"	1840555			†
1106503	1880304	1880306	1873554	"	1873719	"	"	"	"	"	"			†
1106504	1880301	1857909	1880631	"	1873734	"	"	"	"	"	"			†
1106505	1880304	1879238	1873554	"	1873719	"	"	"	"	"	"			†
*1106506	1880301	1857909	1881078	"	1873734	"	"	"	"	"	"			†
*1106507	1880304	1881042	1873554	"	1873719	"	"	"	"	"	"			†
1106508	1874165	1857909	1857910	"	1883678	1883679	954378	"	"	"	816212			†
1106509	1884511	1884504	1884505	"	1884499	1849277	908504	"	"	"	1884518			†
1106510	1885363	*1910384		1866755	1903677	1872047	908503	908505	1866075		1872051			†
1106511	1903675	*1902115		"	"	"	"	"	"		"			†
1106512	1905833	"		"	1880475	"	"	"	"		"			†
1106513	1905825	1857909	1905682	1905802	1905824	1905826	954378	954517	1905643	825196	1905889			†
1106514	1885527	1884504	1909304	1866755	1880475	1872047	908503	908505	1866075		1872051			†
1106515	1884487	*1910384		1842744	1880570	1880572	"	954517	1905643	825196	1883852			†
1106516	1884493	* " "		"	1884492	"	"	"	"	"	"			†
1106517	1910272	* " "		"	1866498	1873562	"	"	"	"			1872400	†
1106518	1885363	* " "		"	1903677	1872047	"	908505	1866075		1872051			†

†Not part of Generator. See Index for Model No.

*Must be secured from Hall-Scott Corp.

*Set of (2) Coils Plastisol covered. If taped coils are required use 1937053 to replace 1910384 and 1937050 to replace 1902115.

Delco-Remy
SERVICE PARTS CATALOG

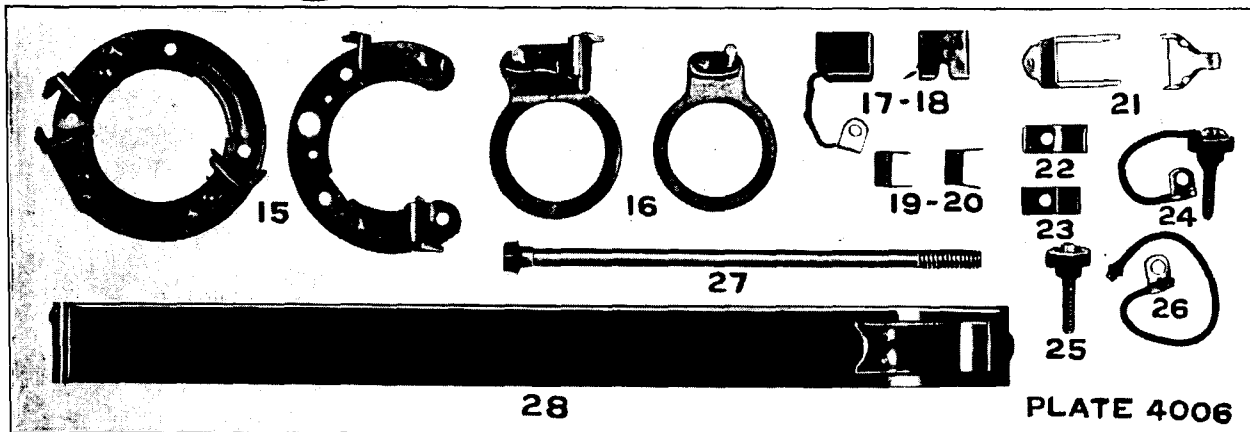

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Main Brush Plate	Third Brush Plate	Main Brush	Third Brush	Main Brush Spring	Third or Ground Brush Spring	Brush Arm	Third Brush Plate Clamp	Third Brush Plate Clamp Spring	Terminal Stud and Lead	Terminal Stud Only	Relay Lead	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
1106501	1857915		1856494		1903871		1907652				810459		1883865	1842763
1106502	1856491		"		1903871		"				"		"	"
1106503	1857513		"		1908829		"				"		"	"
1106504	1857915		"		1903871		"				"		"	"
1106505	1862953		"		1908829		"				"		"	"
1106506	1856491		"		1903871		"			1881043	1881044		"	1881225
1106507	1857513		"		1908829		"			"	"		"	"
1106508	1857915		"		1903871		"				810459		1883865	1842763
1106509	"		"		"		"			1884507	1884508		1883865	"
1106510	1862953		"		1908829		"				810459		37070	"
1106511	"		"		"		"				"		"	"
1106512	1857915		"		1903871		"				"		"	"
1106513	1905677		1905639		1905219		1904365			1905684	1905685		1915785	1888427
1106514	1857915		1856494		1903871		1907652			810586	810459		37070	1842763
1106515	"		"		"		"				"		1883865	"
106516	1862953		"		1908829		"				"		"	"
106517	1857915		"		1903871		"				"		"	"
106518	1862953		"		1908829		1904365				"		37070	"

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer Plate Screw—D.E.....	1962276	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18
Lock Washer—Brush Lead Attaching Screw.....	1914816	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18
Lock Washer—Brush Plate Attaching Screw.....	453435	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18
Lock Washer—Commutator End Cover Plate Screw.....	453435	1106501-8-9; 13-15-16
Lock Washer—Commutator End Cover Plate Screw.....	1962276	1106502-3-4-5-6-7
Lock Washer—Commutator End Cover Plate Screw.....	138597	1106510-11-14-18
Lock Washer—Condenser Attaching Screw.....	138484	1106513
Lock Washer—Distributor Mounting Plate Screw.....	141554	1106502-3-4-5-6-7
Lock Washer—On Field Frame.....	120380	1106502-3-4-5-6-7
Lock Washer—Shaft Nut.....	141557	1106502-3-4-5-6-7
Lock Washer—Shaft Nut—C.E.....	1888439	1106517
Lock Washer—Shaft Nut—D.E.....	131205	1106510-11-14-17-18
Lock Washer—Shaft Nut—D.E.....	103334	1106512
Lock Washer—Terminal Shield Ground Lead Screw.....	453844	1106506-7
Lock Washer—Terminal Stud.....	9421423	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18
Lock Washer—Thru Bolt.....	9421424	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18
NUTS		
Nut—Distributor Mounting Plate Screw.....	120368	1106502-3-4-5-6-7
Nut—Shaft—C.E.....	1917035	1106502-3-4-5-6-7
Nut—Shaft—C.E.....	1915172	1106517
Nut—Shaft—D.E.....	1917570	1106501-8
Nut—Shaft—D.E.....	451079	1106510-11-12-14-17-18
Nut—Shaft—D.E.....	1905890	1106513
Nut—Shaft—D.E.....	1917035	1106515-16
Nut—Terminal Stud.....	134551	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18
SCREWS		
Screw—Ball Bearing Retainer Plate—D.E.....	1915806	1106501-2-3-4-5-6-7-8-9-13-15-16-17
Screw—Ball Bearing Retainer Plate—D.E.....	1914580	1106510-11-12-14-18
Screw—Brush Lead Attaching.....	454329	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18
Screw—Brush Plate Attaching.....	1914580	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18
Screw—Commutator Cover Plate.....	1914580	1106501-2-3-4-5-6-7-8-9-13-15-16
Screw—Commutator Cover Plate.....	133629	1106510-11-12-14-18
Screw—Condenser Attaching.....	1886909	1106513
Screw—Cover Band.....	453479	1106502-3-4-5-6-7
Screw—Distributor Mounting Plate.....	1838393	1106502-3-4-5-6-7
Screw—On Field Frame.....	132243	1106502-3-4-5-6-7
Screw—Pole Shoe.....	1914750	1106501-2-3-4-5-6-7-8-9-10-11-12-14-15-16-17-18
Screw—Pole Shoe.....	1905650	1106513
Screw—Terminal Ground Lead—To Cover Band.....	1904234	1106506-7
WASHERS		
Washer—Brush Arm Space.....	1914741	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18
Washer—Felt—C.E.....	37077	1106501-2-3-4-5-6-7-8-9-13-17
Washer—Felt—D.E.....	825197	1106501-2-3-4-5-6-7-8-9-13-15-16-17
Washer—Shaft Nut—Plain—D.E.....	1934383	1106501-2-3-4-5-6-7-8-13-15-16
Washer—Space—Inside—D.E.....	1845626	1106501-2-3-4-5-6-7-8-9-13-15-16-17
Washer—Terminal Stud Ins.....	810501	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18
Washer—Terminal Stud Plain.....	1905125	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS		
BUSHING—Bottom of Distributor Well.....	1838697	1106502-3-4-5-6-7
BUSHING—Terminal Stud—Ins.....	1905683	1106501-2-3-4-5-8-10-11-12-13-14-15-16-17-18
BUSHING—Terminal Stud—Ins.....	1905654	1106509
*BUSHING—Terminal Stud.....	30136	1106506-7
COLLAR—Space—Inside—C.E.....	37837	1106506-7-16
COLLAR—Space—Outside—D.E.....	1849278	1106501-2-3-4-5-6-7-8-13-15-16-17
COLLAR—Space—Outside—D.E.....	1872048	1106510-11-12-14-18
CLIP—Terminal—To Brush.....	200182	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18
CLIP—Terminal Lock.....	1853400	1106502-3-4-5-6-7
CLIP—Terminal Stud Lock (Pos. & Neg. Term.).....	1854058	1106501-8-9-10-11-12-14-15-16-17-18
CLIP—Terminal Stud Lock (Pos. & Neg. Term.).....	1905651	1106513
CLIP—Terminal Stud Lock (Field).....	1854058	1106501-2-3-4-5-8-9-10-11-12-14-15-16-17-18
CLIP—Terminal Stud Lock (Field).....	1905645	1106513
CUP—Felt Washer Retainer—C.E.....	37078	1106501-2-3-4-5-6-7-8-9-13-17
*DISTRIBUTOR (Shipped separate).....		1106502-3-4-5-6-7
Dowel PIN—C.E. & D.E.....	809062	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18
GASKET—Ball Bearing Retainer Plate—D.E.....	825260	1106501-2-3-4-5-6-7-8-9-13-15-16-17
GASKET—Ball Bearing Retainer Plate—D.E.....	1872049	1106510-11-12-14-18
GASKET—Commutator End Cover Plate.....	1835457	1106501-8-13
GASKET—Commutator End Cover Plate.....	1872050	1106510-11-12-14-15-16-18
GEAR—Distributor Drive.....	1873729	1106502-3-4-5-6-7
Grease PLUG—C.E.....	35063	1106502-3-4-5-6-7
INSULATION—Terminal Stud.....	1905652	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18
Name PLATE.....	1857940	
Name Plate PIN.....	802737	
OILER—C.E.....	113702	1106501-2-3-4-5-6-7-8-9-13-15-16-17
OILER—C.E.....	125609	1106510-11-12-14-18
OILER—D.E.....	113702	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18
Oil WICK—C.E.....	1947350	1106501-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18
Oil WICK—C.E.....	1884157	1106510-11-12-14-18
PLATE—Distributor Mounting.....	36961	1106502-3-4-5-6-7
*Terminal SHIELD.....	1881045	1106506-7
Terminal SHIELD.....	1888437	1106509
Terminal Shield CAP.....	1883931	1106509
*Terminal Shield Ground LEAD.....	1881046	1106506-7
Woodruff KEY.....	124544	1106502-3-4-5-6-7
Woodruff KEY—C.E.....	124545	1106517
Woodruff KEY—C.E. & D.E.....	106751	1106509
Woodruff KEY—D.E.....	124548	1106501-8-9-13-15-16-17


†See application for Distributor models.

Parts marked () must be secured from Scintilla Magneto Division.

*Distributor used with Models 1106506-7 must be secured from Hall-Scott.

Revised to February 1, 1967

SERVICE PARTS CATALOG

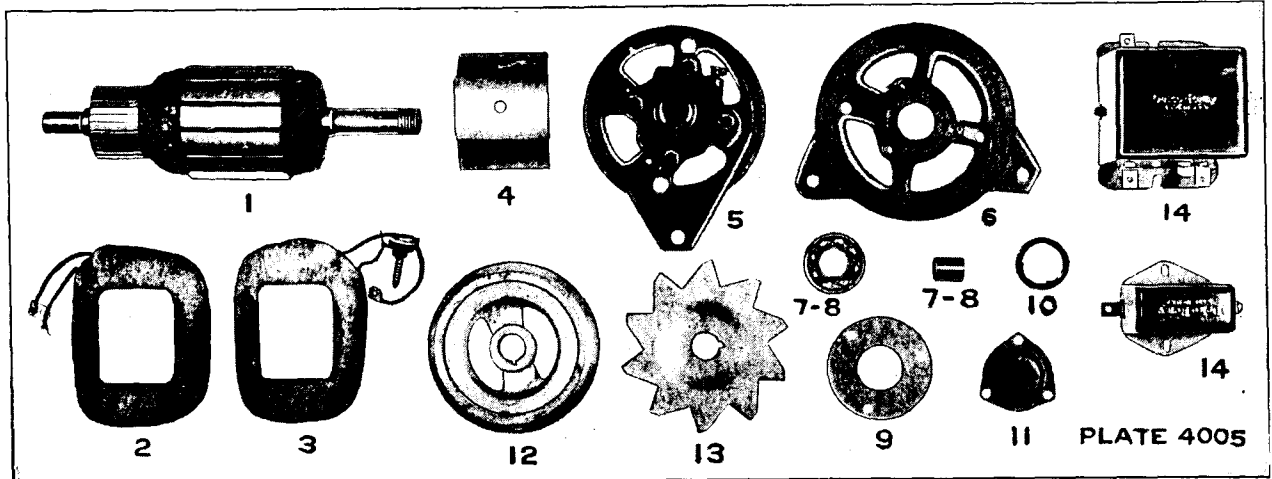

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model No.	Arma- ture	Field Coil R.H.	Field Coil L.H.	Pole Shoe	Commu- tator End Frame	Drive End Frame	Bushing or Ball Bearing C.E.	Bushing or Ball Bearing D.E.	Ball Bearing Re- tainer Plate D.E.	Felt Washer Re- tainer Plate D.E.	Commu- tator Cover Plate	Pulley	Fan	Relay or Control Unit
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1106526	1869159	1866753	1872071	1866755	1866759	1872073	954143	954182	1866760				1885089	†
1106527	1873222	1873221	1910385	1842744	1856488	1849277	954378	954517	1838692	825196	816212			†
1106528	1873684	"	"	"	"	"	908503	"	"	"	814985			†
1106529	1873682	1866753	1873681	"	1857512	"	"	"	"	"	"			†
1106530	1864609	"	"	"	"	"	954378	"	"	"	816212			†
1106531	1879239	1879238	1873554	"	"	"	"	"	"	"	"			†
1106532	1880673	1857909	1867910	"	1856488	"	908503	"	"	"	814985			*5887
1106533	1869159	1866753	1872071	1866755	1881724	1872073	954143	954182	1866760				1885089	†
1106534	1879239	1879238	1873554	1842744	1857512	1849277	954378	954517	1838692	825196	816212			†
1106535	1873222	1873221	1905649	"	1856488	"	"	"	"	"	"			†
1106536	1884493	1885759	1885760	"	1884492	1880572	908503	"	"	"	1883852			†
1106537	1884487	1857909	1885837	"	1880570	"	"	"	"	"	"			†
1106538	1884677	1880306	1873554	"	1884680	1849277	"	"	"	"	814985			†
1106540	1884487	1857909	1886597	"	1880570	1880572	"	"	"	"	1883852			†
1106541	1887495	1866753	1873681	"	1884492	"	"	"	"	"	"			†
1106542	1887543	1873221	1910385	"	1880570	"	"	"	"	"	"			†
1106543	1884487	1857909	1886597	"	1888425	1888426	"	"	"	"	1888428			†
1106544	1901284	1857909	1905649	"	1866498	1873562	"	"	"	"	"		1872400	†
1106546	1905646	"	1905649	1905802	1888425	1888426	"	"	1905643	"	1888428			†
1106548	1911674	1902115		1842744	1911676	1916851	"	"	"	"	1911399			†

†See Index for Model No. Not part of Generator.

*For parts see Control Unit—Group 5.

□Field Coil Set.

Delco-Remy
SERVICE PARTS CATALOG

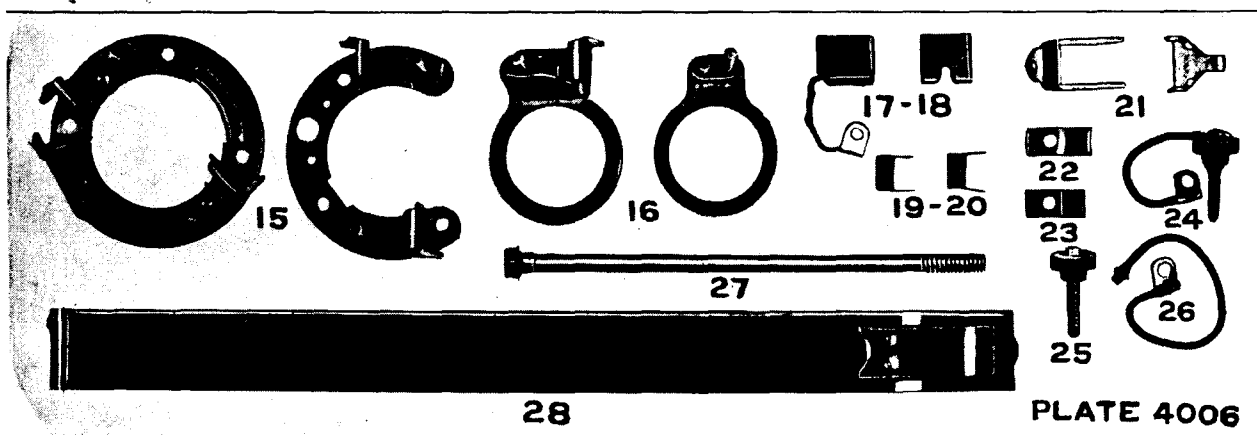

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Main Brush Plate	Third Brush Plate	Main Brush	Third Brush	Main Brush Spring	Third or Ground Brush Spring	Brush Holder or Arm	Third Brush Plate Clamp	Third Brush Plate Clamp Spring	Terminal Stud and Lead	Terminal Stud Only	Relay Lead	Thru Bolt	Commutator Cover Band
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
1106526	1862953		1856494		1908829		1904365			1871390	1858749		37070	1842763
1106527	1857915		"		1903871		"				810459		1883865	"
1106528	"		"		"		"				"		"	"
1106529	1862953		"		"		"				"		"	"
1106530	"		"		1908829		"				"		"	"
1106531	"	1857514	"	1906940	"	1903870	"	1850770	1905561		"		"	"
1106532	1857915	1856489	"	"	1903871	1946798	"	"	"		"		"	"
1106533	1862953		"		1908829		"			1871390	1858749		37070	"
1106534	"	1857514	"	1906940	"	1903870	"	1850770	1905561	810585	810459		1883865	"
1106535	1857915		"		1903871		"				"		"	"
1106536	1862953		"		1908829		"			1884507	1884508		"	"
1106537	1857915		"		1903871		"			"	"		"	"
1106538	1862953	1857514		1906940	1908829	1903870	"	1850770	1905561		810459		"	"
1106540	1857915		1887751		1903871		"			1884507	1884508		"	"
1106541	1862953		1856494		1908829		"				810459		"	"
1106542	1857915		"		1903871		"				"		"	"
1106543	"		1887751		1916542		"			1884507	1884508		"	1888427
1106544	"		1856494		1903871		"				810459		"	1842763
1106546	1905577		1905639		1905219		1904365			1905636	1905637		"	"
1106548	1857915	1856489	1856494	1906940	1903871	1850767	1904365	1905082	1905561		810459		"	"


MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Ball Bearing Retainer Plate Screw—D.E.....	1962276	1106526-7-8-9; 30-1-2-3-4-5-6-7-8; 40-1-2-3-4-6-8
Lock Washer—Brush Lead Screw.....	1914816	1106526-7-8-9; 30-1-2-3-4-5-6-7-8; 40-1-2-3-4-6-7
Lock Washer—Brush Plate Attaching Screw.....	453435	1106526-7-8-9; 30-1-2-3-4-5-6-7-8; 40-1-2-3-4-6-8
Lock Washer—Commutator End Cover Plate Screw.....	452435	1106527-8-9; 30-1-2-4-5-6-7-8; 40-1-2-3- 6-8
Lock Washer—Control Unit Mounting.....	138479	1106532
Lock Washer—Shaft Nut—C.E.....	1915265	1106526; 33; 44
Lock Washer—Shaft Nut—D.E.....	273591	1106544
Lock Washer—Terminal Ground Strap Screw.....	453435	1106530-1-4-8; 48
Lock Washer—Terminal Stud.....	1914579	1106526; 33
Lock Washer—Terminal Stud.....	9421423	1106527-8-9; 30-1-2-4-5-6-7-8; 40-1-2-3- 4-6-8
Lock Washer—Third Brush Plate Clamp Screw.....	453435	1106531-2-4-8; 48
Lock Washer—Thru Bolt.....	9421424	1106526-7-8-9; 30-1-2-3-4-5-6-7-8; 40-1- 2-3-4-6-8
NUTS		
Nut—Shaft—C.E.....	1915172	1106526; 33; 44
Nut—Shaft—D.E.....	1917570	1106526; 30-1-2-3-4-8; 48
Nut—Shaft—D.E.....	1917035	1106527-8-9; 35-6-7; 40-1-2-3
Nut—Shaft—D.E.....	451079	1106544
Nut—Shaft—D.E.....	1905640	1106546
Nut—Terminal Stud.....	121743	1106526; 33
Nut—Terminal Stud.....	134551	1106527-8-9; 30-1-2-4-5-6-7-8; 40-1-2-3- 4-6-8
WASHERS		
Washer—Brush Arm Space.....	1914741	1106526-7-8-9; 30-1-2-3-4-5-6-7-8; 40-1-2-3-4-6-8
Washer—Control Unit Mounting—Plain.....	1856056	1106532
Washer—Felt—C.E.....	37077	1106527-8-9; 30-1-2-4-5-8; 44-8
Washer—Felt—D.E.....	825197	1106527-8-9; 30-1-2-4-5-6-7-8; 40-1-2-3- 4-6-8
Washer—Shaft Nut—Plain—D.E.....	1934383	1106526; 30-1-2-3-4-6-7-8; 40-1-2-3-6-8
Washer—Shaft Nut—Plain—D.E.....	1914589	1106527-8-9; 35
Washer—Space—C.E.....	809945	1106526; 33
Washer—Space—Inside—D.E.....	1845626	1106527; 30-1-2-4-8; 40-1-2-3-4-6-8
Washer—Terminal Ground Strap.....	1902988	1106530-1-4-8; 48
Washer—Terminal Stud—Insulation.....	1858753	1106526; 33
Washer—Terminal Stud—Insulation.....	810501	1106527-8-9; 30-1-2-4-5-6-7-8; 40-1-2-3- 4-6-8
Washer—Terminal Stud—Plain.....	826319	1106526; 33
Washer—Terminal Stud—Plain.....	1905125	1106527-8-9; 30-1-2-4-5-6-7-8; 40-1-2-3- 4-6-8
SCREWS		
Screw—Ball Bearing Retainer Plate—D.E.....	1902652	1106526; 33
Screw—Ball Bearing Retainer Plate—D.E.....	1915806	1106527-8-9; 30-1-2-4-5-6-7-8; 40-1-2-3- 4-8
Screw—Ball Bearing Retainer Plate—D.E.....	1905644	1106546
Screw—Brush Lead Attaching.....	454329	1106526-7-8-9; 30-1-2-3-4-5-6-7-8; 40-1-2-3-4-6-8
Screw—Brush Plate Attaching.....	1914580	1106526-7-8-9; 30-1-2-3-4-5-6-7-8; 40-1-2-3-4-6-8
Screw—Commutator End Cover Plate.....	1914580	1106531-2-4-6-7-8; 40-1-2-3-6-8
Screw—Commutator End Cover Plate.....	1915806	1106535

MINOR PARTS SECTION

Name	Part No.	Used on Models
CREWS—Continued		
Screw—Control Unit Mounting.....	1901829	1106532
Screw—Pole Shoe.....	1905650	1106546
Screw—Pole Shoe.....	1914570	All except 1106546
Screw—Terminal Ground Strap.....	1914580	1106530-1-4-8
Screw—Terminal Stud.....	132900	1106548
Screw—Third Brush Clamp Screw—Upper.....	1902652	1106532-4-8
Screw—Third Brush Plate Clamp.....	453468	1106548
MISCELLANEOUS		
BUSHING—Terminal Stud Insulation.....	1905683	1106527-8-9; 30-1-2-4-5-8; 41-2-4-8
BUSHING—Terminal Stud Insulation.....	1905654	1106536-7; 40-3-6
CLIP—On Terminal Stud.....	1867665	1106530-1-4-8
CLIP—On Terminal Stud.....	200013	1106548
CLIP—Terminal Stud Lock ("A" Pos. & Neg.).....	1854058	1106527-8-9; 30-1-2-4-5-6-7-8; 40-1-2-3-4-8
CLIP—Terminal Stud Lock ("A" Pos. & Neg.).....	1905651	1106546
CLIP—Terminal Stud Lock—Double.....	1853400	1106538; 48
CLIP—Terminal Stud Lock ("F" Terminal).....	1905645	1106546
CLIP—Terminal Stud Lock (Field).....	1854058	1106527-8-9; 30-1-2-4-5-6-7; 40-1-2-3-4
CLIP—Terminal—To Brush.....	200182	1106526-7-8-9; 31-2-3-4; 40-6
CLIP—Terminal—To Brush.....	200181	1106531-4-5-8; 44-8
COLLAR—Space—Inside—C.E.....	37837	1106527; 44
COLLAR—Space—Inside—D.E.....	1845626	1106528-9; 35-6-7
COLLAR—Space—Outside—C.E.....	1856567	1106528-9; 32-8; 48
COLLAR—Space—Outside—D.E.....	1849278	1106528-9; 30-2-4-5-6-7-8; 40-1-2-3-4-6-8
CUP—Felt Washer Retainer—C.E.....	37078	1106527-8-9; 30-1-2-4-5-8; 44-8
Dowel PIN—C.E. & D.E.....	809062	1106526-7-8-9; 30-1-2-3-4-5-6-7-8; 40-1-2-3-4-6-8
Felt WICK—C.E.....	1947350	1106527-8-9; 30-1-2-4-5-6-7-8; 40-1-2-3-4-6-8
Felt WICK—D.E.....	1947350	1106536-7-8; 40-1-2-6-8
GASKET—Ball Bearing Retainer Plate—D.E.....	825260	1106527-8-9; 30-1-2-4-5-6-7-8; 40-1-2-3-4-6-8
GASKET—End Cover Plate—C.E.....	1835457	1106527-8-9; 30-1-2-4-5-8; 48
GASKET—End Cover Plate—C.E.....	1872050	1106536-7; 40-1-2-3-6
LEAD Assembly—Field Terminal to Control Unit.....	1872088	1106532
LEAD Assembly—Negative Terminal to Control Unit.....	1872088	1106532
LEAD Assembly—Positive Terminal to Control Unit.....	1877569	1106532
Oil BAFFLE—D.E.....	816214	1106526; 33
OILER—C.E.....	113702	1106527-8-9; 30-1-2-4-5-6-7-8; 40-1-2-3-4-6
OILER—D.E.....	113702	1106527-8-9; 30-1-2-4-5-6-7-8; 40-1-2-3-4-6-8
Oil Throwing COLLAR—D.E.....	1869162	1106526; 33
Terminal Ground STRAP.....	1857917	1106530-1-4-8; 48
Terminal SHIELD.....	1888437	1106536-7; 40
Terminal SHIELD ("A" Pos. & Neg.).....	1906145	1106546
Terminal SHIELD ("F" Terminal).....	1888437	1106543-6
Terminal SHIELD (Neg. & Pos. Terminal).....	1888390	1106543
Terminal Shield CAP.....	1883931	1106536-7; 40-3-6
Terminal Stud INSULATION.....	1905652	1106527-8-9; 30-1-2-5-6-7-8; 40-1-2-3-4-6-8
Woodruff KEY—C.E.....	124545	1106526; 33; 44-8
Woodruff KEY—C.E.—Outside.....	124546	1106532-8
Woodruff KEY—D.E.....	124548	1106526; 30-1-3-4-6-7-8; 40-1-2-3-4-6-8
Woodruff KEY—D.E.....	124546	1106532-5

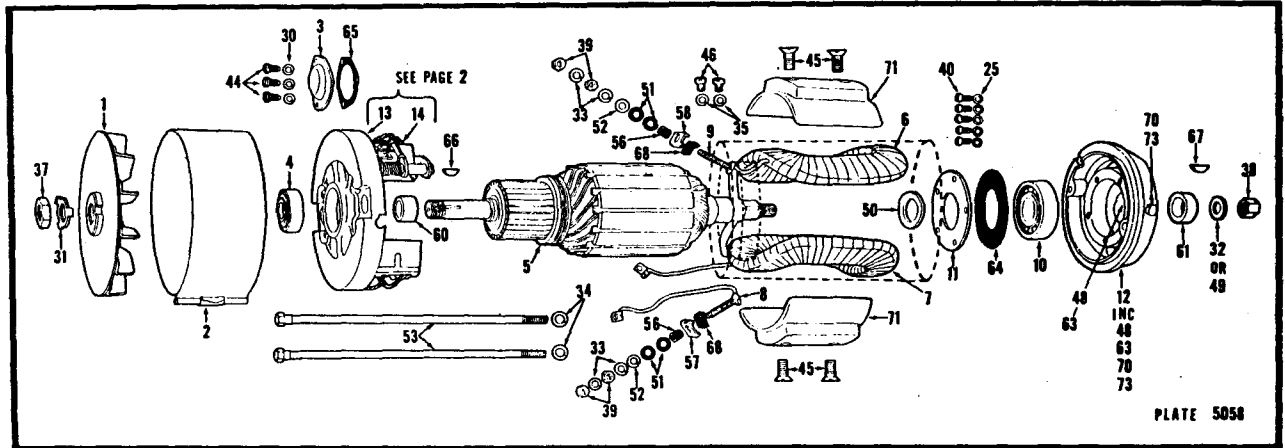


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Fan — C.E. or D.E.	Band — Cover	Plate — End Cover — C.E.	Ball Bearing — C.E.	Arma- ture	Coil — Field — R.H.	Coil — Field — L.H.	Stud & Lead — Terminal	Stud Only — Terminal	Ball Bearing — D.E.	Plate — Bearing Retainer — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1106576	1868751	1869751	816212	954378	1872056	1872054	1872055	1868729	810459	954517	1905643	1868748
1106577	1872400	"	"	908503	1872377	*1910386	"	1868902	"	"	"	1858587
1106578	"	"	"	"	1872407	1872054	1872055	1868729	"	"	1841877	1858324
1106579	"	"	816212	954378	1872056	"	"	"	"	"	1905643	1872857
1106580	"	"	"	"	"	"	"	"	"	"	"	1880572
1106581	"	"	814985	908503	1872302	"	"	"	"	"	"	1873562
1106582	1872400	"	"	"	1872377	*1902113	"	1868902	"	"	"	1858587
1106583	"	"	816212	954378	1872056	"	"	"	"	"	"	1873562
1106584	"	"	"	"	"	"	"	1868729	"	"	"	1872857
1106585	1872400	"	"	908503	1880494	"	"	"	"	"	1841877	1843941
1106586	"	"	816212	954378	1872056	"	"	"	"	"	1905643	1874169
1106587	1872400	"	"	908503	1881741	"	"	"	"	908506	1866760	1881745
1106588	"	"	"	"	1880494	"	"	"	"	954517	1841877	1858113
1106589	"	"	816212	954378	1868730	"	"	"	"	"	1905643	1872857
1106590	1872400	"	"	908503	1883187	"	"	1868902	"	"	"	1858587
1106591	"	"	816212	954378	1885726	"	"	1868729	"	"	"	1880572
1106592	1872400	"	"	908503	1866644	*1910386	"	1868902	"	"	"	1873562
1106593	"	"	816212	954143	1887399	"	"	1868729	"	954182	1866760	1877580

*Field Coil Set (2 coils).

°1880624 Terminal Stud & Lead—4½" long—Positive.

Delco-Remy
SERVICE PARTS CATALOG

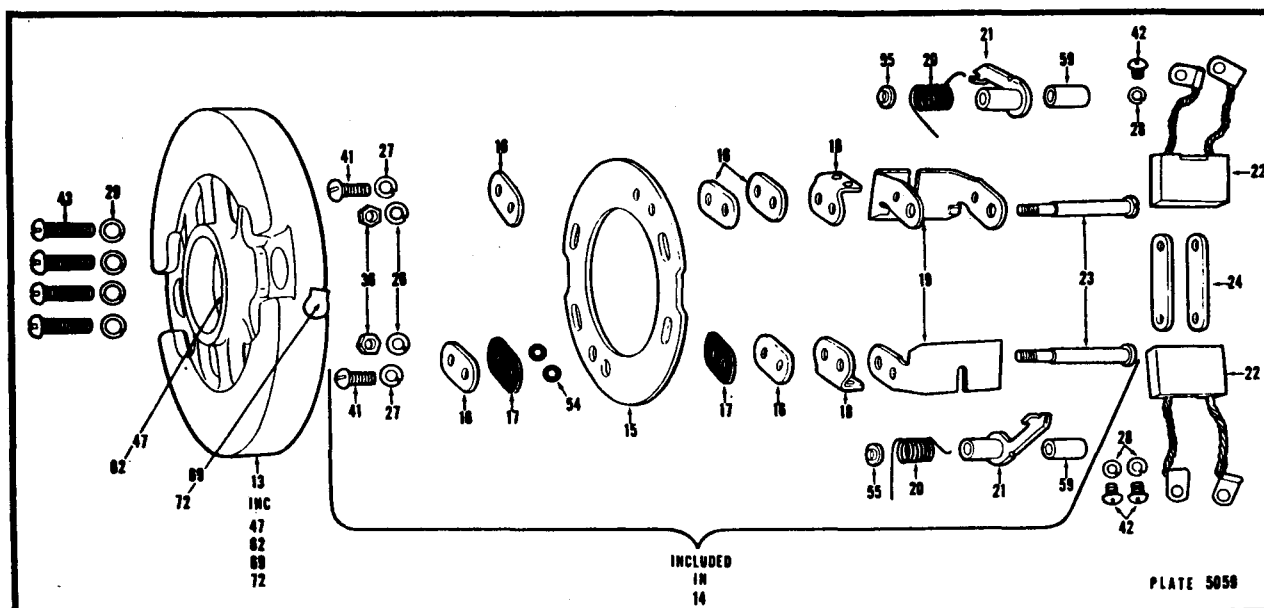

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Frame C.E.	Plate Assem. — Brush	Plate Only — Brush	Washer — Space	Insu- lator — Brush Plate	Bracket — Brush Terminal	Holder — Brush	Spring — Brush	* Arm — Brush	Brush	Stud — Brush Holder	Clamp — Brush Plate
	13	14	15	16	17	18	19	20	21	22	23	24
1106576.....	1868744	1868745	1868746	825187	825189	825186	1838339	1838341	1877949	1906901	1838345	1868747
1106577.....	1868906	1868907	"	"	"	"	"	1856527	1878258	"	"	"
1106578.....	"	1877941	"	"	"	"	"	1838341	1877949	"	"	"
1106579.....	1868744	1868745	"	"	"	"	"	"	"	"	"	"
1106580.....	"	"	"	"	"	"	"	"	"	"	"	"
1106581.....	1873564	"	"	"	"	"	"	"	"	"	"	"
1106582.....	1868906	1877941	"	"	"	"	"	"	"	"	"	"
1106583.....	1873564	"	"	"	"	"	"	"	"	"	"	"
1106584.....	1868744	"	"	"	"	"	"	"	"	"	"	"
1106585.....	1868906	1868907	"	"	"	"	"	1856527	1878258	"	"	"
1106586.....	1868744	1877941	"	"	"	"	"	1838341	1877949	"	"	"
1106587.....	1868906	"	"	"	"	"	"	"	"	"	"	"
1106588.....	1868906	1882472	"	"	"	"	"	1856527	1878258	"	"	"
1106589.....	1868744	1877941	"	"	"	"	"	1838341	1877949	"	"	"
1106590.....	1868906	1868907	"	"	"	"	"	1856527	1878258	"	"	"
1106591.....	1868744	1877941	"	"	"	"	"	1838341	1877949	"	"	"
1106592.....	1868906	"	"	"	"	"	"	"	"	"	"	"
1106593.....	1877583	"	"	"	"	"	"	"	"	"	"	"

*If Space Collar is too long—reoperate length to .740 or use 1877917.


MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
25	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	1880781	1106576-7-9; 80-1-2-3-4-6-7-9; 90-1-2-3
25	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	138479	1106578; 85-8
26	Lock Washer—Brush Holder Stud	1880781	All
27	Lock Washer—Brush Holder Support Screw	1880781	All
28	Lock Washer—Brush Lead Attaching Screw	120217	All
29	Lock Washer—Brush Plate Clamp Screw	120217	All
30	Lock Washer—End Cover Plate Screw—C.E.	120217	1106576-9; 80-1-2-3-4-6-9; 91-3
.....	Lock Washer—Field Lead Ground Screw	1904376	1106593
31	Lock Washer—Shaft Nut—C.E.	1888439	1106577-8; 82-5-7-8; 90-2
32	Lock Washer—Shaft Nut—D.E.	131205	1106576-9; 80-3-4-6-9; 91-2-3
33	Lock Washer—Terminal Stud	1874495	All
34	Lock Washer—Thru Bolt	120214	All
35	Lock Washer—Top of Field Frame	120380	1106579; 80-1-2-3-4-5-6-7-8-9; 90-1-2-3
NUTS			
36	Nut—Brush Holder Stud	5024654	All
37	Nut—Shaft—C.E.	1911324	1106577-8; 82-5-7-8; 90-2
38	Nut—Shaft—D.E.	1917570	1106577; 81-2; 90
38	Nut—Shaft—D.E.	36035	1106576-9; 80-3-4-6-9; 91-2-3
38	Nut—Shaft—D.E.	125250	1106585-8
38	Nut—Shaft—D.E. (1/4-20 hex.)	1874909	1106578
38	Nut—Shaft—D.E. (1/4-20 semi castle)	1841367	1106578
39	Nut—Terminal	134551	All
SCREWS			
40	Screw—Ball Bearing Retainer Plate—D.E.	435429	1106576-9; 80-1-3-4-6-7-9; 91-2-3
40	Screw—Ball Bearing Retainer Plate—D.E.	5017850	1106577-8; 82-5-8; 90
41	Screw—Brush Holder Support	132911	All
42	Screw—Brush Lead Attaching	132892	All
43	Screw—Brush Plate Clamp	1900682	1106576-9; 80-1-3-4-6-9; 91
43	Screw—Brush Plate Clamp	115393	1106577-8; 82-5-7; 92-3
43	Screw—Brush Plate Clamp	132919	1106588; 90
44	Screw—End Cover Plate—C.E.	1904370	1106576-9; 80-1-2-3-4-6-9; 91-3
.....	Screw—Field Lead Ground	121749	1106593
45	Screw—Pole Shoe	1883864	All
46	Screw—Top of Field Frame	132243	1106589; 80-1-2-3-4-5-6-7-8-9; 90-1-2-3
WASHERS			
47	Washer—Felt—C.E.	37077	All except 1106593
48	Washer—Felt—D.E.	825197	All except 1106593
49	Washer—Shaft Nut—D.E. (Plain)	811381	1106577; 81-2-5-8; 90
50	Washer—Space—Inside—D.E.	1845626	1106576-7-9; 80-1-2-3-4-6-9; 91-2
51	Washer—Insul.—Terminal Stud	1872459	All
52	Washer—Plain—Terminal Stud	1905125	All
MISCELLANEOUS			
.....	BAFFLE—Oil—D.E.	1920746	1106577; 82; 90
53	BOLT—Thru	1872670	1106576-7-9; 80-1-2-3-4-6-7-9; 90-1-2-3
53	BOLT—Thru	1872411	1106578; 85-8
54	BUSHING (Washer) Insul.—In Brush Plate	825190	All
55	BUSHING (Steel) For Brush Holder Stud	825185	All
56	BUSHING—Insul.—Terminal Stud	1905683	All
.....	CLIP—Terminal—To Brush	200188	All
57	CLIP—Lock—"A" Terminal	820516	1106576-9; 80-1-4-6-7-8-9; 91-3
58	CLIP—Lock—"F" Terminal	1854058	1106580-8
58	CLIP—Lock—"F" Terminal	820516	1106581-4-6-7-9; 91-3
.....	CLIP—Lock—"A" & "F" Terminal (Double)	1853400	1106577; 82-3; 90-2
59	COLLAR—Brush Holder Space	1877917	All
60	COLLAR—Inside—C.E.	1862471	1106577-8; 82-5-7-8; 90-2
60	COLLAR—Inside—C.E.	1856567	1106581
.....	COLLAR—Outside—C.E.	37837	1106581
.....	COLLAR—Inside—D.E.	1857941	1106578
.....	COLLAR—Inside—D.E.	1843942	1106585-8
61	COLLAR—Outside—D.E.	1849278	1106576-9; 80-1-3-4-6-9; 91-2
61	COLLAR—Outside—D.E.	1858588	1106577; 90
61	COLLAR—Outside—D.E.	825254	1106578; 85-8
61	COLLAR—Outside—D.E.	1859045	1106582
61	COLLAR—Outside—D.E.	1881746	1106587

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
61	COLLAR—Outside—D.E.	1877581	1106593
62	CUP—Felt Retainer—C.E.	37078	All except 1106593
63	CUP—Felt Retainer—D.E.	825196	All except 1106593
64	GASKET—Ball Bearing Retainer Plate—D.E.	825260	1106576-7-9; 80-1-2-3-4-6-9; 90-1-2
64	GASKET—Ball Bearing Retainer Plate—D.E.	1864907	1106587
65	GASKET—End Cover Plate—C.E.	1835457	1106576-9; 80-2-4-6-9; 91
66	KEY—Woodruff—C.E.	1858588	1106577
66	KEY—Woodruff—C.E.	124545	1106582-5-7-8; 90-2
67	KEY—Woodruff—D.E.	124548	1106576-7-9; 80-1-2-3-4-5-6-8-9; 90-1-2-3
68	INSULATOR—Terminal—Inside	1905652	All
69	OILER—C.E.	1880635	1106576-7-9; 80-1-2-3-4-5-6-7-8-9; 90 1 2
70	OILER—D.E.	1880635	1106576-7-9; 80-1-2-3-4-6-7-9; 90-1-2
....	PIN—Dowel—C.E.	809062	All
....	PIN—Dowel—D.E.	809062	All
....	RING—Ball Bearing Space—C.E.	1877584	1106593
71	SHOE—Pole	1842774	All
72	WICK—Oil—C.E.	29047	All except 1106578; 93
73	WICK—Oil—D.E.	29047	All except 1106578; 93

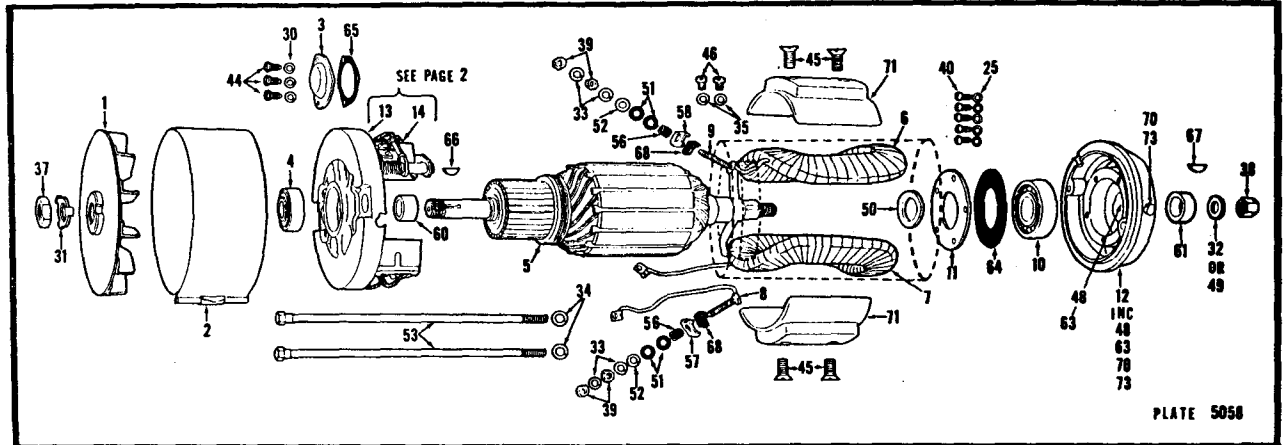


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Fan — C.E. or D.E.	Band — Cover	Plate — End Cover — C.E.	Ball Bearing — C.E.	Arma- ture	Coil — Field — R.H.	Coil — Field — L.H.	Stud & Lead — Terminal	Stud Only — Terminal	Ball Bearing — D.E.	Plate — Bearing Retainer — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1106626	1868751	1869751	816212	954378	1868730	*1902114		1868729	810459	954517	1838692	1874169
1106627	1872400	"	"	908503	1868903	"		1868902	"	"	"	1858587
1106628	"	"	816212	954378	1868730	"		1868729	"	"	"	1874169
1106629	1872400	"	"	908503	1872395	"		"	"	"	1841877	1858324
1106630	"	"	"	"	1872852	"		"	"	"	1838692	1872855
1106631	"	"	816212	954378	1868730	"		"	"	"	"	1872857
1106632	1872400	"	"	908503	1868903	"		1868902	"	"	"	1858587
1106633	"	"	816212	954378	1868730	"		1868729	"	"	"	1873562
1106634	"	"	1869796	"	1873560	"		"	"	"	"	"
1106635	"	"	816212	"	1868730	"		"	"	"	"	1874029
1106636	"	"	814985	908503	1874304	"		"	"	"	"	1873562
1106637	"	"	816212	954378	1868730	"		"	"	"	"	1880572
1106638	"	"	"	954143	1877578	"		"	"	954182	1866720	1877580
1106639	"	"	"	954378	1868730	"		1868902	"	954517	1838692	1873562
1106640	1868751	"	1877946	908504	1877938	"		1868729	"	"	"	"
1106641	"	"	1859796	908503	1873560	"		"	"	"	"	1874029
1106642	1872400	"	"	"	1878296	"		"	"	"	1841877	1843941
1106643	"	"	1877946	908504	1878801	"		"	"	"	1838692	1873562
1106644	"	"	816212	954143	1877578	"		Δ	"	954182	1866760	1877580
1106645	"	"	1877946	908504	1878801	"		1868729	"	954517	1838692	1873562
1106646	"	"	814985	908503	1881329	"		"	"	"	"	"
1106647	1872400	"	"	1872395	"	"		"	"	"	1841877	1858324
1106648	"	"	1877946	908504	1883408	"		1868902	"	"	1838692	1873562
1106650	"	"	816212	954378	1872056	"		1868729	"	"	"	1872857
1106651	1872400	"	"	908503	1884149	"		"	"	908506	1866760	1881745
1106652	"	"	"	"	1878296	"		Δ	"	954517	1841877	1843941
1106653	"	"	816212	954378	1885868	"		1868729	"	"	1838692	1880572
1106654	1872400	"	"	908503	1872852	"		1886662	1884508	"	"	1872855
1106655	"	"	816212	954378	1868730	"		1868729	810459	"	"	1880572
1106656	1888032	"	"	"	1888030	"		1900000	1884508	"	"	1873562

*Set of 2 Coils.

Δ1868729 is Negative Terminal; 1880624 is Positive Terminal.

Delco-Remy SERVICE PARTS CATALOG

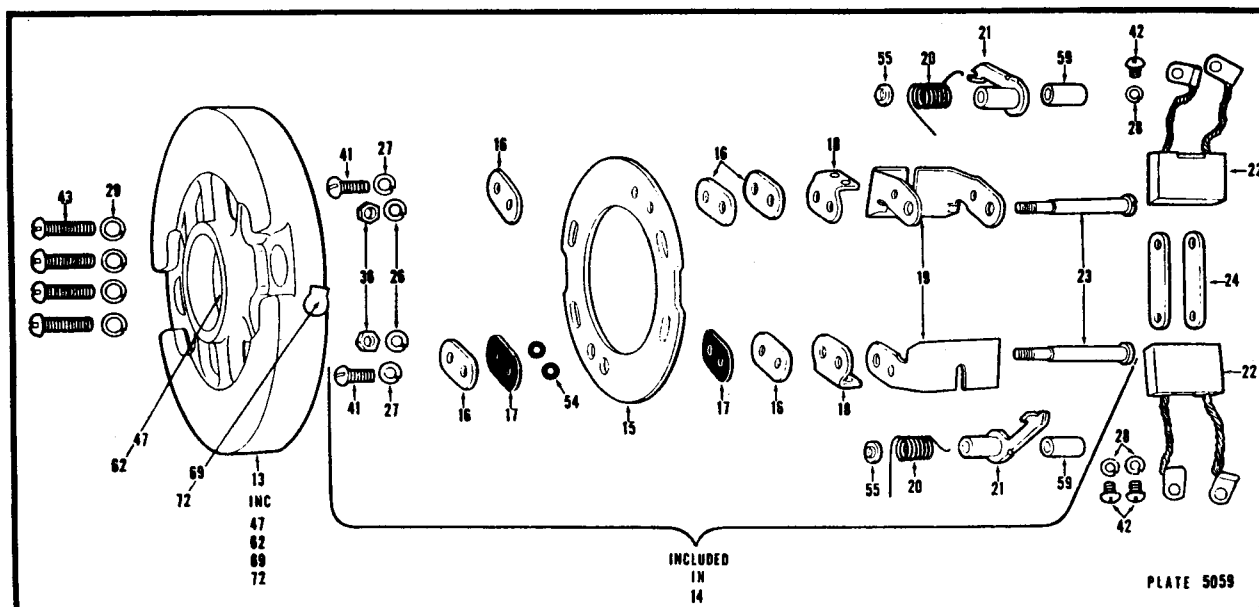

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame C.E.	Plate Assem. Brush	Plate Only Brush	Washer Space	Insu- lator Brush Plate	Bracket Brush Terminal	Holder Brush	Spring Brush	Arm Brush	Brush	Stud Brush Holder	Clamp Brush Plate
	13	14	15	16	17	18	19	20	21	22	23	24
1106626	1868744	1877941	1868746	825187	825189	825186	1838339	1838341	1877949	1906901	1838345	1868747
1106627	1868906	1868907	"	"	"	"	"	1856527	1878258	"	"	"
1106628	1868744	1877941	"	"	"	"	"	1838341	1877949	"	"	"
1106629	1868906	"	"	"	"	"	"	"	"	"	"	"
1106630	"	"	"	"	"	"	"	"	"	"	"	"
1106631	1868744	"	"	"	"	"	"	"	"	"	"	"
1106632	1868906	"	"	"	"	"	"	"	"	"	"	"
1106633	1873564	"	"	"	"	"	"	"	"	"	"	"
1106634	"	"	"	"	"	"	"	"	"	"	"	"
1106635	1868744	1868907	"	"	"	"	"	1856527	1878258	"	"	"
1106636	1873564	1877941	"	"	"	"	"	1838341	1877949	"	"	"
1106637	1868744	"	"	"	"	"	"	"	"	"	"	"
1106638	1877583	"	"	"	"	"	"	"	"	"	"	"
1106639	1873564	"	"	"	"	"	"	"	"	"	"	"
1106640	1877942	"	"	"	"	"	"	"	"	"	"	"
1106641	1868744	1868907	"	"	"	"	"	1856527	1878258	"	"	"
1106642	1878295	"	"	"	"	"	"	"	"	"	"	"
1106643	1877942	1877941	"	"	"	"	"	1838341	1877949	"	"	"
1106644	1877583	1830626	1880627	"	"	"	"	"	"	"	"	"
1106645	1877942	1877941	1868746	"	"	"	"	"	"	"	"	"
1106646	1873564	"	"	"	"	"	"	"	"	"	"	"
1106647	1868906	"	"	"	"	"	"	"	"	"	"	"
1106648	1877942	1868907	"	"	"	"	"	1856527	1878258	"	"	"
1106650	1868744	1877941	"	"	"	"	"	1838341	1877949	"	"	"
1106651	1868906	"	"	"	"	"	"	"	"	"	"	"
1106652	1878295	1882472	1880627	"	"	"	"	1856527	1878258	"	"	"
1106653	1868744	1877941	1868746	"	"	"	"	1838341	1877949	"	"	"
1106654	1868906	"	"	"	"	"	"	"	"	"	"	"
1106655	1868744	"	"	"	"	"	"	"	"	"	"	"
1106656	1873564	1868907	"	"	"	"	"	1856527	1878258	"	"	"

*When replacing Brush Arm, if space collar is too long reoperate length to .740.


MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
25	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	1880781	All except 1106629; 42-7; 52
25	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	114603	1106629; 42-7; 52
26	Lock Washer—Brush Holder Stud Nut	1880781	All
27	Lock Washer—Brush Holder Support Screw	1880781	All
28	Lock Washer—Brush Lead Attaching Screw	120217	All
29	Lock Washer—Brush Plate Clamp Screw	120217	All
30	Lock Washer—End Cover Plate Screw	120217	1106626-8; 31-3-4-5-6-7-8-9; 40-1-3-4-5-6-8; 50-3-5-6
....	Lock Washer—Fan Attaching Screw	131184	1106626; 40
....	Lock Washer—Field Lead Ground Screw	1904376	1106655-6
31	Lock Washer—Shaft Nut—C.E.	1888439	1106627-9; 30-2; 42-6-7; 51-2-4
32	Lock Washer—Shaft Nut—D.E.	131205	1106626-8; 31-3-4-5-7-8-9; 40-1-4-6; 50-3-5-6
33	Lock Washer—Terminal Stud	1874495	All
34	Lock Washer—Thru Bolt	120214	All
35	Lock Washer—Top of Field Frame	120380	All
NUTS			
36	Nut—Brush Holder Stud	5024654	All
37	Nut—Shaft—C.E.	1911324	1106627-9; 30-2; 42-6-7; 51-2-4
37	Nut—Shaft—C.E.	1841367	1106640-3-5
38	Nut—Shaft—D.E.	36035	1106626-8; 31-3-4-5-7-8-9; 40-1-4-5-6; 50-3-5-6
38	Nut—Shaft—D.E.	1917570	1106627; 30-2-6; 54
38	Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{1}{16}$ x $\frac{1}{4}$ Hex.)	1874909	1106629; 47
38	Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{3}{4}$ Hex. Semi-Castle)	1841367	1106629; 47-8
38	Nut—Shaft—D.E.	125250	1106642; 52
38	Nut—Shaft—D.E.	1878833	1106643-5
39	Nut—Terminal	134551	All
SCREWS			
40	Screw—Ball Bearing Retainer Plate—D.E.	435429	1106626-8; 30-1-3-4-5-6-7-8-9; 40-1-3-4-5-6-8; 50-1-3-4-5-6
40	Screw—Ball Bearing Retainer Plate—D.E.	5017850	1106627-9; 32; 42-7; 52
41	Screw—Brush Holder Support	132911	All
42	Screw—Brush Lead Attaching	132892	All
43	Screw—Brush Plate Clamp	1900682	All except 1106627; 42; 52
43	Screw—Brush Plate Clamp	132919	1106627; 42; 52
44	Screw—End Cover Plate—C.E.	1904370	1106626-8; 31-3-4-5-7-8-9; 40-1-3-4-5-8; 50-3-5-6
....	Screw—Fan Attaching	132969	1106626; 40
....	Screw—Field Lead Ground	121749	1106655-6
45	Screw—Pole Shoe	1864510	All
46	Screw—Top of Field Frame	132243	All
WASHERS			
47	Washer—Felt—C.E.	37077	All
48	Washer—Felt—D.E.	825197	1106626-7-8; 30-1-2-3-4-5-6-7-9; 40-1-2-3-5-6-7-8; 50-1-2-3-4-5-6
....	Washer—Shaft—C.E.—Plain	30205	1106640-3-8
49	Washer—Shaft—D.E.—Plain	811381	1106627-9; 32-6; 42-8; 52
49	Washer—Shaft—D.E.—Plain	1886900	1106630; 54
49	Washer—Shaft—D.E.—Plain	1878834	1106643-5
50	Washer—Space—Inside—D.E.	1845626	1106626-7-8; 30-1-2-3-4-5-6-7-9; 40-1-3-5-6-8; 50-3-4-5-6
51	Washer—Insul.—Terminal Stud	1872459	All
52	Washer—Plain—Terminal Stud	1905125	All
MISCELLANEOUS			
....	BAFFLE—Oil—D.E.	1920746	1106627; 32
53	BOLT—Thru	1872670	1106626-7-8; 30-1-2-3-4-5-6-7-8-9; 40-1-3-4-5-6-8; 50-1-3-4-5-6
53	BOLT—Thru	1872411	1106629; 42-7; 52
54	BUSHING (Washer)—Insul.—In Brush Plate	825190	All
55	BUSHING—Steel—For Brush Holder Stud	825185	All
56	BUSHING—Insul.—Terminal Stud	1905683	All except 1106654-6
56	BUSHING—Insul.—Terminal Stud	1905654	1106654-6
....	CLIP—Terminal—To Brush	200191	All

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
57	CLIP—Lock—"A" Terminal.....	1854058	1106626-8-9; 30-1-3-4-5-6-7-8; 40-1-2-3-4-5-6-7-8; 50-1-2-3-4-5-6
58	CLIP—Lock—"F" Terminal.....	1854058	1106626-8-9; 30-1-3-4-5-6-7-8; 40-1-2-3-4-5-6-7-8; 50-1-3-4-5
58	CLIP—Lock—"F" Terminal.....	1854058	1106652-6
.....	CLIP—Lock—"A" & "F" Terminal (Double).....	1853400	1106627; 32-9; 44
59	COLLAR—Brush Arm Space.....	1877917	All
60	COLLAR—Inside—C.E.....	1862471	1106627-9; 30-2; 42-7; 51-2-4
60	COLLAR—Inside—C.E.....	37837	1106636; 46
.....	COLLAR—Outside—C.E.....	1856567	1106636
.....	COLLAR—Outside—C.E.....	1881223	1106646
.....	COLLAR—Outside—C.E.....	1845622	1106648
.....	COLLAR—Inside—D.E.....	1857941	1106629; 47
.....	COLLAR—Inside—D.E.....	1843942	1106642; 52
61	COLLAR—Outside—D.E.....	1849278	1106626-8; 30-1-3-4-5-6-7-9; 40-1-6-8; 50-3-4-5
61	COLLAR—Outside—D.E.....	1858588	1106627
61	COLLAR—Outside—D.E.....	825254	1106629; 42-7; 52
61	COLLAR—Outside—D.E.....	1859045	1106632
61	COLLAR—Outside—D.E.....	1877581	1106638; 44
61	COLLAR—Outside—D.E.....	1878803	1106643-5
61	COLLAR—Outside—D.E. (Shaft Locking).....	1881746	1106651
.....	COVER—Terminal Shield.....	1883931	1106654-6
62	CUP—Felt Retainer—C.E.....	37078	All
63	CUP—Felt Retainer—D.E.....	825196	All except 1106638; 44
64	GASKET—Ball Bearing Retainer Plate—D.E.....	825260	1106626-7-8; 30-1-2-3-4-5-6-7-9; 40-1-3-4-5-6-8; 50-3-4-5-6
64	GASKET—Ball Bearing Retainer Plate—D.E.....	1866487	1106636
64	GASKET—Ball Bearing Retainer Plate—D.E.....	1864907	1106651
65	GASKET—End Cover Plate—C.E.....	1835457	1106626-8; 31-3-5-7-9; 50-3-5-6
66	KEY—Woodruff—C.E.....	124545	1106627-9; 30-2; 42-6-7; 51-2-4
66	KEY—Woodruff—C.E.....	124543	1106634; 41
66	KEY—Woodruff—C.E.....	106751	1106640-3-5
66	KEY—Woodruff—C.E.....	124546	1106648
67	KEY—Woodruff—D.E.....	124548	1106627-8-9; 30-1-2-3-4-5-6-7-8-9; 40-1-4-6-7-8; 50-2-3-5
67	KEY—Woodruff—D.E.....	124546	1106630; 42; 54
67	KEY—Woodruff—D.E.....	114813	1106645
68	INSULATOR—Terminal (Inside).....	1905652	All
69	OILER—C.E.....	1880635	1106626-7-8; 30-1-2-3-4-5-6-7-9; 40-1-2-3-5-6-7-8; 50-1-2-3-4-5-6
70	OILER—D.E.....	1880635	1106626-7-8; 31-3-4-5-6-7-9; 40-1-3-5-6-8; 50-1-3-4-5-6
.....	PIN—Dowel—C.E.....	809062	All
.....	PIN—Dowel—D.E.....	809062	All
.....	PLATE—Fan Baffle.....	1872027	1106640
.....	PULLEY.....	1868749	1106626
.....	PULLEY.....	1877943	1106640
.....	RING—Ball Bearing Space—C.E.....	1877584	1106638; 44
.....	SHIELD—Terminal.....	1888437	1106654-6
71	SHOE—Pole.....	1842744	All
72	WICK—Oil—C.E.....	29047	1106626-7-8-9; 30-1-2-3-4-5-6-7-8-9; 40-1-2-3-4-5-6-7-8; 50-1-2-3-4-5-6
73	WICK—Oil—D.E.....	29047	1106651-3

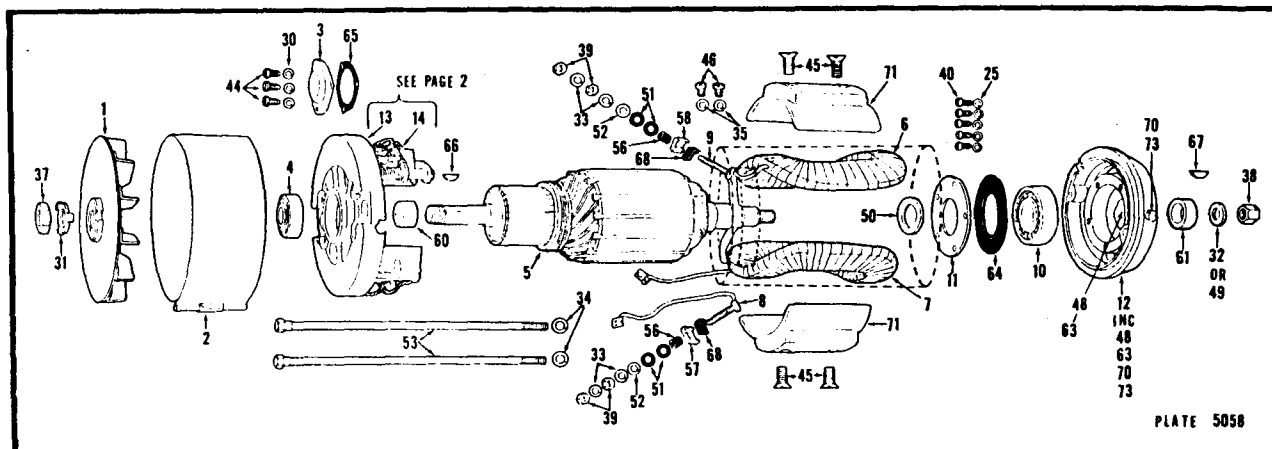


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Fan — C.E. or D.E.	Band — Cover	Plate — End Cover — C.E.	Ball Bearing — C.E.	Arma- ture	Coil — Field — R.H.	Coil — Field — L.H.	Stud & Lead — Terminal	Stud Only — Terminal	Ball Bearing — D.E.	Plate — Bearing Retainer — D.E.	Frame — D.E.
	1	2	3	4	5	6	7	8	9	10	11	12
1106658.....		1869751	816212	954378	1868730	*1902114		1886662	1884508	954517	1905643	1873562
1106660.....	1872400	"		908503	1902741	"		1868902	810459	"	"	"
1106661.....		"	816212	954378	1868730	"		1868729	"	"	"	"
1106662.....	1888032	"	"	"	1905822	"		1909357	"	"	"	1906386
1106663.....	"	"	"	"	1888030	"		"	"	"	"	"
1106665.....	1872400	"		908503	1880494	"		1868729	"	"	1841877	1843941
1106666.....		"	1859796	"	1909580	"		"	"	"	1905643	1873562

*Field Coil Set.

Delco-Remy
SERVICE PARTS CATALOG

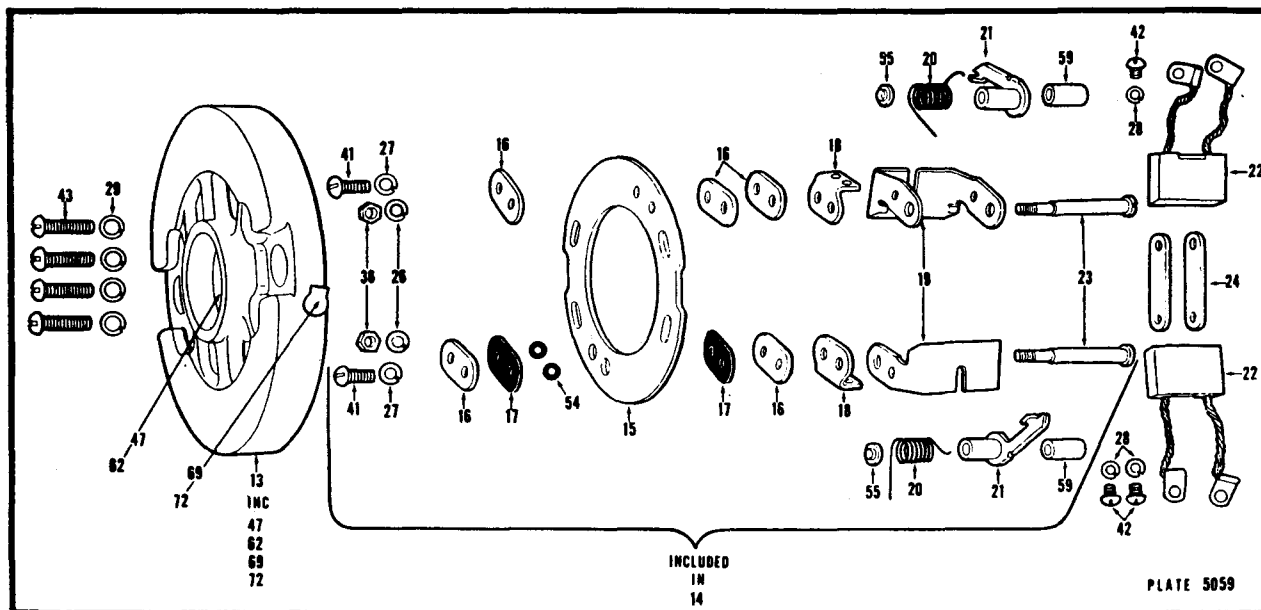

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Frame C.E.	Plate Assem. Brush	Plate Only Brush	Washer Space	Insu- lator Brush Plate	Bracket Brush Terminal	Holder Brush	Spring Brush	* Arm Brush	Brush	Stud Brush Holder	Clamp Brush Plate
	13	14	15	16	17	18	19	20	21	22	23	24
1106658.....	1873564	1877941	1868746	825187	825189	825186	1838339	1838341	1877949	1906901	1838345	1868747
1106660.....	1868906	"	"	"	"	"	"	"	"	"	"	"
1106661.....	1873564	"	"	"	"	"	"	"	"	"	"	"
1106662.....	1906335	1868907	"	"	"	"	"	1856527	1878258	"	"	"
1106663.....	"	"	"	"	"	"	"	"	"	"	"	"
1106665.....	1868906	"	"	"	"	"	"	"	"	"	"	"
1106666.....	1873564	1877941	"	"	"	"	"	1838341	1877949	"	"	"

*When replacing Brush Arm, if space collar is too long reoperate length to .740.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
25	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	1880781	1106658; 60-1-2-3-6
25	Lock Washer—Ball Brg. Retainer Plate Screw—D.E.	138479	1106665
26	Lock Washer—Brush Holder Stud	1880781	1106658; 60-1-2-3-5-6
27	Lock Washer—Brush Holder Support Screw	1880781	1106658; 60-1-2-3-5-6
28	Lock Washer—Brush Lead Attaching Screw	120217	1106658; 60-1-2-3-5-6
29	Lock Washer—Brush Plate Clamp Screw	120217	1106658; 60-1-2-3-5-6
30	Lock Washer—End Cover Plate Screw	120217	1106658; 61-2-3-6
31	Lock Washer—Shaft Nut—C.E.	804000	1106660-5
32	Lock Washer—Shaft Nut—D.E.	131205	1106658; 60-1-2-3-6
33	Lock Washer—Terminal Stud	1874495	1106658; 60-1-2-3-5-6
34	Lock Washer—Thru Bolt	120214	1106658; 60-1-2-3-5-6
35	Lock Washer—Top of Field Frame	120380	1106658; 60-1-5-6
NUTS			
36	Nut—Brush Holder Stud	5024654	1106658; 60-1-2-3-5-6
37	Nut—Shaft—C.E.	1911324	1106660-5
38	Nut—Shaft—D.E.	36035	1106658-9; 60-1-2-3-6
38	Nut—Shaft—D.E.	125250	1106665
39	Nut—Terminal	134551	1106658; 60
SCREWS			
40	Screw—Ball Bearing Retainer Plate—D.E.	435429	1106658; 60-1-2-3-6
40	Screw—Ball Bearing Retainer Plate—D.E.	5017850	1106665
41	Screw—Brush Holder Support	132911	1106658; 60-1-2-3-5-6
42	Screw—Brush Lead Attaching	132892	1106658; 60-1-2-3-5-6
43	Screw—Brush Plate Clamp	1900682	1106658; 61-2-3-6
43	Screw—Brush Plate Clamp	115393	1106660
43	Screw—Brush Plate Clamp	132919	1106665
44	Screw—End Cover Plate—C.E.	1904370	1106658; 61-2-3-6
45	Screw—Pole Shoe	1864510	1106658; 60-1-2-3-5-6
46	Screw—Top of Field Frame	132243	1106658; 60-1-5-6
WASHERS			
47	Washer—Felt—C.E.	37077	1106658; 60-1-2-3-5-6
48	Washer—Felt—D.E.	825197	1106658; 60-1-2-3-5-6
49	Washer—Shaft—D.E.—Plain	811381	1106665
50	Washer—Space—Inside—D.E.	1845626	1106658; 60-1-2-3-6
51	Washer—Insul.—Terminal Stud	1872459	1106658; 60-1-2-3-5-6
52	Washer—Plain—Terminal Stud	1905125	1106658; 60-1-2-3-5-6
MISCELLANEOUS			
53	BOLT—Thru	1872670	1106658; 60-1-2-3-6
53	BOLT—Thru	1872411	1106665
54	BUSHING (Washer)—Insul.—In Brush Plate	825190	1106658; 60-1-2-3-5-6
55	BUSHING—Steel—For Brush Holder Stud	825185	1106658; 60-1-2-3-5-6
56	BUSHING—Insul.—Terminal Stud	1905683	1106660-1-2-3-5-6
56	BUSHING—Insul.—Terminal Stud	1905654	1106658
—	CLIP—Terminal—To Brush	200188	1106658; 60-1-2-3-5-6
57	CLIP—Lock—"A" Terminal	1854058	1106658; 61-2-3-5-6
58	CLIP—Lock—"F" Terminal	1854058	1106658; 61-2-3-5-6
—	CLIP—Lock—"A" & "F" Terminal (Double)	1853400	1106660
59	COLLAR—Brush Arm Space	1877917	1106658; 60-1-2-3-5-6
60	COLLAR—Inside—C.E.	1862471	1106660-5
—	COLLAR—Inside—D.E.	1885354	1106665
61	COLLAR—Outside—D.E.	1849278	1106658; 60-1-6
61	COLLAR—Outside—D.E.	1885355	1106665
—	COVER—Terminal Shield	1883931	1106658-9
62	CUP—Felt Retainer—C.E.	37078	1106658; 60-1-2-3-5-6
63	CUP—Felt Retainer—D.E.	825196	1106658; 60-1-2-3-5-6
64	GASKET—Ball Bearing Retainer Plate—D.E.	825260	1106658; 60-1-2-3-6
65	GASKET—End Cover Plate—C.E.	1835457	1106658; 61-2-3
66	KEY—Woodruff—C.E.	124545	1106660-5
66	KEY—Woodruff—C.E.	124543	1106666
67	KEY—Woodruff—D.E.	124548	1106658; 60-1-3-6
67	KEY—Woodruff—D.E.	124546	1106665
68	INSULATOR—Terminal (Inside)	1905652	1106658; 60-1-2-3-5-6
69	OILER—C.E.	1880635	1106658; 60-1-2-3-5-6
70	OILER—D.E.	1880635	1106658; 60-1-2-3-6

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
—	PIN—Dowel—C.E.....	809062	1106658; 60-1-2-3-5-6
—	PIN—Dowel—D.E.....	809062	1106658; 60-1-2-3-5-6
—	SHIELD—Terminal.....	1888437	1106658
71	SHOE—Pole.....	1842744	1106658; 60-1-2-3-5-6
72	WICK—Oil—C.E.....	29047	1106658; 60-1-2-3-5-6

Revised to October 1, 1965

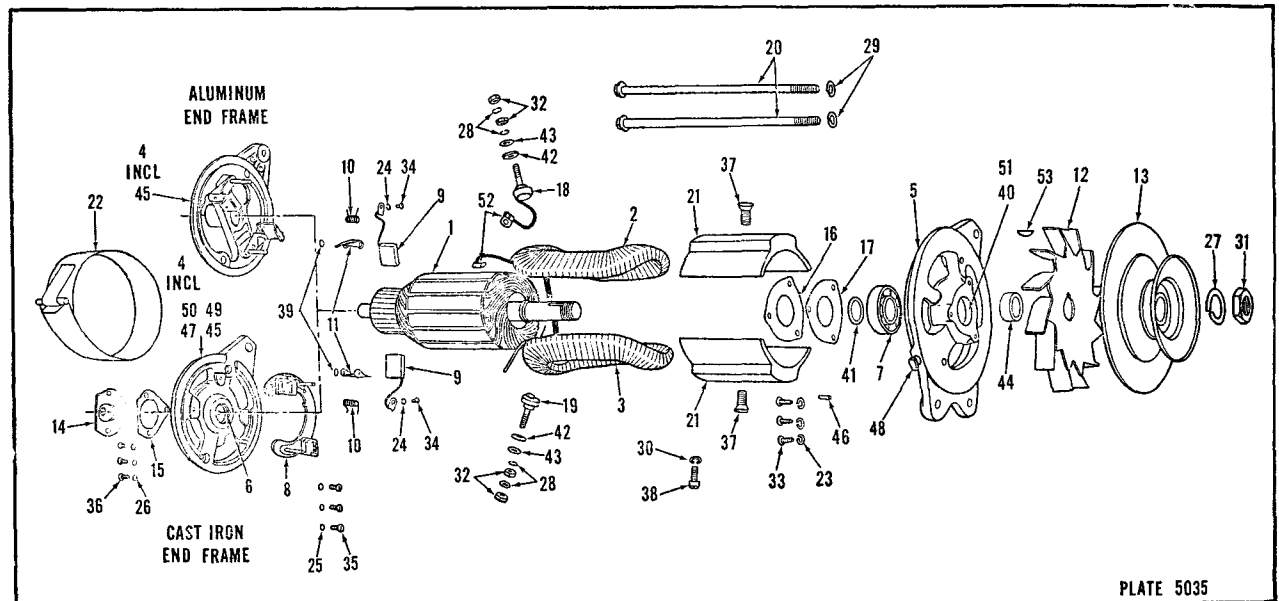


PLATE 5035


Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Armature	Field Coil — R.H.	Field Coil — L.H.	Frame — C.E.	Frame — D.E.	Ball Bearing — C.E.	Ball Bearing — D.E.	Plate — Brush	— Brush	Spring — Brush	Arm — Brush
	1	2	3	4	5	6	7	8	9	10	11
1106676.....	1940310	x1964184		1932347	1929786	904751	908604		1906977	1916542	1927583
1106678.....	1927074	x "		1929782	"	954685	"		"	"	"
1106679.....	1927074	x "		1927066	"	"	"		"	"	"
1106680.....	1940310	x "		1932347	"	904751	"		"	"	"
1106681.....	1927074	x "		1927066	"	954685	"		"	"	"

*Two coil set.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw	453435	1106676-8-9; 80-1
24	Lock Washer—Brush Lead Screw	1914816	1106676-8-9; 80-1
27	Lock Washer—Shaft Nut—D.E.	9421428	1106676-8-9; 80-1
28	Lock Washer—Terminal Stud	9421423	1106676-8-9; 80
28	Lock Washer—Terminal Stud	1914579	1106681
29	Lock Washer—Thru Bolt	9421424	1106676-8-9; 80-1
30	Lock Washer—Top of Field Frame	9421423	1106676-8-9; 80-1
NUTS			
31	Nut—Shaft—D.E.	451079	1106676-8-9; 80-1
32	Nut—Terminal Stud	121743	1106681
32	Nut—Terminal Stud	134551	1106676-8-9; 80
SCREWS			
33	Screw—Ball Bearing Retainer Plate—D.E.	454311	1106676-8-9; 80-1
34	Screw—Brush Lead Attaching	454329	1106676-8-9; 80-1
36	Screw—End Cover Plate—C.E.	133629	1106678-9; 81
—	Screw—Oil Hole—D.E.	1929956	1106678
37	Screw—Pole Shoe	1867938	1106676-8-9; 80-1
38	Screw—Top of Field Frame	132243	1106676-8-9; 80-1

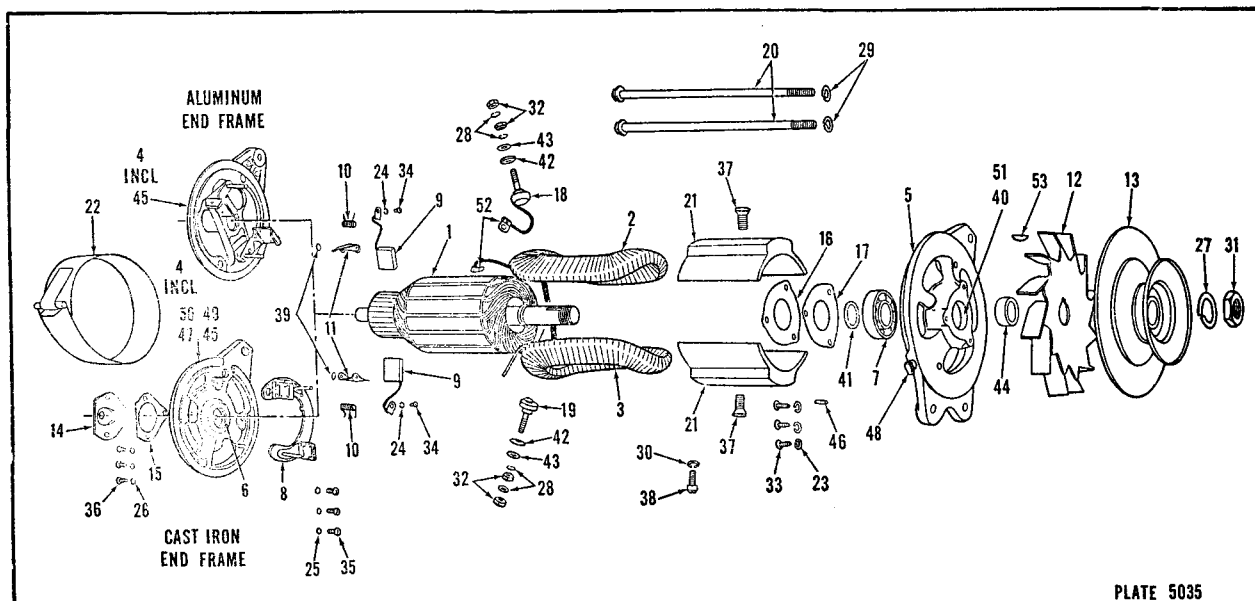

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Fan — C.E. or D.E.	Pulley	Plate — Cover — C.E.	Gasket — Cover Plate	Plate — Bearing Retainer — D.E.	Gasket — Retainer Plate	Terminal — Stud & Lead	Terminal — Stud Only	Bolt — Thru	Shoe — Pole	Band — Cover
	12	13	14	15	16	17	18	19	20	21	22
1106676.....	1910036				†	1927085		△	1927071	1927964	1927072
1106678.....	"		1927068	1927069	†	"		1909988	"	"	"
1106679.....	"		"	"	†	"		"	"	"	"
1106680.....	"				†	"		"	"	"	"
1106681.....			1927068	1927069	†	"		1949104	"	"	"

†Use 1927084 Plate (Inner), 1924666 Plate (Outer)


△Use 1909988 term. on field coil R.H. & 1909987 term. on field coil L.H.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
WASHERS			
39	Washer—Brush Arm Space	1857412	1106676-8-9; 80-1
—	Washer—(Fibre) Oil Hole Screw	1841089	1106678
42	Washer—Terminal Stud Insulation	1858753	1106681
42	Washer—Terminal Stud Insulation	1902746	1106676-8-9; 80
43	Washer—Terminal Stud Plain	826319	1106681
43	Washer—Terminal Stud Plain	1905125	1106676-8-9; 80
MISCELLANEOUS			
—	BUSHING—Insul. Terminal Stud	1909995	1106676-8-9; 80
45	Dowel PIN—C.E.	809062	1106676-8-9; 80-1
46	Dowel PIN—D.E.	809062	1106676-8-9; 80-1
47	OILER—C.E.	125609	1106676-9; 80-1
47	OILER—C.E.	1929780	1106678
48	OILER—D.E.	125609	1106676-9; 80-1
48	OILER—D.E.	1929780	1106678
—	Oil WICK—C.E.	1927070	1106676-8-9; 80-1
—	Oil WICK—D.E.	1927070	1106678-9; 81
—	RING—Bearing Clamp—C.E. (Rubber)	1929959	1106676; 80
—	SPRING—Loading—C.E.	1935334	1106679; 81
52	Terminal CLIP—To Brush	200357	1106676-8-9; 80-1
53	Woodruff KEY—D.E.	124546	1106676-8-9; 80-1

□Later Units (with Rectangular Clamp Groove) require Part No. 1963355.

Parts not listed in this Catalog will not be sold separately.

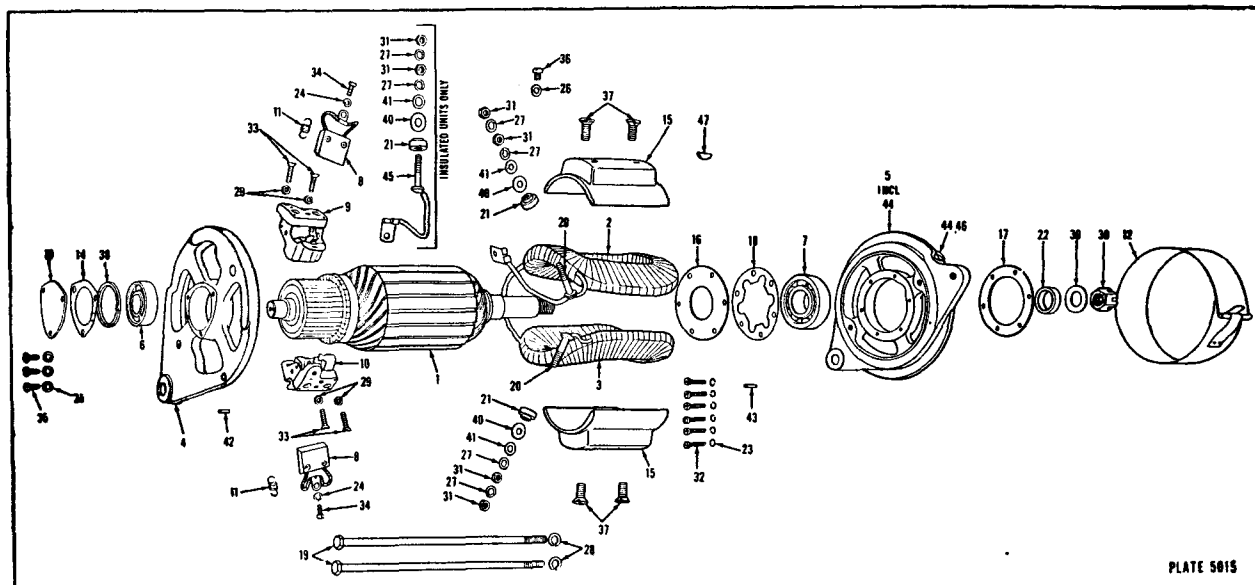

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil — R.H.	Field Coil — L.H.	Frame — C.E.	Frame — D.E.	Ball Bearing — C.E.	Ball Bearing — D.E.	Brush	Holder — Brush — Insulated	Holder — Brush — Grounded	Spring — Brush
	1	2	3	4	5	6	7	8	9	10	11
1106751.....	1910073	°1964181		1910010	1910013	954259	908605	X	X	X	X
1106752.....	1940415	°1967455		"	"	"	"	X	X	X	X
1106753.....	1910073	°1964181		"	"	"	"	X	X	X	X
1106754.....	"	"		"	"	"	"	X	X	X	X
1106755.....	1912714	"		1912494	1914480	"	954541	X	X	X	X
1106756.....	1940415	°1967455		1910010	1910013	"	908605	"	"	"	"
1106757.....	1937419	°1964181		1914501	"	954685	"	X	X	X	X
1106758.....	1940415	°1967455		"	"	"	"	X	X	X	X
1106759.....	1937419	°1964181		"	"	"	"	X	X	X	X
1106760.....	"	"		"	"	"	"	X	X	X	X
1106761.....	1940415	°1967455		"	"	"	"	X	X	X	X
1106762.....	1912714	°1964181		1912494	1912524	954217	954541	X	X	X	X
1106763.....	1937419	"		1914598	1885441	954685	908605	X	X	X	X
1106764.....	1940415	°1967455		1911261	1911262	954217	"	X	X	X	X
1106765.....	"	"		1917735	1917734	954685	"	X	X	X	X
1106766.....	1920297	°1964181		1920368	1920299	"	908506	X	X	X	X
1106768.....	1912491	°1967455		1912494	1914480	954217	954541	X	X	X	X
1106769.....	1940415	"		1911261	1911262	"	908605	X	X	X	X
1106772.....	1910073	1964181		1927888	1944658	954685	"	X	X	X	X
1106773.....	1940415	1967455		1914598	1885441	"	"	X	X	X	X
1106776.....	"	"		1911261	1911262	954217	"	X	X	X	X
1106777.....	1931276	°1964181		1934453	1910013	954685	"	X	X	X	X
1106778.....	1937419	"		1917735	1936580	"	"	X	X	X	X
1106779.....	1940415	°1967455		"	"	"	"	X	X	X	X
1106780.....	1939563	°1964181		1957548	1944658	"	"	X	X	X	X
1106781.....	1910073	"		1954792	1954791	"	"	X	X	X	X
1106782.....	1966555	°1964187		†1966552	1951061	▲	"	1946406	1948394	1948400	1967374


xFor correct part numbers see page 4.

°Two coil set.

▲Roller Bearing—7451640 Outer Race, 7451641 Inner Race.

†Part No. includes Bearing Seal & Outer Bearing race assembled.

Delco-Remy SERVICE PARTS CATALOG

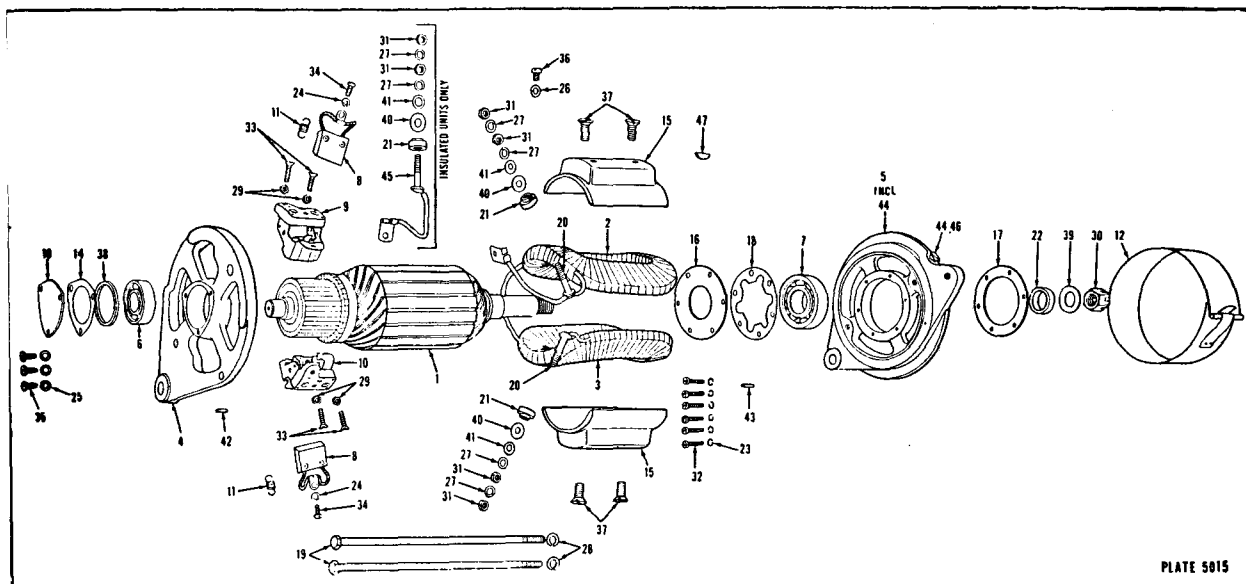

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cover Band	Plate — Cover C.E.	Gasket — Cover Plate C.E.	Pole Shoe	Plate — Retainer Inner D.E.	Plate — Retainer Outer D.E.	Gasket — Retainer Plate D.E.	Thru Bolt	Stud — Terminal	Bushing — Insulation	Collar — Space Outside D.E.
	12	13	14	15	16	17	18	19	20	21	22
1106751.....	X	1949594	1835457	1915846	Δ	Δ	1910014	1872411	1909988	1909995	1910035
1106752.....	X	"	"	"	"	"	"	"	"	"	"
1106753.....	X	"	"	"	"	"	"	"	"	"	"
1106754.....	X	"	"	"	"	"	"	"	"	"	"
1106755.....	X	"	"	"	1866760	"	"	"	"	"	1858588
1106756.....	X	1949594	1835457	"	Δ	Δ	1910014	"	"	"	1910035
1106757.....	X	1915847	"	"	"	"	"	"	"	"	"
1106758.....	X	"	"	"	"	"	"	"	"	"	"
1106759.....	X	"	"	"	"	"	"	"	"	"	"
1106760.....	X	"	"	"	"	"	"	"	"	"	"
1106761.....	X	"	"	"	"	"	"	"	"	"	"
1106762.....	X	"	"	"	1866760	"	"	"	"	"	1859045
1106763.....	X	1915847	"	"	"	Δ	*1910014	"	"	"	1910035
1106764.....	X	1949594	"	"	"	"	"	"	"	"	"
1106765.....	X	1915847	"	"	"	"	"	"	"	"	"
1106766.....	X	"	"	"	1866760	"	"	1912502	"	"	1881746
1106768.....	X	"	"	"	"	Δ	"	"	"	"	1868588
1106769.....	X	1914528	1835457	"	Δ	"	1910014	1872411	"	"	1910035
1106772.....	X	1915847	"	"	"	"	"	"	"	"	"
1106773.....	X	"	"	"	Δ	"	"	"	"	"	"
1106776.....	X	1949594	"	"	Δ	"	"	"	"	"	"
1106777.....	X	"	"	"	"	"	"	"	"	"	"
1106778.....	X	1915847	1835457	"	Δ	"	"	"	"	"	"
1106779.....	X	"	"	"	Δ	"	"	"	"	"	"
1106780.....	X	"	"	"	Δ	Δ	"	"	"	"	"
1106781.....	X	1915847	"	"	Δ	Δ	"	"	"	"	"
1106782.....	1967373	1915847	1968569	"	1946632	"	1946631	"	"	"	"

ΔUse Package No. 1931893. Later units w/inner plate only use 1946632 Plate.

*Later units w/4 mounting holes use 1946631 Gasket.

xFor correct part number see page 4.

Revised to April 1, 1971

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	453435	1106751-2-3-4-6-7-8-9; 60-1-3-4-5-9; 72-3; 80-2
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	1962276	1106755; 62-8
24	Lock Washer—Brush Lead Attaching Screw	453435	1106751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 72-3-6-7-8-9; 80-1-2
....	Lock Washer—Cover Attaching Screw	□1914579	1106780
25	Lock Washer—End Cover Plate Screw—C.E.	453435	1106751-2-3-4-6-7-8-9; 60-1-3-4-5-9; 72-6-8-9; 81-2
26	Lock Washer—Ground Screw	9421423	1106751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 72-3-6-7-8-9; 80-1-2
....	Lock Washer—Shaft Nut—C.E.	1913743	1106755; 62-6-8; 80
27	Lock Washer—Terminal Stud	9421423	1106751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 72-3-6-7-8-9; 80-1-2
28	Lock Washer—Thru Bolt	9421424	1106751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 72-3-6-7-8-9; 80-1-2
NUTS			
....	Nut—Ball Bearing Retainer Screw—D.E.	432230	1106751-2-3-4-6-7-8-9; 60-1-3-4-5
29	Nut—Brush Holder Screw	5024654	1106751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 72-3-6-7-8-9; 80-1-2
....	Nut—Cover Band	1935960	1106780
....	Nut—Shaft—C.E.	1915172	1106755; 62-6-8; 80
30	Nut—Shaft—D.E.	125384	1106751-2-3-4-6
30	Nut—Shaft—D.E.	1917570	1106755; 62-8
30	Nut—Shaft—D.E.	9418881	1106757-8-9; 60-1-3-4-5-9; 72-3-6-7-8-9; 80-1-2
31	Nut—Terminal Stud	134551	1106751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 72-3-6-7-8-9; 80-1-2
SCREWS			
32	Screw—Ball Brg. retainer plate D.E.	9413363	1106782
32	Screw—Ball Bearing Retainer Plate—D.E.	*274946	1106751-2-3-4-6-7-8-9; 60-1-3-4-5-9; 72-3-6-8-9; 81
32	Screw—Ball Bearing Retainer Plate—D.E.	5017850	1106755; 62-6-8
33	Screw—Brush Holder Attaching	453337	1106751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 72-3-6-7-8-9; 80-1-2
34	Screw—Brush Lead Attaching	1914800	1106751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 72-3-6-7-8-9; 80-1-2
....	Screw—Cover Band	453479	1106780
35	Screw—End Cover Plate Screw—C.E.	453435	1106782
35	Screw—Cover Attaching	□454308	1106780
35	Screw—End Cover Plate Attaching—C.E.	1915806	1106751-2-3-4-6; 64-9; 76
35	Screw—End Cover Plate Attaching—C.E.	1914580	1106757-8-9; 60-1-3-5; 72-3-8-9; 80-1
36	Screw—Ground	132243	1106751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 72-3-6-7-8-9; 80-1-2
....	Screw—Oil Plug—C.E.	1938264	1106780
....	Screw—Oil Plug—D.E.	1932507	1106780
37	Screw—Pole Shoe	1914750	1106751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 72-3-6-7-8-9; 80-1-2
WASHERS			
38	Washer—Ball Bearing Space—C.E.	1888761	1106751-2-3-4-6
38	Spring, Washer—Ball Bearing Space—C.E.	1935334	1106757-8-9; 60-1-3-4-5-9; 72-3-6-8-9; 81
....	Washer—Felt—C.E.	37077	1106755; 62-6-8
....	Washer—Felt—D.E.	825197	1106755; 62-6-8
....	Washer—Plain—Cover Attaching Screw	□819575	1106780
39	Washer—Shaft Nut—Plain—D.E.	1872618	1106751-2-3-4-6-7-8-9; 60-1-3-4-5-9; 72-3-6-7-8-9; 80-1
39	Washer—Shaft Nut—D.E.	1905406	1106782
39	Washer—Shaft Nut—D.E.	1934383	1106755; 68
40	Washer—Terminal Stud—Insulating	1902746	1106751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 72-3-6-7-8-9; 80-1-2
41	Washer—Terminal Stud—Plain	1905125	1106751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 72-3-6-7-8-9; 80-1-2
MISCELLANEOUS			
....	BAFFLE—Oil—D.E.	1920746	1106755; 62-8

*Later units w/4 mounting hole retainer plate use 273641 Screw.

□Later units w/1/4-28 cover attaching screw; use 190741 screw, 120380 lock washer and 1872057 plain washer.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
----	COLLAR—Space—C.E.	1938263	1106780
----	COLLAR—Space—Inside—C.E.	1912501	1106755; 62-6-8
----	COVER—C.E.	1957546	1106780
----	CUP—Felt Retainer—C.E.	37078	1106755; 62-6-8
----	CUP—Felt Retainer—D.E.	825196	1106755; 62-6-8
----	CUP—Grease	805579	1106751-2-3-4-6
42	Dowel PIN—C.E.	809062	1106751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 72-3-6-7-8-9; 80-1-2
43	Dowel PIN—D.E.	809062	1106751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-8-9; 72-3-6-7-8-9; 80-1-2
----	FAN—C.E.	1872400	1106755; 62-6-8
----	FAN—C.E.	1938268	1106780
----	GASKET—Ball Bearing Retainer Plate—C.E.	1938262	1106780
----	OILER—C.E.	113702	1106757-8-9; 60-1-3-5-6; 72-3-7-8-9; 81
44	OILER—D.E.	113702	1106751-2-3-5-6-7-8-9; 60-1-3-4-5-6-9; 72-3-6-7-8-9; 81-2
----	PLATE—Ball Bearing Retainer—C.E.	1938259	1106780
----	RING—Bearing Clamp—C.E.	1929959	1106777; 80
----	SEAL—Oil—C.E.	1966554	1106782
----	WEDGE—Thru Bolt	1947440	1106782
----	WICK—Oil—C.E.	1947350	1106757-8-9; 60-1-3-5-6; 72-3-7-8-9; 80-1-2
46	WICK—Oil—D.E.	1947350	1106751-2-3-5-6-7-8-9; 60-1-3-4-5-6-9; 72-3-6-7-8-9; 80-1-2
----	Woodruff KEY—C.E.	124545	1106755; 62-6-8
----	Woodruff KEY—C.E.	124542	1106780
47	Woodruff KEY—D.E.	124548	1106751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-8-9 72-3-6-7-8-9; 80-1-2

□ Later units (with rectangular clamp groove) require Part No. 1963355

x Generators indicated can be or may have been reoperated by application of Package No. 1953815 to increase brush life. Brushes are longer and springs are designed to accommodate them.


Reoperated Generators can be identified by type of cover for frame windows (Non-reoperated units have circular cover band; Reoperated units have four separate cover plates).

For parts order as follows (complete reoperation 1953815 Package)

Part Name	Non-Reoperated	Reoperated
Brush	†1906911	1946406 (2 req'd)
Brush Holder (Insul.)	1909989	1948394
Brush Holder (Ground)	1909993	1948400
Brush Spring	1910033	1948396 (2 req'd)
Cover Band (or Plate)	△1910011	1953862 (4 req'd)
Gasket (Cover Plate)		1953861 (4 req'd)
Screw (Cover Plate)		121749 (8 req'd)
Lock Washer (Cover Plate)		131182 (8 req'd)

△ Cover Band for 1106772, 1106781 is 1928032.

† For 1106757-8; 64; 76 use 1906979.

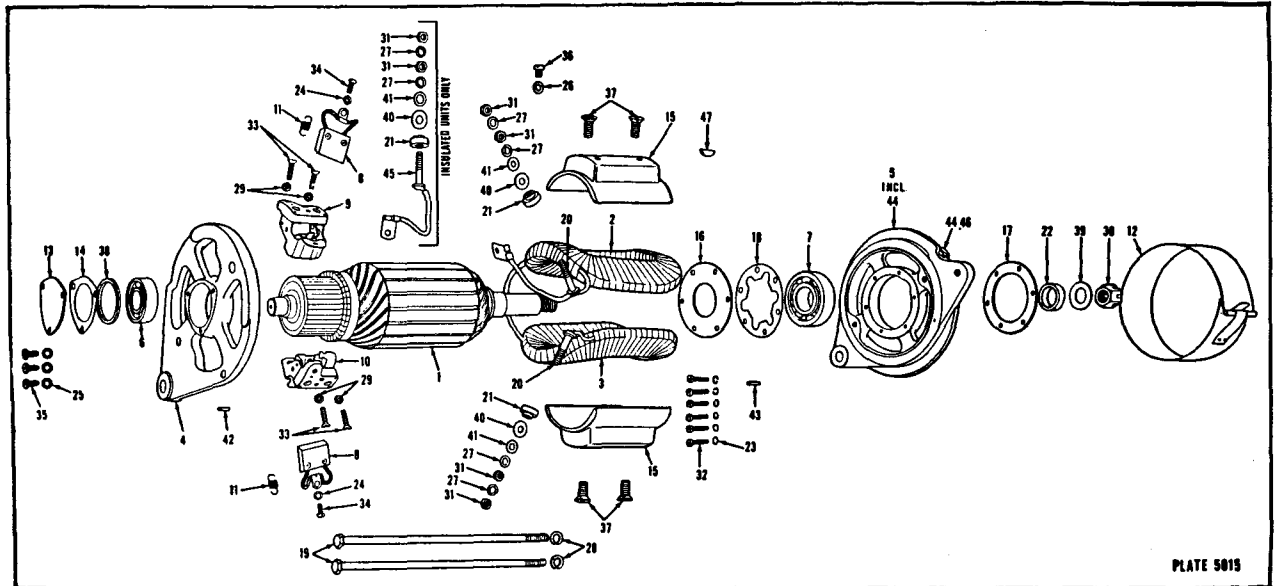


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coll — R.H.	Field Coll — L.H.	Frame — C.E.	Frame — D.E.	Ball Bearing — C.E.	Ball Bearing — D.E.	Brush	Holder — Brush — Insulated	Holder — Brush — Grounded	Spring — Brush
	1	2	3	4	5	6	7	8	9	10	11
1106801.....	1940415	1964187		1910010	1910013	954259	908605	X	X	X	X
1106802.....	1910073	"		"	"	"	"	X	X	X	X
1106803.....	1940415	"		1911261	1911262	954217	"	X	X	X	X
1106804.....	1910037	"		1922024	1910838	954259	"	X	X	X	X
1106805.....	1937419	"		1911261	1911262	954217	"	X	X	X	X
1106806.....	1910073	"		1910010	1910013	954259	"	1906911	1909989		1910033
1106807.....	"	"		"	"	"	"	"	"		"
1106808.....	1937419	"		1911261	1911262	954217	"	X	X	X	X
1106809.....	1910073	"		1922024	1885441	954259	"	X	X	X	X
1106810.....	"	"		1910010	1910013	"	"	X	X	X	X
1106811.....	1912714	"		1912494	1912495	"	"	X	X	X	X
1106812.....	1912509	"		"	1912512	954217	954517	X	X	X	X
1106813.....	1912491	"		"	1912524	"	954541	X	X	X	X
1106814.....	"	"		"	"	"	"	X	X	X	X
1106815.....	1912712	"		"	1912512	954259	954517	X	X	X	X
1106816.....	1912509	"		"	"	"	"	X	X	X	X
1106817.....	1940415	"		1922024	1885441	"	908605	X	X	X	X
1106818.....	1937419	"		1910010	1910013	954217	904722	X	X	X	X
1106819.....	1940415	"		1911261	1913481	"	908605	X	X	X	X
1106820.....	"	"		1910010	1910013	"	"	X	X	X	X
1106821.....	"	"		1914501	"	954685	"	X	X	X	X
1106822.....	1937419	"		"	"	"	"	X	X	X	X
1106823.....	"	"		1914598	1910838	"	"	X	X	X	X
1106824.....	"	"		1914501	1910013	"	"	1906911	1909989		1910033
1106825.....	"	"		"	"	"	"	X	X	1909993	"
1106826.....	"	"		1914598	1885441	"	"	X	X	X	X
1106827.....	"	"		1914501	1910031	"	"	X	X	X	X
1106828.....	1940415	"		1914598	1885441	"	"	X	X	X	X
1106829.....	"	"		1914501	1910013	"	"	X	X	X	X
1106830.....	1912714	"		1915258	1915259	"	"	X	X	X	X

xFor correct part numbers see page 4.

cTwo coil set

Delco-Remy SERVICE PARTS CATALOG

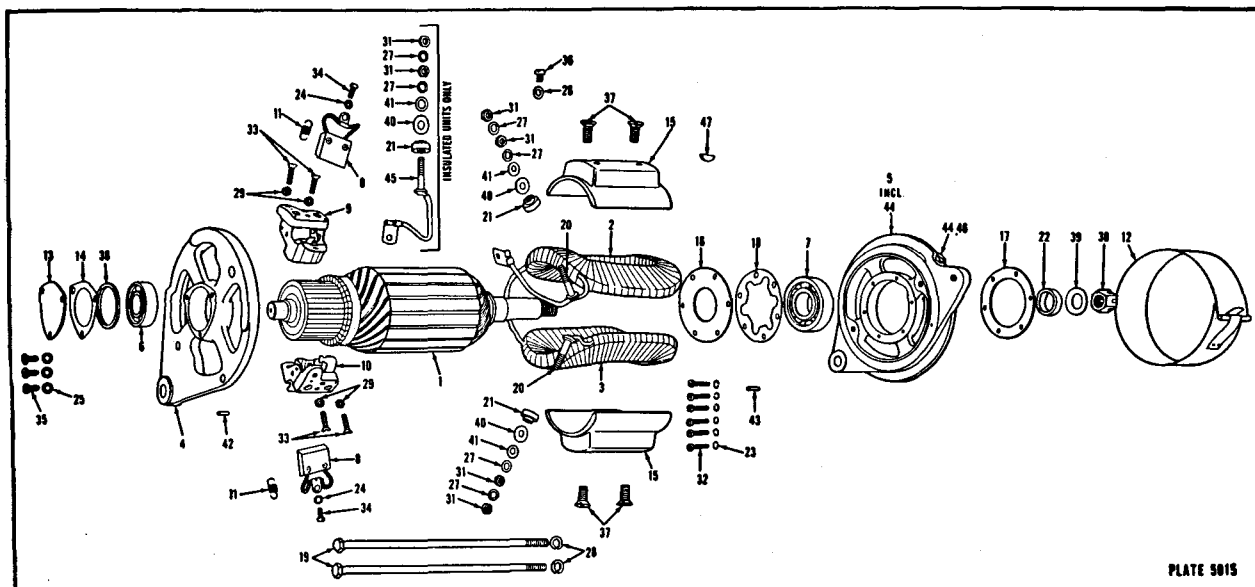

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cover Band	Plate — Cover C.E.	Gasket — Cover Plate C.E.	Pole Shoe	Plate — Retainer Inner D.E.	Plate — Retainer Outer D.E.	Gasket — Retainer Plate D.E.	Thru Bolt	Stud — Terminal	Bushing — Terminal	Collar — Space Outside D.E.
	12	13	14	15	16	17	18	19	20	21	22
1106801.....	X	1949594	1835457	1915846	△1931893	△	1910014	1872411	1909988	1909995	1910035
1106802.....	X	"	"	"	"	"	"	"	"	"	"
1106803.....	X	"	"	"	"	"	"	"	"	"	"
1106804.....	X	"	"	"	"	"	"	"	"	"	"
1106805.....	X	"	"	"	"	"	"	"	"	"	"
1106806.....	1910011	"	"	"	"	"	"	"	"	"	"
1106807.....	"	"	"	"	"	"	"	"	"	"	"
1106808.....	X	"	"	"	"	"	"	"	"	"	"
1106809.....	X	"	"	"	"	"	"	"	"	"	"
1106810.....	X	"	"	"	"	"	"	"	"	"	"
1106811.....	X			"	1866760		825260	1912502	"	"	1859045
1106812.....	X			"		1841877		"	"	"	825254
1106813.....	X			"	1866760			1872411	"	"	1858588
1106814.....	X			"				"	"	"	"
1106815.....	X			"		1841877		1912502	"	"	825254
1106816.....	X			"		"		"	"	"	"
1106817.....	X	1949594	1835457	"	△1931893	△	1910014	1872411	"	"	1910035
1106818.....	X	1915847	"	"	"	"	"	"	"	"	1912841
1106819.....	X	1949594	"	"	"	"	"	"	"	"	1910035
1106820.....	X	"	"	"	"	"	"	"	"	"	"
1106821.....	X	1915847	"	"	"	"	"	"	"	"	"
1106822.....	X	"	"	"	"	"	"	"	"	"	"
1106823.....	X	"	"	"	"	"	"	"	"	"	"
1106824.....	1910011	"	"	"	"	"	"	"	"	"	"
1106825.....	"	"	"	"	"	"	"	"	"	"	"
1106826.....	X	"	"	"	"	"	"	"	"	"	"
1106827.....	X	"	"	"	"	"	"	"	"	"	"
1106828.....	X	"	"	"	"	"	"	"	"	"	"
1106829.....	X	"	"	"	"	"	"	"	"	"	"
1106830.....	X			"	1866760		825260	"	"	"	1859045

△1931893 is a package replacing both inner and outer plates; later units w/inner plate only use 1946632 Plate.

*Later units w/4 mounting holes use 1946631 Gasket.

xFor correct part number see page 4.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	453435	1106801-2-3-4-5-6-7-8-9-10-17-18-19; 20-1-2-3-4-5-6-7-8-9
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	138479	1106812-15-16
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	1962276	1106811-13-14
24	Lock Washer—Brush Lead Attaching Screw	453435	All
25	Lock Washer—End Cover Plate Screw—C.E.	453435	1106801-2-3-4-5-6-7-8-9-10-17-18-19; 20-1-2-3-4-5-6-7-8-9
26	Lock Washer—Ground Screw	9421423	1106801-2-3-4-5-8-9-10-11-12-13-14-15-16-17-19; 20-1-2-3-6-7-8-9; 30
27	Lock Washer—Shaft Nut—C.E.	1913743	1106811-12-13-14-15-16; 30
27	Lock Washer—Terminal Stud	9421423	All
28	Lock Washer—Thru Bolt	9421424	All
NUTS			
29	Nut—Ball Bearing Plate Screw—D.E.	432230	1106801-2-3-4-5-6-7-8-9-10-17-18-19; 20-1-2-3-4-5-6-7-8-9
29	Nut—Brush Holder Screw	5024654	All
30	Nut—Shaft—C.E.	1915172	1106811-12-13-14-15-16; 30
30	Nut—Shaft—D.E.	125384	1106801-2-4-6-7-9-10-17; 20
30	Nut—Shaft—D.E.	1917570	1106811-13-14; 30
30	Nut—Shaft—D.E. ($\frac{1}{4}$ -20x $\frac{1}{4}$ x $\frac{3}{4}$ Hex.)	1917035	1106812-15-16
30	Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{1}{4}$ x1 $\frac{1}{4}$ Hex.)	1917034	1106812
30	Nut—Shaft—D.E.	9418881	1106803-5-8-18-19; 21-2-3-4-5-6-7-8-9
31	Nut—Terminal Stud	134551	All
SCREWS			
32	Screw—Ball Bearing Retainer Plate—D.E.	*274946	1106801-2-3-4-5-6-7-8-9-10-17-18-19; 20-1-2-3-4-5-6-7-8-9
32	Screw—Ball Bearing Retainer Plate—D.E.	5017850	1106811-12-13-14-15-16; 30
33	Screw—Brush Holder Attaching	453337	All
34	Screw—Brush Lead Attaching	1914800	All
35	Screw—End Cover Plate Attaching—C.E.	1915806	1106801-2-3-4-5-6-7-8-9-10-17-19; 20
35	Screw—End Cover Plate Attaching—C.E.	1914580	1106818; 21-2-3-4-5-6-7-8-9
36	Screw—Ground	132243	1106801-2-3-4-5-8-9-10-11-12-13-14-15-16-17-19; 20-1-2-3-6-7-8-9; 30
37	Screw—Pole Shoe	1914750	All
WASHERS			
38	Washer—Ball Bearing Space—C.E.	1888761	1106801-2-4-6-7-9-10-17; 20
38	Spring, Washer—Ball Bearing Space—C.E.	1935334	1106803-5-8-18-19; 21-2-3-4-5-6-7-8-9
38	Washer—Felt—C.E.	37077	1106811-12-13-14-15-16; 30
38	Washer—Felt—D.E.	825197	1106811-12-13-14-15-16; 30
39	Washer—Shaft Nut—Plain—D.E.	1872618	1106801-2-3-4-5-6-7-8-9-10-12-17-18-19; 20-1-2-3-4-5-6-7-8-9
39	Washer—Shaft Nut—Plain—D.E.	1934383	1106811-13-14-15-16; 30
40	Washer—Terminal Stud—Insulating	1902746	All
41	Washer—Terminal Stud—Plain	1905125	All
MISCELLANEOUS			
42	BAFFLE—Oil—D.E.	1920746	1106811-13-14; 30
42	COLLAR—Oil Thrower—Inside—D.E.	1912513	1106812
42	COLLAR—Oil Thrower—Inside—D.E.	1912715	1106815-16
42	COLLAR—Space—Inside—C.E.	1912501	1106811-12-13-14-15-16; 30
42	CUP—Felt Retainer—C.E.	37078	1106811-12-13-14-15-16; 30
42	CUP—Felt Retainer—D.E.	825196	1106811-12-13-14-15-16; 30
42	CUP—Grease—C.E.	805579	1106801-2-3-4-5-6-7-8-9-10-17-19; 20
42	Dowel PIN—C.E.	809062	All
43	Dowel PIN—D.E.	809062	All
43	FAN—C.E.	1872400	1106811-12-13-14-15-16; 30
43	OILER—C.E.	113702	1106821-2-3-4-5-6-7-8-9; 30
44	OILER—D.E.	113702	1106801-2-3-4-5-6-8-9-10-11-17-19; 20-1-2-3-4-5-6-7-8-9; 30
45	STUD (& Lead)—Terminal	1910880	1106806-7; 24-5
45	WICK—Oil—C.E.	1947350	1106821-2-3-4-5-6-7-8-9; 30
46	WICK—Oil—D.E.	1947350	1106801-2-3-4-5-6-8-9-10-11-17-19; 20-1-2-3-4-5-6-7-8-9; 30
47	Woodruff KEY—C.E.	124545	1106811-12-13-14-15-16; 30
47	Woodruff KEY—D.E.	124548	All
47	CLAMP—Bearing Retainer—C.E.	1963355	1106810-13-14-18-19; 21-2-3-4-5-6-7-8; 30

*Later units w/4 mounting hole retainer plate use 9413363.

Parts not listed in this Catalog will not be sold separately.

Delco-Remy
SERVICE PARTS CATALOG


xGenerators indicated can be or may have been reoperated by application of package No. 1953815 to increase brush life. Brushes are longer and springs are designed to accommodate them.

Reoperated Generators can be identified by type of cover for frame windows (Non-reoperated units have circular cover band; Re-operated units have four separate cover plates.)

For parts order as follows (For complete reoperation 1953815 Package)

<u>Part Name</u>	<u>Non-reoperated</u>	<u>Re-operated</u>
Brush	^A 1906911	1946406 (2 req'd)
Brush Holder (Insul.)	1909989	1948394
Brush Holder (Ground)	1909993	1948400
Brush Spring	1910033	1948396 (2 req'd)
Cover Band (or Plate)	1910011	1953862 (4 req'd)
Gasket (Cover Plate)		1953861 (4 req'd)
Screw (Cover Plate)		453418 (8 req'd)
Lock Washer (Cover Plate)		453844 (8 req'd)

^ABrush for 1106821, 1106822 is 1906979.

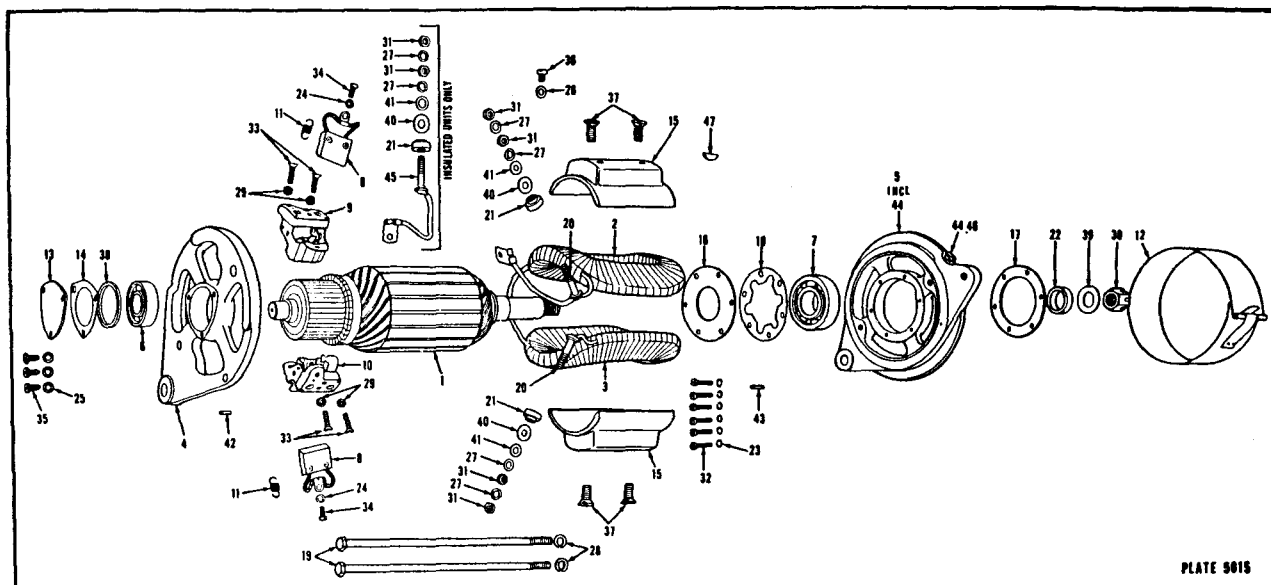

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil — R.H.	Field Coil — L.H.	Frame — C.E.	Frame — D.E.	Ball Bearing — C.E.	Ball Bearing — D.E.	Brush — Insulated	Holder — Brush — Insulated	Holder — Brush — Grounded	Spring — Brush
	1	2	3	4	5	6	7	8	9	10	11
1106832.....	1916409	°1964187		1912494	1912512	954217	954517	X	X	X	X
1106833.....	1940415	"		1914501	1910013	954685	908605	X	X	X	X
1106834.....	1912491	"		1912494	1914480	954217	954541	X	X	X	X
1106837.....	1937419	"		1920484	1910838	954685	908605	X	X	X	X
1106841.....	1940415	"		1911261	1911262	954217	"	X	X	X	X
1106842.....	1937419	"		1922024	1922023	954685	"	X	X	X	X
1106846.....	"	"		1922943	1922942	"	"	X	X	X	X
1106847.....	1940415	"		1914501	1910013	"	"	X	X	X	X
1106848.....	1937419	"		1911261	1911262	954217	"	X	X	X	X
1106849.....	1912712	"		1923689	1912512	954685	954517	X	X	X	X
1106850.....	1912509	"		"	"	1-44	"	X	X	X	X
.....											
.....											
.....											
.....											

°Two coil set.

xGenerators indicated can be or may have been reoperated by application of Package No. 1953815 to increase brush life. Brushes are longer and springs are designed to accommodate them.


Reoperated Generators can be identified by type of cover for frame windows (Non-reoperated units have circular cover band; Reoperated units have four separate cover plates).

For parts order as follows (complete reoperation 1953815 Package)

Part Name	Non-Reoperated	Reoperated
Brush	1906911	1946406 (2 req'd)
Brush Holder (Insul.)	1909989	1948394
Brush Holder (Ground)	1909993	1948400
Brush Spring	1910033	1948396 (2 req'd)
Cover Band (or Plate)	1910011	1953862 (4 req'd)
Gasket (Cover Plate)		1953861 (4 req'd)
Screw (Cover Plate)		121749 (8 req'd)
Lock Washer (Cover Plate)		131182 (8 req'd)

Delco-Remy

SERVICE PARTS CATALOG

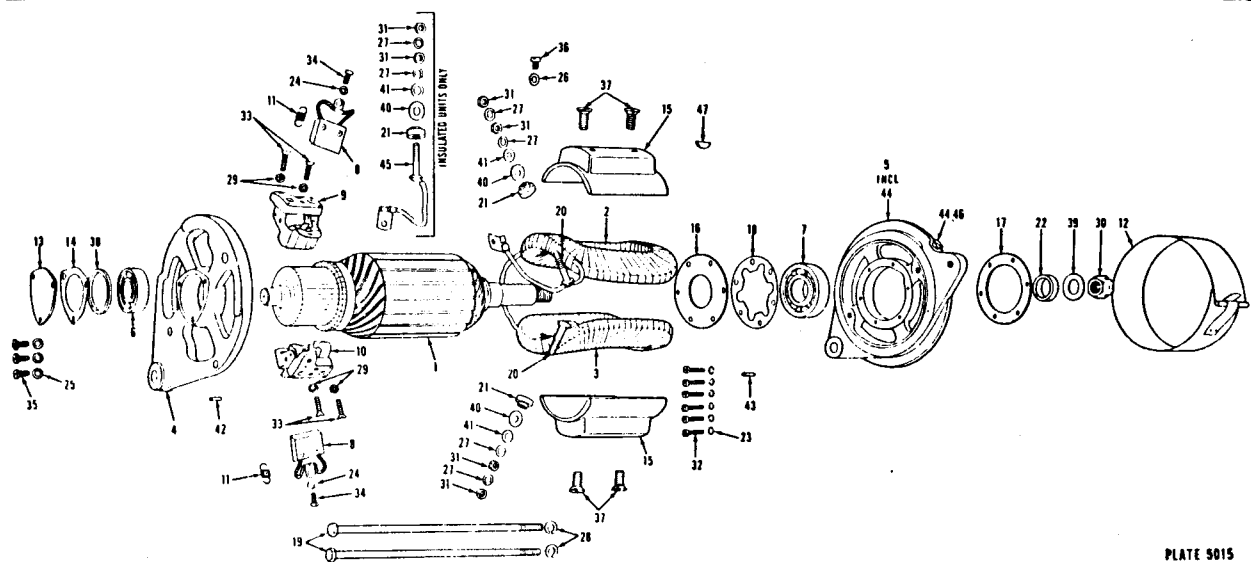

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

[illegible]

^A1931893 is a package replacing both inner and outer plates; units w/inner plate only use 1946632 Plate.


*Later units w/4 mounting holes use 1946631 Gasket.

xFor part number see page 1.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	453435	1106832-3-7; 41-2-6-7-8
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	1962276	1106834
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	138479	1106849; 50
24	Lock Washer—Brush Lead Attaching Screw	453435	1106832-3-4-7; 41-2-6-7-8-9; 50
25	Lock Washer—End Cover Plate Screw—C.E.	453435	1106833-7; 41-2-6-7-8
26	Lock Washer—Ground Screw	9421423	1106832-3-4-7; 41-2-6-8-9; 50
27	Lock Washer—Shaft Nut—C.E.	1913743	1106832-4; 49; 50
27	Lock Washer—Terminal Stud	9421423	1106832-3-4-7; 41-2-6-7-8-9; 50
28	Lock Washer—Thru Bolt	9421424	1106832-3-4-7; 41-2-6-7-8-9; 50
NUTS			
29	Nut—Ball Bearing Retainer Plate Screw	432230	1106833-7; 41-2-6-7-8
29	Nut—Brush Holder Screw	5024654	1106832-3-4-7; 41-2-6-7-8-9; 50
30	Nut—Shaft—C.E.	1915172	1106832-4; 49; 50
30	Nut—Shaft—D.E.	1917570	1106834
30	Nut—Shaft—D.E.	9418881	1106833-7; 41-2-6-7-8
30	Nut—Shaft—D.E.	1917035	1106832; 49; 50
31	Nut—Terminal Stud	134551	1106832-3-4-7; 41-2-6-7-8-9; 50
SCREWS			
32	Screw—Ball Bearing Retainer Plate—D.E.	*274946	1106833-7; 41-2-6-7-8
32	Screw—Ball Bearing Retainer Plate—D.E.	5017850	1106832-4; 49; 50
33	Screw—Brush Holder Attaching	453337	1106832-3-4-7; 41-2-6-7-8-9; 50
34	Screw—Brush Lead Attaching	1914800	1106832-3-4-7; 41-2-6-7-8-9; 50
35	Screw—End Cover Plate Attaching—C.E.	1914580	1106833-7; 42-6-7
35	Screw—End Cover Plate Attaching—C.E.	1914806	1106841-8
36	Screw—Ground	132243	1106832-3-4-7; 41-2-6-8-9; 50
37	Screw—Pole Shoe	1914750	1106832-3-4-7; 41-2-6-7-8-9; 50
WASHERS			
38	Spring, Washer—Ball Bearing Space—C.E.	1935334	1106833-7; 41-2-6-7-8
38	Washer—Felt—C.E.	37077	1106832-4; 49; 50
38	Washer—Felt—D.E.	825197	1106832-4; 49; 50
39	Washer—Shaft Nut—Plain—D.E.	1872618	1106833-7; 41-2-6-7-8
39	Washer—Shaft Nut—Plain—D.E.	1934383	1106832-4; 49; 50
40	Washer—Terminal Stud—Insulating	1902746	1106832-3-4-7; 41-2-6-7-8-9; 50
41	Washer—Terminal Stud—Plain	1905125	1106832-3-4-7; 41-2-6-7-8-9; 50
MISCELLANEOUS			
42	BAFFLE—Oil—D.E.	1920746	1106834
42	CLAMP—Bearing Retainer—C.E.	1963355	1106834; 42-6-8
42	COLLAR—Oil Thrower—Inside—D.E.	1912715	1106849; 50
42	COLLAR—Space—Inside—C.E.	1912501	1106832-4; 49; 50
42	COLLAR—Space—Inside—D.E.	1912513	1106832
42	CUP—Felt Retainer—C.E.	37078	1106832-4; 49; 50
42	CUP—Felt Retainer—D.E.	825196	1106832-4; 49; 50
42	CUP—Grease—C.E.	805579	1106841-8
42	Dowel PIN—C.E.	809062	1106832-3-4-7; 41-2-6-7-8-9; 50
43	Dowel PIN—D.E.	809062	1106832-3-4-7; 41-2-6-7-8-9; 50
43	FAN—C.E.	1872400	1106832-4; 49; 50
43	OILER—C.E.	113702	1106833-7; 42-6-7-8-9; 50
44	OILER—D.E.	113702	1106833-7; 41-2-6-7
45	STUD (& Lead) Terminal	1910880	1106847
45	WICK—Oil—C.E.	1947350	1106833-7; 42-6-7-9; 50
46	WICK—Oil—D.E.	1947350	1106833-7; 41-2-6-7-8
47	Woodruff KEY—D.E.	124548	1106832-3-4-7; 41-2-6-7-8-9; 50
47	Woodruff KEY—C.E.	124545	1106832-4; 49; 50

*Later units w/4 mounting hole retainer plate use 273641 Screw.

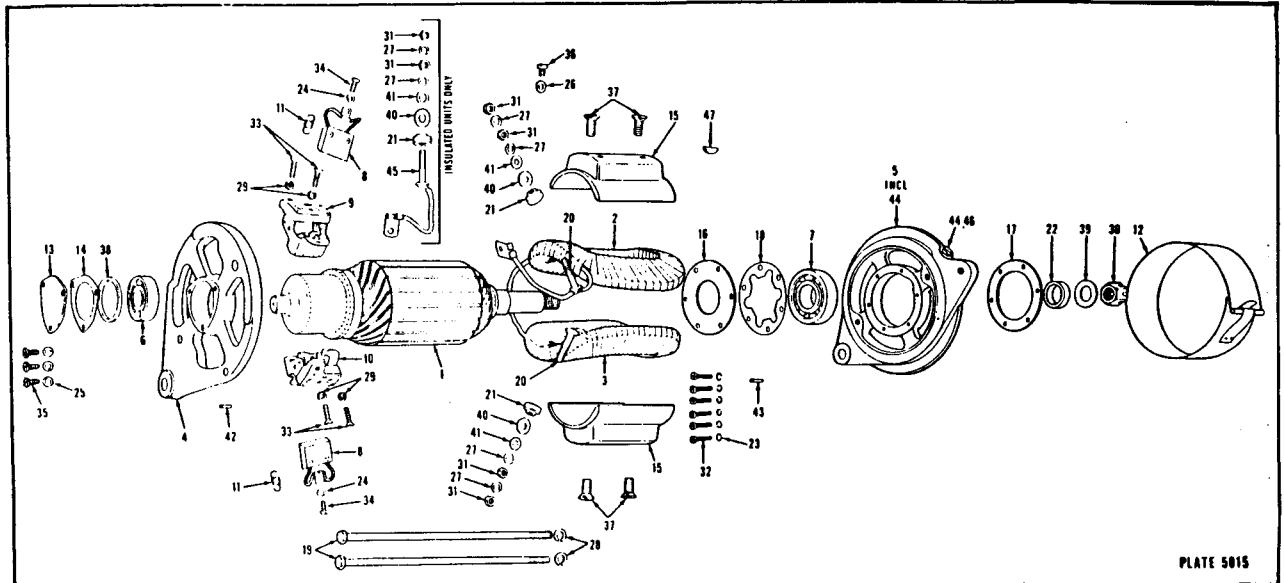


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil R.H.	Field Coil L.H.	Frame C.E.	Frame D.E.	Ball Bearing C.E.	Ball Bearing D.E.	Brush Insulated	Holder Brush Insulated	Holder Brush Grounded	Spring Brush
	1	2	3	4	5	6	7	8	9	10	11
1106851.....	1911361	*1964190		1910010	1910013	954259	908605	1906911	1909989		1910033
1106852.....	"	"		"	"	"	"	"	"		"
1106853.....	1911367	*1964193		1914619	1911360	"	"	"	"		"
1106854.....	"	"		"	"	"	"	"	"		"
1106855.....	1911361	*1964190		1911261	1911262	954217	"	"	"		"
1106856.....	"	"		"	"	"	"	"	"		"
1106857.....	1911367	*1964193		1911518	1911519	"	"	"	"		"
1106858.....	"	"		"	"	"	"	"	"		"
1106859.....	1912515	*1964190		1912494	1912512	"	954517	"	"		"
1106860.....	1912516	*1964193		1912530	1912517	"	"	"	"		"
1106861.....	1912527	*1964190		"	1912531	"	954541	"	"		"
1106862.....	1916679	"		1912494	1912524	"	"	"	"		"
1106863.....	1912532	*1964193		1912530	1912531	"	"	"	"		"
1106864.....	"	"		"	"	"	"	"	"		"
1106865.....	1912632	*1964190		1911518	1911519	"	908605	"	"		"
1106866.....	1911367	*1964193		"	"	"	"	"	"		"
1106867.....	1911361	*1964190		1914501	1910013	954685	"	"	"		"
1106868.....	"	*1964190		"	"	"	"	"	"		"
1106869.....	1911367	*1964193		1914619	1911360	"	"	"	"		"
1106870.....	"	"		"	"	"	"	"	"		"
1106874.....	1916679	*1964190		1912494	1912524	954217	954541	"	"		"
1106875.....	1912632	"		1922129	1922183	954685	908605	"	"		"
1106876.....	1911361	"		1911262	1911262	954217	"	"	"		"
1106889.....	1911367	*1964193		1928216	1928217	954686	"	"	"		"
1106892.....	1911361	*1964190		1914598	1885441	"	"	"	"		"
1106893.....	"	"		1911261	1911262	954217	"	"	"		"
1106894.....	1916679	"		1915258	1915259	954685	"	"	"		"
1106895.....	1930412	"		1930410	1930411	"	"	"	"		"
1106896.....	1911361	"		1930632	1930633	"	"	"	"		"
1106897.....	1911367	*1964193		1914619	1911360	"	"	1906911	1909989	X	1910033
1106898.....	1911361	*1964190		1930863	1930411	"	"	"	"		"
1106899.....	1911361	"		1922943	1922942	"	"	"	"		"
1106900.....	"	"		1932288	1932287	"	"	1906926	1915836		1915846

*Two Coil Set for Interpole Coil if required, see Minor Parts Section.

xFor part numbers see page 4.

Delco-Remy SERVICE PARTS CATALOG

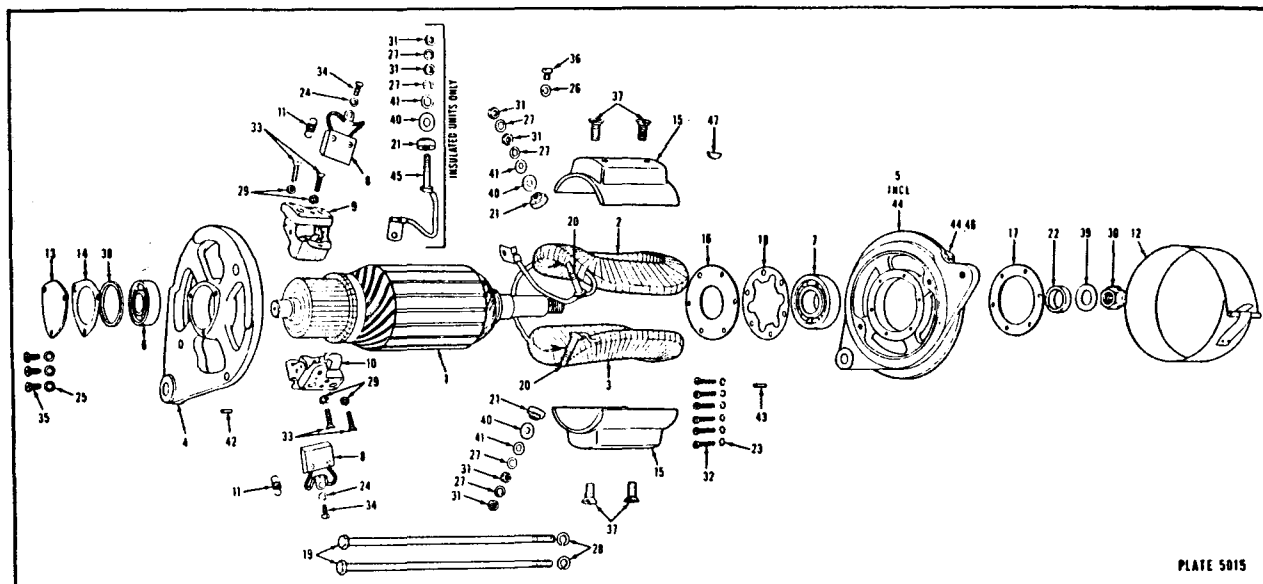

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Cover Band	Plate — Cover C.E.	Gasket — Cover Plate C.E.	Pole Shoe	Plate — Retainer Inner D.E.	Plate — Retainer Outer D.E.	Gasket — Retainer Plate D.E.	Thru Bolt	Stud — Terminal	Bushing — Terminal	Collar — Outside D.E.
	12	13	14	15	16	17	18	19	20	21	22
1106851.....	1910011	1949594	1835457	1915846	△1931893	△	1910014	1872411	1909988	1909995	1910036
1106852.....	"	"	"	"	"	△	"	"	"	"	"
1106853.....	"	"	"	"	"	△	"	"	"	"	"
1106854.....	"	"	"	"	"	△	"	"	"	"	"
1106855.....	"	"	"	"	"	△	"	"	"	"	"
1106856.....	"	"	"	"	"	△	"	"	"	"	"
1106857.....	"	"	"	"	"	△	"	"	"	"	"
1106858.....	"	"	"	"	"	△	"	"	"	"	"
1106859.....	"	"	"	"	"	1841877	"	1912502	"	"	825254
1106860.....	"	"	"	"	"	"	"	"	"	"	"
1106861.....	"	"	"	"	1866760	"	"	1872411	"	"	1859045
1106862.....	"	"	"	"	"	"	"	"	"	"	1858588
1106863.....	"	"	"	"	"	"	"	"	"	"	1859045
1106864.....	"	"	"	"	"	"	"	"	"	"	1858588
1106865.....	"	1949594	1835457	"	△1931893	△	1910014	"	"	"	1910036
1106866.....	"	"	"	"	"	△	"	"	"	"	"
1106867.....	"	1915847	"	"	"	△	□	"	"	"	"
1106868.....	"	"	"	"	"	△	□	"	"	"	"
1106869.....	"	"	"	"	"	△	□	"	"	"	"
1106870.....	"	"	"	"	"	△	□	"	"	"	"
1106874.....	"	"	"	"	1866760	"	"	"	"	"	1859045
1106875.....	"	1915847	1835457	"	△1931893	△	□1910014	"	"	"	1910036
1106876.....	"	1949594	"	"	"	△	"	"	"	"	"
1106889.....	"	1915847	"	"	△	△	□	"	"	"	"
1106892.....	"	"	"	"	"	△	□	"	"	"	"
1106893.....	"	1949594	"	"	"	△	"	"	"	"	"
1106894.....	"	"	"	"	1866760	"	825260	"	"	"	1859045
1106895.....	1928032	"	"	"	△1931893	△	1910014	"	"	"	1910036
1106896.....	x	1915847	1835457	"	"	△	"	"	"	"	"
1106897.....	1910011	"	"	"	"	△	□	"	"	"	"
1106898.....	1928032	"	"	"	△	△	"	"	"	"	"
1106899.....	1910011	"	"	"	△	△	□	"	"	"	"
1106900.....	1932286	1915847	1914753	1915846	○1931893	○	1915851	1872411	"	"	1910036

*For Pole Shoe—Interpole—see Minor Parts Section.

△1931893 is a Package replacing both Inner and Outer Plates; later units with Inner Plate only use 1946632 Plate.

○1931894 is a Package replacing both Inner and Outer Plates.

□Later units with 4 mounting holes use 1946631 Gasket.

xFor part number see page 4.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	453435	1106851-2-3-4-5-6-7-8; 65-6-7-8-9; 70-5-6; 89; 92-3-5-6
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	138479	1106859; 60
23	Lock Washer—Ball Bearing Retainer Plate Screw—D.E.	1962276	1106861-2-3-4; 74; 94
24	Lock Washer—Brush Lead Attaching Screw	453435	1106851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-4-5-6; 89; 92-3-4-5-6-7-8-9
24	Lock Washer—Brush Lead Attaching Screw	453435	1106900
.....	Lock Washer—C.E. Frame Attaching Screw	9421423	1106853-4-7-8; 65-6-9; 70-5; 89; 97
.....	Lock Washer—D.E. Frame Attaching Screw	9421423	1106861-3-4
25	Lock Washer—End Cover Plate Screw—C.E.	453435	1106851-2-3-4-5-6-7-8; 65-6-7-8-9; 70-5-6; 92-3-6-7-8-9; 900
26	Lock Washer—Ground Screw	9421423	1106896
.....	Lock Washer—Shaft Nut—C.E.	1913743	1106859; 60-1-2-3-4; 74; 94
27	Lock Washer—Terminal Stud	9421423	1106851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-4-5-6; 89; 92-3-4-5-6-7-8-9; 900
28	Lock Washer—Thru Bolt	9421424	1106851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-4-5-6; 89; 92-3-4-5-6-7-8-9; 900
NUTS			
.....	Nut—Ball Bearing Retainer Plate Screw	*432230	1106851-2-3-4-5-6-7-8; 65-6-7-8-9; 70-5; 92-3-5-6
29	Nut—Brush Holder Screw	5024654	1106851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-4-5-6; 89; 92-3-4-5-6-7-8-9
29	Nut—Brush Holder Screw	1914124	1106900
.....	Nut—Cover Band Screw	1935960	1106895-6; 98; 900
.....	Nut—Shaft—C.E.	1915172	1106859; 60-1-2-3-4; 74; 94
30	Nut—Shaft—D.E.	125384	1106851-2-3-4
30	Nut—Shaft—D.E.	443344	1106855-6-7-8; 65-6-7-8-9; 70-5-6; 89; 92-3-5-6-7-8-9
30	Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{1}{4}$ x $\frac{3}{4}$)	1917035	1106859; 60
30	Nut—Shaft—D.E. ($\frac{1}{2}$ -20x $\frac{1}{4}$ x $1\frac{1}{4}$)	1917034	1106859; 60
30	Nut—Shaft—D.E.	1917570	1106861-2-3-4; 74; 94
30	Nut—Shaft—D.E.	453324	1106900
31	Nut—Terminal Stud	134551	1106851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-4-5-6; 89; 92-3-4-5-6-7-8-9
31	Nut—Terminal Stud	116004	1106900
SCREWS			
32	Screw—Ball Bearing Plate—D.E.	*274946	1106851-2-3-4-5-6-7-8; 65-6-7-8-9; 70-5-6; 89; 92-3-5-6-7-8-9
32	Screw—Ball Bearing Retainer Plate—D.E.	5017850	1106859; 60-1-2-3-4; 74; 94
32	Screw—Ball Bearing Retainer Plate—D.E.	274946	1106900
33	Screw—Brush Holder Attaching	453337	1106851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-4-5-6; 89; 92-3-4-5-6-7-8-9; 900
34	Screw—Brush Lead Attaching	1914800	1106851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-4-5-6; 89; 92-3-4-5-6-7-8-9; 900
.....	Screw—C.E. Frame Attaching	274946	1106853-4-7-8; 65-6-9; 70-5; 89; 97
.....	Screw—C.E. Frame Attaching	190739	1106861-3-4
.....	Screw—Cover Band	453479	1106895-6-8; 900
.....	Screw—D.E. Frame Attaching	190739	1106853-4-5-7-8; 60-5-6-9; 70-5; 89; 97
.....	Screw—D.E. Frame Attaching	274946	1106861-3-4
35	Screw—End Cover Plate Attaching—C.E.	1915806	1106851-2-3-4-5-7-8; 65-6; 76; 93
35	Screw—End Cover Plate Attaching—C.E.	1914580	1106867-8-9; 70-5; 89; 92-6-7-8-9; 900
36	Screw—Ground	132243	1106896
.....	Screw—Interpole Shoe	190739	1106853-4-7-8; 60-1-3-4-5-6-9; 70-5; 89; 97
37	Screw—Pole Shoe	1914750	1106851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-4-5-6; 89; 92-3-4-5-6-7-8-9; 900

*Later units with 4 mounting hole Retainer Plate use 273641 Screw.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
WASHERS			
38	Washer—Ball Bearing Space—C.E.	1888761	1106851-2-3-4; 900
38	Spring, Washer—Ball Bearing Space—C.E.	1935334	1106855-6-7-8; 65-6-7-8-9; 70-5-6; 89; 92-3-6-7-8-9
---	Washer—Felt—C.E.	37077	1106859; 60-1-2-3-4; 74; 94-5
---	Washer—Felt—D.E.	825197	1106859; 60-1-2-3-4; 74; 94
39	Washer—Shaft Nut—Plain—D.E.	1872618	1106851-2-3-4-5-6-7-8; 60-5-6-7-8-9; 70-5-6; 89; 92-3-5-6-7-8-9; 900
39	Washer—Shaft Nut—Plain—D.E.	1934383	1106861-2-3-4; 74; 94
40	Washer—Terminal Stud—Insulating	1902746	1106851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-4-5-6; 89; 92-3-4-5-6-7-8-9; 900
41	Washer—Terminal Stud—Plain	1905125	1106851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-4-5-6; 89; 92-3-4-5-6-7-8-9; 900
MISCELLANEOUS			
---	BAFFLE—Oil—D.E.	1920746	1106861-2-3-4; 74; 94
---	CLIP—Terminal	200357	1106900
---	COIL—Interpole	1911366	1106853-4-7-8; 60-3-4-6-9; 70; 89; 97
---	COIL—Interpole	1912631	1106861-5; 75
---	COLLAR—Oil Thrower—Inside—D.E.	1912513	1106859; 60
---	COLLAR—Space—Inside—C.E.	1912501	1106859; 60-1-2-3-4; 74; 94-5
---	CUP—Felt Retainer—C.E.	37078	1106859; 60-1-2-3-4; 74; 94-5
---	CUP—Felt Retainer—D.E.	825196	1106859; 60-1-2-3-4; 74; 94
---	CUP—Grease—C.E.	805579	1106851-2-3-4-5-7-8; 65-6; 76; 93
42	Dowel PIN—C.E.	809062	1106851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-4-5-6; 92-3-4-5-6-8-9
43	Dowel PIN—D.E.	809062	1106851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-4-5-6; 92-3-4-5-6-8-9; 900
---	FAN—C.E.	1872400	1106859; 60-1-2-3-4; 74; 94
---	INSULATOR—Field Coil	1968167	1106856-8-9; 62-3-4-5-7-8-9; 70; 92-4
---	INSULATOR—Inside Interpole Coil	1911351	1106853-4-7-8; 60-1-3-4-5-6-9; 70-5; 89; 97
---	INSULATOR—Interpole Coil (9 $\frac{1}{2}$ x 11)	1911733	1106853-4-7-8; 60-1-3-4-5-6-9; 70-5; 89; 97
---	INSULATOR—Top & Bottom of Interpole Coil	1911350	1106853-4-7-8; 60-1-3-4-5-6-9; 70-5; 89; 97
---	OILER—C.E.	113702	1106867-8-9; 70-5; 89; 92-4-7-9
---	OILER—C.E.	1930634	1106896
44	OILER—D.E.	113702	1106851-2-3-4-5-6-7-8; 65-6-7-8-9; 70-5-6; 89; 92-3-4-7-9
44	OILER—D.E.	1930634	1106896
---	PLUG—Oil Hole—C.E.	1938264	1106895-8; 900
---	PLUG—Oil Hole—D.E.	1938264	1106895-8; 900
---	POLE SHOE—Interpole	1911348	1106853-4-7-8; 60-1-3-4-5-6-9; 70-5; 89; 97
---	RING—Bearing Clamp (Rubber)—C.E.	1929959	1106867; 95
45	STUD (& Lead)—Terminal	1910880	1106851-2-5-6-9; 62-7-8; 74-6; 92-3-4-5-8-9; 900
---	WICK—Oil—C.E.	1947350	1106867-8-9; 70-5; 89; 92-4-5-6-7-8-9; 900
46	WICK—Oil—D.E.	1947350	1106851-2-3-4-5-6-7-8; 65-6-7-8-9; 70-5-6; 89; 92-3-4-5-6-7-8-9; 900
---	Woodruff KEY—C.E.	124545	1106859; 60-1-2-3-4; 74; 94
47	Woodruff KEY—D.E.	124548	1106851-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-4-5-6; 89; 92-3-4-5-6-7-8-9; 900


Later units (with rectangular clamp groove) require Part No. 1963355.

xGenerators indicated can be or may have been reoperated by application of Package No. 1953815 to increase brush life. Brushes are longer and springs are designed to accommodate them.

Reoperated Generators can be identified by type of cover for frame windows (Non-reoperated units have circular cover band; Reoperated units have four separate cover plates).

For parts order as follows (complete reoperation 1953815 Package)

Part Name	Non-Reoperated	Reoperated
Brush	1906911	1946406 (2 req'd)
Brush Holder (Insul.)	1909989	1948394
Brush Holder (Ground)	1909993	1948400
Brush Spring	1910033	1948396 (2 req'd)
Cover Band (or Plate)	1928032	1953862 (4 req'd)
Gasket (Cover Plate)	-----	1953861 (4 req'd)
Screw (Cover Plate)	-----	121749 (8 req'd)
Lock Washer (Cover Plate)	-----	131182 (8 req'd)

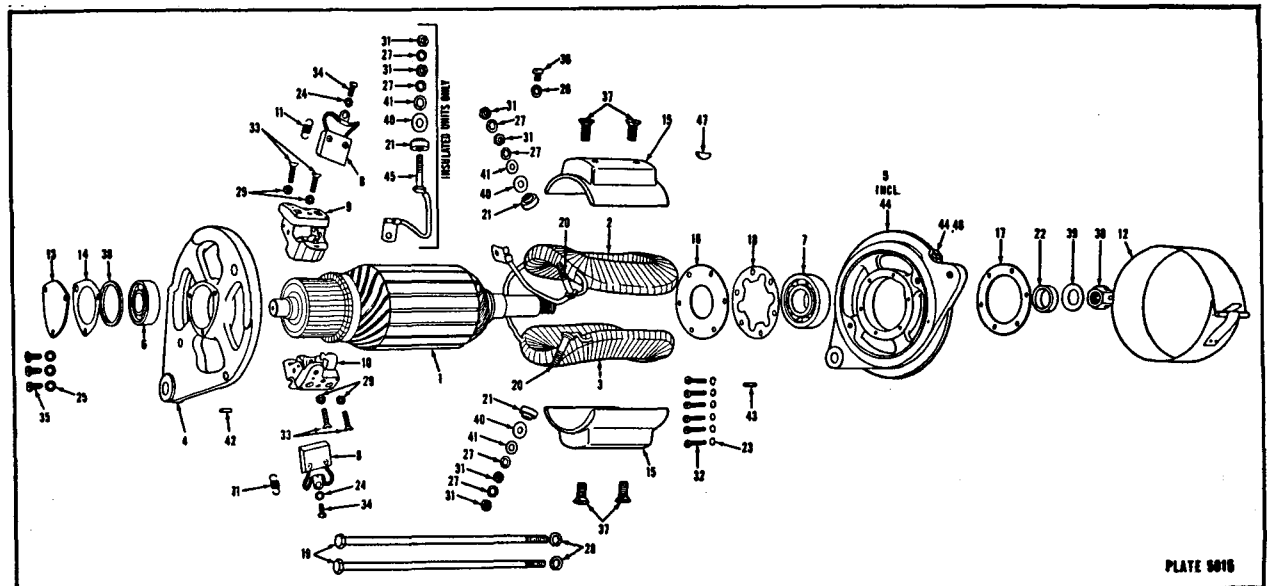

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil — R.H.	Field Coil — L.H.	Frame — C.E.	Frame — D.E.	Ball Bearing — C.E.	Ball Bearing — D.E.	Brush	Holder — Brush — Insulated	Holder — Brush — Grounded	Spring — Brush
	1	2	3	4	5	6	7	8	9	10	11
1106904.....	1926461	1964187		1915258	1960657	954685	908605	x	x	x	x
1106907.....	1937419	"		1928104	1928103	"	"	1906911	1909989		1910033
1106909.....	"	"		1911261	1911262	954217	"	x	x	x	x
1106910.....	1910073	"		1930863	1930411	954685	"	x	x	x	x
1106911.....	1930925	"		1930410	"	"	"	x	x	x	x
1106913.....	1937419	"		1911261	1932067	954259	"	x	x	x	x
1106914.....	"	"		1922024	1922023	954685	"	x	x	x	x
1106915.....	1940415	1929362	1929535	1914501	1910013	"	"	x	x	x	x
1106916.....	1948751	1964187		1934453	"	"	"	x	x	x	x
1106918.....	1930925	"		1935272	1935271	"	"	x	x	x	x
1106919.....	1940415	"		1917735	1936580	"	"	x	x	x	x
1106920.....	1931276	"		1934453	1910013	"	"	x	x	x	x
1106921.....	1939563	"		1957549	1930411	"	"	x	x	x	x
1106922.....	1911361	"		1914501	1910013	"	"	x	x	x	x
1106923.....	1946573	"		1923689	1913481	908503	"	x	x	x	x
1106924.....	1937419	"		1928104	1928103	954685	"	x	x	x	x
1106926.....	1939563	"		1957548	1944658	"	"	x	x	x	x
1106927.....	1937419	"		1945740	1910013	"	"	x	x	x	x
1106928.....	"	"		1945928	1945930	"	"	x	x	x	x
1106929.....	1930925	"		1946768	1911262	"	"	x	x	x	x
1106930.....	1948387	"		1952811	1948384	907055	907054	1946406	1948394	1948400	1948396
1106931.....	1926461	"		1915258	1948917	954685	908605	x	x	x	x
1106932.....	1937419	"		1911261	1911262	954217	"	x	x	x	x
1106933.....	1952018	"		1952016	1952015	907196	907351	1946406	1948394	1948400	1948396
1106934.....	1937419	"		1951062	1951061	954685	908605	x	x	x	x
1106935.....	1931276	"		1951495	"	"	"	x	x	x	x
1106936.....	1948751	"		"	"	"	"	x	x	x	x
1106937.....	1937419	"		1914501	1910013	"	"	x	x	x	x
1106940.....	"	"		1955975	1911262	954217	"	x	x	x	x
1106941.....	1957300	"		1960848	1957292	907055	907054	1946406	1948394	1948400	1948396
1106942.....	1930925	"		1951477	1910013	954685	908605	"	"	"	"
1106943.....	1948387	"		1952811	1948384	907055	907054	1946406	1948394	1948400	1948396
1106944.....	1926461	"		1960655	1960657	954685	908605	1906979	1909989	1909993	1910033
1106945.....	1952018	"		1960540	1960539	907196	907351	1946406	1948349	1948400	1948396
1106946.....	"	"		1959207	1959206	"	"	"	"	"	"

xFor part numbers see page 5.

°Two coil set

°See footnote page 5

°See footnote page 6

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
36	SCREWS—Continued		
—	Screw—Ground.....	132243	1106909-10-13-14-15-16-18-19; 20-2-3-4-9; 30-2-3-4-5-6-7; 40-2-3-4-5-6
—	Screw—Plate & Nut—C.E. Cover Attaching	453282	1106921; 30; 43
37	Screw—Pole Shoe.....	1914750	1106904-7-9-10-11-13-14-15-16-18-19; 20- 1-2-3-4-6-7-8-9; 30-1-2-3-4-5-6-7; 40-1- 2-3-4-5-6
—	Screw—Terminal Plate Attaching.....	453659	1106927
—	Screw—Terminal Shield Attaching.....	453302	1106927
—	Screw—Terminal Shield Cover Attaching.....	453804	1106927
—	Screw—Thru Bolt Damper	273656	1106930-3; 41-3-5-6
38	WASHERS		
—	Spring, Washer—Ball Bearing Space—C.E.....	1935334	1106907-9-10-13-14-15-19; 22-4-7-8; 32-4-7; 40
—	Washer—End Cover Plate Attaching—C. E.	1913830	1106943-4
—	Washer—End Cover Plate Screw.....	807295	1106930
—	Washer—Felt—C.E.....	37077	1106904-11-18; 23-9; 31; 42-4
—	Washer—Felt—D.E.....	825197	1106904; 31; 44
—	Washer—Plain—Fan Cover—C.E.....	807295	1106921-6
—	Washer—Plain—Terminal Plate Attaching Screw.....	1913784	1106927
—	Washer—Shaft—Inside—D.E.....	1948407	1106930-3; 41-3-5
39	Washer—Shaft Nut—Plain—D.E.....	1872618	1106904-7-9-10-11-13-14-15-16-18-19; 20- 1-2-4-6-7-8-9; 30-1-2-3-4-5-6-7; 40-1-2- 3-4-5-6
40	Washer—Terminal Stud—Insulating.....	1902746	1106904-7-9-10-11-13-14-15-16-18-19; 20- 1-2-4-6-7-8-9; 30-1-2-3-4-5-6-7; 40-1-2- 3-4-5-6
41	Washer—Terminal Stud—Plain.....	1905125	1106904-7-9-10-11-13-14-15-16-18-19; 20- 1-2-4-6-7-8-9; 30-1-2-3-4-5-6-7; 40-1-2- 3-4-5-6
—	MISCELLANEOUS		
—	BAFFLE—Oil—D.E.....	1907768	1106904-9; 31; 41-4
—	BEARING (Bushing)—In Mounting Hinge—C.E.....	1935270	1106918
—	BEARING (Bushing)—In Mounting Hinge—D.E.....	1935270	1106918
—	BEARING (Bushing)—In Mounting Hinge—D.E.....	1961872	1106933; 46
—	BEARING (Bushing)—In Mtg. Hinge—D.E. & C.E.....	1948385	1106930; 43
—	BUSHING—Hinge—D.E.....	1957670	1106946
—	BUTTON—Plug—C.E.....	432330	1106944
—	CLIP—Terminal.....	200357	1106937
—	COLLAR—Fan—C.E.....	1913689	1106930
—	COLLAR—Space—Inside—C.E.....	1912501	1106904-11-18; 29; 31; 42-4
—	COLLAR—Space—Inside—D.E.....	1940765	1106923
—	COLLAR—Spacer—C.E.....	1938263	1106921-6
—	COLLAR—Spacer—C.E.....	1948404	1106930; 43
—	COLLAR—Fan Spacer—C. E.	1957296	1106941
—	COVER—Fan—C.E.....	1957547	1106921
—	COVER—Terminal Shield.....	1920691	1106927
—	COVER (& Spacer) Assembly—C.E.....	1957546	1106926
—	COVER (& Spacer) Assembly—C.E.....	1960653	1106944
—	COVER (& Spacer) Assembly—C. E.	1952637	1106930; 43
—	CUP—Felt Retainer—C.E.....	37078	1106904-11-18; 32-9; 31; 42-4
—	CUP—Felt Retainer—D.E.....	825196	1106904; 31; 44
—	CUP—Grease—C.E.....	805579	1106909-13; 32
42	Dowel PIN—Ball Bearing—D.E.....	809062	1106930; 43
42	Dowel PIN—C.E.....	809062	1106904-7-9-10-11-13-14-15-16-18-19; 20- 1-2-3-4-6-7-8-9; 30-1-2-3-4-5-6-7; 40-1- 2-3-4-5-6
43	Dowel PIN—D.E.....	809062	1106904-7-9-10-11-13-14-15-16-18-19; 20- 1-2-3-4-6-7-8-9; 30-1-2-3-4-5-6-7; 40-1- 2-3-4-5-6
—	FAN—C.E.....	1872400	1106904; 23; 31; 44
—	FAN—C.E.....	1938268	1106921-6
—	FAN—C.E.....	1955256	1106930; 43
—	FAN—C. E.	1957301	1106941
—	GASKET—Ball Bearing Retainer Plate—C.E.....	1938262	1106921-6
—	GASKET—Ball Bearing Retainer Plate—C.E.....	1948279	1106930; 43
—	GASKET—Ball Bearing Retainer Plate—C. E.	1957299	1106941
—	GASKET—Ball Bearing Retainer Plate—C.E.....	1952020	1106933; 44-5
—	GASKET—Cover Plate.....	1948401	1106930-3; 41-3-5-6
—	GASKET—Outer Ball Bearing Retainer Plate—D.E.....	1948276	1106930-3; 43-5-6

©If present Ball Bearing Retainer Plate does not make metal to metal contact with outer bearing race, order part No. 1948274 Retainer Plate Assem. (Includes gasket) *See footnote page 6.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
—	MISCELLANEOUS—Continued		
—	INSULATOR—Field Coil.....	1968167	1106904-7; 13-14-16; 20-1-4-6-7-8-9; 31-3-4-5-7; 40-1-2-3-4-5-6
—	LEAD—Terminal to Brush.....	1929232	1106927
—	OILER—C.E.....	113702	1106904-7-9; 14-15-16-19; 20-2-3-4-7-8; 31-4-5-6-7; 40-2-4
44	OILER—D.E.....	113702	1106904-7; 13-14-15-16-19; 20-3-4-7-8-9; 31-2-4-5-6-7; 40-2-4
—	PLATE—Ball Bearing Retainer—C.E.....	1938259	1106921-6
—	PLATE—Ball Bearing Retainer—C.E.....	1948277	1106930; 43
—	PLATE—Ball Bearing Retainer—C.E.....	1952021	1106933; 44-5
—	PLATE—Ball Bearing Retainer—D.E.....	1946632	1106930
—	PLATE—Mounting—Terminal Shield.....	1920676	1106927
—	PLATE & Nut—C.E. Cover.....	1938266	1106921; 43
—	PLATE—Terminal Assembly Support.....	1923837	1106927
—	PLATE—Retainer & Seal—Ball Bearing C.E.	1957294	1106941
—	PLUG—Oil Hole—C.E.....	1938264	1106910-11-18; 21
—	PLUG—Oil Hole—D.E.....	1938264	1106910-11-18; 26
—	PLUG—Oil Hole—Screw—C.E.....	1938264	1106921-6
—	RING—Bearing Clamp (Rubber)—C.E.....	1929959	1106911-16-18; 20-1-6-9; 30-3-5-6; 41-2-3-4-5-6
—	RING—Snap—Retainer—Shaft—D.E.....	1948389	1106930-3; 43
—	SEAL—Ball Bearing—D.E.....	1948284	1106930; 41-3
—	SEAL—Ball Bearing—D.E.....	1960983	1106904; 31; 44
—	SHIELD—Terminal.....	1920680	1106927
45	STUD (& Lead)—Terminal.....	1910880	1106907; 18
—	Terminal PLATE Assembly.....	1920677	1106927
—	WEDGE—Thru Bolt.....	1947440	1106937
—	WICK—Oil—C.E.....	1947350	1106904-7-9-10-11-13-14-15-16-18-19; 20-1-2-3-4-6-7-8; 31-4-5-6-7; 40-2-4
46	WICK—Oil—D.E.....	1947350	1106904-7-10-11-14-15-16-18-19; 20-1-2-3-4-6-7-8-9; 31-2-4-5-6-7; 40-2-4
—	Woodruff KEY—C.E.....	124545	1106904; 21; 31; 44
—	Woodruff KEY—C.E.....	124542	1106923-6
—	Woodruff KEY—C.E.....	427261	1106930; 41-3
47	Woodruff KEY—D.E.....	124548	1106904-7-9-10-11-13-14-15-16-18-19; 20-1-2-3-4-6-7-8-9; 30-1-2-3-4-5-6-7; 40-1-2-3-4-5-6

^aSee footnote page 6.

^bLater units (with rectangular Clamp Groove) require Part No. 1963355.

xGenerators indicated can be or may have been reoperated by application of Package No. 1953815 to increase brush life. Brushes are longer and springs are designed to accommodate them.

Reoperated Generators can be identified by type of cover for frame windows (Non-reoperated units have circular cover band; Reoperated units have four separate cover plates).

For parts order as follows (complete reoperation 1953815 Package)

Part Name	Non-Reoperated	Reoperated
Brush	^a 1906911	1946406 (2 req'd)
Brush Holder (Insul.)	1909989	1948394
Brush Holder (Ground)	1909993	1948400
Brush Spring	1910033	1948396 (2 req'd)
Cover Band (or Plate)	^b 1910011	1953862 (4 req'd)
Gasket (Cover Plate)		1953861 (4 req'd)
Screw (Cover Plate)		453418 (8 req'd)
Lock Washer (Cover Plate)		453844 (8 req'd)

^aFor 1106929; 34-7; 42 use 1906979.

^bFor 1106910-11-18; 21-6-7 use 1928032;

For 1106932; 40 use 1949597.

^cGenerator C. E. may be converted to roller bearing by application of Package No. 1966546 (for model 1106934) or Package No. 1966547 (for model 1106945)

For parts replacement after conversion (x after Model No.), order as follows:


	Model 1106934	Model 1106945 (Includes Indented Parts)
C.E. FRAME	1966546	1966547
Oil Seal—C.E.	1966568	1966568
Outer Race	7451640	7451640
Plate—End Cover—C.E.	1915847	1952021
Inner Race	7451641	7451641
Gasket—End Cover—C.E.	1835457	1952020

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

^aGenerator C.E. may be converted to roller bearing by application of Package No. 1968085 (for model 1106941). For parts replacement after conversion (x after model); order as follows:

	Model
C.E. Frame	1968098
Oil Seal—C.E. (Inner)	1966554
Outer Race	7451640
Inner Race	7451641
Fan—C.E.	1968100
Plate—Bearing Retainer—C.E.	1968102
Collar—Fan Spacer—C.E.	1968104

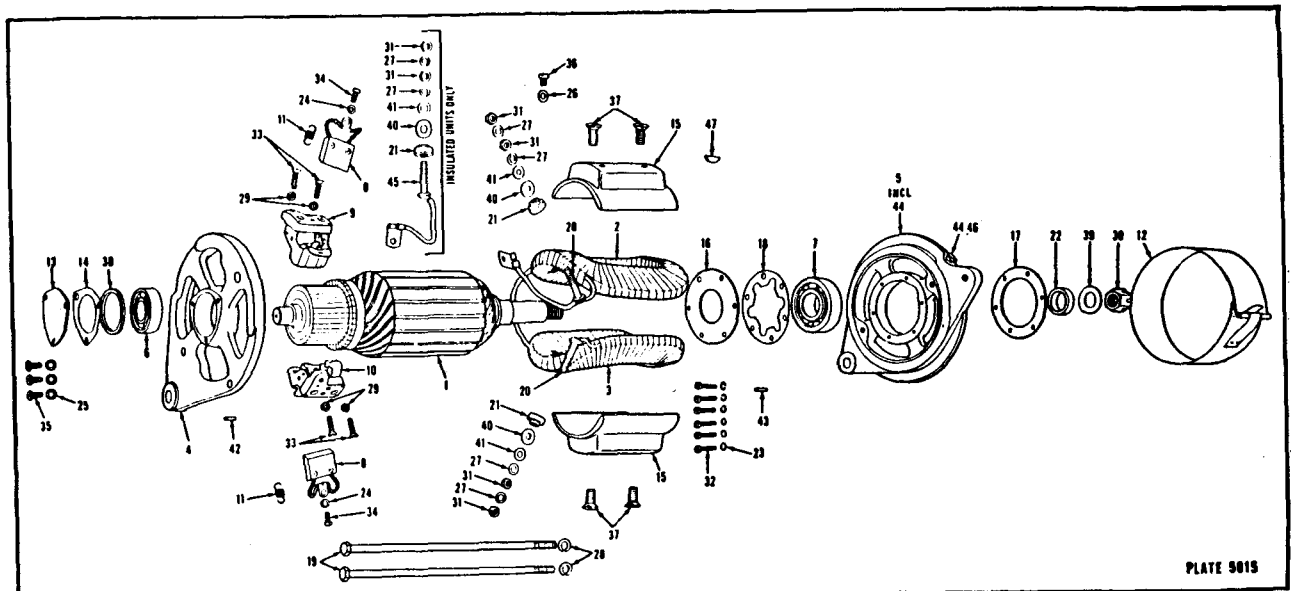


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil R.H.	Field Coil L.H.	Frame C.E.	Frame D.E.	Ball Bearing C.E.	Ball Bearing D.E.	Brush	Holder Brush Insulated	Holder Brush Grounded	Spring Brush
	1	2	3	4	5	6	7	8	9	10	11
1106948.....	1937419	°1964187		1963960	1963959	954685	908605	X	X	X	X
1106949.....	1948387	"		1952811	1948384	907055	907654	1946406	1948394	1948400	1948396
1106950.....	1966555	"		1966552	1951061	▲	908605	X	X	X	X
1106951.....	1911361	°1964190		1928104	1928103	954685	"	1906911	1909989		1910033
1106952.....	1930412	"		1935272	1935271	"	"	X	"		
1106953.....	1911361	"		1935274	"	"	"	X	"		"
1106954.....	1911361	"		1911261	1932067	954217	"	1906911	"		"
1106955.....	1938256	"		1957549	1930411	954685	"	X	"		"
1106956.....	1911367	°1964193		1939765	1922183	"	"	1906911	"		"
1106957.....	"	"		1922129	1939764	"	"	"	"		"
1106958.....	1911361	°1964190		1927888	1944658	"	"	"	"		"
1106959.....	1940763	"		1923689	1913481	908503	"	"	"		"
1106960.....	"	°1964193		"	"	"	"	"	"		"
1106961.....	1912632	°1964190		1914619	1911360	954685	"	1906979	"		"
1106967.....	1930412	"		1946768	1911262	"	"	X	X	X	X
1106968.....	1912632	"		1914501	1910013	"	"	X	X	X	X
1106969.....	1911361	"		1911261	1911262	954217	"	1906911	1909989		1910033
1106970.....	1911361	"		"	"	"	"	"	"		"
1106971.....	1950396	"		1952811	1948384	907055	907351	1946406	1948394	1948400	1948396
1106972.....	1930412	"		1951477	1910013	954685	908605	1906979	1909989		1910033
1106973.....	1950396	"		1952811	1948384	907055	907054	1946406	1948394	1948400	1948396
1106975.....	1911367	°1964193		1958815	1958814	954685	908605	1906911	1909989		1910033
1106978.....	1966555	°1964187		1966552	1951061	▲	"	1946406	1948394	1948400	1967374
1106979.....	"	° "		1967458	1963959	▲	"	"	"	"	"
1106980.....	"	° "		1970173	1951061	▲	"	1946406	"	"	"

xFor correct part number see page 4.

▲Roller Bearing—7451640 Outer Race, 7451641 Inner Race.

°Two Coil Set for Interpole, if required, see Minor Parts Section.

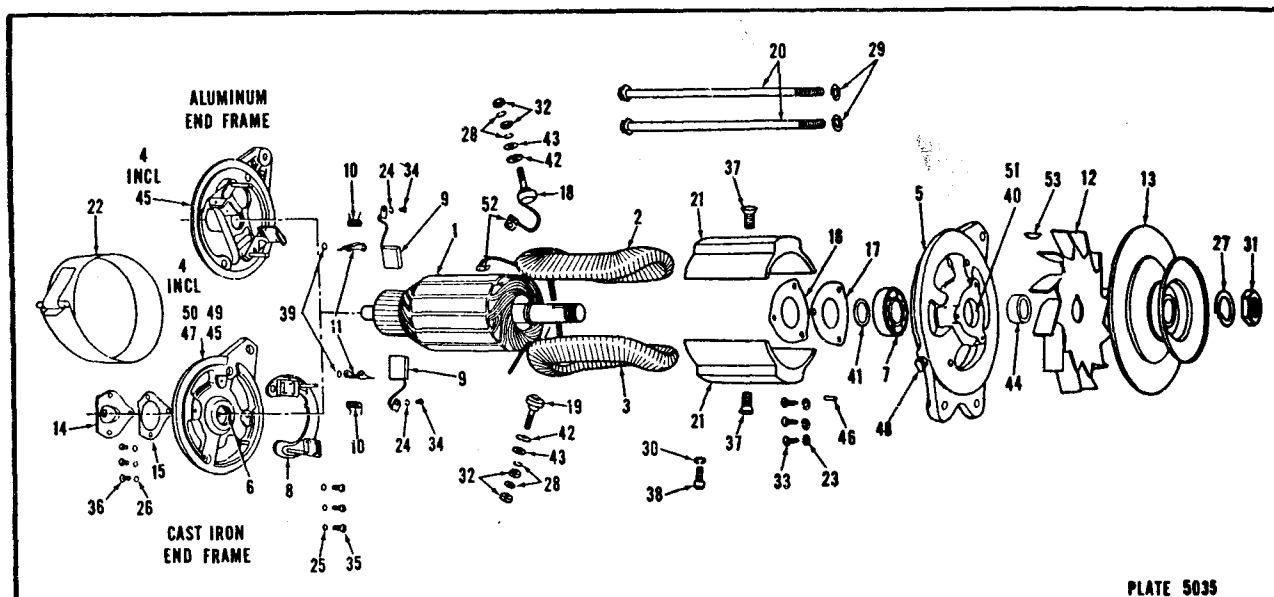

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Armature	Field Coil R.H.	Field Coil L.H.	Frame C.E.	Frame D.E.	Ball Bearing C.E.	Ball Bearing D.E.	Plate Brush	Brush	Spring Brush	Arm Brush
	1	2	3	4	5	6	7	8	9	10	11
1106976.....	1927074	°1967456		1927066	1929786	954685	908604		1906977	1878184	1927583
1106977.....	"	"		1929782	"	"	"		"	"	"
1106981.....	1929360	1929362	1929535	1927066	"	"	"		"	"	"
1106982.....	1932349	"	"	1932347	"	904751	"		"	"	"
1106984.....	1929360	"	"	1929782	"	954685	"		"	"	"
1106985.....	1927074	°1964184		1927066	"	"	"		"	"	"

°Two Coil Set.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw.....	453435	1106976-7; 81-2-4-5
24	Lock Washer—Brush Lead Screw.....	1914816	1106976-7; 81-2-4-5
27	Lock Washer—Shaft Nut—D.E.....	9421428	1106976-7; 81-2-4-5
28	Lock Washer—Terminal Stud.....	9421423	1106976-7; 81-2-4-5
29	Lock Washer—Thru Bolt.....	9421424	1106976-7; 81-2-4-5
30	Lock Washer—Top of Field Frame.....	9421423	1106976-7; 81-2-4-5
NUTS			
31	Nut—Shaft—D.E.....	451079	1106976-7; 81-2-4-5
32	Nut—Terminal Stud.....	134551	1106976-7; 81-2-4-5
SCREWS			
33	Screw—Ball Bearing Retainer Plate—D.E.....	454311	1106976-7; 81-2-4-5
34	Screw—Brush Lead Attaching.....	454329	1106976-7; 81-2-4-5
36	Screw—End Cover Plate—C.E.....	133629	1106976-7; 81-4-5
—	Screw—Oil Hole—D.E.....	1929956	1106977; 84
37	Screw—Pole Shoe.....	1867938	1106976-7; 81-2-4-5
38	Screw—Top of Field Frame.....	132243	1106976-7; 81-2-4-5

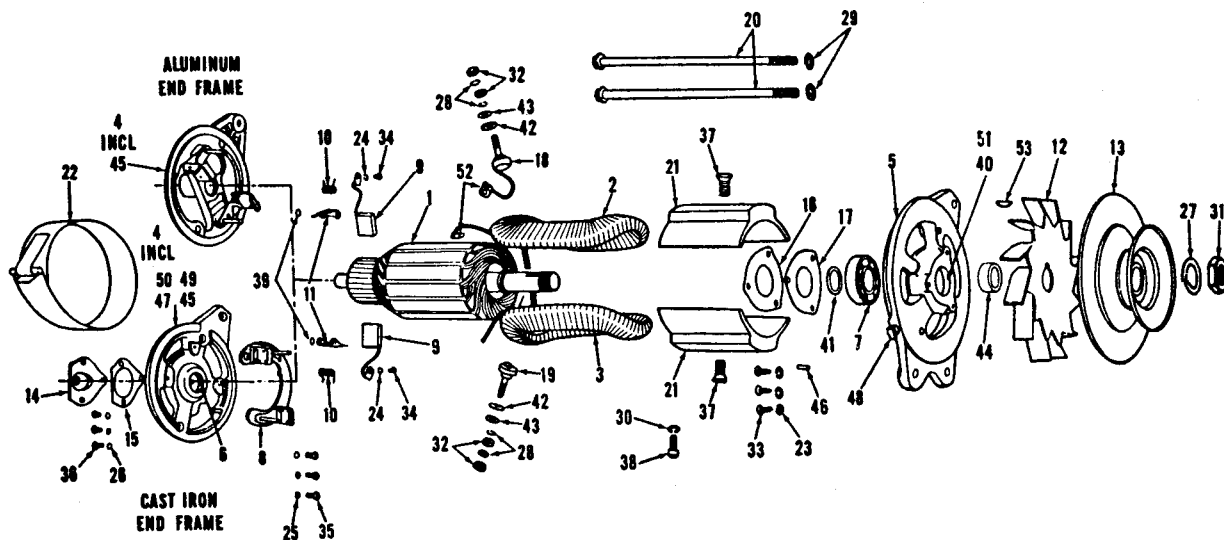


PLATE 5035

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Fan — C.E. or D.E.	Pulley	Plate — Cover — C.E.	Gasket — Cover — Plate	Plate — Bearing Retainer — D.E.	Gasket — Retainer — Plate	Terminal — Stud & Lead	Terminal — Stud Only	Bolt — Thru	Shoe — Pole	Band — Cover
	18	18	14	15	16	17	18	19	20	21	22
1106976	1910036		1927068	1927069	†	1927085		1909988	1927071	1927964	1927072
1106977	"		"	"	†	"		"	"	"	"
1106981	"		"	"	†	"		"	"	"	"
1106982	1910036		1927068	1927069	†	"		"	"	"	"
1106984	"		"	"	†	"		"	"	"	"
1106985			"	"	†	"		"	"	"	"

†Use 1927084 Plate (Inner), 1924666 Plate (Outer).

MINOR PARTS SECTION

Ilus. No.	Name	Part No.	Used on Models
WASHERS			
39	Washer—Brush Arm Space.....	1857412	1106976-7; 81-2-4-5
—	Washer—(Fibre) Oil Hole Screw.....	1841089	1106977; 84
42	Washer—Terminal Stud Insulation.....	1902746	1106976-7; 81-2-4-5
43	Washer—Terminal Stud Plain.....	1905125	1106976-7; 81-2-4-5
MISCELLANEOUS			
—	BUSHING—Insul. Terminal Stud.....	1909995	1106976-7; 81-2-4-5
45	Dowel PIN—C.E.....	809062	1106976-7; 81-2-4-5
46	Dowel PIN—D.E.....	809062	1106976-7; 81-2-4-5
47	OILER—C.E.....	125609	1106976; 81-2-5
47	OILER—C.E.....	1929780	1106977; 84
48	OILER—D.E.....	125609	1106976; 81-2-5
48	OILER—D.E.....	1929780	1106977; 84
—	OH WICK—C.E.....	1927070	1106976-7; 81-4-5
—	OH WICK—D.E.....	1927070	1106976-7; 81-2-4-5
—	RING—Bearing Clamp—C.E. (Rubber).....	1929959	1106982
—	SPRING—Loading—C.E.....	1935334	1106976; 81-5
52	Terminal CLIP—To Brush.....	200357	1106976-7; 81-2-4-5
—	Terminal CLIP—To Ground Brush.....	455455	1106981-4
53	Woodruff KEY—D.E.....	124546	1106976-7; 81-2-4-5

□Later units (with rectangular clamp groove) require Part No. 1963355.

Parts not listed in this Catalog will not be sold separately.

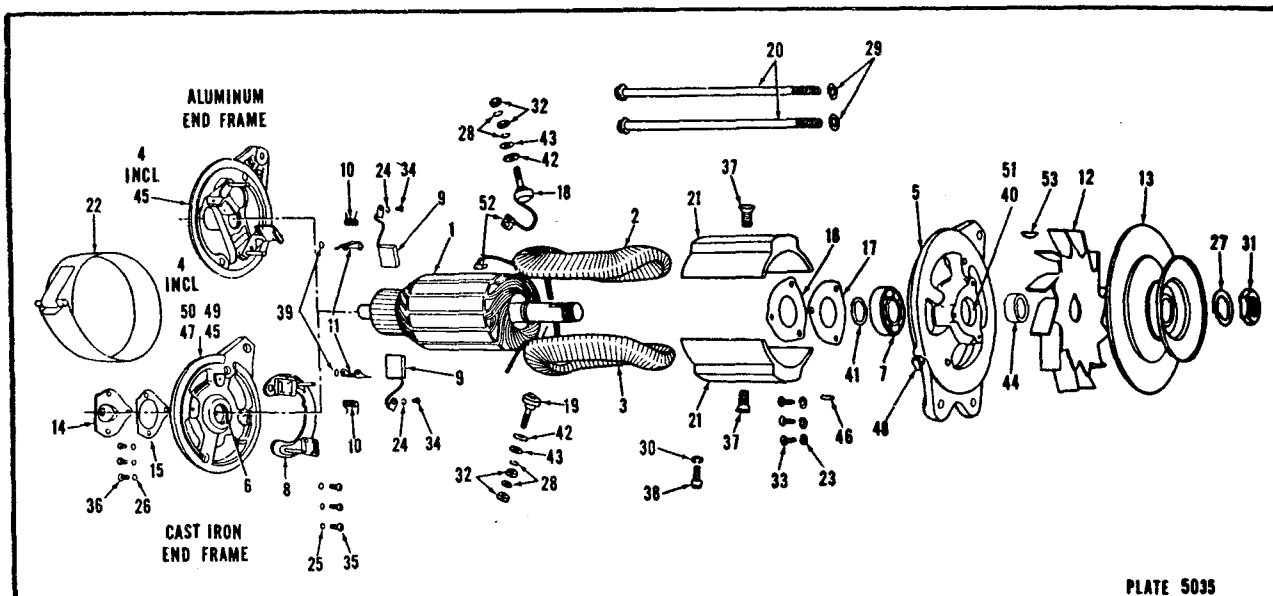


PLATE 5035

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Armature	Field Coil — R.H.	Field Coil — L.H.	Frame — C.E.	Frame — D.E.	Ball Bearing — C.E.	Ball Bearing — D.E.	Plate — Brush	Brush	Spring — Brush	Arm — Brush
	1	2	3	4	5	6	7	8	9	10	11
1106976.....	1927074	°1967456		1927066	1929786	954685	908604		1906977	1878184	1927583
1106977.....	"	"		1929782	"	"	"		"	"	"
1106981.....	1929360	1929362	1929535	1927066	"	"	"		"	"	"
1106982.....	1932349	"	"	1932347	"	904751	"		"	"	"
1106984.....	1929360	"	"	1929782	"	954685	"		"	"	"
1106985.....	1927074	°1964184		1927066	"	"	"		"	"	"

°Two Coil Set.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Ball Bearing Retainer Plate Screw.....	453435	1106976-7; 81-2-4-5
24	Lock Washer—Brush Lead Screw.....	1914816	1106976-7; 81-2-4-5
27	Lock Washer—Shaft Nut—D.E.....	9421428	1106976-7; 81-2-4-5
28	Lock Washer—Terminal Stud.....	9421423	1106976-7; 81-2-4-5
29	Lock Washer—Thru Bolt.....	9421424	1106976-7; 81-2-4-5
30	Lock Washer—Top of Field Frame.....	9421423	1106976-7; 81-2-4-5
NUTS			
31	Nut—Shaft—D.E.....	451079	1106976-7; 81-2-4-5
32	Nut—Terminal Stud.....	134551	1106976-7; 81-2-4-5
SCREWS			
33	Screw—Ball Bearing Retainer Plate—D.E.....	454311	1106976-7; 81-2-4-5
34	Screw—Brush Lead Attaching.....	454329	1106976-7; 81-2-4-5
36	Screw—End Cover Plate—C.E.....	133629	1106976-7; 81-4-5
—	Screw—Oil Hole—D.E.....	1929956	1106977; 84
37	Screw—Pole Shoe.....	1867938	1106976-7; 81-2-4-5
38	Screw—Top of Field Frame.....	132243	1106976-7; 81-2-4-5

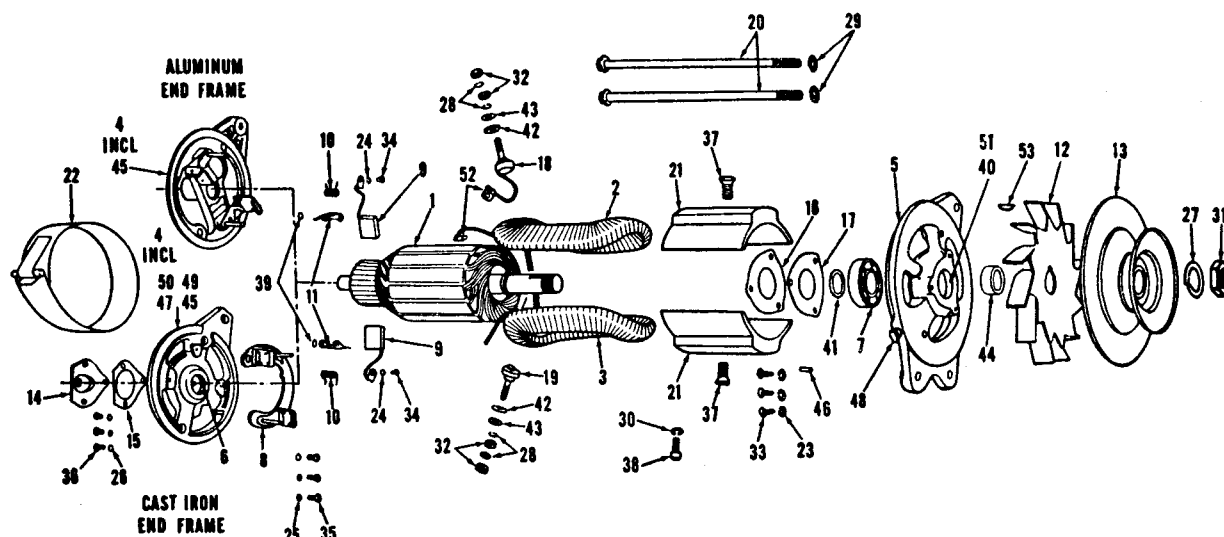


PLATE 5035

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Fan — C.E. or D.E.	Pulley	Plate — Cover — C.E.	Gasket — Cover Plate	Plate — Bearing Retainer — D.E.	Gasket — Retainer Plate	Terminal — Stud & Lead	Terminal — Stud Only	Bolt — Thru	Shoe — Pole	Band — Cover
	19	18	14	15	16	17	18	19	20	21	22
1106976.....			1927068	1927069	†	1927085		1909988	1927071	1927964	1927072
1106977.....	1910036		"	"	†	"		"	"	"	"
1106981.....			"	"	†	"		"	"	"	"
1106982.....	1910036				†	"		"	"	"	"
1106984.....	"		1927068	1927069	†	"		"	"	"	"
1106985.....			"	"	†	"		"	"	"	"


†Use 1927084 Plate (Inner), 1924666 Plate (Outer).

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
WASHERS			
39	Washer—Brush Arm Space.....	1857412	1106976-7; 81-2-4-5
—	Washer—(Fibre) Oil Hole Screw.....	1841089	1106977; 84
42	Washer—Terminal Stud Insulation.....	1902746	1106976-7; 81-2-4-5
43	Washer—Terminal Stud Plain.....	1905125	1106976-7; 81-2-4-5
MISCELLANEOUS			
—	BUSHING—Insul. Terminal Stud.....	1909995	1106976-7; 81-2-4-5
45	Dowel PIN—C.E.....	809062	1106976-7; 81-2-4-5
46	Dowel PIN—D.E.....	809062	1106976-7; 81-2-4-5
47	OILER—C.E.....	125609	1106976; 81-2-5
47	OILER—C.E.....	1929780	1106977; 84
48	OILER—D.E.....	125609	1106976; 81-2-5
48	OILER—D.E.....	1929780	1106977; 84
—	OIL WICK—C.E.....	1927070	1106976-7; 81-4-5
—	OIL WICK—D.E.....	1927070	1106976-7; 81-2-4-5
—	RING—Bearing Clamp—C.E. (Rubber).....	1929959	1106982
—	SPRING—Loading—C.E.....	1935334	1106976; 81-5
52	Terminal CLIP—To Brush.....	200357	1106976-7; 81-2-4-5
—	Terminal CLIP—To Ground Brush.....	455455	1106981-4
53	Woodruff KEY—D.E.....	124546	1106976-7; 81-2-4-5

□Later units (with rectangular clamp groove) require Part No. 1963355.

Parts not listed in this Catalog will not be sold separately.

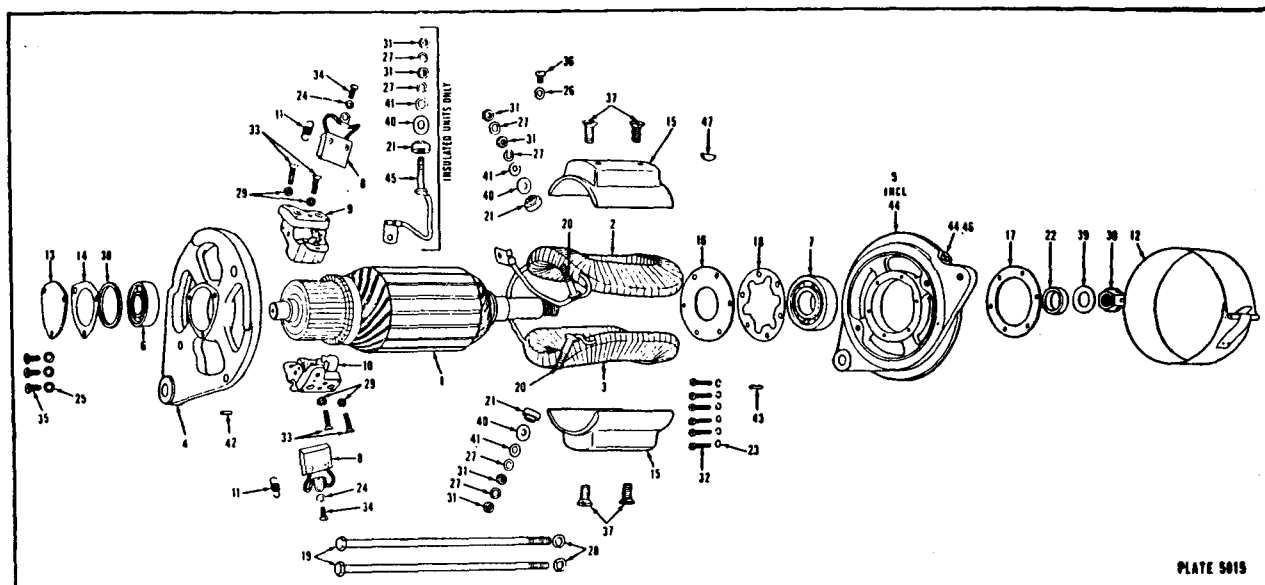

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Armature	Field Coil R.H.	Field Coil L.H.	Frame C.E.	Frame D.E.	Ball Bearing C.E.	Ball Bearing D.E.	Brush	Holder — Brush Insulated	Holder — Brush Grounded	Spring — Brush
	1	2	3	4	5	6	7	8	9	10	11
1106986.....	1940415	°1964184		1914501	1910013	954685	908605	X	X	X	X
1106987.....	1911361	"		"	"	"	"	X	X	X	X
1106989.....	1936778	"		"	1937468	"	"	X	X	X	X
1106990.....	1940415	"		1917735	1936580	"	"	X	X	X	X
1106991.....	1936778	"		1914501	1910013	"	"	X	X	X	X
1106993.....	1940415	"		1914598	1910838	"	"	X	X	X	X
1106994.....	1945062	"		1914501	1910013	"	"	X	X	X	X
1106995.....	1948751	"		1934453	"	"	"	X	X	X	X
1106996.....	1940415	"		1928104	1928103	"	"	X	X	X	X
1106997.....	1936778	"		1914501	1910013	"	"	X	X	X	X
1106998.....	1952037	"		1952016	1952015	907196	907351	1946406	1948394	1948400	1948396
1106999.....	1952035	"		1957550	1952036	954685	908605	X	X	X	X
.....											
.....											
.....											
.....											
.....											

°Two Coil Set

xGenerators indicated can be or may have been reoperated by application of Package No. 1953815 to increase brush life. Brushes are longer and springs are designed to accommodate them.

Reoperated Generators can be identified by type of cover for frame windows (Non-reoperated units have circular cover band; Reoperated units have four separate cover plates).

For parts order as follows (complete reoperation 1953815 Package)

Part Name	Non-Reoperated	Reoperated
Brush	^1906911	1946406 (2 req'd)
Brush Holder (Insul.)	1909989	1948394
Brush Holder (Ground)	1909993	1948400
Brush Spring	1910033	1948396 (2 req'd)
Cover Band (or Plate)	□1933978	1953862 (4 req'd)
Gasket (Cover Plate)		1953861 (4 req'd)
Screw (Cover Plate)		121749 (8 req'd)
Lock Washer (Cover Plate)		131182 (8 req'd)

^For 1106986, 1106993, 1106995 use 1906979.

□For 1106999 use 1928032.

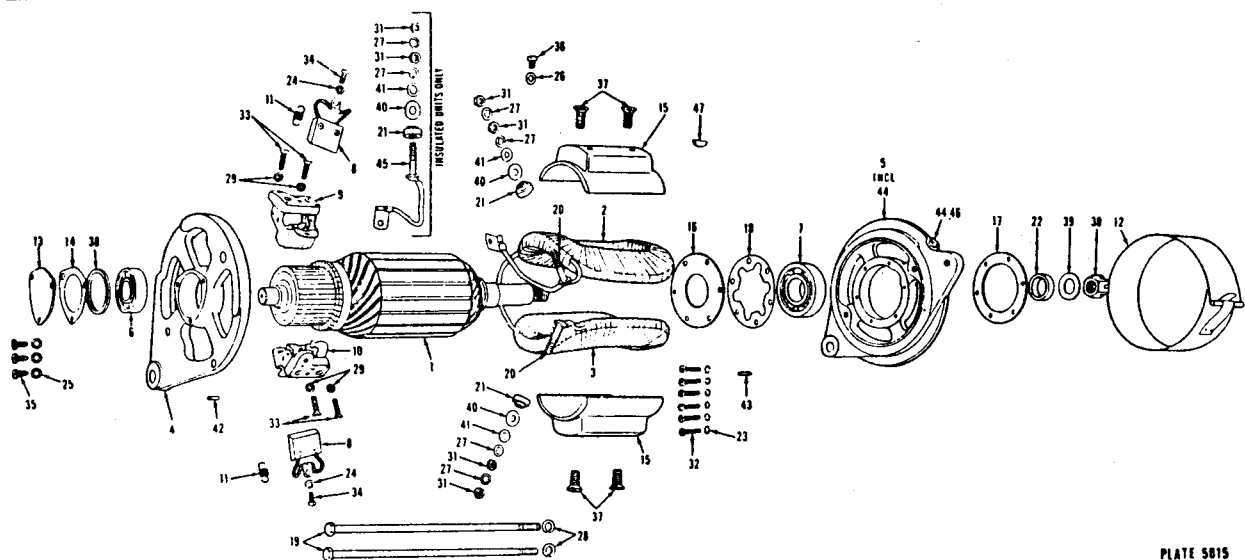


PLATE 5815

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cover Band	Plate — Cover C.E.	Gasket — Cover Plate C.E.	Pole Shoe	Plate — Retainer Inner D.E.	Plate — Retainer Outer D.E.	Gasket — Retainer Plate D.E.	Thru Bolt	Stud — Terminal	Bushing — Terminal	Collar — Outside D.E.
	12	13	14	15	16	17	18	19	20	21	22
1106986.....	X	1910039	1835457	1927964	Δ	Δ	*1910014	1872411	1909988	1909995	1910035
1106987.....	X	"	"	"	Δ	Δ	*"	"	"	"	"
1106989.....	X	"	"	1915846	Δ	Δ	*"	"	"	"	"
1106990.....	X	"	"	1927964	Δ	Δ	*"	"	"	"	"
1106991.....	X	"	"	"	Δ	Δ	*"	"	"	"	"
1106993.....	X	"	"	"	Δ	Δ	*"	"	"	"	"
1106994.....	X	"	"	"	Δ	Δ	*"	"	"	"	"
1106995.....	X	"	"	"	1954873	Δ	1946631	"	"	"	"
1106996.....	X	"	"	"	Δ	Δ	*1910014	"	"	"	"
1106997.....	X	"	"	"	1954873	Δ	1946631	"	"	"	"
1106998.....	□1948402	1952021	1952020	1927964	"	1948274	□1948276	"	"	"	1948043
1106999.....	X	"	"	"	Δ	Δ	1910014	"	"	"	1910035

□If present ball bearing retainer plate does not make metal to metal contact with outer bearing race, order Part No. 1948274 Retainer Plate Assem. (Includes Gasket)

Δ1931893 is a package replacing both inner and outer plates; later units w/inner plate only use 1946632 Plate.

*Later units w/4 mounting holes use 1946631 Gasket.

□Two plates required.

xFor part number see page 1.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
—	Lock Washer—Ball Bearing Plate—D.E.	453435	1106995-6-7-8
—	Lock Washer—Brush Cover Plate Attaching Screw	453844	1106998
24	Lock Washer—Brush Lead Attaching Screw	453435	1106986-7-9; 90-1-3-4-5-6-7-8-9
—	Lock Washer—C.E. Cover Attaching	453435	1106999
25	Lock Washer—End Cover Plate Screw—C.E.	453435	1106986-7-9; 90-1-3-4-8-9
—	Lock Washer—Fan Attaching Screw	1914579	1106989
—	Lock Washer—Ground Screw	9421423	1106989; 90-1-4-5-6-7-8-9
—	Lock Washer—Shaft Nut—C.E.	1913743	1106999
—	Lock Washer—Shaft Nut—D.E.	1872618	1106995-6-7-8
27	Lock Washer—Terminal Stud	9421423	1106986-7-9; 90-1-3-4-5-6-7-8-9
28	Lock Washer—Thru Bolt	9421424	1106986-7-9; 90-1-3-4-5-6-7-8-9
—	Lock Washer—Thru Bolt Damper Screw	9421423	1106998
NUTS			
29	Nut—Brush Holder Screw	5024654	1106986-7-9; 90-1-3-4-5-6-7-8-9
—	Nut—Cover Band	1935960	1106999
—	Nut—Shaft—C.E.	1915172	1106999
30	Nut—Shaft—D.E.	9418881	1106986-7-9; 90-1-3-4-5-6-7-8-9
31	Nut—Terminal Stud	134551	1106986-7-9; 90-1-3-4-5-6-7-8-9
SCREWS			
32	Screw—Ball Bearing Plate—D.E.	*274946	1106986-7-9; 90-1-3-4-8-9
32	Screw—Ball Bearing Plate—D.E.	9413363	1106995-6-7
—	Screw—Brush Cover Plate Attaching	453418	1106998
33	Screw—Brush Holder Attaching	453337	1106986-7-9; 90-1-3-4-5-6-7-8-9
34	Screw—Brush Lead Attaching	1914800	1106986-7-9; 90-1-3-4-5-6-7-8-9
—	Screw—C.E. Cover Attaching	454308	1106999
—	Screw—Cover Band	453479	1106999
35	Screw—End Cover Plate Attaching—C.E.	1914580	1106986-7-9; 90-1-3-4-8-9
—	Screw—Fan Attaching	453336	1106989
—	Screw—Ground—In Frame	132243	1106989; 90-1-4-5-6-7-8-9
—	Screw—Oil Plug—C.E.	1938264	1106999
—	Screw—Oil Plug—D.E.	1924985	1106999
—	Screw—Plate Attaching to C.E. Cover	453282	1106999
37	Screw—Pole Shoe	1914750	1106989; 90
37	Screw—Pole Shoe	1867938	1106986-7; 91-3-4-5-6-7-8-9
—	Screw—Thru Bolt Damper	273656	1106998
WASHERS			
38	Spring, Washer—Ball Bearing Space—C.E.	1935334	1106986-7-9; 90-1-3-4-6-7
—	Washer—C.E. Cover Attaching	807295	1106999
—	Washer—Inside—D.E.	1948407	1106998
39	Washer—Shaft Nut—Plain—D.E.	1872618	1106986-7-9; 90-1-3-4-9
40	Washer—Terminal Stud—Insulating	1902746	1106986-7-9; 90-1-3-4-5-6-7-8-9
41	Washer—Terminal Stud—Plain	1905125	1106986-7-9; 90-1-3-4-5-6-7-8-9
MISCELLANEOUS			
—	BUSHING—Mounting Hinge—C.E.	1952017	1106998
—	BUSHING—Mounting Hinge—D.E.	1952017	1106998
—	CLAMP—Bearing—C.E. (Rubber)	1929959	1106995-8-9
—	CLIP—Terminal	200157	1106997
—	CLIP—Terminal—To Brush	200357	1106986-7-9; 90-3-4-5
—	CLIP—Terminal—To Ground Brush	455455	1106986-7-9
—	COLLAR—Space—C.E.	1938263	1106999
—	COVER (& Spacer) Assembly—C.E.	1957547	1106999
42	Dowel PIN—C.E.	809062	1106986-7-9; 90-1-3-4-5-6-7-8-9
43	Dowel PIN—D.E.	809062	1106986-7-9; 91-3-4-6-7-8-9
—	FAN—C.E.	1938268	1106999
—	FAN—D.E.	1910036	1106986-9; 91-3
—	GASKET—Ball Bearing Retainer Plate—C.E.	1938262	1106999
—	GASKET—Brush Cover Plate	1948401	1106998
—	OILER—C.E.	113702	1106986-7-9; 90-1-3-4-5-6-7
44	OILER—D.E.	113702	1106986-7-9; 90-1-3-4-5-6-7
—	PLATE—Ball Bearing Retainer—C.E.	1938259	1106999

*Later units w/4 mounting hole retainer plate use 273641 Screw.

†Later units w/¼-28 Cover Attaching Screws use 190741 Screw, 120380 Lockwasher and 1872057 Plain Washer.

□Later units (with rectangular clamp groove) require 1963355.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
—	PLATE (& Nut)—C.E. Cover.....	1938266	1106999
—	PULLEY—D.E.....	1937183	1106989
—	Snap RING—Armature Stop.....	1948389	1106998
—	WICK—Oil—C.E.....	1947350	1106986-7-9; 90-1-3-4-5-6-7-9
46	WICK—Oil—D.E.....	1947350	1106986-7-9; 90-1-3-4-5-6-7-9
—	Woodruff KEY—C.E.....	124542	1106999
47	Woodruff KEY—D.E.....	124348	1106986-7-9; 90-1-3-4-5-6-7-8-9