


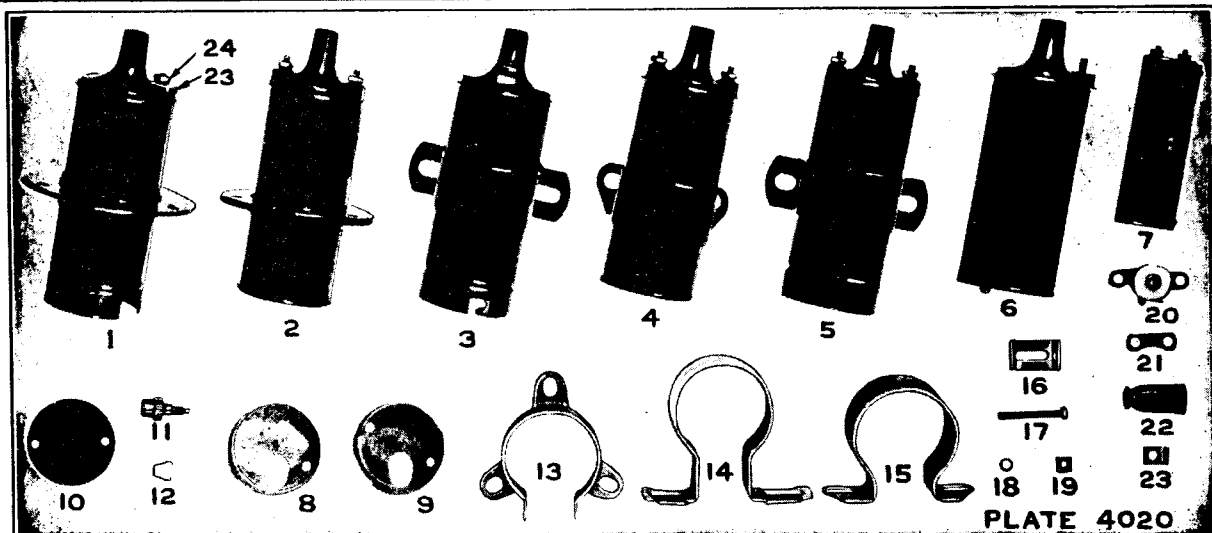

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Illus. No.	Name	Part No.	Used on Models
1	IGNITION COIL—Models 1115001-30		
1	IGNITION COIL—Models 1115021-24-26-28-51		
2	IGNITION COIL—Models 1115011-041		
2	IGNITION COIL—Models 1115101-2-3		
3	IGNITION COIL—Models 1115022-023-025-029		
3	IGNITION COIL—Models 1115127-29-30-31-32-33-34-35		
4	IGNITION COIL—Models 1115012-32-33-34-36-37-38-39-42-43-44-46-47-48-52-55-56-57-58-60-61-62-64-65-66-68-70-71-72-73-74-75-81-82-84-85-86-87-88-91-94-95-96-97-98-99; 100-4-5-6-7-10-11-12-14-15-16-18-19-20-21-22-23-25-36-37-39-52-54-56-57-59-60-1-2-3-4-5-6-8-9; 70-1-2-4-5-6-9; 80-1-4-79; 90-1-2-3-5-6-7-8-9; 200-1-2-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-9; 30-1-2-3-4-5-6-7-8; 40-1-2-4-5-6-7-8-9; 50; 61-2-3-4-5-6-7-8-9; 70; 271-2-4-5; 87-8-9; 90-1-2-3-4-5-6-7-8-9; 326-7-8-9; 30-1-4-5-6-9; 40; 76-8-9; 80-1-2-3-4-5-8-9; 92-3-4-9; 404-5-6-7-8-9; 10-12-13-14-19-21-2-3-4-8-9; 30		
5	IGNITION COIL—Models 1115301-325-329		
6	IGNITION COIL—Models 1115126; 1115400-401-403		
7	IGNITION COIL—Model 1115426		
7	ADAPTER (For Switch Extension).....	1902608	1115401
8	ADAPTER—For Service Coil.....	1863089	1115126
8	ADAPTER—For Service Coil.....	1863090	1115126; 401
9	Adapter Attaching SCREW.....	453647	1115126; 401-3
9	Adapter Attaching Screw LOCK WASHER.....	453844	1115126; 401-3
10	Bottom COVER PLATE.....	1863085	1115301; 25
10	Bottom Cover Plate SCREW.....	453418	1115301; 25
10	Bottom Cover Plate Screw LOCK WASHER.....	453844	1115301; 25
11	CONDENSER.....	1879526	1115026
11	Condenser Lead RIVET.....	810761	1115026
12	High Tension TERMINAL (Screw type) Separate.....	1839164	1115021-51; 325
12	High Tension Terminal CLIP.....	829833	All except 1115290-1-6
12	High Tension Terminal CLIP.....	824665	1115001
14	Mounting BRACKET (For Service Coil).....	1860296	1115102; 26
15	Mounting BRACKET (For Service Coil).....	1867679	1115126
15	Mounting BRACKET (For Service Coil).....	1871821	1115102; 26
15	Mounting BRACKET.....	800933	1115424
15	Mounting BRACKET.....	801286	1115421
15	Mounting BRACKET.....	1846538	1115429
15	Mounting BRACKET.....	1846736	1115428; 30
15	Mounting BRACKET.....	1909180	1115034; 43-4-6-7-8; 55-7-8; 60-8-9; 70-1-4; 86; 95-6-7; 105; 93; 222; 327-9; 31-6; 78-9; 81-3-4-5; 92-3-4-6-9; 401
15	Mounting BRACKET.....	1909326	1115032-3; 52-6; 65-6; 73-5; 81-2-4-5-8; 94-6-8; 104-11-14-16-19; 20-2-3; 32-3; 52-4-8; 61-4-5; 80; 92; 218; 219-33-4-5; 250; 65-6; 71; 94-5-428; 30-4-5; 40; 80-8-9; 98-9; 404-5; 419; 22
15	Mounting BRACKET.....	1929496	1115083; 107; 95-8-9; 201-9-12-13; 74-339; 74; 405-7-8-9

(Continued on Page 2)

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
(Continued from Page 1)			
15	Mounting BRACKET.....	1962049	1115100; 38
15	Mounting BRACKET.....	1941437	1115110
15	Mounting BRACKET.....	1943069	1115112; 59; 190
15	Mounting BRACKET.....	1943712	1115196; 201-9; 31-2; 61-2-7
15	Mounting BRACKET.....	1944511	1115118; 25; 31
15	Mounting BRACKET.....	1947447	1115061; 398
15	Mounting BRACKET.....	1947969	1115121
15	Mounting BRACKET.....	1950477	1115135; 72; 205
15	Mounting BRACKET.....	1954350	1115137; 79
15	Mounting BRACKET.....	1953189	1115156-7
15	Mounting BRACKET.....	1954350	1115162-9; 74
15	Mounting BRACKET.....	1954681	1115160-3-8; 70; 81; 91; 216; 20; 240-6; 92
15	Mounting BRACKET.....	1956040	1115032-6; 166; 71-5; 84; 97; 200-6-8; 23; 11-17; 36; 97; 412-13
15	Mounting BRACKET.....	1963479	1115187-9;
15	Mounting BRACKET.....	1964715	1115214-15
15	Mounting BRACKET.....	1965819	1115224-5; 45
15	Mounting BRACKET.....	1965490	1115221; 41
15	Mounting BRACKET.....	1966527	1115037-8
15	Mounting BRACKET.....	1966876	1115039; 270-2
15	Mounting BRACKET.....	1966811	1115229
15	Mounting BRACKET.....	1966971	1115230
15	Mounting BRACKET.....	1968034	1115237; 44-7
15	Mounting BRACKET.....	1968084	1115423
15	Mounting—BRACKET.....	1968323	1115249; 68; 73
15	Mounting—BRACKET.....	1968423	1115263-4; 87
15	Mounting BRACKET.....	1968795	1115269
15	Mounting BRACKET.....	1969712	1115290; 414
15	Mounting BRACKET.....	1970007	1115288-9
15	Mounting BRACKET.....	1970344	1115115; 210; 242; 293-9
15	Mounting BRACKET.....	1970764	1115296
15	Mounting BRACKET.....	1971011	1115297
15	Mounting BRACKET.....	1971782	1115412
16	Mounting Bracket SPACER (for Service Coil).....	1842363	1115126
17	Mounting Bracket SCREW (For Service Coil).....	132143	1115126
17	Mounting Bracket SCREW.....	1945460	1115034; 43-4-6-7-8; 52-5-6-7-8; 60; 81-2-3-4-5-6-8; 94-5-6-7-8-9; 100-4-5-7-14-16-19; 20-1-2-3; 132; 327-8-9; 30-1-4-5-6; 78-9; 80-1-3-4-5-8-9; 92-3-4-6-9; 400-1-4-5-7-9
17	Mounting Bracket SCREW.....	1945900	1115118; 25; 37; 56-7; 60-2-3-8-9; 70-4-9; 81; 216; 20; 40-6; 69; 92
17	Mounting Bracket SCREW.....	1945901	1115032-3-4-6-7-8-9; 61-5-6-8-9; 70-11-3-4-5; 112-15; 23; 32-3-5-6-8; 52-4-8-9; 161-4-5-6; 71-2-5; 80-4-7-9; 90-1-2-3-5-6-7-8-9; 200-1-4-5-6-8-9-10-11-12-13-14-15-17-18-19; 21-2-3-4-5-9; 30-1-2-3-4-5-6; 41-2-4-5-7-9; 50; 61-2-3-4-5-6-7-8; 70; 71-2-3-4; 87-8-9; 93-4-5-7-8-9; 339; 40; 98; 405-7-8-9; 12-13-19; 24-8-9; 30
17	Mounting Bracket SCREW.....	9427973	1115290-1-6; 414; 21-2
18	Mounting Bracket Screw LOCK WASHER (For Serv. Coil).....	453435	1115126
19	Mounting Bracket Screw NUT (For Service Coil).....	120611	1115126
20	RESISTANCE—In Base.....	1872207	1115325
20	RESISTANCE—In Base.....	1859227	1115301
21	Resistance CONNECTOR.....	1863086	1115301; 25
21	Resistance Connector NUT.....	453433	1115301; 25
21	Resistance Connector Nut LOCK WASHER.....	453435	1115301; 25
21	RESISTOR (Shipped separate).....	1923681	1115081-2
22	NIPPLE.....	1839771	1115126
22	NIPPLE.....	1913635	All except 1115126; 290-1-5-6
	Switch Lead Attaching NUT.....	453433	1115001; 21-2-3-4-5-6-7-9; 51; 127-8-9; 30; 403
	Switch Lead Attaching Nut LOCK WASHER.....	453435	1115001; 21-2-3-4-5-6-7-9; 51; 127-8-9; 30; 403
(Continued on Page 3)			

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	(Continued from Page 2)		
	Switch Lead Attaching Nut PLAIN WASHER.....	1914367	1115001; 21-2-3-4-5-6-7-9; 51; 127-8-9; 30
	Switch Lead Attaching SCREW.....	453647	1115126
	Switch Lead Attaching Screw LOCK WASHER.....	453844	1115126
	Tach.—CONNECTOR.....	1968606	1115240-1-6
	Tach.—INSULATOR Screw.....	1968607	1115240-1-6
	Tach.—Screw.....	441212	1115240-1-6
	Tach.—Screw—Connector Attaching.....	453418	1115240-1-6
23	Terminal CLAMP.....	824665	1115012; 21-2-3-4-6-7-8; 127-8-9; 477
23	Terminal CLAMP.....	1961864	All except 1115012; 21-2-3-4-6-7-8-106; 127-8-9; 53; 223-5; 403; 77; 414-19; 90-1-6
23	Terminal CLAMP.....	1969699	1115290-1-6; 406; 21-2
23	Terminal CLAMP.....	1906804	1115223
23	Terminal CLAMP.....	1965261	1115225
23	Terminal CLAMP.....	1914144	1115403
23	Terminal CLAMP.....	1921562	1115106
23	Terminal CLAMP.....	1914615	1115153
24	Terminal NUT (10-32x $\frac{1}{2}$).....	453433	All except 1115069; 153-8; 61-2-3-4-5; 398
24	Terminal NUT (10-32x $\frac{1}{2}$ Hex.).....	1923540	All except 1115136; 53; 61; 84; 236
24	Terminal NUT (8-32).....	120622	1115403
24	Terminal NUT (10-32x $\frac{1}{2}$ Hex.).....	1924828	1115106; 53
	Terminal Nut LOCK WASHER.....	453435	1115001-11-12; 21-2-3-4-5-6-7-8-9; 30; 41; 51; 86; 91-9; 101-2-3-6-7-12-14-15-16-18-19; 20-5-6-7-8-9; 30; 64; 83; 301; 25; 426-7
	Terminal Nut PLAIN WASHER.....	1914367	1115001-11-12; 21-2-3-4-5-6-7-8-9; 30; 41; 51; 101-2-3; 26-7-9; 30; 301; 25; 426-7

Delco-Remy
SERVICE PARTS CATALOG

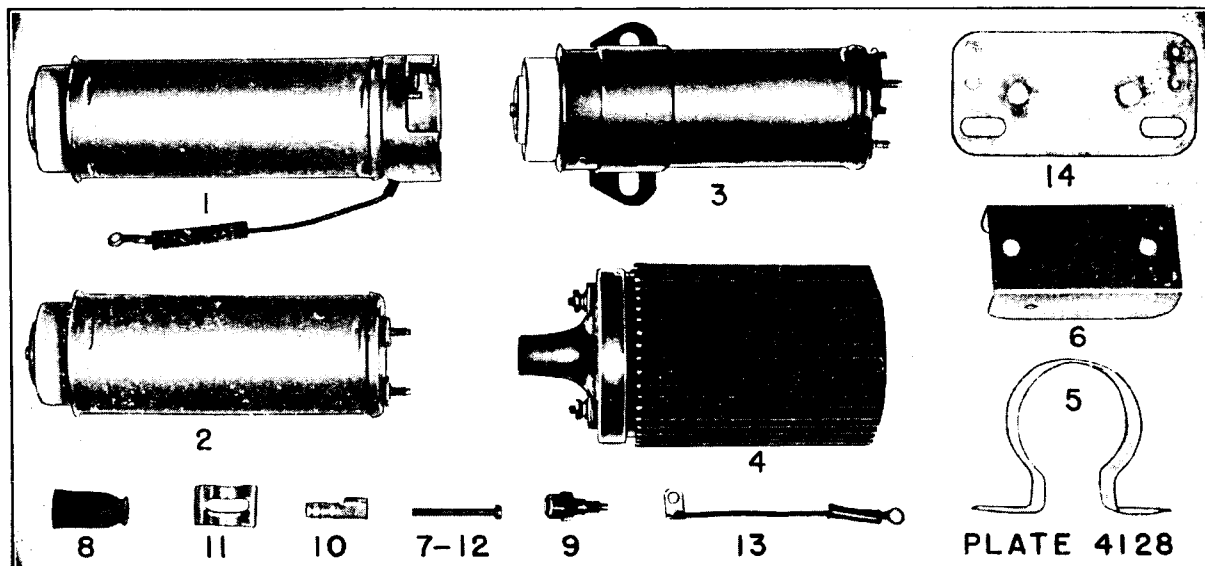

Illustrations are of Typical Parts only, which may vary in detail.

Illus. No.	Name	Part No.	Used on Models
1	IGNITION COIL—Oil Filled (Service)—Model 1115140		
2	IGNITION COIL—Oil Filled (Service) 6V—Model 1115142		
3	IGNITION COIL—Oil Filled—12V—Models 1115076-7-8-9;		
3	IGNITION COIL—Oil Filled—Models 1115141-3-4-5-6-8-9; 50-1		
2	IGNITION COIL—Oil Filled—Less Bracket.....	1884037	1115145
2	IGNITION COIL—Oil Filled—Less Bracket.....	1887831	1115079
2	IGNITION COIL—Oil Filled—Less Bracket.....	1888350	1115149
5	Mounting BRACKET (For Service Coil).....	1882544	1115078; 80; 1115140-2-8; 51
5	Mounting BRACKET.....	1871821	1115079; 1115145-9; 50
6	Coil Adapter BRACKET (For Service Coil—Special for 1940-41 Buick).....	1883064	1115140
7	Adapter BOLT.....	113955	1115140
	Adapter Bolt WASHER.....	30553	1115140
	Adapter Bolt LOCK WASHER.....	9421423	1115140
	Adapter Bolt NUT.....	453848	1115140
8	NIPPLE.....	1839771	All except 1115069; 153-8; 61-2-3-4-5; 398
	High Tension CLIP (Distributor Cap).....	829833	1115078; 1115140
10	High Tension Terminal CLIP (Coil End).....	1881696	1115078; 1115140
11	SPACER.....	1842363	1115078; 80; 1115140-2-8; 51
12	SCREW—Mounting Bracket (10-32x1½).....	132143	1115078-9; 80; 1115140-2-5-8-9; 51
	NUT—Mounting Bracket (10-32 square).....	120611	1115078-9; 80; 1115140-2-5-8-9; 50-1
	LOCK WASHER—Mounting Bracket (No. 10).....	453435	1115078; 80; 1115140-2-5-8-9; 50-1; 260
	NUT—Low Tension Terminal (10-32).....	453433	1115078-9; 80; 1115140-2-5-8-9; 50-1; 260
	LOCK WASHER—Low Tension Terminal.....	453435	1115078; 80; 1115140-2-5-6-8-9; 15
	SCREW—Primary Extension Lead Attaching.....	1837970	1115140-2
	WASHER—Plain—Low Tension Terminal.....	1845804	1115080; 1115151
4	IGNITION COIL—Models 1115226-27, 1115251-52-53-54-55-56-59, 1115260, *1115276-77-78, 1115284		
14	Mounting Bracket.....	1844109	1115226-7; 1115251-2; 1115276-7-8
	Mounting Bracket Screw.....	802790	1115226-7; 1115251-2; 1115276-7-8

(Continued on Page 5)

*Model 1115276 is radio shielded. Part No. 1881476 is 1115276 less resistance and is sent to Scintilla for shielding.


□The following high tension parts furnished by ACF-Brill:

Terminal	ACF-Brill #607102
Washer—Terminal	ACF-Brill #607097
Gasket—Terminal	ACF-Brill #607098
Nut—Terminal	ACF-Brill #507099
Sleeve—Terminal	ACF-Brill #607100
Spring Washer—Terminal	ACF-Brill #607101

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
	(Continued from Page 4)		
8	Nipple.....	1885405	1115226-7; 1115251-2-3-6-9; 1115260; 1115276-7; 1115284
8	Nipple.....	1885545	1115255
13	Low Tension Lead (4").....	1840376	1115226-7; 1115251-2
	Low Tension Lead Attaching Screw.....	453647	1115226-7; 1115251-2
	Low Tension Lead Screw Lock Washer.....	453844	1115226-7; 1115251-2
9	Terminal—High Tension (Screw type).....	1839164	1115226-7; 1115251-2-3-6; 1115260; 1115276-7-8
12	Terminal—High Tension (Push type).....	829833	1115032; 73; 184; 259; 404
	Bushing—Terminal—H.T.....	1885546	1115255
	Spring—Terminal—H.T.....	1885547	1115255
	Washer—Terminal—H.T.....	1868766	1115255
	Gasket—Terminal—H.T.....	1911965	1115255
	Terminal Nut.....	453433	1115226-7; 51-2-3-6-9; 76-7-8
	Terminal Nut.....	453284	1115284
	Terminal Nut Lock Washer.....	453435	1115226-7; 51-2-3-6-9; 76-7-8; 84
	Terminal Nut Plain Washer.....	813767	1115226-7; 51-2-3-6-9; 76-7-8; 83-4
	Terminal Nut Screw.....	1915033	1115284
	Resistance.....	1933550	1115276
	Resistance.....	1880926	1115277
	Resistance.....	1886224	1115278
	Resistance.....	1933550	1115284
	Resistance Terminal Nut.....	453433	1115276-7
	Resistance Terminal Screw.....	115304	1115276-7
	Resistance Terminal Screw Lock Washer.....	453435	1115276-7
	Resistance Attaching Nut.....	453433	1115276-7
	Resistance Attaching Nut Lock Washer.....	453435	1115276-7
	IGNITION COIL AND VIBRATOR ASSEMBLY		
	Models 178-U, 1115478-79-80-81-83-85-87		
	Adapter Bracket.....	1883838	1115480
	Adapter Bracket Screw.....	131383	1115480
	Adapter Bracket Screw Lock Washer.....	9421423	1115480
	Adapter Bracket Screw Nut.....	124818	1115480
	Armature and Point.....	1871619	178-U; 1115478
	Armature and Point.....	1879732	1115479; 80-1-3-5-7
	Armature Attaching Nut.....	453433	178-U; 1115478
	Armature Attaching Nut Lock Washer.....	453435	178-U; 1115478
	Armature Attaching Nut Plain Washer.....	1914367	178-U; 1115478
	Contact Screw and Point (Tungsten).....	1861998	1115478-9; 80-1-3-5-7
	Contact Screw and Point (Platinum).....	1858692	178-U
	Contact Screw Lock Nut.....	1839110	178-U
	Contact Screw Lock Nut.....	822613	1115479; 80-1-3-5-7
	Condenser.....	1877700	1115478-9; 80-1-3
	Condenser.....	1869707	178-U
	Condenser.....	1915749	1115485-7
	Condenser Attaching Nut.....	817363	1115479; 80-1-3-5-7
	Condenser Attaching Nut Lock Washer.....	453844	1115479; 80-1-3-5-7
	Condenser Lead Screw.....	453647	1115479; 80-1-3-5-7
	Condenser Lead Screw Lock Washer.....	453844	1115479; 80-1-3-5-7
	Mounting Bracket (Shipped separate).....	1879753	1115479; 80-1-3-5
	Resistor (Shipped separate) Use with 24 & 32 volt.....	1918374	
	Terminal Nut.....	453433	178-U; 1115478-9; 80-1-3-5-7
	Terminal Nut Lock Washer.....	453435	178-U; 1115478-9; 80-1-3-5-7
	Terminal Nut Plain Washer.....	1914367	178-U; 1115478-9; 80-1-3-5-7
	Terminal Screw.....	453461	178-U; 1115478
	Terminal Screw Lock Washer.....	453844	178-U; 1115478
	Terminal Clamp.....	26153	178-U; 1115478
	Vibrator Cover.....	1879752	1115479; 80-1-3-5-7
	Vibrator Cover Screw.....	132780	1115479; 80-1-3-5-7
	Vibrator Cover Screw Lock Washer.....	453844	1115479; 80-1-3
	Vibrator Cover Screw Plain Washer.....	1865616	1115485-7
	Vibrator Cover Gasket.....	1879743	1115479; 80-1-3-5-7

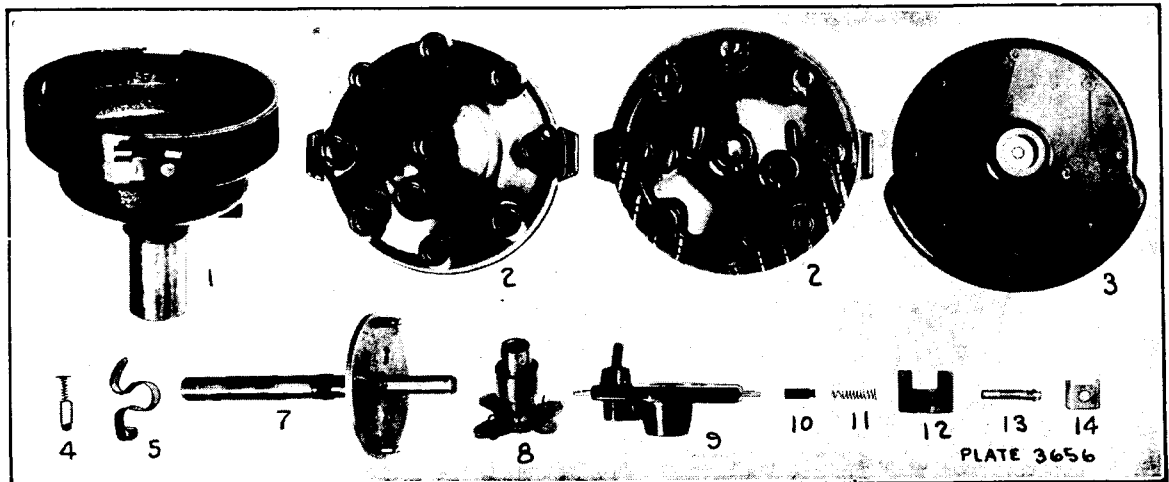

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Dist. Housing	Dist. Cap	Dist. Cap Cover	Dist. Cap Plunger	Dist. Cap Spring	Dist. Cap Spring Pin	Main Shaft	Cam Assem.	Rotor Assem.	Rotor Brush	Rotor Brush Spring	Gear, Collar or Coupling	Gear, Collar or Coupling Pin	Terminal Clamp
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
4059	1837354	1839166		1888023	30111	29802	*1837380	*	1839123	35607	35617	x		31656
4060	"	"		"	"	"	*1837352	*	"	"	"	x		"
4061	1837612	"		"	"	"	*1837379	*	"	"	"	1837384	813131	"
4062	"	"		"	"	"	*	*	"	"	"	1837479	"	"
4147	1864851	"		"	"	"	*1869471	*	1887823	"	"	x		"
4162	*827344	"		"	"	"	1859593	1839631	1844262	"	"	1859555	829421	"
4200	1837612	825430		"	"	"	*1843990	*	16781	"	"	1837372	813131	"
4202	"	"		"	"	"	*	*	"	"	"	809673	1857492	"
4207	1880275	1872245	1869238	1887118	"	"	1880280	1880289	1830284			x	x	"
4208	"	"	"	"	"	"	"	1830293	"			x	x	"
4227	"	"	"	"	"	"	"	1880289	"			x	x	"
4228	"	"	"	"	"	"	"	1880293	"			x	x	"
4235	1888229	1872245	"	1888023	"	"	1887994	1887608	1887998			x	x	"
4236	"	"	"	"	"	"	"	1887995	"			x	x	"
4239	1857441	1841818		"	"	"	1848660	1841644	1839123	35607	35617	1845656	813131	"
4240	"	"		"	"	"	1848653	1847314	"	"	"	"	"	"
4243	1901763	"		"	"	"	1901765	1841644	"	"	"	"	"	"
4244	"	"		"	"	"	1901767	1847314	"	"	"	"	"	"
4246	1903324	1872245	1869238	1888023	"	"	1887994	1887608	1887998			x	x	"
4247	"	"	"	"	"	"	"	1887995	"			x	x	"
4256	1905624	"	"	"	"	"	"	1887608	"			x	x	"
4257	"	"	"	"	"	"	"	1887995	"			x	x	"
.....														
.....														

†1839908—Special High Type Cap and 1839165 High Rotor can be used for Marine purpose.

*Shaft and Cam Assembly.

*If Bushing is required, bore housing to .658-.661 and use 1878549 Bushing.

*Not supplied by Delco-Remy.



Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

^a825454 is $1\frac{5}{8}$ long; 1844265— $5\frac{3}{4}$ long also used.

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Lever Spring Attaching Stud.....	106496	4162
Lock Washer—Breaker Plate Attaching Screw.....	106496	4162-4200-4202-4207-4208-4227-4228-4235-4236-4239-4240-4243-4244-4246-4247-4256-4257
Lock Washer—Cam Attaching Screw.....	106497	4207-4208-4227-4228
Lock Washer—Condenser Mtg. Screw.....	106496	All
Lock Washer—Condenser Terminal Screw.....	118869	4207-4208
Lock Washer—Distributor Hold Down Screw.....	1838568	4162
Lock Washer—Side of Housing.....	106496	4235-4236-4246-4247-4256-4257
Lock Washer—Terminal Clamp Screw.....	106496	All
Lock Washer—Terminal Stud Nut.....	106497	All
NUTS		
Nut—Ball Bearing Retainer.....	1869251	4207-4208-4227-4228-4235-4236-4246-4247-4256-4257
Nut—Breaker Arm Spring Attaching Screw.....	817363	All
Nut—Terminal Stud—Inside.....	5024654	All
SCREWS		
Screw—Breaker Plate Attaching.....	117114	All except 4235-4236
Screw—Breaker Plate Attaching—Lower.....	121749	4207-4208-4227-4228-4235-4236-4246-4247-4256-4257
Screw—Breaker Plate Adjusting—Upper.....	816784	4147-4162-4200-4202-4207-4208-4227-4228-4235-4236-4239-4240-4243-4244-4246-4247-4256-4257
Screw—Breaker Lever Spring Attaching.....	813511	All
Screw—Cam Adjusting.....	1877649	4235-4236-4246-4247-4256-4257
Screw—Cam Attaching.....	120614	4207-4208-4227-4228
Screw—Condenser Mounting.....	131949	All except 4207-4208-4227-4228
Screw—Condenser Mounting.....	121749	4207-4208-4227-4228-4235-4236-4246-4247-4256-4257
Screw—Condenser Terminal.....	122159	4207-4208
Screw—Contact Adjusting.....	816784	All
Screw—Distributor Cap Cover.....	134357	4207-4208-4227-4228-4235-4236-4246-4247-4256-4257
Screw—Distributor Hold Down.....	123316	4162
Screw—Side of Housing.....	121749	4235-4236-4246-4247-4256-4257
Screw—Terminal Clamp.....	107710	All except 4239-4240-4243-4244
Screw—Terminal Clamp.....	455880	4239-4240-4243-4244
WASHERS		
Washer—Adaptor Sleeve Retainer.....	807405	4162
Washer—Ball Bearing Space.....	1850617	4207-4208-4227-4228-4235-4236-4246-4247-4256-4257
Washer—Breaker Arm Spring Attaching Screw—Plain.....	810794	All
Washer—Cam Attaching Screw—Wing.....	1881852	4207-4208-4227-4228
Washer—Shim—Under Gear (.005 thk.).....	810074	4061-4062-4162-4200-4202-4239-4240-4243-4244
Washer—Shim—Under Gear (.010 thk.).....	810078	4061-4062-4162-4200-4239-4240-4243-4244
Washer—Space—In Housing.....	811912	All
Washer—Space—Under Gear.....	811912	4200-4202
Washer—Terminal Stud Nut—Plain—Inside.....	1902988	All
Washer—Terminal Stud Insulation—Inside.....	825458	All
Washer—Terminal Stud Insulation—Outside.....	20076	All
Washer—Terminal Stud—Steel—Outside.....	27041	All
Washer—Weight.....	811124	4162
MISCELLANEOUS		
†Advance ARM Assembly.....	1859598	4162
Advance Arm DIAL.....	1859597	4162
Ball BEARING—Lower.....	954147	4207-4208-4227-4228-4235-4236-4246-4247-4256-4257
Ball BEARING—Upper.....	954147	4235-4236-4246-4247-4256-4257
Ball BEARING—Upper.....	907502	4207-4208-4227-4228
Breaker Arm Spring STUD.....	1837225	All except 4235-4236
Distributor Cap Spring SUPPORT.....	825429	All
Distributor Cap Spring Support RIVET.....	111881	4059-4060-4061-4062-4147-4162-4200-4202


†For parts see Advance Arm—Group 1.

Parts not listed in this Catalog will not be sold separately.

Delco-Remy
SERVICE PARTS CATALOG

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
Distributor Cap Spring Support RIVET.....	111892	4207-4208-4227-4228-4235-4236-4239-4240-4243-4244-4246-4247-4256-4257
Distributor Adaptor SLEEVE.....	1859595	4162
Gear Space COLLAR.....	1859596	4162
High Tension TERMINAL—Brass.....	1880290	4207-4208-4227-4228-4235-4236-4246-4247-4256-4257
High Tension Terminal CLIP (for 7MM Cable) Press on Type.....	829833	All except 4235-4236
High Tension Terminal CLIP (for 7MM Cable) Solder Type.....	829537	All except 4235-4236
LEAD—Breaker Lever Connector.....	1874104	4207-4208
LEAD—Condenser.....	1868117	4207-4208
Oil SEAL.....	1867150	4246-4247-4256-4257
PIN—Ball Bearing Retainer Nut.....	1841135	4207-4208-4227-4228-4235-4236-4246-4247-4256-4257
Rubber GROMMET.....	1869253	4207-4208-4227-4228-4235-4236-4246-4247-4256-4257
Rubber NIPPLE (Shipped separate).....	1839771	4239-4240-4243-4244
SPRING—Rotor Retainer.....	1873687	4207-4208-4227-4228
SPRING—Rotor Retainer.....	1887606	4235-4236-4246-4247-4256-4257
TERMINAL—High Tension (Shipped separate).....	1839164	4239-4240-4243-4244
Woodruff KEY—For Cam.....	187441	4207-4208-4227-4228
Woodruff KEY—For Cam.....	190016	4235-4236-4246-4247-4256-4257

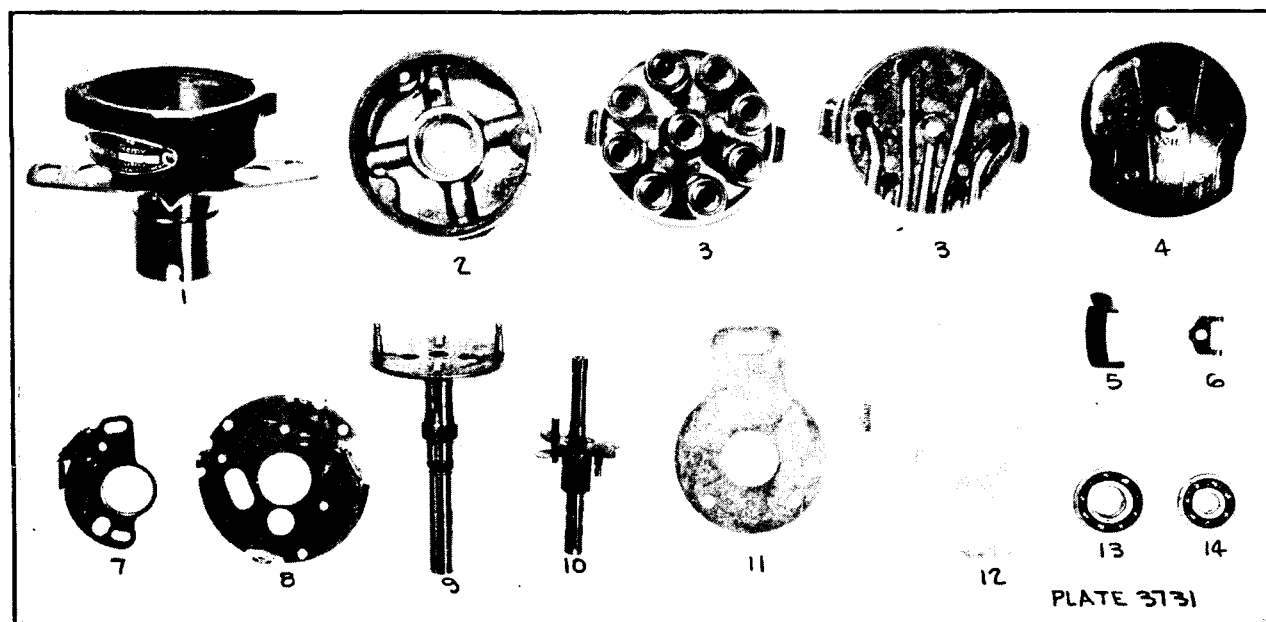


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distrib- utor Housing	Break- er Cup	Distrib- utor Cap	Distrib- utor Cap Cover	Distrib- utor Cap Spring	Distrib- utor Cap Spring Support	Break- er Plate Upper	Break- er Plate Lower	Main Shaft and Plate	Cam Shaft	Advance Arm	Dial Plate	Ball Bearing (Upper)	Ball Bearing (Lower)
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
4066	1838195	1838372	1838308		x834069	x811744	820455	1877717	1841820	1838302	36960	36961	907500	907502
*4067	1838600	1838602	1838671		1911336	Pkg.	1836904	1838624	1838610	1838614	1837858			
*4073	1838195	1838372	1838308		x834069	x811744	820455	1877717	1839432	1838302	36960			
4083	1838195	"	"		"	"	"	"	1840945	"	"	"	"	"
4107	1849180	"	1842714		"	"	"	"	1849186	"	"	"	"	"
4108	1859312	"	"		"	"	"	"	1849178	"	"	"	"	"
4121	1838195	"	"		"	"	"	"	1856648	1842000	"	"	"	"
4124	"	"	"		"	"	"	"	1849178	1855452	"	"	"	"
4134	1859312	"	"		"	"	"	"	1862306	1842000	"	"	"	"
4141	"	"	"		"	"	"	"	1864781	1864785	"	"	"	"
4145	1866766	"	"		"	"	"	"	1866772	1873093	"	"	"	"
4148	1859312	"	"		"	"	"	"	1871524	1864785	"	"	"	954520
4151	"	"	"		1871838	1847289	"	"	1868021	1866816	"	"	"	"
4153	"	"	"		"	"	"	"	1868268	1864785	"	"	"	"
4164	1872679	"	"		"	"	"	"	1872681	1866816	"	"	"	954147
4165	1872876	1872874	"		"	"		1872885	"	1872879	"	"	954218	"
4166	"	1872869	"		"	"		1872883	1872872	"	"	"	"	"
4167	1872679	1838372	"		"	"	820455	1877717	"	1866816	"	"	907500	"
4168	1872990	1872874	"		"	"		1872885	1872995	1872992	"	"	954218	"
4181	1872876	"	"		"	"		"	1872681	1872879	"	"	"	"
4182	"	1872869	"		"	"		1872883	1872872	"	"	"	"	"
4183	1872990	1874190	"		"	"		1872885	1872995	1872993	"	"	"	"
4187	1859312	1838372	"		"	"	820455	1877717	1877503	1864785	"	"	907500	954520
4189	1872876	1877712	"		"	"	1877724	1872681	1877673	"	"	"	954279	954147
4190	"	1877734	"		"	"	1877733	"	1872872	"	"	"	"	"
4191	1872990	1877808	"		"	"	1877724	"	1872995	1877737	"	"	"	"
4195	1859312	1838372	"		"	"	820455	1877717	1872297	1866816	"	36961	907500	954520
4196	1872990	1877808	"		"	"	1877724	"	1872995	1877737	"	"	954279	954147
4197	1872876	1877734	1865495		"	"	1877733	"	1872872	1877673	"	36961	"	"

*Mounts on Engine Adaptor. See Engine Adaptor—Group 1 for parts.

°36960 Advance Arm used only on early models, later models have Advance Arm brazed to Housing.

x1871838 Distributor Cap Spring and 1847289 Support are used on later models and no pin is necessary.

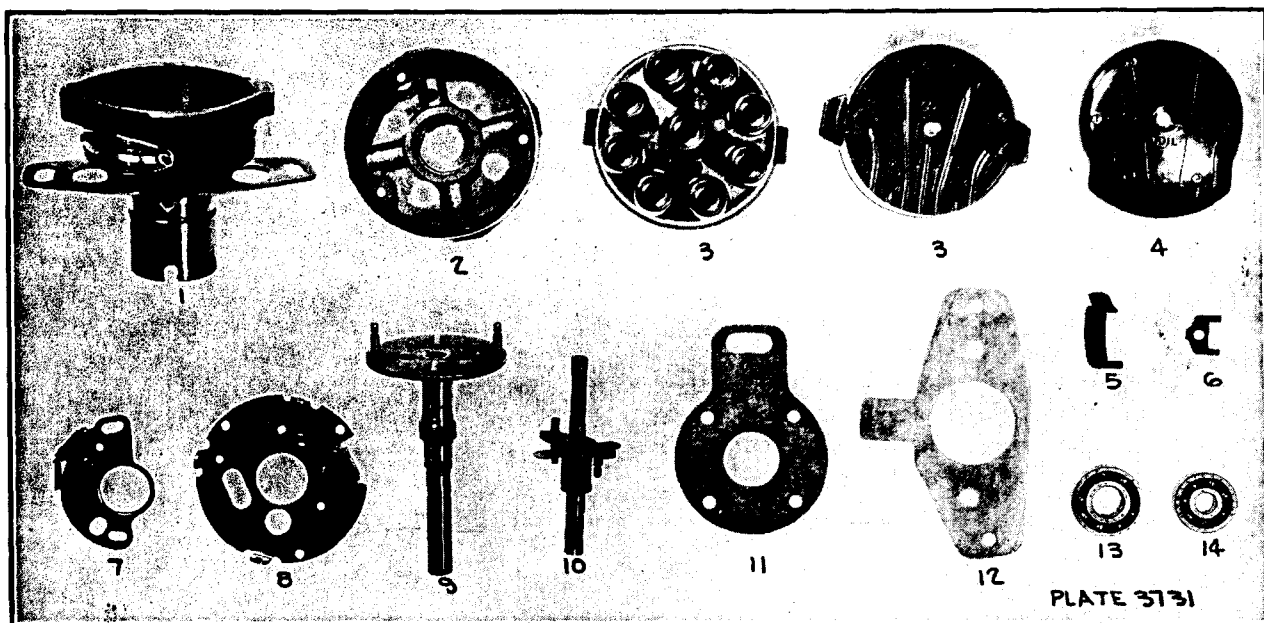

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor Housing	Breaker Cup	Distributor Cap	Distributor Cap Cover	Distributor Cap Spring	Distributor Cap Spring Support	Breaker Plate Upper	Breaker Plate Lower	Main Shaft and Plate	Cam Shaft and Automatic Cam	Advance Arm	Dial Plate	Ball Bearing Upper	Ball Bearing Lower
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
4201	1859312	1881514	1842714		1871838	1847289	820455	1877717	1878248	1864785		36961	907500	954520
4203	"	1838372	"		"	"	"	"	1878836	"		"	"	"
4211	1880922	1877632	"		"	"	"	"	1880931	1880932		"	954162	907502
4215	1859312	1838372	"		"	"	"	"	1880980	1866816		"	907500	954520
4220	"	"	"		"	"	"	"	1883751	1864785		1837394	"	"
4221	1872876	1884091	"		"	"		1877733	1884090	1877673		36961	954279	954147
4225	1844626	1838372	"		"	"	"	1877717	1861634	1842000		1837394	907500	907502
4230	1872990	1877808	"		"	"		1877724	1872995	1877737			954279	954147
4231	"	"	"		"	"		"	1886969	"			"	"
4234	"	"	"		"	"		"	"	"			"	"
4248	1880922	1877632	"		"	"	820455	1877717	1903416	1903426		36961	954162	907502
4250	"	"	"		"	"	"	"	1905995	"		"	"	"
4258	1906499	1906497	"		"	"	"	"	"	"		1837394	"	"
.....														
.....														

Delco-Remy SERVICE PARTS CATALOG

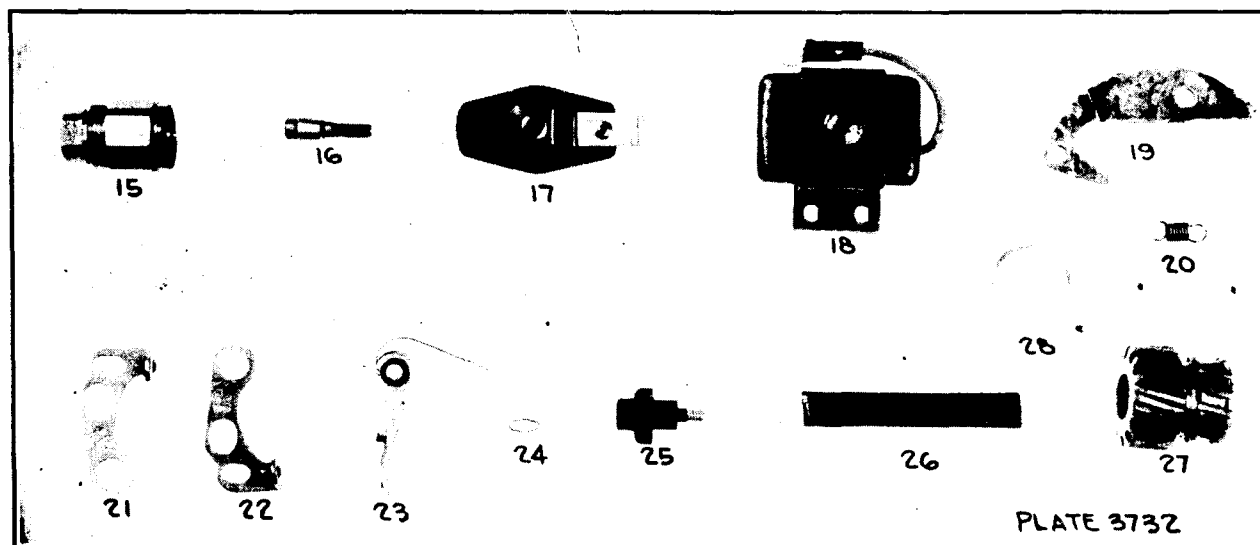


PLATE 3732

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Breaker Cam	Cam Adjusting Screw	Rotor Assem.	Condenser	Gov. Weight	Weight Spring	Contact Point and Support Lower	Contact Point and Support Upper	Breaker Lever	Breaker Lever Retainer Clip	Terminal Stud and Bushing	Terminal Connector Lead	Gear or Coupling	Gear or Coupling Spring
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
4201	1868232	13474	1877535	1849126	1881371	1883498	1881399	1881401	1881394	813245			*2050389	
4203	"	"	"	"	"	"	"	"	"	"			1865568	
4211	1877652	1877649	1877645	1881020	1880902	1883121	"	"	"	"			1871696	
4215	1843038	13474	1849504	1860020	"	1903101	*1835923	*1835921	813238	"			1849026	
4220	1868232	"	1877535	1849126		1883373	1845785	1848506	1842058	"			809673	
4221	"	"	"	"	1880902	1883121	1881467		1881394		1853625	1881529	†	†
4225	1838318	"	1842718	"	820528	1886508	1845785	1849877	813238	813245			1873000	829421
4230	1840267	"	1877535	1881040	1880902	1883373	1881466		1881394		1853625	1881529	1878047	"
4231	"	"	"	1849126	"	1883874	"		"		"	"	1873000	"
4234	"	"	"	"	"	1887130	"		"		"	"	"	"
4248	1877652	1877649	1877645	1881020	1881371	1903430	1881399	1881401	"	813245			*2050389	"
4250	"	"	"	"	"	"	"	"	"	"			†	†
4258	"	"	"	1881020	"	"	"	"	"	"			†	†

*Gear furnished by G.M.T.

*Contact Support only. 813235 is Contact Screw with Point.

†Coupling or Gear and Pin furnished by car manufacturer.


MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Cup Attaching Screw.....	106496	4201-3-11-15-20-21-25-30-31-34-48-50-58
Lock Washer—Breaker Plate Attaching Screw—Lower.....	106496	4201-3-11-15-20-25-48-50-58
Lock Washer—Breaker Plate Attaching Screw—Upper.....	106496	4201-3-11-15
Lock Washer—Condenser Attaching Screw.....	114603	4211
Lock Washer—Condenser Attaching Screw.....	106496	4201-3-15-20-21-25-30-31-34-48-50-58
Lock Washer—Condenser Terminal Nut.....	106496	4215
Lock Washer—Condenser Terminal Screw.....	118869	4201-3-15-20-21-25-30-31-34-48-50-58
Lock Washer—Dial Plate Attaching Screw.....	120380	4201-3-11-15-21-48-50
Lock Washer—Distributor Cap Spring Support Screw.....	106496	4201-3-11-15-20-21-25-30-31-34-48-50-58
Lock Washer—Distributor Housing Plug Screw.....	120380	4201-3-15-20-25
Lock Washer—Distributor Mounting Screw.....	103320	4201-3-11-15-21-48-50-58
Lock Washer—Terminal Clamp Screw.....	121841	4221-30-31-34
Lock Washer—Terminal Screw.....	138530	4201-3-11-15-20-25-48-58
Lock Washer—Terminal Stud Nut.....	121841	4221-30-31-34
Lock Washer—Vacuum Control Arm Screw.....	106495	4221-30-31-34
Lock Washer—Vacuum Control Attaching Screw.....	106497	4221-30-31-34
Lock Washer—Weight Hold Down Plate.....	120380	4215-48-50-58
Lock Washer—Weight Hold Down Plate Nut.....	106497	4201-3-15-20-21-31-34
Lock Washer—Weight Hold Down Plate.....	1885558	4201-3-15-20-21-30-31-34
NUTS		
Nut—Ball Bearing Retainer—Inner Race.....	35437	4201-3-11-20-21-25-48-50-58
Nut—Ball Bearing Retainer—Inner Race.....	1880983	4215
Nut—Ball Bearing Retainer—Lower—Inner Race.....	1874192	4230-31-34
Nut—Ball Bearing Retainer—Lower—Outer Race.....	1869251	4221-25-30-31-34
Nut—Ball Bearing Retainer & Oil Seal.....	1849949	4201-3-15-20
Nut—Ball Bearing & Oil Seal.....	1880928	4211-48-50-58
Nut—Breaker Lever Spring Attaching.....	817363	4201-3-11-15-20-21-25-30-31-34-48-50-58
Nut—Condenser Terminal.....	817363	4215
Nut—Contact Screw Lock.....	120614	4215
Nut—Dial Plate Attaching Screw.....	803880	4201-3-11-15-21-48-50
Nut—Distributor Cap Support Screw.....	817363	4201-3
Nut—Distributor Mounting Screw.....	120368	4201-3-11-15-21-48-50-58
Nut—Terminal Stud.....	817363	4221-30-31-34
Nut—Weight Hold Down.....	125215	4211-48-50-58
Nut—Weight Hold Down.....	1923540	4201-3-15-20-21-30-31-34
Nut—Weight Hold Down.....	120622	4230
SCREWS		
Screw—Breaker Cup Attaching.....	115419	4201-3-11-15-20-21-25-30-31-48-50-58
Screw—Breaker Lever Spring Attaching.....	813511	4201-3-11-15-20-21-25-30-31-34-48-50-58
Screw—Breaker Plate Attaching.....	115397	4221-30-31-34
Screw—Breaker Plate Attaching—Lower.....	122159	4201-3-11-15-20-25-48-50-58
Screw—Breaker Plate Attaching—Upper.....	816784	4201-3-11-15-21-25-48-50-58
Screw—Condenser Attaching.....	121749	4201-3-15-20-21-25-30-31-34
Screw—Condenser Attaching.....	132103	4211-48-50-58
Screw—Condenser Terminal.....	122159	4201-3-11-20-21-25-30-31-34-48-50-58
Screw—Contact Adjusting.....	816784	4201-3-11-15-20-21-25-30-31-34-48-50-58
Screw—Dial Plate Attaching.....	106280	4201-3
Screw—Dial Plate Attaching.....	25747	4211-15-21-48-50
Screw—Dial Plate Attaching.....	35483	4220-25-58
Screw—Distributor Cap Spring Support.....	121832	4201-3-11-15-20-21-25-48-50-58
Screw—Distributor Cap Spring Support.....	122159	4230-31-34
Screw—Distributor Housing Plug.....	429182	4201-3-15-20-25
Screw—Distributor Mounting.....	106280	4201-3-48-50-58
Screw—Distributor Mounting.....	1838393	4211-15-21
Screw—Rotor Segment Attaching.....	1842722	4201-3-11-15-20-21-25-30-31-34-48-50-58
Screw—Terminal.....	132776	4201-3-11-15-20-25-48-50-58
Screw—Terminal Clamp.....	107710	4221-30-31-34
Screw—Vacuum Control Arm Attaching.....	1902147	4221-30-31-34
Screw—Vacuum Control Attaching (10-32x $\frac{1}{4}$).....	132892	4221-30-31-34
Screw—Vacuum Control Attaching (10-32x $\frac{1}{4}$).....	142210	4221-30-31-34
WASHERS		
Washer—Ball Bearing Insulating—Under Breaker Plate.....	1877679	4221-30-31-34
Washer—Ball Bearing Insulating—In Clamp Plate.....	1877680	4221-30-31-34
Washer—Ball Bearing Space—Inner Race.....	1877655	4248-50-58
Washer—Ball Bearing Space—Outer Race.....	1877653	4248-50-58
Washer—Ball Bearing Space—Upper.....	1877681	4221-30-31-34
Washer—Breaker Lever Spring Screw.....	810794	4201-3-11-15-20-21-25-30-31-34-48-50-58
Washer—Breaker Plate Adjusting Screw.....	810794	4215
Washer—Breaker Plate Attaching Screw—Upper.....	810794	4201-3-11

MINOR PARTS SECTION

Name	Part No.	Used on Models
WASHERS—Continued		
Washer—Dial Plate Attaching Screw Plain.....	120386	4201-3-11-15-21-48-50
Washer—Dial Plate Attaching Screw Plain.....	21168	4220-25-58
Washer—Felt—Under Upper Ball Bearing.....	1874107	4221-30-31-34
Washer—Felt—Under Upper Ball Bearing.....	1838320	4201-3-15-20-25
Washer—Felt—Over Weight.....	1837215	4225
Washer—Rubber (Use with 1839164 Terminal).....	1881402	4201-3-11-15-20-21
Washer—Shim (.005" thk.).....	810074	4230
Washer—Shim (.010" thk.).....	810078	4230
Washer—Space—Under Gear.....	811912	4230
Washer—Spring—Dial Plate Screw.....	35498	4220-25-58
Washer—Terminal Stud Ins. Bushing.....	1889387	4221-30-31-34
Washer—Terminal Stud Insulating—Inside.....	1889386	4221-30-31-34
Washer—Weight.....	811124	4201-3-11-15-21-25-30-31-34
Washer—Weight Spring Retainer.....	36259	4225
MISCELLANEOUS		
Breather PIPE.....	1860880	4201-3-11-15-20-21-25-30-31-34-48-50-58
BUSHING—Terminal Screw Insulation.....	821160	4201-3-11-15-25-48-50-58
BUTTON—Distributor Cap Carbon.....	806923	4201-3-11-15-20-21-25-30-31-34-48-50-58
CLAMP—Ball Bearing Retainer.....	1877654	4211-48-50-58
CLAMP—Ball Bearing Retainer—Under Cam.....	1838319	4201-3-15-20-21-25-30-31-34
CLAMP—Terminal.....	26153	4201-3-11-15-20-21-25-30-31-34-48-50-58
CLAMP—Vacuum Control Bracket.....	1865984	4221-30-31-34
COLLAR—Ball Bearing Space.....	29221	4201-3-15-20-25
COLLAR—Ball Bearing Space.....	1877655	4211
COLLAR—Ball Bearing Space—Outer Race.....	1877653	4211
Cotter PIN—Weight Hold Down Nut.....	107761	4211-48-50-58
Cotter PIN—Weight Spring Retainer.....	137130	4225
Felt WICK—In Main Shaft.....	819639	4201-3-11-15-20-21-25-30-31-34-48-50-58
LEAD—Breaker Plate Ground.....	1881531	4221-30-31-34
LEAD—Condenser.....	1840376	4201-3-15-20-25
LEAD—Condenser.....	1871681	4211-48-50-58
LEAD—Condenser.....	1847670	4221
LEAD—Condenser.....	1850015	4230-31-34
Name PLATE.....	819720	4215
Name Plate PIN.....	1838599	4215
OILER.....	815641	4201-3-11-15-20-21-25-30-31-34-48-50-58
Oil SEAL—Lower.....	1849943	4201-3-11-15-20
PIN—Ball Bearing Retainer.....	1841135	4201-3-11-15-20-21-25-30-31-34-48-50-58
PIN—Gear or Coupling.....	829421	4201-3-11-15-20-30-31-34-38
PLATE—Ball Bearing Clamp—Upper.....	1877678	4221-30-31-34
PLATE—Weight Hold Down.....	1877643	4211-48-50-58
PLATE—Weight Hold Down.....	1885557	4201-3-15-20-21-30-31-34
ROTOR Only.....	1877646	4211-48-50-58
ROTOR Only.....	1842719	4215-25
ROTOR Only.....	1877536	4201-3-20-21
ROTOR Only.....	1877536	4230-31-34
Rotor SEGMENT.....	1838314	4201-3-11-15-20-21-30-31-34-48-50-58
Rotor SEGMENT.....	1838315	4225
Rotor SPRING.....	1842723	4201-3-20-21-25-30-31-34-48-50-58
Service PACKAGE to Convert 4125 into 4215.....	1880977	
TERMINAL—Screw (High Tension).....	1839164	4201-3-11-15-20-21-25-30-31-34-48-50-58
*VACUUM CONTROL.....	1116042	4221-30-31-34
Vent PLUG.....	1864618	4258

*For parts see Vacuum Control—Group 4.

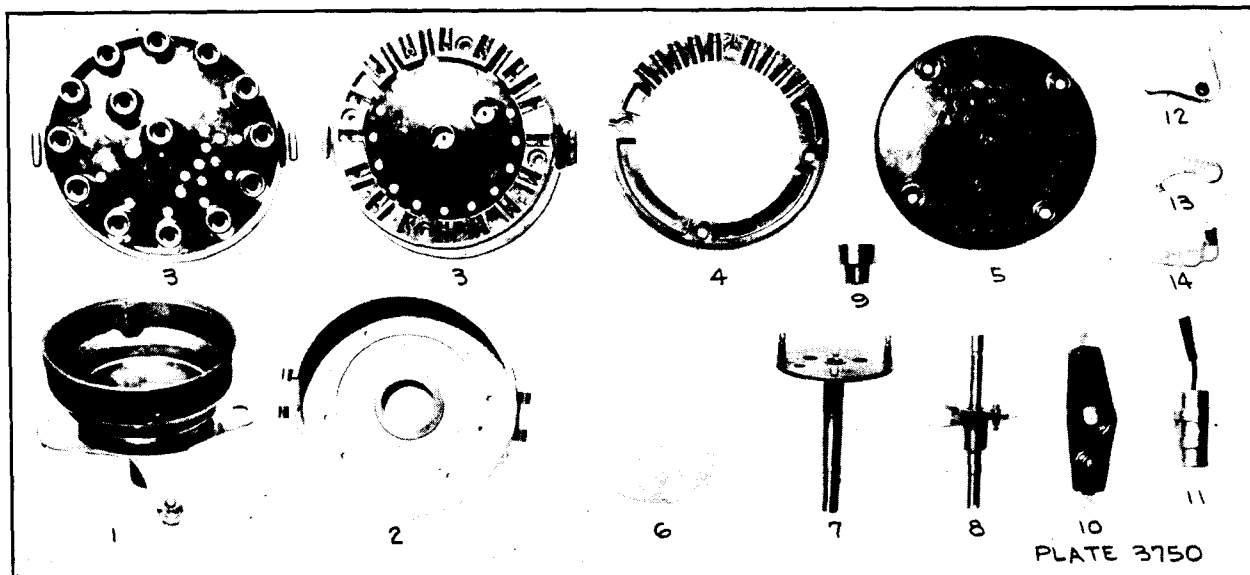

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model No.	Distributor Housing	Breaker Cup	Distributor Cap	Distributor Cap Cover Center	Distributor Cap Cover Top	Ball Bearing Retainer Plate	Main Shaft	Cam Shaft	Breaker Cam	Rotor	Condenser	Breaker Lever	Contact Point and Support Upper	Contact Point and Support Lower
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
4057	1837074	1837098	†1837207	1837209	1837210	1837234	*1837080	*1837096	1837089	1837086	1837963	813238	1837261	1837262
4069	1839858	"	1839775	"	"	"	1839827	1839830	1839057	1839054	"	"	"	"
4084	1841062	"	1841070	"	"	"	"	1848707	1837089	1837086	"	"	"	"
4092	1843007	"	1839775	"	"	"	"	1839830	1839057	1839054	"	"	"	"
4093	"	"	1839840	"	"	"	1837080	1837096	1837089	1837086	1837963	"	"	"
4096	1843639	"	1839775	"	"	1843645	1843633	1843635	1843636	1843638	"	"	"	"
4105	"	"	"	"	"	"	"	"	"	"	1837231	1842058	1848506	1848507
4110	1843007	"	"	"	"	1837234	1848716	1848711	1839057	1839054	1837963	813238	1837261	1837262
4111	"	"	1839840	"	"	"	1848706	1848707	1837089	1837086	"	"	"	"
4118	"	"	1850896	"	"	"	1855597	1848711	1855539	"	"	1842058	1848506	1848507
4130	1866636	"	1850895	"	"	1843645	1843633	1843635	1843636	1843638	1908846	813238	"	"
4163	1837860	1853427	1853429	"	"	"	1841860	1839737	1840281	1839123	1860020	"	1849877	1845785
4186	1874687	"	"	"	"	"	1874730	1866816	1840267	1887823	"	\$1881394	\$1882017	\$1881399
4209	1881739	"	"	"	"	"	1880323	"	"	"	"	\$	"	"
4218	1850192	1864910	1839161	"	"	"	1839663	1883375	1845683	1839123	1849126	"	"	"

*When replacing either Main or Cam Shaft on Distributor below Serial No. 4000 both parts must be replaced.

†Distributor Cap 1839840 and H.T. Terminals 1839848 (Top outlet) are used on Distributor 4057 after Serial No. 6001.

§When replacing standard points with heavy duty points all four parts must be replaced. Use Contact Package No. 1882021.

Delco-Remy SERVICE PARTS CATALOG

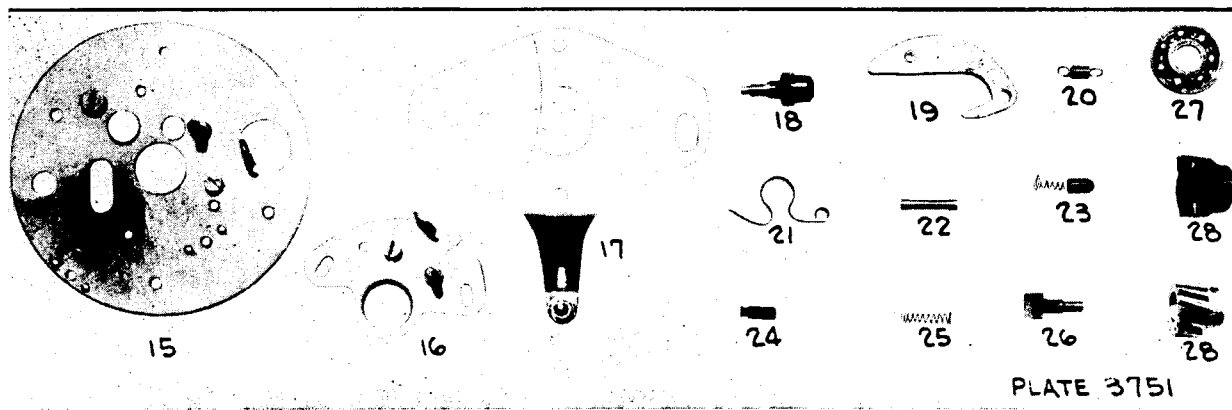

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Breaker Plate Lower	Breaker Plate Upper	Advance Arm	Screw Terminal H.T.	Weight	Weight Spring	Distributor Cap Spring	Distributor Cap Spring Pin	Distributor Cap Carbon Button	Rotor Brush	Rotor Brush Spring	Terminal Stud	Ball Bearing	Gear or Coupling
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
4057	1837232	1837216	1837079	1839164	825469	1840258	30111	29802	809445	35607	35617	1837237	954518	809673
4069	"	"	1839858	"	1839833	1839835	"	"	"	"	"	"	"	"
4084	"	"	1841064	"	1837879	1844219	"	"	"	"	"	"	"	"
4092	"	"	1843057	"	1839833	1839835	"	"	"	"	"	"	"	"
4093	"	"	"	"	825469	1840258	"	"	"	"	"	"	"	"
4096	1843643	"	1843640	"	1837879	827463	"	"	"	"	"	825456	"	826276
4105	"	"	"	"	"	"	"	"	"	"	"	"	"	"
4110	1837232	"	1843057	"	1840578	820508	"	"	"	"	"	1837237	"	809673
4111	"	"	"	"	1837879	829532	"	"	"	"	"	"	"	"
4118	"	"	"	"	1840578	820722	"	"	"	"	"	"	"	"
4160	1843643	"	1866637		1837879	1910201	"	"	"	"	"	825456	"	826276
4163	1853425	1837359	1837858	1839164	818222	818223	"	"	"	"	"	1854115	907500	35766
4186	"	"	1839368		1863230	820722	"	"	"	"	"	"	"	809673
4209	"	"		1839164	1880902	1883121	"	"	"	"	"	"	"	"
4218	"	"	1839369	"	825469	1883498	"	"	"	"	"	"	"	C

°Furnished by car manufacturer.


MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Breaker Cup Attaching Screw LOCK WASHER.....	106496	All
Breaker Plate Attaching Screw LOCK WASHER.....	106496	All
Breaker Lever Terminal Stud Nut LOCK WASHER.....	106496	All
Condenser Attaching Screw LOCK WASHER.....	106496	All except 4163
Condenser Terminal Nut LOCK WASHER.....	118869	4163
Condenser Terminal Screw LOCK WASHER.....	118869	4163-4186-4209-4218
Distributor Cup Screw LOCK WASHER.....	106496	4096-4105-4160
Distributor Cup Screw LOCK WASHER.....	120380	4163-4186-4209-4218
High Tension Wire Bracket Screw LOCK WASHER (Chrome).....	131054	All
Terminal Stud Nut LOCK WASHER.....	106497	All
Terminal Stud Clamp Screw LOCK WASHER (Chrome).....	131054	All except 4096-4105-4160-4163
Terminal Stud Clamp Screw LOCK WASHER.....	106496	4096-4105-4160
Terminal Stud Clamp Screw LOCK WASHER.....	115544	4163-4186-4209-4218
Weight Hold Down Nut LOCK WASHER (2 hole).....	1861711	4186
Weight Hold Down Nut LOCK WASHER.....	106497	4209
Weight Hold Down Nut LOCK WASHER.....	1885558	4209
Weight Hold Down Nut LOCK WASHER.....	106496	4186
NUTS		
Breaker Lever Spring NUT.....	817363	All
Condenser Terminal NUT.....	817363	4163
Terminal Stud NUT.....	5024654	All
Weight Hold Down Plate NUT.....	120622	4186
Weight Hold Down Plate NUT.....	115295	4209
SCREWS		
Breaker Cup Attaching SCREW.....	107712	All except 4163-4186-4202
Breaker Cup Attaching SCREW.....	132768	4163-4186-4209-4218
Breaker Lever Spring Attaching SCREW.....	813511	4163-4186-4209-4218
Breaker Plate Attaching SCREW—Lower.....	137206	4163-4186-4209-4218
Breaker Plate Attaching SCREW.....	107711	All except 4163
Breaker Plate Adjusting SCREW.....	816784	4118-4160-4163-4186-4209-4218
Cam Adjusting SCREW.....	13474	All except 4096-4105-4160-4218
Cam Adjusting SCREW.....	1843630	4096-4105-4160-4218
Condenser Attaching SCREW.....	131949	All except 4163-4186-4209-4218
Condenser Attaching SCREW.....	115607	4163-4186-4209-4218
Condenser Terminal Screw.....	122159	4163-4186-4209-4218
Contact Adjusting SCREW.....	816784	All
Distributor Cap Sub Cover Attaching SCREW.....	1837656	4057
Distributor Cap Cover Attaching SCREW.....	124822	4057
Distributor Cup SCREW.....	107710	4096-4105-4110-4160-4163-4209-4218
Distributor Cup SCREW.....	429182	4163-4186-4209-4218
Distributor Hold Down SCREW.....	1837230	4057-4069-4084
Distributor Hold Down SCREW.....	1840211	4096-4105
Distributor Housing Plug SCREW.....	141563	4110-4111
High Tension Wire Bracket Attaching SCREW.....	141563	All except 4160-4163
Terminal Stud Clamp SCREW.....	142845	All except 4160
Terminal Clamp SCREW.....	117114	4160
Terminal Clamp SCREW.....	107710	4186
Wire Control SCREW.....	132751	4084
WASHERS		
Ball Bearing Space WASHER.....	29221	4163-4186-4209-4218
Breaker Lever Stud Insulating WASHER (9/32 I.D.).....	1868766	All
Breaker Lever Stud Insulating WASHER (5/16 I.D.).....	33436	All
Breaker Lever Spring Stud Insulating WASHER (.248 O.D.).....	1837223	All
Breaker Lever Spring Stud Insulating WASHER (3/4 O.D.).....	1837224	All
Breaker Lever Spring Stud Plain WASHER.....	810794	All
Condenser Terminal Nut Plain WASHER.....	115607	4163
Distributor Hold Down Screw Plain WASHER.....	1837031	4057-4069-4084
Distributor Hold Down Screw Spring WASHER.....	35498	4057-4069-4084
Distributor Hold Down Screw WASHER.....	829520	4096-4105
Felt WASHER (Top of Weight Plate).....	1837215	All
Felt WASHER (Under Ball Bearing).....	1838320	4186-4209-4218
Space WASHER (Under Governor).....	811912	All
Space WASHER (Under Coupling or Gear).....	811912	All
Shim WASHER (.005 thk.).....	810074	All
Shim WASHER (.010 thk.).....	810078	All
Terminal Stud Plain WASHER.....	27041	4096-4105-4160-4163-4186-4209-4218

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
WASHERS—Continued		
Terminal Stud Nut Steel WASHER ($\frac{7}{16}$ O.D.)	834231	All
Terminal Stud Steel WASHER (.0563 O.D.)	1837236	All
Terminal Stud Insulation WASHER (.625 O.D.)	20076	All
Terminal Stud Insulation WASHER (9/16 O.D.)	825458	All
Weight WASHER	811124	All
Weight Spring WASHER	36259	All
MISCELLANEOUS		
Advance ARM	1839970	4209
Advance Arm RIVET	1837078	All
Alemite Lubricating NIPPLE	114744	4057-4069-4092-4093-4110-4118
Ball Bearing Retainer Plate GASKET	1837211	All
Ball Bearing Lock CLIP	1838319	All
Breaker Lever Retainer CLIP	813245	All
Breaker Lever Terminal STUD	1837225	All
Breather PIPE	1860880	4163-4186-4209-4218
BUSHING—Distributor Housing (Service)	1850017	4057-5069-4084-4092-4093-4096-4163-4186-4209-4218
Cap Spring PIN	29802	4209
Cap Spring SUPPORT	825429	4163-4186-4209-4218
Cap Spring Support RIVET	111892	4163-4186-4209-4218
Coupling PIN	810068	All except 4096-4105-4160-4163
Coupling PIN	829421	4096-4105-4160
Distributor Hold Down SPRING	827234	4096-4105
Felt WICK Bottom of Cam SHAFT	819639	All
Gear PIN	29171	4163
Gear Pin Retainer SPRING	29173	4163
Grease Retainer PLATE	1837077	All
Grease CUP	1841068	4084
Grease CUP	805579	4096-4105-4160
High Tension Screw TERMINAL	1839848	4057-4069-4092-4093-4096-4105-4110
High Tension Screw TERMINAL (Brown)	1839164	When required
LEAD—Condenser	1840376	4163-4186-4209
LEAD—Condenser	1850015	4218
Lubrication NIPPLE	109354	4163-4186-4209
Lubrication NIPPLE	105528	4218
OILER (In Upper Cup)	1837258	All except 4096-4163
OILER (In Upper Cup)	14357	4163-4186-4209-4218
OILER	1843626	4096-4105-4160
PLATE—Weight Hold Down	1885557	4186-4209
Rubber NIPPLE	1839771	4163-4209
Space COLLAR (Cam Shaft)	29461	All
Terminal Connector LEAD (Short)	1837228	All except 4163-4186-4209
Terminal CONNECTOR (Long)	1837268	All except 4163-4186-4209
Terminal CONNECTOR— $1\frac{5}{8}$ " long	825454	4163-4186-4209-4218
Terminal CONNECTOR— $2\frac{7}{8}$ " long	1836907	4163-4186-4209-4218
Terminal Stud CLAMP	1837238	All except 4096-4105-4160-4163
Terminal Stud CLAMP	31656	4163-4186-4209-4218
Terminal Stud CLAMP	1837369	4096-4105-4160
Terminal Stud Insulation BUSHING	1837259	4057-4069-4084-4092-4093-4096-4105-4160
Terminal Stud Insulation BUSHING	1854117	4163-4186-4209-4218
Weight Spring Cotter PIN	137130	All

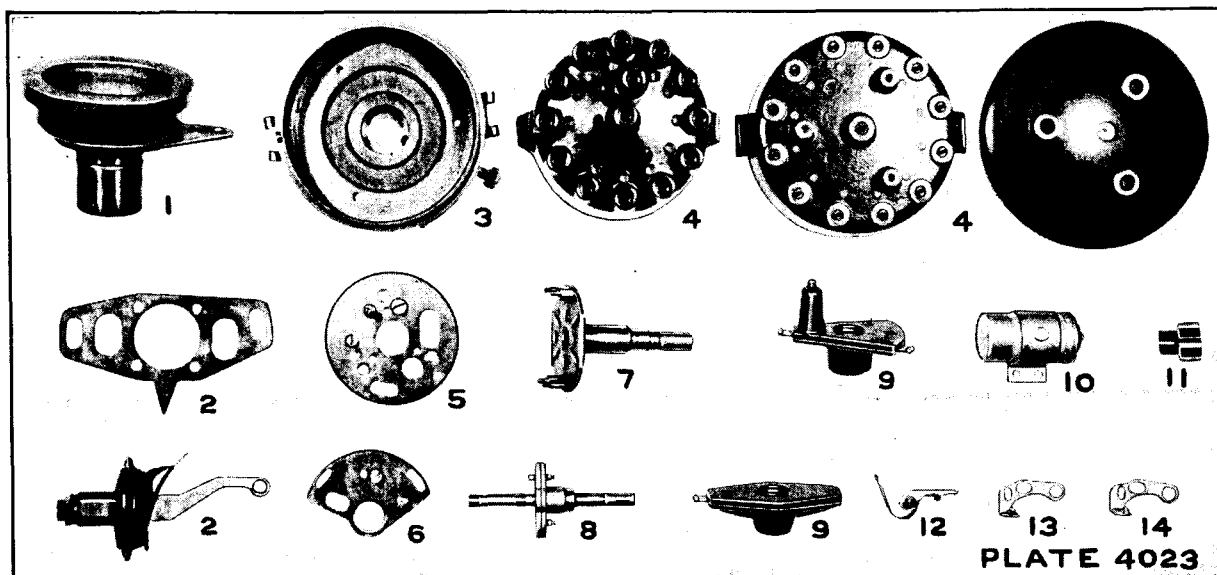

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor Housing	Advance Arm or Vacuum Control	Breaker Cup Upper	Distributor Cap	Breaker Plate Lower	Breaker Plate Upper	Main Shaft	Cam Shaft	Rotor	Condenser	Breaker Cam	Breaker Lever	Contact Support and Point Lower	Contact Support and Point Upper
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
4082	1838195	36960	1840271	1839908	1840279	1837359	1840575	1840576	1839165	1860020	1843202	\$1881394	\$1881399	1881401
4085	1838195	"	"	1841818	"	"	1841820	1838614	1839123	"	1840281	\$	"	"
4086	1838195	"	"	"	"	"	1841836	"	"	"	"	813238	1845785	1849877
4089	1845687	"	"	1842332	"	"	1841998	1842000	1839165	"	"	\$1881394	\$1881399	1881401
4097	1844626	"	"	1839166	"	"	1844629	1838614	1839123	1869707	"	\$	"	"
4100	1845687	1836103	"	1842332	"	"	1841998	1845685	1839165	"	1845683	813238	1845785	1849877
4109	1848563	"	"	"	"	"	1848567	"	"	"	"	\$1881394	\$1881399	1881401
4117	1854481	36960	1853427	1853429	1853425	"	1854714	1854478	1887823	1849126	1854479	813238	1845785	1849877
4140	1848563	1836103	1864910	1839161	"	"	1848567	1845685	1839123	1869707	1845683	\$1881394	\$1881399	1881401
4142	1864804	"	1864807	1853429	1864810	1838997	1864816	1864815	1866437	1849126	1854479	813238	1845785	1849877
4144	1866766	"	1853427	1853429	1853425	1837359	1866768	1884494	1887823	"	"	\$1881394	\$1881399	1881401
4146	1848563	1836103	1864910	1839161	"	"	1848567	1845685	1839123	1869707	1845683	813238	1845785	1849877
4149	1864804	"	1864807	1840298	1864810	1838997	1868215	1864815	1867703	1849126	1867709	"	"	"
4155	1848563	"	1864910	1839161	1853425	1837359	1848567	1845685	1839123	1860020	1845683	\$1881394	\$1881399	1881401
4158	1881261	*1116013	1869206	†1872245	1869219	1869221	1869210	1869215	1869230	1860020	1869227	1842058	1871862	1871862
4169	1844626	"	1840271	1839166	1840279	1837359	1873079	1873093	1839123	1869707	1840281	\$1881394	\$1881399	1881401
4178	1872679	"	1864807	1840298	1864810	1838997	1873690	1873694	1873685	1860020	1873688	\$	"	"
4180	1881261	*1116012	1869206	†1872245	1869219	1869221	1869210	1872879	1869230	1860020	1869227	1842058	1871862	1871862
4188	1881261	x	1877670	"	1877676	"	1877673	1869230	1839123	1869707	1840267	813238	"	"
4199	1844626	"	1840271	1841818	1840279	1837359	1844629	1840266	1839123	1869707	"	"	1845785	1849877
4204	1848563	"	1864910	1839161	1853425	"	1879147	1884494	"	1849126	1845683	\$1881394	\$1881399	1881401
4205	1881261	*1116022	1877670	1872245	1877676	1869221	1880166	1877673	1869230	1860020	1877682	1842058	1871862	1871862
4212	1881011	"	1881011	•1900591	1881013	1838997	1873690	1873694	1889718	1881016	1889723	\$1881394	\$1881399	1881401
4217	1881261	*1116024	1881257	1872245	1877676	1869221	1881254	1877673	1869230	1860020	1877682	813238	1871862	1871862
4219	1838195	"	1853427	1853429	1853425	1837359	1841836	1838614	1839123	"	1840281	1881394	1881399	1881401
4222	1884531	*1116031	1884449	"	1884438	1884440	1884444	1884447	1887823	1881030	1884463	"	1881466	1881466
4223	1881010	"	1881011	•1840298	1885006	1837359	1873690	1873694	1884987	1881016	1873688	"	1881399	1881401
4232	1844626	"	1840271	1839166	1840279	1837359	1844629	1838614	1839123	1869707	1840281	"	"	"
4237	1845687	"	1850983	1842332	1850986	"	1841998	1850989	1839165	"	1845683	813238	1845785	1849877
4241	1881010	"	1881011	•1900591	1881013	1838997	1873690	1873694	•1889718	1881016	1889723	1881394	1881399	1881401

†1869238 is Cap Cover.

*For parts see Distributor Vacuum Control—Group 4.


•Distributor Shield must be secured from Hall-Scott.

•Model does not include Cap and Rotor, which must be ordered separately.

^When replacing Cam or Rotor, both parts must be replaced.

§When replacing standard points with heavy duty points, all four parts must be replaced. Use Contact Package No. 1882021.

Delco-Remy SERVICE PARTS CATALOG

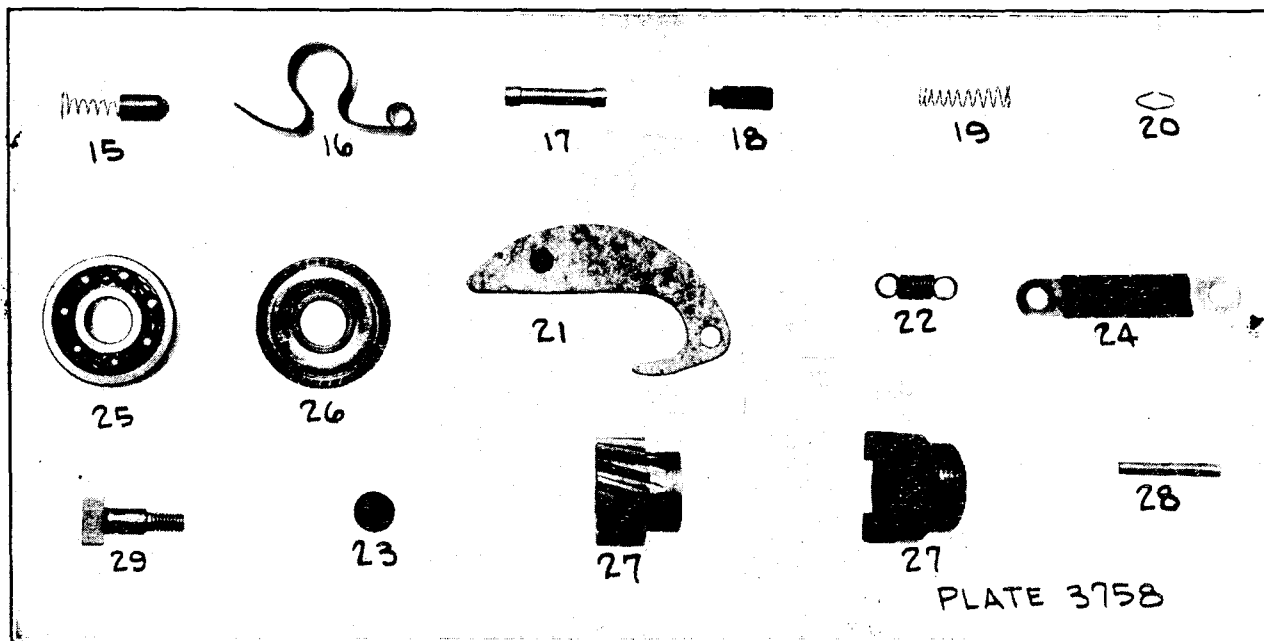

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor Cap Plunger	Distributor Cap Spring	Distributor Cap Spring Pin	Rotor Brush	Rotor Brush Spring	Breaker Lever Retainer Spring	Weight	Weight Spring	Felt Wick in Main Shaft	Terminal Connector Lead	Ball Bearing Lower	Ball Bearing Upper	Gear or Coupling	Gear or Coupling Pin	Terminal Stud
	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29
4082	809445	30111	29802	35607	35617	813245	1845036	1883899	819639	825454	907502	907500	1840580	†	825456
4085	"	"	"	"	"	"	1837879	820619	"	"	"	"	38365	29171	"
4086	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"
4089	"	"	"	"	"	"	1880436	820508	"	"	"	"	"	"	"
4097	"	"	"	"	"	"	1837879	1911496	"	"	"	"	"	829421	"
4100	"	"	"	"	"	"	820528	1902376	"	"	"	"	"	"	"
4109	"	"	"	"	"	"	"	1886508	"	"	"	"	"	"	"
4117	"	"	"	"	"	"	1880436	1883121	"	"	"	"	"	"	1854115
4140	"	"	"	"	"	"	"	1886508	"	"	"	"	"	"	"
4142	"	"	"	"	"	"	1840268	823238	"	"	"	1865335	"	"	"
4144	"	"	"	"	"	"	1880902	1883121	"	"	"	907500	†	"	"
4146	"	"	"	"	"	"	1880436	820722	"	"	"	"	"	"	"
4149	"	"	"	"	"	"	1840268	1886538	"	"	"	1865335	"	"	"
4155	"	"	"	"	"	"	1880436	1886508	"	"	"	907500	"	"	"
4158	"	"	"	"	"	"	1880902	822172	"	□1883840	954147	954218	1840500	1857492	"
4169	"	"	"	35607	35617	813245	"	1886508	"	825454	907502	907500	"	"	825456
4178	"	"	"	"	"	"	1873697	1883899	"	"	954147	"	1873698	829421	1854115
4180	"	"	"	"	"	"	1880902	822172	"	1883840	"	954218	1874112	"	"
4188	"	"	"	"	"	"	"	1883373	"	"	954147	954279	"	"	"
4199	"	"	"	35607	35617	813245	1840268	822172	"	825454	907502	907500	△	"	825456
4204	"	"	"	"	"	"	1880902	1879149	"	"	"	"	"	"	"
4205	"	"	"	"	"	"	"	820722	"	□1883840	954147	954279	1874112	"	1854115
4212	"	"	"	35607	35617	813245	1873697	1886557	"	"	"	907500	1873698	"	"
4217	"	30111	29802	"	"	"	1880902	1886538	"	1883840	"	954279	1874112	"	1854115
4219	"	"	"	35607	35617	813245	1837879	1883874	"	825454	907502	907500	"	"	"
4222	"	"	"	"	"	"	1880902	1884526	"	1883840	954147	954279	"	"	"
4223	"	"	"	"	"	813245	1873697	1886557	"	"	"	907500	1840580	829421	"
4232	"	30111	29802	"	"	"	1837879	1883373	"	825454	907502	"	1886978	"	825456
4237	"	"	"	"	"	"	820528	1887885	"	"	"	"	"	"	"
4241	"	"	"	"	"	"	1873697	1886557	"	"	954147	"	1873698	829421	"

*Gear supplied by car manufacturer.

†1857492 is $\frac{1}{8}$ " dia. 829421 ($\frac{1}{8}$ " dia.) was also used.

△825454 is $1\frac{1}{8}$ " long; 1835198 which is $4\frac{1}{8}$ " long was also used on 4089-4100-4109-4146-4204-4237. 1836907 which is $2\frac{1}{8}$ " long is also used on 4117-4140-4144-4155-4219.

†Gear furnished by car manufacturer. If Cushion Gear is required use Gear Package No. 1927195.

parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Breaker Cup Attaching Screw LOCK WASHER.....	121841	All except 4212-4222-4223
Breaker Cup Attaching Screw LOCK WASHER.....	120217	4212-4222-4223-4241
Breaker Lever Spring Screw LOCK WASHER.....	121841	All except 4188
Breaker Plate Attaching Screw LOCK WASHER.....	121841	All except 4188
Breaker Plate Attaching Screw LOCK WASHER (Upper).....	121841	4188-4205-4217
Condenser Attaching Screw LOCK WASHER.....	121841	All except 4217-4222
Condenser Attaching Screw LOCK WASHER.....	120217	4222
Condenser Attaching Screw LOCK WASHER.....	114603	4217
Condenser Bracket Attaching Screw LOCK WASHER.....	121841	4237
Condenser Terminal LOCK WASHER.....	118869	All except 4097-4100 4109-4140-4169-4232-4237
Condenser Terminal LOCK WASHER.....	138530	4097-4100-4109-4140-4169-4232-4237
Distributor Hold Down Screw LOCK WASHER.....	803919	4082
Distributor Hold Down Nut LOCK WASHER.....	120380	4085-4086-4142-4144-4149-4169
Distributor Hold Down Screw LOCK WASHER.....	35498	4085-4086
Distributor Mounting Plate Screw LOCK WASHER.....	120380	4212-4219-4222-4223-4232-4241
Housing Plug Screw LOCK WASHER.....	120380	All
Terminal Clamp Screw LOCK WASHER.....	106496	4158-4188-4205-4217-4222
Terminal Clamp Screw LOCK WASHER.....	115544	All except 4158-4188-4205-4217-4222-4237
Terminal Connector Screw LOCK WASHER (To Breaker Plate).....	106496	4237
Terminal Stud Nut LOCK WASHER.....	106497	4082-4085-4089-4097-4109-4117-4140-4142-4144-4146-4149-4155-4158-4169-4178-4180-4188-4199-4204-4205-4217-4219-4222-4232-4237
Vacuum Control Arm Screw LOCK WASHER.....	106497	4158-4180-4188-4205-4217
Vacuum Control Arm Attaching Screw LOCK WASHER.....	106495	4222
Vacuum Control Attaching Screw LOCK WASHER.....	106497	4158-4180-4188-4205-4217-4222
Weight Hold Down Nut LOCK WASHER.....	1885558	4144-4158-4169-4178-4180-4188-4204-4205-4212-4223-4241
Weight Hold Down Nut LOCK WASHER (No. 8).....	106496	4144-4169-4178-4180-4188-4212
Weight Hold Down Nut LOCK WASHER (3/4).....	120380	4217-4222
Weight Hold Down Nut LOCK WASHER (No. 10).....	106497	4204-4205
NUTS		
Ball Bearing Retainer NUT—Outer.....	1869251	All
Ball Bearing Retainer NUT—Inner.....	35437	All except 4158-4188-4205-4212-4217-4222-4223-4237
Ball Bearing Retainer NUT—Inner.....	1869252	4158-4178-4180-4188-4205-4212-4217-4223-4241
Ball Bearing Retainer NUT—Inner.....	1874192	4222
Breaker Lever Spring Fastening Screw NUT.....	817363	All
Breaker Lever Spring Stud NUT.....	817363	All except 4085-4100-4158-4180-4188-4205-4217
Condenser Attaching Screw NUT.....	817363	4237
Condenser Terminal NUT.....	817363	All except 4188
Distributor Mounting Plate Screw NUT.....	803880	4082-4117-4144-4178-4212-4222-4223-4241
Distributor Mounting Plate Screw NUT.....	114492	4085-4086-4219
Distributor Mounting Plate Screw NUT.....	120375	4232
Terminal Stud NUT.....	5024654	4082-4089-4109-4140-4142-4144-4146-4155-4158-4169-4178-4180-4188-4199-4204-4205-4217-4219-4222-4232-4237
Weight Hold Down NUT (8-32).....	120622	4144-4158-4169-4178-4180-4188-4205-4212-4223-4241
Weight Hold Down NUT (3/4-28).....	125215	4217-4222
Weight Hold Down Plate NUT (10-32).....	120614	4144-4158-4169-4178-4180-4188-4204-4205-4212-4223-4241
SCREWS AND STUDS		
Breaker Cup Attaching SCREW—Upper.....	132768	4082-4085-4086-4089-4097-4100-4109-4117-4140-4142-4144-4146-4149-4155-4169-4178-4199-4204-4219-4232-4237
Breaker Cup Attaching SCREW—Upper.....	132923	4222
Breaker Cup Attaching SCREW.....	132776	4158-4180-4188-4205-4217
Breaker Cup Attaching SCREW.....	1881035	4212-4223-4241
Breaker Lever Spring Attaching SCREW.....	1835943	4212-4223-4241
Breaker Lever Spring Fastening SCREW.....	813511	All except 4212-4223
Breaker Lever Spring STUD.....	1837225	All except 4085-4100-4158-4180-4188-4205-4217-4222-4232-4237-4241
Breaker Plate Attaching SCREW—Lower.....	137206	4144-4158-4169-4178-4180-4188-4199-4204-4219-4232

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
CREWS AND STUDS—Continued		
Breaker Plate Attaching SCREW—Lower.....	121832	4237
Breaker Plate Attaching SCREW—Lower.....	1881021	4212-4223-4241
Breaker Plate Attaching SCREW—Upper (8-32x $\frac{1}{2}$).....	816784	All except 4188-4205-4217
Breaker Plate Attaching SCREW—Upper (8-32x $\frac{1}{4}$ Fil. hd.).....	131954	4188-4205-4217
Breaker Plate SCREW.....	115397	4158-4180-4188-4199-4204-4219-4222
Cam Adjusting SCREW.....	13474	4082-4085-4086-4089-4097-4158-4169-4178-4180-4188-4199-4205-4217-4219-4232
Cam Adjusting SCREW.....	1843630	4100-4109-4117-4140-4142-4144-4146-4149-4155-4204-4212-4222-4223-4237-4241
Condenser Attaching SCREW.....	121749	All except 4217-4222-4237
Condenser Attaching SCREW.....	1901833	4237
Condenser Attaching SCREW.....	132103	4217
Condenser Attaching SCREW.....	142210	4222
Condenser Attaching SCREW.....	121749	4237
Condenser Bracket Attaching SCREW.....	122159	4142-4144-4149-4158-4188-4199-4204-4205-4217-4219-4222
Condenser Terminal SCREW.....	122159	4142-4144-4149-4158-4188-4199-4204-4205-4217-4219-4222
Contact Adjusting SCREW.....	816784	All
Distributor Cap Cover Attaching SCREW.....	134357	4158-4180-4188-4205-4217
Distributor Housing Plug SCREW.....	429182	All
Distributor Mounting Plate SCREW.....	25747	4082-4117-4144-4178-4212-4222-4223-4241
Distributor Mounting Plate SCREW.....	35483	4085-4086-4097-4199-4219
Distributor Mounting Plate SCREW.....	1837895	4100-4109-4140-4146-4155-4204-4237
Distributor Mounting Plate SCREW.....	1872443	4142-4149-4169
Distributor Mounting Plate SCREW.....	1867893	4232
Rotor Set SCREW.....	140880	4241
Terminal Clamp SCREW.....	107710	All
Terminal Connector SCREW (To Breaker Plate).....	116198	4237
Vacuum Control Arm Attaching SCREW—To Breaker Plate.....	1902652	4158-4180-4188-4205-4217
Vacuum Control Arm Attaching SCREW—To Breaker Plate.....	1902147	4222
Vacuum Control Attaching SCREW—10-32x $\frac{1}{4}$	132892	4158-4180-4188-4205-4217-4222
VASHERS		
Ball Bearing Insulation WASHER (Inner Race—Upper).....	1874324	4180
Ball Bearing Insulation WASHER (Outer Race—Upper).....	1874108	4180
Ball Bearing Insulation WASHER (Upper in Clamp Plate).....	1877680	4188-4205-4217-4222
Ball Bearing Insulation WASHER (Upper—Under Breaker Plate).....	1877679	4188-4205-4217-4222
Ball Bearing Space WASHER (Upper).....	1874111	4180
Breaker Lever Spring Screw WASHER.....	810794	All
Breaker Lever Spring Stud Insulating WASHER (.284 O.D.).....	1837223	All except 4085-4100-4158-4180-4188-4205-4217
Breaker Lever Spring Stud Insulating WASHER ($\frac{3}{8}$ O.D.).....	1837224	All except 4085-4100-4158-4180-4188-4205-4217
Breaker Lever Spring Stud Steel WASHER.....	810794	All except 4085-4100-4158-4180-4188-4205-4217
Breaker Plate Attaching Screw Insulating WASHER.....	810024	4237
Breaker Plate Attaching Screw Ins. Bushing WASHER.....	1837223	4237
Cam Shaft Retainer WASHER.....	1869217	4158
Cam Shaft Shim WASHER.....	32383	4158
Condenser Bracket Attaching Screw WASHER.....	810794	4237
Condenser Terminal WASHER (.193x $\frac{3}{8}$ x $\frac{1}{4}$).....	813767	4089-4097-4100-4109-4140-4142-4144-4146-4149-4155-4158-4169-4180-4199-4232-4237
Condenser Terminal Plain WASHER (.168x $\frac{3}{8}$ x $\frac{1}{4}$).....	1884832	4097-4100-4109-4140-4169-4232-4237
Distributor Mounting Plate Screw WASHER.....	120386	4082-4117-4142-4144-4149-4169-4212-4222-4223-4232-4241
Distributor Mounting Plate Screw WASHER.....	21168	4085-4086-4097-4109-4140-4146-4155-4178-4109-4204-4219-4237
Felt WASHER (On Weight Plate).....	1837215	All
Felt WASHER (Under Upper Ball Bearing).....	1874107	4180-4188-4205-4217-4222
Felt WASHER (Under Upper Ball Bearing).....	1838320	All except 4180-4188-4205-4217-4222
Rubber WASHER (Use with 1839164 Terminal).....	1881402	
Shim WASHER (.005 thk.).....	810074	4180-4188-4205-4217
Shim WASHER (.010 thk.—over upper Ball Bearing).....	35104	4180
Shim WASHER (.010 thk.).....	810078	4180-4188-4205-4217
Terminal Connector Screw WASHER (To Breaker Plate).....	810794	4237
Terminal Stud Insulating WASHER—Outside.....	20076	All
Terminal Stud Insulating WASHER—Inside.....	825458	All
Terminal Stud Plain WASHER—Inside.....	1902988	All
Terminal Stud Plain WASHER—Outside.....	27041	All

MINOR PARTS SECTION


Name	Part No.	Used on Models
WASHERS—Continued		
Vacuum Control Arm Screw WASHER.....	807295	4158-4280-4188-4205-4217
Weight WASHER.....	811124	All
Weight Spring Retainer WASHER.....	36259	All except 4144
MISCELLANEOUS		
Advance Arm RIVET.....	1840916	4089
Advance Arm RIVET.....	34284	4082-4085-4086-4097-4100-4117
Advance Arm RIVET.....	1848565	4109-4140-4142-4146
Advance Arm Dial.....	1837394	4097-4169-4199
Breather PIPE.....	1860880	All
Ball Bearing Clamp PLATE.....	1869224	4158-4180
Ball Bearing Clamp PLATE.....	1877678	4188-4205-4217
Ball Bearing Clamp PLATE—Upper.....	1884442	4222
Ball Bearing Ins. SLEEVE—Inner.....	1874110	4180
Ball Bearing Ins. SLEEVE—Outer.....	1874109	4180
Ball Bearing Retainer CLIP.....	1838319	All
Ball Bearing Retainer Nut PIN (Outer Race).....	1841135	4082-4089-4097-4100-4109-4117-4140-4142-4144-4146-4149-4155-4158-4169-4178-4180-4188-4199-4204-4205-4212-4217-4219-4222-4223-4232-4237-4241
Ball Bearing Space COLLAR—Upper.....	1877681	4188-4205-4217-4222
Ball Bearing Space COLLAR—Upper.....	29221	All except 4158-4188-4205-4217-4222
Ball Bearing Space COLLAR—Upper.....	1869241	4158
Ball Bearing Space COLLAR—Upper.....	1850981	4237
Breaker Lever Connector LEAD.....	1869226	4158
Breaker Lever Connector LEAD.....	1874104	4180-4188-4205-4217
Breaker Plate COVER.....	1874103	4180-4188-4205-4217
Breaker Plate Ground LEAD (4 $\frac{3}{4}$ " long).....	1883870	4158-4180-4188-4205-4217
Breaker Plate Ground LEAD (3 $\frac{1}{4}$ " long).....	1884451	4188-4205-4217-4222
Breaker Plate INSULATING PLATE.....	1850988	4237
Cam Set Screw WRENCH—For 1843202 Cam.....	779429	4082
Condenser BRACKET.....	1850982	4237
Condenser LEAD (3 $\frac{3}{4}$ " long).....	1840376	4082-4085-4086-4089-4097-4100-4109-4142-4146-4149-4169-4178-4199-4204-4219-4222-4232
Condenser LEAD.....	1850015	4117-4140-4144-4155-4237
Condenser LEAD (6" long).....	1840377	4082-4085-4086-4097-4142-4149-4169-4178-4199-4219-4232
Condenser LEAD (3" long).....	1868117	4158-4180-4188-4205-4217-4222
Condenser Retainer PLUG.....	1881022	4212-4223-4241
Coupling Pin Retainer SPRING.....	29173	4085-4086
Distributor Cap COVER.....	1869238	4158-4180-4205-4217
Distributor Cap Spring SUPPORT.....	825429	All
Distributor Cap Spring Support RIVET.....	111892	All
Distributor Mounting PLATE.....	1837394	4089-4100-4109-4146-4149-4155-4204-4237
Distributor Mounting PLATE.....	36961	4232
Distributor Mounting Plate Screw SPRING.....	35498	4089-4097-4100-4109-4140-4146-4155-4199-4204-4219-4237
Dowel PIN—Advance Arm.....	1857751	4140-4142-4146
High Tension Cable TERMINAL—Soft Rubber.....	1869253	4158-4180-4188-4205-4217
Lubricating NIPPLE.....	110308	4142-4149-4178-4212-4223-4241
OILER.....	14357	4082-4085-4086-4089-4097-4100-4109-4117-4140-4144-4146-4155-4169-4199-4204-4219-4232-4237
OILER.....	815641	4222
OILER.....	1880635	4142-4149
OILER.....	1869208	4158-4180-4188-4205-4217
Rotor Retainer SPRING.....	1866446	4142-4149-4158-4180
Rotor Retainer SPRING.....	1889722	4241
Rotor Retainer SPRING.....	1873687	4178-4223
Rubber NIPPLE.....	1839771	4082-4085-4086-4219-4222
SCREEN—In Breaker Cup.....	1881458	4212-4223-4241
Screen RETAINER—In Breaker Cup.....	1881459	4212-4223-4241
SPRING—Condenser Contact.....	1888158	4212-4223-4241
Terminal CLAMP.....	31656	All
TERMINAL (High Tension—Screw Type).....	1839164	4082-4085-4086-4089-4100-4140-4146-4249-4155-4178-4180-4199-4204-4219-4222
Terminal Stud Insulating BUSHING.....	825457	4082-4085-4086-4089-4097-4100-4109-4169-4232-4237
Terminal Stud Insulating BUSHING.....	1854117	4117-4140-4142-4144-4146-4155-4158-4178-4180-4188-4204-4205-4219-4222

Parts not listed in this Catalog will not be sold separately.

Delco-Remy
SERVICE PARTS CATALOG

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
Vacuum Control Arm Attaching Screw CLAMP.....	1869335	4158-4180-4188-4205-4217
Vacuum Control Arm Bearing BUSHING.....	1869239	4158-4180-4188-4205-4217
Vacuum Control Bracket CLAMP.....	1865984	4158-4180-4188-4205-4217-4222
Vapor SEAL.....	1847386	4109-4140-4142-4144-4146-4149-4155- 4204-4222
Weight Hold Down CUP (for 1/4" Stud).....	1881256	4217-4222
Weight Hold Down Cup Cotter PIN.....	107761	4217-4222
Weight Hold Down PLATE.....	1885557	4144-4158-4169-4178-4180-4188-4204- 4205-4212-4223-4141
Weight Space COLLAR.....	1871207	4204
Weight Spring Cotter PIN.....	137130	All except 4144

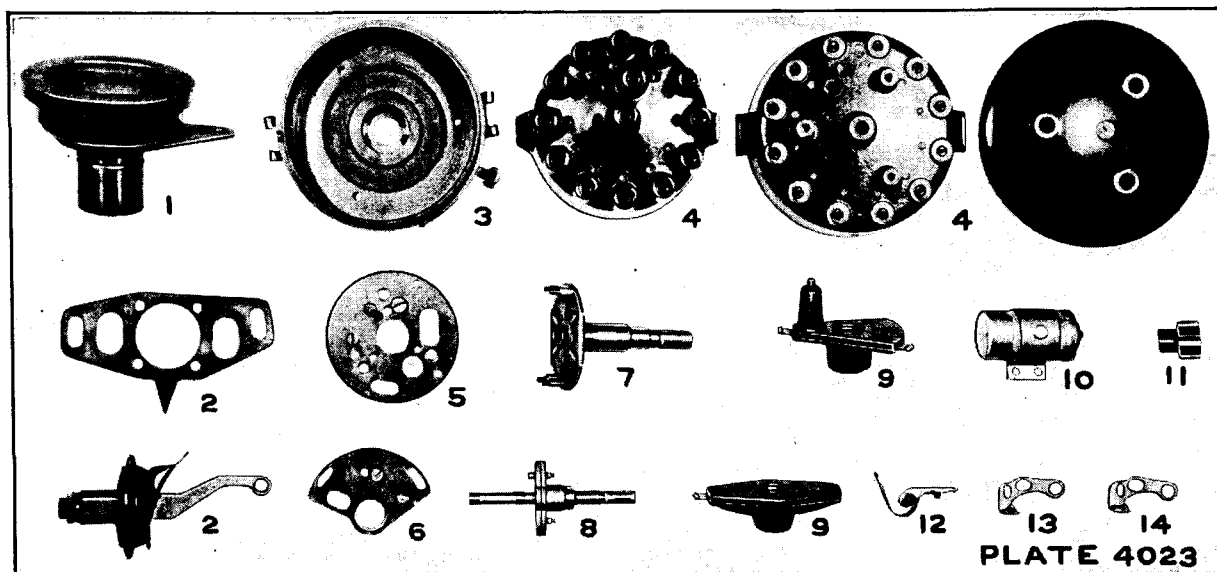


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distrib- utor Housing	Advance Arm or Vacuum Control	Breaker Cup Upper	Distrib- utor Cap	Break- er Plate Lower	Break- er Plate Upper	Main Shaft	Cam Shaft	Rotor	Con- denser	Break- er Cam	Breaker Lever	Contact Support and Point Lower	Contact Support and Point Upper
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
*4242	1881010		1881011	*1900591	1885006	1837359	1873690	1873694	*1884987	1881016	1873688	1881394	1881399	1881401
4245	1844626		1840271	1841818	1840279	"	1844629	1838614	1839123	1869707	1840281	"	"	"
4249	"		"	1839166	"	"	1903713	1873093	"	"	"	"	"	"
*4252	1905326		1881011	*1900591	1885006	"	1873690	1873694	*1884987	1881016	1873688	"	"	"

*Model does not include Cap & Rotor, which must be ordered separately.

Delco-Remy

SERVICE PARTS CATALOG

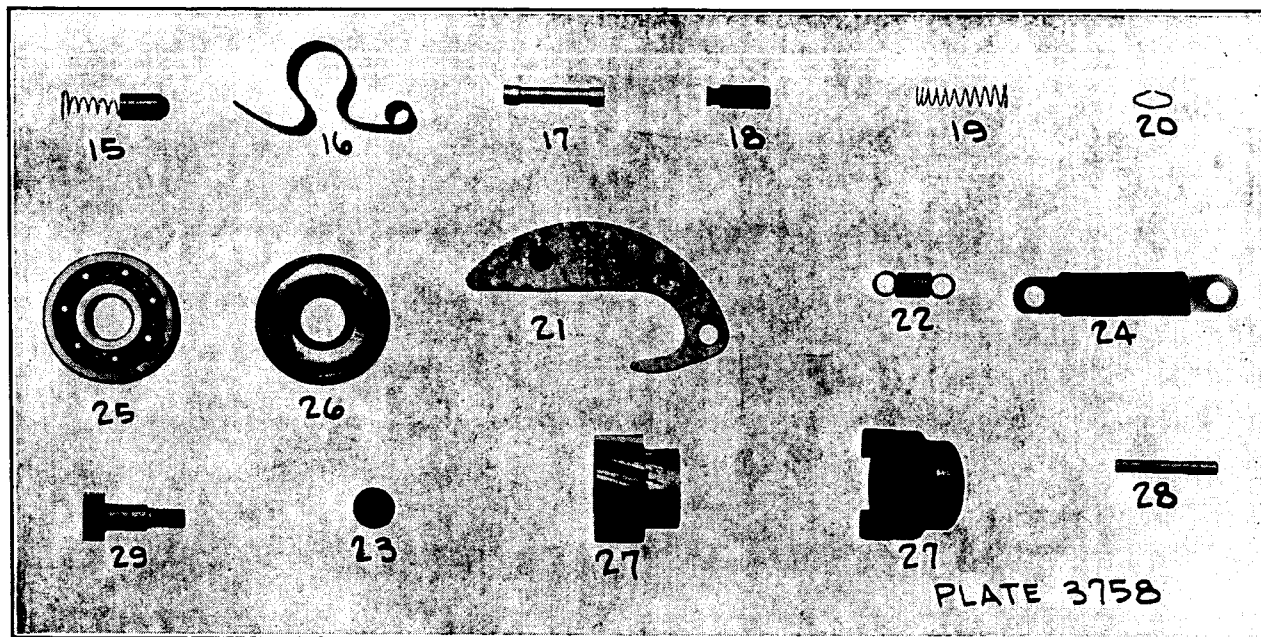

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor Cap Plunger	Distributor Cap Spring	Distributor Cap Spring Pin	Rotor Brush	Rotor Brush Spring	Breaker Lever Retainer Clip	Weight	Weight Spring	Felt Wick in Main Shaft	Terminal Connector Lead	Ball Bearing Lower	Ball Bearing Upper	Gear or Coupling	Gear or Coupling Pin	Terminal Stud
	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29
4242	809445			35607	35617	813245	1873697	1886557	819639		954147	907500	1840580	829421	
4245	"	30111	29802	"	"	"	1837879	1883373	"	825454	907502	"	*	*	825456
4249	"	"	"	"	"	"	1880902	1885756	"	"	"	"	1886978	829421	"
4252	"			"	"	"	1873697	1886557	"		954147	"	1840580	"	

*Gear or Coupling & Pin not furnished by Delco-Remy.

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Cup Attaching Screw.....	106497	4242-52
Lock Washer—Breaker Cup Attaching Screw.....	106496	4245-49
Lock Washer—Breaker Plate Attaching Screw—Lower.....	106496	4242-45-49-52
Lock Washer—Breaker Lever Spring Attaching Screw.....	106496	4242-52
Lock Washer—Breaker Lever Spring Attaching Stud.....	106496	4242-52
Lock Washer—Condenser Attaching Screw.....	106496	4245-49
Lock Washer—Condenser Terminal Nut.....	138530	4245-49
Lock Washer—Distributor Dial Plate Screw.....	120380	4242-49-52
Lock Washer—Distributor Housing Plug Screw.....	120380	4242-45-49-52
Lock Washer—Terminal Clamp Screw.....	138530	4245-49
Lock Washer—Terminal Stud Nut—Inside.....	106497	4245-49
Lock Washer—Weight Hold Down Nut (Tang).....	1885558	4242-49-52
Lock Washer—Weight Hold Down Nut.....	106496	4242-49-52
NUTS		
Nut—Ball Bearing Retainer—Inner Race.....	1869252	4242-52
Nut—Ball Bearing Retainer—Inner Race.....	35437	4245-49
Nut—Ball Bearing Retainer—Outer Race.....	1869251	4242-45-49-52
Nut—Breaker Lever Spring Attaching Screw.....	817363	4242-45-49-52
Nut—Breaker Lever Spring Attaching Stud.....	817363	4242-45-49-52
Nut—Condenser Terminal.....	817363	4245-49
Nut—Distributor Mounting Plate Screw.....	803880	4242-52
Nut—Terminal Stud—Inside.....	5024654	4245-49
Nut—Weight Hold Down.....	120622	4242-49-52
SCREWS & STUDS		
Screw—Breaker Cup Attaching.....	132128	4242-52
Screw—Breaker Cup Attaching.....	132768	4245-49
Screw—Breaker Lever Spring Attaching.....	1835943	4242-52
Screw—Breaker Lever Spring Attaching.....	813511	4245-49
Screw—Breaker Plate Attaching—Lower.....	1881021	4242-52
Screw—Breaker Plate Attaching—Lower.....	137206	4245-49
Screw—Breaker Plate Attaching—Upper.....	816784	4242-45-49-52
Screw—Cam Adjusting.....	1843630	4242-52
Screw—Cam Adjusting.....	13474	4245-49
Screw—Condenser Attaching.....	115607	4245-49
Screw—Contact Adjusting.....	816784	4242-45-49-52
Screw—Dial Plate Attaching.....	35483	4245
Screw—Dial Plate Attaching.....	214602	4249
Screw—Distributor Housing Plug.....	429182	4242-45-49-52
Screw—Distributor Mounting Plate.....	25747	4242-52
Screw—Terminal Clamp.....	107710	4245-49
Stud—Breaker Lever Spring Attaching.....	1837225	4242-45-49-52
WASHERS		
Washer—Breaker Lever Spring Attaching Screw—Plain.....	810794	4242-45-49-52
Washer—Breaker Lever Spring Attaching Stud—Plain.....	810794	4242-45-49-52
Washer—Breaker Lever Spring Attaching Stud—Ins.....	1837224	4242-45-49-52
Washer—Breaker Lever Spring Attaching Stud—Ins. Bushing.....	1837223	4242-45-49-52
Washer—Cam Shaft Hold Down.....	811124	4245-49
Washer—Felt—Under Upper Ball Bearing.....	1838320	4245-49
Washer—Felt—Over Weights.....	1837215	4245
Washer—Ins.—Terminal Stud—Inside.....	825458	4245-49
Washer—Ins.—Terminal Stud—Outside.....	20076	4245-49
Washer—Plain—Condenser Terminal ($\frac{1}{4}$ thk.).....	813767	4245-49
Washer—Plain—Condenser Terminal ($\frac{1}{4}$ thk.).....	1884832	4245-49
Washer—Plain—Dial Plate Screw.....	21168	4245
Washer—Plain—Distributor Dial Plate Screw.....	120386	4242-49-52
Washer—Plain—Terminal Stud—Inside.....	1902988	4245-49
Washer—Plain—Terminal Stud—Outside.....	27041	4245-49
Washer—Spring Dial Plate Screw.....	35498	4245
Washer—Weight.....	811124	4242-45-49-52
MISCELLANEOUS		
BUSHING—Terminal Stud Insulating.....	825457	4245-49
CLAMP—Terminal.....	31656	4245-49
CLIP—Ball Bearing Retainer—Upper.....	1838319	4242-45-49-52
COLLAR—Ball Bearing Space.....	29221	4242-45-49-52

Parts not listed in this Catalog will not be sold separately.


MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
LEAD—Condenser (3¾" long).....	1840376	4245-49
LEAD—Condenser (6" long).....	1840377	4245-49
NIPPLE—Lubricating.....	110308	4242-52
OILER.....	14357	4245-49
PIN—Ball Bearing Retainer Nut.....	1841135	4242-45-49-52
PIN—Cotter—Cam Hold Down Washer.....	137130	4245
PIN—Cotter—Weight Spring.....	137130	4245
PIPE—Breather.....	1860880	4242-45-52
PLATE—Dial.....	1837394	4245-49
PLATE—Weight Hold Down.....	1885108	4242-45-52
PLUG—Condenser Retainer.....	1881022	4242-52
RIVET—Distributor Cap Spring Support.....	111892	4245-49
SPRING—Condenser Contact.....	1888158	4242-45-52
SPRING—Rotor Retainer.....	1873687	4242-52
SUPPORT—Distributor Cap Spring.....	825429	4245-49

Delco-Remy
SERVICE PARTS CATALOG

DISTRIBUTOR—Group 29
Models 629-A to Z
Page 1

Revised to Jan. 15, 1947

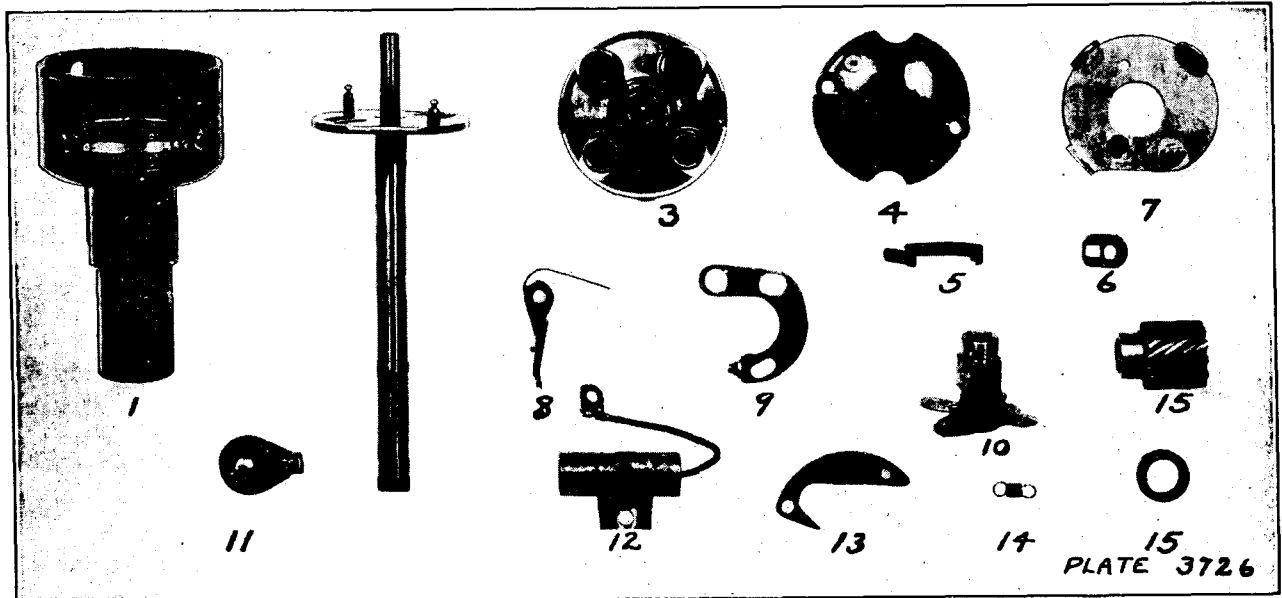

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor Housing	Main Shaft	Cap	Cap Cover	Cap Spring	Cap Spring Support	Breaker Plate	Breaker Lever	Contact Point and Support	Breaker and Automatic Cam	Rotor	Condenser	Weight	Weight Spring	Gear Coupling or Collar
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
629-A	1842078	1838071	1835536		816801	826476	826474	1842058	1847341	818794	816774	1869704	1842943	818304	821865
629-B	820668	1883867	"		"	"	"	813238	"	"	"	1869706	"	1883779	1838525
629-C	826494	1883866	826616	826618	"	"	"	"	"	"	"	"	"	821464	809673
629-D	820668	1883439	1835536		"	"	"	"	"	818427	"	1869704	823595	821648	"
629-E	1842078	1838071	"		"	"	"	"	"	818794	"	1869706	1842943	818304	821865
629-G	820668	1839047	"		"	"	"	"	"	"	"	"	"	1883779	1840969
629-H	1842078	1845657	"		"	"	"	"	"	"	"	1869704	"	818304	821865
629-J	820668	1839047	"		"	"	"	"	"	"	"	1869706	"	1883779	1841699
629-K	820676	1842939	"		"	"	"	"	"	"	"	1869704		"	1842945
629-L	820668	1839047	"		"	"	"	"	"	"	"	1869706	1842943	829532	809673
629-M	1844852	1845657	"		"	"	"	"	"	"	"	1869704	"	1844284	821865
629-N	1850155	1885003	"		"	"	"	"	"	"	"	"	"	1884615	*
629-P	820668	1845343	"		"	"	"	"	"	"	"	"	"	1883664	*
629-R	1844852	1845657	"		"	"	"	"	"	"	"	1869706	"	818304	821865
629-S	820676	1842939	"		"	"	"	"	"	"	"	1869704	x	821464	1849184
629-T	"	"	"		"	"	"	"	"	"	"	1869706	x	1883779	1849491
629-U	"	1850720	"		"	"	"	"	"	"	"	1869704	x	"	1849526
629-V	"	"	"		"	"	"	"	"	"	"	1869706	x	"	1849491
629-W	826494	1883866	826616	826618	"	"	"	"	"	"	"	"	1842943	818304	809673
629-X	1853857	1885003	"	"	"	"	"	1842058	"	818427	"	1869704	823595	817261	"
629-Y	1858024	1858026	1835536		"	"	"	813238	"	818794	"	"	1842943	818304	1842541
629-Z	820668	1861372	"		"	"	"	"	"	"	"	1869706	"	"	1861373
.....															
.....															

See Advance Arm—Group 1 for parts of Advance Arms.


*Gear supplied by car manufacturer.

*Part of Main Shaft and Weight Assembly.

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Breaker Plate Support Screw LOCK WASHER.....	106496	All
Condenser Mounting Screw LOCK WASHER.....	106497	All
Condenser Terminal LOCK WASHER.....	118869	629-Y
Distributor Cap Spring Support Screw LOCK WASHER.....	106496	All
Terminal Screw Nut LOCK WASHER (Inside—Shakeproof).....	114602	All
Terminal Screw Nut LOCK WASHER (Shakeproof—Outside).....	115544	All except 629-N
Terminal Screw Nut LOCK WASHER.....	106496	629-N
NUTS		
Terminal NUT.....	120622	All
Terminal NUT (Condenser).....	817363	629-Y
SCREWS		
Breaker Plate Support SCREW—8-32x5/16.....	115607	All
Condenser Mounting SCREW.....	115417	All
Condenser Terminal SCREW.....	122159	629-Y
Contact Point Support Adjusting SCREW.....	816784	All
Distributor Cap Spring Support SCREW—8-32x5/16.....	115607	All
Distributor Cap Cover Attaching SCREW.....	803912	629-C-W-X
Terminal SCREW.....	820987	All
WASHERS		
Condenser Terminal Plain WASHER.....	807716	629-Y
Condenser Terminal Plain WASHER.....	813767	629-Y
Contact Arm Stud Insulation WASHER.....	1868766	All
Distributor Space WASHER (Shipped separate).....	1841904	629-R-M
Shim WASHER—.005 Thick.....	810074	All
Shim WASHER—.010 Thick.....	810078	All
Space WASHER (Under Breaker Plate).....	811912	All
Space WASHER (Under Gear or Collar).....	811912	All
Terminal Screw Insulation WASHER—Outside.....	816806	All
Terminal Screw Bushing WASHER (.272 O.D.).....	1904600	All
Terminal Screw Steel WASHER.....	807716	All
Weight WASHER.....	811124	All
MISCELLANEOUS		
Breaker Lever Spring Insulation STRIP.....	820991	All
Cap Carbon BUTTON.....	*821604	All
Contact Arm Retainer SPRING.....	813245	All
Condenser LEAD—To Terminal Stud.....	813515	629-Y
Coupling PIN.....	1857492	629-C-D-M-W-X
Felt WICK.....	816803	All
Gear or Collar PIN.....	1862218	629-A-B-E-G-H-J-M-R
Gear PIN.....	1857502	629-K-S-T-U-V
Gear PIN.....	822273	629-Y
Gear PIN.....	1861374	629-Z
Grease CUP.....	805579	All
Low Tension LEAD.....	805503	629-B
Low Tension LEAD (Shipped separate).....	811569	629-G
PLUG—Pipe.....	125947	629-G-K-M-N-S-T-U
Terminal INSULATION (Square).....	820988	All
Terminal CLIP, H.T. for 7 M.M. Cable, Press on type.....	829833	All
Terminal CLIP, H.T. for 7 M.M. Cable, Solder type.....	829537	All
Weight Retainer SPRING.....	813245	All

*If button recess in cap is spherical bottom drilled use part 1938193.

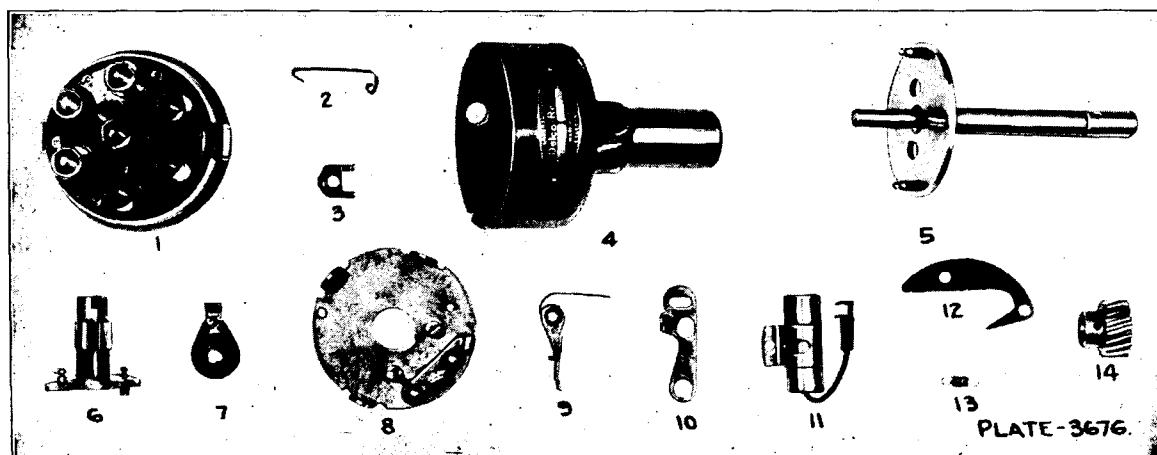

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distrib- utor Cap	Cap Clamp Spring	Cap Spring Support	Distrib- utor Housing	Main Shaft	Cam	Rotor	Breaker Plate	Breaker Lever	Contact Point and Support	Con- denser Assem- bly	Weight	Weight Spring	Gear or Coupling
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
642-A	824735	834069	811744	1836561	1880984	824734	820445	821150	813238	1848038	1869704	1873697	824668	1842094
642-B	825409	"	"	828443	1836578	1839062	"	"	"	"	"	820528	820438	"
642-C	824735	"	"	822622	1837382	"	"	"	"	"	"	"	"	1837384
642-D	"	"	"	"	"	"	"	"	"	"	"	"	"	1837479
642-E	"	"	"	1843749	1842523	822627	"	"	"	"	1900272	818222	822172	▲
642-F	"	"	"	1843749	1839868	"	"	"	"	"	"	"	818494	▲
642-G	"	"	"	822622	823000	1838117	"	"	"	"	1869704	"	820438	809673
642-H	"	"	"	1840537	1839868	822627	"	"	"	"	"	"	818494	1839067
642-J	"	"	"	822622	1838453	821472	"	"	"	"	"	"	822172	1837676
642-M	†824987	"	"	1840004	1840011	1840010	"	"	"	"	"	1841312	820722	1838526
642-N	*"	"	"	1840008	1839892	1839895	"	"	"	"	"	820528	"	"
642-P	824735	"	"	1840004	1840000	1839062	"	"	"	"	"	"	820438	"
642-R	*824987	"	"	822622	828121	821472	"	"	"	"	"	818222	818223	809673
642-S	824735	"	"	1843749	1842523	822627	"	"	"	"	1900272	"	1883509	1840597
642-T	"	"	"	"	1839868	"	"	"	"	"	"	"	1887553	"
642-U	*824987	"	"	822622	824769	823236	"	"	"	"	"	"	819909	809673
642-V	*"	"	"	"	1840993	828120	"	"	"	"	"	"	821162	"
642-W	824735	"	"	1841152	1841073	822627	"	"	"	"	"	"	1906766	▲
642-X	"	"	"	822622	826359	1841311	"	"	"	"	"	1841312	820722	809673
642-Y	*824987	"	"	"	828121	824109	"	"	"	"	"	818222	818223	1841327
642-Z	*"	"	"	"	822624	1841370	"	"	"	"	"	"	820508	809673

†Shaft and Cam Assembly.

*1871561 Distributor Cap Cover.

□1871838 Distributor Spring and 1847289 Support are used on later models. No pin necessary with this type.

▲Supplied by Hercules Motor Corp.


MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Plate Support Screw.....	106496	All
Lock Washer—Condenser Mounting Screw.....	106496	All
Lock Washer—Distributor Cap Spring Support Screw.....	106496	All
Lock Washer—Distributor Hold Down Screw.....	103319	642-W
Lock Washer—Terminal Screw.....	121841	All
SCREWS		
Screw—Breaker Arm Spring.....	813511	All
Screw—Breaker Plate Adjusting.....	816784	All
Screw—Breaker Plate Support.....	115607	All except 642-H
Screw—Breaker Plate Support.....	117114	642-H
Screw—Condenser Mounting.....	131949	All
Screw—Distributor Cap Cover Attaching.....	803912	642-M-N-R-U-V-Z
Screw—Distributor Cap Spring Support.....	115434	All except 642-H
Screw—Distributor Cap Spring Support.....	117114	642-H
Screw—Distributor Hold Down.....	1872443	642-W
Screw—Terminal.....	107710	642-A-C-D-E-F-G-H-M-N-R-S-T-V-W- X-Z
Screw—Terminal.....	822417	642-B-J-P-U
WASHERS		
Washer—Breaker Arm Spring Screw Plain.....	810794	All
Washer—Breaker Lever Stud Insulation ($\frac{1}{8}$ I.D.).....	1868766	All
Washer—Breaker Lever Stud Insulation ($\frac{1}{8}$ I.D.).....	33436	All
Washer—Distributor Hold Down Screw.....	834560	642-W
Washer—Space—Under Breaker Plate.....	811912	All
Washer—Space—Under Gear.....	811912	All except 642-H-W
Washer—Space—Under Gear.....	807405	642-W
Washer—Space (1" O.D.x.505x $\frac{1}{16}$).....	1837617	642-E-F-H-S-T
Washer—Shim (.005 thk.).....	810078	All
Washer—Shim (.010 thk.).....	810074	All
Washer—Weight.....	811124	All except 642-C-D
MISCELLANEOUS		
Adaptor SLEEVE.....	1841005	642-W
*Advance ARM Assembly.....	1841304	642-W
Breaker Arm Retainer SPRING.....	813245	All
Coupling PIN.....	817267	642-X
Distributor Cap Carbon BUTTON.....	*821604	All
Distributor Cap Spring PIN.....	811745	All except 642-H
Distributor Cap Spring PIN.....	1838406	642-H
Distributor Clamp ARM.....	815877	642-R
Distributor Clamp Arm DIAL.....	815095	642-R
Distributor Pilot Ground SPRING.....	828447	642-B
Distributor Support PLATE.....	1841155	642-W
Felt WICK.....	819639	642-A-B-E-F-G-H-J
Felt WICK.....	816803	642-N-P-R-S-T-U-V-W-X-Z
Gear PIN.....	813131	642-A-C-D-M-N
Gear PIN.....	829421	642-W
Gear or Coupling PIN.....	1857492	642-E-F-G-J-R-S-T-U-V-Z
Gear or Coupling PIN.....	807372	642-H
Grease CUP.....	805579	All
Grease Cup BODY.....	112568	642-U
Low Tension LEAD.....	829525	642-V
Terminal CLIP—H.T. for 7 mm. Cable (Press-in type).....	829833	All
Terminal CLIP—H.T. for 7 mm. Cable (Solder type).....	829537	All
Terminal Screw BUSHING.....	821160	642-A-C-D-E-F-G-H-M-N-R-S-T-V-W- X-Z
Terminal Screw BUSHING (Hard Rubber).....	813222	642-B-J-P-U
Terminal Screw Clamp CLIP.....	26153	642-A-C-D-E-F-G-H-M-N-R-S-T-V-W- X-Z

*For parts see Advance Arm—Group 1.

*If button recess in cap is spherical bottom drilled use part #1938193.

Revised to October 15, 1964

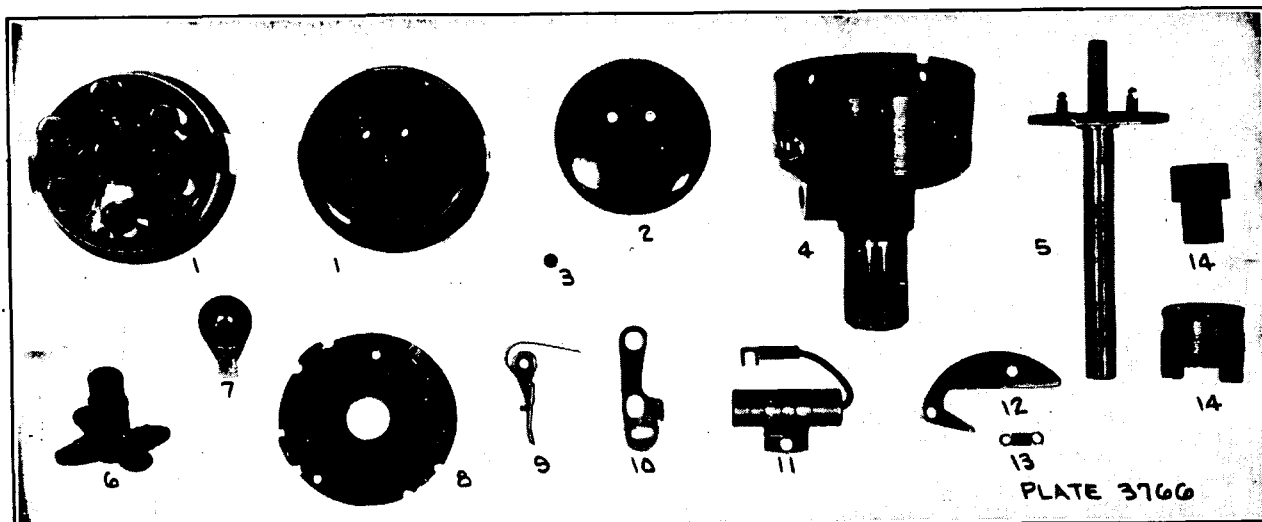

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

[illegible]

^A820438 Weight Spring. Use one of each. For Advance Arm see Advance Arm—Group 1.

*This Distributor uses 820133 Cap Cover and 803912 Attaching Screw.

†Part No. 1842713 Distributor Cap and Terminal Assembly which includes: 1—1842714 Cap, 7—1839164 Nuts should be used on 640-Y for Model O-10 Yellow Cab.

§818196 Spring has 6½ turns of .039 wire.

819194 Spring has $8\frac{1}{2}$ turns of .029 wire, one of each used.


*1871838 Cap Spring. 1847289 Cap Spring Support are used on later models. No pin necessary.

°Use Contact Set 1855720.

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Breaker Plate Support Screw LOCK WASHER.....	453844	All
Condenser Fastening Screw LOCK WASHER.....	453844	All
Distributor Cap Spring Support Screw LOCK WASHER.....	453844	All
Oil Wick Spring Screw LOCK WASHER.....	9421423	640-A-J-Y
Terminal Screw LOCK WASHER.....	453844	640-A-B-C-D
Terminal Stud Nut LOCK WASHER.....	453844	640-V
NUTS		
Terminal Stud NUT.....	817363	640-V
PINS		
Distributor Cap PIN.....	807139	All
Distributor Cap Spring PIN.....	811745	All
Coupling PIN (.127x1 $\frac{1}{8}$).....	817267	640-F-Z
Coupling or Gear PIN.....	1857492	640-C-D-E-L-M-R-U-V-W
Gear PIN.....	822273	640-B-K
Gear PIN (.123x $\frac{1}{4}$).....	1862218	640-A-G-H-J-S-N-Y
SCREWS AND STUDS		
Breaker Plate Support SCREW (8-32x $\frac{1}{8}$).....	115607	All
Breaker Arm Spring SCREW.....	1920777	All
Breaker Plate Adjusting SCREW.....	1914916	All
Condenser Fastening SCREW.....	453304	All
Distributor Cap Spring Support SCREW.....	115434	All
Distributor Cap Cover SCREW.....	455590	640-G-M-S
Oil Wick Spring Retainer SCREW.....	142424	640-A-J-Y
Terminal SCREW (8-32x1).....	132776	640-A-B-C-F-G-H-J-K-L-R-S-U-V-W-X-Y-Z
Terminal SCREW (8-32x $\frac{5}{8}$).....	822417	640-D-E-M-N-T
Terminal STUD.....	829985	640-V
WASHERS		
Breaker Arm Spring Screw Plain WASHER.....	810794	All
Space WASHER (Under Gear).....	810085	640-A-J-Y
Space WASHER (Under Gear).....	811912	640-B-C-D-G-H-L-N-R-T-U-V-W-X-Z
Space WASHER (Under Breaker Plate).....	810085	640-A-J-Y
Space WASHER (Under Breaker Plate).....	811912	640-B-C-D-G-H-L-N-R-T-U-V-W-X-Z
Shim WASHER (.010 thk.).....	1912129	All
Shim WASHER (.005 thk.).....	810074	All
Terminal Stud WASHER (Steel— $\frac{1}{2}$ x $\frac{1}{4}$ sq.).....	829987	640-V
Terminal Stud WASHER (Steel— $\frac{1}{4}$ O.D.—Inside).....	829988	640-V
Terminal Stud WASHER (Steel— $\frac{1}{4}$ O.D.—Outside).....	814161	640-V
Weight WASHER.....	811124	All
MISCELLANEOUS		
Breather PIPE.....	821483	640-B-K
Contact Arm Retainer SPRING CLIP.....	813245	All
Carbon BUTTON.....	806923	640-A
*Carbon BUTTON (dia. .248).....	821604	All except 640-A
*Carbon BUTTON (dia. .215).....	809453	All except 640-A
Distributor Mounting RING.....	1835205	640-X
Distributor SUPPORT.....	822972	640-N
Distributor Support BUSHING.....	820614	640-N
Distributor to Coil LEAD (Extra).....	817396	640-D-E
Distributor to Coil LEAD (Extra).....	824271	640-N
Distributor Pilot Ground SPRING.....	828447	640-T
Felt Oil PLUG.....	823551	640-A-J-Y
Felt Oil Plug SPRING.....	823550	640-A-J-Y
Felt Oil DISC.....	821164	640-B-C-D-E-F-G-H-K-L-M-N-R-S-T-U-V-W-X-Z
Grease CUP.....	805579	All
Terminal Screw BUSHING (Hard Rubber— $\frac{5}{8}$ " long).....	821160	640-A-B-C-F-G-H-J-K-L-R-S-U-V-W-X-Y-Z
Terminal Screw BUSHING (Hard Rubber— $\frac{1}{2}$ " long).....	813222	640-D-E-M-N-T-W
Terminal Stud BUSHING (Hard Rubber).....	829986	640-V
Terminal Stud INSULATION (Strip—Bent).....	827688	640-V
Terminal Lock CLIP.....	26153	All
WRENCH.....	814664	All

*Both 809453 and 821604 Carbon Buttons were used. Before ordering button, please determine dia. of button required. If button recess in cap is spherical bottom drilled use part #1938193.

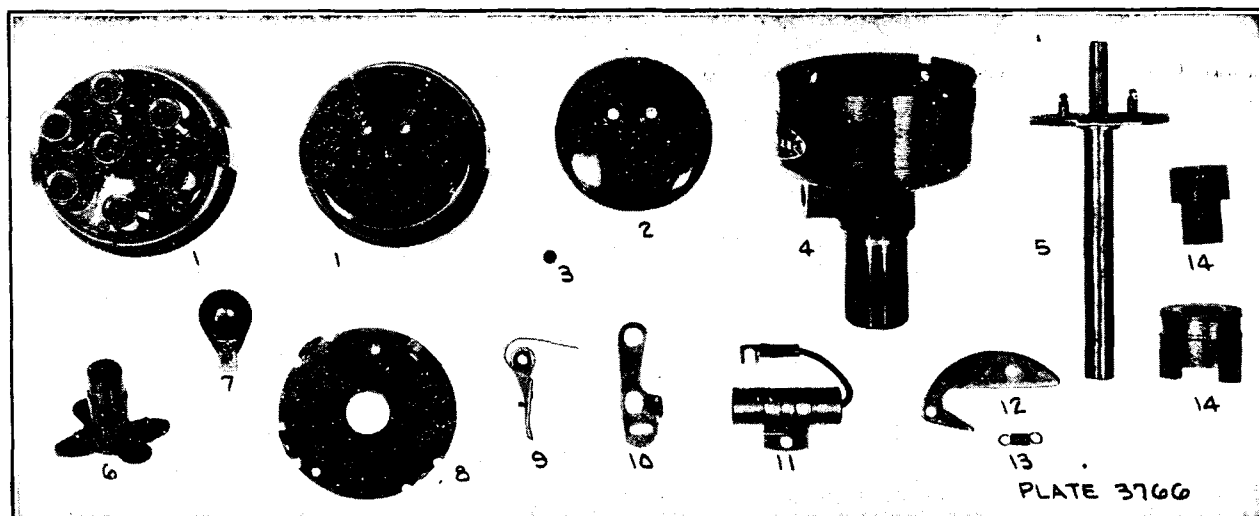

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor Cap	Distributor Cap Cover	Distributor Cap Carbon Button	Distributor Housing	Shaft	Cam	Rotor	Breaker Plate	Breaker Lever	Contact Point and Support	Condenser	Weight	Weight Spring	Gear or Coupling
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
643-A	824735		*821604	1843749	1841388	1841389	820445	821150	813238	1848038	1869704	818222	820438	▲
643-B	"		"	1840004	1883328	825464	"	"	"	"	1900272	825469	1883498	809673
643-C	"		"	"	"	1841603	"	"	"	"	"	1837944	"	"
643-D	"		"	"	†1837382	†1837382	"	"	"	"	1869704	"	"	*
643-E	"		"	822622	824738	822627	"	"	"	"	"	818222	1884929	1841699
643-F	"		"	1842320	1842322	"	"	"	"	"	1900272	"	1922250	*
643-G	"		"	822622	823000	821472	"	"	"	"	"	"	†820722	809673
643-H	"		"	"	†1837382	†1837382	"	"	"	"	"	"	"	"
643-J	"		"	1840537	1839863	822627	"	"	"	"	"	818222	1887553	1839067
643-K	"		"	1842320	1843216	"	"	"	"	"	1869704	"	822172	▲
643-L	824987	1871561	"	1843555	824738	823236	"	"	1842058	"	1900272	"	"	809673
643-M	824735	"	"	1836561	§1844037	§822938	"	"	813238	"	"	§820528	§1883874	821854
§643-MA	"	"	"	"	828522	822627	"	"	"	"	"	"	1835699	"
643-N	824987	1871561	"	1844058	823000	1839895	"	"	"	"	"	"	820438	809673
643-P	"	"	"	822622	1844358	1844360	"	"	"	"	"	818222	825861	1841327
643-R	824735		"	1844058	824738	822627	"	"	"	"	"	1880902	820438	809673
643-S	"		"	822622	1844542	1841389	"	"	"	"	"	818222	1835699	"
643-T	824987	1871561	"	1844538	1844539	823236	"	"	"	"	"	"	822172	819741
643-U	"	"	"	"	"	"	"	"	"	"	"	"	"	"
643-V	824735		"	1843749	1842523	822627	"	"	"	"	1869704	"	1883509	▲
643-W	"		"	822622	822522	"	"	"	"	"	1900272	1880902	1884929	*
643-X	"		"	"	824738	"	"	"	"	"	"	818222	"	*
643-Y	"		"	"	1880984	1845367	"	"	"	"	"	1841643	1844399	828267
643-Z	"		"	"	828522	825464	"	"	"	"	1869704	825469	823238	1842094

*Gear supplied by car manufacturer.

▲Gear supplied by Hercules Motors Corp.

†828446 Weight Spring 7½ turns of .029 wire, 820722 has 7½ turns of .033 wire. One of each is used.

‡Shaft and Cam.

§Model 643-MA is used on engines equipped with Aluminum Pistons. In order to change 643-M into 643-MA, replace parts marked § by 1857469 Shaft, Cam and Weight Spring Assembly.

*If button recess in cap is spherical bottom drilled use part #1938193.


MINOR PARTS SECTION

Name	Part No.	Model No.
LOCK WASHERS AND WASHERS		
Breaker Plate Support Screw LOCK WASHER.....	106496	All
Breaker Lever Stud Insulating WASHER—5/16 I.D.....	33436	All
Breaker Lever Stud Insulating WASHER—9/32 I.D.....	1837832	All
Breaker Lever Spring Attaching Screw WASHER.....	810794	All
Condenser Attaching Screw LOCK WASHER.....	106496	All
Distributor Cap Spring Screw LOCK WASHER.....	106496	All
Shim WASHER (.005 Thick).....	810074	All
Shim WASHER (.010 Thick).....	810078	All
Space WASHER (Under Gear).....	1837617	643-A-V
Space WASHER (Under Gear).....	811912	All except 643-A-F
Space WASHER (Under Gear).....	807405	643-F-K
Space WASHER (Under Weight Plate).....	811912	All except 643-F-K
Space WASHER (Under Weight Plate).....	1840009	643-F-K
Terminal Screw LOCK WASHER.....	121841	All except 643-T
Terminal Screw LOCK WASHER.....	121752	643-T-U
Weight WASHER.....	811124	All
SCREWS		
Breaker Plate Support SCREW.....	115607	All
Breaker Lever Spring Attaching SCREW.....	813511	All
Contact Adjusting SCREW.....	816784	All
Condenser Attaching SCREW.....	131949	All
Distributor Cap Spring SCREW.....	115607	All
Distributor Cap Cover SCREW.....	803912	643-L-N-P-T-U
Distributor Cap Spring SCREW.....	115434	All except 643-J
Terminal SCREW.....	107715	All except 643-S-T-U
MISCELLANEOUS		
Breaker Lever Retainer SPRING.....	813245	All
Coupling PIN.....	817267	643-Y
Coupling or Gear PIN.....	1857492	643-A-B-C-G-H-L-M-MA-N-P-R-S-T-U
Distributor Cap SPRING.....	*1871838	All
Distributor Cap Spring PIN.....	811745	All
Distributor Cap Spring SUPPORT.....	*1847289	All
Distributor Adaptor SLEEVE.....	1842325	643-F-K
Felt WICK.....	816803	All except 643-J
Felt WICK.....	819639	643-J
Grease CUP.....	805579	All
Gear PIN.....	1862218	643-E-J-M-P-V-Z
Gear PIN.....	829421	643-F-K
Terminal Screw BUSHING.....	821160	All except 943-S
Terminal Screw BUSHING.....	813222	943-S-T-U
Terminal Screw CLAMP.....	26153	All

*834069 Distributor Cap Spring, 811744 Support were used on earlier models with pin.

Revised to April 1, 1952

SERVICE PARTS CATALOG

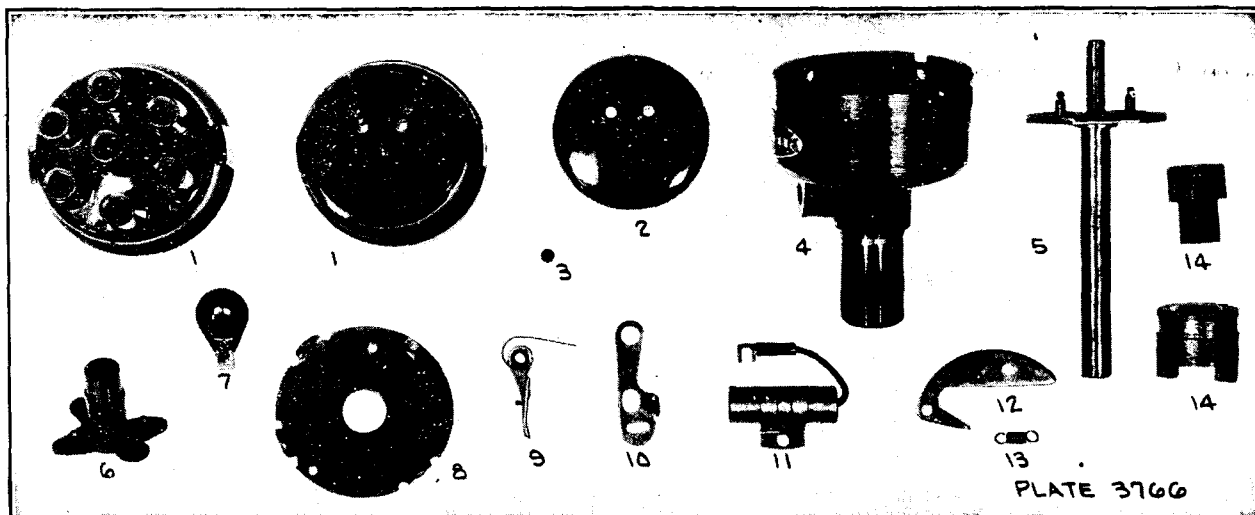

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor Cap	Distributor Cap Cover	Distributor Cap Carbon Button	Distributor Housing	Shaft	Cam	Rotor	Breaker Plate	Breaker Lever	Contact Point and Support	Condenser	Weight	Weight Spring	Gear or Coupling
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
643-A	824735		*821604	1843749	1841388	1841389	820445	821150	813238	1848038	1869704	818222	820438	▲
643-B	"		"	1840004	1883328	825464	"	"	"	"	1900272	825469	1883498	809673
643-C	"		"	"	"	1841603	"	"	"	"	"	1837944	"	"
643-D	"		"	"	†1837382	†1837382	"	"	"	"	1869704	"	"	*
643-E	"		"	822622	824738	822627	"	"	"	"	"	818222	1884929	1841699
643-F	"		"	1842320	1842322	"	"	"	"	"	1900272	"	1922250	*
643-G	"		"	822622	823000	821472	"	"	"	"	"	"	†820722	809673
643-H	"		"	"	†1837382	†1837382	"	"	"	"	"	"	"	"
643-J	"		"	1840537	1839868	822627	"	"	"	"	"	818222	1887553	1839067
643-K	"		"	1842320	1843216	"	"	"	"	"	1869704	"	822172	▲
643-L	824987	1871561	"	1843555	824738	823236	"	"	1842058	"	1900272	"	"	809673
643-M	824735		"	1836561	†1844037	§822938	"	"	813238	"	"	§820528	§1883874	821854
§643-MA	"		"	"	828522	822627	"	"	"	"	"	"	1835699	"
643-N	824987	1871561	"	1844058	823000	1839895	"	"	"	"	"	"	820438	809673
643-P	"	"	"	822622	1844358	1844360	"	"	"	"	"	818222	825861	1841327
643-R	824735		"	1844058	824738	822627	"	"	"	"	"	1880902	820438	809673
643-S	"		"	822622	1844542	1841389	"	"	"	"	"	818222	1835699	"
643-T	824987	1871561	"	1844538	1844539	823236	"	"	"	"	"	"	822172	819741
643-U	"	"	"	"	"	"	"	"	"	"	"	"	"	"
643-V	824735		"	1843749	1842523	822627	"	"	"	"	1869704	"	1883509	▲
643-W	"		"	822622	822522	"	"	"	"	"	1900272	1880902	1884929	*
643-X	"		"	"	824738	"	"	"	"	"	"	818222	"	*
643-Y	"		"	"	1880984	1845367	"	"	"	"	"	1841643	1844399	828267
643-Z	"		"	"	828522	825464	"	"	"	"	1869704	825469	823238	1842094

*Gear supplied by car manufacturer.

▲Gear supplied by Hercules Motors Corp.

†828446 Weight Spring 7½ turns of .029 wire, 820722 has 7½ turns of .033 wire. One of each is used.

‡Shaft and Cam.


§Model 643-MA is used on engines equipped with Aluminum Pistons. In order to change 643-M into 643-MA, replace parts marked § by 1857469 Shaft, Cam and Weight Spring Assembly.

*If button recess in cap is spherical bottom drilled use part #1938193.

MINOR PARTS SECTION

Name	Part No.	Model No.
LOCK WASHERS AND WASHERS		
Breaker Plate Support Screw LOCK WASHER.....	106496	All
Breaker Lever Stud Insulating WASHER—5/16 I.D.....	33436	All
Breaker Lever Stud Insulating WASHER—9/32 I.D.....	1837832	All
Breaker Lever Spring Attaching Screw WASHER.....	810794	All
Condenser Attaching Screw LOCK WASHER.....	106496	All
Distributor Cap Spring Screw LOCK WASHER.....	106496	All
Shim WASHER (.005 Thick).....	810074	All
Shim WASHER (.010 Thick).....	810078	All
Space WASHER (Under Gear).....	1837617	643-A-V
Space WASHER (Under Gear).....	811912	All except 643-A-F
Space WASHER (Under Gear).....	807405	643-F-K
Space WASHER (Under Weight Plate).....	811912	All except 643-F-K
Space WASHER (Under Weight Plate).....	1840009	643-F-K
Terminal Screw LOCK WASHER.....	121841	All except 643-T
Terminal Screw LOCK WASHER.....	121752	643-T-U
Weight WASHER.....	811124	All
SCREWS		
Breaker Plate Support SCREW.....	115607	All
Breaker Lever Spring Attaching SCREW.....	813511	All
Contact Adjusting SCREW.....	816784	All
Condenser Attaching SCREW.....	131949	All
Distributor Cap Spring SCREW.....	115607	All
Distributor Cap Cover SCREW.....	803912	643-L-N-P-T-U
Distributor Cap Spring SCREW.....	115434	All except 643-J
Terminal SCREW.....	107715	All except 643-S-T-U
MISCELLANEOUS		
Breaker Lever Retainer SPRING.....	813245	All
Coupling PIN.....	817267	643-Y
Coupling or Gear PIN.....	1857492	643-A-B-C-G-H-L-M-MA-N-P-R-S-T-U
Distributor Cap SPRING.....	*1871838	All
Distributor Cap Spring PIN.....	811745	All
Distributor Cap Spring SUPPORT.....	*1847289	All
Distributor Adaptor SLEEVE.....	1842325	643-F-K
Felt WICK.....	816803	All except 643-J
Felt WICK.....	819639	643-J
Grease CUP.....	805579	All
Gear PIN.....	1862218	643-E-J-M-P-V-Z
Gear PIN.....	829421	643-F-K
Terminal Screw BUSHING.....	821160	All except 943-S
Terminal Screw BUSHING.....	813222	943-S-T-U
Terminal Screw CLAMP.....	26153	All

 *834069 Distributor Cap Spring, 811744 Support were used on earlier models with pin.




*Oil throwing Collar.
†1838100 Cap can be replaced with 1853240, (XM1000) for Taxicab Service.
‡1862218 Gear Pin is $\frac{1}{8}$ dia.—1857502 Pin $\frac{1}{4}$ dia. is also used.
*1863421 includes Weights. Use 821596 Weight with old Shaft only.
‡Not supplied by Delco-Remy.
‡Gear supplied by Hercules Motor Corp.
‡Contact set is 1855520.

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS AND NUTS		
Breaker Plate Attaching Screw LOCK WASHER.....	453844	All
Cap Spring Support Screw LOCK WASHER.....	453844	All
Condenser Mounting Screw LOCK WASHER.....	453844	All
Terminal Stud Nut LOCK WASHER.....	453844	622-A-B-D-E-J-K-L-M-N- P-R-S-T-U-V-Y
Terminal Stud Nut LOCK WASHER (Shakeproof).....	138530	622-C-F-H-U
Terminal Stud Nut LOCK WASHER.....	121752	622-C-F-H-U
Terminal Stud NUT.....	120622	All
SCREWS		
Breaker Plate Attaching SCREW.....	453418	All
Cap Spring Support SCREW.....	453418	All
Contact Support SCREW.....	1914916	All
Condenser Attaching SCREW.....	453341	All
WASHERS		
Shim WASHER—.005 thick.....	1927529	622-C-F-H-U
Shim WASHER—.010 thick.....	1927530	622-C-F-H-U
Shim WASHER—.005 thick.....	810074	All
Shim WASHER—.010 thick.....	1912129	All
Space WASHER—Under Weight Plate.....	811912	All
Space WASHER—Under Collar.....	811912	622-A-B-C-F
Space WASHER—Under Gear or Coupling.....	811912	622-D-J-K-M-N-P-R-S-T-Y
Space WASHER—Under Collar.....	1837617	622-C-F-H-U
Terminal Stud Plain WASHER.....	815540	All
Terminal Stud Insulation WASHER.....	816806	All
Terminal Stud Insulation WASHER.....	820988	All
Terminal Stud Bushing WASHER.....	1904600	All
Weight WASHER.....	807295	All
MISCELLANEOUS		
Breaker Lever Spring Insulation STRIP.....	820991	All
Cap Carbon BUTTON.....	*821604	All
Cap SPRING.....	816801	All
Cap Spring SUPPORT.....	826476	All
Felt WICK.....	1963555	All
Felt PLUG—In Grease Cup Hole.....	802692	622-Y
Felt Plug SPRING.....	1845715	622-Y
Grease CUP.....	1955293	All
Lower Coupling Retainer SPRING.....	1859326	622-Y
Main Shaft EXTENSION with Coupling.....	1859322	622-Y
PLUG—Pipe—In Housing.....	125947	622-A-D-K-N-U-W
Terminal STUD.....	820987	All

*If button recess in cap is spherical bottom drilled use part #1938193.

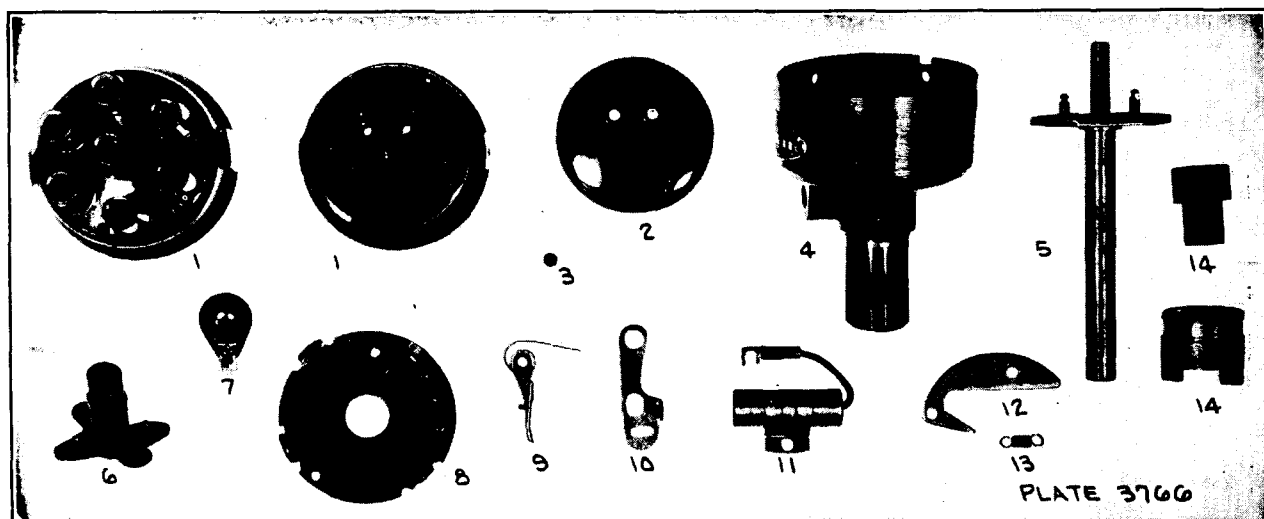

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor Cap	Distributor Cap Cover	Distributor Cap Carbon Button	Distributor Housing	Main Shaft	Cam	Rotor	Breaker Plate	Breaker Lever	Contact Point and Support	Condenser	Weight	Weight Spring	Gear or Coupling
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
644-A	824735		821604	822622	1883329	822627	820445	821150	813238	1848038	1900272	818222	1912764	*
644-B				1841152	1848006	822938					1928111	820528	827463	†
644-C				1842320	1859250	822938					1900272		1886508	†
644-D				1847442	1857520	1847444		1847643			1928111	818222	1848892	1857504
644-E				1844058	823000	822938		821150			1900272	820528	820438	809673
644-F	824735			1849171	1849174	825464						825469	1883498	1849139
644-G	824735			1836561	1880984	824734	820445				1928111	813100	824668	1849238
644-H				1849407	1849410	825464		1847643	1842058			825469	1883498	1845656
644-J					1849413									
644-K					1849493								1849546	
644-L					1849560								1883498	
644-M				1844058	1844542	822627		821150	813238		1900272	818222	1835118	809673
644-N				822622							1928111		1884929	
644-P				1836561	1853683	824734						813100	824668	1849491
644-R				1854325	1854067	822627		1847643				818222	1855280	1857504
644-S				822622	1842523	822627		821150					1883509	†
644-T	824987	1871561		1843555	823000	1853473			1842058		1900272	825469	1849546	809673
644-U	824735			1849407	1854548	825464		1847643			1928111		1883498	1845656
644-V				822622	824049	1855261		821150	813238		1900272	813100	1855258	809673
644-W				1849407	1854548	825464		1847643	1842058		1928111	825469	820438	1845656
644-X	824735			1856454	1849174	825464		821150	813238	829973	829979		825515	1849139
644-Y	824735			822622	1844542	821472				1848038	1928111	818222	1835699	809673
644-Z					828522								1884929	

*Not supplied by Delco-Remy.

†Gear supplied by Hercules.

‡If button recess in cap is spherical bottom drilled use part #1938193.

○Contact Set No. 1855720.

x1855258 Weight Spring has 5½ turns of .041 wire.

1855259 Weight Spring has 8½ turns of .016 wire.

MINOR PARTS SECTION


Name	Part No.	Used on Models
LOCK WASHERS AND WASHERS		
Breaker Plate Support Screw LOCK WASHER.....	453844	All
Breaker Lever Spring WASHER.....	810794	644-C-F-G-M-N-P-S-T-X-Y-Z
Clamp Arm Screw LOCK WASHER.....	9421423	644-F-X
Condenser Attaching Screw LOCK WASHER.....	453844	644-A-C-D-E-F-G-H-K-M-N-P-R-S-W-X-Y-Z
Distributor Cap Spring Support Screw LOCK WASHER.....	538444	All
Distributor Hold Down Screw WASHER.....	813046	644-D
Distributor Hold Down Screw LOCK WASHER.....	9421423	644-B-F-X
Distributor Hold Down Screw WASHER.....	834560	644-B-F-X
Space WASHER—Under Coupling or Gear.....	811912	644-A-E-G-M-N-P-S-T-V-X-Y-Z
Space WASHER—Under Weight Plate.....	811912	644-A-B-E-F-G-H-J-K-L-M-N-P-S-T-U-V-W-X-Y-Z

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS AND WASHERS—Continued		
Space WASHER—Between Advance Arm and Control Bracket.....	1847270	644-D
Space WASHER—Under Gear.....	807405	644-B-C
Space WASHER—Under Gear.....	810085	644-F
Space WASHER—Under Collar.....	1837617	644-H-J-K-L-U-W
Shim WASHER—.005 thick.....	1848595	644-H-J-K-L-U-W
Shim WASHER—.010 thick.....	1927530	644-H-J-K-L-U-W
Shim WASHER—.005.....	810074	644-A-B-C-E-F-M-N-P-S-T-V-X-Y-Z
Shim WASHER—.010.....	1912129	644-A-B-C-E-F-M-N-P-S-T-V-X-Y-Z
Terminal Stud LOCK WASHER—Outside.....	138530	644-H-K-U-W
Terminal Stud LOCK WASHER—Outside.....	453844	644-A-B-C-D-E-F-G-M-N-P-R-S-T-V-W-X-Y-Z
Terminal Stud WASHER.....	810794	644-A-D-E-H-J-K-L-R-T-U-W
Terminal Stud WASHER— $\frac{1}{4}$ O.D. inside.....	829988	644-X
Terminal Stud WASHER— $\frac{1}{2} \times \frac{1}{4}$ square.....	829987	644-X
Terminal Stud Insulation WASHER—Outside.....	816806	644-D-H-J-K-L-R-U-W
Terminal Stud Plain WASHER—Outside.....	1914476	644-D-H-J-K-L-R-U-W
Terminal Stud Plain WASHER—Outside.....	814161	644-X
Weight WASHER.....	811124	All
NUTS		
Clamp Arm NUT.....	1838562	644-F-X
Terminal Stud NUT—Inside.....	817363	644-D-H-J-K-L-R-U-W-X
Terminal Stud NUT—Outside.....	120622	644-D-H-J-K-L-R-U-W
SCREWS		
Breaker Plate Support SCREW.....	453418	All
Breaker Lever Spring Fastening SCREW.....	1920777	All
Contact Adjusting SCREW.....	1914916	All
Condenser Attaching SCREW.....	453304	All
Clamp Arm SCREW.....	121328	644-F-X
Distributor Cap Spring Support SCREW.....	453418	All
Distributor Hold Down SCREW.....	1847271	644-D
Distributor to Adaptor Attaching SCREW.....	1872443	644-B-F-X
Distributor Cap Cover Attaching SCREW.....	455590	644-T
MISCELLANEOUS		
Advance ARM Assembly.....	1841304	644-B
Advance ARM Assembly.....	1840992	644-C
ADAPTOR.....	1849138	644-F-X
Adaptor SLEEVE.....	1842325	644-C
Adaptor SLEEVE.....	1841005	644-B
Breaker Lever Retainer CLIP.....	813245	All
Clamp ARM Only.....	815094	644-F-X
Clamp Arm DIAL.....	815095	644-E-X-Y
Clamp ARM ASSEMBLY.....	815877	644-E
Clamp ARM ASSEMBLY.....	1838144	644-F-X
Coupling or Gear PIN.....	1857492	644-E-M-N-S-T-V-Y-Z
Distributor Hold Down SPRING.....	1847668	644-D
Distributor Cap SPRING.....	1871838	644-D-H-J-K-L-R-U-W
Distributor Cap SPRING.....	*834069	644-A-B-C-E-F-G-M-N-P-S-T-V-X-Y-Z
Distributor Cap Spring PIN.....	811745	644-A-B-C-E-F-G-M-N-P-S-T-V-X-Y-Z
Distributor Cap Spring SUPPORT.....	*811744	644-A-B-C-E-F-G-M-N-P-S-T-V-X-Y-Z
Distributor Cap Spring SUPPORT.....	1847289	644-D-H-J-K-L-R-U-W
Distributor Support PLATE.....	1841155	644-B
Felt WICK—In Cam.....	1963555	All
Felt WICK—In Grease Cup.....	802692	644-M-R-U
Felt Wick SPRING.....	1845715	644-M-R-U
Grease CUP.....	1955293	All
Gear PIN— $\frac{1}{8}$ dia.....	822273	644-F-X
Gear PIN— $\frac{1}{8}$ dia.....	1862218	644-D-G-H-J-K-L-R-U-W
Gear PIN— $\frac{1}{8}$ dia.....	1861374	644-D
Gear PIN.....	829421	644-B
Gear PIN.....	1857502	644-P
Gear PIN— $\frac{1}{4}$ dia.....	1857502	644-R
Terminal STUD.....	107714	644-A-B-C-E-F-M-N-P-S-T-V-X-Y-Z
Terminal STUD.....	1847647	644-D-H-J-K-L-R-U-W
Terminal STUD.....	829985	644-X
Terminal Stud CLAMP.....	26153	644-A-B-C-E-F-G-M-N-P-S-T-V-X-Y-Z
Terminal Stud INSULATION.....	827688	644-X
Terminal Stud Insulation BUSHING.....	821160	644-A-B-C-E-F-G-M-N-P-S-T-V-X-Y-Z
Terminal Stud Insulation BUSHING.....	1878405	644-D-H-J-K-L-R-U-W
Terminal Stud Insulation BUSHING.....	829986	644-X

*1871838 Cap Spring and 1847289 Support used on later models. No pin necessary.

Items not listed in this Catalog will not be sold separately.

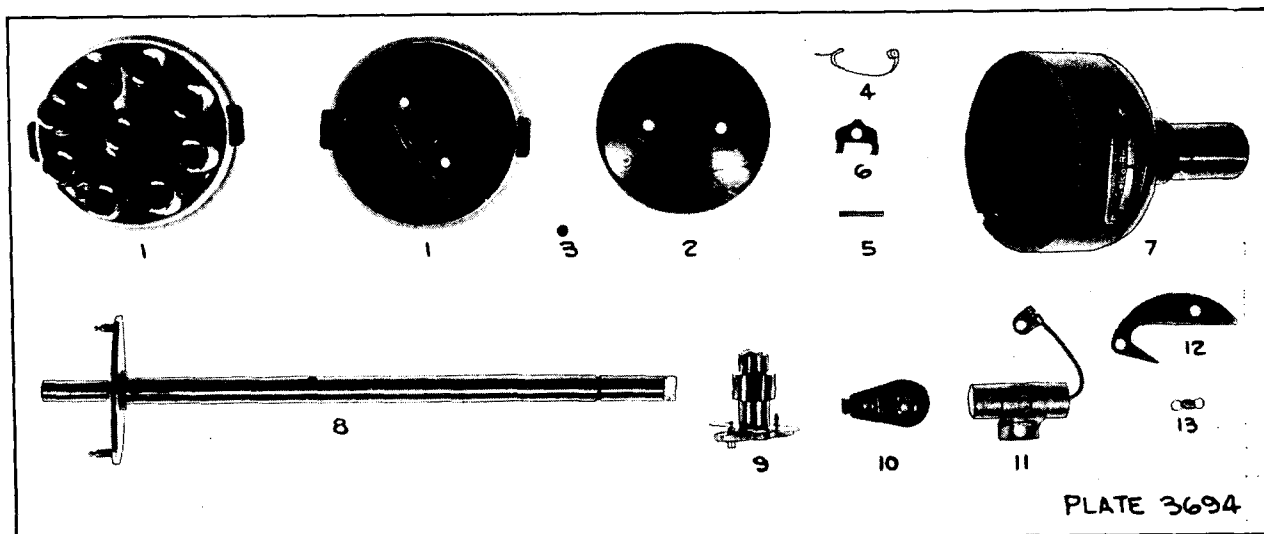

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

[illegible]

°5031266 Weight engages automatic cam.


x 825861 has 6½ turns of .035 wire— 829568 has 7½ turns of .035 wire.

‡1850312 has $6\frac{3}{4}$ turns of .039 wire—5031373 has $6\frac{1}{2}$ turns of .038 wire.

■ 818196 has $6\frac{1}{2}$ turns of .039 wire—1835118 has $5\frac{1}{2}$ turns of .045 wire.

*If button recess in cap is spherical bottom drilled use part #1938193.

Delco-Remy
SERVICE PARTS CATALOG

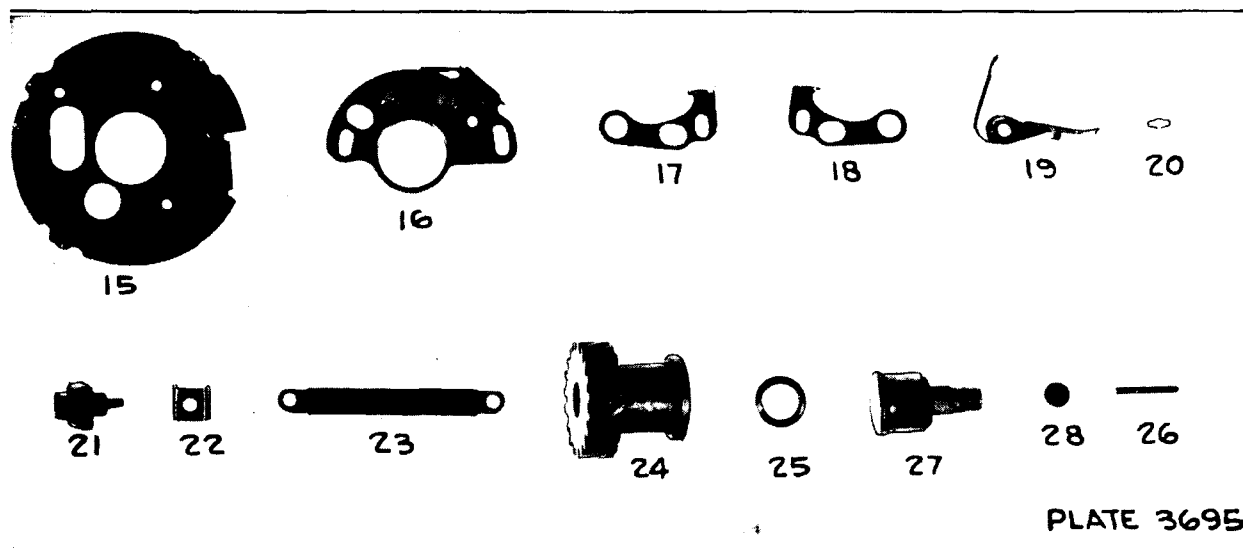

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Breaker Plate Lower	Breaker Plate Upper	Contact Support Lower	Contact Support Upper	Breaker Lever	Breaker Lever Retainer Spring	Terminal Stud	Terminal Stud Clamp	Terminal Connector Lead	Gear	Collar or Coupling	Gear or Coupling Pin	Grease Cup	Wick (Cam)
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
662-A	1838624	1836904	1845785	1849876	813238	813245	1836911	26153	1836907		826276	829421	805579	819639
662-B	"	"	"	"	"	"	"	"	"	1837949	826276	829421	805579	"
662-C	"	"	"	"	"	"	"	"	"		809673	1857492	805579	"
662-E	"	"	"	"	"	"	"	"	"		1837676	826276	"	"
662-F	"	"	"	"	"	"	"	"	"		809673	829421	"	"
662-G	"	"	"	1845983	1842058	"	"	"	"		826276	829421	"	"
662-H	"	"	"	"	"	"	"	"	"		"	"	"	"
662-J	"	"	"	"	"	"	"	"	"		"	"	"	"
662-K	"	"	"	1849876	813238	"	"	"	"		809673	1857492	"	"
662-M	"	"	"	1845983	1842058	"	"	"	"		826276	829421	"	"
662-N	"	"	"	1849876	813238	"	"	"	"		809673	1857492	"	"
662-P	"	"	"	"	"	"	"	"	"		"	"	"	"
662-R	"	"	"	"	"	"	"	"	"		"	"	"	"
662-T	"	"	"	"	"	"	"	"	"		"	"	"	"
662-W	"	"	1858484	1858486	1842058	"	"	"	"		"	"	"	"
662-Y	"	"	1845785	1849876	813238	"	"	"	"		"	"	114744	"

Revised to Sept. 15, 1949

SERVICE PARTS CATALOG

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Breaker Plate Screw LOCK WASHER.....	121841	All
Condenser Terminal Stud LOCK WASHER.....	116438	662-W
Condenser Attaching Screw LOCK WASHER.....	121841	662-A-B-G-H-M-Y-W
Condenser Attaching Screw LOCK WASHER.....	120217	662-C-E-F-J-K-N-P-T
Distributor Cap Spring Support LOCK WASHER.....	121841	All
Oil Well Screw LOCK WASHER.....	113114	662-B-W
Terminal Stud Nut LOCK WASHER.....	121841	All except 662-F-J
Terminal Screw LOCK WASHER.....	121752	662-F-J
Terminal Stud Nut LOCK WASHER.....	121752	662-F-J
Terminal Screw LOCK WASHER.....	12184	662-R
NUTS		
Breaker Lever Spring Screw NUT.....	817363	All
Condenser Terminal Stud NUT.....	817363	662-W
Terminal Stud NUT.....	817363	All
SCREWS		
Breaker Lever Spring SCREW.....	813511	All
Breaker Plate Support SCREW.....	121749	All
Breaker Plate Attaching SCREW (upper).....	816784	662-E-F-K-M-P-T-W-Y
Contact Adjusting SCREW.....	816784	All
Condenser Attaching SCREW.....	122159	662-A-B-G-H-M
Condenser Attaching SCREW.....	115417	662-C-F-J-K-N-P-R-T
Condenser Attaching SCREW.....	131949	662-W-Y
Distributor Cap Cover Attaching SCREW.....	824394	662-A-G-H-J-M-T-W
Distributor Cap Cover Attaching SCREW.....	803912	622-F
Distributor Cap Spring Support SCREW.....	121832	All
Oil Well SCREW.....	142424	662-B-W
Terminal Stud Clamp SCREW.....	107710	All except 662-Y
Terminal Stud Clamp SCREW.....	1835943	662-Y
WASHERS		
Breaker Lever Stud Insulation WASHER.....	33436	662-A-B
Breaker Lever Spring Fastening Screw WASHER.....	810794	All
Breaker Lever Stud Insulation WASHER.....	1868766	662-A-B
Condenser Terminal Stud WASHER.....	813767	662-W
High Tension Terminal Rubber WASHER.....	1854440	662-M-T-W
Space Washer (under Weight Plate).....	1902495	All except 662-W
Space WASHER (under Weight Plate).....	5012627	662-W
Space WASHER (under Coupling).....	811912	662-A-B-C-E-F-G-H-J-K-M-N-P-T-W-Y
Shim WASHER (.005 thick).....	810074	All
Shim WASHER (.010 thick).....	810078	All
Terminal Stud Plain WASHER.....	810794	662-A-C-E-F-G-H-J-K-M-N-R-T-W-Y
Weight WASHER.....	811124	662-A-C-E-F-G-H-J-K-M-N-P-R-T-W
MISCELLANEOUS		
*Advance Arm ASSEMBLY.....	1837917	662-B
BUSHING—Dist. Housing.....	825463	662-T
Felt WICK (In Housing).....	823551	662-B-W
Felt Wick SPRING (In Housing).....	823550	662-B-W
High Tension TERMINAL (separate) Screw Type.....	1839164	662-Y
High Tension TERMINAL, Push On Type.....	829833	
High Tension TERMINAL, Solder on Type.....	829537	
LEAD—Condenser to Distributor Terminal.....	1857903	662-W
LEAD—Low Tension—to Coil.....	1857905	662-T-W
Space COLLAR—Fibre (Terminal Stud).....	1877871	662-M

*See Advance Arm—Group 1—for parts.

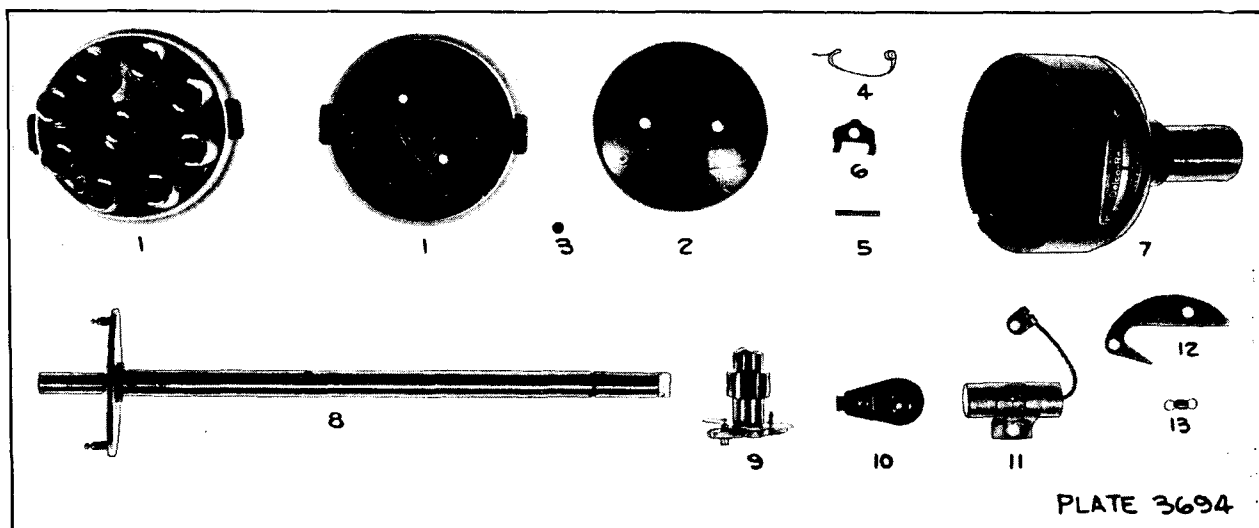


PLATE 3694

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor Cap	Distributor Cap Cover	Carbon Button	Cap Spring	Cap Spring Pin	Cap Spring Support	Housing	Main Shaft	Cam	Rotor	Condenser	Weight	Weight Spring	Weight Spring Support
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
663-A	1837974		821604	1911336	1836915	1911336	1853271	1853273	1853276	*1836893	1869705	1837944	1883498	
663-B	"		"	"	"	"	1853643	1853645	1853642	"	"	818222	822172	
663-C	"		"	"	"	"	1853271	1854063	1853276	"	"	1837944	1883498	
663-D	"		"	"	"	"	1855516	1855511	1855514	"	1908846	818222	825861	
663-E	"		"	"	"	"	1855986	1856027	1853276	"	1869705	1837944	1883498	
663-F	"		"	"	"	"	"	1860927	"	"	"	"	1883498	
663-G	1866660		"	"	"	"	1862091	1878572	1862093	"	"	818222	1884610	
663-H	1837974		"	"	"	"	1862241	1862243	1853642	"	"	"	822172	
663-J	"		"	"	"	"	1862334	1841397	1862336	"	"	"	†1856644	*1856645
663-K	"		"	"	"	"	1862893	1840026	1862887	"	"	1863143	1835699	
663-L	1857894	1857892	"	"	"	"	1866039	1883331	1866041	"	1869704	818222	1910201	
663-M	1844659	1844661	"	"	"	"	1871391	1871395	1871393	"	"	1863143	1835699	
663-W	1837974		821604	1911336	1836915	1911336	1866701	1878573	1866706	1836893	1869704	†1863143	1886277	
663-X	"		"	"	"	"	1866454	1866458	1866456	"	"	818222	1887743	
663-Y	"		"	"	"	"	1873026	1860927	1865964	"	"	1837944	825515	
663-Z	"		"	"	"	"	"	1865952	"	"	"	"	"	
663-ZX	"		"	"	"	"	"	1865952	"	"	"	"	"	


†1856644 has 6½ turns .035 wire.

*1856645 has 7½ turns .033 wire.

×Use 1845874 Rotor for Radio Installations.

°When replacing Cam, Weights or Weight Springs in Models with serial number below 15,000 all three parts must be replaced to get proper curve.

□If button recess in cap is spherical bottom drilled use part #1938193.

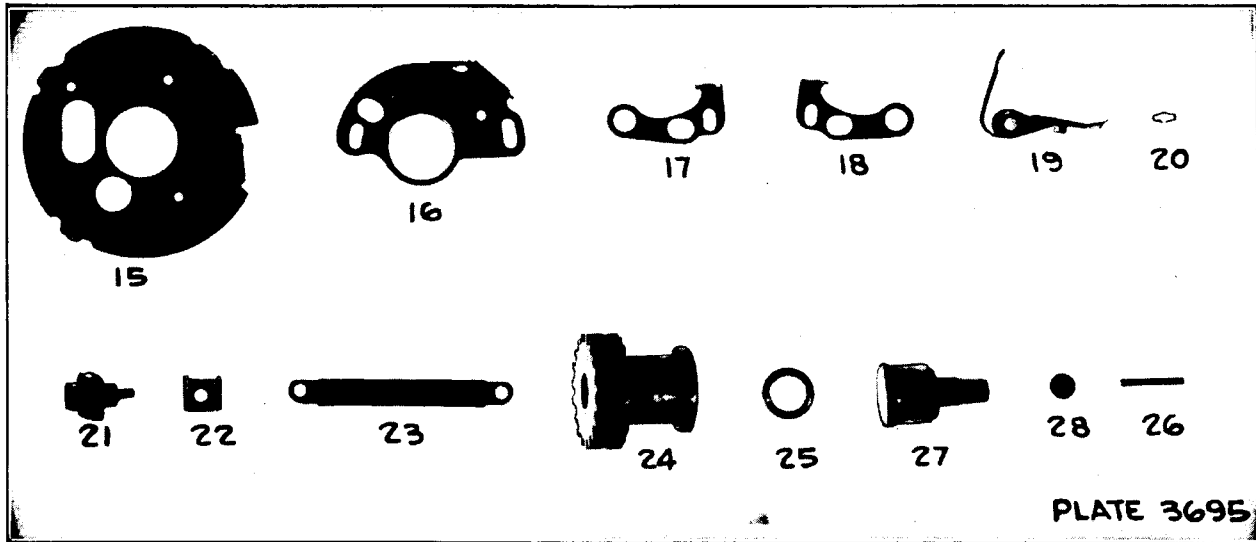

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Breaker Plate Lower	Breaker Plate Upper	Contact Support Lower	Contact Support Upper	Breaker Lever and Point	Breaker Lever Retainer Spring	Terminal Stud	Terminal Stud Clamp	Terminal Connector	Gear	Collar or Coupling	Gear or Coupling Pin	Grease Cup	Felt Wick in Cam
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
663-A	1853281		1845785		1842058		1853625	26153	1853289	1837949		1862218	*109460	819639
663-B	"		"		"		"	"	"	819741		"	805579	"
663-C	"		"		"		"	"	"	1837949		"	*109460	"
663-D	"		"		"		"	"	"	809673		1857492	805579	"
663-E	"		"		"		"	"	1856028	1283994		"	*109460	"
663-F	"		"		"		"	"	"	"		"	"	"
663-G	"		"		"		"	"	1853289		809673	"	"	"
663-H	"		"		"		"	"	"	819741		1862218	805579	"
663-J	"		"		"		"	"	"	809673		1857492	"	"
663-K	"		"		"		"	"	"	"		"	"	"
663-L	1866045		1871865		"		"	"	1865978		"	"	"	"
663-M	"		"		"		"	"	"	826276		829421	"	"
663-W	1914446		1871862		1842058		1853625	26153	1865978		1859325	1862218	805579	819639
663-X	"		"		"		"	"	"	819741		"	"	"
663-Y	"		"		"		"	"	"	1283994		822273	109460	"
663-Z	"		"		"		"	"	"	"		"	"	"
663-ZX	"		"		"		"	"	"	"		"	"	"

*Lubricating Nipple.

□1857492 is $\frac{3}{8}$ dia. 829421 ($\frac{1}{4}$ dia.) also used.

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Breaker Lever Spring Screw LOCK WASHER.....	115544	663-A-B-C-D-E-F-G-H-J-K
Breaker Plate Hold Down Screw LOCK WASHER.....	121841	663-A-B-C-D-E-F-G-H-J-K
Cap Spring Support Screw LOCK WASHER.....	121841	All
Condenser Attaching Screw LOCK WASHER.....	121841	All
Condenser Lead Attaching Screw LOCK WASHER.....	121841	663-A-B-C-D-E-F-G-H-J-K
Ground Lead Screw LOCK WASHER.....	121841	663-A-B-C-D-E-F-G-H-J-K
Oil Wick Spring LOCK WASHER.....	113114	663-A-C-E-F-G-Y-Z-ZX
Terminal Stud LOCK WASHER.....	121841	All
Vacuum Control Attaching Screw LOCK WASHER.....	120217	All
Vacuum Control Arm—To Breaker Plate Screw LOCK WASHER.....	131044	663-L-M-W-X-Y-Z-ZX
NUTS		
Breaker Lever Spring Attaching NUT.....	817363	All
Ground Lead Screw NUT (To Housing).....	817363	663-A-B-C-D-E-F-G-H-J-K
Terminal Stud NUT.....	817363	All
WASHERS		
Breaker Lever Spring Attaching SCREW.....	455880	663-L-M-W-X-Y-Z-ZX
Breaker Lever Spring Attaching SCREW—8-32x $\frac{1}{2}$	813511	663-A-B-C-D-E-F-G-H-J-K
Breaker Plate Hold Down SCREW.....	122159	L-M-W-X-Y-Z-ZX
Contact Adjusting SCREW.....	816784	663-A-B-C-D-E-F-G-H-J-K
Condenser Attaching SCREW.....	122159	All
Condenser Attaching SCREW.....	141547	663-A-B-C-D-E-F-G-H-J-K
Condenser Lead Attaching SCREW.....	131949	663-L-M-W-X-Y-Z-ZX
Distributor Cap Cover SCREW.....	824394	All
Distributor Cap Spring Support SCREW.....	122159	663-L-M
Ground Lead SCREW (To Housing).....	115434	All
Hold Down SCREW.....	1853640	663-A-B-C-D-E-F-G-H-J-K
Oil Wick Spring SCREW.....	109439	663-B
Terminal Clamp SCREW.....	107710	663-A-C-E-F-G-Z-ZX
Vacuum Control Attaching SCREW—10-32x $\frac{3}{4}$	135616	All
Vacuum Control Attaching SCREW—10-32x $\frac{1}{2}$	142210	663-A-B-C-D-E-F-G-H-J-K
Vacuum Control Arm Attaching SCREW—To Breaker Plate.....	141542	663-L-M-W-X-Y-Z-ZX
SCREWS		
Breaker Lever Spring Screw Insulation WASHER.....	1865977	663-L-M-W-X-Y-Z-ZX
Breaker Lever Spring Screw Plain WASHER.....	810794	663-L-M-W-X-Y-Z-ZX
Breaker Plate Ground Spring WASHER.....	1865983	663-L-M-W-X-Y-Z-ZX
Hold Down Screw WASHER.....	110959	663-B
Shim WASHER—.005 thick.....	810074	All except E-F-Y-Z-ZX
Shim WASHER—.010 thick.....	810078	All except E-F-Y-Z-ZX
Shim WASHER—.005 thick.....	1848595	663-E-F-Y-Z-ZX
Shim WASHER—.010 thick.....	1848596	663-E-F-Y-Z-ZX
Space WASHER—Under Gear or Coupling.....	1849806	663-A-C-G
Space WASHER—Under Gear.....	1266718	663-E-F-Y-Z-ZX
Space WASHER—Under Weight Plate.....	1849806	663-A-C-E-F-G-Y-Z-ZX
Space WASHER—Under Weight Plate.....	811912	663-B-D-H-I-L-M-X
Space WASHER—Under Coupling.....	811912	663-D-K-L-M-W
Terminal Stud Insulation WASHER—Inside.....	1853286	663-A-B-C-D-E-F-G-H-J-K
Terminal Stud Plain WASHER.....	810794	663-A-B-C-D-E-F-G-H-J-K
Weight WASHER.....	811124	All
MISCELLANEOUS		
Advance ARMS (See Index and Advance Arm group for parts)		
BALL (Breaker Plate Bearing).....	145639	All
Ball Bearing Retainer PLATE.....	1853278	663-A-B-C-D-E-F-G-H-J-K
Breaker Lever Spring Screw BUSHING.....	821033	663-L-M-W-X-Y-Z-ZX
Breaker Lever Spring Screw LOCK CLIP.....	1868992	663-L-M
Breather PIPE.....	1860880	663-B-X
BUSHING—Distributor Housing.....	1855984	663-E
BUSHING—Distributor Housing.....	1874335	663-B-H-X
BUSHING—Distributor Housing.....	1916454	663-Y-Z-ZX
Connector Lead SUPPORT.....	1864769	663-A-B-G-H-J
Ground LEAD.....	1853288	663-A-B-C-D-E-F-G-H-J-K
Hold Down SPRING.....	1853639	663-B
Lock CLIP—Breaker Lever Spring Screw Nut.....	1868992	663-L-M-W-X-Y-Z-ZX
Low Tension LEAD.....	1857905	663-L
Oil WICK—In Housing.....	823551	663-A-C-E-F-G-Y-Z-ZX
Oil Wick SPRING.....	823550	663-A-C-E-F-G-Y-Z-ZX
Shaft EXTENSION.....	1866484	663-W
Shaft Extension SPRING.....	1859326	663-W
Terminal Stud Insulating BUSHING—Inside.....	1865985	663-L-M-W-X-Y-Z-ZX

Parts not listed in this Catalog will not be sold separately.


MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
†Vacuum CONTROL.....	680-H	663-A-C
†Vacuum CONTROL.....	680-K	663-B-H
†Vacuum CONTROL.....	680-M	663-D
†Vacuum CONTROL.....	680-R	663-E-F
†Vacuum CONTROL.....	680-X	663-G
†Vacuum CONTROL.....	680-M	663-J
†Vacuum CONTROL.....	681-B	663-K
†Vacuum CONTROL.....	681-L	663-L
†Vacuum CONTROL.....	681-R	663-M-W
†Vacuum CONTROL.....	681-N	663-X
†Vacuum CONTROL.....	681-H	663-Y-Z-ZX
Vacuum Control Bracket CLAMP.....	1865984	663-L-W-X-Y-Z-ZX

†For parts of Vacuum Control Assembly see Vacuum Control—Group 2.
†For parts of Vacuum Control Assembly see Vacuum Control—Group 3.

Revised to April 1, 1936

SERVICE PARTS CATALOG

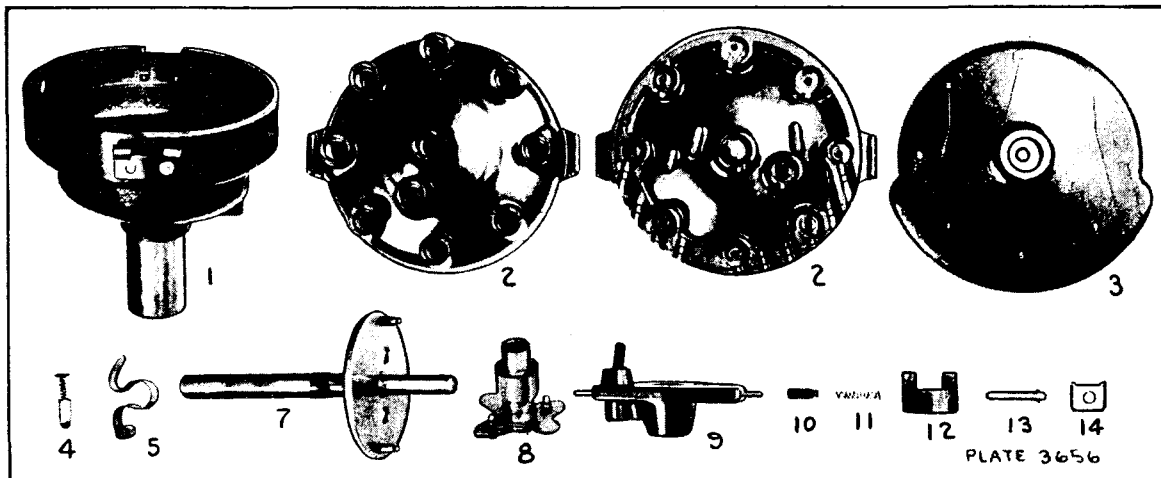

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model No.	Dist. Housing	Dist. Cap	Dist. Cap Cover	Dist. Cap Plunger Assembly	Dist. Cap Spring	Dist. Cap Spring Pin	Main Shaft	Cam Assembly	Rotor Assembly	Rotor Carbon Brush	Rotor Brush Spring	Gear Collar or Coupling	Gear or Coupling Pin	Terminal Locking Clip
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
666-B	*827344	1839166		809445	30111	29802	1838671	1838672	1839123	35607	35617	1838966	817267	31656
666-C	*827344	"		"	"	"	1841642	1841644	"	"	"	809673	810068	"
666-D	*827344	"		"	"	"	818492	1844500	"	"	"	"	810068	"
666-E	1845009	1841818		"	"	"	1845011	1847314	"	"	"	*	"	"
666-F	*827344	1839166		"	"	"	821857	1854307	"	"	"	809673	810068	"
666-G	1857441	1841818		"	"	"	1845011	1847314	"	"	"	"	"	"
666-H	*827344	1839166		"	"	"	822173	1844500	"	"	"	809673	810068	"

* Furnished by car manufacturer.

* When Bushing is required use 1878549 and bore Housing to .658/.661 for 666-B-C-D-F-H.

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS AND WASHERS		
Breaker Plate Fastening Screw LOCK WASHER.....	106496	All
Contact Arm Spring Screw Plain WASHER.....	810794	All
Contact Arm Spring Stud Fibre WASHER (3/8" O.D.).....	1837224	All
Contact Arm Spring Stud Bushing WASHER (.248 O.D.).....	1837223	All
Condenser Attaching Screw LOCK WASHER.....	106496	All
Governor Weight WASHER.....	811124	All
Space WASHER (Under Weight Plate).....	811912	All
Space WASHER (Under Coupling).....	811912	All
Shim WASHER (.005 thk.).....	810074	All
Shim WASHER (.010 thk.).....	810078	All
Terminal Stud Steel WASHER (Outside).....	27041	All
Terminal Stud Insulating WASHER (Outside).....	20076	All
Terminal Stud Insulating WASHER (Inside).....	825458	All
Terminal Stud Steel WASHER (Inside).....	1902988	All
Terminal Stud LOCK WASHER.....	106497	All
Terminal Clip Screw LOCK WASHER.....	106496	All

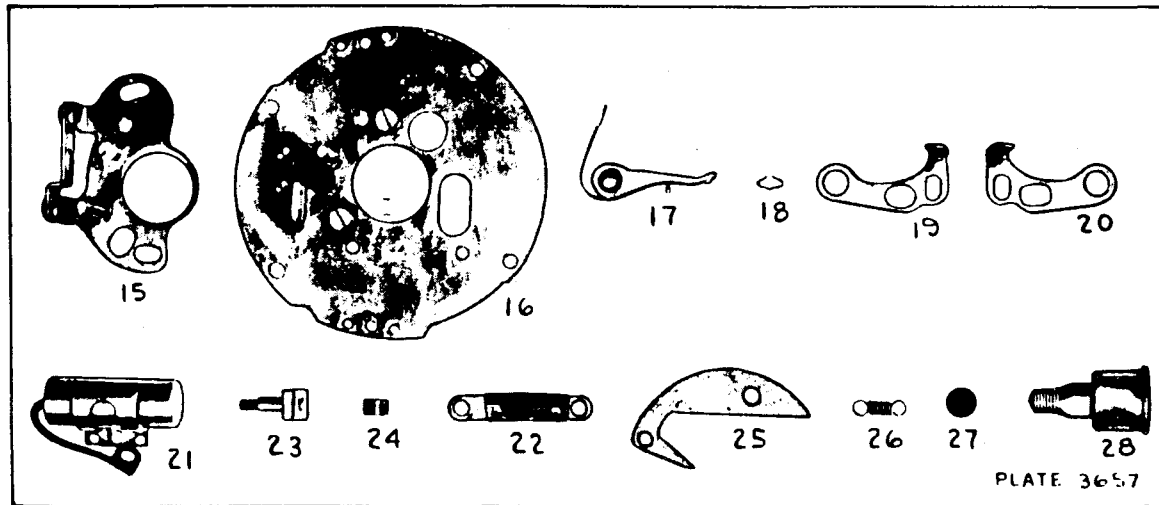

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model No.	Breaker Plate Upper	Breaker Plate Lower	Breaker Arm	Breaker Arm Retainer Spring	Contact Point and Support Lower	Contact Point and Support Upper	Condenser	Terminal Connector	Terminal Stud	Terminal Stud Bushing	Weight	Weight Spring	Felt Wick	Grease Cup
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
666-B	1837359	1837356	813238	813245	1845785	1849877	1880896	825454	825456	825457	818222	820722	819639	805579
666-C	"	"	"	"	"	"	"	"	"	"	1841643	820619	"	"
666-D	"	"	"	"	"	"	"	"	"	"	1841312	1912765	"	"
666-E	"	"	"	"	"	"	"	"	"	"	1845036	1901737	"	"
666-F	"	"	"	"	"	"	"	"	"	"	1837944	1883498	"	"
666-G	"	"	"	"	"	"	"	x	"	"	1845036	1901737	"	"
666-H	"	"	"	"	"	"	"	"	"	"	1841312	820722	"	"

* 1844625 is Long Connector for 666-G.

MINOR PARTS SECTION

Name	Part No.	Used on Models
UTS		
Contact Arm Spring Fastening Screw NUT.....	817363	All
Terminal Stud NUT.....	5024654	All
CREWS AND STUDS		
Breaker Plate Fastening SCREW.....	117114	All
Breaker Plate Adjusting SCREW—Upper.....	816784	666-F-G-H
Contact Adjusting SCREW.....	816784	All
Condenser Attaching SCREW.....	131949	All
Contact Arm Spring Attaching SCREW.....	813511	All
Contact Arm Spring STUD.....	1837225	All
Terminal Clip Fastening SCREW.....	107710	All except 666-G
Terminal Clip Fastening SCREW.....	1835943	666-G
MISCELLANEOUS		
BUSHING—Distributor Housing.....	1878549	666-B-C-D-F-H
Distributor Cap Spring SUPPORT.....	825429	666-G-H
Distributor Cap Spring RIVET.....	111881	666-G-H
High Tension TERMINAL—Screw type.....	1839164	666-G
Rubber NIPPLE.....	1839771	666-G

Parts not listed in this Catalog will not be sold separately.

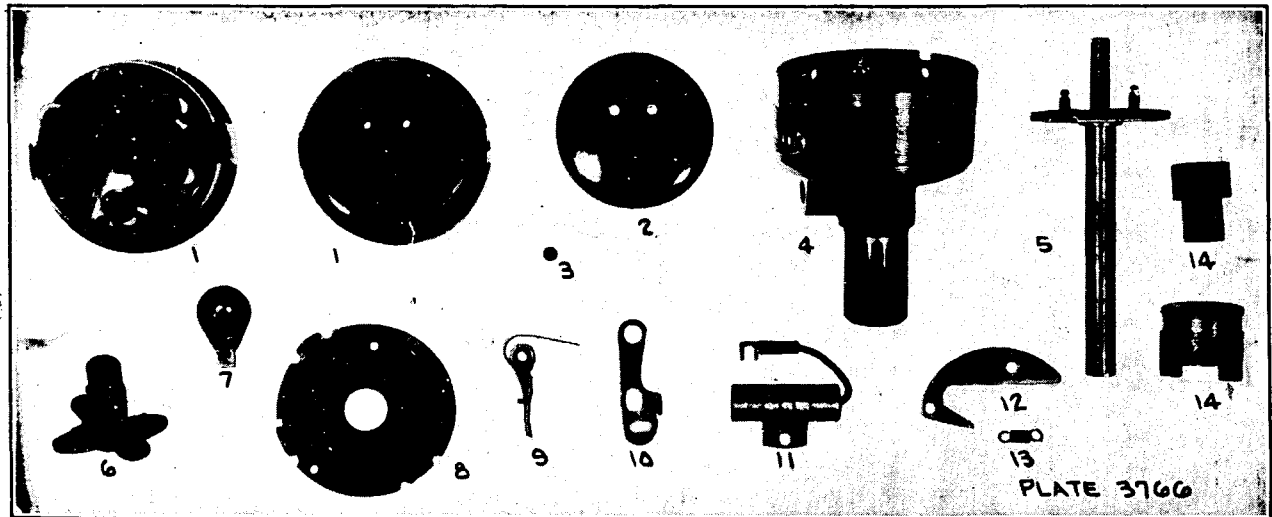

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor Cap	Distributor Cap Cover	Distributor Cap Carbon Button	Distributor Housing	Main Shaft	Cam	Rotor	Breaker Plate	Breaker Lever	Contact Point and Support	Condenser	Weight	Weight Spring	Gear or Coupling
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
645-A	824735		821604	1849407	1849410	825464	820445	1847643	1842058	1848038	1928111	825469	1849546	1845656
645-B	"		"	1836561	1857542	822627	"	821150	*813238	"	"	818222	825515	1849491
645-C	"		"	822622	1883328	1841603	"	"	"	"	"	1837944	1849546	809673
645-D	"		"	1849407	1857775	825464	"	1847643	1842058	"	"	825469	820438	1845656
645-E	"		"	1836561	1858046	822627	"	821150	*813238	"	1900272	818222	"	1858045
645-G	"		"	1858732	1858735	1858740	"	1847643	"	"	1928111	1858744	1900221	1857504
645-H	"		"	1843749	1842523	822627	"	821150	"	"	"	818222	1883509	†
645-J	"		"	822622	828121	821472	"	"	"	"	1900272	"	"	809673
645-K	"		"	1844058	1844358	1859979	"	"	"	"	"	"	1861326	1849491
645-M	"		"	1849407	1860086	825464	"	1847643	1842058	"	1928111	825469	1883498	1845656
645-N	"		"	1860336	1860338	"	"	821150	*813238	"	"	"	825515	1860341
645-P	"		"	1836561	1853683	824734	"	"	"	"	"	1873697	824668	1860902
645-R	"		"	"	1857542	822627	"	"	"	"	"	318222	825515	"
645-S	"		"	821136	1853460	822938	"	"	"	"	1900272	820528	820438	*1837949
645-T	"		"	1862296	1861713	1862071	"	1847643	"	"	1928111	1862068	1900221	1857504
645-U	"		"	1836561	1850910	1841311	"	821150	"	"	1900272	1841312	1883874	1849491
645-V	824987	1871561	"	822622	828522	1853473	"	"	"	"	"	825469	823238	1841699
645-W	824735	"	"	1863539	1863536	1863537	"	1847643	"	"	"	1863143	319194	1859325
645-X	"		"	1862296	1861713	1862071	"	"	"	"	"	1862068	1862078	1857504
645-L	1872832		▲	822622	1883329	822627	"	821150	"	"	"	818222	1887553	1840500
645-Z	824735		821604	1849171	1864240	○	"	"	"	"	"	"	"	809673

*Use either 821604 (1/4 dia.) or 806923 (1/8 dia.) whichever fits.

†Gear supplied by Hercules Engine Co. (Their No. 40199-A).

‡If button recess in cap is spherical bottom drilled use part #1938193.

*Special gear is supplied by Air Cooled Motors Corp. when 645-S is used in Hahn Trucks with Air Cooled 6-A-400 engine.

○Shaft and Cam Assembly.

*Contact Set is 1855720.

MINOR PARTS SECTION


Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Plate Support Screw.....	453844	All
Lock Washer—Condenser Attaching Screw.....	453844	645-A-B-C-D-E-G-H-J-K-N-P-R-S-T-U-V-W-X-Y-Z
Lock Washer—Cap Spring Support Screw.....	453844	All
Lock Washer—Terminal Stud—Outside.....	138530	645-A-D-M
Lock Washer—Terminal Stud.....	453844	645-C-E-G-H-J-K-M-N-P-R-S-T-U-V-W-X-Y-Z
Lock Washer—Felt Wick Retainer Screw.....	113144	645-S
Lock Washer—Weight Hold Down Cup.....	121752	645-G
Lock Washer—Weight Hold Down Cup.....	1861711	645-T-X
Lock Washer—Weight Hold Down Cup (2 hole).....	1885558	645-G-T

MINOR PARTS SECTION

Name	Part No.	Used on Models
UTS		
Nut—Terminal Stud—Outside.....	120622	645-D-G-M-T-W-X
Nut—Terminal Stud—Inside.....	817363	645-A-D-G-M-T-W-X
Nut—Weight Hold Down Cup.....	817363	645-G
Nut—Weight Hold Down Cup.....	120622	645-T-X
Nut—Weight Hold Down Cup.....	1923540	645-G-T
CREWS		
Screw—Breaker Plate Support.....	453418	All
Screw—Breaker Lever Spring Attaching.....	1920777	645-B-C-E-H-J-K-N-P-R-S-U-V-Y-Z
Screw—Contact Adjusting.....	1914916	All
Screw—Condenser Attaching.....	453304	All
Screw—Cap Spring Support.....	453461	All
Screw—Cap Cover Attaching.....	455590	645-V
Screw—Distributor Hold Down.....	35483	645-Z
Screw—Distributor H.T. Terminal—Side.....	1860406	645-Y
Screw—Distributor H.T. Terminal—Center.....	1860407	645-Y
Screw—Felt Wick Retainer.....	142424	645-S
WASHERS		
Washer—Breaker Lever Spring Attaching Screw.....	810794	645-A-B-C-E-H-J-K-N-P-R-S-U-V-Y-Z
Washer—Adaptor Sleeve Retainer.....	807405	645-Z
Washer—Distributor Hold Down Screw Plain.....	21168	645-Z
Washer—Distributor Hold Down Screw Spring.....	35498	645-Z
Washer—Shim (.005 thick).....	1848595	645-A-D-M
Washer—Shim (.010 thick).....	1848596	645-A-D-M
Washer—Shim (.005 thick).....	810074	645-B-C-E-H-J-K-S-U-V-W-Y-Z
Washer—Shim (.010 thick).....	1912129	645-B-C-E-H-J-K-S-U-V-W-Y-Z
Washer—Space—Under Breaker Plate.....	811912	645-Z
Washer—Space—Under Collar.....	1837617	645-A-D-H-M
Washer—Space—Under Gear.....	811912	645-B-C-E-J-K-R-U-V-Y-Z
Washer—Space—Under Weight Plate.....	811912	645-A-B-C-E-H-K-M-P-U-V-W-Y
Washer—Space—Under Weight Plate.....	810085	645-S
Washer—Under Gear.....	810085	645-S
Washer—Terminal Stud—Outside.....	1914476	645-A-D-G-M-T-W-X
Washer—Terminal Stud Insulation—Outside.....	816806	645-A-D-G-M-T-W-X
Washer—Terminal Stud Plain—Inside.....	810794	645-A-D-E-G-K-M-T-W-X
Washer—Weight.....	811124	645-A-B-C-D-E-H-J-K-M-N-P-R-S-U-V-W-Y
MISCELLANEOUS		
Adaptor SLEEVE.....	1864243	645-Z
Advance ARM Assembly.....	1865844	645-Z
BUSHING—Distributor Housing.....	1855984	645-F-N
BUSHING—Terminal Stud.....	821160	645-B-C-E-H-J-K-N-P-R-S-V-Y-Z
BUSHING—Terminal Stud.....	1878405	645-D-G-M-T-W-X
CLAMP—Terminal Stud.....	26153	645-B-C-E-H-J-K-N-P-R-S-V-Y-Z
CLIP—Breaker Lever Retainer.....	813245	645-B-C-E-H-J-K-N-P-R-S-T-Y-Z
Felt WICK—In Grease Cup Hole.....	802692	645-D-G-K-M-T-X
Felt WICK—In Cam.....	816803	All
Felt WICK—In Housing.....	823551	645-S
Felt Wick SPRING.....	823550	645-S
Felt Wick SPRING.....	1845715	645-T-X
GASKET—for Gear—Cork.....	1860923	645-P-R
Grease CUP.....	1955293	All
PIN—Collar, Coupling or Gear.....	813131	645-A-D-H-M-V-W
PIN—Coupling.....	1857492	645-C-J-K-Y-Z
PIN—Gear.....	1857502	645-B-E-G-T-U-X
PIN—Gear.....	141136	645-N
PIN—Gear.....	829421	645-P-R
PIN—Gear.....	815003	645-S
PIN—Cap Spring Support.....	811745	645-B-C-E-H-J-K-P-R-S-U-V-Y-Z
Shaft EXTENSION.....	1859322	645-W
SPRING—Distributor Cap.....	*834069	645-B-C-E-H-J-K-P-R-S-U-V-Y-Z
SPRING—Distributor Cap.....	1871838	645-A-D-G-M-N-T-W-X
SPRING—In Grease Cup Hole.....	1845715	645-D-G-K-M
SPRING—Coupling Retainer.....	1859326	645-W
Support PLATE.....	1841155	645-Z
SUPPORT—Cap Spring.....	1847289	645-A-D-G-M-N-T-W-X
SUPPORT—Cap Spring.....	*811744	645-B-C-E-H-J-K-P-R-S-U-V
STUD—Terminal.....	1847647	645-A-D-G-M-T
STUD—Terminal.....	132776	645-B-C-E-H-J-K-N-P-R-S-U-V-Y-Z
Weight Hold Down CUP.....	1858747	645-G
Weight Hold Down CUP.....	1862074	645-T-X

*1871838 Distributor Cap Spring and 1847289 Cap Spring Support are used on later models. No pin necessary.

arts not listed in this Catalog will not be sold separately.

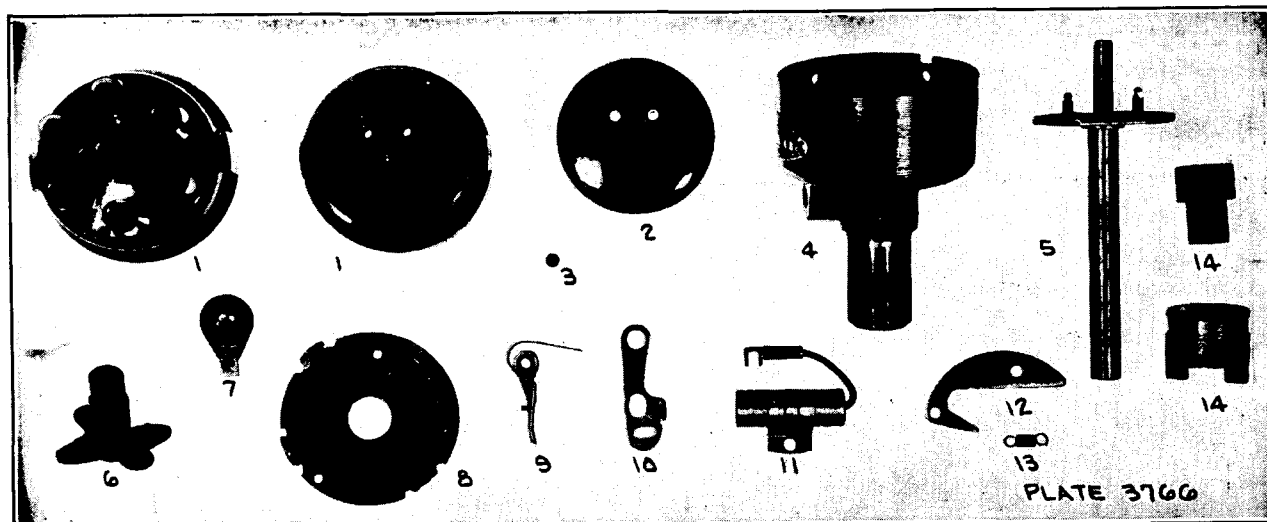

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor Cap	Distributor Cap Cover	Cap Carbon Button	Housing	Main Shaft	Cam	Rotor	Breaker Plate	Breaker Lever	Contact Point and Support	Condenser	Weight	Weight Spring	Gear or Coupling
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
647-A	824735		821604	1858553	1858555	1858558	820445	1858564	▲ 813238	▲ 1845785	1869706	818222	1908587	1858578
647-B	"		"	1862247	1862248	"	"	"	▲ "	▲ "	"	"	"	"
647-C	"		"	1862711	1862713	1862716	"	"	▲ "	▲ "	"	1863143	819194	1859325
647-D	"		"	1866161	1866886	▲ 1867181	"	1866028	● "	● 1871862	1869704	"	1887743	1858578
647-E	"		"	1866019	1866021	▲ 1869568	"	"	● "	● "	"	"	823238	"
647-F	"		"	1866482	1866881	"	"	"	● "	● "	"	"	1886227	1859325
647-G	"		"	1869575	1869578	1869580	"	1914449	† "	† 1871865	"	1881371	1883498	1866135
647-H	"		"	1871570	1871572	1871574	"	"	† "	† "	"	818222	823238	1840500
647-J	1873832		x	"	"	"	"	"	† "	† "	"	"	"	"
647-K	824735		821604	1871679	1866881	1869568	"	1866028	● "	● 1871862	1849126	1863143	1886227	1859325
647-L	1842714		806923	1871788	1869578	1871791	1842718	1871793	1842058	1871865	"	1881371	1883498	1866135

*Use either 821604 (1/4 dia.) or 806923 (1/8 dia.). Both were used in production.

*When replacing springs on Distributors under Serial No. 60,000 also replace Cam and Weight.

*823238 Weight Spring has 6 1/2 turns of .039 wire. 820438 Spring has 7 1/2 turns .035 wire. When replacing weight spring on Distributors under Serial No. 27,000 also replace Cam and Weight.

*When replacing either cam, weight or weight springs on Distributors under Serial No. 49,000 on 647-D, 27,000 on 647-E, 60,000 on 647-F, all three parts must be replaced in order to get proper curve.

*Use 1867722 Cap for Taxicab service and Heavy Duty service.

*If old condenser has two leads, the lead attached to breaker plate must be grounded under cap spring support screw.

†If button recess in cap is spherical bottom drilled use part #1938193.

†Contact Set No. 1916636.

▲Contact Set No. 1882391.

●Contact Set No. 1871678.

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Distributor Cap Spring Support Screw LOCK WASHER.....	453844	647-A-B-C-D-E-F-G-H-J-L
Condenser Attaching Screw LOCK WASHER.....	453844	647-A-B-C-D-E-F-G-H-J-L
Condenser Terminal Screw LOCK WASHER.....	116438	647-L
Breaker Plate Ground Lead Screw LOCK WASHER.....	453844	647-A-B-C
Terminal Stud Nut LOCK WASHER.....	453844	647-A-B-C-D-E-F-G-H-J-K
Terminal Screw LOCK WASHER.....	453844	647-A-B-C-D-E-F-G-H-J-K
Vacuum Control Arm Attaching Screw LOCK WASHER.....	456413	647-D-E-F-G-H-J-K
Vacuum Control Attaching Screw LOCK WASHER.....	453435	647-A-B-C-D-E-F-G-H-J-K
Weight Hold Down Nut LOCK WASHER (2 hole) No. 8.....	1861711	647-G-L
Weight Hold Down Nut LOCK WASHER (2 hole) No. 10.....	1885558	647-G-L
Weight Hold Down Plate Nut LOCK WASHER.....	453844	647-L
NUTS		
Breaker Plate Ground Lead Screw NUT.....	817363	647-A-B-C-J
Breaker Lever Spring Attaching Screw NUT.....	817363	647-A-B-C-D-E-F-H-K-L
Condenser Terminal NUT.....	817363	647-L

Delco-Remy

SERVICE PARTS CATALOG

Name	Part No.	Used on Models
UTS—Continued		
Terminal Stud NUT—Inside.....	817363	647-A-B-C-D-E-F-G-H-J-K-L
Weight Hold Down Plate NUT (8-32).....	120622	647-G-L
Weight Hold Down Plate NUT (10-32).....	1923540	647-G-L
CREWS		
Breaker Lever Spring Attaching SCREW—8-32x $\frac{1}{4}$	455927	647-A-B-C-D-E-F-G-H-J
Breaker Lever Spring Attaching SCREW—8-32x $\frac{3}{8}$	1920777	647-D-E-F-G-H-J-K-L
Breaker Plate Ground Lead SCREW.....	453647	647-A-B-C
Breaker Plate Ground Lead SCREW—To Housing.....	115434	647-A-B-C
Contact Adjusting SCREW.....	1914916	647-A-B-C-D-E-F-G-H-J-K-L
Condenser Attaching SCREW—8-32x $\frac{1}{8}$	141547	647-A-B-C-D-E-F-G-H-J
Condenser Attaching SCREW—8-32x $\frac{1}{4}$	453647	647-K-L
Condenser Terminal SCREW.....	453647	647-L
Distributor Cap H.T. Terminal SCREW (Side).....	1860406	647-J
Distributor Cap H.T. Terminal SCREW (Center).....	1860407	647-J
Distributor Cap Spring Support SCREW.....	453647	647-A-B-C-D-E-F-G-H-J-K-L
Distributor Hold Down SCREW.....	1853640	647-A
H.T. Terminal SCREW (Shipped separate).....	1839164	647-L
Terminal SCREW.....	453461	647-A-B-C-D-E-F-H-J-K
Terminal Clamp SCREW.....	1835943	647-G-L
Vacuum Control Arm Attaching SCREW.....	141542	647-D-E-F
Vacuum Control Arm Attaching SCREW.....	1872646	647-G-H-J-K-L
Vacuum Control Attaching SCREW—10-32x $\frac{1}{4}$	135616	647-A-B-C-D-E-F-G-H-J-K-L
VASHERS		
Breaker Lever Spring Attaching Screw WASHER.....	1884832	647-A-B-C
Breaker Lever Spring Attaching Screw Plain WASHER—.173x $\frac{1}{4}$	810794	647-G-H-J-K-L
Breaker Lever Spring Attaching Screw Insulation WASHER.....	1858577	647-A-B-C
Breaker Lever Spring Attaching Screw Plain WASHER—.170x $\frac{3}{8}$	807716	647-A-B-C
Breaker Lever Spring Screw Ins. WASHER.....	1865977	647-E-F-G-H-J
Breaker Plate Ground Spring WASHER.....	1865983	647-D-E-F-G-H-J-L
Distributor Hold Down Screw Plain WASHER.....	110959	647-A
Shim WASHER—.005.....	810074	647-A-B-C-D-E-F-H-J-K
Shim WASHER—.010.....	1912129	647-A-B-C-D-E-F-H-J-K
Space WASHER—Under Coupling.....	811912	647-F-H-J
Space WASHER—Under Weight Plate.....	811912	647-A-B-C-D-E-F-H-J-K
Weight WASHER.....	811124	647-A-B-C-D-E-F-G-H-J-K-L
MISCELLANEOUS		
Bearing BALL.....	145639	647-A-B-C-D-E-F-G-H-J-K-L
Breather PIPE.....	1860880	647-A-B-D-E
BUSHING—Breaker Lever Spring.....	1904600	647-A-B-C-D-E-F-G-H-J
BUSHING—Distributor Housing.....	1855984	647-G
BUSHING—Distributor Housing—Upper.....	1874335	647-A-B-D
BUSHING—Terminal Stud—Inside.....	1853286	647-A-B-C
BUSHING—Terminal Stud—Insulation.....	1865985	647-D-E-F-G-H-J-K-L
CLAMP—Terminal Stud.....	26153	647-A-B-C-D-E-F-G-H-J-K-L
CLAMP—Vacuum Control Bracket.....	1865984	647-D-E-F-G-H-J-K-L
*Clamp ARM Assembly.....	1858458	647-A
CLIP—Breaker Lever Spring Lock.....	1868992	647-D-E-F-G-H-J-K-L
Coupling PIN.....	1857492	647-H-J
Distributor Cap SPRING.....	1871838	647-A-B-C-D-E-F-G-H-J-K-L
Distributor Cap Spring SUPPORT.....	1847289	647-A-B-C-D-E-F-G-H-J-K-L
Distributor Hold Down SPRING.....	1853639	647-A
Felt WICK.....	816803	647-A-B-C-D-E-F-G-H-J-K-L
Gear PIN.....	829421	647-G-L
Grease CUP.....	805579	647-A-B-C-D-E-F-G-H-J-K-L
LEAD—Condenser to Terminal.....	1871681	647-K
LEAD—Breaker Plate Ground.....	1881531	647-G-H-J-L
LEAD—Breaker Plate Ground.....	1879140	647-D-F-K
LEAD—Breaker Plate Ground.....	1853288	647-A-B-C
LEAD—Condenser to Terminal.....	1840376	647-L
LEAD—Terminal Connector.....	1858574	647-A-B-C
LEAD—Terminal Connector.....	1865978	647-D-E-F-G-H-J-K-L
Retainer SPRING—Lower Coupling.....	1859326	647-C-F
Shaft Collar PIN.....	1862218	647-A-B-C-D-E-F-K
Shaft EXTENSION and Coupling.....	1859322	647-C
Shaft EXTENSION and Coupling.....	1866484	647-F-K
Shaft EXTENSION and Coupling.....	1866024	647-E
Shaft Extension Retainer SPRING.....	1859326	647-F-K
Terminal STUD and Bushing.....	1853625	647-A-B-C-D-E-F-G-H-J-K-L
Vacuum CONTROL.....	680-U	647-A-B
Vacuum CONTROL.....	681-A	647-C
Vacuum CONTROL.....	681-M	647-D
Vacuum CONTROL.....	681-K	647-E
Vacuum CONTROL.....	681-P	647-F-K
Vacuum CONTROL.....	681-V	647-G-L
Vacuum CONTROL.....	1116008	647-H-J
Weight Hold Down PLATE.....	1885557	647-G-L

xSee Vacuum Control and Advance Arm—Group 2 for parts.


*See Vacuum Control and Advance Arm—Group 3 for parts.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Plate Support Screw.....	453844	All
Lock Washer—Cap Spring Support Screw.....	453844	All
Lock Washer—Condenser Attaching Screw.....	453435	All
Lock Washer—Terminal Stud Nut.....	453844	All
NUTS		
Nut—Terminal Stud.....	120622	All
SCREWS		
Screw—Breaker Plate Support.....	453418	All
Screw—Cap Spring Support.....	453418	All
Screw—Contact Adjusting.....	1914916	All
Screw—Condenser Attaching.....	453341	All
WASHERS		
Washer—Space—Under Weight Plate.....	811912	All
Washer—Space—Under Coupling or Gear.....	811912	623-A-B-C-E-G-H-J-K-M-N-P-R-S-T
Washer—Shim—.005 thick.....	810074	All
Washer—Shim—.010 thick.....	1912129	All
Washer—Terminal Stud Bushing.....	1904600	All
Washer—Terminal Stud Insulation—Inside.....	820988	All
Washer—Terminal Stud Insulation—Outside.....	816806	All
Washer—Terminal Stud Plain.....	807716	All
Washer—Weight.....	811124	623-A-B-D-E-H-J-K-L-M-N-P-R-S-T
MISCELLANEOUS		
Breaker Lever Spring Insulation STRIP.....	820991	All
Cap Carbon BUTTON	*821604	All
Cap SPRING	816801	All
Cap Spring SUPPORT	826476	All
Felt WICK	816803	All
Grease CUP	805579	All
Pipe PLUG —Distributor Housing.....	125947	623-D-H-K-M-P-R
Terminal STUD	820987	All

*If button recess is spherical bottom drilled use part #1938193.

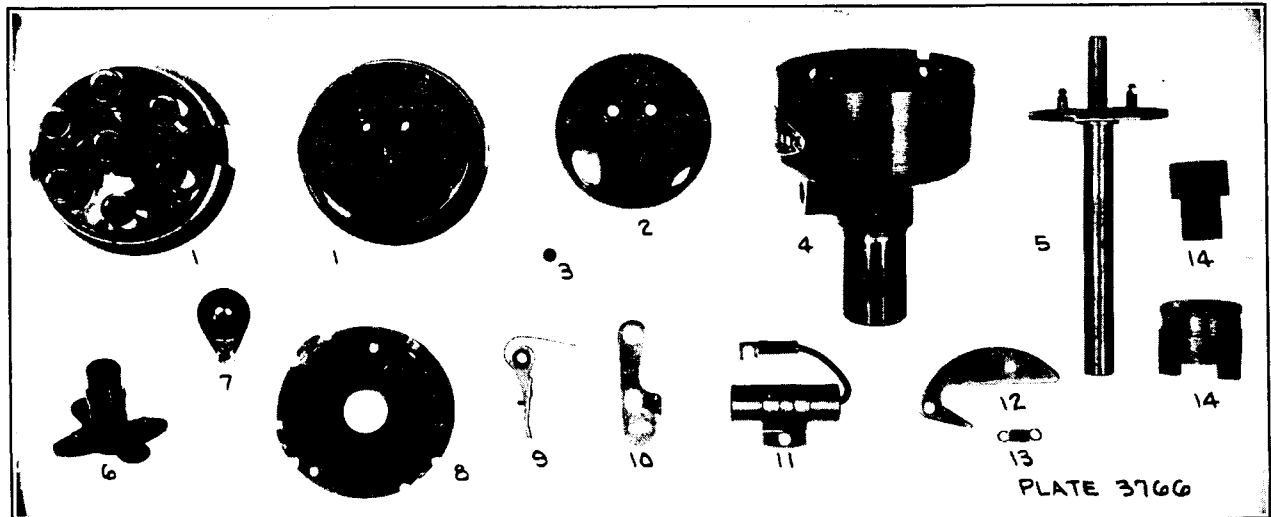

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor Cap	Distributor Cap Cover	Distributor Cap Carbon Button	Distributor Housing	Main Shaft	Cam	Rotor	Breaker Plate	Breaker Lever	Contact Point and Support	Condenser	Weight	Weight Spring	Gear or Coupling
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
649-A	824735		*821604	1836561	1864343	822627	820445	821150	*813238	*1848038	1928111	818222	825515	1864165
649-B	"		"	"	1864350	825464	"	"	"	"	"	825469	1883498	"
649-C	"		"	1864370	1864365	1864361	"	"	"	"	1900272	1880902	1902376	"
649-D	824987	1871561	"	822622	828121	824109	"	"	"	"	"	818222	1882774	809673
649-E	824735		"	1836561	1864929	822627	"	"	"	"	"	"	1922250	1849491
649-F	"		"	1840004	828522	822938	"	"	"	"	"	820528	1913818	809673
649-G	"		"	1865172	1865175	1879094	"	1847643	"	"	1928111	1867110	1887885	1865180
649-H	"		"	1841152	1865523	822627	"	821150	"	"	1900272	818222	1907592	*
649-J	"		"	1866129	1866132	1869580	"	1847643	"	"	"	1881371	1883498	1866134
649-K	1841856	1871561	"	1866870	1866872	†	"	821150	"	"	"	"	"	*
649-L	824735		"	1849171	1869436	822938	"	"	"	"	"	820528	1886508	809673
649-M	"		"	1865172	1869492	1879094	"	1847643	"	"	1928111	1867110	1867119	1865180
649-N	"		"	1840537	1842523	822627	"	821150	"	"	1900272	818222	827463	1839067
649-P	"		"	1865172	1865175	1879094	"	1847643	"	"	"	1867110	1887885	1865180
649-R	"		"	1864370	1871208	1869841	"	821150	"	"	"	1881371	817909	1864165
649-S	"		"	"	1869840	"	"	"	"	"	1928111	1881371	1900371	"
649-T	"		"	"	1871290	1864361	"	"	"	"	"	1880902	825515	"
649-U	"		"	1843749	1871386	822627	"	"	"	"	"	818222	1884929	Δ
649-V	824987	1871561	"	822622	1839868	823236	"	"	"	"	"	"	1882774	Δ
649-W	1842714		806923	1871505	1871509	1871511	1842718	"	"	"	1849126	1880902	1913818	809673
649-X	"		"	1871724	1871514	1871516	"	"	"	"	"	"	"	"
649-Y	824735		*821604	1866129	1866676	1869580	820445	1847643	"	"	1900272	1881371	1883498	1866135
649-Z	"		"	1844058	1844542	822627	"	821150	"	"	"	818222	1884931	809673

*Gear not furnished by Delco-Remy.

†Cam part of Shaft Assembly—Column 5.

ΔGear supplied by Hercules Motor Corp.

*If button recess in cap is spherical bottom drilled use part #1938193.

*Contact Set No. 1855720.

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Plate Support Screw.....	453844	All
Lock Washer—Condenser Attaching Screw.....	453844	All
Lock Washer—Condenser Terminal.....	116438	649-W
Lock Washer—Distributor Cap Spring Support Screw.....	453844	649-L
Lock Washer—Distributor Hold Down Screw.....	120380	649-A-B-D-E-F-G-H-J-K-L-M-P-R-S-T-U-V-W-X-Y-Z
Lock Washer—Terminal Stud.....	453844	649-C-G-J-R-S-T-W-X-Y
Lock Washer—Weight Hold Down Nut.....	453844	649-C-G-J-R-S-T-W-X-Y
Lock Washer—Weight Hold Down Nut (2 hole).....	1885558	649-C-G-J-M-N-P-R-S-T-W-X-Y
NUTS		
Nut—Condenser Terminal.....	817363	649-W-X
Nut—Terminal Stud—Inside.....	817363	649-G-J-M-P-Y
Nut—Terminal Stud—Outside.....	120622	649-C-G-J-M-P-Y
Nut—Weight Hold Down (8-32).....	120622	649-C-G-J-M-N-R-S-T-W-X-Y
Nut—Weight Hold Down (10-32).....	1923540	649-C-G-J-M-N-P-R-S-T-W-X-Y
SCREWS		
Screw—Breaker Plate Support.....	115607	All
Screw—Breaker Lever Spring Attaching.....	1920777	649-A-B-C-D-E-F-H-K-L-N-P-R-S-T-U-V-W-X-Z
Screw—Contact Adjusting.....	1914916	All
Screw—Condenser Attaching.....	453304	649-A-B-C-D-E-F-G-H-J-K-L-M-N-P-R-S-T-U-V-Y-Z
Screw—Condenser Attaching.....	453647	649-W-X
Screw—Condenser Terminal.....	453647	649-W
Screw—Distributor Cap Spring Support.....	115434	649-A-B-C-D-E-F-G-H-J-K-L-M-N-P-R-S-T-U-V-Y-Z
Screw—Distributor Cap Cover.....	455590	649-D-K-V
Screw—Distributor Hold Down.....	1837895	649-H
Screw—Distributor Hold Down.....	1872443	649-L
Screw—Rotor Segment Attaching.....	1842722	649-W-X
Screw—Terminal—8-32x1.....	132776	649-A-B-C-D-E-F-H-K-L-N-R-S-T-U-V-W-X-Z
Screw—Terminal.....	822417	649-D
WASHERS		
Washer—Breaker Lever Spring Screw.....	810794	649-A-B-C-D-E-F-G-H-K-L-N-R-S-T-U-V-W-X-Z
Washer—Distributor Adaptor Sleeve.....	807405	649-H-L
Washer—Distributor Hold Down Screw Spring.....	35498	649-H
Washer—Distributor Hold Down Screw—Plain.....	21168	649-H
Washer—Distributor Hold Down Screw—Plain.....	834560	649-L
Washer—Shim (.005 thk.).....	810074	649-A-B-C-D-E-F-H-L-N-R-S-T-U-V-W-X-Z
Washer—Shim (.010 thk.).....	1912129	649-A-B-C-D-E-F-H-L-N-R-S-T-U-V-W-X-Z
Washer—Space—Under Gear.....	1837617	649-U
Washer—Space—Under Weight Plate.....	811912	649-A-B-C-D-E-F-H-L-N-R-S-T-U-V-W-X-Z
Washer—Space—Under Shaft Collar or Gear.....	811912	649-A-B-C-D-E-F-H-L-N-R-S-T-U-V-W-X-Z
Washer—Terminal Stud.....	810794	649-G-J-M-P-Y
Washer—Terminal Stud Ins.....	816806	649-G-J-M-P-Y
Washer—Terminal Stud—Outside.....	1914476	649-G-J-M-P-Y
Washer—Under Cam.....	811912	649-K
Washer—Weight.....	811124	649-A-B-C-D-E-F-G-H-J-L-N-R-S-T-U-V-W-X-Y-Z
MISCELLANEOUS		
Advance ARM Assembly.....	1841304	649-L
Advance ARM Assembly.....	1865844	649-H
BUSHING—Distributor Housing.....	1855984	649-J
BUSHING—Distributor Housing.....	1872669	649-W-X
BUSHING—Terminal Stud.....	821160	649-A-B-C-D-E-F-H-K-L-N-R-S-T-U-V-W-X-Z


*822417 Terminal Screw and 813222 Bushing were used on later models.

*For parts see Advance Arms—Group 1.

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
BUSHING—Terminal Stud.....	1878405	649-G-J-M-P-Y
BUSHING—Terminal Stud.....	813222	649-D
CLAMP—Terminal.....	26153	649-A-B-C-D-E-F-H-K-L-N-R-S-T-U-V-W-X-Z
CLIP—Breaker Lever Retainer.....	813245	649-A-B-C-D-E-F-H-K-L-N-R-S-T-U-V-W-X-Z
Condenser LEAD.....	1871681	649-W-X
Distributor Adaptor SLEEVE.....	1841003	649-H
Distributor Adaptor SLEEVE.....	1864243	649-L
*Distributor Cap SPRING.....	*834069	649-A-B-D-E-F-H-K-L-N-R-S-T-U-V-W-X-Z
Distributor Cap SPRING.....	1871838	649-C-G-J-M-P-Y
Distributor Cap Spring PIN.....	811745	649-A-B-D-E-F-H-K-L-N-R-S-T-U-V-W-X-Z
*Distributor Cap Spring SUPPORT.....	*811744	649-A-B-D-E-F-H-K-L-N-R-S-T-U-V-W-X-Z
Distributor Cap Spring SUPPORT.....	1847289	649-C-G-J-M-P-Y
Distributor Ground SPRING.....	828447	649-K
Distributor Hold Down PLATE.....	1841155	649-H-L
Felt WICK—In Cam.....	816803	649-A-B-C-D-E-F-G-H-J-L-M-P-S-T-U-V-W-X-Y-Z
Felt WICK—In Cam.....	819639	649-N
Felt WICK—In Housing.....	802692	649-J-M-Z
Felt Wick or Fibre Plug SPRING.....	1845715	649-G-J-M-P-Z
Fibre PLUG—In Housing.....	1869303	649-G-P
Grease CUP.....	1955293	649-A-B-C-D-E-F-G-H-J-K-L-M-N-P-R-S-T-U-V-W-X-Y-Z
PIN—Coupling.....	1857492	649-A-B-C-D-F-L-R-S-T-U-V-W-X-Z
PIN—Gear.....	1857502	649-E-G-M
PIN—Gear.....	1843107	649-J
PIN—Gear.....	1861374	649-P
PIN—Gear.....	815003	649-N
PIN—Gear.....	829421	649-Y
ROTOR Only.....	1842719	649-W-X
Rotor SPRING.....	1842723	649-W-X
Rotor SEGMENT.....	1838315	649-W-X
TERMINAL—High Tension—Screw type.....	1839164	649-W-X
Terminal STUD.....	1847647	649-G-J-M-P-Y
Weight Hold Down PLATE.....	1862074	649-G-M-P
Weight Hold Down PLATE (For No. 8 Stud).....	1885557	649-C-J-R-S-T-W-X-Y
Weight Hold Down PLATE (CCW—For No. 10 Stud).....	1886135	649-C-J-S-T-W-Y
Weight Hold Down PLATE (CW—For No. 10 Stud).....	1886136	649-X
Weight Space COLLAR.....	1871207	649-R

*1871838—Cap Spring and 1847289—Cap Spring Support are used on later models, no pin necessary.

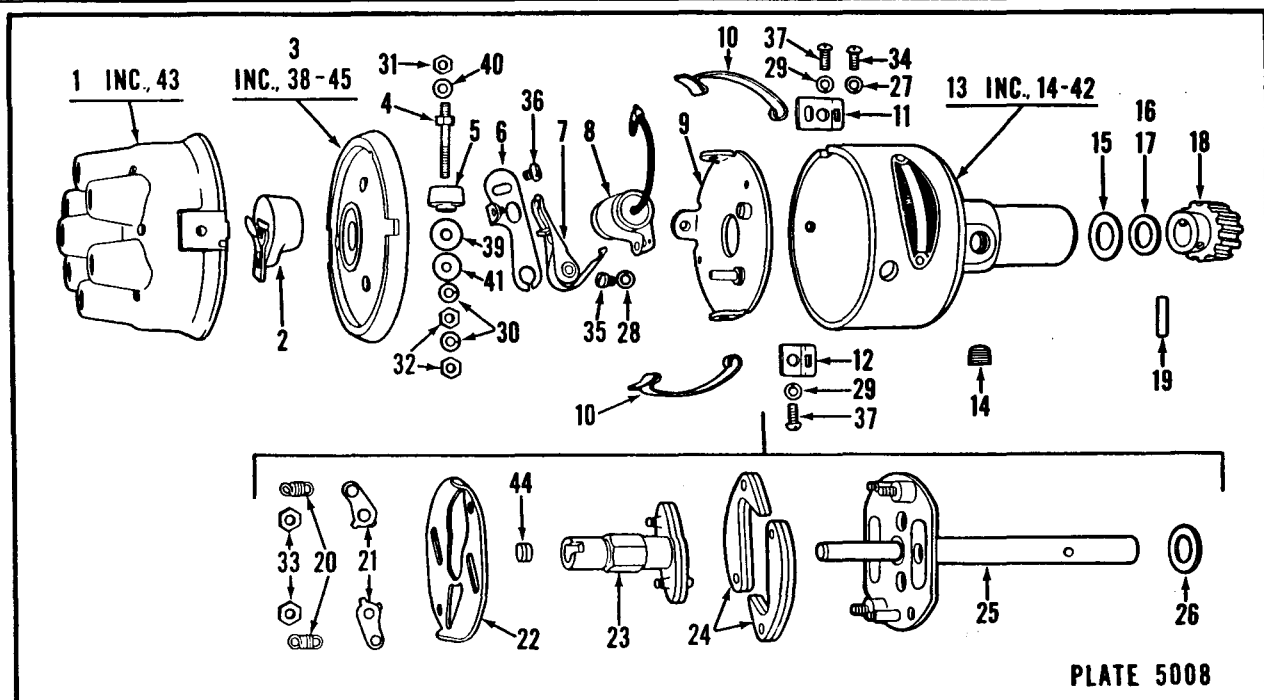

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model	Cap	Rotor	Cover Housing	Screw or Stud Terminal	Bushing Insul.	Contact Point and Support	Breaker Lever	Con- denser	Plate Breaker	Spring Cap	Support Cap Spring	Support Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110001	1863219	1842718		132776	821160	a1848038	a813238	1881030	821150	1871838	1847289	1847289	1871505
1110002	824735	820445		"	"	"	"	1900272	"	"	"	"	822622
1110003	"	"		"	"	"	"	1928111	"	"	"	"	1836561
1110004	"	"		"	"	"	"	1900272	"	"	"	"	822622
1110005	"	"		"	"	"	"	"	"	"	"	"	"
1110006	1842714	"		"	"	"	"	"	"	"	"	"	1868071
1110007	824735	"		"	"	"	"	"	"	"	"	"	1864370
1110008	"	"		1916806	1878405	"	"	1928111	1847643	"	"	"	1868079
1110009	1842714	1842718		132776	821160	"	"	1881030	821150	"	"	"	1869347
1110010	824735	820445		"	"	"	"	1860020	"	"	"	"	1868115
1110011	1842714	1849504		"	"	"	"	1881030	"	"	"	"	1874446
1110012	"	820445		"	"	"	"	1900272	"	"	"	"	1868071
1110013	1867722	"		1916806	1878405	"	"	1881030	1847643	"	"	"	1868632
1110014	824735	"		132776	821160	"	"	1900272	821150	"	"	"	1841152
1110015	"	"		"	"	"	"	"	"	"	"	"	"
1110016	1863219	1842718		"	"	"	"	1881030	"	"	"	"	1869347
1110017	1842714	"		1916806	1878405	"	"	"	1847643	"	"	"	1872094
1110018	1867722	820445		"	"	"	"	"	"	"	"	"	1872457
1110019	824735	"		132776	821160	"	"	1900272	821150	"	"	"	1864370
1110020	"	"		"	"	"	"	"	"	"	"	"	1836561
1110021	"	"		"	"	"	"	"	"	"	"	"	822622
1110022	1872832	"		"	"	"	"	"	"	"	"	"	"
1110023	824735	"		1916806	1878405	"	"	1928111	1847643	"	"	"	1840779
1110024	811735	"		132776	821160	"	"	1900272	821150	"	"	"	1840004
1110025	1842714	1842718		"	"	b1882964	b1881394	1881030	"	"	"	"	1873001
1110026	824735	820445		"	"	a1848038	a 813238	1900272	"	"	"	"	821136
1110027	1872832	"		"	"	b1882964	b1881394	"	"	"	"	"	1840004
1110028	1842714	"		"	"	a1848038	a813238	1928111	"	"	"	"	1868071
1110029	"	1849504		"	"	"	"	1881030	"	"	"	"	1868115
1110030	824735	820445		1916806	1878405	"	"	1900272	1847643	"	"	"	1872457

a—Use Contact Set No. 1855720.

b—Use Contact Set No. 1882965.

□ Serviced by U.M.S. Division of Canada.

Delco-Remy SERVICE PARTS CATALOG

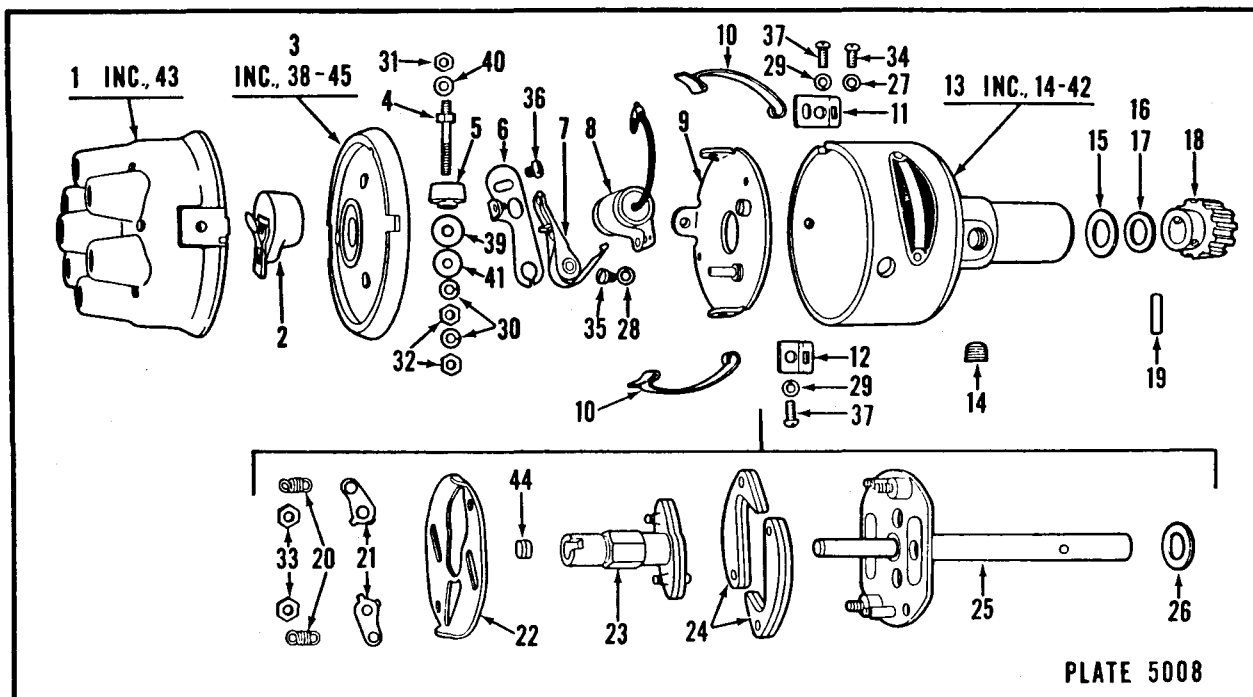

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar, Coupling or Gear	Pin	Spring Weight	Lock Washer	Plate — Weight Hold Down	Cam	Weight	Shaft — Main	Washer — Space
	14	15	16	17	18	19	20	21	22	23	24	25	26
1110001		811912	810074	810078	809673	1857492	1884136	1885558	1885557	1871511	1880902	1871509	811912
1110002		"	"	"	"	"	*823238			1841603	1837944	1833329	"
1110003		"	"	"	†	829421				†		*1866678	"
1110004		"	"	"	†					†		*1837382	"
1110005		"	"	"	†		1883498			825464	825469	828522	"
1110006		"	"	"	†		1835699			822627	818222	824738	"
1110007		"	"	"	1855412	1857502	817909	1885558	1885557	1869841	1881371	1868069	"
1110008		"	"	"	1865180		1887885	"	1862074	1879094	1867110	1879058	"
1110009		811912	810074	810078	809673	1857492				†		*1868132	811912
1110010		"	"	"	†	"	1883509			1871574	818222	1868169	"
1110011		"	"	"	1872953	1862218	1883498	1885558	1885557	1871791	1881371	1868172	"
1110012		"	"	"	†		820722			822627	818222	828522	"
1110013		"	"	"	1865180	1857502	1887885	1885558	1862074	1879094	1867110	1879058	"
1110014		"	"	"	†		822172			822627	818222	1841073	811912
1110015		"	810074	810078	†		1885756			822938	820528	1848006	"
1100016		811912	"	"	809673	1857492	1884136	1885558	1885557	1871516	1880902	1871514	"
1100017		"	"	"	†	"	818304	"	"	1872200	"	1872097	"
1100018		"	"	"	1865180	1857502	1887885	"	1862074	1879094	1867110	1879058	"
1100019		811912	810074	810078	1855412	"	1902376	"	1885557	1864361	1880902	1872454	811912
1100020		"	"	"	1849491		1883498			821472	818222	1858046	"
1100021		"	"	"	809673	1857492	1910201			1861685	1880902	1844358	"
1100022		"	"	"	"	"	1883509			821472	818222	828121	"
1100023		"	"	"	1865180	1857502	1867119	1885558	1862074	1879094	1867110	1804796	"
1100024		811912	"	"	1860628	1862218	1883874			1839794	820528	1844358	811912
1100025		"	"	"	1873000	829421	1913818	1885558	1885557	1871516	1880902	1873004	"
1100026		810085	810074	810078	1837949	1862218	820438			1841311	1841312	1853460	"
1100027		811912	"	"	809673	1857492	1884136			822938	820528	828522	811912
1100028		"	"	"	†					†		*1837382	"
1100029		"	"	"	809673	1857492				†		*1873338	"
1100030		"	"	"	1865180	1857502	1887885	1885558	1862074	1879094	1867110	1879058	"

*Shaft and Cam.

†Use Shaft and Cam Assembly.

‡Serviced by U.M.S. Division of Canada.

†Gear not supplied by Delco-Remy.

‡Gear supplied by Hercules Motor Corp.

*1835699 Weight Spring has 7½ turns .035 wire—823238 Spring has 6½ turns of .039 wire.

Revised to Jan. 1, 1967

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
27	Lock Washer—Breaker Plate Support Screw.....	453844	All
28	Lock Washer—Condenser Attaching Screw.....	453844	All
29	Lock Washer—Cap Spring Support Screw.....	453844	All
—	Lock Washer—Condenser Terminal.....	118869	1110001-9-10-11-13-16-17-18; 25-9
—	Lock Washer—Distributor Hold Down Screw.....	9421423	1110003-14-15
—	Lock Washer—Felt Wick Screw.....	9421423	1110026
30	Lock Washer—Terminal.....	453844	All
NUTS			
—	Nut—Condenser Terminal.....	817363	1110001-8-9-10-11-13-16-17; 25-9
31	Nut—Terminal Stud (Inside).....	817363	1110008-13-17-18; 23; 30
32	Nut—Terminal Stud (Outside).....	120622	1110008-17-18; 23; 30
33	Nut—Weight Hold Down (10-32).....	1923540	1110001-7-8-11-13-16-17-18-19; 23-5; 30
33	Nut—Weight Hold Down (8-32).....	120622	1110001-7-8-11-13-16-17-18-19; 23-5; 30
SCREWS			
—	Screw—Breaker Lever Spring Attaching.....	1920777	1110001-2-3-4-5-6-7-9-10-11-12-14-15-16-19; 20-1-2-4-5-6-7-8-9
34	Screw—Breaker Plate Support.....	453418	All
35	Screw—Condenser Attaching.....	453418	All
—	Screw—Condenser Terminal.....	453647	1110001-9-11-13-16-17-18; 25; 30
36	Screw—Contact Adjusting.....	1914916	All
—	Screw—Cap High Tension Terminal—Center.....	1860407	1110001-16; 22-7
—	Screw—Cap High Tension Terminal—Side.....	1860406	1110001-16; 22-7
37	Screw—Cap Spring Support.....	453461	All
—	Screw—Distributor Hold Down.....	35483	1110003
—	Screw—Distributor Hold Down.....	1872443	1110014-15
—	Screw—Felt Wick.....	142424	1110026
—	Screw—Rotor Segment.....	1842722	1110001-9-11-16-17; 25-9
WASHERS			
—	Washer—Adaptor Sleeve Retainer.....	1926782	1110003-14-15
—	Washer—Breaker Lever Spring Attaching—Plain.....	810794	1110001-2-3-4-5-6-7-9-10-11-14-15-16-19; 20-1-2-3-4-5-6-7-8
—	Washer—Distributor Hold Down Screw.....	1914592	1110003
—	Washer—Spring—Distributor Hold Down Screw.....	35498	1110003
—	Washer—Space—Under Weight.....	807295	1110001-2-5-6-7-10-11-12-14-15-17-19; 20-1-2-4-5-6-7
39	Washer—Terminal Stud—Insul.—Outside.....	1882247	1110008-13-17-18; 23; 30
40	Washer—Terminal Stud—Plain—Inside.....	810794	1110008-12-13-17-18; 30
41	Washer—Terminal Stud—Plain—Outside.....	815540	1110008-13-17-18; 30
MISCELLANEOUS			
—	Advance ARM Assembly.....	*823264	1110003
—	Advance ARM Assembly.....	*1869330	1110014
—	Advance ARM Assembly.....	*1841304	1110015
42	BUSHING—Distributor Housing.....	1874699	1110001-10-11-16; 29
42	BUSHING—Distributor Housing—Upper.....	1911607	1110018; 30
42	BUSHING—Distributor Housing—Lower.....	1855984	1110018; 25; 30
43	BUTTON—Carbon—In Cap (¼ dia.).....	1938193	1110002-3-4-5-7-8-10-13-14-15-18-19; 20-1-3-6; 30
43	BUTTON—Carbon—In Cap (⅜ dia.).....	806923	1110001-6-9-11-12-16-17; 22-4-5-8-9
—	CLAMP—Terminal.....	26153	1110002-3-4-5-6-7-9-11-12-14-15-16-19; 20-1-2-4-5-6-7-8-9
—	CLIP—Breaker Lever Retainer.....	813245	All
—	COLLAR—Space—Weight Plate.....	1871207	1110007
—	CUP—Grease.....	1955293	All except 1110026
—	LEAD—Condenser.....	1871681	1110001-9-10-11-16-17; 25-9
—	LEAD—Condenser.....	1840376	1110013-18
—	PLATE—Distributor Hold Down.....	1841155	1110014-15
—	PLUG—Fibre—In grease cup hole.....	1869303	1110008-13-18; 23; 30
—	PLUG—Vent.....	1864618	1110006-9-11-12-17; 25-8-9
—	ROTOR Only.....	1842719	1110001-9-11-16-17; 25-9

*For parts see Advance Arm—Group 1.


*If button recess in cap is spherical bottom drilled use part #1938193.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
—	SEGMENT—Rotor.....	1838315	1110001-9-16-17; 25
—	SEGMENT—Rotor.....	1838314	1110011; 29
—	SLEEVE—Distributor Adaptor.....	1841005	1110014-15
—	SLEEVE—Distributor Adaptor.....	1871011	1110003
—	SPRING—Rotor.....	1842723	1110001-9-11-16-17; 25-9
—	SPRING—In grease cup hole.....	1845715	1110008-13-18; 23; 30
—	SPRING—In grease cup hole.....	823550	1110026
—	TERMINAL—Screw type—High Tension.....	*1839164	1110006-17; 28-9
44	WICK—Felt—In Cam.....	1963555	All except 1110003-4-9; 28-9
—	WICK—Felt—In Housing.....	823551	1110026

*Shipped separate.

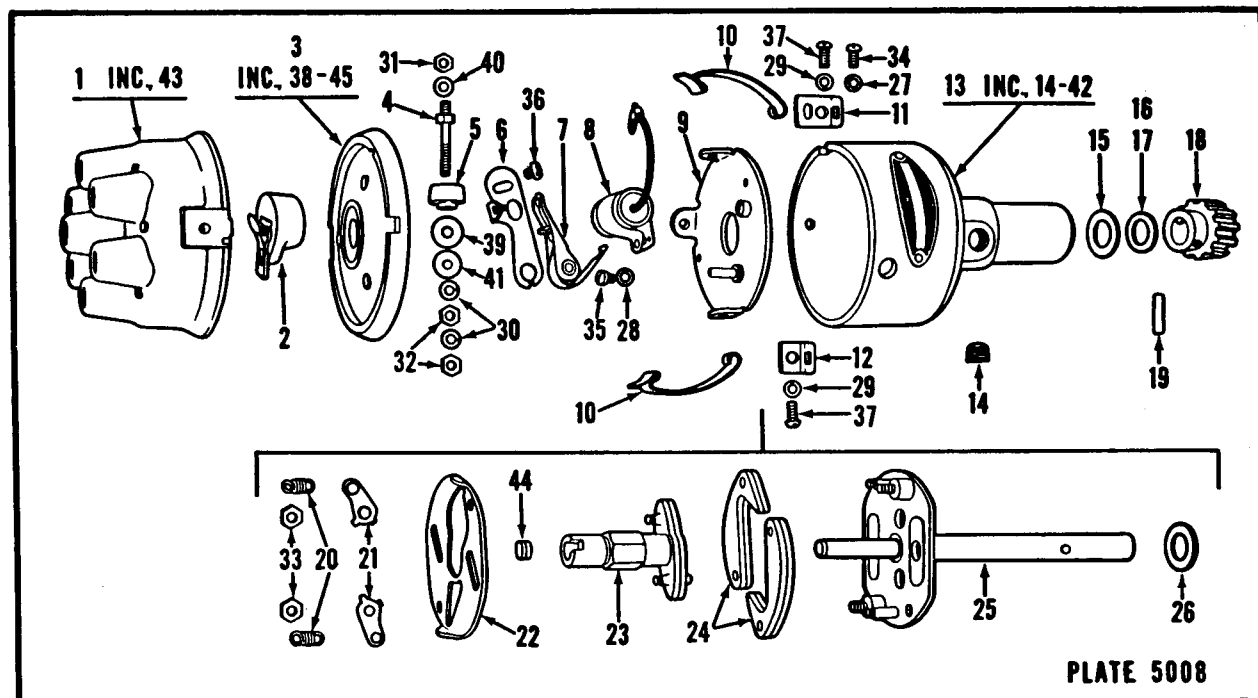


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover Housing	Screw or Stud Terminal	Bushing Insul.	Contact Point & Support	Breaker Lever	Con- denser	Plate Breaker	Spring Cap	Support Cap Spring	Support Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110031	824735	820445		1916806	1878405	a1882964	a1881394	1900272	1847643	1871838	1847289	1847289	1873759
1110032	1885808	1849504		"	"	"	"	1881030	"	"	"	"	"
1110033	824987	820445		132776	821160	b1848038	b813238	1900272	821150	"	"	"	1840004
1110034	824735	"		1916806	1878405	"	"	1928111	1847643	"	"	"	1874370
1110035	824987	"		132776	821160	"	"	1900272	821150	"	"	"	1866870
1110036	824735	"		1916806	1878405	"	"	"	1847643	"	"	"	1874618
1110037	1872832	"		"	"	"	"	"	"	"	"	"	"
1110039	"	1842718		"	"	"	"	1881030	"	"	"	"	1874633
1110040	1842714	820445		132776	821160	"	"	1900272	821150	"	"	"	1868071
1110041	824987	"		"	"	"	"	"	"	"	"	"	1840537
1110042	1842714	"		1916806	1878405	"	"	1860020	1847643	"	"	"	1874975
1110043	824735	"		132776	821160	"	"	1928111	821150	"	"	"	1840537
1110044	"	"		"	"	"	"	1900272	"	"	"	"	1864370
1110045	"	"		1916806	1878405	"	"	"	1847643	"	"	"	1877908
1110046	1842714	1842718		132776	821160	a1882964	a1881394	1881030	821150	"	"	"	1873001
1110047	"	"		1916806	1878405	b1848038	b813238	1860020	1847643	"	"	"	1878285
1110048	1867722	820445		"	"	a1882964	a1881394	1881030	"	"	"	"	1873759
1110049	824735	"		132776	821160	b1848038	b813238	1928111	821150	"	"	"	1864370
1110050	1842714	1842718		1916806	1878405	"	"	1881030	1847643	"	"	"	1878678
1110051	824735	820445		132776	821160	"	"	1900272	821150	"	"	"	822622
1110052	"	"		1916806	1878405	"	"	1928111	1847643	"	"	"	1868079
1110053	1842714	1842718		"	"	"	"	1881030	"	"	"	"	1878872
1110054	"	"		132776	821160	"	"	"	821150	"	"	"	1873001
1110055	824735	820445		1916806	1878405	"	"	1900272	1847643	"	"	"	1879255
1110056	824987	"		"	"	"	"	"	"	"	"	"	1874370
1110057	824735	"		"	"	"	"	"	"	"	"	"	"
1110058	1842714	1842718		"	"	"	"	1881030	"	"	"	"	1878872
1110059	1885808	1849504		"	"	a1882964	a1881394	"	"	"	"	"	1880247
1110060	824987	820445		132776	821160	b1848038	b813238	1900272	821150	"	"	"	822622

a—Contact Set No. 1882965.
b—Contact Set No. 1855720.

Delco-Remy

SERVICE PARTS CATALOG

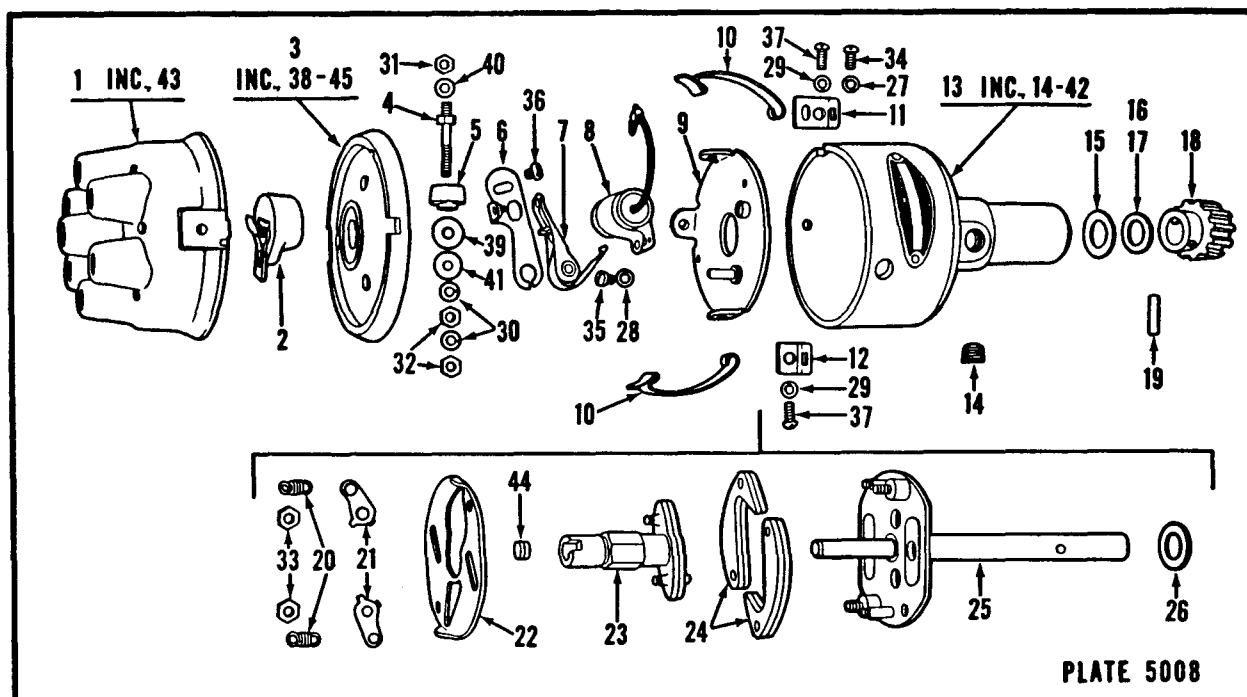

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar, Coupling or Gear	Pin	Spring — Weight	Lock Washer	Plate — Weight Hold Down	Cam	Weight	Shaft — Main	Washer — Space
	14	15	16	17	18	19	20	21	22	23	24	25	26
1110031		811912	810074	1912129	1840500	1857492	1883498	1885558	1885557	1869580	1881371	1873762	811912
1110032		"	"	"	"	"	"	"	"	1871791	"	"	"
1110033		"	"	"	809673	"	1884136	"	"	1839895	820528	828522	"
1110034		"	"	"	"	"	1886302	"	"	1873216	1854480	1874372	"
1110035		"	"	"	x	"	1931650	"	"	1874630	1845036	1874628	"
1110036		"	"	"	1840500	1857492	1883509	"	"	1871574	818222	1874620	"
1110037		"	"	"	"	"	"	"	"	"	"	"	"
1110039		"	"	"	"	"	1886538	1885558	1885557	1874669	1880902	1874648	"
1110040		"	"	"	809673	"	822172	"	"	821472	818222	1883329	"
1110041		"	"	"	"	"	1922250	"	"	823236	"	1844542	"
1110042		"	"	"	1840500	"	1883509	"	"	1871574	"	1874620	"
1110043		"	"	"	1839067	813131	1882774	"	"	822627	"	1844542	"
1110044		"	"	"	1864165	1857492	†	1885558	1885557	1877872	1867110	1871290	"
1110045		"	"	"	□069537	817267	1887885	"	"	1862074	"	1877911	"
1110046		"	"	"	1878047	829421	1883373	"	1885557	1871516	1880902	1873004	"
1110047		"	"	"	809673	1857492	1884929	"	"	1878288	"	1878287	"
1110048		"	"	"	1840500	"	1883498	"	"	1869580	1881371	1873762	"
1110049		"	"	"	1855412	1857502	†	"	"	1877872	1867110	1878583	"
1110050		"	"	"	△	829421	823238	"	"	1874669	1880902	1878681	"
1110051		"	"	"	809673	1857492	1883121	"	"	1841311	1841312	824738	"
1110052		"	"	"	1865180	1857502	1903693	1885558	1862074	1879094	1879063	1879058	"
1110053		811912	810074	1912129	1842541	829421	1886538	"	1885557	1874669	1880902	1878875	811912
1110054		"	"	"	1873000	"	"	"	"	○	○1879166	"	"
1110055		"	810074	1912129	809673	1857492	1886302	1885558	1885557	1879259	1880902	1879258	811912
1110056		"	"	"	"	"	"	"	"	1879621	"	1879620	"
1110057		"	"	"	"	"	1886302	"	"	1879690	"	1882360	"
1110058		"	"	"	△	829421	1886542	1885558	1885557	1874669	"	1879799	"
1110059		"	"	"	†	"	1883498	"	"	1871791	1881371	1880249	"
1110060		"	"	"	809673	1857492	1885413	"	"	824109	818222	1844542	"

† 822549 Weight Spring has 7½ turns of .026 wire.

‡ 1849546 Weight Spring has 7½ turns of .024 wire.

△ Gear supplied by Hercules Motor Corp.

* Coupling or Gear not furnished by Delco-Remy.

† Use 1862218 Collar Pin, 1857492 Coupling Pin.

‡ Use 1840500 Coupling, 821865 Collar.

○ 1879166 is Shaft and Cam.

□ Purchase from G.M. Truck.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
27	Lock Washer—Breaker Plate Support Screw.....	453844	All
28	Lock Washer—Condenser Attaching Screw.....	453844	All
29	Lock Washer—Cap Spring Support Screw.....	453844	All
....	Lock Washer—Condenser Lead Screw.....	453844	1110048
....	Lock Washer—Condenser Terminal.....	118869	1110032-9; 42-6-7-8; 50-3-4-8-9
....	Lock Washer—Distributor Hold Down Screw.....	9421423	1110050
30	Lock Washer—Terminal Stud.....	453844	All
NUTS			
....	Nut—Condenser Terminal.....	817363	1110032; 42
31	Nut—Terminal Stud (Inside).....	817363	1110031-2-4-6-7-9; 42-5-7-8; 50-2-3-5-6-7-8-9
32	Nut—Terminal Stud (Outside).....	120622	1110031-2-4-6-7-9; 42-5-7-8; 50-2-3-5-6-7-8-9
33	Nut—Weight Hold Down (10-32).....	1923540	1110031-2-9; 44-5-6-7-8-9; 50-2-3-5-8-9
33	Nut—Weight Hold Down (8-32).....	120622	1110031-2; 44-5-6-7-8-9; 50-2-3-5-6
SCREWS			
....	Screw—Breaker Lever Spring Attaching.....	1920777	1110033-5; 40-1-2-4-5-6-9; 51-4; 60
34	Screw—Breaker Plate Support.....	453418	All
35	Screw—Condenser Attaching.....	453418	1110032-9; 42-6-7-8; 50-3-4-8-9
35	Screw—Condenser Attaching.....	453304	1110031-3-4-5-6-7-9; 40-1-3-4-5-9; 50-2-5-6-7; 60
....	Screw—Condenser Terminal.....	453647	1110032-9; 46-7-8; 50-3-4-8-9
36	Screw—Contact Adjusting.....	1914916	All
....	Screw—Cap Cover Attaching.....	455590	1110033-5; 41; 56; 60
....	Screw—Cap High Tension Terminal—Center.....	1860407	1110037-9
....	Screw—Cap High Tension Terminal—Side.....	1860406	1110037-9
37	Screw—Cap Spring Support.....	453461	All
....	Screw—Distributor Hold Down.....	123454	1110050
....	Screw—Rotor Segment.....	1842722	1110032-9; 46-7; 50-2-4-8-9
WASHERS			
....	Washer—Adaptor Sleeve Retainer.....	1926782	1110050
....	Washer—Breaker Lever Spring Attaching—Plain.....	810794	1110033-5; 40-2-4-6-9; 51-4; 60
....	Washer—Distributor Hold Down Screw.....	1905125	1110050
....	Washer—Space—Under Weight.....	807295	1110031-2-3-5-9; 40-1-2-4-6-7-8-9; 50-1-3-5-8-9; 60
39	Washer—Terminal Stud—Insul.—Outside.....	1882247	1110031-2-4-6-7-9; 42-5-7-8; 50-2-3-5-6-7-8-9
40	Washer—Terminal Stud—Plain—Inside.....	810794	1110031-2-4-6-7-9; 41-2-5-7-8; 50-2-3-5-6-7-8-9
41	Washer—Terminal Stud—Plain—Outside.....	815540	1110031-2-4-6-7-9; 42-5-7-8; 50-2-3-5-6-7-8-9
MISCELLANEOUS			
....	ADAPTOR—Manual Control.....	*2103005	1110059
....	Advance ARM Assembly.....	*1865844	1110050
....	Advance ARM Assembly.....	*1850946	1110059
....	Advance ARM Assembly.....	*1838617	1110044
42	BUSHING—Distributor Housing.....	1874699	1110039; 47; 50
42	BUSHING—Distributor Housing.....	1874951	1110059
42	BUSHING—Distributor Housing—Upper.....	1874335	1110031-2; 48
42	BUSHING—Distributor Housing—Lower.....	1855984	1110031-2; 54
43	BUTTON—Carbon—In Cap (¼ dia.).....	1938193	1110031-3-4-5-6; 41-3-4-5-8-9; 51-2-5-6-7; 60
43	BUTTON—Carbon—In Cap (⅜ dia.).....	806923	1110032-7-9; 40-2-6-7; 50-3-4-8-9
....	CLAMP—Terminal.....	26153	1110033-5; 40-1-3-4-6-9; 51-4; 60
....	CLIP—Breaker Lever Retainer.....	813245	1110033-5; 40-1-2-4-5-9; 51-4; 60
....	COLLAR—Space—Hold Down Plate.....	1871207	1110047
....	COVER—Cap.....	1871561	1110033-5; 41; 56; 60
....	CUP—Grease.....	1955293	1110033-4-5-6-7-9; 40-1-2-3-4-5-6-7-9; 50-1-2-3-4-5-6-7-8; 60
....	LEAD—Condenser.....	1871681	1110047; 50-3-4-8
....	LEAD—Condenser.....	1840376	1110032-9; 48; 59

*Purchase from General Motors Truck.


*For parts see Advance Arm—Group 1.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
....	NIPPLE—Lubricating.....	271283	1110031-2; 48; 59
....	PILOT—Manual Control Adaptor.....	*2103006	1110059
....	PLATE—Dial.....	815095	1110044
....	PLATE—Distributor Hold Down.....	1841155	1110050
....	PLUG—Fibre—In grease cup hole.....	1869303	1110045; 52
....	PLUG—Vent.....	1864618	1110040
....	ROTOR Only.....	1842719	1110032-9; 46-7; 50-3-4-8-9
....	SEGMENT—Rotor.....	1838314	1110032; 59
....	SEGMENT—Rotor.....	1838315	1100039; 46-7; 50-3-4-8
....	SLEEVE—Distributor Adaptor.....	1841005	1110050
....	SPRING—Pilot Ground.....	828447	1110035
....	SPRING—Rotor.....	1842723	1110032-9; 46-7; 50-3-4-8-9
....	SPRING—In grease cup hole.....	1845715	1110045; 52
....	TERMINAL—Screw type—High Tension.....	*1839164	1110031-2; 40-2-6-7; 53-4
44	WICK—Felt—In Cam.....	1963555	1110031-2-3-4-5-9; 40-1-2-4-5-6-7-8-9; 50-1-2-3-5-6-7-8-9; 60

*Purchase from General Motors Truck.

*Shipped separate.

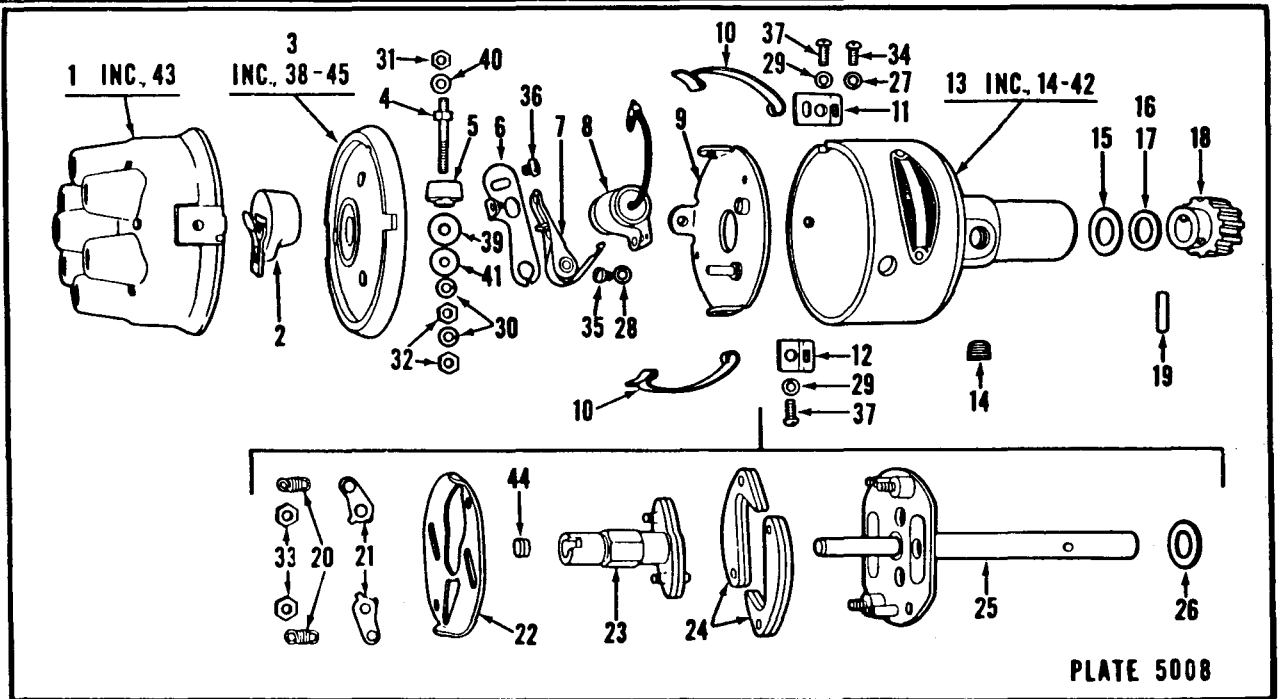

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover or Housing	Screw or Stud Terminal	Bushing Insul.	Contact Point & Support	Breaker Lever	Con- denser	Plate — Breaker	Spring — Cap	Support — Cap Spring	Support — Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110061	1867722	820445		1916806	1878405	a1848038	a 813238	1881030	1847643	1871838	1847289	1847289	1872457
1110062	824735	"		"	"	a "	a "	1900272	"	"	"	"	"
1110063	"	"		"	"	a "	a "	"	"	"	"	"	1877908
1110064	1842714	1942718		⊕	821160	829973	"	1881030	821150	"	"	"	1880333
1110065	824735	820445		132776	"	a1848038	a "	1900272	"	"	"	"	822622
1110067	1842714	1849504		1916806	1878405	b1882964	b1881394	1860020	1847643	"	"	"	1873759
1110068	"	"		⊕	821160	1885832	"	1881030	821150	"	"	"	1880420
1110069	824735	820445		132776	"	a1848038	a 813238	1900272	"	"	"	"	1880342
1110070	"	"		"	"	a "	a "	"	"	"	"	"	1880441
1110071	1872832	1842718		1916806	1878405	b1882962	b1881394	†	1847643	"	"	"	1880608
1110072	1842714	"		"	"	a1848038	a 813238	1860020	"	"	"	"	1878285
1110073	824735	820445		"	"	a "	a "	1900272	"	"	"	"	1872457
1110074	"	"		132776	821160	a "	a "	"	821150	"	"	"	1841152
1110075	"	"		1916806	1878405	a "	a "	"	1847643	"	"	"	1868079
1110076	"	"		132776	821160	a "	a "	"	821150	"	"	"	822622
1110077	824987	"		"	"	a "	a "	"	"	"	"	"	1866870
1110078	"	"		"	"	a "	a "	"	"	"	"	"	"
1110079	1842714	1849504		1916806	1878405	b1882964	b1881394	1881030	1847643	"	"	"	1881534
1110080	1867722	820445		132776	821160	a1848038	a 813238	"	821150	"	"	"	1868115
1110081	824735	"		"	"	a "	a "	1900272	"	"	"	"	1840004
1110082	"	"		1916806	1878405	b1882964	b1881394	"	1847643	"	"	"	1881663
1110083	1872832	"		"	"	b "	b "	"	"	"	"	"	"
1110084	824735	"		132776	821160	a1848038	a 813238	"	821150	"	"	"	1840004
1110085	"	"		"	"	a "	a "	"	"	"	"	"	"
1110086	"	"		1916806	1878405	a "	a "	"	1847643	"	"	"	1874370
1110087	"	"		"	"	a "	a "	"	"	"	"	"	1872457
1110088	"	"		132776	821160	a "	a "	"	821150	"	"	"	1864370
1110089	"	"		1916806	1878405	a "	a "	"	1847643	"	"	"	1868079
1110090	"	"		▲	"	c1845785	c "	1928111	1883370	"	"	"	1882228
1110091	"	"		132776	821160	a1848038	a "	1900272	821150	"	"	"	822622

†Use 1860020 outside mounted Condenser on units prior to 1946.

⊕132776 Standard Terminal, 829985 Insulated Terminal.

▲1847647 Standard Terminal, 1882244 Ground Terminal.

a Contact Set No. 1855720.


b Contact Set No. 1882965.

c Contact Set No. 1882391.

Delco-Remy **SERVICE PARTS CATALOG**

Model No.	Cap	Rotor	Cover — Housing	Screw or Stud — Terminal	Bushing — Insul.	Contact Point & Support	Breaker Lever	Con- denser	Plate — Breaker	Spring — Cap	Support — Cap Spring	Support — Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110092	824735	820445		1916806	1878405	a1848038	a 813238	1923111	1847643	1871838	1847289	1847289	1882392
1110093	1841856	"		132776	821160	a "	a "	"	821150	"	"	"	822622
1110094	824735	"		1916806	1878405	a "	a "	"	1847643	"	"	"	1882764
1110095	"	"		"	"	a "	a "	1900272	"	"	"	"	"
1110096	"	"		132776	821160	a "	a "	"	821150	"	"	"	822622
1110097	824987	"		"	"	a "	a "	"	"	"	"	"	1840537
1110098	1842714	1849504		"	"	a "	a "	1881030	"	"	"	"	1874446
1110099	1867722	820445	1883054	1916806	1878405	b1882964	b1881394	1900272	1847643	1883052	1883051	1883051	1883044

a Contact Set No. 1855720.
b Contact Set No. 1882965.

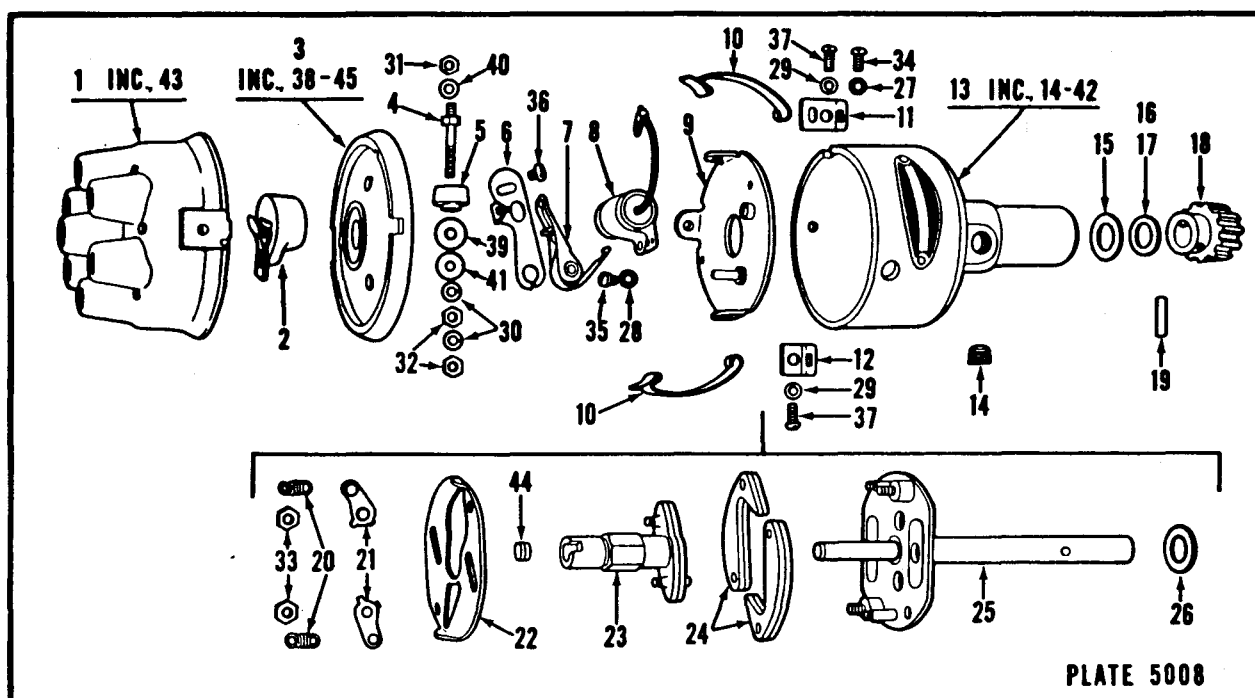

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar, Coupling or Gear	Pin	Spring — Weight	Lock Washer	Plate — Weight Hold Down	Cam	Weight	Main Shaft	Washer — Space
	14	15	16	17	18	19	20	21	22	23	24	25	26
1110061					1865180	1857502	1903693	1885558	1862074	1879094	1879063	1879058	
1110062							"	"	"	"	"	"	
1110063		811912	810074	810078	*069537	817267	"	"	"	"	"	1883728	811912
1110064		"	"	"	809673	1857492	1884136	"	1885557	1878288	1880902	1880336	"
1110065		"	"	"	"	"	820438			822938	820528	823000	"
1110067		"	"	"	1840500	"	1883498	1885558	1885557	1871791	1881371	1873762	
1110068		"	"	"	"	"	"	"	"	"	"	"	811912
1110069		"	"	"	"	"	1889680			1880341	1845036	1873502	"
1110070		811912	810074	810078	809673	1857492	1886508			822938	820528	1869436	"
1110071		"	"	"	1840500	829421	1886538	1885558	1885557	1874669	1880902	1880612	"

*Purchase from G.M.T.

*Purchase from Minneapolis Moline Co.

Parts not listed in this Catalog will not be sold separately.

Model No.	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar, Coupling or Gear	Pin	Spring — Weight	Lock Washer	Plate — Weight Hold Down	Cam	Weight	Main Shaft	Washer — Space
	14	15	16	17	18	19	20	21	22	23	24	25	26
1110072		811912	810074	1865180	809673	1857492	829568	1885558	1885557	1878288	1880902	1880676	811912
1110073					1865180	1857502	▲	"	1862074	1879094	1867110	1879058	
1110074		811912	810074	1865180	†		1885756	"		822938	820528	1848006	811912
1110075					1865180	1857502	1883343	"	1858747	1881276	1881371	1881926	
1110076		811912	810074	1865180	809673	1857492	1885888			1880341	1845036	1880984	811912
1110077					†		1855230			1881496	1841643	1881495	"
1110078					†		"			1874630	1845036	"	"
1110079		811912	810074	1865180	1840500	1857492	1883498	1885558	1885557	1871791	1881371	1873762	"
1110080					809673	"	820619			1881671	1845036	1881460	"
1110081		"	"	"	"	"						▲1837882	"
1110082		"	"	"	1840500	829421	1883509			1871574	818222	1881655	811912
1110083		"	"	"	"	"	"			"	"	"	"
1110084		"	"	"	809673	1857492	1912766			822627	"	823000	"
1110085		"	"	"	"	"	"			821472	"	"	"
1110086		"	"	"	"	"	1883509	1885558	1885557	1864361	1880902	1881778	"
1110087					1881928	1861374	1903693	"	1862074	1879094	1879063	1881926	
1110088		811912	810074	1865180	1864165	1857492	1886559	"	1885557	1869841	1881371	1882032	811912
1110089					1865180	1857502	820722	"	1862074	1879094	1882028	1881926	
1110090					"	"	1882595	"	"	1882230	1879063	"	
1110091		811912	810074	1865180	809673	1857492	1885888			1845367	1841643	1880984	811912
1110092						813131	1886558			1882396	1863143	1882394	"
1110093					†		1885888			1874630	1845036	1874628	"
1110094		811912	810074	1865180	1855375	822273	1882774	1885558	1885557	1882770	1880902	1882767	"
1110095		"	"	"	"	"	1882995	"	1882781	1882778	1882907	1882776	"
1110096		"	"	"	809673	1857492	1886542			822938	820528	828522	"
1110097		"	"	"	"	"	1922250			824109	818222	1844542	"
1110098		"	"	"	†		1883498	1885558	1885557	1871791	1881371	1868172	"
1110099		"	"	"	809673	1857492						▲1883047	"

†Not supplied by Delco-Remy.

▲Shaft & Cam.

▲1880972 Weight Spring—6½ turns of .041 wire. 1843710 Spring—5½ turns of .045 wire (One each).

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
27	LOCK WASHERS		
28	Lock Washer—Breaker Plate Support.....	453844	All
	Lock Washer—Condenser Attaching Screw.....	453844	1110061-2-3-4-7-8-9; 70-1-2-3-4-5-6-7-8; 80-1-2-3-4-5-6-7-8-9; 90-1-2-3-4-5-6-7-8-9
28	Lock Washer—Condenser Attaching Screw.....	138479	1110079
29	Lock Washer—Condenser Terminal Screw.....	453844	1110061-2-3-4-8; 71-2-9; 80; 98
30	Lock Washer—Cap Spring Support Screw.....	453844	All
	Lock Washer—Terminal Stud—Outside.....	453844	All
	Lock Washer—Terminal Stud—Ground.....	453844	1110090-1
	Lock Washer—Vacuum Control Arm Screw.....	121801	1110092
	NUTS		
	Nut—Condenser Attaching Screw.....	817363	1110064-7-8; 99
	Nut—Insul. Cap Spring Screw.....	1882246	1110090
31	Nut—Terminal Stud—Outside.....	120622	1110061-2-7-8; 71-2-3-9; 86-7-9; 90-2-4-5-8-9
32	Nut—Terminal Stud—Inside.....	817363	1110061-2-3-4-7-8; 71-2-3-5-9; 82-3-6-7-9; 90-2-4-5
33	Nut—Weight Hold Down (8-32).....	120622	1110061-2-3-7-8; 73-5-9; 82-3-6-8
33	Nut—Weight Hold Down (10-32).....	1923540	1110061-2-3-4-7-8; 70-1-2-3-5-9; 86-7-8-9; 90-4-5-8

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
SCREWS			
....	Screw—Breaker Lever Spring Attaching.....	1920777	1110064-5-8-9; 70-4-6-7-8; 80-1-4-5-8; 91-3-6-7-8
34	Screw—Breaker Plate Support.....	453418	All except 1110090-9
34	Screw—Breaker Plate Support.....	9417096	1110099
35	Screw—Condenser Attaching.....	9417096	1110064-8
35	Screw—Condenser Attaching.....	132103	1110079
35	Screw—Condenser Attaching.....	453418	1110061-7; 71-2; 98
35	Screw—Condenser Attaching.....	453304	1110062-3-5; 70-1-3-4-5-6-7-8; 81-2-3-4-5-6-7-8-9; 90-1-2-3-4-5-6-7-9
....	Screw—Condenser Mounting Bracket to Housing.....	133477	1110064-8
....	Screw—Condenser Terminal.....	453647	1110061-4-8; 71-2-9; 80; 98
36	Screw—Contact Attaching.....	1914916	All
....	Screw—Cap Cover.....	455590	1110077-8; 93-7
37	Screw—Cap Spring Support.....	453461	All except 1110090-9
37	Screw—Cap Spring Support.....	1900465	1110099
37	Screw—Cap Spring Support.....	822417	1110090
....	Screw—Distributor Hold Down.....	1837895	1110074
....	Screw—High Tension Terminal (Side).....	1860406	1110071; 83
....	Screw—High Tension Terminal (Center).....	1860407	1110071; 83
....	Screw—Rotor Segment Attaching.....	1842722	1110064-7-8; 71-2-9
....	Screw—Vacuum Control Arm.....	1882270	1110092
....	Screw—Vacuum Control Bracket.....	1882397	1110092
WASHERS			
....	Washer—Adaptor Sleeve Retainer.....	1926782	1110070-4
....	Washer—Breaker Lever Spring Attaching.....	810794	1110064-5-8-9; 70-4-6-7-8; 80-1-4-5-6-8; 91-3-6-7
....	Washer—Condenser Attaching Screw.....	813767	1110064-8
....	Washer—Distributor Hold Down.....	1914592	1110074
....	Washer—Distributor Hold Down Screw.....	35498	1110074
....	Washer—Terminal Stud (3/4 O.D.—Inside).....	829988	1110064
....	Washer—Terminal Stud (1/2 x 1/4—square).....	829987	1110064-8
38	Washer—(Package) Felt—Housing Cover.....	1914309	1110099
39	Washer—Insul. Terminal Stud—Outside.....	1882247	1110061-2-3-7; 71-2-3-5-9; 82-3-6-7-9; 90-2-4-5-9
40	Washer—Terminal Stud—Inside.....	810794	1110061-2-3-7; 71-2-3-5-9; 82-3-7-9; 90-2-4-5-9
41	Washer—Terminal Stud—Outside.....	815540	1110061-2-3-7; 71-2-3-5-9; 82-3-6-7-9; 90-2-4-5-9
....	Washer—Plain—Terminal Stud—Outside.....	1914476	1110064-8
....	Washer—Plain—Terminal Stud—Ground.....	815540	1110090
....	Washer—Insul. Terminal Stud—Bushing.....	23915	1110099
....	Washer—Vacuum Control Bracket Screw Plain.....	1905125	1110092
....	Washer—Weight.....	807295	1110064-5-7-8-9; 70-1-2-4-6-7-8-9; 80-4-5-6-8; 91-3-4-5-6-7; 98
MISCELLANEOUS			
....	Advance ARM Assembly.....	*1880443	1110070
....	Advance ARM Assembly.....	*1865844	1110074
....	BRACKET—Condenser Mounting.....	1880339	1110064-8
42	BUSHING—Housing—Upper.....	1874335	1110067-8; 79
42	BUSHING—Housing—Lower.....	1855984	1110061-2-7-8; 73-9; 87
42	BUSHING—Housing—Lower & Upper.....	825463	1110092
42	BUSHING—Housing.....	1880615	1110071
42	BUSHING—Housing.....	1883226	1110099
42	BUSHING—Housing.....	1874699	1110072
42	BUSHING—Housing.....	1872669	1110080; 98
42	BUSHING—Housing—Upper.....	1911607	1110061-2; 73; 87
....	BUSHING—Terminal Insul. (Ground Terminal).....	1885616	1110090
....	BUSHING—Terminal Stud Insul. (Insul. Terminal).....	829986	1110064-8
43	BUTTON—Carbon—In Cap (3/4 dia.).....	1938193	1110061-2-3-5-9; 70-1-3-4-5-6-7-8; 80-1-2-3-4-5-6-7-8-9; 90-1-2-3-4-5-6-7-9
43	BUTTON—Carbon—In Cap (1/2 dia.).....	806923	1110064-7-8; 72-3-9; 83; 98
....	CLAMP—Terminal Stud.....	26153	1110064-5-8-9; 70-4-6-7-8; 80-1-4-5-8; 91-3-6-7-8
....	CLIP—Breaker Lever Retainer.....	813245	1110064-5-8-9; 70-4-6-7-8; 80-1-4-5-8; 91-6-8

*For parts see Advance Arm—Group 1.


MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
—	COLLAR—Space—Weight Hold Down.....	1871207	1110088
—	COVER—Cap.....	1871561	1110077-8; 93-7
—	CUP—Grease.....	1955293	All except 1110099
44	Felt WICK—In Cam.....	1963555	All except 1110099
45	GASKET—Housing Cover.....	1883055	1110099
—	INSULATION—Terminal Stud—Inside.....	827688	1110064-8
—	INSULATION—Strip—Breaker Plate.....	1882243	1110090
—	LEAD—Condenser.....	1884451	1110068
—	LEAD—Condenser.....	1871681	1110061-4; 72; 80; 98
—	LEAD—Condenser.....	1840376	1110067
—	LEAD—Condenser.....	1847670	1110071
—	NIPPLE—Lubricating.....	271283	1110067-8-9
—	PIPE—Breather.....	1860880	1110069
—	PLATE—Distributor Hold Down.....	1841155	1110074
—	PLUG—Fibre—In grease cup hole.....	1869303	1110063; 90
—	ROTOR Only.....	1842719	1110064-7-8; 71-2-9
—	SEGMENT—Rotor.....	1838314	1110064-7-8; 71-2-9
—	SHAFT—Extension.....	1868619	1110092
—	SLEEVE—Adaptor.....	1880485	1110070
—	SLEEVE—Adaptor.....	1841005	1110074
—	SPRING—Fibre Plug.....	1845715	1110063; 90
—	SPRING—Housing Cover.....	816801	1110099
—	SPRING—Pilot Ground.....	828447	1110076
—	SPRING—Rotor.....	1842723	1110064-7-8; 71-2-9
—	SPRING—Vacuum Control Tension.....	1882441	1110092
—	TERMINAL—High Tension (Shipped separate).....	1839164	1110064-7-8; 72-9; 98
—	VACUUM CONTROL.....	*1116028	1110092

*For parts see Vacuum Control—Group 4.

Revised to July 1, 1968

SERVICE PARTS CATALOG

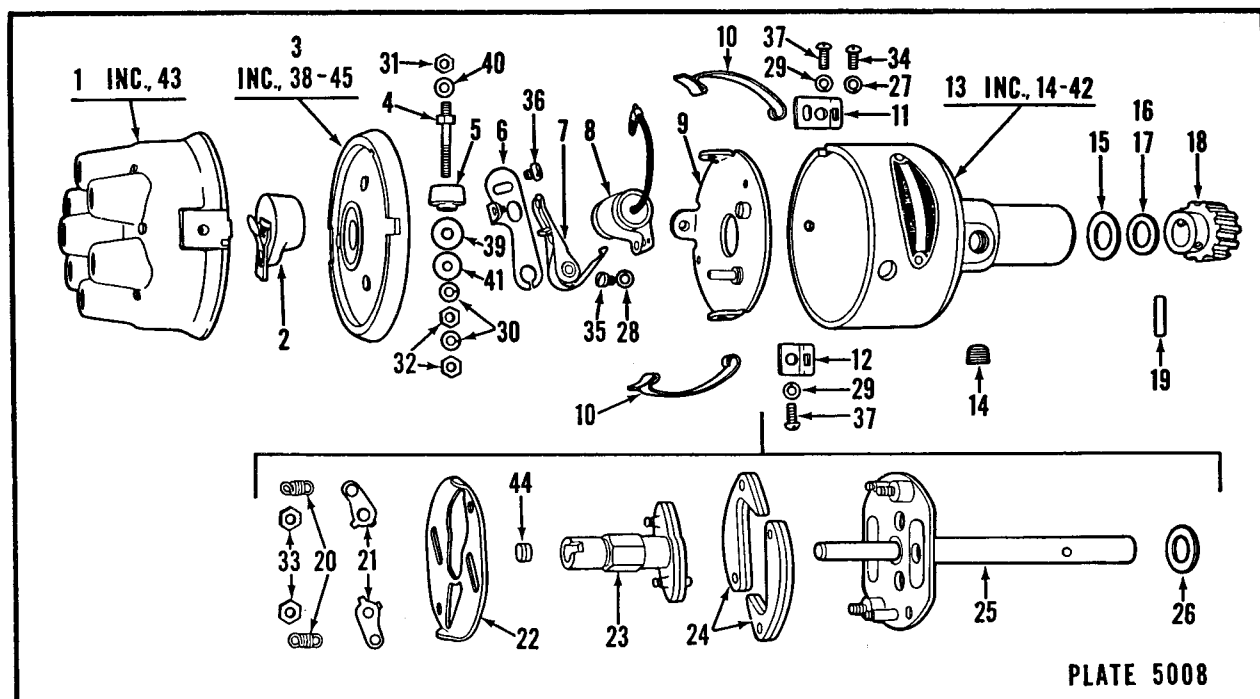


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover Housing	Screw or Stud Terminal	Bushing Insul.	Contact Point & Support	Breaker Lever	Con- denser	Plate Breaker	Spring Cap	Support Cap Spring	Support Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110100	824735	820445		1916806	1878405	a1848038	a 813238	1900272	1847643	1871838	1847289	1847289	1885389
1110101	1867722	"		"	"	b1882964	b1881394	1881030	"	"	"	"	1872457
1110102	824735	"		"	"	a1848038	a 813238	1900272	"	"	"	"	1877908
1110103	1867722	"		132776	821160	a "	a "	"	821150	"	"	"	822622
1110104	824735	"		1916806	1878405	a "	a "	"	1847643	"	"	"	1883355
1110105	1842714	1842718		"	"	c1845785	c "	1881030	1883370	"	"	"	1883332
1110106	1867722	820445		"	"	a1848038	a "	"	1847643	"	"	"	1872457
1110107	824735	"		"	"	a "	a "	1900272	"	"	"	"	1883861
1110108	824987	"		"	"	a "	a "	"	"	"	"	"	1874370
1110109	1841856	"		"	"	a "	a "	1928111	"	"	"	"	1883686
1110110	824735	"		"	"	a "	a "	"	"	"	"	"	1885416
1110111	"	"		"	"	c1845785	c "	"	1883370	"	"	"	1883719
1110112	1867722	1883500		"	"	a1848038	a "	1900272	821150	"	"	"	1883910
1110113	824735	820445		1916806	1878405	a "	a "	"	1847643	"	"	"	1884181
1110114	1862403	1883500		132776	821160	a "	a "	"	821150	"	"	"	1869347
1110115	1867722	"		"	"	b1882964	b1881394	1881030	"	"	"	"	1873001
1110116	824735	820445		1916806	1878405	a1848038	a 813238	1900272	1847643	"	"	"	1868079
1110117	1867722	"		132776	821160	a "	a "	"	821150	"	"	"	822622
1110118	824735	"		1916806	1878405	a "	a "	"	1847643	"	"	"	1883355
1110119	"	"		"	"	a "	a "	"	"	"	"	"	1882764
1110120	1867722	1883500		"	"	a "	a "	1928111	821150	"	"	"	1884588
1110121	1842714	1842718		1916806	1878405	b1881394	b1881394	1881030	1883370	"	"	"	1883332
1110122	824735	820445		"	"	a1848038	a 813238	1900272	1847643	"	"	"	1883355
1110123	"	"		"	"	a "	a "	"	"	"	"	"	1874370
1110124	"	"		132776	821160	a "	a "	"	821150	"	"	"	822622
1110125	1867722	1883500		"	"	a "	a "	1928111	"	"	"	"	1864370
1110126	824735	820445		1916806	1878405	a "	a "	1900272	1847643	"	"	"	1884976
1110128	"	"		"	"	a "	a "	"	"	"	"	"	1879255
1110129	1842714	1849504		132776	821160	a "	a "	1881030	821150	"	"	"	1874446
1110130	824735	820445		"	"	a "	a "	1928111	"	"	"	"	822622

a Contact Set 1855720
b Contact Set 1882965
c Contact Set 1882391

■ Contact Set 1882021

Delco-Remy SERVICE PARTS CATALOG

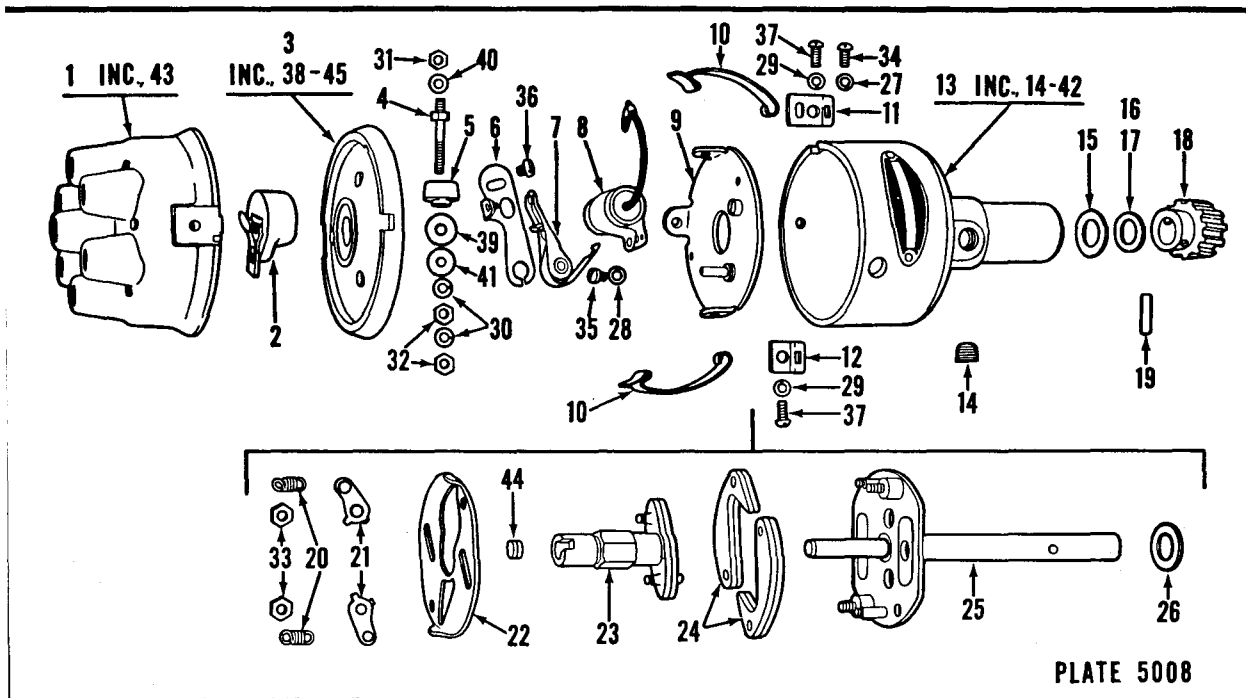

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Pipe Plug	Washer — Space	Washer — Shim — .005 thk.	Washer — Shim — .010 thk.	Collar, Coupling or Gear	Pin	Spring — Weight	Lock Washer	Plate — Weight Hold Down	Cam	Weight	Main Shaft	Washer — Space
	14	15	16	17	18	19	20	21	22	23	24	25	26
1110100					1865180	1857502	1883343	1885558	1858747	1881276	1881371	1881926	
1110101						"	"	"	"	"	"	"	
1110102		811912	810074	810078	069537	817267	"	"	"	"	"	1883204	811912
1110103					*		1885888			1880341	1845036	1874628	"
1110104		811912	810074	810078	1864165	1857492	1911496	1885558	1858747	1883359	1880902	1883358	
1110105					1873000	829421	1883373			1878288	"	1883366	
1110106					1865180	1857502	1882595	1885558	1862074	1883454	1879063	1881926	811912
1110107		811912	810074	810078	1840500	1857492	1883509			1871574	818222	1874620	"
1110108					809673	"	1884623			1879621	1880902	1883614	"
1110109		1849806	1848595	1848596	1845656	1862218	1883121			1874630	1845036	1883688	"
1110110					1865180	1857502	1882595	1885558	1862074	1882230	1879063	1881926	
1110111		811912	810074	810078	809673	1857492	"	"	"	"	"	1883728	
1110112					1840500	"	1883509			1871574	818222	1872558	811912
1110113		"	"	"	1855375	822273	1882995	1885558	1882781	1882778	1882907	1882776	"
1110114		"	"	"	809673	1857492	1884136	"	1885557	1884308	1880902	1871514	"
1110115					1873000	829421	1883373	"	"	"	"	1873004	
1110116					1865180	1857502	1883343	"	"	1886264	1881371	1886263	
1110117		811912	810074	810078	1837384	813131	1883899			1880341	1845036	1880984	811912
1110118		"	"	"	1864165	1857492	1913799	1885558	1858747	1884378	1858744	1883358	"
1110119		"	"	"	809673	813131	1883509	"	1885557	1864361	1880902	1884467	"
1110120					1865180	1857502	1883343	"	1858747	1881276	1881371	1881926	
1110121					1878047	829421	1883373	"	1885557	1878288	1880902	1883366	
1110122		811912	810074	810078	1849238	813131	1913799	"	"	1884837	1858744	1884835	811912
1110123		"	"	"	809673	1857492	1886538			1879690	1880902	1884839	"
1110124		"	"	"	"	"	1884931			821472	818222	828522	"
1110125		"	"	"	1864165	"	1886559	1885558	1885557	1869841	1881371	1882032	
1110126		"	"	"	809673	829421	1883343	"	1858747	1881276	"	1884979	811912
1110128		"	"	"	"	1857492	1885756	"	1885557	1886086	"	1886085	"
1110129		"	"	"	*							*1886047	"
1110130		"	"	"	809673	1857492	1887553			822627	818222	1883329	"

*Not supplied by Delco-Remy.

*Shaft & Cam Assembly.

Parts not listed in this Catalog will not be sold separately.

Revised to July 1, 1968

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
27	Lock Washer—Breaker Plate Support Screw.....	453844	All
28	Lock Washer—Condenser Attaching Screw.....	453844	1110100-1-2-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-8-9; 30
....	Lock Washer—Condenser Terminal Screw.....	453844	1110101-5; 15; 21-9
29	Lock Washer—Cap Spring Support Screw.....	453844	All
....	Lock Washer—Low Tension Lead Screw.....	453844	1110112; 20
30	Lock Washer—Terminal Stud.....	453844	All except 1110120
....	Lock Washer—Radio Shield Screw.....	453844	1110107
NUTS			
....	Nut—Condenser Attaching.....	817363	1110105; 21
....	Nut—Cap Spring Support Screw (Insul.).....	1882246	1110111; 21
31	Nut—Terminal Stud (Inside).....	817363	1110100-1-2-4-5-6-7-8-9; 10-11-13-16-18-19; 21-2-3-6-8
32	Nut—Terminal Stud (Outside).....	120622	1110100-2-4-5-6-7-8-9; 10-11-13-14-15-16; 21-2-3-6
33	Nut—Weight Hold Down (10-32).....	1923540	1110100-1-2-4-5-6-9; 11-13-16-18; 20-1-2-6-8
33	Nut—Weight Hold Down (8-32).....	120622	1110119; 25-8
SCREWS			
....	Screw—Breaker Lever Spring Attaching.....	1920777	1110103; 12-14-15-17; 20-4-9; 30
34	Screw—Breaker Plate Support.....	453418	All
35	Screw—Condenser Attaching.....	453418	1110101-6; 15; 29
35	Screw—Condenser Attaching.....	453304	1110100-2-3-4-7-8-9; 10-11-12-13-14-16-17-18-19; 20-2-3-4-5-6-8; 30
35	Screw—Condenser Attaching.....	9417096	1110105; 21
....	Screw—Condenser Mounting Bracket.....	133477	1110105; 21
....	Screw—Condenser Terminal.....	453647	1110101-5-6; 15; 21-9
36	Screw—Contact Adjusting.....	1914916	All
....	Screw—Cap Cover Attaching.....	455590	1110108-9
....	Screw—Cap High Tension Terminal—Center.....	1860407	1110114
....	Screw—Cap High Tension Terminal—Side.....	1860406	1110114
37	Screw—Cap Spring Support.....	453461	1110100-1-2-3-4-6-8-9; 10-12-14-15-16-17-18-19; 20-2-3-4-5-6-8-9; 30
37	Screw—Cap Spring Support.....	1900465	1110107; 21
37	Screw—Cap Spring Support.....	822417	1110105; 11
....	Screw—Low Tension Lead to Breaker Plate.....	36191	1110112; 20
....	Screw—Radio Shield Attaching.....	453647	1110107
....	Screw—Rotor Segment.....	1842722	1110105; 21-9
WASHERS			
....	Washer—Breaker Lever Spring Attaching—Plain.....	810794	1110103; 12-14-15-17; 20-4-9; 30
....	Washer—Space—Under Weight.....	1914367	1110114-15-19; 21-2-5-8
39	Washer—Terminal Stud—Insul.—Outside.....	1882247	1110100-2-4-5-6-7-8-9; 10-11-13-16-18-19; 21-2-3-6-8
40	Washer—Terminal Stud—Plain—Inside.....	810794	1110100-1-2-4-5-6-7-8-9; 10-11-13-16-18-19; 21-2-3-6-8
41	Washer—Terminal Stud—Plain—Outside.....	815540	1110100-1-2-4-5-6-7-8-9; 10-11-13-16-18-19; 21-2-3-6-8
MISCELLANEOUS			
....	Advance ARM Assembly.....	*1883493	1110112
....	Advance ARM Assembly.....	*1863169	1110114
....	Advance ARM Assembly.....	*1837319	1110117
....	Advance ARM Assembly.....	*1838617	1110118
....	Advance ARM Assembly.....	*1841304	1110127
....	BRACKET—Condenser Mounting.....	1880339	1110105; 21
42	BUSHING—Distributor Housing.....	1883486	1110112-16
42	BUSHING—Distributor Housing.....	1872669	1110114; 29
42	BUSHING—Distributor Housing.....	1880615	1110126
42	BUSHING—Distributor Housing—Upper.....	1911607	1110100-1-6; 10
42	BUSHING—Distributor Housing—Lower.....	1855984	1110100-1-6; 10-15; 21
....	BUSHING—Terminal Stud—Ground.....	1885616	1110105; 11; 21

*For parts see Advance Arm—Group 1.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
43	MISCELLANEOUS—Continued		
43	BUTTON—Carbon—In Cap ($\frac{1}{4}$ dia.).....	1938193	1110100-1-2-3-4-6-7-8-9; 10-11-12-13-14-15-16-17-18-19; 20-2-3-4-5-6-8; 30
43	BUTTON—Carbon—In Cap ($\frac{1}{8}$ dia.).....	806923	1110105; 21-9
....	CLAMP—Terminal.....	26153	1110103; 14-15-17; 24-5-7-9; 30
....	CLIP—Breaker Lever Retainer.....	813245	1110103; 12-14-15-17; 20-4-7-9; 30
....	COLLAR—Space—Hold Down Plate.....	1871207	1110125
....	COVER—Cap.....	1871561	1110108
....	COVER—Cap.....	820133	1110109
....	CUP—Grease.....	1955293	All except 1110103-9
....	INSULATION—Breaker Plate.....	1882243	1110105; 11; 21
....	LEAD—Condenser.....	1871681	1110101-5-6; 15; 2-9
....	LEAD—Condenser—From Mounting Bracket.....	1850015	1110105; 21
....	LEAD (& Shielding)—Low Tension.....	*1884050	1110112
....	LEAD (& Shielding)—Low Tension.....	*1884794	1110120
....	PLATE—Dial.....	815095	1110118
....	PLUG—Fibre—In grease cup hole.....	1869303	1110102; 11
....	ROTOR Only.....	1842719	1110105; 21-9
....	SEGMENT—Rotor.....	1838315	1110105; 21
....	SPRING—Rotor.....	1842723	1110105; 21-9
....	SPRING—In grease cup hole.....	1845715	1110102; 11
....	STUD—Ground Terminal.....	1882244	1110105; 11; 21
....	TERMINAL—Screw type—High Tension.....	*1839164	1110105; 21-9
44	WICK—Felt—In Cam.....	1963555	All except 1110129

*Shipped separate.