


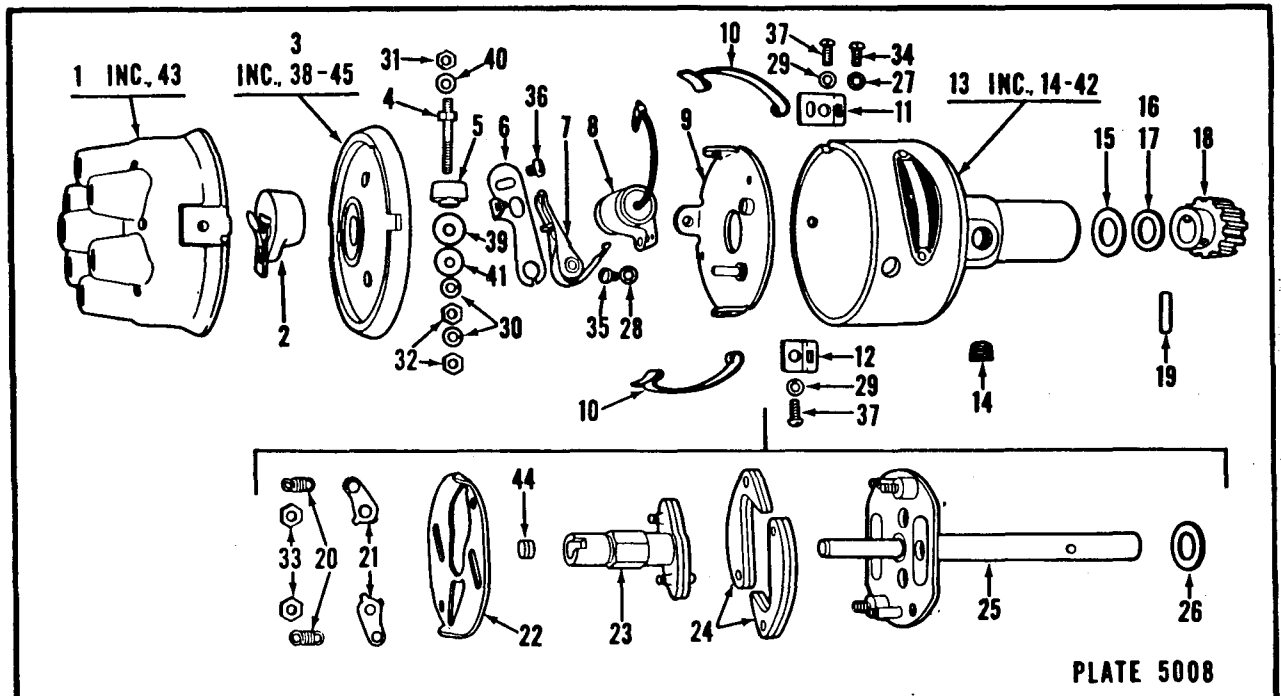

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover — Housing	Screw or Stud Terminal	Bushing	Contact Point & Support	Lever — Breaker	Condenser	Plate — Breaker	Spring — Cap	Support — Cap Spring & Cover locator	Support — Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110131	1842714	1842718		1916806	1878405	a1848038	a 813238	1860020	1847643	1871838		1847289	1878285
1110132	824735	820445				a " "	a " "	1928111	"	"		"	1882392
1110133	1867722	1883500		132776	821160	a " "	a " "	"	821150	"		"	1880441
1110134	"	"				a " "	a " "	1900272	"	"		"	1849171
1110135	"	"		1916806	1878405	a " "	a " "	"	1847643	"		"	1889327
1110136	"	"		"	"	a " "	a " "	"	"	"		"	1886526
1110137	1862403	"		"	"	a " "	a " "	"	"	"		"	1874370
1110138	824735	820445		132776	821160	a " "	a " "	1928111	821150	"		"	1843749
1110139	"	"		"	"	a " "	a " "	1900272	"	"		"	822622
1110140	"	"		"	"	a " "	a " "	"	"	"		"	"
1110141	1842714	1842718		"	"	b1882964	b1881394	1881030	"	"		"	1873001
1110142	"	"		1916806	1878405	c1845785	c 813238	"	1883370	"		"	1883332
1110143	"	"		132776	821160	b1882964	b1881394	"	821150	"		"	1887131
1110144	"	"		1916806	1878405	c1845785	c 813238	"	1883370	"		"	1883332
1110145	824987	820445		132776	821160	a1848038	a " "	1900272	821150	"		"	822622
1110146	824735	"		1916806	1878405	a " "	a " "	"	1847643	"		"	1874370
1110147	"	"		"	"	a " "	a " "	"	"	"		"	"
1110148	1867722	1883500		"	"	a " "	a " "	1928111	"	"		"	1877908
1110149	"	"		"	"	a " "	a " "	"	"	"		"	1888969
1110150	824735	820445		1889040	"	a " "	a " "	1900272	"	"		"	1889038
1110151	1867722	1883500		132776	821160	a " "	a " "	1928111	821150	"		"	1889081
1110152	"	820445	1889363	1916806	1878405	b1882964	b1881394	1900272	1847643	*1883052		*1883051	1883044
1110153	824735	"		"	"	a1848038	a 813238	1881030	1871838			*1847289	1889391
1110154	1841856	"		"	"	a " "	a " "	"	"	"		"	"
1110156	1867722	1883500	1900119	"	"	a " "	a " "	1900272	"	1889967	1889999	†	1900040
1110157	"	"	"	132776	821160	a " "	a " "	1928111	821150	"	"	†	1889950
1110159	"	"	"	"	"	a " "	a " "	"	"	"	"	†	1900287
1110160	"	"	"	1847647	1878405	a " "	a " "	"	1847643	"	"	†	1900359

*Two required.
†One required.

a Contact Set 1855720.
b Contact Set 1882965.
c Contact Set 1882391.

*See Minor Parts for Housing Cover Spring.

Delco-Remy SERVICE PARTS CATALOG

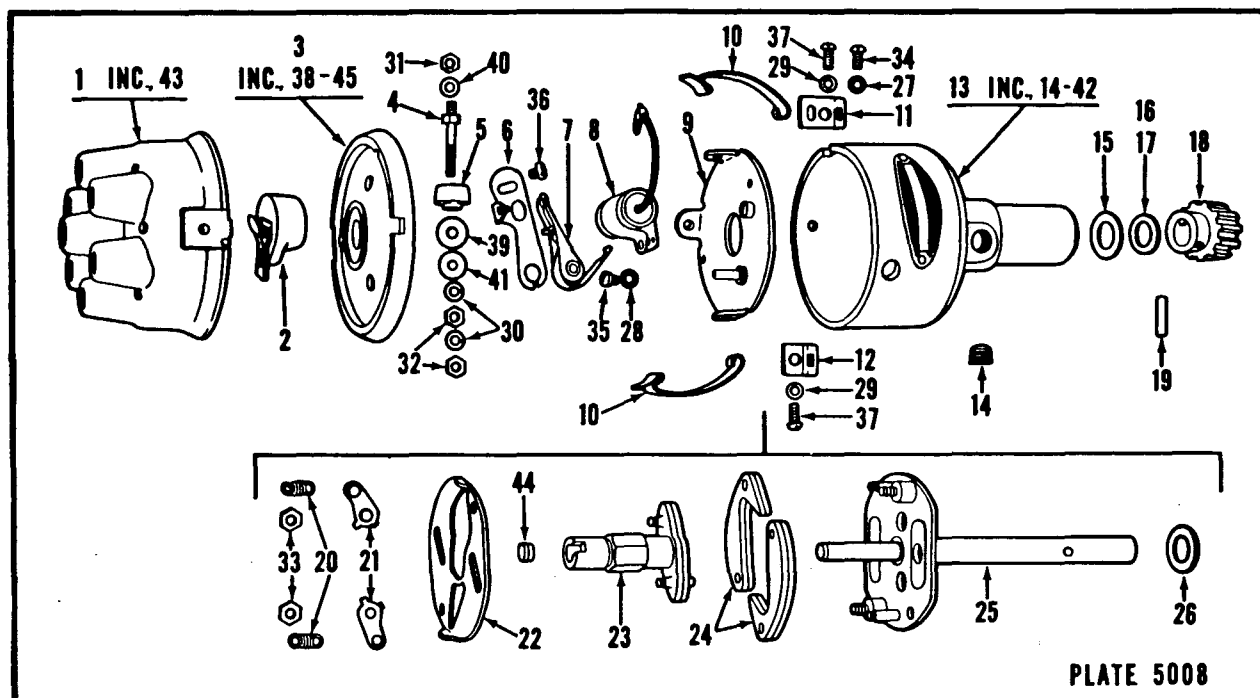


PLATE 5008

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Pipe Plug	Washer — Space	Washer — Shim — .005 thk.	Washer — Shim — .010 thk.	Collar, Coupling or Gear	Pin	Spring — Weight	Lock Washer	Plate — Weight Hold Down	Cam	Weight	Main Shaft	Washer — Space
	14	15	16	17	18	19	20	21	22	23	24	25	26
1110131		811912	810074	810078	809673	1857492	1886538	1885558	1885557	1874669	1880902	1874648	811912
1110132			"	"		1862218	1886558			1882396	1863143	1882394	"
1110133		811912	"	"	809673	1857492	1885756			822938	820528	1869436	"
1110134		"			*		1886542			1841389	818222	1886260	"
1110135					1865180	1857502	1883343	1885558	1858747	1881276	1881371	1881926	
1110136					"	"	1882595	"	1862074	1882230	1879063	"	
1110137		811912	810074	810078	809673	1857492	1886508	"	1885557	1864361	1880902	1886487	811912
1110138		"	"	"	*		1884929			822627	818222	1871386	"
1110139		"	"	"	*		1882595			825464	825469	1883328	"
1110140		"	"	"	809673	1857492	1884526			821472	818222	828121	"
1110141					1878047	829421	1886967	1885558	1885557	1871516	1880902	1887010	
1110142					"	"	"	"	"	1878288	"	1887039	
1110143					1873000	"	1887130	"	"	"	"	"	
1110144					"	"	"	"	"	"	"	"	
1110145		811912	810074	810078	809673	1857492	1884931			824109	818222	828522	811912
1110146		"	"	"	"	"	1887554			1887578	1881371	1882360	"
1110147		"	"	"	"	"	1887552			1887576	1880902	1887575	"
1110148		"			"	829421	1882595	1885558	1862074	1882230	1879063	1883728	"
1110149					1865180	1857502	"	"	"	"	"	1881926	
1110150		811912	810074	810078	1855375	822273	1882995	"	1882781	1882778	1882907	1882776	811912
1110151		"	"	"	809673	1857492	1885756			822938	820528	1869436	"
1110152		"	"	"	"	"				□		□1883047	"
1110153		"	"	"	1839067	813131	1884136	1885558	1879181	1864361	1880902	1889394	"
1110154		"	"	"	809673	1857492	"	"	"	1889504	"	"	"
1110155					1865180	1857502	1900221	"	1858747	1900043	1881371	1881926	
1110157					1873000	829421	1913818	"	1885557	1889948	1880902	1873004	
1110159		811912	810074	810078	1840500	"	1883509			1900291	818222	1900289	
1110160		"	"	"	1855375	822273	1882995	1885558	1882781	1900357	1882907	1900356	

*Coupling or Gear & Pin not furnished by Delco-Remy.
□1883047 is Main Shaft & Cam.

Revised to January 1, 1968

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
27	Lock Washer—Breaker Plate Support Screw.....	453844	All except 1110142-4
28	Lock Washer—Condenser Attaching Screw.....	453844	1110131-2-3-4-5-6-7-8-9; 40-1-3-5-6-7-8-9; 50-1-2-3-4-6-7-9; 60
28	Lock Washer—Condenser Attaching Screw.....	118869	1110142-4
.....	Lock Washer—Condenser Terminal Screw.....	118869	1110131; 41-2-3-4; 53-4
29	Lock Washer—Cap Spring Support Screw.....	453844	All
.....	Lock Washer—Distributor Hold Down Screw.....	9421423	1110134
.....	Lock Washer—Filter Attaching Screw.....	1914579	1110135; 49; 51-6; 60
.....	Lock Washer—Low Tension Lead Screw— To Breaker Plate.....	453844	1110159
30	Lock Washer—Terminal.....	453844	1110131-2-3-4-5-6-7-8-9; 40-1-2-3-4-5-6-7-8-9; 51-2-3-4-6-7; 60
30	Lock Washer—Terminal.....	138530	1110150
.....	Lock Washer—Vacuum Control Arm Attaching Screw.....	121801	1110132
NUTS			
.....	Nut—Condenser Screw.....	817363	1110142-4
.....	Nut—(Insul.) Cap Spring Support Screw.....	1882246	1110142-4
.....	Nut—Filter Attaching Screw.....	1843521	1110135; 49; 51-6
.....	Nut—(2 hole) Filter Attaching Screw.....	1900673	1110160
.....	Nut—Terminal—Inside.....	817363	1110131-2-4-5-6-7; 46-7-8-9; 50-2-3-4-6; 60
31	Nut—Terminal—Inside.....	1882248	1110142-4; 50
32	Nut—Terminal—Outside.....	120622	1110131-2-5-6-7; 42-4-6-7-8-9; 52-3-4-6; 60
32	Nut—Terminal—Outside.....	817363	1110150
33	Nut—Weight Hold Down (8-32).....	120622	1110131-4-5; 57
33	Nut—Weight Hold Down (10-32).....	1923540	1110131-4-5-6-7; 41-2-3-4-8-9; 50-3-4-6-7; 60
SCREWS			
.....	Screw—Breaker—Lever Spring Attaching.....	1920777	1110133-4-8-9; 40-1-3-5; 51-7-9
34	Screw—Breaker Plate Support.....	453418	1110131-2-3-4-5-6-7-8-9; 40-1-3-5-6-7-8-9; 50-1-3-4-6-7-9; 60
34	Screw—Breaker Plate Support.....	9417096	1110152
35	Screw—Condenser Attaching.....	453418	1110131; 41-3; 53-4
35	Screw—Condenser Attaching.....	453304	1110132-3-4-5-6-7-8-9; 40-5-6-7-8-9; 50-1-2-6
35	Screw—Condenser Attaching.....	9417096	1110142-4
35	Screw—Condenser Attaching.....	131954	1110157-9; 60
.....	Screw—Condenser Mounting Bracket.....	133477	1110142-4
.....	Screw—Condenser Terminal.....	453647	1110131; 41-2-3-4; 53-4
36	Screw—Contact Attaching.....	1914916	All
.....	Screw—Cap Cover Attaching.....	455590	1110145; 53-4
37	Screw—Cap Spring Support.....	453461	1110131-2-3-4-5-6-7-8-9; 40-1-3-5-6-7-8-9; 50-1-3-4-6-7-9; 60
37	Screw—Cap Spring Support.....	822417	1110142-4
37	Screw—Cap Spring Support.....	1904614	1110152
.....	Screw—Distributor Hold Down Plate.....	1872443	1110134
.....	Screw—Filter Attaching.....	132188	1110135; 49; 51-6; 60
.....	Screw—H.T. Terminal (Side).....	1860406	1110137
.....	Screw—H.T. Terminal (Center).....	1860407	1110137
.....	Screw—Lead Attaching to Breaker Plate.....	36191	1110159
.....	Screw—Rotor Segment.....	1842722	1110131; 41-2-3-4
.....	Screw—Vacuum Control Arm.....	1882270	1110132
.....	Screw—Vacuum Control Bracket.....	1882397	1110132
WASHERS			
.....	Washer—Adaptor Sleeve Retainer.....	1926782	1110133-4; 51
.....	Washer—Breaker Lever Spring Screw.....	810794	1110133-4-8-9; 40-1-3-5; 51-7-9
.....	Washer—Distributor Hold Down Plate Screw.....	1905125	1110134
38	Washer—(Pkg.) Felt—In Housing Cover.....	1914309	1110152-6-7-9; 60
.....	Washer—Space—On Tach. Drive Shaft ($\frac{1}{8}$ thk.).....	1900301	1110159
.....	Washer—Space—On Tach. Drive Shaft (.010 thk.).....	1900302	1110159
.....	Washer—Space—Between Tach. Gear & Bushing.....	1900300	1110159
.....	Washer—Under Coupling or Gear (1" O.D.).....	1837617	1110138
.....	Washer—Terminal Stud Insul. (Bushing).....	23915	1110152
39	Washer—Terminal Stud Insul.—Outside.....	1882247	1110131-2-5-6-7; 42-4-6-7-8-9; 50-2-3-4-6; 60
40	Washer—Terminal Stud Plain—Inside.....	810794	1110131-2-5-6-7; 42-4-6-7-8-9; 50-2-3-4-6; 60
41	Washer—Terminal Stud Plain—Outside.....	815540	1110131-2-5-6-7; 42-4-6-7-8-9; 50-2-3-4-6; 60
.....	Washer—Vacuum Control Bracket Screw.....	1905125	1110132

Parts not listed in this catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS		
----	ARM Assembly—Advance.....	*1880443	1110133; 51
----	ARM Assembly—Advance.....	*1865844	1110134
----	BRACKET—Condenser Mounting.....	1880339	1110142-4
42	BUSHING—Distributor Housing.....	1874669	1110131
42	BUSHING—Distributor Housing.....	1855984	1110141-2-3-4; 57
42	BUSHING—Distributor Housing.....	1900220	1110153-4
42	BUSHING—Distributor Housing.....	1883226	1110152
42	BUSHING—Distributor Housing.....	1900299	1110159
42	BUSHING—Distributor Housing.....	825463	1110132
----	BUSHING—(Insul.) Terminal Stud—Ground Term.....	1885616	1110142-4
43	BUTTON—Carbon—In Cap ($\frac{1}{8}$ dia.).....	806923	1110131-7; 41-2-3-4
43	BUTTON—Carbon—In Cap ($\frac{1}{4}$ dia.).....	1938193	1110132-3-4-5-6-7-8-9; 40-5-6-7-8-9; 50-1-2-3-4-6-7-9; 60
----	CLAMP—Terminal.....	26153	1110133-4-8-9; 40-1-3-5; 51-7
----	CLIP—Breaker Lever Retainer.....	813245	1110133-4-8-9; 40-1-3-5; 51-7-9
----	COLLAR—Weight Hold Down Space.....	1871207	1110153-4
----	CONNECTION—Tachometer Drive.....	1900298	1110159
----	COVER—Cap.....	1871561	1110145; 54
----	CUP—Grease.....	1955293	1110131-2-3-4-5-6-7-8-9; 40-1-2-3-4-5-6- 7-8-9; 50-1-3-4-6-7-9; 60
44	Felt WICK—In Cam.....	1963555	All except 1110152
----	FILTER (Shipped separate).....	1888714	1110135; 49; 51; 60
45	GASKET—Housing Cover.....	1883055	1110152
45	GASKET—Housing Cover.....	1889966	1110156-7-9; 60
----	GEAR (& Oil Thrower)—On Main Shaft.....	1900296	1110159
----	INSULATOR—Breaker Plate.....	1882243	1110142-4
----	LEAD—Condenser.....	1871681	1110131; 41-2-3-4; 53-4
----	LEAD—Condenser (From Mounting Bracket).....	1850015	1110142-4
----	LEAD (& Shield)—Low Tension (Shipped separate).....	1900210	1110159
----	PLATE—Distributor Hold Down.....	1887305	1110134
----	PLUG—Fibre—In Grease Cup Hole.....	1869303	1110136; 48-9
----	ROTOR Only.....	1842719	1110131; 41-2-3-4
----	SEGMENT—Rotor.....	1838315	1110131; 41-2-3-4
----	SHAFT (& Gear)—Tachometer Drive.....	1900293	1110159
----	SHAFT—(Extension & Collar).....	1868619	1110132
----	SHIELD—(Oil) Under Weight Plate.....	1900303	1110159
----	SLEEVE—Adapter.....	1880445	1110133; 51
----	SLEEVE—Adapter.....	1864243	1110134
----	SPRING—Housing Cover.....	816801	1110152
----	SPRING—In Grease Cup Hole.....	1845715	1110136; 48-9
----	SPRING—Rotor.....	1842723	1110131; 41-2-3-4
----	SPRING—Vacuum Control Bracket.....	1882441	1110132
----	STUD—Ground Terminal.....	1882244	1110142-4
----	TERMINAL—Screw type—H.T. (Shipped separate)....	1839164	1110131; 41-2-3-4
----	VACUUM—Control.....	*1116034	1110132
----	Woodruff KEY—For Tachometer Drive Gear.....	190016	1110159

*For parts see Advance Arm—Group 1.

*For parts see Vacuum Control—Group 4.

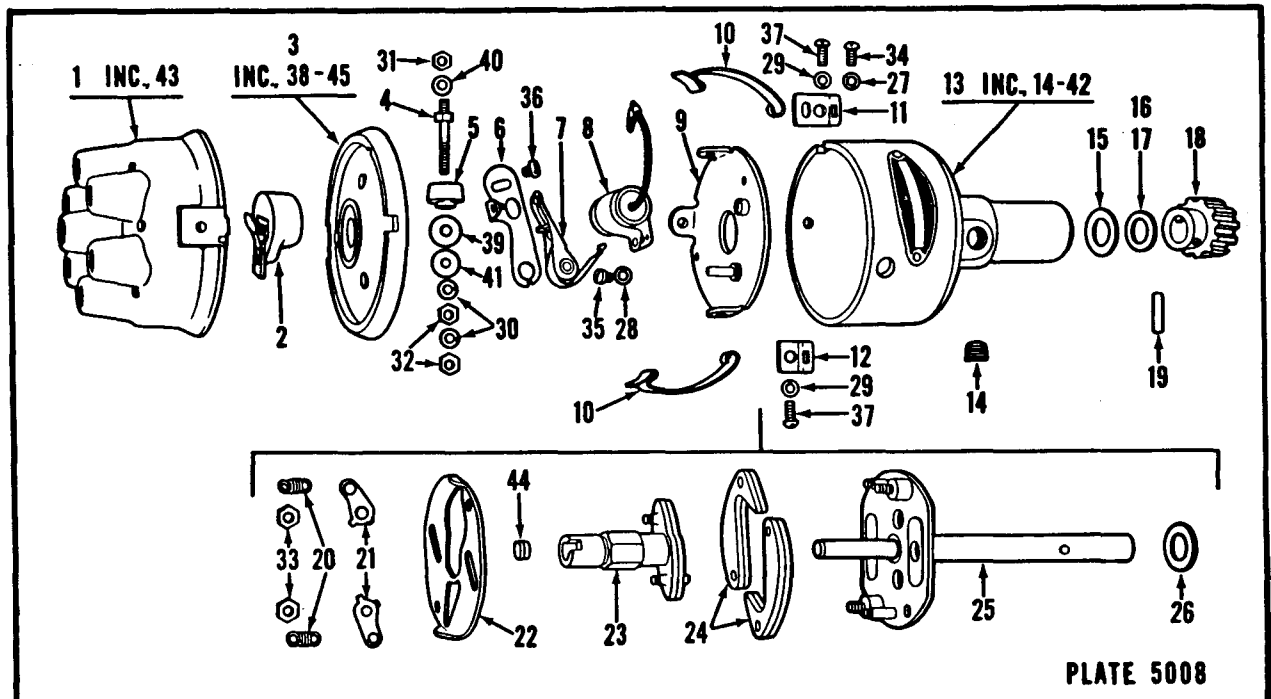


PLATE 5008

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover Housing	Screw or Stud Terminal	Bushing Ins.	Contact Point & Support	Breaker Lever	Condenser	Plate Breaker	Spring Cap	Support Cap Spring or Cover Locator	Support Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110161	1867722	1883500	1900119	1907783	821160	• 1848038	• 813238	1900272	821150	1889967	1889999	1847289	1900379
1110162	"	"	"	132776	"	• "	• "	"	"	"	"	"	1900607
1110163	"	"	"	"	"	• "	• "	1928111	"	"	"	"	1900830
1110164	824987	"	"	"	"	• "	• "	1900272	"	1871838	"	"	1901080
1110165	1867722	"	1900119	"	"	• "	• "	"	"	1889967	1889999	"	1901110
1110167	824735	820445	"	1907783	"	• "	• "	"	"	1871838	"	"	1864370
1110168	1867722	1883500	"	1916806	1878405	• "	• "	1928111	1847643	"	"	"	1873759
1110169	"	"	1900119	"	"	• "	• "	"	"	1889967	1889999	"	1902301
1110170	"	"	"	"	"	• "	• "	1900272	"	"	"	"	1902400
1110172	824987	"	"	132776	821160	• "	• "	1928111	821150	1871838	"	"	1901080
1110173	"	"	"	"	"	• "	• "	1900272	"	"	"	"	"
1110174	1867722	"	1900119	"	"	• "	• "	1928111	"	1889967	1889999	"	1903162
† 1110175	"	"	"	1916806	1878405	• "	• "	"	1847643	"	"	"	† 1903400
1110176	824735	820445	"	132776	821160	• "	• "	1900272	821150	1871838	"	"	822622
1110177	1867722	1883500	1900119	1916806	1878405	• "	• "	1928111	1847643	1889967	1889999	"	1902400
1110178	"	"	"	132776	821160	• "	• "	"	821150	"	"	"	1903734
1110179	"	"	"	1916806	1878405	• "	• "	"	1847643	"	"	"	1902400
1110180	"	"	"	132776	821160	• "	• "	"	821150	"	"	"	1900830
1110181	"	820445	"	"	"	• "	• "	1900272	"	1871838	"	"	1868071
1110182	"	1905590	1900119	1916806	1878405	• "	• 1905344	1928111	1847643	1889967	1889999	"	1907088
1110183	"	"	"	132776	821160	• "	• "	"	821150	1905593	"	"	1905588
1110184	"	"	1900119	"	"	• "	• 813238	1900272	"	1889967	1889999	"	1906376
1110185	"	"	"	1916806	1878405	• "	• "	"	1847643	"	"	"	1906481
1110187	"	1883500	"	"	"	• "	• "	1928111	"	"	"	"	1906601
1110188	"	1905590	"	"	"	• "	• "	"	"	"	"	"	1906698
1110189	1842714	1909590	"	"	"	• 1882964	• 1881394	1900272	1908033	"	"	"	1902400
1110190	1867722	1883500	"	"	"	• 1848038	• 813238	1900272	1847643	"	"	"	1906601
1110191	824735	820445	"	132776	821160	• "	• "	1928111	821150	"	"	"	1906767
1110192	"	"	"	1916806	1878405	• "	• "	"	1847643	"	"	"	1901199
1110193	1842714	1842718	1906685	"	"	• "	• "	1900272	"	"	"	"	1907856

†Manufactured by McKinnon Industries. Serviced by G.M. of Canada.

•Two required.

•Contact Set 1855720.


•Contact Set 1911119.

•Contact Set 1882865.

Delco-Remy **SERVICE PARTS CATALOG**

Model No.	Cap	Rotor	Cover Housing	Screw or Stud Terminal	Bushing Ins.	Contact Point & Support	Breaker Lever	Con- denser	Plate Breaker	Spring Cap	Support Cap Spring or Cover Locator	Support Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110194	1872832	1883500		1916806	1878405	1848038	813238	1900272	1847643	1871838		1847289	1874370
1110195	1867722	1909590	1900119	"	"	1882964	1881394	"	1908033	1889967	1889999	"	1911828
1110196	1842714	"	1912381	"	"	"	"	"	"	"	"	"	1908023
1110197	"	"	"	"	"	"	"	"	"	"	"	"	"
1110198	1867722	1883500	"	"	"	1848038	1905344	"	1847643	"	"	"	1909001
1110199	"	1909590	"	"	"	1882964	1881394	"	1908033	"	"	"	1908703
1110200	1842714	"	"	"	"	"	"	"	"	"	"	"	1909001

Two required.

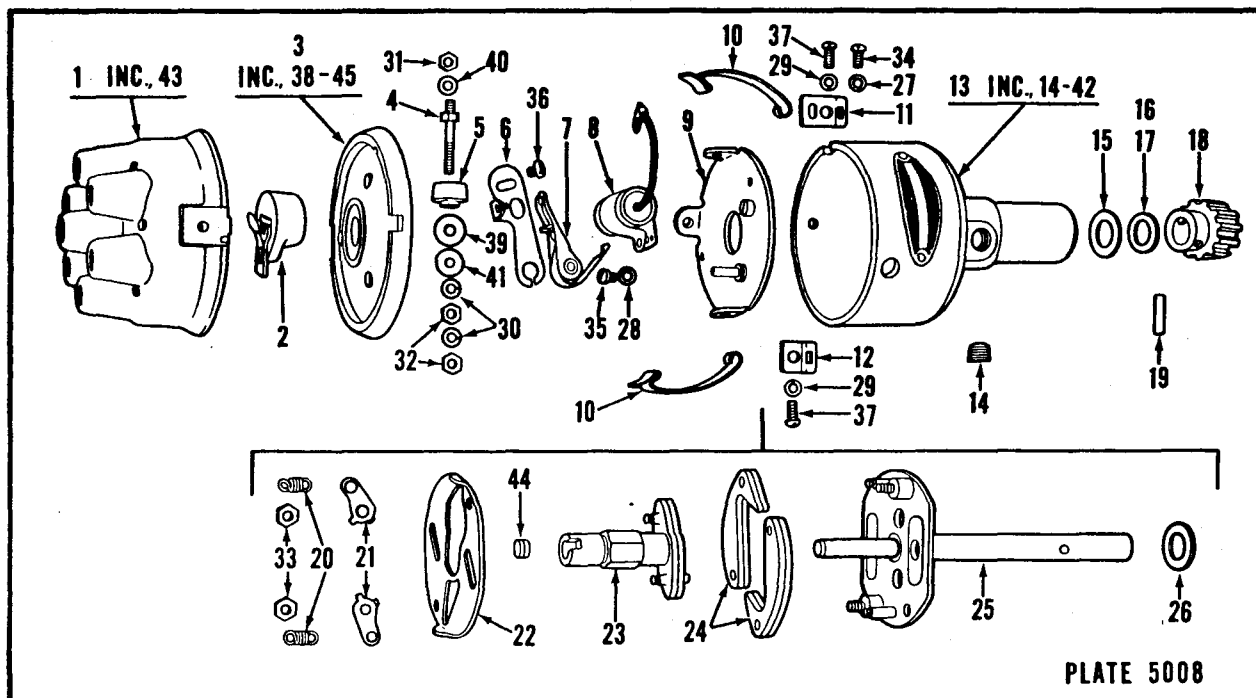

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Pipe Plug	Washer Space	Washer Shim .005 thk.	Washer Shim .010 thk.	Collar, Coupling or Gear	Pin	Spring Weight	Lock Washer	Plate Weight Hold Down	Cam	Weight	Main Shaft	Washer Space
	14	15	16	17	18	19	20	21	22	23	24	25	26
1110161		811912	810074	1912129	1864165	1857492	1900371	1885558	1885557	1900372	1881371	1869840	811912
1110162		"	"	"	809673	829421	1900611	"	"	1900610	1880902	1902065	"
1110163					*	*	1889680			1900832	1845036	1889653	"
1110164		811912	810074	1912129	1865687	813131	1885756	1885558	1885557	1901084	825469	1901083	"
1110165		"	"	"	809673	1857492	1884136			1901112	820528	1872558	"
1110167		"	"	"	1864165	"	1883335	1885558	1885557	1864361	1880902	1864365	"
1110168		"	"	"	1840500	"	1883498	"	"	1869580	1881371	1873762	"
1110169		"	"	"	1864165	"	1913799	"	1858747	1902304	1858744	1883358	"
1110170		"	"	"	1902407	829421	1902376	"	1885557	1902405	1881371	1902403	"
1110172		"	"	"	1865687	813131	1887130	"	"	1902416	"	1902492	"
1110173		"	"	"	"	"	1903101	"	"	1903151	"	1903150	"
1110174		"	"	"	1840500	829421	1883509			1900291	818222	1900289	

*Coupling or Gear & Pin not furnished by Delco-Remy.

parts not listed in this catalog will not be sold separately.

Revised to December 1, 1967

SERVICE PARTS CATALOG

Model No.	Pipe Plug	Washer — Space	Washer Shim .005 thk.	Washer Shim .010 thk.	Collar, Coupling or Gear	Pin	Spring Weight	Lock Washer	Plate — Weight Hold Down	Cam	Weight	Main Shaft	Washer — Space
	14	15	16	17	18	19	20	21	22	23	24	25	26
1110175					1865180	1857502	1903693	1885558	1862074	1903403	1879063	1879058	
1110176		811912	810074	1912129	809673	1857492	1908587			821472	818222	1844542	811912
1110177		"	"	"	1902407	829421	1904292	1885558	1885557	1904106	1880902	1903691	"
1110178		"	"	"	809673	1857492	1886508			1903736	820628	1869436	"
1110179		"	"	"	"	829421	1883373	1885558	1885557	1904106	1880902	1904105	"
1110180		"	"	"	"	"	1884929			1904655	818222	1904693	"
1110181		"	"	"	"	"	1885756			822938	820528	1859250	"
1110182					1865180	1857502	1900221	1885558	1858747	1900043	1881371	1881926	"
1110183							1885888			1880341	1845036	1874628	811912
1110184		811912	810074	1912129	809673	829421	1900611	1885558	1885557	1900610	1880902	1906379	"
1110185		"	"	"	1864165	1857492	1913799	"	1858747	1902304	1858744	1906484	
1110187		"	"	"	"	"	1922250			1900291	818222	1906603	811912
1110188		"	"	"	"	"	1907592			"	"	1906696	"
1110189		"	"	"	809673	829421	1908587	1885558	1885557	1904106	1880902	1904105	"
1110190		"	"	"	1850777	817267	1884929			1900291	818222	1906750	"
1110191		"	"	"	809673	1857492	1883509			1906770	1880902	1906769	"
1110192		"	"	"	"	"	1902376			1906794	1881371	1906792	"
1110193		"	"	"	"	"	1908587	1885558	1885557	1907860	1880902	1907859	"
1110194		"	"	"	809673	1857492	1887552			1887576	"	1887575	"
1110195		"	"	"	1907957	829421	1886538	1885558	1885557	1907950	"	1907951	"
1110196		"	"	"	*1908040	1908031	1886558	"	"	1903690	1881371	1908026	
1110197		"	"	"	*1908041	"	"	"	"	"	"	"	
1110198	125947	†	"	"	"	"	1908587	"	"	1909195	1880902	1909822	
1110199		811912	"	"	1865180	1857502	1882595	"	1862074	1908731	1879063	1908706	
1110200	125947	"	"	"	△	829421	1908587	"	1885557	1909195	1880902	1909012	811912

*Coupling or Gear & Pin not furnished by Delco-Remy.

†Manufactured by McKinnon Industries. Serviced by G.M. of Canada.

*See Minor Parts for Collar & Collar Pin.

△Use Gear Pin 829421. Gear not furnished by Delco-Remy.

†811912 (¾" O.D.) & 1837617 (1" O.D.). One each required.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
27	Lock Washer—Breaker Plate Support Screw.....	453844	All
28	Lock Washer—Cam Lubricator Screw.....	453844	1110189; 95-6-7-9; 200
29	Lock Washer—Condenser Screw.....	453844	All
30	Lock Washer—Cap Spring Support Screw.....	453844	All
30	Lock Washer—Terminal Screw.....	453844	1110161-2-3-4-5-7-8-9; 70-2-3-4-5-6-7-8-9; 80-1-3-4; 90-1-2-3-4-5-6-7-8-9; 200
NUTS			
31	Nut—Terminal Stud—Inside.....	817363	1110168-9; 70-5-7-9; 82-4-5-7-8-9; 90-2-3-4-5-6-7-8-9; 200
32	Nut—Terminal Stud—Outside.....	120622	1110168-9; 70-5-7-9; 82-4-5-7-8-9; 90-2-3-4-5-6-7-8-9; 200
33	Nut—Weight Hold Down Plate (8-32).....	120622	1110161-2-7-8; 75; 84
33	Nut—Weight Hold Down Plate (10-32).....	1923540	1110161-2-4-7-8-9; 70-2-3-5-7-9; 82-4-5-9; 93-5-6-7-8-9; 200
SCREWS			
34	Screw—Breaker Lever Spring Attaching.....	1920777	1110161-2-4-5-7; 72-3-4-6-8; 80-1-3-4; 91
34	Screw—Breaker Plate Support.....	453418	All
35	Screw—Cam Lubricator Attaching.....	453304	1110189; 95-6-7-9; 200
35	Screw—Condenser Attaching.....	453304	All
36	Screw—Contact Attaching.....	1914916	All
36	Screw—Distributor Cap Cover Attaching.....	455590	1110164; 72-3
36	Screw—Distributor Cap—H.T. Terminal—Center.....	1860407	1110194-6-7
36	Screw—Distributor Cap—H.T. Terminal—Side.....	1860406	1110194-6-7
37	Screw—Distributor Cap Spring Support.....	453461	All
37	Screw—Distributor Hold Down.....	1837895	1110188
37	Screw—Distributor Hold Down.....	813044	1110200
37	Screw—Rotor Segment Attaching.....	1842722	1110193


Parts not listed in this catalog will not be sold separately.

Delco-Remy
SERVICE PARTS CATALOG

Illus. No.	Name	Part No.	Used on Models
WASHERS			
38	Washer—Plain—Breaker Lever Spring Screw.....	810794	1110161-2-4-5-7; 72-3-4-6-8; 80-1-3-4; 91
	Washer—(Package) Felt—Housing Cover.....	1914309	1110161-2-3-5-9; 70-4-5-7-8-9; 80-2-4-5-7-8-9; 90-1-2-5-6-7-8-9; 200
38	Washer—Felt—Housing Cover.....	1906687	1110193
39	Washer—Insulation—Terminal Stud—Outside.....	1882247	1110168-9; 70-5-7-9; 82-5-7-8-9; 90-1-2-3-4-5-6-7-8-9; 200
	Washer—Plain—Distributor Hold Down Screw.....	1914592	1110188
	Washer—Plain—Distributor Hold Down Screw.....	813046	1110200
40	Washer—Plain—Terminal Stud—Inside.....	810794	1110168-9; 70-5-7-9; 82-5-7-8-9; 90-1-2-3-4-5-6-7-8-9; 200
41	Washer—Plain—Terminal Stud—Outside.....	815540	1110168-9; 70-5-7-9; 82-5-7-8-9; 90-1-2-3-4-5-6-7-8-9; 200
	Washer—Sleeve Retainer.....	1926782	1110178; 81-8; 200
	Washer—Space—Inside under gear.....	1900300	1110174; 85; 95-6-7-9
	Washer—Space—($\frac{1}{32}$ thk.) on cross shaft.....	1900301	1110174; 85; 95-6-7-9
	Washer—Space—.010 thk.) on cross shaft.....	1900302	1110174; 85; 95-6-7-9
	Washer—Space—Weight Hold Down Plate.....	1871207	1110189
	Washer—Spring—Distributor Hold Down Screw.....	35498	1110188
MISCELLANEOUS			
	Advance ARM Assembly.....	*1880443	1110178
	Advance ARM Assembly.....	*1840992	1110181
	Advance ARM Assembly.....	*1865844	1110188
	Advance ARM Assembly.....	*1838144	1110200
	BEARING—Governor Drive Shaft.....	1907955	1110195-6-7
	BLOCK—Drive Gear Cushion.....	1908028	1110196-7
42	BUSHING—Distributor Housing.....	1874699	1110177; 89
42	BUSHING—Distributor Housing.....	1872669	1110161; 84
42	BUSHING—Distributor Housing.....	1883486	1110162
42	BUSHING—Distributor Housing.....	1900299	1110174
42	BUSHING—Distributor Housing.....	1873951	1110196-7
42	BUSHING—Distributor Housing.....	1909003	1110198; 200
42	BUSHING—Distributor Housing.....	1913176	1110195
42	BUSHING—Distributor Housing—Lower.....	1855984	1110168
42	BUSHING—Distributor Housing—Upper.....	1874335	1110168
43	BUTTON—Carbon.....	1938193	1110161-2-3-4-5-6-7-8-9; 70-2-3-4-5-6-7-8-9; 80-1-2-3-4-5-6-7-8; 90-1-2
43	BUTTON—Carbon.....	806923	1110189; 93
	CLAMP—Terminal.....	26153	1110161-2-3-4-5-7; 72-3-4-6-8; 80-1-3-4; 91
	CLIP—Breaker Lever Retainer.....	813245	1110161-2-3-4-5-7; 72-3-4-6-8; 80-1-3-4; 91
	COLLAR—Shaft.....	821865	1110196-7
	CONNECTION—Tachometer on Governor Drive.....	1900298	1110174; 85; 99
	COVER—Distributor Cap.....	1871561	1110164; 72-3
	CUP—Grease.....	1955293	1110161-2-3-4-5-7-9; 70-2-3-4-5-6-7-8-9; 80-1-2-3-4-5-7-8-9; 90-1-2-3-4-5-6-7-9
	CUSHION—Distributor Drive Gear.....	1908029	1110196-7
	ELBOW—Grease Cup.....	112568	1110196
	EXTENSION—Shaft.....	1907956	1110195
44	Felt WICK—In Cam.....	1963555	All
45	GASKET—Housing Cover.....	1889966	1110161-2-3-5-9; 70-4-5-7-8-9; 80-2-4-5-7-8-9; 90-1-2-3-5-6-7-8-9; 200
	GEAR (& Oil Thrower).....	1900296	1110174; 85; 95-6-7-9
	KEY—Woodruff—For Tach. or Gov. Drive Gear.....	190016	1110174; 85; 95-6-7-9
	LUBRICATOR—Cam.....	▲	1110189; 95-6-7-9; 200
	NIPPLE—Lubricating.....	271283	1110168
	PIN—Collar.....	1862218	1110196-7
	PLATE—Dial.....	815095	1110200
	PLATE—Distributor Support.....	1884155	1110188
	RETAINER—Distributor Drive Gear.....	1908030	1110196-7
	RETAINER (Felt)—In Housing Cover.....	1913643	1110193
	ROTOR only.....	1842719	1110193
	SEGMENT—Rotor.....	1842721	1110193
	SHAFT (& Gear) Governor Drive.....	1907953	1110195-6-7
	SHAFT (& Gear) Governor Drive.....	1908708	1110199
	SHAFT (& Gear) Tachometer Drive.....	1900293	1110174; 85
	SHIELD—Oil under Weight Plate.....	1900303	1110174; 85; 95; 6; 7; 9
	SLEEVE—Distributor Adaptor.....	1880445	1110178
	SLEEVE—Distributor Adaptor.....	1842325	1110181; 200
	SLEEVE—Distributor Adaptor.....	1841005	1110188
	SPRING—Distributor Hold Down Screw.....	813045	1110200
	SPRING—Rotor.....	1842723	1110193
	TERMINAL—High Tension (Shipped separate).....	1839164	1110189; 93-6-7; 200
	Vent PLUG.....	1864618	1110181

*For parts see Advance Arm—Group 1.

▲1908035 attached with tangs, used in early production.
1885562 attached with a screw, used in later production.

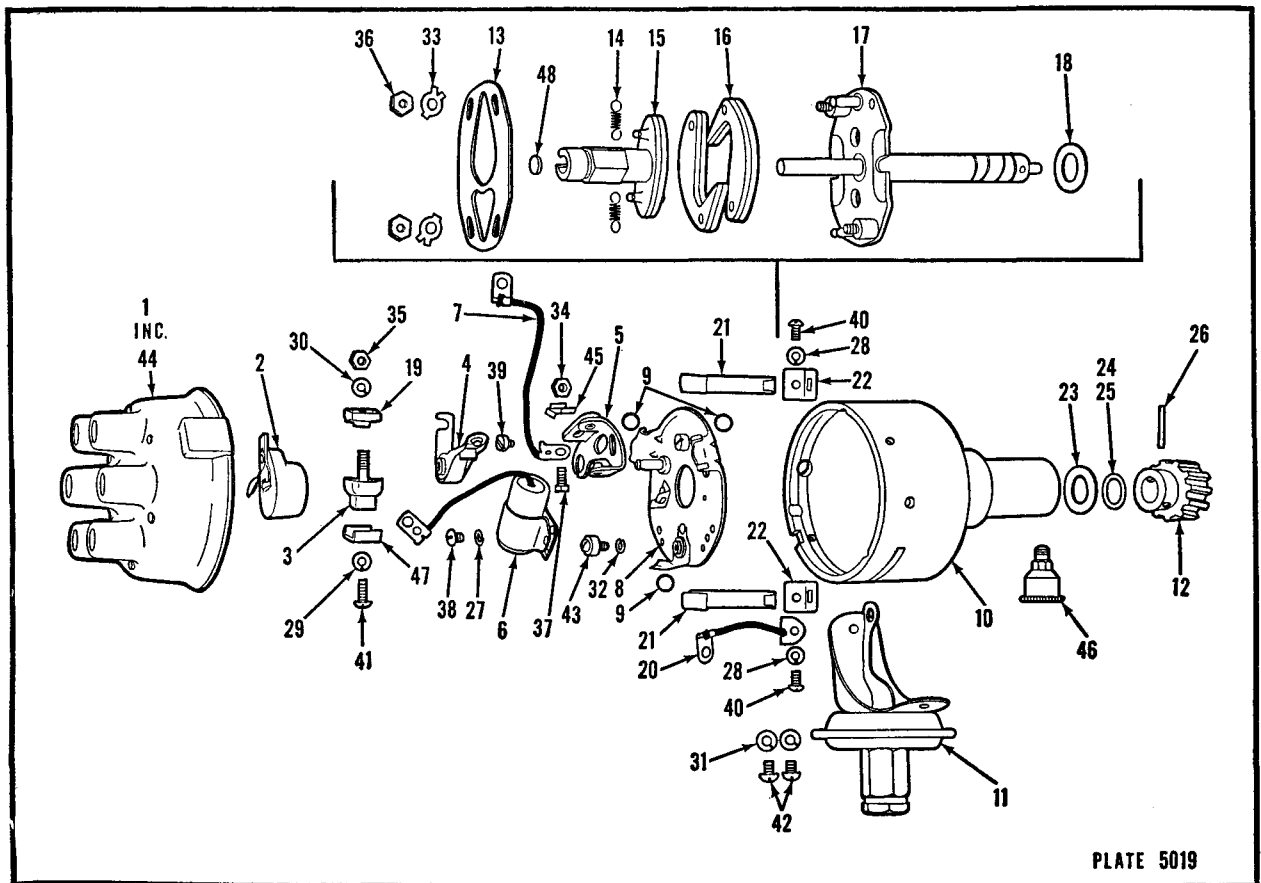

Illustrations are of Typical Parts only. For parts not numbered, or illustrated see Minor Parts Section.

▲ Model No.	Cap	Rotor	Stud — Terminal	Breaker Lever	Contact & Support	Con- denser	Lead — Terminal Con- nector	Plate — Breaker	Ball	Housing	Vacuum Control	Collar, Coupling or Gear	Plate — Weight Hold Down
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110201	1842714	1849504	1853625	813238	1938330	1881030	1865978	1866028	145639	1867867	□681-V	809673	1885557
1110202	1867722	820445	"	"	"	1928111	"	"	"	1866161	□681-M	1858578	
1110203	824735	"	"	"	"	"	"	"	"	1866019	□681-K*	1868619	
1110204	"	"	"	"	"	"	"	"	"	1872556	†1116008	809673	
1110205	"	"	"	"	1871865	1860020	"	1914449	"	1872648	□681-W	1840500	
1110206	"	"	"	"	"	1928111	"	"	"	1873028	□681-V	1837949	
1110209	"	"	"	"	1938330	"	"	1866028	"	1872556	†1116008	809673	
1110210	"	"	"	"	"	"	"	"	"	1866161	□681-M	1856578	
1110211	"	"	"	"	1871865	"	"	1914449	"	1871570	†1116008	1840500	
1110212	1872832	"	"	"	"	"	"	"	"	"	"	"	
1110213	824735	"	"	"	1938330	"	"	1866028	"	1866482	†1116035	1859325	
1110214	"	"	"	"	"	"	"	"	"	"	†1116039	"	
1110216	"	"	"	"	1871865	"	"	1914449	"	1885672	†1116092	1885679	1885557
1110217	1911597	"	"	"	1938330	"	"	1866028	"	1866161	□681-M	1858578	

□For parts see Distributor Vacuum Control—Group 3.

†For parts see Distributor Vacuum Control—Group 4.


*Collar & Shaft Extension.

▲Models 1110219-20-21-22-23-24 moved to Distributor Group 86-A.

○Contact Set No. 1938330.

*Contact Set No. 1938340.

Delco-Remy SERVICE PARTS CATALOG

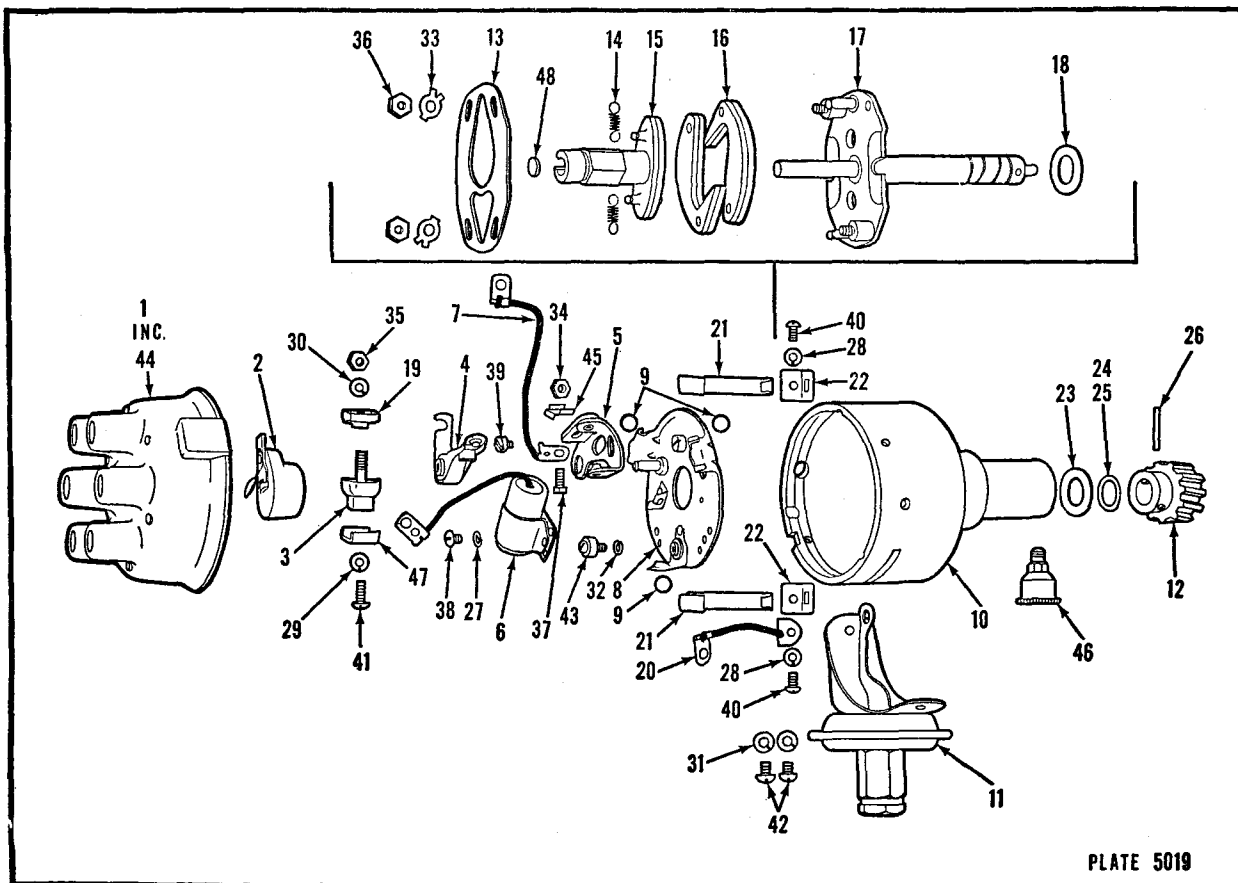


Illustrations are of Typical Parts only. For parts not numbered, or illustrated see Minor Parts Section.

Model No.	Spring — Weight	Cam	Weight	Shaft & Plate	Washer	Bushing — Insul. — Inside	Lead — Breaker Plate Ground	Spring — Cap	Support	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Pin
	14	15	16	17	18	19	20	21	22	23	24	25	26
1110201	1884136	1866601	1880902	1863222	811912	1865985	1879140	1871838	1847289	811912	810074	1912129	1857492
1110202	1887743	1867181	1863143	1866886	"	"	"	"	"	"	"	"	1862218
1110203	818494	1869156	818222	1869155	"	"	"	"	"	"	"	"	"
1110204	1884929	1866163	"	1872558	"	"	1881531	"	"	811912	"	"	1857492
1110205	823238	1871574	"	1871572	"	"	"	"	"	"	"	"	"
1110206	818223	1873033	813100	1873030	"	"	"	"	"	"	"	"	815003
1110209	1886302	1873216	1880436	1873215	"	"	"	"	"	"	"	"	1857492
1110210	1887743	1867181	1863143	1866886	"	"	1879140	"	"	"	"	"	1862218
1110211	1922250	1871574	818222	1871572	"	"	1881531	"	"	811912	"	"	1857492
1110212	1883509	"	"	"	"	"	"	"	"	"	"	"	"
1110213	1886227	1869568	1863143	1886292	"	"	1879140	"	"	"	"	"	1862218
1110214	1887743	1866163	818222	"	"	"	"	"	"	"	"	"	"
1110216	1911484	1885677	1881371	1885675	"	"	"	"	"	811912	"	"	"
1110217	1887743	1867181	"	1866886	"	"	"	"	"	"	"	"	"

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
27	Lock Washer—Condenser Attaching Screw -----	453844	1110201-2-3-4-5-6-9-10-11-12-13-14-16-17
—	Lock Washer—Condenser Terminal Nut -----	118869	1110205
—	Lock Washer—Condenser Terminal Screw -----	118869	1110201
28	Lock Washer—Cap Spring Support Screw -----	453844	1110201-2-3-4-5-6-9-10-11-12-13-14-16-17
—	Lock Washer—Distributor Housing Plug Screw ----	453844	1110201
—	Lock Washer—Felt Wick Spring -----	9421423	1110206
29	Lock Washer—Terminal Clamp Screw -----	453844	1110201-2-3-4-5-6-9-10-11-12-13-14-16-17
30	Lock Washer—Terminal Stud Nut (Inside) -----	453844	1110201-2-3-4-5-6-9-10-11-12-13-14-16-17
31	Lock Washer—Vacuum Control Attaching Screw ----	453435	1110201-2-3-4-5-6-9-10-11-12-13-14-16-17
32	Lock Washer—Vacuum Control Arm Attaching Screw --	456413	1110201-2-3-4-5-6-9-10-11-12-13-14-16-17
33	Lock Washer—Weight Hold Down Plate Nut (No. 8) --	1861711	1110201
33	Lock Washer—Weight Hold Down Plate Nut (No. 10) --	1885558	1110201; 16
NUTS			
34	Nut—Breaker Lever Spring Attaching Screw -----	817363	1110201-2-3-4-5-6-9-10-11-12-13-14-16-17
—	Nut—Condenser Terminal -----	817363	1110205
35	Nut—Terminal Stud (Inside) -----	817363	1110201-2-3-4-5-6-9-10-11-12-13-14-16-17
36	Nut—Weight Hold Down Plate (No. 8) -----	121622	1110201
36	Nut—Weight Hold Down Plate (No. 10) -----	1923540	1110201-16
SCREWS			
37	Screw—Breaker Lever Spring Attaching (8-32x $\frac{1}{4}$) --	455927	1110201-2-3-4-5-6-9-10-11-12-13-14-16-17
38	Screw—Condenser Attaching -----	453304	1110202-3-4-6-9-10-11-12-13-14-16-17
38	Screw—Condenser Attaching -----	115607	1110201-5
—	Screw—Condenser Terminal -----	453647	1110201
39	Screw—Contact Attaching -----	1914916	All
40	Screw—Cap Spring Support -----	453647	1110201-2-3-4-5-6-9-10-11-12-13-14-16-17
—	Screw—Distributor Housing Plug -----	453304	1110201
—	Screw—Felt Wick Spring -----	142424	1110206
—	Screw—High Tension Terminal—Side -----	1860406	1110212
—	Screw—High Tension Terminal—Center -----	1860407	1110212
41	Screw—Terminal Clamp -----	453461	1110201-2-3-4-5-6-9-10-11-12-13-14-16-17
42	Screw—Vacuum Control Attaching (10-32x $\frac{1}{4}$) -----	453463	1110201-2-3-4-5-6-9-10-11-12-13-14-16-17
43	Screw—Vacuum Control Arm Attaching— To Breaker Plate -----	453460	1110201-2-3-10-13-14-17
43	Screw—Vacuum Control Arm Attaching— To Breaker Plate -----	1872646	1110204-5-6-9-11-12-16
WASHERS			
—	Washer—Breaker Lever Spring Screw Insul. -----	1865977	1110201-2-3
—	Washer—Breaker Lever Spring Screw Insul. Bushing --	821033	1110201-2-3
—	Washer—Breaker Lever Spring Attaching Screw— Plain -----	810794	1110201-2-3
—	Washer—Breaker Plate Ground Spring -----	1865983	1110202-3-10
—	Washer—Weight -----	807295	1110201-2-3-4-5-6-9-10-11-12
MISCELLANEOUS			
—	BEARING—Bkr. Plate (Bakelite) -----	1914344	All Clockwise
—	BEARING—Bkr. Plate (Bakelite) -----	1914347	All Counterclockwise
—	BREATHING PIPE -----	1860880	1110202-3
—	BUSHING—Distributor Housing -----	1874335	1110201-2-10-17
—	BUSHING—Distributor Housing -----	1909003	1110216
44	Carbon BUTTON—Distributor Cap ($\frac{1}{8}$ Dia.) -----	806923	1110201-12
44	Carbon BUTTON—Distributor Cap ($\frac{1}{4}$ Dia.) -----	1938193	1110202-3-4-5-6-9-10-11-12-13-14-16-17
—	CLAMP—Vacuum Control -----	1865984	1110201-2-3-4-5-6-9-10-11-12-13-14
45	CLIP—Breaker Lever Spring Screw Lock -----	1868992	1110201-2-3-4-5-6-9-10-11-12-13-14-16-17
46	Grease CUP -----	1955293	1110201-2-3-4-5-9-10-11-12-13-14-17
—	LEAD—Condenser -----	1871681	1110201-5
—	Pipe PLUG -----	125947	1110216
—	Shaft EXTENSION -----	1866484	1110213-14
—	SPRING—Shaft Extension -----	1859326	1110213-14
47	Terminal CLAMP -----	26153	1110201-2-3-4-5-6-9-10-11-12-13-14-16-17
48	WICK FELT—In Cam -----	1963555	1110201-2-3-4-5-6-9-10-11-12-13-14-16-17
—	WICK—Felt—In Housing -----	823551	1110206
—	Wick SPRING—In Housing -----	823550	1110206

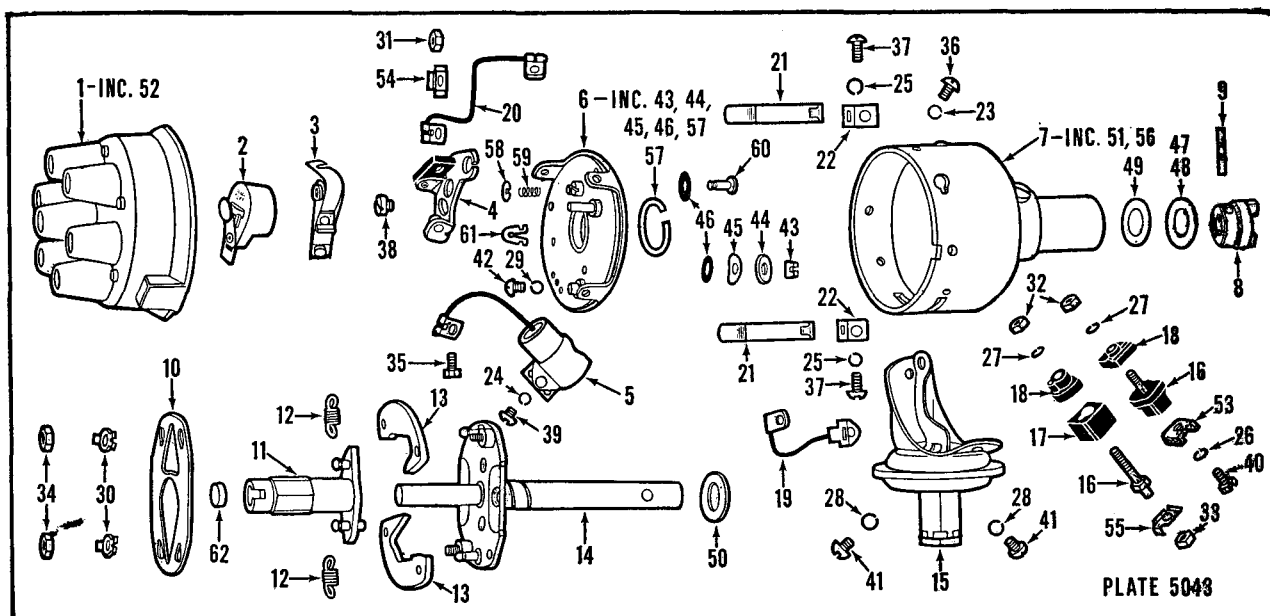

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model	Cap	Rotor	Lever — Breaker	Contact & Support	Con- denser	Plate — Breaker	Housing	Coupling — Collar or Gear	Pin	Plate — Weight Hold Down	Cam
	1	2	3	4	5	6	7	8	9	10	11
1110219.....	1911597	820445	a 813238	a1938330	1928111	1912783	1912602	821865	1862218	1885557	1912605
1110220.....	824735	820445	"	"	"	"	1913877	"	"	"	1913882
1110221.....	"	"	"	"	"	"	1914313	1859325	"	"	1915699
1110222.....	"	"	"	"	"	"	1912602	821865	"	"	1912605
1110223.....	"	"	b	b1871865	"	1915300	1915279	"	"	"	1915284
1110224.....	"	"	a	a1938330	"	1912783	1913877	809673	829421	"	1913882
1110225.....	"	"	b	b1871865	"	1915300	1917653	1917664	"	"	1915284
1110227.....	"	"	"	"	"	"	"	1920914	1857502	"	"
1110229.....	"	"	a	a1938330	"	1912783	1913877	821865	1862218	"	1913882
1110230.....	811735	"	a	a	"	"	1923152	"	"	"	1923157
1110231.....	824735	"	"	"	"	"	1923144	"	"	"	1923149
1110232.....	"	"	"	"	"	"	1912602	"	"	"	1913882
1110233.....	"	"	"	"	"	"	"	"	"	"	1925858
1110234.....	1924248	1924245	c1917254	c	"	"	1927351	"	"	"	1927356
1110235.....	"	"	"	"	"	"	"	"	"	"	1927380
1110237.....	824735	820445	a 813238	a1938330	"	"	1913877	809673	829421	"	1913882
1110241.....	1931512	1924245	d1917254	d1871865	"	1915300	1931084	1920914	1857502	"	1931082
1110242.....	"	"	c	a1938330	"	1912783	1933496	1962708	"	"	1933493
1110244.....	"	"	c	c	"	"	"	"	"	"	1938203
1110246.....	"	"	c	c	"	"	"	"	"	"	1941843
1110249.....	824735	820445	a 813238	a	"	"	1947431	809673	829421	"	1947260
1110251.....	"	"	a	a	"	"	1947383	821865	1862218	"	1913882
1110252.....	1945360	1945369	o	o	"	1945373	1951739	1962053	273436	"	1945365
1110253.....	811735	820445	a 813238	a1938330	"	1912783	1913877	809673	829421	1885557	1947430
1110255.....	"	"	a	a	"	"	1947383	821865	1862218	"	1923157
1110256.....	1945360	1945369	o	o	"	1945373	1951739	1962053	273436	"	1951224
1110257.....	"	"	o	o	"	"	"	"	"	"	1945365
1110258.....	"	"	o	o	"	"	"	"	"	"	"
1110259.....	"	"	o	o	"	"	"	"	"	"	"
1110260.....	"	"	o	o	"	"	"	"	"	"	"
1110264.....	824735	820445	a 813238	a1938330	"	1912783	1952707	"	"	1885557	1952706
1110265.....	811735	"	a	a	"	"	1923144	1952953	273436	"	1952951
1110274.....	1955817	1940123	c1917254	c	"	1930585	1935926	1952569	455862	"	1955816
1110275.....	1945360	1945369	o	o	"	1945373	1951739	1962053	273436	"	1951224
1110276.....	824735	820445	a 813238	a1938330	"	1912783	1952707	"	"	1885557	1952706

*Must be purchased separate.
a-Contact set No. 1938330.

b-Contact set No. 1916636.
c-Contact set No. 1938330.

d-Contact set No. 1924499.
o-Contact set No. 1945376.

Delco-Remy SERVICE PARTS CATALOG

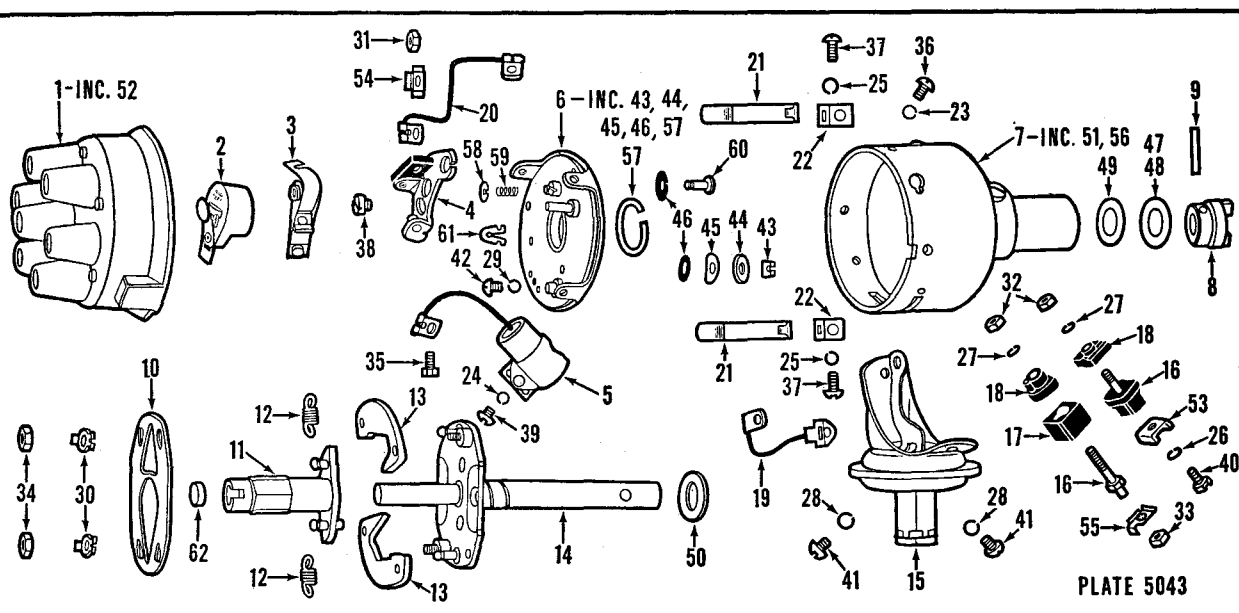

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Spring 12	Weight 13	Shaft & Plate 14	Vacuum Control 15	Stud — Terminal 16	Bushing — Terminal Outside 17	Bushing — Terminal Inside 18	Lead — Breaker Plate Ground 19	Lead — Terminal Connector 20	Spring — Cap 21	Support 22
1110219.....	1887743	1881371	1912607	†1116051	1853625		1912229	1879140	1865978	1871838	1847289
1110220.....	1913883	1880902	1913880	†1116052	1916806	1914142	"	"	"	"	"
1110221.....	1886558	"	1914316	†1116121	"	"	"	"	"	"	"
1110222.....	1887743	1881371	1912607	†1116051	"	"	"	"	"	"	"
1110223.....	1915231	"	1915282	†1116044	"	"	"	"	"	"	"
1110224.....	1916297	1880902	1915560	†1116054	"	"	"	"	"	"	"
1110225.....	1911484	1881371	1917656	†1116044	"	"	"	"	"	"	"
1110227.....	"	"	"	"	"	"	"	"	"	"	"
1110229.....	1916297	1880902	1923111	†1116092	"	"	"	"	"	"	"
1110230.....	1923139	"	1923155	†1116121	"	"	"	"	"	"	"
1110231.....	1923140	1881371	1923147	†1116092	"	"	"	"	"	"	"
1110232.....	1925251	1880902	1925242	†1116051	"	"	"	"	"	"	"
1110233.....	1925574	1881371	1925857	"	"	"	"	"	"	"	"
1110234.....	1925251	1880902	1927354	†1116079	"	"	"	1922429	"	"	"
1110235.....	1925574	1881371	"	"	"	"	"	"	"	"	"
1110237.....	1916297	1880902	1929478	†1116054	"	"	"	1879140	"	"	"
1110241.....	1915231	1881371	1931080	†1116092	"	"	"	1922429	"	"	"
1110242.....	1903101	"	1933491	†1116099	"	"	"	"	"	"	"
1110244.....	1916230	"	1938202	†1116121	"	"	"	"	"	"	"
1110246.....	1900232	"	1941842	†	"	"	"	"	"	"	"
1110249.....	1921908	"	1929478	†1116160	"	"	"	1879140	"	"	"
1110251.....	1922250	1880902	1947381	†1116052	"	"	"	"	1946254	"	"
1110252.....	1928363	"	1945363	†1116177	"	"	"	1932002	"	1945756	"
1110253.....	1883373	1881371	1916519	†1116160	1916806	1914142	1912229	1879140	1865978	1871838	1847289
1110255.....	1887553	1880902	1923155	†1116052	"	"	"	"	"	"	"
1110256.....	1951743	1881371	1951222	□1116177	"	"	"	1932002	1946254	1945756	"
1110257.....	1882995	1924737	1951158	□	"	"	"	"	"	"	"
1110258.....	1928363	1880902	1945363	□	"	"	"	"	"	"	"
1110259.....	1943041	1881371	1951222	□	"	"	"	"	"	"	"
1110260.....	1882995	1924737	1951158	□	"	"	"	"	"	"	"
1110264.....	1883874	"	1952704	□1116180	1916806	1914142	1912229	1879140	1865978	1871838	1847289
1110265.....	1946722	1881371	1952949	†1116099	"	"	"	"	1930587	1909594	"
1110274.....	1916848	"	1927388	"	"	"	"	"	1946254	1945756	"
1110275.....	1955764	1880902	1955763	□1116177	"	"	"	1932002	1865978	1871838	"
1110276.....	1932221	"	1955776	□1116180	1916806	1914142	1912229	1879140	"	"	"

†For parts see Distributor Vacuum Control—Group 4.

□Serviced by complete replacement.

arts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Breaker Plate Support Screw -----	453844	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-6
24	Lock Washer—Condenser Attaching Screw -----	453844	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-6
25	Lock Washer—Cap Spring Support Screw -----	453844	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-6
26	Lock Washer—Terminal Clamp Screw -----	453844	1110219
27	Lock Washer—Terminal Nut (Inside) -----	453844	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-6
28	Lock Washer—Vacuum Control Attaching Screw ..	453435	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 76
29	Lock Washer—Vac. Cont. Arm Screw (to bkr. plate)	456413	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 76
30	Lock Washer—Weight Hold Down Plate Nut -----	1885558	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-6
NUTS			
31	Nut—Breaker Lever Spring Screw -----	817363	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-6
32	Nut—Terminal Stud (Inside) -----	817363	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-6
33	Nut—Terminal Stud (Outside) -----	120622	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-6
34	Nut—Weight Hold Down Plate -----	1923540	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-6
SCREWS			
35	Screw—Breaker Lever Spring -----	454533	1110252-6-7-8-9; 60; 75
35	Screw—Breaker Lever Spring Attaching -----	455957	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-6
36	Screw—Breaker Plate Support -----	453418	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-6
37	Screw—Cap Spring Support (8-32x $\frac{3}{8}$) -----	453461	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-5-6
37	Screw—Cap Spring Support (8-32x $\frac{1}{8}$) -----	454408	1110229; 37; 41-2-4-6-9; 51-3-5; 64-5; 76
38	Screw—Contact Attaching -----	1914916	All
39	Screw—Condenser Attaching -----	453304	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 76
39	Screw—Condenser Attaching -----	454458	1110252-6-7-8-9; 60; 75
39	Screw—Condenser Attaching -----	9413245	1110274
—	Screw—Ground Lead Attaching -----	1943386	1110252-6-7-8-9; 60; 75
—	Screw—(& Lock Washer) Rotor Attaching -----	9415507	1110252-6-7-8-9; 60; 75
40	Screw—Terminal Clamp -----	453461	1110219
41	Screw—Vacuum Control Attaching -----	1931494	1110252-6-7-8-9; 60; 75
41	Screw—Vacuum Control Attaching -----	453463	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 76
42	Screw—Vacuum Control Arm Attaching to Bkr Plate	453460	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 76
WASHERS			
43	Washer—Clamp—Under Bkr. Plate -----	1869357	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 76
43	Washer—Felt—Under Breaker Plate -----	1932418	1110252-6-7-8-9; 60; 75
44	Washer—Shim—Under Bkr. Plate (.010 thk.) -----	1912225	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 76
45	Washer—Spring—Under Bkr. Plate -----	1912227	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 76
46	Washer—Fibre—Under Bkr. Plate -----	1912224	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 76
47	Washer—Shim (.005 thk.) -----	810074	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 65
47	Washer—Shim (.005 thk.) -----	1927530	1110264; 74-6
48	Washer—Shim (.001 thk.) -----	1927529	1110264; 74-6
48	Washer—Shim (.010 thk.) -----	1912129	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 65
49	Washer—Space—Under Coupling or Gear -----	811912	1110220-3-4-5-7-9; 30-1-6-7; 41-2-4-6-9; 51-3-5; 65
49	Washer—Space—Under Coupling or Gear -----	1945776	1110274
50	Washer—Space—Under Weight Plate -----	811912	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-6

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
—	Washer—Under Oil Seal -----	1849806	1110264; 76
—	Washer—Thrust -----	1946238	1110252-6-7-8-9; 60; 75-6
—	Washer—Thrust—Under Base -----	1949806	1110252-6-7-8-9; 60; 75
MISCELLANEOUS			
—	BRACKET—Condenser -----	1869573	1110274-6
—	BRACKET—Condenser -----	1944118	1110252-6-7-8-9; 60; 75
51	BUSHING—Dist. Housing -----	1909003	1110220-3-4-5-7-9; 30-1-7; 41-2-4-6-9; 51-3-5; 64-5; 76
51	BUSHING—Dist. Housing -----	1874335	1110219; 22; 32-3-4-5
51	BUSHING—Dist. Housing (Lower) -----	1910436	1110225-7; 41-2-4-6
51	BUSHING—Dist. Housing (Upper) -----	1923250	1110274
51	BUSHING—Dist. Housing (Lower) -----	1927386	1110274
52	BUTTON—Carbon—In Cap -----	1938193	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-2-3-5-6-7-8-9; 60; 64-5; 75
53	CLAMP—Terminal -----	26153	1110219
54	CLIP—Lock—Breaker Lever Screw -----	1868992	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-6
54	CLIP—Lock—Breaker Lever Screw -----	1945380	1110252-6-7-8-9; 60; 75
55	CLIP—Lock—Terminal -----	1914144	1110220-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-6
—	CLIP—Terminal (Inner) -----	1916333	1110220
—	CLIP—Terminal (Outer) -----	1916334	1110220
—	CUP—Grease -----	1955293	1110219; 21-2; 32-3-4-5
—	EXTENSION—Shaft -----	1866484	1110221
—	GROMMET—For Primary Lead -----	1932023	1110252-6-7-8-9; 60; 75
—	INSULATOR—Breaker Lever Spring Screw -----	1945381	1110252-6-7-8-9; 60; 75
—	OILER -----	113702	1110252-6-7-8-9; 60; 74-5
—	OILER & (Tube Assem.) -----	1922265	1110274
—	PIN—Under Shaft—Thrust Washer -----	455862	1110264; 75-6
—	PIN—Under Shaft—Thrust Washer -----	273436	1110252-6-7-8-9; 60; 75
56	PLUG—Pipe—In Housing -----	125947	1110220-3-5-7-9; 30-1-7; 41-2-4-6-9; 51-3-5; 64-5; 76
57	RETAINER—Breaker Plate -----	1912614	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-5-6-9; 51-3-5; 64-5; 76
—	SEAL—OIL -----	1885665	1110264; 76
—	SLEEVE—Spring Post -----	1945548	1110275
—	SUPPORT—Terminal Connector Lead -----	1919352	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 76
—	SPRING—Breaker Plate Retainer -----	1932024	1110252-6-7-8-9; 60; 75
—	SPRING—Breaker Plate Retainer -----	1956213	1110276
—	SPRING—Shaft Extension Retainer -----	1859326	1110221
—	SPRING—Side Pressure -----	1941544	1110219; 20-1-2-3-4-5-7; 32-3-4-5-7; 41-2-4
62	WICK—Felt—In Cam -----	819639	1110219; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-7; 41-2-4-6-9; 51-3-5; 64-5; 74-6

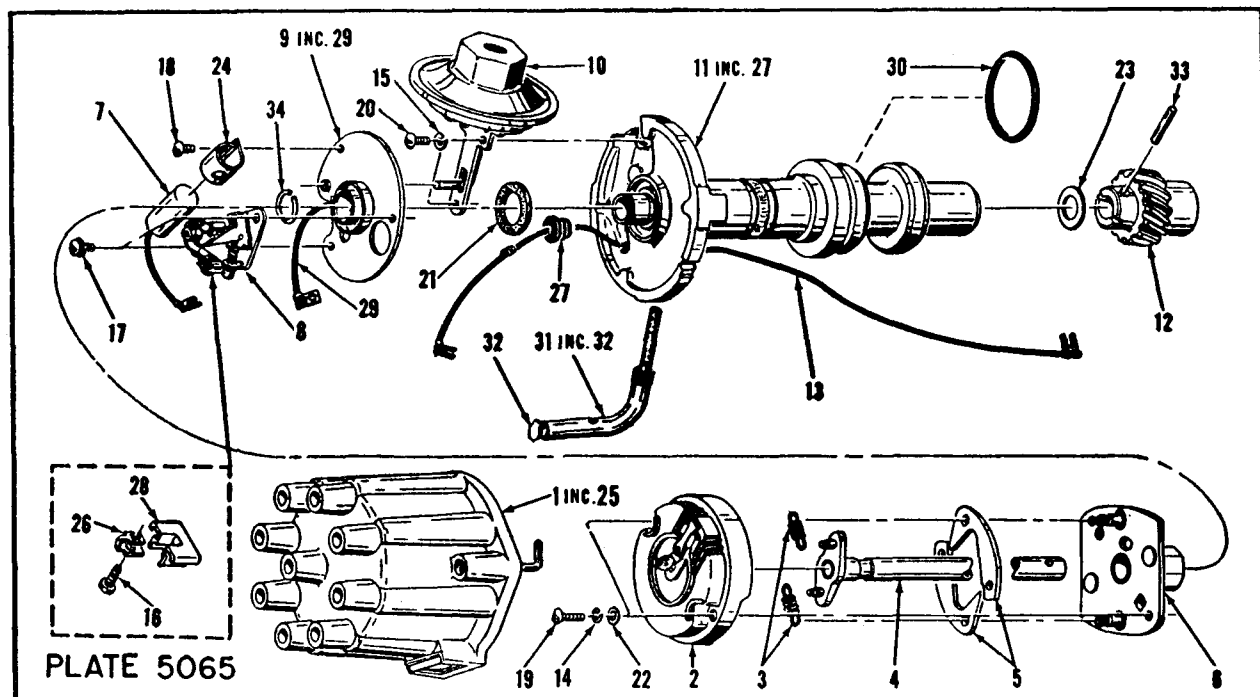

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110248	1952738	1932015	1886967	1945833	1881371	1945932	1932004	1931988	1962141	†1116118	1945937	1945934	1942518
1110250	"	"	1939381	1957377	"	1947367	1928111	1948671	"	"	1947363	"	"
1110254	1950680	1932015	1884610	1961752	1881371	1950678	1932004	1931988	1962141	†1116163	1957463	1952569	"
1110261	1950680	1932015	1885339	1950998	1881371	1952561	"	"	"	"	"	"	"
1110262	1952738	"	1954349	1945833	"	1945932	"	"	"	†1116118	1945937	1945934	"
1110263	"	"	1939381	1957377	"	1947367	1928111	1948671	"	"	1947363	"	"
1110266	1950680	"	1943070	1954872	"	1953445	1932004	1931988	1962141	†1116118	1945828	1945234	"
1110270	"	"	1916848	1954679	"	1954680	1928111	"	1953752	"	1954707	1952569	"
1110277	1952738	1932015	1886967	1957324	1881371	1957378	"	"	"	"	1947363	1945934	"
1110279	"	"	1939381	1957377	"	"	1932004	"	1962141	†1116206	1967562	1952569	"
1110282	1950680	"	1958395	1960772	1881371	1950678	"	1948671	"	"	"	1945934	"
1110283	"	"	1885339	1950998	"	1952561	"	1931988	"	†	"	"	"
1110286	1957693	1957684	1958122	1958120	"	1957686	1928111	1948671	1957689	†1116182	1957691	1950570	1957695
1110287	1958104	1932015	1943070	1945872	"	1953445	1932004	"	1962141	†1116118	1945828	1945234	1942518
1110291	1957693	1957684	1916848	1960754	"	1965602	1928111	"	1957689	1116182	1957691	1950570	1957695
1110309	"	"	1938064	1950976	"	1963631	"	1931988	"	†1116163	"	"	1963575
1110322	"	"	"	1963900	"	1957686	"	"	"	"	"	"	"
1110335	"	"	1965699	1965601	1880902	1965602	"	"	"	†1116182	"	"	1948568
1110342	"	"	1938064	1963900	1881371	1957686	"	"	"	†	"	1950570	1963575
1110376	1967286	"	"	"	"	1967285	1932004	"	1846122	†1116163	1967025	"	1846199

†Service by complete replacement.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
14	Lock Washer—Rotor Attaching Screw.....	453435	1110248; 50-4; 61-2-3-6; 70-7-9; 82-3-6-7; 91; 322; 35; 342; 76
15	Lock Washer—Vacuum Control Attaching Screw.....	453844	1110248; 54; 61-2-6; 82-3-7
15	Lock Washer—Vacuum Control Attaching Screw.....	9418565	1110342
SCREWS			
16	Screw—Breaker Lever Spring Attaching.....	9417096	1110248; 50-4; 61-2-3-6; 70-7-9; 82-3-6-7; 91; 309; 22
—	Screw—Contact Adjusting.....	1949844	1110248; 50-4; 61-2-3-6; 70-7-9; 82-3-6-7; 91; 309; 22
17	Screw (& Lock Washer)—Contact Assembly Attaching.....	1938527	1110248; 50-4; 61-2-3-6; 70-7-9; 82-3-6-7; 91; 309; 22; 35; 42; 76
18	Screw—Condenser Clamp Attaching.....	453647	1110248; 54; 61-2-6; 82-3-6-7; 91; 309; 22; 35; 42; 76
18	Screw—Condenser Clamp Attaching.....	453418	1110250; 63; 77-9
18	Screw—Condenser Clamp Attaching.....	454458	1110270
19	Screw—Rotor Attaching.....	9416183	1110248; 50-4; 61-2-3-6; 70-7-9; 82-3-6-7; 91; 309; 22; 35; 42; 76
20	Screw—Vacuum Control Attaching.....	453461	1110248; 54; 61-2-6; 82-3
20	Screw—Vacuum Control Attaching.....	111688	1110286
20	Screw—Vacuum Control Attaching.....	1927193	1110287
20	Screw—Vacuum Control Attaching.....	9418834	1110291; 309; 22; 35; 42
WASHERS			
21	Washer—Felt—Under Breaker Plate.....	1951099	1110248; 61-2-6; 87
21	Washer—Felt—Under Breaker Plate.....	1951099	1110282-3-6; 91; 309; 22; 35; 42; 76
23	Washer—Thrust.....	1950682	1110254; 61; 70; 82-3
23	Washer—Thrust—Under Base.....	1837617	1110286; 91; 309; 22; 35; 76
MISCELLANEOUS			
—	BLOCK—Drive Gear Cushion.....	1908028	1110248; 62-3; 77-9
24	BRACKET—Condenser.....	1869573	1110248; 50-4; 61-2-6; 77-9; 82-3-6-7; 91; 309; 22; 35; 42; 76
24	BRACKET—Condenser.....	1944118	1110256-7
25	BRUSH—In Cap.....	1938193	1110248; 50; 61-2-3-6; 70-7-9; 82-3-6-7; 91; 309; 22; 35; 42; 76
—	BUTTON—In Weight Base.....	1957329	1110277-9
26	CLIP—Breaker Lever Spring Screw.....	1931998	1110248; 50-4; 61-2-3-6; 70-7-9; 82-3-6-7; 91; 322
—	CUSHION—Drive Gear.....	1908029	1110248; 50; 62-3; 77-9
27	GROMMET—For Primary Lead.....	1932023	1110248; 50; 61-2-3-6; 70-7-9; 82-3-6-7; 91; 309; 22; 35; 42; 76
28	INSULATOR—Breaker Lever Spring Screw.....	1931997	1110248; 50-4; 61-2-3-6; 70-7-9; 82-3-6-7; 91; 309; 22
29	LEAD—Breaker Plate Ground.....	1932002	1110248; 61-2-6; 82-3-6-7; 91; 309; 22; 35; 42; 76
—	“O” RING—On Shaft.....	1959331	1110286; 91; 309; 22; 35; 76
*31	OILER Assembly.....	1922265	1110248; 50; 62-3-6; 77-9; 87
31	OILER Assembly.....	1931982	1110254; 61; 70
32	OILER.....	113702	1110248; 50; 61-2-3-6; 70-7-9; 87
—	PIN—Dowel.....	1938856	1110250; 63; 77-9
33	PIN—Gear.....	1908031	1110248; 50; 62-3; 77-9
33	PIN—Gear.....	273436	1110256;
33	PIN—Gear.....	455862	1110254; 61; 70; 82-3-6; 91; 309; 322; 35; 42; 76
33	PIN—Gear.....	455481	1119266; 87
—	RETAINER—Breaker Lever Spring Screw.....	1938376	1110248; 50-4; 61-2-3-6; 70-7-9; 82-3-6-7; 91; 309; 22
—	RETAINER—Gear Cushion.....	1908030	1110248; 50; 62-3; 77-9
—	SEAL—Lubrication—In Base.....	1950569	1110282-3-6; 91; 309; 22; 35; 42; 76
—	SLEEVE—Spring Post.....	1945548	1110266; 82-3-6-7; 91; 35
—	SLEEVE—Spring Post.....	1961234	1110277-9
—	SPRING—Breaker Plate Retainer.....	1932024	1110248; 54; 61-2-6; 81-2-6-7; 309; 22; 35; 42; 76
34	—	—	—
—	SPRING—Contact Adjusting.....	1931995	1110248; 50-4; 61-2-3-6; 70-7-9; 82-3-6-7; 91; 309; 22

*If oiler hole in base is $\frac{3}{16}$ " dia.—not tapped; use 113702 only.

Delco-Remy

SERVICE PARTS CATALOG

DISTRIBUTOR—Group 86-C

Revised to June 1, 1969

Page 1

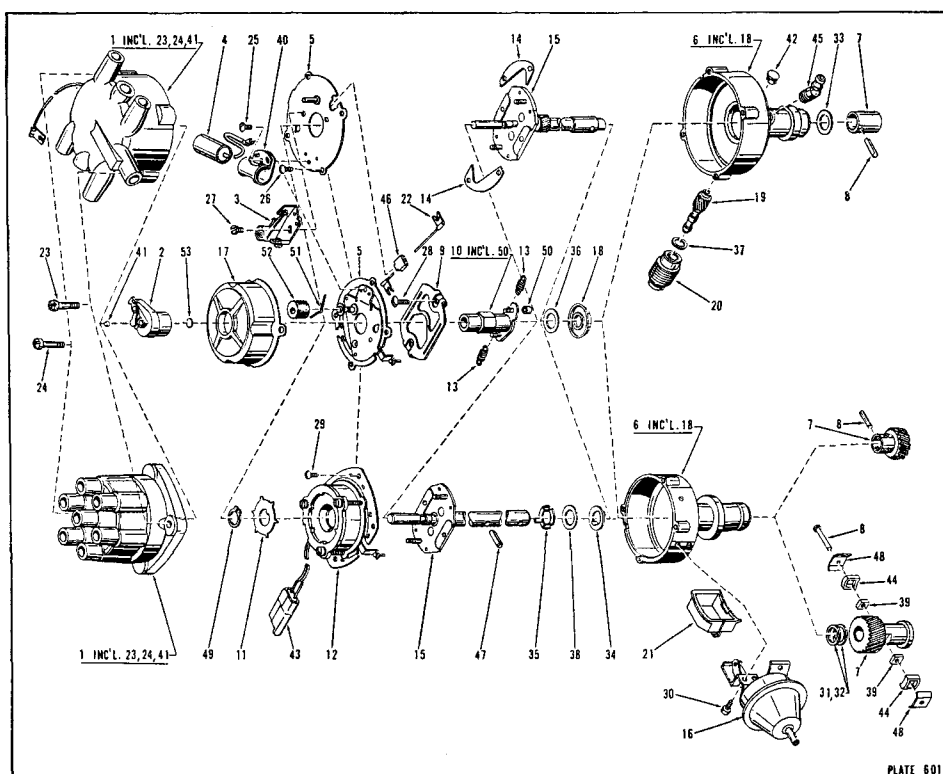



PLATE 6013

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Contact Assem.	Con- denser	Plate Breaker	Housing	Coupling Collar or Gear	Pin	Plate Weight Hold Down	Cam	Pole Piece Rotor
	1	2	3	4	5	6	7	8	9	10	11
1110267.....	1954569	1954566	1954557	1928111	1961428	1954539	1962052	274795	1954548	1954584	
1110268.....	800059	"	"	"	"	"	"	"	"	1954610	
1110269.....	1954569	"	"	"	"	1954579	1962053	273436	"	1954584	
1110271.....	"	"	"	"	"	"	"	"	"	1954890	
1110272.....	"	"	"	"	"	"	"	"	"	1954886	
1110278.....	"	"	"	"	"	1954579	"	"	"	1957282	
1110280.....	1963556	"	"	"	"	1954539	1962052	454512	"	1961236	
1110281.....	1954569	1971326	"	"	1961429	1960876	"	"	"	1961067	
1110284.....	800059	1954566	"	"	"	1957760	1952569	455862	"	1957768	
1110285.....	"	"	"	"	"	"	"	"	"	1957734	
1110289.....	1963556	"	"	"	1961428	1959711	1962708	454512	"	1959717	
1110290.....	1954569	"	"	"	"	1954579	1962053	9417392	"	1960200	
1110292.....	800059	"	"	"	"	1954539	1962052	454512	"	1954610	
1110293.....	1963556	"	"	"	"	"	"	"	"	1954584	
1110294.....	1954569	"	"	"	"	1954579	1962053	9417392	"	"	
1110295.....	"	"	"	"	"	"	"	"	"	1954890	
1110296.....	"	"	"	"	"	"	"	"	"	1954886	
1110297.....	"	"	"	"	"	"	"	"	"	1957282	
1110298.....	"	"	"	"	"	"	"	"	"	1960200	
1110299.....	1963556	"	"	"	"	1961361			"	1961365	
1110300.....	800059	"	"	"	"	1957760	1952569	455862	"	1957734	
1110302.....	1954569	1971326	"	"	1961429	1960876	1962052	454512	"	1961067	
1110305.....	1960810	1954566	"	"	1961428	1962198	1961856	9417392	"	1962203	
1110306.....	1960833	"	"	"	"	"	"	"	"	1962479	
1110307.....	1963556	"	"	"	"	1954539	1962052	454512	"	1962514	
1110308.....	1954569	"	"	"	"	1959711	1959715	"	"	1959717	

Delco-Remy

SERVICE PARTS CATALOG

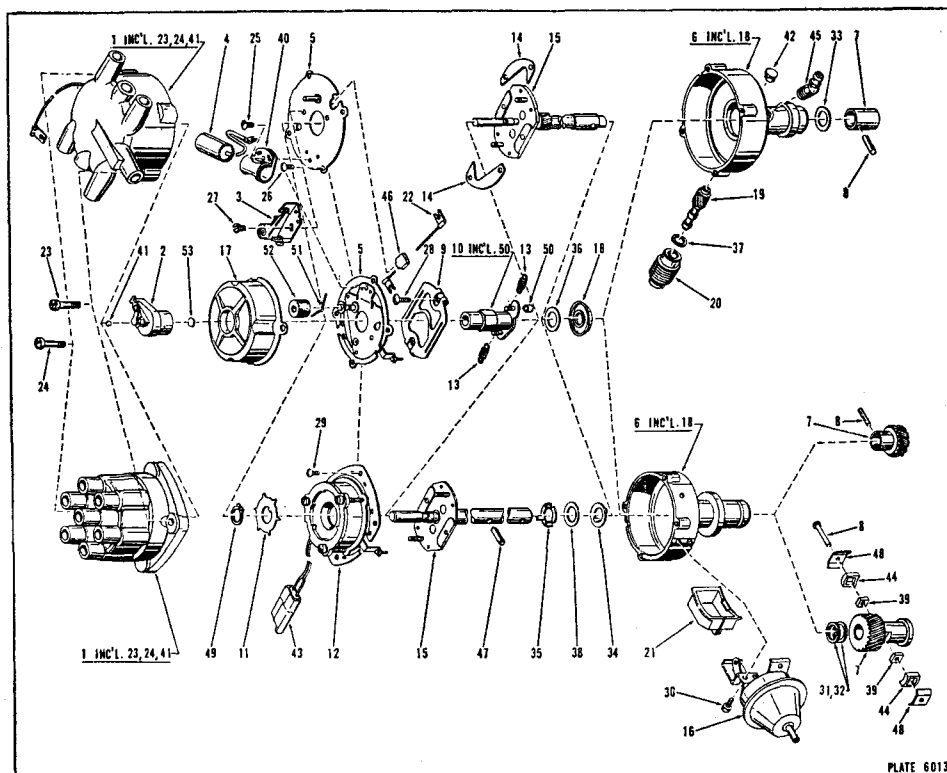

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Coil Assem.	Spring Weight	Weight	Shaft	Vacuum Control	Dust Seal Cover	Seal Housing	Gear & Shaft Tach.	Coupling Tach.	Boot Vacuum Control	Lead Primary
	12	13	14	15	16	17	18	19	20	21	22
1110267		1885636	1880902	1954543	□1116217						1954563
1110268		1912189	1881371	"	□ "						"
1110269		1922381	1880902	1954581	□ "						"
1110271		1883335	1881371	"	□1116200						"
1110272		1882995	1924737	"	□1116217						"
1110278		1955764	1880902	1957280	□1116200						"
1110280		1922426	1881371	1957385	□1116195						"
1110281		1912189	1961068	1967245	□1116211		1920281				"
1110284		1958395	"	1957765	□1116195					1962621	"
1110285		1885339	"	1957775	□ "					"	"
1110289		1957483	1881371	1959718	□1116217					"	"
1110290		1960205	1960203	1960198	□1116224						"
1110292		1912189	1881371	1958594	□1116217						"
1110293		1885636	1880902	1961215	□1116195						"
1110294		1922381	"	1960198	□1116217		1950569				"
1110295		1883335	1881371	"	□1116200						"
1110296		1882995	1924737	"	□1116217						"
1110297		1955764	1880902	1963611	□1116200		1950569				"
1110298		1960205	1960203	1960198	□1116224		"				"
1110299		1942615	1924737	1961364	□1116219					1962621	"
1110300		1885339	1881371	1957775	□1116195					"	"
1110302		1912189	1961068	1967245	□1116217		1920463				"
1110305		1911496	1880902	1962201	□1116219					1962621	"
1110306		1911255	"	1962221	□ "					"	"
1110307		1922426	"	1962512	□1116217						"
1110308		1957483	1881371	1959718	□1116225					1962621	"


□ Serviced by complete replacement.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Ilus. No.	Name	Part No.	Used on Models
SCREWS			
23	Screw—Cap Attaching (#8-32) -----	1954571	All
24	Screw—Cap Attaching (#10-32) -----	1957573	All
25	Screw—Capacitor Bracket Attaching -----	454458	All
26	Screw—Cir. Breaker Plate Attaching -----	453461	All
27	Screw—Contact Adjusting -----	1914916	All
28	Screw—(& L. W.) Hold Down Plate Ataching -----	1954549	All
30	Screw—Vac. Control Attaching -----	453463	1110267-8-9; 71-2-8; 84
30	Screw—Vac. Control Attaching -----	1917123	1110280-1; 90-2-3-4-5-6-7-8-9; 300-2-5-6-7-8
WASHERS			
31	Washer—Shim (.005 Thick) -----	810074	1110289; 99; 305-6-8
32	Washer—Shim (.010 Thick) -----	1912129	1110289; 99; 305-6-8
33	Washer—Space—Under Collar or Gear -----	1837617	1110284-5; 300
33	Washer—Space—Under Collar or Gear -----	811912	1110289; 305-6-8
34	Washer—Tang—Thrust -----	1946238	1110269; 71-2-8; 90-4-5-6-7-8-9
35	Washer—Tang—Housing -----	1960478	1110290-4-5-6-7-8
36	Washer—Thrust—Under Weight Plate -----	811912	1110299; 305-6
36	Washer—Thrust—Under Weight Plate -----	817051	1110281; 302
36	Washer—Thrust—Under Weight Plate -----	1959714	1110289; 308
38	Washer—Space—Tang Washers -----	811912	1110269; 71-2-8; 90-4-5-6-7-8-9
MISCELLANEOUS			
40	BRACKET—Capacitor -----	1944118	All
41	BUTTON—Carbon -----	1938193	All
45	FITTING—Grease -----	271283	1110305-6
46	GROMMET—(Rubber) -----	1954564	All
47	PIN—Tang Washer Retaining -----	273436	1110290-4-5-6-7-8-9
50	SLEEVE—Spring Post -----	1961234	1110281-302
51	SPRING—Circuit Breaker Plate Retainer -----	1956213	All
52	WICK—Oil—Cam Lubricator -----	1961088	1110280-1; 92-3-4-5-6-7-8; 302-5-6-7-8
53	WICK—In Rotor -----	1963555	1110302

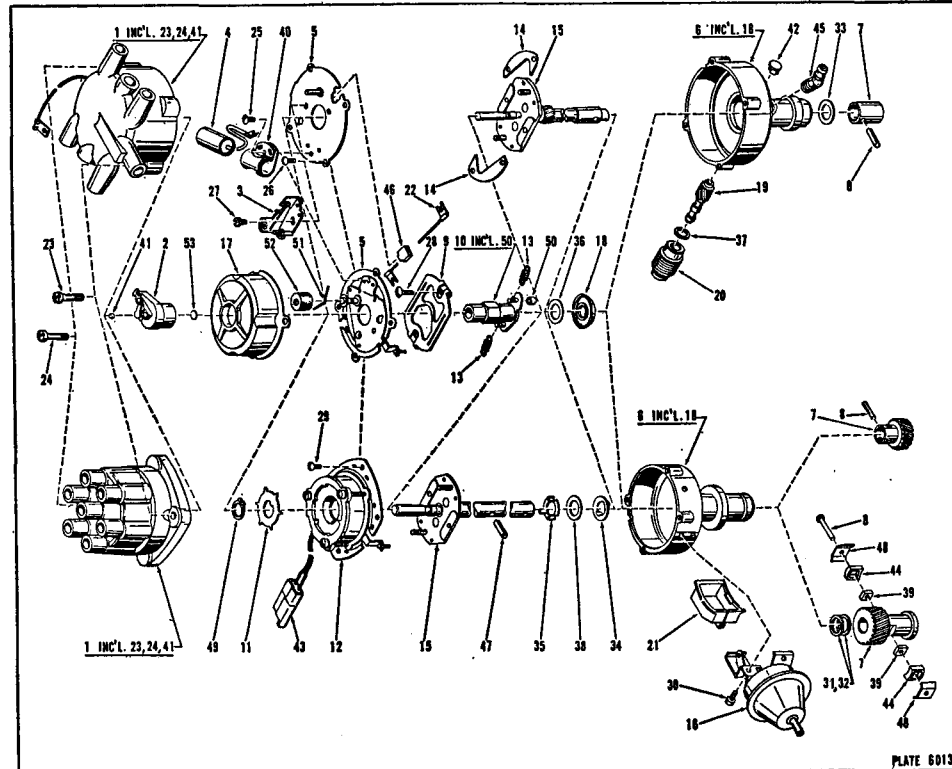


Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Contact Assem.	Con- denser	Plate Breaker	Housing	Coupling Collar or Gear	Pin	Plate Weight Hold Down	Cam	Pole Piece Rotor
	1	2	3	4	5	6	7	8	9	10	11
1110310.....	1954569	1954566	1962640	1928111	1961428	1954579	1962053	9417392	1954548	1954584	
1110311.....	"	"	"	"	"	"	"	"	"	1957282	
1110314.....	"	"	"	"	"	"	"	"	"	1960200	
1110316.....	"	"	1954557	"	"	1954539	1962052	454512	"	1958596	
1110317.....	1971324	1971326	"	"	1961429	1963552	1945934	1908031	"	1963550	
1110318.....	1963556	1961074	"	"	"	1960876	1962052	454512	"	1963681	
1110319.....	1954569	1954566	1962640	"	1961428	1954579	1962053	9417392	"	1963791	
1110320.....	"	"	1954557	"	"	1963904	1963905	454512	"	1958596	
1110321.....	"	"	"	"	"	1954539	1960591	"	"	1964039	
1110323.....	1954606	1963972	"	"	"	"	1962052	"	"	1954610	
1110324.....	1963556	"	"	"	"	"	"	"	"	1954584	
1110325.....	1954569	1954566				1964581	"	"	"	▲1964577	1964582
1110326.....	1963556	1961074				1965154	1954934	1908031	"	▲1965153	"
1110327.....	"	"				1965119	"	"	"	▲1965118	"
1110328.....	"	1954566	1954557	1928111	1961428	1954539	1962052	454512	"	1958596	
1110329.....	1954569	1963972	1962640	"	"	1954579	1962053	9417392	"	1960200	
1110330.....	"	"	"	"	"	"	"	"	"	"	
1110331.....	1963556	1961074	1954557		1961429	1963552	1945934	1908031	"	1965374	
1110332.....	"	"				1965119	"	"	"	▲1965385	1964582
1110333.....	1963556	"				1965562	1962052	454512	"	▲1965561	"
1110334.....	1954569	1963972	1962640	1928111	1961428	1954579	1962053	9417392	"	1960200	
1110336.....	1963556	"	1954557	"	"	1954539	1962052	454512	"	1961236	
1110337.....	"	"	"	"	"	"	"	"	"	1962514	
1110339.....	1954569	"	1962640	"	"	1954579	1962053	9417392	"	"	
1110340.....	1963556	1954566	1954557	"	"	1963904	1963905	454512	"	1965889	
1110341.....	"	"	"	"	"	1967589	1966045	274795	"	1966334	
1110343.....	"	"	"	"	"	"	"	"	"	1966735	
1110344.....	"	"				1967591	"	"	"	▲1966750	1964582
1110351.....	"	"	1954557	1928111	1961428	1954539	1962052	454512	"	1966621	
1110358.....	"	1961074	1962640	"	1961429	1963552	1945934	1908031	"	1966583	

▲ Bushing and automatic cam.

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

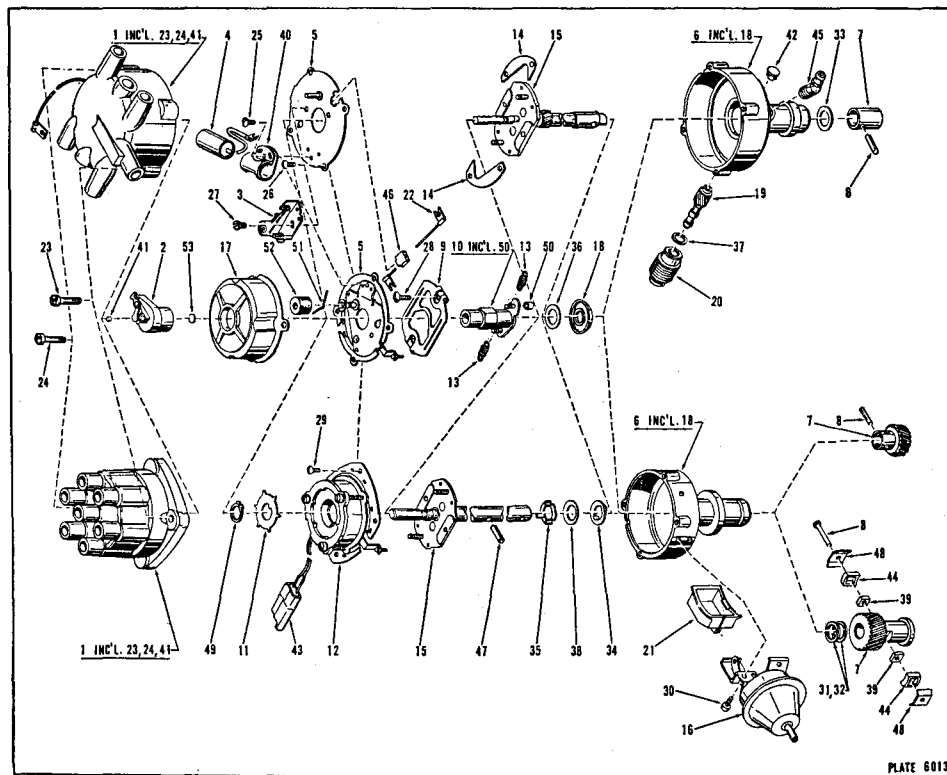

Model	Coil Assem.	Spring Weight	Weight	Shaft	Vacuum Control	Dust Seal Cover	Seal Housing	Gear & Shaft Tach.	Coupling Tach.	Boot Vacuum Control	Lead Primary
	12	13	14	15	16	17	18	19	20	21	22
1110310.....		1887553	1880902	1963611	□1116217	1960325				1963610	1954563
1110311.....		1964434	"	"	□ "	"					"
1110314.....		1960205	1960203	1960198	□1116239						"
1110316.....		1942510	1881371	1958594	□1116195						"
1110317.....		1886967	"	1963548	□1116228		1950569				"
1110318.....		1883498	1963700	1963678	□1116217		1920463				"
1110319.....		1886538	1881371	1963790	□1116240	1960325				1963610	"
1110320.....		1942510	"	1963926	□ "		1950569				"
1110321.....		1938064	"	1964037	□1116195						"
1110323.....		1912189	"	1961211	□1116217	1960325				1963610	"
1110324.....		1885636	1880902	1961215	□1116195	"				"	"
1110325.....	1964583	1964579	1881371	1964575	□1116240		1950569				
1110326.....	1965146	1911896	1961068	1965152			"				
1110327.....	1964583	1964579	1881371	1965116	□1116241						
1110328.....		1942510	"	1958594	□1116244						1954563
1110329.....		1965353	1960203	1965352	□1116250	1960325				1963610	"
1110330.....		1965545	1880902	1965541	□1116248	"					"
1110331.....		1886967	1961068	1965366	□1116228		1950569				"
1110332.....	1964582	1911896	"	1965384	□1116241		"				
1110333.....	"	1964346	1963700	1965558	□1116249		1920463				
1110334.....		1965353	1960203	1965352	□1116250					1963610	1954563
1110336.....		1922426	1881371	1957385	□1116195					"	"
1110337.....		"	1880902	1962512	□1116217						"
1110339.....		1965886	"	1965541	□ "					1963610	"
1110340.....		1887743	1881371	1965888	□1116207		1950569				"
1110341.....		1933350	1965843	1966332	□1115353		"				"
1110343.....		1912127	"	1966596	□ "		"				"
1110344.....	1964582	1884136	1881371	1966330	□1115354		"				
1110351.....		1928363	"	1966436	□1116195						1954563
1110358.....		1883498	"	1966581	□1116228		1950569				"


□ Serviced by complete replacement.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Illus. No.	Name	Part No.	Used on Models
	SCREWS		
23	Screw—Cap Attaching (#8-32) -----	1954571	All
24	Screw—Cap Attaching (#10-32) -----	1957573	All
25	Screw—Capacitor Bracket Attaching -----	454458	1110310-11-14-16-17-18-19; 20-1-3-4-8-9; 30-1-4-6-7-9; 40-1-3; 51-8
26	Screw—Circuit Breaker Plate Attaching -----	453461	1110310-11-14-16-17-18-19; 20-1-3-4-8-9; 30-1-4-6-7-9; 40-1-3; 51-8
27	Screw—Contact Adjusting -----	1914916	1110310-11-14-16-17-18-19; 20-1-3-4-8-9; 30-1-4-6-7-9; 40-1-3; 51-8
28	Screw—(& L. W.) Hold Down Plate Attaching -----	453647	All
29	Screw—Pole Piece & Coil Assem. Attaching -----	453461	1110325-6-7; 32-3; 44
30	Screw—Vacuum Control Attaching -----	453461	1110320
30	Screw—Vacuum Control Attaching -----	1917123	All except 1110320-6
	WASHERS		
33	Washer—Space—Under Collar or Gear -----	1965784	1110320; 40
33	Washer—Space—Under Collar or Gear -----	811912	1110341-3-4
34	Washer—Tang—Thrust -----	1946238	1110310-11-14-19; 29; 30-4-9
35	Washer—Tang—Housing -----	1960478	1110310-11-14-19; 29; 30-4-9
36	Washer—Thrust—Under Weight Plate -----	817051	1110318
38	Washer—Space—Tang Washers -----	811912	1110310-11-14-19; 29; 30-4-9
	MISCELLANEOUS		
39	BLOCK—Cushion Gear -----	1908028	1110317; 26-7; 31-2; 58
40	BRACKET—Capacitor -----	1944118	1110318; 20-1-3-4-8-9; 30-1-4-6-7-9; 40-1-3; 51-8
41	BUTTON—Carbon -----	1938193	All
43	CONNECTOR—Coil Lead -----	2973782	1110325-6-7; 32-3; 44
44	CUSHION—Gear -----	1908029	1110317; 26-7; 31-2; 58
46	GROMMET -----	1964573	1110325-6-7; 32-3; 44
46	GROMMET -----	1954564	1110310-11-14-16-17-18-19; 20-1-3-4-8-9; 30-1-4-6-7-9; 40-1-3; 51-8
47	PIN—Tang Washer Retaining -----	273436	1110310-11-14-19; 29; 30-4-9
48	RETAINER—Gear Cushion -----	1908030	1110317; 26-7; 31-2; 58
49	RING—Rotor Pole Piece Retainer -----	9422340	1110325-6-7; 32-3; 44
50	SLEEVE (Rubber)—Spring Post -----	1961234	1110318
51	SPRING—Circuit Breaker Plate Retainer -----	1961063	1110321
51	SPRING—Circuit Breaker Plate Retainer -----	1956213	1110310-11-14-16-17-18-19; 20-3-4-8-9; 30-1-4-6-7-9; 40-1-3; 51-8
52	WICK—Oil—Cam Lubricator -----	1961088	1110319; 20-3-4-8-9; 30-1-4-6-7-9; 40-1-3; 51-8
53	WICK—In Rotor -----	1963555	1110317-18; 27; 31-2

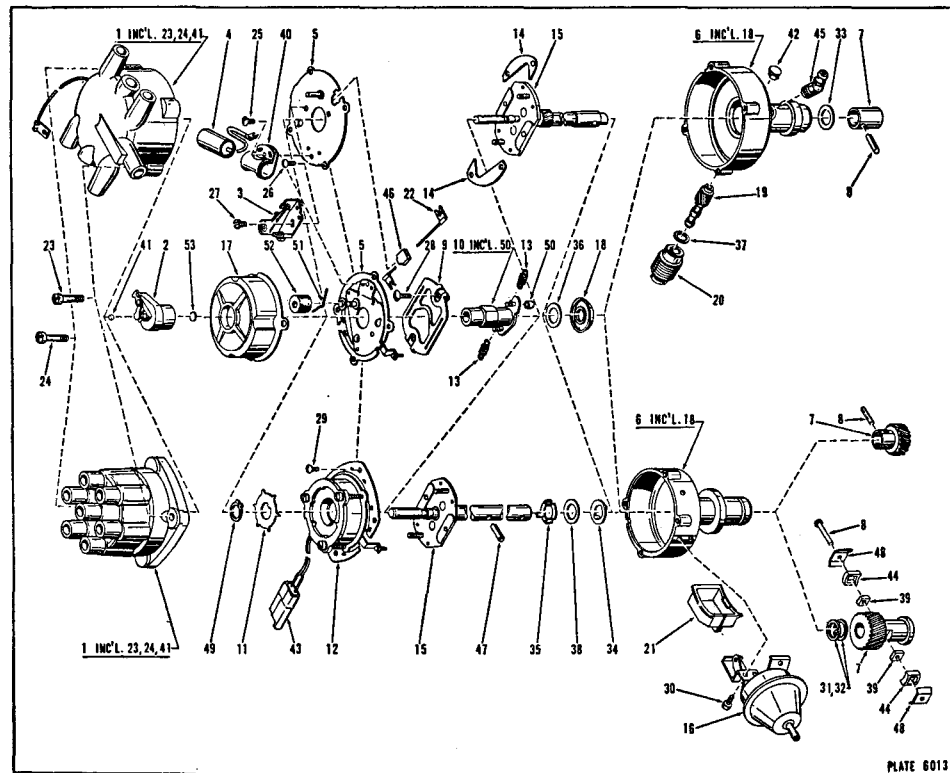

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Contact — Assem.	Con- den- ser	Plate — Breaker	Housing	Coupling — Collar or Gear	Pin	Plate — Weight Hold Down	Cam	Pole Piece — Rotor
	1	2	3	4	5	6	7	8	9	10	11
1110359	1971324	1971326	1954557	1928111	1961429	1963552	1945934	1908031	1954548	1961236	
1110360	1963556	1954566	"	"	1961428	1954539	1962052	454512	"	1966669	
1110361	"	1963972	"	"	"	"	"	"	"	"	
1110362	"	1954566	"	"	"	"	"	"	"	1966666	
1110363	"	1963972	"	"	"	"	"	"	"		
1110364	"	1961074	"	"	1961429	1960876	"	"	"	1966680	
1110366	"	1954566	"	"	1961428	1963904	1963905	"	"	1966986	
1110368	1954569	1963972	1962640	"	"	1954579	1962053	9417392	"	1967271	
1110369	"	"	"	"	"	"	"	"	"	1967267	
1110370	"	"	"	"	"	"	"	"	"	1967262	
1110371	"	"	"	"	"	"	"	"	"	1967265	
1110372	"	"	"	"	"	"	"	"	"	1967258	
1110373	1963556	1954566	1954557	"	"	1954539	1962052	454512	"	1967249	
1110374	"	1963972	"	"	"	"	"	"	"	"	
1110375	"	1961074	"	"	1961429	1960876	"	"	"	1967247	
1110377	"	1954566	"	"	1961428	1967448	1967451	"	"	1965889	
1110378	"	"	"	"	"	1967589	1966045	274795	"	1966334	
1110379	"	"	"	"	"	"	"	"	"	1966735	
1110380	"	"	"	"	"	1967591	"	"	"	▲1966750	1964582
1110381	"	1961074	1954557	1928111	1961429	1963552	1945934	1908031	"	1966628	
1110382	"	"	"	"	"	"	1945934	"	"	1963550	
1110383	"	1954566	"	"	1961428	1967589	1966045	274795	"	1968320	
1110384	"	"	"	"	"	"	"	"	"	1966334	
1110385	"	"	"	"	"	"	"	"	"	1966735	
1110386	1968434	1968448				1967591	"	"	"	▲1966750	1964582

▲ Bushing and automatic cam.

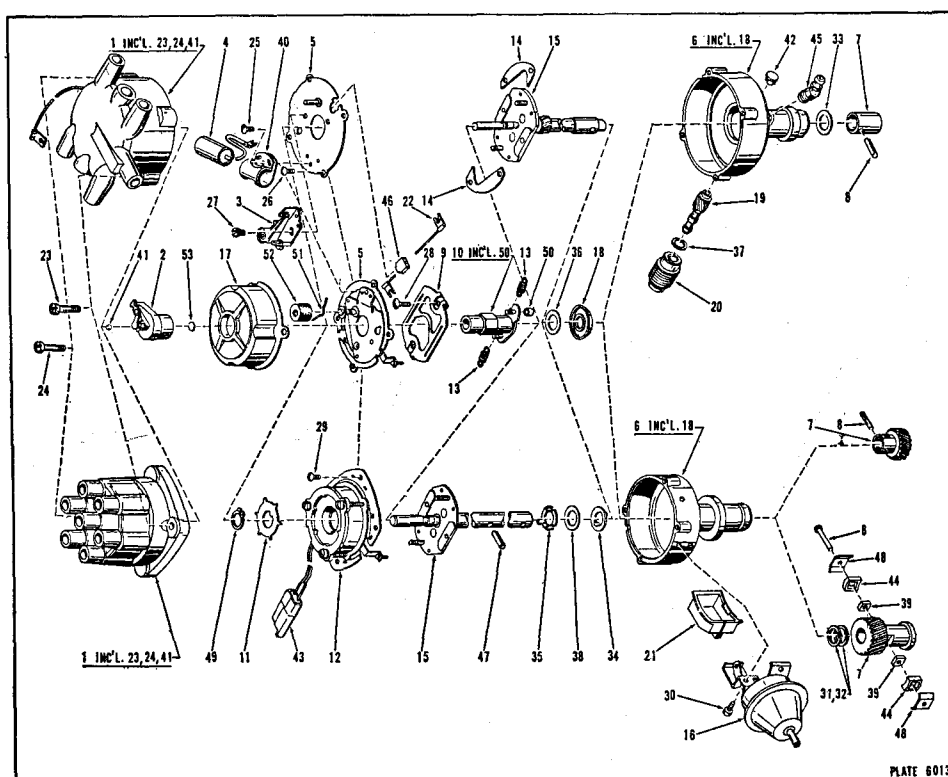Delco-Remy**SERVICE PARTS CATALOG**

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Coil Assem.	Spring — Weight	Weight	Shaft	Vacuum Control	Dust Seal — Cover	Seal — Housing	Gear & Shaft — Tach.	Coupling — Tach.	Boot — Vacuum Control	Lead — Primary
	12	13	14	15	16	17	18	19	20	21	22
1110359.....		1965886	1961068	1966781	□ 1115356		1950569				1954563
1110360.....		1886508	1881371	1961215	□ 1116195						"
1110361.....		"	"	"	□ "	1960325				1963610	"
1110362.....		1964950	"	1957385	□ "						"
1110363.....		"	"	"	□ "	1960325				1963610	"
1110364.....		1967075	1961068	1966679	□ 1116217		1950569				"
1110366.....		1906766	1965843	1966983	□ 1116207		"				"
1110368.....		1967516	"	1967269	□ 1116217	1960325				1963610	"
1110369.....		1961933	"	1967266	□ "	"				"	"
1110370.....		1967517	"	1966938	□ "	"				"	"
1110371.....		1922426	"	1966926	□ 1116248	"				"	"
1110372.....		1922574	"	1967266	□ 1116217	"				"	"
1110373.....		1882595	1881371	1957385	□ 1116195						"
1110374.....		"	"	"	□ "	1960325				1963610	"
1110375.....		1967523	1961068	1967245	□ 1116217		1920463				"
1110377.....		1887743	1881371	1967446	□ 1116207						"
1110378.....		1933350	1965843	1966332	□ 1115353		1920463				"
1110379.....		1912127	"	1966596	□ "						"
1110380.....	1964583	1884136	1881371	1966330	□ 1115354						
1110381.....		1883121	"	1967746	□ 1116228		1950569				1954563
1110382.....		1886967	"	1963548	□ "						"
1110383.....		1933350	1965843	1966332	□ 1115368		1920463				"
1110384.....		"	"	"	□ 1115369		"				"
1110385.....		1912127	"	1966596	□ "		"				"
1110386.....	1964583	1884136	1881371	1966330	□ 1115370		"				

□ Service by complete replacement.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Illus. No.	Name	Part No.	Used on Models
SCREWS			
23	Screw—Cap Attaching (#8-32) -----	1954571	All
24	Screw—Cap Attaching (#10-32) -----	1957573	All
25	Screw—Capacitor Bracket Attaching -----	454458	All except 1110380-6
26	Screw—Circuit Breaker Plate Attaching -----	453461	All except 1110380-6
27	Screw—Contact Adjusting -----	1914916	All except 1110380-6
28	Screw—(& L. W.) Hold Down Plate Attaching -----	453647	All
29	Screw—Pole Piece & Coil Assem. Attaching -----	453461	1110380-6
30	Screw—Vacuum Control Attaching -----	1917123	All
WASHERS			
31	Washer—Shim (.005 Thick) -----	810074	1110377
32	Washer—Shim (.010 Thick) -----	1912129	1110377
33	Washer—Space—Under Collar or Gear -----	811912	1110380-3-4-5-6
33	Washer—Space—Under Collar or Gear -----	1902600	1110377
33	Washer—Space—Under Collar or Gear -----	1965784	1110366
34	Washer—Tang—Thrust -----	1946238	1110368-9; 70-1-2
35	Washer—Tang—Housing -----	1960478	1110368-9; 70-1-2
36	Washer—Thrust—Under Weight Plate -----	817051	1110364; 75-8-9; 1110380-3-4-5-6
38	Washer—Space—Between Tang Washers -----	811912	1110368-9; 70-1-2-8-9
MISCELLANEOUS			
39	BLOCK—Cushion Gear -----	1908028	1110359; 81-2
40	BRACKET—Capacitor -----	1944118	All except 1110380-6
41	BUTTON—Carbon -----	1938193	All
43	CONNECTOR—Coil Lead -----	2973782	1110380-6
44	CUSHION—Gear -----	1908029	1110359; 81-2
46	GROMMET (Rubber) -----	1954564	All except 1110380-6
46	GROMMET—Pole Piece to Plate Assem. -----	1964573	1110380-6
47	PIN—Tang Washer Retaining -----	273436	1110368-9; 70-1-2
48	RETAINER—Gear Cushion -----	1908030	1110359; 81-2
49	RING—Rotor Pole Piece Retainer -----	9422340	1110380-6
50	SLEEVE (Rubber)—Spring Post -----	1961234	1110364; 75
51	SPRING—Circuit Breaker Plate -----	1956213	1110359; 60-1-2-3-4-6-8-9; 70-1-2-3-4-5-7-8-9; 81-2-3-4-5
52	WICK—Oil—Cam Lubricator -----	1961088	All except 1110386
53	WICK—In Rotor -----	1963555	1110359; 64-6; 74-5; 81-2

Delco-Remy

SERVICE PARTS CATALOG

DISTRIBUTOR—Group 86-F
Models 1110387 up
Page 1

Revised to April 1, 1968

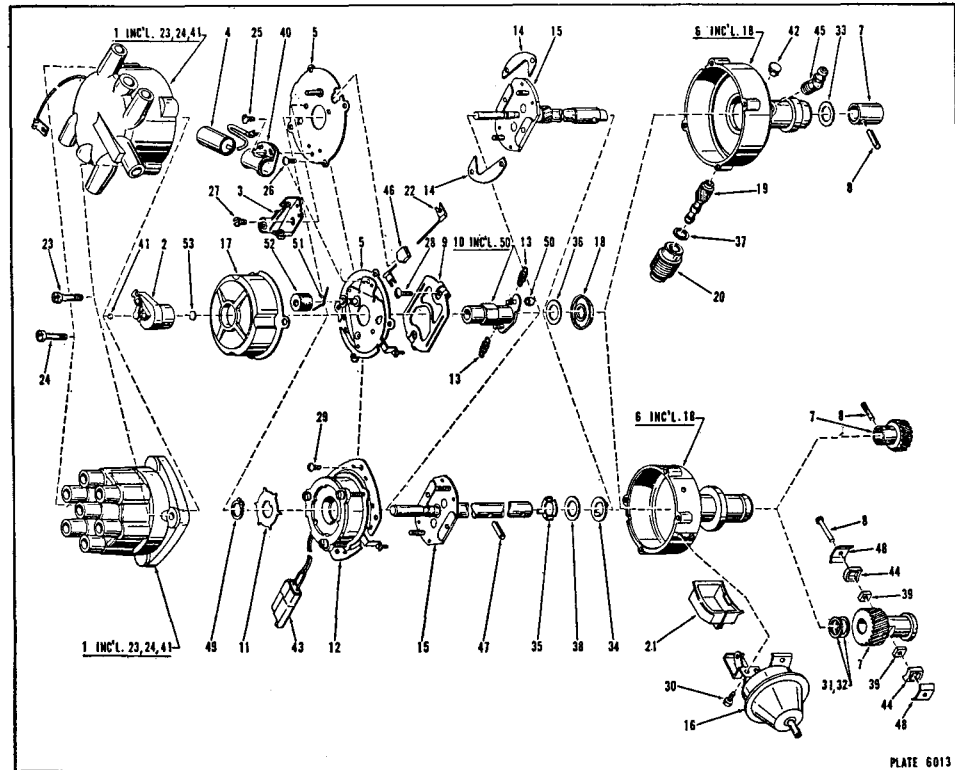


Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Contact — Assem.	Con- denser	Plate — Breaker	Housing	Coupling — Collar or Gear	Pin	Plate — Weight Hold Down	Cam	Pole Piece — Rotor
	1	2	3	4	5	6	7	8	9	10	11
1110387.....	1963556	1954566	1954557	1928111	1961428	1954539	1962052	454512	1954548	1968519	
1110388.....	"	"	"	"	"	"	"	"	"	1968558	
1110389.....	1954569	1963972	"	"	"	1954579	1962053	9417392	"	1966935	
1110390.....	1963556	"	"	"	"	1954539	1962052	454512	"	1968519	
1110391.....	"	1954566	"	"	"	1967589	1966045	274795	"	1968562	
1110392.....	"	1963972	"	"	"	1954539	1962052	454512	"	1968558	
1110393.....	"	1954566	"	"	"	1963904	1963905	"	"	1964039	
1110395.....	"	"	"	"	"	1954539	1962052	"	"	1966621	
1110396.....	"	"	"	"	"	1967589	1966045	274795	"	1969163	
1110397.....	"	"	"	"	"	"	"	"	"	1969152	
1110398.....	"	"	"	"	"	"	"	"	"	"	
1110399.....	"	"	"	"	"	1954539	1962052	454512	"	1970537	
1110400.....	800058	1971326				1965119	1945934	1908031	"	▲1964577	1964582

▲ Bushings & Automatic Cam.

Delco-Remy SERVICE PARTS CATALOG

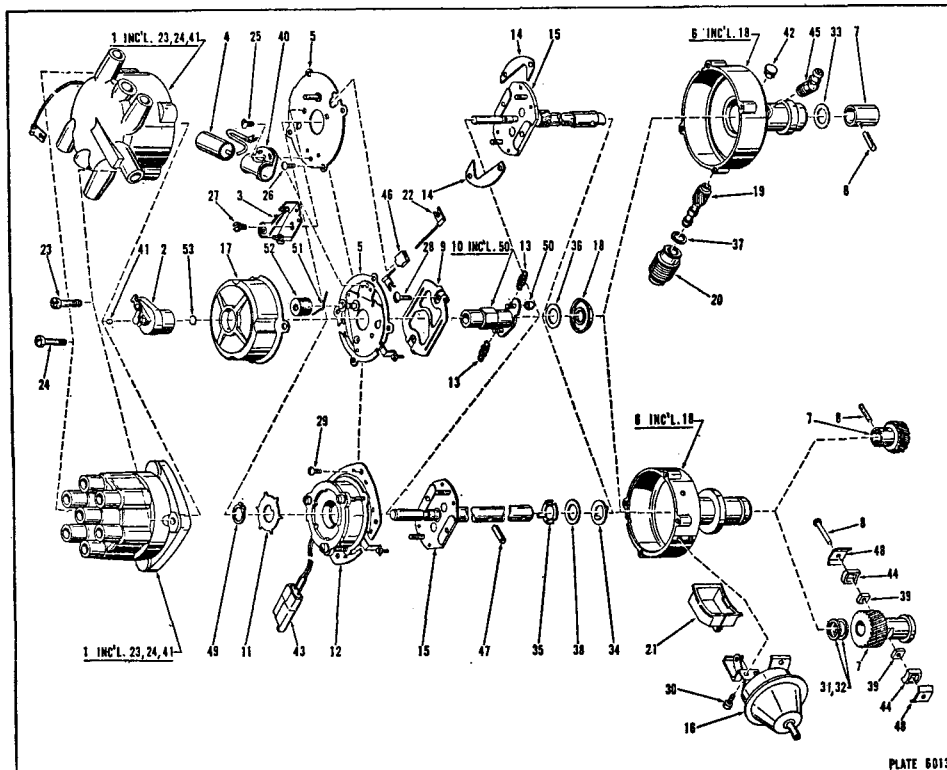

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Coil Assem.	Spring Weight	Weight	Shaft	Vacuum Control	Dust Seal Cover	Seal Housing	Gear & Shaft Tach.	Coupling Tach.	Boot Vacuum Control	Lead Primary
	12	13	14	15	16	17	18	19	20	21	22
1110387		1968543	1881371	1961215	□ 1116195						1954563
1110388		1967074	"	1968557	□ "						"
1110389		1968533	1965843	1968522	□ 1116217	1960325				1963610	"
1110390		1968543	1881371	1961215	□ 1116195	"				"	"
1110391		1941964	1965843	1968561	□ 1115372		1920463				"
1110392		1967074	1881371	1968557	□ 1116195	1960325				1963610	"
1110393		1968669	"	1968670	□ 1115369		1950569				"
1110395		1928363	"	1966436	□ 1116195	1960325				1963610	"
1110396		1969326	"	1969158	□ 1115369		1920463				"
1110397		1951743	1924737	1969151	□ "		"				"
1110398		"	"	"	□ 1115372		"				"
1110399		1970536	1881371	1966436	□ 1116217						"
1110400	1964583	1941524	1961068	1969382	□ 1969364		1950569				


□ Service by complete replacement.

Revised to April 1, 1968

SERVICE PARTS CATALOG
MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and descriptions.

Ilus. No.	Name	Part No.	Used on Models
SCREWS			
23	Screw—Cap Attaching (#8-32) -----	1954571	All
24	Screw—Cap Attching (#10-32) -----	1957573	All
25	Screw—Capacitor Bracket Attaching -----	454458	All except 1110400
26	Screw—Circuit Breaker Plate Attaching -----	453461	All except 1110400
27	Screw—Contact Adjusting -----	1914916	All except 1110400
28	Screw—(& L. W.) Hold Down Plate Attaching -----	453647	All
30	Screw—Vacuum Control Attaching -----	1917123	All
WASHERS			
33	Washer—Space—Under Collar or Gear -----	1965784	1110393
33	Washer—Space—Under Collar or Gear -----	811912	1110393
34	Washer—Tang—Thrust -----	1946238	1110389
35	Washer—Tang—Housing -----	1960478	1110389
36	Washer—Thrust—Under Weight Plate -----	817051	1110391-6-7-8
38	Washer—Space—Tang Washers -----	811912	1110389
MISCELLANEOUS			
39	BLOCK—Cushion Gear -----	1908028	1110400
40	BRACKET—Capacitor -----	1944118	All except 1110400
41	BUTTON—Carbon -----	1938193	All
43	CONNECTOR—Coil Lead -----	2973782	1110400
44	CUSHION—Gear -----	1908029	1110400
46	GROMMET—(Rubber) -----	1954564	All except 1110400
46	GROMMET—Pole Piece & Plate Assem. -----	1964573	1110400
47	PIN—Tang Washer Retaining -----	273436	1110389
48	RETAINER—Gear Cushion -----	1908030	1110400
49	RING—Rotor Pole Piece Retainer -----	9422340	1110400
51	SPRING—Circuit Breaker Plate -----	1956213	All except 1110400
52	WICK—Oil—Cam Lubricator -----	1961088	All except 1110400
53	WICK—In Rotor -----	1963555	1110400

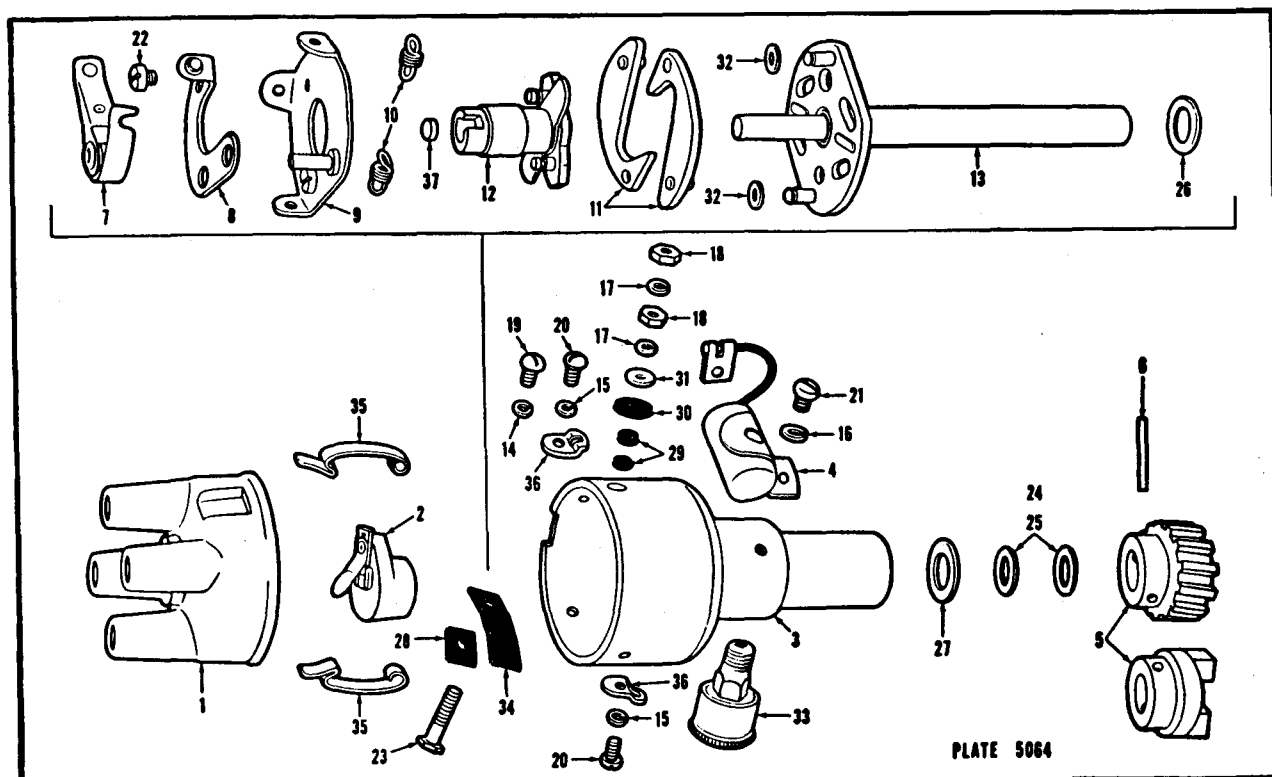

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap 1	Rotor 2	Housing 3	Con- denser 4	Coupling or Gear 5	Pin 6	△Lever — Breaker 7	△Con- tact and Support 8	Plate — Breaker 9	Spring — Weight 10	Weight 11	Cam 12	Shaft and Plate 13
1110401	1835536	816774	820668	1928111	1865387	1862218	813238	1847341	826474	1884618	1842943	818794	1883439
1110402	"	"	1916775	"	809673	1857492	"	"	"	1882956	823595	818427	1862895
1110403	"	"	820668	"	1867786	1843167	"	"	"	1883779	†	818794	†1867782
1110404	"	"	"	"	"	"	"	"	"	1885787	1842943	1865405	1881747
1110405	826616	"	1850155	"	"	"	"	"	"	821464	"	1861641	1885003
1110406	1835536	"	820668	"	"	"	"	"	"	1883779	823595	818427	"
1110407	"	"	820676	"	1868891	1862218	"	"	"	"	"	*	*1873224
1110408	"	"	820668	"	1867786	829421	"	"	"	1873260	†	1873259	†1873252
1110409	"	"	"	"	"	"	"	"	"	"	"	*	*1873609
1110410	"	"	"	1928111	809673	1857492	"	"	"	"	"	*	*1843985
1110411	"	"	820676	"	1867786	829421	"	"	"	1873260	†	1873259	†1874784
1110412	826616	"	1916775	"	809673	1857492	"	"	"	1885787	823595	1874940	1881747
1110413	1878856	"	1855379	1900272	"	"	"	"	"	1883664	1842943	818794	1878870
1110414	1835536	"	1840348	1928111	821865	1862218	"	"	"	1884621	823595	818427	1879750
1110415	826616	"	820668	"	1881621	"	"	"	"	1884618	"	"	1883439
1110416	1835536	"	"	"	1881717	815003	"	"	"	1883779	1842943	818794	1883867
1110417	"	"	"	"	"	"	"	"	"	1888494	"	"	1882979
1110418	"	"	1840348	1900272	821865	1862218	"	"	"	1884621	823595	818427	1879750
1110421	826616	"	1916775	1928111	809673	1857492	"	"	"	1884623	"	"	1883439
1110423	"	"	"	"	"	"	"	"	"	1882978	"	"	1882979
1110424	"	"	"	"	1881621	1862218	"	"	"	1882956	823595	818427	1948904
1110425	1949149	1949147	1949143	"	"	274795	"	"	"	1884615	"	1949151	1949145

△Use Contact Set No. 1855520.

†Shaft with Weights and Plate.

*Gear not furnished by Delco-Remy.

*Shaft includes Cam.

*826616 Distributor Cap (Side Outlet), 826618 Cap Cover and 2-803912 Cover Screws were also used on this model.

MINOR PARTS SECTION


OTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
14	Lock Washer—Breaker Plate Support Screw.....	453844	All
15	Lock Washer—Cap Spring Support Screw.....	453844	All
16	Lock Washer—Condenser Attaching Screw.....	453435	All
17	Lock Washer—Terminal Screw.....	453844	All
NUTS			
18	Nut—Terminal.....	120622	All
SCREWS			
19	Screw—Breaker Plate Support.....	453418	All
—	Screw—Cap Cover Attaching.....	455590	1110405; 12-15; 21-3-4
20	Screw—Cap Spring Support.....	453418	All
21	Screw—Condenser Attaching.....	453341	All
22	Screw—Contact Attaching.....	453418	All
23	Screw—Terminal.....	1927506	All
WASHERS			
24	Washer—Shim (.005 thk.).....	810074	All except 1110425
24	Washer—Shim (.005 thk.).....	1927529	1110425
25	Washer—Shim (.010 thk.).....	1912129	All except 1110425
25	Washer—Shim (.010 thk.).....	1927530	1110425
26	Washer—Space—Below Cam or Weight Plate.....	811912	All
27	Washer—Space—Under Collar, Coupling or Gear.....	811912	All except 1110418; 25
27	Washer—Space—Under Collar, Coupling or Gear.....	1837617	1110425
28	Washer—Insulating—Terminal Screw—Inside.....	820988	All
29	Washer—Insulating—(Bushing) Terminal Screw.....	1904600	All
30	Washer—Insulating—Terminal Screw—Outside.....	1882247	All
31	Washer—Plain—Terminal Screw.....	815540	All
32	Washer—Weight.....	807295	1110401-2-4-5-6; 12-13-14-15-16-17-18
MISCELLANEOUS			
—	ADAPTOR—Distributor Mounting.....	1867787	1110403-8
—	ADVANCE ARM Assembly.....	*1845022	1110403-8
—	BUSHING—In Adaptor.....	1856127	1110403-8
—	BUSHING—In Housing (Upper & Lower).....	825463	1110414-18
—	BUSHING—In Housing (Late Design).....	1909003	11104012-3-4-5-6-8-9; 12-15-16; 21-3-4-5
—	BUTTON—Carbon—In Cap.....	1938193	All
—	COLLAR—Space—Under Gear.....	1841429	1110403-8
—	COVER—Cap.....	826618	1110405; 12-15; 21-3-4
33	CUP—Grease.....	1955293	1110401-2-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-18
34	INSULATOR—Breaker Lever Spring.....	820991	All
—	PLUG—Pipe—In Housing.....	125947	1110401-2-3-4-5-6-8-9; 12-15-16; 21-3-4-5
—	SEAL—Oil—In Housing.....	1885665	1110425
35	SPRING—Cap.....	816801	All
37	SUPPORT—Cap Spring.....	826476	All
36	WICK—Felt (In Cam).....	1963555	1110401-2-3-4-5-6-8; 11-12-13-14-15-16-17-18; 21-3-4-5

*For parts see Advance Arm—Group 1.

Revised to September 1, 1970

SERVICE PARTS CATALOG

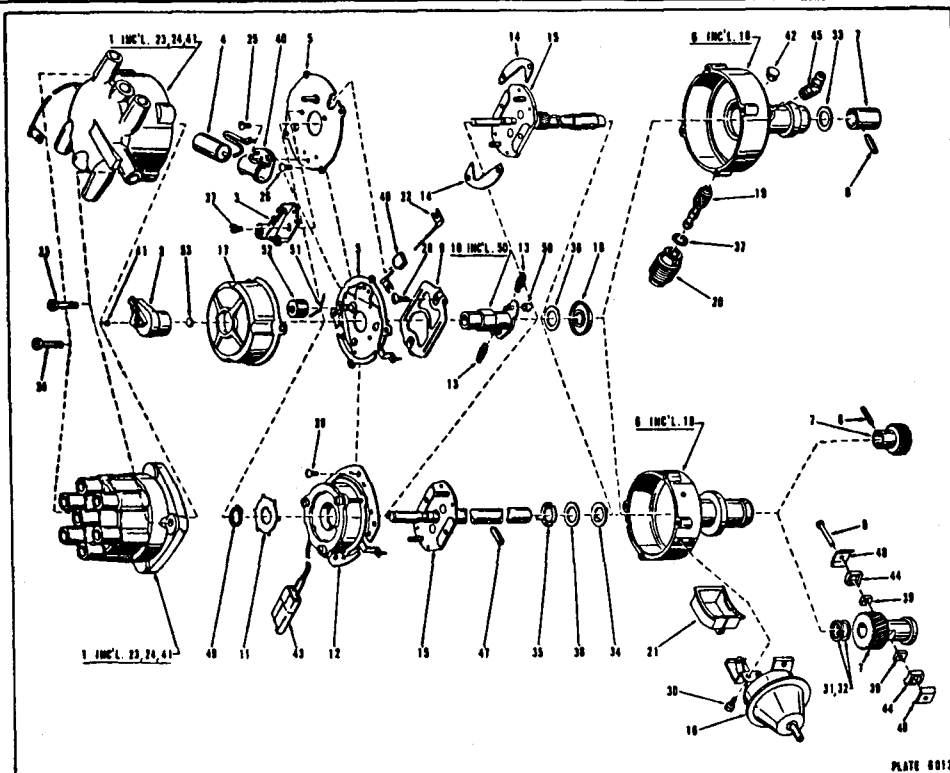


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Contact Assem.	Con- denser	Plate — Breaker	Housing	Collar Coupling or Gear	Pin	Plate — Hold Down	Cam	Pole Piece — Rotor
	1	2	3	4	5	6	7	8	9	10	11
1110426.....	800059	1954566	1954557	1928111	1961428	1954539	1962052	454512	1954548	1970539	
1110427.....	800057	"	"	"	"	1969746	1969751	273436	"	1962203	
1110428.....	"	"	"	"	"	"	"	"	"	1969768	
1110429.....	"	"	"	"	"	"	"	"	"	1969777	
1110430.....	1971324	800055	"	"	"	"	1966045	274795	"	1970471	
1110431.....	"	"	"	"	"	1967589	"	"	"	1969163	
1110432.....	1968434	"	"	"	"	1967591	"	"	"	1970333	1964582
1110433.....	1963556	1954566	1954557	1928111	1961428	1954539	1962052	454512	"	1970579	
1110434.....	1954569	1963972	1962640	"	"	1954579	1962053	9417392	"	1954584	
1110435.....	800059	800055	1954557	"	1846456	1846284	1846904	454512	"	1851224	
1110436.....	1963556	1954566	"	"	1961428	1954539	1962052	"	"	1970834	
1110437.....	"	1963972	"	"	"	"	"	"	"	1970579	
1110438.....	"	"	"	"	"	"	"	"	"	1970834	
1110439.....	"	1954566	"	"	"	"	"	"	"	1970841	
1110440.....	"	"	"	"	"	"	"	"	"	1970537	
1110441.....	"	1963972	"	"	"	"	"	"	"	1970841	
1110442.....	"	1971326	"	"	1961429	1960876	"	"	"	1970911	
1110443.....	"	"	"	"	"	"	"	"	"	1970854	
1110444.....	"	1954566	"	"	1961428	1963904	1963905	"	"	1970434	
1110445.....	1971324	1971326	"	"	1961429	1963552	1945934	1908031	"	1964882	
1110446.....	"	"	"	"	"	"	"	"	"	1961236	
1110447.....	800059	1954566	"	"	1961428	1954539	1962052	454512	"	1970943	
1110448.....	1971324	1971326	"	"	1961429	1963552	1945934	1908031	"	1961236	
1110449.....	1971324	800055	"	"	1961428	1967589	1966045	274795	"	1969163	
1110450.....	1968434	1961074	"	"	"	1965119	1945934	1908031	"	1965118	1964582
1110451.....	800060	1971326	1954557	1928111	1961429	1963552	"	"	"	1971582	
1110452.....	800057	800056	1962640	"	1961428	1954579	1962053	273436	"	1954584	
1110453.....	"	"	"	"	"	"	"	"	"	1957282	
1110454.....	"	"	"	"	"	"	"	"	"	1966935	
1110455.....	"	"	"	"	"	"	"	"	"	1963791	

^ABushing and Automatic Cam

Delco-Remy SERVICE PARTS CATALOG

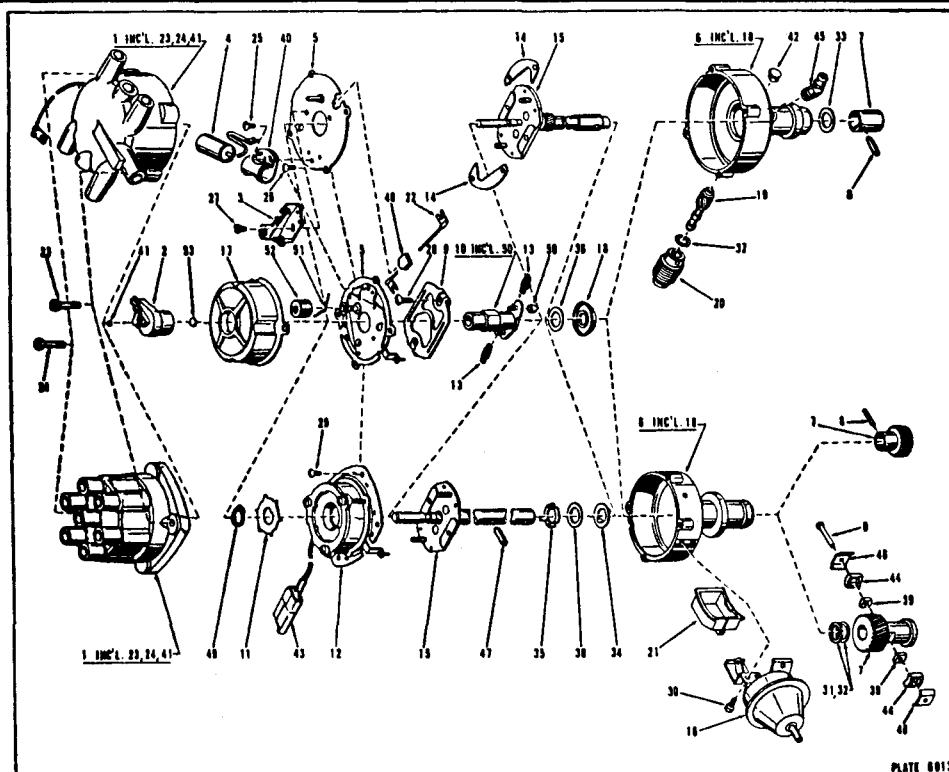

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Coil Assem.	Spring Weight	Weight	Shaft	Vacuum Control	Dust Seal Cover	Seal Housing	Gear & Shaft Tach	Coupling Tach.	Boot Vacuum Control	Lead Primary
	12	13	14	15	16	17	18	19	20	21	22
1110426.....		1883779	1881371	1970538	□1116217						1954563
1110427.....		1884929	1880902	1969749	□1969740		1950569				"
1110428.....		1970116	1965843	1969767	□ "		"				"
1110429.....		1939381	"	1969775	□ "		"				"
1110430.....		1971179	1965843	1968561	□1973413		1920463				"
1110431.....		1970937	1881371	1969158	□1973414		"				"
1110432.....	1964583	1939794	"	1970332	□1973415		"				"
1110433.....		1882956	"	1970578	□1116217						1954563
1110434.....		1970572	1880902	1963611	□ "	1960325				1963610	"
1110435.....		1851446	"	1851064	□1973428		1950569				"
1110436.....		1883779	1881371	1962512	□1116217						"
1110437.....		1882956	"	1970578	□ "	1960325				1963610	"
1110438.....		1883779	"	1962512	□ "	"				"	"
1110439.....		1922381	"	1970840	□ "					"	"
1110440.....		1970536	"	1966436	□ "	1960325				1963610	"
1110441.....		1922381	"	1970840	□ "	"				"	"
1110442.....		1933350	1961068	1970908	□ "		1920463				"
1110443.....		1906766	"	1970853	□ "		"				"
1110444.....		1942510	1881371	1970432	□1116207		1950569				"
1110445.....		1883779	"	1970494	□1973416		"				"
1110446.....		1965886	1961068	1966781	□ "		"				"
1110447.....		1884929	1881371	1958594	□1116217						"
1110448.....		1965886	1961068	1966781	□1115356		"				"
1110449.....		1970937	1881371	1969158	□1973413		1920463				"
1110450.....	1964583	1964579	"	1971468	□1116241		1950569				"
1110451.....		1969107	1961068	1966781	□1973416	1960325	"			1971585	1954563
1110452.....		1970572	1880902	1963611	□1116217	"				1963610	"
1110453.....		1964434	"	"	□ "	"				"	"
1110454.....		1968533	1965843	1968522	□ "	"				"	"
1110455.....		1886538	1881371	1963790	□ "	"				"	"


□ Service by complete replacement.

Parts not listed in this catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
SCREWS			
23	Screw—Cap Attach #8-32.....	1954571	All
24	Screw—Cap Attach #10-32.....	1954573	All
25	Screw—Capacitor Bracket Attach.....	454458	All except 1110432; 50
26	Screw—Circuit Breaker Plate Attach.....	453461	All except 1110432-6-8; 50
26	Screw—Circuit Breaker plate attach.....	1964163	1110436-8
27	Screw—Contact Adjusting.....	1914916	All except 1110432; 50
28	Screw—(& L. W.) Hold Down Plate Attach.....	453647	All
29	Screw—Pole piece and Coil assem. Attach.....	453461	1110432; 50
30	Screw—Vacuum Control Attach.....	1917123	All
30	Screw—Vacuum Control Attach.....	1847814	1110435
WASHERS			
31	Washer—Shim .005 Thick.....	810074	1110427-8-9; 35
32	Washer—Shim .010 Thick.....	1912129	1110427-8-9; 35
33	Washer—Space—Under Gear, or Collar.....	811912	1110427-8-9; 30-1-2-5
33	Washer—Space—Under Gear or Collar.....	1965784	1110444
34	Washer—Tang—Thrust.....	1946238	1110434; 52-3-4-5
35	Washer—Tang—Housing.....	1960478	1110434-5; 52-3-4-5
36	Washer—Thrust—Under Weight Plate.....	811912	1110427-8-9
36	Washer—Under Weight Base.....	1959714	1110435
36	Washer—Under Weight Base.....	817051	1110430-1-2; 42-3-9
38	Washer—Space—Tang Washers.....	811912	1110434; 52-3-4-5
MISCELLANEOUS			
39	BLOCK—Cushion Gear.....	1908028	1110445-6-8; 50; 51
40	BRACKET—Capacitor.....	1944118	All except 1110432; 50
—	BUTTON (Nylon) In Weight Base.....	1957329	1110432; 44; 50
41	BUTTON—Carbon.....	1938193	All
43	CONNECTOR—Coil lead.....	2973782	1110432; 50
—	CUP—Hydr. Braking on Shaft.....	1846279	1110435
44	CUSHION—Gear.....	1908029	1110445-6-8; 50; 51
46	GROMMET—In housing.....	1964573	1110432; 50
46	GROMMET—In housing.....	1954564	All except 1110432; 50
47	PIN—Spring Washer—retaining.....	9417392	1110434-5; 52-3-4-5
48	RETAINER—Gear cushion.....	1908030	1110445-6-8; 50; 51
49	RING—Rotor pole piece retainer.....	9422340	1110432; 50
50	SLEEVE (Rubber) Spring post.....	1961234	1110442-3
51	SPRING—Cir. Breaker Plate.....	1956213	All except 1110432; 50
—	SPRING—Breaker Plate Vibration Damper.....	1846002	1110435
52	WICK—Oil Cam lubricator.....	1961088	All except 1110432; 50
53	WICK—In Rotor.....	1963555	1110427-8-9; 35; 42-3-4-5-6-8; 50-1

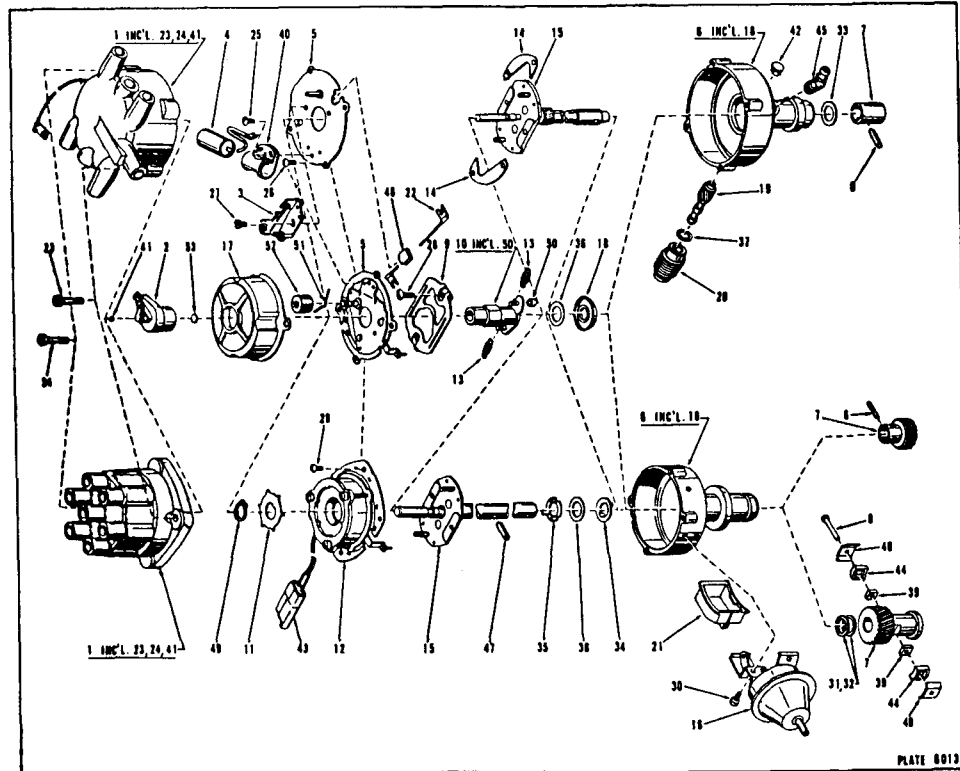


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Contact Assem.	Con- denser	Plate — Breaker	Housing	Collar Coupling or Gear	Pin	Plate — Hold Down	Cam	Pole Piece — Rotor
	1	2	3	4	5	6	7	8	9	10	11
1110457.....	800059	800055	1954557	1928111	1961428	1954539	1962052	454512	1954548	1970943	
1110458.....	"	"	"	"	"	"	"	"	"	1970539	
1110459.....	1971324	"	"	"	"	"	"	"	"	1970834	
1110460.....	"	"	"	"	"	"	"	"	"	1970579	
1110461.....	"	"	"	"	"	"	"	"	"	1962514	
1110462.....	"	800056	"	"	"	"	"	"	"	"	
1110463.....	"	800055	"	"	"	"	"	"	"	1970841	
1110464.....	"	"	"	"	"	"	"	"	"	1970537	
1110465.....	"	800056	"	"	"	"	"	"	"	1970841	
1110466.....	"	"	"	"	"	"	"	"	"	1970537	
1110467.....	"	1971326	"	"	1961429	1960876	"	"	"	1970854	
1110468.....	"	"	"	"	"	"	"	"	"	1970911	
1110469.....	"	800055	"	"	1961428	800043	"	"	"	1970537	
1110470.....	"	"	"	"	"	"	"	"	"	1970841	
1110471.....	"	1971326	"	"	1961429	1963552	1945934	1908031	"	1963550	
1110472.....	"	"	"	"	"	"	"	"	"	1964882	
1110473.....	"	"	"	"	"	"	"	"	"	1961236	
1110474.....	"	800055	"	"	1961428	1967589	1966045	274795	"	1969163	
1110475.....	"	"	"	"	"	"	"	"	"	1970471	
1110478.....	"	1971326	"	"	1961429	1963552	1945934	1908031	"	1961236	
1110479.....	"	800055	"	"	1961428	1963904	1963905	454512	"	800370	
1110481.....	"	"	"	"	"	"	"	"	"	801732	
1110482.....	"	"	"	"	"	1846069	1962052	"	"	1970537	
1110483.....	"	"	"	"	"	"	"	"	"	1970841	
1110485.....	"	800055	"	"	"	1963904	1963905	"	"	1846339	
1110486.....	"	1971326	"	"	1961429	1846069	1962052	"	"	1851006	
1110489.....	"	800055	"	"	1961428	1851259	"	"	"	1966901	
1110492.....	800059	"	"	"	1846456	1846284	1846904	"	"	1851224	
1110493.....	1971324	800056	"	"	1961428	1851259	1962052	"	"	1966901	
1110494.....	800059	800055	"	"	"	"	"	"	"	1970539	

Delco-Remy

SERVICE PARTS CATALOG

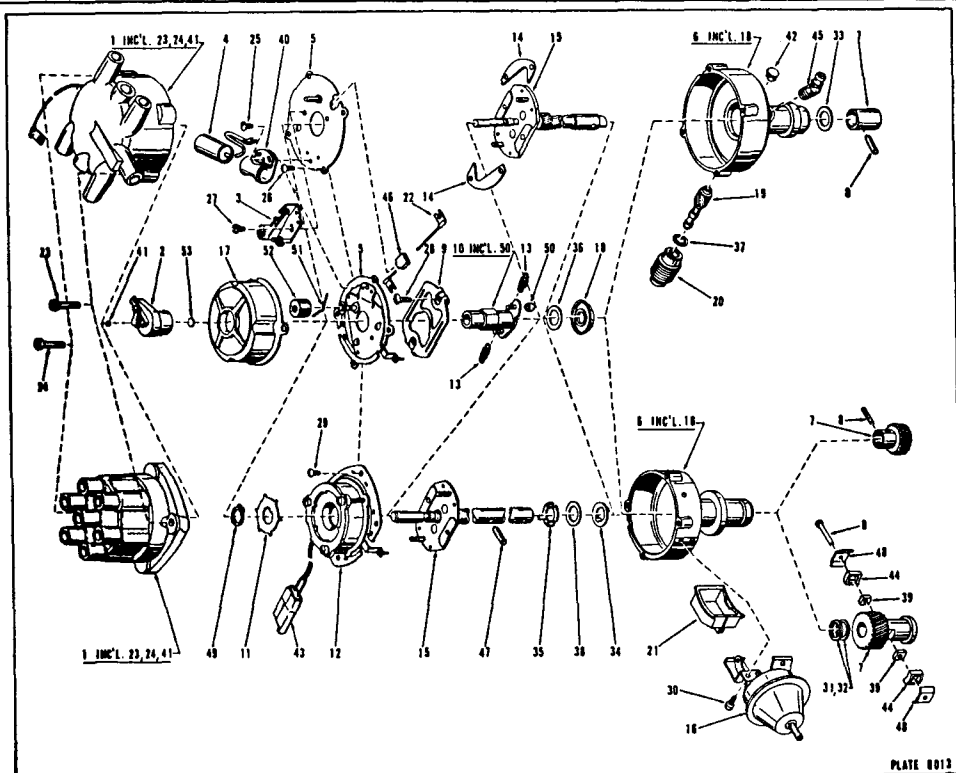

Model	Coil Assem.	Spring Weight	Weight	Shaft	Vacuum Control	Dust Seal Cover	Seal Housing	Gear & Shaft Tach	Coupling Tach.	Boot — Vacuum Control	Lead Primary
	12	13	14	15	16	17	18	19	20	21	22
1110457.....		1884929	1881371	800094	□1116217						1954563
1110458.....		1883779	"	800263	□ "						"
1110459.....		"	"	1962512	□ "						"
1110460.....		1882956	"	1970578	□ "						"
1110461.....		1922426	1880902	800648	□ "						"
1110462.....		"	"	"	□ "	1960325				1963610	"
1110463.....		1922381	1881371	1970840	□ "						"
1110464.....		1970536	"	1966436	□ "						"
1110465.....		1922381	"	1970840	□ "	1960325				1963610	"
1110466.....		1970536	"	1966436	□ "	1960325				"	"
1110467.....		1906766	1961068	1970853	□ "		1920463				"
1110468.....		1933350	"	1970908	□ "						"
1110469.....		1970536	1881371	1966436	□ "		1950569				"
1110470.....		1922381	"	1970840	□ "						"
1110471.....		1886967	"	1963548	□1973422		1950569				"
1110472.....		1883779	"	1970494	□1973420		"				"
1110473.....		1965886	1961068	1966781	□ "		"				"
1110474.....		800653	1881371	1969158	□1973419		1920463				"
1110475.....		1971179	1965843	1968561	□ "		"				"
1110478.....		1965886	1961068	1966781	□1973423		1950569				"
1110479.....		1947660	1881371	1970432	□1116207		"				"
1110481.....		1885339	"	801731	□1973425		"				"
1110482.....		1970536	"	1846073	□1116217		"				"
1110483.....		1922381	"	1846077	□ "		1920463				"
1110485.....		1882774	"	1970432	□ "		1950569				"
1110486.....		1968543	1961068	1851261	□1973435		1920463				"
1110489.....		1912886	1881371	1851032	□1973434		1950569				"
1110492.....		1946276	"	1851066	□1973428						"
1110493.....		1912886	"	1851032	□1973434	1960325	"			1963610	"
1110494.....		1883779	"	"	□1973428		"				"


□Service by complete replacement.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
SCREWS			
23	Screw—Cap Attach #8-32.....	1954571	All
24	Screw—Cap Attach #10-32.....	1954573	All
25	Screw—Capacitor Bracket Attach.....	454458	All
26	Screw—Circuit Breaker Plate Attach.....	453461	1110457-8-9; 60-1-2-3-4-5-6-7-8; 71-2-3-4-5-8-9; 81-2-3-5-6-9; 92-3-4
26	Screw—Circuit Breaker plate attach.....	453647	1110469; 70
27	Screw—Contact Adjusting.....	1914916	All
28	Screw—(& L.W.) Hold Down Plate Attach.....	453647	1110457-8-9; 60-1-2-3-4-5-6-7-8; 71-2-3-4-5-8-9; 81-2-3-5-8-9; 92-3
28	Screw—(Lock Washer) Hold Down Plate Attach.....	453461	1110469; 70
30	Screw—Vacuum Control Attach.....	1917123	All except 1110492
30	Screw—Vacuum Control Attaching.....	1847814	1110492
WASHERS			
31	Washer—Shim—Under Gear .005 Thick.....	810074	1110492
32	Washer—Shim—Under Gear .010 Thick.....	1912129	1110492
33	Washer—Space—Under Gear, or Collar.....	811912	1110474-5; 92
33	Washer—Space—Under Gear, or Collar.....	1965784	1110479; 81-5
35	Washer—Tang—Under Gear.....	1960478	1110492
36	Washer—Under Weight Base.....	817051	1110467-8; 74-5; 82-3-8
36	Washer—Under Weight Base.....	1959714	1110492
MISCELLANEOUS			
39	BLOCK—Cushion Gear.....	1908028	1110471-2-3-8
40	BRACKET—Capacitor.....	1944118	All
41	BUTTON—Carbon.....	1938193	All
—	BUTTON—(Nylon) In Weight Base.....	1957329	1110479; 81-5
—	CUP—Hydr. Braking on Shaft.....	1846279	1110492
44	CUSHION—Gear.....	1908029	1110471-2-3-8
46	GROMMET—In housing.....	1954564	All
—	PIN—Spring—Shaft Braking Cup Attach.....	9417392	1110492
48	RETAINER—Gear cushion.....	1908030	1110471-2-3-8
50	SLEEVE (Rubber) Spring post.....	1961234	1110467-8
—	SPRING—Breaker Plate Vibration Damper.....	1846002	1110492
51	SPRING—Cir. Breaker Plate.....	1956213	All
52	WICK—Oil Cam lubricator.....	1961088	All
53	WICK—In Rotor.....	1963555	1110467-8; 71-2-3-8-9; 81-2-3-5-6; 92

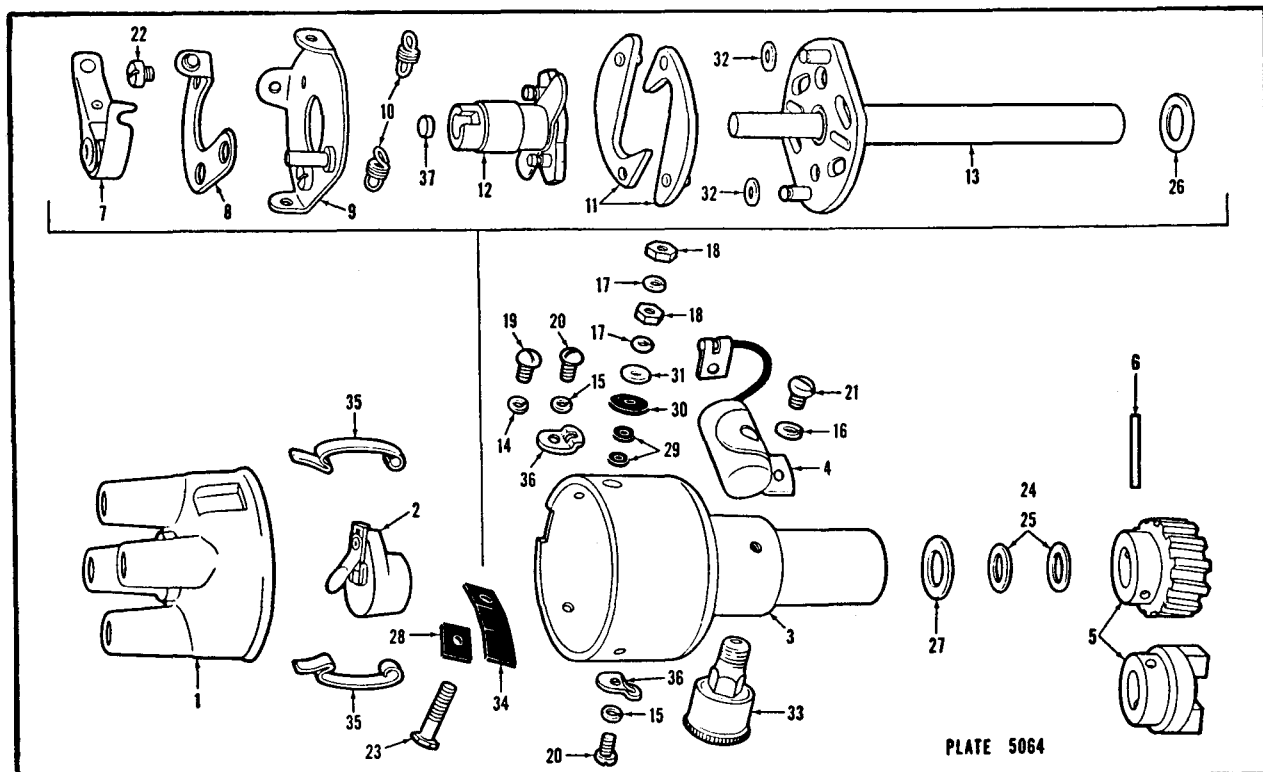

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Housing	Con- denser	Coupling or Gear	Pin	△ Lever — Breaker	△ Contact and Support	Plate — Breaker	Spring — Weight	Weight	Cam	Shaft and Plate
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110501	1838100	816774	820676	1928111	809673	1857492	813238	1847341	826474				†1867768
1110502	"	"	1868382	"	"	"	"	"	"	1884619	823595	817258	1883867
1110503	"	"	"	"	"	"	"	"	"	1884615	"	"	1882979
1110504	"	"	820668	"	×	×	"	"	"	1883779	"	"	1885003
1110505	"	"	"	"	△	1857492	"	"	"	1883664	1842943	820989	1919956
1110506	"	"	"	"	△	"	"	"	"	"	"	"	"
1110507	"	"	"	"	1842541	"	"	"	"	1866864	"	1866863	1881747
1110508	"	"	820676	1900272	1862917	1857502	"	"	"	1884615	"	820989	1860402
1110509	"	"	1916775	1928111	809673	1857492	"	"	"	1848492	823595	1855524	1880985
1110510	"	"	"	"	1880485	"	"	"	"	1884623	"	817258	1883439
1110511	"	"	820676	1900272	1849238	1862218	"	"	"	1884615	"	"	1885003
1110512	"	"	1882553	1928111	1845656	"	"	"	"	1882956	"	"	*1882555
1110513	"	"	820668	1900272	△	1857492	"	"	"	1882978	1842943	820989	1883439
1110514	"	"	"	1928111	○	1862218	"	"	"	1883664	"	"	1883656
1110515	1838100	"	1883746	1900272	×	×	"	"	"	1883779	"	"	1883748

†Shaft and Cam.

*Shaft includes Weights.

△Gear supplied by Hercules Motor Corp.

○Use 1883695 Gear, 1845656 Shaft Collar.

×Gear or Coupling not furnished by Delco-Remy.


△Use Contact Set No. 1855520.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
14	Lock Washer—Breaker Plate Support Screw.....	453844	All
15	Lock Washer—Cap Spring Support Screw.....	453844	All
16	Lock Washer—Condenser Attaching Screw.....	453435	All
17	Lock Washer—Terminal Screw.....	453844	All
NUTS			
18	Nut—Terminal.....	120622	All
SCREWS			
19	Screw—Breaker Plate Support.....	453418	All
20	Screw—Cap Spring Support.....	453418	All
21	Screw—Condenser Attaching.....	453341	1110501-2-3-4-5-6-7-8-9; 10-11-13-14-15
21	Screw—Condenser Attaching.....	132745	1110512
22	Screw—Contact Attaching.....	1914916	All
23	Screw—Terminal.....	820987	All
WASHERS			
24	Washer—Shim (.005 thk.).....	810074	1110501-2-3-4-5-6-7-8-9; 10-11-13
24	Washer—Shim (.005 thk.).....	1848595	1110512-14
25	Washer—Shim (.010 thk.).....	1912129	1110501-2-3-4-5-6-7-8-9; 10-11-13
25	Washer—Shim (.010 thk.).....	1848596	1110512-14
26	Washer—Space—Below Cam or Weight Plate.....	811912	All
27	Washer—Space—Under Coupling or Gear.....	811912	1110501-2-3-4-5-6-7-8-9; 10-11-13
27	Washer—Space—Under Coupling or Gear.....	1849806	1110515
27	Washer—Space—Under Collar.....	1837617	1110512-14
28	Washer—Insulation—Terminal Screw—Inside.....	820988	All
29	Washer—Insulation (Bushing)—Terminal Screw.....	1904600	All
30	Washer—Insulation—Terminal Screw—Outside.....	1882247	All
31	Washer—Plain—Terminal Screw—Outside.....	807716	All
32	Washer—Weight.....	811124	1110502-3-4-5-6-7-8-9; 10-11-12-13-14-15
MISCELLANEOUS			
—	ADVANCE ARM Assembly.....	*1884031	1110515
—	BUSHING—Upper & Lower—In Housing.....	825463	1110512
—	BUSHING—In Housing (late design).....	1909003	1110501-4-5-7-8-9; 11-12-14-15
—	BUTTON—Carbon—In Cap.....	*821604	All
33	CUP—Grease.....	1955293	All
—	PIPE—Breather.....	1860880	1110501-2-3
—	PLUG—Pipe—In Housing (late design).....	125947	1110501-4-5-7-8-9; 11-12-14-15
34	INSULATOR—Breaker Lever Spring.....	820991	All
35	SPRING—Cap.....	816801	All
36	SUPPORT—Cap Spring.....	826476	All
37	WICK—Felt—In Cam.....	1963555	1110502-3-4-5-6-7-8-9; 10-11-12-13-14-15

*For parts see Advance Arm—Group 1.

*If button recess in cap is spherical bottom drilled use part #1938193.

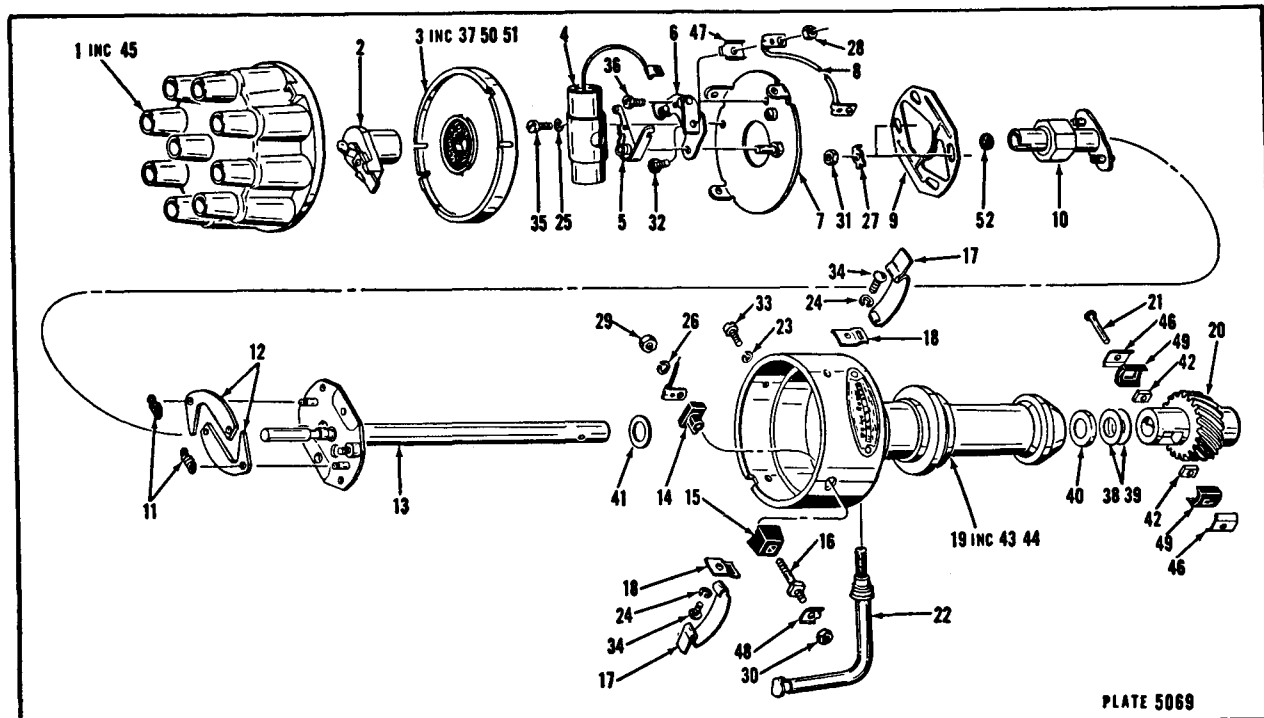

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Cover Housing	Con- denser	Lever Breaker	Contact and Support	Plate Breaker	Lead Terminal	Plate Hold Down	Cam	Spring Weight
	1	2	3	4	5	6	7	8	9	10	11
1110601.....	1837974	1836893		1869707	1917254	†	†	1837228		1865919	1909565
*1110602.....							1843439			1868897	1884610
1110603.....	1866660			1881030	1917254	1845785	1843440			1844222	825861
1110604.....	1837974			1928111						1865919	1884610
1110605.....	1902227			1881030						1878004	1884094
1110606.....				1900272						1881440	1883899
1110607.....											1885888
1110609.....		1836893	1902325		1905344					1900181	1884610
1110610.....											
1110611.....											
1110612.....	1906532	1906588				1938330	1906578	1906584		1906575	
1110614.....	1866660	1836893	1902325		1881394	1881399	1843440		1885557	1920541	1901737
1110616.....										1923600	1906858
1110617.....							1927789			1920763	1903430
1110618.....							1843440			1930127	1906858
1110619.....	1917247	1927393		1928111	1917254	1938330	1930585	1865978		1930562	1882995
1110620.....	1931513			1900272							1927235
1110621.....										1931425	1931384
1110622.....	1866660	1836893	1902325		1881394	1881399	1843440			1920541	1901737
1110623.....	1931513	1927393			1917254	1938330	1930585	1865978		1933283	1910312
1110624.....	1917247		1931377		1881394	1881466				1934510	1903693
1110625.....		1917249								1940042	1883121
1110626.....		1927393								1934510	1903693
1110627.....											
1110628.....	1866660	1836893	1902325		1881394	1881399	1843440			1923600	1906858
1110629.....										1948587	1904292
1110630.....	1917247	1927393		1928111	1917254	1938330	1930585	1948568		1947719	1947329
1110631.....	1931513			1900272				1865978		1930562	1927235
1110632.....										1931425	1931384
1110633.....										1933283	1910312
1110634.....	1866660	1836893	1902325		1881394	1881399	1943440			1959313	1904292
1110635.....	1931513	1927393	1931377		1917254	1938330	1930585	1865978		1959447	1885636

*Does not have any breaker mechanism.

†Use Contact Set No. 1882022.

□Use Contact Set No. 1938330


‡Use 1845785 Contact & Support (Lower), 1848506 Contact & Support (Upper).

○Use Contact Set No. 1925852.

*Use Contact Set No. 1963526.

‡Use 1869125 Plate (Lower) and 1869127 Plate (Upper).

Delco-Remy SERVICE PARTS CATALOG

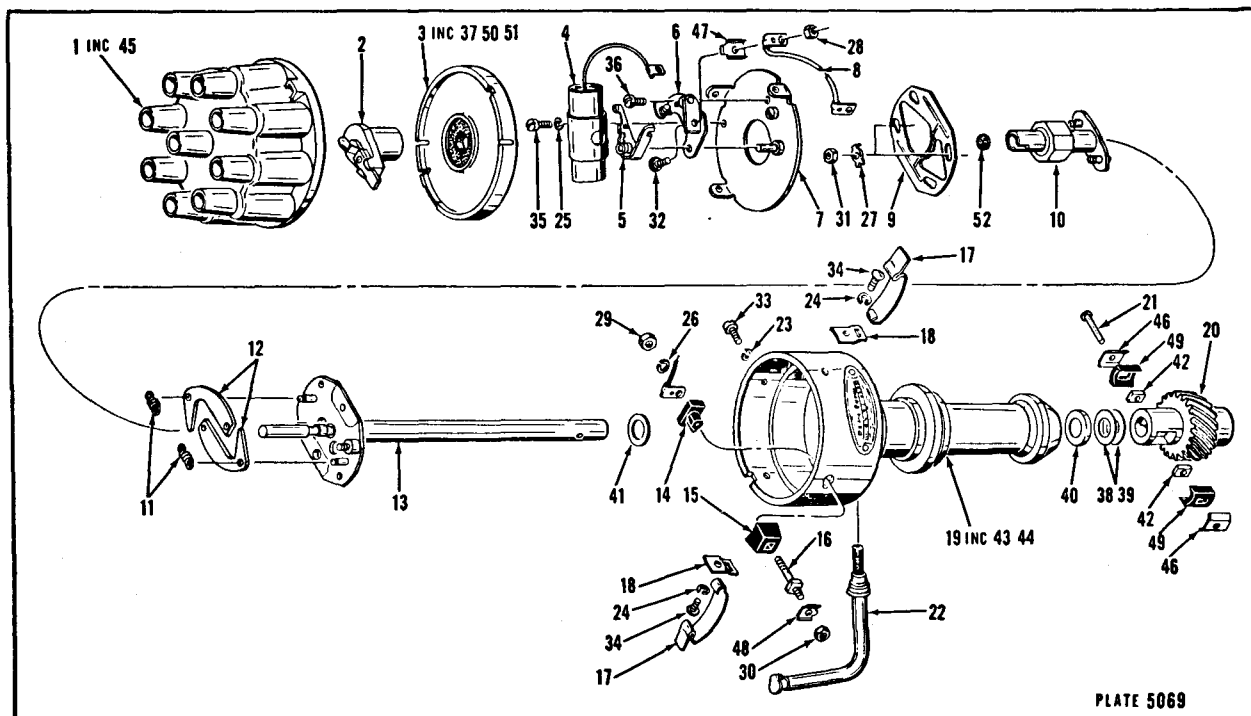

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Weight	Shaft and Plate	Bushing Inner	Bushing Outer	Stud Terminal	Spring Cap	Support	Housing	Gear or Coupling	Pin	Other Assembly
	12	13	14	15	16	17	18	19	20	21	22
1110601.....	818222	1868949			†1853625	1911336	1853292	1868947	1859325	1862218	
1110602.....	"	1868896				"	"	1869122	"	"	
1110603.....	"	1839018			†1836911	"	"	1868112	1856885	1857492	
1110604.....	"	1854836			"	"	"	1865917	809673	"	
1110605.....	1837944	1880403			"	"	"	1878002	1283902	"	
1110606.....	1845036	1881439			"	"	"	1837669	1837384	1862218	
1110607.....	"	1882531			"	"	"	1882530	"	"	
1110609.....	818222	1878572			"	1900188	"	1900179	809673	829421	
1110610.....	"	"			"	"	"	1901686	"	"	
1110611.....	"	"			"	"	1885324	1905345	"	1857492	
1110612.....	"	1906585						1906572	"	"	
1110614.....	1921271	1920539	1877871		†1836911	1900188	1885324	1920543	×1916732	△	
1110616.....	1880902	1923599	"		"	"	"	"	"	△	
1110617.....	1881371	1927786	"		"	"	"	1927783	821865	1862218	
1110618.....	1880902	1930125	"		"	"	"	"	×1916732	△	1922265
1110619.....	1881371	1931063	1912229	1914142	1916806	1909594	1847289	1930564	1931301	1908031	"
1110620.....	"	"	"	"	"	"	"	"	"	"	"
1110621.....	"	1931423	"	"	"	"	"	1931420	"	"	"
1110622.....	1921271	1931856	1877871		†1836911	1900188	1885324	1927783	×1916732	△	"
1110623.....	"	1933281	1912229	1914142	1916806	1909594	1847289	1930564	1931301	1908031	1927396
1110624.....	1881371	1934508	"	"	"	1889967	1931381	1934505	1934513	829421	1922265
1110625.....	1921271	1940040	1916805	"	"	"	"	1940043	×1940045	□	"
1110626.....	1881371	1943438	"	"	"	"	"	1934505	1943442	1908031	"
1110627.....	"	1934508	1912229	"	"	"	"	"	1934513	829421	"
1110628.....	1880902	1947918	1877871		1836911	1900188	1885326	1927783	×1916732	△	"
1110629.....	1881371	1948586	"		†1836911	"	1885324	"	×	△	"
1110630.....	"	1947717			"	1909594	1847289	1948565	1954931	273436	1938356
1110631.....	"	1931063	1912229	1914142	1916806	"	"	1930564	1948744	1908031	1922265
1110632.....	"	1931423	"	"	"	"	"	1931420	"	"	"
1110633.....	1921271	1933281	"	"	"	"	"	1930564	"	"	"
1110634.....	1881371	1959312	1877871		†1836911	1900188	1885324	1927783	1916732	"	
1110635.....	1880902	1959445	1912229	1914142	1916806	1889967	1931381	1959448	809673	455862	1922265

†Includes Insulator.

×Also use 821865 Collar.

△1908031 is Gear Pin; 1862218 is Collar Pin.

□Also use one 1900187 Support & Cover Locator.

□817267 is Gear Pin; 1862218 is Collar Pin.

Parts not listed in this Catalog will not be sold separately.

Revised to March 15, 1971

SERVICE PARTS CATALOG

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
—	Lock Washer—Breaker Lever Spring Attaching Screw.....	453844	1110601
—	Lock Washer—Breaker Plate Attaching Screw.....	453844	1110612; 24
23	Lock Washer—Breaker Plate Support Screw.....	453844	1110601-2-3-4-5-7-9-10-11-14-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5
—	Lock Washer—Cam Lubricator Screw.....	453844	1110617
24	Lock Washer—Cap Spring Support Screw.....	453844	1110601-2-3-4-5-6-7-8-9-10-11-14-16-17-18-19; 20-1-2-3-5-6-7-8-9; 30-1-2-3-4-5
25	Lock Washer—Condenser Attaching Screw.....	453844	1110601-2-3-4-5-7-9-10-11-14-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5
—	Lock Washer—Condenser Terminal.....	138530	1110601
—	Lock Washer—Condenser Terminal.....	453844	1110603-5
—	Lock Washer—Felt Wick Retainer Screw.....	9421423	1110605
—	Lock Washer—Filter Attaching Screw.....	1914579	1110609
—	Lock Washer—Filter Terminal Screw.....	138479	1110609
—	Lock Washer—Lead Attaching Screw— To Breaker Plate.....	453435	1110612
—	Lock Washer—Terminal Clamp Screw.....	121752	1110603-5
—	Lock Washer—Terminal Clamp Screw.....	453844	1110601-4-6-7-9-10-11-14-16-17-18-22
26	Lock Washer—Terminal Stud (Inside).....	121752	1110601-3-4-5-6-7-9-10-11-14-16-17-18; 22-8-9; 34
26	Lock Washer—Terminal Stud (Inside).....	453844	1110619; 20-1-3-4-5-6-7-8; 31-2-3
26	Lock Washer—Terminal Stud (Outside).....	453844	1110629; 34-5
27	Lock Washer—Weight Hold Down Plate Nut.....	1885558	1110614-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5
NUTS			
28	Nut—Breaker Lever Spring Attaching Screw.....	817363	1110601-3-4-5-6-7-9-10-11-12-14-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5
—	Nut—Breaker Lever Spring Stud.....	817363	1110601
—	Nut—Condenser Terminal.....	817363	1110601-3
—	Nut—Filter Attaching Screw.....	1900673	1110609
29	Nut—Terminal Stud (Inside).....	817363	1110601-3-4-5-6-7-9-10-11-14-16-17-18-19; 20-1-2-3-4-5-8-9; 31-2-3-4-5
30	Nut—Terminal Stud (Outside).....	120622	1110619; 20-1-3; 31-2-3-4
30	Nut—Terminal Stud (Outside).....	817363	1110625-6-7; 34
31	Nut—Weight Hold Down Plate.....	1923540	1110614-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5
SCREWS			
32	Screw—Breaker Lever Spring Attaching (8-32x $\frac{3}{8}$).....	1920777	1110601-3-4-5-6-7-9-10-11-14-16-17-18; 22-8-9; 34
32	Screw—Breaker Lever Spring Attaching (8-32x $\frac{3}{8}$).....	455957	1110601-19; 20-1-3-4-5-6-7-8; 30-1-2-3-5
—	Screw—Breaker Plate Attaching (Upper).....	1914916	1110601
—	Screw—Breaker Plate Attaching.....	453461	1110612; 24-6-7-9; 30
33	Screw—Breaker Plate Support.....	453418	1110634
33	Screw—Breaker Plate Support.....	453461	1110601-2-3-4-5-6-7-9-10-11-14-16-17-18-19; 20-1-2-3-4-5-8-9; 30-1-2-3-4-5
—	Screw—Cam Lubricator Attaching.....	453304	1110617
34	Screw—Cap Spring Support Attaching.....	453461	1110601-3-4-5-6-7-9-10-11-14-16-17-18-19; 20-1-2-3-5-6-7-8-9; 30-1-2-3-4-5
35	Screw—Condenser Attaching.....	131954	1110606-9-10-11
35	Screw—Condenser Attaching.....	453304	1110601-4; 14-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-4-5
35	Screw—Condenser Terminal.....	453647	1110603-5
36	Screw—Contact Attaching.....	1914916	All
—	Screw—Felt Wick Retainer.....	132243	1110605
—	Screw—Filter Attaching.....	132188	1110609
—	Screw—Filter Terminal.....	1915717	1110609
—	Screw—Lead Attaching to Breaker Plate.....	132900	1110612
—	Screw—Terminal Clamp.....	455957	1110601-2-3-4-5-6-10-11-14-16-17-18; 22-9; 34
—	Screw—Terminal Clamp.....	453461	1110603-5-7-9
—	Screw—Terminal—High Tension (Shipped separate).....	1839164	1110603-14-16-17-18; 22-8-9; 34
WASHERS			
—	Washer—Plain—Breaker Lever Spring Screw.....	810794	1110601-3-4-5-6-7-9-10-11-14-16-17-18; 22-8-9; 34
—	Washer—Insul.—Breaker Lever Spring Screw.....	1837224	1110601
—	Washer—Insul. Bushing—Breaker Lever Spring Screw.....	1837223	1110601
—	Washer—Condenser Terminal (.193x $\frac{3}{8}$ x $\frac{3}{4}$).....	813767	1110601

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
WASHERS—Continued			
—	Washer—Condenser Terminal (.168x3/8x1/4).....	816319	1110601
37	Washer—Felt (In Housing Cover).....	1900186	1110609-10-11-14-16-17-18; 22-8-9; 34
38	Washer—Shim (.005 thk.) as needed.....	810074	1110601-2-3-4-6-9-10-11-14-16-17-18; 22-4-6-7-8-9; 30-4-5
38	Washer—Shim (.005 thk.) as needed.....	1927529	1110605-19; 20-1-3; 31-2-3
39	Washer—Shim (.010 thk.) as needed.....	1912129	1110601-2-3-4-6-9-10-11-12-14-16-17-18; 22-4-6-7-8-9; 30-4-5
39	Washer—Shim (.010 thk.) as needed.....	1927530	1110605-19; 20-1-3; 31-2-3
40	Washer—Space—Under Coupling.....	1837617	1110601-4-6-7-9-10-11-12
40	Washer—Space—Under Collar or Gear.....	811912	1110603-14-16-17-18; 22-4-6-7-8-9; 30-4-5
40	Washer—Space—Under Gear.....	1945776	1110605-19; 20-1-3
41	Washer—Space—Under Weight Plate.....	1837617	1110601-2-4-5-6-9-10-11-12
41	Washer—Space—Under Weight Plate.....	811912	1110614-16-17-18-19; 20-1-2-3-4-6-7-8-9; 30-1-2-3-4-5
—	Washer—Insul. Bushing—Terminal Stud.....	1869129	1110601
—	Washer—Insul.—Terminal Stud.....	820988	1110601
—	Washer—Plain—Terminal Stud.....	810794	1110601-3-4-5-6-7-9-10-11-14-16-17-18; 22-8-9; 34
—	Washer—Weight.....	807295	1110601-2-3-4-5-6-7
MISCELLANEOUS			
42	BLOCK—Gear Cushion.....	1908028	1110614-16-18-19; 20-1-2-3-8-9; 31-2-3-4
—	BRACKET—Condenser.....	1869573	1110628; 34-5
43	BUSHING—Distributor Housing—Lower.....	1916454	1110605
43	BUSHING—Distributor Housing.....	825463	1110607
43	BUSHING—Distributor Housing.....	1909003	1110614-16-17-18; 22-4-6-7-8-9; 34-5
43	BUSHING—Distributor Housing—Lower.....	1923251	1110619; 20-1-3-5; 31-2-3
44	BUSHING—Distributor Housing—Upper.....	1874335	1110605
44	BUSHING—Distributor Housing—Upper.....	1923250	1110619; 20-1-3-5; 31-2-3
45	BUTTON—In Cap.....	1938193	1110601-2-4-5-6-7-9-10-11-12-14-16-17-18-19; 20-1-2-3-4-5-8-9; 34
45	BUTTON—In Cap.....	806923	1110603
45	BUTTON—In Cap.....	1938193	1110626-7; 30-1-2-3-4
—	CLAMP—Terminal.....	26153	1110601-3-4-5-6-7-9-10-11-14-16-17-18; 22-8-9; 34
—	CLAMP—Distributor Cap.....	1906543	1110612
—	CLIP—Breaker Lever Retainer.....	813245	1110601-3-4-5-6-7-9-10-11-12-14-16-18; 21-2-8-9; 34
46	CLIP—Cushion Retainer.....	1908030	1110614-16-18-19; 20-1-2-3-8-9; 31-2-3-4
47	CLIP—Lock—Breaker Lever Spring Screw.....	1868992	1110612-19; 20-1-3-4-5-6-7; 30-1-2-3-5
48	CLIP—Lock—Terminal.....	1914144	1110619; 20-1-3-4-5-6-7; 31-2-3-5
—	COLLAR (Fibre)—Terminal Space.....	1877871	1110601-2-5-6-7-9-10-11
—	CONNECTOR—Breather.....	127829	1110612
—	COUPLING—Shield.....	1906574	1110612
—	CUP—Grease.....	1955293	1110601-2-3-4-6-7
—	CUP—Grease.....	1900006	1110609-10-11
—	CUP—Grease.....	1906599	1110612
49	CUSHION—Gear.....	1908029	1110614-16-18-19; 20-1-2-3-8-9; 31-2-3-4
—	FILTER (Shipped separate).....	1900677	1110609
—	GASKET—Distributor Cap.....	1906542	1110612
50	GASKET—Housing Cover.....	1900185	1110609-10-11-14-16-17-18; 22-8-9; 34
—	GROMMET—For Lead.....	1928123	1110630
—	LEAD—Condenser.....	1884454	1110601-3-5
—	LUBRICATOR—Cam.....	1885562	1110617
—	NIPPLE—Lubricating.....	271283	1110605; 25
—	OILER (Only).....	113702	1110624-6-7-8; 30
—	OILER (Tube w/Wick).....	1922265	1110630
—	PIN—Cap Spring.....	1836915	1110601-2-3-4-5-6-7
—	PIN—Cap Spring.....	1862218	1110609-10-11-14-16-17-18; 22-8-9; 34
—	PIN—Collar Attaching.....	1862218	1110634
—	PLUG—Pipe—In Housing.....	125947	1110614-16-17-18; 22-8-9; 34
51	RETAINER—Felt—Housing Cover.....	1920523	1110609-10-11-14-16-17-18; 22-8-9; 34
—	SPRING—Felt Wick—In Housing.....	823550	1110605
—	SPRING—Retainer—Shaft Extension.....	1859326	1110601-2
—	SHAFT Extension (w/Coupling).....	1868952	1110601-2
52	WICK—Felt—In Cam.....	1963555	All
—	WICK—Felt—In Housing.....	823551	1110605

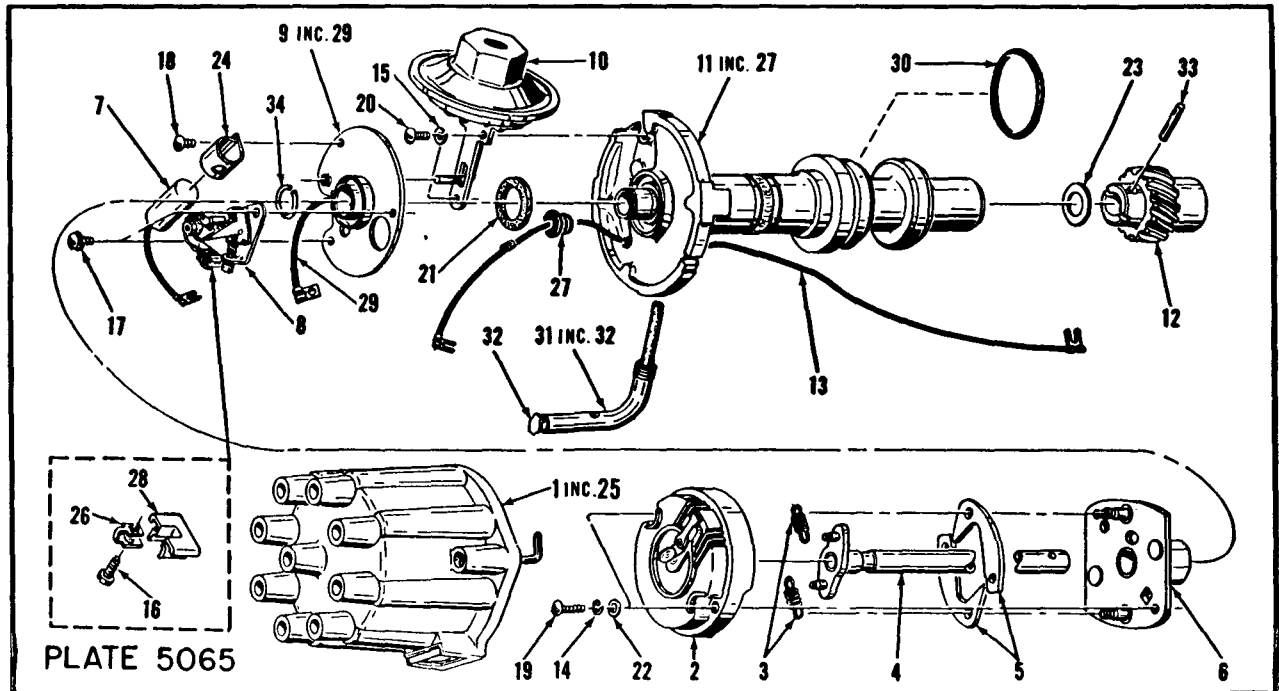


Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110636	1932018	1932018	1947657	1961338	1880902	1949078	1928111	1931988	1961342		1961344		1950577
1110637	1946976	"	1912189	1962192	1881371	1962194	"	"	1959814		1962195	1962197	1942518
1110638	"	"	"	1962183	"	1938116	"	"	1953752		1962181	1961198	"
1110639	1932018	"	1947657	1961338	1880902	1949078	"	"	1961342		1961344	1962806	1950577
1110643	1942654	"	1912189	1966337	1881371	1966339	"	1966294	1959814		1966342	1962197	1942518
1110644	"	"	"	"	"	"	"	"	"		"	1958599	"
1110645	"	"	1965978	1966487	"	1966489	"	"	"		1966484	1962197	"
1110646	"	"	"	"	"	"	"	"	"		"	1958599	"

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
14	LOCK WASHERS Lock Washer—Rotor Attaching Screw.....	453435	1110636-8-9; 43-4-5-6
—	SCREWS		
—	Screw (& Lock Washer)—Ball Bearing.....	453418	1110636-7-9
16	Screw—Breaker Lever Spring Attaching.....	9417096	All
—	Screw—Breaker Plate Attaching (#8-32 x 3/4).....	132768	1110636-9
—	Screw—Breaker Plate Attaching (#8-32 x 3/4).....	454155	1110636-9
—	Screw—Breaker Plate Attaching.....	453647	1110643-4-5-6
—	Screw—Contact Adjusting.....	1949844	All
17	Screw (& Lock Washer)—Contact Assembly Attach.....	1938527	All
18	Screw—Condenser Clamp Attaching.....	454458	1110636-7-8-9; 43-4-5-6
19	Screw—Rotor Attaching.....	9416183	1110636-8-9; 43-4-5-6
—	Screw (& Lock Washer)—Rotor Attaching.....	274453	1110637
—	WASHERS		
—	Washer—Felt—Under Plate Washer.....	1951099	1110638
23	Washer—Space—Between Gear & Base.....	1849806	1110638; 43-4-5-6
—	Washer—Shin (.005 thick).....	1927529	1110643-4-5-6
—	Washer—Shin (.010 thick).....	1927530	1110643-4-5-6
—	MISCELLANEOUS		
—	Ball BEARING.....	907186	1110643
—	Ball BEARING.....	907438	1110636-7-9
24	BRACKET—Condenser.....	1944118	1110636-9; 43-4-5-6
25	BRUSH—In Cap.....	1938193	1110636-7-8-9; 43-4-5-6
—	BUSHING—Housing.....	1938630	1110637
—	BUSHING—Housing.....	1957529	1110643-4
26	CLIP—Breaker Lever Spring Screw.....	1931998	All
27	GROMMET—For Primary Lead.....	1932023	All
28	INSULATOR—Breaker Lever Spring Screw.....	1931997	All
—	"O" RING—On Base.....	1928415	1110636-9
—	O" RING—On Base.....	1911165	1110643-4-5-6
33	PIN—Gear Attaching.....	456652	1110637-8; 43-4-5-6
33	PIN—Gear Attaching.....	455862	1110639
—	RETAINER—Ball Bearing.....	1961343	1110636
—	RETAINER—Ball Bearing.....	1925471	1110637
—	RETAINER—Breaker Lever Spring Screw.....	1938376	All
—	RING—Retainer—Ball Bearing.....	9415233	1110636-7-9; 43-4-5-6
—	RING—Spring Post.....	274681	1110643-4-5-6
—	SEAL—Lubrication.....	1950569	1110638
—	SLEEVE (Rubber)—Spring Post.....	1945548	1110637-8
—	SLEEVE (Rubber)—Spring Post.....	1961234	1110643-4-5-6
—	SPACER—Breaker Plate Attach. Screw (1 1/2" long).....	1953421	1110636-9
—	SPACER—Breaker Plate Attach. Screw (1 1/2" long).....	1954487	1110636-9
—	SPRING—Contact Adjusting.....	1931995	All

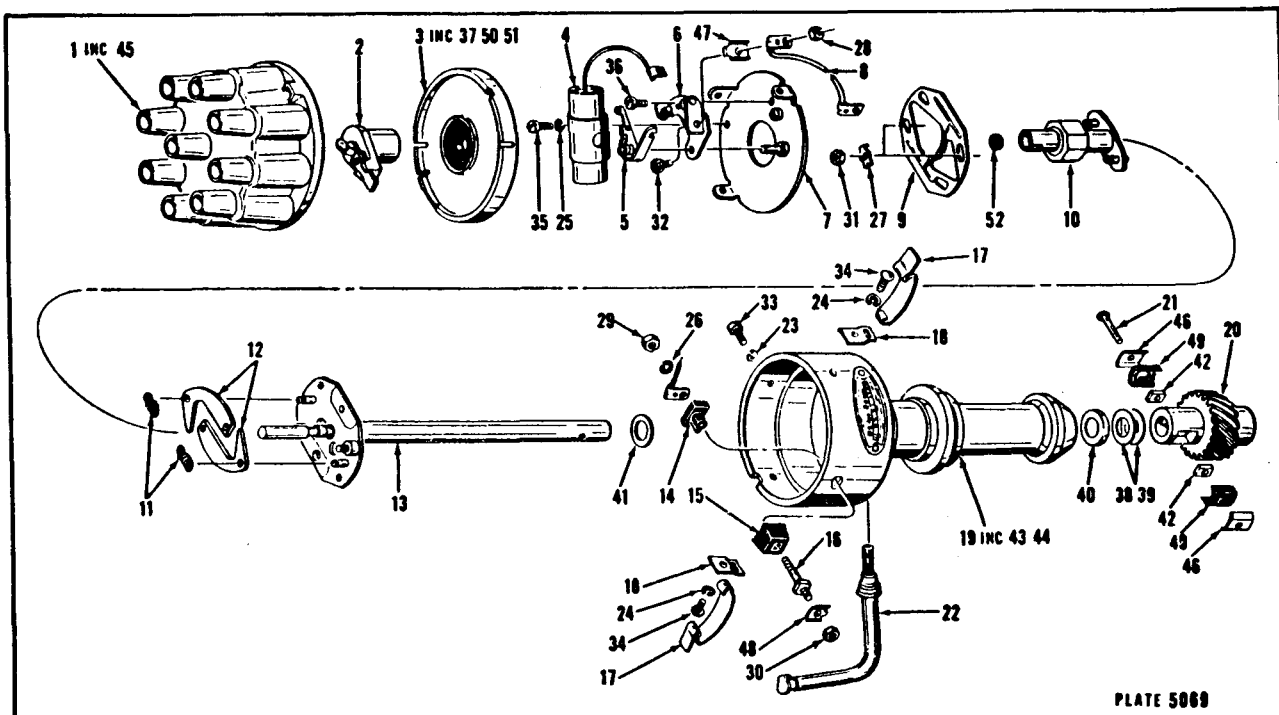

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Cover — Housing	Con- denser	Lever — Breaker	Contact and Support	Plate — Breaker	Lead — Terminal	Plate — Hold Down	Cam	Spring — Weight
	1	2	3	4	5	6	7	8	9	10	11
1110640.....	1931513	1927393	1931377	1956007	1917254	1871862	1930585	1930587	1885557	1963531	1939381

□Use Contact Set No. 1918148.

Delco-Remy SERVICE PARTS CATALOG

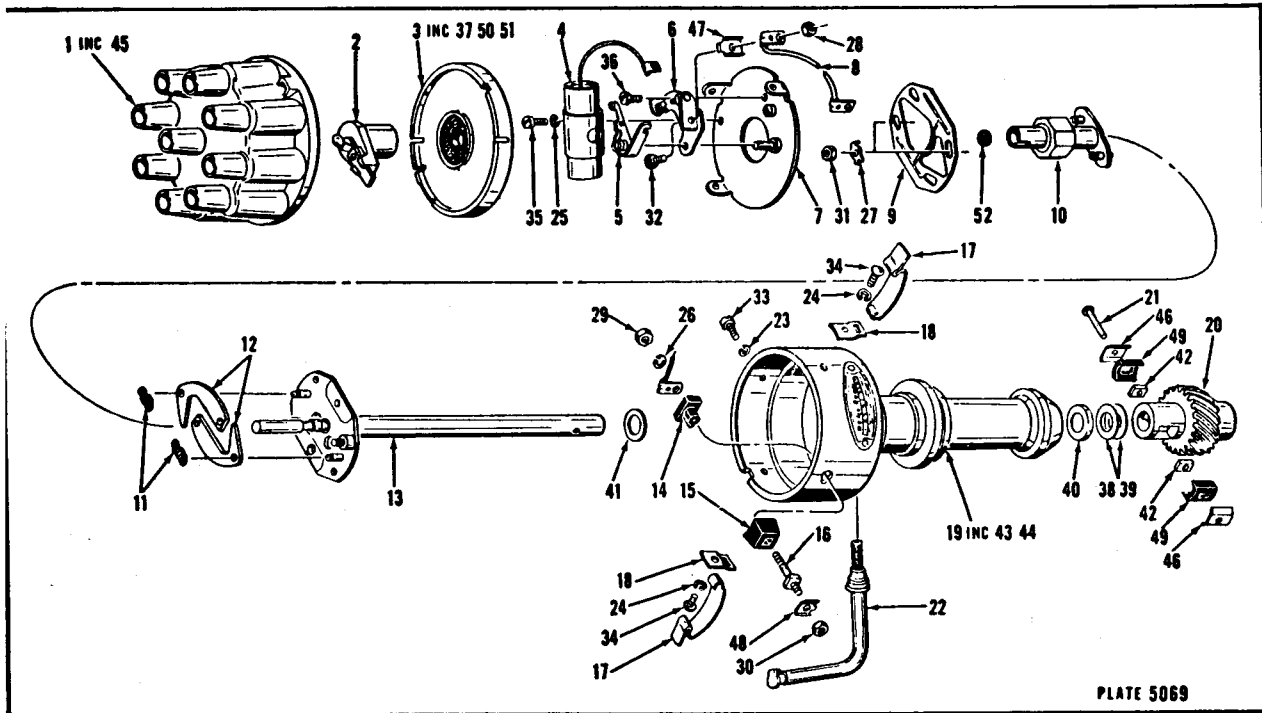


PLATE 5069

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Weight	Shaft and Plate	Bushing — Inner	Bushing — Outer	Stud — Terminal	Spring — Cap	Support	Housing	Gear or Coupling	Pin	Oiler Assembly
	12	13	14	15	16	17	18	19	20	21	22
1110640.....	1881371	1963532	1916805	1914142	1916806	1889967	1931381	1963528	1930487	829421	1922265

MINOR PARTS SECTION


Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Breaker Plate Support Screw.....	453844	1110640
24	Lock Washer—Cap Spring Support Screw.....	453844	1110640
25	Lock Washer—Condenser Attaching Screw.....	453844	1110640
—	Lock Washer—Condenser Terminal.....	453844	1110640
—	Lock Washer—Filter Attaching Screw.....	1914579	1110640
—	Lock Washer—Lead Attaching Screw— To Breaker Plate.....	453435	1110640
—	Lock Washer—Terminal Clamp Screw.....	453844	1110640
26	Lock Washer—Terminal Stud (Inside).....	453844	1110640
26	Lock Washer—Terminal Stud (Outside).....	453844	1110640
27	Lock Washer—Weight Hold Down Plate Nut.....	1885558	1110640
NUTS			
28	Nut—Breaker Lever Spring Attaching Screw.....	817363	1110640
29	Nut—Terminal Stud (Inside).....	817363	1110640
30	Nut—Terminal Stud (Outside).....	120622	1110640
31	Nut—Weight Hold Down Plate.....	1923540	1110640
SCREWS			
32	Screw—Breaker Lever Spring Attaching (8-32x $\frac{3}{8}$).....	455957	1110640
33	Screw—Breaker Plate Support.....	453461	1110640
34	Screw—Cap Spring Support Attaching.....	453461	1110640
35	Screw—Condenser Attaching.....	453304	1110640
36	Screw—Contact Attaching.....	1914916	1110640
WASHERS			
38	Washer—Shim (.005 thk.) as needed.....	1848595	1110640
39	Washer—Shim (.010 thk.) as needed.....	1848596	1110640
40	Washer—Space—Under Gear.....	1849806	1110640
41	Washer—Space—Under Weight Plate.....	811912	1110640
MISCELLANEOUS			
—	BRACKET—Condenser.....	1869573	1110640
45	BUTTON—In Cap.....	1938193	1110640
47	CLIP—Lock—Breaker Lever Spring Screw.....	1868992	1110640
48	CLIP—Lock—Terminal.....	1914144	1110640
—	SUPPORT—Cam Lubricator Wick.....	1931747	1110640
52	WICK—Felt—In Cam.....	819639	1110640
—	WICK—Felt—In Cam Lubricator.....	1931748	1110640

Delco-Remy

SERVICE PARTS CATALOG

DISTRIBUTOR—Group 90
Models 1110801 to 11, 13-14
Page 1

Revised to June 1, 1969

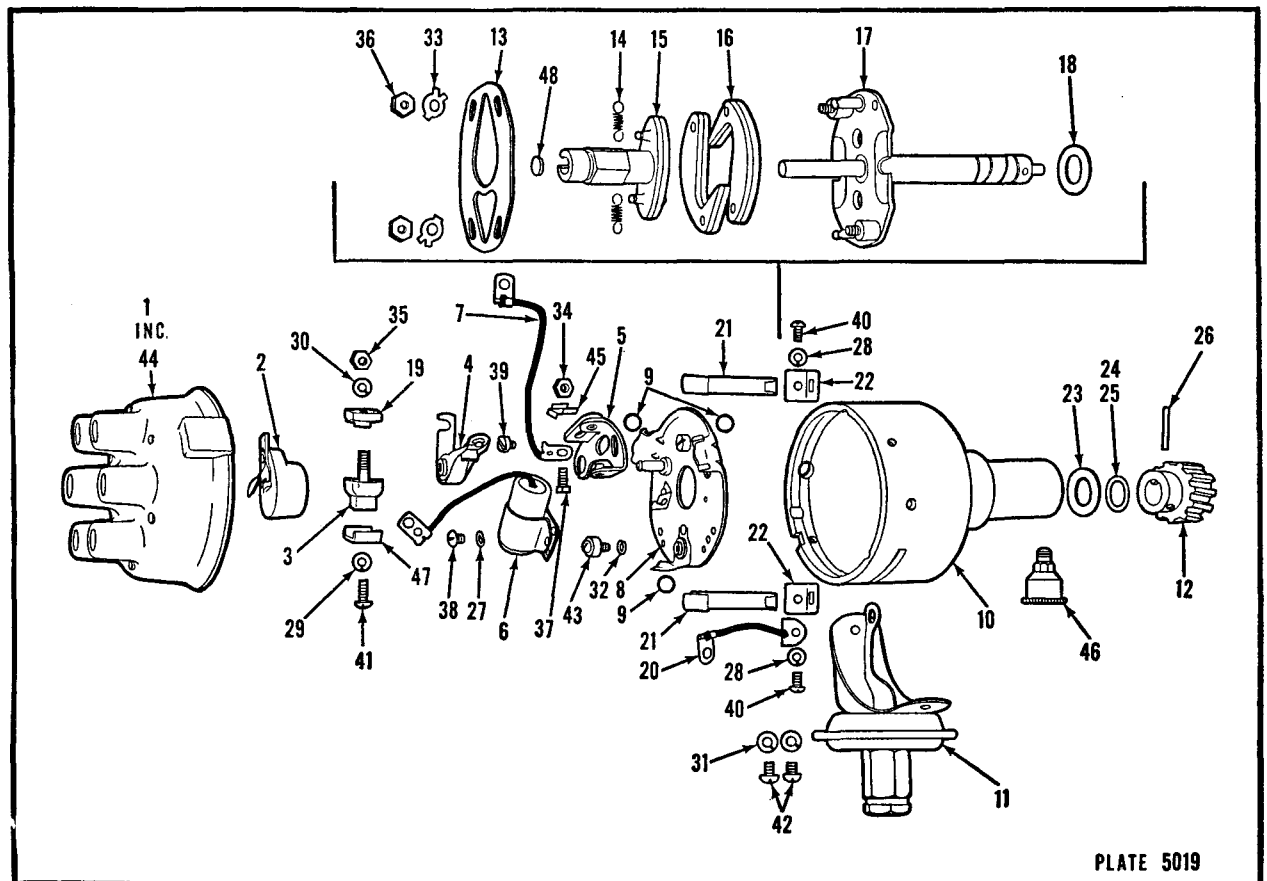

Illustrations are of Typical Parts only. For parts not illustrated see Minor Parts Section.

▲ Model No.	Cap	Rotor	Stud — Terminal	Breaker Lever	Contact & Support	Con- denser	Lead — Terminal Con- nector	Plate — Breaker	Ball	Housing	Vacuum Control	Collar, Coupling or Gear	Plate — Weight Hold Down
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110801	1837974	1836893	1853625	1917254	1938330	1928111	1865978	1914446	145639	1873026	*681-H	1283902	
1110802	"	"	"	○	○	"	"	"	"	1879591	*681-R	1859325	
1110803	1838131	"	"	○	○	"	"	"	"	1868894	"	"	
1110804	1837974	"	"	○	○	"	"	"	"	1878878	†1116021	819741	
1110805	"	"	"	○	○	"	"	"	"	1873026	*681-H	1283902	
1110806	"	"	"	●	●	1871865	"	1866045	"	1879005	†1116145	809673	
1110807	"	"	"	○	○	"	"	"	"	"	†1116030	"	
1110808	"	"	"	○	○	1938330	"	1914446	"	1879591	†1116145	1859325	
1110811	"	"	"	○	○	"	"	"	"	1910469	†	"	
1110813	1911566	1836893	"	○	○	"	"	"	"	1878878	†1116021	819741	
1110814	1837974	"	"	○	○	"	"	"	"	1912562	†1116145	1912568	1885557

*For parts see Distributor Vacuum Control—Group 3.


†For parts see Distributor Vacuum Control—Group 4.

▲Models 1110812-15-16-17-18-19 moved to Distributor Group 90-A.

○Contact Set No. 1918148

●Contact Set No. 1924499

Delco-Remy SERVICE PARTS CATALOG

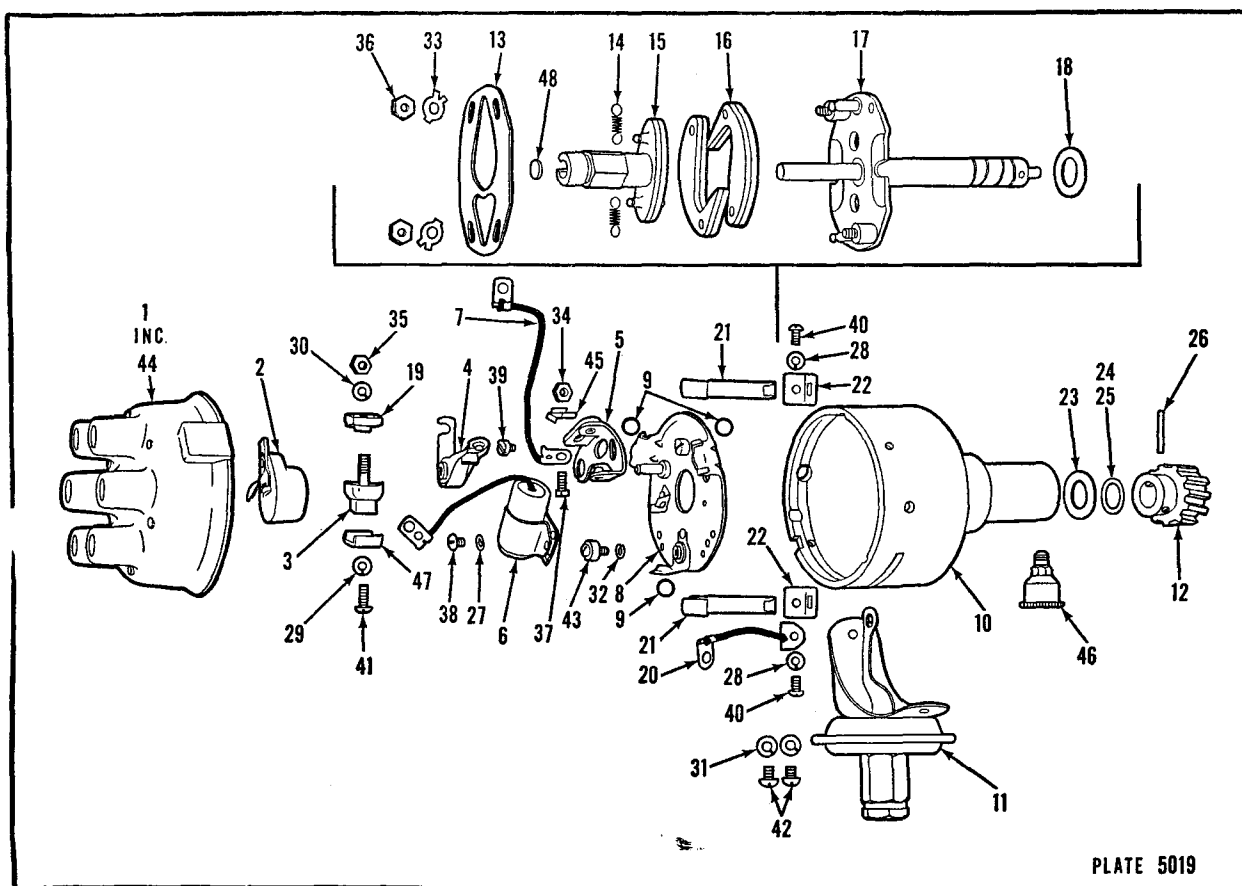

Illustrations are of Typical Parts only. For parts not illustrated see Minor Parts Section.

Model No.	Spring Weight	Cam	Weight	Shaft & Plate	Washer	Bushing — Insul — Inside	Lead — Breaker Plate Ground	Spring — Cap	Support	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Pin
	14	15	16	17	18	19	20	21	22	23	24	25	26
1110801	□	1868311	1837944	1868626	1849806	1865985	1879140	1911336	1911336	1945776	1927529	1848596	822273
1110802	1886277	1866706	1863143	1878573	811912	"	"	"	"	"	810074	1912129	1862218
1110803	"	"	"	"	"	"	"	"	"	"	"	"	"
1110804	1887553	1866456	818222	1866458	"	"	"	"	"	"	"	"	"
1110805	1884094	1874329	1837944	1874330	1849806	"	"	"	"	1945776	1927529	1848596	1857492
1110806	1884610	1879007	818222	1878572	811912	"	"	"	"	811912	810074	1912129	†829421
1110807	"	"	"	"	"	"	"	"	"	"	"	"	"
1110808	1886277	1866706	1863143	1886279	"	"	"	"	"	"	"	"	1862218
1110811	1885339	1885343	1881371	1910471	"	"	"	1909594	1847289	"	"	"	813131
1110813	1887553	1866456	1880902	1866458	"	1865985	"	"	"	"	810074	1912129	1862218
1110814	1882774	1912710	"	1912566	"	"	"	"	"	1912231	"	"	829421

□ One each required of 1885890 (6½ turns .029 wire) & 1886156 (6½ turns .040 wire)
†829421 is ⅜ dia.; 1857492 Pin ⅜ dia. used on early units.


Revised to June 1, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
27	Lock Washer—Condenser Attaching Screw -----	453844	1110801-2-3-4-5-6-7-8-11-13-14
—	Lock Washer—Dial Plate Attaching Screw -----	453435	1110814
28	Lock Washer—Distributor Cap Spring Screw -----	453844	1110801-2-3-4-5-6-7-8-11-13-14
—	Lock Washer—Felt Wick Spring Screw -----	9421423	1110801-5
29	Lock Washer—Terminal Clamp Screw -----	453844	1110801-2-3-4-5-6-7-8-11-13-14
30	Lock Washer—Terminal Stud Nut -----	453844	1110801-2-3-4-5-6-7-8-11-13-14
31	Lock Washer—Vacuum Control Screw -----	453435	1110801-2-3-4-5-6-7-8-11-13-14
32	Lock Washer—Vacuum Control Arm Attaching Screw -----	456413	1110801-2-3-4-5-6-7-8-11-13-14
33	Lock Washer—Weight Hold Down Plate Nut -----	1885558	1110814
NUTS			
34	Nut—Breaker Lever Spring Attaching Screw -----	817363	1110801-2-3-4-5-6-7-8-11-13-14
35	Nut—Terminal Stud—(Inside) -----	817363	1110801-2-3-4-5-6-7-8-11-13-14
36	Nut—Weight Hold Down Plate Attaching -----	1923540	1110814
SCREWS			
37	Screw—Breaker Lever Spring Attaching (8-32x $\frac{1}{8}$) --	455927	1110801-2-3-4-5-6-7-8-11-13-14
38	Screw—Condenser Attaching -----	453304	1110801-2-3-4-5-6-7-8-11-13-14
39	Screw—Contact Attaching -----	1914916	All
—	Screw—Dial Plate Attaching -----	178451	1110814
—	Screw—Distributor Cap Cover -----	455590	1110803
40	Screw—Distributor Cap Spring Support -----	453647	1110801-2-3-4-5-6-7-8-11-13-14
—	Screw—Felt Wick Spring -----	132243	1110801-5
—	Screw—Felt Wick Spring (Flat head) -----	1880477	1110801-5
41	Screw—Terminal Clamp -----	453461	1110802-3-4-5-6-7-8-13-14
41	Screw—Terminal Clamp -----	1835943	1110801-11
42	Screw—Vacuum Control Attaching -----	453463	1110801-2-3-4-5-6-7-8-11-13-14
43	Screw—Vacuum Arm Attaching (To Breaker Plate) --	141542	1110801-2-3-4-5-6-7-8
43	Screw—Vacuum Arm Attaching (To Breaker Plate) --	453460	1110811-13-14
WASHERS			
—	Washer—Breaker Plate Ground Spring -----	1865983	1110801-2-3-5
—	Washer—Breaker Lever Spring Screw -----	1865977	1110801-2
—	Washer—Plain—Dial Plate Attaching Screw -----	807295	1110814
—	Washer—Spring—Under Coupling or Gear -----	1912232	1110814
—	Washer—Weight -----	1914367	1110801-2-3-5-6
MISCELLANEOUS			
—	BEARING—(Bakelite)—Bkr. Plate—C.W. -----	1914333	
—	BEARING—(Bakelite)—Bkr. Plate—C.C.W. -----	1914336	
—	Breather PIPE -----	1860880	1110802-4
—	BUSHING—Distributor Housing -----	1874335	1110804; 13
—	BUSHING—Distributor Housing -----	825463	1110811
—	BUSHING—Distributor Housing -----	1916454	1110801-5-15
—	BUSHING—Distributor Housing -----	1909003	1110814
—	BUSHING—Distributor Housing (Lower) -----	1912564	1110814
44	BUTTON—Distributor Cap Carbon -----	1938193	1110801-2-3-4-5-6-7-8-11-13-14
—	CLAMP—Vacuum Control Bracket -----	1865984	1110801-2-3-4-5-6-7-8
45	CLIP—Lock—Breaker Lever Spring Screw -----	1868992	1110801-2-3-4-5-6-7-8-11-13-14
—	COVER—Cap -----	1838133	1110803
46	Grease CUP -----	1955293	1110802-3-4-6-7-8-11-13
—	Lubrication NIPPLE -----	109460	1110801-5
—	Pipe PLUG -----	125947	1110814
—	Shaft EXTENSION -----	1866484	1110802-3-8
—	Shaft EXTENSION -----	1910473	1110811
—	SPRING—Felt Wick -----	823550	1110801-5
—	SPRING—Shaft Extension Retainer -----	1859326	1110802-3-8
47	Terminal CLAMP -----	26153	1110801-2-3-4-5-6-7-8-11-13-14
48	WICK—Felt—In Cam -----	1963555	1110801-2-3-4-5-6-7-8-11-13-14
—	WICK—Felt—In Housing -----	823551	1110801-5

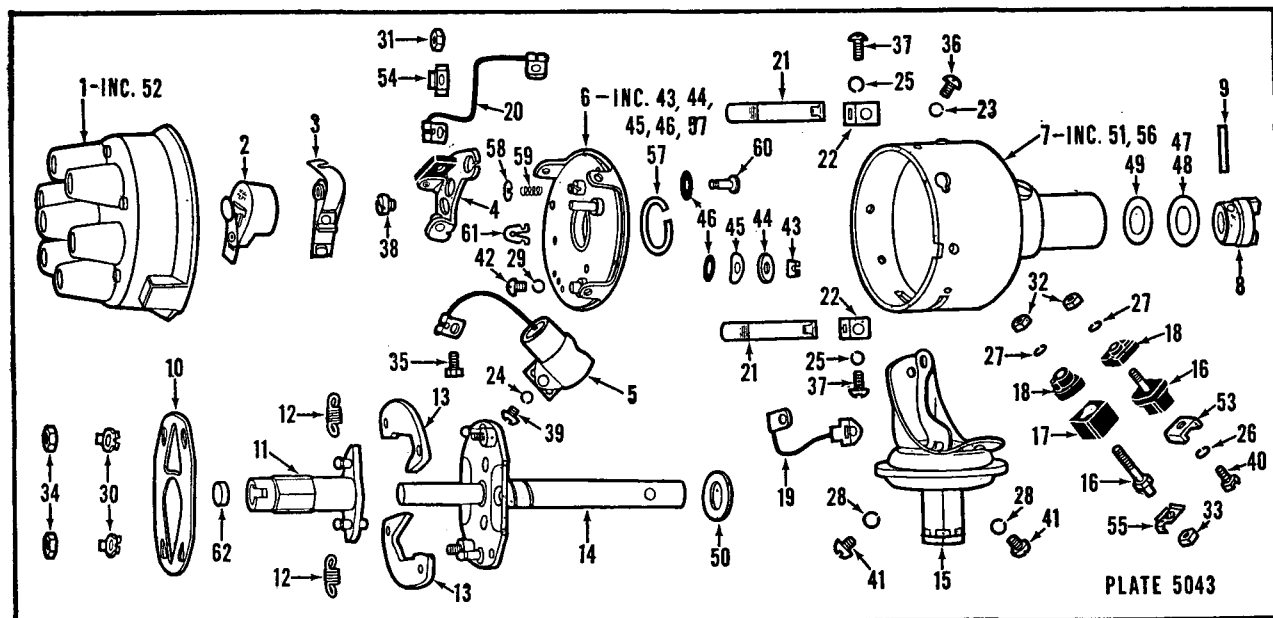

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Lever — Breaker	Contact & Support	Con- denser	Plate — Breaker	Housing	Collar — Coupling or Gear	Pin	Plate — Weight Hold Down	Cam
	1	2	3	4	5	6	7	8	9	10	11
1110812	▲1837974	▲1912768	b1917254	1938330	1928111	x1925439	1912208	1912230	1916757	1885557	1912211
1110815	1837974	†	"	"	"	"	1912415	1283902	822273	"	1912420
1110816	▲1911566	▲1836893	"	"	"	"	1912670	821865	813131	"	1912674
1110817	1837974	"	"	"	"	"	1914280	1912568	829421	"	1914283
1110818	▲	▲	"	"	"	"	1912670	821865	813131	"	1912674
1110819	"	1912768	"	"	"	"	1912208	1912230	1916757	"	1914283
1110820	1917247	1917249	b1917254	"	"	"	1917265	"	"	"	1917263
1110822	"	"	"	"	"	"	"	"	"	"	"
1110823	1866660	1836893	c1881394	c1881466	"	"	1912208	"	"	"	1914283
1110824	1917247	1917249	b1917254	1938330	"	"	1917896	1912568	829421	"	1917263
1110825	1837974	1836893	b1917254	"	"	"	1917081	"	1862218	"	1917103
1110826	1917247	1917249	b1917254	"	"	"	1917265	1912230	1916757	"	1917263
1110827	"	"	"	▲1871865	"	x1924500	1923248	1932667	822273	"	1923253
1110828	"	1927393	b	b1938330	"	x1925439	1927384	1952569	"	"	1929565
1110829	"	1917249	b	b	"	"	1917265	1912230	1916757	"	1922988
1110831	1837974	1836893	b1917254	"	"	"	1912670	821865	1862218	"	1912674
1110832	"	1912768	b1917254	"	"	"	1912415	1283902	822273	"	1912420
1110833	1917247	1917249	"	"	"	"	1917265	1912230	1916757	"	1923589
1110835	"	"	"	"	"	"	"	"	"	"	1925075
1110836	"	"	"	"	"	"	1924167	"	1862218	"	1924170
1110838	1837974	1912768	"	"	"	"	1912415	1283902	822273	"	1924805
1110839	1917247	1917249	"	"	"	"	1925099	1925110	+	"	1925106
1110841	"	"	"	"	"	"	1924167	"	1862218	"	1925389
1110843	"	"	"	"	"	"	1917896	1912568	829421	"	1928010
1110844	"	"	"	"	"	"	1926990	1926995	"	"	1927126
1110845	"	"	"	"	"	"	"	"	"	"	1927128
1110847	"	1927393	▲	▲1871865	"	x1930355	1928112	1958599	"	"	1928117
1110848	"	1917249	b	b1938330	"	x1925439	1924167	"	1862218	"	1925106
1110849	"	"	▲	▲1871865	"	x1924500	1923248	1932667	822273	"	1929010
1110850	1917247	1927393	b	b1938330	"	x1925439	1917896	1912568	829421	"	1928010

*Use 1916 Gear, 1908031 Pin (Gear). 821865 Collar, 813131 Pin (Collar).

†Use 1836893 Rotor for Models Prior to 1951, Later Models Use 1912768 Rotor.

▲Must be purchased separate.

b—use contact set No. 1938330.


c—use contact set No. 1882024.

*Use contact set No. 1938340.

*Use 829421 Gear Pin, 1862218 Coupling Pin.

xSee foot note page 3.

Delco-Remy SERVICE PARTS CATALOG

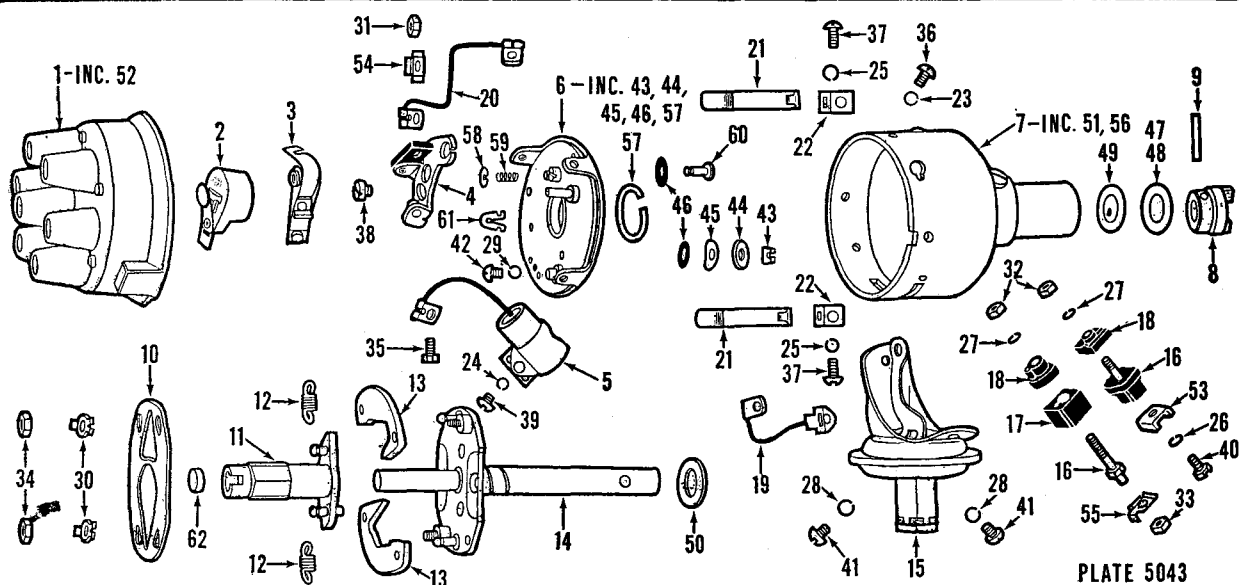

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Spring — Weight	Weight	Shaft & Plate	Vacuum Control	Stud — Terminal	Bushing — Terminal Outside	Bushing — Terminal Inside	Lead — Breaker Plate Ground	Lead — Terminal Connector	Spring — Cap	Support
	12	13	14	15	16	17	18	19	20	21	22
1110812.....	1886508	1880902	1912213	†1116047	1853625	—	1912229	1879140	1865978	1909594	1847280
1110815.....	□	1837944	1912418	†1116046	"	—	"	"	"	"	"
1110816.....	1884610	1880902	1912673	†1116050	"	—	"	"	"	"	"
1110817.....	1922250	"	1914284	†1116145	1916806	1914142	"	"	"	"	"
1110818.....	1887553	"	1912673	†1116050	"	"	"	"	"	"	"
1110819.....	1900611	"	1915801	†1116055	"	"	"	"	"	"	"
1110820.....	"	"	1915801	†1116069	"	"	"	1922429	"	"	"
1110822.....	1882595	"	1917804	†1116058	"	"	"	"	"	"	"
1110823.....	1884929	"	1917821	†1116047	"	"	"	1879140	"	"	"
1110824.....	1922350	"	1918466	†1116069	"	"	"	1922429	"	"	"
1110825.....	1885339	1881371	1917100	†1116145	"	"	"	1879140	"	"	"
1110826.....	1922426	1880902	1917804	†1116058	"	"	"	1922429	"	"	"
1110827.....	1925574	1924737	1923255	†1116090	"	"	"	"	"	"	"
1110828.....	1886277	1881371	1927388	†1116080	"	"	"	"	"	"	"
1110829.....	1923313	1881371	1915801	†1116064	"	"	"	"	"	"	"
1110831.....	1884610	1880902	1923045	†1116050	"	"	"	1879140	"	"	"
1110832.....	□	1837944	1912418	†1116065	1853625	—	"	"	"	"	"
1110833.....	1900611	1880902	1915801	†1116069	1916806	1914142	"	1922429	"	"	"
1110835.....	1925549	1881371	1925074	†1116074	"	"	"	"	"	"	"
1110836.....	1925205	1880902	1924171	†1116070	"	"	"	"	"	"	"
1110838.....	1926116	1881371	1924804	†1116090	1853625	—	"	1879140	"	"	"
1110839.....	1882595	"	1925104	†1116058	1916806	1914142	"	1922429	"	"	"
1110841.....	1908587	"	1917100	†1116070	"	"	"	"	"	"	"
1110843.....	1912764	"	1927951	†1116069	"	"	"	"	"	"	"
1110844.....	1925549	"	1926993	†1116074	"	"	"	"	"	"	"
1110845.....	1900611	1880902	1927018	†1116069	"	"	"	"	"	"	"
1110847.....	1929319	1881371	1928115	†1116085	—	—	"	"	•1928118	"	"
1110848.....	1882595	1881371	1928517	†1116145	1916806	1914142	1912229	"	1865978	"	"
1110849.....	1910529	"	1929046	†1116090	"	"	"	"	"	"	"
1110850.....	1912764	"	1927951	†1116090	"	"	"	"	"	"	"

†For parts see Distributor Vacuum Control—Group 4.

□One each required of 1885890 (6½ turns .029 wire) and 1886156 (½ turns .040 wire).

•1928118 is complete primary lead.

△Service by complete replacement.

Revised to August 15, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Breaker Plate Support Screw -----	453844	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-7-8-9; 50
24	Lock Washer—Condenser Screw -----	453844	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-8-9; 50
25	Lock Washer—Cap Spring Support Screw -----	453844	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-7-8-9; 50
26	Lock Washer—Terminal Clamp Screw -----	453844	1110812-15-16; 32-8
27	Lock Washer—Terminal Nut (Inside) -----	453844	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-8-9; 50
28	Lock Washer—Vacuum Control Screw -----	453435	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-9; 31-2-3-5-6-8-9; 41-3-4-5-8-9; 50
29	Lock Washer—Vacuum Control Arm—To Bkr. Plate -----	456413	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-7-8-9; 50
30	Lock Washer—Weight Hold Down Plate Nut -----	1885558	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-7-8-9; 50
NUTS			
31	Nut—Breaker—Lever Spring Screw -----	817363	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-7-8-9; 50
—	Nut—Cap Spring Support Screw -----	120622	1110820-2-4-6
32	Nut—Terminal (Inside) -----	817363	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-8-9; 50
33	Nut—Terminal (Outside) -----	120622	1110817-18-19; 20-2-3-4-5-6-7-8-9; 31-3-5-6-9; 41-3-4-5-8-9; 50
34	Nut—Weight Hold Down Plate -----	1923540	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-7-8-9; 50
SCREWS			
35	Screw—Breaker Lever Spring -----	455957	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-7-8-9; 50
36	Screw—Breaker Plate Support -----	453461	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-8-9; 50
37	Screw—Cap Spring Support (8-32x $\frac{3}{4}$) -----	453461	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-7-8-9; 50
37	Screw—Cap Spring Support (8-32x $\frac{1}{4}$) -----	454408	1110820-2-4-6-8; 47
38	Screw—Contact Attaching -----	1914916	All
39	Screw—Condenser Attaching -----	453304	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-7-8-9; 50
—	Screw—Dial Plate Attaching -----	178451	1110817
—	Screw—Felt Wick Spring (In. hsg.) -----	1880477	1110815; 27; 32-8; 49
—	Screw—H.T. Terminal (Shipped Separate) -----	1839164	1110823
40	Screw—Terminal Clamp -----	453461	1110812-16
40	Screw—Terminal Clamp -----	455957	1110815; 32-8
41	Screw—Vacuum Control Attaching -----	453463	1110812-15-16-17-18-19; 23-5; 31-2-8
41	Screw—Vacuum Control Attaching -----	453319	1110820-2-4-6-7-9; 33-5-6-9; 41-3-4-5-8-9
41	Screw—(& L. W.)—Vacuum Control Attaching -----	274937	1110828; 41; 50
41	Screw—Vacuum Control Attaching (8-32x $\frac{3}{4}$) -----	453461	1110847
41	Screw—Vacuum Control Attaching (8-32x $\frac{1}{4}$) -----	454408	1110847
42	Screw—Vacuum Control Arm—To Bkr. Plate -----	453460	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-7-8-9; 50
WASHERS			
43	Washer—Clamp—Under Breaker Plate -----	x1869357	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-9; 31-2-3-6-8-9; 41-8
—	Washer—Plain—Dial Plate Attaching Screw -----	807295	1110817
44	Washer—Shim (.010 thk.) Under Breaker Plate -----	x1912225	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-9; 31-2-3-6-8-9; 41-8
45	Washer—Tension—Under Breaker Plate -----	x1912227	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-9; 31-2-3-6-8-9; 41-8
46	Washer—Fibre—Under Breaker Plate -----	1927778	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-6-8-9; 41-3-7-8
46	Washer—Fibre—Under Breaker Plate -----	1927778	1110822-4-6-7; 35-9; 43-4-5-9; 50
47	Washer—Tension—Under Coupling or Gear -----	1912232	1110812-17-19; 20-2-4-6-9; 33-5; 43; 50
47	Washer—Shim (.005 thk.) -----	1927529	1110815; 27-8; 32-8-9; 47-9
47	Washer—Shim (.005 thk.) -----	810074	1110816-18; 23; 31
48	Washer—Shim (.010 thk.) -----	1927530	1110815; 27-8; 32-8-9; 47-9


xLater design Breaker Plates (1924500, 1925439) use 1925375 Tension Spring, 1925374 Stud (Tension Spring), 1925376 Washer (Tension Spring Retainer), and 1927778 Fibre Washer (under plate).

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
48	Washer—Shim (.010 thk.) -----	1912129	1110816-18; 23; 31
49	Washer—Space -----	1945776	1110815; 27-8; 32-8-9; 49
49	Washer—Space -----	1912231	1110817-18-19; 20-2-3-4-6-9; 31-3-5; 43; 50
49	Washer—Space -----	811912	1110823-4
49	Washer—Space -----	1837617	1110847
50	Washer—Space—Under Weight Plate -----	811912	1110815-16-18; 23-5-7-8; 31-2-6-8-9; 47-8-9
MISCELLANEOUS			
—	BLOCK—Drive Gear Cushion -----	1908028	1110823
51	BUSHING—Housing -----	1874335	1110816-18; 31
51	BUSHING—Housing -----	1916454	1110815; 32-8
51	BUSHING—Housing -----	1909003	1110812-17-19; 20-2-3-4-6-9; 33-5; 43; 50
51	BUSHING—Housing -----	825463	1110825; 36; 41-8
51	BUSHING—Housing (Lower) -----	1912564	1110817; 24; 43; 50
51	BUSHING—Housing (Lower) -----	1923251	1110827; 39; 44-5-9
51	BUSHING—Housing (Lower) -----	1927386	1110828
51	BUSHING—Housing (Lower) -----	1923250	1110847
51	BUSHING—Housing (Upper) -----	1923250	1110827-8; 39; 44-5-7-9
52	BUTTON—Carbon—In Cap -----	1938193	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-7-8-9
53	CLAMP—Terminal -----	26153	1110812-15-16; 32-8
54	CLIP—Lock—Brk. Lever Spring Screw -----	1868992	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-8-9; 50
55	CLIP—Lock—Terminal -----	1914144	1110817-18-19; 20-2-3-4-5-6-7-8-9; 31-3-5-6-8-9; 41-3-4-5-8-9; 50
—	CLIP—Terminal (Inner) -----	1916333	1110822-6
—	CLIP—Terminal (Outer) -----	1916334	1110822-6
—	CUP—Grease -----	1955293	1110816-18; 25; 31-6; 41-8
—	CUSHION—Drive Gear -----	1908029	1110823
—	EXTENSION—Shaft -----	1910473	1110825; 36; 41-8
—	EXTENSION—Shaft -----	1925108	1110839
—	GASKET—Vacuum Control -----	1917246	1110820-2-4-6-7-8-9; 33-5-6-9; 41-3-4-5-8-9; 50
—	GROMMET—Terminal Lead -----	1928123	1110847
—	NIPPLE—Lubrication -----	271283	1110815; 32-8
—	OILER -----	1922265	1110827-8; 39; 44-5-7-9
—	"O" RING—(For Hsg.) -----	1927131	1110844-5
—	PIPE—Breather -----	1860880	1110816-18; 31
—	PLATE—Dial -----	1912569	1110817
56	PLUG—Pipe—In Hsg. -----	125947	1110812-17-19; 20-2-3-4-6-9; 33-5; 43; 50
57	RETAINER—Breaker Plate -----	1941544	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-6-8-9; 41-3-7-8-9; 50
—	RETAINER—Drive Gear Cushion -----	1908030	1110823
58	RETAINER—Tension Spring -----	1925376	1110822-4-6-7-8; 35-9; 43-4-5-7; 50
—	SPRING—Felt Wick—In Hsg. -----	823550	1110815; 27; 32-8; 49
—	SPRING—Side Pressure -----	1941544	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-9; 31-2-3-6-8-9; 41-3-7-8-9; 50
59	SPRING—Bkr. Plate Tension -----	1925375	1110822-4-6-7-8; 35-9; 43-4-5-7-9; 50
60	STUD—Tension Spring -----	1925374	1110822-4-6-7-8; 35-9; 43-4-5-7-9; 50
61	SUPPORT—Terminal Connector Lead -----	1919352	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-6-8-9; 41-3-8-9; 50
—	WICK—Felt—In Cam -----	1963555	1110812-15-16-17-18-19; 20-2-3-4-5-6-7-8-9; 31-2-3-5-6-8-9; 41-3-4-5-7-8-9
—	WICK—Felt In Hsg. -----	823551	1110815; 27; 32-8; 49
—	WICK—Oil -----	1947350	1110827-8; 39; 44-5-7-9

x If button recess in cap is spherical bottom drilled use part # 1938193

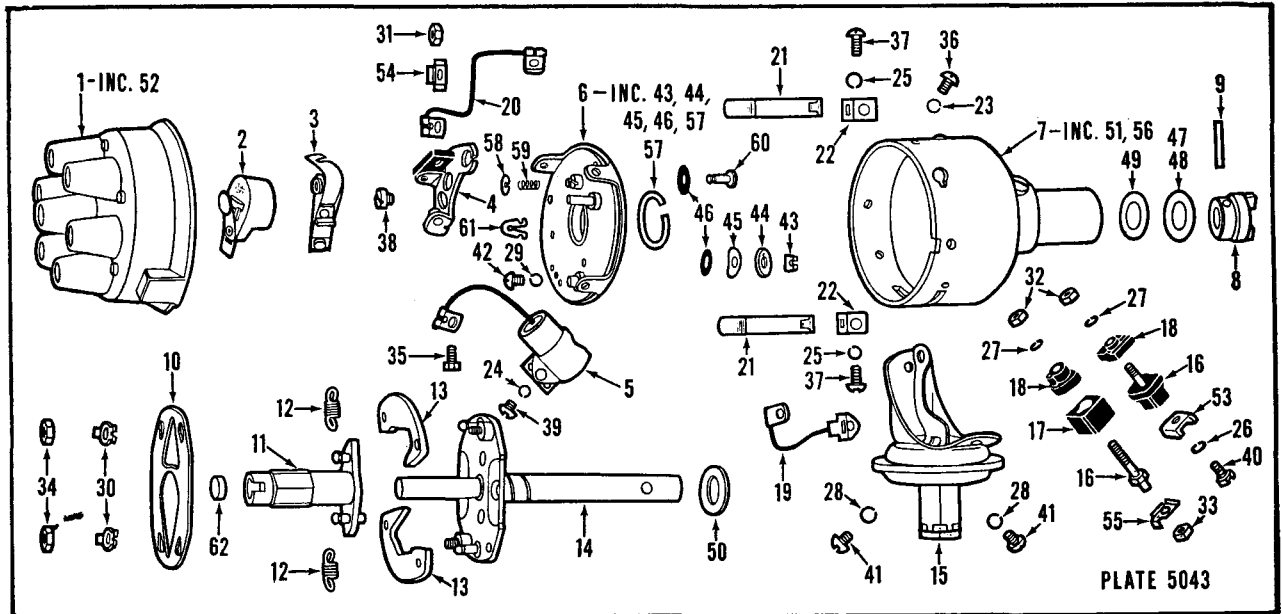

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Lever — Breaker	Contact & Support	Con- denser	Plate — Breaker	Housing	Collar — Coupling or Gear	Pin	Plate — Weight Hold Down	Cam
	1	2	3	4	5	6	7	8	9	10	11
1110852.....	1917247	1917249	b1917254	b1938330	1928111	1925439	1926990	1926995	829421	1885557	1930592
1110854.....	"	"	"	"	"	"	1930456	1930458	"	"	1931115
1110855.....	"	"	"	1871865	"	1930355	1928112	1958599	"	"	1928117
1110861.....	"	1917249	"	"	"	1924500	1923248	1932667	822273	"	1929010
1110862.....	"	1927393	b	b1938330	"	1925439	1927384	1952569	"	"	1927126
1110863.....	"	1917249	b	"	"	"	1933524	1933529	829421	"	1925106
1110864.....	"	"	b	"	"	"	1925099	1925110	"	"	"
1110865.....	"	"	b	"	"	"	1930456	1930458	829421	"	1934461
1110866.....	"	1927393	"	1871865	"	1930355	1928112	1958599	"	"	1934703
1110869.....	"	"	"	"	"	"	"	"	"	"	"
1110872.....	"	"	b	"	b1938330	1935507	1935512	"	"	"	1935505
1110873.....	"	1917249	b	"	"	1925439	1930456	1930458	"	"	1927122
1110875.....	"	1927393	b	"	"	1935507	1935926	1952569	1952271	"	1935930
1110878.....	"	"	"	1871865	"	1930355	1928112	1958599	829421	"	1936493
1110879.....	"	"	b	b1938330	"	1935507	1936776	"	"	"	1936495
1110880.....	"	1917249	b	"	b1938330	1925439	1930456	1930458	"	"	1936454
1110888.....	"	1927393	b	"	"	1935507	1935926	1952569	1952271	"	1935930
1110889.....	"	"	b	"	"	"	"	"	"	"	1938661
1110891.....	"	"	b	"	"	"	1937848	1958599	829421	"	1936495
1110896.....	"	1917249	b	"	"	1925439	1926990	1926995	"	"	1938937
1110897.....	"	1927393	b	"	"	1935507	1935926	1952569	1952271	"	1939343
1110899.....	"	1917249	b	"	"	1925439	1925099	1925110	829421	"	1925106
1110905.....	"	1940123	b	"	"	1935507	"	"	"	"	1939553
1110906.....	"	1927393	b	"	"	1930355	"	"	"	"	1936493
1110908.....	1931513	1940123	b	"	"	1935507	"	"	"	"	1939553
1110921.....	1925223	1925224	1941542	1915969	1921254	1925439	1943582	1933529	1916004	1915007	1925106
1110922.....	"	"	"	"	"	"	"	1941528	"	"	"
1110935.....	1931513	1927393	"	b1938330	1928111	1935507	1937848	1958599	829421	1885557	1936495
1110937.....	1917247	1917249	b1917254	b	"	1925439	1943582	1933529	"	"	1925106
1110938.....	"	"	b	"	"	"	"	1941528	"	"	"

b—use contact set No. 1938330.

†Use contact set No. 1924499.

□Use 829421 Pin for Gear & 1862218 Pin for Shaft Extension.


○Lower Housing is 1939555; Upper Housing is 1938654. *Lower Housing is 1940120; Upper Housing is 1938654.

*Upper Gear is 1938660; Lower Gear is 1958599.

*Use 1857502 for Upper Gear; 829421 for Lower Gear.

†Lower Housing is 1939555; Upper Housing is 1939586.

Delco-Remy SERVICE PARTS CATALOG

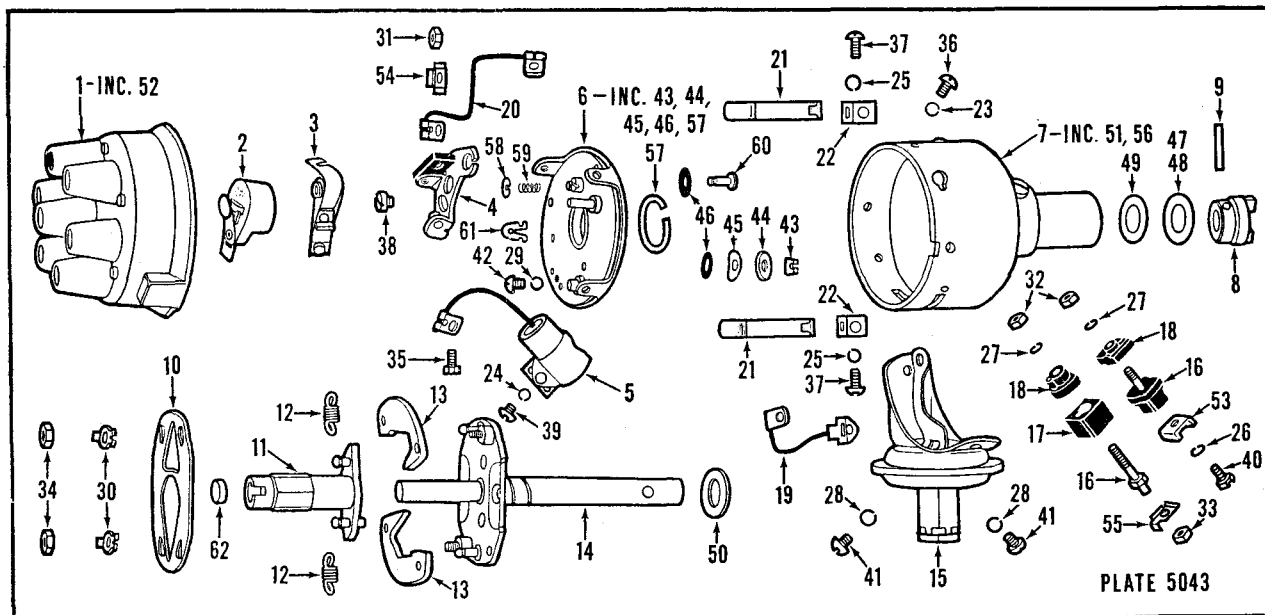

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Spring Weight	Weight	Shaft & Plate	Vacuum Control	Stud Terminal	Bushing Terminal Outside	Bushing Terminal Inside	Lead Breaker Plate Ground	Lead Terminal Connector	Spring Cap	Support
	12	13	14	15	16	17	18	19	20	21	22
1110852	1931257	1881371	1926993	†1116074	1847647	1914142	1912229	1922429	1865978	1909594	1847289
1110854	1886967	"	1930454	†1116069	"	"	"	"	"	"	"
1110855	1886508	1880902	1928115	†1116104	"	"	"	"	Δ1930996	"	"
1110861	1910529	1881371	1929646	†1116090	1847647	1914142	1912229	"	1865978	"	"
1110862	1933350	"	1935929	†1116080	"	"	"	"	"	"	"
1110863	1882595	"	1933527	†1116069	"	"	"	"	"	"	"
1110864	"	"	1933794	†1116058	"	"	"	"	"	"	"
1110865	1900221	"	1934460	†1116101	"	"	"	"	"	"	"
1110866	1886967	"	1935503	†1116100	"	"	"	"	Δ1928118	"	"
1110869	"	"	"	†1116104	"	"	"	"	"	"	"
1110872	1886967	"	1935503	"	"	"	"	"	Δ1935585	"	"
1110873	1900611	1880902	1935520	†1116109	1847647	1914142	1912229	1922429	1865978	"	"
1110875	1835483	1924737	1935529	"	"	"	"	"	1930587	"	"
1110878	1912189	1881371	1935503	†1116104	"	"	"	1922429	Δ1928118	"	"
1110879	"	"	"	"	"	"	"	"	Δ1935585	"	"
1110880	1883373	"	1937100	†1116101	1847647	1914142	1912229	1922429	1865978	"	"
1110888	1935843	1924737	1937894	"	"	"	"	1865978	1930587	"	"
1110889	1912189	1881371	1940442	"	"	"	"	"	Δ1935585	"	"
1110891	1912189	"	1935503	"	"	"	"	"	"	"	"
1110896	1934380	"	1938936	†1116074	1847647	1914142	1912229	1922429	Δ1865978	"	"
1110897	1933350	"	1935929	"	"	"	"	1865978	1930587	"	"
1110899	1882595	"	1939407	†1116058	"	"	"	1922429	1865978	"	"
1110905	1909507	"	1940442	"	"	"	"	"	Δ1935585	"	"
1110906	1912189	"	1939583	†1116104	"	"	"	"	Δ1939588	"	"
1110908	1909507	"	1940442	"	"	"	"	1865978	Δ1935585	"	"
1110921	1923193	1881371	1941526	†1116069	1847647	1917924	1912229	1925218	1925226	1925222	1915030
1110922	"	"	"	†	"	"	"	"	"	"	"
1110935	1912189	1881371	1935503	"	"	"	"	1865978	1933585	"	1847289
1110937	1882595	"	1943587	†1116145	1847647	1914142	1912229	1922429	1865978	1909594	"
1110938	"	"	"	†1116145	"	"	"	"	"	"	"

†For parts see Distributor Vacuum Control—Group 4.

ΔService by complete replacement.

ΔComplete Primary Lead.

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Breaker Plate Support Screw -----	453844	1110852-4; 61-2-3-4-5; 72-3-5; 80-8-9; 96-7-9; 905-6-8; 21-2; 37-8
24	Lock Washer—Condenser Screw -----	453844	1110852-4-5; 61-2-3-4-5; 72-3-5-9; 80-8-9; 91-6-7-9; 905-8; 921-2; 35-7-8
25	Lock Washer—Cap Spring Support Screw -----	453844	1110852-4-5; 61-2-3-4-5-6-9; 72-3-5-8-9; 80-8-9; 91-6-7-9; 905-6-8; 921-2; 35-7-8
—	Lock Washer—Oil Seal & Cap Screw -----	453844	1110889; 905-6-8
27	Lock Washer—Terminal Nut (Inside) -----	453844	1110852-4; 62-3-4-5; 73; 80-8; 96-7-9; 921-2; 937-8
28	Lock Washer—Vacuum Control Screw -----	453844	1110855; 78
28	Lock Washer—Vacuum Control Screw -----	453435	1110921-2
29	Lock Washer—Vacuum Control Arm—To Bkr. Plate -----	456413	1110852-4-5; 61-2-3-4-5-6-9; 73-8; 80; 96-9; 921-2; 937-8
30	Lock Washer—Weight Hold Down Plate Nut -----	1885558	1110852-4-5; 61-2-3-4-5-6-9; 72-3-8-9; 80-8-9; 91-6-7-9; 905-6-8; 35-7-8
30	Lock Washer—Weight Hold Down Plate Nut -----	1915009	1110921-2
NUTS			
31	Nut—Breaker—Lever Spring Screw -----	817363	1110852-4-5; 61-2-3-4-5-6-9; 72-3-8-9; 80-8-9; 91-6-7-9; 905-6-8; 35-7-8
31	Nut—Breaker—Lever Spring Screw -----	1913199	1110921-2
32	Nut—Terminal (Inside) -----	817363	1110852-4; 61-2-3-4-5; 73; 80-8; 96-7-9; 937-8
32	Nut—Terminal (Inside) -----	1913199	1110921-2
33	Nut—Terminal (Outside) -----	120622	1110852-4; 61-2-3-4-5; 73; 80-8; 96-7-9; 937-8
33	Nut—Terminal (Outside) -----	432229	1110921-2
34	Nut—Weight Hold Down Plate -----	1923540	1110852-4-5; 61-2-3-4-5-6-9; 72-3-8-9; 80-8-9; 91-6-7-9; 905-6-8; 35-7-8
34	Nut—Weight Hold Down Plate -----	1924828	1110921-2
SCREWS			
35	Screw—Breaker Lever Spring -----	455957	1110852-4-5; 61-2-3-4-5-6-9; 72-3-8-9; 80-8-9; 91-6-7-9; 905-6-8; 21-2; 35-7-8
36	Screw—Breaker Plate Support -----	454408	1110899; 937-8
36	Screw—Breaker Plate Support -----	453461	1110852-4; 61-2-3-4-5; 72-3-5; 80-8-9; 96-7; 905-6-8; 21-2
37	Screw Cap Spring Support (8-32x $\frac{3}{8}$) -----	453461	1110852-4-5; 61-2-3-4-5-6-9; 72-3-5-8-9; 80-8-9; 91-6-7-9; 905-6-8; 21-2; 35-7-8
37	Screw—Cap Spring Support (8-32x $\frac{1}{8}$) -----	454408	1110852-4-5; 62-3-5-5-6-9; 73-8; 80; 96; 906
—	Screw—Clamp Band Attaching -----	454408	1110889
—	Screw—Clamp Band Attaching -----	1917684	1110905-6-8
38	Screw—Contact Attaching -----	1914916	All
39	Screw—Condenser Attaching -----	453304	All
—	Screw—Felt Plug—In Housing -----	1880447	1110861
—	Screw (& Lock Washer)—Ball Bearing Attaching -----	453418	1110889; 905-6-8; 21-2; 37-8
—	Screw—Oil Seal & Cap Assem. Attaching -----	454408	1110889; 905-6-8
41	Screw—Vacuum Control Attaching -----	453319	1110921-2
41	Screw—Vacuum Control Attaching (8-32x $\frac{3}{8}$) -----	453461	1110855
41	Screw—Vacuum Control Attaching (8-32x $\frac{1}{8}$) -----	454408	1110855; 78
41	Screw—(& L. W.)—Vacuum Control Attaching -----	274937	1110852-4; 61-2-3-4-5; 73; 80; 96-9; 937-8
42	Screw—Vacuum Control Arm—To Bkr. Plate -----	453460	1110852-4-5; 61-2-3-4-5-6-9; 73-8; 80; 96-9; 921-2; 37-8
WASHERS			
46	Washer—Fibre—Under Breaker Plate -----	1927778	1110852-4-5; 61-2-3-4-5-6-9; 73-8; 80-8; 96; 906; 921-2; 37-8
47	Washer—Shim (.005 thk.) -----	1927529	1110855; 61-2-3-4-6-9; 72-8-9; 88-9; 91-7-9; 905-6-8; 21-2; 35-7-8
48	Washer—Shim (.010 thk.) -----	1927530	1110855; 61-2-3-4-6-9; 72-8-9; 88-9; 91-7-9; 905-6-8; 21-2; 35-7-8
49	Washer—Space -----	1837617	1110855; 66-9; 72-8-9; 89; 91; 905-6-8-9; 35
49	Washer—Space -----	1945776	1110861-2-3-4; 88; 97-9; 921-2; 937-8
—	Washer—Space—Between Cross Shift, Gear & Plug -----	1937980	1110889; 905-6-8
—	Washer—Space—Between Cross Shift, Gear & Oil Seal -----	1913004	1110889; 905-6-8
50	Washer—Space—Under Weight Plate -----	811912	1110855; 61-2-3-4-6-9; 72-8-9; 88; 91-7-9; 935

Parts not listed in this catalog will not be sold separately.

MINOR PARTS SECTION

Ilus. No.	Name	Part No.	Used on Models
	WASHERS—(Continued)		
—	Washer—Tension Spring Retainer -----	1925376	1110896-9; 906; 37-8
—	Washer—Tension Spring Retainer -----	1941541	1110921-2
	MISCELLANEOUS		
—	BALL BEARING -----	954939	1110889; 905-6-8; 21-2; 37-8
—	BAND—(Clamp)—Housing Attaching -----	1938835	1110889; 905-6-8
—	BUSHING—Cross Shaft -----	1938648	1110889; 905-6
51	BUSHING—Housing (Lower) -----	1923251	1110852-4; 61-3-4-5; 73; 80; 96-9; 921-2; 937-8
51	BUSHING—Housing (Lower) -----	1923250	1110855; 61-6-9; 72-8-9; 88; 96-7-9; 935
51	BUSHING—Lower -----	1927386	1110862; 75; 88; 97-9
51	BUSHING—Housing (Upper) -----	1923250	1110852-4-5; 62-3-4-5-6-9; 72-3-5-8-9; 80-8; 91-7-9; 935
—	BUSHING—Oil Seal & Cap -----	1938648	1110889; 905-6-8
52	BUTTON—Carbon—In Cap -----	1938193	1110852-4-5; 61-2-3-4-5-6-9; 72-3-5-8-9; 80-8-9; 91-6-7-9; 905-6-8; 21-2; 35-7-8
—	CAP—Tach. Coupling -----	1940189	1110908
—	CLAMP—Bearing Retainer -----	1920470	1110921-2
—	CLAMP—Bearing Retainer -----	1925471	1110889; 937-8
—	CLAMP—Bearing Retainer -----	1939551	1110905-6-8
54	CLIP—Lock—Breaker Lever Spring Screw -----	1868992	1110852-4; 61-2-3-4-5; 72-3-9; 80-8-9; 91-6-7-9; 905-6-8; 35-7-8
54	CLIP—Lock—Breaker Lever Spring Screw -----	1915996	1110921-2
55	CLIP—Lock—Terminal -----	1914144	1110852-4; 61-2-3-4-5; 73; 80-8; 96-7-9; 937-8
55	CLIP—Lock—Terminal -----	1917925	1110921-2
—	COUPLING—Tach. Drive -----	1939939	1110908
—	CUP—Grease -----	1955293	1110885
—	EXTENSION—Shaft -----	1925108	1110864
—	GASKET—Cross Shaft -----	1939361	1110889; 905-6
—	GASKET—Oil Seal & Cap -----	1937979	1110889; 905-6-8
—	GASKET—Vacuum Control -----	1917246	1110852-4; 61-2-3-4-5; 73; 80; 96-9; 937-8
—	GASKET—Vacuum Control -----	1925221	1110921-2
—	GEAR—Cross Shaft -----	1938656	1110889; 905-6-8
—	GROMMET—Terminal Lead -----	1928123	1110855; 66-9; 72-8-9; 88-9; 905-6-8; 35
—	LEAD—Breaker Lever Connector -----	1865978	1110872-9
—	OIL SEAL -----	1937986	1110889; 905-6-8
—	OIL SEAL & Cap Assem. -----	1937985	1110889; 905-6-8
—	OILER only -----	113702	1110852-4; 61-3-4-5-6-9; 72-5-8-9; 88; 91-6; 935
—	OILER (& Tube) -----	1922265	1110852-4; 61-2-3-4-5-6-9; 72-3-5-8-9; 80-8; 96-7-9; 935
—	"O" RING—Ball Bearing Seal -----	1939552	1110905-6-8
—	"O" RING—(For Hsg.) -----	1927131	1110852; 96
—	PIN—Clamp Band Screw -----	1906549	1110889; 905-6-8
—	PIN—Cross Shaft Gear Attaching -----	1862218	1110889; 905-6-8
—	PIN—Shaft and Coupling -----	1862218	1110899
—	PLUG—Expansion—Cross Shaft -----	810819	1110889; 905-6
—	PLUG—Felt—In Housing -----	823551	1110861
57	RETAINER—Breaker Plate -----	1912226	1110852-4-5; 62-3-4-5-6-9; 73-8; 80; 96; 906; 37-8
57	RETAINER—Breaker Plate -----	1941545	1110921-2
58	RETAINER—Tension Spring -----	1925376	1110852-4-5; 61-2-3-4-5-6-9; 73-8; 80
—	SHAFT (& Coupling) -----	1925108	1110899
—	SHAFT—Cross (Fuel Inject.) -----	1941269	1110889; 905-6
—	SHAFT—Cross (Fuel Inject.) -----	1941240	1110908
—	SPRING—Felt Plug—In Housing -----	823550	1110861
—	SPRING—Side Pressure -----	1941544	All
59	SPRING—Bkr. Plate Tension -----	1925375	1110852-4-5; 61-2-3-4-5-6-9; 73-8; 80; 96-9; 906; 21-2; 37-8
60	STUD—Tension Spring -----	1925374	1110852-4-5; 61-2-3-4-5-6-9; 73-8; 80; 96-9; 906; 37-8
60	STUD—Tension Spring -----	1941532	1110921-2
—	SUPPORT—Condenser -----	1915969	1110921-2
61	SUPPORT—Terminal Connector Lead -----	1919352	1110852-4; 61-2-3-4-5; 73; 80; 96-9; 921-2; 37-8
—	WICK—Felt—In Cam -----	819639	1110852-4-5; 61-2-3-4-5-6-9; 72-3-5-8-9; 80-8-9; 91-6-7-9; 905-6-8; 35-7-8
—	WICK—Felt—In Cam -----	1915029	1110921-2
—	WICK—Oil -----	1923263	1110852-4; 61-2-3-4-5-6-9; 73-8; 80; 96

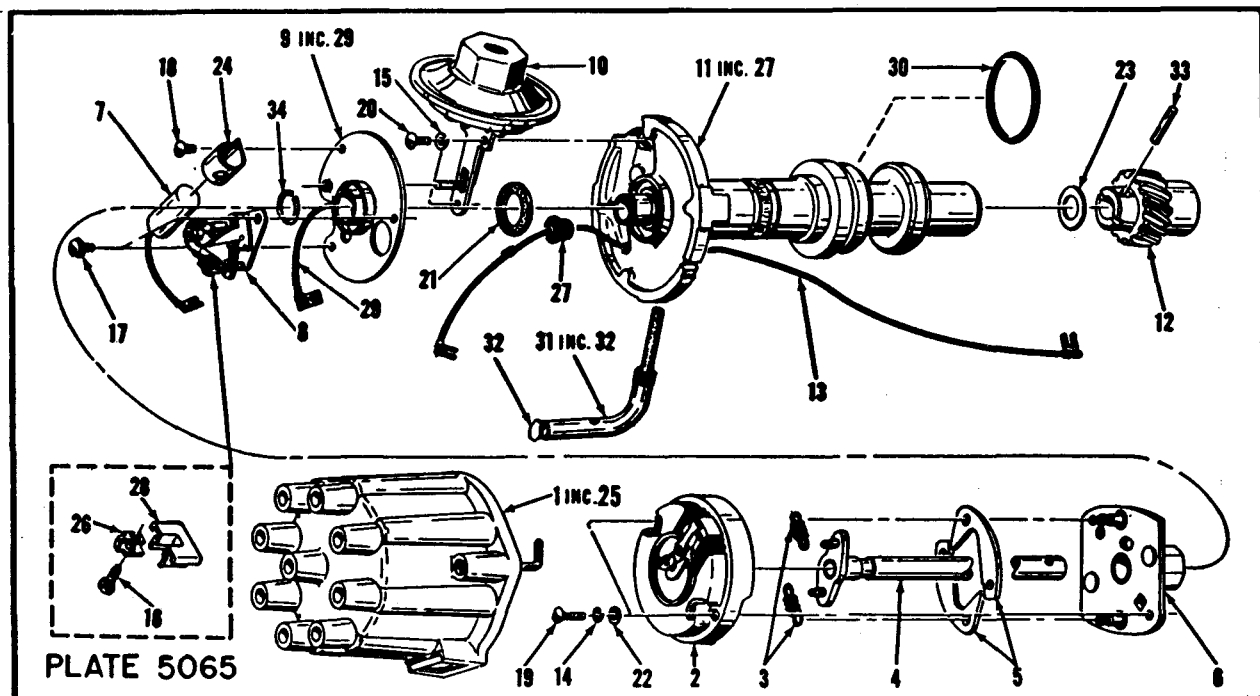

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110857	1932018	1932015	1917710	1932006	1881371	1938163	1932004	1931988	1962141	†1116118	1931979	1912568	1942518
1110858	"	1932135	1934380	1932140	"	1967914	"	"	"	†1116146	1932133	1926995	"
1110859	"	"	"	"	"	"	"	"	"	†	"	"	"
1110867	"	"	"	"	"	"	"	"	"	†	"	"	"
1110868	1971244	"	"	"	"	"	"	"	"	†	"	"	"
1110870	1932018	1932015	1938064	1935549	1880902	1942360	"	"	"	†1116162	1957015	1932667	"
1110871	"	"	1884610	1961752	1881371	1938163	"	"	"	†1116167	1957463	1952569	"
1110874	"	"	1929319	1935629	1880902	1935632	"	"	"	†1116146	1960375	1958599	"
1110876	"	1932135	1938487	1938403	"	1965066	"	"	"	†1116122	1955573	1926995	"
1110877	"	"	"	"	"	"	"	"	"	†	"	"	"
1110883	"	1932015	1887743	1938164	1881371	"	"	"	"	†1116118	1931979	1912568	"
1110884	"	1932135	1882595	1937436	"	1961654	"	"	"	†	1937434	1933529	"
1110887	"	"	1911855	1937836	"	"	"	"	"	†	"	"	"
1110890	"	1932015	1912189	1937852	"	1938116	"	"	"	†	1960375	1958599	"
†1110894	"	"	1884610	1938796	"	1938163	"	"	"	†1116167	1938573	□	"
1110898	"	1932135	1938487	1938403	1880902	1965066	"	"	"	†1116146	1955573	1926995	"
1110907	"	1932015	1887743	1939971	1924737	1942360	"	"	"	†1116118	1961317	1958599	"
1110909	"	1932015	1941986	1941848	"	1941844	"	"	"	†1116122	1955573	1926995	"
1110912	1971244	1971247	1963965	1941361	"	1942360	"	"	"	†1115357	1966407	1958599	"
1110913	1932018	1932015	1885339	1950998	1881371	1941135	"	"	"	†1116167	1957463	1927398	"
1110914	1941551	"	1941964	1941228	1924737	1941232	1942284 ^o	"	"	○	"	*	1948568
1110915	1932018	"	1912189	1941263	1881371	1938116	1932004	"	1962141	†1116146	1941350	*	1950278
1110919	1941551	"	1943041	1961322	1924737	1942456	1942284 ^o	"	"	†	1938573	□	"
1110920	1932018	"	1947329	1941361	1881371	1938116	1932004	"	1962141	†1116118	1960375	1958599	1941238
1110923	"	1932135	1909189	1941839	"	1941849	"	"	"	†1116146	1937434	1933529	1942518
1110924	"	1932015	1942012	1963219	"	1965844	"	"	"	†1116167	1957463	1952569	"
1110925	"	"	1885339	1941931	"	1941135	"	"	"	†	1938573	□	"
1110926	1937677	1932015	1941986	1941848	1924737	1941844	"	"	"	†1116122	1941980	1926995	1943016
1110927	1932018	1932015	1943041	1961322	"	1942360	"	"	"	†1116133	1961317	1958599	"
1110929	"	"	1887743	1938164	1881371	1938163	"	"	"	†1116146	1931979	1912568	1942518
1110930	"	"	1943041	1961322	1924737	1942360	"	"	"	†1116118	1961317	1958599	1943016
1110931	1943047	"	1887743	1938164	1881371	1965066	"	"	"	†1116168	1955674	1943522	1942518

[†]Service by complete replacement.

^oUpper Gear is 1936944; Lower Gear is 1961650.

^ΔUpper Housing is 1941266; Lower Housing is 1941267.

^ΔDistributor complete is 1941932; Adaptor Assembly complete is 1938797.

^ΔDistributor complete is 1938794; Adaptor Assembly complete is 1938797.

^ΔFor 1970 Model year and later use 1846122 Plate; 1845199 lead.

^oUpper Housing is 1941234; Lower Housing is 1941235.

^{*}Upper Gear is 1941237; Lower Gear is 1930487.

^oDual Points.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
—	Lock Washer—Adaptor Assembly Attaching Bolt.....	9421424	1110894; 925
—	Lock Washer—Contact Adjusting Screw.....	121801	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90; 920
—	Lock Washer—Housing Cover Plate Screw.....	453844	1110914-15
—	Lock Washer—Oil Seal & Cap Attaching Screw.....	453844	1110894; 914-15; 25
14	Lock Washer—Rotor Attaching Screw.....	453435	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 925; 31
15	Lock Washer—Vacuum Control Attaching Screw.....	453844	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 907-9; 13-15; 20-3-4-5-6-7-9; 30-1
SCREWS			
—	Screw—Adaptor Assembly Clamp.....	122022	1110894; 925
16	Screw—Breaker Lever Spring Attaching.....	9417096	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 907-9; 13-14-15-19; 20-3-4-5-6-7-9; 30-1
—	Screw—Contact Adjusting.....	1949844	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 907-9; 13-14-15-19; 20-3-4-5-6-7-9; 30-1
17	Screw (& Lock Washer)—Contact Assembly Attaching.....	1938527	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 907-9; 12-13-14-15-19; 20-3-4-5-6-7-9; 30-1
18	Screw—Condenser Clamp Attaching.....	453647	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 907-9; 12-13-14-15-19; 20-4-5-6-7-9; 30-1
18	Screw—Condenser Clamp Attaching.....	132745	1110923
—	Screw (& Lock Washer)—Ground Lead Attaching.....	453696	1110876
—	Screw—Housing Cover Plate Attaching.....	453418	1110914-15
—	Screw—Oil Seal & Cap Attaching.....	454408	1110894; 914-15; 25
19	Screw—Rotor Attaching.....	9416183	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 907-9; 25; 31
—	Screw (& Lock Washer)—Rotor Attaching.....	274453	1110909; 12-13-14-15-19; 20-3-4-6-7-9; 30
20	Screw—Vacuum Control Attaching.....	453461	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 907-9; 13-15; 20-3-4-5-6-7-9; 30-1
20	Screw—Vacuum Control Attaching.....	454408	1110912
—	Screw (& Lock Washer)—Vac. Control Arm Attach.....	453696	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 907-9; 13-15; 20-3-4-5-6-7-9; 30-1
WASHERS			
21	Washer—Felt—Under Breaker Plate.....	1932418	1110858-9; 67-8; 70-1-4-6-7; 84-7; 90-4-8; 907-9; 13-15; 20-3-4-5-6-7; 30-1
21	Washer—Felt—Under Breaker Plate.....	1951099	1110857; 83; 912; 29
22	Washer—Plain—Rotor Attaching Screw.....	807295	1110857-8-9; 67-8; 70-1-4-6; 84-7; 90
—	Washer—Shim (.005 thick).....	1927529	1110894; 914-15; 25
—	Washer—Shim (.010 thick).....	1848596	1110894; 914-15; 25
—	Washer—Space—Between Cross Shaft Gear & Oil Seal Assembly.....	1937980	1110894; 914-15; 925
—	Washer—Space—Between Cross Shaft Gear & Expansion Plug.....	1913004	1110894; 914-15; 925
23	Washer—Space—Between Gear & Base.....	1945776	1110870-1; 84-7; 94; 913; 23-4-5
23	Washer—Space—Between Gear & Base.....	1837617	1110874; 90; 907; 12-14-15-19; 20-7; 30
23	Washer—Space—Between Gear & Base.....	1900300	1110894; 925
—	Washer—Space—Upper Distributor Gear.....	1940647	1110914-15
—	Washer—Tang—Between Gear & Base.....	1965864	1110912
MISCELLANEOUS			
24	BRACKET—Condenser.....	1869573	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; on 4-8; 907-9; 12-13-15; 20-3-4-5-6-7-9; 30-1
24	BRACKET—Condenser.....	1941557	1110919
25	BRUSH—In Cap.....	1938193	All
—	BUSHING—Adaptor Housing—Cross Shaft.....	1938648	1110894; 925
—	BUSHING—Adaptor Housing—Drive Shaft.....	1938630	1110894; 925
—	BUSHING—Oil Seal & Cap Assembly.....	1938648	1110894; 914-15; 25
—	CAP—Coupling.....	1940189	1110914
—	CLAMP—Adaptor Assembly Attaching.....	1946794	1110894; 925
—	Clamp BAND—Housing Attaching.....	1940639	1110914-15


MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
26	MISCELLANEOUS—Continued		
—	CLIP—Breaker Lever Spring Screw.....	1931998	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 907-9; 13-14-15-19; 20-3-4-5-6-7-9; 30-1
—	COLLAR—Drive Extension Shaft.....	821865	1110894; 925
—	COUPLING—Cross Shaft.....	1939939	1110914
—	COUPLING—Cross Shaft.....	1885042	1110915
—	GASKET—Cross Shaft Coupling.....	1841901	1110915
—	GASKET—Cross Shaft Plug.....	1939361	1110894
—	GASKET—Between Housings.....	1941323	1110914-15
—	GASKET—Housing Cover Plate.....	1940604	1110914-15
—	GASKET—Oil Seal & Cap.....	1937979	1110894; 914-15; 25
—	GEAR—Cross Shaft.....	1938656	1110914-15
—	GEAR—Cross Shaft (Fuel Injection).....	1936947	1110894; 925
27	GROMMET—For Primary Lead.....	1932023	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 907-9; 12-13-14-15-19; 20-3-4-5-6-7-9; 30-1
—	HOUSING—Adaptor.....	1938798	1110894; 925
28	INSULATOR—Breaker Lever Spring Screw.....	1931997	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 907-9; 13-14-15-19; 20-3-4-5-6-7-9; 30-1
29	LEAD—Breaker Plate Ground.....	1932002	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 907-9; 12-13-15; 20-3-4-5-6-7-9; 30-1
—	LEAD—Contact Connecting.....	1941555	1110914-19
30	"O" RING.....	1927131	1110858-9; 67-8; 76-7; 83-4-7; 98; 909; 23-6
—	"O" RING—Housing Seal.....	1928415	1110894; 925
31	OILER Assembly.....	1931982	1110857-8-9; 67-8; 70-1; 94; 913-15; 24-5
*31	OILER Assembly.....	1922265	1110874-6-7; 83-4-7; 907; 19; 20-3-6-7-9; 30-1
31	OILER Assembly.....	1922265	1110915
32	OILER.....	113702	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 907-9; 13-15-19; 20-3-4-5-6-7-9; 30-1
—	Oil SEAL & Cap Assembly—Cross Shaft.....	1937985	1110894; 914-15; 25
—	Oil SEAL—Cross Shaft.....	1937986	1110894; 914-15; 25
—	Oil SEAL—Upper Housing.....	1920463	1110914-15
—	PIN—Collar Attaching—Drive Extension Shaft.....	1862218	1110894; 925
—	PIN—Cross Shaft Gear Attaching.....	1862218	1110894; 914-15; 25
33	PIN—Gear.....	829421	1110857-8-9; 67-8; 74-6-7; 83-4-7; 90-8; 907-9; 19; 20-3-6-7-9; 30-1
33	PIN—Gear.....	456652	1110912
*—	PIN—Gear Attaching.....	822273	1110870-1; 913; 24
—	PIN—Lower Gear Attaching.....	822273	1110894; 925
—	PIN—Lower Gear Attaching.....	829421	1110914-15
—	PIN—Upper Gear Attaching.....	1857502	1110894; 925
—	PIN—Upper Gear Attaching.....	274795	1110914-15
—	PLATE—Housing Cover.....	1940657	1110914-15
—	PLUG—Expansion—Cross Shaft.....	810819	1110894; 925
—	PLUG—Pipe—In Lower Housing.....	125947	1110914-15
—	RETAINER—Felt Wick.....	1935621	1110874; 84-7; 90; 907; 12-15; 20-3-7; 30
—	SEAL—Housing—Lubrication.....	1950569	1110857; 83; 68; 912; 29
—	SHAFT—Cross (Fuel Injection).....	1938800	1110894; 925
—	SHAFT—Cross (Fuel Injection).....	1941240	1110914
—	SHAFT—Cross (Fuel Injection).....	1941269	1110915
—	SHAFT—Drive Extension.....	1938802	1110894; 925
—	SLEEVE—Spring Post.....	1945548	All
34	SPRING—Breaker Plate Retainer.....	1932024	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 907-9; 12-13-15; 20-3-4-5-6-7-9; 30-1
—	SPRING—Contact Adjusting.....	1931995	1110857-8-9; 67-8; 70-1-4-6-7; 83-4-7; 90-4-8; 907-9; 13-14-15-19; 20-3-4-5-6-7-9; 30-1
—	WICK—Felt—Cam Lubricator.....	1949084	1110874; 84-7; 90; 907; 12-15; 20-3-7; 30
—	WICK—Oil—Upper Housing.....	1940637	1110915

*If oiler hole in base is $\frac{1}{8}$ " dia.—not tapped; use 113702 only.

*If gear pin hole is .127/.131 dia. use 1952271 Pin.

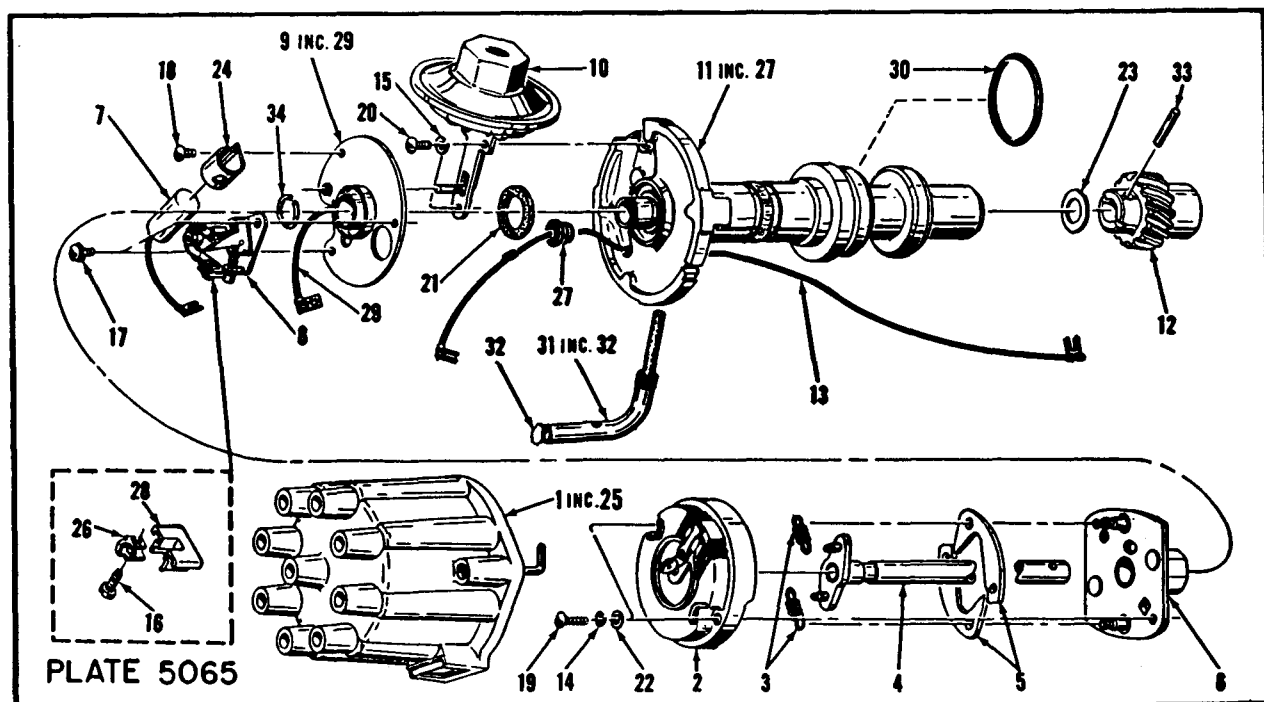

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110932	1932018	1932015	1941986	1941848	1924737	1941844	1932004	1931988	1962141	†1116146	1955573	1926995	1942518
1110933	1937677	"	"	"	"	"	"	"	"	†	1941980	"	1943016
1110934	1932018	"	1884623	1943398	1880902	1938116	"	"	"	†1116162	1941980	"	1943016
1110936	"	"	1883373	"	"	1963492	"	"	"	"	1957015	"	"
1110941	"	"	1885339	1950998	1881371	1946277	"	"	"	†1116167	1957463	1952569	"
1110942	1942654	"	1884610	1961752	"	1938163	"	"	"	†	"	"	"
1110943	1932018	"	1885339	1950998	"	1946277	"	"	"	†	"	"	"
1110946	"	"	1912189	1937852	"	1938116	"	"	"	†1116163	1966407	1958599	"
1110947	"	"	1947329	1941361	"	"	"	"	"	†	"	"	"
1110948	"	"	1943041	1961322	1924737	1942360	"	"	"	†	1961317	"	1943016
1110949	"	"	1938064	1935549	1880902	1942360	"	"	"	†1116162	1957015	1932667	1942518
1110952	1937677	"	1929319	1945772	"	1946277	"	"	"	†1116118	1941980	1926995	1943016
1110953	1942654	"	1903693	1945830	1881371	1946727	"	"	"	†	1945828	1945234	1942518
1110954	"	"	1943070	1945872	1924737	1946729	"	"	"	†	"	"	"
1110955	1932018	"	1946276	1946274	"	1946277	"	"	"	†1116146	1955573	1926995	"
1110956	"	"	1883373	1943398	1880902	1938116	"	"	"	†1116162	1957015	1932667	"
1110959	"	"	1908587	"	"	"	"	"	"	†	"	"	"
1110961	"	"	"	"	"	"	"	"	"	†1116163	"	"	"
1110962	"	"	"	"	"	"	"	"	"	†	"	"	"
1110963	"	"	1938064	1935549	"	1942360	"	"	"	†	"	"	"
1110964	"	"	1885339	1950998	1881371	1946277	"	"	"	†1116167	1957463	1952569	"
1110965	"	"	1946276	1963580	"	1945210	"	"	"	†	"	"	"
1110966	1949212	1932015	1943070	1945872	"	1946729	"	"	"	†1116118	1945828	1945234	"
1110967	1942654	1932015	1911855	1945830	"	1946727	"	"	"	†	"	"	"
1110968	1943047	"	1887743	1938164	"	1965066	"	"	"	*1116168	1955674	1943522	"
1110969	1932018	1932135	1882595	1949468	"	1941135	"	"	"	†1116118	1949469	1925110	"
1110970	"	1932015	1885339	1950998	"	1946277	"	"	"	†1116163	1957463	1952569	"
1110971	"	"	1946276	1963580	"	1945210	"	"	"	†	"	"	"
1110972	"	1932135	1882595	1949468	"	1941135	"	"	"	†1116118	1949469	1925110	"
1110973	"	1932015	1913799	1952432	1880902	1952702	1928111	"	1950575	†1116175	1950571	1950570	1950577

†Service by complete replacement.

*For service parts see Vacuum Control—Group 4.


MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
—	Lock Washer—Ground Lead Attaching Screw.....	453844	1110955; 61-2-3
14	Lock Washer—Rotor Attaching Screw.....	453435	1110932-3; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2-3
15	Lock Washer—Vacuum Control Attaching Screw.....	453844	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2
SCREWS			
16	Screw—Breaker Lever Spring Attaching.....	9417096	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2-3
—	Screw—Contact Adjusting.....	1949844	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2-3
17	Screw (& Lock Washer)—Contact Assembly Attaching.....	1938527	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2-3
18	Screw—Condenser Clamp Attaching.....	1949837	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2-3
—	Screw—Ground Lead Attaching.....	453461	1110955; 61-2-3
19	Screw—Rotor Attaching.....	9416183	1110932-3; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2-3
—	Screw (& Lock Washer)—Rotor Attaching.....	274453	1110934-6; 41-2-3-6-7-8-9
20	Screw—Vacuum Control Attaching.....	453461	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2
20	Screw—Vacuum Control Attaching.....	9418565	1110973
—	Screw (& Lock Washer)—Ground Lead Attaching.....	453696	1110932-3-4-6; 41-2-3-6-7-8-9; 56-9
WASHERS			
21	Washer—Felt—Under Breaker Plate.....	1932418	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2
21	Washer—Felt—Under Breaker Plate.....	1951099	1110973
23	Washer—Space—Between Gear & Base.....	1945776	1110934-6; 41-2-3-9; 56-9; 61-2-3-4-5-9; 70-1-2
23	Washer—Space—Between Gear & Base.....	1837617	1110946-7-8; 73
MISCELLANEOUS			
24	BRACKET—Condenser.....	1869573	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2-3
25	BRUSH—In Cap.....	1938193	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2-3
26	CLIP—Breaker Lever Spring Screw.....	1931998	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2-3
27	GROMMET—For Primary Lead.....	1932023	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2-3
28	INSULATOR—Breaker Lever Spring Screw.....	1931997	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2-3
29	LEAD—Breaker Plate Ground.....	1932002	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2-3
30	"O" RING.....	1927131	1110932-3; 52-5
31	OILER Assembly.....	1931982	1110941-2-3-9; 64-5; 70-1
*31	OILER Assembly.....	1922265	1110932-3-4-6; 46-7-8; 52-3-4-5-6-9; 66-7-8-9; 72
*31	OILER Assembly.....	113702	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2
—	PIN—Extension Shaft & Coupling Attaching.....	1862218	1110960; 72
33	PIN—Gear Attaching.....	829421	1110932-3; 46-7-8; 52-5; 68-9; 72
33	PIN—Gear Attaching.....	455481	1110953-4; 66-7
*33	PIN—Gear Attaching.....	822273	1110934-6; 41-2-3-9; 56-9; 61-2-3-4-5
33	PIN—Gear Attaching.....	455862	1110970-1
33	PIN—Gear Attaching.....	1952854	1110973
—	RETAINER—Breaker Lever Spring Screw.....	1938376	1110932-3-4-6; 41-2-3-6-7-8-9; 55-6; 72
—	RETAINER—Felt Wick.....	1935621	1110946-7-8
—	SEAL—Lubrication.....	1950569	1110973
—	SHAFT & COUPLING Assembly—Extension.....	1925108	1110960; 72
—	SLEEVE—Spring Post.....	1945548	1110955-6; 61-2-9
34	SPRING—Breaker Plate Retainer.....	1932024	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2-3
—	SPRING—Contact Adjusting.....	1931995	1110932-3-4-6; 41-2-3-6-7-8-9; 52-3-4-5-6-9; 61-2-3-4-5-6-7-8-9; 70-1-2-3
—	WICK—Felt—Cam Lubricator.....	1949084	1110946-7-8

*If oiler hole in base is $\frac{1}{8}$ " dia.—not tapped; use 113702 only.

*If pin hole in gear is .135/.139" dia. part 822273 must be used. For .127/.131" dia. use 1952271.

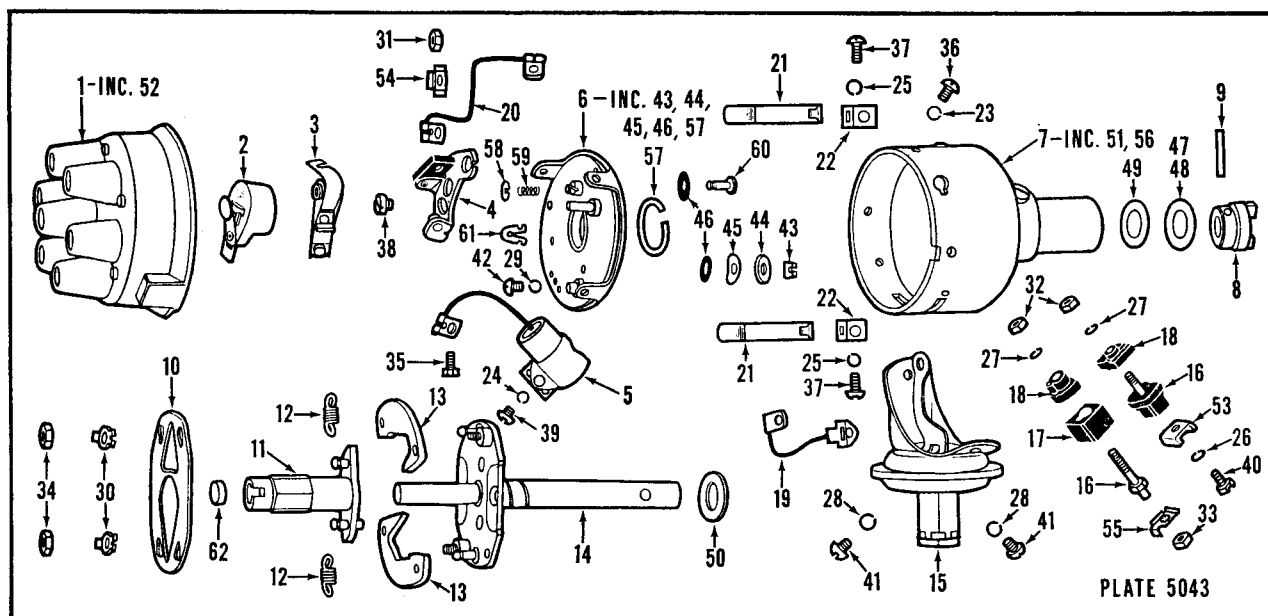


Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Lever — Breaker	Contact & Support	Con- denser	Plate — Breaker	Housing	Collar — Coupling or Gear	Pin	Plate — Weight Hold Down	Cam
	1	2	3	4	5	6	7	8	9	10	11
1110957.....	1917247	1917249	b1917254	b1938330	1928111	1930585	1946689	1933529	829421	1885557	1946694
1110958.....	"	"	b "	b "	"	"	"	1941528	"	"	"
1110960.....	"	1927393	b "	b "	"	"	1947722	1947721	1862218	"	1947719
1110976.....	1931513	1940123	b "	b "	"	1935507	1935926	1952569	822273	"	1939343
1110980.....	1917247	1917249	b "	b "	"	1925439	1925099	1953776	1952271	"	1925106

b—use contact set No. 1938330.

Delco-Remy

SERVICE PARTS CATALOG

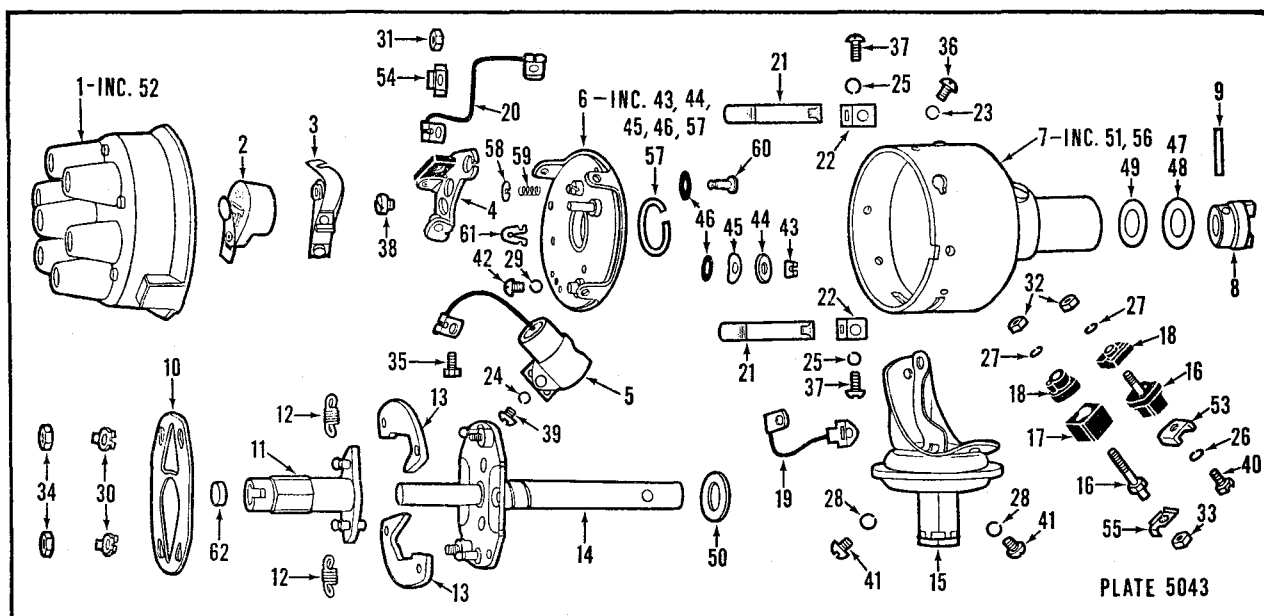

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Spring — Weight	Weight	Shaft & Plate	Vacuum Control	Stud — Terminal	Bushing — Terminal Outside	Bushing — Terminal Inside	Lead — Breaker Plate Ground	Lead — Terminal Connector	Spring — Cap	Support
	12	13	14	15	16	17	18	19	20	21	22
1110957.....	1883121	1881371	1946692		1916806	1914142	1912229		1930587	1909594	1847289
1110958.....	"	"	"		"	"	"		"	"	"
1110960.....	1947329	"	1947717		"	"	"		"	"	"
1110976.....	1916848	"	1952735		"	"	"	1865978	"	"	"
1110980.....	1882595	"	1953804	†1116185	"	"	"	1922429	1865978	"	"

†Service by complete replacement.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Breaker Plate Support Screw -----	453844	1110957-8; 60; 76; 80
24	Lock Washer—Condenser Screw -----	453844	1110957-8; 60; 76; 80
25	Lock Washer—Cap Spring Support Screw -----	453844	1110957-8; 60; 76; 80
27	Lock Washer—Terminal Nut (Inside) -----	453844	1110957-8; 60; 76; 80
29	Lock Washer—Vac. Control Arm Screw -----	456413	1110980
30	Lock Washer—Weight Hold Down Plate Nut -----	1885558	1110957-8; 60; 76; 80
NUTS			
31	Nut—Breaker—Lever Spring Screw -----	817363	1110957-8; 60; 76; 80
32	Nut—Terminal (Inside) -----	817363	1110957-8; 60; 76; 80
33	Nut—Terminal (Outside) -----	120622	1110957-8; 60; 76; 80
34	Nut—Weight Hold Down Plate -----	1923540	1110957-8; 60; 76; 80
SCREWS			
35	Screw—Breaker Lever Spring -----	455957	1110957-8; 60; 76; 80
36	Screw—Breaker Plate Support -----	453461	1110957-8; 60; 76
36	Screw—Breaker Plate Support -----	454408	1110980
37	Screw—Cap Spring Support (8-32x $\frac{3}{8}$) -----	453461	1110957-8; 60; 76; 80
38	Screw—Contact Attaching -----	1914916	1110957-8; 60; 76; 80
38	Screw—Condenser Attaching -----	453304	1110957; 60; 76
39	Screw—Condenser Attaching -----	132745	1110958; 80
—	Screw (& Lock Washer)—Ball Bearing Attaching --	455341	1110957-8
41	Screw (& Lock Washer)—Vac. Control Attach. ----	274937	1110980
42	Screw—Vac. Control Arm Attach. -----	453460	1110980
WASHERS			
46	Washer (Fibre)—Under Breaker Plate -----	1927778	1110980
47	Washer—Shim (.005 thk.) -----	1927529	1110957-8; 76; 80
47	Washer—Shim (.005 thk.) -----	810074	1110960
48	Washer—Shim (.010 thk.) -----	1927530	1110957-8; 76; 80
48	Washer—Shim (.010 thk.) -----	1912129	1110960
49	Washer—Space—Under Gear -----	1945776	1110957-8; 76; 80
49	Washer—Space—Under Gear -----	811912	1110960; 76; 80
—	Washer—Tension Spring Retainer -----	1925376	1110980
MISCELLANEOUS			
—	BALL BEARING -----	954939	1110957-8
—	BRACKET—Condenser -----	1869573	1110957-8; 60
51	BUSHING—Housing (Lower) -----	1923251	1110957-8; 80
51	BUSHING—Housing (Lower) -----	1923250	1110960; 80
51	BUSHING—Housing (Lower) -----	1927386	1110976
51	BUSHING—Housing (Upper) -----	1923250	1110976
52	BUTTON—Carbon—In Cap -----	1938193	1110957-8; 60; 76; 80
—	CLAMP—Bearing Retainer -----	1925471	1110957-8
54	CLIP—Lock—Brk. Lever Spring Screw -----	1868992	1110957-8; 60; 76; 80
55	CLIP—Lock—Terminal -----	1914144	1110957-8; 60; 76; 80
—	GASKET—Between Vac. Control & Hsg. -----	1917246	1110980
—	OILER only -----	113702	1110960; 76; 80
—	OILER -----	1922265	1110960; 76; 80
—	PIN—Attach. Shaft (& Coupling) -----	1862218	1110980
—	SHAFT (& Coupling) -----	1925108	1110980
59	SPRING—Tension -----	1925375	1110980
60	STUD—Tension Spring -----	1925374	1110980
61	SUPPORT—Terminal Connector Lead -----	1919352	1110980
—	WICK—Felt—In Cam -----	819639	1110957-8; 60; 76; 80