 


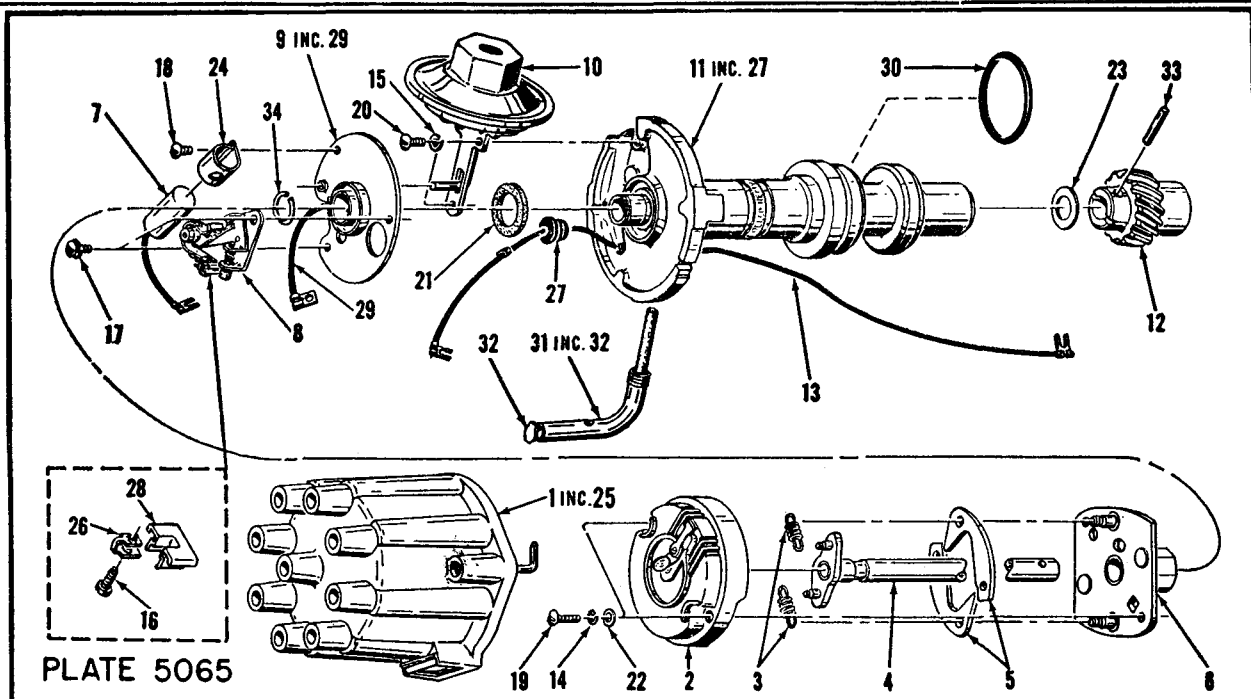

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1110975	1932018	1932015	1942510	1950567	1881371	1952701	1928111	1931988	1950575	†1116194	1950571	1950570	1963575
1110977	"	"	1900221	1952432	1880902	"	"	"	"	†1116163	"	"	1950577
1110978	1941551	"	1887743	1938164	1881371	1953499	1942284	"	1953752	"	1956085	1943522	1942518
1110979	"	"	1915231	1955603	1880902	1963492	"	"	"	"	1953772	1950570	1953761
1110981	1932018	1932135	1882595	1953809	1881371	1941135	1932004	"	1962141	†1116118	1949649	1953776	1942518
1110982	"	"	"	"	"	"	"	"	"	†	"	"	"
1110983	"	1932015	1900221	1952432	1880902	1952701	1928111	"	1950575	†1116182	1950571	1962053	1950577
1110984	"	"	1943041	1961402	1924737	1942360	1932004	"	1962141	†1116163	1961404	1955804	1942518
1110985	1941551	"	"	1959197	"	"	"	"	1953752	†	1955965	"	"
1110987	1932018	"	"	1955345	"	"	"	"	1962141	†	1960376	"	"
1110988	"	"	1941986	1955571	"	1941844	"	"	"	†1116168	1955573	1955670	"
1110989	1943047	"	1917710	1955672	1881371	1938163	"	"	"	†	1955674	1955676	"
1110990	1941551	"	1943041	1956076	1924737	1942456	1942284	"	"	"	"	x	1848568
1110991	"	"	1887743	1958455	1881371	1953499	"	"	1953752	"	1956085	1955676	1942518
1110992	1932018	"	1942510	1950567	"	1952701	1928111	"	1950575	†1116194	1950571	1950570	1963575
1110993	"	"	1908587	1943398	1880902	1938116	1932004	"	1962141	†1116163	1957015	1932667	1942518
1110996	"	"	1885339	1950998	1881371	1946277	"	"	"	"	1967562	1952569	"
1110997	"	"	1946276	1963580	"	1945210	"	"	"	†	"	"	"
1110998	"	"	1913883	1957701	1880902	1957702	1928111	"	1950575	†1116146	1950571	1950570	1963575
1110999	"	"	1908587	1943398	"	1938116	1932004	"	1962141	†1116163	1957015	1932667	1950577
1111001	"	"	1883373	1958085	1924737	1958087	"	"	"	†1116168	1959572	1958091	1942518
1111002	1949212	"	1903693	1945830	1881371	1946727	"	"	"	†1116118	1945828	1945234	"
1111004	1943047	"	1917710	1955672	"	1938163	"	"	"	†1116168	1955674	1955676	1950577
1111005	1958489	"	1943070	1945872	"	1946729	"	"	"	†1116118	"	"	"
1111006	1932018	"	1943041	1958989	1924737	1942360	"	"	"	†1116163	1961317	1958599	1943016
1111007	"	"	1925251	1950567	1881371	1952701	1928111	"	1950575	†1116182	1950571	1950570	1950577
1111011	1941551	"	1943041	1959657	1924737	1942456	1942284	"	"	"	"	▲	1941555
1111012	1932018	"	1925251	1950567	1881371	1952701	1928111	"	1950575	†1116182	1950571	1950570	1950577
1111013	"	"	1913883	1959866	1880902	1959867	"	"	"	†1116146	"	"	"
1111014	"	"	1883373	1960035	1924737	1945210	1932004	"	1962141	†1116168	1955573	1955670	1942518
1111015	"	"	1883779	1960377	1881371	1935632	"	"	"	†1116163	1966407	1958599	"
1111016	"	"	1943041	1961289	1924737	1942360	"	"	"	†	"	"	"

†Service by complete replacement
 □1941234—Housing—Upper
 and 1941235 Housing—Lower

x1958599 Gear—Dist. Drive Shaft.
 1941237 Gear—Upper Dist. Shaft
 ▲1941237—Gear—Upper Dist. Shaft.
 1958599—Gear—Dist. Drive Shaft.

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
—	Lockwasher—Housing Cover Plate Attaching Screw	453844	1110990; 1111011
—	Lockwasher—Oil Seal & Cap Assem. Attaching Screw	453844	1110990; 1111011
14	Lock Washer—Rotor Attaching Screw	453435	1110975-7-8-9; 81-2-3-4-5-7-8-9; 90-1-2-3-6-7-8-9; 1111001-2-4-5-6-7; 11-12-13-14-15-16
15	Lock Washer—Vac. Control Attach. Screw	453844	1110981-2-4-7-8-9; 93-6-7; 99; 1111001-2-4-5-6; 14-15-16
SCREWS			
16	Screw—Breaker Lever Spring Attaching	9417096	1110975-7-8-9; 81-2-3-4-5-7-8-9; 90-1-2-3-6-7-8-9; 1111001-2-4-5-6-7; 11-12-13-14-15-16
—	Screw—Breaker Plate Attaching (#8-32x $\frac{5}{8}$)	454155	1110979
—	Screw—Breaker Plate Attaching (#8-32x $\frac{3}{4}$)	132768	1110979
—	Screw—Contact Adjusting	1949844	1110975-7-8-9; 81-2-3-4-5-7-8-9; 90-1-2-3-6-7-8-9; 1111001-2-4-5-6-7; 11-12-13-14-15-16
17	Screw (& Lock Washer)—Contact Assembly Attach.	1938527	1110975-7-8-9; 81-2-3-4-5-7-8-9; 90-1-2-3-6-7-8-9; 1111001-2-4-5-6-7; 11-12-13-14-15-16
18	Screw—Condenser Clamp Attaching	1949837	1110975-7; 81-2-3-4-7-8-9; 90-2-3-6-7-8-9; 1111001-2-4-5-6-7; 11-12-13-14-15-16
18	Screw—Condenser Clamp Attaching	454458	1110978-9; 85; 91
—	Screw—Housing Cover Plate Attaching	453418	1110990; 1111011
—	Screw—Oil Seal & Cap Assembly Attaching	454408	1110990
19	Screw—Rotor Attaching	9416183	1110975-7-8-9; 81-2-3-4-5-7-8-9; 90-1-2-3-6-7-8-9; 1111001-2-4-5-6-7; 11-12-13-14-15-16
20	Screw—Vacuum Control Attaching	9418834	1110975-7; 83; 92-8; 1111007; 12-13
20	Screw—Vacuum Control Attaching	453461	1110981-2-4-7-8-9; 93-6-7-9; 1111001-2-4-5-6; 14-15-16
WASHERS			
21	Washer—Felt—Under Breaker Plate	1932418	1110981-2-4-7; 1111002-5-6
21	Washer—Felt—Under Breaker Plate	1951099	1110975-7; 83-8-9; 91-2-3-6-7-8-9; 1111001-4-7; 12-13-14-15-16
23	Washer—Space—Between Gear & Base	1837617	1110975-7-9; 83-4-5-7; 92-8; 1111006-7; 11-12-13-15-16
—	Washer—Shim (.005 thk.)	1927529	1110990; 1111011
—	Washer—Shim (.010 thk.)	1927530	1110990; 1111011
—	Washer—Shim—Cross Shaft Gear	1900302	1110990
—	Washer—Shim—Cross Shaft Gear	1913004	1111011
—	Washer—Space—Cross Shaft Gear	1937980	1110990; 1111011
—	Washer—Space—Under Drive Gear	1937617	1110990
—	Washer—Space—Upper Distributor Shaft Gear Attaching	1940657	1110990
—	Washer—Upper Dist. Shaft Gear Attach.	1940647	1111011
—	Washer—Under Cross Shaft Gear	1956834	1110984-5
23	Washer—Space—Between Gear & Base	1945776	1110981-2; 93-6-7-9; 1111001
—	Washer—Tang—Between Gear & Base	1965864	1111015-16
MISCELLANEOUS			
24	BRACKET—Condenser	1869573	1110975-7; 81-2-3-4-7-8-9; 92-3-6-7-8-9; 1111001-2-4-6-7; 12-13-14-15-16
24	BRACKET—Condenser	1944118	1110978; 85; 91
24	BRACKET—Condenser	1941557	1110990; 1111011
25	BRUSH—In Cap	1938193	1110975-7-8-9; 81-2-3-4-5-7-8-9; 90-1-2-3-6-7-8-9; 1111001-2-4-5-6-7; 11-12-13-14-15-16
—	BUSHING—Housing	1938630	1111016
—	BUSHING—Seal & Cap Assembly	1938648	1110990; 1111011
—	CAP—Coupling	1940189	1110990
—	CLAMP—"V" Band—Housing	1940639	1110990; 1111011
26	CLIP—Breaker Lever Spring Screw	1931998	1110975-7-8-9; 81-2-3-4-5-7-8-9; 90-1-2-3-6-7-8-9; 1111001-2-4-5-6-7; 11-12-13-14-15-16
—	COUPLING—Cross Shaft	1939939	1110990; 1111011
—	COUPLING & Cross Shaft Bearing	1955799	1110984-5
—	COVER—Vacuum Control	1957834	1111005
—	FELT—Cam Oiler	1949084	1110984-7; 1111006; 15
27	GROMMET—For Primary Lead	1932023	1110975-7-8-9; 81-2-3-4-5-7-8-9; 90-1-2-3-6-7-8-9; 1111001-2-4-5-6-7; 11-12-13-14-15-16

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS (Continued)		
—	GASKET—Between Upper & Lower Housing -----	1941323	1110990; 1111011
—	GASKET—Housing Cover Plate -----	1940604	1111011
—	GASKET—Housing Cover Plate -----	1940657	1110990
—	GASKET—Oil Seal & Cap Assembly -----	1937979	1110990; 1111011
—	GEAR—Cross Shaft -----	1938656	1110990; 1111011
—	GEAR & Cross Shaft -----	1955842	1110984-5
28	INSULATOR—Break Lever Spring Screw -----	1931997	1110975-7-8-9; 81-2-3-4-5-7-8-9; 90-1-2-3-6-7-8-9; 1111001-2-4-5-6-7; 11-12-13-14-15-16
29	LEAD—Breaker Plate Ground -----	1932002	1110975-7; 81-2-3-4-7-8-9; 92-2-6-7-8-9; 1111001-2-4-6-7; 12-13-14-15-16
—	LEAD—Contact Connecting -----	1941555	1110990
—	LEAD—Contact Connecting -----	1953751	1110978; 91
—	"O" RING—Housing Seal -----	1927131	1110988; 1111007-12-14
—	"O" RING—Housing Seal -----	1928415	1110999
—	"O" RING—Housing Seal -----	1959331	1110977; 83
11	OILER (& Tube) Assembly -----	1922265	1110978; 81-2; 1111002-5
32	OILER (Only) -----	113702	1110978; 81-2-4-5-7; 1111002-5-6
—	OIL SEAL—& Cap Assembly -----	1937985	1110990; 1111011
—	OIL SEAL -----	1937986	1110990; 1111011
—	OIL SEAL—Housing -----	1920463	1110990
33	PIN—Gear Attaching -----	274795	1111001
33	PIN—Gear Attaching -----	455481	1111002-5
33	PIN—Gear Attaching -----	456652	1111011-15-16
33	PIN—Gear Attaching -----	829421	1110978
33	PIN—Gear Attaching -----	455862	1110975-7-9; 81-2-3-4-5-7-8-9; 90-1-2-3-7-8-9; 1111004-6-7; 12-13-14
—	PIN—Cross Shaft Gear Attaching -----	1862218	1110990; 1111011
33	PIN—Gear Attaching -----	822273	1110996
—	PIN—Shaft & Coupling Attaching -----	1862218	1110981-2
—	PIN—Upper Dist. Shaft Gear Attaching -----	274795	1110990; 1111011
—	PLATE—Housing Cover -----	1940657	1111011
—	PLUG—Pipe—Lower Housing -----	125947	1111011
—	PLUG—Pipe—Lower Housing -----	1951874	1110990
—	RETAINER—Breaker Lever Spring Screw -----	1938376	1110975-7-8-9; 81-2-3-4-5-7-8-9; 90-1-2-3-6-7-8-9; 1111001-2-4-5-6-7; 11-12-13-14-15-16
—	RETAINER—Felt Wick -----	1935621	1110984-7; 1111006; 15
—	SEAL—Lubrication -----	1920463	1111011
—	SEAL—Lubrication -----	1950569	1110975-7-9; 81-3-8-9; 91-2-3-5-6-7-8-9; 1111001-4-7; 12-13-14-15-16
—	SHAFT—Cross -----	1956078	1110990; 1111011
—	SHAFT & Coupling (Extension) -----	1925108	111098-2
—	SLEEVE (Rubber)—Spring Post -----	1945548	All Except 1111006
—	SLEEVE (Rubber)—Spring Post -----	1957326	1111006
—	SPACER—Breaker Plate Attach. Screw ($\frac{1}{4}$ " long) -----	1953421	1110979
34	SPACER—Breaker Plate Attach. Screw ($\frac{1}{4}$ " long) -----	1954487	1110979
—	SPRING—Breaker Plate Retainer -----	1932024	1110975-7; 81-2-3-4-7-8-9; 92-3-6-7-8-9; 1111001-2-4-5-6-7; 12-13-14-15-16
—	SPRING—Contact Adjusting -----	1931995	1110975-7-8-9; 81-2-3-4-5-7-8; 92-3-6-7-8-9; 1111001-2-4-5-6-7; 11-12-13-14-15-16

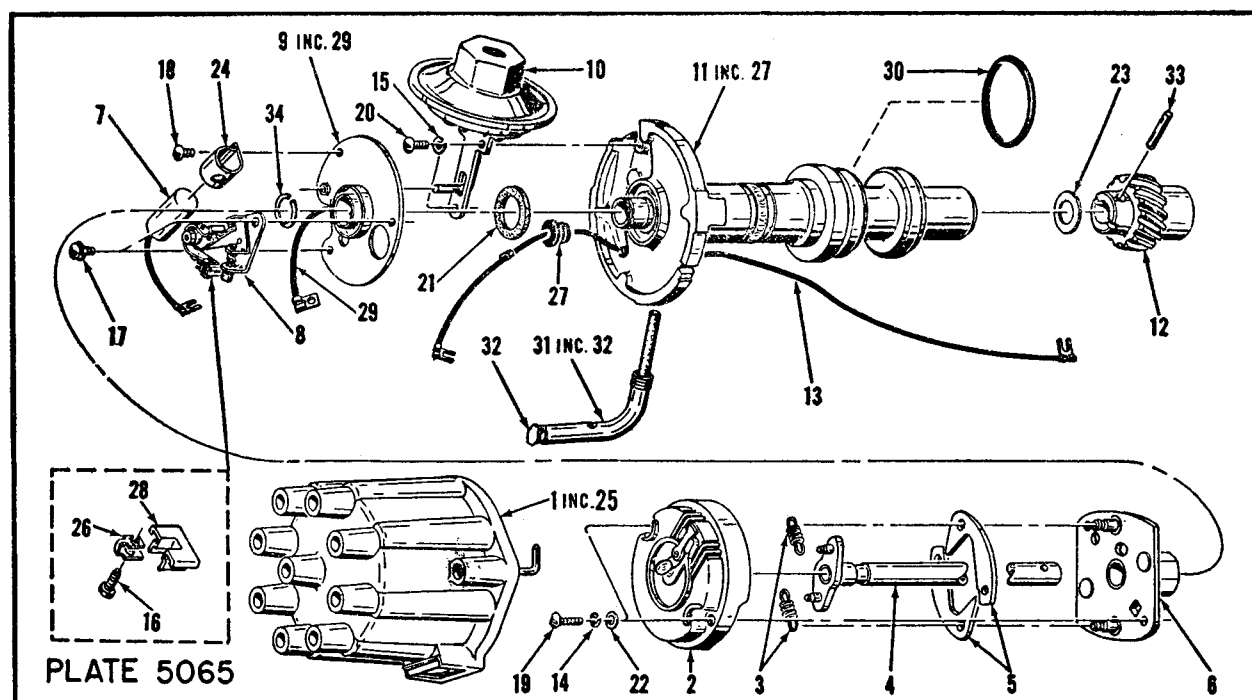 

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111017	1932018	1960776	1915231	1960772	1881371	°		°	°		1960790	1961650	1942518
1111020	"	1932015	1946722	1962903	"	1961654	1932004	1931988	1962141	+1116163	1967562	1952569	"
1111021	"	"	1913883	1959866	1880902	1959867	1928111	"	1957689	+1116168	1950571	1950570	1950577
1111022	"	"	1943041	1961249	1924737	1942360	1932004	"	1962141	+1116163	1962144	1958599	1950278
1111023	"	"	"	1961322	"	"	"	"	"	"	1961317	"	1943016
1111024	"	"	"	1961402	"	"	"	1966294	1846122	+ "	1851158	"	1846199
1111025	"	"	1911855	1961764	1881371	1967255	"	1931988	1962141	+ "	1961358	1961360	1942518
1111027	"	"	1938064	1961752	"	"	"	°	"	"	1967562	1952569	"
1111029	"	"	1916230	1962142	"	1938163	1932004	1931988	1962141	+1116232	1962144	1955676	1958971
1111030	"	"	1961933	1961932	1924737	1938116	"	"	"	+1116163	1957015	1932667	1942518
1111031	"	"	"	"	"	"	"	"	"	"	"	"	"
1111032	"	"	1941986	1962188	"	1942360	"	"	"	+1116168	1962185	1958001	"
1111033	1943047	"	1917710	1955672	1881371	1938163	"	"	"	"	1955674	1955676	"
1111034	1932018	"	1942510	1950567	"	1952701	1956007	"	1950575	+1116221	1950571	1950570	1950577
1111035	"	"	1943041	1962705	1924737	1942360	1932004	1949838	1962141	+1116163	1962702	1955842	1943016
1111038	1942654	"	1931650	1962801	1880902	°		°	°		1962804	1948832	
1111039	1932018	"	1921908	1963572	1881371	1965066	1932004	1931988	1962141	+1116163	1967562	1952569	1942518
1111040	"	"	1917710	1963219	"	°		°	°	+1116243	"	"	
1111041	"	1960776	1915231	1963191	"	°		°	°	"	1963188	1961650	
1111042	"	1932015	1942012	1963251	"	1941135	1932004	1931988	1962141	+1116232	1962144	1955676	1958971
1111044	"	"	1942510	1950567	"	1952701	1928111	"	1950575	+1116182	1950571	1950570	1950577
1111046	"	"	1885339	1950998	"	1941135	1932004	"	1962141	+1116163	1967562	1952569	1942518
1111047	"	"	1938064	1961752	"	°		"	"	+1116243	"	"	
1111048	"	"	1884610	1958625	"	1938163	1932004	1931988	1962141	+1116232	1962144	1955676	1958971
1111049	"	"	1946276	1963493	"	1963492	"	"	"	+1116237	1962185	1958091	1942518
1111050	"	"	1886967	1960754	"	1963507	1928111	"	1950575	+1116163	1950571	1950570	1950577
1111051	"	"	1912189	1937852	"	1938116	1932004	"	1962141	+1116168	1966407	1958599	1942518
1111052	"	"	1921908	1963572	"	1965066	"	"	"	+1116163	1967562	1952569	"
1111053	"	"	1946276	1963580	"	1945210	"	"	"	"	"	"	"
1111054	"	"	1885339	1950998	"	1941135	"	"	"	"	"	"	"

*Service by complete replacement.

°1961252 Housing—Upper and 1961254 Housing—Lower.

°Not used in this model.

Delco Remy

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
—	Lock Washer—Housing Cover Plate Attaching Screw	453844	1111022
—	Lock Washer—Oil Seal & Cap Assem. Attach. Screw	453844	1111022
14	Lock Washer—Rotor Attaching Screw	453435	1111017; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-8-9; 40-1-2-4-6-7-8-9; 50-1-2-3-4
15	Lock Washer—Vac. Control Attach. Screw	453844	1111020-2-3-4-5-7; 30-1-2-3-5-9; 40-6-7-9; 51-2-3-4
SCREWS			
16	Screw—Breaker Lever Spring Attaching	9417096	1111020-1-2-3-4-5-9; 30-1-2-3-4-5-9; 44-6-8-9; 50-1-2-3-4
—	Screw—Contact Adjusting	1949844	1111020-1-2-3-4-5-9; 30-1-2-3-4-5-9; 42-4-6-8-9; 50-1-2-3-4
17	Screw—(& Lock Washer)—Contact Assembly Attach.	1938527	1111020-1-2-3-4-5-9; 30-1-2-3-4-5-9; 42-4-6-8-9; 50-1-2-3-4
18	Screw—Condenser Clamp Attaching	1949837	1111020-1-2-3-4-5-9; 30-1-2-3-4-5-9; 42-4-6-8-9; 50-1-2-3-4
—	Screw—Housing Cover Plate Attaching	453418	1111022
—	Screw—Oil Seal & Cap Assembly Attaching	454408	1111022
19	Screw—Rotor Attaching	9416183	1117017; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-8-9; 40-1-2-4-6-7-8-9; 50-1-2-3-4
20	Screw—Vacuum Control Attaching	453461	1111020-2-3-4-5-7; 30-1-2-3-5-9; 40-6-7-9; 51-2-3-4
20	Screw—Vacuum Control Attaching	9418834	1111021-9; 34; 42-4-8; 50
WASHERS			
21	Washer—Felt—Under Breaker Plate	1951099	1111020-1-2-3-4-5-9; 30-1-2-3-4-5-9; 40-2-4-6-7-8-9; 50-1-2-3-4
—	Washer—Felt—Under Plate Washer	1951099	1111027
23	Washer—Space—Between Gear & Base	1837617	1111021-2-3-4; 33-4-5; 44; 50-1
—	Washer—Shim (.005 thk.)	1927529	1111022
—	Washer—Shim (.010 thk.)	1848596	1111022
—	Washer—Shim—Cross Shaft Gear	1913004	1111022
—	Washer—Space—Cross Shaft Gear	1937980	1111022
—	Washer—Space—Upper Distributor Shaft Gear Attach.	1940647	1111022
—	Washer—Under Advance Plate	1961927	1111017; 27; 38; 40-1-7
—	Washer—Under Cross Shaft Gear	1956834	1111024; 35; 41
23	Washer—Space—Between Gear & Base *	1945776	1111020-5; 30-1-2-9; 46
—	Washer—Thrust *	1945776	1111017; 27; 40-1-7-9; 52-3-4
—	Washer—Tang—Between Gear & Base	1965864	1111051
MISCELLANEOUS			
24	BRACKET—Condenser	1869573	1111017; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-9; 42-4-6-8-9; 50-1-2-3-4
25	BRUSH—In Cap	1938193	1111020-1-2-3-5-9; 30-1-2-3-4-5; 42-4-6-7-8-9; 50-1-2-3-4
—	BUSHING—Seal & Cap Assembly	1938648	1111022
—	BUTTON—Cross Shaft Gear Spacing	1957329	1111024; 41
—	CLAMP—"V" Band—Housing	1940639	1111022
26	CLIP—Breaker Lever Spring Attach.	1949845	1111035
26	CLIP—Breaker Lever Spring Screw	1931998	1111020-1-2-3-4-5-9; 30-1-2-3-4-9; 44-6-8-9; 50-1-2-3-4
—	COLLAR—Under Base	821865	1111038
—	CONNECTOR—Lead Junction	2973782	1111017; 27; 38; 40-1-7
—	COUPLING—Cross Shaft	1939939	1111022
—	COUPLING & Cross Shaft Bearing	1955799	1111024; 35; 41
27	GROMMET—For Primary Lead	1932023	1111020-1-3-4-5; 30-1-2-3-4-5-9; 44-6-8-9; 50-1-2-3-4
27	GROMMET—For Primary Lead	1932732	1111022
—	FELT—Cam Oiler	1949084	1111022-3-4; 35; 51
—	GASKET—Between Upper & Lower Housing	1941323	1111022
—	GASKET—Housing Cover Plate	1940604	1111022
—	GASKET—Housing Cover Plate	1940657	1111022
—	GASKET—Oil Seal & Cap Assembly	1937979	1111022
—	GEAR—Shaft	1961198	1111035
—	GEAR—Cross Shaft	1938656	1111022
—	GEAR & Cross Shaft	1955842	1111024; 41
—	GEAR—Upper Dist. Shaft	1941237	1111022

* If housing is aluminum use 1837617.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS (Continued)		
—	GROMMET—Pole Piece & Plate Assem. -----	1960789	1111017; 27; 38; 40-1-7
28	INSULATOR—Breaker Lever Spring Screw -----	1931997	1111020-1-2-3-4-5-9; 30-1-2-3-4-5-9; 44-6-8-9; 50-1-2-3-4
29	LEAD—Breaker Plate Ground -----	1932002	1111020-1-2-3-4-5-9; 30-1-2-3-4-5-9; 42-4-6-8-9; 50-1-2-3-4
—	"O" RING—Housing Seal -----	1927131	1111025
—	"O" RING—On Base -----	1928415	1111030-1
—	"O" RING—On Base -----	1959331	1111044; 50
—	OIL SEAL—& Cap Assembly -----	1937985	1111022
—	OIL SEAL -----	1937986	1111022
—	OIL SEAL—Housing -----	1920463	1111022
31	OILER Assem. -----	1922265	1111038
—	PIN—Advance Plate Locating -----	9413283	1111017; 38; 41
33	PIN—Gear Attaching -----	274795	1111032; 49
33	PIN—Gear Attaching -----	453462	1111020-1
33	PIN—Gear Attaching -----	455481	1111038
33	PIN—Gear Attaching -----	455862	1111027-9; 30-1-3-4-9; 40-2-4-6-7-8; 50-4
33	PIN—Gear Attaching -----	822273	1111017; 41
—	PIN—Collar -----	1862218	1111038
—	PIN—Cross Shaft Gear Attaching -----	1862218	1111022
—	PIN—Spring—Gear Attaching -----	456652	1111022-3-4-5; 35; 51-2-3
—	PIN—Upper Dist. Shaft Gear Attaching -----	274795	1111022
—	PLUG—Pipe—Lower Housing -----	125947	1111022
—	POLE PIECE & WT. BASE -----	1958674	1111047
—	POLE PIECE & WT. BASE -----	1960773	1111017; 27; 41
—	POLE PIECE & WT. BASE -----	1962800	1111038; 40
—	POLE PIECE & PLATE ASSEM. -----	1960779	1111017; 27; 38; 40-1-7
—	RETAINER—Breaker Lever Spring Screw -----	1938376	1111020-1-2-3-4-5-9; 30-1-2-3-4-5-9; 42-4-6-8-9; 50-1-2-3-4
—	RETAINER—Felt Wick *	1935621	1111022-3-4; 35; 51
—	SEAL—Lubrication -----	1950569	1111017; 20-1-2-3-4-5-7-9; 30-1-2-3-4-5-9; 40-1-2-4-6-7-8-9; 50-1-2-3-4
—	SHAFT—Cross -----	1956078	1111022
—	SLEEVE (Rubber)—Spring Post -----	1945548	1111017; 20; 30-1-2-8; 40-1-2-7; 52
—	SLEEVE (Rubber)—Spring Post -----	1961234	1111024-9; 42-8
34	SPRING—Advance or Pole pc. Plate Retainer -----	1932024	All
—	SPRING—Contact Adjusting -----	1931995	1111020-1-2-3-4-5-9; 30-1-2-3-4-5-9; 42-4-6-8-9; 50-1-2-3-4

*Models with Cylindrical Wick use 801865 Wick Retainer Package.


Delco Remy

SERVICE PARTS CATALOG

DISTRIBUTOR—Group 90-J

Revised to January 1, 1971

 Page 1

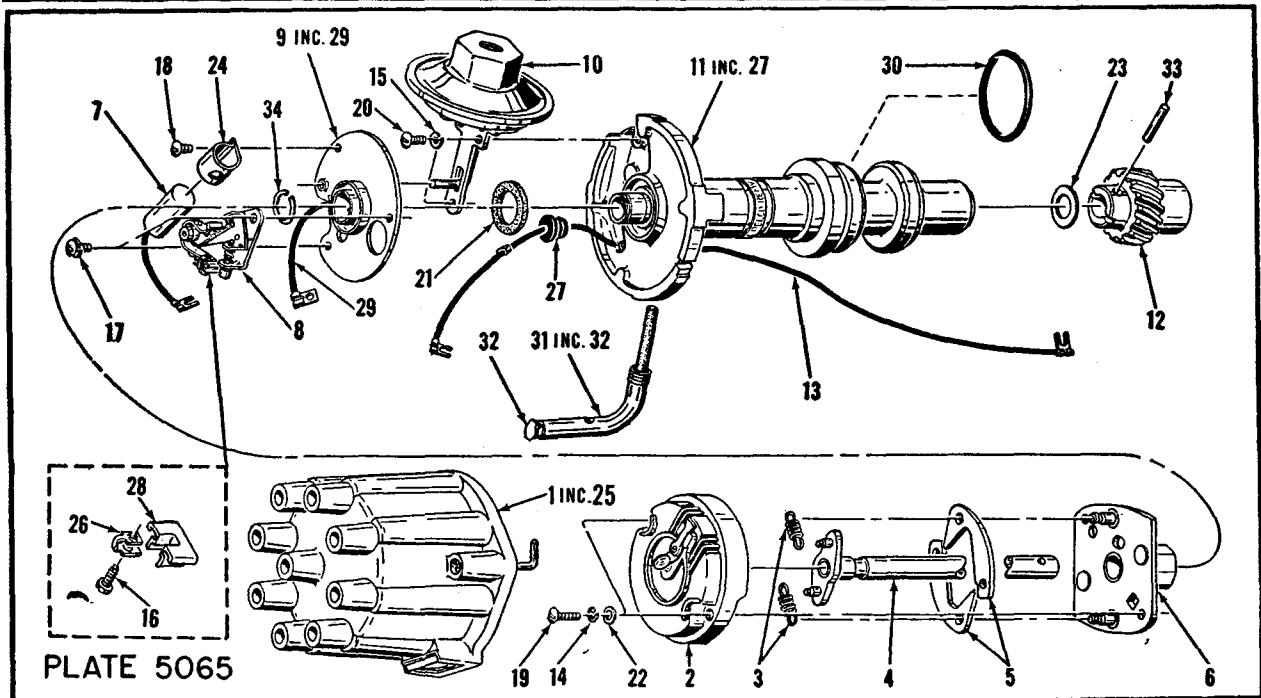

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111055	1932018	1932015	1886227	1919147	1881371	1935632	1932004	1931988	1962141	†1116163	1957015	1932667	1942518
1111058	"	"	1908587	1943398	1880902	1938116	"	"	"	†	"	"	"
1111059	"	"	1884610	1963984	1881371	"	"	"	"	†	1961317	1958599	"
1111060	"	"	1964346	1964051	1880902	"	"	"	"	†1116236	1851158	"	"
1111061	"	"	1963965	1963962	1924737	1963492	1932004	1931988	1962141	†1116237	1962185	1958091	1942518
1111062	"	"	1943041	1961402	"	1942360	"	"	"	†1116236	1961404	1958599	"
1111063	1943047	"	"	1961249	1924737	"	"	"	"	†	"	"	1950278
1111064	"	"	1964346	1963774	1880902	"	"	"	"	†	"	"	"
1111065	1932018	"	1886559	1964261	1881371	"	"	"	"	†1116163	1966407	"	"
1111066	"	"	1964267	1960377	"	"	"	"	"	†	"	"	"
1111067	"	"	1884610	1937852	"	"	"	"	"	†	"	"	"
1111068	"	"	1964451	"	"	"	"	"	"	†	"	"	"
1111069	1932018	"	1883498	1964337	1880902	1935632	1932004	1966294	1946122	†1116236	"	"	1846199
1111070	1943047	"	"	1963774	"	"	"	1931988	1962141	†	"	"	1950278
1111071	1932018	"	1884094	1964371	1881371	1965427	"	"	"	†	1966407	"	1942518
1111072	"	"	1964950	1964949	"	"	"	"	"	†	"	"	"
1111073	"	"	1965978	1965963	"	1965976	1932004	1931988	1962141	†1115357	"	"	1942518
1111074	"	"	1965903	1964915	"	"	"	"	"	†1115360	"	"	"
1111075	"	"	1884094	1964913	"	1942360	1932004	1931988	1962141	†1116163	"	"	1942518
1111076	"	"	"	1964925	"	1966994	"	1966294	1946122	†1115357	1851158	"	1846199
1111077	"	"	1884136	1965065	"	1965066	"	"	1962141	†1116242	1967562	1952569	1942518
1111078	"	"	1942510	1965058	"	1941135	"	"	"	†1116243	"	"	"
1111079	"	"	1908587	"	"	1965066	"	"	"	†	"	"	"
1111080	"	"	1947660	1961752	"	"	"	"	"	†	"	"	"
1111081	"	"	1938064	1966122	"	"	"	"	"	†	"	"	"
1111082	800061	1971247	1958395	1966779	"	1965170	1932004	1931988	1962141	†1115358	1965169	1968879	1942518
1111083	1932018	1932015	1964400	1965178	"	1967256	1928111	"	1950575	†1116163	1950571	1950570	1963575
1111085	"	"	1943041	1961322	1924737	1942360	1932004	"	1962141	†1116236	1961317	1958599	1942518
1111086	"	"	1884610	1963984	1881371	"	"	"	"	†	"	"	"
1111087	"	"	1884094	1964925	"	1965427	1932004	1931988	1962141	†	1961404	"	1942518
1111088	"	"	1964950	1965299	"	"	"	"	"	†	"	"	"
1111089	"	"	1941964	1965297	1880902	1965844	1932004	1931988	1962141	†1116232	1962144	1955676	1958971
1111090	"	"	1942510	1965058	1881371	1941135	"	"	"	†1116242	1967562	1952569	1942518

○ Not used on this model.

† Service by complete replacement.

▲ 1961252 Housing—Upper, and 1961254 Housing, Lower.

CO, 131, WD, 1X, 1JX, 52, 1FD

PRINTED IN U.S.A.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
—	Lock Washer—Housing Cover Plate Att. Screw	453844	1111063-4; 70
—	Lock Washer—Oil Seal and Cap Assem. Attach.	453844	1111063-4; 70
14	Lock Washer—Rotor Attaching Screw	453435	All
15	Lock Washer—Vac. Control Attach. Screw	453844	1111055-8-9; 60-1-2-3-5-6-7-8-9; 70; 86
SCREWS			
16	Screw—Breaker Lever Spring Attaching	9417096	1111055-8; 61-2
17	Screw—(& Lock Washer)—Contact Assembly Attach.	1938527	1111055-8; 61-2-3-9; 70-1-3-5-6-7-8-9; 82-3-5-7-9; 90
18	Screw—Condenser Clamp Attaching	453647	1111055-8; 61-2-3-9; 70-1-3-5-6-7-8-9; 82-3-5-7-9; 90
—	Screw—Housing Cover Plate Attaching	453418	1111063-4; 70
—	Screw—Oil Seal and Cap Assem. Attaching	454408	1111063-4; 70
19	Screw—Rotor Attaching	9416183	All
20	Screw—Vacuum Control Attaching	453461	1111055-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2- 5-6-7-8-9; 80-1-2-8; 90
20	Screw—Vacuum Control Attaching	9418834	1111083-9
20	Screw—(& Lock Washer)—Vacuum Control	451626	1111073-4; 85-6-7
WASHERS			
—	Washer—Felt—Under Plate Washer	1951099	All
—	Washer—Shim (.005 thk.)	1927529	1111063-4; 70
—	Washer—Shim (.010 thk.)	1927530	1111063-4; 70
—	Washer—Shim—Cross Shaft Gear ($\frac{1}{4}$ O.D.)	1913003	1111063-4; 70
—	Washer—Shim—Cross Shaft Gear ($\frac{3}{4}$ O.D.)	1937980	1111063-4; 70
23	Washer—Space—Between Gear & Base	1837617	1111059; 60-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6; 83-5-6-7-8
—	Washer—Under Advance Plate	1961927	1111059; 60-4-5-6-7-8; 72-4; 80-1-6-8
—	Washer—Under Cross Shaft Gear	1956834	1111060-2-8-9; 76; 87-8
23	Washer—Space—Between Gear & Base *	1945776	1111055-8; 61; 77-8-9; 80-1; 90
—	Washer—Space—Upper Dist. Shaft Gear	1940647	1111063-4; 70
—	Washer—Tang—Between Gear & Base	1965864	1111065-6-7; 71-2-3-4-5
MISCELLANEOUS			
—	BLOCK—Drive Gear Cushion	1908028	1111082
24	BRACKET—Condenser	1869573	1111055-8; 61-2-3-9; 70-1-3-5-6-7-8-9; 82-3-5-7-9; 90
25	BRUSH—In Cap	1938193	All
—	BUSHING—Seal and Cap Assem.	1938648	1111063-4; 70
—	BUTTON—(Nylon) Tach. Shaft Spacing	1957329	1112060-8-9; 76
—	CLAMP—"V" Band—Housing	1940639	1111063-4; 70
26	CLIP—Breaker Lever Spring Screw	1931998	1111055-8; 61-2
—	CONNECTOR—Lead Junction	2973782	1111059; 60-4-5-6-7-8; 72; 80-1-6-8
—	COUPLING & Cross Shaft Bearing	1955799	1111060-2-8-9; 76; 87-8
—	COUPLING—Cross Shaft	1939939	1111063-4; 70
—	CUSHION—Dist. Drive Gear	1908029	1111082
—	FELT—Cam Oiler	1949084	1111063-4; 70-1-5
—	GASKET—Between Upper and Lower Housing	1941323	1111063-4
—	GASKET—Housing—Cover Plate	1940604	1111063-4; 70
—	GASKET—Housing—Cover Plate	1940657	1111063-4; 70
—	GASKET—Oil Seal and Cap Assem.	1937979	1111063-4; 70
—	GEAR & Cross Shaft	1955842	1111060-2-8-9; 76; 87-8
—	GEAR—Cross Shaft	1938656	1111063-4; 70
—	GEAR—Upper Dist. Shaft	1941237	1111063-4; 70
27	GROMMET—For Primary Lead	1932023	1111055-8; 61-2-9; 71-2-3-5-6-7-8-9; 81-2-3-5-6-7-9; 90
27	GROMMET—For Primary Lead	1932732	1111063-4; 70
27	GROMMET—For Primary Lead	1963928	1111064
27	GROMMET—In Housing	1960789	1111088
—	GROMMET—Pole Piece & Plate Assem.	1960789	1111059; 60-4-5-6-7; 72; 80-1-6
29	LEAD—Breaker Plate Ground	1932002	1111055-8; 61-2-3-9; 70-1-3-5-6-7-8-9; 82-3-5-7-9; 90
—	"O" RING—On Base	1928415	1111055-8
—	"O" RING—On Base	1959331	1111083
—	OIL SEAL AND CAP ASSEM.	1937985	1111063-4; 70
—	OIL SEAL—Cross Shaft Coupling	1937986	1111063-4; 70
—	OIL SEAL—Housing	1920463	1111063-4


* If housing is aluminum use 1837617.

* Models with Cylindrical Wick use 801865 Wick and Retainer Pkg.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS (Continued)		
—	OIL SEAL—Housing -----	1950569	1111055-8-9; 60-1-2-3-4-5-6-7-8-9; 70; 87-8-
—	OIL SEAL—Seal and Cap Assem. -----	1937986	1111063-4; 70
—	PIN—Cross Shaft Gear Attaching -----	1862218	1111063-4; 70
33	PIN—Gear Attaching -----	274795	1111061
33	PIN—Gear Attaching -----	1908031	1111082
33	PIN—Gear Attaching -----	456652	1111059; 60-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7; 85-6-7-8; 90
33	PIN—Gear Attaching -----	455862	1111055; 78-9; 80-1-3-9
—	PIN—Upper Dist. Shaft Gear Attach. -----	274795	1111063-4; 70
—	PLUG—Pipe—Lower Housing -----	125947	1111063-4
—	POLE PIECE AND WT. BASE -----	1962800	1111080
—	POLE PIECE AND WT. BASE -----	1966705	1111065
—	POLE PIECE AND WT. BASE -----	1964272	1111066; 74
—	POLE PIECE AND WT. BASE -----	1965123	1111081
—	POLE PIECE AND WT. BASE -----	1964349	1111060-4; 72; 88
—	POLE PIECE AND WT. BASE -----	1967235	1111059; 67-8; 86
—	POLE PIECE AND PLATE ASSEM. -----	1960779	1111059; 60-5-6-7-8; 72-4; 80-1-6-8
—	POLE PIECE AND PLATE ASSEM. -----	1964276	1111064
—	RETAINER—Breaker Lever Spring Screw -----	1938376	1111055-8; 61-2-3-9; 70
—	RETAINER—Dist. Drive Gear -----	1908030	1111082
—	RETAINER—Felt Wick -----*	1935621	1111062-3-9; 70-1-5-6; 85-7
—	RING—Spring Post Retainer -----	9423913	1111073-4
—	SEAL—Lubrication -----	1950569	1111063-4; 71-2-3-4-5-7-8-9; 80-1-2-3-5-6; 90
—	SHAFT -----	1956078	1111063-4; 70
—	SLEEVE (Rubber)—Spring Post -----	1945548	1111055-8-9; 60-1-5-6-7-8; 75-7-8-9; 80-1-3-6; 90
—	SLEEVE (Rubber)—Spring Post -----	1961234	1111062-4-9; 70-1-2-3-4-7; 82-5-7-8
34	SPRING—Advance or Pole pc. Plate Retainer -----	1932024	All
—	SPRING—Contact Adjusting -----	1931995	1111055-8; 60-1-3-9; 70

 * Models with Cylindrical Wick use 801865 Wick and Retainer Pkg.

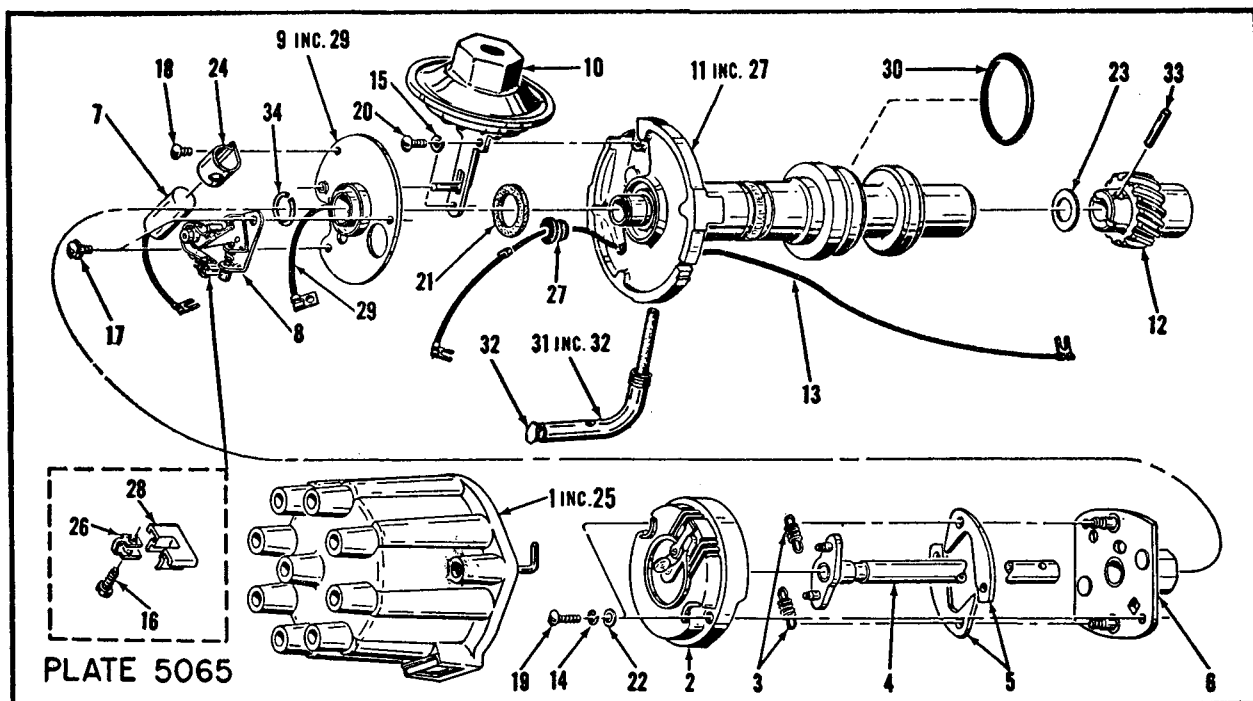

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111093	1932018	1932015	1965903	1965902	1881371	○	1932004	○	○	†1115360	1851158	1958599	-----
1111094	"	"	1943041	1965891	"	1965890	"	1966294	1962141	†1115355	1966407	"	1942518
1111096	"	"	1883779	1960377	"	1935632	"	○	○	†1116163	"	"	"
1111097	800062	1971247	1882595	1965956	"	○	"	○	○	†1115358	1965169	1968879	-----
1111098	1932018	1932015	1964950	1964915	"	○	"	○	○	†1115357	1966407	1958599	-----
1111100	"	"	1916848	1965891	"	1965890	1932004	1966294	1962141	†1115360	"	"	1942518
1111101	"	"	1968847	1968782	1880902	1967005	"	1931988	"	†1116163	"	"	"
1111102	"	"	1903693	1966241	1965843	1966244	"	"	"	†1116242	1967562	1952569	"
1111103	"	"	1912189	1966260	"	1965844	"	"	"	†1116243	"	"	"
1111104	"	"	1916848	1966129	1881371	1965890	"	1966294	"	†1115355	1965973	1961196	"
1111105	1971244	1971247	1846319	1846209	1880902	1946277	"	1931988	1846122	†1115365	1967562	1968296	1846199
1111106	1932018	1932015	1922250	1966362	1881371	1967256	1928111	"	1950575	†1115362	1966365	1967082	1942518
1111107	"	"	1884094	1964371	"	1938116	1932004	"	1962141	†1116163	1966407	1958599	"
1111108	"	"	"	"	"	1965427	"	"	"	†1115355	"	"	"
1111109	"	"	1961933	1966637	1965843	1966994	"	"	"	†1115357	"	"	"
1111111	"	"	1916848	1965891	1881371	1965890	"	1966294	"	†1115360	"	"	"
1111112	"	"	1961933	1966637	1965843	1966994	"	"	"	†1115355	"	"	"
1111114	"	"	1903693	1966742	1965843	1966740	"	1931988	"	†1116163	"	"	"
1111116	"	"	"	1966941	"	1967005	"	"	"	†	"	"	"
1111117	"	"	"	1966991	"	1966709	"	1966294	1846122	†1115355	1851158	"	1846199
1111130	"	"	1910530	1966599	"	1966601	"	1931988	1962141	†1116212	1961358	1961360	"
1111131	"	"	1941986	1966479	1924737	1942360	"	"	"	†1116168	1962185	1966481	"
1111134	"	"	1884094	1964925	1881371	1965427	"	"	"	†1115355	1961404	1958599	"
1111137	"	"	1884929	1966764	1965843	○	"	○	○	†1116238	1966407	"	-----
1111138	"	"	1961933	1966637	"	1966994	1932004	1966294	1962141	†1115360	"	"	1942518
1111139	"	"	1884929	1966764	"	○	-----	○	○	†	"	"	-----
1111140	"	"	"	"	"	○	-----	○	○	†1115355	"	"	-----
1111141	"	"	1961933	1966992	"	1966994	1932004	1966294	1962141	†	1851158	"	1846199
1111142	"	"	1884929	1966982	"	○	"	○	○	†	"	"	-----
1111144	"	"	1946276	1950567	1881371	1966796	1928111	1931988	1950575	†1116163	1950571	1950570	1963575

○ Not used on this model.

† Service by complete replacement.

Delco Remy

SERVICE PARTS CATALOG


MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
14	LOCK WASHERS Lock Washer—Rotor Attaching Screw -----	453435	All
17	SCREWS Screw—(& Lock Washer)—Contact Assem. Attach. -----	1938527	All except 1111093-7-8; 137-39; 40-2
18	Screw—Condenser Clamp Attaching -----	453647	All except 1111093-7-8; 137-39; 40-2
19	Screw & Lock Washer—Rotor Attaching -----	274453	1111097; 101-5; 14
—	Screw (& Lockwasher)—Shield Attaching -----	1846215	1111105
19	Screw—Rotor Attaching -----	9416183	All except 1111097; 101; 14
20	Screw—Vacuum Control Attaching -----	453461	1111097; 102-3; 117; 30-1
20	Screw—Vacuum Control Attaching -----	453696	1111093-4-8; 100-4-9; 12; 34-7-8-9; 40-1-2
20	Screw—Vacuum Control Attaching -----	454408	1111094-6-8; 100-5-7-8-9; 11-12-16-17; 37-8-9; 40-1-2
20	Screw—Vacuum Control Attaching -----	9418834	1111114
—	WASHERS Washer—Felt—Under Plate Washer -----	1951099	All
—	Washer—Under Shaft -----	811912	1111106
23	Washer—Space—Between Gear & Base -----	1837617	All except 1111102-3-6; 30-1
—	Washer—Under Advance Plate -----	1961927	1111093-7-8; 137-9; 40-2
—	Washer—Under Cross Shaft Gear -----	1956834	1111093
23	Washer—Space—Between Gear & Base -----	*1945776	1111102; 30-1
—	Washer—Tang—Between Gear & Base -----	1965864	1111094-6-8; 100-1-7-8-9; 11-12-14-16-17; 37-8-9; 40-1-2
—	MISCELLANEOUS BLOCK—Drive Gear Cushion -----	1908028	1111097
24	BRACKET—Condenser -----	1869573	All except 1111093-8; 137; 39; 40-2
25	BRUSH—In Cap -----	1938193	All
—	BUTTON—Under Weight Base -----	1957329	1111130
—	BUTTON—Tach Gear Spacing -----	1957329	1111093; 117; 141-2
—	CONNECTOR—Lead Junction -----	2973782	1111093-7-8; 137-9; 40-2
—	COUPLING & Cross Shaft Bearing -----	1955799	1111093; 117; 34; 41-2
—	CUSHION—Dist. Drive Gear -----	1908029	1111097
—	FELT—Cam Oiler -----	1949084	1111096; 101-6-7-8; 14-16-17; 30-4
—	GEAR & Cross Shaft -----	1955842	1111093; 117; 34; 41-2
27	GROMMET—For Primary Lead -----	1932023	1111094-6-7; 100-1-2-3-4-5-6-7-8-9; 12-14-16-17; 30-1-4-8; 41-4
27	GROMMET—In Housing -----	1960789	1111137-9; 40-2
—	GROMMET—Pole Piece & Plate Assem. -----	1960789	1111093-7-8; 137-9; 40-2
29	LEAD—Breaker Plate Ground -----	1932002	1111094-6; 100-1-2-3-5-6-7-8-9; 111; 112-14-16-17; 30-1-4-8; 41-4
—	"O" RING—On Base -----	1927131	1111130
—	"O" RING—On Base -----	1959331	1111144
33	PIN—Gear Attaching -----	454512	1111106
33	PIN—Gear Attaching -----	455862	1111102-3; 44
33	PIN—Gear Attaching -----	456652	All except 1111102-3-6; 44
33	PIN—Gear Attaching -----	1908031	1111097
—	POLE PIECE AND WT. BASE -----	1964309	1111097
—	POLE PIECE AND WT. BASE -----	1967928	1111137
—	POLE PIECE AND WT. BASE -----	1966705	1111139; 40-2
—	POLE PIECE AND WT. BASE -----	1964272	1111093-8
—	POLE PIECE AND PLATE ASSEM. -----	1960779	1111093-7-8; 137-9; 40-2
—	RETAINER—Dist. Drive Gear -----	1908030	1111097
—	RETAINER—(C Washer)—Advance Plate -----	1932024	1111093-7-8; 137-9; 40-2
—	RETAINER—Felt Wick -----	1935621	1111096; 101-6-7-8; 14-16-17; 30-4
—	R.F.I. SHIELD Pkg. -----	1846216	1111105
—	RING—Spring Post Retainer -----	9423913	1111109; 112; 37-8-9; 40-1-2
—	SEAL—Lubrication -----	1950569	All
—	SLEEVE (Rubber)—Spring Post -----	1945548	1111096; 101-2-3-4-5; 14; 30-1; 44
—	SLEEVE (Rubber)—Spring Post -----	1961234	1111097; 107-8-9; 111-12-16-17; 34-7-8-9; 40-1-2
34	SPRING—Breaker Plate Retainer -----	1932024	All except 1111093-7-8; 37-9; 40-2

* If housing is aluminum use 1837617 washer.

 × Models with Cylindrical Wick use 801865 wick and Retainer Pkg.

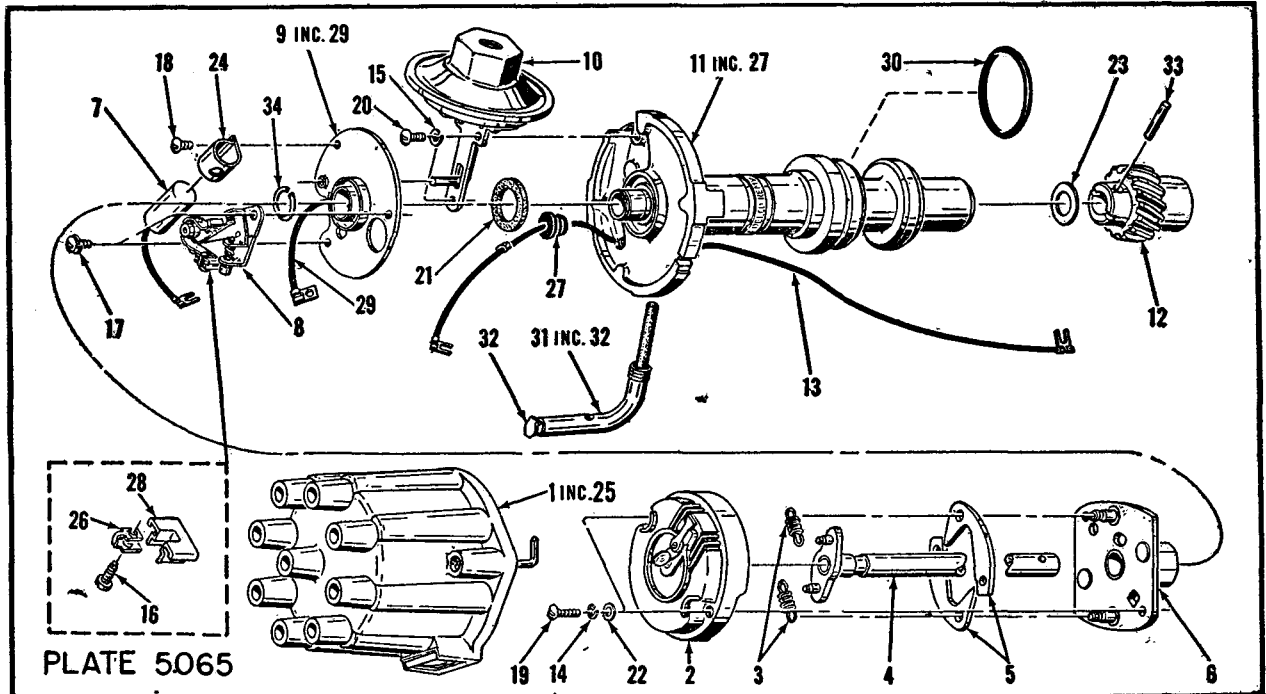

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111146	1932018	1932015	1964950	1964949	1881371	○		○	○	†1115355	1966407	1958599	
1111147			1964400	1965178	"	1967256	1928111	1931988	1950575	†1116163	1950571	1950570	1963575
1111148	1971244	1971247	1970937	800271	1924737	1965066	1932004	1966294	1846122	†1115365	1967562	1968683	1846199
1111149	1932018	1932015	1887554	1967022	1881371	1967002	"	1931988	1962141	†1116163	1967025	1967024	1942518
1111150	"	"	1908587	1967196	"	1938116	"	"	"	†	1966407	1958599	"
1111151	"	"	1967216	1967214	1924737	1945210	"	"	"	†1115361	1962144	1955676	1958971
1111152	"	"	1923139	1967232	1965843	1942360	"	"	"	†1116163	1966407	1958599	1942518
1111153	"	"	"	1967241	"	1966994	"	"	"	†1115355	1961404	"	"
1111154	"	"	"	1967232	"	"	"	"	"	†	1966407	"	"
1111155	"	"	1941524	1967231	1881371	○		○	○	†	"	"	
1111156	"	"	1923139	1967241	1965843	1966994	1932004	1931988	1962141	†1116236	1961404	"	1942518
1111157	"	"	1941524	1967236	1881371	○		○	○	†	"	"	
1111158	"	"	1964400	1965178	"	1967005	1932004	1931988	1962141	†1116163	1967025	1950570	1942518
1111159	"	"	1966708	1950567	"	1938116	"	"	"	†	"	"	
1111160	1942654	1965743	1883779	1967273	"	1967275	"	1966294	"	†1115357	1966407	1962197	"
1111161	"	1932015	"	1967444	"	1965427	"	"	"	†	"	1958599	"
1111164	1932018	"	1958213	1968282	1881371	1965844	"	1931988	"	†1115364	1967562	1968296	"
1111165	1971244	1971247	1968353	1968284	"	1967914	"	"	"	†1115365	"	"	"
1111166	1968018	1968433	1967643	1968286	"	○		○	○	†	"	"	
1111167	1932018	1932015	1903693	1968288	1965843	1966244	1932004	1931988	1962141	†1115364	"	"	1942518
1111168	"	"	1963965	1968076	1881371	1942360	"	"	"	†1968861	1966407	1958599	"
1111169	"	"	1882774	1968535	"	1964372	"	"	"	†1116163	"	"	"
1111170	"	"	"	"	"	"	"	1966294	"	†1115360	"	"	"
1111175	"	"	1968353	1967912	"	1967914	"	1931988	"	†1116243	1967562	1952569	"
1111176	1971244	1971247	1963965	800037	"	1965066	"	1966294	1846122	†1115365	"	1968683	1846199
1111177	1932018	1932015	1958213	1967917	"	1965844	"	1931988	"	†1116242	"	1952569	1942518
1111179	1968018	1968433	1967999	1968000	1924737	○		○	○	†1115361	1962144	1955676	
1111180	"	"	1958213	1968290	1881371	○		○	○	†1115365	1967562	1968296	

○ Not used on this model.


† Service by complete replacement.

• For 1970 model year and later use 1846122 Plate; 1846199 Lead.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
	LOCK WASHERS		
14	Lock Washer—Rotor Attaching Screw -----	453435	All except 1111168; 79; 80
	SCREWS		
17	Screw—(& Lock Washer)—Contact Assem. Attach.	1938527	1111147-8-9; 50-1-2-3-4-6-8-9; 60-1-4-5-7-8-9; 70-5-6-7
18	Screw—Condenser Clamp Attaching -----	453647	1111147-8-9; 50-1-2-3-4-6-8-9; 60-1-4-5-7-8-9; 70-5-6-7
19	Screw—Rotor Attaching -----	9416183	All except 1111179; 80
19	Screw & Lockwasher—Rotor Attaching -----	274453	1111148; 76-8-9; 80
—	Screw (& Lockwasher)—Shield Attaching -----	1846215	1111148; 76
20	Screw—Vacuum Control Attaching -----	453461	1111175-7
20	Screw—Vacuum Control Attaching -----	453696	1111153-6-7; 60-1
20	Screw—Vacuum Control Attaching -----	454408	1111146-7-8-9; 50-1-2-4-5-8-9; 64-5-6-7-8-9; 70-6; 80
	WASHERS		
—	Washer—Felt—Under Plate Washer -----	1951099	All
23	Washer—Space—Between Gear & Base -----	1837617	1111146-7-8; 50-2-3-4-5-6-7-8-9; 60-1-4-5-6-7-8-9; 70-6; 80
23	Washer—Space—Between Gear & Base -----	1945776	1111175-7
—	Washer—Under Advance Plate -----	1961927	1111146; 55-7; 66; 79; 80
—	Washer—Under Cross Shaft Gear -----	1956834	1111153-6-7
—	Washer—Tang—Between Gear & Base -----	1965864	1111146; 50-2-4-5; 60-1-8-9; 70
	MISCELLANEOUS		
24	BRACKET—Condenser -----	1869573	1111147-8-9; 50-1-2-3-4-6-8-9; 60-1-4-5-7-8-9; 70-5-6-7
25	BRUSH—In Cap -----	1938193	All
—	CONNECTOR—Lead Junction -----	2973782	1111146; 55-7; 66; 79; 80
—	COUPLING & Cross Shaft Bearing -----	1955799	1111153-6-7
—	FELT—Cam Oiler -----	1931748	1111150-2-3-4-6
—	FELT—Cam Lubricator -----	1949084	1111148; 68-9; 70-6
—	GEAR & Cross Shaft -----	1955842	1111153-6-7
27	GROMMET—For Primary Lead -----	1932023	1111147-8; 50-1-2-3-4-6-8-9; 60-1-4-5-7-8-9; 70-5-6-7
27	GROMMET—In Housing -----	1960789	1111146-9; 55-7; 66; 79; 80
29	LEAD—Breaker Plate Ground -----	1932002	1111147-8-9; 50-1-2-3-4-6-8-9; 60-1-4-5-7-8-9; 70-5-6-7
—	"O" RING—On Base -----	1959331	1111147-9; 58-9
33	PIN—Gear Attaching -----	456652	1111146-8; 50-2-3-4-5-6-7; 64-5-6-7-8-9; 70-6; 80
33	PIN—Gear Attaching -----	455862	1111147-9; 51-8-9; 60-1; 75-7-9
—	POLE PIECE AND PLATE ASSEM. -----	1960779	1111146; 55-7; 66; 80
—	POLE PIECE AND PLATE ASSEM. -----	1968002	1111179
—	POLE PIECE AND WT. BASE -----	1964272	1111146
—	POLE PIECE AND WT. BASE -----	1965123	1111166
—	POLE PIECE AND WT. BASE -----	1967235	1111155-7
—	POLE PIECE AND WT. BASE -----	1968001	1111179
—	POLE PIECE AND WT. BASE -----	1968105	1111180
—	R.F.I. SHIELD Package -----	1846216	1111148; 76
—	RETAINER—(C Washer)—Advance Plate -----	1932024	1111146; 55-7; 66; 79; 80
—	RETAINER—Felt Wick -----	1935621	1111148; 50-2-3-4-6; 68-9; 70-6
—	RING—Spring Post Retainer -----	9423913	1111160-1
—	SEAL—Lubrication -----	1950569	All
—	SLEEVE (Rubber)—Spring Post -----	1945548	1111147-8-9; 50-1-8-9; 64-5-6-7-9; 76; 80
—	SLEEVE (Rubber)—Spring Post -----	1961234	1111146; 52-3-4-5-6-7; 60-1-8-9; 70
34	SPRING—Breaker Plate Retainer -----	1932024	1111147-8-9; 50-1-2-3-4-6-8-9; 60-1-4-5-6-8-9; 70-5-6-7

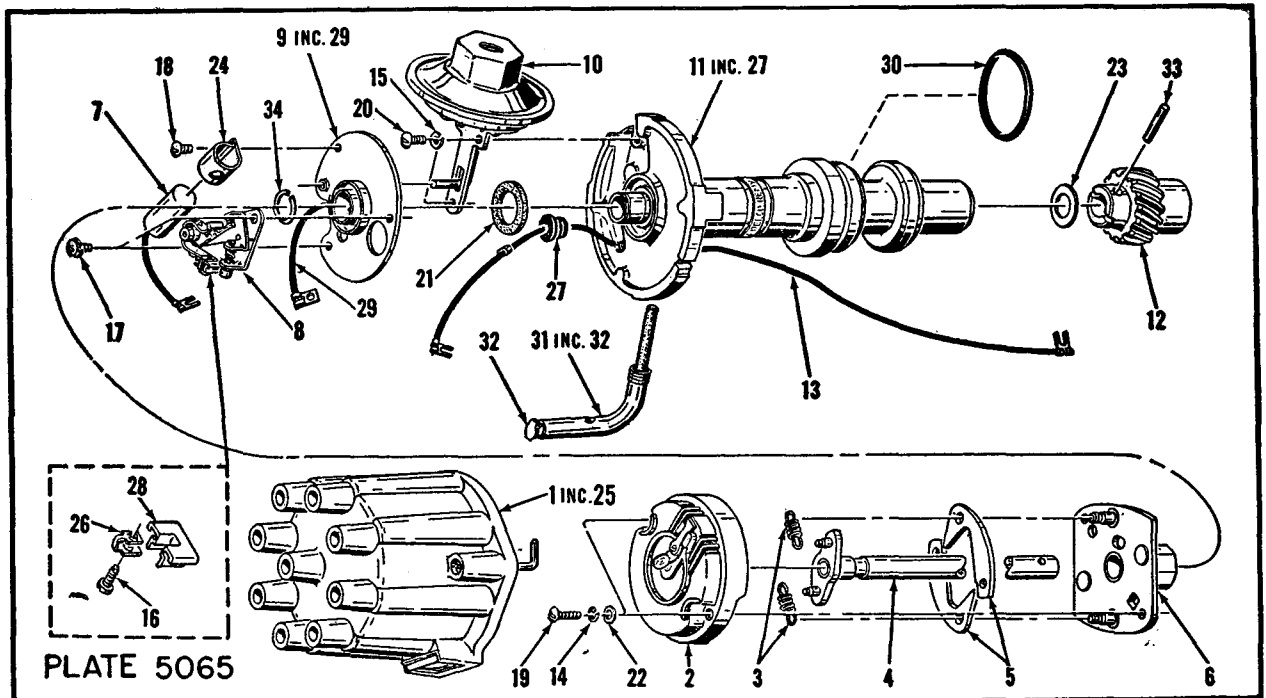 

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111183	1932018	1932015	1942510	1968292	1881371	1965066	1932004	1931988	1962141	1115365	1967562	1968296	1942518
1111184	"	"	1912189	1968294	1965843	1965844	"	"	"	"	"	"	"
1111186	"	"	1927235	1968119	"	1966244	"	"	"	"	"	"	"
1111187	"	"	1964950	1968021	"	1941849	"	"	"	"	"	"	"
1111188	1968018	1968433	1926116	1968016	1881371	○	○	○	○	1116232	1962144	1955676	○
1111189	"	"	1922250	1965297	1880902	○	○	○	○	"	"	"	○
1111191	1932018	1932015	1965041	1968039	1881371	1966796	1928111	1931988	1950575	1115363	1966365	1960782	1942518
1111193	"	"	1951743	1968076	"	1942360	1932004	"	1962141	1116163	1966407	1958599	"
1111194	"	"	"	1968080	"	1966994	"	1966294	1846122	1115355	1851158	"	1846199
1111195	"	"	"	1968076	"	"	"	1931988	1962141	"	1966407	"	1942518
1111196	"	"	"	1968080	"	"	"	1966294	1846122	1116236	1851158	"	1846199
1111197	1942654	"	1883498	1945872	"	○	○	○	○	1116118	1945828	1945234	○
1111198	1932018	"	1922426	1968255	"	1965191	1928111	1931988	1950575	1115362	1966365	1967082	1942518
1111199	"	"	1958213	1968298	"	1965844	1932004	"	1962141	1115366	1967562	1968296	"
1111200	"	"	1963965	1968265	1924737	1967914	"	"	"	1115367	"	"	"

○ Not used on this model.

† Service by complete replacement.

Delco Remy

SERVICE PARTS CATALOG

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
14	LOCK WASHERS Lock Washer—Rotor Attaching Screw -----	453435	1111184-7; 98
17	SCREWS Screw—(& Lock Washer)—Contact Assem. Attach. -----	1938527	1111183-4-6-7; 91-3-4-5-6-8-9; 200
18	Screw—Condenser Clamp Attaching -----	453647	1111183-4-6-7; 91-3-4-5-6-8-9; 200
19	Screw—Rotor Attaching -----	9416183	1111184-7; 98
19	Screw—(& Lock Washer)—Rotor Attaching -----	274453	1111183-6-8-9; 91-3-4-5-6; 97-9; 200
20	Screw—Vacuum Control Attaching -----	453461	1111197
20	Screw—Vacuum Control Attaching -----	453696	1111194-6
20	Screw—Vacuum Control Attaching -----	454408	1111183-4-6-7-8-9; 91-5-8-9; 200
20	Screw—(& Lock Washer)—Vacuum Control -----	9418565	1111193
—	WASHERS Washer—Felt—Under Plate Washer -----	1951099	1111197
—	Washer—Felt—Under Plate Washer -----	1951099	1111183-4-6-7-8-9; 91-3-4-5-6-8-9; 200
—	Washer—Under Shaft -----	811912	1111191-8
23	Washer—Space—Between Gear & Base -----	1837617	1111183-4-6-7; 93-4-5-6-9; 200
—	Washer—Under Advance Plate -----	1961927	1111188-9; 97
—	Washer—Under Cross Shaft Gear -----	1956834	1111194-6
—	Washer—Tang—Between Gear & Base -----	1965864	1111193-5
24	MISCELLANEOUS BRACKET—Condenser -----	1869573	1111183-4-6-7; 91-3-4-5-6-8-9; 200
25	BRUSH—In Cap -----	1938193	All
—	BUTTON—Tach Shaft Spacing -----	1957329	1111194-6
—	CONNECTOR—Lead Junction -----	2973782	1111188-9; 97
—	COUPLING & Cross Shaft Bearing -----	1955799	1111194; 6
—	FELT—Cam Oiler -----	1949084	1111191-3-4-5-6
—	GEAR & Cross Shaft -----	1955842	1111194-6
27	GROMMET—For Primary Lead -----	1932023	1111183-4-6; 91-3-4-5-6; 99; 200
27	GROMMET—In Housing -----	1960789	1111188-9; 97-8
29	LEAD—Breaker Plate Ground -----	1932002	1111183-4-6-7; 91-3-4-5-6-8-9; 200
—	OILER—In Housing -----	1922265	1111197
33	PIN—Gear Attaching -----	454512	1111191-8
33	PIN—Gear Attaching -----	456652	1111183-4-6-7-8-9; 93-4-5-6-9; 200
33	PIN—Gear Attaching -----	455481	1111197
—	POLE PIECE AND WT. BASE -----	1962800	1111188
—	POLE PIECE AND WT. BASE -----	1967928	1111197
—	POLE PIECE AND WT. BASE -----	1968005	1111189
—	POLE PIECE AND PLATE ASSEM. -----	1960779	1111197
—	POLE PIECE AND PLATE ASSEM. -----	1968002	1111188-9
—	RETAINER—C Washer)—Advance Plate -----	1932024	1111188-9; 97
—	RETAINER—Felt Wick -----	1935621	1111191-3-4-5-6
—	SEAL—Lubrication -----	1950569	All Except 1111197
—	SLEEVE (Rubber)—Spring Post -----	1945548	1111183-4-6-7-8-9; 91-7-8; 200
—	SLEEVE (Rubber)—Spring Post -----	1961234	1111189; 93-4-5-6
34	SPRING—Breaker Plate Retainer -----	1932024	1111183-4-6-7; 91-3-4-5-6-8-9; 200

* Models with Cylindrical Wick use 801865 Wick and Retainer Package.

Revised to May 1, 1968

 SERVICE PARTS CATALOG

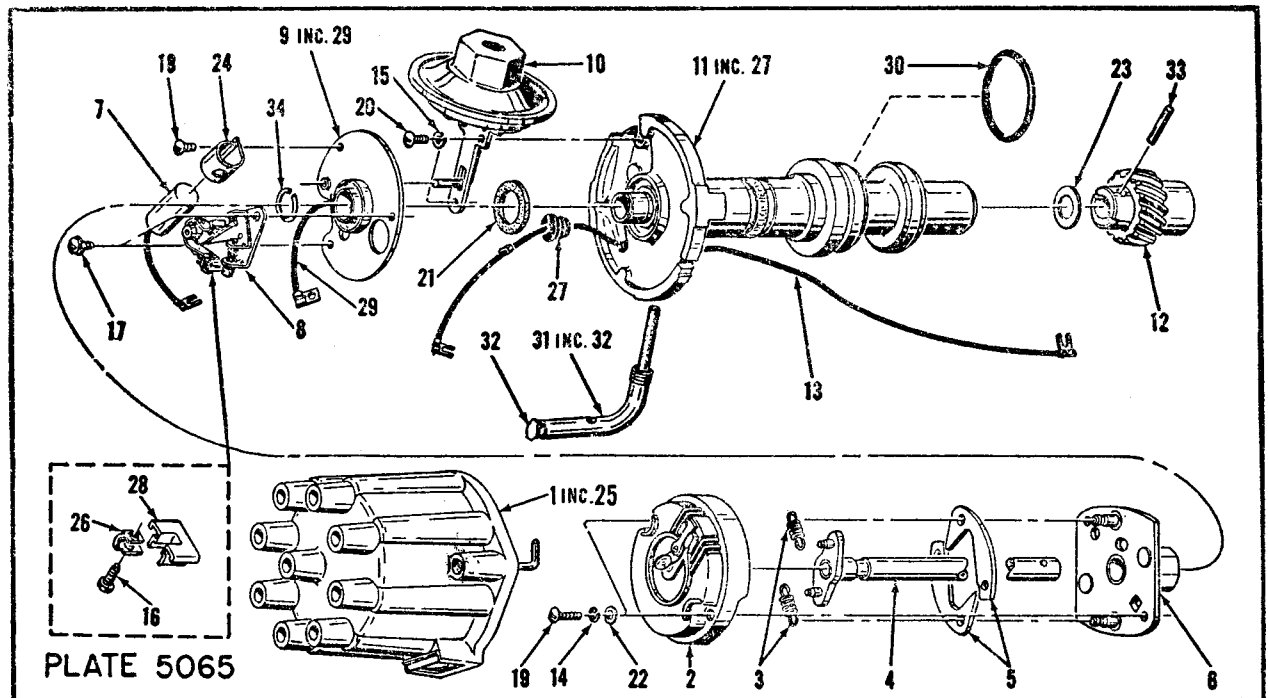

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111237	1932018	1932015	1942510	1969324	1881371	1965066	1932004	1931988	1962141	†1115367	1967562	1968296	1942518
1111238	"	"	1968353	1969325	"	1967914	"	"	"	†1115365	"	"	"
1111239	1969204	"	1917710	1968316	"	1938116	"	"	"	†1973409	1968318	1958599	"
1111240	1942654	"	1965903	1965902	"	"	"	"	"	†1115373	1966654	"	"
1111241	1932018	"	1963965	1968437	1924737	1967914	1932004	1931988	1962141	†1115365	1967562	1968296	1942518
1111242	"	"	"	"	"	"	"	"	"	†1115364	"	"	"
1111243	"	"	1958213	1968282	1881371	1965844	"	"	"	†1115365	"	"	"
1111244	"	"	"	1968298	"	"	"	"	"	†1115367	"	"	"
1111245	1968018	1968433	1916230	1968467	"	"	"	"	"	†1115365	"	"	"
1111246	"	"	1911496	1968440	"	"	"	"	"	†	"	"	"
1111247	1932018	1932015	1882774	1968530	"	1935632	1932004	1966294	1962141	†1115360	1966654	1958599	1942518
1111248	"	"	1922426	1968658	"	"	"	"	"	†	"	"	"
1111249	"	"	1967517	1968691	1924737	1938116	1932004	1931988	1962141	†1116163	1966407	"	1942518
1111250	"	"	1942510	1968292	1881371	1965066	"	"	"	†1115365	1967562	1968683	"
1111251	1968018	1968433	1958213	1968290	"	"	"	"	"	†	"	"	"
1111252	1932018	1932015	1942510	1969324	"	1965066	1932004	1931988	1962141	†1115367	"	"	1942518
1111253	1971244	1971247	1963965	1968437	1924737	1967914	"	"	"	†1115374	"	1968296	"
1111254	1932018	1932015	"	1968265	"	"	"	"	"	†1115375	"	"	"
1111255	1968018	1968433	1911496	1968440	1881371	"	"	"	"	†1115374	"	"	"
1111256	1932018	1932015	1961933	1964913	"	1935632	1932004	1931988	1962141	†1116163	1966407	1958599	1942518
1111257	"	"	1884615	1970575	"	1938116	"	"	"	†1115355	"	"	"
1111258	"	"	1969107	1969058	1880902	"	"	"	"	†1116163	1966654	"	"
1111259	"	"	1941986	1966479	1924737	1942360	1932004	1931988	1962141	†1115374	1962185	1966481	1942518
1111260	"	"	1935843	1967022	1881371	1967002	"	"	"	†1116163	1967025	1967024	"
1111261	"	"	1963965	1968265	1924737	1967914	"	"	"	†	1967562	1968296	"
1111262	"	"	1883335	1969231	1881371	1969234	"	"	"	†1969225	1962185	1966481	"
1111263	1942654	1960776	1964950	1969349	"	"	"	"	"	"	1969352	1962197	"
1111264	1932018	1932015	1967643	1966928	1965843	1967002	1932004	1931988	1962141	†1968861	1966407	1958599	1942518

○ Not used on this model.

† Service by complete replacement.


MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCKWASHERS			
—	Lock Washer—Pole Piece Attach. Screw -----	138532	1111263
SCREWS			
17	Screw—(& Lock Washer)—Contact Assem. Attach.	1938527	1111237-8-9; 41-2-3-4-7-9; 50-2-3-4-6-7-9; 60-1-2-4
18	Screw—Condenser Clamp Attaching -----	453647	1111237-8-9; 41-2-3-4-7-9; 53-4-6-7-9; 60-1-2
—	Screw—Pole Piece Attaching -----	9423213	1111263
19	Screw—Rotor Attaching -----	274453	All
20	Screw—Vacuum Control Attaching -----	453696	1111240-7-8; 58
20	Screw—Vacuum Control Attaching -----	454408	1111237-8-9; 41-2-3-4-5-6-9; 50-1-2-3-4-5-6-7; 60-1-4
20	Screw—Vacuum Control Attaching -----	453461	1111259; 62
WASHERS			
—	Washer—Felt—Under Plate Washer -----	1951099	All except 1111263
23	Washer—Space—Between Gear & Base -----	1837617	All except 1111259
—	Washer—Under Advance Plate -----	1961927	1111240-5-6-8; 51-5-8
—	Washer—Under Cross Shaft Gear -----	1956834	1111240-7-8; 58
—	Washer—Shim (.005 thk.) -----	1927529	1111263
—	Washer—Shim (.010 thk.) -----	1927530	1111263
—	Washer—Tang—Between Gear & Base -----	1965864	1111239; 49; 56-7; 63-4
—	Washer—Thrust—Under Shaft -----	1945776	1111259; 62
MISCELLANEOUS			
—	BEARING—Ball -----	907186	1111263
24	BRACKET—Condenser -----	1869573	1111237-8-9; 41-2-3-4-7-9; 50-2-3-4-6-7-9; 60-1-2-4
25	BRUSH—In Cap -----	1938193	All
—	COIL ASSEM.—Pole Piece -----	1960785	1111263
—	CONNECTOR—Lead Junction -----	2973782	1111240-5-6-8; 51; 55-8; 63
—	COUPLING & Cross Shaft Bearing -----	1955799	1111240-7-8; 58; 63
—	FELT—Cam Oiler -----	1949084	1111249; 56-7; 64
—	GEAR & Cross Shaft -----	1955842	1111240-7-8; 58; 63
27	GROMMET—For Primary Lead -----	1932023	1111237-8-9; 41-2-3-4-7-9; 50-2-3-4-6-7-9; 60-1-2-4
27	GROMMET—In Housing -----	1960789	1111240-5-6-8; 51-5-8; 63
29	LEAD—Breaker Plate Ground -----	1932002	1111237-8-9; 41-2-3-4-7-9; 50-2-3-4-6-7-9; 60-1-2-4
—	MAGNET—Pole Piece -----	1961886	1111263
—	"O" RING—On Base -----	1959331	1111260-3
33	PIN—Gear Attaching -----	456652	All except 1111260
33	PIN—Gear Attaching -----	455862	1111260
—	PLATE—Pole Piece -----	1965755	1111263
—	POLE PIECE AND WT. BASE -----	1962800	1111255
—	POLE PIECE AND WT. BASE -----	1964272	1111240
—	POLE PIECE AND WT. BASE -----	1968005	1111245-6
—	POLE PIECE AND WT. BASE -----	1968105	1111251
—	POLE PIECE AND WT. BASE -----	1968660	1111248
—	POLE PIECE AND WT. BASE -----	1969108	1111258
—	POLE PIECE AND WT. BASE -----	1969362	1111263
—	POLE PIECE AND PLATE ASSEM. -----	1960779	1111240-5-6-8; 51-5-8
—	POLE PIECE—Stationary -----	1960780	1111263
—	RETAINER—(C Washer)—Advance Plate -----	1932024	1111240-5-6-8; 51-5-8
—	RETAINER—Felt Wick -----	1935621	1111249; 56-7; 64
—	RING—Spring Post Retainer -----	9423913	1111240; 58; 63-4
—	SEAL—Lubrication -----	1950569	All except 1111263
—	SLEEVE (Rubber)—Spring Post -----	1945548	1111237-8-9; 41-2-3-4-5-6; 50-1-2-3-4-5-6-7-9; 60-1-2
—	SLEEVE (Rubber)—Spring Post -----	1961234	1111240-7-8-9; 58; 63-4
34	SPRING—Breaker Plate Retainer -----	1932024	1111237-8-9; 41-2-3-4-7-9; 50-2-3-4-6-7-9; 60-1-2-4

Revised to January 1, 1971

 SERVICE PARTS CATALOG

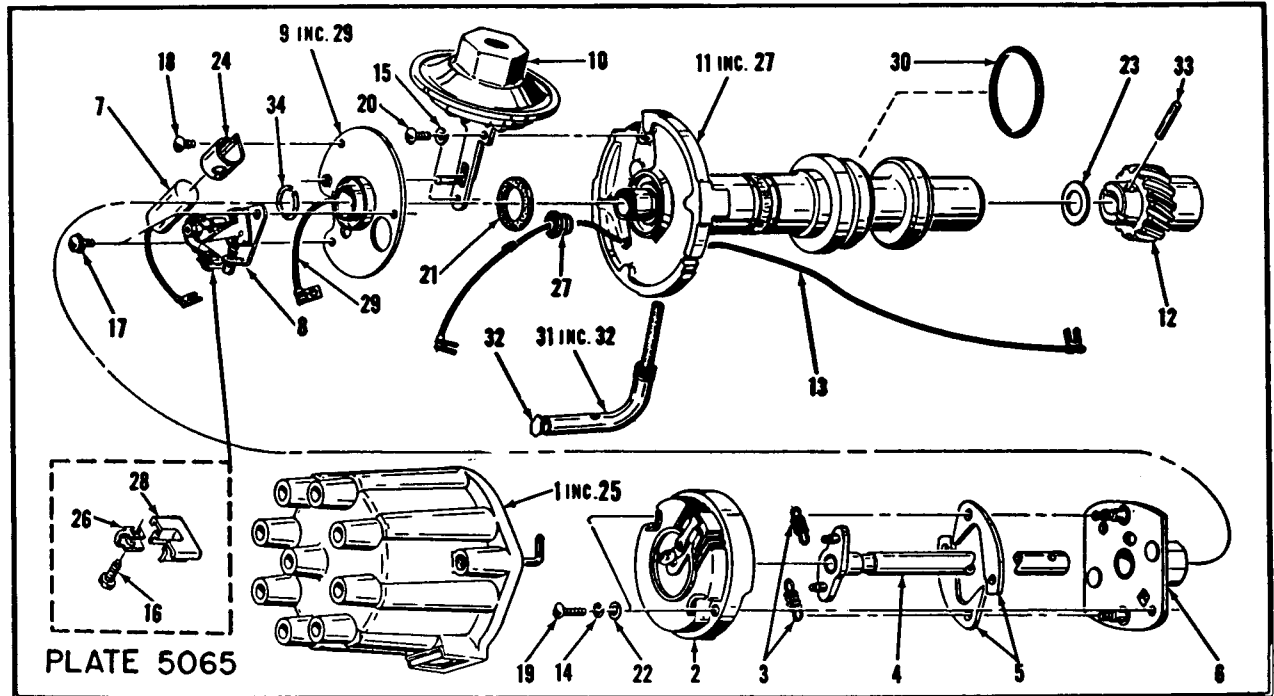

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111266	1971244	1960776	1969107	1969762	1881371	1970240	1932004	1966294	1962141	+1968861	1966407	1958599	1942518
1111267	"	"	1941524	1970606	"	"	"	"	"	+1968861	1851158	"	"
1111268	"	1932015	1967076	1969495	"	1961654	1932004	1931988	1962141	+1115365	1967562	1968296	1942518
1111269	"	"	"	1969499	"	"	"	"	"	+1115375	"	"	"
1111270	"	1971247	1963965	1968265	1924737	1967914	"	"	"	+1973412	1966407	1958599	"
1111272	"	1932015	1941524	1970382	1881371	1961654	"	"	"	+1973411	"	"	"
1111273	800062	1968433	1911496	1970313	"	"	"	"	"	"	1967562	1968683	"
1111276	"	"	"	"	"	"	"	"	"	+1973412	"	1968296	"
1111277	1971244	1932015	1922426	1969670	"	"	"	"	"	+1116163	"	1968683	"
1111278	"	"	"	"	"	"	"	"	"	+1115360	"	1968296	"
1111281	"	1971247	1968353	1969325	"	1967914	1932004	1931988	1962141	+1973411	1967562	1968296	1942518
1111282	"	"	"	1970605	1924737	1945210	"	"	"	"	"	1968683	"
1111283	800062	1968433	1925251	1970674	"	"	"	"	"	"	"	1968296	"
1111284	1971244	1932015	1946972	1970079	1881371	1937853	1932004	1931988	1962141	+1116163	1967025	1950570	1942518
1111285	"	"	1900221	1970085	"	1967005	"	"	"	+1116163	"	1967024	"
1111286	"	"	1947660	1970178	"	1941849	"	"	"	+1973408	1962144	1955676	195897
1111287	"	"	1935843	1970387	"	1941135	"	"	"	"	"	"	"
1111288	"	"	1941964	1965297	1880902	1965844	"	"	"	+1973407	"	"	"
1111289	"	"	1970573	1970130	"	1941135	"	"	"	+1973408	"	"	"
1111290	800062	1971247	1917710	1970175	1881371	"	"	"	"	"	"	"	"
1111291	"	"	1922250	1965297	1880902	"	"	"	"	+1973407	"	"	"
1111292	"	"	1926116	1970130	"	"	"	"	"	+1973408	"	"	"
1111293	1971244	1932015	1882774	1968530	1881371	1964372	1932004	1966294	1846122	+1115360	1851158	1958599	184619
1111294	"	"	1922426	1846243	"	"	"	"	"	+1115360	"	"	"
1111295	800061	"	1971039	1971037	1965843	"	"	"	"	+1115373	"	"	"
1111296	1971244	"	1969107	1969058	1880902	"	"	"	"	+1116163	"	"	"
1111297	"	"	1925574	1970531	1881371	1935632	1932004	1931988	1962141	+1116163	1966407	"	1942518
1111298	"	"	1923140	1970541	"	1967023	"	"	"	+1116163	"	"	"
1111299	"	"	1942012	1963251	"	1941135	"	"	"	+1115361	1962144	1955676	195897
1111300	"	"	1963965	1968265	1924737	1967914	"	"	"	+1973412	1967562	1968296	1942518

° Not used on this model.


† Service by complete replacement.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
SCREWS			
17	Screw—(& Lock Washer)—Contact Assem. Attach.....	1938527	All except 1111267; 73-6-7-8; 83; 90-1-2-4-5-6
18	Screw—Condenser Clamp Attaching.....	453647	All except 1111267; 73-6-7-8; 83; 90-1-2-4-5-6
19	Screw—Rotor Attaching.....	274453	All
20	Screw—Vacuum Control Attaching.....	454408	1111266-8-9; 70-2; 81-2-4-5-6-7-8-9; 97-8-9; 300
20	Screw—Vacuum Control Attaching.....	453696	1111267; 293-4-5-6
20	Screw—Vacuum Control Attaching.....	9418565	1111273-6-7-8; 83; 90-1-2
WASHERS			
—	Washer—Felt—Under Plate Washer.....	1951099	All
23	Washer—Tang—Under Gear.....	1837617	1111266-7-8-9
—	Washer—Under Advance Plate.....	1961927	1111267; 273-6-7-8; 83; 90-5-6
—	Washer—Tang—Between Gear & Base.....	1965864	1111266; 77-8
23	Washer—Thrust—Under Shaft.....	1837617	All except 1111286-7-8-9; 99
—	Washer—Thrust Tach. Gear.....	1956834	1111267; 293-4-5-6-7-8
MISCELLANEOUS			
24	BRACKET—Condenser.....	1869573	All except 1111267; 73-6-7-8; 83; 90-1-2-4-5-6
25	BRUSH—In Cap.....	1938193	All
—	BUTTON—(Nylon) In Weight Base.....	1957329	1111273-6; 83; 90-1-2-5-6
—	BUTTON—Tach. Shaft Spacing.....	1957329	1111267; 93-4
—	CONNECTOR—Lead Junction.....	2973782	1111267; 273-6-7-8; 83 90-1-2-4-5-6
—	COUPLING—Tach.....	1955799	1111267; 293-4-5-6
—	FELT—Cam Oiler.....	1961088	1111284-5
—	FELT—Cam Oiler.....	*1949084	1111266; 93-7-8
—	GEAR & CROSS Shaft—Tach.....	1955842	1111267; 293-4-5-6
27	GROMMET—For Primary Lead.....	1932023	1111266-8-9; 70-2; 81-2-4-5-6-7-8-9; 93-7-8-9; 300
27	GROMMET—In Housing.....	1960789	1111267-273-6-7; 90-1-2-5-6
29	LEAD—Breaker Plate Ground.....	1932002	1111266-8-9; 70-2-81-2-4-5-6-7-8-9; 93-7-8-9; 300
33	PIN—Gear Attaching.....	455862	1111267; 285-6-7-8-9; 90-1-2-9
33	PIN—Gear Attaching.....	456652	1111266-8-9; 70-2-3-6-7-81-2-3-4; 93-4-5-6-7-8; 300
—	POLE PIECE AND WT. BASE.....	1968660	1111277-8; 94
—	POLE PIECE & WT. BASE.....	1962800	1111273-6; 90-2
—	POLE PIECE & WT. BASE.....	1967928	1111267; 95
—	POLE PIECE & WT. BASE.....	1969108	1111296
—	POLE PIECE & WT. BASE.....	1968005	1111291
—	POLE PIECE & WT. BASE.....	1970156	1111283
—	POLE PIECE & PLATE ASSEM.....	1968002	1111290-1-2
—	POLE PIECE & PLATE ASSEM.....	1960779	1111267; 273-6-7-8; 83; 94-5-6
—	"O" RING—On Base.....	1959331	1111284-5
—	RETAINER—Felt Wick.....	*1935621	1111266; 93-7-8
—	RETAINER—Felt Wick.....	*1963858	1111284-5
—	RING—Spring Post Retainer.....	9423913	1111295-6-7
—	SEAL—Lubrication.....	1950569	All
—	SLEEVE (Rubber)—Spring Post.....	1945548	1111268-9; 70-2-3-6-81-2-3-4-5-6-7-8-9; 90-1-2-9; 300
—	SLEEVE (Rubber)—Spring Post.....	1961234	1111266; 7-77-8; 93-4-5-6-7-8
34	SPRING—Advance or Pole Pc. Plate Retainer.....	1932024	All

 *Models with Cylindrical wick use 801865 wick and Retainer Package.

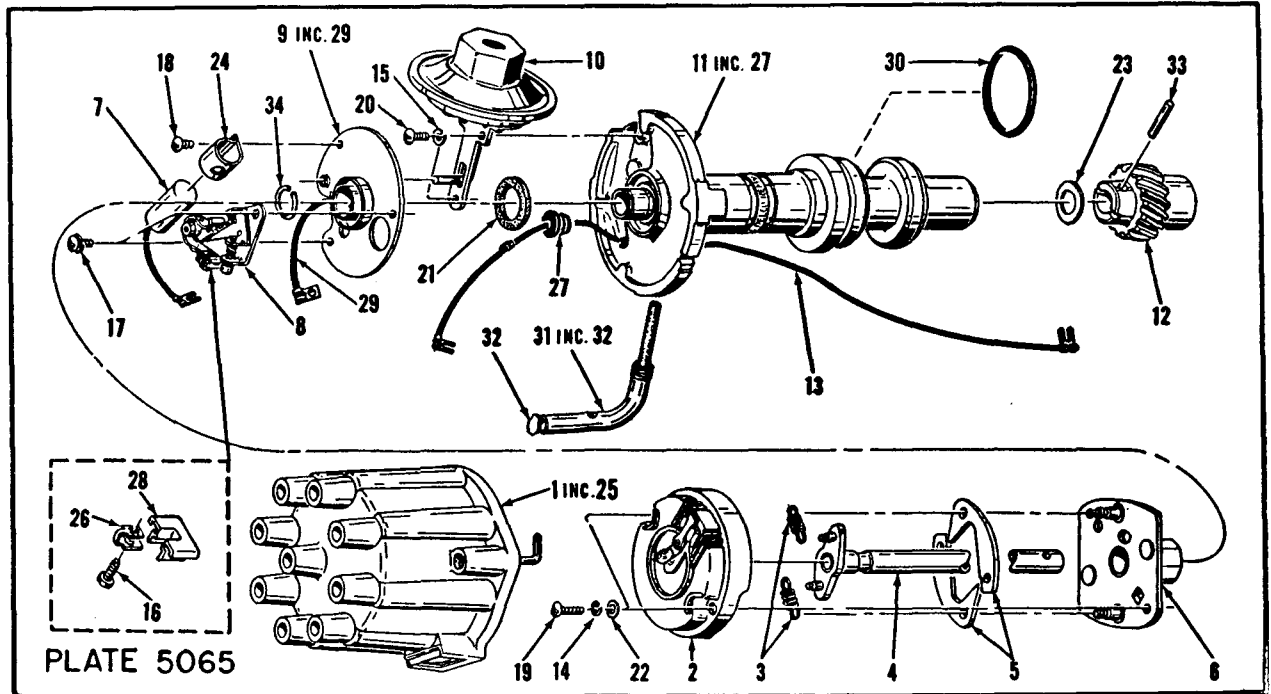

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111330	1932018	1932015	1941964	1970945	1881371	1938116	1932004	1931988	1962141	+1116163	1967025	1950570	1942518
1111332	1968018	1968433	1968041	1971191	"	"	"	"	"	+1115355	1966407	1958599	"
1111333	"	"	1883779	1970531	"	"	"	"	"	+1968861	"	"	"
1111334	1971244	1971247	1941964	1970945	"	"	1932004	1931988	1962141	+1116163	1967025	1950570	1942518
1111335	"	"	1900221	1970085	"	1967005	"	"	"	+ "	"	1967024	"
1111339	800062	"	1917710	1970175	"	"	"	"	"	+1973408	1962144	1955676	"
1111340	"	"	1922250	1965297	1880902	"	"	"	"	+1973407	"	"	"
1111341	"	"	1970823	1958625	1881371	"	"	"	"	+1973418	"	"	"
1111342	"	"	1926116	1970130	1880902	"	"	"	"	+1973408	"	"	"
1111343	"	"	1970823	1958625	1881371	"	"	"	"	+ "	"	"	"
1111350	"	"	1883779	800629	"	"	"	"	"	+1115363	1966365	1967082	"
1111358	1970950	"	1925574	1846620	1965843	"	"	"	"	+1973431	1945828	1945234	"
1111359	"	"	1939381	1846624	1881371	"	"	"	"	+ "	"	"	"


†Service by complete replacement.

⊖Not used on this model.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
SCREWS			
17	Screw—(& Lock Washer)—Contact Assem. Attach.....	1938527	1111330-4-5
18	Screw—Condenser Clamp Attaching.....	453647	1111330-4-5
19	Screw—Rotor Attaching.....	274453	All
20	Screw—Vacuum Control Attaching.....	454408	1111330-4-5
20	Screw—Vacuum Control Attaching.....	9418565	1111332-3-9; 40-1-2-3; 50
20	Screw—Vacuum Control Attaching.....	453461	1111358-9
WASHERS			
—	Washer—Felt—Under Plate Washer.....	1951099	All
—	Washer—Tang—Between Gear & Base.....	1965864	1111332-3
—	Washer—Under Advance Plate.....	1961927	1111332-3-9; 40-1-2-3; 50-8-9
23	Washer—Thrust—Under Shaft.....	1837617	1111332-3
23	Washer—Tang—Under Gear.....	1837617	1111330-4-5
23	Washer—Under Gear.....	811912	1111350
MISCELLANEOUS			
24	BRACKET—Condenser.....	1869573	1111330-4-5
25	BRUSH—In Cap.....	1938193	All
—	BUTTON—Nylon—In Weight Base.....	1957329	1111332-3-9; 40-1-2-3; 50
—	CONNECTOR—Lead Junction.....	2973782	1111332-3-9; 40-1-2-3; 50-8-9
—	FELT—Cam Oiler.....	1961088	1111334-5
27	GROMMET—For Primary Lead.....	1932023	1111330-4-5
27	GROMMET—In Housing.....	1960789	1111332-3-9; 40-1-2-3; 50-8-9
29	LEAD—Breaker Plate Ground.....	1932002	1111330-4-5
32	OILER—In Housing.....	1922265	1111358-9
33	PIN—Gear Attaching.....	456652	1111332-3; 58-9
33	PIN—Gear Attaching.....	455862	1111330-4-5-9; 40-1-2-3
33	PIN—GEAR Attaching.....	455481	1111358-9
33	PIN—Spring—Gear Attaching.....	454512	1111363
—	POLE PIECE & PLATE ASSEM.....	1960779	1111332-3; 58-9
—	POLE PIECE & PLATE ASSEM.....	1964276	1111350
—	POLE PIECE & PLATE ASSEM.....	1968002	1111339; 40-1-2-3
—	POLE PIECE & WT. BASE.....	1967928	1111332
—	POLE PIECE & WT. BASE.....	1964272	1111333
—	POLE PIECE & WT. BASE.....	1962800	1111339; 42
—	POLE PIECE & WT. BASE.....	800630	1111350
—	POLE PIECE & WT. BASE.....	1968005	1111340
—	POLE PIECE & WT. BASE.....	1970156	1111341-3
—	POLE PIECE & WT. BASE.....	1969108	1111359
—	POLE PIECE & WT. BASE.....	1969208	1111358
—	"O" RING—On Base.....	1959331	1111330-4-5
—	RETAINER (Washer) Advance Plate.....	1932024	1111332-3-9; 40-1-2-3; 50-8-9
—	RETAINER—Felt Wick.....	1963858	1111330-4-5
—	SEAL—Lubrication.....	1950569	1111330-2-3-4-5-9; 40-1-2-3; 50
—	SLEEVE (Rubber) Spring Post.....	1961234	1111333; 40-1-2
—	SLEEVE (Rubber)—Spring Post.....	1945548	1111330-2-4-5-9; 43; 50-8-9
34	SPRING—Breaker Plate Retainer.....	1932024	1111330-4-5

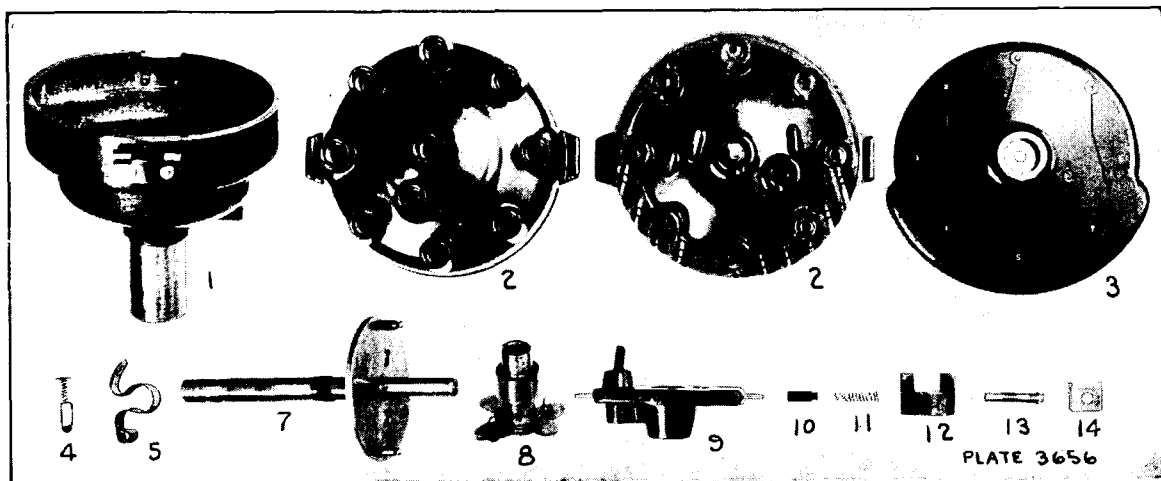 


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Dist. Housing	Dist. Cap	Dist. Cap Cover	Dist. Cap Carbon Button	Dist. Cap Spring	Dist. Cap Spring Pin	Main Shaft	Cam Assem.	Rotor Assem.	Rotor Carbon Brush	Rotor Brush Spring	Gear Collar or Coupling	Gear Pin	Terminal Clamp
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1111201	*827344	1839166		1888023	30111	29802	827326	1838456	1887823	35607	35617			31650
1111202	"	"		"	"	"	829146	1839631	1844262	"	"	809673	1857492	"
1111203	1857441	"		"	"	"	1841642	1847314	1887823	"	"	1837384	1862218	"
1111204	827344	"		"	"	"	822173	1844500	"	"	"	809673	1857492	"
1111206	"	1839166		"	"	"	"	1854307	"	"	"	"	"	"
1111207	1905620	"		"	"	"	1883118	1847314	"	"	"	"	"	"
1111208	"	"		"	"	"	1882487	"	"	"	"	"	"	"
1111209	"	"		"	"	"	1882108	"	"	"	"	809673	1857492	"
1111210	"	"		"	"	"	1883146	"	"	"	"	"	"	"
1111211	1883884	1839161		"	"	"	822173	1844500	"	"	"	809673	1857492	"
1111212	827344	1841818		"	"	"	1886580	1839631	"	"	"	"	"	"
1111213	"	1839166		"	"	"	1858396	"	1844262	"	"	1858399	1857492	"
1111214	"	1841818		"	"	"	1886581	1838672	1887823	"	"	"	"	"
1111215	"	1839166		"	"	"	1886124	"	"	"	"	809673	1857492	"
1111216	1905620	"		"	"	"	1840799	"	"	"	"	"	"	"
1111217	"	1841818		"	"	"	822173	1861636	"	"	"	"	"	"
1111218	1905620	1839166		"	"	"	1883146	1847314	"	"	"	"	"	"
1111219	1857441	"		"	"	"	1841642	1841644	"	"	"	1837384	1862218	"
1111220	1909400	1841818		"	1900188	1885326	1909405	1909403	1909407	"	"	"	"	"
1111221	"	"		"	"	"	1911099	1909492	"	"	"	1902407	829421	"
1111222	"	"		"	"	"	1911715	1911148	"	"	"	1911153	1908031	"
1111223	"	"		"	"	"	1911145	1911717	"	"	"	"	"	"
1111224	"	1839166		"	"	"	1911509	1911148	"	"	"	"	"	"
1111225	1912930	1841818		"	"	"	1912933	"	"	"	"	"	"	"
1111226	1912942	825430		"	"	"	1912944	1912946	16781	"	"	821865	1862218	"
1111227	1916689	1841818		"	"	"	1916686	1916688	1909407	"	"	1911153	1908031	"
1111228	"	"		"	"	"	1923428	1923429	"	"	"	"	"	"
1111229	"	"		"	"	"	1923420	1923422	"	"	"	"	"	"
1111230	1911506	1839166		"	"	"	1929157	1911148	1910208	"	"	809673	829421	"
1111231	1909400	1841818		"	"	"	1933172	1933173	1909407	"	"	1902407	"	"
1111232	1933802	"		"	"	"	1933798	1933800	"	"	"	"	"	"
1111233	1909400	"		"	"	"	1938401	1938402	"	"	"	"	829421	"
1111235	1933802	"		"	"	"	1933798	1933800	"	"	"	"	"	"

*Coupling or Gear not supplied by Delco-Remy.

*When Bearing Bushing is required, bore Housing to .658/.661 and use Bushing 1878549.

 Delco-Remy SERVICE PARTS CATALOG

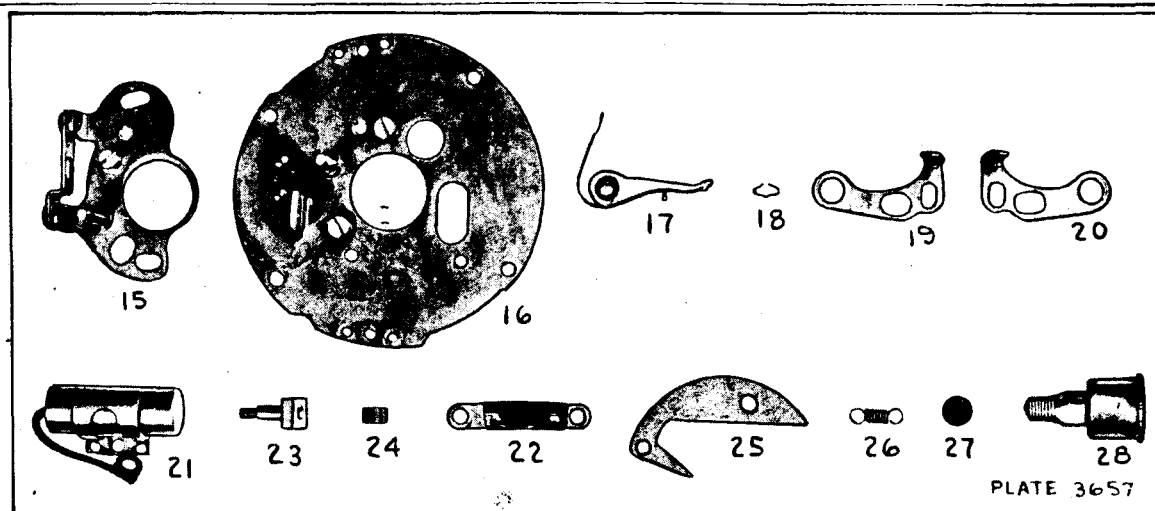

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Breaker Plate Upper	Breaker Plate Lower	Breaker Lever	Breaker Lever Retainer Spring	Contact Point and Support Lower	Contact Point and Support Upper	Condenser	Terminal Connector	Terminal Stud	Terminal Stud Bushing	Weight	Weight Spring	Felt Wick In Cam	Grease Cup
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
111201	1837359	1837356	813238	813245	1845785	1849877	1880896	825454	825456	825457	820528	1917165	819639	1955293
111202	1838997	1844260 b	"	"	b	"	b1848506	1869704	"	"	818222	1887553	"	"
111203	1837359	1837356	"	"	"	1849877	1880896	"	"	"	1845036	1883899	"	"
111204	"	"	"	"	"	"	1869704	825454	"	"	1841312	1883121	"	"
111206	"	"	"	"	"	"	1880896	"	"	"	1837944	1906858	"	"
111207	"	"	"	"	"	"	"	"	"	"	1845036	1931650	"	"
111208	"	"	"	"	"	"	"	"	"	"	"	1885888	"	"
111209	"	"	"	"	"	"	"	"	"	"	"	"	"	"
111210	"	"	"	"	"	"	"	"	"	"	"	1883899	"	"
111211	"	1853425	"	"	"	"	1881020	†	1854115	1854117	1841312	1883121	"	"
111212	"	1837356	"	"	"	"	1880896	825454	825456	825457	818222	1884526	"	"
111213	1838997	1844260 b	"	"	b	"	b1848506	1869704	"	"	"	1884929	"	"
111214	1837359	1837356	"	"	"	1849877	1880896	"	"	"	"	1884526	"	"
111215	"	"	"	"	"	"	"	"	"	"	"	"	"	"
111216	"	"	"	"	"	"	"	"	"	"	"	1886165	"	"
111217	"	"	"	"	"	"	"	"	"	"	825469	1883498	"	"
111218	"	"	a1881394	"	a1881399	a1882021	"	"	"	"	1845036	1883899	"	"
111219	"	"	813238	"	1845785	1849877	"	"	"	"	1841643	"	"	"
111220	"	"	a1881394	"	a1881399	a1882021	1908846	825454	"	"	1880902	1886508	"	"
111221	"	"	"	"	"	"	"	"	"	"	1881371	1902376	"	"
111222	"	"	"	"	"	"	"	"	"	"	1921271	"	1963555	"
111223	"	"	"	"	"	"	"	"	"	"	1881371	1903430	"	"
111224	"	"	"	"	"	"	"	825454	"	"	1921271	1883899	"	"
111225	"	"	"	"	"	"	"	"	"	"	"	1901737	"	"
111226	"	"	813238	"	1845785	1849877	"	"	"	"	1880902	1883509	819639	1955293
111227	"	"	a1881394	"	a1881399	a1882021	"	"	"	"	1881371	1911070	1963555	"
111228	"	"	"	"	"	"	"	"	"	"	"	1923415	"	"
111229	"	"	"	"	"	"	"	"	"	"	1880902	1910530	"	"
111230	1838997	1838998	813238	"	1845785	1849877	1900272	825454	"	"	1921271	1886557	"	"
111231	1837359	1837356	a1881394	"	a1881399	a1882021	"	"	"	"	"	1931650	"	"
111232	"	"	"	"	"	"	1908846	"	"	"	1880902	1910530	"	"
111233	"	"	a	"	a	"	"	"	"	"	1881371	1911092	"	"
111235	"	"	a	"	a	"	"	"	"	"	1880902	1910530	"	"

† 825454 Connector is 1½" long—1836907 is 27½" long.
* 825454 Connector is 1½" long—1844265 is 5¼" long.
‡ Use one each: 1885888 Spring (8½ turns .024 wire),
1915877 Spring (6½ turns .039 wire).

a Contact Set No. 1882021.
b Contact set No. 1970436.

Revised to December 1, 1967

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Lever Spring Attaching Screw.....	453844	1111202-6-11-12-13-14; 30-1-5
Lock Washer—Breaker Plate Attaching Screw—Lower.....	453844	1111201-2-3-4-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3
Lock Washer—Cap Spring Support Screw.....	453844	1111220-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Lock Washer—Condenser Attaching Screw.....	453844	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Lock Washer—Condenser Attaching Screw.....	453435	1111211
Lock Washer—Condenser Terminal.....	453844	1111211
Lock Washer—Housing Plug Screw.....	9421423	1111222-3-8-9
Lock Washer—Mounting Plate Screw.....	9421423	1111223
Lock Washer—Mounting Screw.....	9421424	1111223
Lock Washer—Terminal Clamp Screw.....	453844	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-8-9; 30-1-2-3-5
Lock Washer—Terminal Stud—Inside.....	453435	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Lock Washer—Weight Hold Down Plate Nut.....	1885558	1111220-1-2-3-4-5-7-8-9; 30-1-2-3-5
NUTS		
Nut—Breaker Lever Spring Attaching Screw.....	817363	1111201-2-3-4-6-7-8-9-10-11-12-13 14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Nut—Breaker Lever Spring Stud.....	817363	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Nut—Terminal Stud.....	5024654	1111201-2-3-4-6-7-8-9-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Nut—Mounting Plate Screw.....	803880	1111223
Nut—Mounting Screw.....	120368	1111223
Nut—Weight Hold Down Plate Attaching.....	1923540	1111220-1-2-3-4-5-7-8-9; 30-1-2 3-5
SCREWS		
Screw—Breaker Plate Attaching (Lower).....	453418	1111201-2-3-4-6-7-8-9-10-11-12 13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Screw—Breaker Plate Attaching (Upper).....	1914916	1111201-2-3-4-6-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Screw—Breaker Lever Spring Attaching.....	1920777	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Screw—Cap Spring Support.....	453418	1111222-3-5-6-7-8-9; 32-5
Screw—Cap Spring Support Attaching.....	453647	1111220-1-4; 30-1-3
Screw—Condenser Attaching.....	453304	1111201-2-3-4-6-7-8-9-10-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Screw—Condenser Attaching.....	453319	1111211
Screw—Condenser Terminal.....	453647	1111211
Screw—Contact Attaching.....	1914916	All
Screw—Distributor Mounting.....	106280	1111223
Screw—H.T. Terminal (Shipped separate).....	1839164	1111223-7; 31-2
Screw—Housing Plug.....	274315	1111222-3-8-9
Screw—Mounting Plate Attaching.....	25747	1111223
Screw—Terminal Clamp.....	453461	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-6-7-8-9; 30-1-2-3-5
Screw—Terminal Clamp.....	1835943	1111225
WASHERS		
Washer—Breaker Lever Spring Attaching Screw—Plain.....	810794	1111201-2-4-6-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Washer—Breaker Lever Spring Stud—Ins.....	1837224	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Washer—Breaker Lever Spring Stud—Plain.....	810794	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5


Parts not listed in this catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
WASHERS—Continued		
Washer—Breaker Lever Spring Stud Bushing—Ins.....	1837223	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Washer—Felt—In Housing Cover.....	1902250	1111220-1-7-8-9; 31-2-3-5
Washer—Plain—Mounting Plate Screw.....	120386	1111223
Washer—Shim—.005 thk.....	810074	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-19; 21-2-6-7-8-9; 30-1-2-3-5
Washer—Shim—.010 thk.....	1912129	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-19; 21-2-6-7-8-9; 30-1-2-3-5
Washer—Space—Under Gear or Coupling.....	811912	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-19; 21-2-6-7-8-9; 30-1-2-3-5
Washer—Terminal Stud—Ins.—Outside.....	20076	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Washer—Terminal Stud—Ins.—Inside.....	825458	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Washer—Terminal Stud—Plain—Inside.....	1913784	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Washer—Terminal Stud—Plain—Outside.....	1905125	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Washer—Under Weight Plate.....	811912	1111203-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Washer—Weight.....	807295	1111201-2-3-4-6-7-8; 20
MISCELLANEOUS		
BLOCK—Gear Driving.....	1908028	1111222-8-9
BUSHING—Distributor Housing.....	1878549	1111203
BUSHING—Distributor Housing.....	825463	1111216-17; 26
BUSHING—Distributor Housing.....	1909003	1111220-1-2-3-4-5-7-8-9; 30-1-2-3-5
COLLAR—Between Housing & Coupling.....	821865	1111232-5
Condenser LEAD.....	1850015	1111211
COVER—Housing.....	1902247	1111220-1
COVER—Housing.....	1916683	1111227-8-9; 31-2-3-5
CUSHION—Gear Driving Block.....	1908029	1111222-7-8-9
GASKET—Housing Cover.....	1902249	1111220-1-7-8-9; 31-2-3-5
High Tension TERMINAL—Screw Type (Shipped separate)...	1839164	1111212-14-17; 35
PIN—Collar Attaching.....	1862218	1111235
PLATE—Mounting.....	36961	1111223
PLATE—Weight Hold Down.....	1885557	1111220-1-2-3-4-5-7-8-9; 30-1-2-3-5
PLUG—Pipe—In Housing.....	125947	1111220-1-2-3-4-5-7-8-9; 30-1-2-3-5
RETAINER—Gear Driving Block.....	1908030	1111222-7-8-9
RIVET—Distributor Cap Spring Support.....	111881	1111201-2-3-4-6-7-8-9-10-12-13-14-16-17-18-19
RIVET—Distributor Cap Spring.....	111892	1111211-15
Rubber NIPPLE (Shipped separate).....	1839771	1111212-14-17; 23; 32-5
STUD—Breaker Lever Spring.....	1837225	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
SUPPORT—Distributor Cap Spring.....	825429	1111201-2-3-4-6-7-8-9-10-11-12-13-14-15-16-17-18-19
SUPPORT—Distributor Cap Spring.....	1862218	1111220-1-2-3-4-5-6-7-8-9; 30-1-2-3-5
Vent PLUG.....	1864618	1111222-3

Revised to Sept. 15, 1942

 SERVICE PARTS CATALOG

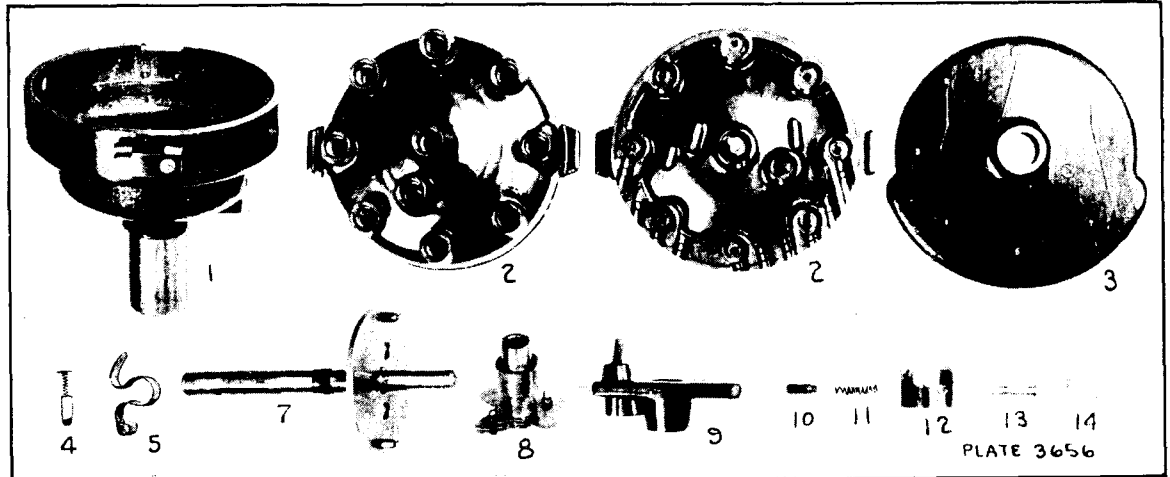


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Dist. Housing	Dist. Cap	Dist. Cap Cover	Dist. Cap Carbon Button	Dist. Cap Spring	Dist. Cap Spring Pin	Main Shaft	Cam Assem.	Rotor Assem.	Rotor Carbon Brush	Rotor Brush Spring	Gear Collar or Coupling	Gear Pin	Terminal Clamp
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1111301	827344	825430		1888023	30111	29802	1900733	1861679	18221	35607	35617	809673	1857492	31656

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Lever Spring Attaching Screw.....	121841	1111301
Lock Washer—Breaker Plate Attaching Screw—Lower.....	121841	1111301
Lock Washer—Condenser Attaching Screw.....	121841	1111301
Lock Washer—Terminal Clamp Screw.....	121841	1111301
Lock Washer—Terminal Stud—Inside.....	120217	1111301
NUTS		
Nut—Breaker Lever Spring Attaching Screw.....	817363	1111301
Nut—Breaker Lever Spring Stud.....	817363	1111301
Nut—Terminal Stud.....	5024654	1111301
SCREWS		
Screw—Breaker Plate Attaching (Lower).....	117114	1111301
Screw—Breaker Plate Attaching (Upper).....	816784	1111301
Screw—Breaker Lever Spring Attaching.....	813511	1111301
Screw—Condenser Attaching.....	131949	1111301
Screw—Contact Adjusting.....	816784	1111301
Screw—Terminal Clamp.....	107710	1111301

 Delco-Remy
 SERVICE PARTS CATALOG

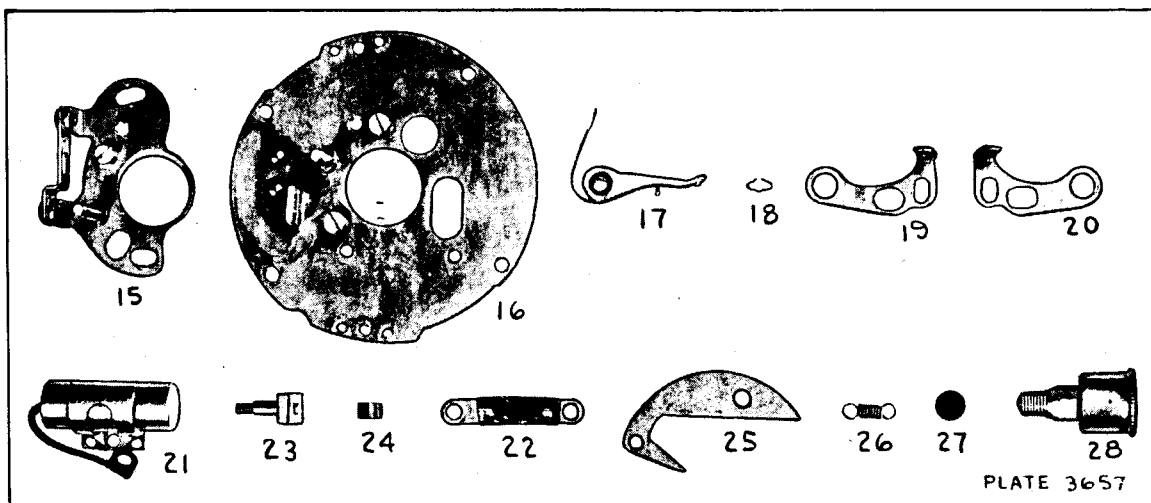

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model No.	Breaker Plate Upper	Breaker Plate Lower	Breaker Lever	Breaker Lever Retainer Spring	Contact Point and Support Lower	Contact Point and Support Upper	Condenser	Terminal Connector	Terminal Stud	Terminal Stud Bushing	Weight	Weight Spring	Felt Wick in Cam	Grease Cup
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
1111301	1838997	1838998	1905344	813245	1845785	1849877	1908846	825454	825456	825457	1845036	1885888	819639	805579

MINOR PARTS SECTION

Name	Part No.	Used on Models
WASHERS		
Washer—Breaker Lever Spring Attaching Screw—Plain.....	810794	1111301
Washer—Breaker Lever Spring Stud—Ins.....	1837224	1111301
Washer—Breaker Lever Spring Stud—Plain.....	810794	1111301
Washer—Breaker Lever Spring Stud Bushing—Ins.....	1837223	1111301
Washer—Shim (.005 thk.).....	810074	1111301
Washer—Shim (.010 thk.).....	810078	1111301
Washer—Space—Under Gear or Coupling.....	811912	1111301
Washer—Terminal Stud—Ins.—Outside.....	20076	1111301
Washer—Terminal Stud—Ins.—Inside.....	825458	1111301
Washer—Terminal Stud—Plain—Inside.....	1902988	1111301
Washer—Terminal Stud—Plain—Outside.....	27041	1111301
MISCELLANEOUS		
RIVET—Distributor Cap Spring.....	111892	1111301
STUD—Breaker Lever Spring.....	1837225	1111301
SUPPORT—Distributor Cap Spring.....	825429	1111301

Revised to August 15, 1965

 SERVICE PARTS CATALOG

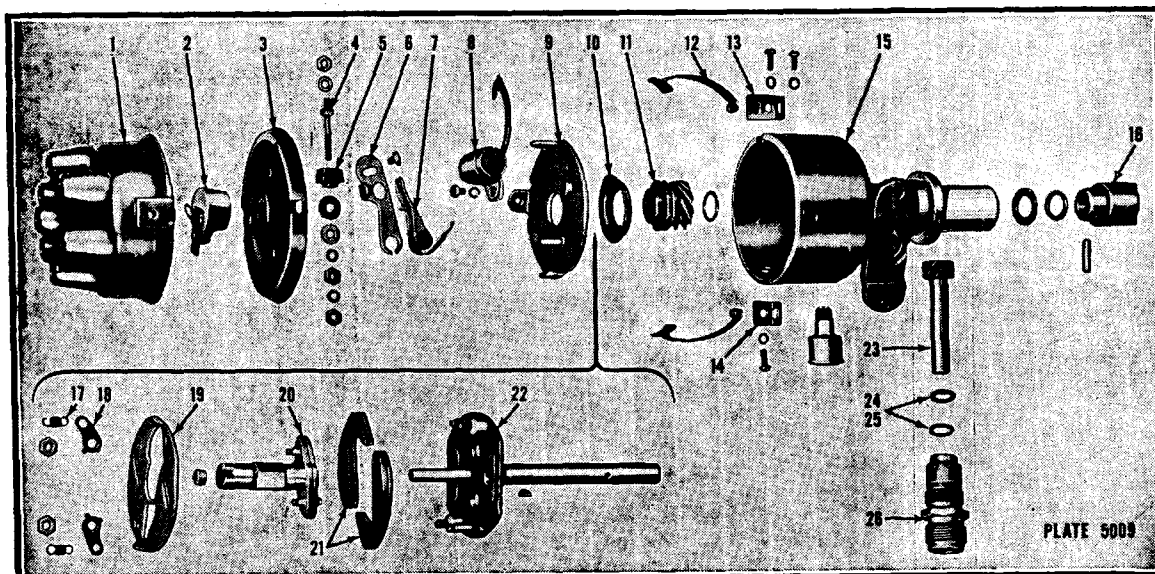

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model No.	Cap	Rotor	Cover — Housing	Screw or Stud — Terminal	Bushing — Insul.	Contact Point and Support	Breaker Lever	Con- denser	Plate — Breaker	Seal or Shield — Oil	Gear — Gov. or Tach. Drive	Spring — Cap	Support — Cap Spring Cover Locator
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111302	1842714	1909590	1900119	1916806	†	△1882964	△1881394	1900272	1908033	1912820	1912821	1889967	1889999
1111310	1960810	1954566	1960325			○	○	1928111	1960814	1950569			
1111311	"	"	"			○	○	"	"	"			

†Use 1916805 Bushing (Inside); 1914142 Bushing (Outside).

△Contact Set No. 1882965.

○Contact Set No. 1954557.

 Delco-Remy SERVICE PARTS CATALOG

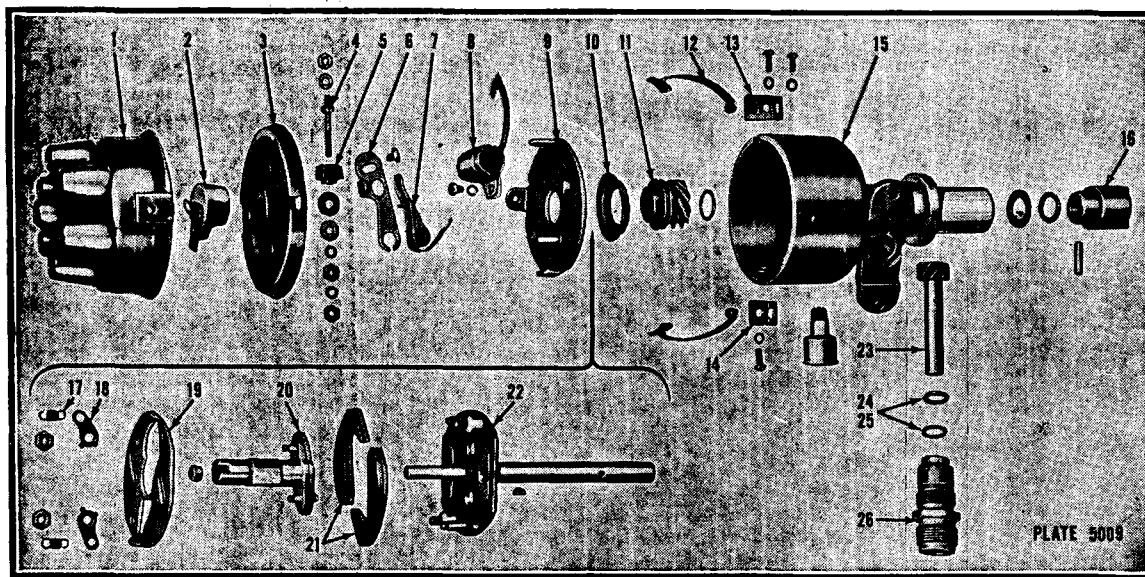

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model No.	Support — Cap Spring	Housing	Collar, Coupling or Gear	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Shaft and Gear — Gov. or Tach. Drive	Washer — Space 1/2 thk.	Washer — Shim .010 thk.	Bearing — Gov. or Tach. Drive
	14	15	16	17	18	19	20	21	22	23	24	25	26
1111302	1847289	1964445	*	1883498	1885558	1885557	1914433	1881371	1923948	1915829	1913003	1913004	1912819
1111310		1962083	1961856	1911255	453647	1954548	1961861	1880902	1966097	1955842			1955799
1111311		"	809673	1904292	"	1960919	1966814	1881371	1965009	1965012			"
.....													
.....													

*Coupling or Gear & Pin not furnished by Delco-Remy.

MINOR PARTS SECTION

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Plate Support Screw.....	453844	1111302
Lock Washer—Cam Lubricator Screw.....	453844	1111302
Lock Washer—Condenser Attaching Screw.....	453844	1111302
Lock Washer—Dial Plate Screw.....	9421423	1111302
Lock Washer—Cap Spring Support Screw.....	453844	1111302
Lock Washer—Terminal Stud—Inside.....	453844	1111302
Lock Washer—Terminal Stud—Outside.....	453844	1111302
Lock Washer—Vacuum Control Attaching Screw.....	453435	1111302
Lock Washer—Vacuum Control Arm Screw (To Brk. Plate).....	456413	1111302
NUTS		
Nut—Dial Plate Screw.....	453848	1111302
Nut—Terminal Stud—Inside.....	817363	1111302
Nut—Terminal Stud—Outside.....	120622	1111302
Nut—Weight Hold Down.....	1923540	1111302
SCREWS		
Screw—Breaker Plate Support.....	453418	1111302
Screw—Breaker Plate Support.....	453461	1111310-11
Screw—Cam Lubricator Attaching.....	453304	1111302
Screw—Condenser Attaching.....	453304	1111302
Screw—Contact Attaching.....	1914916	1111302; 10-11
Screw—Cap Spring Support.....	453461	1111302
Screw—Cap Attaching (#8-32).....	1954571	1111310-11
Screw—Cap Attaching (#10-32).....	1957573	1111310-11
WASHERS		
Washer—Gear and Cross Shaft.....	1956834	1111310
Washer Package—Felt—Housing Cover Seal.....	1914309	1111302
Washer—Shim (.005 thk.).....	810074	1111302; 10-11
Washer—Shim (.010 thk.).....	1912129	1111302; 10-11
Washer—Thrush—Under Gear.....	1946238	1111311
Washer—Space—Under Coupling or Gear.....	811912	1111302; 10-11
Washer—Under Weight Plate.....	811912	1111310-11
MISCELLANEOUS		
BUSHING—Distributor Housing.....	1938193	1111310-11
BUTTON—Carbon—In Cap.....	1909003	1111302
BUTTON—Carbon—In Cap ($\frac{1}{8}$ dia.).....	806923	1111302
BUTTON—Gear & Cross Shaft.....	1957329	1111310-11
CLIP—Lock—Terminal Stud—Outside.....	1914144	1111302
Felt WICK—In Cam.....	819639	1111302
FITTING—Lubrication.....	191758	1111302
FITTING—Grease.....	271283	1111310-11
GASKET—Distributor Housing Cover.....	1889966	1111302
GROMMET.....	1960824	1111310-11
KEY—Woodruff—Governor Gear.....	190016	1111302
LEAD—Primary.....	1954563	1111310-11
LUBRICATOR—Cam.....	1885562	1111302
PIN—Spring Collar.....	455862	1111311
PIN—Spring Collar.....	9417392	1111310
PIN—Thrust Washer.....	273436	1111311
Pipe PLUG—In Housing.....	125947	1111302
PLUG—Thrust.....	1912818	1111302
WICK—Felt—Under rotor.....	1963555	1111310-11

 Revised to June 1, 1969

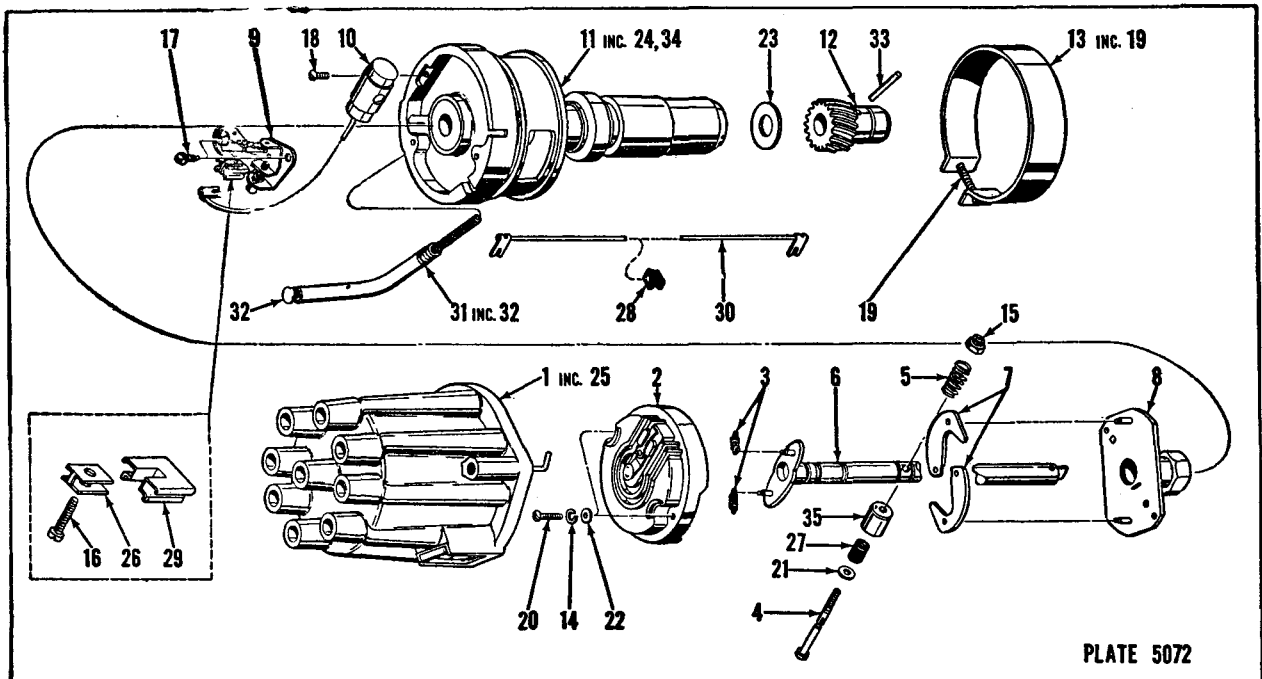

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Valve Gov- ernor	Spring Gov- ernor	Shaft	Weight	Cam	Contact Assem.	Con- denser	Housing	Gear	Band
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111095	1942654	1932015	1965903			1967051	1881371	○	○		1967054	1962197	
1111303	1932018	1965743	1943070	1948781	1934592	1965744	"	○	○		1965750	1964645	1932727
1111304	"	1932015	1943041	"	1950691	1964093	1924737	1957868	1949838	1928111	1964096	1964095	"
1111305	"	"	"	"	1938725	"	"	"	"	"	"	"	"
1111306	"	"	1917710	"	"	1964105	"	1955689	"	"	1964107	"	"
1111307	"	"	1884610	"	1934592	1965294	1881371	○	○		1964310	"	"
1111308	"	"	1964400	"	1941506	1964112	"	○	○		1964269	"	"
1111309	"	1965743	1938064	"	1934592	1965735	"	1965707	1949838	1928111	1965732	1964645	"
1111312	1942654	1932015	1921908	1949783	1950691	1967015	"	○	○		1963779	1948832	"
1111316	"	"	1883498	"	"	1946358	"	○	○		1946360	1945234	"
1111317	"	"	1937291	"	"	1968197	"	○	○		1963779	1948832	"
1111318	"	"	1921908	1941506	"	1968201	"	○	○		"	"	"
1111319	1932018	1965743	1938064	1948781	1938725	1965735	"	1965707	1949838	1928111	1965732	1964645	"
1111320	1942654	1932015	1884610	1957272	1934592	1969177	1924737	○	○		1946360	1945234	"
1111321	"	"	1921908	1949783	1950691	1969219	1881371	○	○		1969216	"	"
1111322	"	"	1937291	"	"	1969333	"	○	○		"	"	"
1111323	"	"	1921908	"	"	1968201	"	○	○		1963779	1968199	"
1111324	"	"	"	"	1941506	1969219	"	○	○		1969216	"	"
1111325	"	"	"	"	"	1967015	"	○	○		1963779	1948832	"
1111326	1932018	"	1943041	1948781	1934592	1964093	1924737	1957868	1966289	1928111	1964096	1964095	"
1111327	"	1965743	1938064	1970749	"	1965735	1881371	1965707	1949838	"	1965732	1970750	"
1111328	1971244	800044	1943070	"	"	1965744	"	○	○		1965750	"	"
1111329	1970950	1971247	1883498	1949783	1950691	1946358	"	○	○		1946360	1945234	"
1111331	1932018	1965743	1938064	1970749	1938725	1965735	"	1965707	1949838	1928111	1965732	1970750	"
1111336	"	"	1902376	"	1934592	1971269	"	1971271	"	"	"	"	"
1111337	800063	1971247	1916297	800353	"	800459	"	800461	1949838	"	800352	1971970	"
1111338	"	"	1916848	"	"	800355	"	1957873	"	"	"	"	"
1111346	"	"	1925549	"	"	800589	"	○	○		1964310	"	"
1111351	"	"	1916297	"	1938725	800459	"	800461	1949838	1928111	800352	"	"
1111352	"	"	1916848	"	"	800355	"	1957873	"	"	"	"	"
1111353	"	"	1963965	"	1934592	801118	"	801119	"	"	"	"	"
1111355	"	"	1916848	"	"	800355	"	1957873	"	"	"	"	"

○ Not used on this model.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Illus. No.	Name	Part No.	Used on Models
LOCKWASHERS			
—	Lockwasher—Pole Piece Attach. Screw -----	138532	1111095; 303; 28
20	Lockwasher—Rotor Attaching Screw -----	453435	1111095; 303-9; 12
—	Lockwasher—Tach. Housing Cover Plate Screw -----	453844	1111316; 20-1-2-4-9
—	Lockwasher—Vacuum Arm Attach. -----	453844	1111312-16-17-18; 20-1-2-3-4-5-9
NUTS			
15	Nut—Governor Valve -----	1920472	All except 1111095
SCREWS			
17	Screw (& Lock Washer)—Contact Assembly Attach. -----	1938527	1111304-5-6-9; 19; 26-7; 31-6-7-8; 51-2-3-5
18	Screw—Condenser Attaching -----	453418	1111304-5-6-9; 19; 26-7; 31-6-7-8; 51-2-3-5
19	Screw—Cover Band -----	453479	1111303-4-5-6-7-8; 12-16-17-18; 20-1-2-3-4-5-6-7-8-9; 31-6-7-8; 46; 51-2-3-5
—	Screw—Pole Piece Attaching -----	9423213	1111095; 303; 28
20	Screw—Rotor Attaching -----	9416183	1111095; 303-4-5-6-7-8-9; 12
20	Screw & Lockwasher—Rotor Attach. -----	274453	1111316-17-18-9; 20-1-2-3-4-5-6-7-8-9; 31-6-7-8; 46; 51-2-3-5
—	Screw—Tach. Housing Cover Plate Attaching -----	453418	1111316; 20-1-2-4-9
—	Screw—Vacuum Arm Attaching -----	453461	1111312-16-17-18; 20-1-2-3-4-5-9
WASHERS			
—	Washers—Felt—Under Advance Plate -----	1932418	1111312-16; 20-1-2-3-4-5-9
—	Washers—Brass—Under Advance Plate -----	1961927	1111307-8; 12-16-17-18; 20-1-2-3-4-5-9; 46
21	Washer—Plain—Governor Cushion -----	1900466	1111303-4-5-6-7-8-9; 12-16-19; 20-1-2-3-4-5-6-7-8-9; 31-6-7-8; 46; 41-2-3-5
—	Washer—Shim (.005 thick) -----	810074	1111316; 20-9
—	Washer—Shim (.010 thick) -----	1912129	1111316; 20-9
—	Washer—Shim (.005 thick) -----	1927529	1111095; 321-2-4
—	Washer—Shim (.010 thick) -----	1927530	1111095; 321-2-4
—	Washer—Shim—Tach. Shaft & Gear (.031 thk.) -----	1913003	1111316; 20-1-2-4-9
—	Washer—Shim—Tach. Shaft & Gear (.010 thk.) -----	1913004	1111316; 20-1-2-4-9
23	Washer—Space—Under Gear or Collar -----	1837617	1111095; 303-4-5-6-7-8-9; 19; 21-2-4-7; 31-6-7-8; 46; 51-2-3-5
23	Washer—Under Gear or Collar -----	811912	1111316-17-18; 20-3-9
—	Washer—Space—Under Dist. Shaft Gear -----	1905382	1111316; 20-1-2-4-9
24	Washer—Spring—between Seals -----	1932718	1111303-4-5-6-7-8; 12-17-18-19; 36; 51-2
—	Washer—Spring—In Housing -----	1932718	1111316; 20-1-2-3-4-5-6-7-8-9; 31-7-8; 46; 53-5
MISCELLANEOUS			
—	BALL BEARING -----	907186	1111095
—	BLOCK—Gear -----	1908028	1111303-4-5-6-7-8-9; 19; 26-7-8; 31; 36-7-8; 46; 51-2-3-5
—	BRACKET—Condenser -----	1869573	1111304-5-6-9; 19; 26-7; 31-6-7-8; 51-2-3-5
25	BRUSH—In Cap -----	1938193	All
—	BRUSH—In Housing -----	1967054	1111095
—	BUTTON—(Nylon) In Weight Base -----	1957329	1111327-8-9; 31-6-7-8; 41-2-3; 55
—	COIL ASSEM.—Pole Piece -----	1960785	1111095
—	COIL ASSEM.—Pole Piece -----	1964277	1111303; 28
—	COLLAR -----	821865	1111312-17-18; 21-2-3-4-5
—	CONNECTOR—Lead Junction -----	2973782	1111095; 303-7-8; 12-16-17-18; 20-1-2-3-4-5-8-9; 46
—	COUPLING—Tachometer Drive -----	1912819	1111316; 20-1-2-4-9
—	CUSHION—Gear -----	1908029	1111303-4-5-6-7-8-9; 19; 26-7-8; 31; 36-7-8; 46; 51-2-3-5
27	CUSHION—(Rubber)—Governor Valve -----	1920474	1111303-7-8-9; 16; 21-2-4-6-7-8-9; 36-7-8; 53-5
27	CUSHION—(Rubber)—Governor Weight -----	1938099	1111304; 12-17-18-19; 20-3-5; 31; 51-2
—	FITTING—Lubrication -----	271283	1111316; 20-1-2-4-9
—	GASKET—Tachometer Housing Cover Plate -----	1940604	1111316; 20-1-2-4-9
—	GEAR (& Shaft) Tachometer Drive -----	1946363	1111316; 20-1-2-4-9
—	GEAR—Upper—Dist. Shaft -----	1946362	1111316; 20-1-2-4-9
—	GROMMET—Pole Piece & Plate Assembly -----	1963928	1111095; 303-7-8; 12-16-17-18; 20-1-2-3-4-5-8-9; 46
28	GROMMET—for Primary Lead -----	1932732	1111304-5-6-9; 19; 26-7; 31-6-7-8; 51-2-3-5
30	LEAD—Primary -----	1932731	1111304-5-6
30	LEAD—Primary -----	1958971	1111309; 19; 26-7; 31-6-7-8; 51-2-3-5
—	MAGNET—Pole Piece -----	1961886	1111095; 303; 28

Revised to June 1, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
32	MISCELLANEOUS—(Continued)		
—	OILER (only) -----	113702	1111303-4-5-6-7-8-9; 12-16-17-18-19; 20-1-2-3-4-5-6-7-8-9; 31-6-7-8; 46; 51-2-3-5
—	OILER (Tube & Wick) -----	1922265	1111312-17-18; 20-1-2-3-4-5-9
—	"O" RING -----	1911165	1111095
—	PIN—Collar Attaching -----	1862218	1111312-17-18; 21-2-3-4-5
—	PIN—Dowel—In Housing -----	1938856	1111304-5-6-9; 19; 26-7; 31; 36-7-8; 51-2-3-5
—	PIN—Advance Plate Locating -----	9413283	1111307-8; 46
33	PIN—Gear -----	455481	1111312-16-17-18; 20-3-5
33	PIN—Gear Attaching -----	1908031	1111327-8; 31; 36-7-8; 46; 51-2-3-5
33	PIN—Gear -----	456652	1111095; 303-4-5-6-7-8-9; 19; 26
—	PIN—Upper Dist. Shaft—Gear Attach. -----	274795	1111316; 20-1-2-4-9
—	PLATE—Pole Piece -----	1965755	1111095; 303; 28
—	PLATE—Tachometer Housing Cover -----	1940657	1111316; 20-1-2-4-9
—	PLUG—Thrust—Shaft & Gear -----	1912818	1111316; 20-1-2-4-9
—	POLE PIECE—Stationary -----	1960780	1111095
—	POLE PIECE—Stationary -----	1965754	1111303; 28
—	POLE PIECE & WT. BASE -----	800590	1111346
—	POLE PIECE & WT. BASE -----	1962800	1111317
—	POLE PIECE & WT. BASE -----	1964255	1111308; 22
—	POLE PIECE & WT. BASE -----	1964309	1111307
—	POLE PIECE & WT. BASE -----	1965746	1111303; 28
—	POLE PIECE & WT. BASE -----	1967018	1111312-18; 23-5
—	POLE PIECE & WT. BASE -----	1967052	1111095
—	POLE PIECE & WT. BASE -----	1967928	1111316; 29
—	POLE PIECE & WT. BASE -----	1969208	1111320
—	POLE PIECE & WT. BASE -----	1969222	1111321-4
—	POLE PIECE & PLATE ASSEM. -----	1960779	1111312-17-18; 21-2-3-5
—	POLE PIECE & PLATE ASSEM. -----	1964276	1111307-8; 16; 20-4-9; 46
—	RETAINER ("C" Washer) Advance Plate -----	1932024	1111307-8; 12-16-17-18; 20-1-2-3-4-5-9
—	RETAINER—Gear Cushion -----	1908030	1111303-4-5-6-7-8-9; 19; 26-7-8; 31; 36-7-8; 46; 51-2-3-5
—	RING—Spring Post—Retainer -----	274681	1111303-9
—	RING—Spring Post—Retainer -----	9423913	1111095; 319; 27-8; 31-6-7-8; 46; 51-2-5
—	RING—Retainer—Weight -----	9415233	1111095
—	RING—Valve Stop -----	1948782	1111303-4-5-6-7-8; 12; 29
34	SEAL—Oil (in Housing) -----	1920463	All except 1111095
—	SEAL "O" RING—Governor -----	1948782	1111309-16-17-18-19; 20-1-2-3-4-5-6-7-8; 31-6-7-8; 46; 51-2-3-5
—	SLEEVE—Spring Post -----	1945548	1111312-16-17-18; 20-1-2-3-4-5-9
—	SLEEVE—Spring Post -----	1961234	1111095; 303-4-5-6-7-8-9; 19; 26-7-8; 31-6-7-8; 46; 51-2-3-5
—	VACUUM CONTROL -----	1115359	1111312-18; 20-3-5
—	VACUUM CONTROL -----	1116118	1111316-17; 21-2-4-9
35	WEIGHT—Governor -----	1932730	1111303-7-8-9; 16; 26-7-8-9; 36-7-8; 46; 53-5
35	WEIGHT—Governor -----	1938098	1111304-5-6; 12-17-18-19; 20-1-2-3-4-5; 31; 51-2

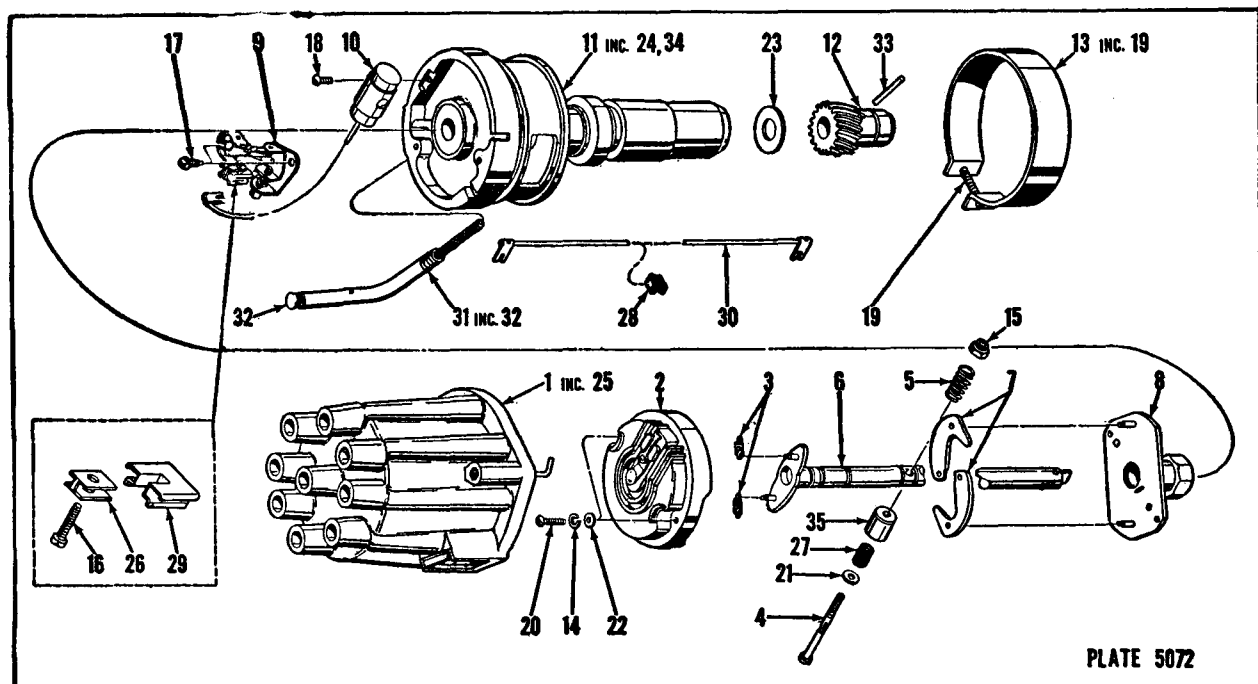 

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.


Model	Cap	Rotor	Spring — Weight	Valve — Gov- ernor	Spring — Gov- ernor	Shaft	Weight	Cam	Contact Assem.	Con- denser	Housing	Gear	Band
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111360	1970950	1971247	1884610	1949783	1950691	1846681	1924737	°	°	-----	1946360	1945234	1932727
1111364	800063	"	800477	800353	1934592	1851450	1881371	1955689	1949838	1928111	800352	1971970	"
1111365	"	"	1851257	"	"	1851255	"	1851256	"	"	"	"	"

°Not used on this model.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCKWASHERS			
—	Lockwasher—Tach. Housing Cover Plate Screw ----	453844	1111360
—	Lockwasher—Vacuum Arm Attach. -----	453844	1111360
NUTS			
15	Nut—Governor Valve-----	1920472	1111360-4-5
SCREWS			
17	Screw (& Lock Washer)—Contact Assembly Attach.	1938527	1111364-5
18	Screw—Condenser Attaching -----	453418	1111364-5
19	Screw—Cover Band -----	453479	1111360-4-5
20	Screw & Lockwasher—Rotor Attach. -----	274453	All
—	Screw—Tach. Housing Cover Plate Attaching ----	453418	1111360
—	Screw—Vacuum Arm Attaching -----	453461	1111360
WASHERS			
—	Washers—Brass—Under Advance Plate -----	1961927	1111360
21	Washer—Plain—Governor Cushion -----	1900466	1111360-4-5
—	Washer—Shim (.005 thick) -----	810074	1111360
—	Washer—Shim (.010 thick) -----	1912129	1111360
—	Washer—Shim—Tach Shaft & Gear (.031 thk.) ---	1913003	1111360
—	Washer—Shim—Tach. Shaft & Gear (.010 thk.) ---	1913004	1111360
23	Washer—Space—Under Gear or Collar -----	1837617	1111364-5
23	Washer—Under Gear or Collar -----	811912	1111360
—	Washer—Space—Under Dist. Shaft Gear -----	1905382	1111360
—	Washer—Spring—In Housing -----	1932718	1111360-4-5
MISCELLANEOUS			
—	BLOCK—Gear -----	1908028	1111364-5
—	BRACKET—Condenser -----	1869573	1111364-5
25	BRUSH—In Cap -----	1938193	1111360-4-5
—	BUTTON—(Nylon) In Weight Base -----	1957329	1111364-5
—	CONNECTOR—Lead Junction -----	2973782	1111360
—	COUPLING—Tachometer Drive -----	1912819	1111360
—	CUSHION—Gear -----	1908029	1111364-5
27	CUSHION—(Rubber)—Governor Valve -----	1920474	1111360-4-5
—	FITTING—Lubrication -----	271283	1111360
—	GASKET—Tachometer Housing Cover Plate -----	1940604	1111360
—	GEAR (& Shaft) Tachometer Drive -----	1946363	1111360
—	GEAR—Upper—Dist. Shaft -----	1946362	1111360
—	GROMMET—Pole Piece & Plate Assembly -----	1963928	1111360
28	GROMMET—for Primary Lead -----	1932732	1111364-5
30	LEAD—Primary -----	1958971	1111360
32	OILER (only) -----	113702	1111360-4-5
—	OILER (Tube & Wick) -----	1922265	1111360
33	PIN—Gear -----	455481	1111360
33	PIN—Gear Attaching -----	1908031	1111364-5
—	PIN—Upper Dist. Shaft—Gear Attach. -----	274795	1111360
—	PLATE—Tachometer Housing Cover -----	1940657	1111360
—	PLUG—Thrust—Shaft & Gear -----	1912818	1111360
—	POLE PIECE & WT. BASE -----	1969208	1111360
—	POLE PIECE & PLATE ASSEM. -----	1964276	1111360
—	RETAINER ("C" Washer) Advance Plate -----	1932024	1111360
—	RETAINER—Gear Cushion -----	1908030	1111360
—	RING—Spring Post—Retainer -----	9423913	1111364-5
34	SEAL—Oil (in Housing) -----	1920463	1111360-4-5
—	SEAL "O" RING—Governor -----	1948782	1111360-4-5
—	SLEEVE—Spring Post -----	1945548	1111360
—	SLEEVE—Spring Post -----	1961234	1111364-5
—	VACUUM CONTROL -----	1115359	1111360
35	WEIGHT—Governor -----	1932730	1111360-4-5

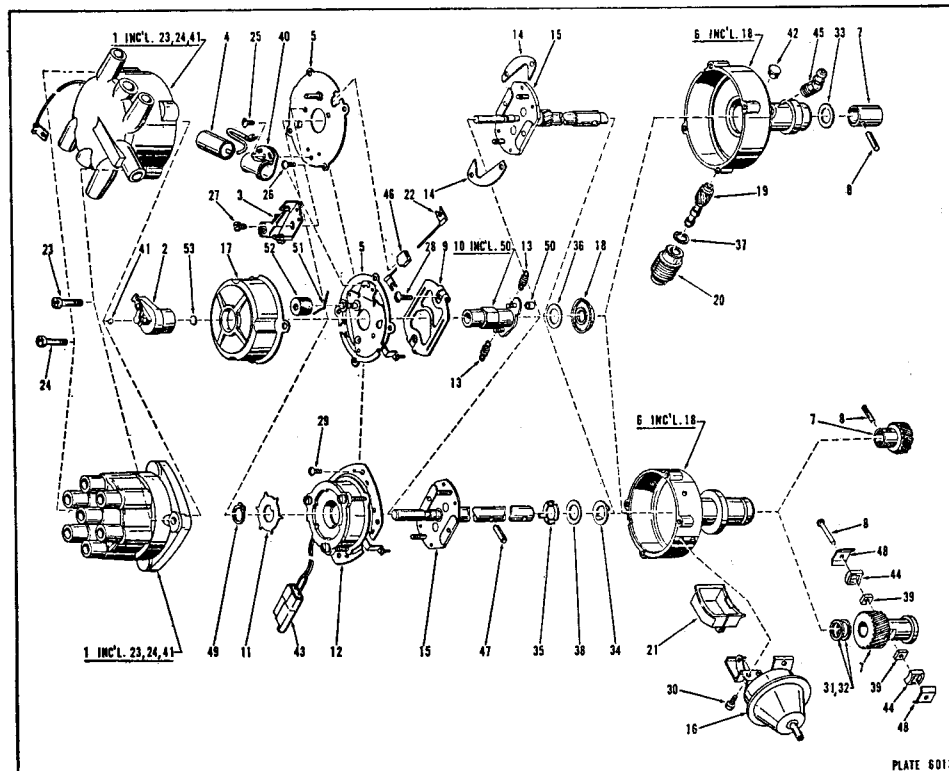 


Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Contact — Assem.	Con- denser	Plate — Breaker	Housing	Coupling — Collar or Gear	Pin	Plate — Weight Hold Down	Cam	Pole Piece — Rotor
	1	2	3	4	5	6	7	8	9	10	11
1111347.....	800058	1954566				800568		273436	1954548	▲ 800636	1964582
1111348.....	"	"				"		"	"	▲ 800566	"
1111349.....	"	"				"		"	"	▲ 1846487	"
1111354.....	1962111	1962115				1967736	1961856	9417392	"	▲ 801147	1964945
1111356.....	1960833	1954566	1967550	1928111	1960814	1962083	1961856	"	"	1962479	
1111357.....	800058	"				800568		273436	"	▲ 800835	1964582
1111362.....	"	"				"		"	"	▲ 1846776	"
1111363.....	"	"				"		"	"	"	"

▲ Bushings & Automatic Cam.

 Delco-Remy SERVICE PARTS CATALOG

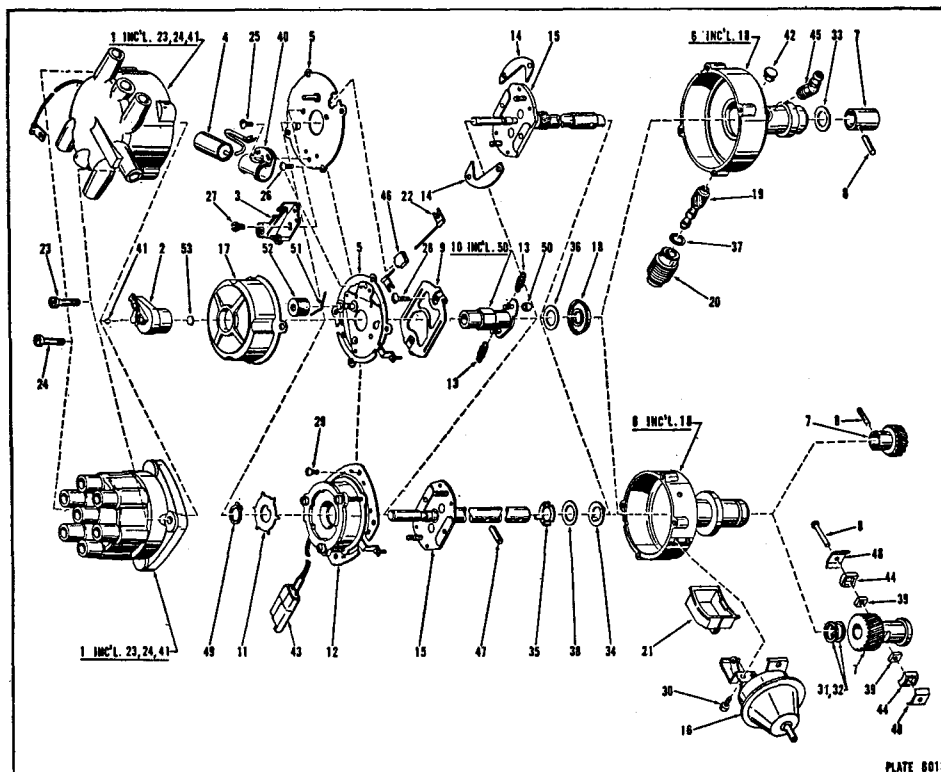

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.


Model	Coil Assem.	Spring — Weight	Weight	Shaft	Vacuum Control	Dust Seal — Cover	Seal — Housing	Gear & Shaft — Tach.	Coupling — Tach.	Boot — Vacuum Control	Lead — Primary
	12	13	14	15	16	17	18	19	20	21	22
1111347.....	1965146	1952258	1881371	800635			1950569				
1111348.....	"	1906766	"	800564			"				
1111349.....	"	1970504	1880902	"			"				
1111354.....	1967741	1967740	"	1967738			"				
1111356.....	"	1911255	1880902	1962114		1960325	"	1955842	1955799		1954563
1111357.....	1965146	1948359	"	1846486			"				
1111362.....	"	1970116	1881371	1846778			"				
1111363.....	"	1911255	"	1846775			"				

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
SCREWS			
23	Screw—Cap Attaching (#8-32) -----	1954571	All
24	Screw—Cap Attaching (#10-32) -----	1957573	All
25	Screw—Capacitor Bracket Attaching -----	454458	1111356
26	Screw—Circuit Breaker Plate Attaching -----	453461	1111356
27	Screw—Contact Adjusting -----	1914916	1111356
28	Screw—(& L. W.) Hold Down Plate Attaching -----	453647	All
29	Screw—Pole Piece & Coil Assem. Attaching -----	453461	1111347-8-9; 54-7; 62-3
WASHERS			
31	Washer—Shim (.005 thk.) -----	810074	1111347-8-9; 54-6-7; 62-3
32	Washer—Shim (.010 thk.) -----	1912129	1111347-8-9; 54-6-7; 62-3
33	Washer—Space—Under Collar or Gear -----	811912	1111347-8-9; 54-6-7
34	Washer—Tang—Thrust -----	1946238	1111347-8-9; 57; 62-3
36	Washer—Space—Under Cam & Main Shaft -----	811912	1111354
36	Washer—Space—Under Cam & Main Shaft -----	817051	1111347-8-9; 57; 62-3
37	Washer—Thrust—Tach. Gear -----	1956834	1111356
MISCELLANEOUS			
40	BRACKET—Capacitor -----	1944118	1111356
41	BUTTON—Carbon -----	1938193	All
—	BUTTON—Nylon—In Weight Base -----	1957329	1111347-8-9; 54-7; 62-3
42	BUTTON—Tach. Housing -----	1957329	1111356
43	CONNECTOR—Coil Lead -----	2973782	1111347-8-9; 54-7; 62-3
45	FITTING—Grease -----	271283	1111354-6
46	GROMMET—In Housing -----	1960824	1111356
46	GROMMET—Pole Piece & Plate Assem. -----	1964573	1111347-8-9; 54-7; 62-3
47	PIN—Tang Washer Retaining -----	273436	All except 1111356
—	RETAINER—Cam Lubricator—Felt -----	1963858	1111356
49	RING—Rotor Pole Piece Retainer -----	9422340	1111347-8-9; 54-7; 62-3
52	WICK—Oil—Cam Lubricator -----	1961088	1111356

 Revised to March 1, 1968

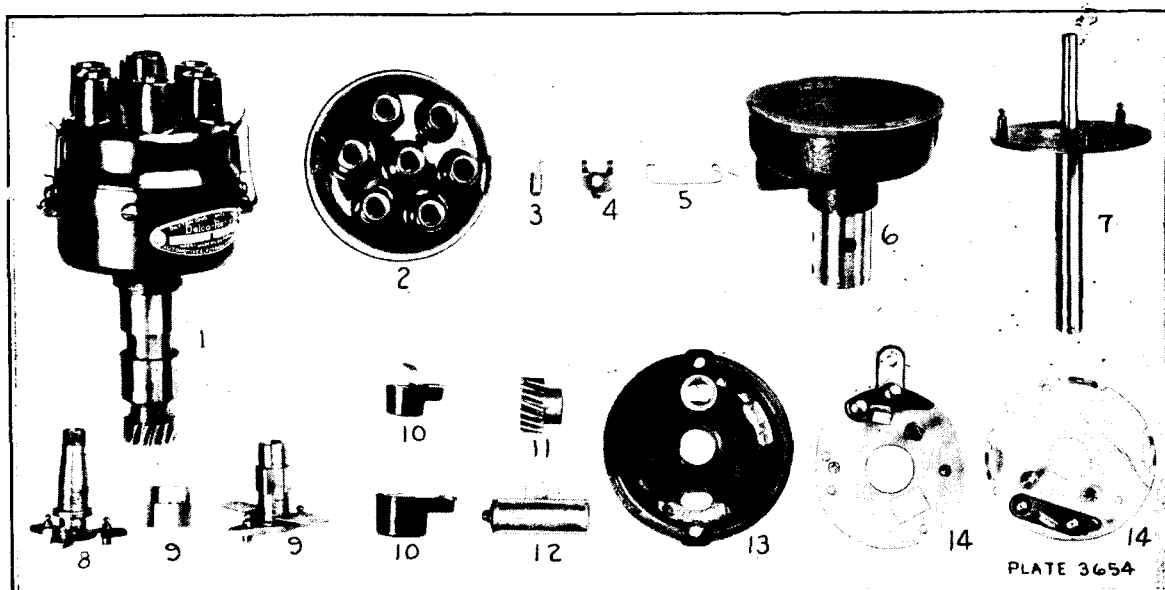


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

[illegible]

*821604 Carbon is .245 dia., 806923 is $\frac{5}{16}$ dia. Use correct size. If button recess in cap is spherical bottom drilled use part #1938193.

*See Minor Parts Section for Upper.

 †Use 1—1847289 Support and 1—1899999 Support & Cover Locator.

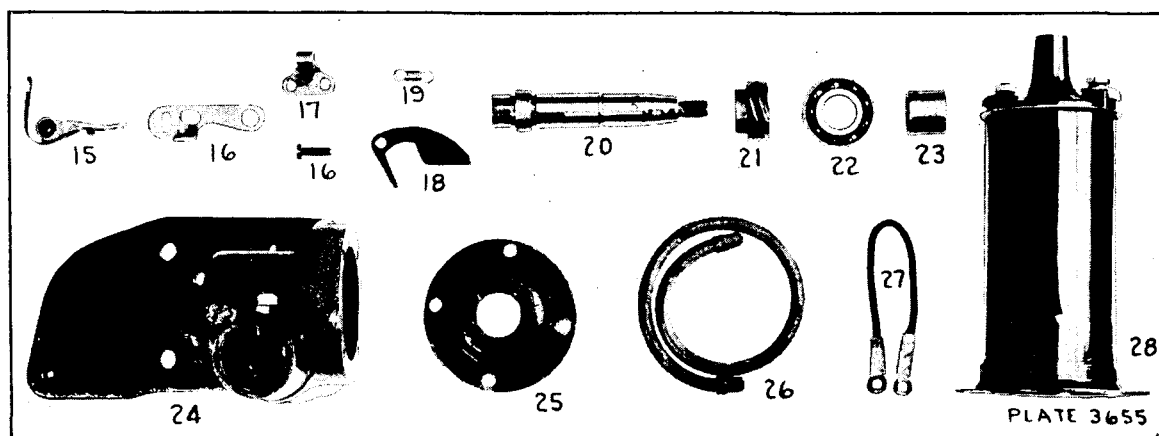

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

[illegible]

***See Minor Parts Section for Upper Contact Point.**

°Mounting Base & Shaft Assembly—1865667—1111402-9.

Mounting Base & Shaft Assembly—1904827—1111403-4-7.

Mounting Base & Shaft Assembly—1865668—1111408.

Mounting Base & Shaft Assembly—1865008—1111408.
Mounting Base & Shaft Assembly—1910973—1110413.

Mounting Base & Shaft Assembly—1910973—1110413.
Mounting Base & Shaft Assembly—1922433—1110410-16.

*Contact Set No. 1855720

*Contact Set No. 1882965

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Advance Arm Clamp Screw.....	9421423	1111401-2-5-8-9-10-13-16
Lock Washer—Ball Bearing Retainer Screw.....	1914816	1111401-2-3-4-5-6-7-8-9-10-13-16
Lock Washer—Base End Frame Screw.....	1962276	1111401-2-3-4-5-6-7-8-9-10-13-16
Lock Washer—Breaker Cup Attaching Screw.....	453844	1111403-4-5-7
Lock Washer—Breaker Plate Attaching Screw—Lower.....	453844	1111407-13
Lock Washer—Breaker Plate Support Screw.....	453844	1111401-2-3-4-5-6-8-9-10-16
Lock Washer—Cam Lubricator Attaching Screw.....	453844	1111410-16
Lock Washer—Coil Mounting Screw.....	9421423	1111401-2-3-4-7-9
Lock Washer—Condenser Attaching Screw.....	453844	1111401-2-3-4-5-7-8-9-10-13-16
Lock Washer—Condenser Attaching Screw.....	138479	1111406
Lock Washer—Condenser Terminal Screw.....	453306	1111403-4-6-7
Lock Washer—Distributor Cap Spring Support.....	453844	1111401-2-3-4-5-7-8-9-10-13-16
Lock Washer—Distributor Hold Down Screw.....	1869533	1111405
Lock Washer—Distributor Hold Down Screw.....	9421423	1111410-13-16
Lock Washer—Distributor Housing Plug Screw.....	9421423	1111403-4-6-7-9
Lock Washer—Terminal Screw or Stud.....	453844	1111401-2-5-8-9-10-13-16
Lock Washer—Terminal Screw.....	138530	1111403-4-6-7
Lock Washer—Terminal Stud—Inside.....	453435	1111407-13
Lock Washer—Weight Hold Down Nut.....	453435	1111403-4-6-7
Lock Washer—Weight Hold Down Nut.....	1885558	1111403-4-6-7-10-13-16
NUTS		
Nut—Advance Arm Clamp Screw.....	453848	1111401-2-3-5-8-9-10-13-16
Nut—Breaker Lever Spring Screw or Stud.....	817363	1111403-4-6-13
Nut—Distributor Hold Down Screw.....	453848	1111407
Nut—Set Screw.....	115854	1111403-4-6-7
Nut—Terminal Stud—Inside.....	5024654	1111407-13
Nut—Terminal Stud—Inside.....	817363	1111410-16
Nut—Terminal Stud—Outside.....	120622	1111410-16
Nut—Weight Hold Down.....	1923540	1111404-6-7-10-13-16
SCREWS & STUDS		
Screw—Advance Arm Clamp.....	453660	1111401-2-5-8-9-10-13-16
Screw—Ball Bearing Retainer.....	454329	1111401-2-3-4-5-6-7-8-9-10-13-16
Screw—Base End Frame.....	453464	1111401-2-3-4-5-6-7-8-9-10-13-16
Screw—Breaker Cup Attaching.....	9416004	1111403-4-5
Screw—Breaker Cup Attaching.....	132768	1111407
Screw—Breaker Lever Spring.....	1920777	1111401-2-3-4-5-6-7-8-9-13
Screw—Breaker Plate Attaching.....	453647	1111403-4-6
Screw—Breaker Plate Attaching.....	453418	1111413
Screw—Breaker Plate Attaching—Lower.....	131954	1111407
Screw—Breaker Plate Attaching—Upper.....	1914916	1111403-4-7-13
Screw—Breaker Plate Support.....	453418	1111401-2-5-8-9-10-16
Screw—Cam Adjusting.....	13474	1111403-4-6
Screw—Cam Adjusting.....	1843630	1111407
Screw—Cam Lubricator Attaching.....	453304	1111410-16
Screw—Coil Mounting.....	115465	1111401-2-5-8-9
Screw—Condenser Attaching.....	453304	1111401-2-5-8-9-10-13-16
Screw—Condenser Attaching.....	115607	1111403-4-7
Screw—Condenser Attaching.....	132103	1111406
Screw—Condenser Terminal.....	453647	1111403-4-6-7
Screw—Contact Adjusting.....	1914916	1111401-2-3-4-5-6-7-8-9-10-13-16
Screw—Distributor Cap Spring Support.....	453461	1111401-2-3-4-5-6-8-9-10-16
Screw—Distributor Cap Spring Support.....	453647	1118413
Screw—Distributor Hold Down.....	813044	1111401-2-3-4-6-7-8
Screw—Distributor Hold Down.....	142357	1111405
Screw—Distributor Hold Down.....	1867893	1111409
Screw—Distributor Hold Down.....	120854	1111410-13-16
Screw—Distributor Housing Plug.....	274315	1111403-4-6-7
Screw—Distributor Mounting Plate.....	133770	1111403-4-6-7
Screw—Distributor Mounting—Set.....	811470	1111403-4-6-7
Screw—Rotor Segment Attaching.....	1842722	1111403-4-6
Screw—Terminal.....	132776	1111401-2-3-4-5-6-8-9
Screw—Terminal Clamp.....	453461	1111407-13
Screw—High Tension Terminal—Side.....	1860406	1111406
Screw—High Tension Terminal—Center.....	1860407	1111406
Stud—Breaker Lever Spring Attaching.....	1837225	1111407-13

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
WASHERS		
Stud—Terminal.....	1854115	1111407
Stud—Terminal.....	1847647	1111410-16
Stud—Terminal.....	825456	1111413
Washer—Ball Bearing Retainer Screw Plain.....	5017090	1111401-2-3-4-5-6-7-8-9-10-13-16
Washer—Breaker Lever Spring Attaching Screw or Stud.....	810794	1111401-2-3-4-5-6-7-8-9-13
Washer—Breaker Lever Spring Attaching Stud Ins.....	1837224	1111407-13
Washer—Breaker Lever Spring Attaching Stud Ins. Bushing.....	1837223	1111407-13
Washer—Distributor Hold Down Screw.....	813046	1111401-2-3-4-6-7-8
Washer—Distributor Hold Down Screw.....	1913024	1111405
Washer—Distributor Hold Down Screw—Plain.....	1905125	1111409-10-13-16
Washer—Felt—On Horizontal Shaft.....	816138	1111401-2-3-4-5-6-7-8-9-10-13-16
Washer—Felt—Over Weight.....	1837215	1111403-4
Washer—Felt—Under Ball Bearing.....	1838320	1111407
Washer—Felt Seal—Distributor Housing Cover.....	1914309	1111410-16
Washer—Felt Seal—Distributor Housing Cover.....	1902250	1111413
Washer—Insulating—Terminal Stud—Outside.....	1882247	1111410-16
Washer—Plain—Terminal Stud—Inside.....	810794	1111410-16
Washer—Plain—Terminal Stud—Outside.....	815540	1111410-16
Washer—Shim (.005 thk.).....	810074	1111401-2-3-4-5-6-7-8-9-10-13-16
Washer—Shim (.010 thk.).....	1912129	1111401-2-3-4-5-6-7-8-9-10-13-16
Washer—Space—Under Gear—On Vertical Shaft.....	811912	1111401-2-3-4-5-6-7-9-10-13-16
Washer—Space—Under Gear—On Vertical Shaft.....	1837617	1111408
Washer—Space—Under Weight Plate.....	811912	1111401-2-3-4-5-6-8-9-10-13-16
Washer—Terminal Stud Insulating—Inside.....	825458	1111407-13
Washer—Terminal Stud Insulating—Outside.....	20076	1111407-13
Washer—Terminal Stud Plain—Inside.....	1913784	1111407-13
Washer—Terminal Stud Plain—Outside.....	1905125	1111407-13
Washer—Weight.....	807295	1111401-2-3-4-6-7
MISCELLANEOUS		
Advance ARM Assembly.....	1868260	1111401-2
Advance ARM Assembly.....	820317	1111405-8
Advance ARM Assembly.....	1877947	1111409-10-13-16
Advance ARM Only.....	1839369	1111403-6-7
Advance ARM Only.....	1868261	1111401-2
Advance ARM Only.....	1877948	1111409-10-13-16
Ball BEARING—On Cam Shaft.....	907500	1111403-4-7
Ball BEARING—On Cam Shaft.....	1873662	1111406
Breaker PLATE—Upper.....	820455	1111403-4
Breaker PLATE—Upper.....	1837359	1111407-13
Breather PIPE.....	1860880	1111403-4-6-7
BUSHING—Distributor Housing.....	1850017	1111403-6-7
BUSHING—Distributor Housing.....	1909003	1111413-16
BUSHING—Distributor Housing.....	1877841	1111404
BUSHING—Terminal Screw Insulating.....	821160	1111401-2-3-4-5-6-8-9
BUSHING—Terminal Stud Insulating.....	1854117	1111407
BUSHING—Terminal Stud Insulating.....	1878405	1111410-16
BUSHING—Terminal Stud Insulating.....	825457	1111413
CLAMP—Ball Bearing Retainer—On Cam Shaft.....	1838319	1111403-4-6
CLAMP—Ball Bearing Retainer—On Cam Shaft.....	1838319	1111407
CLIP—Breaker Lever Retainer.....	813245	1111401-2-3-4-5-6-7-8-9-13
COLLAR—Ball Bearing Space—On Cam Shaft.....	29221	1111403-4-6-7
COLLAR—Outside on Horizontal Shaft.....	816143	1111401-2-3-4-5-6-7-8-9-10-13-16
Contact POINT & SUPPORT—Upper.....	1849877	1111403-4
Contact POINT & SUPPORT—Upper.....	1881401	1111407-13
COVER—Distributor Housing.....	1902247	1111413
COVER—Distributor Housing.....	1900119	1111410-16
Felt Washer RETAINER—In End Frame.....	816139	1111405-7-8-10
Felt WICK—In Cam.....	1963555	1111401-2-5-8-9-10-13-16
Felt WICK—In Main Shaft.....	819639	1111403-4-6-7
GASKET—Distributor Housing Cover.....	1889966	1111410-16
GASKET—Distributor Housing Cover.....	1902249	1111413
Grease CUP.....	1955293	1111401-2-5-8-9
High Tension TERMINAL (Shipped separate).....	1839164	1111403-4-7-13
LEAD—Condenser.....	1844265	1111403
LEAD—Condenser.....	1884451	1111404
LEAD—Condenser.....	1871681	1111406
LEAD—Condenser.....	1850017	1111407
Lubricating NIPPLE.....	109353	1111403-4
Lubricating NIPPLE.....	105528	1111407

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
Lubricating NIPPLE—In Breaker Cup.....	110308	1111406
Lubricating NIPPLE—In Distributor Housing.....	109354	1111406
LUBRICATOR—Cam.....	x	1111410
LUBRICATOR—Cam.....	1885562	1111416
OILER.....	14357	1111407
PIN—Collar—Horizontal Shaft—Outside.....	815003	1111401-2-6-7-8-16
PIN—Distributor Cap Spring.....	29802	1111407
PIN—Distributor Cap Spring.....	1885326	1111413
PIN—Gear—On Vertical Shaft.....	815003	1111401-2-3-4-5-6-7-8-9-10-13
PIN—Gear—On Vertical Shaft.....	1862218	1111403-4-5-9-16
Pipe PLUG (1/8" square hd.).....	103877	1111401-2-5-6-8-9-10-13
Pipe PLUG (1/8" slotted hd.) Distributor Housing.....	125947	1111410-13-16
PLATE—Advance Arm Dial.....	815095	1111410-13-16
PLATE—Ball Bearing Retainer—Upper Housing.....	1835530	1111403-4-6
PLATE—Distributor Mounting.....	1860673	1111403-4-7
PLATE—Distributor Mounting.....	1883622	1111406
PLATE—Felt Washer Retainer—On Horizontal Shaft.....	816139	1111401-2-3-4-6-7-9-13-16
PLATE—Grease Retainer.....	1837077	1111403-4-6-7
PLATE—Weight Hold Down.....	1885557	1111404-6-7-10-13-16
RIVET—Advance Arm.....	1837078	1111403-4-6-7
RIVET—Distributor Cap Spring Support.....	111892	1111407
ROTOR Only.....	1842719	1111403-4-6
Rotor BRUSH.....	35607	1111407-13
Rotor Brush SPRING.....	35617	1111407-13
Rotor SEGMENT.....	1838315	1111403-4
Rotor SEGMENT.....	1838314	1111406
Rotor SPRING.....	1842723	1111403-4-6
SPRING—Distributor Hold Down.....	813045	1111401-2-3-4-6-7-8
Terminal CLAMP.....	26153	1111401-2-3-4-5-6-8-9
Terminal CLAMP.....	31656	1111407-13
Terminal CONNECTOR (1 1/8" long).....	825454	1111407-13
Terminal CONNECTOR (2 1/8" long).....	1836907	1111407
Weight Spring COTTER PIN.....	137130	1111403
Woodruff KEY—On Horizontal Shaft for Gear.....	124542	1111401-2-3-4-5-6-7-8-9-10-13-16
Woodruff KEY—Outside—On Horizontal Shaft.....	124543	1111401-2-3-4-5-6-7-8-9-10-13-16

 
*1908035 (attached with tangs) used on early production.
1885562 (attached with screws) used on later production.

Delco-Remy

SERVICE PARTS CATALOG

DISTRIBUTOR—Group 94-A
(Battery Ignition Unit)
Page 1

Revised to February 1, 1969

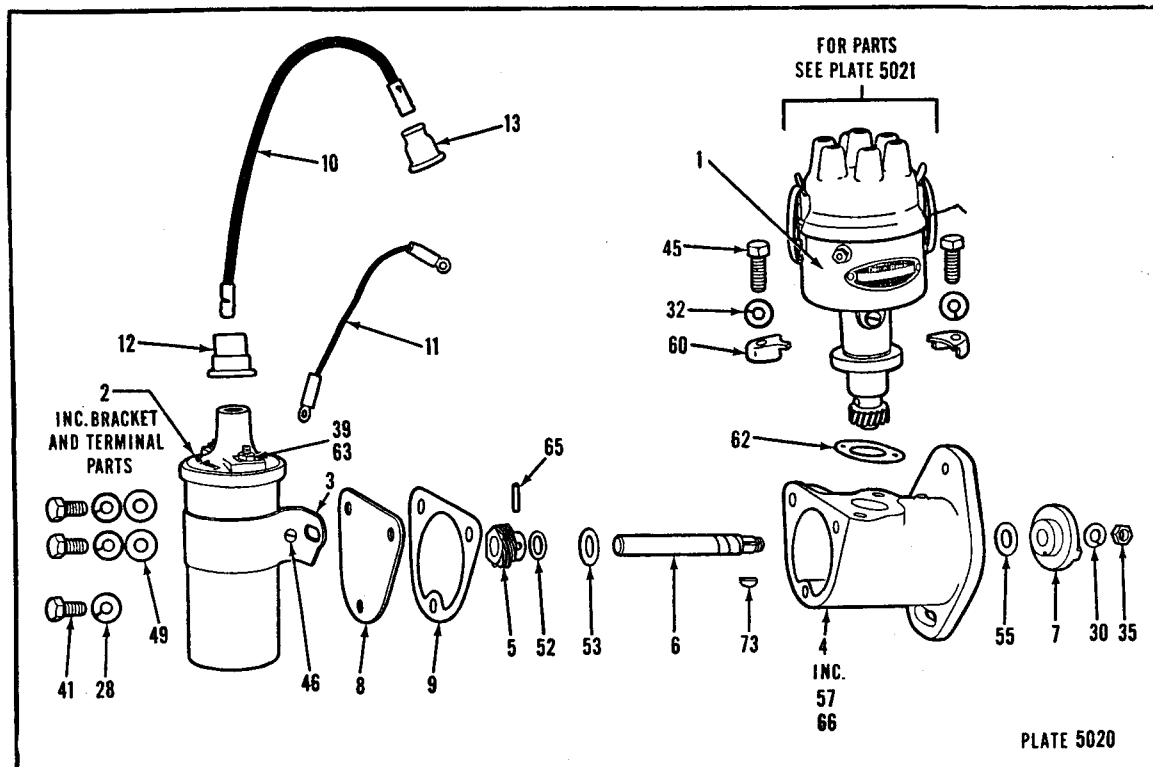

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor — Sub-Assem.	Coil	Bracket — Coil Mounting	Housing — Adaptor	Gear	Shaft	Coupling or Gear	Plate — Cover	Gasket	Lead — High Tension	Lead — Low Tension	Nipple — to Coil	Nipple — to Distributor
	1	2	3	4	5	6	7	8	9	10	11	12	13
•1111411	1885368	1115381	1909180	1885375	1885373	1885372	1885376	1885378	1885377	1885374	811569	1913635	5289527
†1111412	1885619	"	"	"	1885623	"	"	"	"	"	"	"	"
□1111414	1915629	"	"	"	1915632	1915633	"	"	"	"	"	"	"
1111415	1918577	1115043	"	"	1885623	"	"	"	"	1885374	"	"	1839771
1111418	1928263			1928261	1885373	1885372	"	"	"				
1111419	1929421	1115381	1909180	1885375	"	"	"	"	"	1885374	811569	1913635	5289527
1111420	1931142			"	1885623	1931147	1931148	"	"				
1111421	1931561			"	"	1948720	"	"	"				
1111422	1933367			"	"	1931147	1933372	"	"				
1111423	1937351			"	"	"	1935521	"	"				
1111424	1938328			"	"	1948720	1931148	"	"				
1111425	1938943			"	"	1931147	1935521	"	"				
1111426	1939757	1115043	1909180	"	"	1915633	1885376	"	"	1885374	811569	1913635	1839771
1111427	1939760	"	"	"	"	1885372	"	"	"				
1111428	1940082			1940087	"	"	"	"	"				
1111429	1945952			"	1885373	"	"	"	"				
1111431	1947868	1115043	1909180	1885375	1885623	1915633	"	"	"	1885374	811569	1913635	5289527
1111432	1948713			1948717	1885373	1948720	1948721	1885378	1885377				
1111433	1947207	1115043	1909180	1885375	1885623	1915633	1885376	"	"	1885374	811569	1913635	
1111434	1938328			1949997	"	1931147	1931148	"	"				
1111462	1970776			1885375	1885373	1885372	1885376	"	"				
▲1111558		†											5289527
1111697	801234	1115043	1909326	1885375	1885623	1915633	1885376	1885378	1885377	1885374	1954563	1913635	5289527

•Also in Package No. 1885555.

†Also in Package No. 1885666.

 
‡Use Coil No. 1115381 (6V) or No. 1115043 (12V).

□Also in Package No. 1915777.

▲Also in Package No. 1917333.

■1954563 is a Primary Lead.

Delco-Remy SERVICE PARTS CATALOG

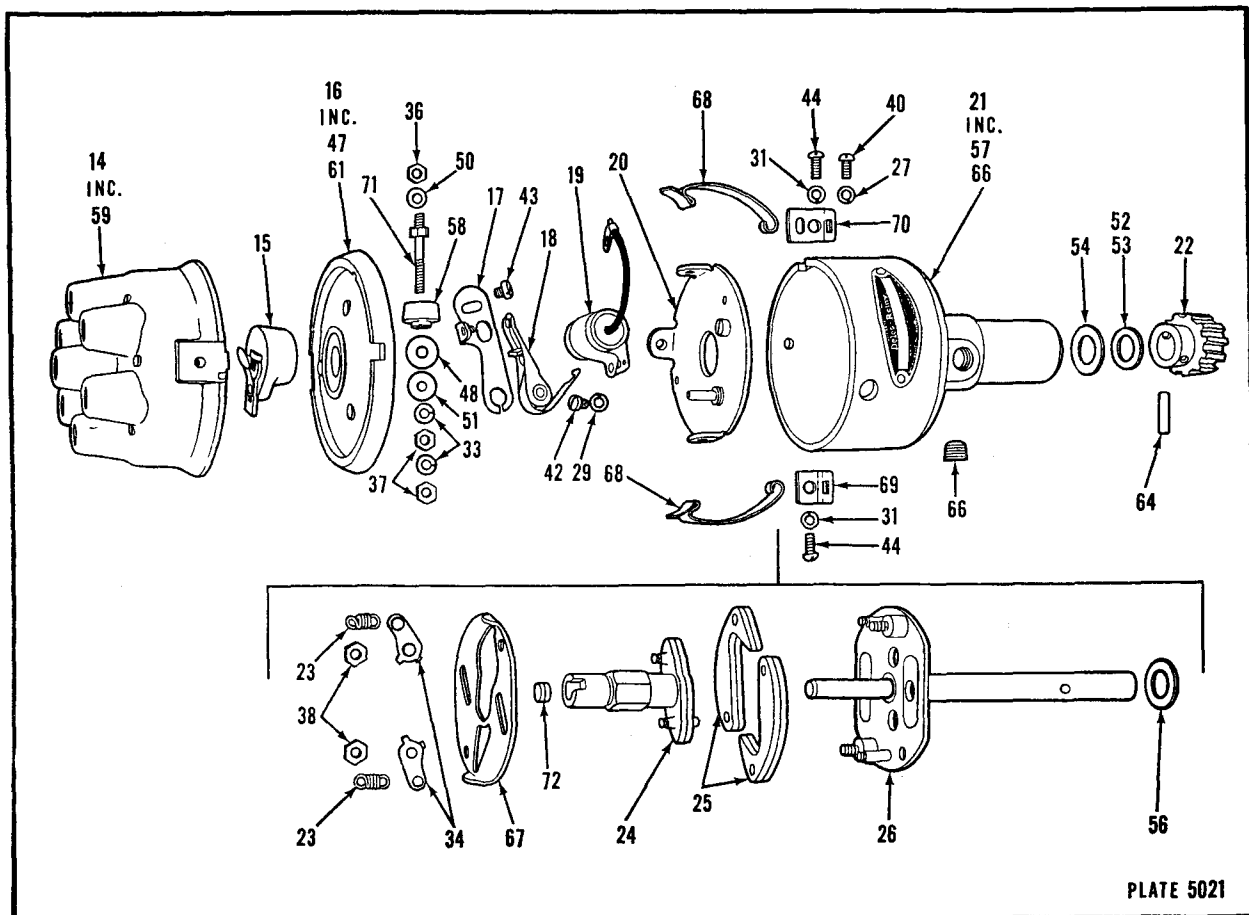

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover — Housing	Contact & Support	Breaker Lever	Con- denser	Plate — Breaker	Housing	Coupling or Gear	Spring — Weight	Cam Assem.	Weight	Shaft & Plate
	14	15	16	17	18	19	20	21	22	23	24	25	26
1111411	811735	1905590	1900119	a1848038	a1905344	1928111	1847643	1909269	1860628	1883899	1909278	1921271	1885370
1111412	824735	"	"	"	"	"	"	"	821854	1931650	1885638	"	1947808
1111414	811735	"	"	"	"	"	"	"	1915630	1883899	1909278	"	1885370
1111415	1842714	"	"	b1882964	b1881394	1900272	1908033	1917312	821854	1883498	1916429	1881371	1946742
1111418	1909008	820445	"	c1848038	c 813238	"	"	"	1860628	1883899	1928260	"	1928258
1111419	811735	"	"	c "	c "	1928111	"	1909269	1860628	1912765	1909278	"	1885370
1111420	1862403	1905590	"	c "	c "	1900272	"	1917312	821854	1906858	1924360	1881371	1931563
1111421	"	820445	"	c "	c "	"	1847643	1917312	"	1931650	1917307	1921271	1931563
1111422	"	"	"	c "	c "	"	"	1933367	"	1906858	1933370	1881371	1909276
1111423	"	"	"	c "	c "	"	"	1917312	"	1937291	1921819	"	1917311
1111424	"	1905590	"	c "	c "	"	"	"	"	1911092	1921328	"	1938331
1111425	824735	820445	"	c "	c "	"	"	1932710	"	1937291	1921819	"	1938945
1111426	1842714	1905590	"	b1882964	b1881394	"	1908033	1917312	"	1883899	1928756	1921271	1939759
1111427	"	"	"	b "	b "	"	"	"	"	"	1917307	"	1917311
1111428	811735	820445	"	c1848038	c 813238	1928111	1847643	1929476	1860628	1917710	1940086	1881371	1921945
1111429	824735	"	"	c "	c "	"	"	"	"	1911255	1918404	1880902	1947655
1111431	1867722	1905590	"	b1882964	b1881394	1900272	1908033	1917312	821854	1883498	1916429	1881371	1946742
1111432	811735	820445	"	c1848038	c 813238	1928111	1847643	1929476	1860628	1911255	1948716	1880902	1947655
1111433	1862403	1905590	"	b1882964	b1881394	1900272	1908033	1917312	821854	1883498	1916429	1881371	1946742
1111434	"	"	"	c1848038	c 813238	"	1847643	1917312	"	1911092	1921328	"	1938331
1111462	811735	820445	"	c "	c "	1928111	"	1909269	1860628	1887130	1909570	1880902	1970778
1111558	1913739	1905590	"	a "	a1905344	1900272	"	1917205	†	1911070	1917209	1921271	1917211
1111697	1960833	1954566	1960325	o	o	1928111	1960814	1960910	821854	1883121	801233	1881371	801236

a-Contact Set No. 1911119. b-Contact Set No. 1882965. c-Contact Set No. 1855720.

†1885376 Std. coupling (¾" Long Tang), 1922980 special coupling (⅞" Long Tang).

oUse Contact Set No. 1954557.

Parts not listed in this Catalog will not be sold separately.

Revised to February 1, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHER			
27	Lock Washer—Breaker Plate Support Screw -----	453844	1111411-12-14-15-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62
27	Lock Washer—Breaker Plate Support Screw -----	138530	1111418; 558
—	Lock Washer—Cam Lubricator Att. Screw -----	453844	1111415; 26-7; 31-3
28	Lock Washer—Coil or Cover Plate Screw -----	9421424	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 697
29	Lock Washer—Condenser Attaching Screw -----	453844	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7; 31-2-3-4; 558
30	Lock Washer—Coupling Attaching Nut -----	9421425	1111411-12-14-15-18-19; 26-7-8-9; 31-3; 62; 558; 697
31	Lock Washer—Distributor Cap Spring Support Screw -----	453844	1111411-12-14-15-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62
31	Lock Washer—Dist. Cap Spring Support Screw -----	138530	1111418; 558
32	Lock Washer—Distributor Hold Down Screw -----	9421425	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 697
—	Lock Washer—Terminal Stud—Inside -----	453844	1111415-18; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 558
33	Lock Washer—Terminal Stud—Outside -----	453844	1111411-12-14-19
34	Lock Washer—Weight Hold Down Nut -----	1885558	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 558
NUTS			
35	Nut—Coupling Attaching -----	124925	1111411-12-14-15-18-19; 26-7-8-9; 31-3; 62; 558; 697
36	Nut—Terminal Stud—Inside -----	817363	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 558
37	Nut—Terminal Stud—Outside -----	120622	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 558
38	Nut—Weight Hold Down -----	1923540	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 558
39	Nut—Ignition Coil Terminal -----	1923540	1111411-12-14-15-19; 26-7; 31-3; 697
SCREWS			
40	Screw—Breaker Plate Support -----	453418	1111411-12-14-19; 20-1-2-3-4-5-9; 32-4
40	Screw—Breaker Plate Support -----	453461	1111415-18; 26-7-8; 31-3; 558; 697
—	Screw—Cam Lubricator Att. -----	453304	1111415; 26-7; 31-3
—	Screw—Cap Attaching (#8-32) -----	1954571	1111697
—	Screw—Cap Attaching (#10-32) -----	1957573	1111697
41	Screw—Coil or Cover Plate Attaching -----	455430	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 697
41	Screw—Coil Mounting Bracket Attach. -----	1945901	1111431-3; 697
42	Screw—Condenser Attaching -----	453304	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 558
42	Screw—Condenser Bracket Attaching -----	454458	1111697
—	Screw—Condenser Bracket Attaching -----	131949	1111462
43	Screw—Contact Attaching -----	1914916	All
44	Screw—Distributor Cap Spring Support -----	453461	1111411-12-14-15-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62
44	Screw—Distributor Cap Spring Support -----	9417096	1111418; 558
45	Screw—Distributor Hold Down -----	120233	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 697
45	Screw—Distributor Hold Down -----	453647	1111697
—	Screw—H.T. Terminal Attaching (In Cap) -----	9418565	1111558
46	Screw—Ignition Coil Bracket Clamp -----	1945460	1111411-12-14-15-19; 26-7
—	Screw—H.T. Terminal (Side) -----	1860406	1111420-1-2-3
—	Screw—H.T. Terminal (Center) -----	1860407	1111420-1-2-3
WASHERS			
—	Washer—Breaker Plate Support Attaching -----	453418	1111462
47	Washer—Felt—Housing Cover Seal -----	1914309	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 558
48	Washer—Insul.—Terminal Stud—Outside -----	1882247	1111411-12-14-19
—	Washer—Plain—Breaker Plate Support Screw -----	807127	1111415; 31-3
49	Washer—Plain—Coil Attaching Screw -----	810492	1111411-12-14-15-19; 26-7; 31-3; 697
50	Washer—Plain—Terminal Stud—Inside -----	810794	1111411-12-14-19; 62
51	Washer—Plain—Terminal Stud—Outside -----	815540	1111411-12-14-19; 62

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Ilus. No.	Name	Part No.	Used on Models
WASHERS (Continued)			
52	Washer—Shim—.005 thk. -----	810074	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 697
53	Washer—Shim—.010 thk. -----	1912129	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 697
—	Washer—Space—Tach. Drive -----	1913003	1111425
—	Washer—Shim—Tach. Drive -----	1913004	1111425
54	Washer—Space—Under Distributor Gear or Coupling -----	811912	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3; 62; 558; 697
54	Washer—Space—Under Distributor Gear or Coupling -----	1960920	1111434
55	Washer—Space—Between Coupling or Gear & Hsg. --	811912	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3; 62; 558; 697
55	Washer—Space—Between Coupling or Gear Hsg. --	1960920	1111434
56	Washer—Space—Under Weight Plate -----	811912	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 558; 697
MISCELLANEOUS			
—	BLOCK—Gear Cushion -----	1908028	1111420-1-2-3-4-5; 32-4
—	BRACKET—Condenser -----	1869573	1111462
—	BRACKET—Condenser -----	1944118	1111697
57	BUSHING—Distributor Housing -----	1909003	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62
57	BUSHING—Distributor Housing -----	1917207	1111558
57	BUSHING—Adaptor Housing -----	1909003	1111411-12-14-18-19; 20-1-2-3-4-5-6-7; 34
58	BUSHING—Terminal Stud—Insul. -----	1878405	1111411-12-14-19; 62
58	BUSHING—Terminal Stud (Outside) -----	1882247	1111462
58	BUSHING—Terminal Stud—(Outside) -----	1914142	1111415-18; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 558
—	BUSHING—Terminal Stud—(Inside) -----	1916805	1111415-18; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 558
59	BUTTON—Carbon—In Cap -----	1938193	1111411-12-14-18-19; 20-5-8-9; 31-2; 62; 558; 697
59	BUTTON—Carbon—In Cap -----	806923	1111415; 20-1-2-3-4-6-7; 33-4
60	CLAMP—Distributor Hold Down -----	1916780	1111462; 67
60	CLAMP—Distributor Hold Down -----	2070940	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 558
—	CLIP—Cushion Retainer -----	1908030	1111420-1-2-3-4-5; 32-4
—	COUPLING—Tach. Drive -----	1912819	1111425
—	CUP—Gasket Retainer—Breaker Plate Support Screw -----	1919246	1111418; 558
—	CUP—Gasket Retainer—Dist. Cap Spring Support Screw -----	1919246	1111418; 558
—	CUSHION—Gear -----	1908029	1111420-1-2-3-4-5; 32-4
—	FITTING—Lubrication—Distributor Housing -----	271283	1111425
—	GASKET—Dist. Cap Spring Support -----	1918319	1111415-18; 31-3; 558
—	GASKET—Dist. Cap Spring Support Screw -----	1919247	1111418; 558
—	GASKET—Breaker Plate Support Screw -----	1919247	1111418; 558
—	GASKET—Breaker Plate Support Screw -----	1918319	1111415; 31
61	GASKET—Housing Cover -----	1889966	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 558
62	GASKET—Under Distributor -----	1955627	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 697
—	GEAR—Assem. (Tach. Drive) -----	1912821	1111425
—	GEAR & Shaft Assem.—Tach. Drive -----	1915829	1111425
—	GROMMET—In Housing -----	1960824	1111697
63	CLIP—Ignition Coil Terminal -----	1909206	1111411-12-14-15-19; 26-7; 31-3
63	CLIP—Lock—Ignition Coil Terminal -----	1961864	1111697
—	CLIP—Lock—Terminal Stud—Outside -----	453844	1111462
—	CLIP—Lock—Terminal Stud—Outside -----	1914144	1111415-18; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 558
—	KEY—Woodruff—Coupling -----	189376	1111697
—	KEY—Woodruff—Tach. Gear Attach. -----	19006	1111425
—	LUBRICATOR—Cam -----	1885562	1111415; 26-7; 31-3
64	PIN—For Distributor Gear -----	815003	1111411-12-14
64	PIN—For Distributor Gear -----	1862218	1111415-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 697
65	PIN—For Drive Gear -----	1857502	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 697
—	PIN—Gear—Outside -----	1908031	1111420-1-2-3-4-5; 32-4

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—(Continued)		
66	PIPE PLUG—In Distributor Housing -----	453465	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 558
66	PIPE PLUG—In Adaptor Housing -----	453465	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 697
67	PLATE—Weight Hold Down -----	1885557	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 558
67	PLATE—Weight Hold Down -----	1954548	1111697
—	PLUG—Tach. Drive -----	1912818	1111425
—	SEAL—Oil—Distributor Housing -----	1912820	1111425
—	SEAL—Oil—Distributor Housing -----	1950569	1111697
68	SPRING—Distributor Cap -----	1889967	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 558
69	SUPPORT—Distributor Cap Spring -----	1847289	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 558
70	SUPPORT—Dist. Cap Spring (& Cover Locator) ---	1889999	1111411-12-14-15-18-19; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 558
71	STUD—Terminal -----	1847647	1111411-12-14-19
71	STUD—Terminal -----	1916806	1111415-18; 20-1-2-3-4-5-6-7-8-9; 31-2-3-4; 62; 558
—	TERMINAL—(H.T. Screw Type) Shipped Separate	1839164	1111415; 26-7-8
—	TERMINAL—H.T. (In Cap) -----	1906804	1111558
72	WICK—Felt—In Cam -----	1963555	All
73	WOODRUFF KEY -----	189576	1111411-12-14-15-18-19; 26-7-8-9; 31-3; 62; 558
	MISC. PARTS INCLUDED IN PACKAGE		
	BRACKET—Coil Mounting -----	1917542	1917333
	BRACKET—Switch Mounting -----	1885532	1885555 — 1915777
	KNOB—Switch -----	1990649	All
	LOCK WASHER—Coil Mtg. Screw -----	120214	1917333
	LOCK WASHER—Switch Mtg. Nut -----	138545	All
	NUT—Dist. Mtg. Screw -----	134566	1917333
	NUT—Switch Mounting -----	812479	All
	SCREW—Coil—Mounting -----	120288	1917333
	SCREW—Dist. Mounting -----	122168	1917333
	SWITCH—Ignition -----	1995626	All
	WASHER—Plain—Coil Mtg. Screw -----	810492	1917333
	WASHER—Plain—Dist. Mtg. Screw -----	805790	1917333
	WASHER—Plain—Switch Mtg. Nut -----	1904572	All

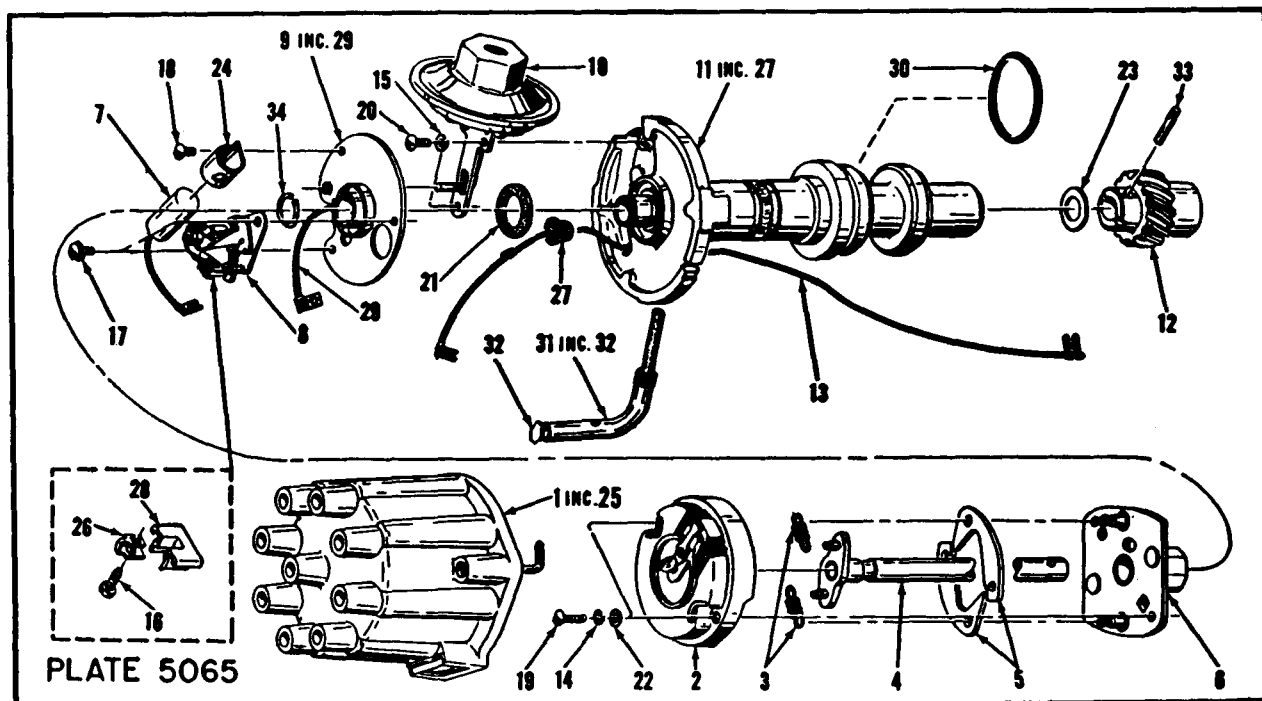 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111435	1971244	1971247	1942510	1970570	1881371	1941135	1932004	1931988	1962141	1973412	1967562	1968296	1942518
1111436	"	"	1968543	1846010	"	1966994	"	"	1846122	1116163	1966407	1958599	1846199
1111437	"	"	1882774	1846239	"	"	"	1966294	"	1115360	"	"	"
1111438	1932018	1932015	1967643	1967003	1965843	1966994	"	"	1846122	1116163	1851158	"	1846199
1111439	"	"	1968543	1964913	1881371	1967005	"	"	1962141	1115355	1966407	"	1942518
1111440	"	"	1923139	1970863	"	1966740	"	"	"	"	"	"	"
1111441	"	"	1925574	1971142	1965843	"	"	"	"	1116163	1851158	"	"
1111443	"	"	1968847	1968782	1880902	1967005	1932004	1931988	1962141	1115355	1966407	"	1942518
1111444	"	"	1967643	1966928	1965843	1966994	"	"	"	1116163	"	"	"
1111445	"	"	1900371	1970915	1881371	1966709	"	"	"	"	"	"	"
1111447	1971244	1971247	1957483	1970605	1924737	1945210	"	"	"	1973411	1967562	1968683	"
1111448	"	"	1970926	1970924	1881371	1967914	"	"	"	1973412	"	1968296	"
1111449	"	"	"	"	"	"	"	"	"	1973411	"	1968683	"
1111450	"	"	1970935	1970933	"	1941135	"	"	"	"	"	1968296	"
1111460	1942654	1965743	1883779	1970555	"	1967275	"	1966294	"	1973436	1851158	1962197	"
1111461	"	1932015	"	1970561	"	1965427	"	"	"	"	"	1958599	"
1111463	1932018	"	1946276	1971028	1880902	1941135	"	1931988	"	1973407	1962144	1955676	1958971
1111464	1971244	1971247	1968543	1846045	1881371	1971553	"	1966294	1846122	1115360	1851158	1958599	1846199
1111465	"	"	1971185	1846229	"	"	"	"	"	1115373	"	"	"
1111466	1932018	1932015	"	1971183	1880902	1965066	1932004	1931988	1962141	1973407	1962144	1955676	1958971
1111467	"	1960776	1885787	1969762	1881371	1970240	"	1966294	"	1968861	1966407	1958599	1942518
1111468	"	1932015	1885339	1971197	"	1967914	"	1931988	"	1973418	1962144	1955676	1958971
1111469	"	"	1959443	1971218	1924737	"	"	"	"	1973408	"	"	"
1111470	800062	1971247	1970823	1958625	1881371	"	"	"	"	1973418	"	"	"
1111471	"	"	1916848	1971275	"	"	"	"	"	1973408	"	"	"
1111472	1932018	1932015	1968041	1968039	"	1966796	1928111	1931988	1950575	1115362	1966365	1967082	1942518
1111473	"	"	1908587	1971359	"	1971360	"	"	"	1115363	"	801739	"
1111474	"	"	1971453	1971449	"	1967005	1932004	"	1962141	1116163	1967025	1950570	"
1111475	"	"	1971542	1965299	"	"	"	"	"	"	1851158	1958599	"

*Not used on this model.

†Service by complete replacement.


‡For 1970 Model year and later, use 1846122 Plate, 1846199 Lead.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
SCREWS			
17	Screw—(& Lock Washer)—Contact Assem. Attach.....	1938527	All except 1111441-65-70-1-5
18	Screw—Condenser Clamp Attaching.....	453647	All except 1111441-65-70-1-5
19	Screw—(& Lock Washer)—Rotor Attaching.....	274453	All
20	Screw—Vacuum Control Attaching.....	454408	1111435-6-7-9; 40-3-4-5-7-8-9; 50; 63-6-7-8-9; 72-3
20	Screw—Vacuum Control Attaching.....	453696	1111438-41; 60-1-4-5; 75
20	Screw—Vacuum Control Attaching.....	9418565	1111470-1
—	Screw & Lock Washer—R.F.I. Shield Attach.....	1846215	1111436-7
WASHERS			
—	Washer—Felt—Under Plate Washer.....	1951099	All
23	Washer—Tang—Under Gear.....	1837617	1111435-6-7-8-9; 40-1-3-4-5-7-8-9; 50; 60-1-4-5-7-75
—	Washer—Under Advance Plate.....	1961927	1111441-1111465; 70-1-5
—	Washer—Tang—Between Gear & Base.....	1965864	1111438-9; 40-1-3-4-5-7; 75
—	Washer—Thrust Tach. Gear.....	1956834	1111436-7; 60-1-4-5
—	Washer—Tang—Between Gear & Base.....	811912	1111472-3
MISCELLANEOUS			
24	BRACKET—Condenser.....	1869573	All except 1111441-65-70-1-5
25	BRUSH—In Cap.....	1938193	All
—	BUTTON—(Nylon) In Weight Base.....	1957329	1111441; 65-70-1-5
—	BUTTON—Tach Shaft Spacing.....	1957329	1111438; 41; 60-1-4-5; 75
—	CONNECTOR—Lead Junction.....	2973782	1111441; 65-70-1-5
—	COUPLING—Tach.....	1955799	1111438; 41; 60-1-4-5; 75
—	FELT—Cam Oiler.....	*1949084	1111436-7-8-9; 40-3-4-5; 60-1-4-7; 72-3
—	GEAR & CROSS Shaft—Tach.....	1955842	1111438; 41; 60-1-4-5; 75
27	GROMMET—For Primary Lead.....	1932023	1111435-6-7-8-9; 40-3-4-5-7-8-9; 50; 60-1-3-4-6-7-8-9; 72-3
27	GROMMET—In Housing.....	1960789	1111441; 65; 70-1-5
29	LEAD—Breaker Plate Ground.....	1932002	All except 1111441; 65; 70-1-5
33	PIN—Gear Attaching.....	454512	1111472-3
33	PIN—Gear Attaching.....	455862	1111463-6-8-9; 70-1
33	PIN—Gear Attaching.....	456652	1111435-6-7-8-9; 40-1-3-4-5-7-8-9; 50; 60-1-4-5-7-75
—	POLE PIECE & WT. BASE.....	1964255	1111465
—	POLE PIECE & WT. BASE.....	1967928	1111441; 75
—	POLE PIECE & WT. BASE.....	1970156	1111470-1
—	POLE PIECE & PLATE ASSEM.....	1968002	1111470-1
—	POLE PIECE & PLATE ASSEM.....	1960779	1111441; 65-75
—	RETAINER—Felt Wick.....	*1935621	1111436-7-8-9; 40-3-4-5; 64-7; 72-3
—	RETAINER—Cam Lubricator Wick.....	1846818	1111460-1
—	RING—Spring Post Retainer.....	9423913	1111460-1-5
—	R.F.I. Shield Package.....	1846216	111436-7
—	SEAL—Lubrication.....	1950569	All
—	SLEEVE (Rubber)—Spring Post.....	1945548	1111435-9; 40-3-7-8-9; 50; 63-6-8-9; 72-3
—	SLEEVE (Rubber)—Spring Post.....	1961234	1111436-7-8; 41-4-5; 60-1-4-5-7; 70-1-5
34	SPRING—Advance or Pole Pc. Plate retainer.....	1932024	All
—	WICK—Cam Lubricator.....	1961088	1111460-1

 *Models with Cylindrical Wick use 801865 Wick and retainer Package.

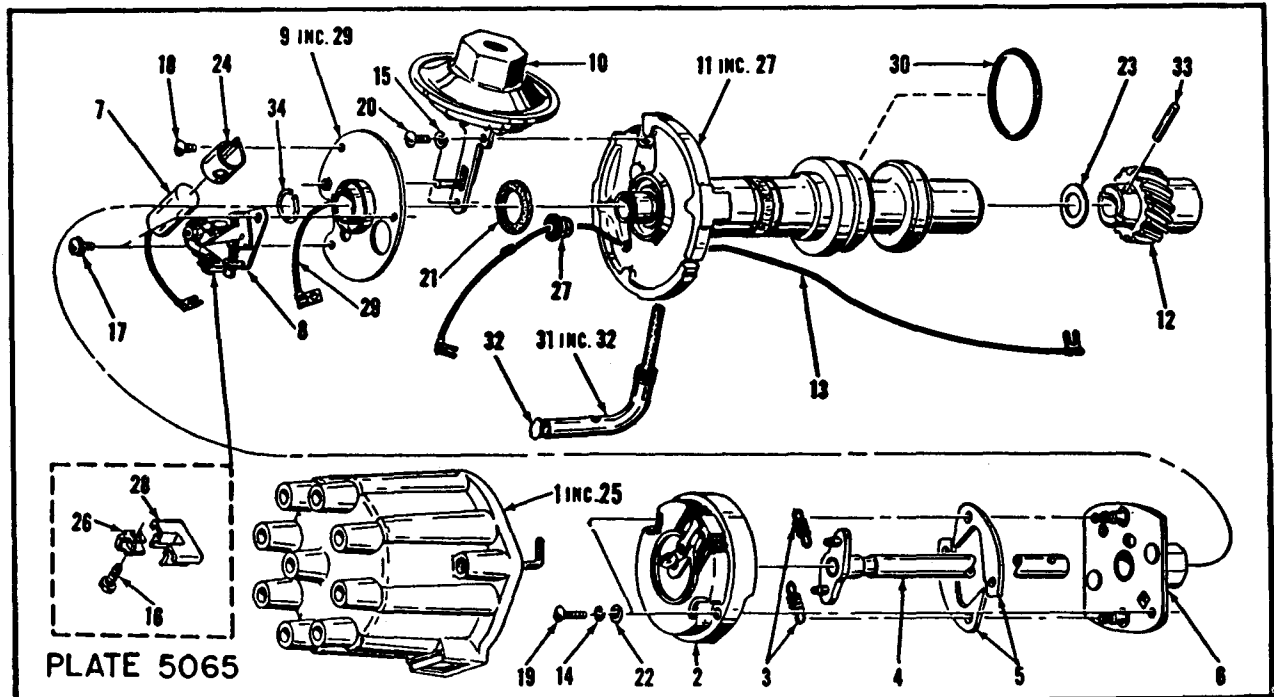

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111477	1932018	1932015	1963965	1968080	1881371	1971553	1932004	1931988	1962141	†1116163	1961404	1958599	1942518
1111478	"	"	"	1968076	"	"	"	"	"	"	1966407	"	"
1111479	"	"	1915231	1971574	"	1967023	"	"	"	"	"	"	"
1111480	1971244	1971247	1885787	1969762	"	1970240	"	1966294	"	†	"	"	"
1111481	"	"	1884615	1970575	"	1938116	"	1931988	"	†1115355	"	"	"
1111482	"	"	1931257	1967196	"	1967005	"	"	"	†1115357	"	"	"
1111483	"	"	1951743	1941361	"	1969763	"	"	"	†	"	"	"
1111486	"	"	1935546	1967196	"	1966740	"	"	"	†1973421	"	"	"
1111487	"	"	1887743	1970863	"	1967005	"	"	"	†	"	"	"
1111488	"	"	1967643	1966928	1965843	1967002	"	"	"	†1968861	"	"	"
1111489	"	"	1963965	1968076	1881371	1942360	"	"	"	†1115357	"	"	"
1111490	"	"	1951743	1968080	"	1966994	"	"	"	†	1916404	"	"
1111491	"	"	800474	800473	"	"	"	"	"	†1116163	"	"	"
1111492	"	"	1846056	1846043	"	1967005	1932004	1931988	1846122	†	1966407	"	1846199
1111493	"	"	800477	800476	"	1966994	"	"	*1962141	†1115360	1916404	"	*1942518
1111494	"	"	1966509	1846052	"	1938116	"	"	1846122	†1116163	1966407	"	1846188
1111495	"	"	1916848	1964261	"	1969763	"	"	*1962141	†	"	"	1942518
1111496	"	"	1970926	801288	"	1963493	"	1966294	"	†1115360	1965974	"	"
1111497	"	"	1882774	1968535	"	1964372	"	1931988	"	†1116163	1966407	"	"
1111498	"	"	1900371	1970915	"	1966709	"	"	"	†	"	"	"
1111499	"	"	1882774	1968535	"	1964372	"	1966294	"	†1115355	"	"	"
1111500	"	"	1908587	1967196	"	1938116	"	1931988	"	†1116163	"	"	"

*Not used on this model.

†Service by complete replacement.

*For 1970 model year and later use 1846122 plate; 1846199 Lead.


Delco-Remy

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
SCREWS			
17	Screw—(& Lock Washer)—Contact Assem. Attach.....	1938527	All except 1111491
18	Screw—Condenser Clamp Attaching.....	453647	All except 1111491
19	Screw—(& Lock Washer)—Rotor Attaching.....	274453	All
20	Screw—Vacuum Control Attaching.....	454408	1111478-9; 80-1-2-3-6-7-8-9; 92-4-5-7-8-9; 500
20	Screw—Vacuum Control Attaching.....	453696	1111477; 90-1-3-6
—	Screw—R.F.I. Shield Package Attaching.....	1846215	1111492-4
WASHERS			
—	Washer—Felt—Under Plate Washer.....	1951099	All
23	Washer—Tang—Under Gear.....	1837617	All
—	Washer—Under Advance Plate.....	1961927	1111491
—	Washer—Tang—Between Gear & Base.....	1965864	1111477-8-9; 80-1-2-3-6-7-8-9; 95-7-8-9; 500
—	Washer—Thrust Tach. Gear.....	1956834	1111490-1-2-3-4-6
MISCELLANEOUS			
24	BRACKET—Condenser.....	1869573	All except 1111491
25	BRUSH—In Cap.....	1938193	All
—	BUTTON—(Nylon) In Weight Base.....	1957329	1111491
—	CONNECTOR—Lead Junction.....	2973782	1111491
—	COUPLING—Tach.....	1955799	1111477; 90-1-3-6
—	FELT—Cam Oiler.....	1949084	All except 1111491
—	GEAR & CROSS Shaft—Tach.....	1955842	1111477; 90-1-3-6
27	GROMMET—For Primary Lead.....	1932023	All except 1111491
27	GROMMET—In Housing.....	1960789	1111491
29	LEAD—Breaker Plate Ground.....	1932002	All except 1111491
33	PIN—Gear Attaching.....	456652	All
—	POLE PIECE & WT. BASE.....	1967928	1111491
—	POLE PIECE & PLATE ASSEM.....	1960779	1111491
—	R.F.I. Shield Pkg.....	1846216	1111492-4
—	RETAINER—(C Washer)—Advance Plate.....	1932024	1111491
—	RETAINER—Felt Wick.....	1935621	All except 1111491
—	SEAL—Lubrication.....	1950569	All
—	SLEEVE (Rubber)—Spring Post.....	1945548	1111479; 80-2-3-6-7; 95
—	SLEEVE (Rubber)—Spring Post.....	1961234	1111477-8; 80-8-9; 90-1-2-3-4-6-7-8-9; 500
34	SPRING—Breaker Plate Retainer.....	1932024	All except 1111491

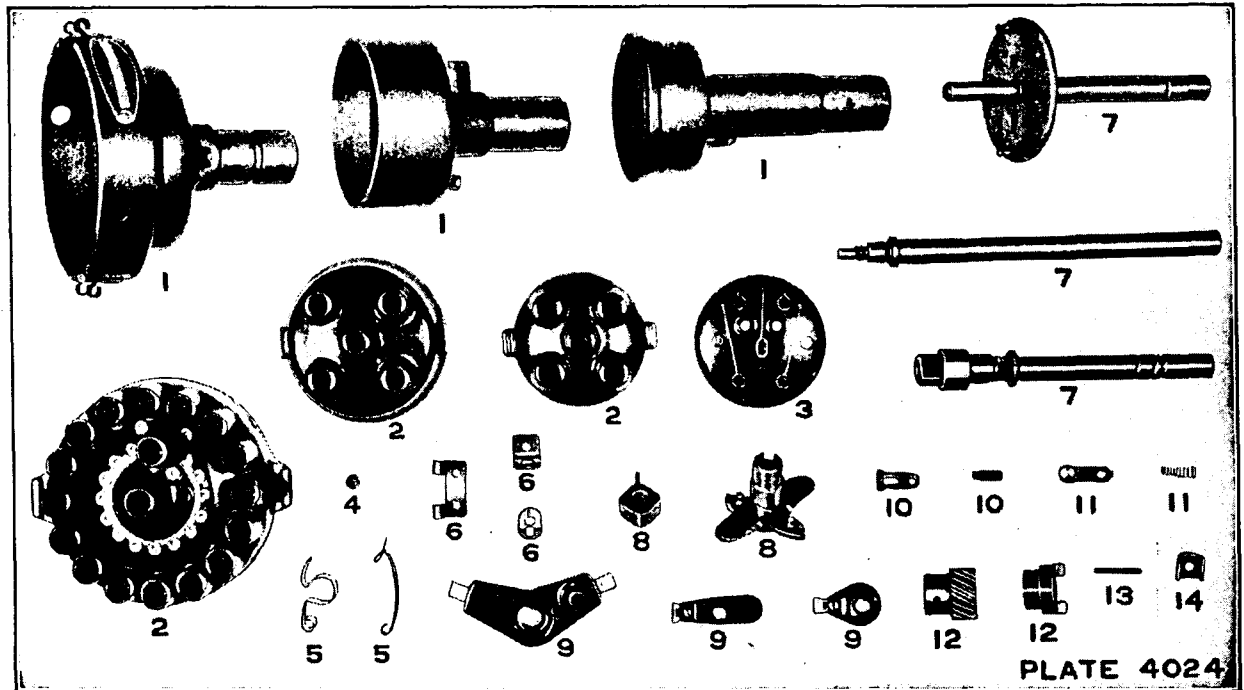 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor Housing	Distributor Cap	Distributor Cap Cover	Distributor Cap Carbon Button	Distributor Cap Spring	Distributor Cap Spring Support	Main Shaft	Cam Assembly	Rotor Assembly	Rotor Brush or Segment	Rotor Spring	Gear, Collar or Coupling	Gear or Coupling Pin	Terminal Lock Clip
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1111501	1867869	825430		1888023	30111	825429	1844647	1867871	16781	35607	35617	809673	1857492	31656
1111502	1868769	38324		"	"	"	*1868771	"	1873302	"	"	"	"	"
1111503	1841425	818241		806923	834069	834142	1841427	806766	806973	806955	806957	812270	1857492	"
1111504	812293	†		†	"	"	809674	†	†	†	†	809673	"	"
1111505	1873500	811735		1938193	1871838	1847289	1873502	1873505	820445			†	†	26153
1111506	"	"		"	"	"	1873590	1873593	"			†	†	"
1111507	820668	1873864		"	816801	826476	1885003	1873863	816774			†	†	"
1111508	1874801	811735		"	1871838	1847289	1847804	1874806	820445			809673	1857492	"
1111509	820668	1866630		"	816801	826476	1885003	1874995	816774			†	†	"
1111510	1877559	811735		"	1871838	1847289	1874804	1874806	820445			1877561	817267	"
1111511	820668	1866630		"	816801	826476	1882979	1878060	816774			†	†	"
1111512	"	1873864		"	"	"	*1878406	"	"			809673	1857492	"
1111513	1840004	811735		"	1871838	1847289	1844358	1880428	820445			"	"	26153
1111514	1857441	1842510		1888023	30111	825429	1841642	1845027	1840610	35607	35617	"	"	31656
1111515	1840004	811735		1938193	1871838	1847289	1880984	1873505	820445			"	"	26153
1111516	"	"		"	"	"	"	1873593	"			"	"	"
1111517	1867869	825430		809445	30111	"	1841642	1861679	16781	35607	35617	"	"	31656
1111518	1840004	811735		1938193	1871838	1847289	1880984	1873505	820445			1860628	1862218	26153
1111519	1905622	38324		1888023	30111	825429	1882510	1845027	1873302	35607	35617			31656
1111520	822622	811735		1938193	1871838	1847289	1855436	"	820445			809673	1857492	26153
1111521	1857441	1854852		1888023	30111	825429	1841642	1861679	16781	35607	35617	1837372	1862218	31656
1111522	822622	1885827		1938193	1871838	1847289	1880984	1873505	820445			1837385	"	26153
1111523	1883044	811735		"	1883052	1883051	1885878	1885880	"			809673	1857492	"
1111524	820668	1866630		"	816801	826476	1886050	"	816774			"	"	"
1111525	1883044	811735		"	1883052	1883051	1886827	1886828	820445			1840969	1862218	"
1111526	1887814	"		"	"	"	1887816	1887818	"			809673	1857492	"
1111529	827344	1839166		1888023	30111	825429	1845028	1847314	37598	35607	35617	"	"	31656
1111530	1905424	811735		1938193	1889967	"	1905426	1905429	820445			†	829421	"

 
*Shaft and Cam.

†Not supplied by Delco-Remy.

*Use one 1847289 and one 1889999 Support & Cover Locator.

†Gear must be purchased from Oliver; their number H-331.

Delco-Remy
SERVICE PARTS CATALOG

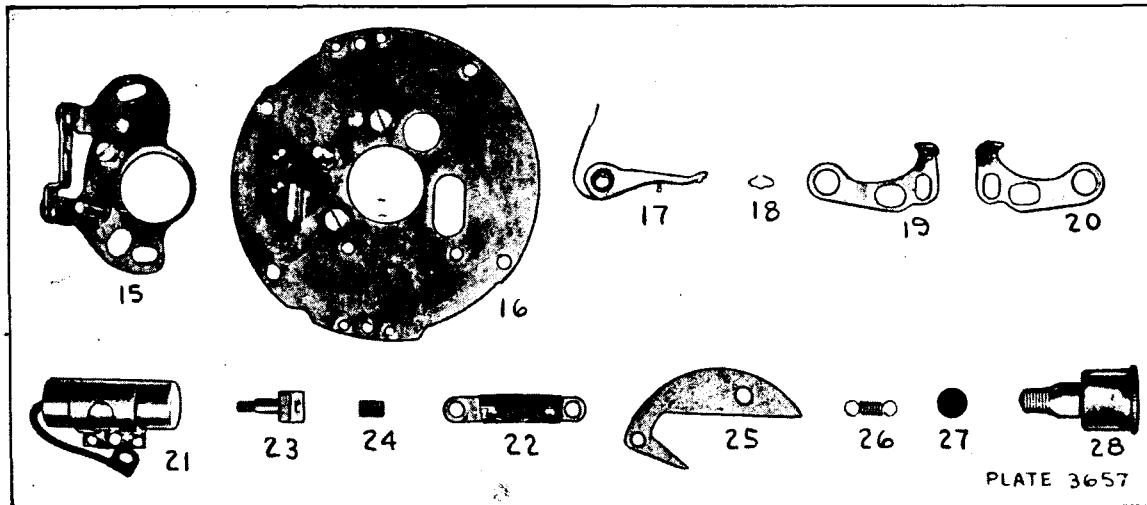

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Breaker Plate Upper	Breaker Plate Lower	Breaker Arm	Breaker Arm Retainer Spring	Contact Point and Support Lower	Contact Point and Support Upper	Condenser	Terminal Connector	Terminal Stud	Terminal Stud Bushing	Weight	Weight Spring	Felt Wick in Cam	Grease Cup
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
1111501	1837359	1837356	813238	813245	1845785	1849877	1908846	825454	825456	825457	820528	1844399	819639	1955293
1111502	"	1853425	"	"	"	"	1869707	"	1854115	1854117	"	"	"	"
1111503	"	806485	812722	802811	812720	"	"	"	"	"	"	"	"	"
1111504	"	"	812722	"	"	"	"	"	"	"	"	"	"	"
1111505	"	821150	813238	813245	1848038	"	1900272	"	132776	821160	1845036	1889680	1963555	"
1111506	"	"	†	"	†	"	"	"	"	"	1841643	1883121	"	"
1111507	"	826474	□	"	1847341	"	1928111	"	820987	821033	823595	1883779	"	"
1111508	"	1874935	†	"	1848038	"	1858140	"	1847647	1878405	1921271	817909	"	"
1111509	"	826474	"	"	1847341	"	1928111	"	820987	821033	823595	1883779	"	"
1111510	"	1874935	†	"	1848038	"	1858140	"	1847647	1878405	1921271	817909	"	"
1111511	"	826474	□	"	1847341	"	1928111	"	820987	821033	1842943	"	"	"
1111512	"	"	□	"	"	"	"	"	"	"	"	"	"	"
1111513	"	821150	†	"	813245	1848038	1900272	"	132776	821160	1841312	1844399	1963555	"
1111514	1837359	1837356	"	"	1845785	1849877	1869705	825454	825456	825457	1845036	1883899	819639	"
1111515	"	821150	†	"	1848038	"	1900272	"	132776	821160	"	1885888	1963555	"
1111516	"	"	†	"	†	"	"	"	132776	"	1841643	"	"	"
1111517	1837359	1837356	"	"	1845785	1849877	1908846	825454	825456	825457	1845036	"	819639	"
1111518	"	821150	†	"	1848038	"	1900272	"	132776	821160	"	"	1963555	"
1111519	1837359	1853425	"	"	1845785	1849877	1869707	825454	1854115	1854117	"	1883899	819639	"
1111520	"	821150	†	"	1848038	"	1900272	"	132776	821160	"	"	"	"
1111521	1837359	1837356	"	"	1845785	1849877	1908846	825454	825456	825457	1845036	1883899	819639	"
1111522	"	821150	†	"	1848038	"	1928111	"	132776	821160	"	"	1963555	"
1111523	"	1847643	1881394	"	1882964	"	"	"	1916806	1878405	1921271	1883874	"	"
1111524	"	826474	□	813238	1847341	"	"	"	820987	821033	"	"	"	1955293
1111525	"	1847643	1881394	"	1882964	"	"	"	1916806	1878405	1880902	1884526	1963555	"
1111526	"	"	"	"	"	"	"	"	"	"	1881371	1887743	"	1955293
1111529	1838997	1838998	813238	813245	1845785	1849877	1908846	825454	825456	825457	1845036	1886557	819639	"
1111530	"	1847643	†	"	1848038	"	1928111	"	1847647	1878405	820528	1901737	1963555	"

○ 825454 is 1 3/4" long—1836907 is 2 3/4" long.

× 825454 is 1 3/4" long—1844265 is 5 3/4" long.

†Contact set 1855720 or Pre-Assembled 1944374.

□Contact set 1855520.

Revised to November 1, 1966

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Lever Lead Screw.....	456413	1111504
Lock Washer—Breaker Lever Spring Attaching Stud.....	453844	1111501-2-14-17-19-21-29
Lock Washer—Breaker Plate Attaching Screw.....	453844	1111501-2-8-14-15-16-17-18-19-21-29
Lock Washer—Breaker Plate Stud Nut.....	456413	1111503
Lock Washer—Breaker Plate Stud Nut.....	1914816	1111504
Lock Washer—Breaker Plate Support Screw.....	453844	1111505-6-7-9-10-11-12-13-15-17-18-20-22-23-24-25-26-30
Lock Washer—Condenser Attaching Screw.....	453844	1111501-2-5-6-8-10-13-14-15-16-17-18-19-21-22-23-25-26-29-30
Lock Washer—Condenser Attaching Screw.....	453435	1111507-9-11-12-24
Lock Washer—Condenser Terminal Nut.....	118869	1111508-10
Lock Washer—Condenser Terminal Nut.....	138530	1111502-19
Lock Washer—Distributor Cap Spring Support Screw.....	453844	1111505-6-7-8-9-10-11-12-13-15-16-18-20-22-23-24-25-26-30
Lock Washer—Low Tension Lead Nut.....	453435	1111503
Lock Washer—Low Tension Lead Nut.....	1962276	1111504
Lock Washer—Terminal Screw.....	453844	1111515-16-22-30
Lock Washer—Terminal Stud Nut—Inside.....	453435	1111501-2-14-17-19-21-29
Lock Washer—Terminal Stud Nut.....	453844	1111507-11-12-20-24
Lock Washer—Terminal Clamp Screw.....	453844	1111501-2-9-14-17-19-21-29
Lock Washer—Terminal Clamp Screw—Outside.....	453844	1111505-6-8-10-13-18-23-25-26
Lock Washer—Timing Lever Attaching Nut.....	1962276	1111504
Lock Washer—Timing Lever Attaching Nut.....	456413	1111503
Lock Washer—Weight Hold Down Nut.....	453435	1111526
Lock Washer—Weight Hold Down Nut (2 hole).....	1885558	1111508-10-23-25-26
NUTS		
Nut—Breaker Lever Spring Screw.....	817363	1111501-2-14-17-19-21-29
Nut—Breaker Lever Spring Stud.....	817363	1111501-2-14-17-19-21-29
Nut—Breaker Plate Stud.....	28484	1111503
Nut—Cam Lock.....	832517	1111503-4
Nut—Condenser Terminal.....	817363	1111502-19
Nut—Contact Screw Lock.....	802806	1111503-4
Nut—Low Tension Lead.....	833646	1111503-4
Nut—Terminal Stud—Inside.....	817363	1111508-10-23-25-26-30
Nut—Terminal Stud—Inside.....	5024654	1111501-2-14-17-19-21-29
Nut—Terminal Stud.....	120622	1111507-8-9-10-11-12-23-24-25-26-30
Nut—Timing Lever Attaching.....	28484	1111503
Nut—Timing Lever Attaching.....	114524	1111504
Nut—Weight Hold Down Plate (8-32).....	120622	1111508-10
Nut—Weight Hold Down Plate (10-32).....	1923540	1111508-10-23-25-26
SCREWS		
Screw—Breaker Lever Lead—To Plate.....	453978	1111504
Screw—Breaker Lever Spring Attaching.....	1920777	1111501-2-5-6-13-14-15-16-17-18-19-20-21-29
Screw—Breaker Plate Adjusting—Upper.....	1914916	1111501-2-14-17-19-21-29
Screw—Breaker Plate Attaching—Lower.....	453418	1111501-2-14-17-19-21-29
Screw—Breaker Plate Support.....	453418	1111505-6-7-8-9-10-11-12-13-15-16-18-20-22-24-30
Screw—Breaker Plate Support.....	9417096	1111523-25-26
Screw—Condenser Attaching.....	116198	1111501-14-17-21-29
Screw—Condenser Attaching.....	1904234	1111508-10
Screw—Condenser Attaching.....	453418	1111502-19
Screw—Condenser Attaching.....	453341	1111507-9-11-12-24
Screw—Condenser Attaching.....	453304	1111505-6-13-15-16-17-18-20-22-23-25-26-30
Screw—Condenser Terminal.....	1904234	1111508-10
Screw—Contact Adjusting.....	1914916	1111501-2-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19-20-21-22-23-24-25-26-29-30
Screw—Distributor Cap Spring Support.....	453461	1111505-6-8-10-13-15-16-20-22-30
Screw—Distributor Cap Spring Support.....	453418	1111507-9-11-12-24
Screw—Distributor Cap Spring Support.....	1904614	1111523-25-26
Screw—Rotor Spring Attaching.....	454329	1111503
Screw—Terminal Clamp.....	453461	111150114-17-19-21-29
Screw—Terminal Clamp.....	455957	1111502
WASHERS		
Washer—Breaker Lever Lead Screw—Plain.....	1918848	1111504
Washer—Breaker Lever Retainer Spring.....	802808	1111503-4
Washer—Breaker Lever Spring Screw.....	810794	1111501-2-5-6-13-14-15-16-17-18-19-20-21-29
Washer—Breaker Lever Spring Attaching Stud Ins.....	1837224	1111501-2-14-17-19-21-29


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
WASHERS—Continued		
Washer—Breaker Lever Spring Attaching Stud Ins. Bushing.....	1837223	1111501-2-14-17-19-21-29
Washer—Breaker Lever Spring Attaching Stud—Plain.....	810794	1111501-2-14-19-21-29
Washer—Breaker Plate Stud Nut—Plain.....	805161	1111503-4
Washer—Breaker Plate Stud—Spring.....	805127	1111503-4
Washer—Condenser Terminal Nut Plain ($\frac{1}{4}$ " thk.).....	813767	1111502-19
Washer—Condenser Terminal Nut Plain ($\frac{3}{4}$ " thk.).....	826319	1111502-19
Washer—Distributor Adaptor Sleeve Retainer.....	1926782	1111508-10-30
Washer—Shim (.005 thk.).....	810074	1111501-7-8-9-10-11-12-13-14-16-17-18-20- 21-22-23-24-25-26-29-30
Washer—Shim (.010 thk.).....	1912129	1111501-7-8-9-10-11-12-13-14-16-17-18-20- 21-22-23-24-25-26-29-30
Washer—Space—Under Coupling or Gear.....	811912	1111501-7-9-11-12-13-14-15-16-17-18-20- 21-22-23-24-25-26-29
Washer—Space—Below Weight Plate or Cam.....	811912	1111501-2-5-6-7-8-9-10-11-13-14-15-16-17- 18-19-20-21-22-23-24-25-26-29-30
Washer—Space—Under Gear.....	1905382	1111503-4
Washer—Space (Main Shaft).....	811857	1111503-4
Washer—Terminal Screw Ins.—Inside.....	820988	1111507-9-11-12-24
Washer—Terminal Screw Ins.—Outside.....	1882247	1111507-9-10-11-12-23-24-25-26-30
Washer—Terminal Stud Nut—Plain—Inside.....	1902988	1111501-2-17-19-21-29
Washer—Terminal Stud Nut—Plain—Inside.....	810794	1111508-10-23-25-26-30
Washer—Terminal Stud Ins.—Inside.....	825458	1111501-2-14-17-19-21-29
Washer—Terminal Stud Plain—Outside.....	1905125	1111501-2-14-17-19-21-29
Washer—Terminal Stud—Outside.....	815540	1111508-10-14-17-23-25-26-30
Washer—Terminal Stud Plain—Outside.....	815540	1111507-9-11-12-24
Washer—Terminal Stud Ins.—Outside.....	20076	1111501-2-14-17-19-29
Washer—Terminal Stud Ins.—Outside.....	816806	1111508-23
Washer—Terminal Stud Ins. Bushing.....	23915	1111523-25-26
Washer—Timing Lever Spring.....	805686	1111503-4
Washer—Weight.....	807295	1111501-5-6-7-8-9-10-11-13-14-15-16-17- 18-21-23-25-26
MISCELLANEOUS		
Advance ARM Assembly.....	1874810	1111508-10
Advance ARM Assembly (Shipped separate).....	1843580	1111530
Breaker Lever Spring INSULATION STRIP.....	820991	1111507-9-11-12-24
Breather PIPE—Curved.....	1874812	1111508-10
Breather PIPE—Straight.....	1874755	1111508-10
Breather PIPE.....	1860880	1111505-6
COLLAR—Under Gear.....	1841429	1111503
COLLAR—Space—Weight Hold Down Plate.....	1871207	1111525
Cork or Felt SEAL—Under Rotor.....	1883056	1111523-25-26-30
Distributor Cap Spring PIN.....	29802	1111501-2-14-17-19-21-29
Distributor Cap Spring PIN.....	834142	1111503-4
Distributor Cap Spring Support RIVET.....	111881	1111501-14-17-21
Distributor Cap Spring Support RIVET.....	111892	1111502-19-29
Distributor Housing BUSHING.....	1874814	1111508-10
Distributor Housing BUSHING.....	1883226	1111523-25
Distributor Housing COVER.....	1883054	1111523-25-26
Distributor Housing COVER.....	1900119	1111530
Distributor Housing Cover GASKET.....	1883055	1111523-25-26
Distributor Housing Cover GASKET.....	1889966	1111530
Distributor Housing Cover SPRING.....	816801	1111523-25-26
LEAD—Condenser.....	1850015	1111502-19
LEAD—Condenser.....	1871681	1111508-10
LEAD—Low Tension.....	805044	1111503
LEAD—Low Tension.....	834378	1111504
Name PLATE.....	819720	All
Name Plate PIN.....	114655	All
PIN—In Cam.....	832467	1111503
PIN—Distributor Cap Locating.....	833001	1111503-4
PLATE—Weight Hold Down.....	1885108	1111508-10
PLATE—Weight Hold Down.....	1885557	1111523
PLATE—Weight Hold Down.....	1886151	1111525
PLATE—Weight Hold Down.....	1886136	1111526
PLUG—Pipe.....	125947	1111524
RETAINER—Felt Seal.....	1913643	1111530
Rubber NIPPLE—Shipped separate.....	120095	1111508-10
SLEEVE—Distributor Adaptor.....	1874950	1111508
SLEEVE—Distributor Adaptor.....	1841005	1111510
SLEEVE—Distributor Adaptor.....	*	1111530
SPRING—Breaker Lever.....	812341	1111503-4
STUD—Breaker Lever Spring.....	1837225	1111501-2-14-17-19-21-29
Timing LEVER.....	810224	1111503
Timing LEVER.....	812709	1111504
Timing Lever Range PLATE.....	805715	1111503-4

*Must be purchased from Oliver; their number H-1341.

 Parts not listed in this Catalog will not be sold separately.

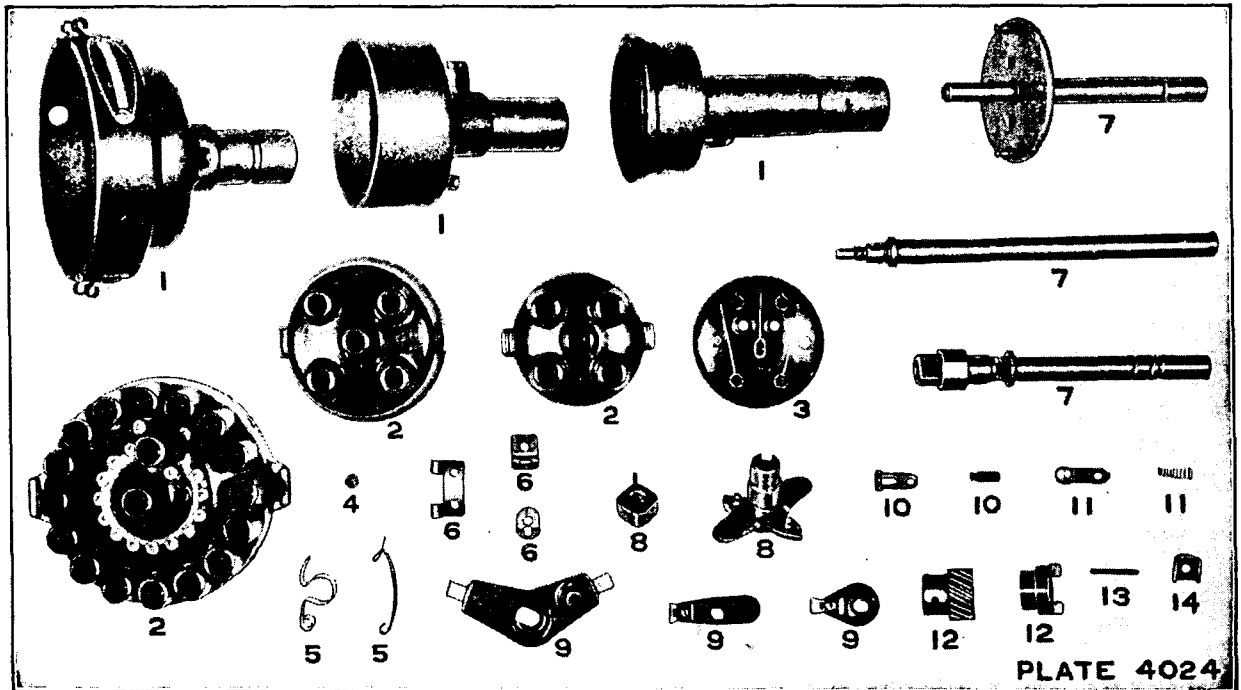

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor Housing	Distributor Cap	Distributor Cap Cover	Distributor Cap Carbon Button	Distributor Cap Spring	Distributor Cap Spring Support	Main Shaft	Cam Assembly	Rotor Assembly	Rotor Brush or Segment	Rotor Spring	Gear, Collar or Coupling	Gear or Coupling Pin	Terminal Clamp
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1111531	1905622	38324		1888023	30111	825429	1882510	1845027	1840610	35607	35617	†	†	31656
1111532	1906313	811735		1938193	1889967	*	1906316	1906315	820445			1841407	1862218	
1111533	827344	825430		1888023	30111	825429	1838671	828505	16781	35607	35617	†	†	31656
1111534	1901199	811735		1938193	1889967	*	1906725	1906315	820445			1861373	1861374	
1111535	820668	1866630		"	816801	826476	*1866627		816774			821865	1862218	
1111536	1901199	811735		"	1889967	*	1906725	1906315	820445			1861655	1861374	
1111538	1882764	"		"	1871838	1847289	1908700	1908701	"			1952953	1862218	
1111539	1909280	1872245	1869238	1888023	30111	825429	1909286	1909284	1887998			1929088	829421	31656
1111540	1910202	1841818		1888023	1900188	1885324	1910205	1910206	1912686	35607	35617	1910210	"	"
1111541	1911918	1842714		806923	1889967	*	*1911814	*1911927	1842718	1842721	1842723	1909666	1908031	26153
1111542	1911041	811735		1938193	1871838	1847289	*1911043		1905590			821865	1862218	
1111543	1911248	1842714		806923	1889967	*	*1911250		"			†	†	
1111544	"	1867722		1938193	"	*	*1911253		"			809673	829421	
1111545	1911506	1842510		1888023	1900188	1885324	1911509	1911511	1911513	35607	35617	†	†	31656
1111546	1885550	1885569		"		1885554	1885553	1885553	1908494			1885574	1908031	
1111547	1885586	1885606		1888023			1885591	1885589	1885596	35607	35617	"	"	
1111548	"	"		"			"	"	"	"	"	1902407	829421	
1111549	"	"		"			"	"	"	"	"	1911599	1908031	
1111550	1911918	1842714		806923	1889967	*	*1911925	*1911927	1842718	1842721	1842723	1909665	"	26153
1111551	1909280	1872245	1869238	1888023	30111	825429	1912195	1912196	1887998			1929088	829421	31656
1111552	1912332	1867722		806923	1871838	1847289	1912335	1912336	1909590			1902407	"	
1111553	"	"		"	"	"	1912338	1885677	"			"	"	
*1111555	1905326	*1900591		1888023			1873690	1889723	*1889718	35607	35617	1915307	1908031	
1111557	1916879	1841818		"	1900188	1885324	1916882	1916885	1916377	"	"	821865	1862218	31656
1111558	For parts see Distributor—Group 94-A													
1111559	1917900	811735		1938193	1889967	*	1917903	1917905	1917907			821865	1862218	1914144
1111566	1866766	1853429		1888023	30111	825429	1920519	1954479	1887823	35607	35617	1911599	1909031	31656
1111567	1885586	1885606		"			1920495	1920496	1885596	"	"	"	"	
1111579	1885550	1885569		1938193			1924202	1885553	1908494			†	†	

*Shaft & Cam.

†Not supplied by Delco-Remy.

*Use one 1847289 Support and one 1889999 Support & Cover Locator.

*Model No. does not include Cap & Rotor, which must be ordered separate.

*See Miscellaneous Section for Cam Shaft.

*See Miscellaneous Section for Upper Housing.