 


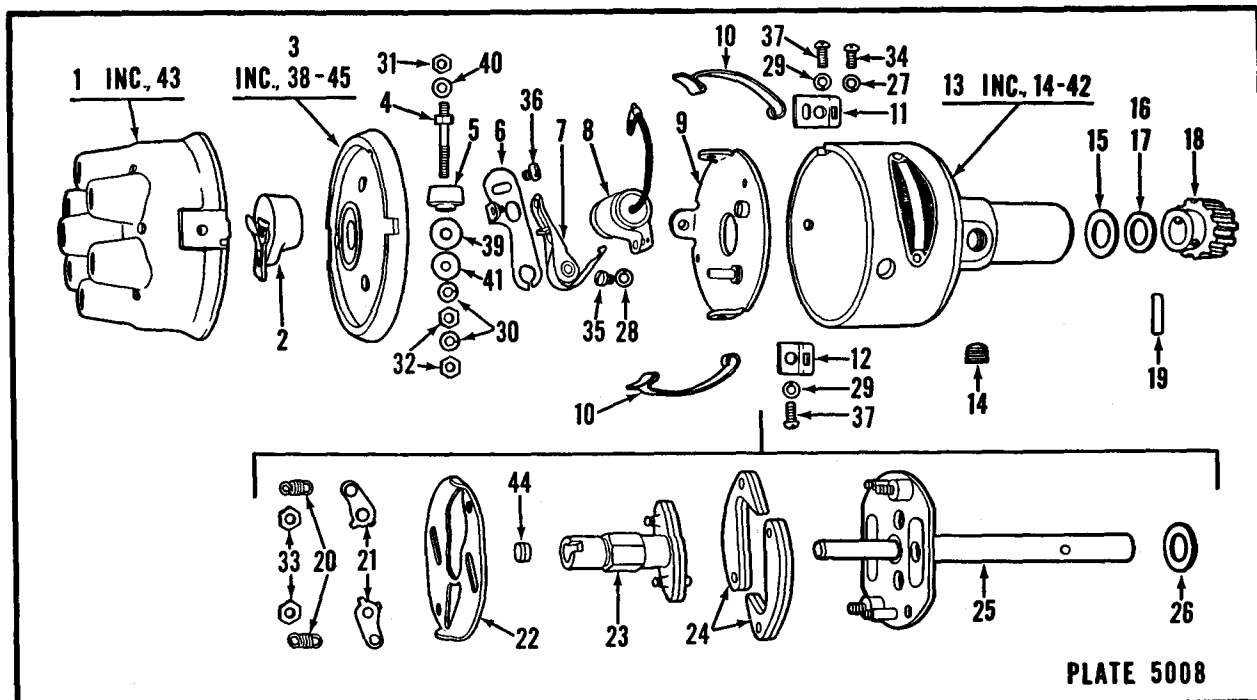


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover Housing	Screw or Stud Terminal	Bushing Ins.	Contact Point and Support	Breaker Lever	Con- denser	Plate Breaker	Spring Cap	Support Cap Spring & Cover Locator	Support Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111582	1885569	1908494		1885566	1885567	*1882964	*1881394	1910225	1900272				1885550
.....													
.....													
.....													

*Contact Set No. 1882965.

 Delco-Remy
SERVICE PARTS CATALOG

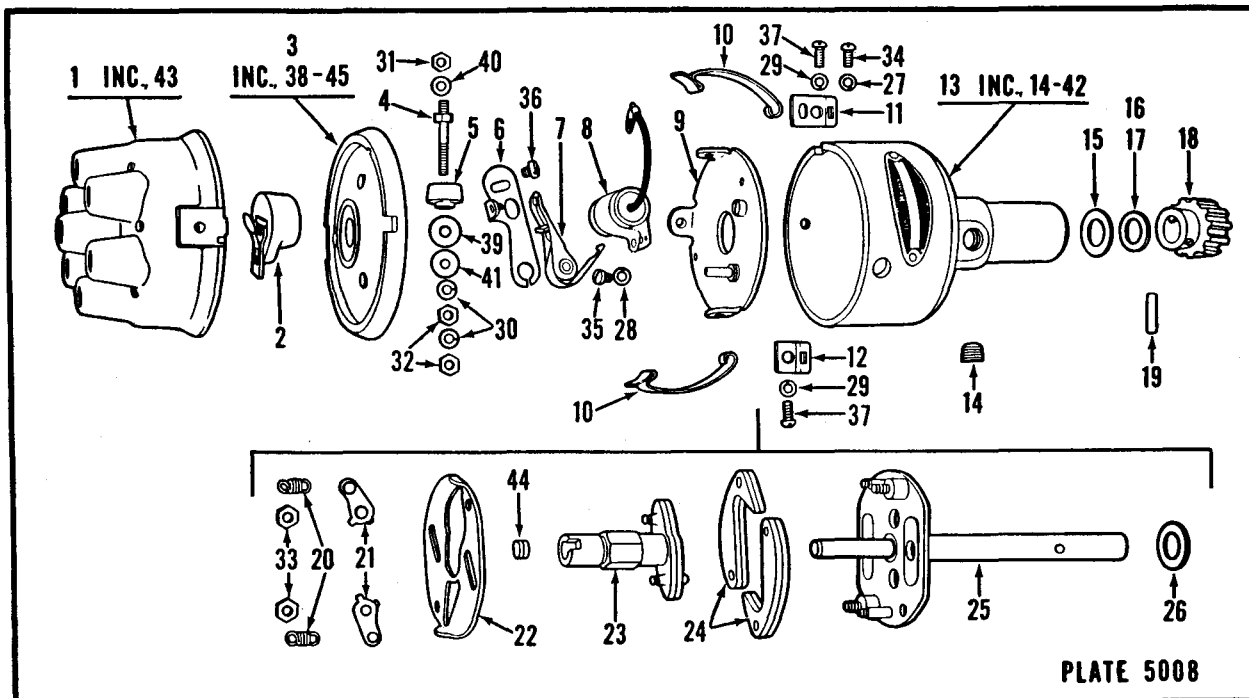

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar Coupling or Gear	Pin	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Washer — Space Under Weight Plate
	14	15	16	17	18	19	20	21	22	23	24	25	26
1111582	125947	811912	810074	1912129	*	*	1910530	1885558	1885557	1925390	1880902	1925393	811912


*Coupling or Gear & Pin not furnished by Delco-Remy.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
—	Lock Washer—Breaker Lever Spring Screw.....	453844	1111582
—	Lock Washer—Breaker Plate Attaching Screw.....	453844	1111582
—	Lock Washer—Cam Lubricator Screw.....	453844	1111582
28	Lock Washer—Condenser Attaching Screw.....	453844	1111582
—	Lock Washer—Lead Attaching Screw.....	453435	1111582
30	Lock Washer—Terminal Stud.....	453435	1111582
NUTS			
31	Nut—Terminal Stud—Inside.....	453433	1111582
32	Nut—Terminal Stud—Outside.....	453433	1111582
33	Nut—Weight Hold Down Plate Attaching.....	1923540	1111582
SCREWS			
—	Screw—Breaker Lever Spring Attaching.....	813511	1111582
—	Screw—Breaker Plate Attaching.....	453461	1111582
—	Screw—Cam Lubricator Attaching.....	453304	1111582
35	Screw—Condenser Attaching.....	453461	1111582
36	Screw—Contact Attaching.....	1914916	1111582
37	Screw—Distributor Cap Spring Support.....	453461	1111582
—	Screw—Lead Attaching to Breaker Plate.....	107722	1111582
WASHERS			
—	Washer—Breaker Lever Spring Screw.....	810794	1111582
—	Washer—Insul.—Terminal Stud.....	816936	1111582
—	Washer—Insul.—High Tension Terminal.....	1868766	1111582
—	Washer—Plain—Terminal Stud—Outside.....	1922142	1111582
MISCELLANEOUS			
—	BAND—Distributor Cap Clamp.....	1908500	1111582
42	BUSHING—Distributor Housing.....	1909003	1111582
—	BUSHING—High Tension Terminal.....	1885546	1111582
—	BUSHING—Steel—Terminal Stud.....	1885565	1111582
43	BUTTON—Carbon—In Cap (1/4 dia.).....	1938193	1111582
44	Felt WICK—In Cam.....	1963555	1111582
—	GASKET—Distributor Cap.....	1908499	1111582
—	GASKET—Terminal Stud.....	1912499	1111582
—	GASKET—High Tension Terminal.....	1911965	1111582
—	LEAD—Terminal Connector.....	1861318	1111582
—	LUBRICATOR—Cam.....	1885562	1111582
—	NIPPLE—Low Tension Terminal.....	1885545	1111582
—	SPRING—High Tension Terminal.....	1885547	1111582

 Revised to March 1, 1968

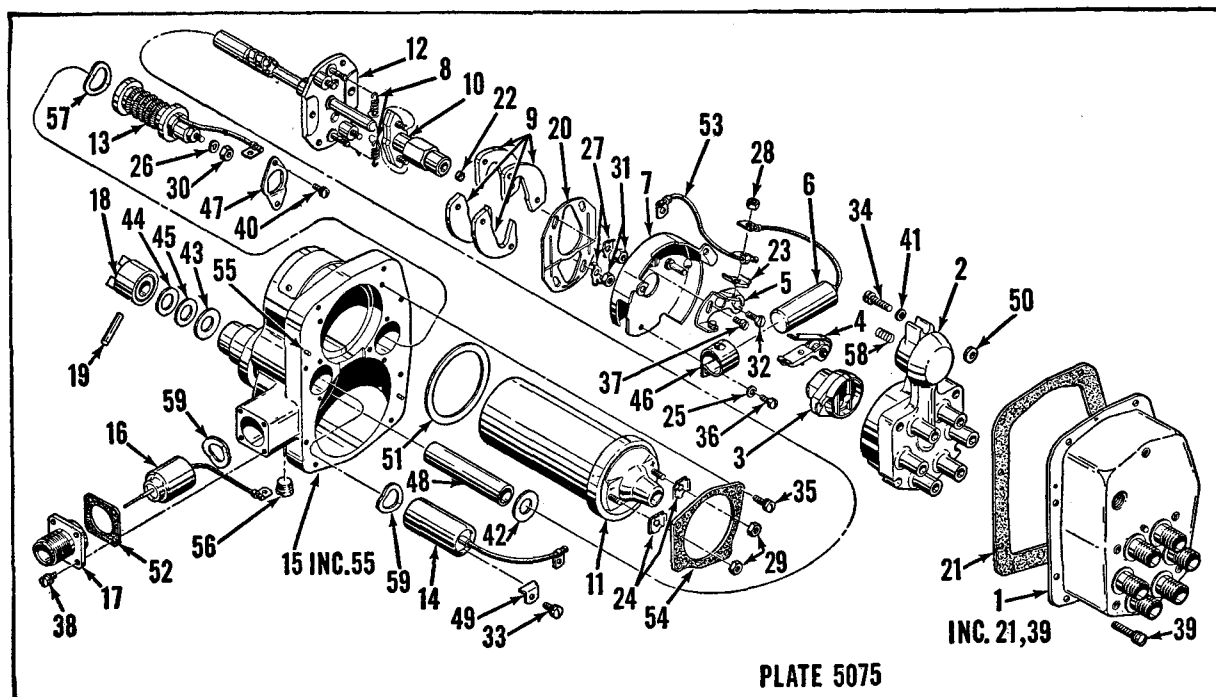

Illustrations are of Typical Parts only. For parts not numbered, or illustrated see Minor Parts Section.

Model No.	Cover Cap	Cap	Rotor	Breaker Lever	Contact Support	Con- denser.	Plate Breaker	Spring — Weight	Weight	Cam Assem.	Coil
	1	2	3	4	5	6	7	8	9	10	11
1111617.....	□ 1915961	1915950	1915959	*1905344	*1915969	1915976	x1930514	1903430	1881371	1931076	1915992
1111618.....	□ " "	" "	" "	* " "	* " "	" "	x " "	1903101	1915947	1915943	" "
1111628.....	△ 1925442	1925443	" "	* " "	* " "	" "	x " "	1909189	1881371	1935172	" "
1111629.....	□ 1915961	1915950	" "	* " "	* " "	" "	x " "	1903693	" "	1922343	" "
1111634.....	○ 1924118	1924121	" "	* " "	* " "	" "	x " "	1919928	1915947	1924123	" "
1111635.....	○ " "	" "	" "	* " "	* " "	" "	x " "	1918327	" "	" "	" "
1111642.....	□ 1915961	1915950	" "	* " "	* " "	" "	x " "	1903430	1881371	1931076	" "
1111652.....	○ 1924118	1924121	" "	* " "	* " "	" "	x " "	1918327	1915947	1924123	" "
1111657.....	□ 1915961	1915950	" "	* " "	* " "	" "	x " "	1903693	1881371	1920974	" "
1111672.....	□ " "	" "	" "	* " "	* " "	" "	x " "	1939381	" "	1952870	" "
1111673.....	□ " "	" "	" "	* " "	* " "	" "	x " "	1903693	" "	1922343	" "
1111678.....	□ " "	" "	" "	* " "	* " "	" "	x " "	" "	" "	1952870	" "
1111679.....	□ " "	" "	" "	* " "	* " "	" "	x " "	1958469	1915947	1922507	" "
1111685.....	□ " "	" "	" "	* " "	* " "	" "	x " "	1952872	1881371	1952870	" "
1111686.....	□ " "	" "	" "	* " "	* " "	" "	x " "	1958469	1915947	1922507	" "
1111690.....	*1926503	1926505	1926715	* " "	* " "	" "	1931118	1928420	1881371	1928440	" "

- * Contact Set No. 1916772.
- Cap & Cover Assem. is 1916460.
- Cap & Cover Assem. is 1924117.
- △ Cap & Cover Assem. is 1925441.
- x Breaker Plate Assem. is 1915967.
- # Cap and Cover Assem. is 1962502.
- † Breaker Plate Assem. is 1926515.

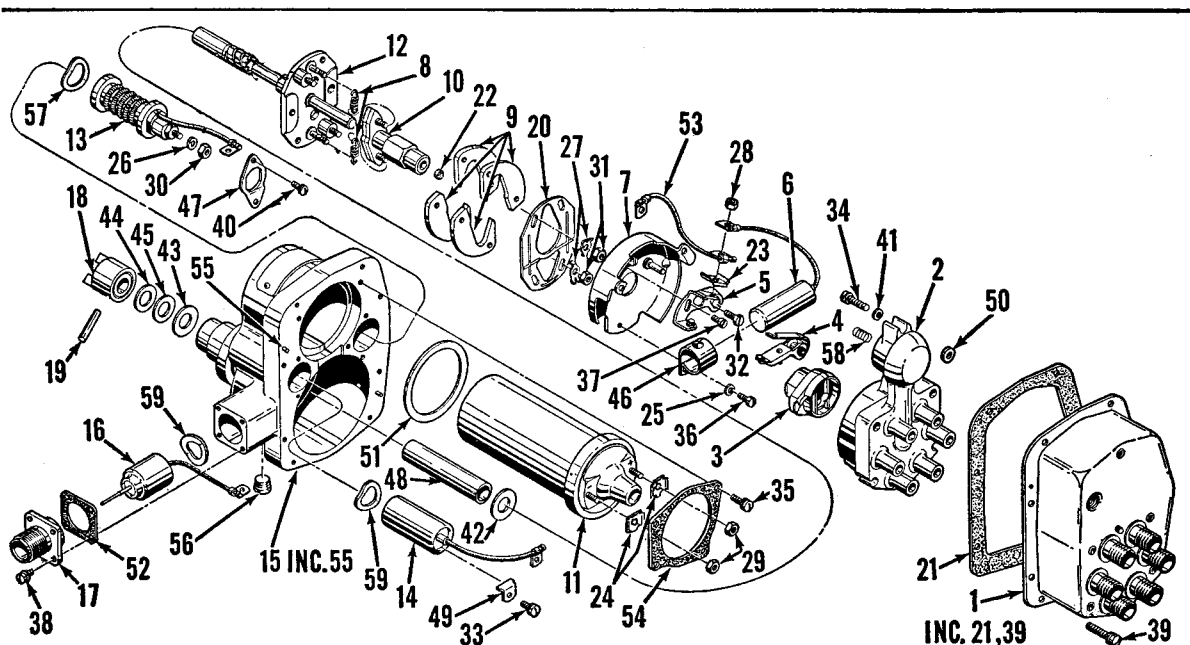 


PLATE 5075

Illustrations are of Typical Parts only. For parts not numbered, or illustrated see Minor Parts Section.

Model No.	Shaft & Plate	Resistor	Con-denser	Housing	Con-denser	Coupling Terminal	Coupling or Gear	Pin	Plate Hold Down	Gasket Cover	Wick
	12	13	14	15	16	17	18	19	20	21	22
1111617.....	1932536	1919338	1916025	1932486	1915978	1916620	1920794	1922269	1915007	1916005	1963555
1111618.....	1923310	1919607	"	"	"	"	"	"	"	"	"
1111628.....	1935171	"	"	1935269	"	"	1909273	1921059	"	"	"
1111629.....	1935178	"	"	"	"	"	"	"	"	"	"
1111634.....	1924109	"	"	"	"	"	1914933	"	"	"	"
1111635.....	1924112	"	"	"	"	"	"	"	"	"	"
1111642.....	1932536	1915973	"	1932486	"	"	1920794	1922269	"	"	"
1111652.....	1924112	1919338	"	1935269	"	"	1914933	1921059	"	"	"
1111657.....	1919065	"	"	1915940	"	"	1915988	1916004	"	"	"
1111672.....	1952871	"	"	"	"	"	"	"	"	"	"
1111673.....	1915945	"	"	"	"	"	"	"	"	"	"
1111678.....	1958473	"	"	"	"	"	"	"	"	"	"
1111679.....	1958470	"	"	"	"	"	"	"	"	"	"
1111685.....	1958473	"	"	"	"	"	"	"	"	"	"
1111686.....	1958470	"	"	"	"	"	"	"	"	"	"
1111690.....	1928438	1919338	1916625	1926500	1915978	1916620	1926520	1921531	"	1926509	"

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Breaker Lever Attaching -----	1915996	All
24	Lock Washer—Coil Terminal -----	1914615	All
25	Lock Washer—Condenser Attaching Screw -----	453844	All
26	Lock Washer—Resistor Lead Attaching Nut -----	453844	All
—	Lock Washer—Terminal Screw -----	453435	1111685-6
—	Lock Washer—Term. Support Washer—Attaching -----	456413	1111685-6
27	Lock Washer—Weight Hold Down Nut -----	1915009	All
NUTS			
28	Nut—Breaker Lever Attaching -----	1913199	All
29	Nut—Coil Terminal -----	453284	All
30	Nut—Resistor Lead Attaching -----	453996	All
—	Nut—Terminal -----	453284	1111685-6
31	Nut—Weight Hold Down Plate -----	1924828	All
SCREWS			
32	Screw—Breaker Lever Attaching -----	455957	All
—	Screw & Lockwasher—Breaker Plate Assem. -----	453696	1111673-90
33	Screw (& Lock Washer)—Condenser Clamp Attach. -----	453696	All
34	Screw (& Lock Washer)—Cap Attaching -----	453463	All
35	Screw (& Lock Washer)—Coil Hold Down Plate -----	453661	All
36	Screw—Condenser Attaching -----	453304	All
37	Screw—Contact Adjusting -----	1914916	All
38	Screw (& Lock Washer)—Coupling Attaching -----	453698	All
39	Screw (& Lock Washer)—Cover Attaching -----	274937	All
40	Screw (& Lock Washer)—Resistor Bracket Attach. -----	453696	All
40	Screw—Resistor Bracket Attaching -----	453461	1111673
—	Screw—Terminal -----	1960248	1111685-6
—	Screw—Terminal Support Washer Attaching -----	454154	1111685-6
WASHERS			
—	Washer—Insul. Terminal Screw -----	1901808	1111685-6
41	Washer—Plain—Cap Attaching Screw -----	807295	All
—	Washer—Plain—Terminal Screw -----	1856056	1111685-6
42	Washer—Space—Under Weight Plate -----	811912	All
43	Washer—Space—Under Coupling -----	811912	All
44	Washer—Shim (.005 thick) -----	1912128	All
45	Washer—Shim (.010 thick) -----	1912129	All
—	Washer—Terminal Support ($\frac{1}{8}$ thk.—Round Holes) -----	1961902	1111685-6
—	Washer—Term. Support ($\frac{1}{8}$ thk. Elongated Holes) --	1961903	1111685-6
—	Washer—Term. Support ($\frac{3}{8}$ thk. Elongated Holes) --	1961904	1111685-6
—	Washer—Term. ($\frac{3}{8}$ thk. Square Holes) -----	1961905	1111685-6
MISCELLANEOUS			
—	BLOCK—Gear Cushion -----	1921529	1111690
46	BRACKET—Condenser -----	1916616	All
46	BRACKET—Resistor Attaching -----	1926517	1111690
47	BRACKET—Resistor Attaching -----	1915998	All
—	BREATHER—Elbow -----	1919341	1111628-9; 34-5; 42; 52-7; 72-8-9; 85-6
48	BUSHING—Housing -----	1909003	All
—	BUTTON—Carbon—In Cap -----	1938193	All
49	CLAMP—Condenser Hold Down -----	1916622	All
—	COLLAR—Shaft -----	1920794	1111690
—	CUSHION—Gear -----	1908029	1111690
—	DIAL—Firing Order -----	1919589	1111617; 29; 42; 72-3-8-9; 85-6
—	DIAL—Firing Order -----	1919590	1111657
—	DIAL—Firing Order -----	1923992	1111634-5; 52
—	DIAL—Firing Order -----	1932943	1111618
—	DIAL—Firing Order -----	1935286	1111628
50	GASKET—Cap Attaching Screw -----	1916006	All
52	GASKET—Under Coupling -----	1916621	All
54	GASKET—Coil Flange -----	1915999	All
—	INSULATOR—Resistor -----	1916501	All
53	LEAD—Condenser -----	1916615	All Except 1111690
53	LEAD—Condenser -----	1926519	1111690
—	LEAD—Tachometer Electric -----	1961897	1111685-6
—	PIN—Collar Attaching -----	1922269	1111690
55	PIN—Dowel—In Housing -----	809062	All
51	PLATE—Coil Hold Down -----	1916000	All Except 1111690
51	PLATE—Coil Hold Down -----	1926518	1111690

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—(Continued)		
56	PLUG—Pipe—In Housing -----	453465	All
—	PLUG—Pipe—Cover -----	453465	All
—	RETAINER—Gear Cushion -----	1921530	1111690
57	SPRING—Under Resistor -----	1916003	All
58	SPRING—Coil Contact -----	1915957	All
59	SPRING—Under Condenser -----	1916003	All

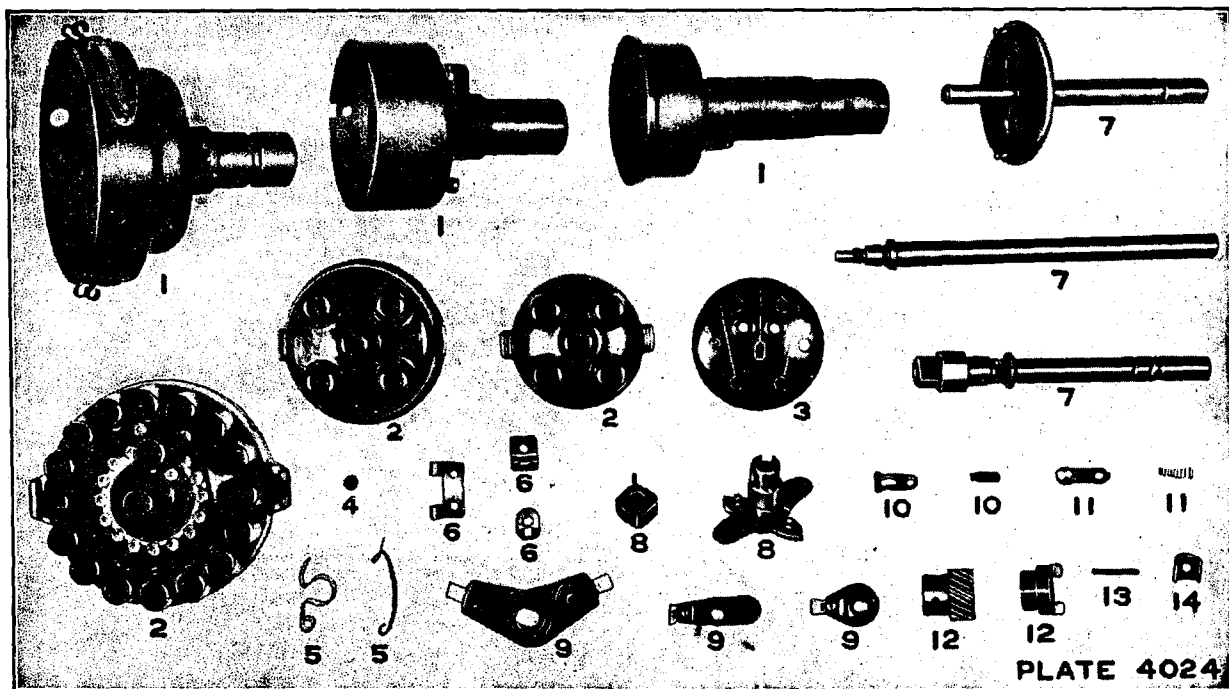 


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Distributor Housing	Distributor Cap	Distributor Cap Cover	Distributor Cap Carbon Button	Distributor Cap Spring	Distributor Cap Spring Support	Main Shaft	Cam Assembly	Rotor Assembly	Rotor Brush or Segment	Rotor Spring	Gear, Collar or Coupling	Gear or Coupling Pin	Terminal Clamp
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1111638	1910202	1841818		1888023	1900188	1885324	1941173	1910206	1912686	35607	35617	1910210	829421	31656
1111644	1885550	1885569		1938193			1943714	1943716	1908494			1885574	1908031	
1111645	1944140	811735		1938193	1871838	1847289	1944143	1929576	820445			†	†	
.....														
.....														

†Not supplied by Delco-Remy.

 Delco-Remy
SERVICE PARTS CATALOG

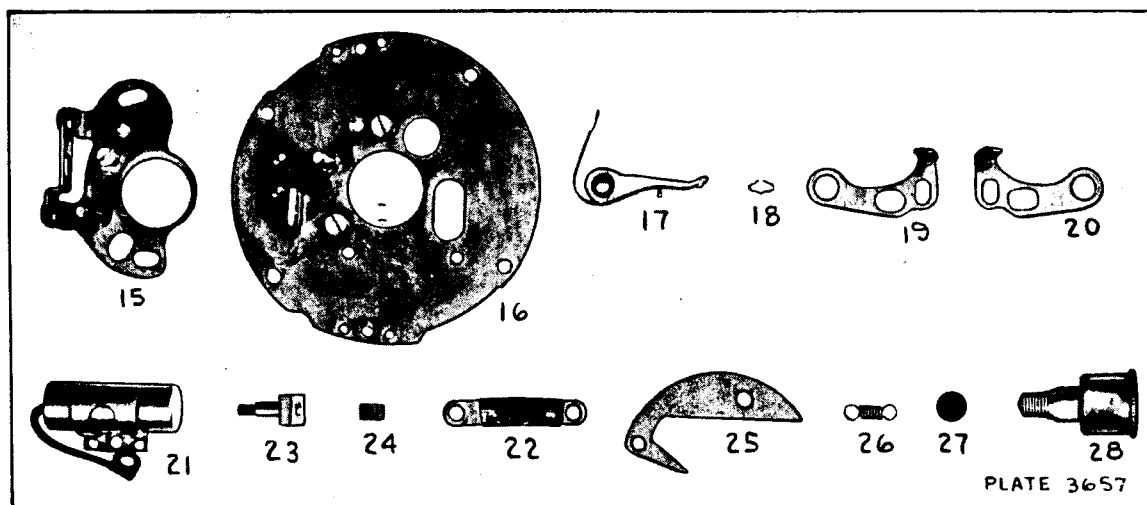

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Break- er Plate Upper	Break- er Plate Lower	Breaker Lever	Breaker Lever Retainer Spring	Contact Point and Support Lower	Contact Point and Support Upper	Con- denser	Terminal Con- nector	Terminal Stud	Term- inal Stud Bushing	Weight	Weight Spring	Wick in Cam or Shaft	Grease Cup
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
1111638	1838997	1844260	813238	813245	1848506	1845785	1900272	825454	825456	825457	1880902	1925251	1963555	
1111644		1885560	*1881394		*1882964	1845785	1900272		1885566	1885567	"	1929319	"	
1111645		1847643	* 813238		*1848038		1900272		1916806	+	"	1910530	819639	
.....														
.....														

*Contact Set #1855720.

•Contact Set #1882965.

*1916805 Bushing (Inside), 1914142 Bushing (Outside).

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Lever Spring Screw & Stud.....	453844	1111644
Lock Washer—Breaker Plate Attaching Screw.....	453844	1111638; 44
Lock Washer—Breaker Plate Support Screw.....	453844	1111645
Lock Washer—Cam Lubricator Attaching Screw.....	453844	1111644
Lock Washer—Cap Spring Support Screw.....	453844	1111638; 44-5
Lock Washer—Condenser Attaching Screw.....	453844	1111638; 45
Lock Washer—Lead Attaching Screw—To Breaker Plate.....	453435	1111644
Lock Washer—Terminal Stud.....	453435	1111638; 44
Lock Washer—Terminal Clamp Screw.....	453844	1111638
Lock Washer—Weight Hold Down Plate Nut.....	1885558	1111638; 44-5
NUTS		
Nut—Breaker Lever Spring Screw.....	817363	1111638
Nut—Terminal Stud—Inside.....	817363	1111645
Nut—Terminal Stud—Inside.....	5024654	1111638
Nut—Terminal Stud.....	120622	1111645
Nut—Terminal Stud.....	453433	1111644
Nut—Weight Hold Down Plate.....	1923540	1111638; 44-5
SCREWS		
Screw—Breaker Lever Spring Attaching.....	1920777	1111638; 44
Screw—Breaker Plate Adjusting—Upper.....	1914916	1111638
Screw—Breaker Plate Attaching—Lower.....	453418	1111638
Screw—Breaker Plate Attaching—Lower.....	453461	1111644
Screw—Breaker Plate Support.....	453418	1111644
Screw—Cam Lubricator Attaching.....	453304	1111638
Screw—Cap Spring Support.....	453461	1111645
Screw—Cap Spring Support.....	453418	1111638
Screw—Condenser Attaching.....	453304	1111638; 44
Screw—Contact Adjusting.....	1914916	1111638; 44-5
Screw—Lead Attaching—To Breaker Plate.....	107722	1111644
Screw—Terminal Clamp.....	453461	1111638
WASHERS		
Washer—Breaker Lever Spring Screw & Stud.....	810794	1111638; 44
Washer—Breaker Lever Spring Attaching Stud Ins.....	1837224	1111638
Washer—Breaker Lever Spring Attaching Stud. Ins. Bushing.....	1837223	1111638
Washer—Insulation—High Tension Terminal.....	1868766	1111644
Washer—Insulation—Terminal Stud.....	816936	1111644
Washer—Plain—Terminal Stud—Inside.....	1904376	1111645
Washer—Plain—Terminal Stud—Outside.....	1914741	1111644
Washer—Shim (.005 thk.).....	810074	1111638; 44-5
Washer—Shim (.010 thk.).....	1912129	1111638; 44-5
Washer—Space—Below Weight Plate or Cam.....	811912	1111638; 44-5
Washer—Space—Under Collar, Coupling or Gear.....	811912	1111638; 44-5
Washer—Terminal Stud Nut—Plain—Inside.....	1913784	1111638
Washer—Terminal Stud—Ins.—Inside.....	825458	1111638
Washer—Terminal Stud—Plain—Outside.....	1905125	1111638
Washer—Terminal Stud—Ins.—Outside.....	20076	1111638
MISCELLANEOUS		
BAND—Distributor Cap Clamp.....	1908500	1111644
BUSHING—Distributor Housing.....	1909003	1111638; 44-5
BUSHING—High Tension Terminal.....	1885546	1111644
BUSHING—Ins. Terminal Stud—Inside.....	1916805	1111645
BUSHING—Ins. Terminal Stud—Outside.....	1914142	1111645
BUSHING—Steel—Terminal Stud.....	1885565	1111644
CLIP—Terminal Stud—Outside.....	1914144	1111645
GASKET—Distributor Cap.....	1908499	1111644
GASKET—High Tension Terminal.....	1911965	1111644
GASKET—Terminal Stud.....	1912499	1111644
LEAD—Terminal Connector.....	1861318	1111644
LUBRICATOR—Cam.....	1885562	1111644
NIPPLE—Low Tension Terminal.....	1885545	1111644
PIN—Distributor Cap Spring.....	1862218	1111638
Pipe PLUG—In Housing.....	125947	1111638; 44-5
PLATE—Weight Hold Down.....	1885557	1111638; 44-5
SPRING—High Tension Terminal.....	1885547	1111644
STUD—Breaker Lever Spring.....	1837225	1111638

 
Parts not listed in this Catalog will not be sold separately.

Revised to Feb. 1, 1960

Delco-Remy

SERVICE PARTS CATALOG

DISTRIBUTOR Group 95-E
Models 1111660-1
Page 1

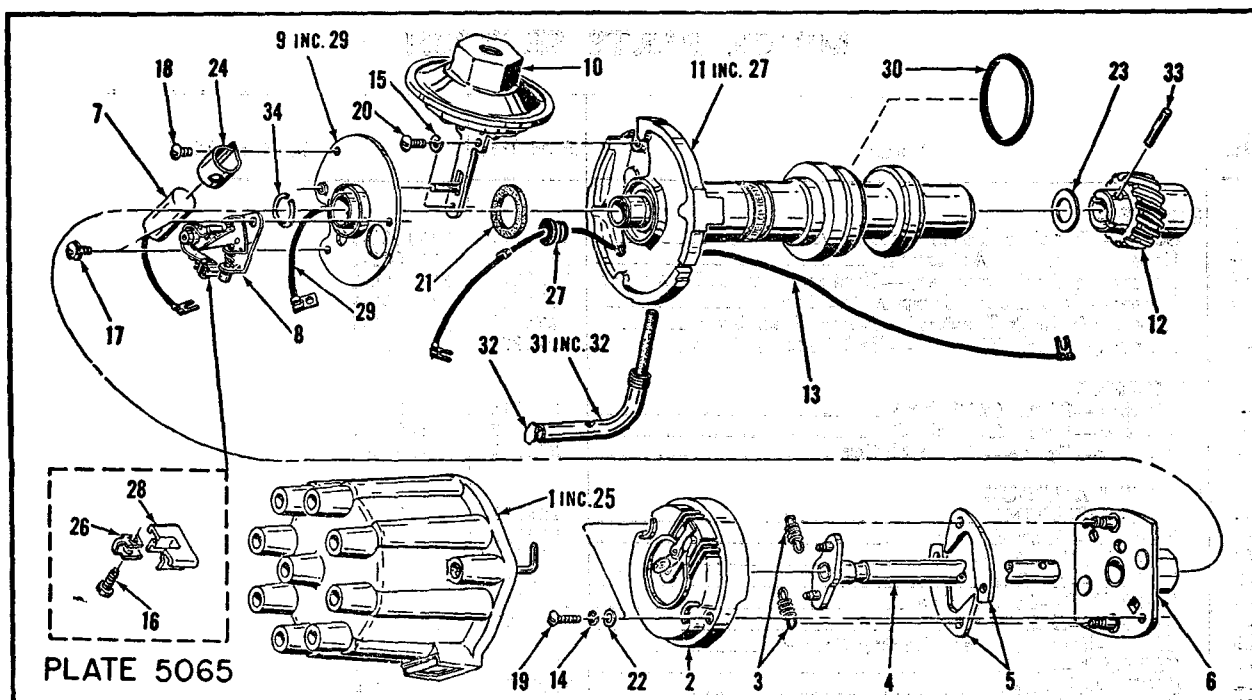


Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111660	1942654	1932015	1931384	1949075	1881371	1949078	1932004	1931988	1949073		1949082	1949083	1950671
1111661	"	"	1949235	1949227	"	1949233	"	"	"		"	"	"

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	SCREWS		
16	Screw—Breaker Lever Spring Attaching -----	1931999	1111660-1
—	Screw—Contact Adjusting -----	1931996	1111660-1
17	Screw (& Lock Washer)—Contact Assembly Attach. -----	1938527	1111660-1
18	Screw—Condenser Clamp Attaching -----	121749	1111660-1
—	Screw (& Lock Washer)—Rotor Attaching -----	274453	1111660-1
—	Screw (& Lock Washer)—Ball Bearing Clamp -----	1921350	1111660-1
	WASHERS		
—	Washer—Shim (.005 thk.) -----	810074	1111660-1
—	Washer—Shim (.010 thk.) -----	810078	1111660-1
—	Washer—Space—Under Collar -----	811912	1111660-1
	MISCELLANEOUS		
—	BALL BEARING -----	954939	1111660-1
—	BLOCK—Gear Cushion -----	1908028	1111660-1
24	BRACKET—Condenser -----	1869573	1111660-1
25	BRUSH—In Cap -----	1938193	1111660-1
—	BUSHING—In Housing -----	1938630	1111660-1
—	CLAMP—Ball Bearing -----	1925471	1111660-1
26	CLIP—Breaker Lever Spring Screw -----	1931998	1111660-1
—	COLLAR—Shaft -----	821865	1111660-1
—	CUSHION—Gear -----	1908029	1111660-1
27	GROMMET—For Primary Lead -----	1932732	1111660-1
28	INSULATOR—Breaker Lever Spring Screw -----	1931997	1111660-1
—	PIN—Shaft Collar Attaching -----	1862218	1111660-1
33	PIN—Gear Attaching -----	1908031	1111660-1
—	RETAINER—Felt Wick -----	1935621	1111660-1
—	RETAINER—Gear Cushion -----	1908030	1111660-1
—	RING—Snap—Ball Bearing Retainer -----	9415233	1111660-1
—	SPRING—Cam Lubricator -----	1949085	1111660-1
—	SPRING—Contact Adjusting -----	1931995	1111660-1
—	WICK—Felt—Cam Lubricator -----	1949084	1111660-1

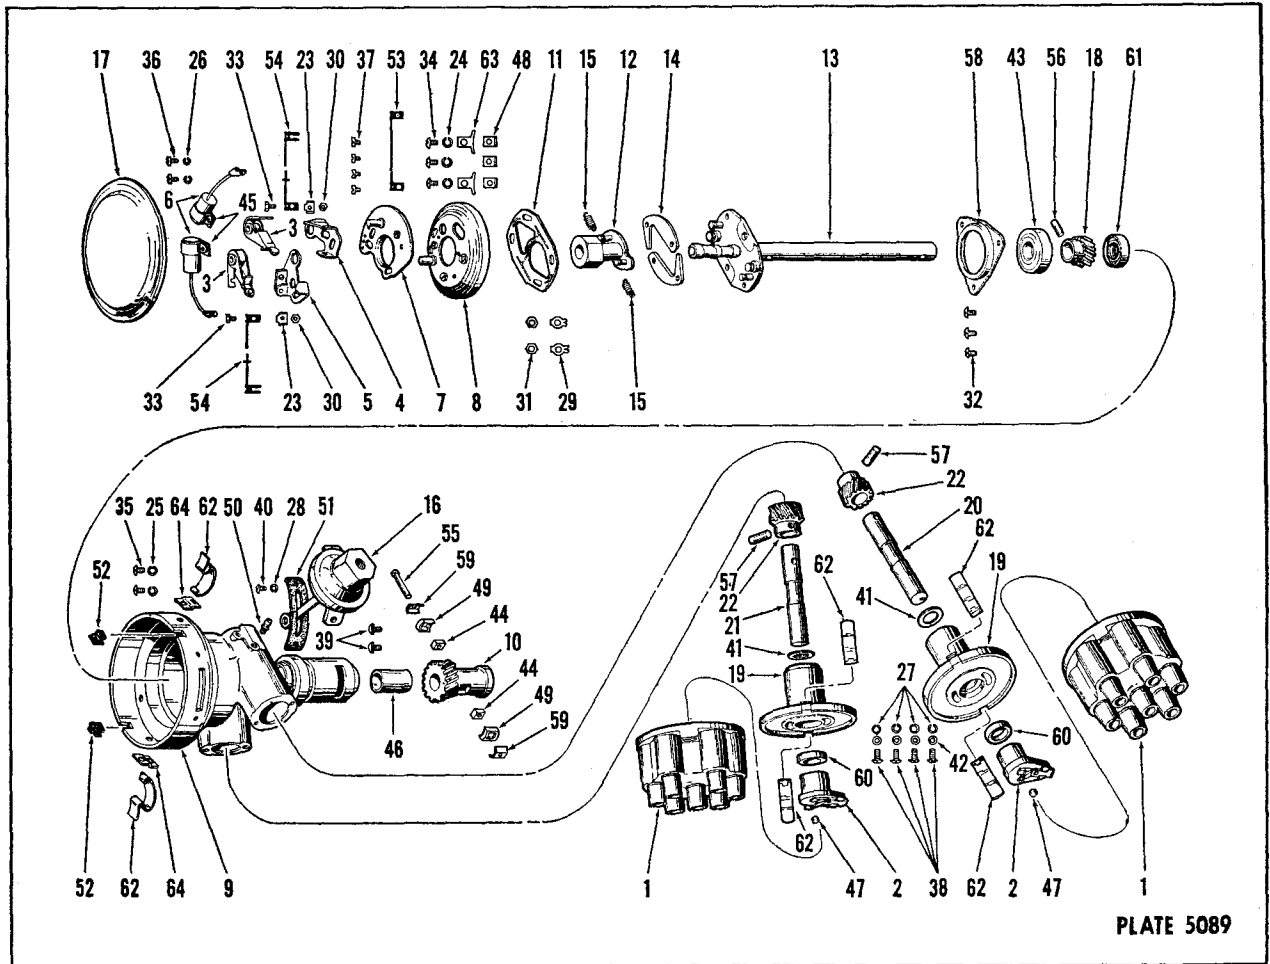 


Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Breaker Lever	Contact Point and Support	Contact Point and Support	Con- denser	Plate — Upper Breaker	Plate — Lower Breaker	Housing	Gear	Plate — Weight Hold Down
	1	2	3	4	5	6	7	8	9	10	11
1111676.....	1931512	1931482	□ 1881394	□ 1881467	□ 1881466	1928111	1945976	1945972	1949736	1945934	1885557
1111680.....	1941308	"	□ "	□ "	□ "	"	"	"	"	"	"
1111688.....	1931542	"	□ "	□ "	□ "	"	"	"	"	"	"
1111689.....	1941308	"	□ "	□ "	□ "	"	"	"	"	"	"

□ Contact Set 1963527 for 1881394 lever and 1881467 point & support.
 Contact Set 1963526 for 1881394 lever and 1881466 point & support.

Delco-Remy

 SERVICE PARTS CATALOG

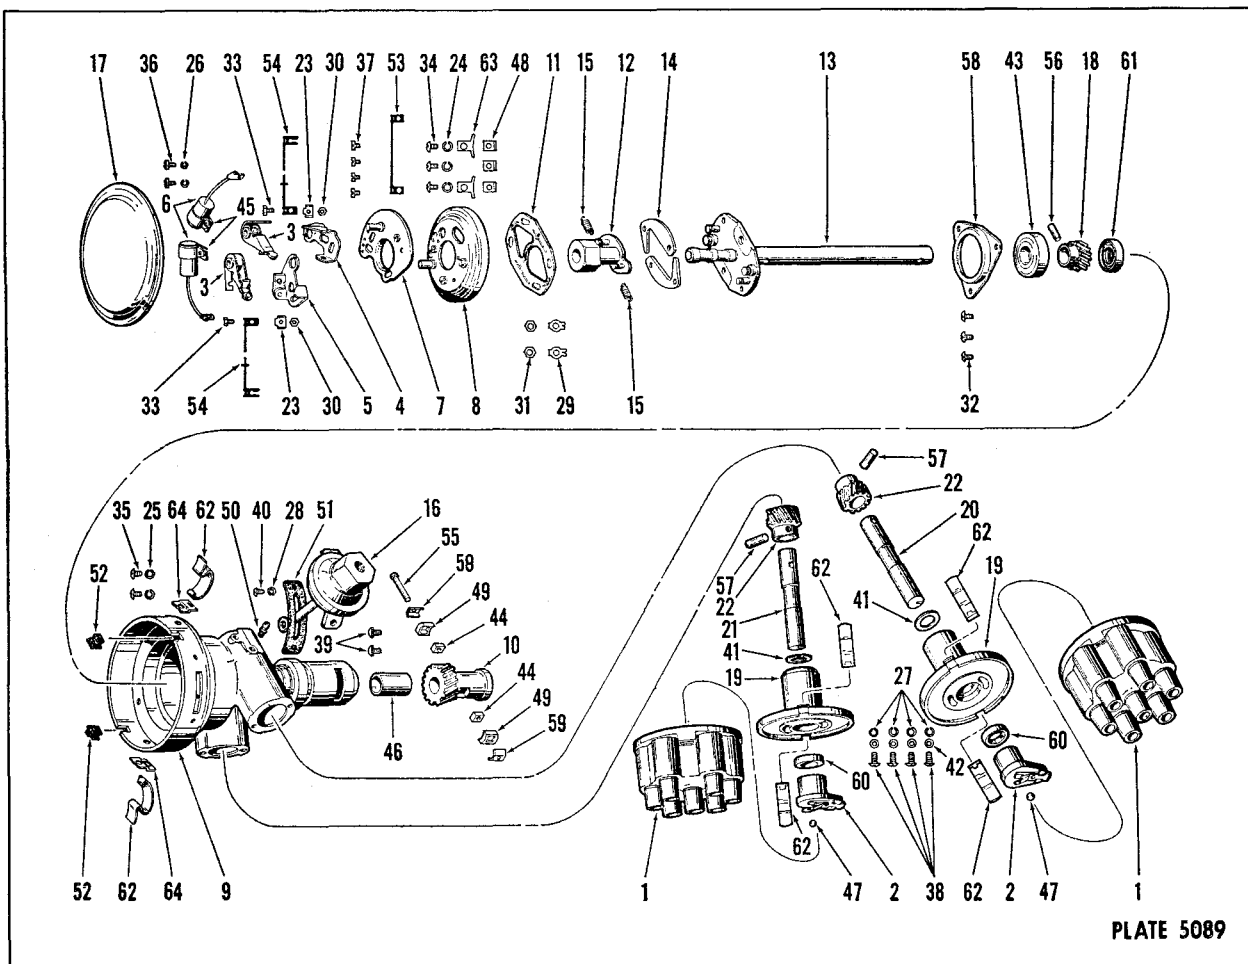

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.


Model No.	Cam Assem.	Main Shaft	Weight	Spring — Weight	Vacuum Control	Cover — Housing	Gear — Rotor Shaft Drive	Base	Shaft — C.W. Rotation	Shaft — C.C.W. Rotation	Gear — Rotor Shaft
	12	13	14	15	16	17	18	19	20	21	22
1111676.....	1945968	1945966	1881371	1939381	*1116222	1945980	1960871	1954660	1949741	1955628	1949742
1111680.....	"	"	"	"	+	1959358	"	"	"	"	"
1111688.....	1962453	1962454	"	1962456	+	1945980	"	"	"	"	"
1111689.....	"	"	"	"	+	1959358	"	"	"	"	"

* Service by complete replacement.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
23	Lock Washer—Breaker Lever Spring Attach. Screw	1868992	1111676; 80-8-9
24	Lock Washer—Breaker Plate Attach. Screw	453844	1111676; 80-8-9
25	Lock Washer—Cap Spring Support Attach. Screw	453844	1111676; 80-8-9
26	Lock Washer—Condenser Bracket Attach. Screw	453844	1111676; 80-8-9
27	Lock Washer—Distributor Base to Housing Attach. Screw	453844	1111676; 80-8-9
28	Lock Washer—Vacuum Control Arm Attach. Screw	456413	1111676
29	Lock Washer—Weight Hold-down Plate Nut	1885558	1111676; 80-8-9
NUTS			
30	Nut—Breaker Lever Spring Attach. Screw	817363	1111676; 80-8-9
31	Nut—Weight Hold-down Plate Attach.	1923540	1111676; 80-8-9
SCREWS			
32	Screw—Ball Bearing Retainer Attach.	453418	1111676; 80-8-9
33	Screw—Breaker Lever Spring Attach.	455957	1111676; 80-8-9
34	Screw—Breaker Plate Attach.	453418	1111676; 80-8-9
35	Screw—Cap Spring Support Attach.	453418	1111676; 80-8-9
36	Screw—Condenser Bracket Attach.	453304	1111676; 80-8-9
37	Screw—Contact Adjusting	1914916	1111676; 80-8-9
38	Screw—Distributor Base to Housing Attach.	1950277	1111676; 80-8-9
39	Screw—And Lock Washer—Vacuum Control Attach.	274937	1111676; 80-8-9
40	Screw—Vacuum Control Arm Attach.	453460	1111676; 80-8-9
—	Screw—Cap Spring Support Attach. (Dist. Bases)	1943386	1111676; 80-8-9
WASHERS			
41	Washer—Between Gear and Rotor Shafts	1949745	1111676; 80-8-9
—	Washer—Plain Breaker Plate Clamp	810794	1111676
42	Washer—Plain—Distributor Base to Housing Attach. Screw	815540	1111676; 80-8-9
—	Washer—Space—C.C.W. Rotor Shaft Gear	1951701	1111676; 80-8-9
MISCELLANEOUS			
43	BALL BEARING—Main Shaft	904753	1111676; 80-8-9
44	BLOCK—Drive Gear Cushion	1908028	1111676; 80-8-9
45	BRACKET—Condenser	1869573	1111676; 80-8-9
46	BUSHING—Distributor Housing	1938630	1111676
47	BUTTON (Carbon)—Distributor Cap	1938193	1111676; 80-8-9
48	CLAMP—Breaker Plate Attach.	1945979	1111676; 80-8-9
49	CUSHION—Drive Gear	1908029	1111676; 80-8-9
50	FITTING—Grease—Distributor Housing	271283	1111676; 80-8-9
51	GASKET—Under Vacuum Control	1917246	1111676; 80-8-9
—	GASKET—Between Bases and Housing	1955627	1111676; 80-8-9
52	GROMMET—Primary Lead	1928123	1111676; 80-8-9
53	LEAD—Ground	1865978	1111676; 80-8-9
54	LEAD—Primary	1945978	1111676; 80
54	LEAD—Primary	1959357	1111680-9
55	PIN—Distributor Drive Gear Attach.	1908031	1111676; 80-8-9
56	PIN—Rotor Shaft Driving Gear Attach.	1857502	1111676; 80-8-9
57	PIN—Rotor Shaft Gear Attach.	1857502	1111676
58	RETAINER—Ball Bearing	1939551	1111676; 80-8-9
59	RETAINER—Drive Gear Cushion	1908030	1111676; 80-8-9
—	RING Retaining—C.C.W. Rotor Shaft Washer	1921824	1111676; 80-8-9
—	"O" RING—Bearing Retainer—Under Weight Base	1911165	1111676; 80-8-9
—	"O" RING—Distributor Bases	1954657	1111676; 80-8-9
60	SEAL—Oil—Distributor Bases	1945697	1111676; 80-8-9
61	SEAL—Oil—Distributor Housing	1920463	1111676; 80-8-9
62	SPRING—Distributor Cap & Cover	1909594	1111676; 80-8-9
63	SPRING—Anti Rattle—Breaker Plate	1948948	1111676; 80-8-9
64	SUPPORT—Distributor Cover Spring	1847289	1111676; 80-8-9
—	SUPPORT—Distributor Cap Spring	1954658	1111676; 80-8-9

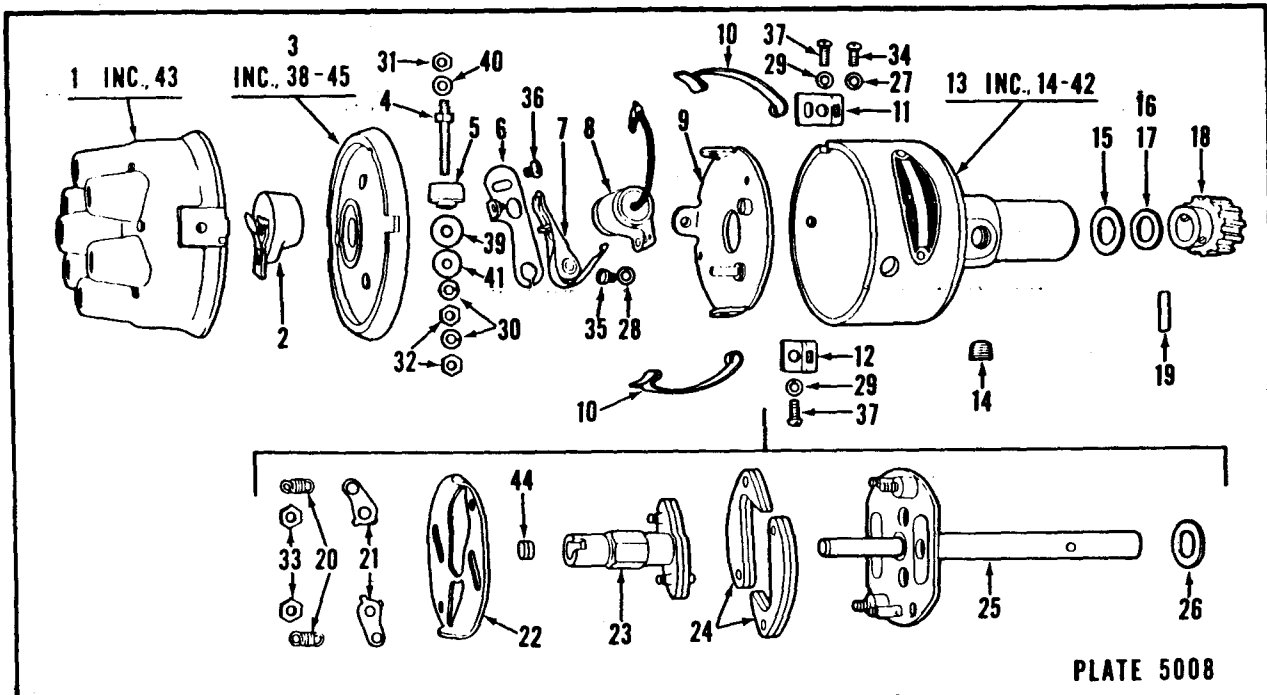 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover — Housing	Screw or Stud — Terminal	Bushing — Ins.	△ Contact Point & Support	△ Breaker Lever	Con- denser	Plate — Breaker	Spring — Cap	Support — Cap Spring & Cover Locator	Support — Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111701	1909008	1905590	1900119	1916806	1878405	1848038	1905344	1928111	1847643	1889967	1889999	1847289	1909055
1111702	824735	"	"	"	"	"	"	"	"	"	"	"	1909269
1111703	811735	"	"	"	"	"	"	"	"	"	"	"	1909001
1111704	"	"	"	"	"	"	"	"	"	"	"	"	1909269
1111705	"	"	"	"	"	"	"	"	"	"	"	"	1909055
1111706	824735	"	"	"	"	"	"	1900272	"	"	"	"	1909001
1111707	811735	"	"	"	"	"	"	"	"	"	"	"	"
1111708	"	"	"	"	"	"	"	1928111	"	"	"	"	"
1111709	1909008	820445	"	"	"	"	"	"	"	"	"	"	1909269
1111710	811735	1905590	"	"	"	"	"	"	"	"	"	"	1909055
1111711	"	"	"	"	"	"	"	"	"	"	"	"	1909269
1111712	"	"	"	"	"	"	"	"	"	"	"	"	1909001
1111713	"	"	"	"	"	"	"	"	"	"	"	"	"
1111714	"	"	"	"	"	"	"	"	"	"	"	"	1909055
1111715	"	"	"	"	"	"	"	"	"	"	"	"	1909269
1111716	"	"	"	"	"	"	"	"	"	"	"	"	1909001
1111717	"	"	"	"	"	"	"	"	"	"	"	"	1909005
1111718	"	"	"	"	"	"	"	"	"	"	"	"	1909269
1111719	"	"	"	"	"	"	"	1900272	"	"	"	"	1909005
1111720	824735	"	"	"	"	"	"	1928111	"	"	"	"	1909001
1111721	"	"	"	"	"	"	"	"	"	"	"	"	1909055
1111722	811735	"	"	"	"	"	"	"	"	"	"	"	"
1111723	"	"	"	"	"	"	"	1900272	"	"	"	"	1909005
1111724	"	"	"	"	"	"	"	1928111	"	"	"	"	1909055
1111725	"	"	"	"	"	"	"	"	"	"	"	"	1909269

 △Use Contact Set No. 1911119.

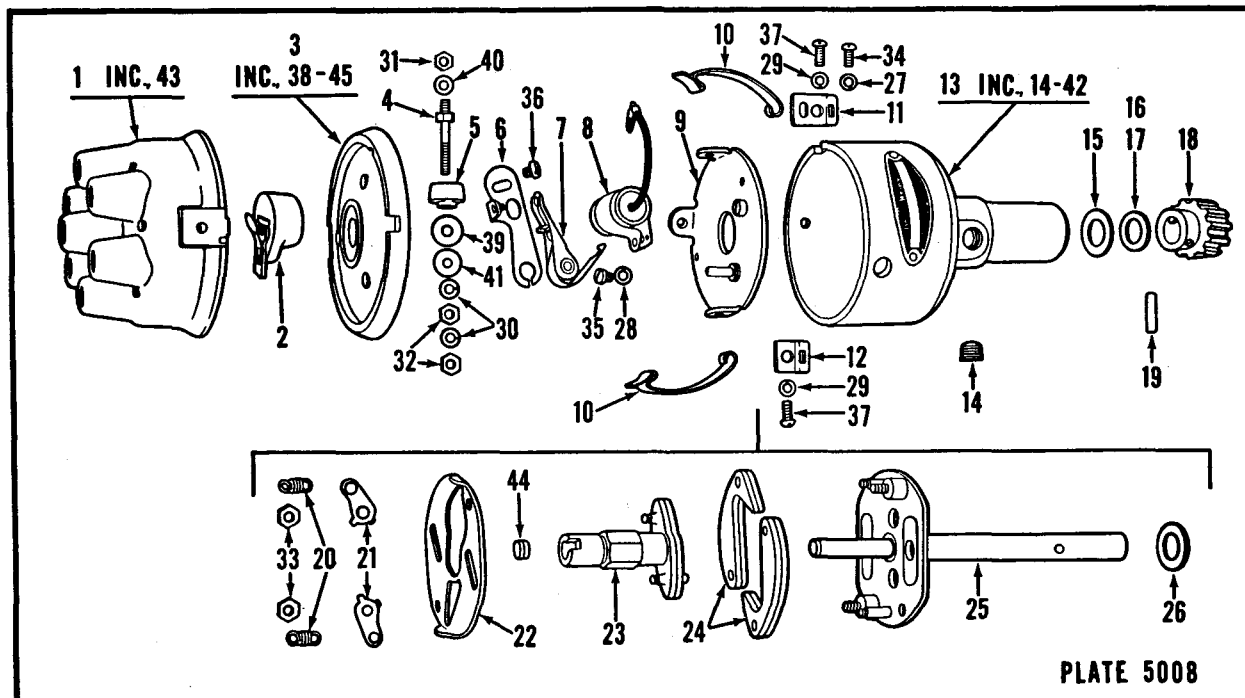

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar Coupling or Gear	Pin	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Washer — Space — Under Weight Plate
	14	15	16	17	18	19	20	21	22	23	24	25	26
1111701	125947	811912	810074	810078	809673	829421	1901737	1885558	1885557	1909004	1880902	1909006	811912
1111702	"	"	"	"	1909273	"	1909210	"	"	1907950	"	1909271	"
1111703	"	"	"	"	†	†	1909189	"	"	1909201	"	1909504	"
1111704	"	"	"	"	1909273	829421	1909210	"	"	1909570	"	1909271	"
1111705	"	"	"	"	1860628	1862218	1885888	"	"	1909278	1921271	1909276	"
1111706	"	"	"	"	†	†	1884929	"	"	1909195	1880902	1909504	"
1111707	"	"	"	"	†	†	1883498	"	"	1909476	"	1909478	"
1111708	"	811912	"	"	1952953	1862218	1882774	"	"	1909505	"	1909504	"
1111709	"	"	"	"	1909273	829421	1901737	"	"	1909004	"	1909667	"
1111710	"	"	"	"	809673	"	1883498	"	"	1909847	1881371	1909846	"
1111711	"	"	"	"	"	"	1883121	"	"	1909973	1921271	1909975	"
1111712	"	"	"	"	"	"	1884929	"	"	1909476	1880902	1910227	"
1111713	"	"	"	"	"	"	1908587	"	"	"	"	1924112	"
1111714	"	"	"	"	†	†	1910529	"	"	1909847	1881371	1910532	"
1111715	"	"	"	"	†	†	1910530	"	"	1910536	"	1910534	"
1111716	"	"	"	"	809673	829421	1911255	"	"	1911284	1880902	1909239	"
1111717	"	"	"	"	"	"	1910529	"	"	1911257	1881371	1909130	"
1111718	"	"	"	"	821865	1862218	1883899	"	"	1909278	1921271	1911416	"
1111719	"	"	"	"	809673	829421	1885888	"	"	"	"	1885443	"
1111720	"	"	"	"	"	"	1885413	"	"	1909240	1880902	1909127	"
1111721	"	"	"	"	†	†	1883498	"	"	1900638	1881371	1912372	"
1111722	"	"	"	"	1912476	1900428	1902376	"	"	1911257	"	1912474	"
1111723	"	"	"	"	809673	829421	1885888	"	"	1909973	1921271	1912823	"
1111724	"	"	"	"	†	†	1910529	"	"	1909847	1881371	1913150	"
1111725	"	"	"	"	821865	1862218	1885888	"	"	1909278	1921271	1913442	"

†Coupling or Gear and Pin not furnished by Delco-Remy.

‡Use 821865 Shaft Collar, 1862218 Collar Pin, Gear and Pin not furnished by Delco-Remy.

Revised to January 1, 1968

SERVICE PARTS CATALOG


MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
27	Lock Washer—Breaker Plate Support Screw.....	453844	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
28	Lock Washer—Condenser Attaching Screw.....	453844	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
29	Lock Washer—Distributor Cap Spring Support Screw.....	453844	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
30	Lock Washer—Terminal Stud—Outside.....	453844	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
NUTS			
31	Nut—Terminal Stud—Inside.....	817363	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
32	Nut—Terminal Stud—Outside.....	120622	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
33	Nut—Weight Hold Down.....	1923540	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
SCREWS			
34	Screw—Breaker Plate Support.....	453418	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
35	Screw—Condenser Attaching.....	453304	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
36	Screw—Contact Attaching.....	1914916	All
37	Screw—Distributor Cap Spring Support.....	453461	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
WASHERS			
38	Washer Package—Felt—Housing Cover Seal.....	1914309	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
39	Washer—Insulation—Terminal Stud—Outside.....	1882247	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
40	Washer—Plain—Terminal Stud—Inside.....	810794	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
41	Washer—Plain—Terminal Stud—Outside.....	815540	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
MISCELLANEOUS			
42	BUSHING—Distributor Housing.....	1909003	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
43	BUTTON—Carbon—In Cap.....	1938193	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
44	Felt WICK—In Cam.....	1963555	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5
45	GASKET—Distributor Housing Cover.....	1889966	1111701-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19; 20-1-2-3-4-5

Revised to March 15, 1965

 SERVICE PARTS CATALOG

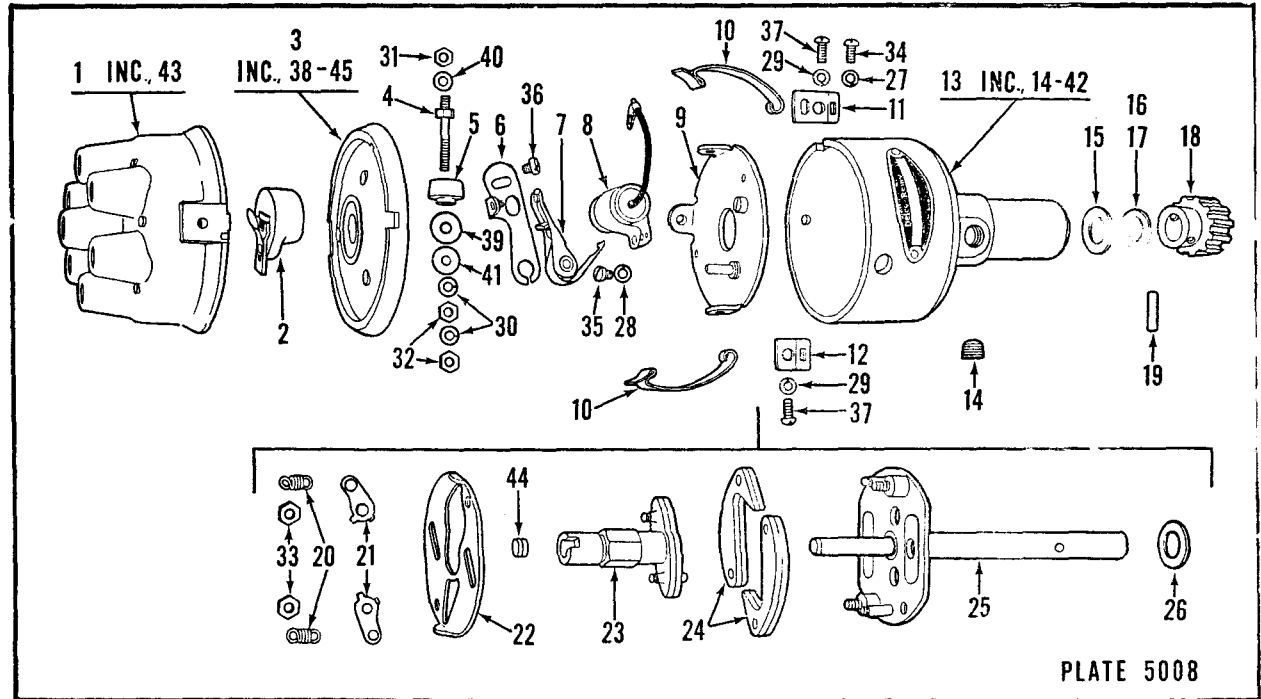

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.


Model No.	Cap	Rotor	Cover Housing	Screw or Stud Terminal	Bushing Ins.	Contact Point & Support	Breaker Lever	Condenser	Plate Breaker	Spring Cap	Support Cap Spring & Cover Locator	Support Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111726	811735	1905590	1900119	1847647	1878405	a1848038	a1905344	1928111	1847643	1889967	1889999	1847289	1909269
1111727	"	"	"	"	"	"	"	"	"	"	"	"	1912758
1111728	824735	"	"	"	"	"	"	"	"	"	"	"	1909055
1111729	811735	"	"	"	"	"	"	"	"	"	"	"	1909001
1111730	824735	"	"	"	"	"	"	"	"	"	"	"	"
1111731	"	"	"	"	"	"	"	"	"	"	"	"	1909269
1111733	811735	"	"	"	"	"	"	"	"	"	"	"	1909001
1111734	824735	"	"	1916806	†	"	"	"	"	"	"	"	1963695
1111735	811735	1921285	"	"	†	"	"	"	1908033	"	"	"	1917312
1111736	"	820445	"	"	†	"	"	"	1847643	"	"	"	1963695
1111737	"	"	"	"	†	"	"	"	"	"	"	"	1963697
1111738	824735	1905590	"	"	†	"	"	"	"	"	"	"	1963695
1111739	811735	"	"	"	†	"	"	"	"	"	"	"	1947954
1111740	"	"	"	"	†	"	"	"	"	"	"	"	1963695
1111742	"	820445	"	"	†	b1848038	b 813238	"	"	"	"	"	1917312
1111744	"	"	"	"	†	"	"	"	"	"	"	"	1963695
1111745	"	1921285	"	"	†	"	"	"	1908033	"	"	"	1917312
1111747	824735	820445	"	"	†	"	"	"	1847643	"	"	"	1917900
1111748	811735	"	"	"	†	"	"	"	"	"	"	"	1917900
1111750	824735	"	"	"	†	"	"	"	"	"	"	"	1917312

†Use 1914142 Bushing (Outside) and 1916805 Bushing (Inside).

a—Contact Set 1911119.

b—Contact Set 1855720

 Delco-Remy SERVICE PARTS CATALOG

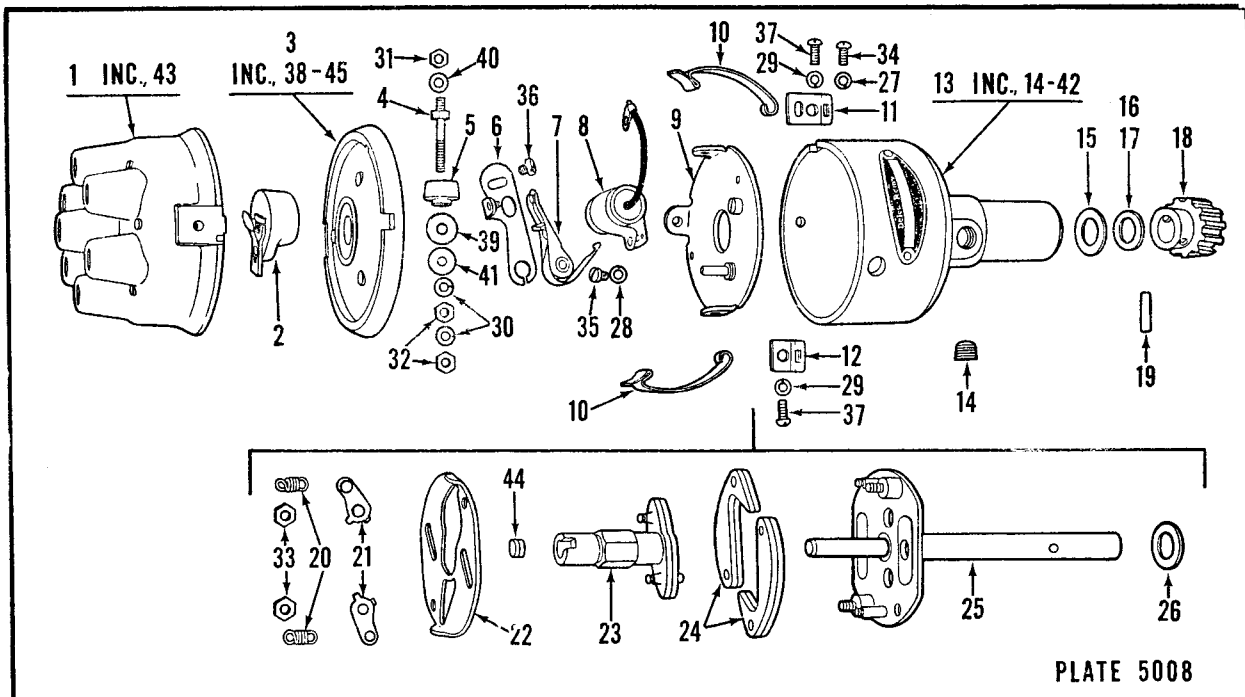

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar, Coupling or Gear	Pin	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Washer — Space Under Weight Plate
	14	15	16	17	18	19	20	21	22	23	24	25	26
1111726	125947	811912	810074	810078	821865	1862218	1905431	1885558	1885557	1909570	1880902	1913526	811912
1111727	"	"	"	"	1913592	1857502	1883498	"	"	1909505	"	1913591	"
1111728	"	"	"	"	809673	829421	1902376	"	"	1902405	1881371	1909975	"
1111729	"	"	"	"	†	†	1836277	"	"	1913890	"	1909822	"
1111730	"	"	"	"	†	†	1901737	"	"	1914246	"	1914245	"
1111731	"	"	"	"	1909273	829421	1902376	"	"	1914433	"	1915759	"
1111733	"	"	"	"	821865	1862218	1908587	"	"	1916669	1880902	1916667	"
1111734	"	"	"	"	†	†	1889680	"	"	1917307	1873697	1917308	"
1111735	"	811912	810074	810078	1860628	1862218	1883899	"	"	1915823	"	1917311	"
1111736	"	"	"	"	†	†	1917710	"	"	1917709	1881371	1917708	"
1111737	"	"	"	"	1912476	1900428	1884619	"	"	1917938	1880902	1917956	"
1111738	"	"	"	"	809673	829421	1887743	"	"	1918593	1881371	1916524	"
1111739	"	"	"	"	1881621	1862218	1902376	"	"	1919674	1880902	1919673	"
1111740	"	"	"	"	1912476	1900428	1886508	"	"	"	"	1920306	"
1111742	"	"	"	"	1909273	829421	1883121	"	"	"	"	1923301	"
1111744	"	"	"	"	1912476	1900428	1886508	"	"	"	"	1923543	"
1111745	"	"	"	"	1924220	1862218	1883899	"	"	1915823	1873697	1924233	"
1111747	"	"	"	"	1909273	829421	1911092	"	"	1921328	1881371	1921327	"
1111748	"	"	"	"	821865	1862218	1927140	"	"	1925135	"	1925137	"
1111750	"	"	"	"	1928574	829421	1888115	"	"	1914623	1880902	1928573	"

†Coupling or Gear & Pin not furnished by Delco-Remy.


Revised to March 15, 1965

SERVICE PARTS CATALOG

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
27	Lock Washer—Breaker Plate Support Screw	453299	1111726-7-8-9; 30-1-3-4-6-7-8-9; 40-2-4-7-8; 50
27	Lock Washer—Breaker Plate Support Screw	138530	1111735; 45
—	Lock Washer—Cam Lubricator Screw	453299	1111735; 45
28	Lock Washer—Condenser Attaching Screw	453299	1111726-7-8-9; 30-1-3-4-5-6-7-8-9; 40-2-4-7-8; 50
29	Lock Washer—Distributor Cap Spring Support Screw	453299	1111726-7-8-9; 30-1-3-4-6-7-8-9; 40-2-4-7-8; 50
29	Lock Washer—Distributor Cap Spring Support Screw	138530	1111735; 45
30	Lock Washer—Terminal Stud—Outside	453299	1111726-7-8-9; 30-1-3
—	Lock Washer—Terminal Stud—Inside	453844	1111734-5-6-7-8-9; 40-2-4-5-7-8; 50
NUTS			
31	Nut—Terminal Stud—Inside	817363	1111726-7-8-9; 30-1-3-4-5-6-7-8-9; 40-2-4-5-7-8; 50
32	Nut—Terminal Stud—Outside	120622	1111726-7-8-9; 30-1-3-4-5-6-7-8-9; 40-2-4-5-7-8; 50
33	Nut—Weight Hold Down	1923540	1111726-7-8-9; 30-1-3-4-5-6-7-8-9; 40-2-4-5-7-8; 50
SCREWS			
34	Screw—Breaker Plate Support	453418	1111726-7-8-9; 30-1-3-4-6-7-8-9; 40-2-4-7-8; 50
34	Screw—Breaker Plate Support	453461	1111735; 45
—	Screw—Cam Lubricator	453304	1111735; 45
35	Screw—Condenser Attaching	453304	1111726-7-8-9; 30-1-3-4-5-6-7-8-9; 40-2-4-5-7-8; 50
36	Screw—Contact Attaching	1914916	All
37	Screw—Distributor Cap Spring Support	453461	1111726-7-8-9; 30-1-3-4-6-7-8-9; 40-2-4-7-8; 50
37	Screw—Distributor Cap Spring Support	9417096	1111735; 45
WASHERS			
38	Washer Pkg.—Felt—Housing Cover Seal	1914309	1111726-7-8-9; 30-1-3-4-5-6-7-8-9; 40-2-4-5-7-8; 50
39	Washer—Insulation—Terminal Stud—Outside	1882247	1111726-7-8-9; 30-1-3
40	Washer—Plain—Terminal Stud—Inside	810794	1111726-7-8-9; 30-1-3
41	Washer—Plain—Terminal Stud—Outside	24754	1111726-7-8-9; 30-1-3
MISCELLANEOUS			
42	BUSHING—Distributor Housing	1909003	1111726-7-8-9; 30-1-3-4-5-6-7-8-9; 40-2-4-5-7-8; 50
—	CLIP Lock—Terminal Stud	1914144	1111734-5-6-7-8-9; 40-2-4-5-7-8; 50
43	BUTTON—Carbon—In Cap	*821604	1111726-7-8-9; 30-1-3-4-5-6-7-8-9; 40-2-4-5-7-8; 50
44	Felt WICK—In Cam	1963555	1111726-7-8-9; 30
44	Felt WICK—In Cam	819639	1111730-1-3-4-5-6-7-8-9; 40-2-4-5-7-8; 50
45	GASKET—Distributor Housing Cover	1889966	1111726-7-8-9; 30-1-3-4-5-6-7-8-9; 40-2-4-5-7-8; 50
—	GASKET—Breaker Plate Support Screw	1919247	1111735; 45
—	GASKET—Cap Spring Support Screw	1919247	1111735; 45
—	GASKET—Under Cap Spring Support	1918319	1111735; 45
—	LUBRICATOR—Cam	1885562	1111735; 45
—	RETAINER—Breaker Plate Support Screw Gasket	1919246	1111735; 45
—	RETAINER—Cap Spring Support Screw Gasket	1919246	1111735; 45

 *If button recess in cap is spherical bottom drilled use part #1938193

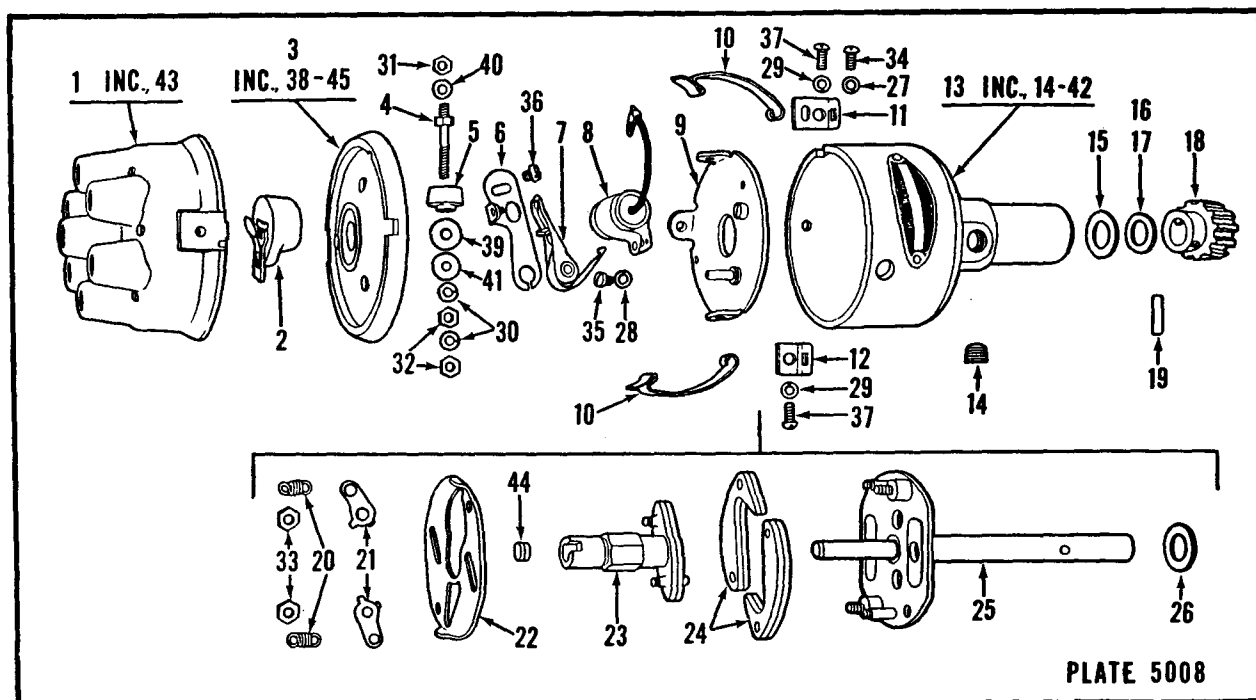


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover Housing	Screw or Stud Terminal	Bushing Ins.	Contact Point & Support	Breaker Lever	Con- denser	Plate Breaker	Spring Cap	Support Cap Spring & Cover Locator	Support Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111751	1872832	1905590	1900119	1847647	1878405	a1882964	a1881394	1900272	1908033	1889967	1889999	1847289	1909055
1111752	1867722	"	"	"	"	a	a	"	"	"	"	"	1909001
1111753	1872832	"	"	"	"	a	a	"	"	"	"	"	"
1111754	"	"	"	"	"	a	a	"	"	"	"	"	1909055
1111755	"	"	"	"	"	a	a	"	"	"	"	"	"
1111756	1842714	"	"	"	"	a	a	"	"	"	"	"	1909163
1111757	"	"	"	"	"	a	a	"	"	"	"	"	"
1111759	1872832	"	"	"	"	b1848038	b1905344	"	1847643	"	"	"	1909001
1111760	1842714	"	"	"	"	a1882964	a1881394	"	1908033	"	"	"	1909347
1111761	"	"	"	"	"	a	b	"	"	"	"	"	1909389
1111762	1867722	"	"	"	"	b1848038	b1905344	"	1847643	"	"	"	"
1111763	"	"	"	"	"	b	b	"	"	"	"	"	1909055
1111764	"	"	"	"	"	b	b	"	"	"	"	"	1909001
1111765	"	"	"	"	"	b	b	"	"	"	"	"	"
1111766	"	"	"	"	"	b	b	"	"	"	"	"	"
1111767	1862403	"	"	"	"	b	b	"	"	"	"	"	1909055
1111768	1842714	"	"	"	"	a1882964	a1881394	"	1908033	"	"	"	1910322
1111769	1867722	"	"	"	"	b1848038	b1905344	"	1847643	"	"	"	1909055
1111770	"	"	"	"	"	a1882964	a1881394	"	1908033	"	"	"	1910434
1111771	1842714	"	"	"	"	b1848038	b1905344	"	1847643	"	"	"	1909055
1111772	"	"	"	"	"	b	b	"	"	"	"	"	"
1111773	1867722	"	"	"	"	b	b	"	"	"	"	"	"
1111774	"	"	"	"	"	b	b	"	"	"	"	"	"
1111775	1842714	"	"	"	"	a1882964	a1881394	"	1908033	"	"	"	1909269
1111776	1862403	"	"	"	"	b1848038	b1905344	"	1847643	"	"	"	1909055
1111777	1867722	"	"	"	"	a1882964	a1881394	"	1908033	"	"	"	"
1111778	"	"	"	"	"	b1848038	b1905344	"	1847643	"	"	"	"
1111779	"	"	"	"	"	a1882964	a1881394	"	1908033	"	"	"	"
1111780	1842714	"	"	"	"	a	a	"	"	"	"	"	1922201
1111781	"	"	"	"	"	a	a	"	"	"	"	"	1909269
1111782	1867722	"	"	"	"	b1848038	b1905344	"	1847643	"	"	"	1909001

a Contact Set No. 1882965.

b Contact Set No. 1911119.

 Delco-Remy SERVICE PARTS CATALOG

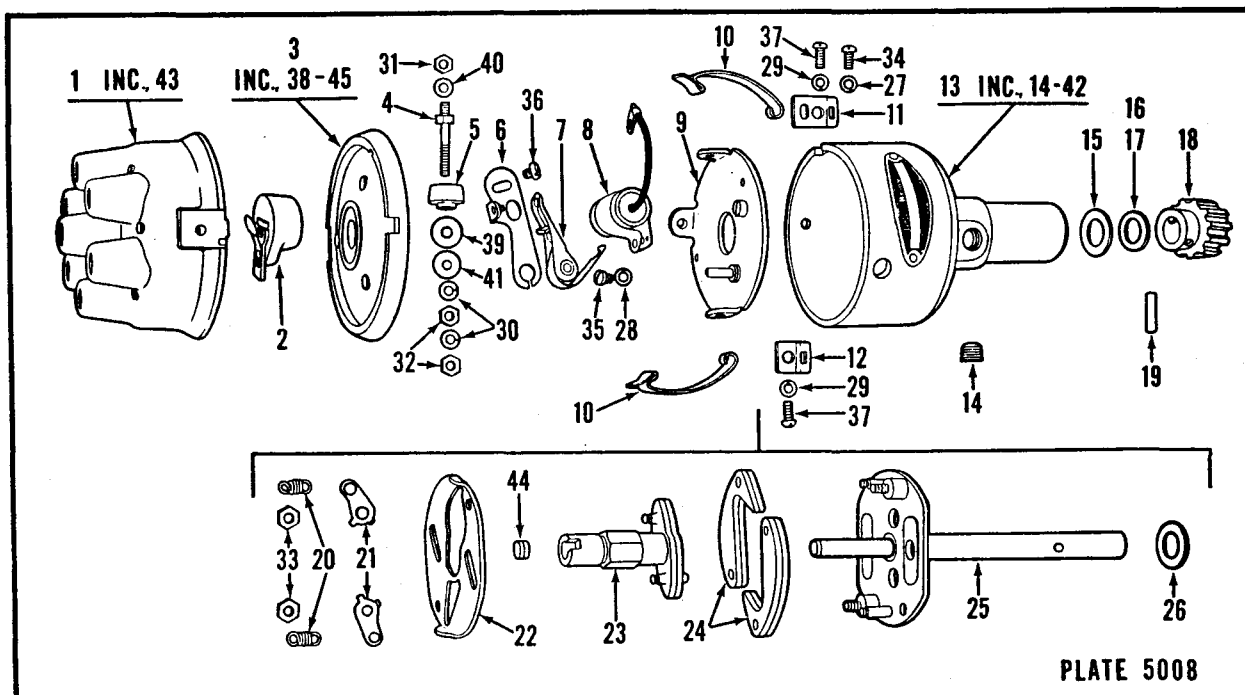

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Pipe Plug 14	Washer — Space 15	Washer — Shim .005 thk. 16	Washer — Shim .010 thk. 17	Collar Coupling or Gear 18	Pin 19	Spring — Weight 20	Lock Washer 21	Weight Hold Down — Cup or Plate 22	Cam Assembly 23	Weight 24	Main Shaft 25	Washer — Space Under Weight Plate 26
1111751	125947	811912	810074	810078	809673	829421	1913818	1885558	1885557	1907950	1880902	1909102	811912
1111752	"	"	"	"	1839067	1857492	1926116	"	"	1909195	"	1909105	"
1111753	"	"	"	"	809673	829421	1922250	"	"	1909240	"	1909127	"
1111754	"	"	"	"	"	"	1884094	"	"	1909129	1881371	1909130	"
1111755	"	"	"	"	"	"	1887552	"	"	1909134	1880902	1909132	"
1111756	"	"	"	"	x	x	1883374	"	"	1904106	"	1909166	"
1111757	"	"	"	"	†	†	1913818	"	"	"	"	1909302	"
1111759	"	"	"	"	809673	829421	1922250	"	"	1909240	"	1909239	"
1111760	"	"	"	"	"	"	1903430	"	"	1909352	1881371	1909350	"
1111761	"	"	"	"	1902407	829421	1883498	"	"	1900638	"	1909394	"
1111762	"	"	"	"	"	"	"	"	"	"	"	"	"
1111763	"	"	"	"	Δ	Δ	1886508	"	"	1907950	1880902	1909729	"
1111764	"	"	"	"	809673	829421	1884929	"	"	1909195	"	1909818	"
1111765	"	"	"	"	1850777	"	"	"	"	"	"	"	"
1111766	"	"	"	"	809673	"	1882774	"	"	1909240	"	1909239	"
1111767	"	"	"	"	Δ	Δ	1886508	"	"	1907950	"	1909729	"
1111768	"	"	"	"	□	□	1922250	"	"	1909195	"	1910325	"
1111769	"	"	"	"	809673	829421	1943200	"	"	1910331	1881371	1909130	"
1111770	"	"	"	"	1910021	1857502	1883343	"	1858747	1910440	"	1881926	"
1111771	"	811912	810074	810078	1885398	829421	1883498	"	1885557	1900638	"	1910482	811912
1111772	"	"	"	"	1885399	"	"	"	"	1902405	"	1912823	"
1111773	"	"	"	"	1850777	"	"	"	"	1900638	"	1910594	"
1111774	"	"	"	"	1909709	1908031	"	"	"	"	"	1910608	"
1111775	"	"	"	"	Δ	"	"	"	"	"	"	1885370	"
1111776	"	811912	810074	810078	1850777	829421	"	"	"	"	"	1910594	"
1111777	"	"	"	"	0	1857492	1887743	"	"	1911072	"	1910532	"
1111778	"	"	"	"	809673	829421	1911092	"	1885557	1911110	"	1911109	"
1111779	"	"	"	"	1902407	"	1902376	"	"	1902405	"	1911099	"
1111780	"	"	"	"	†	†	1913818	"	"	1904106	1880902	1911162	"
1111781	125947	"	"	"	1902407	829421	1883498	"	"	1900638	1881371	1911300	"
1111782	"	"	"	"	Δ	Δ	1884929	"	"	1909195	1880902	1885335	"

ΔNot furnished by Delco-Remy.

0Gear supplied by Hercules Motor Corp.—No. 22335-A

*Use 821865 Shaft Collar, 1862218 Collar Pin, 1909665 Gear, 1908031 Gear Pin. } See Miscellaneous section

0Use 821865 Shaft Collar, 1862218 Collar Pin, 1909353 Gear, 1908031 Gear Pin. } for Gear Cushion,

†Use 821865 Shaft Collar, 1862218 Collar Pin, 1909666 Gear, 1908031 Gear Pin. } Block, etc.

□Use 821865 Shaft Collar, 1862218 Collar Pin. Gear & Pin not furnished by Delco-Remy.

Parts not listed in this Catalog will not be sold separately.


MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
27	Lock Washer—Breaker Plate Support Screw.....	453844	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
....	Lock Washer—Cam Lubricator Screw.....	453844	1111751-2-3-4-5-6-7; 60-1-8; 70-5-7-9; 80-1
28	Lock Washer—Condenser Attaching Screw.....	453844	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
29	Lock Washer—Distributor Cap Spring Support Screw...	453844	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
30	Lock Washer—Terminal Stud—Outside.....	453844	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
NUTS			
31	Nut—Terminal Stud—Inside.....	817363	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
32	Nut—Terminal Stud—Outside.....	120622	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
33	Nut—Weight Hold Down.....	1923540	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
SCREWS			
34	Screw—Breaker Plate Support.....	453418	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
....	Screw—Cam Lubricator Attaching.....	453304	1111751-2-3-4-5-6-7; 60-1-8; 70-5-7-9; 80-1
35	Screw—Condenser Attaching.....	453304	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
36	Screw—Contact Attaching.....	1914916	All
....	Screw—Distributor Cap—H.T. Terminal—Center.....	1860407	1111751-3-4-5-9; 67; 76
....	Screw—Distributor Cap—H.T. Terminal—Side.....	1860406	1111751-3-4-5-9; 67; 76
37	Screw—Distributor Cap Spring Support.....	453461	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
WASHERS			
38	Washer—Felt—Housing Cover Seal.....	1914309	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
39	Washer—Insulation—Terminal Stud—Outside.....	1882247	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
40	Washer—Plain—Terminal Stud—Inside.....	810794	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
41	Washer—Plain—Terminal Stud—Outside.....	24754	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
MISCELLANEOUS			
....	BLOCK—(Gear Cushion).....	1908028	1111756-7; 60; 74; 80
42	BUSHING—Distributor Housing.....	1909003	All
43	BUTTON—Carbon—In Cap (¼ dia.).....	821604	1111751-2-3-4-5-9; 62-3-4-5-6-7-9; 70-3-4-6-7-8-9; 82
43	BUTTON—Carbon—In Cap (⅜ dia.).....	806923	1111751-3-4-5-9; 60-1-7-8; 71-2-5-6; 80-1
....	CUSHION—(Gear).....	1908029	1111756-7; 60; 74; 80
44	Felt WICK—In Cam.....	1963555	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
45	GASKET—Distributor Housing Cover.....	1889966	1111751-2-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2
....	LUBRICATOR—Cam.....	x	1111751-2-3-4-5-6-7; 60-1-8; 70-5-7-9; 80-1
....	OILER—In Housing.....	1922131	1111780
....	RETAINER—(Gear Cushion Block).....	1908030	1111756-7; 60; 74; 80
....	TERMINAL—High Tension (Screw) Shipped separate	1839164	1111756-7; 60-1-8; 71-2-5; 80-1

*1908035 is attached with tangs, used in early production.

1885562 is attached with screw, used in later production.

 ¶If button recess in cap is spherical bottom drilled use part #1938193.

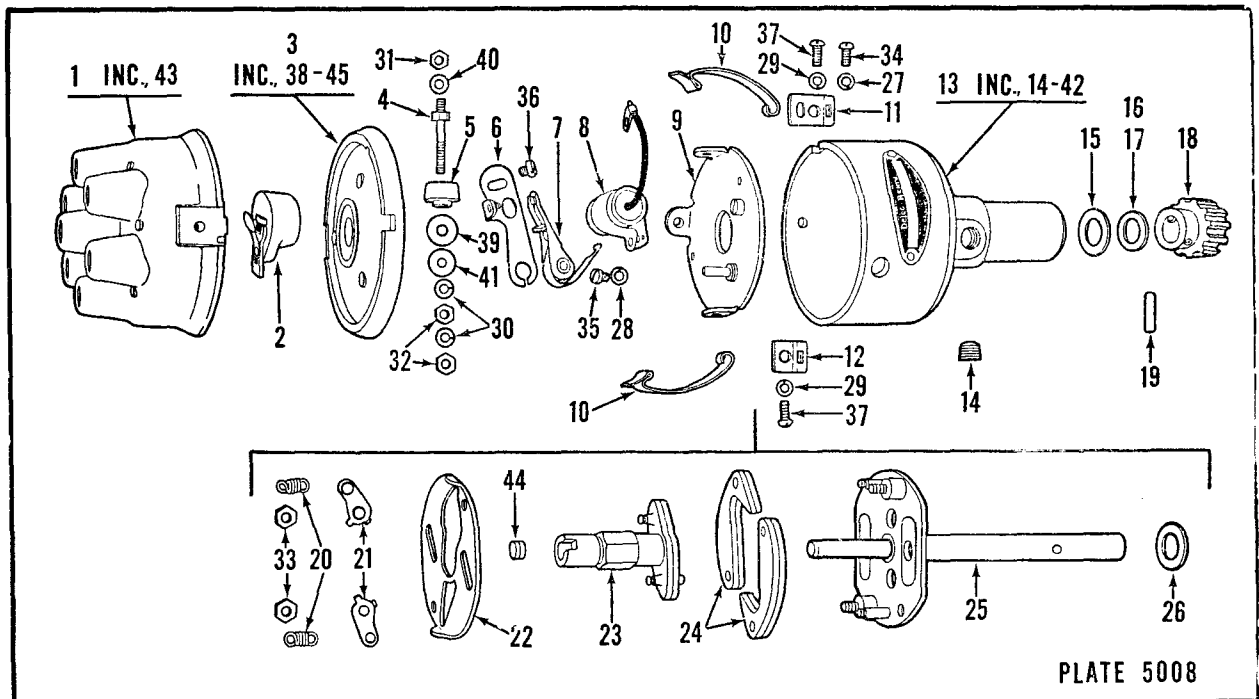

Illustrations are of Typical Parts only. For parts not numbered, or illustrated see Minor Parts Section.

Model No.	Cap	Rotor	Cover — Housing	Screw or Stud — Terminal	Bushing — Ins.	Contact Point and Support	Breaker Lever	Condenser	Plate — Breaker	Spring — Cap	Support — Cap Spring & Cover Locator	Support — Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111783	1867722	1905590	1900119	1916806	1878405	1848038	813238	1900272	1847643	1889967	1889999	1847289	1885348
1111784	"	"	"	"	"	1905344	"	"	"	"	"	"	1909055
1111785	"	"	"	"	"	"	"	"	"	"	"	"	"
1111786	"	"	"	"	"	"	"	"	"	"	"	"	"
1111787	1842714	"	"	"	"	1882964	1881394	"	1908033	"	"	"	1885490
1111788	1867722	"	"	"	"	1848038	1905344	"	1847643	"	"	"	1909055
1111789	1842714	"	"	"	"	1882964	1881394	"	1908033	"	"	"	1911581
1111790	1867722	"	"	"	"	"	"	"	"	"	"	"	1911691
1111791	1842714	"	"	"	"	"	"	"	"	"	"	"	1911159
1111793	1867722	"	"	"	"	1848038	1905344	"	1847643	"	"	"	1909389
1111795	1842714	"	"	"	"	1882964	1881394	"	1908033	"	"	"	1922201
1111796	"	"	"	"	"	"	"	"	"	"	"	"	1909055
1111797	1867722	"	"	"	"	"	"	"	"	"	"	"	1912758
1111798	1842714	"	"	"	"	"	"	"	"	"	"	"	1909055
1111799	1867722	"	"	"	"	"	"	"	"	"	"	"	1909001
1111800	1872832	"	"	"	"	"	"	"	"	"	"	"	1909269
1111801	1842714	"	"	"	"	"	"	"	"	"	"	"	1909055
1111802	"	"	"	"	"	"	"	"	"	"	"	"	1909001
1111803	1867722	"	"	"	"	1848038	1905344	"	1847643	"	"	"	1909055
1111804	1842714	"	"	"	"	1882964	1881394	"	1908033	"	"	"	1909269
1111806	1867722	"	"	"	"	1848038	1905344	"	"	"	"	"	"
1111807	"	"	"	"	"	"	"	"	1847643	"	"	"	1909001
1111809	1842714	"	"	"	"	1882964	1881394	"	1908033	"	"	"	1912758
1111810	1872832	"	"	"	"	"	"	"	"	"	"	"	1911691
1111811	1867722	"	"	"	"	"	"	"	"	"	"	"	1909001
1111812	"	"	"	"	"	1848038	1905344	"	"	"	"	"	1909269
1111813	1842714	"	"	"	"	1882964	1881394	"	"	"	"	"	1926460
1111814	"	"	"	"	"	"	"	"	"	"	"	"	1909269
1111815	1867722	"	"	"	"	"	"	"	"	"	"	"	1909001
1111816	"	"	"	"	"	"	"	"	"	"	"	"	1909055
1111817	"	"	"	"	"	"	"	"	"	"	"	"	"

 
°Contact Set No. 1855720

*Contact Set No 1911119

‡Contact Set No. 1882965

Delco-Remy

SERVICE PARTS CATALOG

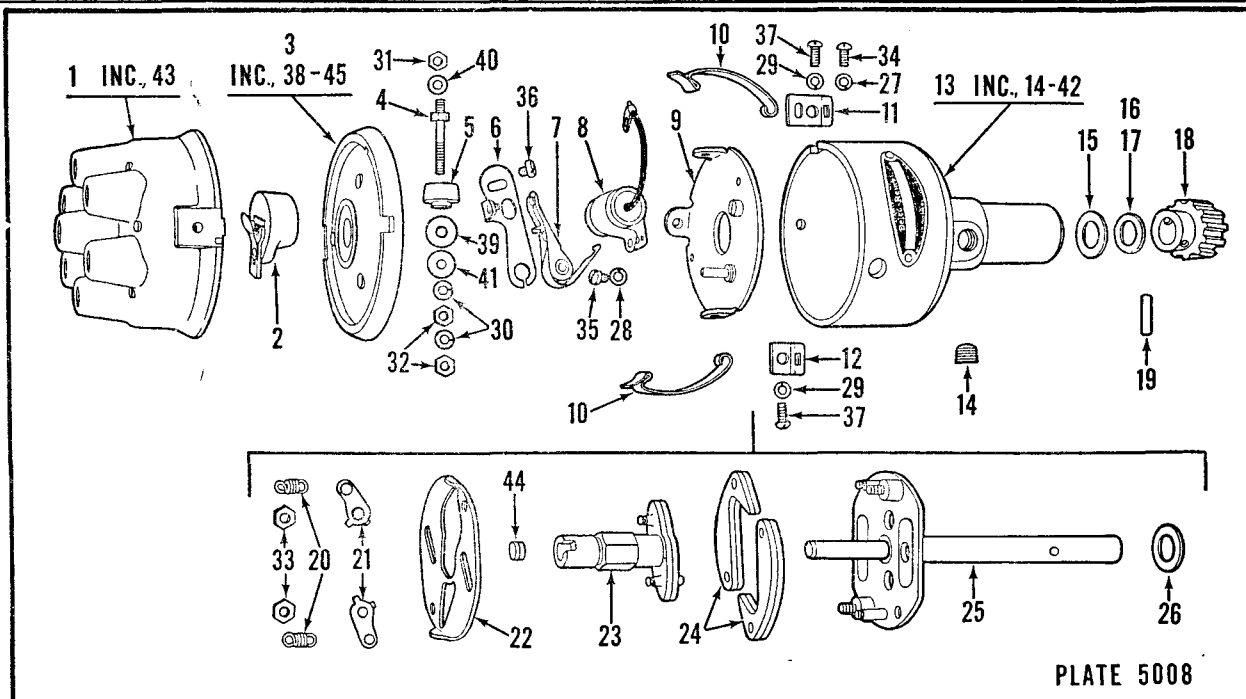

Illustrations are of Typical Parts only, which may vary in detail. For Parts not illustrated see Minor Parts Section.

Model No.	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar Coupling or Gear	Pin	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Washer — Space Under Weight Plate
	14	15	16	17	18	19	20	21	22	23	24	25	26
1111783	125947	807405	810074	1912129	■	■	1907592	1885558	1885557	1909195	1880902	1885351	811912
1111784	"	811912	"	"	1885398	829421	1883498	"	1886135	1900638	1881371	1910482	"
1111785	"	"	"	"	1885399	"	"	"	1886136	1902405	"	1912823	"
1111786	"	"	"	"	1885400	1857502	1884618	"	1886135	1900638	"	1885404	"
1111787	"	"	"	"	1864165	1857492	1883335	"	1885557	1907950	1880902	1885493	"
1111788	"	"	"	"	809673	829421	1885888	"	"	1885638	1921271	1885443	"
1111789	"	"	"	"	1865568	"	1883498	"	"	1900638	1881371	1911584	"
1111790	"	"	"	"	1929088	"	1886538	"	"	1907950	1880902	1911694	"
1111791	"	"	"	"	821865	1862218	1903430	"	"	1909352	1881371	1911728	"
1111793	"	"	"	"	1902407	829421	1887554	"	"	"	"	1912312	"
1111795	"	"	"	"	†	†	1883874	"	"	1904106	1880902	1912394	"
1111796	125947	"	"	"	1912730	1857502	1883498	"	"	1900638	1881371	1912739	"
1111797	"	"	"	"	1912763	1908031	1926116	"	"	1909195	1880902	1912761	"
1111798	125947	"	"	"	1902407	829421	1902376	"	"	1902405	1881371	1911099	"
1111799	"	"	"	"	1907957	"	1883509	"	"	1909240	1880902	1912904	"
1111800	"	"	"	"	1902407	"	1913818	"	"	1907950	"	1912941	"
1111801	"	"	"	"	809673	"	1883498	"	"	1900638	1881371	1929157	"
1111802	"	"	"	"	■	■	1910201	"	"	1909240	1880902	1913552	"
1111803	"	"	"	"	809673	829421	1883498	"	"	1900638	1881371	1929157	"
1111804	"	"	"	"	▲	▲	1886558	"	"	1903690	"	1913600	"
1111806	"	"	"	"	1902407	829421	1903101	"	"	1907950	1880902	1935178	"
1111807	"	"	"	"	■	■	1908587	"	"	1909195	"	1913876	"
1111809	"	"	"	"	1912763	1908031	1926116	"	"	1915023	"	1915017	"
1111810	125947	"	"	"	1929088	829421	1886538	"	"	1914623	"	1915729	"
1111811	"	"	"	"	1911089	"	1884094	"	"	1909240	"	1915808	"
1111812	125947	"	"	"	1902407	"	1885413	"	"	1914433	1881371	1915759	"
1111813	"	"	"	"	1864165	1857492	1885339	"	"	1916385	"	1926764	"
1111814	"	"	"	"	1909709	1908031	1883498	"	"	1914433	1881371	1916449	"
1111815	"	"	"	"	809673	829421	1922250	"	"	1916520	1880902	1916519	"
1111816	"	"	"	"	"	"	1884094	"	"	1916525	1881371	1916524	"
1111817	"	"	"	"	"	"	1887552	"	"	1916528	1880902	1916527	"

■ Coupling or Gear & Pin not furnished by Delco-Remy.

† Use 821865 Collar, 1862218 Collar Pin, 1909665 Gear, 1908031 Gear Pin.

▲ Use 821865 Collar, 813131 Collar Pin, 1908040 Gear, 1908031 Gear Pin.

Parts not listed in this Catalog will not be sold separately.

Revised to June 1, 1969

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
27	Lock Washer—Breaker Plate Support Screw -----	453844	1111783-4-5-6-7-8-9; 90-1-3-5-6-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
—	Lock Washer—Cam Lubricator Screw -----	453844	1111787-9; 90-1-5-6-7-8-9; 800-1-2-4-6-9 10-11-12-13-14-15-16-17
28	Lock Washer—Condenser Attaching Screw -----	453844	1111783-4-5-6-7-8-9; 90-1-3-5-6-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
29	Lock Washer—Cap Spring Support Screw -----	453844	1111783-4-5-6-7-8-9; 90-1-3-5-6-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
30	Lock Washer—Terminal Stud—Outside -----	453844	1111783-4-5-6-7-8-9; 90-1-3-5-6-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
NUTS			
31	Nut—Terminal Stud—Inside -----	817363	1111783-4-5-6-7-8-9; 90-1-3-5-6-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
32	Nut—Terminal Stud—Outside -----	120622	1111783-4-5-6-7-8-9; 90-1-3-5-6-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
33	Nut—Weight Hold Down Plate Attaching -----	1923540	1111783-4-5-6-7-8-9; 90-1-3-5-6-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
SCREWS			
—	Screw—Advance Arm Attaching -----	1837895	1111783
34	Screw—Breaker Plate Support -----	453418	1111783-4-5-6-7-8-9; 90-1-3-5-6-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
—	Screw—Cam Lubricator Attaching -----	453304	1111787-9; 90-1-5-6-7-8-9; 800-1-2-4-6-9 10-11-12-13-14-15-16-17
35	Screw—Condenser Attaching -----	453304	1111783-4-5-6-7-8-9; 90-1-3-5-6-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
36	Screw—Contact Attaching -----	1914916	All
37	Screw—Distributor Cap Spring Support -----	453461	1111783-4-5-6-7-8-9; 90-1-3-5-6-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
—	Screw—Terminal—High Tension (Shipped separate)	1839164	1111787-9; 91-5-6-8; 801-2-4-9-13-14
—	Screw—Terminal—High Tension—Center -----	1860407	1111800-10
—	Screw—Terminal—High Tension—Side -----	1860406	1111800-10
WASHERS			
38	Washer—Felt—Housing Cover Seal -----	1914309	1111783-4-5-6-7-8-9; 90-1-3-5-6-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
39	Washer—Insulation—Terminal Stud—Outside -----	1882247	1111783-4-5-6-7-8-9; 90-1-3-5-6-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
—	Washer—Plain—Advance Arm Attaching Screw -----	1914592	1111783
—	Washer—Plain—Terminal Stud—Inside -----	810794	1111783-4-5-6-7-8-9; 90-1-3-5-6-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
40	Washer—Plain—Terminal Stud—Outside -----	815540	1111783-4-5-6-7-8-9; 90-1-3-5-6-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
41	Washer—Spring—Advance Arm Attaching Screw --	35498	1111783
MISCELLANEOUS			
—	ADAPTER—Sleeve -----	1841005	1111783
—	*Advance ARM -----	1869330	1111783
—	BLOCK—Gear Cushion -----	1908028	1111795-7; 804-9-14
42	BUSHING—Distributor Housing -----	1909003	1111783-4-5-6-7-8-9; 90-1-3-5-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
43	BUTTON—Carbon—In Cap (1/4 Dia.) -----	1938193	1111783-4-5-6-9; 90-3-7-9; 800-3-6-7- 10-11-12-15-16-17
43	BUTTON—Carbon—In Cap (5/8 Dia.) -----	806923	1111787-9; 91-5-6-8; 800-1-2-4-8-9-10-13-14
—	CUSHION—Gear -----	1908029	1111795-7; 804-9-14
44	Felt WICK—In Cam -----	1963555	1111783-4-5-6-7-8-9; 90-1-3-5-7-8-9; 800-1-2-3-4-6-7-11
44	Felt WICK—In Cam -----	1963555	1111809-10-12-13-14-15-16-17
45	GASKET—Housing Cover -----	1889966	1111783-4-5-6-7-8-9; 90-1-3-5-7-8-9; 800-1-2-3-4-6-7-9-10-11-12-13-14-15-16-17
—	LUBRICATOR—Cam -----	1885562	1111781-7-9; 90-1-5-6-7-8-9; 800-1-2-4-6-9- 10-11-12-13-14-15-16-17
—	OILER -----	1922265	1111797; 809-11-13
—	OILER—(In Housing) -----	1922131	1111795
—	PLATE—Advance Arm Support -----	1841155	1111783
—	RETAINER—Gear Cushion -----	1908030	1111795-7; 804-9-14
—	SHAFT—Lower -----	1912906	1111799

*For parts see Advance Arm—Group 1.

Parts not listed in this Catalog will not be sold separately.

Revised to Dec. 1, 1967

 SERVICE PARTS CATALOG

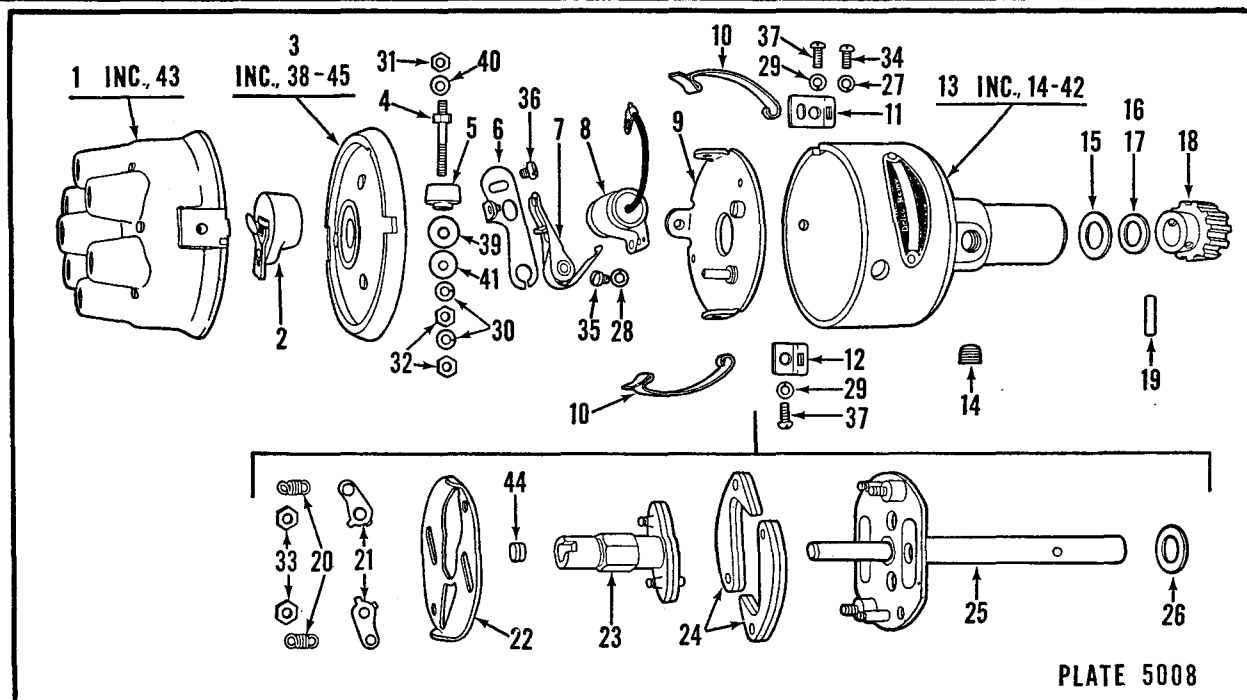

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover Housing	Screw or Stud Terminal	Bushing Ins.	Contact Point and Support	Breaker Lever	Condenser	Plate Breaker	Spring Cap	Support Cap Spring & Cover Locator	Support Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111818	1867722	1905590	1900119	1916806	1878405	□1848038	□1905344	1900272	1847643	1889967	1889999	1847289	1909001
1111819	"	"	"	"	"	♦1882964	♦1881394	"	1908033	"	"	"	1922200
1111821	1872832	"	"	"	†	"	"	"	"	"	"	"	1963695
1111822	1842714	"	"	"	"	"	"	"	"	"	"	"	1929476
1111824	1867722	"	"	"	†	□1848038	□1905344	"	1847643	"	"	"	1963697
1111825	"	"	"	"	†	♦1882964	♦1881394	"	1908033	"	"	"	1963695
1111828	1842714	"	"	"	†	"	"	"	"	"	"	"	1917312
1111829	"	"	"	"	†	"	"	"	"	"	"	"	1963697
1111832	1867722	"	"	"	†	#1848038	# 813238	"	"	"	"	"	1917900
1111833	1872832	"	"	"	†	♦1882964	♦1881394	"	"	"	"	"	1922199
1111835	1867722	"	"	"	†	#1848038	# 813238	"	1847643	"	"	"	1963697
1111836	"	"	"	"	†	♦1882964	♦1881394	"	1908033	"	"	"	1922260
1111837	"	"	"	"	†	"	"	"	"	"	"	"	1922324
1111838	1862403	"	"	"	†	#1848038	# 813238	"	1847643	"	"	"	1963697
1111840	1867722	"	"	"	†	♦1882964	♦1881394	"	1908033	"	"	"	1963695
1111841	"	"	"	"	1878405	"	"	"	"	"	"	"	1909055
1111842	1842714	"	"	"	"	"	"	"	"	"	"	"	1922201
1111843	1867722	"	"	"	"	"	"	"	"	"	"	"	1922200
1111844	1872832	"	"	"	†	"	"	"	"	"	"	"	1922199
1111846	1867722	"	"	"	†	"	"	"	"	"	"	"	1922324
1111848	1842714	"	"	"	†	"	"	"	"	"	"	"	1926191
1111849	1867722	"	"	"	1878405	"	"	"	"	"	"	"	1922200
1111850	1872832	"	"	"	†	"	"	"	"	"	"	"	1922199
1111851	1842714	"	"	"	†	"	"	"	"	"	"	"	1929476
1111853	1931512	1931851	1925477	"	†	"	"	"	"	"	1847289	"	1927184
1111854	"	1924245	"	1924371	▲	a1848038	a1917254	"	"	"	"	"	1927408
1111859	1867722	1905590	1900119	1916806	†	♦1882964	♦1881394	"	"	"	1889999	"	1963685
1111860	"	"	"	"	†	"	"	"	"	"	"	"	"

▲Use 1924369 Bushing (Inside) 1924370 Bushing (Outside).

♦Contact Set No. 1882965.

†1916805 Bushing (Inside), 1914142 Bushing (Outside).


□Contact Set No. 1911119.

#Contact Set No. 1855720.

 aContact Set. No. 1924571.

Delco-Remy

SERVICE PARTS CATALOG

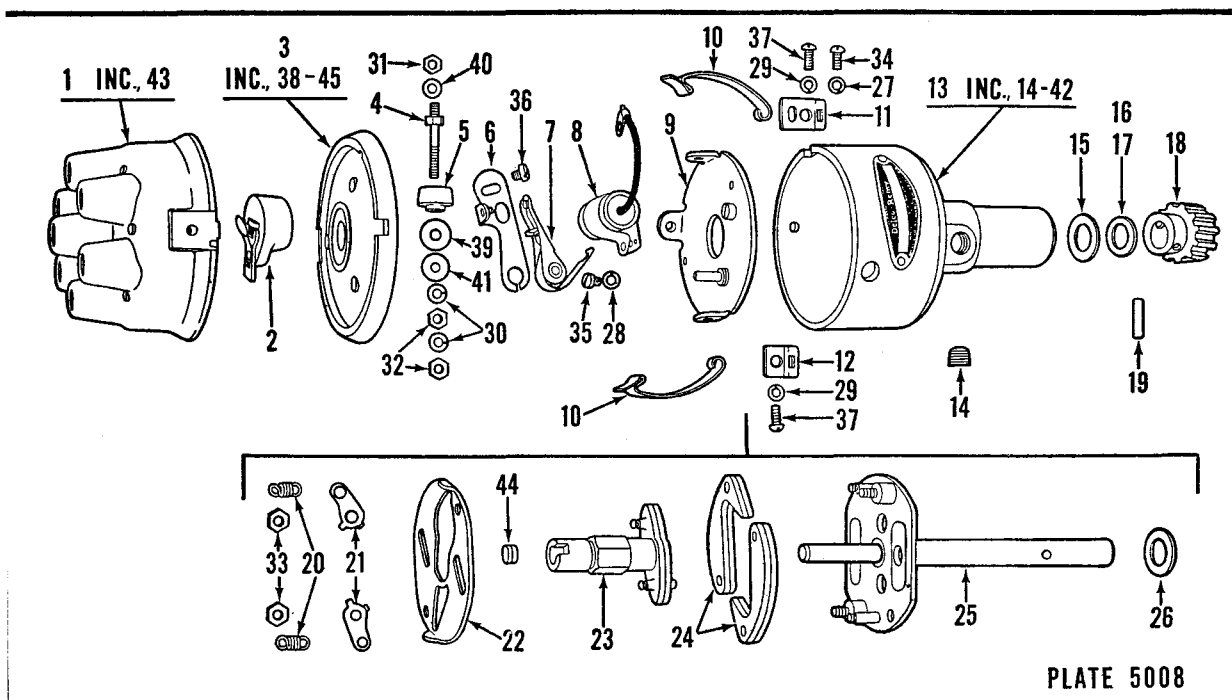

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar Coupling or Gear	Pin	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Washer — Space Under Weight Plate
	14	15	16	17	18	19	20	21	22	23	24	25	26
1111818	125947	811912	810074	1912129	■	1857492	1916848	1885558	1885557	1915023	1880902	1916888	811912
1111819				"	1902407	829421	1900221	"	"	1916972	1881371	1916901	
1111821	125947	"	"	"	1912730	1857502	1883498	"	"	1914433	"	1918377	"
1111822	"	"	"	"	1902407	829421	1908587	"	"	1916520	1880902	1919225	"
1111824	"	"	"	"	↑	↑	1918280	"	"	1918404	"	1947655	"
1111825	"	"	"	"	1902407	1843167	1885413	"	"	1916429	1881371	1918597	"
1111828	"	"	"	"	"	829421	1903101	"	"	1916385	"	1921042	"
1111829	"	"	"	"	↑	"	1908587	"	"	1915023	1880902	1921077	"
1111832	"	"	"	"	1902407	"	1911092	"	"	1921328	1881371	1921327	"
1111833		"	"	"	"	"	1900221	"	"	1916902	"	1916901	"
1111835	125947	"	"	"	△	1857492	1921908	"	"	1914246	"	1921945	"
1111836		"	"	"	1902407	829421	1906858	"	"	1922262	"	1931603	"
1111837		"	"	"	"	"	1926116	"	"	1915023	1880902	1922295	"
1111838	125947	"	"	"	809673	"	1885413	"	"	1916520	"	1916519	"
1111840	"	"	"	"	↑	↑	1883498	"	"	1914433	1881371	1923622	"
1111841	"	"	"	"	1912730	1857502	"	"	"	1900638	"	1912739	"
1111842		"	"	"	■	■	1883874	"	"	1904106	1880902	1924218	"
1111843		"	"	"	1902407	829421	1900221	"	"	1916902	1881371	1924303	"
1111844		"	"	"	"	"	"	"	"	"	"	1924303	"
1111846		"	"	"	1912763	1908031	1926116	"	"	1916520	1880902	1924960	"
1111848		"	"	"	■	■	1912127	"	"	"	"	1926192	"
1111849		"	"	"	1902407	829421	1900221	"	"	1916902	1881371	1924303	"
1111850		"	"	"	"	"	"	"	"	"	"	"	"
1111851		"	"	"	821865	1862218	1886558	"	"	1925023	"	1926922	"
1111853	125947	"	"	"	1907957	829421	1883509	"	"	1927189	1813002	1927187	"
1111854	"	"	"	"	1902407	"	1911092	"	"	1927413	1888971	1927411	"
1111859	"	"	"	"	"	"	1910312	"	"	1928756	1921271	1928755	"
1111860	"	"	"	"	"	"	1911092	"	"	1929040	1883171	1929039	"

■ Gear furnished by Diamond T.

△ Gear furnished by Clark Equipment.

† Coupling or Gear & Pin not furnished by Delco Remy.


Use 1909665 Gear, 1908031 Gear Pin, 821865 Collar, 1862218 Collar Pin.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
27	Lock Washer—Breaker Plate Support Screw -----	453844	1111818-9; 21-2-4-5-8-9; 32-3-5-6-7-8; 40-1-2-3-4-6-8-9; 50-1-3-4-9; 60
	Lock Washer—Cam Lubricator Screw -----	453844	1111819; 21-2-5-8-9; 32-3-6-7-8; 40-1-2-3-4-6-8-9; 50-1-3-4-9; 60
28	Lock Washer—Condenser Attaching Screw -----	453844	1111818-9; 21-2-4-5-8-9; 32-3-5-6-7-8; 40-1-2-3-4-6-8-9; 50-1-3-4-9; 60
29	Lock Washer—Cap Spring Support Screw -----	453844	1111818-9; 21-2-4-5-8-9; 32-3-5-6-7-8; 40-1-2-3-4-6-8-9; 50-1-3-4-9; 60
—	Lock Washer—Terminal Stud—Inside -----	453844	1111821-2-4-5-8-9; 32-3-5-6-7-8; 40-4-6-8; 51-3-4-9; 60
30	Lock Washer—Terminal Stud—Outside -----	453844	1111818-9; 41-2-3-9; 50
NUTS			
31	Nut—Terminal Stud—Inside -----	817363	1111818-9; 21-2-4-5-8-9; 32-3-5-6-7-8; 40-1-2-3-4-6-8-9; 50-1-9; 60
32	Nut—Terminal Stud—Outside -----	120622	1111818-9; 21-2-4-5-8-9; 32-3-5-6-7-8; 40-1-2-3-4-6-8-9; 50-1-3-4-9; 60
32	Nut—Terminal Stud—Outside (Round) -----	1924372	1111854
33	Nut—Weight Hold Down Plate Attaching -----	1923540	1111818-9; 21-2-4-5-8-9; 32-3-5-6-7-8; 40-1-2-3-4-6-8-9; 50-1-3-4-9; 60
SCREWS			
34	Screw—Breaker Plate Support -----	453418	1111818-9; 21-2-4-5-8-9; 32-3-5-6-7-8; 40-1-2-3-4-6-8-9; 50-1-3-4-9; 60
	Screw—Cam Lubricator Attaching -----	453304	1111819; 21-2-5-8-9; 32-3-6-7-8; 40-1-2-3-4-6-8-9; 50-1-3-4-9; 60
35	Screw—Condenser Attaching -----	453304	1111818-9; 21-2-4-5-8-9; 32-3-5-6-7-8; 40-1-2-3-4-6-8-9; 50-1-3-4-9; 60
36	Screw—Contact Attaching -----	1914916	All
37	Screw—Distributor Cap Spring Support -----	453461	1111818-9; 21-2-4-5-8-9; 32-3-5-6-7-8; 40-1-2-3-4-6-8-9; 50-1-3-4-9; 60
—	Screw—H. T. Terminal—Side -----	1860406	1111833-8; 44; 50
—	Screw—H. T. Terminal—Center -----	1860407	1111833-8; 44; 50
—	Screw—H. T. Terminal—Shipped Separate -----	1839164	1111822-8-9; 42-8; 51
WASHERS			
38	Washer—Felt—Housing Cover Seal -----	1914309	1111818-9; 21-2-4-5-8-9; 32-3-5-6-7-8; 40-1-2-3-4-6-8-9; 50-1-9; 60
39	Washer—Insulation—Terminal Stud—Outside -----	1882247	1111818-9; 41-2-3-9
40	Washer—Plain—Terminal Stud—Inside -----	810794	1111818-9; 41-2-3-9
41	Washer—Plain—Terminal Stud—Outside -----	815540	1111818-9; 41-2-3-9
MISCELLANEOUS			
—	BLOCK—Gear Cushion -----	1908028	1111842-6-8
42	BUSHING—Distributor Housing -----	1909003	1111818-9; 21-2-4-5-8-9; 32-3-5-6-7-8; 40-1-2-3-4-6-8-9; 50-1-3-4-9; 60
43	BUTTON—Carbon—In Cap ($\frac{1}{4}$ Dia.) -----	1938193	1111818-9; 21-4-5; 32-3-5-6-7; 40-1-3-4-6-9; 50-3-4-9; 60
43	BUTTON—Carbon—In Cap ($\frac{1}{8}$ Dia.) -----	806923	1111821-2-8-9; 38; 42-8; 51
—	CLIP—Lock—Terminal Stud -----	1914144	1111821-2-4-5-8-9; 32-3-5-6-7-8; 40-4-6-8; 50-1-3-4-9; 60
—	CUSHION—Gear -----	1908029	1111842-6-8
44	Felt WICK—In Cam -----	819639	1111818-9; 21-2-4-5-8-9; 32-3-5-6-7-8; 40-3-4-6-8-9; 50-1-3-4-9; 60
44	Felt WICK—In Cam -----	1963555	1118141-2
45	GASKET—Housing Cover -----	1889966	1111818-9; 21-2-4-5-8-9; 32-3-5-6-7-8; 40-1-2-3-4-6-8-9; 50-1-9; 60
—	LUBRICATOR—Cam -----	1885562	1111819; 21-2-5-8-9; 32-3-6-7; 40-1-2-3-4-6-8-9; 50-1-3-4-9; 60
—	OILER -----	1922131	1111819; 33; 42-3-4-8-9; 50
—	OILER -----	1922265	1111836-7; 46; 51
—	RETAINER—Gear Cushion -----	1908030	1111842-6-8
—	SHAFT—Extension -----	1907956	1111853

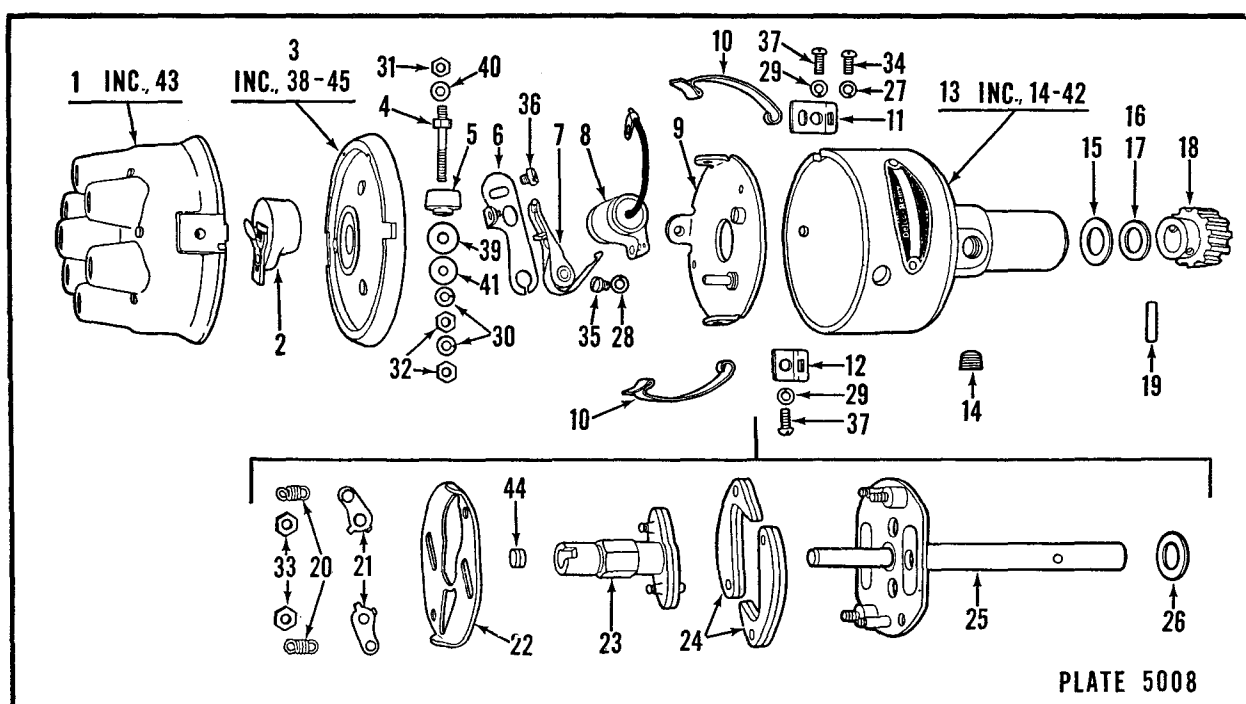 

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover — Housing	Screw or Stud — Terminal	Bushing — Ins.	Contact Point and Support	Breaker Lever	Con- denser	Plate — Breaker	Spring — Cap	Support — Cap Spring & Cover Locator	Support — Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111862	1931512	1924245	1925477	1924371	▲	a1848038	a1917254	1900272	1908033	1889967	1847289	1847289	1927408
1111863	1842714	1905590	1900119	1916806	†	♦1882964	♦1881394	“	“	“	1889999	“	1929476
1111864	“	“	“	“	†	“	“	“	“	“	“	“	1917312
1111865	“	“	“	“	†	“	“	“	“	“	“	“	1963695
1111866	1931512	1924245	1925477	1924371	▲	a1848038	a1917214	“	“	“	1847289	“	1927408
1111868	1842714	1905590	1900119	1916806	†	♦1882964	♦1881394	“	“	“	1889999	“	1931825
1111869	“	“	“	“	†	“	“	“	“	“	“	“	1963695
1111870	1867722	“	“	“	†	b1848038	b813238	“	1847643	“	“	“	1963697
1111871	1931512	1924245	1925477	1924371	▲	a1848038	a1917254	“	1908033	“	1847289	1847289	1932074
1111872	“	“	“	“	▲	“	“	“	“	“	“	“	“
1111873	1842714	1909590	1900119	1916806	†	♦1882964	♦1881394	“	“	“	1889999	“	1932970
1111874	“	“	“	“	†	“	“	“	“	“	“	“	1932992
1111876	1867722	“	“	“	†	b1848038	b 813238	“	1847643	“	“	“	1963697
1111877	1931512	1924245	1925477	1924371	▲	a1848038	a1917254	“	1908033	“	1847289	“	1932074
1111878	1873290	1905590	1900119	1916806	†	♦1882964	♦1881394	“	“	“	1889999	“	1917312
1111879	824735	820445	“	“	†	*1848038	*1905344	“	1847643	1871838	1847289	“	1927776
1111880	1867722	1905590	1900119	“	†	b “	b 813238	“	“	1889967	1889999	“	1963695
1111881	1842714	“	“	“	†	♦1882964	♦1881394	“	1908033	“	“	“	“
1111882	“	“	“	“	†	“	“	“	“	“	“	“	1938416
1111883	1862403	“	“	“	†	b1848038	b 813238	“	1847643	“	“	“	1963697
1111886	824735	820445	“	“	†	♦1882964	♦1881394	“	“	1871838	1847289	“	1927776
1111887	1867722	1905590	1900119	“	†	b1848038	b 813238	“	“	1889967	1889999	“	1963697
1111888	“	“	“	“	†	b “	b “	“	“	“	“	“	“
1111889	“	“	“	“	†	b “	b “	“	“	“	“	“	1963695

▲Use 1924369 Bushing (Inside), 1924370 Bushing (Outside).

♦Contact Set No. 1882965.

 
†1916805 Bushing (Inside), 1914142 Bushing (Outside).

aContact Set No. 1924571.

bContact Set No. 1855720.

*Contact Set No. 1911119.

Delco-Remy SERVICE PARTS CATALOG

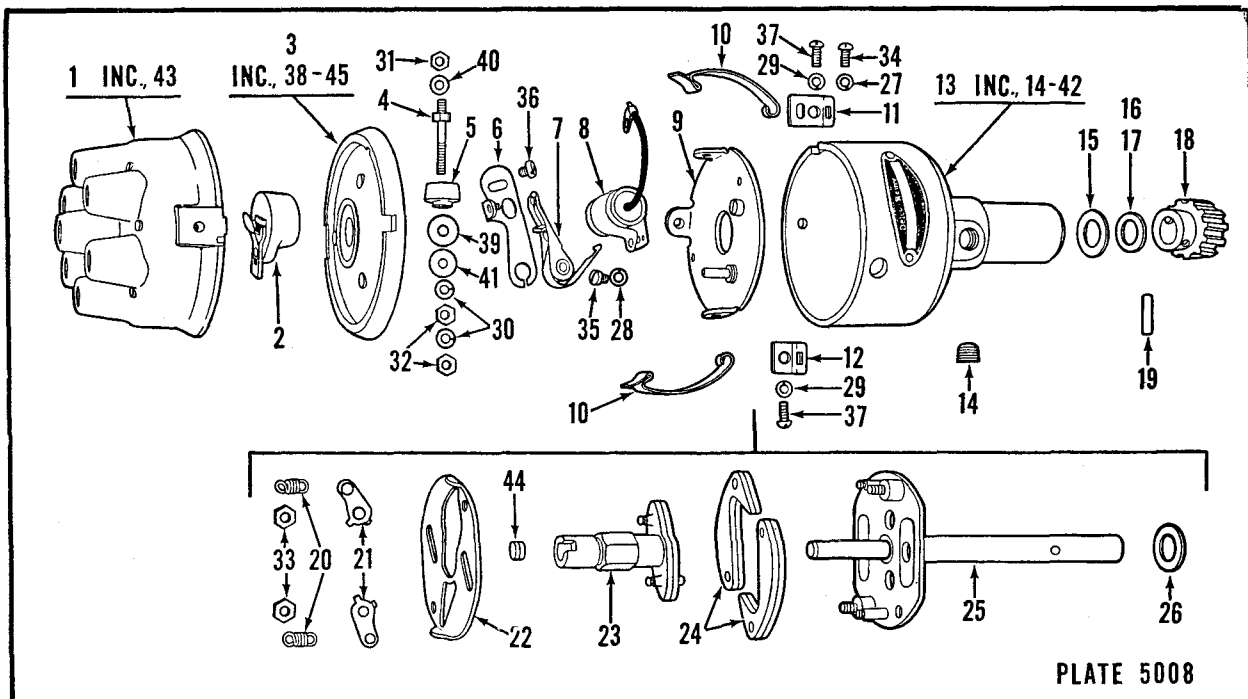

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar Coupling or Gear	Pin	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Washer — Space Under Weight Plate
	14	15	16	17	18	19	20	21	22	23	24	25	26
1111862	125947	811912	810074	1912129	1902407	829421	1906858	1885558	1885557	1929585	1881371	1929584	811912
1111863	"	"	"	"	"	"	1930481	"	"	1915023	1880902	1922295	"
1111864	"	"	"	"	"	"	1929319	"	"	1914623	"	1930464	"
1111865	"	"	"	"	"	"	1931650	"	"	1928756	1921271	1931603	"
1111866	"	"	"	"	"	"	1903693	"	"	1931580	1881371	1931579	"
1111868		"	"	"	1907957	"	1885339	"	"	1916385	"	1931504	"
1111869		"	"	"	†	†	1909189	"	"	1924360	"	1923622	"
1111870	125947	"	"	"	821865	1862218	1908587	"	"	1915023	1880902	1931896	"
1111871		"	"	"	#	#	1912127	"	"	1932073	"	1932071	"
1111872		"	"	"	#	#	1906766	"	"	"	"	1932285	"
1111873	125947	1837617	1927529	1848596	1902407	829421	1929319	"	"	1914623	"	1930464	"
1111874	"	"	"	"	"	"	1930481	"	"	1915023	"	1922295	"
1111876	"	811912	"	"	"	"	1908587	"	"	"	"	1934701	"
1111877		"	810074	1912129	*	*	1912127	"	"	1932073	"	1932071	"
1111878		"	"	"	1902407	829421	1900221	"	"	1916902	1881371	1924303	"
1111879	125947	"	"	"	1917569	1857502	1913799	"	"	1915726	1882907	1935748	"
1111880	"	"	"	"	†	†	1903693	"	"	1924360	1881371	1937845	"
1111881	"	811912	810074	1912129	1902407	829421	1911092	"	"	1929040	"	1929039	"
1111882	"	"	"	"	821865	1862218	1886558	"	"	1925023	"	1938414	"
1111883	"	"	"	"	809673	829421	1887553	"	"	1916520	1880902	1915560	811912
1111886	"	"	"	"	1917569	1857502	1906858	"	"	1916823	"	1939358	"
1111887	"	"	"	"	809673	829421	1912127	"	"	1916520	"	1939495	"
1111888	"	"	"	"	"	"	1939381	"	"	1939451	1881371	1929478	"
1111889	453465	"	"	"	1902407	"	1889680	"	"	1928756	1921271	1931603	"

†Coupling or Gear & Pin not furnished by Delco-Remy.

*Use 1909665 Gear, 1908031 Gear Pin, 821865 Collar, 1862218 Collar Pin.

*Use 1909666 Gear, 1908031 Gear Pin, 821865 Collar, 1862218 Collar Pin.


MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
27	Lock Washer—Breaker Plate Support Screw -----	453844	1111862-3-4-5-6-8-9; 70-1-2-3-4-6-7-8-9; 80-1-2-3-6-7-8-9
	Lock Washer—Cam Lubricator Screw -----	453844	1111862-3-4-5-6-8-9; 71-2-3-4-7-8; 81
28	Lock Washer—Condenser Attaching Screw -----	453844	1111862-3-4-5-6-8-9; 70-1-2-3-4-6-7-8-9; 80-1-2-3-6-7-8-9
29	Lock Washer—Cap Spring Support Screw -----	453844	1111862-3-4-5-6-8-9; 70-1-2-3-4-6-7-8-9; 80-1-2-3-6-7-8-9
	Lock Washer—Dial Attaching Screw -----	9421423	1111879; 86
30	Lock Washer—Terminal Stud -----	453844	1111862-3-4-5-6-8-9; 70-1-2-3-4-6-7-8-9; 80-1-2-3-6-7-8-9
NUTS			
	Nut—Dial Attaching Screw -----	453848	1111879; 86
31	Nut—Terminal Stud—Inside -----	817363	1111863-4-5-8-9; 70-3-4-6-8-9; 80-1-2-3-6-7-8-9
32	Nut—Terminal Stud—Outside -----	120622	1111862-3-4-5-6-8-9; 70-1-2-3-4-6-7-8-9; 80-1-2-3-6-7-8-9
32	Nut—Terminal Stud—Outside (Round) -----	1924372	1111862-6; 71-2-7
33	Nut—Weight Hold Down Plate Attaching -----	1923540	1111862-3-4-5-6-8-9; 70-1-2-3-4-6-7-8-9; 80-1-2-3-6-7-8-9
SCREWS			
34	Screw—Breaker Plate Support -----	453418	1111862-3-4-5-6-8-9; 70-1-2-3-4-6-7-8-9; 80-1-2-3-6-7-8-9
	Screw—Cam Lubricator Attaching -----	453304	1111862-3-4-5-6-8-9; 71-2-3-4-7-8; 81
	Screw—Cap High Tension (Side) -----	1860406	1111878; 83
	Screw—Cap High Tension—Center -----	1860407	1111878; 83
35	Screw—Condenser Attaching -----	453304	1111862-3-4-5-6-8-9; 70-1-2-3-4-6-7-8-9; 80-1-2-3-6-7-8-9
36	Screw—Contact Attaching -----	1914916	All
	Screw—Dial Attaching -----	120854	1111879; 86
37	Screw—Distributor Cap Spring Support -----	453461	1111862-3-4-5-6-8-9; 70-1-2-3-4-6-7-8-9; 80-1-2-3-6-7-8-9
	Screw—H.T. Terminal—Shipped Separate -----	1839164	1111863-4-5-8-9; 73-4
WASHERS			
38	Washer—Felt—Housing Cover Seal -----	1914309	1111863-4-5-8-9; 70-3-4-6-8; 80-1-2-3-7-8-9
	Washer—Plain—Dial Attaching Screw -----	1905125	1111879; 86
	Washer—Under Mtg. Adaptor Sleeve -----	1926782	1111879; 86
MISCELLANEOUS			
	ADVANCE ARM—Assem. -----	1838617	1111879; 86
	BLOCK—Gear Cushion -----	1908028	1111871-2-7
42	BUSHING—Distributor Housing -----	1909003	1111862-3-4-5-6-8-9; 70-1-2-6-7-8-9; 80-1-2-3-6-7-8-9
42	BUSHING—Distributor Housing -----	1932972	1111873-4
43	BUTTON—Carbon—In Cap (1/4 Dia.) -----	1938193	1111862-5-6; 70-1-2-6-7-8-9; 80-6-7-8-9
43	BUTTON—Carbon—In Cap (1/8 Dia.) -----	806923	1111863-4-8-9; 73-4; 81-2-3
	CLIP—Lock—Terminal Stud -----	1914144	1111862-3-4-5-6-8-9; 70-1-2-3-4-6-7-8-9; 80-1-2-3-6-7-8-9
	COLLAR—Spacer—Governor -----	1938418	1111882
	CUSHION—Gear -----	1908029	1111871-2-7
	DIAL—Advance Arm -----	815095	1111879; 86
44	Felt WICK—In Cam -----	819639	1111862-3-4-5-6-8-9; 70-1-2-3-4-6-7-8-9; 80-1-2-3-6-7-8-9
	FITTING—Lubrication—In Housing -----	271285	1111882
45	GASKET—Housing Cover -----	1889966	1111863-4-5-8-9; 70-3-4-6-8; 80-1-2-3-7-8-9
	KEY—Woodruff—Gov. Space Collar Attaching -----	190016	1111882
	LUBRICATOR—Cam -----	1885562	1111862-3-4-5-6-8-9; 71-2-3-4-7-8; 81
	OILER—In Housing -----	1922265	1111868-9
	OILER—In Housing -----	1922131	1111871-2-7-8
	PLUG—Thrust -----	1912818	1111882
	RETAINER—Cushion -----	1908030	1111871-2-7
	SEAL—Oil—In Housing -----	1912820	1111882
	SEAL—Oil—In Housing -----	1885665	1111873-4
	SLEEVE—Mounting Adapter -----	1917568	1111879; 86

Revised to October 1, 1969

 SERVICE PARTS CATALOG

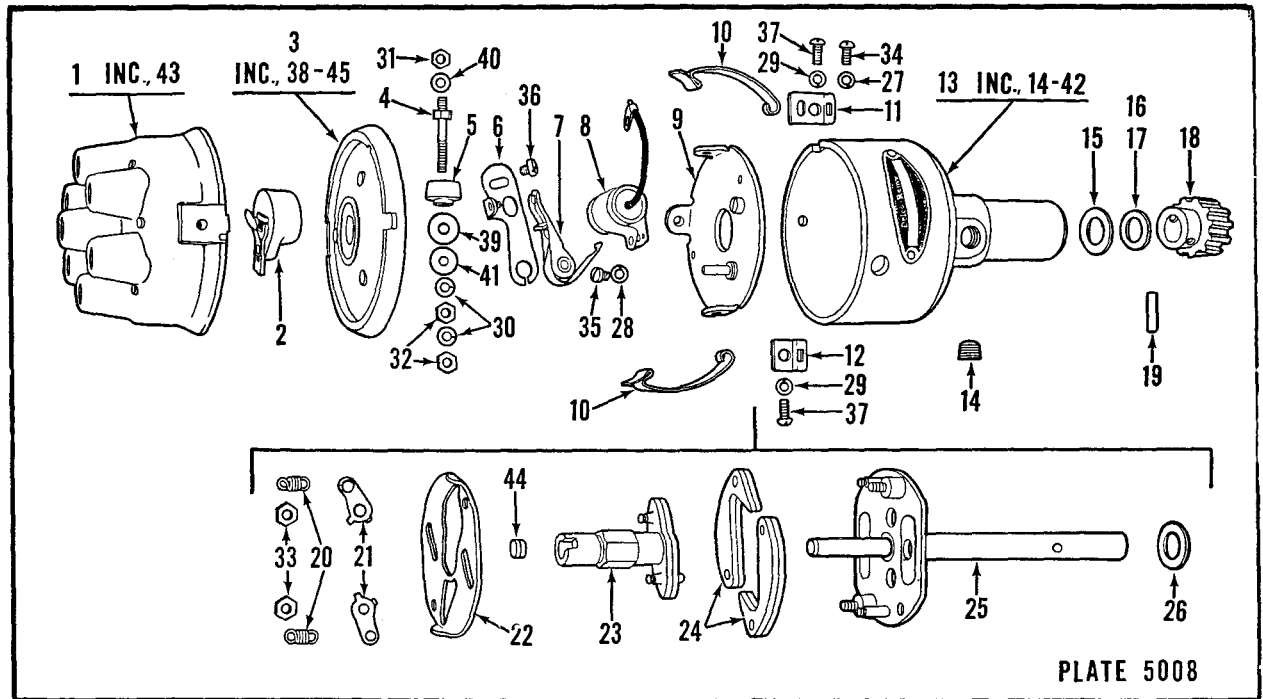

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover Housing	Screw or Stud Terminal	Bushing Ins	Contact Point and Support	Breaker Lever	Condenser	Plate Breaker	Spring Cap	Support Cap Spring & Cover Locator	Support Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111890	1911597	1905590	1900119	1916806	†	b1848038	b 813238	1900272	1847643	1889967	1889999	1847289	1917900
1111891	1867722	"	"	"	†	b " "	b " "	"	1847643	"	"	"	1963697
1111892	824735	820445	"	"	†	b " "	b " "	"	"	1871838	1847289	1847289	1919783
1111893	1867722	1905590	1900119	"	†	b " "	b " "	"	"	1889967	1889999	"	1917312
1111896	1911597	820445	"	"	†	b " "	b " "	"	"	"	"	"	1963695
1111897	1942428	1905590	"	"	†	b " "	b " "	"	"	"	"	"	"
1111898	811735	820445	"	"	†	b " "	b " "	"	"	"	"	"	1917900
1111899	1867722	1905590	"	"	†	b " "	b " "	"	"	"	"	"	1963695
1111900	811735	820445	"	"	†	b " "	b " "	1928111	"	"	"	"	1963697
1111902	1842714	1905590	"	"	†	a1882964	a1881394	1950314	1908033	"	"	"	1945068
1111903	"	"	"	"	†	a " "	a " "	"	"	"	"	"	1945095
1111904	1837862	820445	"	"	†	b1848038	b 813238	1900272	1847643	"	"	"	1917900
1111905	1931512	1924245	1925477	1924371	*	c1917254	c1917254	"	1908033	"	1847289	"	1943052
1111906	1872832	1905590	1900119	1916806	†	b " "	b 813238	"	1847643	"	1889999	"	1947954
1111907	811735	820445	"	"	†	b " "	b " "	1928111	"	"	"	"	1963695
1111908	"	"	"	"	†	b " "	b " "	"	"	"	"	"	1963697
1111909	"	"	"	"	†	b " "	b " "	"	"	"	"	"	1963695
1111910	"	"	"	"	†	b " "	b " "	"	"	"	"	"	1963697
1111911	1842714	1905590	"	1916806	†	a1882964	a1881394	1900272	"	"	"	"	"
1111912	"	"	"	"	†	a " "	a " "	"	"	"	"	"	"
1111913	1867722	1883500	"	"	†	b1848038	b 813238	"	"	"	"	"	1963697
1111914	1931512	1924245	1925477	1924371	*	c " "	c1917254	"	1908033	"	"	"	1963695
1111915	"	"	"	"	*	c " "	c " "	"	"	"	"	"	"
1111916	1842714	1905590	1900119	1916806	†	a1882964	a1881394	1950314	"	"	1889999	"	1931825
1111917	1867722	"	"	"	†	b1848038	b 813238	1900272	1847643	"	"	"	1963695
1111919	1842714	"	"	"	†	a1882964	a1881394	"	1908033	"	"	"	1926194
1111920	"	"	"	"	†	a " "	a " "	1950314	"	"	"	"	1931825
1111922	1931512	1924245	1925477	1924371	x	c1848038	c1917254	1900272	"	"	"	"	1943052
1111923	"	"	"	"	x	c " "	c " "	"	"	"	"	"	"

†1916805 Bushing (Inside), 1914142 (Outside).

a-Contact set No. 1882965.

 
b-Contact Set No. 1855720.

c-Contact Set No. 1924571

*1924369 Bushing (Inside), 1924370 (Outside).

x1924369 Bushing (Inside), 1924370 (Outside).

Delco-Remy SERVICE PARTS CATALOG

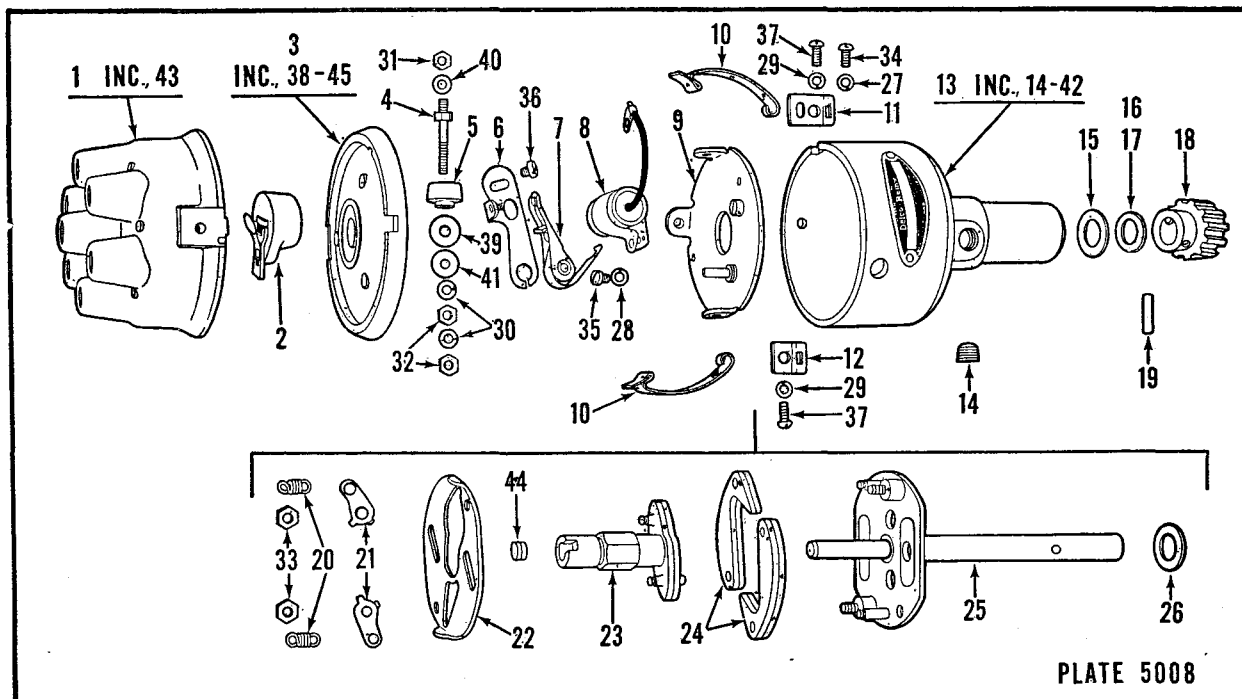

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar Coupling or Gear	Pin	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Washer — Space Under Weight Plate
	14	15	16	17	18	19	20	21	22	23	24	25	26
1111890	125947	811912	810074	1912129	1902407	829421	1903101	1885558	1885557	1914623	1880902	1939525	811912
1111891	453465	"	"	"	809673	"	1940423	"	"	1940733	"	1940723	"
1111892	125947	"	"	"	"	"	1883498	"	"	1942820	1881371	1916527	"
1111893	"	"	"	"	1909709	1908031	1903693	"	"	1924360	"	1941652	"
1111896	"	"	"	"	1850777	829421	1911092	"	"	1929040	"	1942390	"
1111897	"	"	"	"	1942355	"	"	"	"	1942426	"	1961597	"
1111898	"	"	"	"	809673	"	1903693	"	"	1937455	"	1948358	"
1111899	"	"	"	"	1942355	"	"	"	"	1924360	"	1942833	"
1111900	453465	"	"	"	†	†	1900221	"	"	1940086	"	1942888	"
1111902	"	"	"	"	1952113	1862218	1903101	"	"	1921525	1880902	1918017	"
1111903	"	"	"	"	1864165	1857492	"	"	"	1914623	"	1915724	"
1111904	125947	"	"	"	809673	829421	1903693	"	"	1937455	1881371	1948358	"
1111905	"	"	"	"	1902407	"	1939381	"	"	1946240	"	1945947	"
1111906	"	"	"	"	809673	"	1910529	"	"	1925029	"	1916524	"
1111907	"	"	"	"	1952953	1862218	1946722	"	"	1935159	"	1946742	"
1111908	453465	"	"	"	"	"	1947657	"	"	1947656	"	1947655	"
1111909	125947	"	"	"	"	"	1947660	"	"	1915823	1921271	1947659	"
1111910	453465	"	"	"	809673	829421	1947657	"	"	1947656	1881371	1947655	"
1111911	"	"	"	"	†	†	1948359	"	"	1915023	1880902	1948373	"
1111912	125947	"	"	"	†	†	1948360	"	"	"	"	1948551	"
1111913	"	"	"	"	809673	829421	1911255	"	"	1940733	"	1940723	"
1111914	"	"	"	"	°	#	1912127	"	"	1932073	"	1932071	"
1111915	"	"	"	"	°	#	"	"	"	"	"	"	"
1111916	125947	"	"	"	1907957	274795	1903101	"	"	1914623	"	1952263	"
1111917	"	"	"	"	†	†	1910530	"	"	1921328	1881371	1952556	"
1111919	"	811912	810074	1912129	†	•	1912127	"	"	1916520	1880902	1926192	"
1111920	125947	"	"	"	1907957	274795	1903101	"	"	1914623	"	1955606	"
1111922	"	"	"	"	1902407	829421	1939381	"	"	1946240	1881371	1957777	"
1111923	"	"	"	"	"	274795	1887553	"	"	1958201	1880902	1958320	"

†Coupling or Gear & Pin not furnished by Delco-Remy.

°Pin for 821865 collar is 1862218. Pin for 1949591 gear is 455106.

•Pin for 821865 collar is 1862218. Pin for 1909666 gear is 1908031.

°Collar 821865—Gear 1949591.

△Collar 1862218—Gear 1949605.

†Collar 821865—Gear 1909666.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
27	Lock Washer—Breaker Plate Support Screw -----	453844	1111890-1-2-3-6-7-8-9; 900-2-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-19; 20-2-3
28	Lock Washer—Cam Lubricator Screw -----	453844	1111902-3-5; 14-15-16-19; 20-2-3
	Lock Washer—Condenser Attaching Screw -----	453844	1111890-1-2-3-6-7-8-9; 900-2-3-5-6; 11-12-13-14-15-16-17-19; 20-2-3
29	Lock Washer—Cap Spring Support Screw -----	453844	1111890-1-2-3-6-7-8-9; 900-2-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-19; 20-2-3
30	Lock Washer—Terminal Stud -----	453844	1111890-1-2-3-6-7-8-9; 900-2-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-19; 20-2-3
NUTS			
31	Nut—Terminal Stud—Inside -----	817363	1111890-1-2-3-6-7-8-9; 900-2-3-4-6-7-8-9; 10-11-12-13-16-17-19; 20
31	Nut—Terminal Stud—Inside -----	1924372	1111905; 914-15; 22-3
32	Nut—Terminal Stud—Outside -----	120622	1111890-1-2-3-6-7-8-9; 900-2-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-19; 20-2-3
33	Nut—Weight Hold Down Plate Attaching -----	1923540	1111890-1-2-3-6-7-8-9; 900-2-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-19; 20-2-3
SCREWS			
34	Screw—Breaker Plate Support -----	453418	1111890-1-2-3-6-7-8-9; 900-2-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-19; 20-2-3
35	Screw—Cam Lubricator Attaching -----	453304	1111902-3-5; 14-15-16-19; 20-2-3
	Screw—Condenser Attaching -----	453304	1111890-1-2-3-6-7-8-9; 900-2-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-19; 20-2-3
36	Screw—Contact Attaching -----	1914916	All
37	Screw—Distributor Cap Spring Support -----	453461	1111890-1-2-3-6-7-8-9; 900-2-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-19; 20-2-3
WASHERS			
38	Washer—Felt—Housing Cover Seal -----	1914309	1111890-1-3-6-7-8-9; 900-2-3-4-6-7-8-9; 10-11-12-13-16-17-18; 20
—	Washer—Plain—Terminal Stud (Inside) -----	810794	1111896
MISCELLANEOUS			
—	BLOCK—Gear Cushion -----	1908028	1111919
—	BRACKET—Condenser -----	1910476	1111916; 20-2-3
42	BUSHING—Distributor Housing -----	1909003	1111890-1-2-3-6-7-8-9; 900-2-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-17-19; 20-2-3
43	BUTTON—Carbon—In Cap (1/4 Dia.) -----	1938193	1111890
43	BUTTON—In Cap -----	1938193	1111891-2-3-6-7-8-9; 900-5-7-8-9; 10-13-14-15-17; 22-3
43	BUTTON—In Cap -----	* 806923	1111902-3-4-6; 11-12-16-19; 20
—	CLIP—Lock—Terminal Stud -----	1914144	1111890-1-2-3-6-7-8-9; 900-2-3-4-5-6-7-8-9; 10-11-12-13-14-15-16-19; 20-2-3
—	CUSHION—Gear -----	1908029	1111919
44	Felt WICK—In Cam -----	1963555	1111890-1-2-3-6-7-8-9; 900-5-6-7-8-9; 10-11-12-13-14-15-16-17-19; 20-2-3
45	GASKET—Housing Cover -----	1889966	1111890-1-2-3-6-7-8-9; 900-2-3-4-6-7-8-9; 10-11-12-13-16-17-19; 20
—	LUBRICATOR—Cam -----	1885562	1111902-3-5; 14-15-16-19; 20-2-3
—	OILER—Housing -----	1922131	1111914-15-19
—	OILER—Housing -----	1922265	1111902-3; 16; 20
—	PIN—Gear Attaching -----	1908031	1111919
—	RETAINER—Gear Cushion -----	1908030	1111919
—	TERMINAL H. T. Screw Type -----	1839164	1111919

*If button recess in cap is spherical bottom drilled use 1938193.

May 15, 1963

Delco-Remy SERVICE PARTS CATALOG

 DISTRIBUTOR—Group 105-E
Models 1111918; 921
Page 1

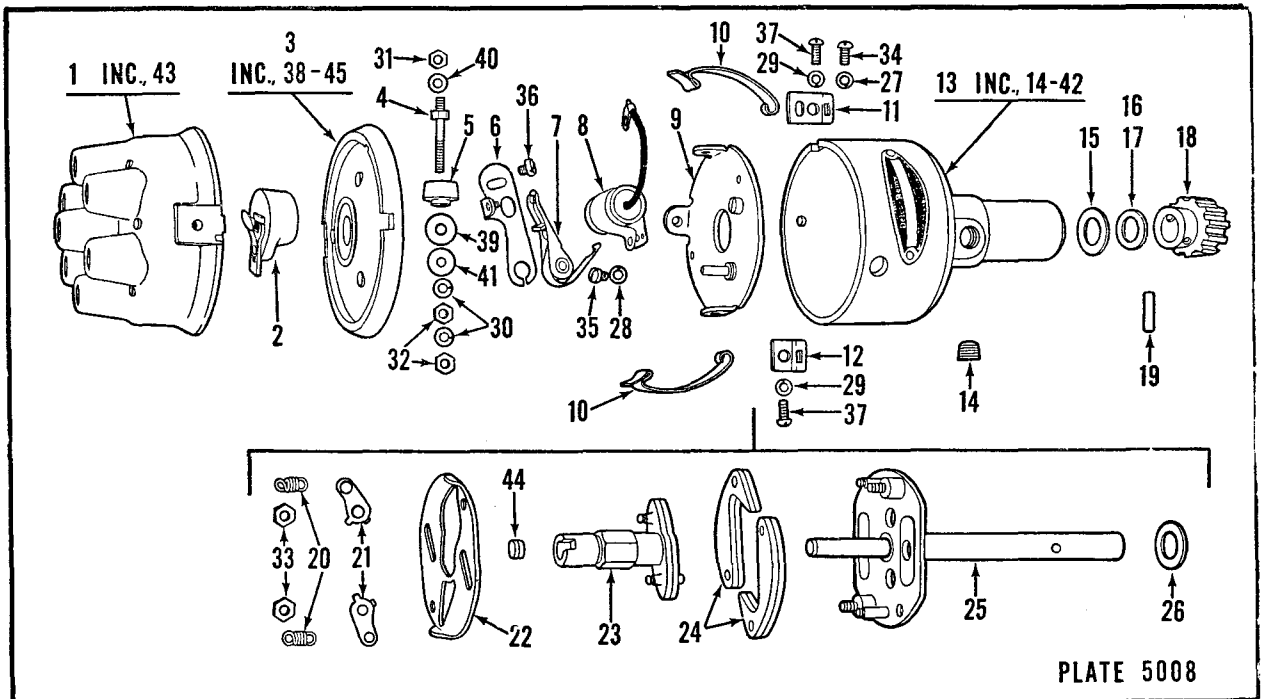


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover — Housing	Screw or Stud — Terminal	Bushing — Ins.	Contact Point and Support	Breaker Lever	Con- denser	Plate — Breaker	Spring — Cap	Support — Cap Spring & Cover Locator	Support — Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111918	1867722	1905590	1912381	1916806	†	b1848038	b 813238	1900272	1847643	1889967	1889999	1847289	1917304
1111921	"	"	"	1847647	1878405	b "	b "	"	"	"	"	"	1909001

†1961805 Bushing (Inside), 1914142 (Outside).
b-Contact Set No. 1855720.

 Delco-Remy SERVICE PARTS CATALOG

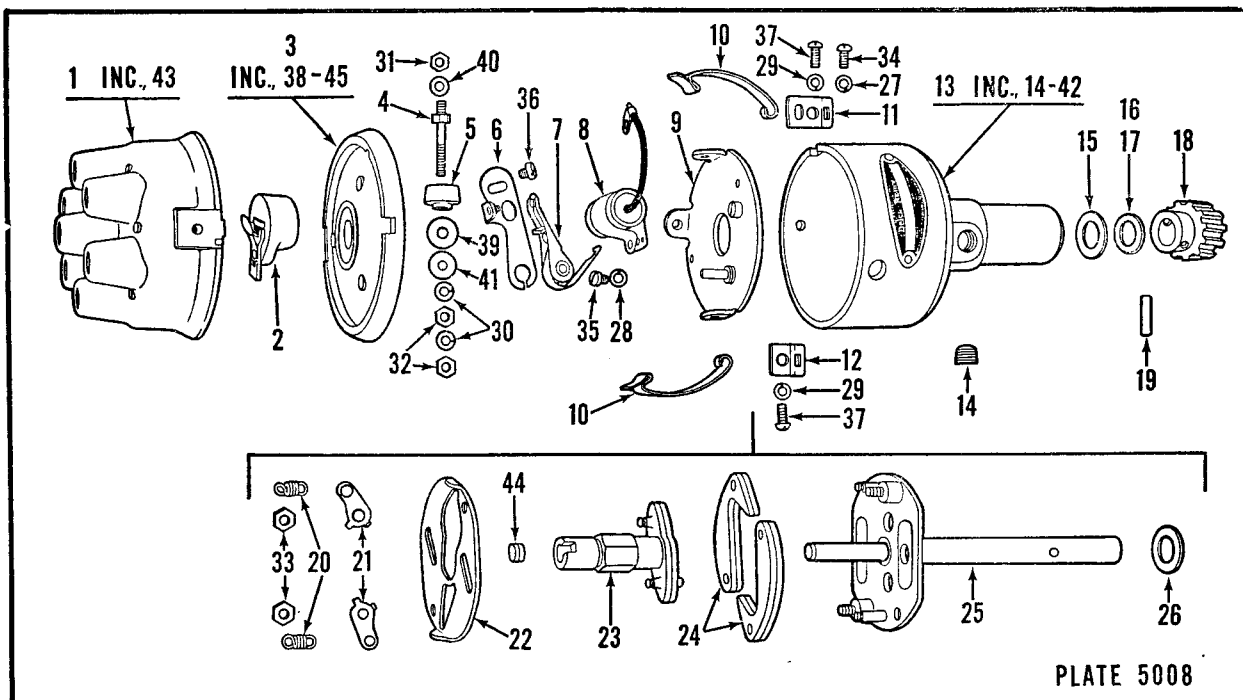


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar Coupling or Gear	Pin	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Washer — Space Under Weight Plate
	14	15	16	17	18	19	20	21	22	23	24	25	26
1111918	125947	811912	810074	810078	1953898	455862	1903693	1885558	1885557	1924360	1881371	1954114	811912
1111921	"	"	"	"	—	1911899	1908587	"	"	1915023	1880902	1931896	"

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	LOCK WASHERS		
27	Lock Washer—Breaker Plate Support Screw -----	453299	1111918-21
28	Lock Washer—Condenser Attaching Screw -----	453299	1111918-21
29	Lock Washer—Cap Spring Support Screw -----	453299	1111918-21
30	Lock Washer—Terminal Stud -----	453299	1111921
30	Lock Washer—Terminal Stud -----	1904376	1111918
	NUTS		
31	Nut—Terminal Stud—Inside -----	817363	1111918-21
32	Nut—Terminal Stud—Outside -----	120622	1111918
33	Nut—Weight Hold Down Plate Attaching -----	1923540	1111918-21
	SCREWS		
34	Screw—Breaker Plate Support -----	453418	1111918-21
—	Screw—Cam Lubricator Attaching -----	453304	1111918-21
35	Screw—Condenser Attaching -----	453304	1111918-21
36	Screw—Contact Adjusting -----	1914916	1111918-21
37	Screw—Distributor Cap Spring Support -----	453461	1111918-21
	WASHERS		
38	Washer—Felt—Housing Cover Seal -----	1914309	1111918-21
40	Washer—Ins. Terminal Stud (Outside) -----	1882247	1111921
—	Washer—Plain—Terminal Stud (Outside) -----	24754	1111921
—	Washer—Plain—Terminal Stud (Inside) -----	810794	1111921
	MISCELLANEOUS		
—	BRACKET—Condenser -----	1910476	1111918-21
42	BUSHING—Distributor Housing -----	1909003	1111918-21
43	BUTTON—In Cap -----	1938193	1111918-21
—	CLIP—Lock—Terminal Stud -----	1914144	1111918
44	Felt WICK—In Cam -----	819639	1111918-21
45	GASKET—Housing Cover -----	1889966	1111918-21

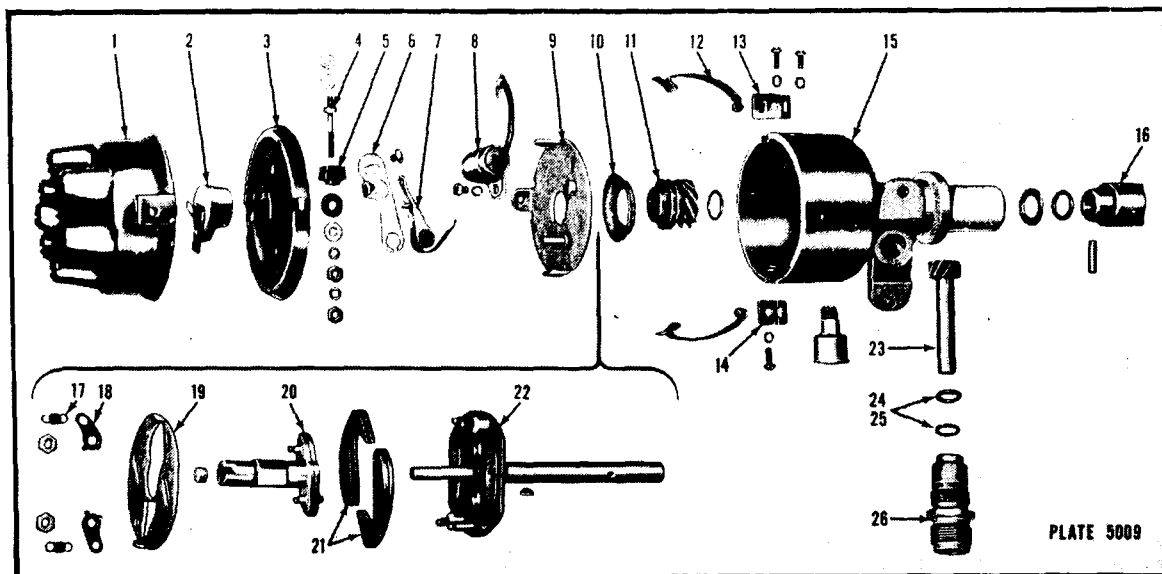 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover Housing	Screw or Stud Terminal	Bushing Insul.	Contact Point and Support	Breaker Lever	Condenser	Plate Breaker	Seal or Shield Oil	Gear Gov. or Tach. Drive	Spring Cap	Support Cap Spring Cover Locator
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112251	1867722	1905590	1900119	1916806	1878405	a1882964	a1881394	1900272	1908033	1900303	1900296	1889967	1889999
1112252	"	"	"	"	"	b1848038	b1905344	"	1847643	"	"	"	"
1112253	"	"	"	"	"	a1882964	a1881394	"	1908033	"	"	"	"
1112254	"	"	"	"	"	"	"	"	"	"	"	"	"
1112255	"	"	"	"	"	"	"	"	"	"	"	"	"
1112256	"	"	"	"	"	"	"	"	"	"	"	"	"
1112258	"	"	"	"	"	"	"	"	"	"	"	"	"
1112259	"	"	"	"	"	"	"	"	"	"	"	"	"
1112260	1842714	"	"	"	"	"	"	"	"	"	"	"	"
1112261	"	"	"	"	"	"	"	"	"	"	"	"	"
1112262	1867722	"	"	"	"	"	"	"	"	"	"	"	"
1112263	"	"	"	"	"	"	"	"	"	"	"	"	"
1112264	1862403	"	"	"	"	"	"	"	"	"	"	"	"
1112265	1842714	"	"	"	"	"	"	"	"	"	"	"	"
1112266	1867722	"	"	"	"	b1848038	b1905344	"	1847643	1912820	1912821	"	"
1112267	1842714	"	"	"	"	a1882964	a1881394	"	1908033	"	"	"	"
1112268	1867722	"	"	"	"	b1848038	b1905344	"	1847643	"	"	"	"
1112269	824735	"	"	"	"	"	"	1928111	"	"	"	1871838	1847289
1112270	1872832	"	"	"	"	a1882964	a1881394	1900272	1908033	"	"	"	"
1112271	1867722	"	1900119	"	"	"	"	"	"	"	"	1889967	1889999
1112272	824735	"	"	"	"	b1848038	b1905344	1928111	1847643	"	"	1871838	1847289
1112273	1867722	"	1900119	"	"	a1882964	a1881394	1900272	1908033	"	"	1889967	1889999
1112274	824735	"	"	"	"	b1848038	b1905344	1928111	1847643	"	"	1871838	1847289
1112275	1842714	"	1900119	"	"	a1882964	a1881394	1900272	1908033	1900303	1900296	1889967	1889999
1112276	824735	820445	"	"	"	c1848038	c813238	"	1847643	1912820	1912821	1871838	1847289
1112277	1872832	1905590	1900119	"	1878405	a1882964	a1881394	1900272	1908033	"	"	"	1889999
1112279	1867722	"	"	"	"	"	"	"	"	"	"	"	"
1112280	"	"	"	"	1878405	"	"	"	"	"	"	"	1847289

■Use 1914142 Bushing (Outside) and 1916805 Bushing (Inside).

 
aContact Set No. 1882965.

bContact Set No. 1911119.

cContact Set No. 1855720.

Delco-Remy

SERVICE PARTS CATALOG

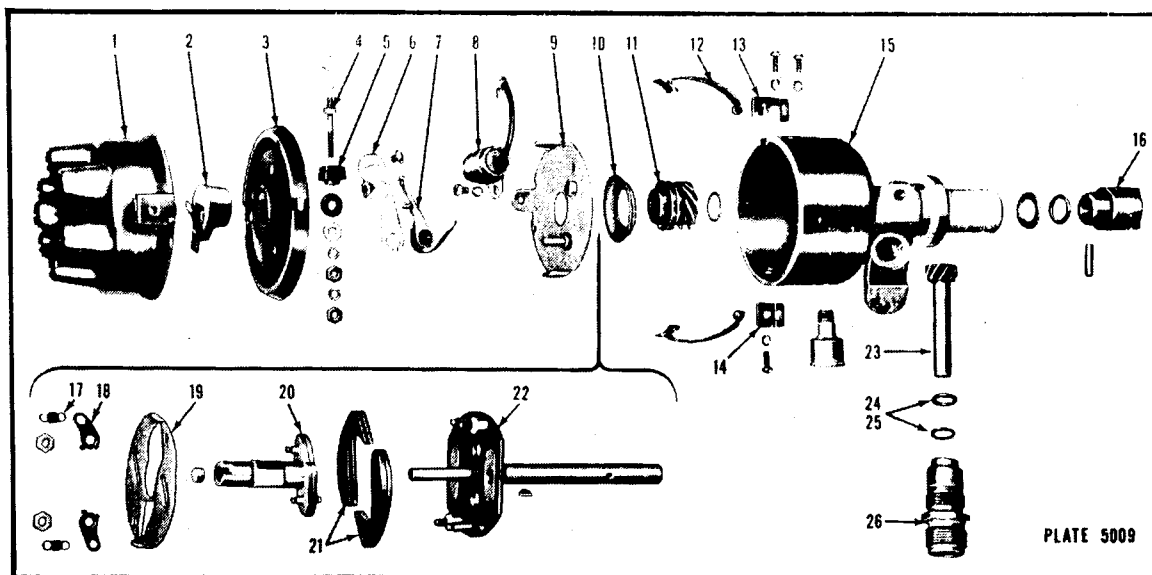

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Support Cap Spring	Housing	Collar, Coupling or Gear	Spring Weight	Lock Washer	Weight Hold Down Cup or Plate	Cam Assem- bly	Weight	Main Shaft	Shaft and Gear Gov. or Tach. Drive	Washer Space 3/4 thk.	Washer Shim .010 thk.	Bearing Gov. or Tach. Drive
	14	15	16	17	18	19	20	21	22	23	24	25	26
1112251	1847289	1907947	1902407	1886302	1877510	1886136	1904106	1880902	1909640	1907953	1913003	1913004	1907955
1112252	"	1909704	1909709	1883498	"	1886135	1900638	1881371	1909646	"	"	"	"
1112253	"	1907947	1902407	1902376	"	1886136	1902405	"	1909719	"	"	"	"
1112254	"	1911828	1929088	1886538	"	1886135	1907950	1880902	1909836	"	"	"	"
1112255	"	1907947	1902407	1901312	"	1886136	1910289	1921271	1910288	"	"	"	"
1112256	"	1911084	1911089	1926116	"	1886135	1909195	1880902	1911087	"	"	"	"
1112258	"	1907947	1902407	1885413	"	1886136	1902405	1881371	1885415	"	"	"	"
1112259	"	1911639	1864165	1884094	1885558	1858747	1902304	1882907	1911542	"	"	"	"
1112260	"	1911703	1902407	1908587	"	1885557	1909240	1880902	1911706	"	"	"	"
1112261	"	1911820	1911825	1911092	"	"	1911110	1881371	1911823	"	"	"	"
1112262	"	1911828	1907957	1886538	"	"	1907950	1880902	1907951	"	"	"	"
1112263	"	"	1929088	"	"	"	"	"	1909836	"	"	"	"
1112264	"	1911966	"	1886508	"	"	"	"	1911969	"	"	"	"
1112265	"	1911820	1912030	1885413	"	"	1902405	1881371	1914307	"	"	"	"
1112266	"	1912809	1909709	1883498	"	"	1900638	"	1912812	1912814	"	"	1912819
1112267	"	1912856	1902407	1884094	"	"	1909352	"	1913637	1912862	"	"	"
1112268	"	"	"	1913799	"	"	"	"	"	"	"	"	"
1112269	"	1912876	1865180	1883343	"	1858747	1912879	"	1912880	"	"	"	"
1112270	"	1912912	"	1886558	"	1885557	1885677	"	1912915	"	"	"	"
1112271	"	1913054	1912763	1926116	"	"	1909195	1880902	1913057	"	"	"	"
1112272	"	1912876	1865180	1916230	"	1858747	1917567	1882907	1925464	"	"	"	"
1112273	"	1912924	1902407	1902376	"	1885557	1902405	1881371	1913252	"	"	"	1907955
1112274	"	1912876	1865180	1882595	"	1862074	1913061	1879063	1912880	"	"	"	"
1112275	"	1908023	"	1886558	"	1885557	1902405	1881371	1919924	1907953	"	"	1907955
1112276	"	1929325	1864165	1913799	"	"	1915726	1882907	1930290	1921279	"	"	1914626
1112277	"	1912809	1902407	1913818	"	"	1907950	1880902	1913446	1912814	"	"	1912819
1112279	"	1924848	1864165	1913799	"	1858747	1915823	1882907	1915826	1912862	"	"	1907955
1112280	"	1916890	1840500	1886538	"	1885557	1916823	1880902	1916893	1915829	"	"	1912819

*Coupling or Gear and Pin not furnished by Delco-Remy.

†Use 1908040 Gear, 821865 Collar.

*Service with Package No. 1922349, containing 1921820 Shaft (and Gear), 1921825 Thrust Plug, 1912820 Seal, 173102 Grease fitting, 1913003 Washer, 1913004 Washer, 1908031 and 1857492 Pins.

Revised to Jan. 1, 1967

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous sections for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Plate Support Screw.....	453844	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-9; 80
Lock Washer—Cam Lubricator Screw.....	453844	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-7; 71-3-5-7-9
Lock Washer—Condenser Attaching Screw.....	453844	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-9; 80
Lock Washer—Distributor Cap Spring Support Screw.....	453844	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-9; 80
Lock Washer—Terminal Stud—Inside.....	453844	1112276-9
Lock Washer—Terminal Stud—Outside.....	453844	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-7; 80
NUTS		
Nut—Terminal Stud—Inside.....	817363	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-9; 80
Nut—Terminal Stud—Outside.....	120622	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-9; 80
Nut—Weight Hold Down.....	1923540	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-9; 80
SCREWS		
Screw—Breaker Plate Support.....	453418	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-9; 80
Screw—Cam Lubricator Attaching.....	453304	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-7; 71-3-5-7-9; 80
Screw—Condenser Attaching.....	453304	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-9; 80
Screw—Contact Attaching.....	1914916	All
Screw—Distributor Cap Spring Support.....	453461	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-9; 80
Screw—H.T. Terminal (Shipped separate).....	1839164	1112260-1-5-7; 75
Screw—H.T. Terminal (Side).....	1860406	1112264; 70-7; 80
Screw—H.T. Terminal (Center).....	1860407	1112264; 70-7; 80
WASHERS		
Washer Package—Felt—Housing Cover Seal.....	1914309	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8; 71-3-5-7-9
Washer—Insulation—Terminal Stud—Outside.....	1882247	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-7; 80
Washer—Plain—Terminal Stud—Inside.....	810794	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-3-4-5-7; 80
Washer—Plain—Terminal Stud—Outside.....	815540	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-7; 80
Washer—Shim (.005 thk.).....	810074	1112251-2-3-4-5-6-8-9; 60-1-2-3-5-6-7-8; 70-1-2-3-5-6-7-9; 80
Washer—Shim (.010 thk.).....	1912129	1112251-2-3-4-5-6-8-9; 60-1-2-3-5-6-7-8; 70-1-3-5-6-7-9; 80
Washer—Space—Under Collar, Coupling or Gear.....	811912	1112251-2-3-4-5-6-8-9; 60-1-2-3-5-6-7-8; 70-1-3-5-6-7-9; 80
Washer—Space—Under Governor Drive Gear.....	1900300	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5; 75
MISCELLANEOUS		
BLOCK—Drive Gear.....	1908028	1112252; 61-5-6; 71-5
BUSHING—Distributor Housing.....	1913176	1112251-3-4-5-6-8-9; 62-3
BUSHING—Distributor Housing.....	1909003	1112266-7-8-9; 70-1-2-3-4-6-7-9; 80
BUSHING—Distributor Housing.....	1873951	1112260; 75
BUSHING—For Cross Shaft.....	1921816	1112271-6
BUTTON—Carbon—In Cap (¼ dia.).....	1938193	1112251-2-3-4-5-6-8-9; 62-3-4-6-8-9; 70-1-2-3-4-6-7-9; 80
BUTTON—Carbon—In Cap (⅜ dia.).....	806923	1112260-1-5-7; 75
CLIP—Lock Terminal Stud—Outside.....	1914144	1112276-9
CUP—Grease.....	1955293	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5; 75
CUSHION—Drive Gear.....	1908029	1112252; 61-5-6; 71-5
ELBOW—Grease Cup.....	112568	1112275
EXTENSION—Shaft.....	1907956	1112262
Felt WICK—In Cam.....	1963555	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-9; 70-1-3-4-5-7
Felt WICK—In Cam.....	819639	1112272-6-9; 80


Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
FITTING—Lubrication.....	191758	1112270
GASKET—Distributor Housing Cover.....	1889966	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8; 71-3-5-7-9
KEY—Woodruff—Governor Gear.....	190016	1112251-2-3-4-5-6-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-3-4-5-6-7-9; 80
LUBRICATOR—Cam.....	*	1112251-3-4-5-6-8
LUBRICATOR—Cam.....	1885562	1112259; 60-1-2-3-4-5-7; 70-1-3-5-7-9; 80
PIN—Collar.....	1862218	1112275
PIN—Collar or Coupling.....	1857492	1112259; 76-9
PIN—Coupling.....	829421	1112251-3-4-5-8; 60-2-3-7-8; 73-7; 80
PIN—Gear.....	1908031	1112252; 61-5-6; 71-5
PIN—Gear.....	1857502	1112269; 72-4
Pipe PLUG—In Housing.....	125947	1112266-7-8-9; 70-1-2-3-4-6-7-9; 80
PLUG—Thrust.....	1912818	1112266-*7-*8-*9; *70-*1-*2-3-*4-7-9; 80
RETAINER—Drive Gear Cushion.....	1908030	1112252; 61-5-6; 71-5

*Early units used 1908035 (attached with tangs), later units use 1885562 (attached with screw).

 See footnote () on page 2.

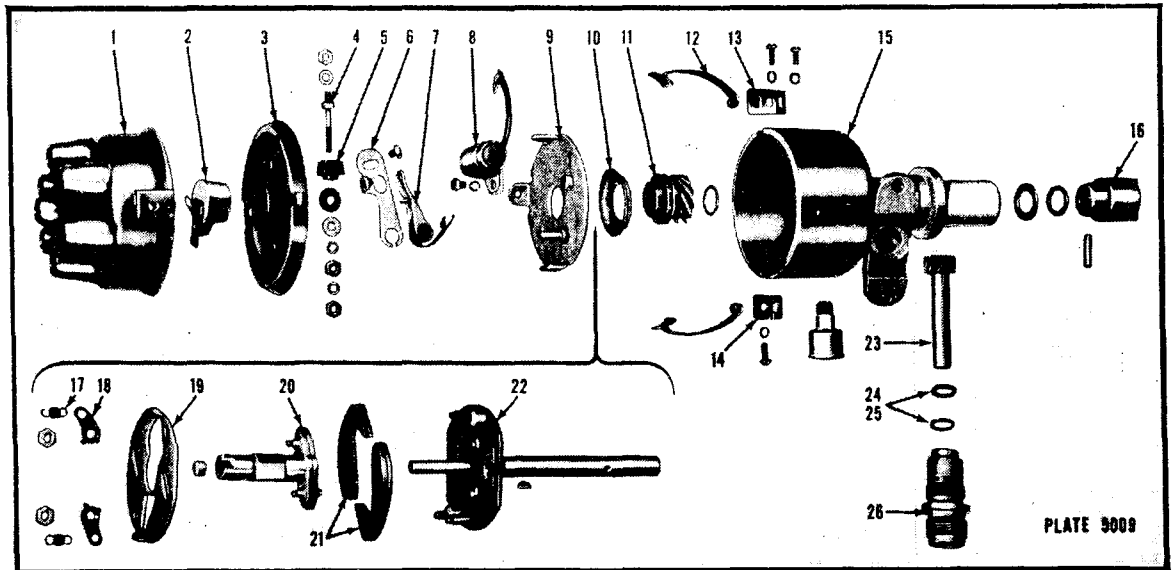


Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover Housing	Screw or Stud Terminal	Bushing Insul.	Contact Point and Support	Breaker Lever	Con- denser	Plate Breaker	Seal or Shield Oil	Gear Gov. or Tach. Drive	Spring Cap	Support Cap Spring Cover Locator
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112281	1842714	1905590	1900119	1916806	1878405	△1882964	△1881394	1900272	1908033	1912820	1912821	1889967	1889999
1112284	"	"	"	"	†	"	"	"	"	"	"	"	"
1112285	"	"	"	1916806	1878405	"	"	"	"	"	"	"	"
1112286	1872832	"	"	"	"	"	"	"	"	"	"	"	"
1112288	1867722	"	"	"	"	□1848038	□1905344	"	1847643	"	"	"	"
1112290	"	"	"	"	†	△1882964	△1881394	"	1908033	"	"	"	"
1112291	"	"	"	"	†	□1848038	□1905344	"	1847643	"	"	"	"
1112292	1872832	"	"	"	†	△1882964	△1881394	"	1908033	"	"	"	"
1112293	1867722	"	"	"	†	"	"	"	"	"	"	"	"
1112295	1872832	"		"	†	"	"	"	"	"	"	1871838	1847289
1112296	1867722	"	1900119	"	†	○1848038	○813238	"	1847643	"	"	1889967	1889999
1112297	"	"	"	"	†	"	"	"	"	"	"	"	"
1112298	1842714	"	"	"	†	△1882964	△1881394	"	1908033	"	"	"	"
1112299	1867722	"	"	"	†	"	"	"	"	"	"	"	"
1112300	"	"	"	"	†	○1848038	○813238	1928111	1847643	"	"	"	"
1112301	"	"	"	"	†	△1882964	△1881394	1900272	1908033	"	"	"	"
1112302	"	"	"	"	†	"	"	"	"	"	"	"	"
1112303	1842714	"	"	"	†	"	"	"	"	"	"	"	"
1112304	"	"	"	"	†	"	"	"	"	"	"	"	"
1112305	1867722	"	"	"	†	○1848038	○813238	1928111	1847643	"	"	"	"
1112306	1872832	"	"	"	†	△1882964	△1881394	1900272	1908033	"	"	"	"
1112309	1911597	"	1900119	"	†	○1848038	○813238	"	1847643	1912820	1912821	"	1847289
1112310	1867722	?	"	"	†	"	"	"	"	"	"	"	"
1112311	"	"	"	"	†	△1882964	△1881394	"	1908033	"	"	"	"
1112312	1842714	"	"	"	†	"	"	"	"	"	"	"	"
1112313	1867722	"	"	"	1878405	"	"	"	"	1900303	1900296	"	"
1112314	1924248	1924245		1926786	1878405	*1845785	*1917254	1928111	1926897	"	"	1871838	1847289
1112315	1867722	1905590	1900119	1916806	1878405	△1882964	△1881394	1900272	1908033	1900303	1900296	1889967	1889999
1112316	824735	820445		"	■	*1938330	*813238	1928111	1912783			1871838	1847289

†Use 1916805 Bushing (Inside); 1914142 Bushing (Outside).
 *Use 1924369 Bushing (Inside); 1924370 Bushing (Outside).
 *Use 1926899 Bushing (Inside); 1924370 Bushing (Outside).
 *Use 1914141 Bushing (Inside); 1914142 Bushing (Outside).

□Contact Set No. 1911119.
 ○Contact Set No. 1855720.
 △Contact Set No. 1882965.
 *Contact Set No. 1925852.
 *Contact Set No. 1871678.

 Delco-Remy
SERVICE PARTS CATALOG

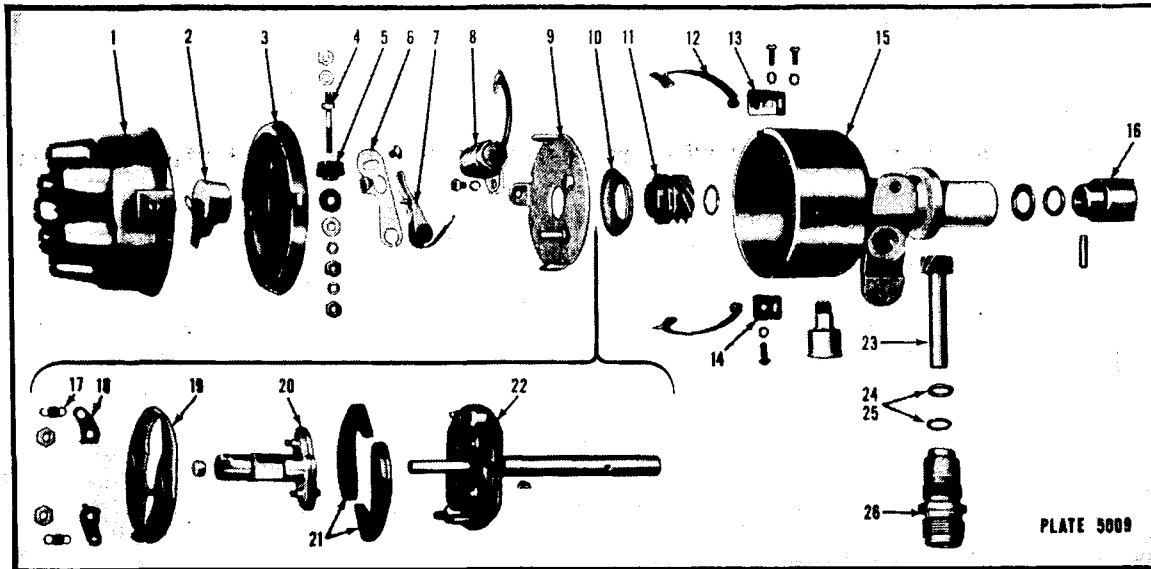

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Support — Cap Spring	Housing	Collar, Coupling or Gear	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Shaft and Gear — Gov. or Tach. Drive	Washer — Space 1/2 thk.	Washer — Shim .010 thk.	Bearing — Gov. or Tach. Drive
	14	15	16	17	18	19	20	21	22	23	24	25	26
1112281	1847289	1913894	1911825	1885413	1885558	1885557	1902405	1881371	1913897	1912862	1913003	1913004	
1112284	"	1918087	1902407	"	"	"	1916429	"	1918090	"	"	"	
1112285	"	1913894	1912030	"	"	"	1902405	"	1913987	"	"	"	
1112286	"	1913254	809673	1913818	"	"	1907950	1880902	1913257	1912814	"	"	1912819
1112288	"	1912926	1864165	1913799	"	1858747	1915828	1882907	1915826	1915829	"	"	"
1112290	"	1932710	1902407	1900221	"	1885557	1916902	1881371	1917753	"	"	"	1912819
1112291	"	1925024	1909709	1883498	"	"	1914433	"	1919987	1912862	"	"	
1112292	"	1935484	1902407	1900221	"	"	1916902	"	1917753	1915829	"	"	1912819
1112293	"	1924848	1917569	1913799	"	"	1915828	1882907	1936774	1921279	"	"	1914626
1112295	"	1923787	1840500	1922250	"	"	1917717	1880902	1923789	1912814	"	"	1912819
1112296	"	1921814	1902407	1884094	"	"	1921819	1881371	1921818	1921820	"	"	
1112297	"	1921846	1865180	1916230	"	1858747	1915828	1882907	1925464	"	"	"	
1112298	"	1923945	"	1883498	"	1885557	1914433	1881371	1923948	1915829	"	"	1912819
1112299	"	"	"	"	"	"	"	"	"	"	"	"	"
1112300	"	1921846	1921074	1916230	"	1858747	1915828	1882907	1916873	1921820	"	"	
1112301	"	1932710	1902407	1900221	"	1885557	1916902	1881371	1924301	1915829	"	"	1912819
1112302	"	1924848	1864165	1913799	"	1858747	1915828	1882907	1915826	1921820	"	"	
1112303	"	1925019	821865	1886558	"	1885557	1925023	1881371	1925022	1912862	"	"	
1112304	"	1925024	"	1886558	"	"	1925029	"	1925027	"	"	"	
1112305	"	1921846	1921074	1886508	"	"	1925779	"	1925464	1921820	"	"	
1112306	"	1926422	1929088	1906858	"	"	1922262	"	1925912	1912862	"	"	
1112309	"	1925975	1864165	1913799	"	1858747	1915828	1882907	1915826	1915829	1913003	1913004	1912819
1112310	"	1926229	1929088	1903101	"	1885557	1921525	1880902	1926232	"	"	"	"
1112311	"	1932710	1902407	1900221	"	"	1916902	1881371	1924301	"	"	"	"
1112312	"	1926422	"	1903693	"	"	1922262	"	1918090	1912862	"	"	
1112313	"	1911828	1929088	1921908	"	"	1911072	"	1926759	1907953	"	"	1907955
1112314	"	1926885	1921074	1906766	"	"	1926889	1882907	1926887	*1926891			
1112315	"	1911828	1907957	1921908	"	"	1911072	1881371	1927139	1907953	1913003	1913004	1907955
1112316	"	1927221	1846566	1922250	"	"	1913882	1880902	1927218	*1926891			

*Service with Package No. 1922349 containing 1921820 Shaft (& Gear), 1921825 Thrust Plug, 1912820 Seal, 173102 Grease Fitting, 1913003 Washer, 1913004 Washer, 1908031 & 1857492 Pins.

*Coupling or Gear & Pin not furnished by Delco-Remy.

*Tachometer Drive Assembly.

Revised to July 1, 1968

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Plate Support Screw.....	453844	1112281-4-5-6-8; 90-1-2-3-5-6-7-8-9; 300-1-2-3-4-5-6-9; 10-11-12-13-14-15-16
Lock Washer—Cam Lubricator Screw.....	453844	1112281-4-5-6; 90-2-3-5-8-9; 301-2-3-4-6; 11-12-13-15
Lock Washer—Condenser Attaching Screw.....	453844	1112281-4-5-6-8; 90-1-2-3-5-6-7-8-9; 300-1-2-3-4-5-6-9; 10-11-12-13-14-15-16
Lock Washer—Dial Plate Screw.....	9421423	1112293
Lock Washer—Distributor Cap Spring Support Screw.....	453844	1112281-4-5-6-8; 90-1-2-3-5-6-7-8-9; 300-1-2-3-4-5-6-9; 10-11-12-13-14-15-16
Lock Washer—Terminal Stud—Inside.....	138530	1112284; 302
Lock Washer—Terminal Stud—Inside.....	453844	1112290-1-2-3-5-6-7-8-9; 300-1-3-4-5-6-9; 10-11-12-14
Lock Washer—Terminal Stud—Outside.....	453844	1112281-5-6-8; 313-15-16
Lock Washer—Vacuum Control Attaching Screw.....	453435	1112316
Lock Washer—Vacuum Control Arm Screw (To Brk. Plate).....	456413	1112316
NUTS		
Nut—Breaker Lever Spring Screw.....	817363	1112316
Nut—Dial Plate Screw.....	453848	1112293
Nut—Terminal Stud—Inside.....	817363	1112281-4-5-6-8; 90-1-2-3-5-6-7-8-9; 300-1-2-3-4-5-6-9; 10-11-12-13-15-16
Nut—Terminal Stud—Outside.....	120622	1112281-4-5-6-8; 90-1-2-3-5-6-7-8-9; 300-1-2-3-4-5-6-9; 10-11-12-13-14-15-16
Nut—Terminal Stud (Round).....	1924372	1112314
Nut—Weight Hold Down.....	1923540	1112281-4-5-6-8; 90-1-2-3-5-6-7-8-9; 300-1-2-3-4-5-6-9; 10-11-12-13-14-15-16
SCREWS		
Screw—Breaker Lever Spring Attaching.....	1858576	1112316
Screw—Breaker Plate Support.....	453418	1112281-4-5-6-8; 90-1-2-3-5-6-7-8-9; 300-1-2-3-4-5-6-9; 10-11-12-13-14-15-16
Screw—Cam Lubricator Attaching.....	453304	1112281-4-5-6; 90-2-3-5-8-9; 301-2-3-4-6; 11-12-13-14
Screw—Condenser Attaching.....	453304	1112281-4-5-6-8; 90-1-2-3-5-6-7-8-9; 300-1-2-3-4-5-6-9; 10-11-12-13-14-15-16
Screw—Contact Attaching.....	1914916	All
Screw—Dial Plate Attaching.....	120854	1112293
Screw—Distributor Cap Spring Support.....	453461	1112281-4-5-6-8; 90-1-2-3-5-6-7-8-9; 300-1-2-3-4-5-6-9; 10-11-12-13-14-15-16
Screw—H.T. Terminal (Side).....	1860406	1112286; 92-5; 306
Screw—H.T. Terminal (Center).....	1860407	1112286; 92-5; 306
Screw—H.T. Terminal (Shipped separate).....	1839164	1112281-4-5; 303; 12
Screw—Tachometer Clamp.....	453463	1112314-16
Screw—Vacuum Control Attaching.....	453463	1112316
Screw—Vacuum Control Arm Attaching (To Breaker Plate).....	453460	1112316
WASHERS		
Washer Package—Felt—Housing Cover Seal.....	1914309	1112281-4-5-6-8; 90-1-2-3-6-7-8-9; 300-1-2-3-4-5-6-9; 10-11-12-13-15
Washer—Clamp—Under Breaker Plate.....	1869357	1112316
Washer—Fibre—Under Breaker Plate.....	1927778	1112316
Washer—Insulation—Terminal Stud—Outside.....	1882247	1112281-5-6-8; 313-15
Washer—Plain—Dial Plate Screw.....	1905125	1112293
Washer—Plain—Terminal Stud—Inside.....	810794	1112281-5-6-8; 313-15
Washer—Plain—Terminal Stud—Outside.....	815540	1112281-5-6-8; 313-15
Washer—Shim (.005 thk.).....	810074	1112281-4-5-6-8; 90-1-2-3-5-6-8-9; 301-2-3-4-6-9; 10-11-12-13-15-16
Washer—Shim (.010 thk.).....	1912129	1112281-4-5-6-8; 90-1-2-3-5-6-8-9; 301-2-3-4-6-9; 10-11-12-13-15-16
Washer—Shim—Under Breaker Plate (.010 thk.).....	1912225	1112316
Washer—Sleeve Retainer—Under Gear.....	1926782	1112293
Washer—Space—Under Coupling or Gear.....	811912	1112281-4-5-6-8; 90-1-2-3-5-6-8-9; 301-2-3-4-6-9; 10-11-12-13-15-16
Washer—Space—Between Governor Gear & Bushing.....	1900300	1112313-15
Washer—Spring—Under Breaker Plate.....	1912227	1112316

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION


Name	Part No.	Used on Models
MISCELLANEOUS		
ARM Assembly.....	*1838617	1112293
BLOCK—Drive Gear.....	1908028	1112281-5; 91
BUSHING—Distributor Housing.....	1909003	1112281-4-5-6-8; 90-1-2-3-5-6-7-8-9; 300-1-2-3-4-5-6-9; 10-11-12
BUSHING—Distributor Housing.....	1927405	1112316
BUSHING—For Cross Shaft.....	1921816	1112300-2-3-4-5; 12
BUTTON—Carbon—In Cap (¼ dia.).....	1938193	1112286-8; 90-1-2-3-6-7-9; 300-1-2-3-5-6; 10-11-13-14-15-16
BUTTON—Carbon—In Cap (⅙ dia.).....	806923	1112281-4-5-6; 92-5-8; 303-4-6; 12
CLAMP—Tachometer.....	1926895	1112314
CLAMP—Tachometer Attaching.....	1927220	1112314-16
CLIP—Lock—Breaker Lever Screw.....	1868992	1112316
CLIP—Lock—Terminal Stud—Outside.....	1914144	1112284; 90-1-2-3-5-6-7-8-9; 300-1-2-3-4-5-6-9; 10-11-12-16
CUP—Grease.....	1955293	1112313-14-15-16
CUSHION—Drive Gear.....	1908029	1112281-5; 91
DIAL—Plate.....	815095	1112293
ELBOW—For Grease Cup.....	144117	1112316
Felt WICK—In Cam.....	1963555	1112281-5-6; 1112307-15
Felt WICK—In Cam.....	819639	1112284-8; 90-1-2-3-5-6-7-8-9; 300-1-2-3-4-5-6-9; 10-11-12-16
FITTING—Lubrication.....	173102	1112296-7; 300-3-4-5-6; 12
FITTING—Lubrication.....	191758	1112288; 93; 302-9; 10
FITTING—Lubrication.....	271283	1112311
GASKET—Distributor Housing Cover.....	1889966	1112281-4-5-6-8; 90-1-2-3-6-7-8-9; 300-1-2-3-4-5-6-9; 10-11-12-13-15
KEY—Woodruff—Governor Gear.....	190016	1112281-4-5-6-8; 90-1-2-3-5-6-7-8-9; 300-1-2-3-4-5-6-9; 10-11-12-13-15
LEAD—Breaker Plate Ground.....	1879140	1112316
LEAD—Terminal Connector.....	1865978	1112316
LUBRICATOR—Cam.....	1885562	1112281-4-5-6; 90-2-3-5-8-9; 301-2-3-4-6; 11-12-13-15
OILER—In Housing.....	1922131	1112290-2; 301; 11
PIN—Collar.....	1862218	1112303-4; 16
PIN—Collar or Coupling.....	1857492	1112288; 302-9
PIN—Coupling.....	829421	1112284-6; 90-2-5-6; 301-6; 10-11-12-13
PIN—Coupling.....	455106	1112315
PIN—Gear.....	1908031	1112281-5; 91
PIN—Gear.....	1857502	1112293-7; 300-5; 14
Pipe PLUG—In Housing.....	125947	1112281-4-5-6-8; 90-1-2-3-5-6-7-8-9; 300-2-3-4-5-6-9; 10-12
PLUG—Thrust.....	1912818	1112281-4-5-6-8; 90-1-2-5-8-9; 301-3-4-6-9; 10-11-12
PLUG—Thrust.....	1937391	1112296-7; 300-2-5
RETAINER—Breaker Plate.....	1912614	1112316
RETAINER—Drive Gear Cushion.....	1908030	1112281-5; 91
SHAFT—Extension.....	1907956	1112315
SLEEVE—Mounting Adaptor.....	1917568	1112293
SUPPORT—Terminal Lead.....	1919352	1112316
VACUUM—Control.....	*1116092	1112316

*For parts see Advance Arm—Group 1.

*For parts see Vacuum Control—Group 4.

†See footnote (A) on page 2.

 ‡If button recess in cap is spherical bottom drilled use part #1938193.

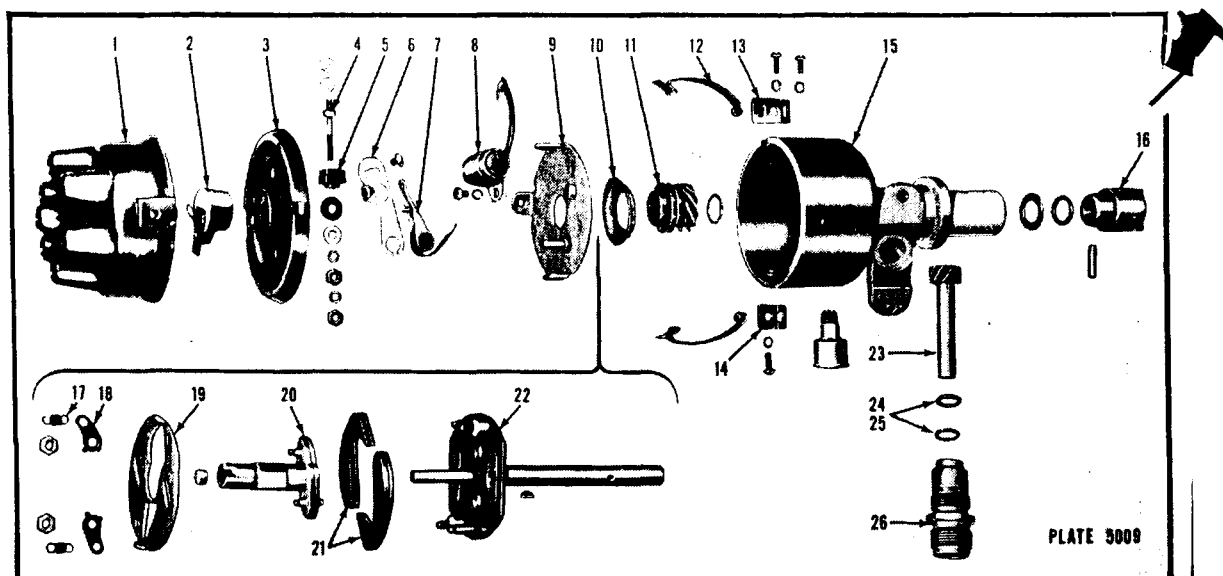

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Cover — Housing	Screw or Stud Terminal	Bushing — Insul.	Contact Point and Support	Breaker Lever	Con- denser	Plate — Breaker	Seal or Shield — Oil	Gear — Gov. or Tach. Drive	Spring — Cap	Support — Cap Spring Cover Locator
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112317	811735	1905590		1916806	†	△1882964	△1881394	1900272	1908033	1912820	1912821	1871838	1847289
1112318	1931512	1927191	1925477	"	†	"	"	"	"	"	"	1889967	"
1112319	"	"	"	"	†	"	"	"	"	"	"	"	"
*1112320													
1112321	824735	820445		1916806	†	†1848038	†813238	1900272	1847643	1912820	1912821	1871838	1847289
1112322	"	"		"	†	"	"	"	"	"	"	"	"
1112323	811735	1905590		"	†	△1882964	△1881394	"	1908033	"	"	"	"
1112324	824735	820445		"	†	†1848038	†813238	"	1847643	"	"	"	"
1112329	1931512	1931482	1925477	"	†	△1882964	△1881394	"	1931745	1920463	1931749	1889967	"
1112332	1867722	1905590	1900119	"	†	†1848038	†813238	"	1847643	1912820	1912821	"	1889999
1112333	1931512	1921482	1925477	"	†	△1882964	△1881394	"	1931745	1920463	1931749	"	1847289
1112335	1911597	820445		"	†	†1848038	†813238	"	1847643	1912820	1912821	1871838	"
1112337	1872832	1905590	1900119	"	†	△1882964	△1881394	"	1908033	"	"	1889967	1889999
1112338	1842714	"	"	"	†	△	"	"	"	"	"	"	"
1112340	824735	820445		"	†	○1848038	1905344	"	1847643	"	"	1871838	
1112341	"	820445		"	†	†	"	"	"	"	"	"	
1112342	"	"		"	†	†	†	"	"	"	"	"	
1112346	1867722	1905590	1900119	"	†	†	†	"	"	"	"	1889967	1889999

*1112320 in Group 106-C.

 
†Use 1916805 Bushing (Inside); 1914142 Bushing (Outside).

△Contact Set No. 1882965.

‡Contact Set No. 1855720.

°Contact Set No. 1911119.

Delco-Remy SERVICE PARTS CATALOG

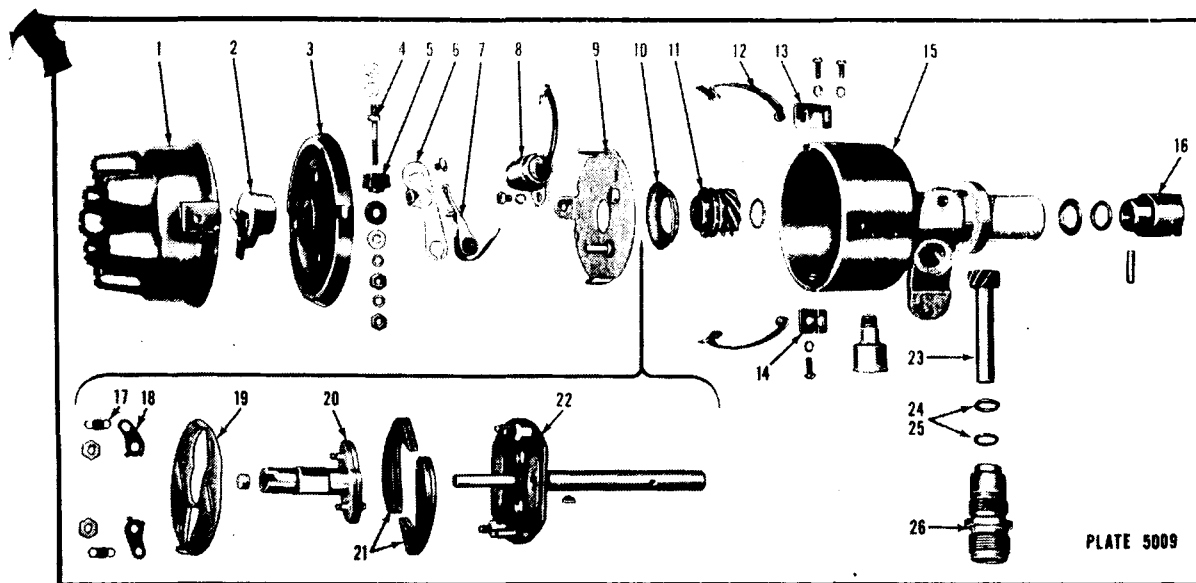

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Support Cap Spring	Housing	Collar, Coupling or Gear	Spring Weight	Lock Washer	Weight Hold Down Cup or Plate	Cam Assem- bly	Weight	Main Shaft	Shaft and Gear Gov. or Tach. Drive	Washer Space 1/2 thk.	Washer Shim .010 thk.	Bearing Gov. or Tach. Drive
	14	15	16	17	18	19	20	21	22	23	24	25	26
1112317	1847289	1927296	1840500	1927235	1885558	1885557	1927300	1881371	1927299	1912814	1913003	1913004	1912819
1112318	"	1927764	1929088	1883509	"	"	1927189	1880902	1927767	1921820	"	"	
1112319	"	"	1907957	"	"	"	"	"	1927761	"	"	"	
1112321	1847289	1929325	1864165	1913799	1885558	1885557	1915726	1882907	1929328	1921820	1913003	1913004	
1112322	"	"	"	1900371	"	"	1926765	1881371	1929409	"	"	"	
1112323	"	1923787	"	1911496	"	"	1929576	1880902	1929574	1912814	"	"	1912819
1112324	"	1930242	1864165	1900371	"	"	1926765	1881371	1929409	1915829	"	"	"
1112329	"	1931739	1907957	1883509	"	"	1927189	1880902	1931742	1921820	"	"	
1112332	"	1932710	1909709	1903693	"	"	1924360	1881371	1932713	1915829	"	"	1912819
1112333	"	1931739	1907957	1921908	"	"	1933349	"	1933348	1921820	"	"	
1112335	"	1929325	1864165	1913799	"	"	1915726	1882907	1929328	"	"	"	
1112337	"	1935484	1902407	1900221	"	"	1916902	1881371	1924301	1915829	"	"	1912819
1112338	"	1924848	1917569	1913799	"	1858747	1915828	1882907	1936774	1921279	"	"	1914626
1112340	"	1930242	1912218	"	"	1885557	1918019	"	1936452	1915829	"	"	1912819
1112341	"	"	1864165	"	"	"	1915726	"	1929328	"	"	"	"
1112342	"	1929325	1917569	"	"	"	"	"	1936774	1921279	"	"	1914626
1112346	"	1932710	1909709	1937291	"	"	1921819	1881371	1937207	1915829	"	"	1912819

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Plate Support Screw.....	453844	1112317-18-19; 21-2-3-4-9; 32-3-5-7-8; 40-1-2-6
Lock Washer—Cam Lubricator Screw.....	453844	1112317-18-19; 23; 37-8
Lock Washer—Condenser Attaching Screw.....	453844	1112317-18-19; 21-2-3-4-9; 32-3-5-7-8; 40-1-2-6
Lock Washer—Dial Plate Screw.....	453844	1112338; 42
Lock Washer—Distributor Cap Spring Support Screw.....	453844	1112317-18-19; 21-2-3-4-9; 32-3-5-7-8; 40-1-2-6
Lock Washer—Terminal Stud—Inside.....	453844	1112317-18-19; 21-2-3-4-9; 32-3-5-7-8; 40-1-2-6
NUTS		
Nut—Dial Plate.....	453848	1112338; 42
Nut—Terminal Stud—Inside.....	817363	1112317-18-19; 21-2-3-4-9; 32-3-5-7-8; 40-1-2-6
Nut—Terminal Stud—Outside.....	120622	1112317-18-19; 21-2-3-4-9; 32-3-5-7-8; 40-1-2-6
Nut—Weight Hold Down.....	1923540	1112317-18-19; 21-2-3-4-9; 32-3-5-7-8; 40-1-2-6
SCREWS		
Screw—Breaker Plate Support.....	453418	1112317-18-19; 21-2-3-4-9; 32-3-5-7-8; 40-1-2-6
Screw—Cam Lubricator Attaching.....	453304	1112317-18-19; 23; 37-8
Screw—Cap—High Tension.....	1860406	1112337
Screw—Cap—High Tension—Center.....	1860407	1112337
Screw—Condenser Attaching.....	453304	1112317-18-19; 21-2-3-4-9; 32-3-5-7-8; 40-1-2-6
Screw—Contact Attaching.....	1914916	All
Screw—Dial Plate.....	120854	1112338; 42
Screw—Distributor Cap Spring Support.....	453461	1112317-18-19; 21-2-3-4-9; 32-3-5-7-8; 40-1-2-6
Screw (& Lock Washer)—Bearing Retainer Clamp.....	455341	1112329; 33
WASHERS		
Washer—Plain—Dial Plate Screw.....	1905125	1112338; 42
Washer—Seal—In Housing Cover.....	1914309	1112332-8; 46
Washer—Shim (.005 thk.).....	810074	1112317-18-19; 21-2-3-4-9; 32-3-5-7-8; 40-1-2-6
Washer—Shim (.010 thk.).....	1912129	1112317-18-19; 21-2-3-4-9; 32-3-5-7-8; 40-1-2-6
Washer—Space (1¼ O.D.) Between Gear & Housing.....	1926782	1112338; 42
Washer—Space—Under Coupling or Gear.....	811912	1112317-18-19; 21-2-3-4-9; 32-3-5-7-8; 40-1-2-6
MISCELLANEOUS		
*Advance ARM.....	1838617	1112338; 42
BALL BEARING.....	954734	1112329
BALL BEARING.....	954939	1112333
BLOCK—Drive Gear.....	1908028	1112332; 46
BUSHING—Distributor Housing.....	1909003	1112317-18-19; 21-2-3-4; 32-5-7-8; 40-1-2-6
BUSHING—Distributor Housing.....	825463	1112329; 33
BUTTON—Carbon—In Cap (¼ dia.).....	1938193	1112317-18-19; 21-2-3-4-9; 32-3-5-8; 40-1-2-6
BUTTON—Carbon—In Cap.....	806923	1112337
CLAMP—Bearing Retainer.....	1925471	1112329; 33
CLIP—Lock—Terminal Stud—Outside.....	1914144	1112317-18-19; 21-2-3-4-9; 32-3-5-7-8; 40-1-2-6
CUP—Grease.....	1955293	1112317; 23
CUSHION—Drive Gear.....	1908029	1112332; 46
DIAL—Advance.....	815095	1112338; 42
Felt WICK—In Cam.....	819639	1112317-18-19; 21-2-3-4-9; 32-5-7-8; 40-1-2-6
FITTING—Lubrication.....	173102	1112318-19; 29
FITTING—Lubrication.....	191758	1112321-2; 32-5; 40-1-6
FITTING—Lubrication.....	271283	1112333-7-8; 42
GASKET—Housing Cover.....	1889966	1112332-8; 46
KEY—Woodruff—Governor Gear.....	190016	1112317-18-19; 21-2-3-4; 32-5-7-8; 2-6

*For service parts see Advance Arm—Group 1.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
LUBRICATOR—Cam.....	1885562	1112317-18-19; 23; 37-8
OILER.....	1922131	1112337
PIN—Collar Attaching.....	1862218	1112340
PIN—Coupling.....	455106	1112329; 33
PIN—Coupling.....	829421	1112317-18; 37
PIN—Coupling.....	1857492	1112321-2-4; 35; 41
PIN—Gear.....	1908031	1112332; 46
PIN—Governor Drive Gear.....	829421	1112329
PIN—Governor Drive Gear.....	1857502	1112333-8; 42
PIN—Shaft Extension.....	455106	1112319; 29; 33
Pipe PLUG—In Housing.....	125947	1112317-18-19; 21-2-3-4; 32-5-8; 40-1-2-6
PLUG—Thrust.....	1912818	1112317; 23-4; 32-7; 40-1-6
PLUG—Thrust.....	1937391	1112318-19; 21-2-9-33-5
RETAINER—Drive Block.....	1908030	1112332; 46
SHAFT—Extension.....	1907956	1112319
SHAFT—Extension.....	1931750	1112329; 33
SLEEVE—Adaptor.....	1917568	1112338; 42
SUPPORT—Cam Lubricator.....	1931747	1112329; 33
WICK—Cam Lubricator.....	1949084	1112329; 33

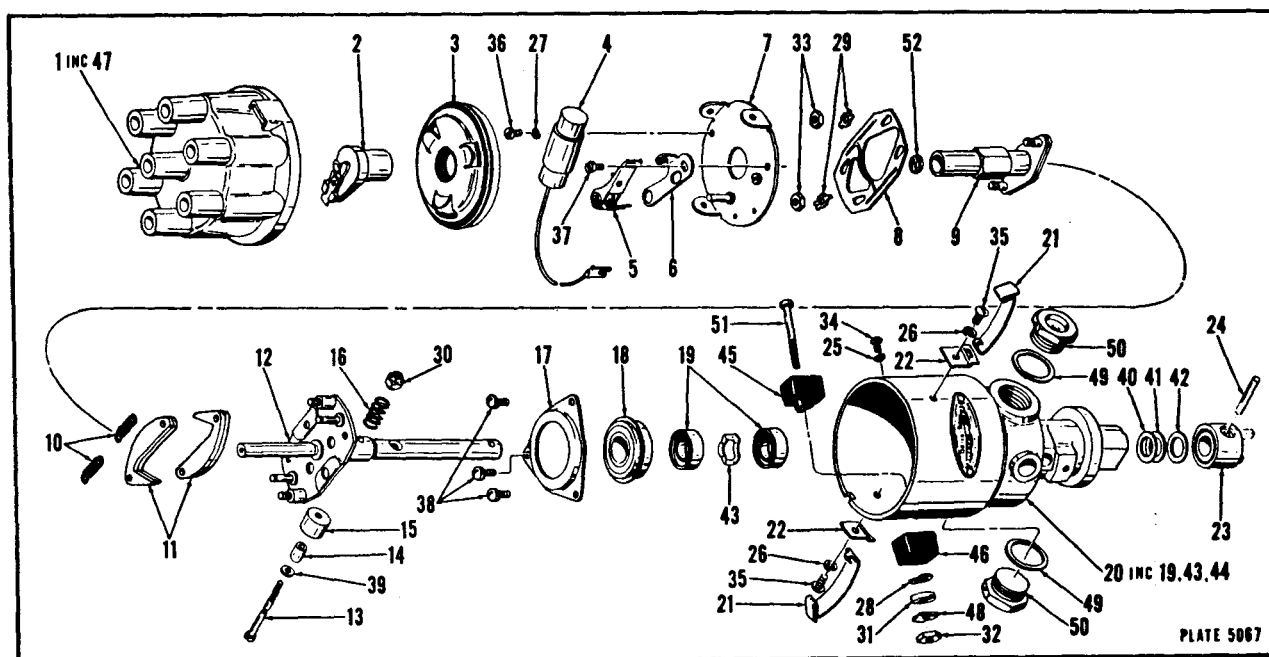 


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Cover	Con- denser	Lever	Point & Support	Plate — Breaker	Plate — Hold Down	Cam	Spring	Weight	Shaft & Plate
	1	2	3	4	5	6	7	8	9	10	11	12
1112307.....	1924248	1924245	1925477	1900272	* 813238	*1848038	1847643	1885557	1925472	1884094	1881371	1925469
1112320.....	"	"	"	"	"	"	"	"	"	"	"	"
1112326.....	"	1931482	"	"	"	"	"	"	"	"	"	"
1112327.....	"	"	"	"	"	"	"	"	"	"	"	"
1112328.....	1917247	1927393	1931377	1900272	△1917254	△1938330	1930585	"	1931523	1912764	"	1935384
1112336.....	"	"	"	"	"	"	"	"	1935385	1935546	"	1935384
1112339.....	1924248	1931482	1925477	1900272	*813238	*1848038	1847643	"	1935735	1884094	"	1935733
1112345.....	"	"	"	"	"	"	"	"	"	"	"	1937320

*Use Contact Set No. 1855720.
 △Use Contact Set No. 1938330.

 Delco-Remy SERVICE PARTS CATALOG

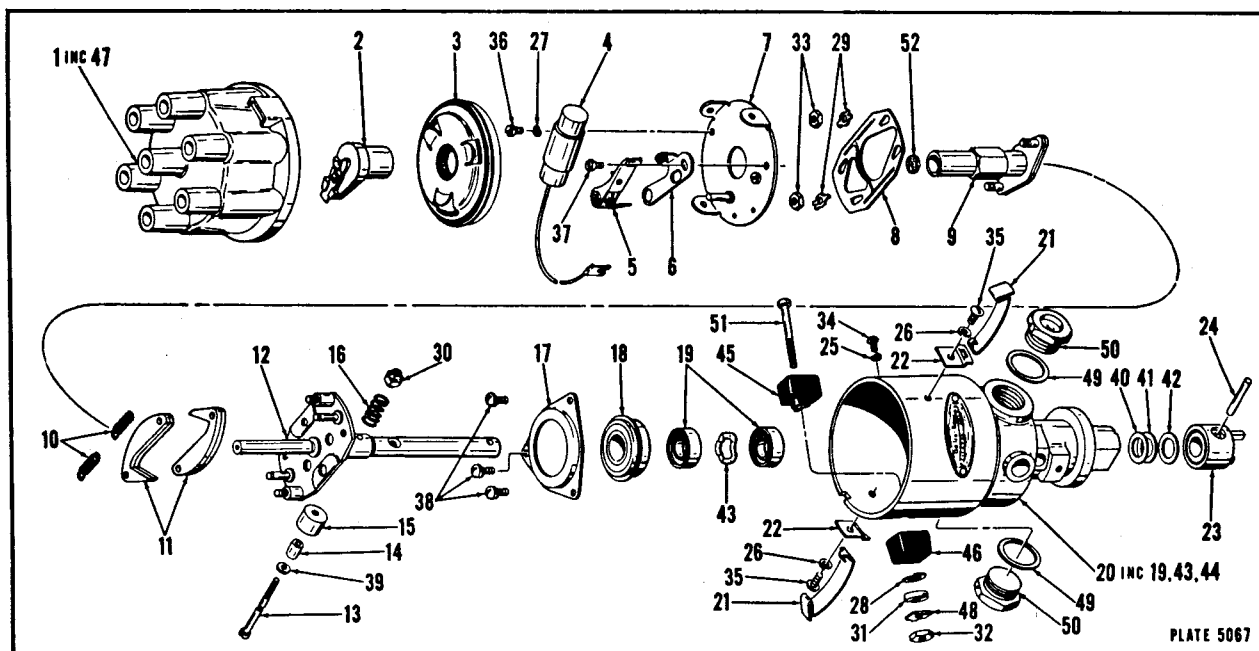

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.


Model	Valve — Gov.	Cushion — Valve	Weight — Valve	Spring — Valve	Plate — Retainer	Bearing	Seal — Oil	Housing	Spring — Cap	Support — Cap Spring	Coupling or Gear	Pin
	13	14	15	16	17	18	19	20	21	22	23	24
1112307.....	1920471	1920474	1925571	1926030	1925471	954939	1920463	1925474	1889967	1847289	1929088	829421
1112320.....	"	"	"	"	"	"	"	"	"	"	"	"
1112326.....	"	"	"	1933549	"	"	"	"	"	"	"	"
1112327.....	"	"	"	1926030	"	"	"	"	"	"	"	"
1112328.....	"	"	"	1933386	"	"	"	1931518	"	1931381	1912568	"
1112336.....	"	"	"	1920473	"	"	"	"	"	"	"	"
1112339.....	"	"	"	1926030	"	"	"	1925474	"	1847289	1929088	"
1112345.....	"	"	"	"	"	"	"	"	"	"	"	"
.....												
.....												

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
25	Lock Washer—Breaker Plate Support Screw.....	453844	1112307; 20-6-7-8; 36-9; 45
26	Lock Washer—Cap Spring Support Screw.....	453844	1112307; 20-6-7-8; 36-9; 45
27	Lock Washer—Condenser Screw.....	453844	1112307; 20-6-7-8; 36-9; 45
28	Lock Washer—Terminal Stud.....	453844	1112307; 20-6-7; 39; 45
—	Lock Washer—Terminal Stud (Inside).....	453844	1112328; 36
29	Lock Washer—Hold Down Plate Nut.....	1885558	1112307; 20-6-7-8; 36-9; 45
NUTS			
—	Nut—Breaker Lever Spring Screw.....	817363	1112328; 36
30	Nut—Governor Valve.....	1920472	1112307; 20-6-7-8; 36-9; 45
31	Nut—Terminal (Round).....	1924372	1112307; 20-6-7; 39; 45
32	Nut—Terminal (Hex.).....	120622	1112307; 20-6-7-8; 36-9; 45
—	Nut—Terminal (Inside).....	817363	1112328; 36
33	Nut—Weight Hold Down Plate.....	1923540	1112307; 20-6-7-8; 36-9; 45
SCREWS			
—	Screw—Breaker Lever Spring Attaching.....	455957	1112328; 36
34	Screw—Breaker Plate Support.....	453418	1112307; 20-6-7-8; 39; 45
34	Screw—Breaker Plate Support.....	453461	1112336
35	Screw—Cap Spring Support.....	453461	1112307; 20-6-7-8; 36-9; 45
36	Screw—Condenser Attaching.....	453304	1112307; 20-6-7-8; 36-9; 45
37	Screw—Contact Adjusting.....	1914916	All
38	Screw (& Lock Washer)—Bearing Plate Attaching.....	455341	1112307; 20-6-7-8; 36-9; 45
WASHERS			
39	Washer—Governor Weight.....	1900466	1112307; 20-6-7-8; 36-9; 45
40	Washer—Shim (.005 thk.).....	810074	1112307; 20-6-7; 39; 45
40	Washer—Shim (.005 thk.).....	1927529	1112336
41	Washer—Shim (.010 thk.).....	1912129	1112307; 20-6-7; 39; 45
41	Washer—Shim (.010 thk.).....	1927530	1112336
42	Washer—Space.....	1945776	1112336
43	Washer—Spring (Between Seals).....	1925476	1112307; 20-6-7-8; 36-9; 45
MISCELLANEOUS			
44	BUSHING—In Housing.....	825463	1112307; 20-6-7-8; 36-9; 45
45	BUSHING—Terminal (Inside).....	1924369	1112307; 20-6-7; 39; 45
45	BUSHING—Terminal (Inside).....	1916805	1112328
45	BUSHING—Terminal (Inside).....	1912229	1112328; 36
46	BUSHING—Terminal (Outside).....	1924370	1112307; 20-6-7; 39; 45
46	BUSHING—Terminal (Outside).....	1914142	1112328; 36
47	BRUSH (Carbon)—In Cap.....	1938193	1112307; 20-6-7-8; 36-9; 45
—	CLAMP—Breaker Lever Spring Screw.....	1868992	1112328; 36
48	CLIP—(Lock)—Terminal.....	1914144	1112307; 20-6-7-8; 36-9; 45
49	GASKET—Plug.....	113897	1112307; 20-6-7-8; 36-9; 45
—	LEAD—Terminal Connector.....	1930587	1112328; 36
50	PLUG—Housing.....	1925481	1112307; 20-6-7-8; 36-9; 45
51	STUD—Terminal.....	1916806	1112328
51	STUD—Terminal.....	1924371	1112307; 20-6-7; 39; 45
51	STUD—Terminal.....	1916806	1112328; 36
52	WICK—Felt (In Cam).....	819639	1112307; 20-6-7-8; 36-9; 45

 *If button recess in cap is spherical bottom drilled use part #1938193.

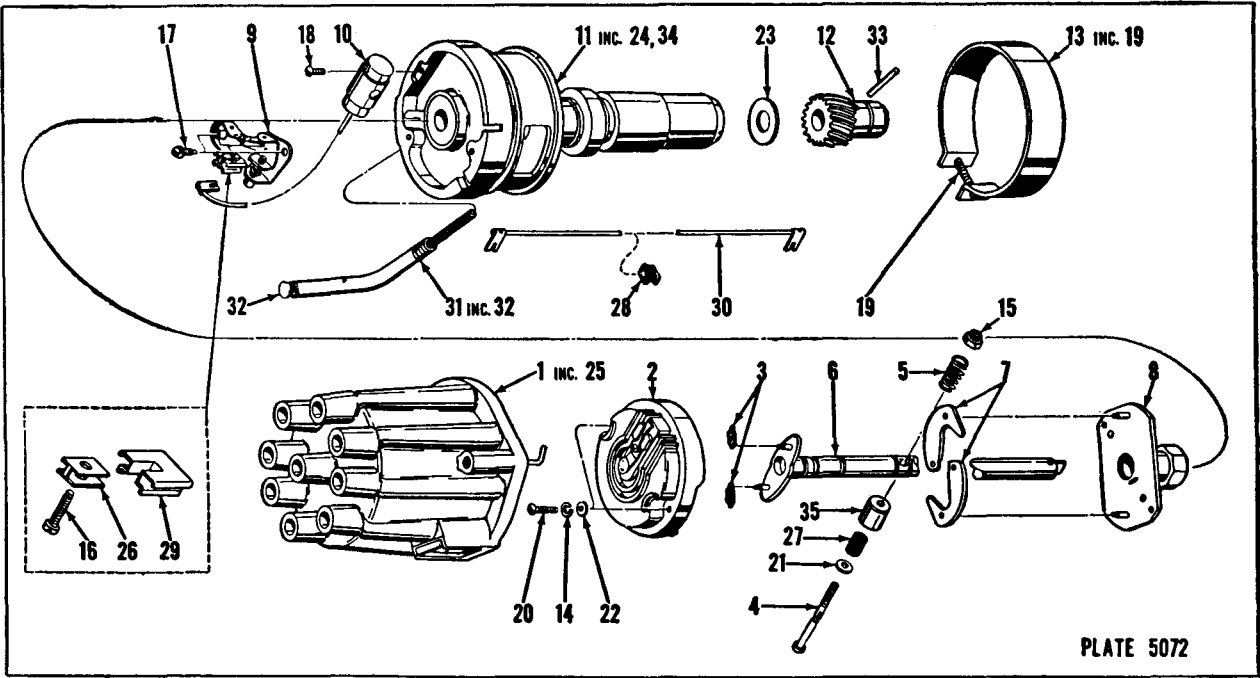

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Valve Gov- ernor	Spring Gov- ernor	Shaft	Weight	Cam	Contact Assem.	Con- denser	Housing	Gear	Band
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112330	1932018	1932015	1929319	1948781	1934592	1932720	1880902	1932724	1931988	1928111	1937880	1958599	1932727
1112331	"	"	1935200	"	"	1932767	1881371	"	"	"	1932764	1932667	"
1112343	"	"	1937723	"	"	1935793	"	1937339	"	"	"	"	"
1112347	"	"	1917710	1920471	"	1937628	"	1937627	"	"	1937630	1932026	"
1112349	"	"	1929319	1948781	"	1932720	1880902	1932724	"	"	1964096	1958599	"
1112350	"	"	"	"	"	"	"	"	"	"	"	"	"


Delco-Remy
SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
—	Lock Washer—Contact Adjusting Screw.....	121801	1112330-1; 43-7-9; 50
14	Lock Washer—Rotor Attaching Screw.....	453435	1112330-1; 43-7-9; 50
NUTS			
15	Nut—Governor Valve.....	1920472	1112330-1; 43-7-9; 50
SCREWS			
16	Screw—Breaker Lever Spring Attaching.....	9417096	1112330-1; 43-7-9; 50
—	Screw—Contact Adjusting.....	1949844	1112330-1; 43-7-9; 50
17	Screw (& Lock Washer)—Contact Assembly Attaching.....	1938527	1112330-1; 43-7-9; 50
18	Screw—Condenser Attaching.....	453418	1112330-1; 43-7-9; 50
19	Screw—Cover Band.....	453479	1112330-1; 43-7-9; 50
20	Screw—Rotor Attaching.....	9416183	1112330-1; 43-7-9; 50
WASHERS			
21	Washer—Plain—Governor Cushion.....	1900466	1112330-1; 43-7-9; 50
22	Washer—Plain—Rotor Attaching Screw.....	807295	1112330-1; 43-7-9; 50
23	Washer—Space—under Gear.....	1837617	1112330-1; 49; 50
23	Washer—Space—under Gear.....	1945776	1112343
24	Washer—Spring—between Seals.....	1932718	1112330-1; 43-7-9; 50
MISCELLANEOUS			
25	BRUSH—in Cap.....	1938193	1112330-1; 43-7-9; 50
26	CLIP—Breaker Lever Spring Screw.....	1931998	1112330-1; 43-7-9; 50
27	CUSHION (Rubber)—Governor Weight.....	1920474	1112330-1; 43-7-9; 50
28	GROMMET—for Primary Lead.....	1932732	1112330-1; 43-7-9; 50
29	INSULATOR—Breaker Lever Spring Screw.....	1931997	1112330-1; 43-7-9; 50
30	LEAD—Primary.....	1932731	1112330-1; 43-7-9; 50
31	OILER Assembly.....	1922265	1112330-1; 43-7-9; 50
32	OILER (only).....	113702	1112330-1; 43-7-9; 50
—	PIN—Dowel (in Housing).....	1938856	1112330-1; 43-7-9; 50
33	PIN—Gear.....	829421	1112330-1; 47-9; 50
33	PIN—Gear Attaching.....	1857492	1112343
—	RING (Rubber) Valve Stop.....	1948782	1112349, 50
34	SEAL—Oil (in Housing).....	1920463	1112330-1; 43-7-9; 50
—	SPRING—Contact Adjusting.....	1931995	1112330-1; 43-7-9; 50
35	WEIGHT—Governor.....	1932730	1112330-1; 43-7-9; 50

 *If oiler hole in base is $\frac{3}{8}$ " dia.—not tapped—use 113702 Oiler.

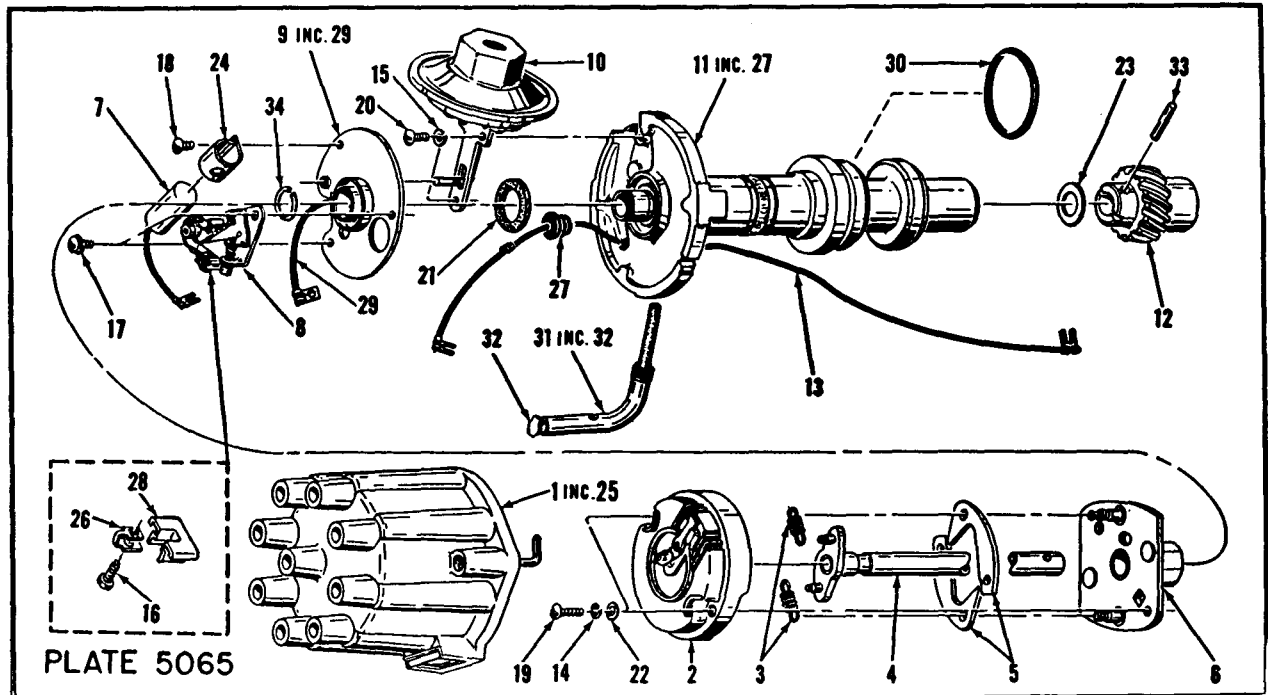

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111925	1971244	1971247	1882774	1968535	1881371	1966994	1932004	1966294	1962141	+1116163	1966407	1958599	1942518
1111926	"	"	"	1968530	"	"	"	"	1846122	+1115360	1851158	"	1846199
1111927	800061	"	1971039	1971037	1965843	"	"	"	"	+1115373	"	"	"
1111928	1971244	"	1969107	1969058	1880902	"	"	"	"	+1116163	"	"	"
1111929	"	"	1947660	1970178	1881371	1941849	1932004	1931988	1962141	+1973408	1962144	1955676	1958971
1111930	"	"	1942012	1963251	"	1941135	"	"	"	+1115361	"	"	"
1111931	"	"	1971185	1971183	1880902	1965066	"	"	"	+1973407	"	"	"
1111932	"	"	1935843	1970387	1881371	1941135	"	"	"	+1973408	"	"	"
1111933	"	"	1885339	1971197	"	1967914	"	"	"	+1973418	"	"	"
1111934	"	"	1941964	1965297	1880902	1965844	"	"	"	+1973408	"	"	"
1111935	"	"	1970573	1970130	"	1941135	"	"	"	+1115361	"	"	"
1111936	"	"	1959443	1971218	1924737	1967914	"	"	"	†	"	"	"
1111937	"	"	1968353	1969430	"	1945210	"	"	"	+1115374	1967562	1968296	1942518
1111938	"	"	1971453	1971449	1881371	1967005	"	"	"	+1116163	1967025	1950570	"
1111939	800063	"	1917710	1968316	"	1938116	"	"	*1962141	+1973409	1968318	1958599	*1942518
1111940	1971244	"	1941524	1971768	"	1961654	"	"	"	+1115364	1967562	1968296	"
1111941	"	"	800036	800037	"	1965844	"	1966294	"	+1115365	"	1968683	"
1111942	"	"	1968353	1968284	"	1967914	"	1931988	"	+1115364	"	1968296	"
1111944	800061	"	1958395	1966779	"	1965170	"	"	"	+1115358	1965169	1968879	"
1111945	1971244	"	1968353	1969430	1924737	1945210	"	"	"	†	1967562	1968683	"
1111946	"	"	1963965	1968437	"	1967914	"	1966294	"	†	"	"	"
1111947	"	"	1942510	1968280	1881371	1941135	"	1931988	"	+1115374	"	1968296	"
1111948	"	"	1908587	1971359	"	1971360	1928111	"	1950575	+1115362	1966365	801739	"
1111949	"	"	1965903	800388	1965843	800387	1932004	"	1962141	+1116201	1966407	1958599	"
1111950	"	"	1915231	1971574	1881371	1967023	"	"	"	†	"	"	"
1111951	"	"	1957483	1969430	1924737	1945210	"	"	"	+1115374	1967562	1968683	"
1111952	"	"	1970926	800415	1881371	1967914	"	1966294	"	+1115365	"	"	"
1111953	"	"	1970935	800412	"	1941135	"	1931988	"	+1115374	"	1968296	"
1111954	"	"	1922426	1846243	"	"	"	"	"	+1115360	1965974	1958599	"
1111955	"	"	1885787	800643	"	1969763	1932004	1931988	*1962141	+1973409	1968318	1958599	*1942518

†Not used on this model

*Service by complete replacement


†For 1970 Model year and later use 1846122 plate; 1846199 lead.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
SCREWS			
17	Screw—(& Lock Washer)—Contact Assem. Attach.....	1938527	All except 1111927-8; 54
18	Screw—Condenser Clamp Attaching.....	453647	All except 1111927-8; 54
19	Screw—Rotor Attaching.....	274453	All
20	Screw—Vacuum Control Attaching.....	454408	1111925-9; 30-1-2-3-4-6-7-8-9; 40-1-2-5-6-7-8-9; 50-1-2-3-5
20	Screw—Vacuum Control Attaching.....	453696	1111926-7-8-54
20	Screw—Vacuum Control Attaching.....	453461	1111944
—	Screw—(& Lock Washer)—R.F.I. Shield Attach.....	1946215	1111939; 44; 55
WASHERS			
—	Washer—Felt—Under Plate Washer.....	1951099	All
23	Washer—Tang—Under Gear.....	1837617	1111925-6-7-8-37-8-9; 40-1-2-5-6-7-9; 50-1-2-3-4
—	Washer—Under Advance Plate.....	1961927	1111927-8; 54-5
—	Washer—Tang—Between Gear & Base.....	1965864	1111925; 39; 49; 50-5
—	Washer—Thrust Tach. Gear.....	1956834	1111926-7-8; 54
—	Washer—Between Gear and Base.....	811912	1111948
MISCELLANEOUS			
—	BLOCK—Drive Gear Cushion.....	1908028	1111944
24	BRACKET—Condenser.....	1869573	All except 1111927-8; 54
25	BRUSH—In Cap.....	1938193	All
—	BUTTON—(Nylon) In Weight Base.....	1957329	1111927-8; 54
—	BUTTON—Tach. Shaft Spacing.....	1957329	1111926-7-8; 54
—	CONNECTOR—Lead Junction.....	2973782	1111927-8; 54
—	COUPLING—Tach.....	1955799	1111926-7-8; 54
—	CUSHION—Distributor Drive Gear.....	1908029	1111944
—	FELT—Cam Oiler.....	1961088	1111930-1-2-3-4-5-6-8-9
—	FELT—Cam Oiler.....	*1949084	1111925-6; 41-6-8-9; 50-2-5
—	GEAR & CROSS Shaft—Tach.....	1955842	1111926-7-8; 54
27	GROMMET—For Primary Lead.....	1932023	All except 1111927-8-54
27	GROMMET—In Housing.....	1960789	1111927-8; 54
29	LEAD—Breaker Plate Ground.....	1932002	All except 1111927-8; 54
33	PIN—Gear Attaching.....	455862	1111929; 30-1-2-3-4-5-6-8
33	PIN—Gear Attaching.....	456652	1111925-6-7-8; 37-9; 40-1-2-5-6-7-9; 50-1-2-3-4-5
33	PIN—Gear Attaching.....	454512	1111948
33	PIN—Gear Attaching.....	1908031	1111944
—	POLE PIECE & WT. BASE.....	1967928	1111927
—	POLE PIECE & WT. BASE.....	1969108	1111928
—	POLE PIECE & WT. BASE.....	1964309	1111954
—	POLE PIECE & PLATE ASSEM.....	1960779	1111927-8-54
—	"O" RING—On Base.....	1959331	1111938
—	RETAINER—Distributor Drive Gear.....	1908030	1111944
—	RETAINER—Felt Wick.....	*1935621	1111925-6; 41-6-8-9; 50-2-5
—	RETAINER—Felt Wick.....	1963858	1111930-1-2-3-4-5-6-8-9
—	RING—Spring Post Retainer.....	9423913	1111927-8
—	R.F.I. Shield Package.....	1846216	1111939; 44; 55
—	SEAL—Lubrication.....	1950569	All
—	SLEEVE (Rubber)—Spring Post.....	1945548	1111929; 37-8-9; 40-1-2-5-6-7-8-9; 50-1-2-3-5
—	SLEEVE (Rubber)—Spring Post.....	1961234	1111925-6-7-8; 44; 54
34	SPRING—Advance on Pole Pc. Plate Retainer.....	1932024	All

 *Models with cylindrical wick use 801865 wick and retainer package.

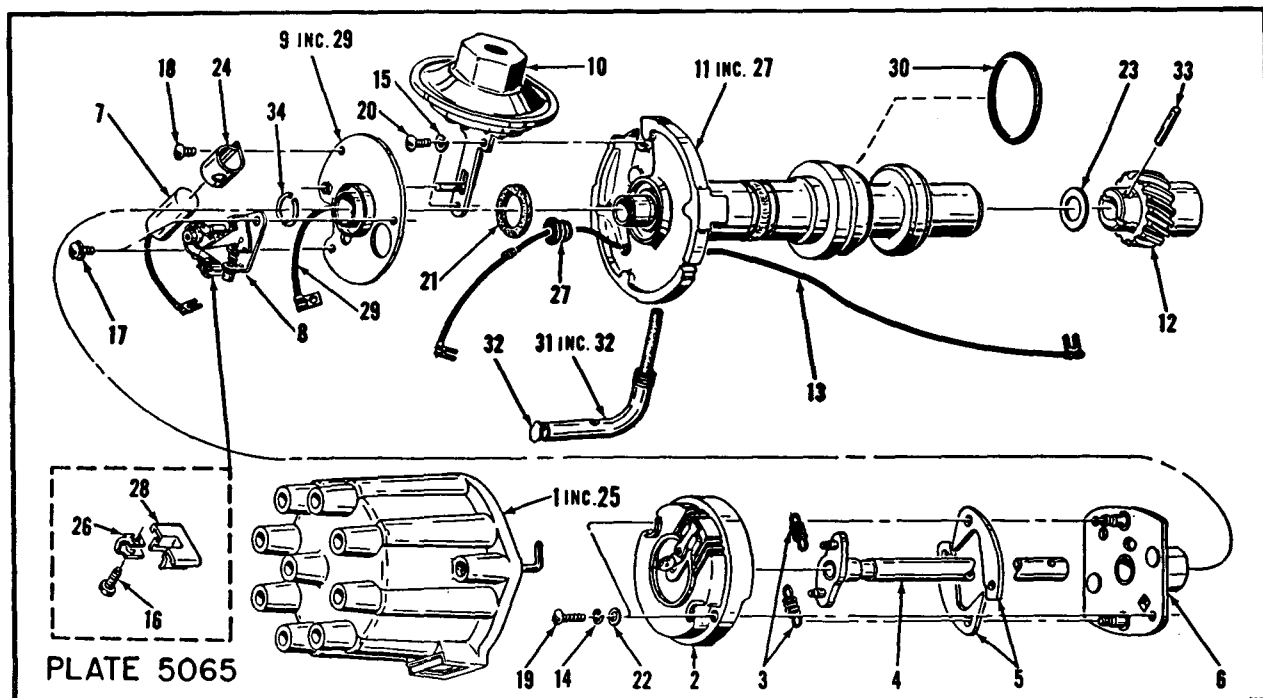

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111956	1971244	1971247	1937291	800645	1881371	1967005	1932004	1931988	1962141	†1973421	1966407	1958599	1942518
1111957	"	"	1968543	1846045	"	1966994	"	1966294	"	†1115360	1965974	"	"
1111958	800061	"	1922426	1846243	"	"	"	"	"	†	1851158	"	"
1111959	1971244	"	1916990	800655	"	1941135	1932004	1931988	1962141	†1115365	1967562	1968296	1942518
1111960	"	"	1970935	800412	"	"	"	"	"	†	"	"	"
1111961	"	"	1946972	1962142	"	1961654	"	"	"	†1973408	1962144	1955676	1958971
1111962	"	"	1963965	800958	1924737	1942360	"	"	"	†1116163	1967025	1967024	1942518
1111963	"	"	1968543	1846010	1881371	1971553	"	1966294	1846122	†	1966407	1958599	1846199
1111964	"	"	1925251	801056	1881371	1938116	"	1931988	1962141	†	1967025	1950570	1942518
1111965	"	"	1942615	801105	1924737	1965066	"	1966294	"	†1115365	1967562	1968683	"
1111966	"	"	1941964	"	"	"	"	"	"	†	"	"	"
1111967	"	"	1922426	1969670	1881371	"	"	"	"	†	"	"	"
1111968	800062	"	801131	1971191	"	"	"	"	"	†1973436	1966407	1958599	"
1111970	1971244	"	800036	800037	"	1965844	1932004	1966294	1962141	†1115365	1967562	1968683	1942518
1111971	"	"	801283	1964925	"	"	"	"	"	†1115360	1851158	1958599	"
1111972	800062	"	800653	1968440	"	"	"	"	"	†1115365	801752	801318	"
1111973	1971244	"	1882995	801312	1965843	801314	1932004	1931988	1962141	†1973427	1962144	1955676	1958971
1111974	"	"	1946972	1962142	1881371	1961654	"	"	1846122	†1973408	801262	"	1846199
1111975	"	"	1942012	1963251	"	1941135	"	"	"	†1115361	"	"	"
1111976	"	"	1916230	1962142	"	1941849	"	"	"	†1973408	"	"	"
1111977	"	"	1935843	1970387	"	"	"	"	"	†1973427	"	"	"
1111978	"	"	1970131	1971028	1880902	1846765	"	"	1846122	1973430	"	"	1942518
1111979	"	"	1930200	801842	1881371	801314	"	"	"	†1973427	"	"	1846199
1111980	"	"	1941964	1965297	1880902	1965844	"	"	"	†1973408	"	"	"
1111981	"	"	1970573	1970130	"	1941135	"	"	"	†1973427	"	"	"
1111982	"	"	1959443	1971218	1924737	1967914	"	"	"	†	"	"	"
1111983	800062	"	1970823	1958625	1881371	"	"	"	"	†1973418	"	"	"
1111984	1971244	"	1916297	801459	1965843	1966686	1932004	1931988	1846122	†1116163	1967025	1967024	1846199
1111985	800061	"	1930481	1966779	1881371	801430	"	"	*1962141	†1115358	1965169	1968879	*1942518

†Service by Complete replacement.


*For 1970 model year and later use 1846122 plate; 1846199 lead.

○Not used on this model.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
SCREWS			
17	Screw—(& Lock Washer)—Contact Assem. Attach.....	1938527	All except 1111958; 67-8; 71-2; 83
18	Screw—Condenser Clamp Attaching.....	453647	All except 1111958; 67-8; 71-2; 83
19	Screw—(& Lock Washer)—Rotor Attaching.....	274453	All
20	Screw—Vacuum Control Attaching.....	454408	1111956-9; 60-1-2-3-4-5-6; 70-3-4-5-6-7-8-9; 80-1-2-4
20	Screw—Vacuum Control Attaching.....	9418565	1111967-8; 72; 83
20	Screw—Vacuum Control Attaching.....	453696	1111957-8; 71
20	Screw—Vacuum Control Attaching.....	453461	1111963; 74-5-7-9; 80-1
—	Screw—R.F.I. Shield Attaching.....	1846215	1111963; 74-5-6-7-8-9; 80-1-2-4
WASHERS			
—	Washer—Felt—Under Plate Washer.....	1951099	All
—	Washer—Under Advance Plate.....	1961927	1111958; 67-8; 71-2; 83
23	Washer—Tang—Under Gear.....	1837617	1111956-9; 60-2-3-4-5-6-7-8; 70-1-2; 84
—	Washer—Tang—Between Gear & Base.....	1965864	1111956; 63-7-8
—	Washer—Thrust Tach. Gear.....	1956834	1111956-7-8; 71
MISCELLANEOUS			
—	BLOCK—Drive Gear Cushion.....	1908028	1111985
24	BRACKET—Condenser.....	1869573	All except 1111958; 67-8; 71-2; 83
25	BRUSH—In Cap.....	1938193	All
—	BUTTON (Nylon) In Weight Base.....	1957329	1111958; 67-8; 83-5
—	BUTTON—TACH SHAFT Spacing.....	1957329	1111958; 71
—	CONNECTOR—Lead Junction.....	2973782	1111958; 67-8; 71-2; 83
—	COUPLING—Tach.....	1955799	1111957-8; 71
—	CUSHION—Distributor Drive Gear.....	1908029	1111985
—	FELT—Cam Oiler.....	1949084	1111956; 63-5-6; 70
—	FELT—Cam Oiler.....	1961088	1111961-2-4-5-6-7-8-9; 78; 80-1-2-4
—	GEAR & CROSS SHAFT—Tach.....	1955842	1111957-8; 71
—	GROMMET—In Housing.....	1960789	1111958; 67-8; 71-2; 83
27	GROMMET—For Primary Lead.....	1932023	All except 1111958; 67-8; 71-2; 83
29	LEAD—Breaker Plate Ground.....	1932002	All except 1111958; 67-8; 71-2; 83
33	PIN—Gear Attaching.....	1908031	1111985
33	PIN—Gear Attaching.....	455862	1111961-2-4; 73-4-5-6-7-8-9; 80-1-2-3-4
33	PIN—Gear Attaching.....	456652	1111956-7-8-9; 60-5-6-7-8; 70-1-2
—	POLE PIECE & WT. BASE.....	1929208	1111968
—	POLE PIECE & WT. BASE.....	1964309	1111958; 67
—	POLE PIECE & WT. BASE.....	1964255	1111971
—	POLE PIECE & WT. BASE.....	801975	1111972
—	POLE PIECE & WT. BASE.....	1970156	1111983
—	POLE PIECE & PLATE.....	1960779	1111958; 67-8; 71-2
—	POLE PIECE & PLATE.....	1964276	1111983
—	RETAINER—Distributor Drive Gear.....	1908030	1111985
—	RETAINER—Felt Wick.....	1935621	1111956-7; 63-5-6; 70
—	RETAINER—Felt Wick.....	1963858	1111961-2-4; 70-3-4-5-6-7-8-9; 80-1-2-4
—	R.F.I. SHIELD Package.....	1846216	1111963; 74-5-6-7-8-9; 80-1-2-4
—	RING—Spring Post Retainer.....	9423913	1111958
—	“O” RING—On Base.....	1959331	1111961-2-4; 84
—	SEAL—Lubrication.....	1950569	All
—	SLEEVE (Rubber)—Spring Post.....	1945548	1111956-9; 60-1-2-5-6-8; 70-2; 84
—	SLEEVE—Spring Post.....	1961234	1111957-8; 61-3-7; 71-3-4-5-6-7-8-9; 80-1-2-3
34	SPRING—Advance or Pole Pc. Plate retainer.....	1932024	All

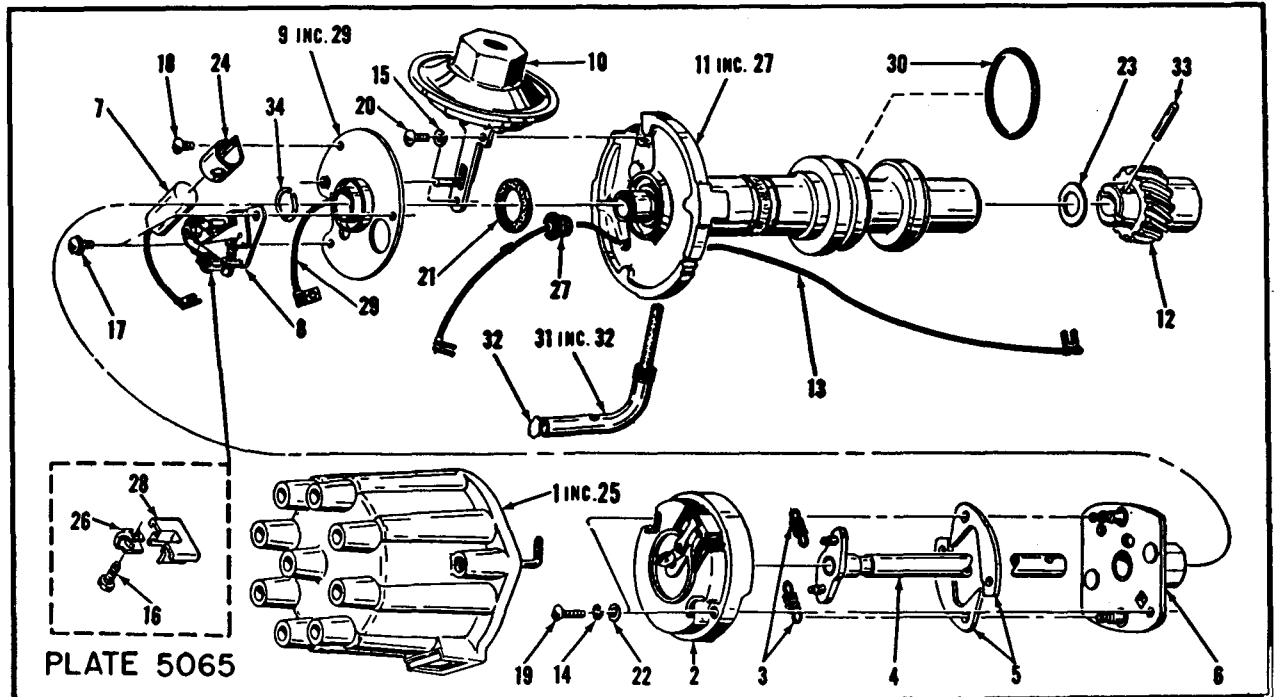 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111986	1971244	1971247	1963965	801608	1924737	1942360	1932004	1931988	1846122	†1116163	1967025	1950570	1846199
1111987	"	"	1947660	801734	1881371	"	1928111	"	801737	†1973426	1966365	801739	1942518
1111988	"	"	1958213	801781	"	1938116	"	"	"	†	"	"	"
1111989	"	"	1930200	801842	"	801314	"	"	1962141	†1973427	1962144	1955676	1958971
1111990	"	"	801869	1968286	"	1965844	"	"	1846122	†1115365	1967562	1968296	1846199
1111991	"	"	1941524	1971768	"	1961654	"	"	1962141	†1115364	"	"	1858971
1111992	"	"	1970937	800271	1924737	1965066	"	"	1846122	†1115365	"	"	1846199
1111993	"	"	1970935	800412	1881371	1941135	"	"	"	†	"	"	"
1111994	800062	"	1971542	1966779	"	○	○	○	"	†1115358	1965169	1968879	"
1111995	1971244	"	1884615	1970575	"	1938116	1932004	1931988	1846122	†1115355	1966407	1958599	1846199
1111996	"	"	1967643	1966928	1965843	1967002	"	"	"	†1968861	"	"	"
1111997	"	"	1963965	1968076	1881371	1942360	"	"	"	†1115357	"	"	"
1111998	"	"	1882774	1965535	"	1964372	"	"	"	†1116163	"	"	"
1111999	"	"	1900371	1970915	"	1966709	"	"	"	†	"	"	"
1112000	"	"	1882774	1968535	"	1964372	"	1966294	"	†1115355	"	"	"
1112001	"	"	1935546	1967196	"	1966740	"	1931988	"	†1973421	"	"	"
1112002	"	"	1911496	1970863	"	1967005	"	"	"	†	"	"	"
1112003	"	"	1885787	1969762	"	1970240	"	1966294	"	†1116163	"	"	"
1112004	800063	"	1963965	1846461	1924737	1942360	"	1931988	"	†1973409	1968318	"	"
1112005	1971244	"	1851823	1941361	1881371	"	"	"	"	†1973436	"	"	"
1112006	"	"	1968353	1846091	1924737	1963492	"	"	"	†1116163	1967025	1950570	"
1112007	"	"	1970937	800271	"	1965066	"	"	"	†1115365	1967562	1968296	"
1112008	"	"	1963965	800037	1881371	1967914	"	"	"	†1115364	"	"	"
1112009	"	"	1946990	800655	"	1941135	"	1966294	"	†1115365	"	1968683	"
1112010	"	"	1884610	"	1960203	"	"	"	"	†	"	"	"
1112011	"	"	800036	800037	1881371	1965844	"	"	"	†	"	"	"
1112012	"	"	1846319	1846209	1880902	1946277	"	"	"	†	"	"	"
1112013	"	"	800036	800037	1881371	1965844	"	"	"	†	801752	801318	"
1112016	"	"	1963965	800958	1924737	1942360	"	1931988	"	†1116163	1967025	1967024	"


†Service by Complete replacement.

○Not used on this model.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
SCREWS			
—	Screw (& Lock Washer) Shield Pkg. Attach.....	1846215	1111986; 95-6-7-8-9; 1112000-1-2-3-5-6-7-3-9; 10-11-12-13-16
17	Screw—(& Lock Washer)—Contact Assem. Attach.....	1938527	All except 1111994
18	Screw—Condenser Clamp Attaching.....	453647	All except 1111994
19	Screw—(& Lock Washer)—Rotor Attaching.....	274453	All
20	Screw—Vacuum Control Attaching.....	453461	1111994
20	Screw—Vacuum Control Attaching.....	454408	All except 1111994
WASHERS			
—	Washer—Felt—Under Plate Washer.....	1951099	All
23	Washer—Tang—Under Gear.....	1837617	1111986; 91-2-3-5-6-7-8-9; 1112000-1-2-3-4-5-6-7-8-9; 10-11-12-13-16
—	Washer—Tang—Between Gear & Base.....	811912	1111987-8
—	Washer—Thrust Tach. Gear.....	1956834	1111995-6-7-8-9; 1112000-1-2-3-4-5
—	Washer—Under Advance Plate.....	1961927	1111994
MISCELLANEOUS			
—	BLOCK—Drive Gear Cushion.....	1908028	1111994
24	BRACKET—Condenser.....	1869573	All except 1111994
25	BRUSH—In Cap.....	1938193	All
—	CONNECTOR—Lead Junction.....	2973782	1111994
—	CUSHION—Dist. Drive Gear.....	1908029	1111994
—	FELT—Cam Oiler.....	1949084	1111987-8; 90-1-2-3-5-6-7-8-9; 1112000-1-2-3-9; 10-11-13
—	FELT—Cam Oiler.....	1961088	1111986-9; 1112004-5-6; 12;16
—	GROMMET—In Housing.....	1932023	1111994; 1112004
27	GROMMET—For Primary Lead.....	1932023	All except 1111994
—	GROMMET—Pole Piece & Plate assem.....	1960789	1111994
29	LEAD—Breaker Plate Ground.....	1932002	All except 1111994
33	PIN—Gear Attaching.....	454512	1111987-8;
33	PIN—Gear Attaching.....	455862	1111986-9; 1112006; 16
33	PIN—Gear Attaching.....	456652	1111990-1-2-3-5-6-7-8-9; 1112000-1-2-3-4-5-7-8-9; 10-11-12-13
33	PIN—Gear Attaching.....	1908031	1111994
—	POLE PIECE & PLATE ASSEM.....	1960779	1111994
—	POLE PIECE & WT. BASE.....	1967928	1111994
—	RETAINER—Felt Wick.....	1935621	1111987-8; 90-1-2-3-5-6-8-9; 1112000-1-2-3-9; 10-11-13
—	RETAINER—Dist. Drive Gear.....	1908030	1111994
—	RETAINER—Felt Wick.....	1963858	1111986-9; 1112004-5-6; 12-16
—	R.F.I. SHIELD PACKAGE.....	1846216	1111986; 95-6-7-8-9; 1112000-1-2-3-5-6-7-3-9; 10-11-12-13-16
—	"O" RING—On Base.....	1959331	1111986; 1112006; 16
—	SEAL—Lubrication.....	1950569	All
—	SLEEVE (Rubber)—Spring Post.....	1945548	1111986-7-8-9; 90-1-2-3-5; 1112001-2-4-5-6-7-8-9; 10-11-13-16
—	SLEEVE (Rubber) Spring Post.....	1961234	1111989; 94-6-7-8-9; 1112000-3
34	SPRING—Advance or Pole Pc. Plate retainer.....	1932024	All

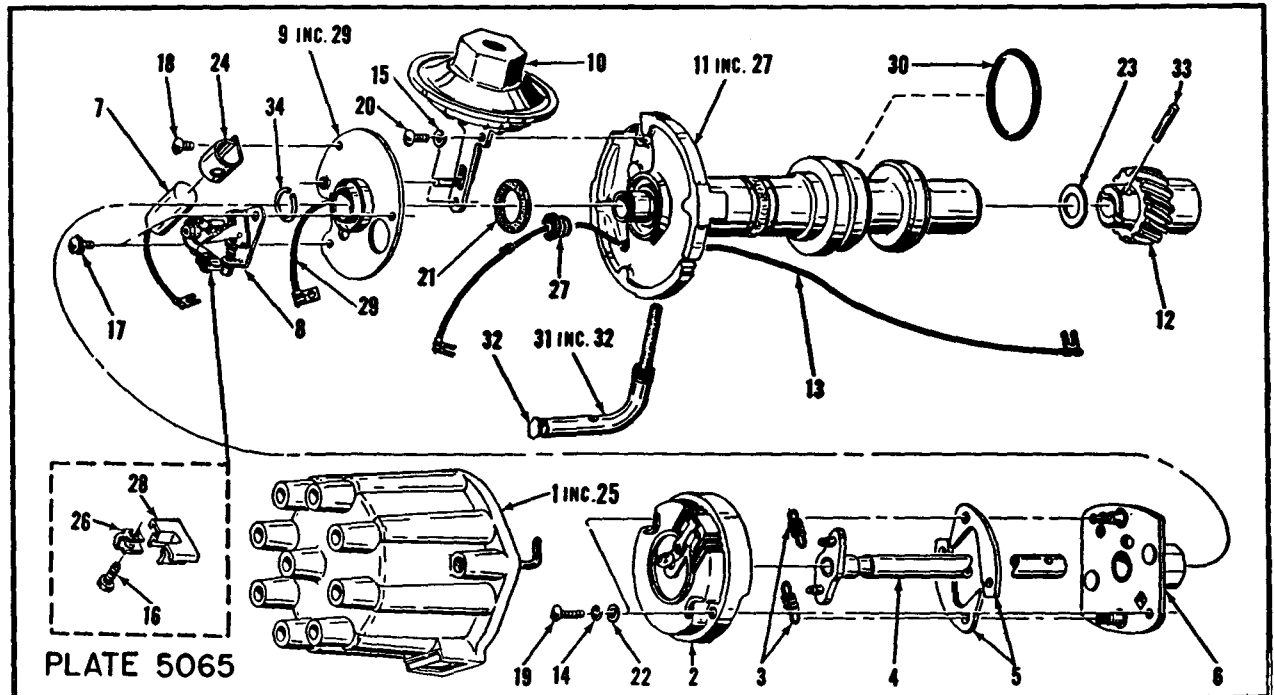 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112017	1971244	1971247	1922250	1970531	1881371	1942360	1932004	1931988	1846122	+1116163	1966407	1958599	1846199
1112018	"	"	1958213	801781	"	1938116	1928111	"	801737	+1973429	1966365	801739	1942518
1112019	"	"	1882956	1846553	"	1966994	1932004	1966294	1846122	+1116163	1966407	1958599	1846199
1112020	"	"	1951743	1968080	"	"	"	1966294	"	+1115337	1851158	"	"
1112021	"	"	800477	800476	"	"	"	"	"	+1115360	"	"	"
1112022	"	"	1882774	1968535	"	1938116	"	1931988	"	+1116163	1966407	"	"
1112023	"	"	1882956	1846849	"	1942360	"	"	"	"	"	"	"
1112024	"	"	1925251	800655	"	1941135	"	1966294	"	+1115365	1967562	1968683	"
1112026	800061	"	1925549	1846789	"	"	"	"	"	"	1846791	"	"
1112027	1971249	"	1846802	1967022	"	1966686	1932004	1931988	1846122	+1116163	1967025	1967024	1846199
1112028	"	"	1946972	801781	"	1965191	1928111	"	1950575	+1115362	1966365	801739	1942518
1112032	"	"	1847937	1847938	"	1965066	1932004	"	1846122	+1973407	801262	1955676	"
1112033	"	"	1959443	1971218	1924737	1967914	"	"	"	+1973408	"	"	"
1112034	"	"	1847827	1847822	1965843	1847825	"	"	"	+1973407	"	"	"
1112035	1847977	1847993	1851062	1847985	1881371	"	"	"	"	+1115365	1847997	1968683	"
1112036	1971244	1971247	1935843	1970387	1881371	1941135	1932004	1931988	1846122	+1973407	801262	1955676	1942518
1112037	"	"	1851056	1851053	"	1851057	"	"	"	+1116163	1967025	1950570	1846199
1112038	"	"	1851347	1851184	"	"	"	"	"	+1973437	1851158	1958599	"
1112039	"	"	1912886	1851705	1881371	1851057	1932004	1931988	1846122	+1973436	1966407	"	1846199
1112040	"	"	"	"	"	"	"	"	"	"	"	"	"
1112041	"	"	1851823	1941361	1881371	1942360	"	"	"	"	"	"	"
1112042	"	"	1916297	1967196	"	1969763	"	"	"	"	"	"	"
1112043	"	"	1965886	1851129	"	1851057	"	"	"	+1973437	"	"	"
1112044	"	"	1965353	1851631	"	1942360	"	"	"	"	"	"	"
1112045	"	"	1851764	1851629	"	1963492	"	"	"	"	"	"	"
1112046	"	"	1965353	1851627	"	1942360	"	"	"	"	"	"	"
1112047	"	"	1851765	1851623	"	1963492	"	"	"	"	"	"	"
1112048	"	"	800477	1970575	"	1851057	"	"	"	"	"	"	"
1112049	"	"	1846802	1965891	"	1942360	"	1966294	"	"	"	"	"
1112050	"	"	1851764	1851625	"	1851136	"	"	"	"	1851158	"	"

○Not used on this model.

†Service by complete replacement.


□Cap and Harness Assembly.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
—	Lockwasher—Module Attach. Screw (#6).....	456413	1112035
—	Lock Washer—Coil Attaching Bolt.....	453435	1112035
SCREWS			
—	Screw—Module Attaching (#6-32x3/4).....	436667	1112035
—	Screw—(& Lock Washer)—R.F.I. Shield Attach.....	1846215	1112019; 20-1-2-3-4-6-7; 33-4-6-7-9; 42-4-5-9; 50
17	Screw—(& Lock Washer)—Contact Assem. Attach.....	1938527	All except 1112026; 35-8
18	Screw—Condenser Clamp Attaching.....	453647	All except 1112026; 35-8
19	Screw—(& Lock Washer)—Rotor Attaching.....	274453	All
20	Screw & Lock Washer—Vacuum Control Attach.....	453696	1112026; 38; 50
20	Screw—Vacuum Control Attaching.....	454408	All except 1112026; 35-8; 50
WASHERS			
—	Washer—Felt—Under Pole Piece & Plate.....	1951099	1112026; 35
—	Washer—Felt—Under Plate Washer.....	1951099	All except 1112026; 35-8
—	Washer—Plain—Module Attach.....	1918848	1112035
—	Washer—Plain—Coil Attaching Bolt.....	807295	1112035
—	Washer—Shim—Under Pole Piece & Wt. Base.....	1912129	1112035
23	Washer—Tang—Under Gear.....	1837617	1112017-18-19; 20-1-2-3-4-6-7; 35-7-8-9; 40-1-2-3-4-5-6-7-8-9; 50
—	Washer—Tang—Between Gear & Base.....	811912	1112018; 28
—	Washer—Thrust Tach. Gear.....	1956834	1112017-19; 20-1; 38-9; 40-1-2-3-4-5-6-7-8-9; 50
—	Washer—Under Advance Plate.....	1961927	1112026; 38
—	Washer—Under Cross Shaft Gear.....	1965864	1112022-3-6
MISCELLANEOUS			
—	BOLT—Coil to Base Attaching.....	1847941	1112035
24	BRACKET—Condenser.....	1869573	All except 1112026; 35-8
25	BRUSH—In Cap.....	1938193	All except 1112035
—	BUTTON—(Nylon) Tach. Gear Spacing.....	1957329	1112020-1-6; 38; 50
—	BUTTON—(Nylon) In Weight Base.....	1957329	1112026; 35-8
—	CONNECTOR—Lead Junction.....	2973782	1112026; 38
—	COUPLING & CROSS SHAFT.....	1955799	1112026; 38
—	FELT—Cam Oiler.....	1949084	1112017-18-19; 20-1-2-3-4
—	FELT—Cam Oiler.....	1961088	1112026-7-8; 33-4-6-7-9; 40-1-2-3-4-5-6-7-8-9; 50
—	GEAR & CROSS SHAFT—Tach.....	1955842	1112020-1-6; 38-50
—	GROMMET.....	1960789	1112026; 38
27	GROMMET—For Primary Lead.....	1932023	All except 1112026; 35-8
—	IGNITION CONTROL MODULE.....	1847834	1112035
—	IGNITION COIL ASSEM.....	1847953	1112035
29	LEAD—Breaker Plate Ground.....	1932002	All except 1112026; 35-8
—	"O" RING—Or Housing Stem.....	1959331	1112027; 37
33	PIN—Gear Attaching.....	454512	1112018; 28
33	PIN—Gear Attaching.....	456652	1112017; 20-1-2-3-4; 35-8; 40-1-2-3-4-5-6-7-8-9; 50
—	PIN-GEAR Attaching.....	455862	1112026-7; 33-4-6-7
—	POLE PIECE & PLATE ASSEM.....	1847943	1112035
—	POLE PIECE & PLATE ASSEM.....	1960779	1112026; 38
—	POLE PIECE & WEIGHT BASE.....	800590	1112038
—	POLE PIECE & WEIGHT BASE.....	1846790	1112026
—	POLE PIECE & WEIGHT BASE.....	1847987	1112035
—	PLUNGER & SPRING—Cap.....	1847981	1112035
—	RETAINER—Felt Wick.....	1935621	1112017-18-19; 20-1-2-3-4
—	RETAINER—Felt Wick.....	1963858	1112026-7; 33-4-6-7-9; 40-1-2-3-4-5-6-7-8-9; 50
—	RING—SPRING Post Retainer.....	9423913	1112026; 38
—	R.F.I. SHIELD PACKAGE.....	1846216	1112019; 20-1-2-3-4-6-7; 33-4-6-7-9; 42-4-5-9; 50
—	SEAL—Lubrication.....	1950569	All
—	SHELL.....	1847978	1112035
—	SLEEVE (Rubber)—Spring Post.....	1945548	1112018; 24-7-8; 35-7-9; 40-1-2-3-6-7-8
—	SLEEVE (Rubber)—Spring Post.....	1961234	1112017-19; 20-1-2-3-6; 33-4-6-8; 44-5-9; 50
34	SPRING—Advance or Pole Pc. Plate Retainer.....	1932024	All
—	SPRING—Cap Contractor.....	1947942	1112035

 *Models with cylindrical wick use 801865 wick and retainer pkg.

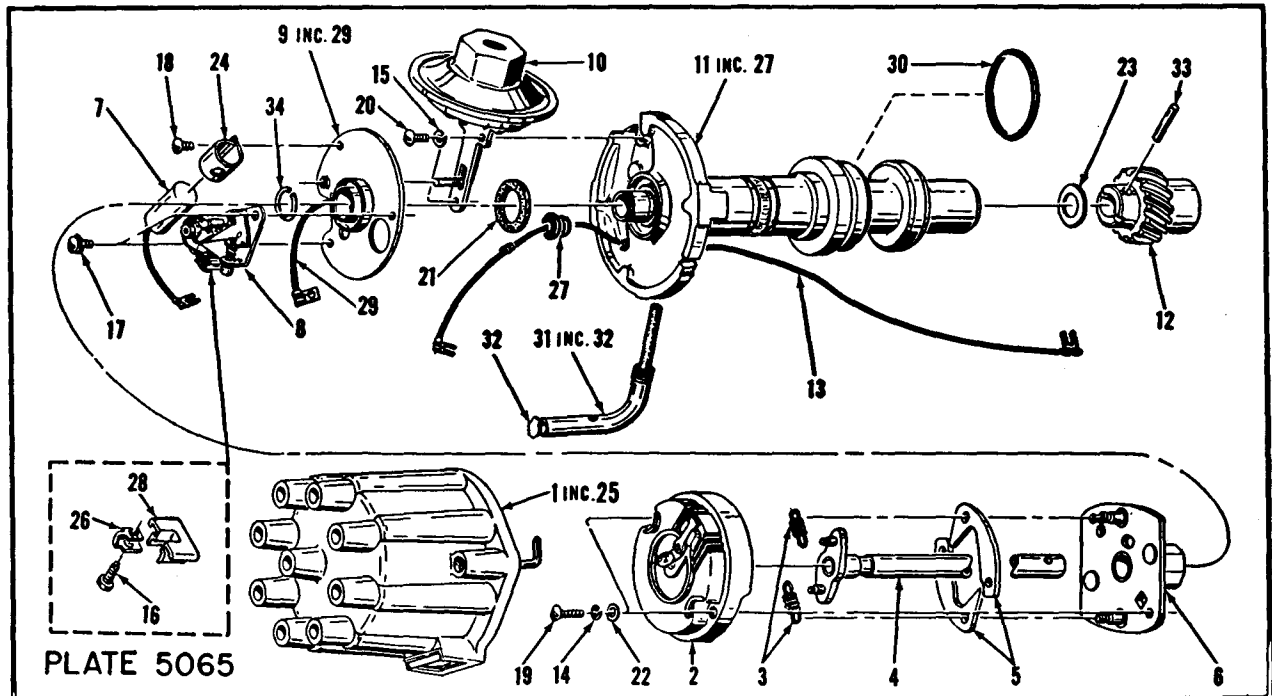

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112051	1971244	1971247	1882956	1851164	1881371	1971553	1932004	1966294	1846122	+1973436	1851158	1958599	1846199
1112052	"	"	"	1851159	"	"	"	"	"	+	1966407	"	"
1112053	"	"	1851348	1851221	"	"	"	"	"	+1973439	1851158	"	"
1112054	"	"	1970572	1851642	"	1965890	1932004	1966294	1846122	+	1966407	"	1846199
1112056	"	"	1851173	1851201	"	1942360	"	1931988	"	+1973438	"	"	"
1112057	"	"	1967517	1851210	"	1965976	"	"	"	+1973436	"	"	"
1112061	"	"	"	"	"	"	"	"	1962141	+	"	"	"
1112065	800063	"	1908587	1851213	"	1942360	"	"	1846122	+1973409	1968318	"	"
1112067	1971244	"	1964434	1851246	1965843	1851249	"	"	"	+1973440	1967025	1967024	"
1112068	"	"	1851288	1851286	1881371	1965066	"	"	"	+1115364	1967562	1968296	"
1112069	"	"	1851343	1851341	"	1941849	"	"	"	+	"	"	"
1112070	"	"	1851056	1851431	"	1941135	"	1966294	"	+	"	1968683	"
1112071	"	"	1851432	1851274	1880902	1961654	"	1931988	"	+1115365	"	1968296	"
1112072	"	"	1851056	1851431	1881371	1941135	"	1966294	"	+	"	1968683	"
1112073	"	"	△	△	"	1965066	"	"	"	+1115364	"	"	"
1112074	"	"	1851056	1851357	"	1963492	"	"	"	+1973437	1966407	1959599	"
1112075	"	"	1887553	1851361	"	1964372	"	"	"	+1973439	"	"	"
1112076	"	"	1925574	1851423	"	"	"	"	"	+	1851158	1961198	"
1112077	"	"	1970572	1851291	"	1938116	1932004	1931988	1846122	+1973440	1967025	1967024	1846199
1112078	"	"	1851605	1851599	1924737	1946277	"	"	"	+1973408	801262	1955676	1942518
1112079	"	"	1928363	1851444	"	1966244	"	"	"	+1973407	"	"	"
1112080	"	"	1884623	1851522	"	1942360	"	"	"	+1116163	1967025	1950570	1946199
1112083	"	"	800036	800037	"	1941135	"	"	"	+1115364	1967562	1968296	"
1112085	"	"	1916230	1962142	"	1941849	"	"	"	+1973407	801262	1955676	1942518
1112089	"	"	1851771	1851767	1881371	1961654	"	"	"	+1115364	1967562	1968296	1846199
1112090	"	"	1851772	1851810	"	801314	"	"	"	+	"	"	"

△Not used on this model

†Service by complete replacement


△For Service use 1852004 Shaft & Spring package

Delco-Remy SERVICE PARTS CATALOG

MINOR PARTS SECTION

OTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Ilus. No.	Name	Part No.	Used on Models
SCREWS			
—	Screw (& Lock Washer) Shield Pkg. Attach.....	1846215	1112051-2-4-6; 64-7; 71-2-4-5-7-8-9; 80-3-5-9; 90
17	Screw—(& Lock Washer)—Contact Assem. Attach.....	1938527	All except 1112053; 76
18	Screw—Condenser Clamp Attaching.....	453647	All except 1112053; 76
19	Screw—(& Lock Washer)—Rotor Attaching.....	274453	All
20	Screw—Vacuum Control Attaching.....	453696	1112051-3; 76
20	Screw—Vacuum Control Attaching.....	454408	1112052-4-6-7; 64-5-7-8-9; 70-1-2-3-4-5-7-8-9; 80-3-5-9; 90
WASHERS			
—	Washer—Felt—Under Plate Washer.....	1951099	All
23	Washer—Tang—Under Gear.....	1837617	All except 1112078; 85
—	Washer—Tang—Under Gear.....	1965864	1112052-4-6-7; 64-5; 74-5
—	Washer—Thrust Tach. Gear.....	1956834	1112051-3; 76
—	Washer—Under Advance Plate.....	1961927	1112053
MISCELLANEOUS			
24	BRACKET—Condenser.....	1869573	All except 1112053; 76
25	BRUSH—In Cap.....	1938193	All
—	BUTTON—(Nylon) Tach. Gear Spacing.....	1957329	1112053; 76
—	BUTTON—(Nylon) Weight Base.....	1957329	1112051-3
—	CONNECTOR—Lead Junction.....	2973782	1112053; 76
—	COUPLING & CROSS SHAFT.....	1955799	1112051-3
—	FELT—WICK—Cam Oiler.....	1961088	1112051-2-4-6-7; 64-5-7-8-9; 70-1-2-3-4-5-7-8-9; 80-3-5-9; 90
—	GEAR & CROSS SHAFT—Tach.....	1955842	1112051-3
—	GROMMET—In Housing.....	1932023	All
—	GROMMET—Pole Piece & Plate assem.....	1960789	1112053; 76
29	LEAD—Breaker Plate Ground.....	1932002	All except 1112053; 76
33	PIN—Gear Attaching.....	455862	1112067; 77-8-9; 80-5-9; 90
33	PIN—Gear Attaching.....	456652	1112051-2-3-4-5-6; 64-5-8-9; 70-1-2-3-4-5-6; 83
—	POLE PIECE & PLATE ASSEM.....	1960779	1112053; 76
—	POLE PIECE & WT. BASE.....	800590	1112053
—	POLE PIECE & WT. BASE.....	1968660	1112076
—	RETAINER—Felt Wick.....	1963858	1112051-2-4-6-7; 64-5-7-8-9; 70-1-2-3-4-5-7-8-9; 80-3-5-9; 90
—	R.F.I. SHIELD PACKAGE.....	1846216	1112051-2-4-6; 64-7; 71-2-4-5-7-8-9; 80-3-5-9; 90
—	RING—SPRING Post Retainer.....	9423913	1112053; 76
—	'O' RING—On Base.....	1959331	1112067; 77; 80
—	SEAL—Lubrication.....	1950569	All
—	SLEEVE—(Rubber)—Spring Post.....	1945548	1112065-7-8; 69; 70-1-2-3-7; 80-3-9; 90
—	SLEEVE (Rubber) Spring Post.....	1961234	1112051-2-3-4-6-7; 64; 74-5-6-8-9; 85
34	SPRING—Advance or Pole Pc. Plate retainer.....	1932024	All

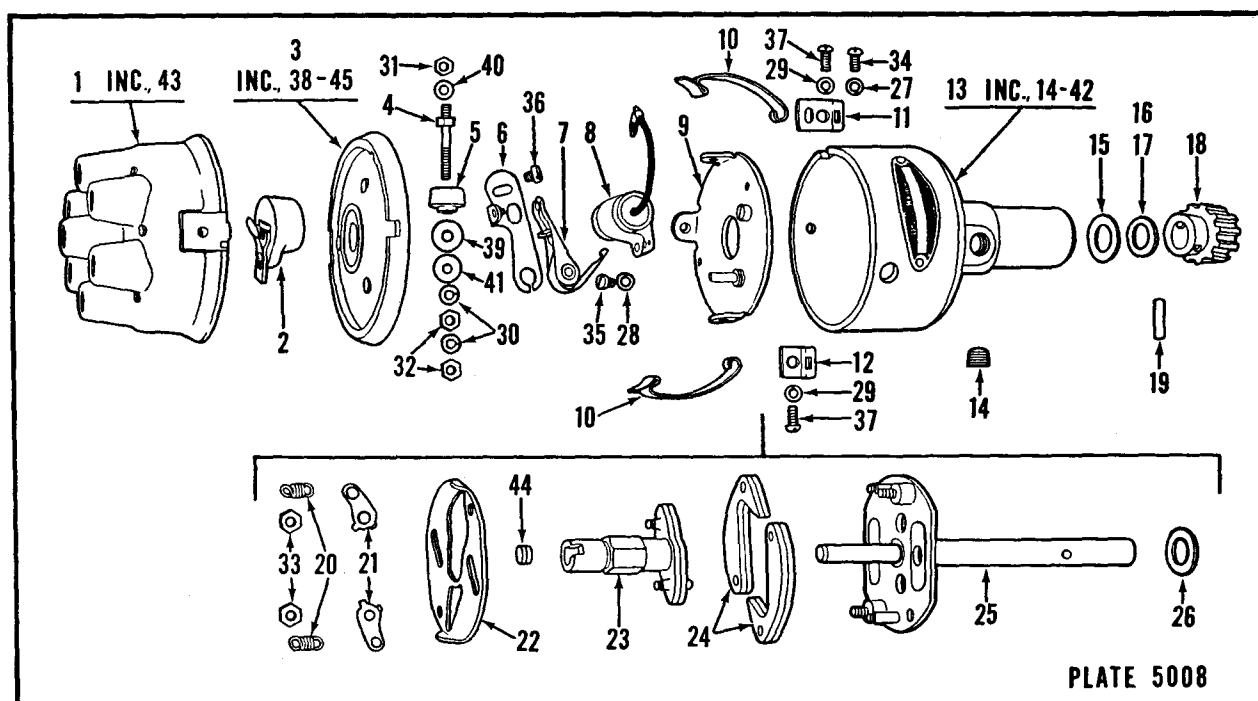 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Cap	Rotor	Cover — Housing	Screw or Stud — Terminal	Bushing — Ins.	Point and Support	Breaker Lever	Con- denser	Plate — Breaker	Spring — Cap	Support — Cap Spring	Support — Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112351	824735	820445		1916806	1878405	*1848038	*813238	1928111	1847643	1871838	1847289	1847289	1885667
1112353	"	"		"	"	"	"	"	"	"	"	"	1886526
1112354	"	"		"	"	"	"	"	"	"	"	"	1912020
1112355	"	"		"	"	"	"	1900272	"	"	"	"	1912483
1112356	"	"		"	"	"	"	"	"	"	"	"	1912622
1112357	"	"		"	"	"	"	"	"	"	"	"	1925094
1112358	"	"		"	"	"	"	1928111	"	"	"	"	1886526
1112359	"	"		"	"	"	"	1900272	"	"	"	"	1913720
1112360	"	"		"	"	"	"	"	"	"	"	"	1912622
1112361	"	"		"	"	"	"	1928111	"	"	"	"	1912020
1112362	"	"		1916806	□	"	"	"	"	"	"	"	1919018
1112363	"	"		"	□	"	"	"	"	"	"	"	"
1112364	"	"		"	□	"	"	"	"	"	"	"	"
1112365	"	"		1916806	1878405	"	"	"	"	"	"	"	1912332
1112366	"	"		"	□	"	"	1900272	"	"	"	"	1927776
1112367	"	"		"	□	"	"	1928111	"	"	"	"	1947377
1112368	1911597	"		"	□	"	"	1900272	"	"	"	"	1931055
1112369	824735	"		"	1878405	"	"	"	"	"	"	"	1912622
1112370	1911597	"		"	"	"	"	"	"	"	"	"	1925094
1112371	"	"		"	"	"	"	"	"	"	"	"	1913720
1112372	824735	"		"	□	"	"	"	"	"	"	"	1919018
1112374	824987	1905590		"	□	"	"	1928111	"	"	"	"	1919783
1112378	824735	820445		"	1878405	"	"	"	"	"	"	"	1921275
1112382	"	"		"	"	"	"	"	"	"	"	"	"
1112385	"	"		"	□	"	"	"	"	"	"	"	1919018
1112386	"	"		"	□	"	"	1900272	"	"	"	"	"
1112387	"	"		"	1878405	"	"	"	"	"	"	"	1913720
1112388	1924248	1924245		1924371	†	a	a	1917254	1928111	"	"	"	1927932
1112389	"	"		"	†	a	a	"	"	"	"	"	"
1112390	"	"		"	†	a	a	"	"	"	"	"	"
1112391	"	"		"	†	a	a	"	"	"	"	"	"

*Contact Set No. 1855720.

 
†Serviced by G.M. Canada.

‡Use 1916805 Bushing (Inside) & 1914142 (Outside).

†Use 1924369 Bushing (Inside) & 1924370 Bushing (Outside).

aUse Contact Set No. 1924571.

Delco-Remy SERVICE PARTS CATALOG

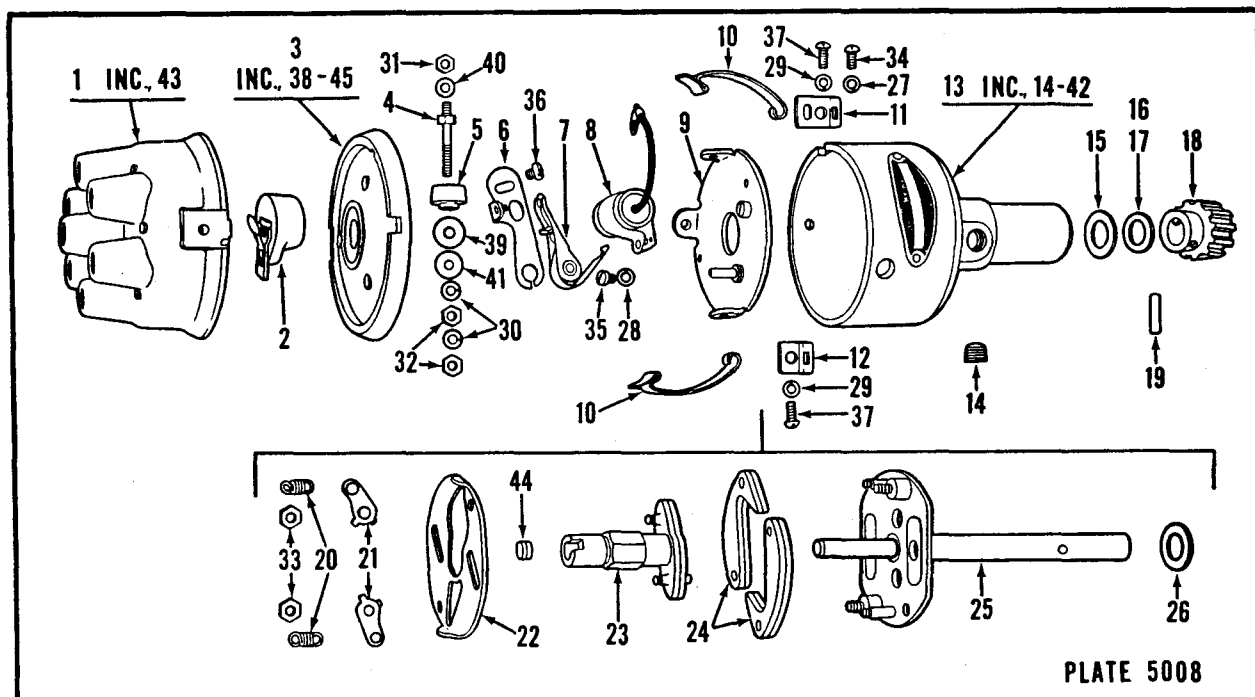

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar Coupling or Gear	Pin	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Washer — Space — under Weight Plate
	14	15	16	17	18	19	20	21	22	23	24	25	26
1112351	125947	1837617	1848595	1848596	1845656	1862218	1939381	1885558	1885557	1911497	1881371	1923083	811912
1112353					1865180	1857502	1882595	"	1862074	1882230	1879063	1881926	
1112354	125947	1837617	810074	1912129	1864165	1857492	1908587	"	1885557	1912025	1880902	1912023	811912
1112355	"	811912	"	"	1912218	815003	1913799	"	"	1912486	1882907	1912488	"
1112356	"				1865180	1857502	1883343	"	1858747	1881276	1881371	1912634	
1112357		811912	810074	1912129	1864165	1857492	1885339	"	1885557	1913719	"	1913718	811912
1112358					1865180	1857502	1912127	"	1862074	1914440	1879063	1914437	
1112359	125947	"	"	"	1864165	1857492	1913799	"	1885557	1915726	1882907	1915724	811912
1112360	"				1865180	1857502	1916230	"	1858747	1916167	"	1919021	
1112361	"	811912	810074	1912129	1855375	822273	1882995	"	1882781	1916674	"	1916672	811912
1112362					1865180	1857502	1882595	"	1862074	1882230	1879063	1881926	
1112363					"	"	1912127	"	"	1914440	"	1914437	
1112364					"	"	1903693	"	"	"	"	1881926	
1112365	125947	811912	810074	1912129	1902407	829421	1883874	"	1885557	1916823	1880902	1915759	811912
1112366	"	"	"	"	1917569	1857502	1913799	"	1858747	1917567	1882907	1917565	"
1112367	"	"	"	"	809673	829421	1884931	"	1885557	1917717	1880902	1915560	"
1112368	"	"	"	"	1912218	1862218	1913799	"	"	1918019	1882907	1918017	"
1112369	"				1921074	1857502	1916230	"	1858747	1916167	"	1919021	
1112370	"	811912	810074	1912129	1864165	1857492	1885339	"	1885557	1913719	1881371	1913718	811912
1112371	"	"	"	"	"	"	1913799	"	"	1915726	1882907	1915724	"
1112372	"				1865180	1857502	1906858	"	"	1919022	1880902	1919021	
1112374	"	811912	810074	1912129	1865687	1862218	1912766	"	"	1919787	1881371	1917311	811912
1112378	"	1837617	1848595	1848596	1845656	"	1911896	"	"	1911497	"	1923083	"
1112382	"				"	"	1939381	"	"	"	"	1923083	811912
1112385					1921074	1857502	1882595	"	1862074	1923201	1879063	1914437	
1112386	125947				"	"	1906858	"	1885557	1919022	1880902	1919021	
1112387	"	811912	810074	1912129	1864165	1857492	1903101	"	"	1913719	1881371	1913718	811912
1112388					1865180	1857502	1906766	"	"	1924240	1882907	1924238	
1112389					"	"	1922426	"	"	1924266	1881371	1924265	
1112390					1921074	"	1906766	"	"	1924240	1882907	1924618	
1112391					"	"	1886508	"	"	1924451	1881371	1924238	

*Cam 1917133 serviced by G.M. Canada.

+Coupling or Gear & Pin not furnished by Delco-Remy

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
27	Lock Washer—Breaker Plate Support Screw.....	453844	1112351-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-4-8; 82-5-6-7-8-9; 90-1
28	Lock Washer—Condenser Attaching Screw.....	453844	1112351-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-4-8; 82-5-6-7-8-9; 90-1
....	Lock Washer—Dial Plate Screw.....	9421423	1112366
29	Lock Washer—Distributor Cap Spring Support Screw....	453844	1112351-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-4-8; 82-5-6-7-8-9; 90-1
....	Lock Washer—Terminal Stud—Inside.....	453844	1112362-3-4-6-8; 72-4; 85-6-8-9; 90-1
30	Lock Washer—Terminal Stud—Outside.....	453844	1112351-3-4-5-6-7-8-9; 60-1-5-9; 70-1-8; 82-5-7
NUTS			
....	Nut—Dial Plate Screw.....	453848	1112366
31	Nut—Terminal Stud—Inside.....	1882248	1112353-8
31	Nut—Terminal Stud—Inside.....	817363	1112351-4-5-6-7-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-4-8; 82-5-6-7
32	Nut—Terminal Stud—Outside (Hex.).....	120622	1112351-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-4-8; 82-5-6-7-8-9; 90-1
32	Nut—Terminal Stud—Outside (Round).....	1924372	1112388-9; 90-1
33	Nut—Weight Hold Down.....	1923540	1112351-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-4-8; 82-5-6-7-8-9; 90-1
SCREWS			
34	Screw—Breaker Plate Support.....	453418	1112351-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-4-8; 82-5-6-7-8-9; 90-1
35	Screw—Condenser Attaching.....	453304	1112351-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-4-8; 82-5-6-7-8-9; 90-1
36	Screw—Contact Attaching.....	1914916	All
....	Screw—Dial Plate Attaching.....	120854	1112366
....	Screw—Distributor Cap Cover Attaching.....	455590	1112374
37	Screw—Distributor Cap Spring Support.....	453461	1112351-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-4-8; 82-5-6-7-8-9; 90-1
WASHERS			
....	Washer—Adaptor Retainer.....	1926782	1112366
....	Washer—Dial Plate Screw.....	1905125	1112366
39	Washer—Insulation—Terminal Stud—Outside.....	1882247	1112351-3-4-5-6-7-8-9; 60-1-5-9; 70-1-8; 82-7
40	Washer—Plain—Terminal Stud—Inside.....	810794	1112351-3-4-5-6-7-8-9; 60-1-5-9; 70-1-8; 82-7
41	Washer—Plain—Terminal Stud—Outside.....	815540	1112351-3-4-5-6-7-8-9; 60-1-5-9; 70-1-8; 82-7
MISCELLANEOUS			
....	Advance ARM.....	*1838617	1112366
42	BUSHING—Distributor Housing.....	1909003	1112351-4-5-6-7-8-9; 60-1-5-6-7-8-9; 70-1-2-4-8; 82-6-7
43	BUTTON—Carbon—In Cap.....	1938193	1112351-3-4-5-6-7-8-9; 60-1-2-3-4-5-6-7-8-9; 70-1-2-4-8; 82-5-6-7-8-9; 90-1
....	CLIP—Lock—Terminal Stud—Outside.....	1914144	1112362-3-4-6-7-8; 72-4; 85-6-8-9; 90-1
....	COVER—Cap.....	1871561	1112374
44	Felt WICK—In Cam.....	1963555	1112351-3-4-5-6-7; 62-4; 70-8; 82-7
44	Felt WICK—In Cam.....	819639	1112358-9; 60-1-3-5-6-7-8-9; 71-2-4; 85-6
....	GREASE CUP.....	1955293	1112353-8; 62-3-4; 85-8-9; 90-1
....	OILER.....	1922265	1112357; 70
....	Oil SEAL—In Housing.....	1885665	1112351; 78; 82
....	PLATE—Dial.....	815095	1112366
....	PLUG—In Grease Cup Hole.....	1869303	1112353-8; 62-3-4; 85-8-9; 90-1
....	SLEEVE—Housing Adaptor.....	1917568	1112366
....	SPRING—In Grease Cup Hole.....	1845715	1112353-8; 62-3-4; 85-8-9; 90-1

*For parts see Advance Arm—Group 1.