 


Revised to March 1, 1968

SERVICE PARTS CATALOG

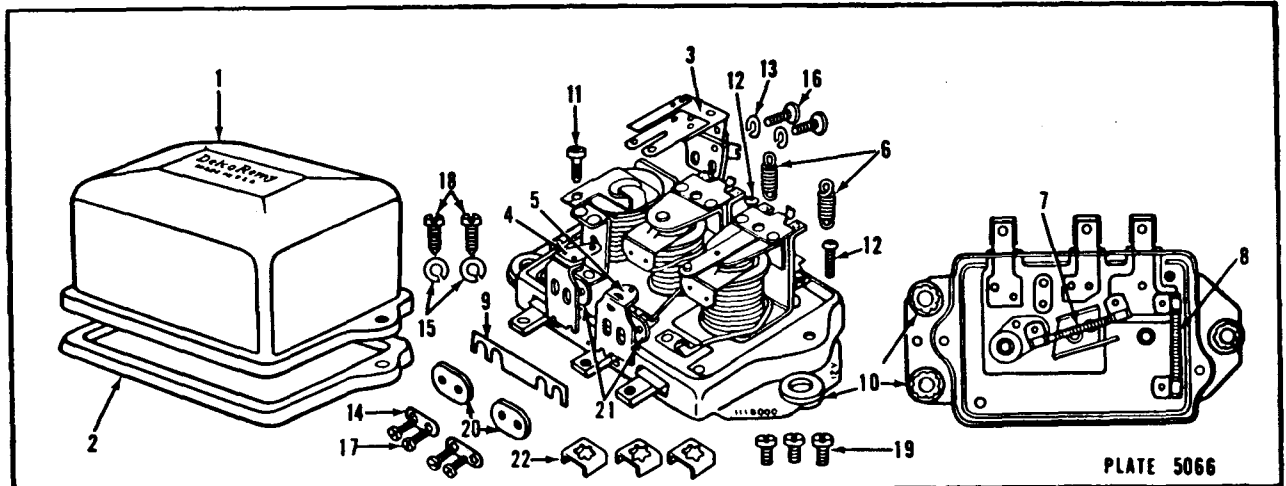

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cover	Gasket Cover	Arma- ture Relay	Contact Current Reg.	Contact Voltage Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw Adj.	Screw Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1118395		1878510	1943022	1878518	1878518	1912176	1885296	1910174	1878504	1879663	1912159	1944590
1118702		1909035	1878780			"	"	1910177		"	"	"
1118704		1878510	1915896	1878493	1878493	"	"	1910175	1878504	1879663	"	"
1118704-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118704-C		"	"	"	"	"	"	"	"	"	"	"
1118704-D		"	1939646	"	"	"	"	1957821	"	"	"	"
1118704-E		"	"	1949136	1949136	1912176	"	1957821	"	"	"	"
1118707		1878510	1915896	1878493	1878493	"	1885296	1910174	1878504	"	"	"
1118707-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118707-C		"	1939646	"	"	"	"	"	1878504	"	"	"
1118707-D-E		"	"	1949136	1949136	"	"	"	"	"	"	"
1118713		1878510	1943022	1878493	1878493	1912176	"	1885300	1878504	"	"	"
1118713-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118713-C		"	1908737	"	"	"	"	"	"	"	"	"
1118713-E		"	1943022	1949136	1949136	1912176	"	1956234	"	"	"	"
1118720		1878510	1915896	1878493	1878493	"	1912745	1912745	1878504	"	"	"
1118720-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118720-C		"	1939646	"	"	"	"	"	1878504	"	"	"
1118721		1878510	1915896	1878493	1878493	"	1885296	1910175	"	"	"	"
1118722		"	1943022	"	"	"	"	1912745	"	"	"	"
1118725		"	1915896	"	"	"	1912745	"	"	"	"	"
1118726		"	"	1878517	"	"	"	"	"	"	"	"
1118727		"	"	1878493	"	"	"	"	"	"	"	"
1118728		1909035	1878780	"	"	"	"	1910183	"	"	"	"
1118729		1878510	1915896	1878493	1878493	"	1912745	1912745	1878504	1879663	"	"
1118729-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118729-C		"	1939646	"	"	"	"	"	"	"	"	"
1118729-D-E		"	"	1949136	1949136	"	"	"	"	"	"	"
1118730		1878510	1915896	1878517	1878517	1912176	"	"	1878504	"	"	"
1118731		"	"	"	"	"	"	"	"	"	"	"
1118732		"	"	"	"	"	"	"	"	"	"	"
1118736		"	"	1878493	1878493	"	"	1910174	"	"	"	"
1118736-B		1931887	"	1878517	1933239	"	"	1910175	"	"	"	"
1118736-C		"	"	"	"	"	"	"	"	"	"	"
1118736-D		"	1939646	"	"	"	"	1956235	"	"	"	"

 
(Continued on Page 2)

†See footnote page 2.

△Current Regulator Spring is 1912176—Voltage Regulator Spring is 1923517.

○Current Regulator Spring is 1912176—Voltage Regulator Spring is 1949142.

△"D" & "E" Regulators have Post type Upper Contact & Support (not illustrated). One of Part No. shown services both Current & Voltage Upper Contacts.

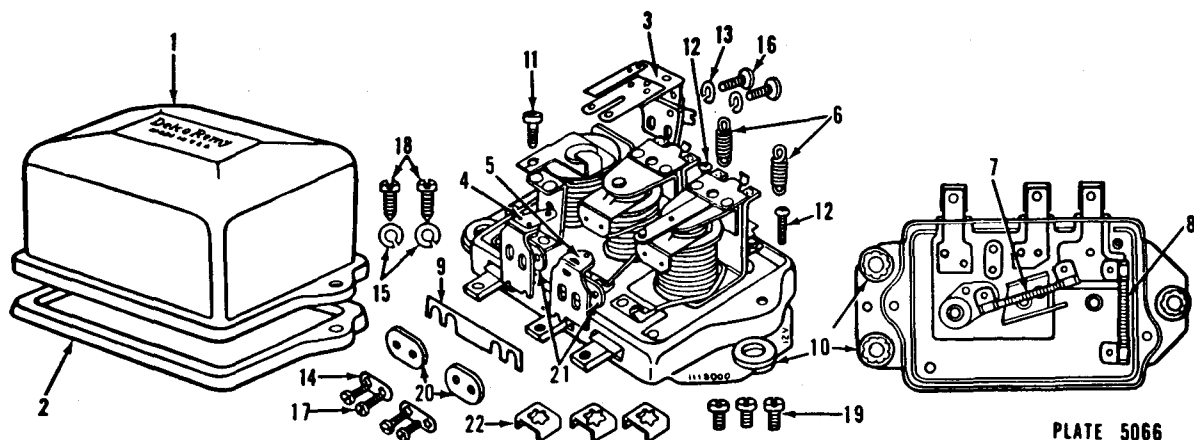

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cover	Gasket — Cover	Arma- ture — Relay	Contact — Current Reg.	Contact — Voltage Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw — Adj.	Screw — Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1118736-E		1931887	1915896	▲1949136	▲1949136	1912176		1956235		1879663	1912159	1944590
1118737		1878510	1912851	1911385	1911385	1912852	1910182	1910182	1878504	"	"	"
1118737-B		1931887	1915896	1878493	1933242	1912176	"	"	"	1933273	"	"
1118737-C		1931887	1915896	1878493	1933242	1912176	1910182	1910182	"	1933273	"	"
1118737-D		"	"	▲1948328	▲1948328	"	1910182	1956238	"	1932747	"	"
1118737-E		"	1939646	▲	▲	"	"	"	"	"	"	"
1118740		1878510	1943022	1878517	1878517	"	1910174	1885300	1878504	1879663	"	"
1118742		1878510	1923077	"	1878493	"	1885296	1885296	"	"	"	"
1118743		"	1915896	1878517	1878517	"	1912745	1912745	1878504	"	"	"
1118745		"	1943022	"	"	"	1910174	1910177	"	"	"	"
1118748		"	1923077	"	"	"	"	1885296	"	"	"	"
1118749		"	1915896	1878493	1878493	"	1910174	1910176	1878504	"	"	"
1118750		"	"	"	"	"	"	"	"	"	"	"
1118751		1909035	1878780	"	1878517	"	"	1910183	"	"	"	"
1118752		"	"	"	"	"	"	1910174	"	"	"	"
1118754		1878510	1915896	1878517	1878517	"	1910174	1910175	1878504	1879663	"	"
1118761		"	"	"	"	"	"	"	"	"	"	"
1118766		"	"	1878493	1878493	"	1885296	1885296	"	"	"	"
1118767		"	1943022	"	"	"	1910174	1910175	"	"	"	"
1118768		"	"	1878517	1878517	"	"	"	"	"	"	"
1118772		1909035	1878780	"	"	"	"	1910177	"	"	"	"
1118773		1878510	1923077	"	1878493	"	1910174	1910175	"	1879663	"	"
1118774		"	"	"	1878517	"	"	"	"	"	"	"
1118775		"	1943022	1878493	1878493	"	1885296	1910174	1878504	"	"	"
1118779		1953902	1878780	"	1878517	"	"	"	"	"	"	"
1118780		"	"	"	"	"	"	1910183	"	"	"	"

*If date code stamped on base is 8-K or above, use 1939646.

▲"D" & "E" Regulators have post type upper Contact & Support (not illustrated). One of Part No. shown services both Current & Voltage Upper Contacts.

†Where original units used 2 resistors in parallel, they may be serviced as follows:

Either 2 req'd of		or 1 req'd of	
Part No.	Ohms	Part No.	Ohms
1910182	500	1956238	250
1885300	80	1956234	40
1910175	100	1956235	50
1910174	65	1956233	33


MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
13	Lock Washer—Armature Screw—Relay.....	1914816	All
14	Lock Washer—Contact Attaching Screw.....	1878505	All
15	Lock Washer—Cover Screw.....	1938522	("B" & "C" Type) 1118704-7-13; 20-9; 36
15	Lock Washer—Cover Screw.....	1938523	("B" & "C" Type) 1118737
—	Lock Washer—Ground Screw.....	453844	1118729; 37; 45 ("D" & "E" Type)
—	Lock Washer—Shock Mounting Bracket Screw.....	9421423	1118745; 61
NUTS			
—	Nut—Shock Mounting Bracket Screw.....	124818	1118745; 61
SCREWS			
16	Screw (& Lock Washer)—Armature Attach.—Relay.....	1924764	All
17	Screw—Contact Attaching.....	1878516	All
18	Screw—Cover.....	1878499	1118395; 704-7-13; 20-1-2-5-6-7-9; 30-1-2-6-7; 40-2-3-5-8-9; 50-4; 61-6-7-8; 73-4-5
18	Screw—Cover.....	1927982	1118779; 80
18	Screw—Cover.....	1943386	("B," "C," "D" & "E" Type) All; 1118704; 37; 737-C
—	Screw—Ground.....	453418	("D" & "E" Type) 1118737; 42-5-8; 67-8; 73-4
—	Screw—Ground.....	274577	1118729
—	Screw—Shock Mounting Bracket Attaching.....	273485	1118745; 61
19	Screw—Terminal.....	1914800	("D" & "E" Type) 1118395; 704-7; 13; 20-1-2-5-6-7-9; 30-1-2-6-7; 40-2-3-5-8-9; 50-4; 61-6-7-8; 73-4-5
19	Screw—Terminal.....	453418	1118702; 28; 51-2; 72-9; 80
WASHERS			
20	Washer—Insul. (w/Bushings) Contact Attaching Screw.....	1922599	All
21	Washer—Insul.—Contact Attaching Screw.....	1878507	All
—	Washer—Insul.—Cover Screw.....	1865616	1118395; 704-7; 13; 20-1-2-5-7-9; 30-1-2-6; 40
—	Washer—Insul.—Cover Screw.....	1922996	1118742-3-5-8-9; 50-4; 61-6-7-8; 73-4-5
—	Washer—Insul.—Cover Screw.....	1935031	1118779; 80
—	Washer—Plain—Cover Screw.....	813731	1118726
—	Washer—Plain—Cover Screw.....	815540	1118737
—	Washer—Space—Shock Mounting Bracket Screw.....	1915340	1118745
MISCELLANEOUS			
—	BUSHING—Insul. Contact Attaching Screw.....	1878506	All
—	CLAMP—Ground Screw.....	1855978	1118729; 42-8; 67-8; 73-4
22	CLAMP—Terminal.....	1878503	("E" Type) 1118395; 704-7; 13; 20-1-2-5-6-7-9; 30-1-2-6-7; 40-2-3-5-8-9; 50-4; 61-6-7-8; 73-4-5
22	CLAMP—Terminal.....	1868137	1118702; 28; 51-2; 72-9; 80
22	CLAMP—Terminal.....	1914801	1118737 "D" & "E" Type)
—	GASKET—Cover Screw.....	1910297	1118726; 36
—	LEAD—Ground.....	1885467	1118728
—	LEAD—Ground.....	1911033	1118761
—	PACKAGE—Shock Mounting.....	1910966	1118745; 61
—	PACKAGE—Shock Mounting.....	1913063	1118702; 51-2
—	PACKAGE—Shock Mounting.....	1913064	1118728

RESISTOR CHART

Part No.	Value in ohms	Part No.	Value in ohms
1885296	30	1910177	150
1885297	15	1910179	300
1885300	80	1910182	500
1910173	40	1910183	20
1910174	65	1912745	45
1910175	100		

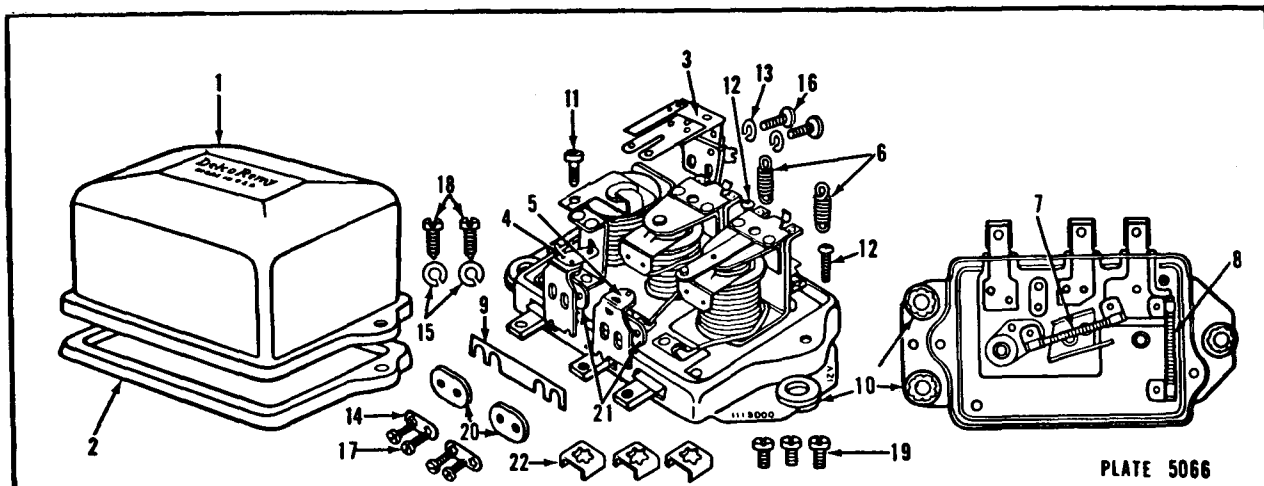 

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cover	Gasket Cover	Arma- ture Relay	Contact Current Reg.	Contact Voltage Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw Adj.	Screw Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1118781		1878510	1915896	1878517	1878517	1912176	1910174	1910177	1878504	1879663	1912159	1944590
1118783		1909035	1878780		"	"		1910174			"	"
1118786		1953902*	"		"	"		1910183			"	"
1118787		1878510	1912851	1878493	1878493	"	1910182	1910182	1878504	1879663	"	"
1118787-B		1931887	1915896	1878517	1933239	"	"	†		1933273	"	"
1118787-C		"	"	"	"	Δ	"	†		"	"	"
1118788		1953902*	1878780		1878517	"		1910176			"	"
1118790		"	x	"	"	"		1910183			"	"
1118791		"	x	"	"	"		1910174			"	"
1118792		"	x	"	"	"		"			"	"
1118793		1878510	1915896	1878517	1878517	"	1910182	1910182	1878504	1879663	"	"
1118793-B		1931887	"	1878493	1933242	Δ	"	†		1914766	"	"
1118793-C		"	"	"	"	○	"	†		"	"	"
1118793-D		"	"	*1948328	*1948328	○	"	1956238		"	"	"
1118793-E		"	1939646*	"	"	○	"	1956238		1932747	"	"
1118794		1953902*	1878780		1878493	"		1910183			"	"
1118795		"	x	"	1878517	"		1910177			"	"
1118796		1878510	1915896	1878517	"	"	1910182	1910182	1878504	1879663	"	"
1118796-B		1931887	"	1878493	1933242	Δ	"	†		1933273	"	"
1118796-C		"	"	"	"	Δ	"	†		"	"	"
1118797		1953902*	1878780		1878517	"		1910177			"	"
1118799		1878510	1915896	1878493	1878493	"		1910182	1878504	1879663	"	"
1118799-B		1931887	"	1878517	1933239	"	1910180	1910179		"	"	"
1118799-C		"	"	"	"	Δ	†	†		"	"	"
1118799-D		"	1939646	"	"	Δ	†1956237	†1956236		"	"	"
1118799-E		"	"	*1949136	*1949136	○	†	†		"	"	"

ΔCurrent Regulator Spring is 1912176—Voltage Regulator Spring is 1923517.

*If date code stamped on base is 8-K or above use 1939646.

* "D" & "E" Regulators have post type upper Contact & Support (Not illustrated). One of Part No. shown serves both Current & Voltage Upper Contacts.

○Current Regulator Spring is 1912176 — Voltage Regulator Spring is 1949142.

†Where two resistors in parallel were used in original unit, they may be serviced as follows:

Either 2 req'd of		or 1 req'd of	
Part No.	Ohms	Part No.	Ohms
1910182	500	1956238	250
1910179	300	1956236	150
1910180	375	1956237	200


MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
13	Lock Washer—Armature Screw—Relay.....	1914816	All
14	Lock Washer—Contact Attaching Screw.....	1878505	All
15	Lock Washer—Cover Screw.....	1938523	("B" & "C" Type) 1118787; 93-6
15	Lock Washer—Cover Screw.....	1938522	("B" & "C" Type) 1118799
—	Lock Washer—Ground Screw.....	453844	1118787; 96
—	Lock Washer—Shock Mounting Bracket Screw.....	9421423	("D" & "E" Type) 1118787; 93-6
NUTS			
—	Nut—Shock Mounting Bracket Screw.....	124818	("D" & "E" Type) 1118787; 93-6
SCREWS			
16	Screw (& Lock Washer)—Armature Attach.—Relay.....	1924764	All
17	Screw—Contact Attaching.....	1878516	All
18	Screw—Cover.....	1943386	("B, "C", "D" & "E" Type) 1118793-9
18	Screw—Cover.....	1878499	1118781; 99
18	Screw—Cover.....	1927982	1118786-8; 90-1-2-4-5-7
18	Screw—Cover.....	1914799	1118787; 93-6
18	Screw—Cover.....	1943386	("B" & "C" Type) 1118787; 93-6
—	Screw—Ground.....	453418	1118787; 96
—	Screw—Shock Mounting Bracket Attaching.....	273485	("D" & "E" Type) 1118781; 93-9
19	Screw—Terminal.....	1914800	("D" & "E" Type) 1118781; 7; 93-9
19	Screw—Terminal.....	453418	1118783-6-8; 90-1-2-4-7
WASHERS			
20	Washer—Insul. (w/Bushings) Contact Attaching Screw.....	1922599	All
21	Washer—Insul.—Contact Attaching Screw.....	1878507	All
—	Washer—Insul.—Cover Screw.....	1922996	1118781-7; 93-6
—	Washer—Insul.—Cover Screw.....	1935031	1118786-8; 90-1-2-4-5-7-9
—	Washer—Space—Shock Mounting Bracket Screw.....	1915340	1118787; 93-6
MISCELLANEOUS			
—	BUSHING—Insul. Contact Attaching Screw.....	1878506	All
22	CLAMP—Terminal.....	1878503	("E" Type) 1118781; 99
22	CLAMP—Terminal.....	1868137	1118783-6-8; 90-1-2-4-7
22	CLAMP—Terminal.....	1914801	("D" & "E" Type) 1118787; 93-6
—	LEAD—Ground.....	1927975	1118783
—	LEAD—Ground.....	1933941	("D" & "E" Type) 1118793
—	PACKAGE—Shock Mounting.....	1910966	("D" & "E" Type) 1118787; 93-6
—	PACKAGE—Shock Mounting.....	1913063	1118783
—	PACKAGE—Shock Mounting.....	1913064	1118788

RESISTOR CHART

Part No.	Value in ohms	Part No.	Value in ohms
1910174	65	1910182	500
1910176	130	1910183	20
1910177	150		

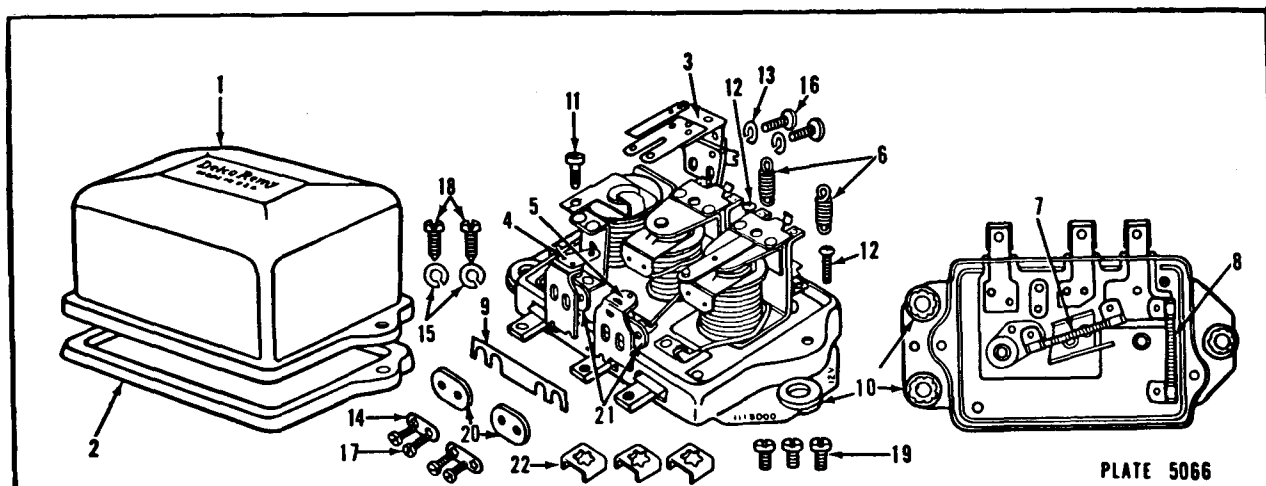 

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cover	Gasket Cover	Arma- ture Relay	Contact — Current Reg.	Contact — Voltage Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw — Adj.	Screw — Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1118781.....		1878510	1915896	1878517	1878517	1912176	1910174	1910177	1878504	1879663	1912159	1944590
1118783.....		1909035	1878780		"	"		1910174			"	"
1118786.....		1953902	"		"	"		1910183			"	"
1118787.....		1878510	1912851	1878493	1878493	"	1910182	1910182	1878504	1879663	"	"
1118787-B.....		1931887	1915896	1878517	1933239	"	"	†		1933273	"	"
1118787-C.....		"	"	"	"	Δ	"	†		"	"	"
1118788.....		1953902	*1878780		1878517	"		1910176			"	"
1118790.....		"	x	"	"	"		1910183			"	"
1118791.....		"	x	"	"	"		1910174			"	"
1118792.....		"	x	"	"	"		"			"	"
1118793.....		1878510	1915896	1878517	1878517	"	1910182	†1910182	1878504	1879663	"	"
1118793-B.....		1931887	"	1878493	1933242	Δ	"	†		1914766	"	"
1118793-C.....		"	"	"	"	○	"	†		"	"	"
1118793-D.....		"	"	*1948328	*1948328	○	"	1956238		"	"	"
1118793-E.....		"	1939646	"	"	○	"	1956238		1932747	"	"
1118794.....		1953902	*1878780		1878493	"		1910183			"	"
1118795.....		"	x	"	1878517	"		1910177			"	"
1118796.....		1878510	1915896	1878517	"	"		1910182	1878504	1879663	"	"
1118796-B.....		1931887	"	1878493	1933242	Δ	"	†		1933273	"	"
1118796-C.....		"	"	"	"	"		†		"	"	"
1118797.....		1953902	*1878780		1878517	"		1910177			"	"
1118799.....		1878510	1915896	1878493	1878493	"		†1910182	1878504	1879663	"	"
1118799-B.....		1931887	"	1878517	1933239	Δ	"	†1910180	†1910179	"	"	"
1118799-C.....		"	"	"	"	Δ	"	†		"	"	"
1118799-D.....		"	1939646	"	"	Δ	"	†1956237	†1956236	"	"	"
1118799-E.....		"	"	*1949136	*1949136	○	"	†		"	"	"

Δ Current Regulator Spring is 1912176—Voltage Regulator Spring is 1923517.

*If date code stamped on base is 8-K or above use 1939646.

* "D" & "E" Regulators have post type upper Contact & Support (Not illustrated). One of Part No. shown serves both Current & Voltage Upper Contacts.

○ Current Regulator Spring is 1912176 — Voltage Regulator Spring is 1949142.

† Where two resistors in parallel were used in original unit, they may be serviced as follows:

Either 2 req'd of		or 1 req'd of	
Part No.	Ohms	Part No.	Ohms
1910182	500	1956238	250
1910179	300	1956236	150
1910180	375	1956237	200


MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
13	Lock Washer—Armature Screw—Relay.....	1914816	All
14	Lock Washer—Contact Attaching Screw.....	1878505	All
15	Lock Washer—Cover Screw.....	1938523	("B" & "C" Type) 1118787; 93-6
15	Lock Washer—Cover Screw.....	1938522	("B" & "C" Type) 1118799
—	Lock Washer—Ground Screw.....	453844	1118787; 96
—	Lock Washer—Shock Mounting Bracket Screw.....	9421423	("D" & "E" Type) 1118787; 93-6
NUTS			
—	Nut—Shock Mounting Bracket Screw.....	124818	("D" & "E" Type) 1118787; 93-6
SCREWS			
16	Screw (& Lock Washer)—Armature Attach.—Relay.....	1924764	All
17	Screw—Contact Attaching.....	1878516	All
18	Screw—Cover.....	1943386	("B", "C", "D" & "E" Type) 1118793-9
18	Screw—Cover.....	1878499	1118781; 99
18	Screw—Cover.....	1927982	1118786-8; 90-1-2-4-5-7
18	Screw—Cover.....	1914799	1118787; 93-6
18	Screw—Cover.....	1943386	("B" & "C" Type) 1118787; 93-6
—	Screw—Ground.....	453418	1118787; 96
—	Screw—Shock Mounting Bracket Attaching.....	273485	("D" & "E" Type) 1118781; 93-9
19	Screw—Terminal.....	1914800	("D" & "E" Type) 1118781; 7; 93-9
19	Screw—Terminal.....	453418	1118783-6-8; 90-1-2-4-7
WASHERS			
20	Washer—Insul. (w/Bushings) Contact Attaching Screw.....	1922599	All
21	Washer—Insul.—Contact Attaching Screw.....	1878507	All
—	Washer—Insul.—Cover Screw.....	1922996	1118781-7; 93-6
—	Washer—Insul.—Cover Screw.....	1935031	1118786-8; 90-1-2-4-5-7-9
—	Washer—Space—Shock Mounting Bracket Screw.....	1915340	1118787; 93-6
MISCELLANEOUS			
—	BUSHING—Insul. Contact Attaching Screw.....	1878506	All
22	CLAMP—Terminal.....	1878503	("E" Type) 1118781; 99
22	CLAMP—Terminal.....	1868137	1118783-6-8; 90-1-2-4-7
22	CLAMP—Terminal.....	1914801	("D" & "E" Type) 1118787; 93-6
—	LEAD—Ground.....	1927975	1118783
—	LEAD—Ground.....	1933941	("D" & "E" Type) 1118793
—	PACKAGE—Shock Mounting.....	1910966	("D" & "E" Type) 1118787; 93-6
—	PACKAGE—Shock Mounting.....	1913063	1118783
—	PACKAGE—Shock Mounting.....	1913064	1118788

RESISTOR CHART

Part No.	Value in ohms	Part No.	Value in ohms
1910174	65	1910182	500
1910176	130	1910183	20
1910177	150		

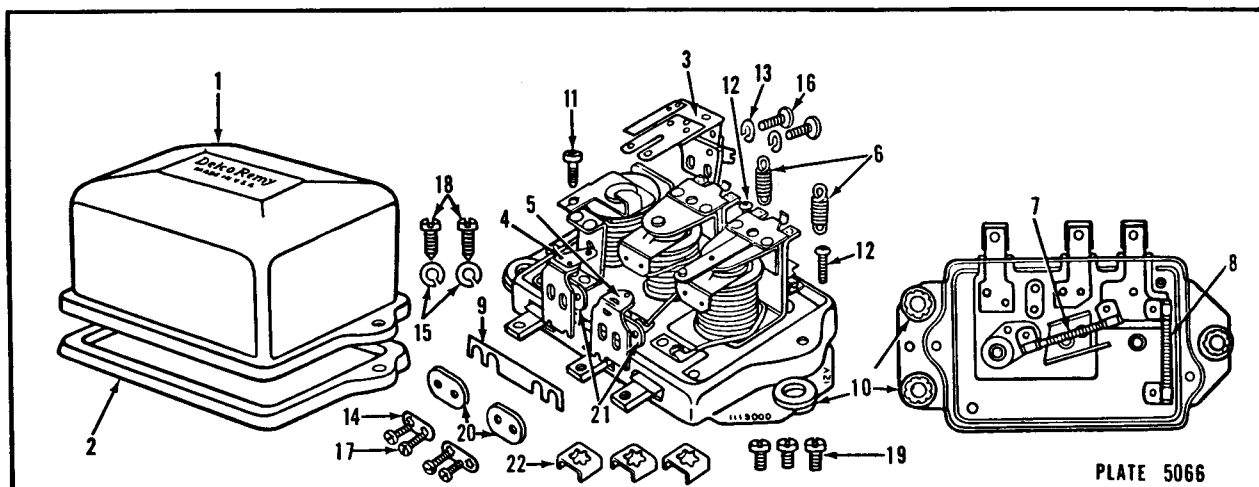 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cover	Gasket Cover	Arma- ture Relay	Contact — Current Reg.	Contact — Voltage Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw — Adj.	Screw — Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1118825.....		1878510	1915896	1878493	1878493	1912176	1910174	1910176	1878504	1879663	1912159	1944590
1118826.....		"	"	"	"	"	"	"	"	"	"	"
1118827.....		"	"	"	"	"	1912745	1912745	"	"	"	"
1118827-B.....		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118827-C.....		"	1939646	"	"	Δ	"	"	"	"	"	"
1118827-D-E.....		"	"	*1949136	*1949136	○	"	"	"	"	"	"
1118828.....		1878510	1915896	1878517	1878517	1912176	"	"	1878504	"	"	"
1118828-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118828-C.....		"	1939646	"	"	Δ	"	"	"	"	"	"
1118828-D-E.....		"	"	*1948328	*1948328	○	"	"	"	"	"	"
1118829.....		1878510	1915896	1878517	1878517	1912176	"	"	1878504	"	"	"
1118829-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118830.....		1878510	"	1878517	1878517	"	1885296	1910175	"	"	"	"
1118830-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118830-C.....		"	1939646	"	"	Δ	"	"	"	"	"	"
1118830-D-E.....		"	"	*1949328	*1948328	○	"	"	"	"	"	"
1118831.....		1878510	1915896	1878493	1878493	1912176	"	"	1878504	"	"	"
1118831-B.....		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118831-C.....		"	1939646	"	"	Δ	"	"	"	"	"	"
1118831-D-E.....		"	"	*1949136	*1949136	○	"	"	"	"	"	"
1118832.....		1878510	1943022	1878517	1878517	1912176	"	1910174	1878504	"	"	"
1118832-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118832-C.....		"	"	"	"	Δ	"	"	"	"	"	"
1118832-D-E.....		"	"	*1948328	*1948328	○	"	"	"	"	"	"
1118833.....		1878510	"	1878493	1878498	1912176	"	"	1878504	"	"	"
1118833-B.....		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118833-C.....		"	"	"	"	Δ	"	"	"	"	"	"
1118833-D-E.....		"	"	*1949136	*1949136	○	"	"	"	"	"	"
1118834.....		1878510	"	1878517	1878517	1912176	"	"	1878504	"	"	"
1118834-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118834-C.....		"	"	"	"	Δ	"	"	"	"	"	"
1118834-D-E.....		"	"	*1948328	*1948328	○	"	"	"	"	"	"
1118835.....		1878510	"	1878493	1878493	1912176	"	1910175	1878504	"	"	"
1118835-B.....		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118835-C.....		"	"	"	"	Δ	"	"	"	"	"	"
1118835-D-E.....		"	"	*1949136	*1949136	○	"	"	"	"	"	"

 
(Continued on Page 2)

Δ Current Regulator Spring is 1912176—Voltage Regulator Spring is 1923517.

○ Current Regulator Spring is 1912176—Voltage Regulator Spring is 1949142.

*"D" Regulators have Post type Upper Contact & Support (not illustrated.) One of Part No. shown services both Current & Voltage Upper Contacts.

Delco-Remy
SERVICE PARTS CATALOG

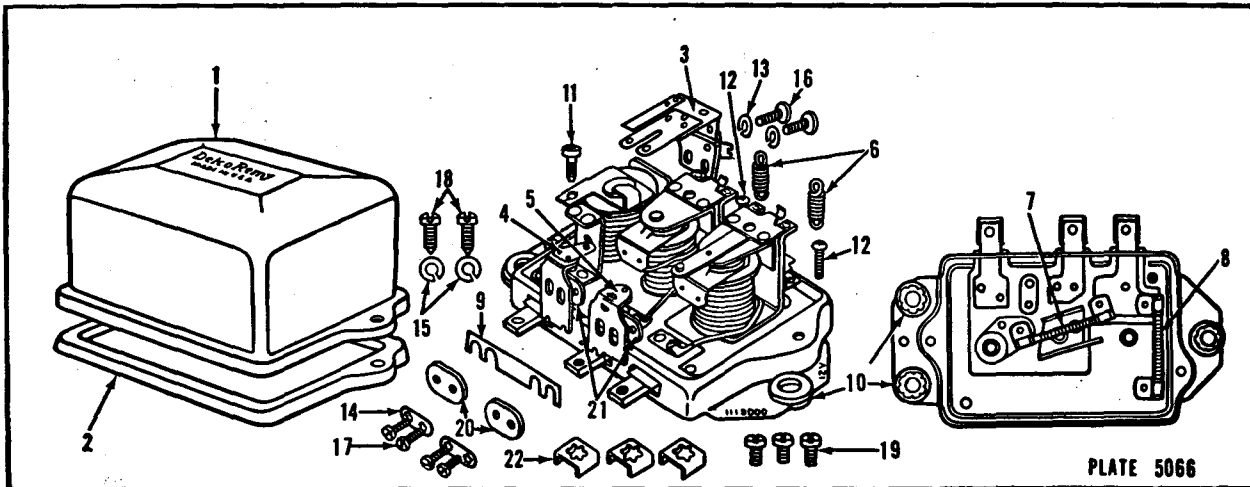

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cover	Gasket Cover	Arma- ture Relay	Contact Current Reg.	Contact Voltage Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw Adj.	Screw Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1118837.....		1878510	1923077		1878493	1912176	1885296	1885296		1879663	1912159	1944590
1118837-B.....		1931887			1933239	"	"	"		"	"	"
1118838.....		1878510	1943022	1878517	1878517	"	1910174	1910177	1878504	"	"	"
1118838-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118838-C.....		"	"	"	"	"	"	"	"	"	"	"
1118838-D-E.....		"	"	*1948328	*1948328	○	†	1910174		"	"	"
1118839.....		1878510	1915896	1878517	1878517	1912176	"	1910176	1878504	"	"	"
1118839-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118839-C.....		"	1939646	"	"	△	"	"	"	"	"	"
1118839-D-E.....		"	"	*1948328	*1948328	○	†	*1885300		"	"	"
1118840.....		1878510	1915896	1878493	1878493	1912176		†1910175	1878504	"	"	"
1118841.....		"	"	1878517	1878517	"	1912745	1912745	"	"	"	"
1118841-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118841-C.....		"	1939646	"	"	△	"	"	1878504	"	"	"
1118842.....		1878510	1915896	1878517	1878517	"	"	"	"	"	"	"
1118842-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118842-C.....		"	1939646	"	"	△	"	"	"	"	"	"
1118842-D-E.....		"	"	*1948328	*1948328	○	"	"	"	"	"	"
1118843.....		1878510	1915896	1878493	1878493	1912176	"	"	1878504	"	"	"
1118845.....		"	"	"	"	"	"	"	"	"	"	"
1118845-B.....		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118845-C.....		"	1939646	"	"	△	"	"	"	"	"	"
1118845-D-E.....		"	"	*1949136	*1949136	○	"	"	"	"	"	"
1118846.....		1878510	1915896	1878517	1878517	1912176	"	"	1878504	"	"	"
1118846-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118847.....		1878510	"	"	1878493	"	"	1910174	"	"	"	"
1118847-B.....		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118847-C.....		"	1939646	"	"	△	"	"	"	"	"	"
1118847-D-E.....		"	"	*1949136	*1949136	○	"	"	"	"	"	"
1118849.....		1878510	1912795	1878493	1878493	1912176	1885296	"	1878504	"	"	"
1118849-B.....		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118849-C.....		"	1943022	"	"	△	"	"	"	"	"	"
1118849-D-E.....		"	"	*1949136	*1949136	○	"	"	"	"	"	"
1118850.....		1878510	"	1878517	1878517	1912176	"	"	1878504	"	"	"
1118850-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"

(Continued on Page 3)

†Two required.

△Current Regulator Spring is 1912176—Voltage Regulator Spring is 1923517.

○Current Regulator Spring is 1912176—Voltage Regulator Spring is 1949142.

*"D" Regulators have Post type Upper Contact & Support (not illustrated.) One of Part No. shown services both Current & Voltage Upper Contacts.

†If Regulator is stamped "E" use 1910173 Resistor.

△If Regulator is stamped "E" use 1910174 Resistor.

Parts not listed in this Catalog will not be sold separately.

Delco-Remy

REGULATOR—Group 6-G
Models 1118825 to 70
Page 3

Revised to April 1, 1968

SERVICE PARTS CATALOG

Model	Cover	Gasket Cover	Arma- ture Relay	Contact — Current Reg.	Contact — Voltage Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw — Adj.	Screw — Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1118850-C		1931887	1943022	1878493	1933242	△1912176	1885296	1910174	1878504	1879663	1912159	1944590
1118850-D-E		"	"	*1948328	*1948328	○	"	"	"	"	"	"
1118852		1878510	1915896	1878493	1878493	1912176	1912745	1912745	1878504	"	"	"
1118854		"	1912795	1878517	1878517	"	1885296	1910174	"	"	"	"
1118854-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118854-C		"	1943022	"	"	△	"	"	"	"	"	"
1118854-D-E		"	"	*1948328	*1948328	○	"	"	"	"	"	"
1118855		1878510	"	1878493	1878493	1912176	"	"	1878504	"	"	"
1118855-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118855-C		"	"	"	"	△	"	"	"	"	"	"
1118855-D-E		"	"	*1949136	*1949136	○	"	"	"	"	"	"
1118856		1878510	"	1878517	1878517	1912176	"	"	1878504	"	"	"
1118857		"	"	1878493	1878493	"	"	"	"	"	"	"
1118857-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118857-C		"	"	"	"	△	"	"	"	"	"	"
1118857-D-E		"	"	*1949136	*1949136	○	"	"	"	"	"	"
1118858		1878510	"	1878517	1878517	1912176	"	1910175	1878504	"	"	"
1118858-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118858-C		"	"	"	"	△	"	"	"	"	"	"
1118858-D-E		"	"	*1948328	*1948328	○	"	"	"	"	"	"
1118860		1878510	1923077	"	1878517	1912176	"	1885296	"	"	"	"
1118860-B		1931887	"	"	1933242	"	"	"	"	"	"	"
1118864		1878510	1915896	1878517	1878517	"	1912745	1912745	1878504	"	"	"
1118864-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118865		1878510	"	1878517	1878517	"	1885296	1910174	"	"	"	"
1118865-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118865-C		"	1939646	"	"	△	"	"	"	"	"	"
1118865-D-E		"	"	*1948328	*1948328	○	"	"	"	"	"	"
1118866		1878510	1915896	1878493	1878493	1912176	"	"	1878504	"	"	"
1118866-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118866-C		"	1939646	"	"	△	"	"	"	"	"	"
1118866-D-E		"	"	*1949136	*1949136	○	"	"	"	"	"	"
1118867		1878510	1915896	1878517	1878517	1912176	1912745	1912745	1878504	"	"	"
1118867-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118867-C		"	1939646	"	"	△	"	"	"	"	"	"
1118867-D-E		"	"	*1948328	*1948328	○	"	"	"	"	"	"
1118869		1878510	1915896	1878493	1878493	1912176	"	"	1878504	"	"	"
1118869-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118869-C		"	1939646	"	"	△	"	"	"	"	"	"
1118869-D-E		"	"	*1949136	*1949136	○	"	"	"	"	"	"
1118870		1878510	1915896	1878517	1878517	1912176	1885296	1885296	1878504	"	"	"
1118870-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118870-C		"	1939646	"	"	△	"	"	"	1933273	"	"
1118870-D-E		"	"	*1948328	*1948328	○	"	"	"	"	"	"

△Current Regulator Spring is 1912176—Voltage Regulator Spring is 1923517.

○Current Regulator Spring is 1912176—Voltage Regulator Spring is 1949142.

**"D" Regulators have Post type Upper Contact & Support (not illustrated.) One of Part No. shown services both Current & Voltage Upper Contacts.

Parts not listed in this Catalog will not be sold separately.


MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
13	Lock Washer—Armature Screw—Relay.....	1914816	1118830-1-2-3-4-5-7-8; 40-7-9; 50-4-5-6-7-8; 60-4-5-6-7-9; 70
14	Lock Washer—Contact Attaching Screw.....	1878505	All
15	Lock Washer—Cover Screw.....	1938522	("B" & "C" Type) All
—	Lock Washer—Ground Screw.....	453844	1118870
—	Lock Washer—Shock Mounting Bracket Screw.....	9421423	1118850-6-7
NUTS			
—	Nut—Shock Mounting Bracket Screw.....	124818	1118850-6-7
SCREWS			
16	Screw (& Lock Washer)—Armature Attach.—Relay.....	1924764	All
17	Screw—Contact Attaching.....	1878516	All
18	Screw—Cover.....	1878499	All
18	Screw—Cover.....	1943386	("B," "C" & "D" Type) All
—	Screw—Ground.....	453418	1118836; 59; 70
—	Screw—Ground.....	1943386	1118835-7; 45; 60
—	Screw—Shock Mounting Bracket Attaching.....	273485	1118850-6-7
19	Screw—Terminal.....	1914800	1118825-6-7-8-9; 30-1-2-3-4-5-7-8-9; 40-1-2-3-5-6-7-9; 50-2-4-5-6-7-8; 60-4-5-6-7-9; 70
WASHERS			
20	Washer—Insul.(w/Bushings) Contact Attaching Screw.....	1922599	All
21	Washer—Insul.—Contact Attaching Screw.....	1878507	All
—	Washer—Insul.—Cover Screw.....	1922996	1118825-6-7-8; 30-1-2-3-4-5-7-8-9; 40-1-2-3-5-7-9; 50-2-4-5-6-7-8; 60-5-6-7-9; 70
—	Washer—Plain—Cover Screw.....	813731	1118829; 46; 64
MISCELLANEOUS			
—	CLAMP—Ground Screw.....	1855978	1118837; 45; 60; 70
22	CLAMP—Terminal.....	1878503	1118825-6-7-8-9; 30-1-2-3-4-5-7-8-9; 40-1-2-3-5-6-7-9; 50-2-4-5-6-7-8; 60-4-5-6-7-9; 70
—	GASKET—Cover Screw.....	1910297	1118829; 46; 64
—	LEAD—Ground.....	1911033	1118850-6-7
—	LEAD—Ground.....	1933941	1118850-D; 857-D
—	PACKAGE—Shock Mounting.....	1910966	1118850-6-7

RESISTOR CHART

Part No.	Value in ohms	Part No.	Value in ohms
1885296	30	1910175	100
1912745	45	1910176	130
1910174	65	1910177	150

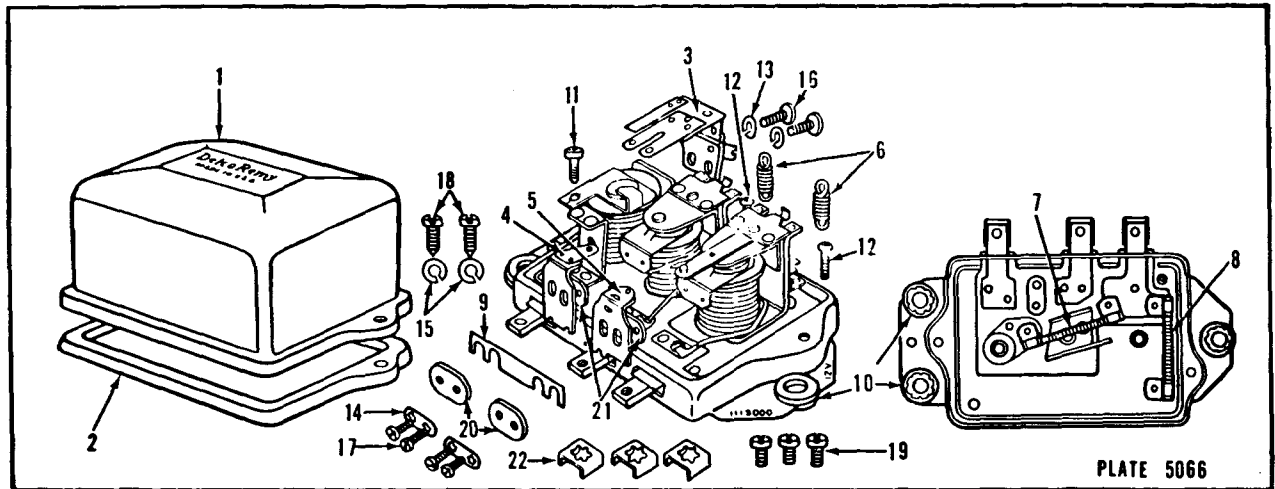 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cover	Gasket Cover	Arma- ture Relay	Current Contact — Reg.	Voltage Contact — Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw — Adj.	Screw — Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1118871		1878510	1915896	1878517	1878517	1912176	1885296	1885296	1878504	1879663	1912159	1944590
1118871-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118871-C		"	1939646	"	"	"	"	"	"	"	"	"
1118871-D-E		"	"	*1948328	*1948328	"	"	"	"	"	"	"
1118872		1878510	1915896	1878493	1878493	1912176	1910183	1910175	1878504	"	"	"
1118872-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118872-C		"	1939646	"	"	"	"	"	"	"	"	"
1118872-D-E		"	"	*1949136	*1949136	"	"	"	"	"	"	"
1118873		1878510	1915896	1878493	1878493	1912176	1912745	1912745	1878504	"	"	"
1118873-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118873-C		"	1939646	"	"	"	"	"	"	"	"	"
1118873-D-E		"	"	*1949136	*1949136	"	"	"	"	"	"	"
1118874		1878510	1915896	1878493	1878493	1912176	1885296	1885296	1878504	"	"	"
1118874-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118874-C		"	1939646	"	"	"	"	"	"	"	"	"
1118874-D-E		"	"	*1949136	*1949136	"	"	"	"	"	"	"
1118875		1878510	1915896	1878517	1878517	1912176	"	1910174	1878504	"	"	"
1118875-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118875-C		"	1939646	"	"	"	"	"	"	"	"	"
1118875-D-E		"	"	*1948328	*1948328	"	"	"	"	"	"	"
1118878		1878510	1923077	"	1878493	1912176	1910174	1910175	"	"	"	"
1118878-B		1931887	"	"	1933239	"	"	"	"	"	"	"
1118879		1878510	"	"	1878517	"	"	"	"	"	"	"
1118879-B		1931887	"	"	1933242	"	"	"	"	"	"	"
1118880		1878510	1943022	1878517	1878517	"	"	1910177	1878504	"	"	"
1118880-B		1931887	"	1878493	1932242	"	"	"	"	"	"	"
1118880-C		"	"	"	"	"	"	"	"	"	"	"
1118880-D-E		"	"	*1948328	*1948328	"	"	"	"	"	"	"
1118881		1878510	"	1878493	1878493	1912176	"	"	1878504	"	"	"
1118881-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118881-C		"	1908437	"	"	"	"	"	"	"	"	"
1118881-D-E		"	"	*1949136	*1949136	"	"	"	"	"	"	"
1118882		1878510	1915896	1878493	1878493	1912176	"	*1910174	1878504	"	"	"
1118883		"	1943022	1915038	1915038	"	1910174	1910177	1878504	"	"	"
1118883-B		1931887	"	1878493	1933242	"	"	"	"	1933273	"	"

(Continued on Page 2)

 
†Two required.

Δ Current Regulator Spring is 1912176—Voltage Regulator Spring is 1923517.

○ Current Regulator Spring is 1912176—Voltage Regulator Spring is 1949142.

*“D” Regulators have Post type Upper Contact & Support (not illustrated). One of Part No. shown services both Current & Voltage Upper Contacts.

Delco-Remy SERVICE PARTS CATALOG

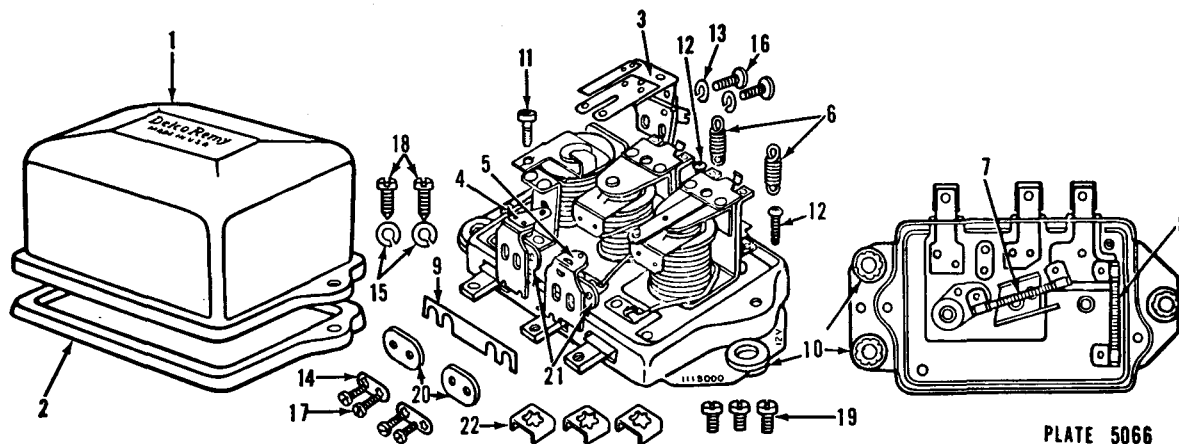

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cover	Gasket Cover	Arma- ture Relay	Contact Current Reg.	Contact Voltage Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw Adj.	Screw Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1118883-C		1931887	1943022	1878493	1933242	1912176	1910174	1910177	1878504	1933273	1912159	1944590
1118883-D-E		"	"	*1948328	*1948328	1912176	1910174	1910174	1878504	1879663	"	"
1118884		1878510	"	1878493	1878493	1912176	"	1885300	1878504	1879663	"	"
1118885		"	"	1878517	1878517	"	1910174	1910177	"	"	"	"
1118885-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118885-C		"	"	"	"	1912176	"	"	"	"	"	"
1118885-D-E		"	"	*1948328	*1948328	1912176	"	"	1878504	"	"	"
1118886		1878510	"	1878517	1878517	1912176	"	"	1878504	"	"	"
1118886-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118886-C		"	"	"	"	1912176	"	"	"	"	"	"
1118886-D-E		"	"	*1948328	*1948328	1912176	"	"	"	"	"	"
1118887		1878510	"	1878493	1878493	1912176	"	"	1878504	"	"	"
1118887-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118887-C		"	"	"	"	1912176	"	"	"	"	"	"
1118887-D-E		"	"	*1949136	*1949136	1912176	"	"	"	"	"	"
1118888		1878510	"	1878517	1878517	1912176	"	"	1878504	"	"	"
1118888-B		1931887	"	1878493	1933242	"	"	"	"	1933273	"	"
1118888-C		"	"	"	"	1912176	"	"	"	"	"	"
1118888-D-E		"	"	*1948328	*1948328	1912176	"	"	"	"	"	"
1118889		1878510	"	1878517	1878517	1912176	"	1885300	1878504	1879663	"	"
1118889-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118889-C		"	"	"	"	1912176	"	"	"	"	"	"
1118889-D-E		"	"	*1948328	*1948328	1912176	"	"	"	"	"	"
1118890		1878510	1915896	1878517	1878517	1912176	"	1910175	1878504	"	"	"
1118890-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118890-C		"	1939646	"	"	1912176	"	"	"	"	"	"
1118890-D-E		"	"	*1948328	*1948328	1912176	"	"	"	"	"	"
1118891		1878510	1915896	1878493	1878493	1912176	"	1885300	1878504	"	"	"
1118892		"	"	"	"	"	"	1910175	"	"	"	"
1118893		"	"	1878517	1878517	"	1910174	"	"	"	"	"
1118893-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118893-C		"	1939646	"	"	1912176	"	"	"	"	"	"
1118893-D-E		"	"	*1948328	*1948328	1912176	"	"	1878504	"	"	"
1118894		1878510	1915896	1878517	1878517	1912176	"	"	"	"	"	"
1118894-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"

(Continued on Page 3)

†See footnote page 4.

△Current Regulator Spring is 1912176—Voltage Regulator Spring is 1923517.

○Current Regulator Spring is 1912176—Voltage Regulator Spring is 1949142.

*"D" Regulators have Post type Upper Contact & Support (not illustrated). One of Part No. shown services both Current & Voltage Upper Contacts.

†If Regulator is stamped "E" use 1910173 Resistor.

‡If Regulator is stamped "E" use 1956234.

▲If Regulator is stamped "E" use 1956235.

Parts not listed in this Catalog will not be sold separately.

Delco-Remy

SERVICE PARTS CATALOG

Model	Cover	Gasket — Cover	Arma- ture — Relay	Contact — Current Reg.	Contact — Voltage Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw — Adj.	Screw — Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1118894-C		1931887	1939646	1878493	1933242	1912176	1910174	1910175	1878504	1879663	1912159	1944590
1118894-D-E		"	"	*1948328	*1948328	○	"	"	"	"	"	"
1118895		1878510	1915896	1878493	1878493	1912176	"	"	1878504	"	"	"
1118895-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118895-C		"	1939646	"	"	Δ	"	"	"	"	"	"
1118895-D-E		"	"	*1949136	*1949136	○	"	"	"	"	"	"
1118896		1878510	1915896	1878517	1878517	1912176	"	"	1878504	"	"	"
1118896-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118896-C		"	1939646	"	"	Δ	"	"	"	"	"	"
1118896-D-E		"	"	*1948328	*1948328	○	‡	"	"	"	"	"
1118897		1878510	1915896	1878493	1878493	1912176	"	"	1878504	"	"	"
1118897-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118897-C		"	1939646	"	"	Δ	"	"	"	"	"	"
1118897-D-E		"	"	*1949136	*1949136	○	‡	"	"	"	"	"
1118898		1878510	1912791	1878517	1878517	1912176	"	†1885300	1878504	"	"	"
1118898-B		1931887	"	1878493	1933242	"	"	‡	"	"	"	"
1118898-C		"	"	"	"	Δ	"	‡	"	"	"	"
1118898-D-E		"	"	*1948328	*1948328	○	"	"	"	"	"	"
1118899		1878510	1915896	1878493	1878493	1912176	"	†1910175	1878504	"	"	"
1118900		"	"	"	"	"	"	"	"	"	"	"
1118901		"	"	1878517	1878517	"	1910174	1910177	"	"	"	"
1118901-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118901-C		"	1939646	"	"	Δ	"	"	"	"	"	"
1118901-D-E		"	"	*1948328	*1948328	○	‡	"	"	"	"	"
1118902		1878510	1915896	1878493	1878493	1912176	"	"	1878504	"	"	"
1118902-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118902-C		"	1939646	"	"	Δ	"	"	"	"	"	"
1118902-D-E		"	"	*1949136	*1949136	○	‡	"	"	"	"	"
1118903		1878510	1915896	1878517	1878517	1912176	"	"	1878504	"	"	"
1118903-B		1931887	"	1878493	1933242	"	"	"	"	1933273	"	"
1118903-C		"	1939646	"	"	Δ	"	"	"	"	"	"
1118903-D-E		"	"	*1948328	*1948328	○	‡	"	"	"	"	"
1118904		1878510	1915896	1878493	1878493	1912176	"	†1910174	1878504	1879663	"	"
1118905		"	1912791	1878517	1878517	"	1910174	1885300	"	"	"	"
1118905-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118905-C		"	"	"	"	Δ	"	"	"	"	"	"
1118905-D-E		"	"	*1948328	*1948328	○	‡	"	"	"	"	"
1118906		1878510	1915896	1878517	1878517	1912176	"	1910175	1878504	"	"	"
1118906-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118906-C		"	1939646	"	"	Δ	"	"	"	"	"	"
1118906-D-E		"	"	*1948328	*1948328	○	‡	"	"	"	"	"
1118907		1878510	1915896	1878517	1878517	1912176	"	1885300	1878504	"	"	"
1118907-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118907-C		"	1939646	"	"	Δ	"	"	"	"	"	"
1118907-D-E		"	"	*1948328	*1948328	○	‡	"	"	"	"	"
1118908		1878510	1915896	1878517	1878517	1912176	"	"	1878504	"	"	"
1118908-B		1931887	"	1878493	1933242	"	"	"	"	1933273	"	"
1118908-C		"	1939646	"	"	Δ	"	"	"	"	"	"
1118908-D-E		"	"	*1948328	*1948328	○	‡	"	"	"	"	"
1118909		1878510	1915896	1878493	1878493	1912176	"	†1910175	1878504	1879663	"	"
1118910		"	"	"	"	"	1910174	1885300	"	"	"	"
1118910-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118910-C		"	1939646	"	"	Δ	"	"	"	"	"	"
1118910-D-E		"	"	*1949136	*1949136	○	‡	"	"	"	"	"

†See footnote page 4.

ΔCurrent Regulator Spring is 1912176—Voltage Regulator Spring is 1923517.

○Current Regulator Spring is 1912176—Voltage Regulator Spring is 1949142.

*“D” Regulators have Post type Upper Contact & Support (not illustrated). One of Part No. shown services both Current & Voltage Upper Contacts.

†If Regulator is stamped “E” use 1910173.

ΔIf Regulator is stamped “E” use 1910174.

Delco-Remy
SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.


Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
13	Lock Washer—Armature Screw—Relay.....	1914816	All
14	Lock Washer—Contact Attaching Screw.....	1878505	All
15	Lock Washer—Cover Screw.....	1938522	("B" & "C" Type) All except 1118883
15	Lock Washer—Cover Screw.....	1938523	("B" & "C" Type) 1118883
—	Lock Washer—Ground Screw.....	453844	1118883-8; 903-8
—	Lock Washer—Shock Mounting Bracket Screw.....	9421423	1118880-1-3-5-8; 93; 903
NUTS			
—	Nut—Shock Mounting Bracket Screw.....	124818	1118880-1-3-5-8; 93; 903
SCREWS			
16	Screw (& Lock Washer)—Armature Attach.—Relay.....	1924764	All
17	Screw—Contact Attaching.....	1878516	All
18	Screw—Cover.....	1878499	All except 1118883
18	Screw—Cover.....	1914799	1118883
18	Screw—Cover.....	1943386	("B," "C" & "D" Type) All
—	Screw—Ground.....	453418	1118883
—	Screw—Ground.....	1943386	1118878-9
—	Screw—Shock Mounting Bracket Attaching.....	273485	1118880-1-3-5-8; 93; 903
19	Screw—Terminal.....	1914800	All
WASHERS			
20	Washer—Insul.(w/Bushings) Contact Attaching Screw.....	1922599	All
21	Washer—Insul.—Contact Attaching Screw.....	1878507	All
—	Washer—Insul.—Cover Screw.....	1922996	All
—	Washer—Space—Shock Mounting Bracket Screw.....	1915340	1118883-8; 903
MISCELLANEOUS			
—	CLAMP—Ground Screw.....	1855978	1118879
22	CLAMP—Terminal.....	1878503	All except 1118883
22	CLAMP—Terminal.....	1914801	1118883
—	LEAD—Ground.....	1911033	1118880-1-5; 93 except "D" Type
—	PACKAGE—Shock Mounting.....	1910966	1118880-1-3-5-8; 93; 903

†Where two resistors in parallel were used in original unit, they may be serviced as follows:

Either 2 req'd of		or 1 req'd of	
Part No.	Ohms	Part No.	Ohms
1885300	80	1956234	40
1910175	100	1956235	50

RESISTOR CHART

Part No.	Value in ohms	Part No.	Value in ohms
1885296	30	1910177	150
1885300	80	1910183	20
1910174	65	1912745	45
1910175	100		

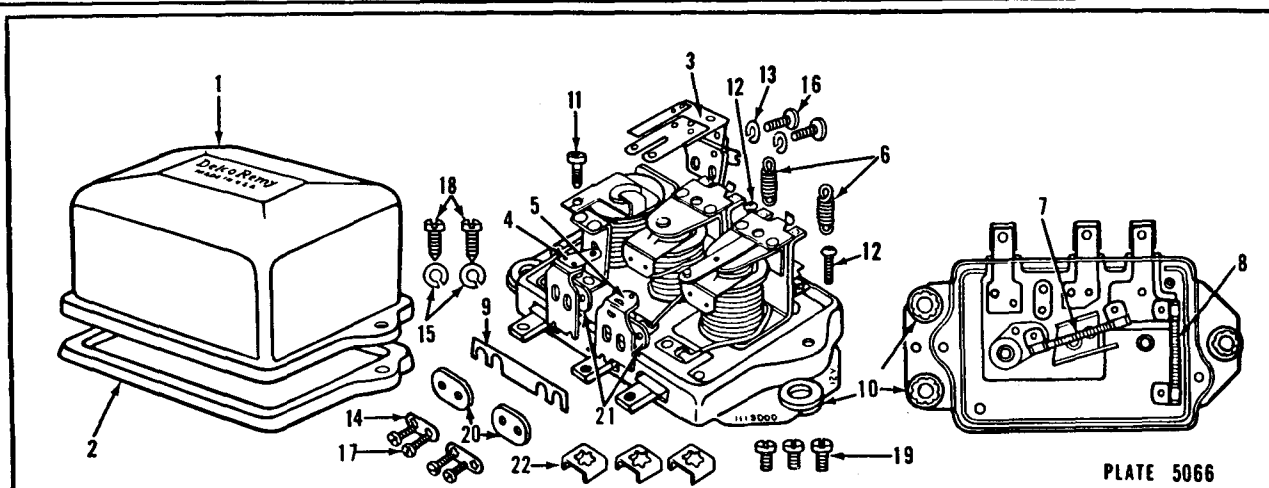 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cover	Gasket Cover	Arma- ture Relay	Contact Current Reg.	Contact Voltage Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw Adj.	Screw Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1118911.....		1878510	1915896	1878517	1878517	1912176	1910174	1910175	1878504	1879663	1912159	1922408
1118911-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118911-C.....		"	1939646	"	"	Δ	"	"	"	"	"	"
1118911-D-E.....		"	"	*1948328	*1948328	○	†	"	"	"	"	1944590
1118939.....		1878510	1943022	1878517	1878517	1912176	"	1910177	1878504	"	"	1922408
1118939-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118939-C.....		"	1943022	"	"	Δ	"	"	"	"	"	"
1118939-D-E.....		"	"	*1948328	*1948328	○	†	1910174	"	"	"	1944590
1118941.....		1878510	1915896	1878517	1878517	1912176	"	1910175	1878504	"	"	1922408
1118941-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118941-C.....		"	1939646	"	"	"	1885296	1910174	"	"	"	"
1118941-D-E.....		"	"	*1948328	*1948328	○	†	"	"	"	"	1944590
1118942.....		1878510	1943022	1878493	1878493	1912176	1885296	1910174	1878504	"	"	1922408
1118942-B.....		1931887	"	1878517	1933239	Δ	"	"	"	"	"	"
1118942-C.....		"	"	"	"	"	"	"	"	"	"	"
1118942-D-E.....		"	"	*1949136	*1949136	○	"	"	"	"	"	1944590
1118945.....		1878510	1915896	1878493	1878493	1912176	1910174	1910176	1878504	"	"	1922408
1118946.....		"	"	1878517	1878517	"	1912745	1912745	"	"	"	"
1118946-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118946-C.....		"	1939646	"	"	Δ	"	"	"	"	"	"
1118946-D-E.....		"	"	*1948328	*1948328	○	"	"	"	"	"	1944590
1118947.....		1878510	1943022	1878517	1878517	1912176	1885296	1910174	1878504	"	"	1922408
1118947-B.....		1931887	"	1878493	1933242	Δ	"	"	"	"	"	"
1118947-C.....		"	"	"	"	"	"	"	"	"	"	"
1118947-D-E.....		"	"	*1948328	*1948328	○	"	"	"	"	"	1944590
1118948.....		1878510	1915896	1878493	1878493	1912176	1910174	1910177	1878504	"	"	1922408
1118949.....		"	"	"	"	"	"	1910179	"	"	"	"
1118950.....		"	"	1878517	1878517	"	1912745	1912745	"	"	"	"
1118950-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118951.....		1878510	"	"	1878493	"	"	†1910182	"	"	"	"
1118953.....		"	"	1878517	1878517	"	1910174	1910176	"	"	"	"
1118953-B.....		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118955.....		1878510	"	1878517	1878517	"	"	1910175	"	"	"	"
1118955-B.....		1931887	"	1878493	1933242	"	"	"	"	1933273	"	"
1118955-C.....		"	1939646	"	"	Δ	"	"	"	"	"	"

(Continued on Page 2)

†Two required.

ΔCurrent Regulator Spring is 1912176—Voltage Regulator Spring is 1923517.

 
○Current Regulator Spring is 1912176—Voltage Regulator Spring is 1949142.

*"D" Regulators have Post type Upper Contact & Support (not illustrated). One of Part No. shown services both Current & Voltage Upper Contacts.

†If Regulator is stamped "E" use 1910173.

○If Regulator is stamped "E" use 1910175.

Delco-Remy
SERVICE PARTS CATALOG

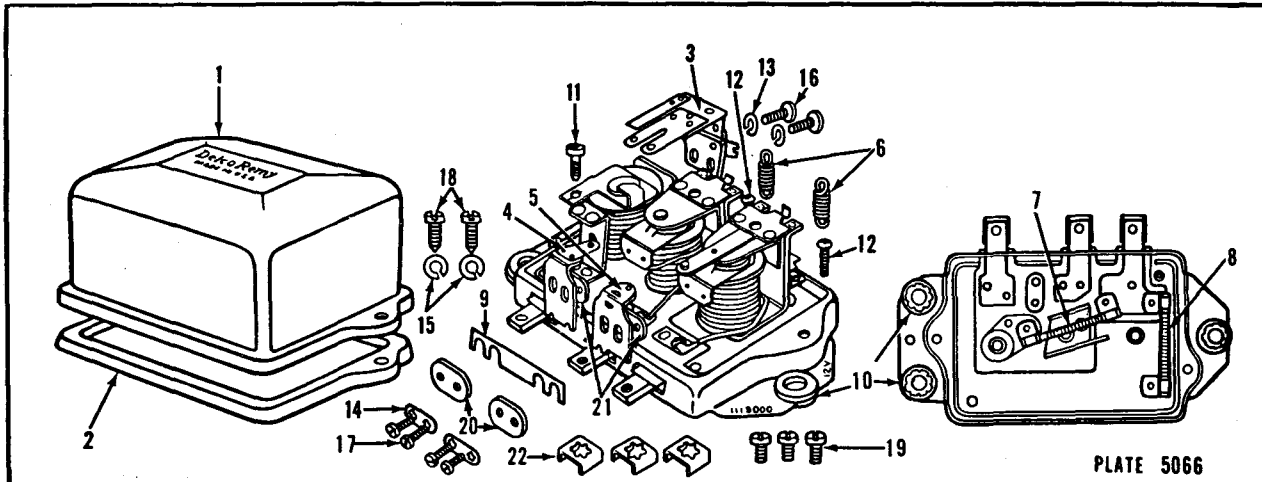

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cover	Gasket Cover	Arma- ture Relay	Contact Current Reg.	Contact Voltage Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw Adj.	Screw Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1118955-D-E		1931887	1939646	*1948328	*1948328	○	†1910174	1910175		1933273	1912159	1944590
1118956		1878510	1915896	1878493	1878493	1912176	"	1910177	1878504	1879663	"	"
1118956-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118956-C		"	1939646	"	"	△	"	"	"	"	"	"
1118956-D-E		"	"	*1949136	*1949136	○	†	"		"	"	"
1118957		1878510	1915896	1878517	1878517	1912176	1910182	†1910181	1878504	"	"	"
1118957-B		1931887	"	1878493	1933242	"	"	†	"	1933273	"	"
1118957-C		"	"	"	1933239	△	"	"	"	"	"	"
1118957-D		"	"	*1948328	*1948328	○	"	1956239		1932747	"	"
1118957-E		"	1939646	*	"	○	1910182	1956239		"	"	"
1118961		1878510	1923077		1878493	"	1885296	1885296		1879663	"	"
1118961-B		1931887	"		1933239	"	"	"		"	"	"
1118961-C		"	1941741		"	"	"	"		"	"	"
1118962		1878510	1923077		1878517	"	"	"		"	"	"
1118962-B		1931887	"		1933242	"	"	"		"	"	"
1118962-C		"	1941741		"	"	"	"		"	"	"
1118963		1878510	1923077		1878493	"	1910174	1910174		"	"	"
1118963-B		1931887	"		1933239	"	x	1910175		"	"	"
1118963-C		"	1941741		"	"	x	"		"	"	"
1118964		1878510	1923077		1878517	"	1910174	"		"	"	"
1118964-B		1931887	"		1933242	"	x	"		"	"	"
1118964-C		"	1941741		"	"	x	"		"	"	"
1118965		1878510	1943022	1878517	1878517	"	1910174	1910177	1878504	"	"	"
1118965-B		1931887	"	1878493	1933242	"	"	"	"	"	"	"
1118965-C		"	"	"	"	△	"	"	"	"	"	"
1118965-D-E		"	"	*1949328	*1949328	○	†	1910174		"	"	"
1118967		1878510	1915896	1878493	1878493	1912176	"	1885300	1878504	"	"	"
1118968		"	"	"	"	"	"	1910176	"	"	"	"
1118968-B		1931887	"	1878517	1933239	"	"	"	"	"	"	"
1118968-C		"	1939646	"	"	△	"	"	"	"	"	"
1118968-D-E		"	"	*1949136	*1949136	○	†	"		"	"	"
1118972		1878510	"	"	"	○	□	1910175	1878504	"	"	"
1118973		"	1915896	1878517	1878517	1912176	1910174	1910177	"	"	1912159	"

(Continued on Page 3)

†See footnote Page 3.

*Also use 1910174 Resistor—Relay Core to Ground.

□Use 1910174 Resistor "F" Terminal to "Sw" Terminal, 1912745 "Sw" Terminal to Base.

△Current Regulator Spring is 1912176—Voltage Regulator Spring is 1923517.

○Current Regulator Spring is 1912176—Voltage Regulator Spring is 1949142.

*"D" Regulators have Post type Upper Contact & Support (not illustrated). One of Part No. shown services both Current & Voltage Upper Contacts.

†If Regulator is stamped "E" use 1910173.

△If Regulator is stamped "E" use 1910174.

Parts not listed in this Catalog will not be sold separately.

Model	Cover	Gasket Cover	Arma- ture Relay	Contact — Current Reg.	Contact — Voltage Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw — Adj.	Screw — Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1118973-B		1931887	1915896	1878493	1933242	1912176	1910174	1910177	1878504	1879663	1912159	1944590
1118973-C		1931887	1939646	1878493	1933242	Δ	○	†	“	“	“	“
1118973-D-E		“	“	*1948328	*1949328	“	“	“	“	“	“	“
1118974		1878510	1915896	1878517	1878517	1912176	“	1910176	1878504	“	“	“
1118974-B		1931887	“	1878493	1933242	“	“	“	“	“	“	“
1118974-C		“	1939646	“	“	Δ	“	“	“	“	“	“
1118974-D-E		“	“	*1948328	*1948328	“	○	†	“	“	“	“
1118975		1878510	1915896	1878493	1878493	1912176	“	†1910182	1878504	“	“	“
1118976		1933104	“	“	“	“	†1910180	†1910179	“	“	“	“
1118976-B		1933819	“	1878517	1933239	“	†	“	“	“	“	“
1118976-C		“	“	“	“	Δ	“	†	“	“	“	“
1118976-D		“	1939646	“	“	Δ	“	†	“	“	“	“
1118976-E		1931887	1939646	*1949136	*1949136	“	○	1956237	1956236	“	“	“
1118979		1953902	1878780	“	1878493	“	“	1956237	1956236	“	“	“
1118980		1878510	1915896	1878517	1878517	“	1910174	1910174	1878504	1879663	“	“
1118981		1953902	*1878780	“	1878493	“	“	“	“	“	“	“
1118982		“	“	“	1878517	“	“	1910183	“	“	“	“
1118983		“	“	“	1878493	“	“	1910174	“	“	“	“
1118984		“	“	“	“	“	“	“	“	“	“	“
1118985		“	“	“	1878517	“	“	“	“	“	“	“
1118986		“	“	“	“	“	“	“	“	“	“	“
1118987		“	“	“	1878493	“	“	“	“	“	“	“
1118988		“	“	“	“	“	“	“	“	“	“	“
1118989		“	1939646	“	“	“	“	1910183	“	“	“	“
1118990		1871636	1880212	“	“	“	1941431	1941432	“	“	“	“
1118991		1953902	1945583	“	“	“	“	1910174	“	“	“	“
1118992		“	“	“	1878517	“	“	1910183	“	“	“	“
1118993		“	“	“	“	“	“	1910174	“	“	“	“
1118995		“	“	“	1878493	“	1912745	“	“	“	“	“
1118997		“	“	“	1878517	“	“	1910174	“	“	“	“
1118998		“	“	“	1878493	“	“	1910177	“	“	“	“
1118999		1953902	“	“	“	“	“	1910174	“	“	“	“

○Use 1912176 for Voltage Unit, 1882595 for Relay.

*If date code stamped on base is 8-K or above use 1939646.

ΔCurrent Regulator Spring is 1912176—Voltage Regulator Spring is 1923517.

○Current Regulator Spring is 1912176—Voltage Regulator Spring is 1949142.

“D” & “E” Regulators have Post type Upper Contact & Support (not illustrated). One of Part No. shown services both Current & Voltage Upper Contacts.

†If Regulator is stamped “E” use 1910173.

*If Regulator is stamped “E” use 1910174.

†Where two resistors in parallel were used in original unit, they may be serviced as follows:

Either 2 req'd of		or 1 req'd of	
Part No.	Ohms	Part No.	Ohms
1910181	750	1956239	375
1910179	300	1956236	150
1910180	375	1956237	200


MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
LOCK WASHERS			
13	Lock Washer—Armature Screw—Relay.....	19148916	All except 1118997-8-9
—	Lock Washer—Bracket—Adjustment Screw.....	453844	1118997
14	Lock Washer—Contact Attaching Screw.....	1878505	All except "D" Type
15	Lock Washer—Cover Screw.....	1938522	("B" & "C" Type) All except 1118957
15	Lock Washer—Cover Screw.....	1938523	("B" & "C" Type) 1118957
—	Lock Washer—Ground Screw.....	453844	1118955 ("E" Type)
15	Lock Washer—Ground Screw.....	1914107	1118957
—	Lock Washer—Shock Mounting Screw.....	9421423	1118955
NUTS			
—	Nut—Shock Mounting Attaching.....	124818	1118955
SCREWS			
16	Screw (& Lock Washer)—Armature Attach.—Relay.....	1924764	All
—	Screw—Bracket Adjustment.....	454408	1118990
17	Screw—Contact Attaching.....	1878516	All except "D" Type
18	Screw—Cover.....	1878499	All except 1118957; 81
18	Screw—Cover.....	1914799	1118957
18	Screw—Cover.....	1927982	1118979; 81-2-3-4-5-6-7-8-9; 91-2-3-5-7-8-9
18	Screw—Cover.....	1943386	("B," "C," "D" & "E" Type) All
18	Screw—Cover.....	1922087	1118990
—	Screw—Ground.....	453418	1118955-7 ("D" & "E" Type)
—	Screw—Ground.....	1913386	1118956; 61-2-3-4-8; 73-4
—	Screw—Shock Mounting Bracket Attaching.....	273485	1118955
19	Screw—Terminal.....	1914800	1118911; 39; 41-2-5-6-7-8-9; 50-1-3-5-6-7; 61-2-3-4-5-7-8-9; 72-3-4-5-6; 80 ("E" Type)
19	Screw—Terminal.....	453418	1118979; 82-3-4-5-6-7-8-9; 90-1-2-3-5-7-8-9
WASHERS			
—	Washer—Cover Screw.....	1935031	1118979; 82-3-4-5-6-7-8-9; 91-2-3-5-7-9
20	Washer—Insul. (w/Bushings) Contact Attaching Screw.....	1922599	All except "D" Type
21	Washer—Insul.—Contact Attaching Screw.....	1878507	All except "D" Type
—	Washer—Insul.—Cover Screw.....	1922996	All except 1118997-8-9
—	Washer—Plain—Cover Screw.....	813731	1118953
MISCELLANEOUS			
—	BRACKET—Adjustment.....	1951938	1118997
—	CLAMP—Ground Screw.....	1855978	1118956; 61-2-3-4-8; 73-4
22	CLAMP—Terminal.....	1868137	1118979; 82-3-4-5-6-7-8-9; 90-1-2-3-5-7-8-9
22	CLAMP—Terminal.....	1878503	1118911; 39; 41-2-5-6-7-8-9; 50-1-3-5-6-7; 61-2-3-4-5-7-8; 72-3-4-5-6; 80 ("E" Type)
22	CLAMP—Terminal.....	1914801	1118957 ("D" & "E" Type)
22	CLAMP—Terminal.....	1941137	1118986
—	GASKET—Cover Screw.....	1910297	1118953
—	PACKAGE—Shock Mounting.....	1910966	1118955

RESISTOR CHART

Part No.	Value in ohms	Part No.	Value in ohms
1885296	30	1910179	300
1885300	80	1910180	375
1910174	65	1910182	500
1910175	100	1910183	20
1910176	130	1912745	45
1910177	150		

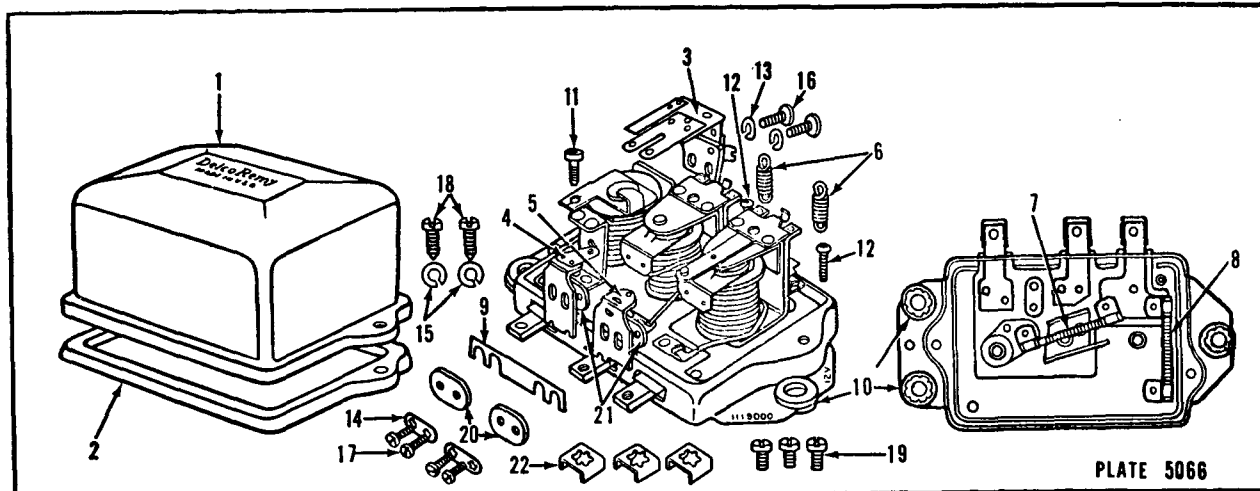 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cover	Gasket Cover	Arma- ture — Relay	Contact — Current Reg.	Contact — Voltage Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw — Adj.	Screw — Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1119000.....		1931887	1915896	1878517	1933239	1912176	1910174	1910176	1878504	1879663	1912159	1944590
1119000-C.....		"	1939646	"	"	"	"	"	"	"	"	"
1119000-D-E.....		"	"	*1949136	*1949136	†	"	"	"	"	"	"
1119001.....		"	1915896	1878517	1933239	1912176	"	"	1878504	"	"	"
1119001-C.....		"	1939646	"	"	"	"	1885300	"	"	"	"
1119001-D-E.....		"	"	*1949136	*1949136	†	"	"	"	"	"	"
1119002.....		"	1915896	1878517	1933239	1912176	"	"	1878504	"	"	"
1119002-C.....		"	1939646	"	"	"	"	"	"	"	"	"
1119002-D-E.....		"	"	*1949136	*1949136	†	"	"	"	"	"	"
1119003.....		"	1915896	1878517	1933239	1912176	"	1910176	1878504	"	"	"
1119003-C.....		"	1939646	"	"	"	"	"	"	"	"	"
1119003-D-E.....		"	"	*1949136	*1949136	†	"	"	"	"	"	"
1119004.....		"	1915896	1878517	1933239	1912176	"	1910177	1878504	"	"	"
1119004-C.....		"	1939646	"	"	"	"	"	"	"	"	"
1119004-D-E.....		"	"	*1949136	*1949136	†	"	"	"	"	"	"
1119005.....		"	"	"	1933239	1912176	†	1910175	1878504	"	"	"
1119122.....		"	1915896	1878493	"	"	1910174	1910176	"	"	1912159	"
1119122-C.....		"	1939646	1878517	"	"	"	"	"	"	"	"
1119122-D-E.....		"	"	*1949136	*1949136	†	"	"	"	"	"	"
1119123.....		"	1915896	1878517	1933239	1912176	"	"	1878504	"	"	"
1119123-C.....		"	1939646	"	"	"	"	"	"	"	"	"
1119123-D-E.....		"	"	*1949136	*1949136	†	"	"	"	"	"	"
1119135.....		"	1915896	1878493	1933242	1912176	"	1910177	1878504	"	"	"
1119135-C.....		"	1939646	"	"	"	"	"	"	"	"	"
1119135-D-E.....		"	"	*1948328	*1948328	†	"	"	"	"	"	"
1119139.....		"	1915896	1878517	1933239	1912176	"	*1910175	"	"	"	"
1119139-C.....		"	"	"	"	"	"	"	"	"	"	"
1119139-D.....		"	1939646	"	"	"	"	1956235	"	"	"	"
1119139-E.....		"	"	*1949136	*1949136	"	"	1956235	"	"	"	"
1119144.....		"	1915896	"	"	"	"	*1910179	"	"	"	"
1119144-C.....		"	"	"	"	"	"	"	"	"	"	"
1119144-D.....		"	1939646	"	"	"	"	1956236	"	"	"	"
1119144-E.....		"	"	*1949136	*1949136	"	"	1956236	"	"	"	"
1119145.....		"	1915896	"	"	"	"	*1910175	"	"	"	"

(Continued on Page 2)

* "D" & "E" Regulators have Post type Upper Contact & Support (not illustrated). One of Part No. shown services both Current & Voltage Upper Contacts.

† Use 1910174 Resistor "F" Terminal to "SW" Terminal, 1910175 Resistor "SW" to Base.

‡ Current Regulator Spring is 1912176—Voltage Regulator Spring is 1949142.

 
* Use 1912176 for Current Unit—use 1923517 for Voltage Unit.

‡ Use 1882595 Spring for Relay Armature.

‡ See footnote page 3.

‡ If Regulator is stamped "E" use 1910173.

‡ If Regulator is stamped "E" use 1910174.

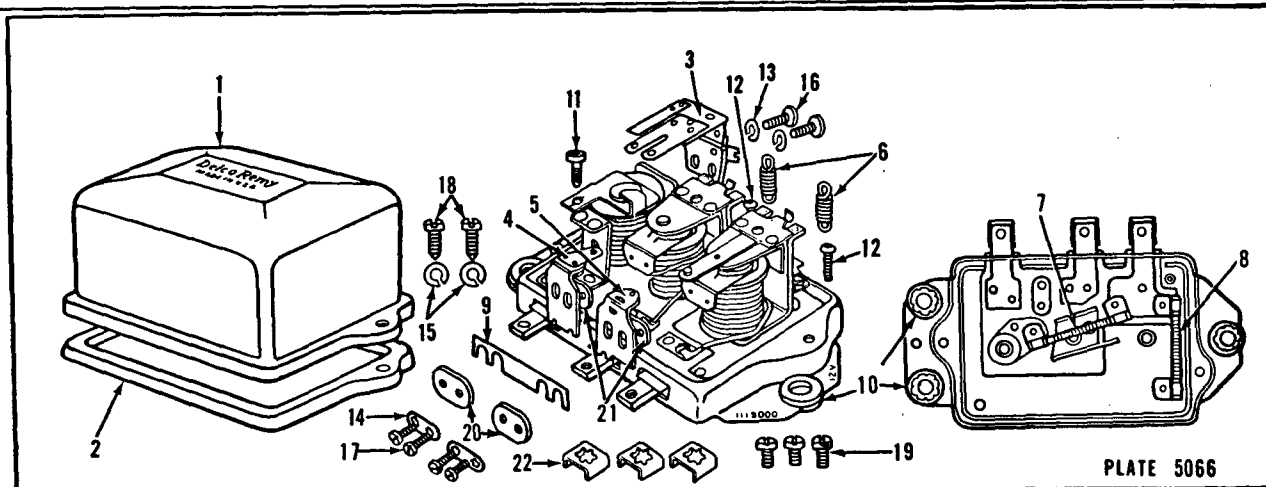

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cover	Gasket Cover	Armature Relay	Contact Current Reg.	Contact Voltage Reg.	Spring	Resistor	Resistor	Connector	Grommet	Screw Adj.	Screw Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1119200		1931887	1943022	1878517	1933239	*	1916174	1910177	1878504	1933273	1912159	1944590
1119200-C		"	"	"	"	*	"	"	"	"	"	"
1119200-E		"	"	*1949136	*1949136	†	1910173	1910174	"	"	"	"
1119203		"	1923077	"	1933239	⊙	⊙	⊙	"	"	"	"
1119203-C		"	1941741	"	"	⊙	⊙	⊙	"	"	"	"
1119204		"	1923477	"	1933242	⊙	⊙	⊙	"	"	"	"
1119204-C		"	1941741	"	"	⊙	⊙	⊙	"	"	"	"
1119205		"	1915896	1878517	1933239	*	1910174	1910174	1878504	1914766	"	"
1119205-C		"	1940757	"	"	*	"	"	"	"	"	"
1119205-D-E		"	"	*1949136	*1949136	⊙	*	"	"	"	"	"
1119206		"	1915896	1878517	1933239	*	1910182	1910182	"	1879663	"	"
1119206-C		"	1939646	"	"	*	"	"	"	"	"	"
1119206-D		"	"	*1949136	*1949136	†	"	1956238	"	"	"	"
1119206-E		"	"	x	x	†	"	"	"	"	"	"
1119207		"	1915896	"	"	1912176	1910174	1885300	1878504	"	"	"
1119207-C		"	1839646	"	"	"	"	"	"	"	"	"
1119207-D-E		"	"	"	"	†	*	"	"	"	"	"
1119209		"	1914764	1878517	1933239	1914831	"	"	1878504	1914766	"	"
1119209-C		"	1940757	"	"	"	"	"	"	"	"	"
1119209-D-E		"	"	*1949136	*1949136	⊙	*	"	"	"	"	"
1119211		1881251	"	"	1878517	1943226	"	"	"	"	"	"
1119212		1931887	1939646	1878517	1933239	1912176	1910174	1910176	1878504	1879663	1912159	"
1119212-D		"	"	*1949136	*1949136	†	"	"	"	"	"	"
1119213-C		"	"	1878517	1933239	1912176	1910182	†1910181	"	"	"	"
1119213-D		"	"	*1949136	*1949136	†	"	1956239	"	"	"	"
1119213-E		"	"	x	x	†	"	"	"	"	"	"
1119217		"	"	1878493	1933242	*	1885296	1910174	1878504	"	"	"
1119217-D-E		"	"	*1948328	*1948328	†	"	"	"	"	"	"
1119218		1933819	1915896	1878617	1933239	*	†1910180	†1910179	"	"	"	"
1119218-D		"	1939646	"	"	*	1956237	1956236	"	"	"	"
1119218-E		1931887	"	*1949136	*1949136	†	"	"	"	"	"	"
1119219		"	"	1878493	1933242	*	1910182	†1910181	"	1933273	"	"
1119220		"	1915896	1878517	1933239	*	1910175	1910176	"	1879663	"	"
1119220-D		"	1939646	"	"	*	"	1957821	"	"	"	"
1119220-E		"	"	*1949136	*1949136	†	"	"	"	"	"	"

(Continued on Page 2)

*"D" & "E" Regulators have Post type Contact & Support (not illustrated). One of Part No. shown services both Current & Voltage Upper Contact.

*Use 1912176 for Current Unit—use 1923517 for Voltage Unit.

⊙Use 1912176 Spring for Voltage Unit, 1935046 for Auxiliary Relay.

⊙Use 2 Grommets 1879663 & 1 of 1944355 (w/Shock Tip).

*Use 1912176 for Current Unit—use 1949219 for Voltage Unit.

†Use 1912176 for Current Unit—use 1949142 for Voltage Unit.

†See footnote page 3.

*Use 1885296 Resistor—"F" Terminal to Ground.

1885296 Resistor—Cut-out to Auxiliary Relay.

1910176 Resistor—Auxiliary Relay to Ground.

*If Regulator is stamped "E" use 1910173.


*If Regulator is stamped "E" use 1910174.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
—	CONTACT (& Support)—Auxiliary Relay.....	1941772	1119203-C; 204-C; 265
—	FUSE Assembly.....	1945172	1119242; 63-4; 77
—	LEAD—Ground.....	1933941	1119206-7; 22-3; 32-3; 41-3-7-9; 57; 60-2-6-7; 70-2-89-9; 86 ("D" & "E" type); 96-7
—	LEAD—Ground.....	1911033	1119217; 75
—	RESISTOR—Voltage & Current Regulator Armature....	1943292	1119218; 20-4-6
—	RESISTOR—Relay to Voltage Unit.....	1910174	1119276; 86
—	SPACER—Insul.—Contacts.....	1934767	1119203-4
—	TERMINAL—Slip-on.....	1946279	1119211

RESISTOR CHART

Part No.	Value in ohms	Part No.	Value in ohms
1885296	30	1910176	130
1885300	80	1910177	150
1910173	40	1910182	500
1910174	65	1913745	45
1910175	100		

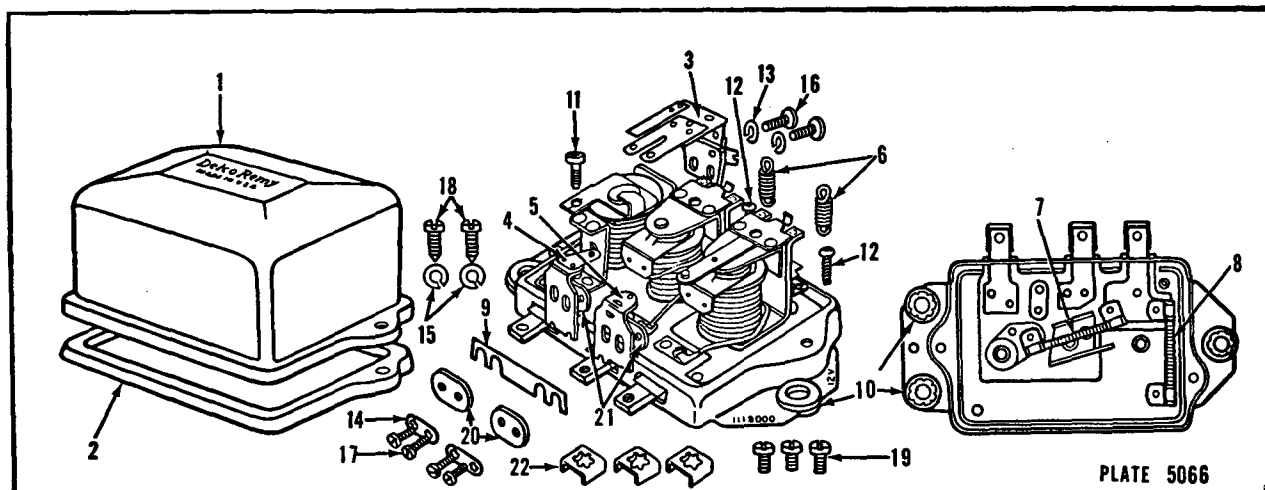


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cover	Gasket Cover	Arma- ture — Relay	Contact — Current Reg.	Contact — Voltage Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw — Adj.	Screw — Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1119575.....	1927980	1953902	1939646		1878517	1912176		1910183			1912159	1944590
1119576.....	"	1927981	"		"	"		1910174			"	"
1119577.....	1939646	"	"		1878493	"		"			"	"
1119578.....	1927980	"	"		"	"		1910183			"	"

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
14	LOCK WASHERS Lock Washer—Contact Attaching Screw.....	1878505	1119575-6-7-8
16	SCREWS Screw (& Lock Washer)—Armature Attaching Relay.....	1924764	1119575-6-7-8
17	Screw—Contact Attaching.....	1878516	1119575-6-7-8
18	Screw—Cover Attaching.....	1927982	1119575-6-7-8
19	Screw—Terminal.....	1864099	1119575-6-7-8
—	WASHERS Washer—Insul.—Cover Attaching Screw.....	1935031	1119575-6-7-8
20	Washer—Insul. (w/Bushings)—Contact Attach. Screw..	1922599	1119575-6-7-8
21	Washer—Insul.—Contact Attaching Screw.....	1878507	1119575-6-7-8
22	MISCELLANEOUS CLAMP—Terminal.....	1868137	1119575-6-7-8

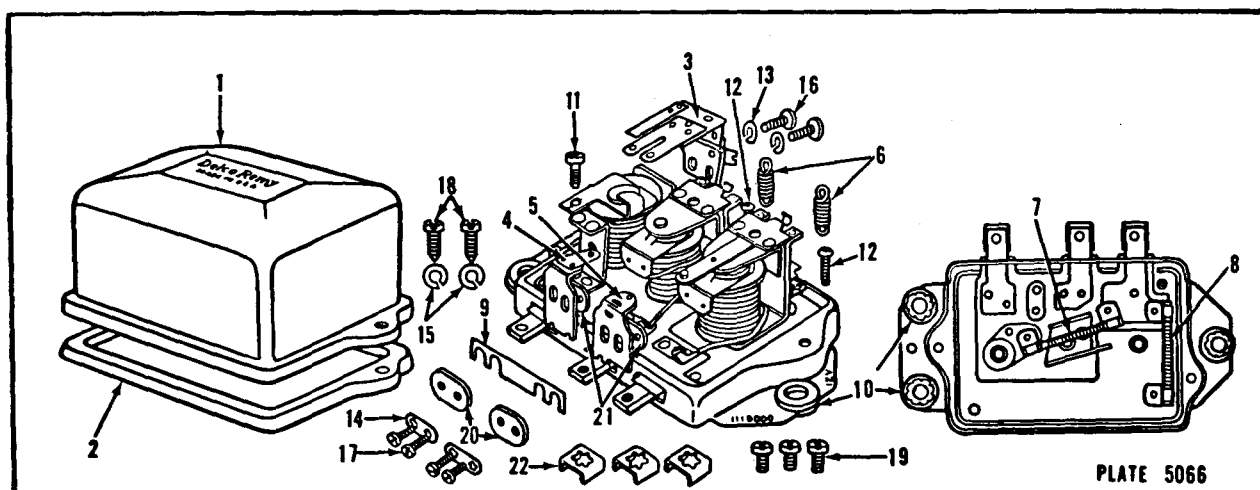 

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cover	Gasket Cover	Armature — Relay	Contact — Current Reg.	Contact — Voltage Reg.	Spring	Resistor	Resistor	Connector	Grommet	Screw — Adj.	Screw — Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1119600.....	1941663	1931887	1942909	1878493	1939658	*	⁴ 1941431	1941432	1939661	1879663	1912159	1944590
1119601.....	"	"	"	"	"	*	"	"	"	"	"	"
1119602.....	"	"	"	"	"	*	"	"	"	"	"	"
1119603.....	"	"	1908437	"	"	*	"	1885296	"	"	"	"
1119604.....	"	"	1942909	"	"	*	"	1941432	"	"	"	"
1119605.....	"	"	1908437	"	"	*	"	1885296	"	"	"	"
1119606.....	"	"	"	"	"	*	"	"	"	"	"	"
1119607.....	"	"	"	1878517	1957109	*	"	"	"	"	"	"
1119608.....	"	"	1942909	1878493	1939658	*	"	1941432	"	"	"	"
1119609.....	"	"	1908437	1878517	1957109	*	"	1885296	"	"	"	"
1119610.....	"	"	1942909	1878493	1939658	*	"	1941432	"	"	"	"
1119611.....	"	"	"	"	"	*	"	1885296	"	"	"	"
1119612.....	"	"	"	1878517	1957109	1912176	"	"	"	"	"	"
1119613.....	"	"	1908437	"	"	*	"	"	"	"	"	"
1119614.....	"	"	1942909	1878493	1939658	*	⊕	⊕	"	"	"	"
1119615.....	"	"	1915812	"	"	*	1885296	1941431	"	"	"	"
1119617.....	"	"	1942909	"	"	*	1941432	"	"	"	"	"
1119619.....	"	"	1908437	"	"	*	⁴ 1941431	1885296	"	"	"	"
1119621.....	"	"	1942909	1878517	1957109	1912176	⊕	⊕	"	"	"	"
1119623.....	"	"	"	1878493	1939658	*	1941431	1941432	"	"	"	"
1119624.....	"	"	"	1878517	1957109	*	"	"	"	"	"	"
1119625.....	"	"	"	1878493	1939658	*	"	1885296	"	"	"	"
1119626.....	"	"	"	"	"	*	1957821	1956233	"	"	"	"
1119627.....	"	"	1908437	"	"	*	1941431	1885296	"	"	"	"
1119628.....	"	"	1915812	1878517	1957109	*	"	"	"	"	"	"
1119629.....	"	"	1908437	1878493	1939658	*	⊕	1941432	"	1914766	"	"
1119630.....	"	"	1942909	"	"	*	"	⊕	"	"	"	"
1119631.....	"	"	1908437	1878517	1957109	*	1941431	1885296	"	1879663	"	"
1119632.....	"	"	"	"	"	*	"	"	"	"	"	"
1119633.....	"	"	"	1878493	1939658	*	"	1941432	"	1914766	"	"
1119634.....	"	"	"	1878517	1957109	*	"	1941431	"	1879663	"	"
.....												
.....												
.....												
.....												

⁴Two required.

[⊕]Use 1941432 Resistor—"F" Terminal to Current Regulator.

1941431 Resistor—Current Regulator to Ground.

1941431 Resistor—Relay to Voltage Regulator.

^{*}Use 1912176 for Current Unit—use 1959948 for Voltage Unit.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	LOCK WASHERS		
14	Lock Washer—Contact Attaching Screw.....	1878505	All
—	Lock Washer—Shock Mounting Screw.....	1874495	1119625-6-7
	NUTS		
—	Nut—Shock Mounting Screw.....	124818	1119625-6-7
	SCREWS		
16	Screw (& Lock Washer)—Armature Attach.—Relay.....	1924764	All
17	Screw—Contact Attaching—Current Regulator.....	1878516	All
17	Screw—Contact Attaching—Voltage Regulator.....	1943854	All
18	Screw—Cover.....	1943386	All
—	Screw—Ground.....	274577	All except 1119629; 30-3
—	Screw—Shock Mount Attaching.....	273485	1119625-6-7
19	Screw—Terminal.....	1914800	All except 1119629; 30-3
19	Screw—Terminal.....	1914800	1119629; 30-3
—	Screw (& Lock Washer)—External Voltage Adjusting.....	1950276	1119631
	WASHERS		
15	Washer—Cupped—Cover Screw.....	1938522	All
20	Washer—Insul (w/Bushings) Contact Attaching Screw—Current Regulator.....	1922599	All
21	Washer—Insul.—Contact Attaching Screw—Current Regulator.....	1878507	All
—	Washer—Insul.—Contact ($\frac{1}{32}$ thk.).....	1922996	All
—	Washer—Plain—Contact.....	824654	All
	MISCELLANEOUS		
—	CLAMP—Ground Screw.....	1855978	All except 1119629; 30-3
22	CLAMP—Terminal.....	1878503	All except 1119629; 30-3
22	CLAMP—Terminal.....	1914801	1119629; 30-3
—	FUSE.....	1945171	1119617; 23; 30
—	FUSE.....	1948701	1119629
—	INSULATOR—Contact Support—Voltage.....	1939659	All
—	LEAD—Ground.....	1933941	1119626-7
—	PACKAGE—Shock Mounting.....	1910966	1119625-6-7
—	RESISTOR (110 ohm)—Voltage Adjusting.....	1950267	1119631
—	RESISTOR (56 ohm)—Voltage Adjusting.....	1950268	1119631
—	RESISTOR (36 ohm)—Voltage Adjusting.....	1950269	1119631
—	RESISTOR (20 ohm)—Voltage Adjusting.....	1950270	1119631

RESISTOR CHART


Part No.	Value in ohms	Part No.	Value in ohms
1885296	30	1910177	150
1885300	80	1910182	500
1910173	40	1912745	45
1910174	65	1941431	10
1910175	100	1941432	20
1910176	130		

Delco-Remy

SERVICE PARTS CATALOG

REGULATOR—Group 6-P
Models 1119635 to 82
Page 1

 Revised to October 1, 1967

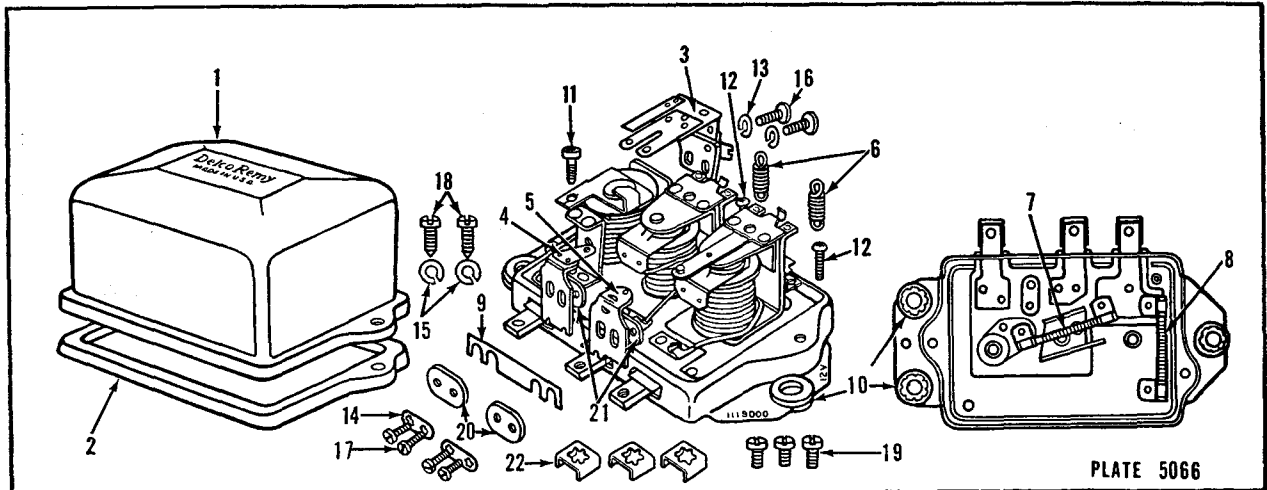

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cover	Gasket Cover	Armature — Relay	Contact — Current Reg.	Contact — Voltage Reg.	Spring	Resistor	Resistor	Con- nector	Grom- met	Screw — Adj.	Screw — Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1119635.....	1941663	1931887	1942909	1878493	1939658	*	○	○	1939661	1879663	1912159	1944590
1119636.....	"	"	1943022	"	"	*	+	+	"	"	"	"
1119637.....	"	"	"	"	"	*	+	+	"	"	"	"
1119638.....	"	"	"	"	"	*	+	+	"	"	"	"
1119639.....	"	"	1942909	"	"	*	+	+	"	"	"	"
1119640.....	"	"	1943022	1878517	1957109	*	+	+	"	"	"	"
1119641.....	"	"	1942909	1878493	1939658	*	+	+	"	"	"	"
1119642.....	"	"	"	"	"	*	+	+	"	"	"	"
1119643.....	"	"	"	"	"	*	+	+	"	"	"	"
1119644.....	"	"	"	1878517	1957109	*	+	+	"	"	"	"
1119645.....	"	"	"	"	"	*	+	+	"	"	"	"
1119646.....	"	"	"	"	"	*	+	+	"	"	"	"
1119647.....	"	"	"	1878493	1939658	*	+	+	"	"	"	"
1119648.....	"	"	"	1878517	1957109	*	+	+	"	"	"	"
1119649.....	"	"	"	1878493	1939658	*	○	○	"	1914766	"	"
1119650.....	"	"	1943022	1878517	1957109	*	+	+	"	1879663	"	"
1119651.....	"	"	"	1878493	1939658	*	+	+	"	"	"	"
1119652.....	"	"	"	"	"	*	+	+	"	"	"	"
1119653.....	"	"	"	"	"	*	+	+	"	"	"	"
1119654.....	"	"	"	"	"	*	○	○	"	"	"	"
1119655.....	"	"	"	1878517	1957109	*	+	+	"	"	"	"
1119656.....	1933818	1933819	"	1878493	1939658	*	+	+	"	"	"	"
1119657.....	1941663	1931887	1942909	1878517	1957109	*	+	+	"	"	"	"
1119658.....	"	"	1943022	1878493	1939658	*	+	+	"	"	"	"
1119659.....	"	"	1942909	"	"	*	○	○	"	"	"	"
1119660.....	"	"	1943022	1878517	1957109	*	+	+	"	"	"	"
1119661.....	"	"	"	1878493	1939658	*	+	+	"	"	"	"
1119662.....	"	"	1939646	1878517	1957109	*	+	+	"	"	"	"
1119663.....	"	"	1942909	1878493	1939658	*	○	○	"	"	"	"
1119664.....	"	"	"	"	"	*	○	○	"	1933273	"	"
1119665.....	"	"	"	1878517	1957109	*	□	□	"	1879663	"	"
1119666.....	"	"	"	"	"	*	□	□	"	"	"	"
1119668.....	"	"	"	1878493	1939658	*	○	○	"	"	"	"
1119669.....	"	"	1943022	1878517	1957109	*	+	+	"	"	"	"
1119670.....	"	"	1942909	"	"	*	□	□	"	"	"	"

*Use 1912176 for Current Unit—use 1959948 for Voltage Unit.

RESISTORS

○
+
□
△
#

CURRENT TO FLD.

1941432
1885296
1957821
1957821
1912745

CURRENT TO GRD.

 
1941431
1941431
1956233
1957821
1941431

RELAY TO VOLT. CIRCUIT

1941431
1941431
1957821
1956235
1941431

(CONTINUED ON PAGE TWO)

Delco-Remy SERVICE PARTS CATALOG

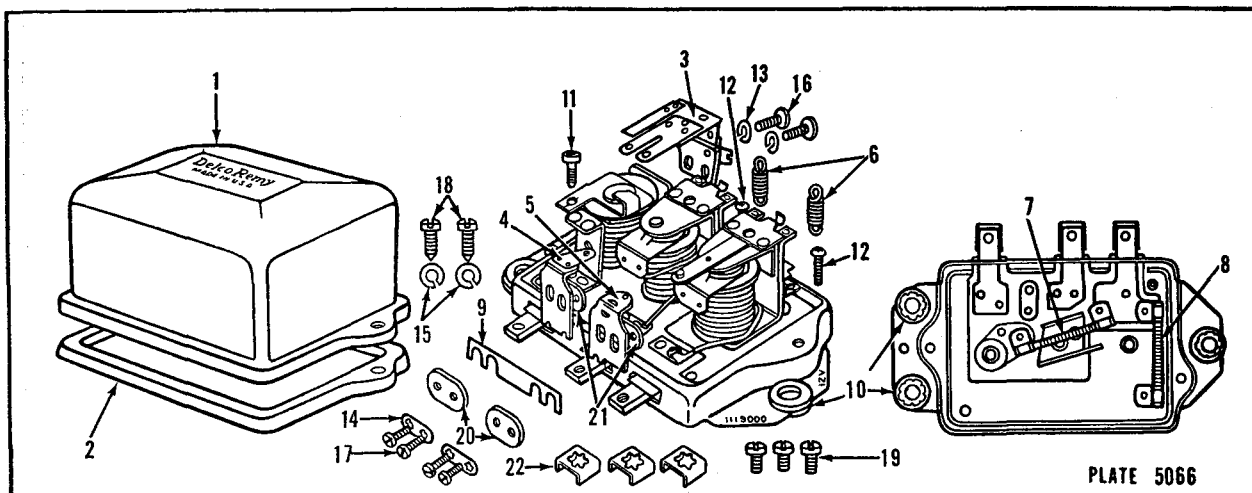

Illustrations are of Typical Parts only. For parts not illustrated or in columns see **Minor Parts Section**.

(CONTINUED FROM PAGE ONE)

Model	Cover	Gasket Cover	Armature — Relay	Contact — Current Reg.	Contact — Voltage Reg.	Spring	Resistor	Resistor	Connector	Grommet	Screw — Adj.	Screw — Adj.
	1	2	3	4	5	6	7	8	9	10	11	12
1119671.....	1941663	1931887	1942909	1878493	1939658	*	○	○	1939661	1879663	1912159	1944590
1119672.....		"	1943022	1878517	1957109	+	+	+	"	"	"	"
1119673.....		"	1942909	"	"	+	+	+	"	"	"	"
1119674.....		"	"	"	"	+	+	+	"	"	"	"
1119676.....	1961209	"	"	1878493	1939658	+	+	+	"	1914766	"	"
1119677.....	1941663	"	"	"	"	*	□	□	"	1879663	"	"
1119678.....	"	"	"	1878517	1957109	*	□	□	"	"	"	"
1119679.....	"	"	"	1878493	1939658	*	+	+	"	"	"	"
1119680.....	"	"	"	1878517	1957109	*	+	+	"	"	"	"
1119681.....	"	"	"	1878493	1939658	*	+	+	"	"	"	"
1119682.....		"	"	"	"	*	○	○	"	"	"	"

*Use 1912176 for Current Unit—use 1959948 for Voltage Unit.

*Use 1912176 for Current Unit—use 1939620 for Voltage Unit.

RESISTORS

○
+
□
△
*

CURRENT TO FLD.

1941432
1885296
1957821
1957821
1912745

CURRENT TO GRD.

1941431
1941431
1956233
1957821
1941431

RELAY TO VOLT. CIRCUIT

1941431
1941431
1957821
1941431
1956235

Revised to October 1, 1967

SERVICE PARTS CATALOG

MINOR PARTS SECTION


NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
14	LOCK WASHERS		
—	Lock Washer—Contact Attaching Screw -----	1878505	All
—	Lock Washer—Shock Mounting Screw -----	9421423	1119625-6-7; 51-3-7; 60-1-5; 70-1-6-7-8-9; 80
—	NUTS		
—	Nut—Shock Mounting Screw -----	124818	1119625-6-7; 51-3-7; 60-1-5; 70-1-7-8-9; 80
—	Nut—Shock Mounting Screw -----	453363	1119676
16	SCREWS		
17	Screw (& Lock Washer)—Armature Attach.—Relay -----	1924764	All
17	Screw—Contact Attaching—Current Regulator -----	1878516	All
17	Screw—Contact Attaching—Voltage Regulator -----	1943854	All
18	Screw—Cover -----	1943386	All
—	Screw—Ground -----	274577	All
—	Screw—Shock Mount Attaching -----	273485	1119625-6-7; 51-3-7; 60-1-5; 70-1-6-7-8-9; 80
19	Screw—Terminal -----	1914800	All
—	Screw (& Lock Washer)—External Volt Adjusting -----	1950276	1119636-7-8-9; 40-1-2-3-4-5-6-7; 52; 60-1-2-4-6-9; 77-8-9; 80-1-2
15	WASHERS		
20	Washer—Cupped—Cover Screw -----	1938522	1119636-7-8-9; 40-1-2-3-4-5-6-7-8-9; 50
21	Washer—Insul. (w/Bushings) Contact Attaching Screw—Current Regulator -----	1922599	All
—	Washer—Insul.—Contact Attaching Screw—Current Regulator -----	1878507	All
—	Washer—Insul. Contact ($\frac{3}{4}$ thk.) -----	1922996	All except 1119669; 70
—	Washer—Insul. Contact -----	1957462	1119669; 70-2-3-4-7-8-9; 80-1-2
—	Washer—Plain—Contact -----	1918848	1119636-7-8-9; 40-1-2-3-4-5-6-7-8-9; 50
—	MISCELLANEOUS		
—	BRACKET—Shock Mounting -----	1914863	1119676
—	CLAMP—Ground Screw -----	1855978	All except 1119649; 59; 70
—	CLAMP—Ground Screw -----	1914500	1119629; 30; 66; 72-3-4-6
22	CLAMP—Terminal -----	1878503	All except 1119649; 76
22	CLAMP—Terminal -----	1914801	1119649; 76
—	FUSE -----	1945171	1119659
—	FUSE -----	1945172	1119649
—	FUSE -----	1948701	1119629
—	INSULATOR—Contact Support—Voltage -----	1939659	All
—	LEAD—Ground -----	1933941	1119627; 51-7; 60-1-5; 76-7-8-9; 80-2
—	PACKAGE—Shock Mounting -----	1910966	1119625-6-7; 51-3-7; 60-1-5; 70-1-7-8-9; 80-2
—	RESISTOR (110 Ohm) Volt. Adjusting -----	1950267	1119636-7-8-9; 40-1-2-3-4-5-6-7; 52; 60-1-4-9; 79; 80-1-2
—	RESISTOR (56 Ohm) Volt. Adjusting -----	1950268	1119636-7-8-9; 40-1-2-3-4-5-6-7; 52; 60-1-4-9; 79; 80-1-2
—	RESISTOR (36 Ohm) Volt. Adjusting -----	1950269	1119636-7-8-9; 40-1-2-3-4-5-6-7; 52; 60-1-4-9; 79; 80-1-2
—	RESISTOR (20 Ohm) Volt. Adjusting -----	1950270	1119636-7-8-9; 40-1-2-3-4-5-6-7; 52; 60-1-4-9; 79; 80-1-2
—	RESISTOR (200 Ohm) Volt. Adjusting -----	1953362	1119662-6; 77-8
—	RESISTOR (600 Ohm) Volt. Adjusting -----	1960638	1119662-6; 77-8
—	RESISTOR (100 Ohm) Volt. Adjusting -----	1953364	1119662-6; 77-8
—	RESISTOR (300 Ohm) Volt. Adjusting -----	1953365	1119662-6; 77-8

RESISTOR CHART


Part No.	Value in ohms	Part No.	Value in ohms
1885296 -----	30	1910176 -----	130
1885300 -----	80	1910177 -----	150
1910173 -----	40	1910182 -----	500
1910174 -----	65	1912745 -----	45
1910175 -----	100		

 Parts not listed in this Catalog will not be sold separately.

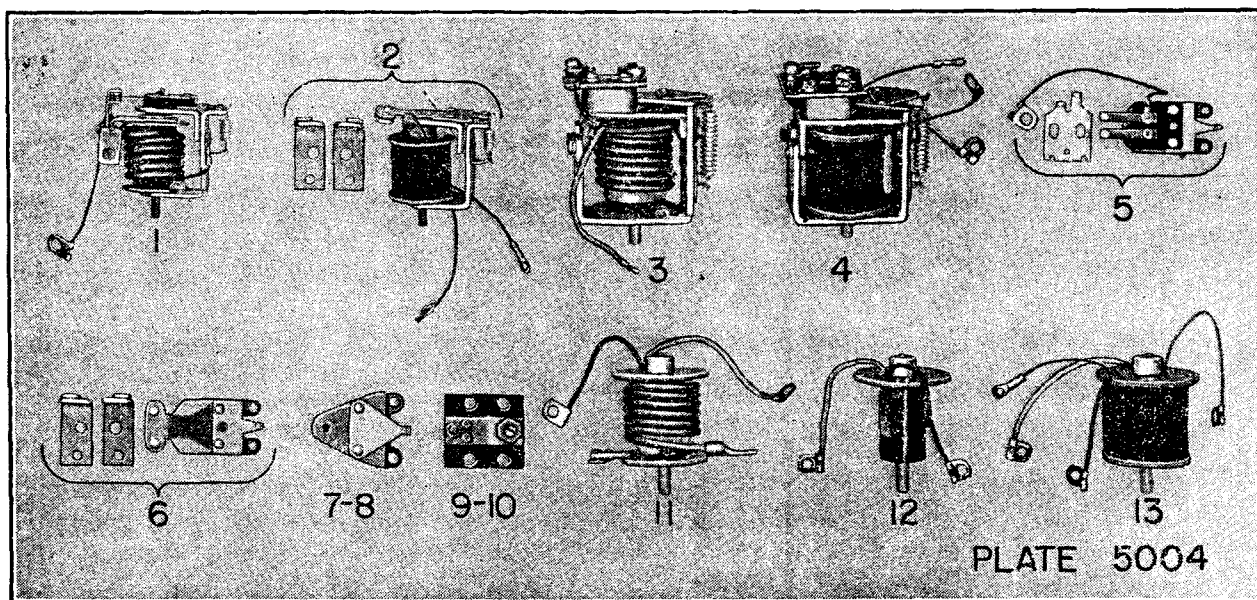

Illustrations are of Typical Parts only, which may vary in detail. For parts not illustrated see Minor Parts Section.

Model No.	Relay — Actuating	Relay — Circuit Breaker	Current Regulator Element	Voltage Regulator Element	Contact Set — Actuating Relay	Contact Set — Circuit Breaker Relay	Armature — Current Element	Armature — Voltage Element	Contact Bracket — Current Element	Contact Bracket — Voltage Element	Winding Assembly — Current Element	Shunt Winding — Current Element	Winding Assembly — Voltage Element
	1	2	3	4	5	6	7	8	9	10	11	12	13
1118501	1903948	1904231	1903942	1903932	1904230	1904232	1904933	1903940	1842784	1842784	1903943	1903944	1903933
1118503	1904385	1904389	"	1904383	"	"	"	"	"	"	"	"	1904384
1118509	1907841	1903981	1907887	1907847	"	"	1918114	1916895	1924779	1924779	1907888	"	1907848
1118510	1907893	1907890	"	1907885	"	"	"	"	"	"	"	1907889	1907886
1118512	1904385	1904389	1907863	1906350	"	"	"	"	"	"	1903943	1903944	1904384
1118513	1907893	1907890	1907897	1907885	"	"	"	"	"	"	1907898	1907889	1907886
1118514	1907901	"	1907904	"	"	"	"	"	"	"	1907905	"	"
1118515	1907841	1903981	1908003	1907847	"	"	"	"	"	"	1908004	1907889	1907848
1118516	1907893	1907890	1907887	1907885	"	"	"	"	"	"	1907888	"	1907886
1118517	1904385	1904389	1903942	1904383	"	"	1904933	1903940	1842784	1842784	1903943	1903944	1904384
1118519	1903948	1903981	1907863	1907847	"	"	1918114	1916895	1924779	1924779	"	"	1907848
1118520	1908303	1907269	1908469	1906350	"	1903851	"	"	"	"	1908470	"	1904384
1118521	1907841	1903981	1907897	1907847	"	1904232	"	"	"	"	1907898	"	1907848
1118522	1907893	1907890	"	1907885	"	"	"	"	"	"	"	1907889	1907886
1118523	1907901	"	1907904	"	"	"	"	"	"	"	1907905	"	"
1118524	1908303	1907269	1910083	1919818	"	1903851	1904933	1903940	1842784	1842784	1908470	1903944	1904384
1118526	1907841	1903981	1907887	1907847	"	1904232	1918114	1916895	1924779	1924779	1907888	"	1907848
1118527	1904385	1904389	1907863	1906350	"	"	"	"	"	"	1903943	"	1904384
1118528	1907893	1907890	1907897	1907885	"	"	"	"	"	"	1907898	1907889	1907886
1118529	"	"	1907887	"	"	"	"	"	"	"	1907888	"	"
1118530	1907901	"	1907904	"	"	"	"	"	"	"	1907905	"	"
1118533	1907893	"	1911421	1911420	"	"	1904933	1903940	1842784	1842784	1911422	1911423	"
1118535	"	"	1907897	1907885	"	"	1918114	1916895	1924779	1924779	1907898	1907889	"
1118538	1911591	1907269	1907863	1906350	"	1903851	"	"	"	"	1903943	1903944	1904384
1118540	1907893	1907890	1911421	1911420	"	1904232	1904933	1903940	1842784	1842784	1911422	1911423	1907886
1118543	"	"	1907897	1907885	"	"	1918114	1916895	1924779	1924779	1907898	1907889	"

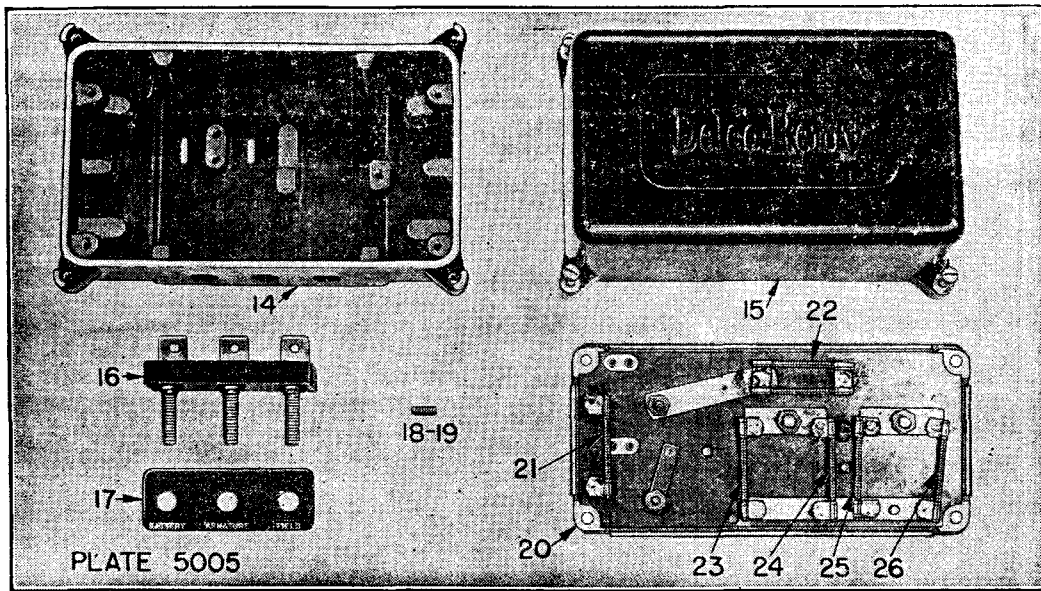 

Illustrations are of Typical Parts only, which may vary in detail. For parts not illustrated see Minor Parts Section.

Model No.	Base	Cover	Terminal Package	Panel — Terminal Insulator	Contact Screw — Current	Contact Screw — Voltage	Panel Only — Mounting	Resistor	Resistor (Two Req'd.)	Resistor	Resistor	Resistor	Resistor
	14	15	16	17	18	19	20	21	22	23	24	25	26
1118501	1903907	1904001	*1903908	1903913	1861998	1861998	1903917	1910175	1910178	1910178	1910178	1910180	1910180
1118503	"	"	"	"	"	"	"	1910183	1910173	1910175	1910175	"	"
1118509	1907830	"	"	"	1858692	1858692	1907840	1910175	1910178	1910181	1910181	1910181	1910181
1118510	"	"	"	"	"	"	"	1910178	1910179	1910182	1910182	"	"
1118512	1903907	"	"	"	"	"	1903917	1910183	1910173	1910175	1910175	1910180	1910180
1118513	1907830	"	"	"	"	"	1907840	1910178	1910179	1910180	1910180	1910182	1910182
1118514	"	"	"	"	"	"	"	"	"	1910182	1910182	"	"
1118515	"	"	"	"	"	"	"	1910175	1910178	1910178	1910178	1910180	1910180
1118516	"	"	"	"	"	"	"	1910178	1910179	1910182	1910182	1910181	1910181
1118517	1903907	"	"	"	1861998	1861998	1903917	1910183	1910173	1910175	1910175	1910180	1910180
1118519	1907830	"	"	"	1858692	1858692	1907840	1910175	1910178	1910179	1910179	"	"
1118520	1903907	"	"	"	"	"	1907242	1910183	1910173	1910174	1910174	1910175	1910175
1118521	1907830	"	"	"	"	"	1907840	1910175	1910178	1910178	1910178	1910180	1910180
1118522	"	"	"	"	"	"	"	1910178	1910179	1910180	1910180	1910182	1910182
1118523	"	"	"	"	"	"	"	"	"	1910182	1910182	"	"
1118524	1903907	"	"	"	1861998	1861998	1907242	1910183	1910173	1910174	1910174	1910175	1910175
1118526	1907830	"	"	"	1858692	1858692	1907840	1910175	1910178	1910181	1910181	1910181	1910181
1118527	1903907	"	"	"	"	"	1903917	1910183	1910173	1910175	1910175	1910180	1910180
1118528	1907830	"	"	"	"	"	1907840	1910178	1910179	1910180	1910180	1910182	1910182
1118529	"	"	"	"	"	"	"	"	"	1910182	1910182	1910181	1910181
1118530	"	"	"	"	"	"	"	"	"	"	"	1910182	1910182
1118533	"	"	"	"	1861998	1861998	"	"	"	1910181	1910181	1910181	1910181
1118535	"	"	"	"	1858692	1858692	"	"	"	1910180	1910180	1910182	1910182
1118538	1903907	"	"	"	"	"	1907242	1910183	1910173	1910175	1910175	1910180	1910180
1118540	1907830	"	"	"	1861998	1861998	1907840	1910178	1910179	1910181	1910181	1910181	1910181
1118543	"	"	"	"	1858692	1858692	"	"	"	1910180	1910180	1910182	1910182

*For parts see Minor Parts Section.

Revised to May 1, 1968

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Armature Adjustment Locking Screw-----	453844	All
Lock Washer—Armature Attaching Screw—Relay (#4)-----	9421421	All
Lock Washer—Armature Attaching Screw—Relay (#6)-----	456413	All
Lock Washer—Armature Attaching Screw—Regulator-----	453844	All
Lock Washer—Condenser Attaching Screw-----	1962276	1118501-3-9-10-12-13-14
Lock Washer—Contact Bracket Screw—Actuating Relay-----	9421421	All
Lock Washer—Contact Bracket Screw—Circuit Breaker Relay-----	121752	All
Lock Washer—Contact Bracket Screw—Regulator-----	453844	All
Lock Washer—Contact Screw Lock Nut—Regulator-----	138537	All
Lock Washer—Contact Bracket Support Screw—Regulator-----	453844	All
Lock Washer—Contact Terminal Screw—Regulator-----	453844	All
Lock Washer—Contact Terminal Screw—Regulator—Shakeproof-----	138530	All
Lock Washer—Cover Attaching Screw-----	1962276	All
Lock Washer—Ground Screw-----	1962276	1118501-3-7-8-11-17; 20-4-7; 38
Lock Washer—Lead Attaching Screw—To Circuit Breaker Relay-----	1962276	1118501-3-9-10-12-13-14-15-16-17; 20-1-2-3-4-6-7-8-9; 30-3-5-8; 40-3
Lock Washer—Lead Attaching Nut—To Regulator Contact Terminal-----	453844	All
Lock Washer—Lead Attaching Screw—To Mounting Panel-----	1962276	All
Lock Washer—Lead Attaching Screw—Actuating Relay Armature to Contact-----	131093	All
Lock Washer—Lead Screw—To Terminal Block-----	1962276	All
Lock Washer—Mounting Bracket to Base Screw-----	121801	All
Lock Washer—Mounting Panel Attaching Screw-----	1962276	All
Lock Washer—Regulator Element Mounting Nut-----	138537	All
Lock Washer—Relay Mounting Nut-----	1962276	All
Lock Washer—Return Circuit Terminal Stud-----	453435	1118509-10-13-14-15-16-19; 21-2-3-6-8-9; 30-3-5; 40-3
Lock Washer—Terminal Nut-----	9421424	All
NUTS		
Nut—Armature Attaching Screw—Relay (4-40)-----	134524	All
Nut—Armature Stop—Circuit Breaker Relay-----	427254	1118520-4; 38
Nut—Contact Screw Lock—Regulator-----	1839110	All
Nut—Contact Terminal Screw (Regulator)-----	30986	All
Nut—Lead Attaching Screw—To Circuit Breaker Relay-----	453433	All
Nut—Lead Attaching—To Regulator Contact Terminal-----	30986	All
Nut—Regulator Element Mounting-----	29991	All
Nut—Relay Mounting-----	453433	All
Nut—Return Circuit Terminal Stud-----	453433	1118509-10-13-14-15-16-19; 21-2-3-6-8-9; 30-3-5; 40-3
Nut—Terminal Stud-----	120368	All
SCREWS		
Screw—Armature Adjustment Locking—Regulator-----	1916015	All
Screw—Armature Attaching—Relay (4-40x $\frac{1}{8}$)-----	132631	All
Screw—Armature Attaching—Relay (6-32x $\frac{1}{8}$)-----	1883009	All
Screw—Armature Attaching—Regulator-----	1916016	All
Screw—Condenser Attaching-----	453319	1118501-3
Screw—Contact Bracket Attaching—Actuating Relay-----	1878516	All
Screw—Contact Bracket Attaching—Circuit Breaker Relay-----	453418	All
Screw—Contact Bracket Attaching—Regulator-----	1916016	All
Screw—Contact Bracket Support Attaching-----	1916016	All
Screw—Contact Terminal—Regulator Element-----	22820	1118501-3-9-10-12-13-14-15-16-17-19; 20-1-2-3-4-6-7-8-9; 30-3-5-8; 40-3
Screw—Cover Attaching-----	1904003	All
Screw—Ground-----	1949653	1118501-3-7-8-11-17; 20-4-7; 38
Screw—Lead Attaching—To Circuit Breaker Relay-----	1914800	1118501-3-9-10-12-13-14-15-16-17-19; 20-1-2-3-4-6-7-8-9; 30-3-5-8; 40-3
Screw—Lead Attaching—Actuating Relay Armature Lead to Contact-----	453364	All
Screw—Lead Attaching—To Mounting Panel (10-32x $\frac{1}{8}$)-----	453319	All
Screw—Lead Attaching—To Mounting Panel (10-32x $\frac{3}{8}$)-----	1914800	1118509-10-12-13-14-15-16-19; 20-1-2-3-6-7-8-9; 30-3-5; 40-3

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION


Name	Part No.	Used on Models
SCREWS—Continued		
Screw—Lead Attaching—To Mounting Panel (10-32x $\frac{1}{2}$)-----	453464	1118501-3-12-17-19; 21-4-7; 38
Screw—Lead Attaching—To Mounting Panel (10-32x $\frac{3}{8}$)-----	9416183	1118509-10-13-14-15-16-19; 22-3-6-8-9; 30-3-5; 40-3
Screw—Lead to Terminal Block-----	453463	All
Screw—Mounting Bracket to Base-----	453464	All
Screw—Mounting Panel Attaching-----	453464	All
WASHERS		
Washer—Armature Adjustment Locking Screw—Regulator-----	810794	All
Washer—Armature Attaching Screw—Regulator-----	810794	All
Washer—Armature Attach. Screw—Relay (for #6 screw)-----	1918848	All
Washer—(2 Hole)—Armature Attaching Screw—Relay-----	1926882	All
Washer—Contact Bracket Attaching Screw—Actuating Relay-----	820372	All
Washer—Contact Bracket Attaching Screw—Regulator-----	810794	All
Washer—Ground Screw-----	1902988	1118501-3-7-8-11-17; 20-4-7
Washer—Ins.—Mounting Panel Attaching Screw-----	1962157	1118509-10-13-14-15-16-19; 21-2-3-6-8-9; 30-3-5; 40-3
Washer—Ins.—Return Circuit Terminal Stud-----	1907836	1118509-10-13-14-15-16-19; 21-2-3-6-8-9; 30-3-5; 40-3
Washer—Lead Attaching Screw—To Mounting Panel-----	1856056	All
Washer—Mounting Panel Screw-----	1902988	All
Washer—Plain—Return Circuit Terminal Stud-----	1856056	1118509-10-13-14-15-16-19; 21-2-3-6-8-9; 30-3-5; 40-3
Washer—Terminal Stud-----	810492	All
MISCELLANEOUS		
BRACKET—Regulator Mounting-----	1904351	1118509-10-12-13-14-15-16-17-19; 20-1-2- 3-4; 33-5-8
BRACKET—Regulator Mounting-----	1904035	1118503
BRACKET—Shock Mounting—Regulator-----	1912201	1118526-7-8-9; 30; 40-3
BUSHING—Ins.—Actuating Relay Contact Attaching Screw-----	1878506	1118501-3-9-10-12-13-14-15-16-17-19; 20-1-2-3-4-6-7-8-9; 30-5-8; 40-3
BUSHING—Ins.—Mounting Panel Attaching Screw-----	1907849	1118509-10-13-14-15-16-19; 21-2-3-6-8-9; 30-3-5; 40-3
COLLAR—Space—Mounting Bracket-----	1910431	1118526-7-8-9; 30; 40
CONDENSER—To Armature Terminal-----	1904040	1118501-3
CONDENSER—To Battery Terminal-----	1904046	1118501-3
CONDENSER—To Field Terminal-----	1906459	1118501-3
CONNECTOR—Strap—Regulator Element Mounting Nut ($1\frac{1}{4}$ long)-----	1903931	All
CONNECTOR—Strap—Regulator Element Mounting Nut ($1\frac{1}{4}$ long)-----	1925507	All
GASKET—Cover-----	1904032	All
GASKET—Terminal Assembly-----	1911229	All
INSULATOR—Actuating Relay Contact-----	1903980	All
INSULATOR—Regulator Winding ($\frac{1}{16}$ -I.D.)-----	37330	All
INSULATOR—Regulator Winding ($\frac{3}{32}$ -I.D.)-----	1922332	All
INSULATOR—Regulator Winding ($\frac{1}{4}$ -I.D.)-----	1925907	1118520-4
INSULATOR—Regulator Contact Support-----	1905927	All
INSULATOR—Terminal Assembly-----	1911230	All
LEAD—To Armature Terminal-----	1907790	1118509-10-12-13-14-15-16-17-19; 20-1-2- 3-4-6-7-8-9; 30-3-5-8; 40-3
LEAD—To Battery Terminal-----	1907793	1118509-10-12-13-14-15-16-17-19; 20-1-2- 3-4-6-7-8-9; 30-3-5-8; 40-3
LEAD—To Field Terminal-----	1903914	All
LEAD—(No. 18 Wire 1 1/16 long)—Volt. Reg. to Panel Rivet	1904000	All
Seal CUP-----	1904033	All
SPACER—Lead Attaching Screw—To Mounting Panel-----	1907837	1118509-10-13-14-15-16-19; 21-2-3-6-8-9; 30-3-5; 40-3
SPRING—Armature—Relay-----	1916982	All
SPRING—Armature—Current Element-----	1916091	All
SPRING—Armature—Voltage Element-----	1916091	All
STUD & LEAD Assembly—Return Circuit-----	1907831	1118509-10-13-14-15-16-19; 21-2-3-6-8-9; 30-3-5; 40-3
SUPPORT—Contact Bracket—Current Element-----	1843160	All
SUPPORT—Contact Bracket—Voltage Element-----	1843160	All
TERMINAL Assembly (Stud & Connector)-----	1903910	All

Delco-Remy

SERVICE PARTS CATALOG


REGULATOR—Group 7-A
Models 1118421; 550 to 574; 9000596
Page 1

 Revised to August 15, 1969

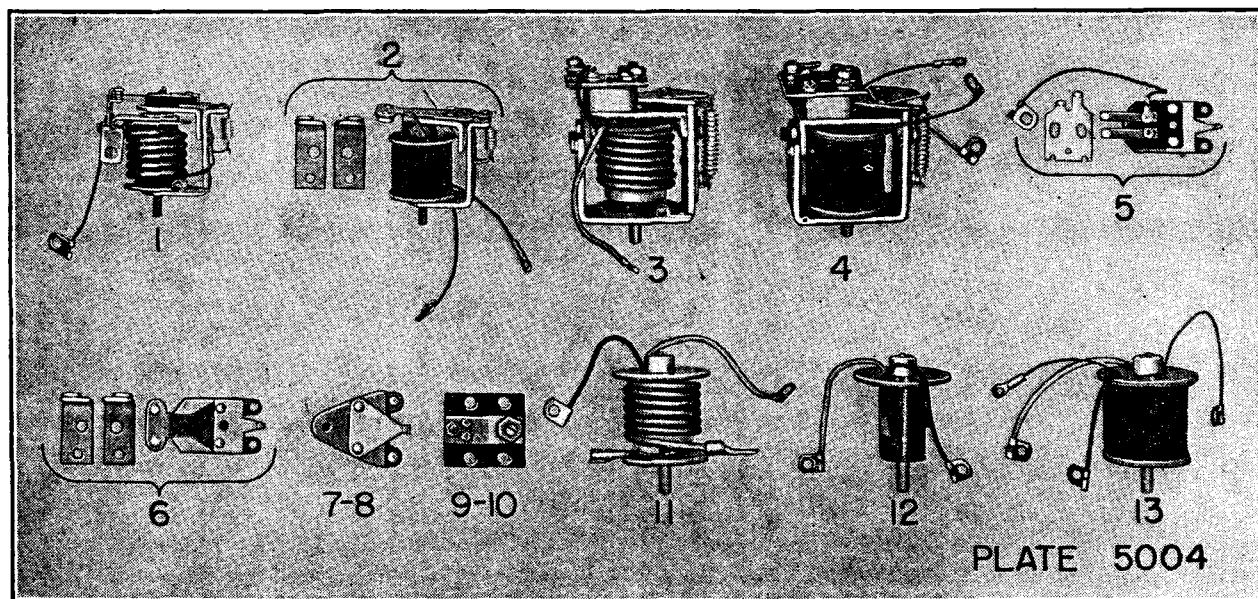

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Relay — Actuating	Relay — Circuit Breaker	Current Regulator Element	Voltage Regulator Element	Contact Set — Actuating Relay	Contact Set — Circuit Breaker Relay	Armature — Current Element	Armature — Voltage Element	Contact Bracket — Current Element	Contact Bracket — Voltage Element	Winding Assembly — Current Element	Shunt Winding — Current Element	Winding Assembly — Voltage Element
	1	2	3	4	5	6	7	8	9	10	11	12	13
1118421	1940591	1917720	1934672	1944156	1904230	1904232	1931435	"	1924779	1924779	1922744	1921494	1940106
1118550			1946084	1932598			"	1932599	1924829	1924829	1946255	"	1932600
1118554	1919865	1907269	1940145	1940144	1904230	1903851	"	1927719	1924779	1924779	1940384	1940627	1938927
1118555	1940591	1917720	1940592	1940593	"	1904232	1932602	1932599	1924829	1924829	1940621	1924494	1940106
1118556	1917814	1917816	1940526	1932598	"	"	"	"	"	"	1924493	"	1932600
1118557	1917826	"	1940497	1940498	"	"	1932604	"	"	"	1922744	"	1935068
1118562	1940591	1917720	1934672	1944156	"	"	1931435	1927719	1924779	1924779	"	"	1940106
1118563	1935017	"	1940592	1944243	"	"	1932602	1932599	1924829	1924829	1940621	"	1944244
1118567	1940591	"	1947622	1944156	"	"	1931435	1927719	1924779	1924779	1922744	"	1940106
1118573	1917814	1917816	1932601	1932598	"	1916943	1932602	1932599	1924829	1924829	1928978	"	1932600
1118574	1940591	1917720	1940592	1940593	"	"	"	"	"	1843160	1940621	"	1940106
9000596	1963063	"	1963073		"	1940232	"		1843160		1963074	1963075	

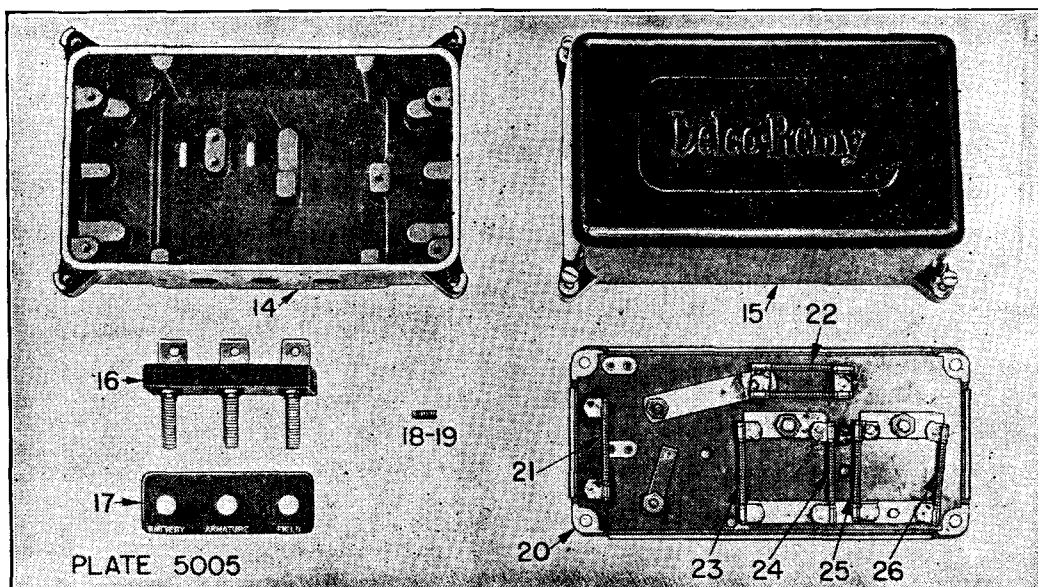 

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Base	Cover	Terminal Package	Panel — Terminal Insulator	Contact Screw — Current	Contact Screw — Voltage	Panel Only — Mounting	Resistor	Resistor (Two Req'd.)	Resistor	Resistor	Resistor	Resistor
	14	15	16	17	18	19	20	21	22	23	24	25	26
1118421	1907830	1904001	1903908	1903913	1924780	1924780	1918119		1910178	1910179	1910179	1910181	1910181
1118550	1922558	"	"	"	1916600	1916600	1946087		1910179	1910181	1910181	"	"
1118554	1903907	"	"	"	1924780	1924780	1916467	1910183	1910173	1910174	1910174	1910175	1910175
1118555	1907830	"	"	"	1916600	1916600	1918119	1910175	1910178	1910179	1910179	1910180	1910180
1118556	1922558	"	"	"	"	"	"	1910177	"	1910180	1910180	1910182	1910182
1118557	1935067	"	"	"	"	"	"	"	1910179	1910182	1910182	"	"
1118562	1907830	"	"	"	1924780	1924780	"	1910175	1910178	1910179	1910179	1910181	1910181
1118563	1937098	"	"	"	1916600	1916600	1920225	"	"	"	"	1910180	1910180
1118567	1907830	"	"	"	1924780	1924780	1918119	"	"	1910175	1910175	1910181	1910181
1118573	1922558	"	"	"	1916600	1916600	"	1910177	1910179	1910181	1910181	"	"
1118574	1907830	"	"	"	"	"	"	1910175	1910178	1910179	1910179	1910180	1910180
9000596	1963035	1963083			"		1963068						

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Armature Adjustment Locking Screw	453844	1118554
Lock Washer—Armature Attaching Screw—Relay (#6)	456413	1118421; 554-5-6-7; 62-3-7; 73-4; 9000596
Lock Washer—Armature Attaching Screw—Regulator	453844	1118421; 550-4-5-6-7; 62-3-7; 73-4; 9000596
Lock Washer—Contact Bracket Screw—Actuating Relay	9421421	1118421; 554-5-6-7; 62-3-7; 73-4
Lock Washer—Contact Bracket Screw—Circuit Breaker Relay	121752	1118421; 554-5-6-7; 62-3-7; 73-4; 9000596
Lock Washer—Contact Bracket Screw—Regulator	453844	1118421; 550-4-5-6-7; 62-3-7; 73-4; 9000596
Lock Washer—Contact Bracket Support Screw—Regulator	453844	1118421; 550-4-5-6-7; 62-3-7; 73-4; 9000596
Lock Washer—Contact Terminal Screw Regulator	453844	1118554-5-6-7
Lock Washer—Cover Attaching Screw	1962276	1118421; 550-4-5-6-7; 62-3-7; 73-4
Lock Washer—Cover Plate Attaching Screw	121752	9000596
Lock Washer—Current Regulator Resistor Clamp Attach.	453844	111855-7
Lock Washer—Ground Screw	1962276	1118554
Lock Washer—Junction Panel Attaching	453844	1118557; 63
Lock Washer—Lead Attach. To Act. Relay Armature	453844	1118573-4
Lock Washer—Lead Attaching—Actuating Relay Armature	456413	1118421; 555-6-7; 62-3
Lock Washer—Lead Attaching Screw—Actuating Relay—Armature To Contact	9421421	1118421; 555-6-7; 63-3-7; 73-4; 9000596
Lock Washer—Lead Attaching—To Clip On Mtg. Panel	453844	1118421; 555; 62-7
Lock Washer—Lead Attaching To Paralleling Relay Screw	453844	1118557; 63
Lock Washer—Lead Att. Screw—To Circuit Breaker Relay	1962276	1118421; 554-5-6-7; 62-3-7; 73-4; 9000596
Lock Washer—Lead Att. Nut—To Regulator Contact Term.	453844	1118421; 554-5-6-7; 62-3-7; 73-4
Lock Washer—Lead Attaching Screw—To Mounting Panel	1962276	1118421; 550-4-5-6-7; 62-3-7; 73-4
Lock Washer—Rectifier Lead Attaching Screw	1962276	1118550
Lock Washer—Lead Screw—To Terminal Block	1962276	1118421; 550-4-5-6-7; 62-3-7; 73-4; 9000596
Lock Washer—Mounting Bracket to Base Screw	121801	1118550-4-5-6-7; 63; 74
Lock Washer—Mounting Panel Attaching	453844	9000596
Lock Washer—Mounting Panel Attaching Screw	1962276	1118421; 550-4-5-6-7; 62-3-7; 73-4
Lock Washer—Paralleling Attaching Screw	1962276	1118557; 63
Lock Washer—Rectifier Bracket Attaching Screw	1962276	1118550
Lock Washer—Rectifier Mounting Plate Screw	1962276	1118550
Lock Washer—Regulator Element Mounting Nut	138537	1118421; 550-4-5-6-7; 62-3-7; 73-4
Lock Washer—Relay Mounting Nut	1962276	1118421; 554-5-6-7; 62-3-7; 73-4; 9000596
Lock Washer—Return Circuit Terminal Stud	453435	1118421; 550-5-6-7; 62-3-7; 73
Lock Washer—Shock Mount Attaching	453704	1118421
Lock Washer—Shock Mount Attaching Screw	121801	1118421; 562-7; 73
Lock Washer—Terminal Nut	9421424	1118421; 550-4-5-6-7; 62-3-7; 73-4
Lock Washer—Terminal Nut—in Base	273588	9000596
Lock Washer—Transistor Reg. Attaching Screw	453435	9000596
NUTS		
Nut—Armature Attaching Screw Act. Relay	134530	9000596
Nut—Contact Screw Lock—Regulator	1916080	1118421; 550-4-5-6-7; 62-3-7; 73-4; 9000596
Nut—Cover Plate Attaching Screw	120622	9000596
Nut—Lead Attaching—To Actuating Relay Armature	445100	1118421; 554
Nut—Lead Attaching—To Actuating Relay Arm. Screw	134530	1118556-6-7; 62-3-7; 9000596
Nut—Receiver Attaching Screw	453433	1118550
Nut—Relay Mounting	453433	1118421; 554-5-6-7; 62-3-7; 73-4; 9000596
Nut—Regulator Element Mounting	29991	1118421; 550-4-5-6-7; 62-3-7; 73-4
Nut—Regulator Element Mounting	1963079	9000596
Nut—Return Circuit Terminal Stud	453433	1118421; 550-5; 62-3-7; 73-4
Nut—Shock Mtg. Attaching	453786	1118421
Nut—Terminal Stud	120368	1118421; 550-4-5-6-7; 62-3-7; 73-4
Nut—Terminal Stud	453994	9000596
SCREWS		
Screw—Armature Adjustment Locking Screw	22820	1118554
Screw—Armature Adjusting Plate	1926972	1118421; 550-4-5-6-7; 62-3-7; 73-4; 9000596
Screw—Armature Attaching—Relay (6-32x $\frac{5}{16}$)	1883009	1118421; 554-5-6-7; 62-3-7; 73-4; 9000596
Screw—Armature Attaching—Regulator	453977	9000596
Screw—Armature Attaching—Regulator	1916016	1118421; 550-4-5-6-7; 62-3-7; 73-4
Screw—Contact Bracket Attaching—Actuating Relay	1878516	1118421; 554-5-6-7; 62-3-7; 73-4
Screw—Contact Bracket Attaching—Circuit Breaker Relay	453418	1118421; 554-5-6-7; 62-3-7; 73-4; 9000596
Screw—Contact Bracket Attaching—Regulator (8-36x $\frac{3}{8}$)	1916016	1118421; 554-5-6-7; 62-3-7; 74; 9000596
Screw—Contact Bracket Attaching—Regulator (8-32x $\frac{3}{8}$)	132745	1118550; 62-3; 73-4
Screw—Contact Bracket Attach.—Act. Relay	453480	9000596
Screw—Contact Bracket Support Attaching	1916016	1118421; 550-4-5-6-7; 62-3-7; 73-4; 9000596
Screw—Contact & Resistor Attach.—Regulator	1916016	1118573-4; 9000596
Screw—Contact Terminal—Regulator Element	22820	1118554
Screw—Cover Attaching	1916094	1118421; 550-5-6-7; 62-3-7; 73-4
Screw—Cover Plate Attaching	453461	9000596

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
SCREWS—(Continued)		
Screw—Current Regulator Resistor Clamp Attaching -----	453418	1118557
Screw—Ground -----	1949653	1118554
Screw—Junction Panel Attaching -----	22820	1118557; 63
Screw—Lead Attaching—Actuating Relay Armature -----	1883009	1118421; 555-6-7; 62-3-7; 73
Screw—Lead Attaching—Actuating Relay Armature Lead To Contact -----	453364	1118421; 554-5-6-7; 62-3-7; 73-4; 9000596
Screw—Lead Attaching—Terminal Block -----	1914800	9000596
Screw—Lead Attaching—To Actuating Relay Armature -----	453418	1118573-4
Screw—Lead Attaching—To Actuating Relay Armature -----	453460	1118554
Screw—Lead Attaching—To Circuit Breaker Relay -----	453468	1118421; 554-5-6-7; 62-3-7; 73-4; 9000596
Screw—Lead Attaching To Clip On Mounting Panel -----	454408	1118421; 555-6-7; 62-7
Screw—Lead Attaching To Mounting Panel (10-32x $\frac{1}{4}$) -----	132900	1118421; 550-5-6; 62-7; 73-4
Screw—Lead Attaching—To Mounting Panel (10-32x $\frac{3}{8}$) -----	1914800	1118421; 550-4-5-6-7; 62-3-7; 73-4
Screw—Lead Attaching to Mounting Panel (10-32x $\frac{3}{8}$) -----	9416183	1118557
Screw—Lead Attach. to Paralleling Relay -----	453418	1118563
Screw—Lead Attaching to Reg. Contact -----	1916016	1118573-4
Screw—Lead Attaching—To Regulator Contact Terminal -----	453304	1118421; 554-5-6-7; 67; 73-4
Screw—Lead To Terminal Block -----	453463	1118421; 550-4-5-6-7; 62-3-7; 73-4
Screw—Mounting Bracket—To Base -----	453468	1118550-4-5-6-7; 63-7; 74
Screw—Mounting Panel Attaching -----	453461	9000596
Screw—Mounting Panel Attaching -----	453468	1118421; 550-4-5-6; 62-3-7; 73-4
Screw—Mounting Panel Attaching -----	9416183	1118557; 63
Screw—Paralleling Relay Attaching -----	453463	1118557; 63
Screw—Rectifier Bracket Attaching -----	453661	1118550
Screw—Rectifier Lead Attaching -----	1914800	1118550
Screw—Rectifier Mounting Plate -----	453661	1118550
Screw—Resistor Attaching -----	22820	1118550-4-5-6
Screw—Resistor Attaching -----	453418	1118556-7
Screw—Resistor—Clamp Attaching -----	1916016	1118421
Screw—Shock Mount Attaching -----	453468	1118421; 562; 73
Screw—Spring Adjusting -----	1926972	1118554
Screw—Transistor Reg. Attaching -----	454443	9000596
WASHERS		
Washer—Armature Adjustment Locking Screw—Regulator -----	810794	1118554
Washer—Armature Attaching Screw—Regulator -----	810794	1118421; 550-4-5-6-7; 62-3-7; 73-4; 9000596
Washer—(2 Hole)—Armature Attaching Screw—Relay -----	1926882	1118421; 554-5-6-7; 62-3-7; 73-4; 9000596
Washer—Contact Bracket Attach. Screw Act. Relay -----	820372	9000596
Washer—Contact Bracket Attach. Screw—Actuating Relay -----	1856056	1118554-5-6-7; 62-3-7
Washer—Contact Bracket Attaching Screw—Regulator -----	810794	1118421; 554-5-6-7; 62-3-7; 73-4; 9000596
Washer—Contact Bracket Support Att. Screw Regulator -----	815540	1118421; 554-5-6; 62-3-7
Washer—Contact & Resistor Attaching Screw -----	810794	9000596
Washer—Contact Bracket Support Attach. Screw—Regulator -----	810794	1118421; 573-4; 9000596
Washer—Current Regular Resistor Clamp Attaching -----	810794	1118550-7
Washer—Ground Screw -----	1913784	1118554
Washer—Ins.—Mounting Panel Attaching Screw -----	1916466	1118421; 550-5-6-7; 62-3-7; 73-4
Washer—Ins.—Return Circuit Terminal Stud -----	1907836	1118550-5-6-7 62-3-7; 73-4
Washer—Junction Panel Attaching -----	810794	1118557; 63
Washer—Lead Attaching Screw—To Mounting Panel -----	1856056	1118421; 550-5-6-7; 62-3-7; 73-4
Washer—Mounting Panel Attaching -----	1900466	9000596
Washer—Plain—Contact Attaching—Actuating Relay -----	820372	1118421; 554-5-6-7; 62-3-7; 73-4
Washer—Plain—Mounting Panel Attaching Screw -----	807295	1118421; 550-4-5-6-7; 62-3-7; 73-4
Washer—Plain—Return Circuit Terminal Stud -----	1856056	1118421; 550-5-6-7; 62-3-7; 73-4
Washer—Rectifier Mounting Plate Screw -----	1856056	1118550
Washer—Regulator Mounting Nut -----	1914592	1118550-6
Washer—Relay Mounting Nut—Plain -----	1856056	1118421; 573-4; 9000596
Washer—Space—Under Junction Panel -----	815540	1118557; 63
Washer—Terminal Stud -----	810492	1118421; 550-5-6-7; 62-3-7; 73-4
Washer—Terminal Stud -----	810492	9000596
MISCELLANEOUS		
ARMATURE—Circuit Breaker Relay -----	1916975	1118573-4; 9000596
BRACKET—Contact Support—Reg. -----	1843160	1118421; 573-4
BRACKET—Regulator Mounting -----	1916097	1118550-4-5-6-7; 63-7; 74
BRACKET—Shock Mount (2 holes) -----	1916097	1118421
BRACKET—Shock Mount (4 Holes) -----	1926213	1118421
BUSHING—Contact Nut Insulation -----	1941972	1118550; 62-3-7; 73-4
BUSHING—Contact Support—Reg. -----	1941972	1118421; 573
BUSHING—Rectifier Bracket Attaching Screw -----	1873673	1118550

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION


Name	Part No.	Used on Models
MISCELLANEOUS—(Continued)		
BRACKET—Rectifier Mounting Plate	1946088	1118550
CIRCUIT BREAKER—Current Regulator Element	1918104	1118421; 555-6-7; 62-3-7; 73-4; 96
CLAMP—Resistor—Attaching To Regulator	1904865	1118421; 550-4-5-6-7; 62-3-7; 73-4; 9000596
CLIP—Lead Attaching To Regulator	200242	1118421; 550-5-6-7; 62-3-7; 73
CLIP—Terminal Resistor	200242	1118421; 554-5; 73-4
CONNECTOR—Strap—Regulator Element Mounting Nut (1 3/4 long)	1925507	1118421; 550-4-5-6-7; 63-7
CONNECTOR—Under Reg. Mtg. Nut	1903910	1118573-4
CONTACT ASSEM.—Current Regulator	1924829	9000596
GASKET—Cover	1904032	1118421; 550-4-5-6; 62-7; 73-4
GASKET—Cover	1932345	1118557; 63
GASKET—Cover Plate	1963082	9000596
GASKET—Housing—Transistor Reg.	1963081	9000596
GASKET—Terminal Assembly	1911229	1118421; 550-4-5-6-7; 62-3-7; 73-4
INSULATOR—Actuating Relay Contact	1903980	1118421; 554-5-6-7; 62-3-7; 73-4; 9000596
INSULATOR—Actuating Relay Contact	1920205	1118421; 554-5-6-7; 62-3-7; 73-4; 9000596
INSULATOR—Regulator Winding (11-I.D.)	1925908	1118421; 554-5-6-7; 62-3-7; 73-4; 9000596
INSULATOR—Regulator Contact Support	1905927	1118421; 550-4-5-6-7; 62-3-7; 73-4; 9000596
INSULATOR—Regulator Contact—(Underside)	1941971	1118550; 73-4
INSULATOR—Return Circuit Terminal	1907836	1118421
INSULATOR—Return Circuit Terminal	1922377	1118550-5-6-7; 63; 73
INSULATOR—Terminal Assembly	1911230	1118421; 550-4-5-6-7; 62-3-7; 73-4
INSULATOR—Terminal—Plain	1963037	9000596
INSULATOR—Terminal (with Bushings & Rings)	1963038	9000596
INSULATOR—Under Current Reg.	1963080	9000596
INSULATOR—Under Sealing Nut	1957230	9000596
LEAD—Actuating Relay To Base	1922925	1118554
LEAD—Actuating Relay To Base	1920204	1118563
LEAD—Actuating Relay to Base (4 1/2")	1922663	1118421; 555-6-7; 62-7; 73-4
LEAD—Actuating Relay To Base (2")	1922907	1118421; 555-6-7; 62-7; 73-4
LEAD—Circuit Breaker To Paralleling Relay	1923103	1118563
LEAD—Contact Regulator	1919515	1118550-4-5-6-7; 62-3-7; 74
LEAD—Current Reg. to Mtg. Panel	1919515	1118421; 573
LEAD—Generator Term. from Reg. (9")	1963077	9000596
LEAD—Paralleling Relay to Junction Panel (upper Term.)	1924795	1118557; 63
LEAD—Rectifier	1946086	1118550
LEAD—Relay to Clip on Mtg. Panel	1963064	9000596
LEAD—To Armature Terminal	1917764	1118421; 550-4-5-6; 62-7; 73-4
LEAD—To Armature Terminal	1918100	1118557; 63
LEAD—To Battery Terminal	1917761	1118421; 550-4-5-6-7; 62-3-7; 73-4
LEAD—To Battery Terminal	1963065	9000596
LEAD—To Field Terminal	1917767	1118421; 550-4-5-6-7; 62-3-7; 73-4
LEAD—To Generator Term. (3 1/4")	1963078	9000596
LEAD—Voltage Regulator Contact	1941966	1118421; 550-4-5-6-7; 62-3-7; 73-4
PANEL—Junction Assembly	1924787	1118557; 63
PLATE—Armature Adjusting	1926971	1118421; 555-6-7; 62-3-7; 73-4; 9000596
PLATE—Rectifier Mounting	1946085	1118550
RECTIFIER	1947988	1118550
RELAY—Paralleling	1935071	1118557
RELAY—Paralleling	1944239	1118563
RESISTOR—Current Regulator	1919509	1118550; 63; 73-4
RESISTOR—Current Regulator	1919514	1118421; 562-7; 9000596
RESISTOR—Return Circuit In Base	1922560	1118556; 73
RESISTOR—Return Circuit In Base	1946619	1118550
RESISTOR—Voltage Regulator	1905070	1118554
RESISTOR—Voltage Regulator	1919509	1118421; 550-5-6-7; 62-3-7; 73-4
RESISTOR (100 ohm) Under Relays	1910175	9000596
Seal CUP	1904033	1118421; 550-4-5-6-7; 62-3-7; 73-4
SHOCK MOUNT	1912201	1118562; 73
SHOCK MOUNT	1952967	1118421
SHOCK MOUNT—Package	1949127	9000596
SPRING—Armature—Relay	1916982	1118421; 554-5-6-7; 62-3-7; 73-4; 9000596
SPRING—Armature—Current Element	1916091	1118421; 550-4-5-6-7; 62-3-7; 73-4; 9000596
SPRING—Armature—Voltage Element	1916091	1118550-4; 67; 74
SPRING—Paralleling Relay Armature	1926150	1118563
STUD & LEAD ASSEMBLY—Return Circuit	1932031	1118555
STUD & LEAD ASSEMBLY—Return Circuit	1918096	1118421; 500-6; 67; 73-4
STUD & LEAD ASSEMBLY—Return Circuit	1922379	1118563
STUD & LEAD ASSEMBLY—Return Circuit (3 3/4 length)	1922379	1118557
STUD & LEAD—Return Circuit (9 1/2 length)	1924794	1118557; 63
STUD & LEAD—To Clip On Mounting Panel	1922379	1118557; 62
STUD—Terminal—32 Volt	1922379	1118550-6-7; 73

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—(Continued)		
SUPPORT—Contact Bracket—Current Element -----	1843100	1118550-4-5-6-7; 62-3-7
SUPPORT—Contact Bracket—Voltage Eelemen -----	1843160	1118550-4-5-6-7; 62-3-7
TERMINAL Assembly (Stud & Connector) -----	1903910	1118421; 550-4-5-6-7; 62-3-37; 73
TERMINAL—Battery—In Base -----	1963036	9000596
TERMINAL—Generator—In Base -----	1963036	9000596
TRANSISTOR REGULATOR—Complete -----	1963043	9000596

 Revised to August 15, 1969

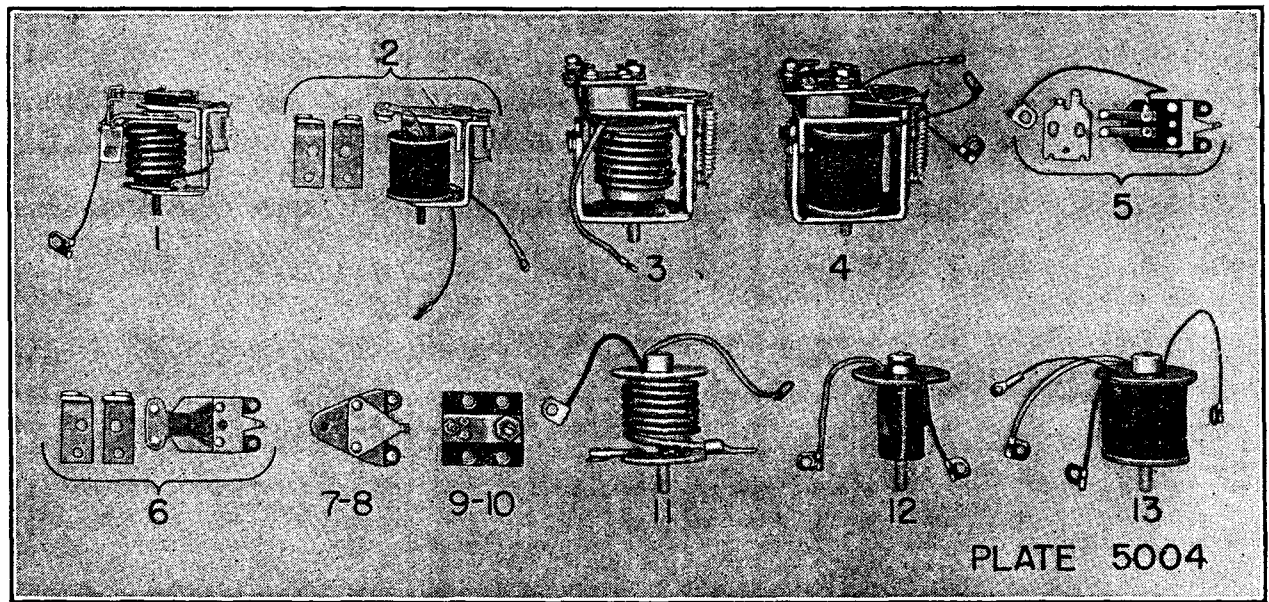


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Relay — Actuating	Relay — Circuit Breaker	Current Regulator Element	Voltage Regulator Element	Contact Set — Actuating Relay	Contact Set — Circuit Breaker Relay	Armature — Current Element	Armature — Voltage Element	Contact Bracket — Current Element	Contact Bracket — Voltage Element	Winding Assembly — Current Element	Shunt Winding — Current Element	Winding Assembly — Voltage Element
	1	2	3	4	5	6	7	8	9	10	11	12	13
1118576	1917723	1917720	1916473	1916474	1904230	1904232	1918114	1916985	1924779	1924779	1916475	1916476	1907848
1118577	1917814	1917816	"	1916477	"	"	"	"	"	"	"	"	1907886
1118578	"	"	1916478	"	"	+	"	"	"	"	1916479	1907889	"
1118579	1922624	"	1916480	"	"	1904232	"	"	"	"	1916481	1916476	"
1118580	1917723	1917720	1916482	1916474	"	+	"	"	"	"	1916483	"	1907848
1118581	1917814	1917816	1916473	1916477	"	1904232	"	"	"	"	1916475	"	1907886
1118582	1923210	1917720	1916484	1916474	"	"	"	"	"	"	1916557	1916558	1907848
1118583	1919865	1907269	1916560	1916559	"	1903851	"	"	"	"	1908470	1903944	1917732
1118584	1917723	1917720	1916478	1916474	"	+1904232	"	"	"	"	1916479	1907889	1907848
1118585	1917814	1917816	"	1916477	"	"	"	"	"	"	"	"	1907886
1118586	1917826	"	1916480	"	"	"	"	"	"	"	1916481	1916476	"
1118587	1919865	1907269	1916563	1916562	"	1903851	1916555	1903940	1842784	1842784	1908470	1903944	1917732
1118588	1917723	1917720	1916473	1916474	"	1904232	1918114	1916985	1924779	1924779	1916475	1916476	1907848
1118589	1917814	1917816	1916478	1916477	"	+	"	"	"	"	1916479	1907889	1907886
1118590	"	"	1916473	"	"	1904232	"	"	"	"	1916475	1916476	"
1118591	1917826	"	1916480	"	"	+	"	"	"	"	1916481	"	"
1118592	1917814	"	1916565	1916564	"	1904332	1916555	1903940	1842784	1842784	1916566	1916567	"
1118593	"	"	1916478	1916477	"	+	1918114	1916985	1924779	1924779	1916479	1907889	"
1118594	1917852	1907269	1917851	1916559	"	1903851	"	"	"	"	1903943	1903944	1917732
1118595	1917814	1917816	1916565	1916564	"	1904232	1916555	1903940	1842784	1842784	1916566	1916567	1907886
1118596	"	"	1916478	1916477	"	+	1918114	1916985	1924779	1924779	1916479	1907889	"
1118597	1917928	1904389	1917851	1916559	"	1904232	"	"	"	"	1903943	1903944	1917732
1118598	"	"	1917931	1916562	"	"	1916555	1903940	1842784	1842784	"	"	"
1118599	"	"	1917851	1916559	"	"	1918114	1916985	1924779	1924779	"	"	"

*See Miscellaneous Section for Circuit Breaker Armature and Contact Supports. If Contact Supports are parallel with each other use contact set 1904232.

 Delco-Remy SERVICE PARTS CATALOG

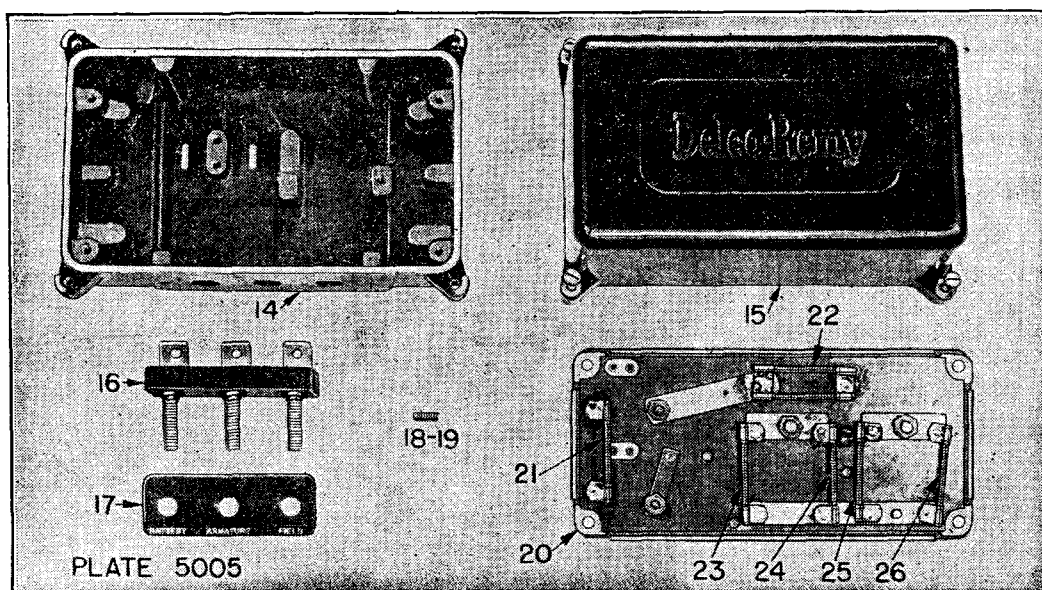

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Base	Cover	Terminal Package	Panel — Terminal Insulator	Contact Screw — Current	Contact Screw — Voltage	Panel Only — Mounting	Resistor	Resistor (Two Req'd.)	Resistor	Resistor	Resistor	Resistor
	14	15	16	17	18	19	20	21	22	23	24	25	26
1118576	1907830	1904001	1903908	1903913	1858692	1858692	1923207	1910175	1910178	1910181	1910181	1910181	1910181
1118577	"	"	"	"	"	"	"	1910177	1910179	1910182	1910182	"	"
1118578	"	"	"	"	"	"	+1922923	"	"	1910180	1910180	1910182	1910182
1118579	"	"	"	"	"	"	1923207	"	"	1910182	1910182	"	"
1118580	"	"	"	"	"	"	+1922923	1910175	1910178	1910178	1910178	1910180	1910180
1118581	1922558	"	"	"	"	"	1923207	1910177	1910179	1910182	1910182	1910181	1910181
1118582	1907830	"	"	"	"	"	"	1910175	1910178	1910179	1910179	1910180	1910180
1118583	1903907	"	"	"	"	"	1916467	1910183	1910173	1910174	1910174	1910175	1910175
1118584	1907830	"	"	"	"	"	+1922923	1910175	1910178	1910178	1910178	1910180	1910180
1118585	1922558	"	"	"	"	"	1923207	1910178	1910179	1910180	1910180	1910182	1910182
1118586	1907830	"	"	"	"	"	"	1910177	"	1910182	1910182	"	"
1118587	1903907	"	"	"	1861998	1861998	1916467	1910183	1910173	1910174	1910174	1910175	1910175
1118588	1907830	"	"	"	1858692	1858692	1923207	1910175	1910178	1910181	1910181	1910181	1910181
1118589	1922558	"	"	"	"	"	+1922923	1910178	1910179	1910180	1910180	1910182	1910182
1118590	1907830	"	"	"	"	"	1923207	1910177	"	1910182	1910182	1910181	1910181
1118591	"	"	"	"	"	"	+1922923	"	"	"	"	1910182	1910182
1118592	"	"	"	"	1861998	1861998	1923207	1910178	"	1910181	1910181	1910181	1910181
1118593	"	"	"	"	1858692	1858692	+1922923	"	"	1910180	1910180	1910182	1910182
1118594	1903907	"	"	"	"	"	1916467	1910183	1910173	1910175	1910175	1910180	1910180
1118595	1907830	"	"	"	1861998	1861998	1923207	1910178	1910179	1910181	1910181	1910181	1910181
1118596	"	"	"	"	1858692	1858692	+1922923	"	"	1910180	1910180	1910182	1910182
1118597	1903907	"	"	"	"	"	1917719	1910183	1910173	1910175	1910175	1910180	1910180
1118598	"	"	"	"	1861998	1861998	"	"	"	"	"	"	"
1118599	"	"	"	"	1858692	1858692	"	"	"	"	"	"	"

*When C.B. Relay Contact Supports are parallel with each other use 1923205 panel.

Revised to August 15, 1969

SERVICE PARTS CATALOG

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Armature Adjustment Locking Screw -----	453844	All
Lock Washer—Armature Attaching Screw—Relay -----	9421421	All
Lock Washer—Attaching Screw—(For 6-32) Relay -----	453844	All
Lock Washer—Armature Attaching Screw—Regulator -----	453844	All
Lock Washer—Contact Bracket Screw—Actuating Relay --	9421421	All
Lock Washer—Contact Bracket Screw—Circuit Breaker Relay -----	121752	All
Lock Washer—Contact Bracket Screw—Regulator -----	453844	All
Lock Washer—Contact Screw Lock Nut—Regulator -----	138537	All
Lock Washer—Contact Bracket Support Screw—Regulator -----	453844	All
Lock Washer—Contact Terminal Screw—Regulator -----	453844	All
Lock Washer—Contact Terminal Screw—Regulator— Shakeproof -----	138530	All
Lock Washer—Cover Attaching Screw -----	1962276	All
Lock Washer—Ground Screw -----	1962276	1118583-7; 94-7-8-9
Lock Washer—Lead Attaching Screw—To Circuit Breaker Relay -----	1962276	All
Lock Washer—Lead Attaching Nut—To Regulator Contact Terminal -----	453844	All
Lock Washer—Lead Attaching Screw—To Mounting Panel -----	453844	All
Lock Washer—Lead Attaching Screw—To Mounting Panel (Shakeproof) -----	139479	All
Lock Washer—Lead Attaching Screw—To Actuating Relay Contact -----	131093	All
Lock Washer—Lead Screw—To Terminal Block -----	1962276	All
Lock Washer—Mounting Bracket to Base Screw -----	121801	All
Lock Washer—Mounting Panel Attaching Screw -----	1962276	All
Lock Washer—Regulator Element Mounting Nut -----	138537	All
Lock Washer—Relay Mounting Nut -----	1962276	All
Lock Washer—Return Circuit Terminal Stud -----	453435	1118576-7-8-9; 80-1-2-4-5-6-8-9; 90-1-2-3-5-9
Lock Washer—Terminal Nut -----	9421424	All
NUTS		
Nut—Armature Attaching Screw—Relay -----	134524	All
Nut—Armature Stop—Circuit Breaker Relay -----	427254	1118583-7; 94
Nut—Contact Screw Lock—Regulator -----	1916080	All
Nut—Contact Terminal Screw (Regulator) -----	30986	All
Nut—Lead Attaching—To Regulator Contact Terminal --	30986	All
Nut—(Spring)—Lead Attaching To Act. Relay Armature --	445100	All
Nut—Regulator Element Mounting -----	29991	All
Nut—Relay Mounting -----	453433	All
Nut—Return Circuit Terminal Stud -----	453433	1118576-7-8-9; 80-1-2-4-5-6-8-9; 90-1-2-3-5-6
Nut—Terminal Stud -----	120368	All
SCREWS		
Screw—Armature Adjustment Locking—Regulator -----	1916015	All
Screw—Armature Attaching—Relay -----	132631	All
Screw—Armature Attaching (6-32x $\frac{1}{8}$) Relay -----	1883009	All
Screw—Armature Attaching—Regulator -----	1916016	All
Screw—Contact Bracket Attaching—Actuating Relay -----	1878516	All
Screw—Contact Bracket Attaching—Circuit Breaker Relay -----	453418	All
Screw—Contact Bracket Attaching—Regulator -----	1916016	All
Screw—Contact Bracket Support Attaching (Regulator) --	1916016	All
Screw—Contact Terminal—Regulator Element -----	22820	All
Screw—Cover Attaching -----	1904003	1118583-7; 94-7-8-9
Screw—Ground -----	1949653	All
Screw—Lead Attaching—To Actuating Relay Armature --	453460	All
Screw—Lead Attaching—To Circuit Breaker Relay -----	453468	All
Screw—Lead Attaching—To Actuating Relay Contact -----	453364	All
Screw—Lead Attaching—To Mounting Panel (10-32x $\frac{1}{4}$) --	453319	All
Screw—Lead Attaching—To Mounting Panel (10-32x $\frac{3}{8}$) --	1914800	All
Screw—Lead Attaching—To Mounting Panel (10-32x $\frac{1}{2}$) --	132900	All
Screw—Lead Attaching—To Mounting Panel (10-32x $\frac{5}{8}$) --	9416183	All
Screw—Lead to Terminal Block -----	453463	All
Screw—Mounting Bracket to Base -----	453464	All
Screw—Mounting Panel Attaching -----	453464	All

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
WASHERS		
Washer—Armature Adjustment Locking Screw—Regulator	810794	All
Washer—Armature Attaching Screw—Relay	1918848	All
Washer—Armature Attaching Screw—Relay (2 Hole)	1926882	All
Washer—Armature Attaching Screw—Regulator	810794	All
Washer—Contact Bracket Attaching Screw—Actuating Relay	820372	All
Washer—Contact Bracket Attaching Screw—Regulator	810794	All
Washer—Contact Bracket Support Attaching Screw—Regulator	815540	All
Washer—Ground Screw	1902988	1118583-7; 94-7-8-9
Washer—Ins.—Mounting Panel Attaching Screw	1962157	All
Washer—Ins.—Return Circuit Terminal Stud	1907836	1118576-7-8-9; 80-1-2-4-5-6-8-9; 90-1-2-3-5-6
Washer—Lead Attaching Screw—To Mounting Panel	1856056	All
Washer—Mounting Panel Screw	1902988	All
Washer—Plain—Return Circuit Terminal Stud	1856056	1118576-7-8-9; 80-1-2-4-5-6-8-9; 90-1-2-3-5-6
Washer—Terminal Stud	810492	All
MISCELLANEOUS		
ARMATURE—Circuit Breaker Relay	1916975	1118578; 80-4-9; 91-3-6
BRACKET—Regulator Mounting	1916097	1118576-7-8-9; 80-1-2-3-4-5-6-7; 92-3-4-7-8
BRACKET—Shock Mounting—Regulator	1912201	1118588-9; 90-1-5-6-9
BUSHING—Ins.—Actuating Relay Contact Attaching Screw	1878506	All
BUSHING—Ins.—Mounting Panel Attaching Screw	1916466	All except 1118583-7; 94-7-8-9
CIRCUIT BREAKER—Overload	1918104	1118576-7-8-9; 80-1-2-4-5-6-8-9; 90-1-2-3-5-6
CONTACT (& Support)	1916943	1118578; 80-4-9; 91-3-6
CONNECTOR—Under Reg. Element Mtg. Nut (1 $\frac{1}{4}$ long)	1916062	All
CONNECTOR—Under Reg. Element Mtg. Nut (1 $\frac{1}{4}$ long)	1925507	All
GASKET—Cover	1904032	All
GASKET—Terminal Assembly	1911229	All
INSULATOR—Actuating Relay Contact	1903980	All
INSULATOR—Regulator Winding ($\frac{1}{8}$ -I.D.)	37330	All
INSULATOR—Regulator Winding ($\frac{1}{8}$ -I.D.)	1922332	All
INSULATOR—Regulator Winding ($\frac{1}{8}$ -I.D.)	1925908	All
INSULATOR—Regulator Contact Support	1905927	All
INSULATOR—Terminal Assembly	1911230	All
LEAD—To Armature Terminal	1917764	All
LEAD—To Battery Terminal	1917761	All
LEAD—To Field Terminal	1917767	All
LEAD—(No. 18 Wire 1 $\frac{1}{8}$ long)—Volt. Reg. to Panel Rivet	1904000	All except 1118592-5
LEAD—(No. 18 Wire 4 $\frac{1}{2}$ long)—Volt. Reg. to Mtg. Panel	1922908	1118592-5
RESISTOR—Between 30 & 32-V Terminal	1922560	1118581-5-6-9; 90-1-6
Seal CUP	1904033	All
SPRING—Armature—Relay	1916982	All
SPRING—Armature—Current Element	1916091	All
SPRING—Armature—Voltage Element	1916091	All
STUD & LEAD Assembly—Return Circuit (32 volt)	1922379	1118576-7-8-9; 80-1-2-4-5-6-8-9; 90-1-2-3-5-6
STUD & LEAD—Return Circuit (30 volt)	1907832	1118581-5-6-9; 91-6
SUPPORT—Contact Bracket—Current Element	1843160	All
SUPPORT—Contact Bracket—Voltage Element	1843160	All
TERMINAL Assembly (Stud & Connector)	1903910	All


Delco-Remy

SERVICE PARTS CATALOG

REGULATOR—Group 7C

Revised to November 1, 1969

 Page 1

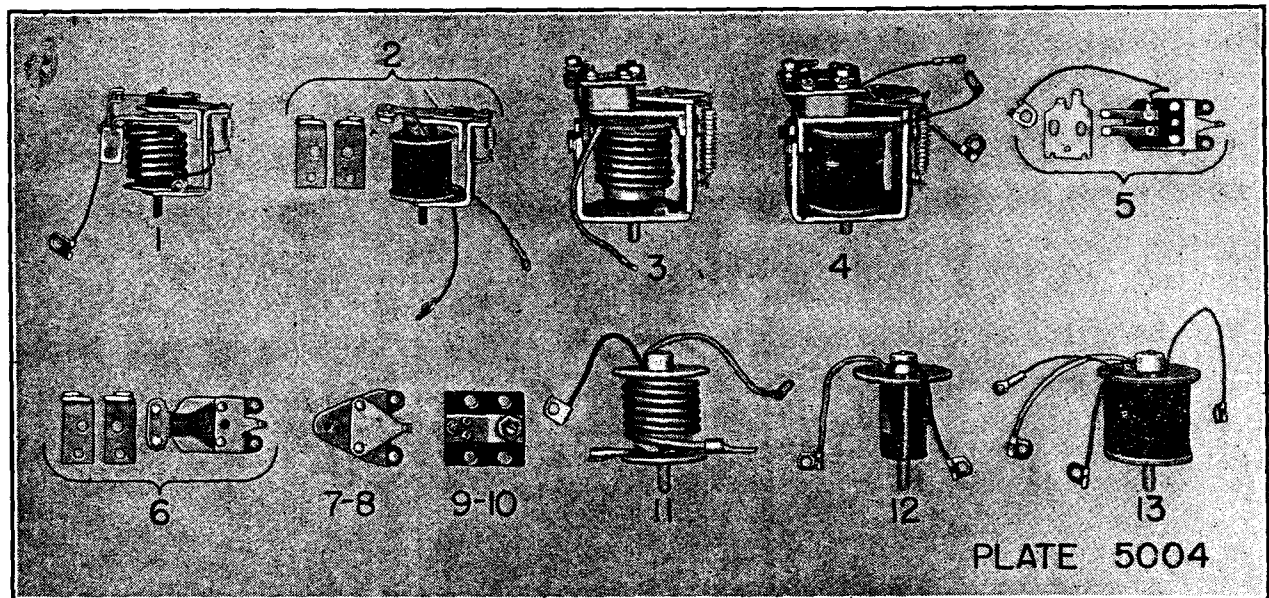


Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Relay — Actuat- ing	Relay — Circuit Breaker	Current Regu- lator Element	Voltage Regu- lator Element	Contact Set — Actuat- ing Relay	Contact Set — Circuit Breaker Relay	Arma- ture — Current Element	Arma- ture — Voltage Element	Contact Bracket — Current Element	Contact Bracket — Voltage Element	Winding Assem- bly — Current Element	Shunt Winding — Current Element	Winding Assem- bly — Voltage Element
	1	2	3	4	5	6	7	8	9	10	11	12	13
1118613	1919865	1907269	1916560	1916559	1904230	1903851	1918114	1916985	1924779	1924779	1908470	1903944	1917732
1118622	1917723	1917720	1925789	1922664	"	+	1916555	1903940	1924829	1924829	1922903	1922904	1922665
1118626	1917839	1917720	1916484	1916474	"	+	1918114	1916985	1924779	1924779	1916567	1916558	1907848
1118630	1917814	1917816	1916482	1916477	"	+	"	"	"	"	1916483	1916476	1907886
1118631	"	"	"	"	"	+	"	"	"	"	"	"	"
1118633	1919865	1907269	1916560	1916559	"	1903851	"	"	"	"	1908470	1903944	1917732
1118638	1924553	1924563	1925016	1925016	"	1903851	"	"	1924779	1924779	1924551	"	1904384
1118639	1917723	1917720	1924492	1924495	"	+	"	"	"	"	1924493	1924494	1924496
1118641	1924791	1904389	1924785	1924778	"	+	"	"	"	"	1924786	1910996	1924782
1118647	1925936	"	1925927	1925925	"	+	"	"	"	"	1924493	1924494	1925926
1118657	1927563	"	1927562	1927561	"	+	1916555	1903940	1924829	1924829	1926201	1922904	1927572
1118662	1924553	1928816	1928816	1928816	"	1903851	1916985	1916985	1924779	1924779	"	"	1928817
1118667	1917814	1917816	1930027	1930025	1904230	1904232	1918114	"	1924779	"	1928978	1924494	1930026
1118673	"	"	1932601	1932598	"	"	1932602	1932599	1924829	1924829	"	"	1932600
1118675	"	"	1933584	1933633	"	"	1931435	1927719	1924779	1924779	1933585	"	1930026
1118678	1917723	1917720	1934449	1934448	"	"	1916555	1903940	1924829	1924829	1916479	1916476	1907848
1118679	1935017	"	1934672	1934324	"	"	1931435	1927719	1924779	1924779	1922744	1924494	1928981
1118680	1917826	1917816	1935070	1935068	"	"	"	"	"	"	"	"	1935069
1118687	1917723	"	1935684	1935683	"	"	"	"	"	"	1922903	1922904	1922665
1118689	1935751	1904389	1935754	1935752	"	"	"	"	"	"	1922744	1927204	1935753
1118691	1924553	1937095	1937095	1937095	"	1903851	1932599	1932599	1924829	1924829	"	"	1937098
1118692	1919865	1907269	1937342	1937342	"	"	1927719	1927719	1924779	1924779	"	"	1937343
1118694	1940591	1920218	1922837	1923064	"	+	1918114	1916985	1924779	1924779	1922744	"	1919512
1118696	1917826	1917816	1940080	1940079	1904230	+	1916555	1903940	1924829	1924829	1916481	1916476	1907886
1118697	1917814	"	1932601	1932598	"	+	1932602	1932599	"	"	1928978	1924494	1932600
1118698	1940107	1940105	1940105	1940105	"	1903851	1927719	1927719	1924779	1924779	"	"	1940106

*See Miscellaneous Section for Actuating Relay Armature and Contact Supports.

 *See Miscellaneous Section for Circuit Breaker Armature and Contact Supports.

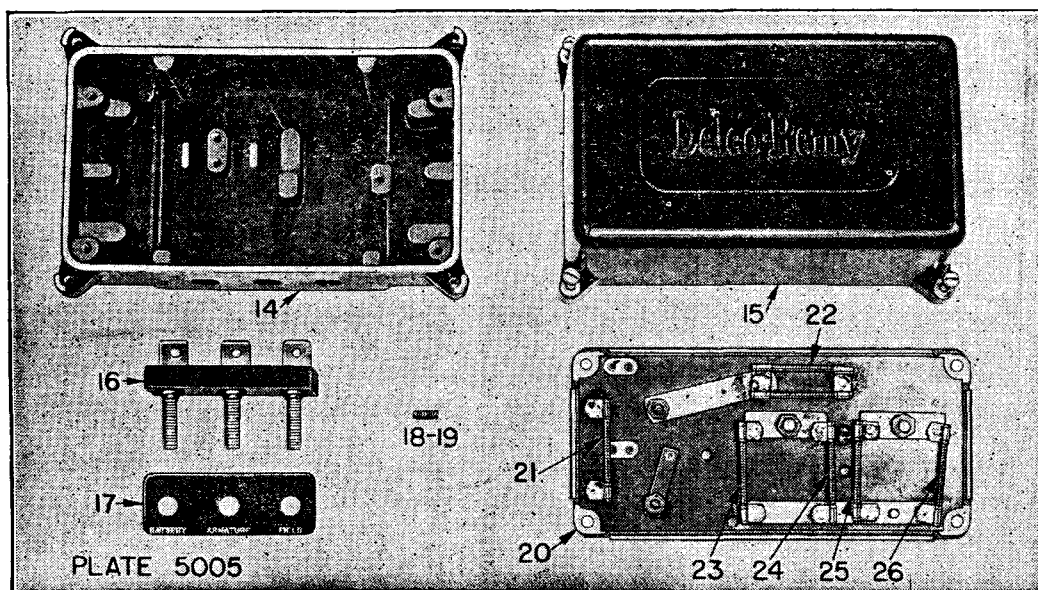

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model No.	Base	Cover	Terminal Package	Panel — Terminal Insulator	Contact Screw — Current	Contact Screw — Voltage	Panel Only — Mounting	Resistor	Resistor (Two Req'd.)	Resistor	Resistor	Resistor	Resistor
	14	15	16	17	18	19	20	21	22	23	24	25	26
1118613	1903907	1904001		1903913	1858692	1858692	1916467	1910183	1910173	1910175	1910175	1910180	1910180
1118622	1922681	"		"	1916600	1916600	1925541	1910175	1910178	1910182	1910179	1910181	1910181
1118626	1907830	"		"	1858692	1858692	1918119	1910175	1910178	1910179	1910179	1910180	1910180
1118630	1922558	"		"	"	"	"	1910177	1910179	1910181	1910181	1910181	1910181
1118631	"	"		"	"	"	"	"	"	"	"	"	"
1118633	1903907	"		"	"	"	1916467	1910183	1910173	1910175	1910175	1910179	1910179
1118638	1924568	"		"	1924780	1924780	1937341	"	"	x	1885300	1910179	1910176
1118639	1922681	"		"	"	"	1918119	1910175	1910178	1910182	1910181	1910181	1910181
1118641	1937098	"		"	"	"	1920225	1910183	1910173	1910175	1910175	1910180	1910180
1118647	"	"		"	"	"	1918119	"	"	1910176	1910176	"	"
1118657	1903907	"		"	1916600	1916600	1927565	"	"	1910177	1910177		1910177
1118662	1924568	"		"	1924780	1924780	1928818		1910173			1910176	1885300
1118667	1922681	"		"	1924780	"	1918119	1910177	1910179	1910181	1910181	1910181	1910181
1118673	1932592	"		"	1916600	1916600	"	1910178	1910179	1910182	1910182	1910182	1910182
1118675	1922681	"		"	1924780	1924780	"	1910177	"	1910181	1910181	1910181	1910181
1118678	1907830	"		"	1916600	1916600	"	1910175	1910178	1910178	1910178	1910180	1910180
1118679	1913634	"		"	1924780	1924780	1920225	"	"	1910179	1910181	1910181	1910179
1118680	1935067	"		"	1924780	1924780	"	1910177	1910179	1910182	1910182	1910182	1910182
1118687	1922681	"		"	"	"	1925541	1910175	"	1910182	1910179	1910181	1910181
1118689	1935757	"		"	"	"	1918119	1910183	1910173	1910175	1910175	1910180	1910180
1118691	1937098	"		"		1916600	1928818		"		1885300	1910176	
1118692	1935757	"		"		1924780	1937341	1910183	1910173	1910174	1910174		
1118694	1903907	1916100		1916940	1924780	"	1920225	1910175	1910178	1910182	1910181	1910181	1910179
1118696	1922558	1904001		1903913	1916600	1916600	1918119	1910177	1910179	1910182	1910182	1910182	1910182
1118697	"	"		"	1916600	1916600	"	"	"	"	"	"	"
1118698	1940111	"		"		1924780	1916467		"			1910182	1910181

xOne 1885300 attached to edge of Mtg. panel.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Armature Adjustment Locking Screw ----	453844	All Except 1118673-5; 80
Lock Washer—Armature Attaching Screw—Regulator ----	453844	All
Lock Washer—Armature Attaching Screw—Relay ----	456413	All
Lock Washer—Attaching Screw—Between Voltage and Current Reg. ----	453435	1118694
Lock Washer—Condenser Bracket Attaching Screw ----	9421424	1118679
Lock Washer—C. B. Relay Contact Support Attaching ----	453473	1118694
Lock Washer—Contact Bracket Screw—Actuating Relay ----	9421421	All
Lock Washer—Contact Bracket Screw—Circuit Breaker Relay ----	121752	All Except 1118694
Lock Washer—Contact Bracket Screw—Regulator ----	453844	All
Lock Washer—Contact Screw Lock Nut—Regulator ----	138537	All
Lock Washer—Contact Bracket Support Screw—Regulator ----	453844	All
Lock Washer—Contact Terminal Screw—Regulator ----	453844	All
Lock Washer—Contact Terminal Screw—Regulator—Shakeproof ----	138530	All
Lock Washer—Cover Attaching Screw ----	1962276	All
Lock Washer—Ground Screw ----	1962276	1118613; 33; 57
Lock Washer—Ground Screw ----	453435	1118694
Lock Washer—Junction Panel Attaching Screw ----	453844	1118639; 41-7; 67; 75; 80-9
Lock Washer—Lead Attaching—Between Circuit Breaker and Act. Relay ----	453435	1118694
Lock Washer—Lead Att. Screw To Act. Relay Armature ----	456413	1118630-1; 47; 57; 67; 73-5-8-9; 80-7; 96
Lock Washer—Lead Att. Screw To Act. Relay Armature ----	445100	1118633
Lock Washer—Lead Att. Screw To Act. Relay Armature ----	9421421	1118679; 87-9; 92-4-6-7
Lock Washer—Lead Att. Screw To Act. Relay Armature ----	456413	1118694
Lock Washer—Lead Att. Screw To Act. Relay Armature ----	453844	1118697
Lock Washer—Lead Attaching—To Contact Support ----	453435	1118694
Lock Washer—Lead Attaching Screw—To Circuit Breaker Relay ----	1962276	All
Lock Washer—Lead Att. Screw—To Clip on Mtg. Panel ----	453844	1118639; 41
Lock Washer—Lead Attaching Screw—To Junction Panel ----	453844	1118639; 41; 67; 75
Lock Washer—Lead Attaching Nut or Screw—To Regulator Contact Assem. ----	453844	All Except 1118694
Lock Washer—Lead Attaching Screw or Nut To Regulator Contact Assem. ----	453844	1118694
Lock Washer—Lead Attaching Screw—To Mounting Panel ----	1962276	All
Lock Washer—Lead Attaching Screw—To Mounting Panel (Shakeproof) ----	138479	All Except 1118694
Lock Washer—Lead Attaching—To Mounting Panel ----	453435	1118694
Lock Washer—(Shakeproof) Lead Att. To Mtg. Panel ----	453474	1118694
Lock Washer—Lead Attaching Screw—To Actuating Relay Contact ----	132093	All
Lock Washer—Lead Attaching Screw To Panel Clip (#8) ----	453844	All
Lock Washer—Lead Attaching To Terminal ----	453435	1118694
Lock Washer—Lead Screw—To Terminal Block ----	1962276	All
Lock Washer—Paralleling Relay Attaching Screw ----	1962276	1118622; 39; 41; 67; 80-7-9; 92
Lock Washer—Paralleling Relay Terminal Screw ----	453844	1118622; 39; 41-7; 67; 75; 89; 92
Lock Washer—Mounting Bracket to Base Screw ----	121801	All
Lock Washer—Mounting Nut—Relay ----	453435	1118694
Lock Washer—Mounting Panel Attaching Screw ----	1962276	All Except 1118694
Lock Washer—Mounting Panel Attaching Screw ----	453435	1118694
Lock Washer—Mounting Bracket Attaching ----	138535	1118694
Lock Washer—Regulator Element Mounting ----	453704	1118694
Lock Washer—Regulator Element Mounting Nut ----	138537	All
Lock Washer—Relay Mounting Nut ----	1962276	All Except 1118694
Lock Washer—Return Circuit Terminal Stud ----	453435	1118622; 30-1-8-9; 41-7; 62-7; 73-5-8; 80-7-9; 91-2-6-7-8
Lock Washer—Terminal Nut ----	9421424	All Except 1118694
Lock Washer—Resistor Attaching To Base ----	453844	1118694
Lock Washer—Resistor Attaching To Base Screw ----	456413	1118673
NUTS		
Nut—Armature Attaching Screw—Relay ----	134524	All
Nut—Armature Stop—Circuit Breaker Relay ----	427254	1118613; 33-8; 62; 91
Nut—Contact Screw Lock—Regulator ----	1916080	All

Parts not listed in this catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
NUTS—Continued		
Nut—Contact Terminal Screw (Regulator) -----	30986	All
Nut—Lead Attaching Screw To Act. Relay Armature ----	134530	1118622; 30-1-9; 41-7; 57; 67; 73-5-8-9; 80; 96
Nut—Lead Attaching Screw To Act. Relay Armature ----	455100	1118692
Nut—Lead Attaching Screw To Act. Relay Armature ----	453348	1118694
Nut—Lead Attaching—To Regulator Contact Terminal --	30986	All
Nut—Regulator Element Mounting -----	29991	All Except 1118694
Nut—Regulator Element Mounting -----	1916056	1118694
Nut—Relay Mounting -----	453433	All Except 1118694
Nut—Relay Mounting -----	453284	1118694
Nut—Return Circuit Terminal Stud -----	453433	1118622-6; 30-1-8-9; 41-7; 61-7; 73-5-8; 80-7-9; 91-2-6-7-8
Nut—Terminal Stud -----	120368	All Except 1118694
SCREWS		
Screw—Armature Adjusting -----	1917718	1118673-5-9; 80-7-9; 91-2-7
Screw—Armature Adjustment Locking—Regulator -----	1916015	All Except 1118673-5; 80
Screw—Armature Attaching—Relay -----	1883009	All
Screw—Armature Attaching—Regulator -----	1916016	All
Screw—Condenser Bracket Attaching -----	453319	1118679
Screw—Contact Bracket Attaching—Actuating Relay ----	1878516	All Except 1118694
Screw—Contact Bracket Attaching—Actuating Relay ----	453480	1118694
Screw—Contact Bracket Attaching—Circuit Breaker Relay --	453418	All Except 1118694
Screw—Contact Bracket Attaching—Regulator (8-36x $\frac{3}{8}$) --	1916016	All Except 1118694
Screw—Contact Bracket Attaching—Regulator (8-36x $\frac{1}{2}$) --	22820	1118622; 39; 47; 57; 62
Screw—Contact Bracket Attaching—Regulator -----	1916016	1118694
Screw—Contact Bracket Support Attaching (Regulator) --	1916016	All
Screw—Contact Terminal—Regulator Element -----	22820	All
Screw—Cover Attaching -----	1916094	All
Screw—C.B. Relay Contact Support Attaching -----	453418	1118694
Screw—Ground -----	1949653	1118613; 33; 57; 94
Screw—Junction Panel Attaching -----	22820	1118639; 41-7; 67; 75; 80-9
Screw—Lead Att. Between Circuit Breaker & Act. Relay --	1914800	1118694
Screw—Lead Attaching—Between Volt. & Current Reg. ---	1914800	1118694
Screw—Lead Attaching to Act. Relay Armature -----	1883009	1118630-1; 47; 57; 67; 73-5-8-9; 80; 96
Screw—Lead Attaching to Act. Relay Armature -----	453460	1118633
Screw—Lead Attaching to Act. Relay Armature -----	453364	1118694
Screw—Lead Attaching to Act. Relay Armature -----	1883009	1118694
Screw—Lead Attaching to Act. Relay Armature -----	453460	1118692
Screw—Lead Attaching To Act. Relay Contact -----	1878516	1118696-7
Screw—Lead Attaching—To Actuating Relay Contact -----	453364	All
Screw—Lead Attaching—To Circuit Breaker Relay -----	132900	All
Screw—Lead Attaching To Clip on Mounting Panel -----	454408	1118622; 39; 67; 73-5-8-9; 80-7-9; 92
Screw—Lead Attaching To Junction Panel -----	454408	1118639; 41-7; 67; 75
Screw—Lead Attaching—To Mounting Panel -----	453468	1118694
Screw—Lead Attaching—To Mtg. Panel Clip (8-32x $\frac{1}{8}$) --	454408	All
Screw—Lead Attaching—To Mounting Panel (10-32x $\frac{1}{8}$) --	453319	All
Screw—Lead Attaching—To Mounting Panel (10-32x $\frac{3}{8}$) --	1914800	All
Screw—Lead Attaching—To Mounting Panel (10-32x $\frac{1}{2}$) --	453468	All
Screw—Lead Attaching—To Mounting Panel (10-32x $\frac{3}{4}$) --	9416183	All
Screw—Lead Attaching—To Regulator—Contact Assem. ---	453304	All Except 1118694
Screw—Lead Attaching—To Regulator—Contact Assem. ---	453418	1118694
Screw—Lead Attaching To Terminal -----	453463	1118694
Screw—Lead To Terminal Block -----	453463	All
Screw—Mounting Bracket To Base -----	453464	All
Screw—Mounting Panel Attaching -----	453464	All Except 1118622; 41; 57; 94
Screw—Mounting Panel Attaching -----	9416183	1118622; 39; 47; 67; 75; 80-7-9; 92
Screw—Mounting Panel Attaching -----	453468	1118657; 62-4-7; 73-8-9; 91-4-6-7-8
Screw—Paralleling Relay Attaching -----	453463	1118622; 39; 41-7; 75; 80-7-9; 92
Screw—Paralleling Relay Terminal -----	453418	1118622; 39; 41-7; 67; 75; 87-9; 92
Screw—Resistor Clamp Attaching -----	22820	1118673-5; 80-7-9; 91-2-7-8
Screw—Resistor Attaching To Base -----	453978	1118673
Screw—Resistor Attaching To Base -----	1916016	1118694
Screw—Spring—Armature Regulator -----	1926972	1118698
WASHERS		
Washer—Armature Adjustment Locking Screw—Regulator --	810794	All Except 1118673-5; 80; 94
Washer—Armature Adjustment Locking Screw—Regulator --	1913086	1118694

Parts not listed in this catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
WASHERS—Continued		
Washer—Armature Attaching Screw—Relay -----	1918848	All
Washer—(2 Hole)—Armature Attaching Screw—Relay --	1926882	All
Washer—Armature Attaching Screw—Regulator -----	810794	All Except 1118694
Washer—Armature Attaching Screw—Regulator -----	1913086	1118694
Washer—Contact Bracket Attaching Screw—Actuating Relay -----	820372	All Except 1118694
Washer—Contact Bracket Attaching Screw—Actuating Relay -----	1916935	1118694
Washer—Contact Bracket Attaching Screw—Regulator --	810794	All Except 1118694
Washer—Contact Bracket Attaching Screw—Regulator --	1913086	1118694
Washer—Contact Bracket Support Attaching Screw—Regulator -----	815540	All Except 1118694
Washer—Contact Bracket Support Screw Attaching Reg. -	1916016	1118694
Washer—Ground Screw -----	1913784	1118613; 57; 64
Washer—Ins.—Mounting Panel Attaching Screw -----	1962157	All
Washer—Ins.—Return Circuit Terminal Stud -----	1907836	1118622-6; 30-1-8-9; 41-7; 62-7; 73-5-8; 80-7-9; 91-2-6-7-8
Washer—Lead Attaching Screw—To Mounting Panel ----	1856056	All
Washer—Mounting Panel Screw -----	1913784	All Except 1118694
Washer—Mounting Panel Screw -----	807295	1118894
Washer—Plain—Armature Attaching—Relay -----	820372	1118696-7
Washer—Plain—Ground Screw -----	807295	1118694
Washer—Plain—Junction Panel Screw -----	810794	1118639; 41-7; 67; 75; 80-9
Washer—Plain—Lead Attaching—To Mtg. Panel Screw --	1856056	1118694
Washer—Plain—Mtg. Panel Screw (under panel) -----	1903748	1118622; 39; 41-7; 67; 75; 80-7-9; 92
Washer—Plain—Return Circuit Terminal Stud -----	1856056	1118622-6; 30-1-8-9; 41-7; 62-7; 73-5-8; 80-7-9; 81-2-6-7-8
Washer—Plain—Relay Mounting Nut -----	1856056	All Except 1118938; 94
Washer—Plain—Relay Mounting Nut -----	453435	118694
Washer—Plain—Terminal Stud -----	810492	118694
Washer—Plain—Under Junction Panel -----	815540	1118675; 80
Washer—Regulator Element Mounting -----	1914592	1118697
Washer—Resistor Attaching To Base -----	1913086	1118694
Washer—Terminal Stud -----	810492	All Except 1118694
MISCELLANEOUS		
ARMATURE—Actuating Relay -----	1920210	1118694
ARMATURE—Circuit Breaker Relay -----	1916975	1118622-6; 30-1-3-9; 41-7; 57; 94-6-7
BRACKET—Mounting -----	1916097	1118694
BRACKET—Regulator Mounting -----	1916097	1118613; 22-6; 30-3-8-9; 41-7; 57; 62-7; 73-5-8; 80-7-8-9; 91-2-6-7
BRACKET—Regulator Mounting -----	1912201	1118631; 98
BUSHING—Ins.—Actuating Relay Contact Attaching Screw -----	1922599	All
BUSHING—Ins.—Mounting Panel Attaching Screw -----	1916466	All
CIRCUIT BREAKER—Overload -----	1918104	1118622-6; 30-1-9; 64; 73-8-9; 80-7; 94-6
CLAMP—Resistor -----	1904865	1118622; 39; 41-7; 57; 62-7; 73-5-9; 80-7-9; 91-2-4-7-8
CLIP—Resistor Lead -----	200242	1118622; 39; 47; 57; 62-7; 73-5-8-9; 80-7-9; 91-2-4-7-8
CONNECTOR—Under Current Reg. Mtg. Nut—(1 $\frac{1}{8}$ long) -----	1922920	1118622; 57; 87; 91-8
CONNECTOR—Under Reg. Element Mtg. Nut—(1 $\frac{1}{8}$ long) -----	1916062	1118613; 22-6; 30-1-3-8; 57; 87
CONNECTOR—Under Reg. Element Mtg. Nut—(1 $\frac{1}{4}$ long) -----	1925507	1118613; 26; 30-1-3-9; 41-7; 67; 73-5-8-9; 80-9; 92-4-6-7
CONNECTOR—Under Voltage Reg. Mtg. Nut -----	1922920	1118662
CONDENSER—To Armature Terminal -----	1921478	1118679
CONDENSER—To Battery Terminal -----	1921477	1118679
CONDENSER—To Field Terminal -----	1906459	1118679
CONTACT (& SUPPORT)—Actuating Relay -----	1920206	1118694
CONTACT (& SUPPORT)—Actuating Relay -----	1920208	1118694
CONTACT (& SUPPORT)—C. B. Relay -----	1916943	1118622-6; 30-1-3-9; 41-7; 57
GASKET—Cover -----	1904032	1118613; 26; 30-1-3-8; 57; 62; 73-8-9; 91-4-6-7-8
GASKET—Cover -----	1932345	1118622; 39; 41-7; 67; 75; 80-7-9; 92
GASKET—Terminal Assembly -----	1911229	All
INSULATOR—Actuating Relay Contact -----	1903980	All Except 1118694
INSULATOR—Actuating Relay Contact -----	1916967	1118694
INSULATOR—(w/Bushing)—Act. Relay Contact -----	1920205	1118622; 30-1-9; 41-7; 57; 67; 73-5-8-9; 80-7-9; 92-4-6-7-8
INSULATOR—Regulator Winding ($\frac{1}{16}$ -I.D.) -----	37330	All

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
INSULATOR—Regulator Winding ($\frac{33}{64}$ -I.D.) -----	1922332	All
INSULATOR—Regulator Winding ($\frac{41}{64}$ -I.D.) -----	1925908	1118613; 26; 30-1-3-8-9; 41-7; 57; 67; 73-5-8-9; 80-7-9; 96-7
INSULATOR—Regulator Contact Support -----	1905927	All Except 1118694
INSULATOR—Regulator Contact Support -----	1916051	1118694
INSULATOR—Return Circuit Terminal -----	1922377	1118622-6; 30-1-8-9; 41; 62-7; 73-5-8; 80-7-9; 91-2-6-7-8
INSULATOR—Terminal Assembly -----	1911230	All
LEAD—Act. Relay Contact To Mtg. Panel -----	1920204	1118641; 79; 94
LEAD—Act. Relay To Mtg. Panel -----	1922907	1118630-1-9; 47; 67; 73-5-8; 80-7-9; 92-7
LEAD—Act. Relay To Ground ($4\frac{1}{2}$ long) -----	1922663	All
LEAD—Attaching—To Regulator Contact Support -----	1913482	1118687
LEAD—C. B. Relay Contact, to Mtg. Panel -----	1924560	1118638
LEAD—Circuit Breaker Relay Contact—To Mtg. Panel -----	1937097	1118697
LEAD—Current Regulator To Mounting Panel -----	1919515	1118622; 39; 41-7; 57; 67; 73-5-9; 80-7-9; 91-2-7-8
LEAD—Junction Panel To C. B. Relay -----	1925786	1118639; 47
LEAD—To Armature Terminal -----	1917764	1118613; 26; 30-1-3-8; 57; 73-8; 96-7
LEAD—To Armature Terminal -----	1918100	1118622; 39; 41-7; 67; 75; 80-8-9; 92-4
LEAD—To Armature Terminal -----	1928815	1118662; 91-8
LEAD—To Battery Terminal -----	1917761	1118613; 26; 30-1-3-8; 41; 57; 62; 73-8; 80-9; 91-6-7-8
LEAD—To Battery Terminal -----	1922677	1118622; 39; 47; 67; 75; 87
LEAD—To Battery Terminal -----	1918097	1118694
LEAD—To Battery Terminal -----	1918100	1118692
LEAD—To Field Terminal -----	1917767	All
LEAD—To Resistor -----	1917733	1118694
LEAD—(No. 18 Wire $1\frac{1}{8}$ long)—Volt. Reg. to Panel Rivet -----	1904000	1118613; 26; 30-1-3; 57; 94
LEAD—Paralleling Relay To C. B. Relay Core -----	1923103	1118622; 41; 87-9; 92
LEAD—Paralleling Relay To Juct. Panel (Lower Term.) -----	1925785	1118639; 41-7; 67; 75
LEAD—Paralleling Relay To Juct. Panel (Upper Term.) -----	1924795	1118639; 47; 67; 75; 89
LEAD—Resistor In Base to Mtg. Panel -----	1923103	1118680
LEAD—Resistor In Base to Mtg. Panel -----	1932596	1118673
LEAD—Voltage Regulator To Current Regulator -----	1941966	1118622; 39; 41-7; 57; 67; 73-5-9; 80-7-9; 94
LEAD—Voltage Regulator To Mounting Panel -----	1922908	1118622
LEAD—Voltage Regulator To Mounting Panel -----	1919515	1118662
LEAD—Voltage Regulator To Mounting Panel -----	1935229	1118692
PANEL—Junction -----	1924787	1118639; 41-7; 67; 75; 80-9
PANEL—Insulating—Terminal -----	1903913	1118694-7-8
PLATE—Armature Adjusting -----	1926971	1118673-5-9; 80-7-9; 92
RELAY—Paralleling -----	1924483	1118622; 39; 87
RELAY—Paralleling -----	1924796	1118641; 89; 92
RELAY—Paralleling -----	1925921	1118647
RELAY—Paralleling -----	1930029	1118667; 75
RELAY—Paralleling -----	1935071	1118680
RESISTOR—(30-32-V Terminal) -----	1922560	1118630-1; 80; 96
RESISTOR—On Current Regulator -----	1919514	1118622; 39; 79; 87; 94
RESISTOR—On Current Regulator -----	1905070	1118641; 57; 89
RESISTOR—On Current Regulator -----	1919509	1118667; 73-5; 80; 97
RESISTOR—On Voltage Regulator -----	1919509	1118622; 39; 67; 73-5-9; 80-7; 91-2-4-7-8
RESISTOR—On Voltage Regulator -----	1905070	1118641-7; 57; 62; 89
RESISTOR—Return Circuit In Base -----	1910701	1118673
Seal CUP -----	1904033	All Except 1118694
Seal CUP -----	1916096	1118694
SPRING—Armature—Relay -----	1916982	All
SPRING—Armature—Current Element -----	1916091	All
SPRING—Armature—Voltage Element -----	1916091	All
SPRING—Paralleling Relay Armature -----	1926150	1118667; 75
STUD & LEAD Assembly—Return Circuit -----	1917768	1118626; 30-1
STUD & LEAD—"Ign." -----	1922379	1118638; 62
STUD & LEAD—To Clip On Mounting Panel -----	1922379	1118687-9
STUD & LEAD—To Paralleling Relay -----	1922379	1118622; 39; 41-7; 67; 75; 87-9; 92
STUD—Relay -----	1922379	All
STUD & LEAD—Return Circuit -----	1922379	1118622; 39; 47; 67; 75-8; 92-6-8
STUD & LEAD—Return Circuit -----	1924794	1118641; 89
STUD & LEAD—Return Circuit -----	1922379	1118680
STUD & LEAD—Return Circuit -----	1932594	1118673
STUD & LEAD—To Return Circuit -----	1935463	1118692
STUD—Return Circuit (32-V) -----	1907832	1118630-1

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
STUD—Return Circuit (32 Volt) -----	1922379	1118694-6
STUD—Terminal -----	1916939	1118694
SUPPORT—Contact Bracket—Current Element -----	1843160	All Except 1118662; 94
SUPPORT—Contact Bracket—Current Element -----	1916082	1118694
SUPPORT—Contact Bracket—Voltage Element -----	1843160	All Except 1118694
SUPPORT—Contact Bracket—Voltage Element -----	1916082	1118694
TERMINAL Assembly (Stud & Connector) -----	1903910	All
TERMINAL BLOCK -----	1917003	1118694