

# DETROIT DIESEL

---



## Series 53 Parts Catalog

*Volume 1*

---

# DETROIT DIESEL



## V-53 Parts Catalog

---

**DETROIT DIESEL**

**CORPORATION**



13400 Outer Drive, West / Detroit, Michigan 48239-4001

Telephone: 313-592-5000

Telex: 4320091 / TWX: 810-221-1649

*Note: All references in this catalog to DDA and/or General Motors Corporation shall be read to mean Detroit Diesel Corporation (DDC).*

---

## **CAUTION METRICS AT WORK**

Detroit Diesel Engines contain parts dimensioned in the metric system as well as in the customary system. Many fasteners are metric and are very close in dimension to familiar customary fasteners in the inch system. It is important to note that, during any maintenance procedures, replacement fasteners must have the same measurements and strength as those removed, whether metric or customary. (Numbers on the heads of metric bolts and on surfaces of metric nuts indicate their strength. Customary bolts use radial lines for this purpose, while most customary nuts do not have strength markings.) Mismatched or incorrect fasteners can result in engine damage or malfunction, or possibly personal injury. Therefore, fasteners removed from the engine should be saved for re-use in the same locations whenever possible. Where the fasteners are not satisfactory for re-use, care should be taken to select a replacement that matches the original. For information and assistance, see your Detroit Diesel Allison Service Outlet.

*NOTE:* Metric Hardware is identified in the Parts Catalogs through its unique nomenclature. Conventional hardware can always be recognized by the inch marks "'", common to diameter and length.

# GENERAL INFORMATION

## GENERAL INFORMATION

All engine components in this catalog are divided into twelve major groups of functionally related parts. A listing of the groups and their sub-groups appears under "Group Nomenclature" on page 4 of this section.

Within each sub-group different designs of similar equipment are shown, each being designated by a type number. The type number in one sub-group has no relationship to the same type number in another sub-group.

Each Engine Model is provided with a Model Index, showing Standard type numbers currently available on the model. Standard option types are indicated by a \* symbol. Standard option and all optional type numbers are listed on the engine Option Plate, as shown in the illustration below.

The names and type numbers of optional equipment built into the unit at the factory are listed on this plate, along with the unit model, serial number and customer specification number (if any). Material not listed on the Option Plate is standard equipment and the type number is obtained from the model index. (Copies of the information, on the Option Plate Work Sheet, are furnished to distributors for their files.)

To locate a part, first, establish the group where the part is used (see the Alphabetical Index or Group Nomenclature page) then, determine the type number for the group from either the Option Plate or the Model Index. With this information, turn to the

proper group and locate the type number at the top of the page. All parts applicable to the type are indicated by the quantity indicated in the column. An AR in this column indicates an "as required" quantity.

## EXAMPLE

For purposes of illustration, a model 5063-5000 unit will be used. The following examples cover the steps to be followed:

1. To determine the part number of the crankshaft, refer to the Option Plate and note there is no reference to it, indicating it is standard equipment. Next turn to the Model Index and establish that the crankshaft is type 44 in group 1.3000. Turn to group 1.3000 and locate type 44 at the top of the page. All items with a quantity in this column apply to this unit. In sub-group 1.3001 crankshaft assy., the quantity in type 44 column shows the crankshaft to be part number 5144616.
2. To determine the proper crankshaft pulley for this unit again refer to the Option Plate and note that Crankshaft Pulley type number is 171, consult the group nomenclature page to establish that crankshaft pulley is group 1.3000C. Now turn to group 1.3000C and find type 171 at the top of the page. The quantity shown in type 171 at sub-group 1.3280 shows the crankshaft pulley to be part number 5109638.

TYPE	EQUIPMENT	TYPE	EQUIPMENT	TYPE	EQUIPMENT	TYPE	EQUIPMENT
100	F/W HOUSING	100	FLYWHEEL	293	OIL PAN	100	OIL DIST
101	OIL FIL CAP	101	OIL COOLER	294	DIPSTICK	101	OIL FILTER
102	VENT SYSTEM	102	C/S COVER	10	OIL PRESS REG	102	FAN
111	C/S PULLEY	103	C/S PUL BELT	103	WATER PUMP	103	WATER CONN
104	WAT BY-PASS	104	THERMOSTAT	104	WAT OILY FLRD	104	ERM WFLD
105	FUEL PUMP	105	INJECTOR NAS	105	FUEL FILTER	105	FUEL LINES
106	AIR INLT HSG	106	THROTTLE CONT	106	THROTTLE CONT	106	GOVERNOR MECH
107	ENGINE HOUSING	107	CAM/GR TRAIN	107	ROCKER COVER	107	FAST CHRG GEN
108	STARTING MTR	108	MUFFLER CONN	108	INSTRUMENTS	108	TACH DRIVE
109	INSTRUMENTS			109	GOV'T WARRANTY	109	MAX RPM HL D2950
UNIT	MODEL						STD GT-STD CAM



SERIAL NO. 17001690 MODEL 5063-5000  
DETROIT DIESEPL ALLISON DIV G.M.C. U.S.A.

# DETROIT DIESEL

---

## ASSEMBLY BREAKDOWN

The Assembly Breakdown section is designed to eliminate repeating components of assemblies and sub-assemblies. When the Assembly Breakdown is used it is always found at the end of the group it pertains to. The pages are easily identified. They are numbered with an alphabetical prefix. Assemblies which make use of the Assembly Breakdown will have a note to that effect under the sub-group heading. The note will refer to the page on which the assembly is shown. The part number will appear in the first group of the Assembly Breakdown showing the quantity used in one of the alphabetically designated columns. All other items appearing in that column are components of the assembly.

## ALPHABETICAL INDEX

The Alphabetical Index on page 5 is particularly helpful when only a part name is known and the group can not readily be determined. Parts are listed alphabetically by noun name, followed by a description of the application of the part and the final group location.

## PARTS RELEASE

A Parts Release on Microfiche, is issued monthly to keep this catalog up-to-date. It consists of revised Fiche for insertion in the set. All new Fiche carry a date of issue. These should be inserted into the deck immediately upon receipt. Old Fiche may then be destroyed.

## YOUR PARTS ORDER WILL BE HANDLED MORE EFFICIENTLY IF YOU—

1. Provide the following information for material ordered:
  - A. Group in parts book in which it is specified.
  - B. Quantity desired.
  - C. Part Number.
  - D. Complete Nomenclature.
  - E. The Type number for the model concerned.
  - F. Complete unit model identification and serial number.
  - G. "TYPE" rather than "WRITE" the above information.
2. Furnish complete shipping instruction. This is particularly important in case the order is not to be handled in the regular manner. Indicate whether shipment should be made via parcel post, express, air freight, etc.
3. Confirm all telegraph and telephone orders immediately, clearly marking any such orders "CONFIRMING" to avoid duplication of shipment of such orders.

A checklist is included with each monthly Microfiche update. The checklist will indicate, by date, those Fiche revised and reissued.

## MISCELLANEOUS

At the beginning of each of the sections of this catalog there are several pages of illustrations. In each section of the parts list figure numbers refer to illustrations within that section only unless otherwise noted. In the majority of cases illustrations are typical, that is, they may represent more than one part number. For example, in the case of the flywheel housing, figure 3B of section 1.0000, a single housing is shown to represent all housings. Key numbers on illustrations are final group numbers.

In many instances a part has more than one application. Wherever a part appears in its second or third application the basic group is shown in parentheses following the description.

Unless otherwise specified, standard bolts in the parts list are hexagon head. Other standard parts are described in detail.

The information and illustrations in this publication are based on the information in effect at the time of approval for printing. The right is reserved to make changes at any time without notice.

## GROUP NOMENCLATURE

<b>1.0000</b>	<b>ENGINE (less major assemblies)</b>	<b>5.0000</b>	<b>COOLING SYSTEM (CONT'D)</b>
1.1000	Cylinder Block	5.3000B	Water Connections
1.1000A	Air Box Drains	5.4000A	Fan
1.2000	Cylinder Head	5.4000B	Fan Shroud
1.2000A	Engine Lifter Bracket	5.5000A	Heat Exchanger or Keel Cooling
1.3000	Crankshaft, Oil Seals and Stabilizers	5.6000A	Raw Water Pump
1.3000A	Crankshaft Front Cover	5.7000A	Water Filter
1.3000B	Vibration Damper		
1.3000C	Crankshaft Pulley	<b>6.0000</b>	<b>EXHAUST SYSTEM</b>
1.3000D	Crankshaft Pulley Belt	6.1000A	Exhaust Manifold and/or Connections
1.4000A	Flywheel	6.2000A	Exhaust Muffler and/or Connections
1.5000A	Flywheel Housing		
1.5000B	Flywheel Housing Adaptor	<b>7.0000</b>	<b>ELECTRICAL INSTRUMENTS</b>
1.6000	Connecting Rod and Piston	7.1000A	Battery Charging Generator
1.7000	Camshaft and Gear Train	7.2000A	Battery Cables
1.7000A	Balance Weight Cover	7.2000B	Automatic Starting
1.7000B	Accessory Drive	7.2000B	Automatic Starting (Twin and Quad)
1.8000	Valve Injector Operating Mechanism	7.3000A	Starting Motor
1.8000A	Rocker Cover	7.4000A	Instruments
		7.4000A	Instruments (Twin and Quad)
<b>2.0000</b>	<b>FUEL SYSTEM</b>	7.4000B	Tachometer Drive
2.1000A	Fuel Injector	7.4000B	Tachometer Drive (Twin and Quad)
2.1000B	Electronic Injector Controls	7.4000C	Shutoff, Alarm and O.S. Governor
2.2000	Fuel Pump	7.4000C	Shutoff, Alarm and O.S. Governor (Twin and Quad)
2.2000A	Fuel Pump Drain	7.5000A	Power Generator
2.3000A	Fuel Filter and Strainer	7.6000A	Control Cabinet
2.3000A	Fuel Filter and Strainer (Twin and Quad)	7.6000A	Control Cabinet (Twin and Quad)
2.4000	Fuel Manifold and/or Connections	7.7000A	Wiring Harness
2.4000A	Dual Fuel System	7.8000A	Air Heater
2.5000A	Fuel Lines and Fuel Cooler	7.8000A	Air Heater (Twin and Quad)
2.5000A	Fuel Lines and Fuel Cooler (Twin and Quad)	7.10000A	Hydraulic Governor Solenoid
2.6000A	Fuel Tank		
2.6000B	Electric Governor	<b>8.0000</b>	<b>POWER TAKE-OFF</b>
2.7000A	Mechanical Governor	8.1000A	Power Take-off and/or Clutch
2.8000A	Hydraulic Governor	8.1000A	Power Take-off and/or Clutch (Twin and Quad)
2.9000	Injector Controls	8.3000A	Torque Converter
2.9000	Injector Controls (Twin and Quad)	8.3000A	Torque Converter (Twin and Quad)
2.9000A	Throttle Controls	8.3000B	Transmission Lines
2.9000A	Throttle Controls (Twin and Quad)		
<b>3.0000</b>	<b>AIR SYSTEM</b>	<b>9.0000</b>	<b>TRANSMISSION AND PROPULSION</b>
3.1000A	Air Cleaner and/or Adaptor	9.1000A	Hydraulic Marine Gear
3.2000A	Air Silencer	9.1000A	Hydraulic Marine Gear (Twin and Quad)
3.3000A	Air Inlet Housing	9.2000A	Reverse and Reduction Gear (mechanical)
3.3000C	Air Intake Manifold	9.3000A	Power Transfer Gear
3.4000	Blower and Drive	9.3000A	Power Transfer Gear (Twin and Quad)
3.4000A	Blower Drive Shaft	9.4000	Transmission—Highway
3.4000B	Bicer End Plate Cover	9.7000	Transmission—Off-highway
3.5000A	Turbocharger, Intercooler, and Aftercooler	9.9000	Transmission—Rail Car
		<b>10.0000</b>	<b>SHEET METAL</b>
<b>4.0000</b>	<b>LUBRICATING SYSTEM</b>	10.1000A	Engine Hood
4.1000A	Oil Pump		
4.1000B	Oil Distribution System	<b>11.0000</b>	<b>ENGINE MOUNTING</b>
4.1000C	Oil Pressure Regulator	11.1000A	Engine Mounting and Base
4.2000A	Oil Filter	11.1000A	Engine Mounting and Base (Twin and Quad)
4.3000A	Oil Filter Lines		
4.4000A	Oil Cooler and Marine Gear Lines	<b>12.0000</b>	<b>MISCELLANEOUS</b>
4.5000A	Oil Filler	12.2000A	Bilge Pump
4.6000A	Dipstick	12.3000A	Vacuum Pump
4.7000A	Oil Pan	12.4000A	Air Compressor
4.8000A	Ventilating System	12.5000A	Hydraulic Pump
		12.6000A	Gasoline Starter
<b>5.0000</b>	<b>COOLING SYSTEM</b>	12.6000B	Air Starter
5.1000	Fresh Water Pump	12.6000C	Cold Weather Starting Aid
5.1000A	Fresh Water Pump Cover	12.6000D	Hydraulic Starter
5.2000A	Water Outlet Manifold and/or Elbow	12.6000E	Hydraulic Starter Accessories
5.2000B	Thermostat	12.8000A	Supplies
5.2000C	Water Bypass Tube	12.8000B	Fabrication Material
5.3000A	Radiator	12.8000C	Miscellaneous Service Kits and Sets
		12.8000D	Miscellaneous Service Parts

ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
* SEE ENGINE MODEL			
<b>A</b>			
ACCUMULATOR, AIR HEATER	7. 8415	BEARING, BLOWER ROTOR REAR	3. 4060
ACCUMULATOR, HYDRAULIC STARTER	12. 6570	BEARING, CAMSHAFT END	1. 7010
ADAPTOR, ACCESSORY DRIVE	1. 7622	BEARING, CLUTCH DRIVE SHAFT	8. 1680
ADAPTOR, AIR CLEANER MOUNTING	3. 1085	BEARING, CLUTCH PILOT	1. 4040
ADAPTOR, AIR COMPRESSOR	12. 4020	BEARING, CLUTCH PILOT	8. 1450
ADAPTOR, AIR INLET HOUSING	3. 3004	BEARING, CLUTCH RELEASE	8. 1290
ADAPTOR, AIR SILENCER	3. 2015	BEARING, CLUTCH SHAFT	9. 1033
ADAPTOR, CYLINDER HEAD GOVERNOR CONTROL LINK	2. 7830	BEARING, CRANKSHAFT FRONT SUPPORT	4. 1219
ADAPTOR, CYLINDER HEAD GOVERNOR CONTROL LINK	2. 8945	BEARING, FAN BELT IDLER PULLEY	5. 4332
ADAPTOR, DIPSTICK	4. 6020	BEARING, FAN SHAFT	5. 4110
ADAPTOR, DIPSTICK	4. 6030	BEARING, FRESH WATER PUMP	5. 1070
ADAPTOR, FLANGE MOUNTED ALTERNATOR	7. 1588	BEARING, FRESH WATER PUMP IDLER PUMP IDLER PULLEY	5. 1202
ADAPTOR, FLYWHEEL HOUSING	1. 5130	BEARING, GENERATOR DRIVE	7. 1535
ADAPTOR, FRESH WATER PUMP	5. 1005	BEARING, GOVERNOR DRIVE THRUST	2. 8830
ADAPTOR, FUEL PUMP DRIVE	2. 2260	BEARING, GOVERNOR DRIVEN SHAFT	2. 8810
ADAPTOR, HYDRAULIC MARINE GEAR OIL PUMP	9. 1477	BEARING, GOVERNOR OPERATING SHAFT	8. 3410
ADAPTOR, HYDRAULIC PUMP	12. 5020	BEARING, GOVERNOR OPERATING SHAFT-LOWER	2. 7270
ADAPTOR, MARINE GEAR HOUSING	9. 1007	BEARING, GOVERNOR OPERATING SHAFT-UPPER	2. 7260
ADAPTOR, OIL COOLER	4. 4110	BEARING, GOVERNOR PILOT VALVE PLUNGER THRUST	2. 8610
ADAPTOR, OIL FILLER TUBE	4. 5005	BEARING, GOVERNOR RISER THRUST	8. 3425
ADAPTOR, OIL FILTER	8. 3873	BEARING, GOVERNOR ROCKER SHAFT	8. 3440
ADAPTOR, OIL FILTER COVER	4. 2291	BEARING, GOVERNOR THROTTLE SHAFT	2. 7100
ADAPTOR, OIL FILTER TUBE (TO OIL COOLER ADAPTOR)	4. 3025	BEARING, GOVERNOR VARIABLE SPEED SPRING LEVER	2. 7732
ADAPTOR, OIL FILTER TUBE-REMOTE MOUNTED FILTER	4. 3025	BEARING, GOVERNOR VARIABLE SPEED SPRING LEVER SHAFT	2. 7712
ADAPTOR, OVERSPEED TRIP GOVERNOR	7. 4635	BEARING, GOVERNOR WEIGHT RISER THRUST	2. 7460
ADAPTOR, POWER TAKE-OFF TO CLUTCH	8. 1905	BEARING, GOVERNOR WEIGHT SHAFT END	2. 7470
ADAPTOR, TACHOMETER DRIVE CABLE	7. 4420	BEARING, HYDRAULIC STARTER END	12. 6540
ADAPTOR, TACHOMETER DRIVE COVER	7. 4457	BEARING, HYDRAULIC STARTER ENGINE PUMP	12. 6602
ADAPTOR, TACHOMETER MOUNTING	7. 4061	BEARING, HYDRAULIC STARTER ENGINE PUMP PISTON	12. 6610
ADAPTOR, TORQUE CONVERTER DIPSTICK	8. 3841	BEARING, IDLER GEAR	1. 7225
ADAPTOR, WATER TEMPERATURE GAGE	7. 4084	BEARING, MARINE GEAR INPUT SHAFT	9. 1027
ADAPTOR, WATER TEMPERATURE SWITCH	7. 4509	BEARING, OUTPUT SHAFT	9. 1097
AIR CLEANER ASSY.	3. 1001	BEARING, OVERSPEED TRIP GOVERNOR OPERATING SHAFT	7. 4647
AMMETER, BATTERY CHARGING	7. 4015	BEARING, PISTON PIN	1. 6142
ANTI-SQUEAK ENGINE HOOD	10. 1070	BEARING, PLANETARY GEAR	9. 1087
ARM ASSY., EXHAUST VALVE ROCKER	1. 8060	BEARING, RAW WATER PUMP	5. 6130
ARM ASSY., INJECTOR ROCKER	1. 8080	BEARING, REDUCTION GEAR DRIVE SHAFT PILOT	9. 1345
ARM, FAN BELT IDLER PULLEY ADJUSTING	5. 4343	BEARING, REDUCTION GEAR DRIVE SHAFT THRUST	9. 1350
ARM, IDLER PULLEY ADJUSTING	5. 1201	BEARING, ROTOR ASSY. SHAFT	3. 5027
<b>B</b>			
BAFFLE, AIR CLEANER	3. 1045	BEARING, THRUST CLUTCH HOUSING GEAR	9. 1041
BAFFLE, BREATHER	4. 8025	BELL CRANK ASSY., GOVERNOR OPERATING	2. 8965
BAFFLE, GENERATOR FAN	7. 1470	BELL CRANK, GOVERNOR TO INJECTOR LINK	2. 7823
BAFFLE, MARINE GEAR HOUSING OIL	9. 1380	BELL, ALARM SYSTEM	7. 4513
BAFFLE, MARINE GEAR OIL	9. 1380	BELLOWS ASSY., AIR SHUTDOWN	3. 4414
BAFFLE, OIL PAN	4. 7045	BELT, ACCESSORY DRIVE	1. 7625
BAFFLE, REDUCTION HOUSING OIL	9. 1386	BELT, AIR COMPRESSOR DRIVE	12. 4045
BALL HEAD ASSY., GOVERNOR	2. 8560	BELT, CRANKSHAFT PULLEY DRIVE	1. 3320
BALL HEAD, HYDRAULIC OVERSPEED TRIP GOVERNOR	7. 4617	BELT, FRESH WATER PUMP DRIVE	5. 1215
BASE KIT, GOVERNOR	2. 8690	BELT, GENERATOR DRIVE	7. 1575
BASE, ENGINE MOUNTING	11. 1001	BELT, HYDRAULIC STARTER ENGINE PUMP DRIVE	12. 6676
BASE, GOVERNOR	8. 3380	BELT, VACUUM PUMP DRIVE	12. 3030
BEARING, ACCESSORY DRIVE	1. 7655	BLADE, FAN	5. 4010
BEARING, AIR COMPRESSOR DRIVE SHAFT	12. 4048	BLADE, FAN HIGH LOW AND CRANKSHAFT MOUNTED	5. 4010
BEARING, BILGE PUMP SHAFT	12. 2100	BLOCK, CYLINDER	1. 1001
BEARING, BLOWER ROTOR FRONT	3. 4040	BLOCK, FUEL SYSTEM JUNCTION	2. 5250
		BLOCK, GOVERNOR MOTOR TERMINAL	2. 8189
		BLOCK, INSTRUMENT PANEL FUSE	7. 4135
		BLOWER	3. 4000
		BLOWER ASSY.	3. 4001

## ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>B</b>			
BLOWER DRIVE SHAFT	3. 4000A	BRACKET, GOVERNOR SPEED ADJUSTING SHAFT	8. 3455
BLOWER KIT, INSTALLATION	3. 4003	BRACKET, GOVERNOR THROTTLE SPEED ADJUSTING SHAFT	2. 7172
BLOWER KIT, REPAIR	3. 4005	BRACKET, GOVERNOR TO INJECTOR LINK BELL CRANK	2. 7821
BODY ASSY., INJECTOR	2. 1020	BRACKET, HEAT EXCHANGER MOUNTING	5. 5070
BODY ASSY., MASTER CYLINDER	12. 6810	BRACKET, HEAT EXCHANGER RAW WATER INLET TUBE CLIP	5. 5405
BODY, AIR CLEANER	3. 1030	BRACKET, HYDRAULIC STARTER ENGINE PUMP	12. 6670
BODY, AIR HEATER	7. 8030	BRACKET, HYDRAULIC STARTER HAND PUMP	12. 6684
BODY, BILGE PUMP	12. 2010	BRACKET, INJECTOR CONTROL TUBE	2. 9003
BODY, BREATHER OR SEPARATOR	4. 8050	BRACKET, LOW OIL PRESSURE SWITCH	4. 2495
BODY, FRESH WATER PUMP	5. 1030	BRACKET, OIL COOLER HOUSING SUPPORT	4. 4100
BODY, FUEL PUMP	2. 2010	BRACKET, OIL FILLER TUBE CLAMP	4. 5004
BODY, GOVERNOR	8. 3370	BRACKET, OIL FILTER LINE CLIP	4. 3050
BODY, HYDRAULIC STARTER CONTROL VALVE	12. 6517	BRACKET, OIL FILTER MOUNTING	2. 8995
BODY, HYDRAULIC STARTER ENGINE PUMP	12. 6595	BRACKET, OIL FILTER MOUNTING	4. 2440
BODY, HYDRAULIC STARTER HAND PUMP	12. 6633	BRACKET, OIL PAN DRAIN TUBE	4. 7112
BODY, OIL PUMP	4. 1040	BRACKET, OIL PUMP SCREEN SUPPORT	4. 1540
BODY, WATER FILTER	5. 7013	BRACKET, OVERSPEED VALVE MOUNTING	7. 4742
BOLT, AIR CLEANER ASSY.	3. 1070	BRACKET, RADIATOR MOUNTING	5. 3260
BOLT, CRANKSHAFT MAIN BEARING CAP	1. 3140	BRACKET, RAW WATER PUMP MOUNTING	5. 6380
BOLT, ROCKER COVER	1. 8460	BRACKET, REVERSE GEAR MOUNTING	9. 1011
BOOT, GOVERNOR TO INJECTOR LINK	2. 7834	BRACKET, ROCKER SHAFT	1. 8170
BOOT, HYDRAULIC STARTER HAND PUMP CAM	12. 6645	BRACKET, SOLENOID VALVE MOUNTING	7. 4670
BOOT, INJECTOR CONTROL TUBE LINK	2. 8950	BRACKET, STARING CONTROL ROD	7. 4567
BRACKET ASSY., TURBOCHARGER MOUNTING	3. 5300	BRACKET, STARTING AID	12. 6391
BRACKET, ACCESSORY DRIVE	1. 7607	BRACKET, THROTTLE BOOSTER SPRING	2. 7975
BRACKET, ACCESSORY MOUNTING	1. 7609	BRACKET, THROTTLE BOOSTER SPRING	2. 9344
BRACKET, AIR CLEANER MOUNTING	3. 1230	BRACKET, THROTTLE CONTROL CROSS SHAFT-ENGINE LIFTER	2. 9305
BRACKET, AIR COMPRESSOR MOUNTING	12. 4010	BRACKET, THROTTLE CONTROL KNOB SHAFT	2. 9150
BRACKET, AIR HEATER COIL	7. 8090	BRACKET, THROTTLE CONTROL SHAFT TO HEAD	2. 9275
BRACKET, AIR HEATER PUMP AND VALVE	7. 8203	BRACKET, THROTTLE CONTROL SOLENOID	2. 9357
BRACKET, AIR SHUTOFF SOLENOID	7. 4530	BRACKET, TORQUE CONVERTER OUTPUT SHAFT GOVERNOR	8. 3083
BRACKET, AIR SHUTOFF VALVE CONTROL	3. 3280	BRACKET, TRANSMISSION CABLE	2. 9960
BRACKET, BREATHER EXTENSION PIPE	4. 8183	BRACKET, TRANSMISSION CABLE MT	2. 9960
BRACKET, CONVERTER OIL FILTER MOUNTING	8. 3880	BRACKET, TURBOCHARGER MOUNTING	3. 5300
BRACKET, CYLINDER THROTTLE DELAY ROCKER SHAFT	2. 9030	BRACKET, TURBOCHARGER SUPPORT	3. 5002
BRACKET, DRAIN TANK MOUNTING	1. 1240	BRACKET, WATER FILTER MOUNTING	5. 7080
BRACKET, ENGINE LIFTER-FRONT	1. 2070	BRACKET, WATER HEATER	12. 6406
BRACKET, ENGINE LIFTER-REAR	1. 2080	BREATHER ASSY.	4. 8045
BRACKET, ENGINE SUPPORT	11. 1075	BREATHER, MARINE GEAR	9. 1840
BRACKET, EXPANSION TANK INLET CONNECTION	5. 3315	BRIDGE, EXHAUST VALVE	1. 8343
BRACKET, FAN BELT IDLER PULLEY	5. 4337	BUSHING AND SCREEN ASSY., STARTING AID TANK AND STRAINER	12. 6363
BRACKET, FAN BELT IDLER PULLEY ADJUSTING ARM STOP	5. 4346	BUSHING INJECTOR ROCKER ARM-LARGE	1. 8110
BRACKET, FAN BELT IDLER PULLEY SPRING	5. 4355	BUSHING, BILGE PUMP SHAFT	12. 2090
BRACKET, FAN SHAFT	5. 4090	BUSHING, CONNECTING ROD PISTON PIN	1. 6040
BRACKET, FILTER TO CYLINDER HEAD CLIP	2. 5190	BUSHING, GOVERNOR SPEED ADJUSTING SHAFT SLEEVE	2. 8364
BRACKET, FRESH WATER PUMP IDLER PULLEY	5. 1205	BUSHING, GOVERNOR SPEED ADJUSTING TERMINAL SLEEVE	2. 8483
BRACKET, FUEL DRAIN CLIP	2. 5230	BUSHING, GOVERNOR TO INJECTOR LINK BELL CRANK	2. 7825
BRACKET, FUEL FILTER MOUNTING	2. 3530	BUSHING, INJECTOR AND EXHAUST VALVE ROCKER ARM CLEVIS	1. 8140
BRACKET, FUEL PRIMER	12. 6658	BUSHING, INJECTOR AND EXHAUST VALVE ROCKER ARM-SMALL	1. 8120
BRACKET, FUEL STRAINER MOUNTING	2. 3260	BUSHING, MUFFLER PIPE	6. 2005
BRACKET, GENERATOR ADJUSTING STRAP	7. 1582	BUSHING, OIL PUMP BODY	4. 1050
BRACKET, GENERATOR DRIVE BELT AND PULLEY GUARD	7. 1587	BUSHING, OIL PUMP COVER	4. 1240
BRACKET, GENERATOR MOUNTING	7. 1595	BUSHING, OIL PUMP DRIVEN GEAR	4. 1210
BRACKET, GENERATOR VOLTAGE REGULATOR MOUNTING	7. 1606	BUSHING, OVERSPEED TRIP GOVERNOR HOUSING	7. 4615
BRACKET, GOVERNOR	2. 8920	BUSHING, PISTON PIN	1. 6145
BRACKET, GOVERNOR AND TRANSMISSION CONTROL MT	2. 9920		
BRACKET, GOVERNOR CONTROL RETRACTING SPRING	2. 9406		
BRACKET, GOVERNOR CONTROL SHAFT REAR	2. 9220		
BRACKET, GOVERNOR SOLENOID VALVE MOUNTING	2. 7922		
BRACKET, GOVERNOR SPEED ADJUSTING LEVER	2. 8440		

ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>B</b>			
BUSHING, STARTING MOTOR CABLE INSULATION	11. 1035	CLAMP, HEAT EXCHANGER TO WATER PUMP HOSE	5. 3341
BUSHING, THROTTLE CONTROL SHAFT BRACKET	2. 9160	CLAMP, INJECTOR	2. 1270
BUSHING, VERNIER THROTTLE CONTROL WORM	2. 9142	CLAMP, OIL COOLER WATER INLET	4. 4214
BUTTON, VERNIER THROTTLE CONTROL LOCK	2. 9145	CLAMP, OIL COOLER WATER INLET HOSE	4. 4214
<b>C</b>			
CABINET, POWER GENERATOR CONTROL	7. 6001	CLAMP, OIL PRESSURE GAGE	7. 4072
CABLE ASSY., TRANSMISSION CONTROL	2. 9940	CLAMP, OIL TEMPERATURE GAGE	7. 4078
CABLE ASSY., TRANSMISSION CONTROL MT	2. 9940	CLAMP, RADIATOR INLET HOSE	5. 3300
CABLE, FLEXIBLE SHAFT	12. 8500	CLAMP, RADIATOR OUTLET HOSE	5. 3340
CABLE, GENERATOR TO CONTROL CABINET	7. 7220	CLAMP, TACHOMETER	7. 4065
CABLE, TACHOMETER DRIVE FLEXIBLE	7. 4408	CLAMP, TACHOMETER DRIVE ADAPTOR	
CAGE, INJECTOR CHECK VALVE	2. 1205	RETAINING	7. 4433
CAGE, INJECTOR VALVE	2. 1265	CLAMP, WATER TEMPERATURE GAGE	7. 4082
CAGE, INJECTOR VALVE SPRING	2. 1257	CLEVIS, INJECTOR AND EXHAUST VALVE ROCKER ARM	1. 8130
CAGE, PLANETARY GEAR	9. 1081	CLIP, AIR BOX DRAIN TUBE	1. 1145
CAM, AIR SHUTDOWN SHAFT	3. 4424	CLIP, AIR COMPRESSOR BOOSTER INLET TUBE AND ELBOW ASSY.	12. 4377
CAM, BLOWER DRIVE COUPLING	3. 4390	CLIP, AIR COMPRESSOR LUBE OIL TUBE	12. 4080
CAM, FUEL MODULATING	2. 9085	CLIP, AIR COMPRESSOR WATER TUBE	12. 4095
CAM, HYDRAULIC STARTER HAND PUMP	12. 6643	CLIP, AIR HEATER INLET AND OUTLET TUBE	7. 8320
CAM, NEUTRAL	9. 1157	CLIP, AIR INLET HOUSING SHUTDOWN CONTROL WIRE	3. 3270
CAM, OVERSPEED VALVE ADJUSTING	7. 4740	CLIP, BREATHER TUBE	4. 8040
CAM, RAW WATER PUMP BODY OFFSET	5. 6035	CLIP, CYLINDER HEAD INLET	2. 5180
CAMSHAFT AND GEAR TRAIN	1. 7000	CLIP, DIPSTICK	4. 6040
CAMSHAFT ASSY.	1. 7001	CLIP, DIPSTICK TORQUE CONVERTER	8. 3842
CAP AND SPACER, FAN HUB	5. 4180	CLIP, EXPANSION TANK OVERFLOW TUBE	5. 5200
CAP, CRANKSHAFT MAIN BEARING	1. 3110	CLIP, FILTER OUTLET TUBE	2. 5156
CAP, EXHAUST PIPE	6. 2093	CLIP, FILTER TO FUEL MANIFOLD TUBE	2. 5155
CAP, EXHAUST VALVE SPRING	1. 8350	CLIP, FUEL COOLER INLET LINES	2. 5216
CAP, EXPANSION TANK	5. 5140	CLIP, FUEL DRAIN	2. 5220
CAP, FUEL TANK	2. 6030	CLIP, FUEL DRAIN CROSSOVER	2. 5207
CAP, GOVERNOR LOW SPEED SPRING	2. 7580	CLIP, FUEL PUMP DRAIN TUBE	2. 2320
CAP, GOVERNOR SPEED ADJUSTING SHAFT SPACER	2. 8365	CLIP, FUEL PUMP TO FILTER HOSE	2. 5120
CAP, GOVERNOR WEIGHT HOUSING	2. 7510	CLIP, FUEL SUPPLY CROSSOVER TUBE	2. 5164
CAP, HYDRAULIC STARTER ACCUMULATOR	12. 6573	CLIP, FUEL SUPPLY TO STRAINER	2. 5020
CAP, HYDRAULIC STARTER RESERVOIR	12. 6555	CLIP, FUEL SYSTEM FLEXIBLE HOSE	12. 8554
CAP, INJECTOR FILTER	2. 1130	CLIP, GOVERNOR CONTROL WIRE TUBE	2. 9428
CAP, INJECTOR SHIPPING	2. 1150	CLIP, GOVERNOR THROTTLE LEVER RETURN SPRING	2. 7912
CAP, OIL FILLER	4. 5010	CLIP, HEAT EXCHANGER RAW WATER INLET TUBE	5. 5390
CAP, OVERSPEED TRIP GOVERNOR SPRING	7. 4653	CLIP, OIL COOLER LINES	4. 4345
CAP, RADIATOR FILLER	5. 3120	CLIP, OIL COOLER TO CONVERTER TUBE	8. 3819
CAP, REDUCTION GEAR OIL FILLER	9. 1415	CLIP, OIL FILTER LINE	4. 3045
CAP, STARTING AID TANK PRESSURE	12. 6360	CLIP, OIL PAN DRAIN TUBE	4. 7101
CARRIER, FLYWHEEL PILOT BEARING	1. 4055	CLIP, OIL PRESSURE GAGE TUBE	7. 4076
CARRIER, GOVERNOR WEIGHT SHAFT	2. 7370	CLIP, SHUTDOWN RESET LEVER ROD	3. 3127
CARTON ENGINE PART	12. 8050	CLIP, SOLENOID VALVE TUBE	2. 7928
CASING, FLEXIBLE SHAFT	12. 8502	CLIP, STRAINER TO FUEL PUMP	2. 5070
CATCH, ENGINE HOOD HOLD DOWN CLAMP	10. 1050	CLIP, TRANSMISSION	2. 9950
CATCH, ENGINE HOOD SIDE PANEL	10. 1057	CLIP, TRANSMISSION CABLE MT	2. 9950
CHAIN, OIL FILLER CAP	4. 5030	CLIP, TURBOCHARGER OIL RETURN TUBE	3. 5507
CLAMP, AIR COMPRESSOR WATER TUBE HOSE	12. 4097	CLIP, TURBOCHARGER OIL SUPPLY TUBE	3. 5502
CLAMP, AIR INLET PIPE HOSE	3. 1280	CLIP, WATER BYPASS TUBE	5. 2190
CLAMP, AIR SILENCER OUTLET ELBOW HOSE	3. 2024	CLIP, WIRING HARNESS	7. 7010
CLAMP, AMMETER	7. 4020	CLUTCH ASSY.	8. 1017
CLAMP, BLOWER DRIVE COVER PACKING	3. 4227	CLUTCH, HYDRAULIC STARTER DRIVE	12. 6506
CLAMP, BLOWER DRIVE COVER SEAL	3. 4227	COIL ASSY., AIR HEATER	7. 8080
CLAMP, BLOWER VALVE (MINI-BYPASS)	3. 4146	COLD WEATHER STARTING AID KIT	12. 6301
CLAMP, BREATHER EXTENSION PIPE HOSE	4. 8180	COLLAR, CLUTCH RELEASE	8. 1295
CLAMP, EXHAUST MANIFOLD FRESH WATER INLET HOSE	5. 3434	COLLAR, GOVERNOR DRIVE SHAFT	2. 8620
CLAMP, EXHAUST MANIFOLD FRESH WATER OUTLET HOSE	5. 3445	COLLAR, THROTTLE CONTROL CROSS SHAFT	2. 9330
CLAMP, FUEL PRESSURE GAGE	7. 4093	COLLAR, TURBOCHARGER ROTOR THRUST	3. 5034
CLAMP, HEAT EXCHANGER FRESH WATER INLET HOSE	5. 3305	COMPRESSOR ASSY., AIR	12. 4001
		CONE, CRANKSHAFT PULLEY	1. 3295

## ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>C</b>			
CONE, POWER TAKE-OFF ADAPTOR	8. 1907	COVER, ENGINE FRONT-LOWER	1. 3162
CONE, RAW WATER PUMP CLUTCH	5. 6600	COVER, ENGINE FRONT-LOWER	4. 1218
CONE, VIBRATION DAMPER-FRONT	1. 3240	COVER, ENGINE FRONT-UPPER	1. 3161
CONE, VIBRATION DAMPER-REAR	1. 3250	COVER, FAST IDLE AIR CYLINDER	2. 7855
CONNECTING ROD AND PISTON	1. 6000	COVER, FLYWHEEL HOUSING INSPECTION HOLE	1. 5080
CONNECTING ROD ASSY.	1. 6001	COVER, FLYWHEEL HOUSING LARGE HOLE	1. 5030
CONNECTION, EXPANSION TANK INLET	5. 3313	COVER, FLYWHEEL HOUSING SMALL HOLE	1. 5050
CONNECTION, FLEXIBLE EXHAUST	6. 2095	COVER, FRESH WATER PUMP BODY	5. 1031
CONNECTION, HEAT EXCHANGER INLET	5. 3314	COVER, FUEL FILTER	2. 3390
CONNECTION, HEAT EXCHANGER WATER OUTLET	5. 3312	COVER, FUEL PUMP	2. 2030
CONNECTION, OIL COOLER WATER INLET	4. 4211	COVER, FUEL STRAINER	2. 3080
CONNECTION, OIL COOLER WATER INLET	5. 3350	COVER, GOVERNOR	2. 8040
CONNECTION, RADIATOR INLET	5. 3270	COVER, GOVERNOR BREATHER HOLE	2. 7005
CONNECTION, RADIATOR OUTLET	5. 3310	COVER, GOVERNOR FUEL ROD SPRING	2. 8085
CONNECTION, RAW WATER PUMP INLET AT GEAR BOX	5. 6500	COVER, GOVERNOR HIGH SPEED SPRING	2. 7630
CONNECTION, TACHOMETER SHAFT	8. 3475	COVER, GOVERNOR VARIABLE SPEED SPRING HOUSING	2. 7692
CONNECTION, THERMOSTAT HOUSING WATER OUTLET	5. 3275	COVER, GOVERNOR WEIGHT HOUSING	2. 7520
CONNECTIONS, TURBOCHARGER EXHAUST INLET	3. 5305	COVER, HEAT EXCHANGER	5. 5030
CONNECTOR, EXHAUST MANIFOLD FRESH WATER INLET	5. 3430	COVER, HEAT EXCHANGER TANK OUTLET	5. 3333
CONNECTOR, FUEL PIPE	2. 4030	COVER, HYDRAULIC STARTER END	12. 6543
CONNECTOR, TURBOCHARGER EXHAUST INLET	3. 5305	COVER, INJECTOR CONTROL AIR CYLINDER	2. 9092
CONTAINER, INJECTOR SHIPPING	2. 1010	COVER, INSTRUMENT PANEL	7. 4012
CONTROL, VERNIER THROTTLE	2. 9133	COVER, MASTER CYLINDER RESERVOIR	12. 6812
CONVERSION KIT, MARINE GEAR	9. 1017	COVER, OIL COOLER HOUSING	4. 4060
CONVERSION KIT, MARINE GEAR DRIVE RUBBER BLOCK	9. 1016	COVER, OIL FILTER	4. 2290
CONVERTER ASSY., TORQUE	8. 3001	COVER, OIL PAN	4. 7120
COOLER ASSY., FUEL	2. 5212	COVER, OIL PUMP	4. 1220
CORE ASSY., OIL COOLER	4. 4001	COVER, OUTPUT SHAFT BEARING	9. 1099
CORE, HEAT EXCHANGER	5. 5003	COVER, OVERSPEED TRIP GOVERNOR HOUSING	7. 4630
CORE, OIL COOLER-ENGINE	4. 4001	COVER, OVERSPEED VALVE	7. 4729
COUPLING ASSY., POWER TAKE-OFF	8. 1910	COVER, RADIATOR FILLER CAP	5. 3151
COUPLING, ACCESSORY DRIVE	1. 7635	COVER, RAW WATER PUMP	5. 6090
COUPLING, AIR COMPRESSOR DRIVE	12. 4050	COVER, REDUCTION GEAR BEARING	9. 1365
COUPLING, BLOWER DRIVE	3. 4370	COVER, SELECTOR VALVE	9. 1178
COUPLING, ENGINE DRIVE SHAFT FLEXIBLE	1. 4060	COVER, TACHOMETER DRIVE	7. 4445
COUPLING, FUEL PUMP DRIVE	2. 2230	COVER, THERMOSTAT HOUSING	5. 2120
COUPLING, GENERATOR DRIVE	7. 1580	COVER, TRANSMISSION CABLE BRACKET MT	2. 9970
COUPLING, GENERATOR DRIVE-INNER	7. 1560	COVER, VERNIER THROTTLE CONTROL	2. 9149
COUPLING, HYDRAULIC PUMP DRIVE	12. 5010	COVER, WATER FILTER	5. 7034
COUPLING, MARINE GEAR DRIVE	9. 1006	CRANKSHAFT	1. 3000
COUPLING, PROPELLER DRIVE SHAFT	9. 1440	CRANKSHAFT ASSY.	1. 3001
COUPLING, RAW WATER PUMP DRIVE	5. 6420	CRANKSHAFT FRONT COVER	1. 3000A
COUPLING, THROTTLE CONTROL SHAFT	2. 9190	CRANKSHAFT PULLEY	1. 3000C
COVER ASSY., DRIVE	1. 7700	CRANKSHAFT PULLEY BELT	1. 3000D
COVER ASSY., GOVERNOR-COMPLETE	2. 7045	CRANKSHAFT, FRONT SUPPORT ASSY.	1. 3164
COVER ASSY., GOVERNOR-LESS SHAFT AND LEVERS	2. 7050	CRANKSHAFT, FRONT SUPPORT BEARING	1. 3165
COVER ASSY., ROCKER	1. 8450	CRANKSHAFT, FRONT SUPPORT SEAL RING	1. 3163
COVER, AIR CLEANER	3. 1020	CUP, AIR CLEANER	3. 1010
COVER, AIR SHUTDOWN HOUSING	3. 4418	CUP, BILGE PUMP GREASE	12. 2130
COVER, AIR SHUTOFF CONTROL HOUSING	7. 4553	CUSHION, ENGINE MOUNTING BASE ISOLATION PAD	11. 1010
COVER, BALANCE WEIGHT	1. 7470	CUTOUT ASSY., GENERATOR VOLTAGE REGULATOR	7. 1607
COVER, BLOWER HOUSING END PLATE	3. 4180	CYLINDER ASSY., FAST IDLE AIR	2. 7850
COVER, BREATHER HOLE-IN BLOCK	4. 8195	CYLINDER ASSY., MASTER REMOTE CONTROL	12. 6808
COVER, CLUTCH HOUSING INSPECTION HOLE	8. 1060	CYLINDER ASSY., THROTTLE CONTROL AIR	2. 9860
COVER, CLUTCH RELEASE YOKE LUBRICATION	8. 1318	CYLINDER BLOCK	1. 1000
COVER, CRANKSHAFT FRONT	1. 3160	CYLINDER HEAD	1. 2000
COVER, CYLINDER BLOCK HAND HOLE	1. 1040	CYLINDER KIT	1. 6182
COVER, CYLINDER BLOCK OIL HOLE	1. 1065	CYLINDER, FORWARD CLUTCH PISTON	9. 1223
COVER, CYLINDER BLOCK WATER HOLE	1. 1060		
COVER, CYLINDER BLOCK WATER HOLE COVER	12. 6409	<b>D</b>	
COVER, CYLINDER HEAD WATER HOLE	1. 2043	DAMPER, VIBRATION	1. 3210
COVER, ENGINE FRONT - LOWER	4. 1218	DEFLECTOR, INJECTOR SPILL	2. 1050
		DEFLECTOR, ROTOR ASSY. SHAFT OIL	3. 5029

## ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>D</b>			
DIAPHRAM, GOVERNOR WEIGHT SHAFT	2. 7502	FLANGE, EXHAUST	6. 2085
DIAPHRAM, OVERSPEED VALVE PISTON	7. 4733	FLANGE, EXHAUST MANIFOLD WATER OUTLET	5. 3460
DIPSTICK	4. 6000A	FLANGE, MARINE GEAR DRIVE	9. 1004
DIPSTICK	4. 6001	FLANGE, OIL COOLER WATER OUTLET	4. 4242
DIPSTICK, REDUCTION GEAR	9. 1395	FLANGE, PROPELLER DRIVE	9. 1430
DIPSTICK, TORQUE CONVERTER	8. 3840	FLYWHEEL	1. 4000A
DISC ASSY., CLUTCH	8. 1020	FLYWHEEL ASSY.	1. 4001
DISC, FLYWHEEL FLEXIBLE COUPLING	1. 4075	FLYWHEEL CASTING	12. 8565
DISC, FUEL PUMP DRIVE	2. 2228	FOLLOWER ASSY., CAM	1. 8260
DRAINCOCK, FUEL FILTER	2. 3500	FOLLOWER, INJECTOR	2. 1060
DRIVE ASSY., GENERATOR	7. 1507	FORK, CLUTCH RELEASE	8. 1280
DRIVE ASSY., GOVERNOR	2. 8750	FORK, FUEL PUMP COUPLING	2. 2220
DRIVE GEAR AND SHAFT ASSY., TACHOMETER		FORK, GOVERNOR OPERATING	8. 3430
DRIVE CABLE ADAPTOR	7. 4423	FORK, GOVERNOR OPERATING SHAFT-LOWER	2. 7290
DRIVE UNIT, TACHOMETER	7. 4062	FORK, GOVERNOR SPEED ADJUSTING LINKAGE	
DRIVE, HYDRAULIC STARTER ENGINE PUMP	12. 6594	SPRING	2. 8435
DRIVEN GEAR AND SHAFT ASSY., TACHOMETER		FORK, HYDRAULIC STARTER CLUTCH	12. 6509
DRIVE CABLE ADAPTOR	7. 4425	FUEL FILTER	2. 3000A
<b>E</b>			
ELBOW, OIL COOLER WATER-INLET	5. 3418	FUEL MANIFOLD	2. 4000
ELBOW, OIL COOLER WATER-OUTLET	5. 3420	FUEL PUMP	2. 2000
ELBOW, THERMOSTAT HOUSING COVER OUTLET	5. 2122		
ELBOW, THERMOSTAT HOUSING OUTLET	5. 2092	<b>F</b>	
ELBOW, TURBOCHARGER AIR OUTLET	3. 5417	FACING, CLUTCH	8. 1030
ELBOW, WATER OUTLET MANIFOLD	5. 2035	FAN, GENERATOR	7. 1440
ELBOW, WATER PUMP INLET	5. 3335	FERRULE AND NUT, FLEXIBLE SHAFT CASING	12. 8514
ELECTRICAL	7. 1000	FILLER TUBE	4. 5000A
ELECTRODE, AIR HEATER	7. 8120	FILTER ASSY., CONVERTER OIL	8. 3870
ELECTRODE, HEAT EXCHANGER	5. 5010	FILTER ASSY., FUEL	2. 3310
ELEMENT, AIR CLEANER	3. 1050	FILTER ASSY., HYDRAULIC STARTER	12. 6801
ELEMENT, AIR SILENCER	3. 2002	FILTER ASSY., OIL	4. 2240
ELEMENT, CONVERTER OIL FILTER	8. 3872	FILTER ASSY., OIL-FULL FLOW	2. 8985
ELEMENT, DRAIN TANK	1. 1180	FILTER ASSY., WATER	5. 7001
ELEMENT, FUEL FILTER	2. 3320	FILTER KIT, CONVERSION	2. 1132
ELEMENT, FUEL STRAINER	2. 3010	FILTER UNIT, BREATHER	4. 8060
ELEMENT, HYDRAULIC STARTER FILTER	12. 6805	FILTER, AIR HEATER	7. 8060
ELEMENT, INJECTOR FILTER	2. 1110	FILTER, HYDRAULIC STARTER RESERVOIR	12. 6558
ELEMENT, OIL FILTER	2. 8986	FITTING, AUXILIARY PUMP AND TANK	2. 5004
ELEMENT, OIL FILTER	4. 2250	FITTING, CLUTCH DRIVE SHAFT BEARING GREASE	8. 1685
ELEMENT, WATER FILTER	5. 7020	FITTING, CLUTCH PILOT BEARING GREASE	8. 1455
EXHAUST MANIFOLD	6. 1000A	FITTING, FUEL SYSTEM FLEXIBLE HOSE END	12. 8552
EXTENSION, BREATHER TUBE	4. 8010		
EYE, THROTTLE BOOSTER ADJUSTING	2. 7982	<b>G</b>	
EYE, THROTTLE BOOSTER ADJUSTING	2. 9348	GAGE, OIL TEMPERATURE	7. 4077
<b>F</b>			
		GAGE, AIR HEATER PRESSURE	7. 8342
		GAGE, FUEL PRESSURE	7. 4091
		GAGE, HYDRAULIC STARTER PRESSURE	12. 6585
		GAGE, OIL PRESSURE-ENGINE	7. 4070
		GAGE, OIL PRESSURE-REVERSE GEAR OR TORQUE	
		CONVERTER	7. 4071
		GAGE, WATER TEMPERATURE	7. 4080
		GASKET	9. 1148
		GASKET BREATHER TUBE	4. 8020
		GASKET KIT, CYLINDER HEAD OVERHAUL	1. 2002
		GASKET KIT, ENGINE OVERHAUL	1. 1002
		GASKET SET, BILGE PUMP BODY	12. 2030
		GASKET, ACCESSORY DRIVE	1. 7604
		GASKET, ACCESSORY DRIVE ADAPTOR	1. 7623
		GASKET, AIR BOOSTER INLET TUBE AND ELBOW	
		TO AIR COMPRESSOR	12. 4380
		GASKET, AIR CLEANER BOTTOM	3. 1060
		GASKET, AIR CLEANER COVER	3. 1025
		GASKET, AIR CLEANER MOUNTING ADAPTOR	3. 1087
		GASKET, AIR CLEANER SCREEN	3. 1055
		GASKET, AIR COMPRESSOR ADAPTOR	12. 4025
		GASKET, AIR COMPRESSOR BOOSTER TUBE	12. 4380
		GASKET, AIR COMPRESSOR MOUNTING	12. 4005
		GASKET, AIR CYLINDER COVER	2. 9093
		GASKET, AIR HEATER	7. 8020
		GASKET, AIR HEATER INSULATOR	7. 8140
		GASKET, AIR INLET HOUSING	3. 3010
		GASKET, AIR INLET HOUSING FLANGE	3. 3007
		GASKET, AIR SILENCER	3. 2012
		GASKET, BALANCE WEIGHT COVER	1. 7480
		GASKET, BLOWER	3. 4010
		GASKET, BLOWER DRIVE GEAR HUB SUPPORT	3. 4360
		GASKET, BLOWER HOUSING END PLATE COVER	3. 4190
		GASKET, BREATHER BODY OR SEPARATOR	4. 8070
		GASKET, BREATHER SHELL COVER	4. 8057
		GASKET, CLUTCH HOUSING INSPECTION HOLE	
		COVER	8. 1070
		GASKET, CONVERTER OIL FILTER SHELL	8. 3875
		GASKET, CRANKSHAFT FRONT COVER	1. 3170
		GASKET, CRANKSHAFT FRONT COVER	4. 1229
		GASKET, CRANKSHAFT FRONT COVER PLATE	1. 3172
		GASKET, CYLINDER BLOCK END PLATE-FRONT	1. 1030
		GASKET, CYLINDER BLOCK HAND HOLE COVER	1. 1050

ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>G</b>			
GASKET, CYLINDER BLOCK OIL HOLE COVER	1. 1066	GASKET, HEAT EXCHANGER TANK OUTLET CONNECTION	5. 3325
GASKET, CYLINDER BLOCK WATER HOLE COVER	1. 1070	GASKET, HEAT EXCHANGER WATER OUTLET TUBE	5. 5570
GASKET, CYLINDER HEAD COMPRESSION	1. 2010	GASKET, HYDRAULIC MARINE GEAR OIL PUMP	9. 1480
GASKET, CYLINDER HEAD WATER AND OIL	1. 2022	GASKET, HYDRAULIC MARINE GEAR OIL PUMP ADAPTOR	9. 1478
GASKET, CYLINDER HEAD WATER HOLE COVER	1. 2044	GASKET, HYDRAULIC PUMP	12. 5005
GASKET, DIPSTICK	4. 6010	GASKET, HYDRAULIC PUMP ADAPTOR	12. 5021
GASKET, DRIVE TO GOVERNOR	2. 8760	GASKET, HYDRAULIC STARTER	12. 6502
GASKET, EXHAUST MANIFOLD	6. 1010	GASKET, HYDRAULIC STARTER ENGINE PUMP BODY	12. 6598
GASKET, EXHAUST MANIFOLD COVER PLATE	6. 1110	GASKET, HYDRAULIC STARTER MOTOR HOUSING	12. 6530
GASKET, EXHAUST MANIFOLD FRESH WATER INLET	5. 3431	GASKET, INJECTOR FILTER CAP	2. 1140
GASKET, EXHAUST MANIFOLD WATER OUTLET	5. 3461	GASKET, LOWER OIL PAN	4. 7040
GASKET, EXHAUST OUTLET	6. 2105	GASKET, MARINE GEAR HOUSING	9. 1008
GASKET, EXPANSION TANK FILLER NECK	5. 5130	GASKET, MARINE GEAR HOUSING-REAR	9. 1102
GASKET, EXPANSION TANK INLET CONNECTION	5. 3322	GASKET, MASTER CYLINDER RESERVOIR COVER	12. 6813
GASKET, FLANGE MOUNTED ALTERNATOR ADAPTOR	4. 1589	GASKET, OIL COOLER ADAPTOR	4. 4115
GASKET, FLYWHEEL HOUSING	1. 5010	GASKET, OIL COOLER ADAPTOR TO BLOCK	4. 4115
GASKET, FLYWHEEL HOUSING BELL	1. 5020	GASKET, OIL COOLER BYPASS VALVE PLUG	4. 4170
GASKET, FLYWHEEL HOUSING LARGE HOLE COVER	1. 5040	GASKET, OIL COOLER CORE INNER	4. 4030
GASKET, FLYWHEEL HOUSING SMALL HOLE COVER	1. 5060	GASKET, OIL COOLER CORE OUTER	4. 4040
GASKET, FRESH WATER PUMP	5. 1010	GASKET, OIL COOLER CORE-INNER	4. 4030
GASKET, FRESH WATER PUMP ADAPTOR	5. 1006	GASKET, OIL COOLER CORE-OUTER	4. 4040
GASKET, FRESH WATER PUMP BODY COVER	5. 1032	GASKET, OIL COOLER HOUSING	4. 4055
GASKET, FUEL FILTER COVER SCREW	2. 3420	GASKET, OIL COOLER HOUSING (TO BLOCK)	4. 4055
GASKET, FUEL FILTER COVER SHELL	2. 3400	GASKET, OIL COOLER HOUSING COVER	4. 4061
GASKET, FUEL FILTER MOUNTING BRACKET	2. 3570	GASKET, OIL COOLER WATER INLET CONNECTION	4. 4212
GASKET, FUEL PUMP MOUNTING PLATE	2. 2237	GASKET, OIL COOLER WATER INLET CONNECTION	5. 3360
GASKET, FUEL PUMP TO ENGINE	2. 2007	GASKET, OIL COOLER WATER OUTLET ELBOW	5. 3421
GASKET, FUEL PUMP VALVE PLUG	2. 2180	GASKET, OIL COOLER WATER OUTLET FLANGE	4. 4244
GASKET, FUEL STRAINER COVER	2. 3090	GASKET, OIL FILLER TUBE	4. 5050
GASKET, FUEL STRAINER COVER SCREW	2. 3130	GASKET, OIL FILTER ADAPTOR	4. 2350
GASKET, FUEL STRAINER MOUNTING BRACKET	2. 3270	GASKET, OIL FILTER ADAPTOR TO OIL COOLER ADAPTOR	4. 2293
GASKET, FUEL TANK CAP	2. 6035	GASKET, OIL FILTER BYPASS PLUG	4. 2489
GASKET, GENERATOR DRIVE	7. 1508	GASKET, OIL FILTER BYPASS VALVE HOUSING	4. 2389
GASKET, GENERATOR DRIVE BEARING AND OIL SEAL RETAINER	7. 1525	GASKET, OIL FILTER BYPASS VALVE PLUG	8. 3890
GASKET, GOVERNOR BODY TO BASE	8. 3390	GASKET, OIL FILTER COVER	4. 2300
GASKET, GOVERNOR BREATHER HOLE COVER	2. 7006	GASKET, OIL FILTER COVER NUT	4. 2330
GASKET, GOVERNOR CONTROL HOUSING MOUNTING	2. 7232	GASKET, OIL FILTER ELEMENT	2. 8987
GASKET, GOVERNOR COVER	2. 7051	GASKET, OIL FILTER TUBE ADAPTOR	4. 3027
GASKET, GOVERNOR COVER	2. 8045	GASKET, OIL FILTER TUBE ADAPTOR REMOTE MOUNTED FILTER	4. 3027
GASKET, GOVERNOR FUEL ROD SPRING COVER	2. 8086	GASKET, OIL PAN COVER	4. 7130
GASKET, GOVERNOR HIGH SPEED SPRING COVER	2. 7650	GASKET, OIL PAN DRAIN PLUG	4. 7090
GASKET, GOVERNOR HOUSING DUMMY HOLE PLUG	2. 8210	GASKET, OIL PAN TO BLOCK	4. 7030
GASKET, GOVERNOR RELIEF VALVE	2. 8640	GASKET, OIL PRESSURE REGULATOR PLUG	4. 1720
GASKET, GOVERNOR SPEED ADJUSTING SHAFT	2. 8363	GASKET, OIL PUMP COVER	4. 1230
GASKET, GOVERNOR SPEED ADJUSTING SHAFT SPACER CAP	2. 8367	GASKET, OIL PUMP INLET PIPE	4. 1520
GASKET, GOVERNOR TO BLOWER	2. 8035	GASKET, OIL PUMP OUTLET PIPE	4. 1590
GASKET, GOVERNOR TO BLOWER-GOVERNOR DRIVE	2. 7010	GASKET, OIL PUMP RELIEF VALVE	4. 1280
GASKET, GOVERNOR VARIABLE SPEED SPRING HOUSING	2. 7700	GASKET, OIL PUMP TO CYLINDER BLOCK	4. 1007
GASKET, GOVERNOR WEIGHT HOUSING CAP	2. 7515	GASKET, OVERSPEED TRIP GOVERNOR ADAPTOR	7. 4638
GASKET, GOVERNOR WEIGHT HOUSING COVER	2. 7530	GASKET, RADIATOR FILLER CAP	5. 3130
GASKET, HEAT EXCHANGER COVER	5. 5050	GASKET, RAW WATER PUMP	5. 6350
GASKET, HEAT EXCHANGER MOUNTING BRACKET	5. 5080	GASKET, RAW WATER PUMP ADAPTOR	5. 6012
GASKET, HEAT EXCHANGER RAW WATER INLET TUBE	5. 5460	GASKET, RAW WATER PUMP COVER	5. 6100
GASKET, HEAT EXCHANGER TANK INLET CONNECTION	5. 3323	GASKET, RAW WATER PUMP FLANGE	5. 5410
		GASKET, RAW WATER PUMP INLET CONNECTION	5. 6510
		GASKET, REDUCTION GEAR ADAPTOR	9. 1283
		GASKET, REDUCTION GEAR BEARING COVER	9. 1370
		GASKET, REDUCTION GEAR DIPSTICK	9. 1405
		GASKET, REDUCTION GEAR HOUSING	9. 1286

ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>G</b>			
GASKET, ROCKER COVER	1. 8455	GENERATOR, TACHOMETER ELECTRICAL	7. 4470
GASKET, SELECTOR VALVE COVER	9. 1179	GLAND, BILGE PUMP SHAFT PACKING	12. 2070
GASKET, SELECTOR VALVE PRESSURE REGULATOR	9. 1191	GLAND, HEAT EXCHANGER SEAL RETAINER	5. 5027
GASKET, STARTING FLUID STRAINER ASSY.	12. 6390	GOVERNOR ASSY.	2. 7001
GASKET, STARTING MOTOR	7. 3004	GOVERNOR ASSY.	2. 8030
GASKET, STARTING MOTOR HOLE COVER	1. 5075	GOVERNOR KIT, AIR COMPRESSOR	12. 4305
GASKET, TACHOMETER DRIVE CABLE ADAPTOR	7. 4421	GOVERNOR, AIR COMPRESSOR	12. 4305
GASKET, TACHOMETER DRIVE COVER ADAPTOR	7. 4455	GOVERNOR, OVERSPEED TRIP	7. 4611
GASKET, THERMOSTAT HOUSING	5. 2110	GOVERNOR, TORQUE CONVERTER OUTPUT SHAFT	8. 3077
GASKET, THERMOSTAT HOUSING COVER	5. 2130	GUARD, FAN	5. 4580
GASKET, THERMOSTAT HOUSING WATER OUTLET CONNECTION	5. 3281	GUARD, FLANGE MOUNTED ALTERNATOR FAN	7. 1586
GASKET, THROTTLE CONTROL CROSS SHAFT BRACKET TO HEAD	2. 9306	GUARD, FLANGED MOUNTED ALTERNATOR FAN	7. 1586
GASKET, TURBOCHARGER AIR OUTLET ELBOW	3. 5418	GUARD, FRESH WATER PUMP DRIVE BELT	5. 1218
GASKET, TURBOCHARGER EXHAUST INLET CONNECTION	3. 5307	GUARD, GENERATOR DRIVE BELT AND PULLEY	7. 1585
GASKET, TURBOCHARGER EXHAUST OUTLET	3. 5325	GUARD, HYDRAULIC STARTER ENGINE PUMP BELT	12. 6672
GASKET, VACUUM PUMP	12. 3005	GUIDE ASSY., OVERSPEED VALVE PISTON	7. 4735
GASKET, WATER BYPASS TUBE-UPPER	5. 2170	GUIDE, CAM FOLLOWER	1. 8300
GASKET, WATER FILTER COVER	5. 7035	GUIDE, DIPSTICK	4. 6020
GASKET, WATER FILTER MOUNTING BRACKET	5. 7081	GUIDE, EXHAUST VALVE	1. 8320
GASKET, WATER FLANGE AT GEAR AND/OR RAW WATER PUMP	5. 5378	GUIDE, GOVERNOR SPRING	2. 7620
GASKET, WATER OUTLET MANIFOLD ELBOW	5. 2037	GUIDE, GOVERNOR VARIABLE SPEED SPRING PLUNGER	2. 7780
GASKET, WATER PUMP INLET AND OUTLET ELBOW	5. 3337	GUIDE, REDUCTION GEAR DIPSTICK	9. 1400
GASKET, WATER TEMPERATURE SWITCH	7. 4510	<b>H</b>	
GEAR AND SHAFT ASSY., GOVERNOR DRIVE	2. 8815	HANDLE, HYDRAULIC STARTER CONTROL SHAFT	12. 6514
GEAR ASSY., CLUTCH HUB TWIN DISC	9. 1036	HANDLE, HYDRAULIC STARTER HAND PUMP	12. 6646
GEAR ASSY., HYDRAULIC MARINE	9. 1001	HANDLE, RAW WATER PUMP CLUTCH	5. 6640
GEAR ASSY., IDLER	1. 7220	HANGER, THROTTLE BOOSTER SPRING	2. 9349
GEAR ASSY., PLANETARY	9. 1080	HARNES, AIR HEATER WIRING	7. 8095
GEAR ASSY., REDUCTION GEAR PLANETARY	9. 1292	HARNES, AIR SHUTOFF WIRING	7. 4545
GEAR REDUCTION	9. 1310	HARNES, ENGINE WIRING	7. 7001
GEAR SET, BLOWER ROTOR	3. 4080	HEAD ASSY., CYLINDER	1. 2001
GEAR, ACCESSORY DRIVE	1. 7670	HEATER ASSY., AIR	7. 8001
GEAR, BLOWER DRIVE	3. 4300	HOOD ASSY., ENGINE	10. 1001
GEAR, CAMSHAFT AND BALANCE SHAFT	1. 7200	HOSE, AIR INLET PIPE	3. 1270
GEAR, CRANKSHAFT TIMING	1. 3145	HOSE, AIR SILENCER OUTLET ELBOW	3. 2023
GEAR, FLYWHEEL RING	1. 4010	HOSE, BREATHER EXTENSION	4. 8175
GEAR, FORWARD CLUTCH TWIN DISC	9. 1028	HOSE, CLUTCH RELEASE BEARING	8. 1320
GEAR, FUEL PUMP DRIVE	2. 2087	HOSE, EXHAUST MANIFOLD FRESH WATER INLET	5. 3432
GEAR, FUEL PUMP DRIVE	2. 2290	HOSE, FILTER TO CYLINDER HEAD	2. 5160
GEAR, FUEL PUMP DRIVEN	2. 2088	HOSE, FLYWHEEL HOUSING DRAIN	1. 5096
GEAR, GOVERNOR DRIVE	2. 7960	HOSE, FRESH WATER OUTLET	5. 3446
GEAR, GOVERNOR DRIVE	2. 8855	HOSE, FUEL DRAIN	2. 5215
GEAR, GOVERNOR DRIVEN SHAFT	2. 8805	HOSE, FUEL DRAIN CROSSOVER	2. 5208
GEAR, GOVERNOR OIL PUMP DRIVE	2. 8720	HOSE, FUEL PUMP INLET	2. 5060
GEAR, GOVERNOR OIL PUMP DRIVEN	2. 8730	HOSE, FUEL PUMP OUTLET TO FILTER	2. 5110
GEAR, HYDRAULIC PUMP DRIVE	12. 5030	HOSE, FUEL PUMP TO FILTER	2. 5110
GEAR, IDLER	1. 7222	HOSE, FUEL SUPPLY TO STRAINER	2. 5010
GEAR, INJECTOR	2. 1180	HOSE, FUEL SYSTEM FLEXIBLE (BULK)	12. 8550
GEAR, MARINE GEAR PLANETARY RING	9. 1091	HOSE, FUEL TANK	2. 6005
GEAR, OIL PUMP DRIVE	4. 1090	HOSE, HEAT EXCHANGER AUXILIARY TANK	5. 5195
GEAR, OIL PUMP DRIVE-ON CRANKSHAFT	4. 1310	HOSE, HEAT EXCHANGER FRESH WATER INLET	5. 3295
GEAR, OIL PUMP DRIVE-ON PUMP	4. 1380	HOSE, HEAT EXCHANGER OUTLET CONNECTION TO WATER PUMP	5. 3334
GEAR, OIL PUMP DRIVEN	4. 1200	HOSE, HEAT EXCHANGER RAW WATER INLET TUBE	5. 5470
GEAR, RAW WATER PUMP DRIVE	5. 6320	HOSE, HEAT EXCHANGER WATER OUTLET TUBE	5. 5580
GEAR, REDUCTION GEAR	9. 1290	HOSE, HYDRAULIC STARTER	12. 6827
GEAR, REDUCTION GEAR INPUT	9. 1287	HOSE, HYDRAULIC STARTER ENGINE PUMP TO ACCUMULATOR	12. 6850
GEAR, REDUCTION GEAR PLANETARY RING	9. 1298	HOSE, HYDRAULIC STARTER FILTER TO ENGINE PUMP	12. 6840
GEAR, REVERSE CLUTCH TWIN DISC	9. 1029		
GEAR, VERNIER THROTTLE CONTROL WORM	2. 9141		
GENERATOR ASSY.	7. 1001		
GENERATOR ASSY., POWER	7. 5001		

## ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>H</b>			
HOSE, HYDRAULIC STARTER FILTER TO HAND PUMP	12. 6845	HOUSING, OVERSPEED VALVE	7. 4727
HOSE, HYDRAULIC STARTER FLEXIBLE (BULK)	12. 8520	HOUSING, POWER TAKE-OFF ADAPTOR	8. 1900
HOSE, HYDRAULIC STARTER FUEL PRIMER	12. 6950	HOUSING, RAW WATER PUMP DRIVE	5. 6010
HOSE, HYDRAULIC STARTER RELIEF VALVE	12. 6880	HOUSING, RAW WATER PUMP IMPELLER	5. 6020
HOSE, HYDRAULIC STARTER RESERVOIR TO FILTER	12. 6830	HOUSING, REDUCTION GEAR	9. 1285
HOSE, HYDRAULIC STARTER RESERVOIR TO HAND PUMP	12. 6832	HOUSING, SELECTOR VALVE	9. 1136
HOSE, HYDRAULIC STARTER TO RESERVOIR	12. 6865	HOUSING, THERMOSTAT	5. 2090
HOSE, MARINE GEAR OIL COOLER TO SELECTOR VALVE	4. 4343	HOUSING, TURBOCHARGER COMPRESSOR	3. 5022
HOSE, MARINE GEAR OR TRANSMISSION OIL INLET	4. 4335	HOUSING, TURBOCHARGER TURBINE	3. 5003
HOSE, MARINE GEAR OR TRANSMISSION OIL OUTLET	4. 4330	HOUSING, VERNIER THROTTLE CONTROL	2. 9136
HOSE, MASTER CYLINDER TO REMOTE CONTROL VALVE	12. 6875	HUB ASSY., REVERSE CLUTCH	9. 1096
HOSE, OIL COOLER WATER INLET	4. 4213	HUB, AIR COMPRESSOR	12. 4040
HOSE, OIL COOLER WATER INLET CONNECTION	5. 3365	HUB, BLOWER DRIVE GEAR	3. 4310
HOSE, OIL COOLER WATER OUTLET	5. 3422	HUB, BLOWER ROTOR GEAR	3. 4130
HOSE, RADIATOR INLET	5. 3290	HUB, CRANKSHAFT PULLEY	1. 3310
HOSE, RADIATOR OUTLET	5. 3330	HUB, DRIVE PULLEY	1. 7610
HOSE, ROCKER COVER DRAIN	1. 1155	HUB, FAN	5. 4235
HOSE, THERMOSTAT HOUSING COVER OUTLET ELBOW	5. 2124	HUB, FLANGE MOUNTED ALTERNATOR DRIVE	7. 1511
HOSE, TURBOCHARGER AIR OUTLET CONNECTION	3. 5420	HUB, FLANGED MOUNTED ALTERNATOR DRIVE	7. 1511
HOSE, WATER BYPASS TUBE	5. 2165	HUB, FORWARD CLUTCH	9. 1242
HOSE, WATER FILTER INLET	5. 7090	HUB, FRESH WATER PUMP DRIVEN PULLEY	5. 1216
HOSE, WATER FILTER OUTLET	5. 7100	HUB, FRONT POWER TAKE-OFF ADAPTOR	8. 1906
HOSE, WATER PUMP INLET AND BYPASS TUBE	5. 3338	HUB, FUEL PUMP DRIVE GEAR	2. 2292
HOUSING AND BUSHING ASSY., TACHOMETER DRIVE CABLE ADAPTOR	7. 4428	HUB, GENERATOR DRIVE PULLEY	7. 1510
HOUSING ASSY., AIR INLET	3. 3001	HUB, IDLER GEAR	1. 7250
HOUSING ASSY., FLYWHEEL	1. 5001	HUB, REDUCTION GEAR	9. 1299
HOUSING ASSY., FLYWHEEL (TWIN AND QUAD)	1. 5001	HUB, VIBRATION DAMPER	1. 3230
HOUSING ASSY., GOVERNOR	2. 8190	HYDRAULIC STARTER FITTING KIT	12. 6825
HOUSING ASSY., GOVERNOR CONTROL	2. 7230		
HOUSING ASSY., GOVERNOR VARIABLE SPEED SPRING	2. 7680	<b>I</b>	
HOUSING ASSY., OVERSPEED TRIP GOVERNOR	7. 4614	IDLER PULLEY, FAN BELT	5. 4325
HOUSING ASSY., REVERSE GEAR	9. 1010	IDLER, PULLEY FAN BELT WITH ADJUSTING ARM	5. 4325
HOUSING ASSY., TURBOCHARGER INTERMEDIATE	3. 5018	IMPELLER AND SHAFT ASSY., BILGE PUMP	12. 2040
HOUSING, ACCESSORY DRIVE	1. 7627	IMPELLER, FRESH WATER PUMP	5. 1110
HOUSING, AIR INLET	3. 3003	IMPELLER, RAW WATER PUMP	5. 6230
HOUSING, AIR SHUTDOWN	3. 4412	INDICATOR, AIR CLEANER RESTRICTION	3. 1002
HOUSING, AIR SHUTOFF CONTROL	7. 4550	INJECTOR	2. 1000A
HOUSING, BILGE PUMP IMPELLER	12. 2050	INJECTOR ASSY.	2. 1001
HOUSING, BLOWER	3. 4020	INJECTOR CONTROLS	2. 9000
HOUSING, CLUTCH	8. 1010	INSERT, EXHAUST VALVE	1. 8330
HOUSING, GOVERNOR DRIVE	2. 8780	INSULATION BLANKET, TURBOCHARGER	3. 5535
HOUSING, GOVERNOR HIGH SPEED SPRING ADJUSTING SCREW	2. 7635	INSULATOR ASSY., CRANKSHAFT PULLEY HUB	1. 3311
HOUSING, GOVERNOR VARIABLE SPEED SPRING	2. 7690	INSULATOR, AIR HEATER	7. 8130
HOUSING, GOVERNOR WEIGHT	2. 7340	INSULATOR, POWER GENERATOR CONTROL CABINET TO SUPPORT	7. 6005
HOUSING, HYDRAULIC STARTER CLUTCH	12. 6510	INSULATOR, TIME DELAY RELAY MOUNTING	7. 4713
HOUSING, HYDRAULIC STARTER DRIVE	12. 6504	INTERCOOLER, TURBOCHARGER	3. 5425
HOUSING, HYDRAULIC STARTER ENGINE PUMP BEARING	12. 6597	ISOLATOR, ROCKER COVER BOLT	1. 8461
HOUSING, HYDRAULIC STARTER MOTOR	12. 6525		
HOUSING, MARINE GEAR DRIVE	9. 1003	<b>K</b>	
HOUSING, MARINE GEAR OIL COOLER	4. 4051	KIT, AIR HEATER CONVERSION	7. 8004
HOUSING, OIL COOLER	4. 4050	KIT, GOVERNOR CONVERSION	2. 7012
HOUSING, OIL COOLER-ENGINE	4. 4050	KITS, SERVICE (ALL)	12. 8715
HOUSING, OIL FILTER BYPASS VALVE	4. 2388	KNOB, RAW WATER PUMP HANDLE	5. 6630
HOUSING, OVERSPEED TRIP GOVERNOR SWITCH	7. 4677	KNOB, STARTING AID PUMP PLUNGER	12. 6330
		KNOB, VERNIER THROTTLE CONTROL	2. 9135
		<b>L</b>	
		LAMP, INSTRUMENT PANEL	7. 4100
		LATCH, AIR SHUTOFF RESET	7. 4557
		LEAD, AIR HEATER COIL HIGH TENSION	7. 8110
		LEAP, AIR HEATER COIL HIGH TENSION	7. 8110
		LEVER AND PIN ASSY., GOVERNOR DIFFERENTIAL	2. 7310
		LEVER ASSY., AIR INLET HOUSING SHUTDOWN RESET	3. 3110

ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>L</b>			
LEVER ASSY., AIR SHUTDOWN RESET	3. 4428	MANIFOLD, EXHAUST	6. 1001
LEVER ASSY., FUEL MODULATING CONTROL TUBE	2. 9084	MEDALLION, INSTRUMENT PANEL	7. 4099
LEVER ASSY., GOVERNOR CONTROL LINK OPERATING	2. 7317	METER HOUR	7. 4118
LEVER, ACCELERATOR LINKAGE MT TRANSMISSION	2. 9900	MISCELLANEOUS SERVICE PARTS - SECTION 1	12. 8801
LEVER, AIR INLET HOUSING SHUTDOWN VALVE	3. 3090	MOTOR ASSY., GOVERNOR SYNCHRONIZING	2. 8182
LEVER, AIR SHUTDOWN VALVE	3. 4427	MOTOR ASSY., STARTING	7. 3001
LEVER, AIR SHUTOFF	7. 4536	MOUNTING ASSY., VOLTAGE REGULATOR	7. 1612
LEVER, AIR SHUTOFF RESET	7. 4532	MOUNTING, ENGINE FRONT SUPPORT ELASTIC	11. 1072
LEVER, CLUTCH HAND CONTROL	8. 1470	MOUNTING, ENGINE REAR SUPPORT ELASTIC	11. 1120
LEVER, CLUTCH RELEASE YOKE	8. 1142	MOUNTING, INSTRUMENT PANEL	7. 4010
LEVER, GOVERNOR ACCELERATOR CONTROL MT TRANSMISSION	2. 9915	MOUNTING, TACHOMETER-MAGNETO MOUNTING	7. 4064
LEVER, GOVERNOR CONTROL	2. 9410	MUFFLER ASSY., EXHAUST	6. 2001
LEVER, GOVERNOR CONTROL SHAFT	2. 9390	<b>N</b>	
LEVER, GOVERNOR CONTROL SHAFT-REAR OF ENGINE	2. 9361	NAME PLATE, GOVERNOR	2. 7002
LEVER, GOVERNOR COVER SHUTDOWN SHAFT	2. 7165	NAME PLATE, RADIATOR	5. 3268
LEVER, GOVERNOR COVER THROTTLE SHAFT	2. 7170	NECK ASSY., RADIATOR FILLER	5. 3100
LEVER, GOVERNOR OPERATING SHAFT	2. 8975	NECK, EXPANSION TANK FILLER	5. 5120
LEVER, GOVERNOR OPERATING SHAFT-UPPER	2. 7280	NOZZLE, AIR HEATER SPRAY	7. 8050
LEVER, GOVERNOR ROCKER SHAFT	8. 3450	NOZZLE, CONNECTING ROD SPRAY	1. 6010
LEVER, GOVERNOR SPEED ADJUSTING	2. 8420	NOZZLE, CYLINDER HEAD WATER	1. 2005
LEVER, GOVERNOR SPEED ADJUSTING	8. 3460	NOZZLE, STARTING AID PUMP TUBE	12. 6375
LEVER, GOVERNOR SPEED ADJUSTING FLOATING	2. 8410	NUT ASSY., MASTER CYLINDER END	12. 6817
LEVER, GOVERNOR SPEED ADJUSTING TERMINAL	2. 8450	NUT, AIR HEATER INSULATOR	7. 8150
LEVER, GOVERNOR TO INJECTOR LINK	2. 7820	NUT, CLUTCH ADJUSTING	8. 1144
LEVER, GOVERNOR VARIABLE SPEED CONTROL	2. 7740	NUT, CYLINDER HEAD STUD	1. 2040
LEVER, GOVERNOR VARIABLE SPEED SPRING	2. 7730	NUT, INJECTOR VALVE	2. 1030
LEVER, INJECTOR CONTROL TUBE	2. 9009	NUT, PROPELLER DRIVE FLANGE	9. 1435
LEVER, INJECTOR CONTROL TUBE RACK	2. 9014	<b>O</b>	
LEVER, INJECTOR CONTROL TUBE-LOAD LIMIT ADJUSTING	2. 9017	OIL COOLER	4. 4000A
LEVER, MANUAL SHUTDOWN	2. 7827	OIL DISTRIBUTION SYSTEM	4. 1000B
LEVER, SELECTOR VALVE OPERATING	9. 1175	OIL PAN	4. 7000A
LEVER, THROTTLE BOOSTER	2. 9345	OIL PUMP	4. 1000A
LEVER, THROTTLE CONTROL CROSS SHAFT	2. 9340	OIL SEAL, GOVERNOR BASE	8. 3385
LEVER, THROTTLE CONTROL ROD-LOWER	2. 9290	OIL SEAL, GOVERNOR ROCKER SHAFT	8. 3445
LEVER, TRANSMISSION ACCELERATOR CONTROL MT	2. 9910	ORIFICE, CONNECTING ROD	1. 6020
LINER, CYLINDER	1. 6180	OVERHAUL KIT, FUEL PUMP	2. 2004
LINK, AIR SHUTDOWN	3. 4416	OVERHAUL KIT, OIL PUMP	4. 1003
LINK, CLUTCH RELEASE YOKE	8. 1315	<b>P</b>	
LINK, GOVERNOR ACCELERATOR CONTROL MT TRANSMISSION	2. 9930	PACKING, BILGE PUMP SHAFT	12. 2060
LINK, GOVERNOR CONTROL SHAFT LEVER	2. 9400	PACKING, GOVERNOR VARIABLE SPEED SPRING LEVER SHAFT	2. 7750
LINK, GOVERNOR OPERATING CONNECTING	2. 8955	PAINT, ENGINE TOUCH-UP	12. 8001
LINK, GOVERNOR OPERATING LEVER CONNECTING	2. 7312	PAN, OIL	4. 7001
LINK, GOVERNOR OPERATING LEVER TO BELL CRANK	2. 8970	PAN, OIL-LOWER	4. 7020
LINK, INJECTOR CONTROL TUBE	2. 8940	PAN, OIL-UPPER	4. 7010
LOCK, CLUTCH ADJUSTING NUT	8. 1145	PANEL, ENGINE HOOD SIDE	10. 1100
LOCK, CLUTCH DRIVE SHAFT BEARING RETAINER	8. 1700	PANEL, INSTRUMENT	7. 4005
LOCK, EXHAUST VALVE SPRING	1. 8370	PANEL, REAR HOOD SUPPORT	10. 1035
LOCKNUT, GOVERNOR HIGH SPEED SPRING RETAINER	2. 7615	PEDAL ASSY., BRAKE UPPER LOWER	12. 6822
LOCKRING, ACCESSORY DRIVE	1. 7650	PILOT, BLOWER DRIVE CAM	3. 4082
LOCKRING, GENERATOR DRIVE BEARING	7. 1545	PILOT, BLOWER DRIVER CAM	3. 4082
LUBE OIL FILTER	4. 2000A	PIN, BUSHING GUIDE	2. 1165
LUBRICANT, FLEXIBLE SHAFT CABLE	12. 8516	PIN, GOVERNOR CONTROL WIRE SWIVEL	2. 9426
LUBRICATING COMPOUND THREAD	12. 8110	PIN, GOVERNOR DIFFERENTIAL LEVER	2. 7315
		PIN, GOVERNOR OPERATING SHAFT LEVER	2. 7300
		PIN, GOVERNOR THROTTLE SHAFT FULCRUM LEVER	2. 7130
		PIN, GOVERNOR WEIGHT	2. 7430
		PIN, INJECTOR AND EXHAUST VALVE ROCKER ARM CLEVIS	1. 8150
		PIN, INJECTOR STOP	2. 1100
		PIN, PISTON	1. 6140

## ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>P</b>			
PIN, RAW WATER PUMP ROLL	5. 6620	PLUG, FUEL FILTER COVER	2. 3480
PIN, VERNIER THROTTLE CONTROL LOCK BUTTON	2. 9146	PLUG, FUEL PUMP VALVE	2. 2170
PIPE ASSY., BREATHER	4. 8001	PLUG, FUEL STRAINER COVER	2. 3100
PIPE, AIR CLEANER TO INLET HOUSING	3. 1260	PLUG, GOVERNOR HOUSING DUMMY HOLE	2. 8200
PIPE, BLOWER DRIVE BEARING OIL	4. 1660	PLUG, GOVERNOR RELIEF VALVE	2. 8685
PIPE, EXHAUST	6. 2090	PLUG, GOVERNOR SPEED ADJUSTING TERMINAL SLEEVE	2. 8485
PIPE, FUEL	2. 4020	PLUG, GOVERNOR SUB-CAP	2. 8165
PIPE, OIL PUMP INLET	4. 1510	PLUG, HEAT EXCHANGER TANK	5. 3486
PIPE, OIL PUMP OUTLET	4. 1580	PLUG, HYDRAULIC STARTER ENGINE PUMP RELIEF VALVE	12. 6625
PIPE, RADIATOR OVERFLOW	5. 3160	PLUG, MASTER CYLINDER FILLER	12. 6814
PISTON ASSY., MASTER CYLINDER OPERATING	12. 6815	PLUG, OIL COOLER BYPASS VALVE	4. 4160
PISTON KIT	1. 6110	PLUG, OIL FILTER BYPASS VALVE	4. 2488
PISTON, FAST IDLE AIR CYLINDER	2. 7860	PLUG, OIL FILTER BYPASS VALVE	8. 3888
PISTON, FORWARD CLUTCH	9. 1225	PLUG, OIL PAN DRAIN	4. 7080
PISTON, GOVERNOR SERVO-MOTOR	2. 8510	PLUG, OIL PRESSURE REGULATOR	4. 1710
PISTON, GOVERNOR SPEED ADJUSTING	2. 7612	PLUG, OIL PUMP RELIEF VALVE	4. 1270
PISTON, GOVERNOR SPEED CONTROL	2. 7736	PLUG, RAW WATER PUMP TUBE	5. 6650
PISTON, HYDRAULIC STARTER	12. 6537	PLUG, SELECTOR VALVE PRESSURE REGULATOR	9. 1197
PISTON, HYDRAULIC STARTER ACCUMULATOR	12. 6580	PLUG, TACHOMETER DRIVE ADAPTOR BEARING	7. 4432
PISTON, HYDRAULIC STARTER ENGINE PUMP	12. 6607	PLUNGER AND BUSHING ASSY., INJECTOR	2. 1160
PISTON, HYDRAULIC STARTER HAND PUMP	12. 6638	PLUNGER ASSY., GOVERNOR PILOT VALVE	2. 8600
PISTON, INJECTOR CONTROL AIR CYLINDER	2. 9094	PLUNGER, FAST IDLE AIR CYLINDER	2. 7865
PISTON, OVERSPEED VALVE	7. 4731	PLUNGER, GOVERNOR HIGH SPEED SPRING	2. 7563
PISTON, REVERSE CLUTCH	9. 1030	PLUNGER, GOVERNOR LOW SPEED SPRING	2. 7560
PLATE ASSY., ACCESSORY DRIVE	1. 7630	PLUNGER, GOVERNOR VARIABLE SPEED SPRING	2. 7770
PLATE, AIR COMPRESSOR DRIVE	12. 4037	PLUNGER, OVERSPEED TRIP GOVERNOR PILOT VALVE	7. 4620
PLATE, AIR INLET HOUSING SHUTDOWN CONTROL	3. 3260	POWER TAKEOFF ASSY.	8. 1001
PLATE, AIR SHUTOFF CONTROL INSTRUCTION	7. 4529	PRE-CLEANER ASSY., AIR	3. 1100
PLATE, BLOWER HOUSING END	3. 4140	PRIMER PUMP, FUEL	2. 5490
PLATE, BLOWER ROTOR GOVERNOR DRIVE	3. 4115	PRIMER, FUEL	12. 6655
PLATE, BLOWER ROTOR THRUST	3. 4033	PULLEY AND HUB ASSY. FAN	5. 4015
PLATE, BREATHER DEFLECTOR	4. 8185	PULLEY AND HUB ASSY., FAN	5. 4015
PLATE, CAM OR BALANCE GEAR	12. 5017	PULLEY ASSY., BILGE PUMP DRIVEN	12. 2140
PLATE, CLUTCH	9. 1062	PULLEY, ACCESSORY DRIVE	1. 7605
PLATE, CLUTCH PRESSURE	8. 1080	PULLEY, ACCESSORY DRIVEN	1. 7612
PLATE, CRANKSHAFT FRONT COVER	1. 3171	PULLEY, AIR COMPRESSOR	12. 4015
PLATE, CYLINDER BLOCK END-REAR	1. 1020	PULLEY, AIR COMPRESSOR DRIVE	12. 4017
PLATE, ENGINE FRONT COVER	4. 1227	PULLEY, CRANKSHAFT	1. 3280
PLATE, EXHAUST MANIFOLD COVER	6. 1100	PULLEY, CRANKSHAFT FRONT POWER TAKE-OFF	8. 1908
PLATE, FORWARD CLUTCH	9. 1235	PULLEY, FRESH WATER PUMP	5. 1214
PLATE, FUEL FILTER MOUNTING	2. 3535	PULLEY, FRESH WATER PUMP IDLER	5. 1200
PLATE, FUEL PUMP MOUNTING	2. 2235	PULLEY, FRONT BALANCE	1. 7130
PLATE, GENERATOR DRIVE PULLEY SHAFT COUPLING	7. 1550	PULLEY, GENERATOR	7. 1500
PLATE, HYDRAULIC PUMP DRIVE	12. 5015	PULLEY, GENERATOR DRIVE	7. 1505
PLATE, HYDRAULIC STARTER ENGINE PUMP DRIVE	12. 6593	PULLEY, HYDRAULIC STARTER ENGINE PUMP DRIVE	12. 6673
PLATE, HYDRAULIC STARTER VALVE	12. 6520	PULLEY, VACUUM PUMP	12. 3010
PLATE, INJECTOR CONTROL TUBE LEVER-LOAD LIMIT ADJUSTING	2. 9019	PUMP ASSY., AIR HEATER	7. 8200
PLATE, OIL FILTER MOUNTING	4. 2450	PUMP ASSY., BILGE	12. 2001
PLATE, OPTION AND ACCESSORY NAME	1. 8500	PUMP ASSY., FRESH WATER	5. 1001
PLATE, RAW WATER PUMP DRIVE	5. 6410	PUMP ASSY., FUEL	2. 2001
PLATE, REDUCTION GEAR ADAPTOR	9. 1282	PUMP ASSY., HYDRAULIC	12. 5001
PLATE, REDUCTION GEAR PLANETARY RING GEAR	9. 1288	PUMP ASSY., HYDRAULIC MARINE GEAR OIL	9. 1475
PLATE, REVERSE CLUTCH DISC	9. 1045	PUMP ASSY., HYDRAULIC STARTER ENGINE	12. 6590
PLATE, REVERSE CLUTCH REACTION	9. 1060	PUMP ASSY., HYDRAULIC STARTER HAND	12. 6630
PLATE, THROTTLE CONTROL INDICATOR	2. 9170	PUMP ASSY., OIL	4. 1001
PLATE, TIME DELAY RELAY MOUNTING	7. 4711	PUMP ASSY., RAW WATER	5. 6001
PLATE, VOLTAGE REGULATOR MOUNTING	7. 1610	PUMP ASSY., STARTING AID	12. 6305
PLATE, WATER FILTER LOWER	5. 7045	PUMP ASSY., VACUUM	12. 3001
PLATE, WATER FILTER SUMP	5. 7023	PUNCTURING TOOL ASSY., STARTING FLUID CAPSULE	12. 6380
PLATE, WATER FILTER UPPER	5. 7043		
PLATE, FLYWHEEL INPUT DRIVE	1. 4072		
PLUG, AIR HEATER	7. 8010		
PLUG, BLOWER ROTOR SHAFT	3. 4037		

ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>R</b>			
RACK ASSY., INJECTOR	2. 1170	RING, HYDRAULIC STARTER ENGINE PUMP	12. 6611
RADIATOR ASSY.	5. 3001	RING, INJECTOR HOLE TUBE SEAL	1. 2046
RAIL, ENGINE MOUNTING	11. 1050	RING, INJECTOR SEAL	2. 1040
RECONDITIONING KIT, FRESH WATER PUMP	5. 1002	RING, PISTON COMPRESSION	1. 6120
RECONDITIONING KIT, RAW WATER PUMP	5. 6025	RING, PISTON OIL CONTROL	1. 6130
REGULATOR, VOLTAGE	7. 1605	RING, RAW WATER PUMP BEARING RETAINER	5. 6140
RELAY, ALARM BELL	7. 4514	RING, RAW WATER PUMP SHAFT SEAL	5. 6176
RELAY, TIME DELAY	7. 4707	RING, RAW WATER PUMP SHAFT SEAL FRICTION	5. 6175
REPLACEMENT KIT, FRESH WATER PUMP SEAL SEAT	5. 1115	RISER, GOVERNOR	2. 7380
REPLACEMENT KIT, RAW WATER PUMP SEAL AND IMPELLER	5. 6220	RISER, GOVERNOR	8. 3420
RESERVOIR ASSY., GOVERNOR OIL	2. 8905	ROCKER COVER	1. 8000A
RESERVOIR ASSY., STARTING AID	12. 6410	ROD AND CLEVIS ASSY., THROTTLE CONTROL	2. 9280
RESERVOIR, HYDRAULIC STARTER	12. 6551	ROD ASSY., GOVERNOR TO INJECTOR LINK	2. 7819
RETAINER ASSY., ACCESSORY DRIVE	1. 7645	ROD ASSY., MASTER CYLINDER PISTON PUSH	12. 6818
RETAINER OIL FILTER TUBE ADAPTOR BYPASS VALVE SPRING	4. 3060	ROD, AIR INLET HOUSING SHUTDOWN RESET LEVER	3. 3115
RETAINER, BILGE PUMP SHAFT BEARING	12. 2120	ROD, AIR SHUTOFF SOLENOID CONTROL	7. 4538
RETAINER, BLOWER DRIVE COUPLING	3. 4420	ROD, ENGINE HOOD TIE	10. 1080
RETAINER, BLOWER DRIVE SHAFT	3. 4450	ROD, ENGINE MOUNTING RAIL TIE	11. 1052
RETAINER, BLOWER ROTOR FRONT BEARING	3. 4050	ROD, GOVERNOR FUEL	2. 8070
RETAINER, BLOWER ROTOR OIL SEAL	3. 4042	ROD, PUSH	1. 8180
RETAINER, BLOWER ROTOR REAR BEARING	3. 4070	ROD, STARTING CONTROL	7. 4564
RETAINER, CAM AND BALANCE SHAFT GEAR NUT	1. 7207	ROD, THROTTLE CONTROL LEVER TO BELL CRANK	2. 9720
RETAINER, CAM OR BALANCE GEAR	1. 7633	ROLLER SET, CAM FOLLOWER	1. 8265
RETAINER, CAM OR BLANCER GEAR	5. 6413	ROTOR ASSY., OIL PUMP	4. 1085
RETAINER, CLUTCH DRIVE SHAFT BEARING	8. 1690	ROTOR ASSY., TURBOCHARGER	3. 5030
RETAINER, CLUTCH PILOT BEARING	1. 4045	ROTOR, BLOWER IMPELLER	3. 4030
RETAINER, CRANKSHAFT PULLEY	1. 3290	ROTOR, HYDRAULIC STARTER	12. 6535
RETAINER, CYLINDER PISTON SPRING	2. 9082		
RETAINER, DRIVE PULLEY HUB OIL SEAL	1. 7615	<b>S</b>	
RETAINER, FAN SHAFT BEARING	5. 4140	SCREEN, AIR CLEANER	3. 1040
RETAINER, GENERATOR DRIVE BEARING AND OIL SEAL	7. 1520	SCREEN, BLOWER	3. 4025
RETAINER, GOVERNOR DRIVE SHAFT BEARING	2. 8850	SCREEN, OIL PUMP INLET	4. 1530
RETAINER, GOVERNOR FUEL ROD SPRING	2. 8140	SCREW ASSY., GOVERNOR BUFFER	2. 7810
RETAINER, GOVERNOR HIGH SPEED SPRING	2. 7610	SCREW, CONVERTER OIL FILTER COVER	8. 3876
RETAINER, GOVERNOR PACKING SHUTDOWN SHAFT	2. 7155	SCREW, FAN BRACKET ADJUSTING	5. 4290
RETAINER, GOVERNOR PACKING THROTTLE SHAFT	2. 7150	SCREW, FUEL FILTER COVER	2. 3410
RETAINER, GOVERNOR VARIABLE SPEED SPRING	2. 7790	SCREW, FUEL STRAINER COVER	2. 3120
RETAINER, HEAT EXCHANGER SEAL	5. 5025	SCREW, GOVERNOR HI-SPEED STOP	2. 8520
RETAINER, IDLER GEAR BEARING	1. 7227	SCREW, GOVERNOR HIGH SPEED CONTROL	2. 7655
RETAINER, IDLER PULLEY SHAFT BEARING	5. 1208	SCREW, GOVERNOR LOAD LIMIT	2. 8180
RETAINER, INJECTOR GEAR	2. 1190	SCREW, GOVERNOR LOW SPEED SPRING ADJUSTING	2. 7590
RETAINER, OIL FILTER SPRING	4. 2315	SCREW, INJECTOR CONTROL TUBE LEVER PLATE-LOAD LIMIT ADJUSTING	2. 9021
RETAINER, OIL FILTER TUBE ADAPTOR BY-PASS VALVE SPRING	4. 3060	SEAL RING, AIR HEATER PUMP PLUNGER	7. 8215
RETAINER, OUTPUT SHAFT BEARING	9. 1098	SEAL RING, STARTING AID PUMP PLUNGER	12. 6312
RETAINER, PISTON PIN	1. 6150	SEAL, ACCESSORY DRIVE OIL	1. 7660
RETAINER, PUSH ROD	1. 8250	SEAL, AIR CLEANER BOLT	3. 1075
RETAINER, ROCKER COVER NAME PLATE	1. 8502	SEAL, AIR COMPRESSOR DRIVE	12. 4051
RETAINER, SPIDER DRIVE	9. 1014	SEAL, AIR INLET HOUSING SHUTDOWN VALVE SHAFT	3. 3055
RETAINER, TACHOMETER	7. 4063	SEAL, BALANCE WEIGHT COVER OIL	1. 7472
RING SET, PISTON	1. 6115	SEAL, BLOWER DRIVE COVER	3. 4220
RING, AIR COMPRESSOR DRIVE COUPLING	12. 4055	SEAL, BLOWER HOUSING END PLATE	3. 4160
RING, BLOWER DRIVE SHAFT	3. 4446	SEAL, BLOWER ROTOR RETAINER OIL	3. 4041
RING, BLOWER ROTOR OIL SEAL	3. 4044	SEAL, CAMSHAFT OIL	1. 7060
RING, CLUTCH DRIVING	8. 1018	SEAL, CRANKSHAFT OIL SEAL - REAR	1. 5004
RING, CLUTCH REACTION PLATE SNAP	9. 1065	SEAL, CRANKSHAFT OIL-FRONT	1. 3040
RING, CROSSHEAD PISTON SEAL	1. 6106	SEAL, CRANKSHAFT OIL-REAR	1. 3060
RING, CYLINDER SPRING RETAINER SNAP	2. 9083	SEAL, CRANKSHAFT OIL-REAR	1. 5004
RING, ENGINE FRONT TRUNNION MOUNTING SUPPORT CUSHION	11. 1094	SEAL, CYLINDER LINER	1. 6190
RING, GOVERNOR OIL PUMP HOUSING SEAL	2. 8700	SEAL, DRIVE PULLEY HUB OIL	1. 7620
		SEAL, FAN SHAFT	5. 4150
		SEAL, FLYWHEEL OIL	1. 4008
		SEAL, FORWARD CLUTCH PISTON	9. 1230

## ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>S</b>			
SEAL, FRESH WATER PUMP	5. 1130	SHAFT, FAN BELT IDLER PULLEY	5. 4341
SEAL, FUEL PUMP OIL	2. 2070	SHAFT, FUEL PUMP DRIVE	2. 2093
SEAL, GASKET OVERSPEED TRIP GOVERNOR HOUSING COVER OIL	7. 4836	SHAFT, FUEL PUMP DRIVEN	2. 2089
SEAL, GENERATOR DRIVE OIL	7. 1515	SHAFT, GENERATOR DRIVE	7. 1530
SEAL, GOVERNOR	2. 7945	SHAFT, GOVERNOR	8. 3435
SEAL, GOVERNOR OPERATING SHAFT OIL	2. 7265	SHAFT, GOVERNOR CONTROL-REAR OF ENGINE TO GOVERNOR	2. 9382
SEAL, GOVERNOR SPEED ADJUSTING SHAFT OIL	2. 8350	SHAFT, GOVERNOR DRIVE	2. 8820
SEAL, GOVERNOR SPEED ADJUSTING TERMINAL SHAFT OIL	2. 8472	SHAFT, GOVERNOR DRIVEN	2. 8795
SEAL, GOVERNOR SPEED CONTROL PISTON	2. 7737	SHAFT, GOVERNOR OPERATING	2. 7255
SEAL, HEAT EXCHANGER	5. 5026	SHAFT, GOVERNOR SPEED ADJUSTING	2. 8280
SEAL, HYDRAULIC PUMP OIL	9. 1505	SHAFT, GOVERNOR SPEED ADJUSTING TERMINAL	8. 3470
SEAL, HYDRAULIC STARTER ACCUMULATOR CAP PISTON	12. 6574	SHAFT, GOVERNOR SPEED ADJUSTING TERMINAL	2. 8470
SEAL, HYDRAULIC STARTER ACCUMULATOR PISTON	12. 6582	SHAFT, GOVERNOR VARIABLE SPEED SPRING LEVER	2. 7720
SEAL, HYDRAULIC STARTER ENGINE PUMP OIL	12. 6603	SHAFT, GOVERNOR WEIGHT CARRIER	2. 7360
SEAL, IDLER PULLEY SHAFT	5. 1207	SHAFT, HYDRAULIC STARTER	12. 6532
SEAL, MARINE GEAR INPUT SHAFT	9. 1018	SHAFT, HYDRAULIC STARTER CONTROL	12. 6512
SEAL, OVERSPEED TRIP GOVERNOR MOUNTING OIL	7. 4644	SHAFT, HYDRAULIC STARTER ENGINE PUMP	12. 6600
SEAL, RAW WATER PUMP BEARING	5. 6160	SHAFT, INJECTOR CONTROL TUBE END	2. 9007
SEAL, RAW WATER PUMP SHAFT	5. 6170	SHAFT, MARINE GEAR INPUT	9. 1026
SEAL, REDUCTION GEAR BEARING OIL COVER	9. 1375	SHAFT, OIL PUMP DRIVE	4. 1070
SEAL, REVERSE CLUTCH PISTON	9. 1035	SHAFT, OIL PUMP DRIVEN GEAR	4. 1080
SEAL, ROTOR ASSY. SHAFT OIL	3. 5028	SHAFT, OUTPUT AND BUSHING ASSY.	9. 1093
SEAL, SELECTOR VALVE OIL	9. 1160	SHAFT, OVERSPEED TRIP GOVERNOR OPERATING	7. 4646
SEAL, SELECTOR VALVE STEM	9. 1139	SHAFT, POWER TAKE-OFF ADAPTOR STUB	8. 1904
SEAL, TACHOMETER DRIVE COVER	7. 4450	SHAFT, RAW WATER PUMP	5. 6120
SEAL, TACHOMETER DRIVE COVER ADAPTOR	7. 4458	SHAFT, REDUCTION GEAR DRIVE	9. 1340
SEAL, THERMOSTAT	5. 2060	SHAFT, TACHOMETER AND BLOWER DRIVE	7. 4434
SEAL, THERMOSTAT HOUSING OUTLET ELBOW	5. 2093	SHAFT, TACHOMETER DRIVE	7. 4435
SEAT, BLOWER DRIVE COUPLING SPRING	3. 4410	SHAFT, THROTTLE CONTROL CROSS	2. 9310
SEAT, EXHAUST VALVE SPRING	1. 8360	SHAFT, THROTTLE CONTROL-OPERATING SOLENOID DRIVE	2. 9367
SEAT, FUEL FILTER ELEMENT	2. 3322	SHAFT, THROTTLE CONTROL-REAR OF ENGINE TO GOVERNOR	2. 9360
SEAT, GOVERNOR LOW SPEED SPRING	2. 7570	SHAFT, VERNIER THROTTLE CONTROL	2. 9140
SEAT, HYDRAULIC STARTER ENGINE PUMP RELIEF VALVE SPRING	12. 6623	SHELL ASSY., RADIATOR	5. 3015
SEAT, INJECTOR VALVE	2. 1247	SHELL, BREATHER	4. 8055
SEAT, INJECTOR VALVE SPRING	2. 1255	SHELL, CONNECTING ROD BEARING	1. 6100
SEAT, PUSH ROD SPRING-LOWER	1. 8210	SHELL, CONVERTER OIL FILTER	8. 3874
SEAT, PUSH ROD SPRING-UPPER	1. 8200	SHELL, CRANKSHAFT MAIN BEARING	1. 3090
SEAT, RAW WATER PUMP SHAFT SEAL	5. 6173	SHELL, FUEL FILTER	2. 3380
SERVICE KIT, INJECTOR	2. 1002	SHELL, FUEL STRAINER	2. 3050
SHAFT AND CARRIER ASSY., GOVERNOR WEIGHT	2. 7350	SHELL, HYDRAULIC STARTER ACCUMULATOR	12. 6572
SHAFT ASSY., CONTROL LINK OPERATING	2. 8811	SHELL, OIL FILTER	4. 2280
SHAFT ASSY., FRESH WATER PUMP	5. 1050	SHIELD HEAT	12. 6401
SHAFT ASSY., GOVERNOR DRIVEN	2. 8790	SHIELD, GENERATOR	7. 1005
SHAFT ASSY., GOVERNOR OPERATING	2. 7250	SHIELD, RAW WATER PUMP CLUTCH	5. 6610
SHAFT ASSY., GOVERNOR SHUTDOWN	2. 7115	SHIELDING, FLEXIBLE HOSE	2. 5255
SHAFT ASSY., GOVERNOR THROTTLE	2. 7095	SHIM, BILGE PUMP SHAFT BEARING	12. 2110
SHAFT ASSY., OUTPUT	9. 1089	SHIM, BLOWER ROTOR GEAR	3. 4090
SHAFT ASSY., ROCKER	1. 8160	SHIM, FLYWHEEL HOUSING TO END PLATE	1. 5002
SHAFT ASSY., TACHOMETER DRIVE FLEXIBLE	7. 4405	SHIM, GOVERNOR HIGH SPEED SPRING	2. 7600
SHAFT ASSY., TURBOCHARGER ROTOR	3. 5033	SHIM, GOVERNOR VARIABLE SPEED SPRING	2. 7800
SHAFT, ACCESSORY DRIVE	1. 7640	SHIM, OIL PUMP	4. 1030
SHAFT, AIR COMPRESSOR DRIVE	12. 4047	SHROUD, FAN	5. 4560
SHAFT, AIR INLET HOUSING SHUTDOWN VALVE	3. 3050	SILENCER, AIR	3. 2001
SHAFT, AIR SHUTDOWN VALVE	3. 4422	SLEEVE ASSY., OUTPUT SHAFT	9. 1092
SHAFT, BALANCE	1. 7080	SLEEVE, CLUTCH RELEASE	8. 1285
SHAFT, BLOWER DRIVE	3. 4445	SLEEVE, CRANKSHAFT FRONT OIL SEAL SPACER	1. 3056
SHAFT, BLOWER ROTOR	3. 4035	SLEEVE, CRANKSHAFT REAR OIL SEAL	1. 3066
SHAFT, CLUTCH DRIVE	8. 1670	SLEEVE, GOVERNOR DRIVEN SHAFT	2. 8800
SHAFT, CLUTCH FORWARD AND REVERSE TWIN DISC	9. 1032	SLEEVE, GOVERNOR SPEED ADJUSTING SHAFT	2. 8360
SHAFT, CLUTCH RELEASE	8. 1270	SLEEVE, GOVERNOR SPEED ADJUSTING TERMINAL	2. 8480
SHAFT, FAN	5. 4100	SLEEVE, OVERSPEED VALVE ADJUSTING	7. 4739

ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>S</b>			
SLINGER, CAMSHAFT OIL	1. 7061	SPRING, GOVERNOR SPEEDER	2. 8530
SLINGER, RAW WATER PUMP SHAFT	5. 6200	SPRING, GOVERNOR THROTTLE LEVER RETURN	2. 7910
SLINGER, TACHOMETER DRIVE SHAFT OIL	7. 4440	SPRING, GOVERNOR THROTTLE SHAFT ARM	
SOCKET LAMP-INSTRUMENT PANEL LAMP	7. 4105	RETURN	2. 7093
SOLENOID, AIR SHUTOFF OR GOVERNOR	7. 4519	SPRING, GOVERNOR THROTTLE SPEED	
SOLENOID, THROTTLE CONTROL	2. 9355	ADJUSTING	2. 7174
SPACER, ACCESSORY DRIVE OIL SEAL	1. 7665	SPRING, GOVERNOR VARIABLE SPEED	2. 7760
SPACER, BLOWER ROTOR GEAR	3. 4100	SPRING, HYDRAULIC STARTER CONTROL SHAFT	
SPACER, BLOWER ROTOR SHAFT OIL SEAL	3. 4163	TORSION	12.6513
SPACER, CAMSHAFT AND BALANCE SHAFT GEAR	1. 7202	SPRING, HYDRAULIC STARTER ENGINE PUMP	
SPACER, CAMSHAFT OIL SEAL	1. 7062	PISTON	12.6608
SPACER, CLUTCH DRIVE SHAFT BEARING		SPRING, HYDRAULIC STARTER ENGINE PUMP	
RETAINER	8. 1695	RELIEF VALVE	12.6622
SPACER, CRANKSHAFT FRONT OIL SEAL	1. 3055	SPRING, INJECTOR CONTROL AIR CYLINDER	2. 9097
SPACER, CRANKSHAFT REAR OIL SEAL	1. 3065	SPRING, INJECTOR CONTROL TUBE	2. 9012
SPACER, FAN SHAFT BEARING	5. 4170	SPRING, INJECTOR CONTROL TUBE THROTTLE	2. 9011
SPACER, GENERATOR ADJUSTING STRAP	7. 1581	SPRING, INJECTOR FILTER	2. 1120
SPACER, GENERATOR AND MOUNTING BRACKET	7. 1598	SPRING, INJECTOR PLUNGER	2. 1080
SPACER, GENERATOR DRIVE BELT AND PULLEY		SPRING, INJECTOR VALVE	2. 1250
GUARD	7. 1590	SPRING, OIL COOLER BYPASS VALVE	4. 4150
SPACER, GENERATOR DRIVE PULLEY SHAFT		SPRING, OIL FILTER	4. 2310
BEARING	7. 1540	SPRING, OIL FILTER BYPASS VALVE	4. 2486
SPACER, GENERATOR DRIVEN PULLEY	7. 1503	SPRING, OIL FILTER BYPASS VALVE	8. 3886
SPACER, GENERATOR VOLTAGE REGULATOR		SPRING, OIL FILTER TUBE ADAPTOR BY-PASS	
PLATE	7. 1615	VALVE	4. 3057
SPACER, GOVERNOR DRIVE SHAFT BEARING	2. 8840	SPRING, OIL FILTER TUBE ADAPTOR BYPASS	4. 3057
SPACER, GOVERNOR WEIGHT SHAFT	2. 7475	SPRING, OIL PRESSURE REGULATOR	4. 1690
SPACER, IDLER GEAR HOLE	1. 7260	SPRING, OIL PRESSURE RELIEF VALVE	4. 1583
SPACER, IDLER PULLEY SHAFT BEARING	5. 1209	SPRING, OIL PUMP RELIEF VALVE	4. 1260
SPACER, INJECTOR CONTROL TUBE LEVER	2. 9010	SPRING, OVERSPEED TRIP GOVERNOR HIGH OR	
SPACER, OIL FILTER	4. 2270	LOW SPEED	7. 4651
SPACER, OIL PUMP BODY	4. 1060	SPRING, OVERSPEED VALVE PISTON	7. 4737
SPACER, RADIATOR MOUNTING	5. 3250	SPRING, PRESSURE REGULATOR RELIEF VALVE	9. 1195
SPACER, RAW WATER PUMP DRIVE	5. 6450	SPRING, PUSH ROD	1. 8190
SPACER, REDUCTION GEAR DRIVE SHAFT		SPRING, RAW WATER PUMP GUIDE TUBE	5. 6680
BEARING	9. 1351	SPRING, RAW WATER PUMP HANDLE	5. 6680
SPACER, TURBOCHARGER ROTOR THRUST	3. 5035	SPRING, RAW WATER PUMP SHAFT SEAL	5. 6178
SPEED, TRIP GOVERNOR SWITCH HOUSING	7. 4681	SPRING, RESET LEVER ROD	3. 3125
SPIDER AND SHAFT ASSY., GOVERNOR		SPRING, REVERSE CLUTCH RELEASE	9. 1055
OPERATING	8. 3400	SPRING, SELECTOR RELIEF VALVE	9. 1147
SPIDER, MARINE GEAR DRIVE	9. 1009	SPRING, SELECTOR VALVE PRESSURE	9. 1155
SPRING, AIR HEATER PUMP	7. 8265	SPRING, SPEED ADJUSTING SHAFT TORSION	2. 8355
SPRING, AIR INLET HOUSING SHUTDOWN VALVE		SPRING, STARTING CONTROL ROD RETRACTING	7. 4570
TENSION	3. 3070	SPRING, THROTTLE BOOSTER	2. 7980
SPRING, AIR SHUTDOWN VALVE	3. 4426	SPRING, THROTTLE BOOSTER	2. 9347
SPRING, AIR SHUTOFF RESET LATCH	7. 4560	SPRING, VERNIER THROTTLE CONTROL LOCK	2. 9138
SPRING, BLOWER DRIVE COUPLING	3. 4400	SPRING, VERNIER THROTTLE CONTROL LOCK	
SPRING, BLOWER ROTOR OIL SEAL	3. 4043	BUTTON PIN	2. 9147
SPRING, CLUTCH PRESSURE PLATE RETURN	8. 1135	SPRING, WATER FILTER	5. 7026
SPRING, CLUTCH TOGGLE LEVER	8. 1100	STABILIZER, CRANKSHAFT MAIN BEARING CAP	1. 3112
SPRING, EXHAUST VALVE	1. 8340	STAKING AND FERRULE, ROLLING TOOL FLEXIBLE	
SPRING, EXTENSION STARTER HANDLE RETURN	12. 6821	SHAFT	12.8518
SPRING, FAN BELT IDLER PULLEY SUPPORT		STARTER ASSY., HYDRAULIC	12.6501
SHAFT	5. 4353	STEM, SELECTOR VALVE	9. 1138
SPRING, FAST IDLE AIR CYLINDER	2. 7870	STOP, GOVERNOR VARIABLE SPEED SPRING	
SPRING, FLEXIBLE SHAFT CASING	12.8512	RETAINER	2. 7795
SPRING, FORWARD CLUTCH RELEASE	9. 1240	STOP, INJECTOR VALVE	2. 1260
SPRING, FUEL FILTER ELEMENT	2. 3370	STRAINER AND PLUG ASSY., STARTING FLUID	12.6385
SPRING, FUEL PUMP VALVE RETAINING	2. 2160	STRAINER ASSY., FUEL	2. 3001
SPRING, FUEL STRAINER	2. 3060	STRAINER ASSY., OIL MARINE GEAR	9. 1650
SPRING, GOVERNOR CONTROL RETRACTING	2. 9405	STRAINER, AIR COMPRESSOR	12.4300
SPRING, GOVERNOR FUEL ROD SHORT	2. 8120	STRAINER, AIR COMPRESSOR ON COMPRESSOR	12.4300
SPRING, GOVERNOR HIGH SPEED	2. 7550	STRAINER, FUEL TANK HOSE	2. 6007
SPRING, GOVERNOR LOW SPEED	2. 7540	STRAINER, OIL FILLER TUBE	4. 5020
SPRING, GOVERNOR RELIEF VALVE	2. 8680	STRAP, ACCUMULATOR MOUNTING	12.6682
SPRING, GOVERNOR SHUTDOWN SHAFT	2. 7117	STRAP, AIR CLEANER MOUNTING	3. 1220
SPRING, GOVERNOR SPEED ADJUSTING	8. 3465	STRAP, AIR SILENCER MOUNTING	3. 2014

ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>S</b>			
STRAP, ENGINE TO BASE GROUND	7. 7110	TUBE ASSY., ADAPTOR TO WATER PUMP	7. 4687
STRAP, FUEL TANK	2. 6065	TUBE ASSY., CYLINDER HEAD AIR INLET	2. 9087
STRAP, GENERATOR ADJUSTING	7. 1580	TUBE ASSY., CYLINDER INLET	2. 9086
STRAP, HYDRAULIC STARTER RESERVOIR	12. 6552	TUBE ASSY., FUEL PUMP DRAIN	2. 2300
STRAP, STARTING MOTOR GROUND SWITCH	7. 3242	TUBE ASSY., GOVERNOR BEARING LUBRICATION	2. 7890
STUD, BILGE PUMP BODY	12. 2020	TUBE ASSY., INJECTOR CONTROL	2. 9001
STUD, BILGE PUMP SHAFT PACKING GLAND	12. 2080	TUBE, AIR BOX DRAIN	1. 1100
STUD, CYLINDER HEAD	1. 2030	TUBE, AIR COMPRESSOR BOOSTER	12. 4375
STUD, EXHAUST MANIFOLD TO HEAD	6. 1020	TUBE, AIR COMPRESSOR LUBE OIL DRAIN	12. 4070
STUD, EXHAUST OUTLET	6. 2115	TUBE, AIR COMPRESSOR LUBE OIL SUPPLY	12. 4065
STUD, GOVERNOR OIL PUMP DRIVEN GEAR TO BASE	2. 8740	TUBE, AIR COMPRESSOR WATER INLET	12. 4085
STUD, OIL FILTER CENTER	4. 2410	TUBE, AIR COMPRESSOR WATER OUTLET	12. 4090
SUB-CAP ASSY., GOVERNOR	2. 8050	TUBE, AIR HEATER FUEL RETURN	7. 8313
SUPPORT ASSY., FAN BELT IDLER PULLEY	5. 4347	TUBE, AIR HEATER INLET	7. 8310
SUPPORT, AIR CLEANER MOUNTING BRACKET	3. 1250	TUBE, AIR HEATER PUMP INLET	7. 8300
SUPPORT, AIR SILENCER	3. 2010	TUBE, BATTERY BOX HEATER	7. 8420
SUPPORT, BLOWER DRIVE COUPLING	3. 4380	TUBE, BREATHER TUBE TO DRAIN TANK	4. 8190
SUPPORT, BLOWER DRIVE GEAR HUB	3. 4350	TUBE, CONTROL VALVE TO HYDRAULIC PUMP HOUSING	9. 1598
SUPPORT, BREATHER TUBE CLIP	4. 8042	TUBE, CONVERTER TO FILTER	8. 3827
SUPPORT, ENGINE FRONT	11. 1070	TUBE, CONVERTER TO OIL COOLER	8. 3800
SUPPORT, ENGINE FRONT TRUNNION MOUNTING	11. 1090	TUBE, CYLINDER HEAD VENT	5. 3480
SUPPORT, ENGINE REAR	11. 1100	TUBE, EXHAUST MANIFOLD FRESH WATER OUTLET	5. 3447
SUPPORT, ENGINE REAR HOOD	10. 1025	TUBE, EXHAUST MANIFOLD WATER-INLET	7. 4694
SUPPORT, EXHAUST PIPE	6. 2091	TUBE, EXHAUST MANIFOLD WATER-OUTLET	7. 4699
SUPPORT, FAN MOUNTING	5. 4025	TUBE, EXPANSION TANK OVERFLOW	5. 5190
SUPPORT, FUEL STRAINER MOUNTING BRACKET	2. 3263	TUBE, FILTER OUTLET	2. 5151
SUPPORT, FUEL SYSTEM SHUTOFF VALVE	2. 5270	TUBE, FILTER TO CYLINDER HEAD	2. 5149
SUPPORT, GENERATOR MOUNTING	11. 1190	TUBE, FILTER TO OIL COOLER	8. 3828
SUPPORT, INPUT SHAFT BEARING	9. 1024	TUBE, FRESH WATER PUMP VENT	5. 1003
SUPPORT, INSTRUMENT PANEL	7. 4013	TUBE, FUEL COOLER	2. 5214
SUPPORT, OIL FILTER MOUNTING	4. 2470	TUBE, FUEL DRAIN	2. 5210
SUPPORT, OIL PUMP INLET TUBE	4. 1512	TUBE, FUEL DRAIN CROSSOVER	2. 5205
SUPPORT, POWER TAKE-OFF	8. 1895	TUBE, FUEL PUMP TO CYLINDER HEAD	2. 5101
SUPPORT, THROTTLE CONTROL BRACKET	2. 9175	TUBE, FUEL PUMP TO FILTER	2. 5100
SUPPORT, TORQUE CONVERTER	8. 3270	TUBE, FUEL SUPPLY CROSSOVER	2. 5163
SUPPORT, VACUUM PUMP	12. 3020	TUBE, FUEL SUPPLY TO STRAINER	2. 5001
SWITCH, ALARM SHUTOFF-FUEL	7. 4598	TUBE, FUEL TANK SUCTION	2. 6095
SWITCH, ENGINE STARTING	7. 4115	TUBE, GOVERNOR OPERATING PRESSURE	2. 8910
SWITCH, OIL PRESSURE	7. 4125	TUBE, GOVERNOR OPERATING SHAFT	2. 7257
SWITCH, OIL PRESSURE	7. 4586	TUBE, HEAD TO BLOWER BREATHER	4. 8005
SWITCH, OVERSPEED TRIP GOVERNOR	7. 4659	TUBE, HEAT EXCHANGER RAW WATER INLET INTERMEDIATE	5. 5430
SWITCH, SHUTDOWN SOLENOID MICRO	7. 4520	TUBE, HEAT EXCHANGER WATER INLET	5. 5440
SWITCH, TRANSMISSION OIL TEMPERATURE	4. 4360	TUBE, HEAT EXCHANGER WATER OUTLET	5. 5550
SWITCH, WATER HEATER CONTROL	12. 6405	TUBE, HYDRAULIC GEAR OIL STRAINER TO PUMP	9. 1720
SWITCH, WATER TEMPERATURE	7. 4128	TUBE, HYDRAULIC PUMP TO CONTROL VALVE	9. 1593
SWITCH, WATER TEMPERATURE	7. 4505	TUBE, HYDRAULIC STARTER ACCUMULATOR TO HYDRAULIC STARTER	12. 6860
<b>T</b>			
TACHOMETER	7. 4060	TUBE, HYDRAULIC STARTER HAND PUMP TO ACCUMULATOR	12. 6855
TANK AND STRAINER ASSY., STARTING AID	12. 6355	TUBE, INJECTOR HOLE	1. 2045
TANK ASSY., AIR BOX AND FUEL PUMP DRAIN	1. 1150	TUBE, JUNCTION BLOCK INLET	4. 1581
TANK ASSY., FUEL	2. 6001	TUBE, JUNCTION BLOCK TO CYLINDER HEAD	2. 5175
TANK EXPANSION	5. 5001	TUBE, LOW OIL PRESSURE SWITCH	4. 2497
THERMOSTAT	5. 2000B	TUBE, OIL COOLER TO CONVERTER	8. 3818
THERMOSTAT ASSY.	5. 2050	TUBE, OIL FILLER	4. 5001
TIP ASSY., INJECTOR SPRAY	2. 1235	TUBE, OIL FILTER INLET	4. 3001
TIP KIT, INJECTOR SPRAY	2. 1220	TUBE, OIL FILTER OUTLET	4. 3020
TIP, FLEXIBLE SHAFT LOWER	12. 8506	TUBE, OIL PAN DRAIN	4. 7100
TIP, FLEXIBLE SHAFT UPPER	12. 8508	TUBE, OIL PRESSURE GAGE	4. 1597
TIP, INJECTOR SPRAY	2. 1230	TUBE, OIL PRESSURE GAGE FOR CUSTOMER GAGE CONNECTOR TO SELECTOR VALVE	9. 1775
TRANSMISSION ASSY.	9. 7001	HOUSING FLANGE	7. 4074
TRUNNION, ENGINE FRONT	11. 1088	TUBE, OIL PRESSURE GAGE-ENGINE	4. 1597
TUBE & ELBOW ASSY., AIR COMPRESSOR BOOSTER INLET	12. 4375		
TUBE ASSY., ADAPTOR TO OUTLET ELBOW	7. 4686		

ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>T</b>		<b>V</b>	
TUBE, OIL PRESSURE SWITCH	7. 4596	VALVE, INJECTOR	2. 1245
TUBE, OIL PRESSURE SWITCH RETURN	7. 4597	VALVE, INJECTOR CHECK	2. 1200
TUBE, OVERSPEED GOVERNOR OIL SUPPLY	7. 4668	VALVE, MARINE GEAR PRESSURE REGULATOR	9. 1021
TUBE, OVERSPEED VALVE AIR PRESSURE	7. 4744	VALVE, OIL COOLER BYPASS	4. 4140
TUBE, OVERSPEED VALVE OIL DRAIN	7. 4748	VALVE, OIL COOLER PRESSURE REGULATOR	9. 1019
TUBE, OVERSPEED VALVE OIL SUPPLY	7. 4746	VALVE, OIL FILTER BYPASS	4. 2400
TUBE, RAW WATER PUMP GUIDE	5. 6670	VALVE, OIL FILTER BYPASS	4. 2485
TUBE, RAW WATER PUMP INLET	5. 5377	VALVE, OIL FILTER BYPASS	8. 3884
TUBE, RAW WATER PUMP OUTLET	5. 5380	VALVE, OIL FILTER TUBE ADAPTOR BY-PASS	4. 3055
TUBE, REDUCTION GEAR OIL FILLER	9. 1410	VALVE, OIL FILTER TUBE ADAPTOR BYPASS	4. 3055
TUBE, SOLENOID VALVE DRAIN	2. 7930	VALVE, OIL PRESSURE REGULATOR	4. 1700
TUBE, SOLENOID VALVE SUPPLY	2. 7925	VALVE, OIL PRESSURE RELIEF	4. 1582
TUBE, SOLENOID VALVE TO GOVERNOR	2. 7927	VALVE, OIL PUMP RELIEF	4. 1250
TUBE, STARTING AID PUMP TO NOZZLE	12. 6370	VALVE, PRESSURE REGULATOR RELIEF	9. 1194
TUBE, STARTING AID TANK TO PUMP	12. 6365	VALVE, SELECTOR	9. 1137
TUBE, STRAINER TO FUEL PUMP	2. 5050	VALVE, STARTING AID PUMP-INLET	12. 6340
TUBE, THERMOSTAT HOUSING VENT	5. 2135	VALVE, STARTING AID PUMP-OUTLET	12. 6345
TUBE, THROTTLE CONTROL CROSS SHAFT	2. 9312	VENT, EXHAUST MANIFOLD WATER OUTLET	
TUBE, TURBOCHARGER OIL RETURN	3. 5505	FLANGE	5. 3465
TUBE, TURBOCHARGER OIL SUPPLY	3. 5500	VENTILATION	4. 8000A
TUBE, VACUUM PUMP OIL DRAIN	12. 3050		
TUBE, VACUUM PUMP OIL SUPPLY	12. 3040	<b>W</b>	
TUBE, WATER BYPASS	5. 2160	WASHER, BLOWER DRIVE GEAR HUB THRUST	3. 4320
TUBE, WATER HEATER OUTLET	12. 6408	WASHER, BLOWER ROTOR SHAFT THRUST	3. 4036
TUBE, WATER HEATER SUPPLY	12. 6407	WASHER, CAM AND BALANCE SHAFT END	
TURBOCHARGER	3. 5001	BEARING THRUST	1. 7030
		WASHER, CRANKSHAFT MAIN BEARING THRUST	1. 3100
<b>V</b>		WASHER, FLEXIBLE SHAFT TIP RETAINING	12. 8510
VALVE ASSY., AIR HEATER PUMP SUPPLY		WASHER, FORWARD CLUTCH CYLINDER THRUST	9. 1224
SHUTOFF	7. 8295	WASHER, FUEL PIPE CONNECTOR	2. 4050
VALVE ASSY., BLOWER (MINI-BYPASS)	3. 4144	WASHER, GOVERNOR SHUTDOWN SHAFT	2. 7145
VALVE ASSY., FUEL PUMP	2. 2130	WASHER, GOVERNOR THROTTLE SHAFT	2. 7140
VALVE ASSY., FUEL PUMP CHECK	2. 2035	WASHER, PLANETARY GEAR THRUST	9. 1085
VALVE ASSY., GOVERNOR RELIEF	2. 8630	WASHER, REDUCTION GEAR PLANETARY GEAR	
VALVE ASSY., HYDRAULIC STARTER ASSY.		THRUST	9. 1293
CONTROL	12. 6516	WASHER, THROTTLE CONTROL TUBE BRAKE	2. 9105
VALVE ASSY., INJECTOR	2. 1240	WATER CONNECTIONS	
VALVE ASSY., MASTER CYLINDER CHECK	12. 6816	WATER HEATER, KIM HOT-START	12. 6403
VALVE ASSY., OVERSPEED	7. 4725	WATER PUMP	5. 1000
VALVE ASSY., SELECTOR	9. 1135	WEIGHT AND CARRIER ASSY., OVERSPEED TRIP	
VALVE KIT, GOVERNOR RELIEF	2. 8635	GOVERNOR	7. 4623
VALVE KIT, INJECTOR	2. 1238	WEIGHT ASSY., GOVERNOR	8. 3405
VALVE MECHANISM	1. 8000	WEIGHT, FRONT BALANCE	1. 7140
VALVE, AIR CYLINDER CONTROL	2. 9859	WEIGHT, GOVERNOR	2. 7390
VALVE, AIR HEATER PUMP-OUTLET	7. 8280	WEIGHT, OVERSPEED TRIP GOVERNOR	7. 4625
VALVE, AIR INLET HOUSING SHUTDOWN	3. 3040	WEIGHT, REAR BALANCE	1. 7190
VALVE, AIR SHUTDOWN	3. 4421	WHEEL, TURBOCHARGER COMPRESSOR	3. 5036
VALVE, AUTOMATIC SHUTDOWN AND ALARM		WIRE ASSY., GENERATOR TO REGULATOR	7. 1630
SOLENOID	7. 4652	WIRE, AIR INLET HOUSING SHUTDOWN CONTROL	3. 3250
VALVE, EXHAUST	1. 8310	WIRE, AIR SHUT-OFF CONTROL	3. 4429
VALVE, FUEL SUPPLY CHECK	2. 5006	WIRE, AIR SHUTOFF CONTROL-RESET	7. 4525
VALVE, FUEL SYSTEM SHUTOFF	2. 5260	WIRE, GOVERNOR CONTROL	2. 9422
VALVE, FUEL TANK CHECK	2. 6090	WIRE, GOVERNOR MANUAL SHUTDOWN LEVER	2. 7837
VALVE, GOVERNOR DUAL SPEED CONTROL		WIRE, STARTING AID CONTROL	12. 6378
SOLENOID	2. 7920	WORM, VERNIER THROTTLE CONTROL	2. 9139
VALVE, HYDRAULIC STARTER ACCUMULATOR	12. 6576		
VALVE, HYDRAULIC STARTER CONTROL	12. 6518	<b>Y</b>	
VALVE, HYDRAULIC STARTER ENGINE PUMP		YOKE, CLUTCH RELEASE	8. 1275
CHECK	12. 6615	YOKE, HYDRAULIC STARTER CLUTCH	12. 6508
VALVE, HYDRAULIC STARTER ENGINE PUMP			
RELIEF	12. 6620		
VALVE, HYDRAULIC STARTER HAND PUMP			
CHECK	12. 6640		
VALVE, HYDRAULIC STARTER HAND PUMP RELIEF	12. 6635		
VALVE, HYDRAULIC STARTER HAND PUMP			
SHUTOFF	12. 6650		

**MODEL  
INDEXES**

# **MODEL INDEXES**

# MODEL DESCRIPTION CHART IN-LINE ENGINES

5 0 4 3 - 5 1 0 0

SERIES 53	NUMBER OF CYLINDERS	APPLICATION DESIGNATION (see below)	BASIC ENGINE ARRANGEMENTS *(see below)	DESIGN VARIATION (see below)	SPECIFIC MODEL NUMBER AND STARTER-BLOWER ARRANGEMENT
--------------	---------------------------	---	--	------------------------------------	--

### APPLICATION DESIGNATION

504<sub>2</sub>-5100 MARINE  
 504<sub>3</sub>-5100 FAN TO F/W-INDUSTRIAL  
 504<sub>4</sub>-5100 POWER-BASE  
 504<sub>5</sub>-5100 GENERATOR  
 504<sub>Z</sub>-5100 FAN TO F/W-AUTOMOTIVE

### DESIGN VARIATIONS


5043-5000 "N" ENGINE  
 5043-5100 2 VALVE HEAD  
 5043-5200 4 VALVE HEAD  
 5042-2302 TURBOCHARGER

### STARTER-BLOWER ARRANGEMENT


Odd number in last digit  
 designates starter opposite blower.  
 Even number in last digit  
 designates starter same side as blower.

### \*2, 3, 4-53 BASIC ENGINE ARRANGEMENTS


Rotation: L (left) and R (right) designates  
 rotation viewed from the front of the  
 engine.  
 Type: A-B-C-D designates location of  
 exhaust manifold and blower  
 as viewed from the rear (flywheel) end.

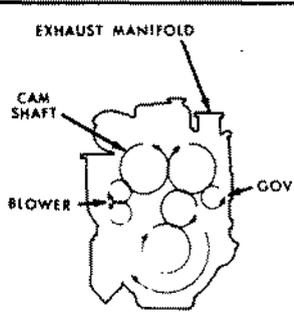


LA (XXXX-1XXX)

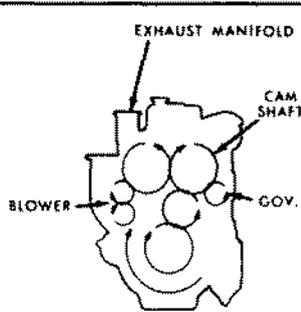


LB (XXXX-2XXX)

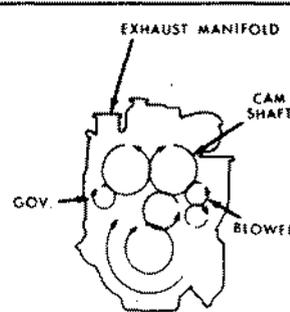


LC (XXXX-3XXX)

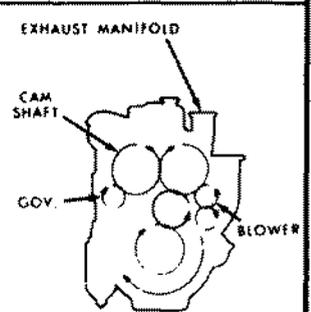


LD (XXXX-4XXX)

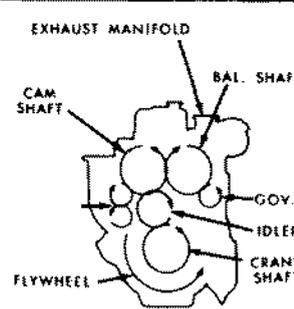


RA (XXXX-5XXX)

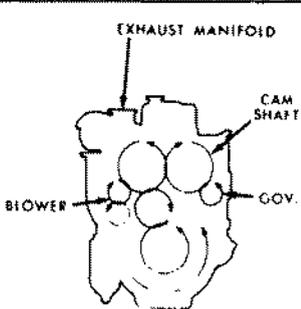

RB (XXXX-6XXX)

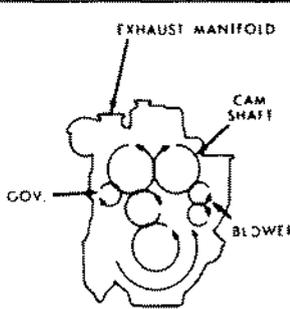

RC (XXXX-7XXX)

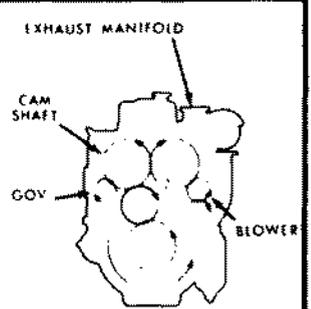

RD (XXXX-8XXX)

ALL VIEWS FROM FLYWHEEL (REAR) END OF ENGINE  
 ENGINE ROTATION DETERMINED BY VIEWING ENGINE FROM BALANCE WEIGHT COVER (FRONT) END

# MODEL DESCRIPTION CHART V-TYPE ENGINES

5 0 6 2 - 7 2 0 0

SERIES 53	NUMBER OF CYLINDERS	APPLICATION DESIGNATION (see below)	BASIC ENGINE ARRANGEMENTS (see below)	DESIGN VARIATION (see below)	SPECIFIC MODEL NUMBER
--------------	---------------------------	---	---	------------------------------------	-----------------------------

### APPLICATION DESIGNATION

- 5062-7200 MARINE
- 5063-7200 FAN TO F/W-INDUSTRIAL
- 5064-7200 POWER-BASE
- 5065-7200 GENERATOR
- 5067-7200 FAN TO F/W-AUTOMOTIVE

### DESIGN VARIATIONS





- 5063-7000 "N" ENGINE
- 5063-7200 4 VALVE HEAD
- 5063-5397 TURBOCHARGED

### BASIC ENGINE ARRANGEMENTS:

Rotation: L (left) and R (right) designates rotation viewed from the front of engine.

Type: A-B-C-D designates location of starter and oil cooler as viewed from the rear (flywheel) end.

Cylinder Bank: Left and right cylinder banks are determined from rear of engine.

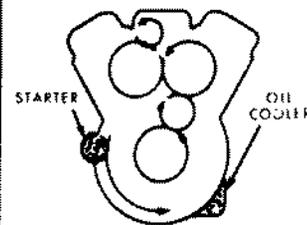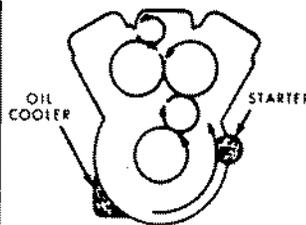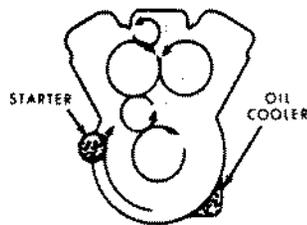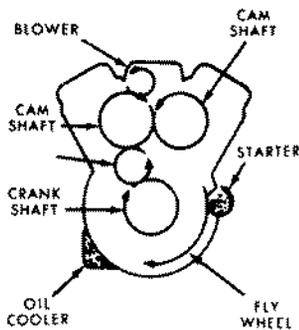

ALL VIEWS FROM FLYWHEEL (REAR) END OF ENGINE  
ENGINE ROTATION DETERMINED BY VIEWING ENGINE FROM BALANCE WEIGHT COVER (FRONT) END

5020-7101	2-53 2 VALVE HEAD (DISTRIBUTOR EXCHANGE UNIT)
5023-5101	2-53 2 VALVE HEAD, STARTER ON RIGHT
5023-5103	2-53 2 VALVE HEAD, STARTER ON RIGHT, REEFER CAR APPLICATION
5023-5104	2-53 2 VALVE HEAD, STARTER ON LEFT, REEFER CAR APPLICATION
5023-6100	2-53 2 VALVE HEAD, STARTER ON LEFT
5023-7100	2-53 2 VALVE HEAD, STARTER ON RIGHT
5023-7101	2-53 2 VALVE HEAD, STARTER ON LEFT
5023-7121	2-53 2 VALVE HEAD, FOR JOHN DEERE TRACTOR
5023-8101	2-53 2 VALVE HEAD, STARTER ON LEFT
5024-5101	2-53 2 VALVE HEAD, STARTER ON RIGHT
5024-7101	2-53 2 VALVE HEAD, STARTER ON LEFT
5024-8100	2-53 2 VALVE HEAD, STARTER ON RIGHT, HEAT EXCHANGER COOLED
5025-7101	2-53 2 VALVE HEAD, STARTER ON LEFT
5025-8100	2-53 2 VALVE HEAD, STARTER ON RIGHT, HEAT EXCHANGER COOLED

5030-7000	3-53 N ENGINE (DISTRIBUTOR EXCHANGE UNIT)
5032-2002	3-53 N ENGINE, STARTER ON LEFT, INCLINED PORT
5032-2202	3-53 4 VALVE HEAD, STARTER ON LEFT, INCLINED PORT
5032-4000	3-53 N ENGINE, STARTER ON RIGHT, STARBOARD
5032-4050	3-53 4 VALVE MARINE PROPULSION STARBOARD UNIT
5032-4100	3-53 2 VALVE HEAD, STARTER ON RIGHT, STARBOARD
5032-4200	3-53 4 VALVE HEAD, STARTER ON RIGHT, STARBOARD
5032-6000	3-53 N ENGINE, STARTER ON LEFT, PORT
5032-6050	3-53 4 VALVE MARINE PROPULSION PORT UNIT
5032-6100	3-53 2 VALVE HEAD, STARTER ON LEFT, PORT
5032-6200	3-53 4 VALVE HEAD, STARTER ON LEFT, PORT
5032-7001	3-53 4 VALVE HEAD, STARTER ON LEFT
5032-8002	3-53 N ENGINE, STARTER ON RIGHT, INCLINED STARBOARD
5032-8202	3-53 4 VALVE HEAD, STARTER ON RIGHT, INCLINED STARBOARD
5033-3001	3-53 4 VALVE HEAD, STARTER ON LEFT
5033-4002	3-53 4 VALVE HEAD, STARBOARD
5033-5001	3-53 N ENGINE STARTER ON RIGHT
5033-5008	3-53 N ENGINE 4 VALVE HEAD, STARTER ON LEFT
5033-5050	3-53 4 VALVE HEAD, BRASIL
5033-5051	3-53 4 VALVE HEAD, BRASIL
5033-5098	3-53 4 VALVE HEAD, STARTER ON LEFT
5033-5100	3-53 2 VALVE HEAD, STARTER ON LEFT
5033-5101	3-53 2 VALVE HEAD, STARTER ON RIGHT
5033-5108	3-53 2 VALVE HEAD, STARTER ON RIGHT
5033-5200	3-53 4 VALVE HEAD, STARTER ON LEFT
5033-5201	3-53 4 VALVE HEAD, STARTER ON RIGHT
5033-5298	3-53 4 VALVE HEAD, STARTER ON LEFT
5033-6002	3-53 4 VALVE HEAD, PORT
5033-6299	3-53 4 VALVE HEAD, STARTER ON LEFT
5033-7000	3-53 4 VALVE HEAD, STARTER ON RIGHT
5033-7001	3-53 4 VALVE HEAD, STARTER ON LEFT
5033-7007	3-53 4 VALVE INDUSTRIAL FAN TO FLYWHEEL
5033-7008	3-53 4 VALVE HEAD, STARTER ON LEFT
5033-7030	3-53 N ENGINE, STARTER ON RIGHT
5033-7032	3-53 4-VALVE FAN TO FLYWHEEL
5033-7050	3-53 4 VALVE HEAD, BRASIL
5033-7051	3-53 4 VALVE INDUSTRIAL FAN TO FLYWHEEL
5033-7098	3-53 4 VALVE HEAD, STARTER ON RIGHT
5033-7101	3-53 2 VALVE HEAD, STARTER ON LEFT
5033-7103	3-53 2 VALVE HEAD, STARTER ON LEFT
5033-7105	3-53 2 VALVE HEAD, STARTER ON LEFT
5033-7107	3-53 2 VALVE HEAD, STARTER ON LEFT
5033-7108	3-53 2 VALVE HEAD, STARTER ON LEFT
5033-7132	3-53 2 VALVE HEAD, STARTER ON LEFT
5033-7200	3-53 4 VALVE HEAD, STARTER ON RIGHT
5033-7201	3-53 4 VALVE HEAD, STARTER ON LEFT
5033-7298	3-53 4 VALVE HEAD, STARTER ON LEFT
5033-8001	3-53 4 VALVE HEAD, S & S DIESEL DRIVE MARINE
5033-8101	3-53 2 VALVE HEAD, STARTER ON LEFT
5033-8300	3-53 INDUSTRIAL FAN TO FLYWHEEL TURBO UNIT
5033-8301	3-53 INDUSTRIAL FAN TO FLYWHEEL TURBO UNIT
5033-8302	3-53 INDUSTRIAL FAN TO FLYWHEEL TURBO UNIT
5034-5101	3-53 2 VALVE HEAD, STARTER ON RIGHT
5034-7098	3-53 4 VALVE HEAD, STARTER ON RIGHT
5034-7101	3-53 2 VALVE HEAD, STARTER ON LEFT
5034-7201	3-53 4 VALVE HEAD, STARTER ON LEFT
5034-7203	3-53 4 VALVE HEAD, STARTER ON LEFT
5034-7298	3-53 4 VALVE HEAD, STARTER ON RIGHT
5034-8000	3-53N ENGINE, 4 VALVE HEAD, STARTER ON LEFT, HEAT EXCHANGER COOLED
5034-8100	3-53 2 VALVE HEAD, STARTER ON RIGHT, HEAT EXCHANGER COOLED

5040-7000	4-53 N ENGINE (DISTRIBUTOR EXCHANGE UNIT)
5042-2002	4-53 N ENGINE, STARTER ON RIGHT, INCLINED PORT
5042-2202	4-53 4 VALVE HEAD, STARTER ON LEFT, INCLINED PORT
5042-2302	4-53 TURBOCHARGED, INCLINED PORT
5042-4000	4-53 N ENGINE, STARTER ON RIGHT, STARBOARD
5042-4050	4-53 4 VALVE MARINE PROPULSION STARBOARD UNIT
5042-4100	4-53 2 VALVE HEAD, STARTER ON RIGHT, STARBOARD
5042-4200	4-53 4 VALVE HEAD, STARTER ON RIGHT, STARBOARD
5042-6000	4-53 N ENGINE, STARTER ON LEFT, PORT
5042-6050	4-53 4 VALVE MARINE PROPULSION PORT UNIT
5042-6100	4-53 2 VALVE HEAD, STARTER ON LEFT, PORT
5042-6200	4-53 4 VALVE HEAD, STARTER ON LEFT, PORT
5042-8002	4-53 N ENGINE, STARTER ON RIGHT, INCLINED STARBOARD
5042-8202	4-53 4 VALVE HEAD, STARTER ON RIGHT, INCLINED STARBOARD
5042-8302	4-53 TURBOCHARGED, INCLINED STARBOARD
5043-5001	4-53 N ENGINE, STARTER ON RIGHT
5043-5021	4-53 N ENGINE, STARTER ON RIGHT, OLIVER 1900 TRACTOR
5043-5050	4-53 4 VALVE HEAD, BRASIL
5043-5081	4-53 4 VALVE FAN TO FLYWHEEL INDUSTRIAL UNIT
5043-5101	4-53 2 VALVE HEAD, STARTER ON RIGHT
5043-5102	4-53 2 VALVE HEAD, STARTER ON LEFT, FOR AIR COMP. APPLICATION
5043-5121	4-53 2 VALVE HEAD, OLIVER 1900 TRACTOR
5043-5198	4-53 2 VALVE HEAD, STARTER ON RIGHT
5043-5200	4-53 4 VALVE HEAD, STARTER ON LEFT
5043-5201	4-53 4 VALVE HEAD, STARTER ON RIGHT
5043-5221	4-53 4 VALVE HEAD, OLIVER 1900 TRACTOR
5043-5340	4-53 INDUSTRIAL FAN TO FLYWHEEL TURBO UNIT
5043-7000	4-53 N ENGINE, STARTER ON RIGHT
5043-7001	4-53 N ENGINE, STARTER ON RIGHT
5043-7002	4-53 INDUSTRIAL FAN TO FLYWHEEL
5043-7005	4-53 4 VALVE INDUSTRIAL FAN TO FLYWHEEL
5043-7008	4-53 4 VALVE HEAD, STARTER ON LEFT
5043-7032	4-53 4 VALVE FAN TO FLYWHEEL
5043-7050	4-53 4 VALVE HEAD, BRASIL
5043-7051	4-53 4 VALVE HEAD, BRASIL
5043-7098	4-53 4 VALVE HEAD, STARTER ON RIGHT
5043-7101	4-53 2 VALVE HEAD, STARTER ON LEFT
5043-7105	4-53 2 VALVE HEAD, STARTER ON LEFT
5043-7108	4-53 2 VALVE HEAD, STARTER ON LEFT
5043-7132	4-53 2 VALVE HEAD, STARTER ON LEFT
5043-7200	4-53 4 VALVE HEAD, STARTER ON RIGHT
5043-7201	4-53 4 VALVE HEAD, STARTER ON LEFT
5043-7298	4-53 4 VALVE HEAD, STARTER ON RIGHT
5043-8000	4-53 4 VALVE HEAD, STARTER ON RIGHT
5043-8001	4-53 4 VALVE HEAD, S & S DIESEL DRIVE MARINE
5043-8301	4-53 4 VALVE HEAD, TURBOCHARGED
5043-8341	4-53 T FAN TO FLYWHEEL TURBOCHARGED UNIT
5043-8399	4-53 INDUSTRIAL FAN TO FLYWHEEL TURBOCHARGED
5044-5101	4-53 2 VALVE HEAD, STARTER ON RIGHT
5044-7101	4-53 2 VALVE HEAD, STARTER ON LEFT
5044-7201	4-53 4 VALVE HEAD, STARTER ON LEFT
5044-7203	4-53 4 VALVE HEAD, STARTER ON LEFT, TORQUE CONVERTER
5044-8000	4-53N ENGINE, 4 VALVE HEAD, STARTER ON LEFT, HEAT EXCHANGER COOLED
5044-8100	4-53 2 VALVE HEAD, STARTER ON RIGHT, HEAT EXCHANGER COOLED

5060-5000	6V53 N ENGINE, STARTER ON RIGHT, (DISTRIBUTOR EXCHANGE UNIT)
5062-3000	6V53 N ENGINE, STARTER ON LEFT, STARBOARD
5062-3200	6V53 4 VALVE HEAD, STARTER ON LEFT, STARBOARD
5062-7000	6V53 N ENGINE, STARTER ON LEFT, PORT
5062-7050	6V53 4-VALVE MARINE PROPULSION PORT UNIT
5062-7200	6V53 4 VALVE HEAD, STARTER ON LEFT, PORT
5062-7300	6V53 4 VALVE HEAD, MARINE PROP TURBO UNIT
5062-7301	6V53 4 VALVE HEAD MARINE PROP. TURBO UNIT
5062-7303	6V53 4 VALVE HEAD, MARINE PROPULSION PORT TURBO UNIT
5063-5000	6V53 4 VALVE HEAD, STARTER ON RIGHT
5063-5001	6V53 4 VALVE HEAD, S & S DIESEL DRIVE MARINE
5063-5002	6V53 4 VALVE HEAD, INDUSTRIAL FAN TO FLYWHEEL
5063-5030	6V53 N ENGINE, STARTER ON RIGHT
5063-5050	6V53 4 VALVE HEAD, BRASIL
5063-5080	6V53 FAN TO FLYWHEEL INDUSTRIAL UNIT
5063-5096	6V53 FAN TO FLYWHEEL INDUSTRIAL, FOR MILITARY APPLICATION
5063-5097	6V53 4 VALVE HEAD, FOR NAPCO SHOET VEHICLE
5063-5098	6V53 4 VALVE HEAD, STARTER ON RIGHT (REPOWER UNIT FOR M3 AND M5 HALF TRACK)
5063-5099	6V53 4 VALVE HEAD, STARTER ON RIGHT
5063-5200	6V53 4 VALVE HEAD, STARTER ON RIGHT
5063-5296	6V53 4 VALVE HEAD, STARTER ON RIGHT
5063-5299	6V53 4 VALVE HEAD, STARTER ON RIGHT
5063-5300	6V53 4 VALVE HEAD, TURBOCHARGED, BRASIL
5063-5390	6V53 4 VALVE HEAD, TURBOCHARGED, FOR SWEDISH S-TANK
5063-5391	6V53 FAN TO FLYWHEEL TURBOCHARGED STANDARD AND STANDARD OPTION EQUIPMENT
5063-5392	6V53 4 VALVE HEAD, TURBOCHARGED, FOR FMC M730 CHAPARRAL RISE VEHICLE
5063-5393	6V53 4 VALVE HEAD, TURBOCHARGED US ARMY VEHICLE M113A3
5063-5394	6V53 4 VALVE HEAD, FOR PERSONNEL CARRIER
5063-5395	6V53 4 VALVE HEAD, TURBOCHARGED, FOR M-551 SHERIDAN TANK
5063-5396	6V53 4 VALVE HEAD, TURBOCHARGED, FOR ARMED INFANTRY FIGHTING VEHICLE
5063-5397	6V53 4 VALVE HEAD, STARTER ON RIGHT (REPOWER UNIT FOR M-24)
5063-5398	6V53 4 VALVE HEAD, STARTER ON RIGHT, TURBOCHARGED
5063-5399	6V53 4 VALVE HEAD, STARTER ON RIGHT
5063-7000	6V53 4 VALVE HEAD, STARTER ON LEFT
5063-7200	6V53 4 VALVE HEAD, STARTER ON LEFT
5064-5200	6V53 4 VALVE HEAD, STARTER ON LEFT
5082-5000	8V53 N ENGINE, STARTER ON RIGHT, PORT OR STARBOARD
5083-5000	8V53 N ENGINE, STARTER ON RIGHT
5083-5399	8V53-4 VALVE HEAD, TURBOCHARGED, U.S. MARINE CORP.

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	28
AIR BOX DRAINS	1.1000A	32
CYLINDER HEAD	1.2000	21
ENGINE LIFTER BRACKET	1.2000A	41
CRANKSHAFT	1.3000	19
CRANKSHAFT FRONT COVER	1.3000A	48
FLYWHEEL HOUSING	1.5000A	178
CONNECTING ROD AND PISTON	1.6000	25
CAMSHAFT AND GEAR TRAIN	1.7000	30
VALVE OPERATING MECHANISM	1.8000	28
ROCKER COVER	1.8000A	37
FUEL INJECTOR	2.1000A	40
FUEL PUMP	2.2000	33
FUEL MANIFOLD CONNECTIONS	2.4000	48
MECHANICAL GOVERNOR	2.7000A	594
INJECTOR CONTROLS	2.9000	88
BLOWER THRU 2D-20910	3.4000	68
BLOWER EFF. WITH 2D-20911	3.4000	120
OIL PUMP	4.1000A	53
OIL DISTRIBUTION SYSTEM	4.1000B	170
OIL PRESSURE REGULATOR	4.1000C	9
OIL COOLER	4.4000A	231
OIL FILLER	4.5000A	18
DIPSTICK	4.6000A	285
OIL PAN	4.7000A	109
VENTILATING SYSTEM	4.8000A	195
FRESH WATER PUMP	5.1000	38
WATER OUTLET	5.2000A	67
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE	5.2000C	130
WATER CONNECTIONS	5.3000B	122

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	28
AIR BOX DRAINS	1.1000A	32
CYLINDER HEAD	1.2000	21
ENGINE LIFTER BRACKET	1.2000A	42
CRANKSHAFT	1.3000	19
CRANKSHAFT FRONT COVER	1.3000A	48
CRANKSHAFT PULLEY STD. EQUIP. PRIOR TO 2D-13049	1.3000C	111
CRANKSHAFT PULLEY BELT	1.3000D	91
FLYWHEEL	1.4000A	296
FLYWHEEL HOUSING	1.5000A	185
CONNECTING ROD AND PISTON	1.6000	25
CAMSHAFT AND GEAR TRAIN	1.7000	30
VALVE OPERATING MECHANISM	1.8000	28
ROCKER COVER	1.8000A	37
FUEL INJECTOR	2.1000A	40
FUEL PUMP THRU 2D-31198	2.2000	34
FUEL PUMP EFF. WITH 2D-31199	2.2000	136
FUEL FILTER	2.3000A	157
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES	2.5000A	415
MECHANICAL GOVERNOR	2.7000A	595
INJECTOR CONTROLS	2.9000	94
THROTTLE CONTROLS	2.9000A	504
BLOWER	3.4000	132
OIL PUMP	4.1000A	53
OIL DISTRIBUTION SYSTEM	4.1000B	170
OIL PRESSURE REGULATOR	4.1000C	9
OIL FILTER	4.2000A	226
OIL COOLER	4.4000A	275
OIL FILLER	4.5000A	18
DIPSTICK STD. EQUIP. PRIOR TO 2D-11552	4.6000A	285
OIL PAN	4.7000A	604
VENTILATING SYSTEM	4.8000A	196
FRESH WATER PUMP THRU 2D-27074	5.1000	39
FRESH WATER PUMP EFF. WITH 2D-27075	5.1000	146
WATER OUTLET	5.2000A	67
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE THRU 2D-27074	5.2000C	130
WATER BY-PASS TUBE EFF. WITH 2D-27075	5.2000C	318
WATER CONNECTIONS	5.3000B	117
FAN	5.4000A	926
EXHAUST MANIFOLD	6.1000A	416
EXHAUST MUFFLER CONNECTIONS	6.2000A	173
BATTERY CHARGING GENERATOR	7.1000A	1193
STARTING MOTOR	7.3000A	188
INSTRUMENTS	7.4000A	372

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	28
AIR BOX DRAINS	1.1000A	32
CYLINDER HEAD	1.2000	21
ENGINE LIFTER BRACKET	1.2000A	42
CRANKSHAFT	1.3000	19
CRANKSHAFT FRONT COVER	1.3000A	54
CRANKSHAFT PULLEY	1.3000C	117
CRANKSHAFT PULLEY BELT	1.3000D	101
FLYWHEEL	1.4000A	305
FLYWHEEL HOUSING	1.5000A	193
CONNECTING ROD AND PISTON	1.6000	25
CAMSHAFT AND GEAR TRAIN	1.7000	37
BALANCE WEIGHT COVER	1.7000A	496
VALVE OPERATING MECHANISM	1.8000	28
ROCKER COVER	1.8000A	36
FUEL INJECTOR	2.1000A	41
FUEL PUMP	2.2000	34
FUEL FILTER	2.3000A	185
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES	2.5000A	405
MECHANICAL GOVERNOR	2.7000A	496
INJECTOR CONTROLS	2.9000	94
BLOWER	3.4000	75
OIL PUMP	4.1000A	53
OIL DISTRIBUTION SYSTEM	4.1000B	174
OIL PRESSURE REGULATOR	4.1000C	9
OIL FILTER	4.2000A	112
OIL FILTER LINES	4.3000A	89
OIL COOLER	4.4000A	260
OIL PAN	4.7000A	128
VENTILATING SYSTEM	4.8000A	195
FRESH WATER PUMP	5.1000	53
WATER OUTLET ELBOW	5.2000A	70
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE	5.2000C	130
WATER CONNECTIONS	5.3000B	118
FAN	5.4000A	305
EXHAUST MANIFOLD	6.1000A	137
EXHAUST MUFFLER CONNECTIONS	6.2000A	173
BATTERY CHARGING GENERATOR	7.1000A	668
STARTING MOTOR	7.3000A	188
INSTRUMENTS	7.4000A	427

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK .....	1.1000	28
AIR BOX DRAINS .....	1.1000A	44
CYLINDER HEAD .....	1.2000	21
ENGINE LIFTER BRACKET .....	1.2000A	42
CRANKSHAFT .....	1.3000	19
CRANKSHAFT FRONT COVER .....	1.3000A	49
CRANKSHAFT PULLEY .....	1.3000C	132
CRANKSHAFT PULLEY BELT .....	1.3000D	95
FLYWHEEL .....	1.4000A	300
FLYWHEEL HOUSING .....	1.5000A	175
CONNECTING ROD AND PISTON .....	1.6000	29
CAMSHAFT AND GEAR TRAIN .....	1.7000	30
VALVE OPERATING MECHANISM .....	1.8000	28
ROCKER COVER .....	1.8000A	36
FUEL INJECTOR .....	2.1000A	41
FUEL PUMP .....	2.2000	34
FUEL MANIFOLD CONNECTIONS .....	2.4000	48
MECHANICAL GOVERNOR .....	2.7000A	554
INJECTOR CONTROLS .....	2.9000	94
BLOWER .....	3.4000	71
OIL PUMP .....	4.1000A	53
OIL DISTRIBUTION SYSTEM .....	4.1000B	173
OIL PRESSURE REGULATOR .....	4.1000C	8
VENTILATING SYSTEM .....	4.8000A	195
FRESH WATER PUMP .....	5.1000	60
WATER OUTLET THRU 2D-12822 .....	5.2000A	70
WATER OUTLET EFF. WITH 2D-12823 .....	5.2000A	80
THERMOSTAT .....	5.2000B	72
WATER BY-PASS TUBE .....	5.2000C	171
WATER CONNECTIONS .....	5.3000B	118
FAN .....	5.4000A	288
EXHAUST MANIFOLD .....	6.1000A	131
EXHAUST MUFFLER CONNECTIONS .....	6.2000A	173
STARTING MOTOR .....	7.3000A	170

## DETROIT DIESEL 53 MPC ENGINES

5023-6100

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	28
AIR BOX DRAINS	1.1000A	44
CYLINDER HEAD	1.2000	21
ENGINE LIFTER BRACKET	1.2000A	30
CRANKSHAFT	1.3000	19
CRANKSHAFT FRONT COVER	1.3000A	48
CRANKSHAFT PULLEY	1.3000C	131
CRANKSHAFT PULLEY BELT	1.3000D	176
FLYWHEEL	1.4000A	476
FLYWHEEL HOUSING	1.5000A	345
CONNECTING ROD AND PISTON	1.6000	25
CAMSHAFT AND GEAR TRAIN	1.7000	30
VALVE OPERATING MECHANISM	1.8000	28
ROCKER COVER	1.8000A	66
FUEL INJECTOR	2.1000A	47
FUEL PUMP	2.2000	34
FUEL FILTER	2.3000A	208
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES	2.5000A	611
MECHANICAL GOVERNOR	2.7000A	589
INJECTOR CONTROLS	2.9000	129
AIR INLET HOUSING	3.3000A	138
BLOWER	3.4000	111
OIL PUMP	4.1000A	53
OIL DISTRIBUTION SYSTEM	4.1000B	170
OIL PRESSURE REGULATOR	4.1000C	9
OIL FILTER	4.2000A	134
OIL FILTER LINES	4.3000A	131
OIL COOLER	4.4000A	231
OIL FILLER	4.5000A	18
DIPSTICK	4.6000A	285
OIL PAN	4.7000A	534
VENTILATING SYSTEM	4.8000A	357
FRESH WATER PUMP	5.1000	38
WATER OUTLET ELBOW	5.2000A	85
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE	5.2000C	130
WATER CONNECTIONS	5.3000B	117
FAN	5.4000A	499
EXHAUST MANIFOLD	6.1000A	131
BATTERY CHARGING GENERATOR	7.1000A	816
STARTING MOTOR	7.3000A	213

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	28
AIR BOX DRAINS	1.1000A	44
CYLINDER HEAD	1.2000	21
ENGINE LIFTER BRACKET	1.2000A	41
CRANKSHAFT	1.3000	19
CRANKSHAFT FRONT COVER	1.3000A	48
CRANKSHAFT PULLEY STD. EQUIP. THRU 2D-13048	1.3000C	111
CRANKSHAFT PULLEY BELT	1.3000D	91
FLYWHEEL	1.4000A	296
FLYWHEEL HOUSING	1.5000A	178
CONNECTING ROD AND PISTON	1.6000	25
CAMSHAFT AND GEAR TRAIN	1.7000	30
VALVE OPERATING MECHANISM	1.8000	28
ROCKER COVER	1.8000A	37
FUEL INJECTOR STD. EQUIP. THRU 2D-14181	2.1000A	40
FUEL PUMP	2.2000	33
FUEL FILTER	2.3000A	157
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES	2.5000A	388
MECHANICAL GOVERNOR	2.7000A	596
INJECTOR CONTROLS	2.9000	88
THROTTLE CONTROLS	2.9000A	504
BLOWER THRU 2D-20910	3.4000	68
BLOWER EFF. WITH 2D-20911	3.4000	120
OIL PUMP	4.1000A	53
OIL DISTRIBUTION SYSTEM	4.1000B	351
OIL PRESSURE REGULATOR	4.1000C	9
OIL FILTER	4.2000A	226
OIL COOLER	4.4000A	275
OIL FILLER	4.5000A	18
DIPSTICK STD. EQUIP. THRU 2D-11351	4.6000A	107
DIPSTICK	4.6000A	285
OIL PAN	4.7000A	534
VENTILATING SYSTEM	4.8000A	195
FRESH WATER PUMP	5.1000	38
WATER OUTLET ELBOW	5.2000A	67
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE	5.2000C	130
WATER CONNECTIONS	5.3000B	117
FAN	5.4000A	926
EXHAUST MANIFOLD	6.1000A	416
EXHAUST MUFFLER CONNECTIONS	6.2000A	173
BATTERY CHARGING GENERATOR	7.1000A	1186
STARTING MOTOR	7.3000A	174
INSTRUMENTS	7.4000A	372

## DETROIT DIESEL 53 MPC ENGINES

5023-7101

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	28
AIR BOX DRAINS	1.1000A	32
CYLINDER HEAD	1.2000	21
ENGINE LIFTER BRACKET	1.2000A	41
CRANKSHAFT	1.3000	19
CRANKSHAFT FRONT COVER	1.3000A	48
CRANKSHAFT PULLEY STD. EQUIP. PRIOR TO 2D-10349	1.3000C	111
CRANKSHAFT PULLEY BELT	1.3000D	91
FLYWHEEL	1.4000A	296
FLYWHEEL HOUSING	1.5000A	178
CONNECTING ROD AND PISTON	1.6000	25
CAMSHAFT AND GEAR TRAIN	1.7000	30
VALVE OPERATING MECHANISM	1.8000	28
ROCKER COVER	1.8000A	37
FUEL INJECTOR STD. EQUIP. PRIOR TO 2D-13166	2.1000A	40
FUEL PUMP THRU 2D-31198	2.2000	33
FUEL PUMP EFF. WITH 2D-31199	2.2000	127
FUEL FILTER STD. EQUIP. PRIOR TO 2D-12594	2.3000A	157
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES STD. EQUIP. PRIOR TO 2D-12594	2.5000A	388
MECHANICAL GOVERNOR	2.7000A	596
INJECTOR CONTROLS	2.9000	88
THROTTLE CONTROLS	2.9000A	504
BLOWER	3.4000	120
OIL PUMP	4.1000A	53
OIL DISTRIBUTION SYSTEM	4.1000B	170
OIL PRESSURE REGULATOR	4.1000C	9
OIL FILTER	4.2000A	226
OIL COOLER	4.4000A	231
OIL FILLER	4.5000A	18
DIPSTICK STD. EQUIP. PRIOR TO 2D-11552	4.6000A	107
DIPSTICK	4.6000A	285
OIL PAN	4.7000A	604
VENTILATING SYSTEM	4.8000A	195
FRESH WATER PUMP	5.1000	38
WATER OUTLET MANIFOLD STD. EQUIP. PRIOR TO 2D-3404	5.2000A	67
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE	5.2000C	130
WATER CONNECTIONS STD. EQUIP. PRIOR TO 2D-2357	5.3000B	117
FAN	5.4000A	926
EXHAUST MANIFOLD	6.1000A	416
EXHAUST MUFFLER CONNECTIONS	6.2000A	173
BATTERY CHARGING GENERATOR	7.1000A	1186
STARTING MOTOR	7.3000A	174
INSTRUMENTS	7.4000A	372

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	33
AIR BOX DRAINS THRU 2D-5160	1.1000A	32
AIR BOX DRAINS EFF. WITH 2D-5161	1.1000A	44
CYLINDER HEAD	1.2000	30
CRANKSHAFT	1.3000	19
CRANKSHAFT FRONT COVER	1.3000A	49
CRANKSHAFT PULLEY THRU 2D-868	1.3000C	112
CRANKSHAFT PULLEY EFF. WITH 2D-869 AND THRU 2D-3782	1.3000C	124
CRANKSHAFT PULLEY EFF. WITH 2D-3783	1.3000C	132
CRANKSHAFT PULLEY BELT THRU 2D-6717	1.3000D	95
CRANKSHAFT PULLEY BELT EFF. WITH 2D-6718	1.3000D	102
FLYWHEEL HOUSING	1.5000A	181
CONNECTING ROD AND PISTON	1.6000	29
CAMSHAFT AND GEAR TRAIN THRU 2D-6717	1.7000	37
CAMSHAFT AND GEAR TRAIN EFF. WITH 2D-6718	1.7000	49
VALVE OPERATING MECHANISM	1.8000	28
ROCKER COVER	1.8000A	42
FUEL INJECTOR	2.1000A	41
FUEL PUMP	2.2000	36
FUEL FILTER	2.3000A	161
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES	2.5000A	383
MECHANICAL GOVERNOR	2.7000A	452
INJECTOR CONTROLS	2.9000	103
BLOWER THRU 2D-20909	3.4000	64
BLOWER EFF. WITH 2D-20910	3.4000	110
OIL PUMP	4.1000A	53
OIL DISTRIBUTION SYSTEM	4.1000B	173
OIL PRESSURE REGULATOR	4.1000C	8
OIL FILTER	4.2000A	111
OIL FILLER	4.5000A	45
DIPSTICK THRU 2D-3325	4.6000A	114
DIPSTICK EFF. WITH 2D-3326	4.6000A	141
OIL PAN	4.7000A	110
VENTILATING SYSTEM	4.8000A	201
FRESH WATER PUMP THRU 2D-6717	5.1000	40
FRESH WATER PUMP EFF. WITH 2D-6718	5.1000	54
WATER OUTLET ELBOW	5.2000A	69
THERMOSTAT	5.2000B	73
WATER BY-PASS TUBE	5.2000C	133
WATER CONNECTIONS	5.3000B	118
FAN THRU 2D-6717	5.4000A	288
FAN EFF. WITH 2D-6718	5.4000A	308
EXHAUST MANIFOLD	6.1000A	121
STARTING MOTOR THRU 2D-303	7.3000A	178
STARTING MOTOR EFF. WITH 2D-304 AND THRU 2D-14551	7.3000A	190
STARTING MOTOR EFF. WITH 2D-14552. STD. EQUIP. PRIOR TO 2D-21332	7.3000A	249

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	28
AIR BOX DRAINS	1.1000A	28
CYLINDER HEAD	1.2000	21
ENGINE LIFTER BRACKET	1.2000A	30
CRANKSHAFT	1.3000	19
CRANKSHAFT FRONT COVER	1.3000A	48
CRANKSHAFT PULLEY	1.3000C	111
CRANKSHAFT PULLEY BELT	1.3000D	91
FLYWHEEL	1.4000A	296
FLYWHEEL HOUSING	1.5000A	178
CONNECTING ROD AND PISTON	1.6000	25
CAMSHAFT AND GEAR TRAIN	1.7000	30
VALVE OPERATING MECHANISM	1.8000	28
ROCKER COVER	1.8000A	37
FUEL INJECTOR	2.1000A	40
FUEL PUMP	2.2000	33
FUEL FILTER	2.3000A	157
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES	2.5000A	960
MECHANICAL GOVERNOR	2.7000A	594
INJECTOR CONTROLS	2.9000	109
THROTTLE CONTROLS	2.9000A	504
AIR INLET HOUSING	3.3000A	138
BLOWER THRU 2D-20909	3.4000	59
BLOWER EFF. WITH 2D-20910	3.4000	111
OIL PUMP	4.1000A	53
OIL DISTRIBUTION SYSTEM	4.1000B	170
OIL PRESSURE REGULATOR	4.1000C	9
OIL FILTER	4.2000A	226
OIL COOLER	4.4000A	231
OIL FILLER	4.5000A	18
DIPSTICK	4.6000A	285
OIL PAN	4.7000A	109
VENTILATING SYSTEM	4.8000A	195
FRESH WATER PUMP	5.1000	38
WATER OUTLET ELBOW	5.2000A	67
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE	5.2000C	130
WATER CONNECTIONS	5.3000B	117
FAN	5.4000A	275
EXHAUST MANIFOLD	6.1000A	131
EXHAUST MUFFLER CONNECTIONS	6.2000A	173
STARTING MOTOR	7.3000A	174
INSTRUMENTS	7.4000A	372

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	28
AIR BOX DRAINS	1.1000A	32
CYLINDER HEAD	1.2000	21
ENGINE LIFTER BRACKET	1.2000A	42
CRANKSHAFT	1.3000	19
CRANKSHAFT FRONT COVER	1.3000A	48
CRANKSHAFT PULLEY	1.3000C	111
CRANKSHAFT PULLEY BELT	1.3000D	91
FLYWHEEL (10" CLUTCH)	1.4000A	327
FLYWHEEL (DELCO POWER GENERATOR)	1.4000A	300
FLYWHEEL (TWIN DISC C111 CLUTCH OR ROCKFORD PTO 31120)	1.4000A	325
FLYWHEEL (LIPE ROLLWAY 13 ML CLUTCH)	1.4000A	326
FLYWHEEL (ROCKFORD 14" TT CLUTCH)	1.4000A	328
FLYWHEEL (10" CLUTCH)	1.4000A	305
FLYWHEEL (ROCKFORD 11" TT CLUTCH)	1.4000A	324
FLYWHEEL HOUSING	1.5000A	205
FLYWHEEL HOUSING	1.5000A	207
FLYWHEEL HOUSING	1.5000A	330
CONNECTING ROD AND PISTON	1.6000	25
CAMSHAFT AND GEAR TRAIN	1.7000	30
ACCESSORY DRIVE (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	1.7000B	60
VALVE OPERATING MECHANISM	1.8000	28
ROCKER COVER (WITH OIL FILLER)	1.8000A	37
ROCKER COVER	1.8000A	36
FUEL INJECTOR	2.1000A	40
FUEL INJECTOR	2.1000A	47
FUEL PUMP	2.2000	34
FUEL FILTER	2.3000A	157
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES	2.5000A	415
MECHANICAL GOVERNOR (LIMITING SPEED)	2.7000A	589
MECHANICAL GOVERNOR (VARIABLE SPEED, OPEN LINKAGE WITH BOOSTER SPRING)	2.7000A	595
MECHANICAL GOVERNOR (VARIABLE SPEED, CLOSED LINKAGE)	2.7000A	600
HYDRAULIC GOVERNOR	2.8000A	555
INJECTOR CONTROLS	2.9000	94
THROTTLE CONTROLS (LIMITING SPEED)	2.9000A	496
THROTTLE CONTROLS (VARIABLE SPEED, OPEN LINKAGE)	2.9000A	511
THROTTLE CONTROLS (VARIABLE SPEED, CLOSED LINKAGE)	2.9000A	506
THROTTLE CONTROLS (HYDRAULIC GOVERNOR, FRICTION CONTROLS)	2.9000A	498
THROTTLE CONTROLS (HYDRAULIC GOVERNOR, VERNIER CONTROLS)	2.9000A	569
AIR CLEANER (LIGHT DUTY, DIRECT MOUNTED)	3.1000A	225
AIR CLEANER (HEAVY DUTY, REAR MOUNTED)	3.1000A	217
AIR CLEANER (HEAVY DUTY, WITH COMPLETE HOOD, REAR MOUNTED)	3.1000A	226
BLOWER (WITH MANUAL SHUTDOWN)	3.4000	71
BLOWER (WITH MECHANICAL SHUTDOWN)	3.4000	69
OIL PUMP	4.1000A	53
OIL DISTRIBUTION SYSTEM	4.1000B	170
OIL PRESSURE REGULATOR	4.1000C	9
OIL FILTER THRU 2D-17153	4.2000A	109
OIL FILTER EFFECTIVE WITH 2D-17154	4.2000A	226
OIL COOLER	4.4000A	275
OIL FILLER (ON ROCKER COVER)	4.5000A	18
OIL FILLER (ON BREATHER)	4.5000A	54
DIPSTICK PRIOR TO 2D-13991	4.6000A	184
DIPSTICK EFFECTIVE WITH 2D-13991	4.6000A	285
OIL PAN	4.7000A	109
VENTILATING SYSTEM	4.8000A	233
VENTILATING SYSTEM (WITH OIL FILLER)	4.8000A	235
FRESH WATER PUMP	5.1000	39
WATER OUTLET ELBOW	5.2000A	80
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE	5.2000C	130
RADIATOR	5.3000A	78
WATER CONNECTIONS	5.3000B	166
FAN (SUCTION 17", 6 BLADE, 1.25:1 RATIO)	5.4000A	292
FAN (BLOWER 17", 6 BLADE, 1.25:1 RATIO)	5.4000A	279
EXHAUST MANIFOLD (WITH MANUAL OR NO SHUTDOWN)	6.1000A	131

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
EXHAUST MANIFOLD (WITH MECHANICAL SHUTDOWN)	6.1000A	137
EXHAUST MUFFLER CONNECTIONS	6.2000A	173
EXHAUST MUFFLER (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	6.2000A	174
BATTERY CHARGING GENERATOR	7.1000A	695
STARTING MOTOR	7.3000A	188
INSTRUMENT PANEL (TACHOMETER ONLY) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000A	390
INSTRUMENT PANEL (MOUNTED OPPOSITE BLOWER SIDE)	7.4000A	411
INSTRUMENT PANEL (MOUNTED ON BLOWER SIDE)	7.4000A	412
TACHOMETER DRIVE (WITH OIL SEAL, DRIVEN FROM BALANCER SHAFT) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000B	199
TACHOMETER DRIVE (DRIVEN FROM BALANCER SHAFT) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000B	201
TACHOMETER DRIVE (DRIVEN FROM GOVERNOR SHAFT) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000B	181
TACHOMETER DRIVE (DRIVEN FROM BALANCER SHAFT) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000B	189
MECHANICAL AUTOMATIC SHUTDOWN (WITHOUT OVERSPEED GOVERNOR) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000C	369
MECHANICAL AUTOMATIC SHUTDOWN (WITH OVERSPEED GOVERNOR) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000C	370
MECHANICAL AUTOMATIC SHUTDOWN (WITH HYDRAULIC ENGINE GOVERNOR AND OVERSPEED GOVERNOR) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000C	388
WIRING HARNESS (INSTRUMENTS ON BLOWER SIDE)	7.7000A	289
WIRING HARNESS (INSTRUMENTS ON SIDE OPPOSITE BLOWER)	7.7000A	290
POWER TAKE-OFF	8.1000A	180
ENGINE HOOD (COMPLETE)	10.1000A	108
ENGINE MOUNTS (FLYWHEEL HOUSING)	11.1000A	357
ENGINE MOUNTS (FLYWHEEL HOUSING)	11.1000A	358
ENGINE MOUNTS (FLYWHEEL HOUSING)	11.1000A	359
ENGINE BASE (WITH FLYWHEEL HOUSING) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	11.1000A	427
ENGINE BASE (WITH FLYWHEEL HOUSING) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	11.1000A	433
HYDRAULIC PUMP (MOUNTED ON CAMSHAFT, 14 GPM AT 2000 RPM) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	12.5000A	30
HYDRAULIC PUMP (MOUNTED ON BALANCE SHAFT, 14 GPM AT 2000 RPM) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	12.5000A	29
COLD WEATHER STARTING AID (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	12.6000C	3

## DETROIT DIESEL 53 MPC ENGINES

5024-7101

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	28
AIR BOX DRAINS	1.1000A	32
CYLINDER HEAD	1.2000	21
ENGINE LIFTER BRACKET	1.2000A	41
CRANKSHAFT	1.3000	19
CRANKSHAFT FRONT COVER	1.3000A	48
CRANKSHAFT PULLEY	1.3000C	111
CRANKSHAFT PULLEY BELT	1.3000D	91
FLYWHEEL	1.4000A	305
FLYWHEEL HOUSING	1.5000A	333
CONNECTING ROD AND PISTON	1.6000	25
CAMSHAFT AND GEAR TRAIN	1.7000	30
VALVE OPERATING MECHANISM	1.8000	28
ROCKER COVER	1.8000A	37
FUEL INJECTOR	2.1000A	40
FUEL PUMP THRU 2D-31198	2.2000	33
FUEL PUMP EFF. WITH 2D-31199	2.2000	127
FUEL FILTER	2.3000A	157
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES	2.5000A	506
MECHANICAL GOVERNOR	2.7000A	596
INJECTOR CONTROLS	2.9000	88
THROTTLE CONTROLS	2.9000A	512
AIR CLEANER	3.1000A	210
BLOWER	3.4000	120
OIL PUMP	4.1000A	53
OIL DISTRIBUTION SYSTEM	4.1000B	170
OIL PRESSURE REGULATOR	4.1000C	9
OIL FILTER THRU 2D-17152	4.2000A	109
OIL FILTER EFF. WITH 2D-17154	4.2000A	226
OIL COOLER	4.4000A	231
OIL FILLER	4.5000A	18
DIPSTICK THRU 2D-11551	4.6000A	107
DIPSTICK EFF. WITH 2D-11552	4.6000A	184
DIPSTICK THRU 2D-13990 AND EFF. WITH 2D-13991	4.6000A	285
OIL PAN THRU 2D-24510	4.7000A	109
OIL PAN EFF. WITH 2D-24511 AND THRU 2D-31765	4.7000A	534
OIL PAN EFF. WITH 2D-31766	4.7000A	604
VENTILATING SYSTEM	4.8000A	234
FRESH WATER PUMP STD. EQUIP. PRIOR TO 2D-27625	5.1000	38
WATER OUTLET MANIFOLD	5.2000A	80
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE STD. EQUIP. PRIOR TO 2D-27625	5.2000C	130
RADIATOR STD. EQUIP. PRIOR TO 2D-13074	5.3000A	57
RADIATOR	5.3000A	116
WATER CONNECTIONS	5.3000B	144
FAN	5.4000A	929
EXHAUST MANIFOLD	6.1000A	416
EXHAUST MUFFLER CONNECTIONS	6.2000A	173
BATTERY CHARGING GENERATOR	7.1000A	1202
STARTING MOTOR	7.3000A	174
INSTRUMENTS	7.4000A	411
WIRING HARNESS	7.7000A	289
POWER TAKE-OFF	8.1000A	180
ENGINE MOUNTS	11.1000A	359

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	28
AIR BOX DRAINS	1.1000A	44
CYLINDER HEAD	1.2000	21
ENGINE LIFTER BRACKET	1.2000A	43
CRANKSHAFT	1.3000	19
CRANKSHAFT FRONT COVER	1.3000A	48
CRANKSHAFT PULLEY STD. EQUIP. PRIOR TO 2D-11552	1.3000C	111
FLYWHEEL	1.4000A	305
FLYWHEEL HOUSING	1.5000A	330
CONNECTING ROD AND PISTON	1.6000	25
CAMSHAFT AND GEAR TRAIN	1.7000	30
VALVE OPERATING MECHANISM	1.8000	28
ROCKER COVER	1.8000A	37
FUEL INJECTOR	2.1000A	40
FUEL PUMP THRU 2D-31198	2.2000	33
FUEL PUMP EFF. WITH 2D-31199	2.2000	127
FUEL FILTER	2.3000A	157
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES	2.5000A	496
MECHANICAL GOVERNOR VARIABLE SPEED	2.7000A	596
INJECTOR CONTROLS	2.9000	109
THROTTLE CONTROLS	2.9000A	504
AIR CLEANER	3.1000A	241
AIR INLET HOUSING	3.3000A	190
BLOWER THRU 2D-20910	3.4000	59
BLOWER EFF. WITH 2D-20911	3.4000	111
OIL PUMP	4.1000A	53
OIL DISTRIBUTION SYSTEM	4.1000B	170
OIL PRESSURE REGULATOR	4.1000C	9
OIL FILTER	4.2000A	226
OIL COOLER	4.4000A	275
OIL FILLER	4.5000A	18
DIPSTICK THRU 2D-11552	4.6000A	107
DIPSTICK EFF. WITH 2D-11553 AND THRU 2D-13991	4.6000A	184
DIPSTICK EFF. WITH 2D-13992	4.6000A	285
OIL PAN THRU 2D-24510	4.7000A	109
OIL PAN EFF. WITH 2D-24511 AND THRU 2D-31765	4.7000A	534
OIL PAN EFF. WITH 2D-31766	4.7000A	604
VENTILATING SYSTEM	4.8000A	195
FRESH WATER PUMP	5.1000	146
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE	5.2000C	321
WATER CONNECTIONS	5.3000B	207
HEAT EXCHANGER	5.5000A	304
EXHAUST MANIFOLD THRU 2D-27512	6.1000A	136
EXHAUST MANIFOLD EFF. WITH 2D-27513	6.1000A	401
EXHAUST MUFFLER CONNECTIONS	6.2000A	176
BATTERY CHARGING GENERATOR 12V., 25 AMP., POS. GRD.	7.1000A	1197
STARTING MOTOR	7.3000A	188
INSTRUMENTS	7.4000A	508
WIRING HARNESS	7.7000A	304
POWER TAKE-OFF	8.1000A	180
ENGINE MOUNTS	11.1000A	353

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	28
AIR BOX DRAINS	1.1000A	32
CYLINDER HEAD	1.2000	21
ENGINE LIFTER BRACKET	1.2000A	41
CRANKSHAFT	1.3000	19
CRANKSHAFT FRONT COVER	1.3000A	48
CRANKSHAFT PULLEY	1.3000C	111
CRANKSHAFT PULLEY BELT	1.3000D	91
FLYWHEEL	1.4000A	300
FLYWHEEL HOUSING	1.5000A	345
CONNECTING ROD AND PISTON	1.6000	25
CAMSHAFT AND GEAR TRAIN	1.7000	30
VALVE OPERATING MECHANISM	1.8000	28
ROCKER COVER	1.8000A	37
FUEL INJECTOR	2.1000A	47
FUEL PUMP THRU 2D-31198	2.2000	33
FUEL PUMP EFF. WITH 2D-31199	2.2000	127
FUEL FILTER	2.3000A	157
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES	2.5000A	388
HYDRAULIC GOVERNOR	2.8000A	998
INJECTOR CONTROLS	2.9000	88
THROTTLE CONTROLS	2.9000A	572
AIR CLEANER	3.1000A	210
BLOWER	3.4000	121
OIL PUMP	4.1000A	53
OIL DISTRIBUTION SYSTEM	4.1000B	170
OIL PRESSURE REGULATOR	4.1000C	9
OIL FILTER THRU 2D-17671	4.2000A	162
OIL FILTER EFF. WITH 2D-17672	4.2000A	258
OIL COOLER	4.4000A	231
OIL FILLER	4.5000A	18
DIPSTICK THRU 2D-13990	4.6000A	184
DIPSTICK EFF. WITH 2D-13991	4.6000A	285
OIL PAN THRU 2D-24510	4.7000A	109
OIL PAN EFF. WITH 2D-24511	4.7000A	534
VENTILATING SYSTEM STD. EQUIP. PRIOR TO 2D-13078	4.8000A	270
FRESH WATER PUMP	5.1000	38
WATER OUTLET MANIFOLD	5.2000A	80
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE STD. EQUIP. PRIOR TO 2D-13078	5.2000C	318
RADIATOR	5.3000A	116
WATER CONNECTIONS	5.3000B	144
FAN	5.4000A	927
EXHAUST MANIFOLD	6.1000A	416
EXHAUST MUFFLER CONNECTIONS	6.2000A	173
BATTERY CHARGING GENERATOR	7.1000A	1202
STARTING MOTOR	7.3000A	174
INSTRUMENTS	7.4000A	412
AUTOMATIC SHUTDOWN	7.4000C	487
POWER GENERATOR	7.5000A	197
WIRING HARNESS	7.7000A	290
ENGINE MOUNTS	11.1000A	358
ENGINE BASE	11.1000A	429

DETROIT DIESEL 53 MPC ENGINES  
STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	28
AIR BOX DRAINS	1.1000A	44
CYLINDER HEAD	1.2000	21
ENGINE LIFTER BRACKET	1.2000A	43
CRANKSHAFT	1.3000	19
CRANKSHAFT FRONT COVER	1.3000A	48
CRANKSHAFT PULLEY	1.3000C	111
FLYWHEEL	1.4000A	300
FLYWHEEL HOUSING	1.5000A	344
CONNECTING ROD AND PISTON	1.6000	25
CAMSHAFT AND GEAR TRAIN	1.7000	30
VALVE OPERATING MECHANISM	1.8000	28
ROCKER COVER	1.8000A	37
FUEL INJECTOR	2.1000A	47
FUEL PUMP THRU 2D-31198	2.2000	33
FUEL PUMP EFF. WITH 2D-31199	2.2000	127
FUEL FILTER	2.3000A	157
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES	2.5000A	496
HYDRAULIC GOVERNOR	2.8000A	1004
INJECTOR CONTROLS	2.9000	109
THROTTLE CONTROLS	2.9000A	572
AIR CLEANER	3.1000A	241
AIR INLET HOUSING	3.3000A	198
BLOWER THRU 2D-20910	3.4000	59
BLOWER EFF. WITH 2D-20911	3.4000	111
OIL PUMP	4.1000A	53
OIL DISTRIBUTION SYSTEM	4.1000B	170
OIL PRESSURE REGULATOR	4.1000C	9
OIL FILTER THRU 2D-17671	4.2000A	162
OIL FILTER EFF. WITH 2D-17672	4.2000A	258
OIL COOLER	4.4000A	275
OIL FILLER	4.5000A	18
DIPSTICK THRU 2D-13990	4.6000A	184
DIPSTICK EFF. WITH 2D-13991	4.6000A	285
OIL PAN THRU 2D-24510	4.7000A	109
OIL PAN EFF. WITH 2D-24511 AND THRU 2D-31765	4.7000A	534
OIL PAN EFF. WITH 2D-31766	4.7000A	604
VENTILATING SYSTEM	4.8000A	269
FRESH WATER PUMP THRU 2D-25497	5.1000	39
FRESH WATER PUMP EFF. WITH 2D-25498	5.1000	146
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE THRU 2D-25497	5.2000C	150
WATER BY-PASS TUBE EFF. WITH 2D-25498	5.2000C	321
WATER CONNECTIONS THRU 2D-14462	5.3000B	140
WATER CONNECTIONS EFF. WITH 2D-14463	5.3000B	207
HEAT EXCHANGER	5.5000A	304
EXHAUST MANIFOLD THRU 2D-27512	6.1000A	136
EXHAUST MANIFOLD EFF. WITH 2D-27513	6.1000A	401
EXHAUST MUFFLER CONNECTIONS	6.2000A	202
BATTERY CHARGING GENERATOR 12V., 25 AMP.	7.1000A	1197
STARTING MOTOR	7.3000A	188
INSTRUMENTS	7.4000A	508
MECHANICAL SHUTDOWN	7.4000C	410
POWER GENERATOR	7.5000A	197
WIRING HARNESS	7.7000A	304
ENGINE MOUNTS	11.1000A	352
ENGINE BASE	11.1000A	429

DETROIT DIESEL 53 MPC ENGINES

5030-7000

STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	29
AIR BOX DRAINS	1.1000A	32
CYLINDER HEAD	1.2000	23
ENGINE LIFTER BRACKET	1.2000A	30
CRANKSHAFT	1.3000	20
CRANKSHAFT FRONT COVER	1.3000A	48
CRANKSHAFT PULLEY	1.3000C	NONE
FLYWHEEL	1.4000A	NONE
FLYWHEEL HOUSING	1.5000A	199
CONNECTING ROD AND PISTON	1.6000	61
CAMSHAFT AND GEAR TRAIN	1.7000	31
VALVE OPERATING MECHANISM	1.8000	30
ROCKER COVER	1.8000A	61
FUEL INJECTOR	2.1000A	76
FUEL PUMP	2.2000	33
FUEL FILTER	2.3000A	NONE
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES	2.5000A	NONE
MECHANICAL GOVERNOR	2.7000A	590
INJECTOR CONTROLS	2.9000	89
THROTTLE CONTROLS	2.9000A	NONE
AIR INLET HOUSING	3.3000A	NONE
BLOWER	3.4000	60
OIL PUMP	4.1000A	49
OIL DISTRIBUTION SYSTEM	4.1000B	195
OIL PRESSURE REGULATOR	4.1000C	9
OIL COOLER	4.4000A	276
OIL FILLER	4.5000A	18
DIPSTICK	4.6000A	275
OIL PAN	4.7000A	225
VENTILATING SYSTEM	4.8000A	246
FRESH WATER PUMP	5.1000	70
WATER OUTLET ELBOW	5.2000A	67
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE	5.2000C	182
WATER CONNECTIONS	5.3000B	122

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	56
AIR BOX DRAINS	1.1000A	49
CYLINDER HEAD	1.2000	23
ENGINE LIFTER BRACKET	1.2000A	52
CRANKSHAFT	1.3000	20
CRANKSHAFT FRONT COVER	1.3000A	48
FLYWHEEL	1.4000A	378
FLYWHEEL HOUSING	1.5000A	178
CONNECTING ROD AND PISTON	1.6000	61
CAMSHAFT AND GEAR TRAIN	1.7000	32
VALVE OPERATING MECHANISM	1.8000	30
ROCKER COVER	1.8000A	38
FUEL INJECTOR	2.1000A	74
FUEL PUMP	2.2000	46
FUEL FILTER	2.3000A	223
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES	2.5000A	490
MECHANICAL GOVERNOR	2.7000A	597
INJECTOR CONTROLS	2.9000	99
AIR SILENCER	3.2000A	28
AIR INLET HOUSING	3.3000A	232
BLOWER THRU 3D-34007	3.4000	61
BLOWER EFF. WITH 3D-34008	3.4000	113
OIL PUMP	4.1000A	49
OIL DISTRIBUTION SYSTEM	4.1000B	220
OIL PRESSURE REGULATOR	4.1000C	9
OIL FILTER	4.2000A	226
OIL COOLER	4.4000A	315
OIL FILLER	4.5000A	45
DIPSTICK THRU 3D-29020	4.6000A	186
DIPSTICK EFF. WITH 3D-29021	4.6000A	549
OIL PAN	4.7000A	293
VENTILATING SYSTEM	4.8000A	355
FRESH WATER PUMP	5.1000	62
THERMOSTAT	5.2000B	123
WATER BY-PASS TUBE	5.2000C	206
WATER CONNECTIONS	5.3000B	210
EXHAUST MANIFOLD	6.1000A	125
EXHAUST MUFFLER CONNECTIONS	6.2000A	176
BATTERY CHARGING GENERATOR	7.1000A	810
STARTING MOTOR	7.3000A	180
HYDRAULIC MARINE GEAR	9.1000A	541
ENGINE MOUNTS	11.1000A	409

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	56
AIR BOX DRAINS	1.1000A	49
CYLINDER HEAD	1.2000	23
ENGINE LIFTER BRACKET	1.2000A	52
CRANKSHAFT	1.3000	20
CRANKSHAFT FRONT COVER	1.3000A	48
FLYWHEEL	1.4000A	378
FLYWHEEL HOUSING	1.5000A	178
CONNECTING ROD AND PISTON	1.6000	26
CAMSHAFT AND GEAR TRAIN	1.7000	32
VALVE OPERATING MECHANISM	1.8000	30
ROCKER COVER	1.8000A	38
FUEL INJECTOR	2.1000A	52
FUEL PUMP	2.2000	46
FUEL FILTER	2.3000A	223
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES	2.5000A	490
MECHANICAL GOVERNOR (VARIABLE SPEED, CLOSED LINKAGE)	2.7000A	602
MECHANICAL GOVERNOR (VARIABLE SPEED, OPEN LINKAGE)	2.7000A	597
MECHANICAL GOVERNOR (LIMITING SPEED)	2.7000A	589
INJECTOR CONTROL TUBE	2.9000	99
THROTTLE CONTROLS (VARIABLE SPEED, CLOSED LINKAGE GOVERNOR) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	2.9000A	483
AIR SILENCER (MOUNTED ON AIR INLET HOUSING)	3.2000A	28
AIR INLET HOUSING	3.3000A	232
BLOWER (THRU 3D-34007)	3.4000	61
BLOWER (EFFECTIVE WITH 3D-34008)	3.4000	113
OIL PUMP	4.1000A	49
OIL DISTRIBUTION	4.1000B	220
OIL PRESSURE REGULATOR	4.1000C	9
OIL FILTER	4.2000A	109
OIL COOLER	4.4000A	315
OIL FILLER	4.5000A	45
DIPSTICK	4.6000A	186
OIL PAN	4.7000A	293
VENTILATING SYSTEM	4.8000A	355
FRESH WATER PUMP	5.1000	62
THERMOSTAT (DIRECT COOLING)	5.2000B	123
THERMOSTAT (WITH HEAT EXCHANGER OR KEEL COOLING)	5.2000B	105
WATER BY-PASS TUBE (HEAT EXCHANGER COOLING OR KEEL COOLING)	5.2000C	186
WATER BY-PASS TUBE (DIRECT COOLING)	5.2000C	206
WATER CONNECTIONS (HEAT EXCHANGER COOLING)	5.3000B	204
WATER CONNECTIONS (DIRECT COOLING)	5.3000B	210
HEAT EXCHANGER (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	5.5000A	320
RAW WATER PUMP (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	5.6000A	38
WATER FILTER (HEAT EXCHANGER COOLING OR KEEL COOLING, 15 GAL. SYSTEM) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	5.7000A	21
EXHAUST MANIFOLD	6.1000A	125
EXHAUST MUFFLER CONNECTIONS	6.2000A	176
BATTERY CHARGING GENERATOR (12V., 25 AMP. NEGATIVE RETURN)	7.1000A	810
BATTERY CHARGING GENERATOR (12V., 60 AMP. NEGATIVE RETURN)	7.1000A	1174
STARTING MOTOR	7.3000A	180
INSTRUMENT PANEL (SINGLE) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000A	220
INSTRUMENT PANEL (DUAL) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000A	215
TACHOMETER DRIVE CABLE (5' LONG) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000B	11
TACHOMETER DRIVE CABLE (10' LONG) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000B	47
TACHOMETER DRIVE CABLE (15' LONG) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000B	46
TACHOMETER DRIVE (SINGLE OUTLET) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000B	310
TACHOMETER DRIVE (DOUBLE OUTLET) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000B	306
ALARM SYSTEM (WITHOUT WATER FILTER) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000C	354

STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
HYDRAULIC MARINE GEAR (DIRECT DRIVE) .....	9.1000A	541
HYDRAULIC MARINE GEAR (1.5:1 REDUCTION) .....	9.1000A	543
HYDRAULIC MARINE GEAR (2:1 REDUCTION) .....	9.1000A	545
HYDRAULIC MARINE GEAR (2.5:1 REDUCTION) .....	9.1000A	681
ENGINE MOUNTING .....	11.1000A	409
ENGINE MOUNTING (RESILIENT TYPE) .....	11.1000A	489
BILGE PUMP (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.) .....	12.2000A	22

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	29
AIR BOX DRAINS	1.1000A	63
CYLINDER HEAD	1.2000	23
ENGINE LIFTER BRACKET STD. EQUIP. PRIOR TO 3D-108417	1.2000A	53
CRANKSHAFT	1.3000	20
CRANKSHAFT FRONT COVER THRU 3D-116289	1.3000A	48
CRANKSHAFT FRONT COVER EFF. WITH 3D-116290	1.3000A	119
CRANKSHAFT PULLEY	1.3000C	111
FLYWHEEL	1.4000A	378
FLYWHEEL HOUSING	1.5000A	185
FLYWHEEL HOUSING ADAPTOR	1.5000B	27
CONNECTING ROD AND PISTON	1.6000	61
CAMSHAFT AND GEAR TRAIN THRU 3D-170682	1.7000	31
CAMSHAFT AND GEAR TRAIN EFF. WITH 3D-170683	1.7000	265
VALVE OPERATING MECHANISM THRU 3D-170682	1.8000	30
VALVE OPERATING MECHANISM EFF. WITH 3D-170683	1.8000	169
ROCKER COVER	1.8000A	70
FUEL INJECTOR N50	2.1000A	74
FUEL PUMP THRU 3D-85494	2.2000	33
FUEL PUMP EFF. WITH 3D-85495 AND THRU 3D-158374	2.2000	127
FUEL PUMP EFF. WITH 3D-158375	2.2000	180
FUEL FILTER	2.3000A	162
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES THRU 3D-33114	2.5000A	433
FUEL LINES EFF. WITH 3D-33115	2.5000A	1013
MECHANICAL GOVERNOR	2.7000A	596
INJECTOR CONTROLS THRU 3D-152410	2.9000	100
INJECTOR CONTROLS EFF. WITH 3D-152411	2.9000	281
AIR SILENCER	3.2000A	28
AIR INLET HOUSING	3.3000A	602
BLOWER THRU 3D-34007	3.4000	61
BLOWER EFF. WITH 3D-34008 AND THRU 3D-170682	3.4000	113
BLOWER EFF. WITH 3D-170683	3.4000	315
OIL PUMP	4.1000A	49
OIL DISTRIBUTION SYSTEM	4.1000B	208
OIL PRESSURE REGULATOR	4.1000C	9
OIL FILTER THRU 3D-16657	4.2000A	155
OIL FILTER EFF. WITH 3D-16658	4.2000A	220
OIL COOLER (ENGINE)	4.4000A	238
OIL COOLER (MARINE GEAR)	4.4000A	269
OIL FILLER	4.5000A	18
DIPSTICK	4.6000A	284
OIL PAN	4.7000A	558
VENTILATING SYSTEM	4.8000A	319
FRESH WATER PUMP	5.1000	148
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE	5.2000C	338
WATER CONNECTIONS	5.3000B	200
EXHAUST MANIFOLD THRU 3D-66868	6.1000A	125
EXHAUST MANIFOLD EFF. WITH 3D-66869	6.1000A	404
EXHAUST MUFFLER CONNECTIONS	6.2000A	176
BATTERY CHARGING GENERATOR	7.1000A	2057
STARTING MOTOR	7.3000A	180
HYDRAULIC MARINE GEAR	9.1000A	950
ENGINE MOUNTS	11.1000A	473

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	191
AIR BOX DRAINS	1.1000A	63
CYLINDER HEAD	1.2000	23
ENGINE LIFTER BRACKET	1.2000A	53
CRANKSHAFT	1.3000	73
CRANKSHAFT FRONT COVER	1.3000A	48
CRANKSHAFT PULLEY	1.3000C	111
FLYWHEEL	1.4000A	325
FLYWHEEL HOUSING	1.5000A	ENG
FLYWHEEL HOUSING ADAPTOR	1.5000B	27
CONNECTING ROD AND PISTON	1.6000	98
CAMSHAFT AND GEAR TRAIN	1.7000	220
VALVE OPERATING MECHANISM	1.8000	30
ROCKER COVER	1.8000A	70
FUEL INJECTOR	2.1000A	74
FUEL PUMP	2.2000	127
FUEL FILTER	2.3000A	693
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES	2.5000A	1526
MECHANICAL GOVERNOR	2.7000A	596
INJECTOR CONTROLS	2.9000	281
AIR SILENCER	3.2000A	28
AIR INLET HOUSING	3.3000A	602
BLOWER	3.4000	305
OIL PUMP	4.1000A	49
OIL DISTRIBUTION SYSTEM	4.1000B	208
OIL PRESSURE REGULATOR	4.1000C	009
OIL FILTER	4.2000A	364
OIL COOLER (ENGINE)	4.4000A	238
OIL COOLER (MARINE GEAR)	4.4000A	269
OIL FILLER	4.5000A	18
DIPSTICK	4.6000A	284
OIL PAN	4.7000A	558
VENTILATING SYSTEM	4.8000A	319
FRESH WATER PUMP	5.1000	148
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE	5.2000C	319
WATER CONNECTIONS	5.3000B	196
EXHAUST MANIFOLD	6.1000A	404
EXHAUST MUFFLER CONNECTIONS	6.2000A	176
BATTERY CHARGING GENERATOR	7.1000A	2022
STARTING MOTOR	7.3000A	308
HYDRAULIC MARINE GEAR	9.1000A	950
ENGINE MOUNTING	11.1000A	473

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
CYLINDER BLOCK	1.1000	29
AIR BOX DRAINS THRU SERIAL NO. 3D-9115	1.1000A	32
AIR BOX DRAINS EFFECTIVE WITH 3D-9116	1.1000A	63
CYLINDER HEAD	1.2000	22
ENGINE LIFTER BRACKET THRU SERIAL NO. 3D-2275	1.2000A	40
ENGINE LIFTER BRACKET EFFECTIVE WITH 3D-2276	1.2000A	53
CRANKSHAFT	1.3000	20
CRANKSHAFT FRONT COVER (OPTIONAL EQUIPMENT EFF. WITH 3D-5735, STANDARD EQUIPMENT NOT SHOWN ON OPTION PLATE PRIOR TO THIS SERIAL NUMBER.)	1.3000A	48
CRANKSHAFT PULLEY	1.3000C	111
FLYWHEEL	1.4000A	378
FLYWHEEL HOUSING	1.5000A	185
FLYWHEEL HOUSING ADAPTOR	1.5000B	27
CONNECTING ROD AND PISTON	1.6000	26
CAMSHAFT AND GEAR TRAIN	1.7000	31
VALVE OPERATING MECHANISM	1.8000	29
ROCKER COVER (BREATHER EXTENSION)	1.8000A	71
ROCKER COVER (WITH FILLER AND BREATHER EXTENSION)	1.8000A	70
FUEL INJECTOR THRU SERIAL NO. 3D-730	2.1000A	47
FUEL INJECTOR EFFECTIVE WITH 3D-731	2.1000A	51
FUEL PUMP	2.2000	33
FUEL FILTER	2.3000A	162
FUEL MANIFOLD CONNECTIONS	2.4000	48
FUEL LINES THRU SERIAL NO. 3D-667	2.5000A	390
FUEL LINES EFFECTIVE WITH 3D-668	2.5000A	433
MECHANICAL GOVERNOR (VARIABLE SPEED, CLOSED LINKAGE)	2.7000A	599
MECHANICAL GOVERNOR (VARIABLE SPEED, OPEN LINKAGE)	2.7000A	594
MECHANICAL GOVERNOR (LIMITING SPEED)	2.7000A	588
INJECTOR CONTROL TUBE	2.9000	100
THROTTLE CONTROLS (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	2.9000	476
AIR CLEANER (HEAVY DUTY)	3.1000A	199
AIR SILENCER (MOUNTED ON AIR INLET HOUSING)	3.2000A	28
AIR INLET HOUSING (FOR AIR CLEANER)	3.3000A	140
AIR INLET HOUSING (FOR AIR SILENCER)	3.3000A	232
BLOWER THRU 3D-34007	3.4000	61
BLOWER EFFECTIVE WITH 3D-34008	3.4000	113
OIL PUMP	4.1000A	49
OIL DISTRIBUTION SYSTEM (REAR SUMP 17 DEG.)	4.1000B	208
OIL DISTRIBUTION SYSTEM (FRONT SUMP 10 DEG.)	4.1000B	209
OIL PRESSURE REGULATOR	4.1000C	9
OIL FILTER (REMOTE MOUNTED) THRU SERIAL NO. 3D-667	4.2000A	115
OIL FILTER (MOUNTED ON OIL COOLER ADAPTOR) EFFECTIVE WITH 3D-668 AND THRU SERIAL NO. 3D-16657	4.2000A	155
OIL FILTER (MOUNTED ON OIL COOLER ADAPTOR) EFFECTIVE WITH 3D-16658	4.2000A	220
OIL FILTER LINES (WITH REMOTE MOUNTED FILTER)	4.3000A	78
OIL COOLER (ENGINE OIL)	4.4000A	238
OIL COOLER (MARINE GEAR DIRECT DRIVE)	4.4000A	269
OIL COOLER (MARINE GEAR REDUCTION DRIVE)	4.4000A	254
OIL FILLER (ON ROCKER COVER)	4.5000A	18
OIL FILLER (ON FLYWHEEL HOUSING)	4.5000A	51
DIPSTICK	4.6000A	284
OIL PAN	4.7000A	124
VENTILATING SYSTEM	4.8000A	319
FRESH WATER PUMP (DIRECT COOLING)	5.1000	45
FRESH WATER PUMP (HEAT EXCHANGER COOLING OR KEEL COOLING)	5.1000	44
THERMOSTAT	5.2000B	72
WATER BY-PASS TUBE (DIRECT COOLING)	5.2000C	147
WATER BY-PASS TUBE (HEAT EXCHANGER COOLING OR KEEL COOLING)	5.2000C	139
WATER CONNECTIONS (DIRECT COOLING)	5.3000B	200
WATER CONNECTIONS (WITH HEAT EXCHANGER COOLING)	5.3000B	196
WATER CONNECTIONS (KEEL COOLING)	5.3000B	203
HEAT EXCHANGER COOLING (WITH AIR SILENCER) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	5.5000A	291
HEAT EXCHANGER COOLING (WITH AIR CLEANER) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	5.5000A	318
KEEL COOLING (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	5.5000A	294
RAW WATER PUMP (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	5.6000A	38

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
WATER FILTER (HEAT EXCHANGER COOLING OR KEEL COOLING, 15 GAL. SYSTEM) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	5.7000A	12
WATER FILTER (KEEL COOLING, 30 GAL. SYSTEM) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	5.7000A	17
EXHAUST MANIFOLD (WATER COOLED)	6.1000A	125
EXHAUST MUFFLER CONNECTIONS	6.2000A	176
BATTERY CHARGING GENERATOR (12V., 25 AMP. NEGATIVE RETURN) (DIRECT COOLING)	7.1000A	881
BATTERY CHARGING GENERATOR (12V., 25 AMP. POSITIVE RETURN) (DIRECT COOLING)	7.1000A	922
BATTERY CHARGING GENERATOR (12V., 25 AMP. POSITIVE RETURN) (WITH HEAT EXCHANGER COOLING)	7.1000A	955
BATTERY CHARGING GENERATOR (12V., 25 AMP. NEGATIVE RETURN) (WITH HEAT EXCHANGER COOLING)	7.1000A	956
BATTERY CHARGING GENERATOR (12V., 60 AMP. NEGATIVE RETURN) (WITH HEAT EXCHANGE COOLING)	7.1000A	1140
STARTING MOTOR (12V.)	7.3000A	180
INSTRUMENT PANEL (SINGLE) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000A	220
INSTRUMENT PANEL (DUAL) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000A	215
TACHOMETER DRIVE (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000B	210
TACHOMETER DRIVE (CABLE, 5' LONG) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000B	11
TACHOMETER DRIVE (CABLE, 10' LONG) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000B	47
TACHOMETER DRIVE (CABLE, 15' LONG) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000B	46
ALARM SYSTEM (WITH NO WATER FILTER) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000C	354
ALARM SYSTEM (WITH WATER FILTER) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	7.4000C	355
POWER TAKE-OFF (FRONT) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	8.1000A	181
HYDRAULIC MARINE GEAR (DIRECT DRIVE)	9.1000A	550
HYDRAULIC MARINE GEAR (1.5:1 REDUCTION)	9.1000A	552
HYDRAULIC MARINE GEAR (2:1 REDUCTION)	9.1000A	554
HYDRAULIC MARINE GEAR (2.5:1 REDUCTION)	9.1000A	662
HYDRAULIC MARINE GEAR (3:1 REDUCTION)	9.1000A	682
ENGINE MOUNTING (WITH FRONT PTO, REAR MOUNTS ON MARINE GEAR)	11.1000A	318
ENGINE MOUNTING (WITH FRONT PTO, REAR MOUNTS ON MARINE GEAR)	11.1000A	421
ENGINE MOUNTING (NO FRONT PTO, REAR MOUNTS ON MARINE GEAR)	11.1000A	473
ENGINE MOUNTING (NO FRONT PTO, REAR MOUNTS ON MARINE GEAR)	11.1000A	414
ENGINE MOUNTING (NO FRONT PTO, REAR MOUNTS ON MARINE GEAR)	11.1000A	483
ENGINE MOUNTING (NO FRONT PTO, REAR MOUNTS ON MARINE GEAR)	11.1000A	319
ENGINE MOUNTING (NO FRONT PTO, REAR MOUNTS ON FLYWHEEL HOUSING)	11.1000A	478
ENGINE MOUNTING (RESILIENT TYPE, NO FRONT PTO, REAR MOUNTS ON MARINE GEAR)	11.1000A	499
BILGE PUMP (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	12.2000A	22
HYDRAULIC STARTER (HEAT EXCHANGER COOLING OR KEEL COOLING) (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	12.6000D	101
HYDRAULIC STARTER ACCESSORIES (FACTORY FURNISHED ONLY WHEN TYPE NUMBER APPEARS ON OPTION PLATE.)	12.6000E	28