## (Panel Type)

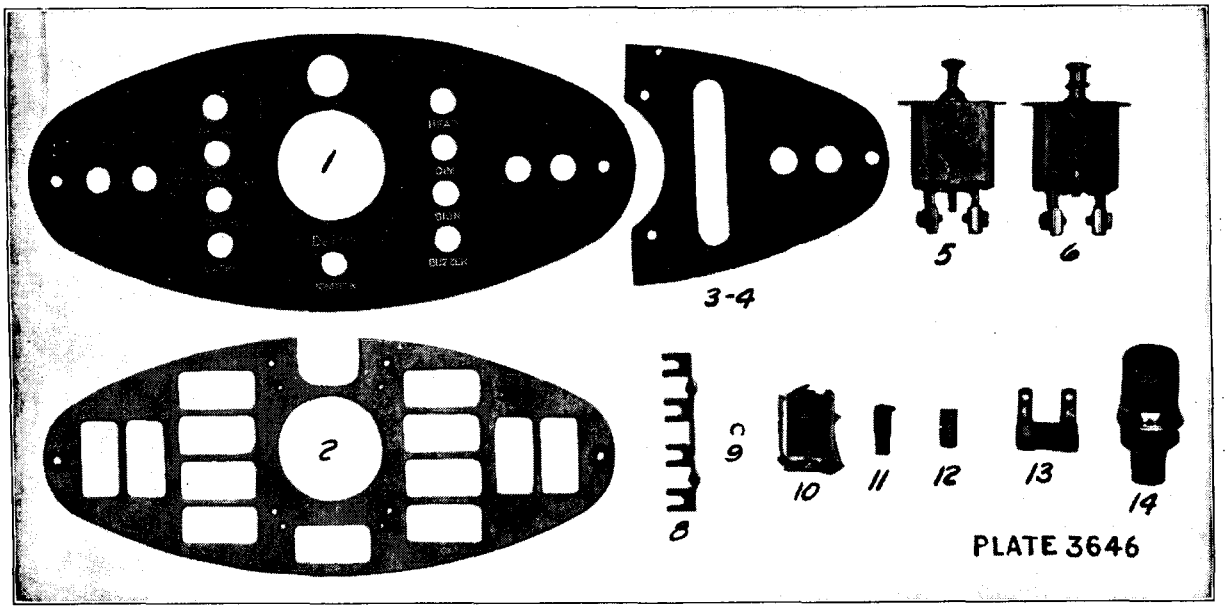


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

| Model No. | Escutcheon Plate | Mtg. Plate and Hub | Mtg. Plate Felt Gasket (Ign. Side) | Mtg. Plate Felt Gasket | Pull Snap Switch | Starting Switch As'bly | Circuit Breaker Lead Ins. Sleeve | Switch Connector | Snap Ring | Circuit Breaker As'bly § | Lock Contact Bracket | Circuit Breaker Bracket Spacer | Resistance Unit | Lamp As'bly |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 |
| 1295 | 16755 | 38261 | 36197 | 36197 | *1294 | | | | | ○5768 | | 36192 | 35839 | 812764 |
| 1321 | 37785 | 38262 | 37765 | " | " | | | | | " | 37773 | " | 18169 | " |
| 1324 | 16755 | 38261 | 36197 | " | " | | | | | " | | " | " | " |
| 1326 | 37785 | 38262 | 37765 | " | " | | | | | " | 37773 | " | " | " |
| 1327 | 1835493 | 38261 | 36197 | " | " | ‡1350 | | 38249 | 820921 | " | | " | | |
| 1331 | 38298 | " | " | " | " | " | | | " | " | | " | 18169 | |
| 1356 | 1837505 | " | | " | " | " | | | | " | | " | | |
| 1373 | 1835493 | " | 36197 | " | ‡1998651 | ‡1374 | | 38249 | | " | | " | | |
| 1390 | " | " | " | " | ‡ " | ‡ " | 36634 | " | | " | | 1856698 | | |
| 1391 | " | " | " | " | " | " | " | " | | " | | 36192 | | |
| 1392 | " | " | " | " | " | " | " | " | | " | | 1856698 | | |
| 1403 | 1861960 | " | " | " | " | × " | " | " | | " | | " | | |
| 1412 | " | " | " | " | " | × " | " | " | | " | | " | | |
| 1420 | 1867129 | " | | " | * " | | " | " | | † " | | " | | |
| 1425 | 1868149 | 1868197 | 1868155 | 1868155 | * " | ×1374 | 1909653 | " | | ⊕1868153 | | " | | |
| 1426 | 1868673 | 38261 | | 36197 | * " | | 36634 | " | | †5768 | | " | | |
| 1428 | 1853401 | " | 36197 | " | *1294 | | " | " | | ○5768 | | " | | 812764 |
| 1429 | ♦ | 1873704 | 1868155 | | ‡1998651 | ‡1374 | 1909653 | " | | ▲1868153 | | " | | |
| 1438 | 1868149 | 1868197 | " | 1868155 | ‡ " | ‡ " | | " | | | | | | |
| 1439 | • | 1873704 | " | " | ‡ " | ‡ " | 1909653 | | | ▲1868153 | | 1856698 | | |
| 1440 | 1881259 | 1868197 | " | " | ‡ " | ‡ " | " | | | ⊕1868153 | | " | | |
| 1441 | 1882351 | 38261 | 36197 | 36197 | ‡ " | | | | | †5769 | | | | 812764 |
| 1442 | 1883063 | 1909325 | 1868155 | 1868155 | ‡ " | | 1909653 | 38249 | | ⊕1868153 | | | | |
| 1443 | 1883257 | 1873704 | " | " | ‡ " | | " | | | □ " | | | | |
| 1444 | 1883258 | 1909323 | " | " | ‡ " | | " | | | " | | | | |
| 1446 | 1881259 | 1868197 | " | " | ‡ " | ‡1374 | 1909653 | 38249 | | ◊ " | | 1856698 | | |
| 1447 | | 1868150 | " | " | ‡ " | | " | " | | △ " | | " | | |
| 1448 | 1883063 | 1909325 | " | " | ‡ " | | " | " | | ⊕ " | | " | | |

†5768 Circuit Breaker is R.H. and Lower.
○5768 Circuit Breaker is L.H.—5769 is R.H. and Lower.
⊕1868144 Circuit Breaker and Mounting Plate Assembly.
□1883256 Circuit Breaker and Mounting Plate Assembly.
▲1873703 Circuit Breaker and Mounting Plate Assembly.
△1885096 Circuit Breaker and Mounting Plate Assembly.
◊1884354 Circuit Breaker and Mounting Plate Assembly.
*See Ignition Switch—Group 1 for parts.
§See Circuit Breaker Relay—Group 2 for parts.
‡See Control Switch—Group 1.
×1998629 Control Switch (Choke)—Group 1.
•Furnished by car manufacturer.
♦Should be secured thru car manufacturer.
1884355 Circuit Breaker—L.H. to Accessory Terminal.

(Panel Type)

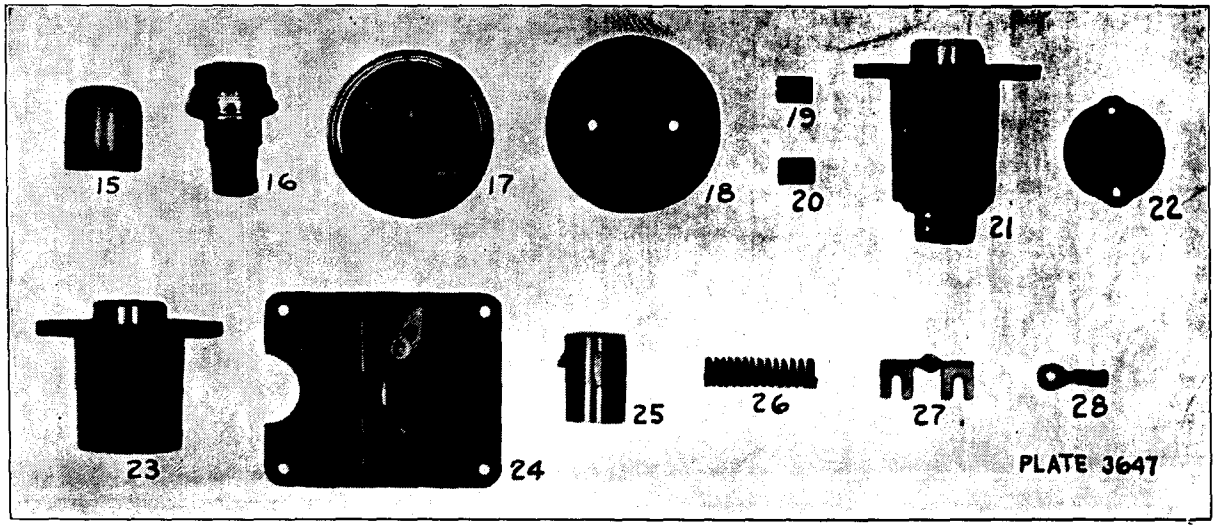


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

| Model No. | Lamp Cover | Lamp Base | Ammeter | Insulator (For ammeter) | Ammeter Nut (Small) | Ammeter Nut (Large) | Ignition Lock As'bly | Ignition Lock Switch Back As'bly | Lock Barrel and Bushing | Bracket and Insulator | Lock and Key | Lock Spring | Double Clip | Grounding Clip |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 |
| 1295 | 16959 | 812772 | 6058 | 36198 | 36187 | 3618S | | | | 16650 | | | 36190 | 25628 |
| 1321 | 810589 | " | 38258 | " | " | " | 37783 | 37776 | 37782 | " | 37780 | 37771 | " | " |
| 1324 | " | " | " | " | " | " | | | | " | | | " | " |
| 1326 | " | " | " | " | " | " | 37783 | 37776 | 37782 | " | 37780 | 37771 | " | " |
| 1327 | | | " | " | " | " | | | | " | | | " | " |
| 1331 | | | " | " | " | " | | | | " | | | " | " |
| 1356 | 810589 | | " | " | " | " | | | | " | | | " | " |
| 1378 | | | 1845834 | " | " | " | | | | " | | | " | " |
| 1390 | | | 1883043 | " | 1856699 | | | | | 1856695 | | | " | " |
| 1391 | | | 1845834 | " | 36187 | 36188 | | | | 16650 | | | " | " |
| 1392 | | | 1883043 | " | 1856699 | | | | | 1856695 | | | " | " |
| 1403 | | | " | " | " | | | | | 1856695 | | | " | " |
| 1412 | | | 1864073 | 1864236 | 1864233 | | | | | 1864231 | | | " | " |
| 1420 | | | " | " | " | | | | | | | | " | " |
| 1425 | | | " | " | 803880 | | | | | | | | " | " |
| 1426 | | | 1868675 | " | 1864233 | | | | | | | | " | " |
| 1428 | 810589 | 812772 | " | " | " | | | | | 1864231 | | | " | " |
| 1429 | | | | | | | | | | | | | " | " |
| 1438 | | | 1864073 | " | 803880 | | | | | | | | " | " |
| 1439 | | | | | | | | | | | | | " | " |
| 1440 | | | 1864073 | 1864236 | 803880 | | | | | | | | " | " |
| 1441 | 810589 | 812772 | 1868675 | " | | 1864233 | | | | 1864231 | | | " | " |
| 1442 | | | 1883043 | " | 803880 | | | | | | | | " | " |
| 1443 | | | | | | | | | | | | | " | " |
| 1444 | | | | | | | | | | | | | " | " |
| 1446 | | | 1864073 | 1864236 | 803880 | | | | | | | | | |
| 1447 | | | 1868675 | " | " | | | | | | | | | |
| 1448 | | | " | " | " | | | | | | | | 36190 | 25628 |

# MINOR PARTS SECTION (Panel Type)

| Name | Part No. | Used on Models |
|---|---|---|
| **CLIPS OR CLAMPS** | | |
| Ammeter Connector CLIP | 38247 | 1420–1426–1441 |
| Ammeter Terminal CLAMP | 31656 | 1390–1391–1392–1420–1426–1428–1441 |
| Ammeter Terminal CLIP (Spade) (Ammeter to Circuit Breaker) | 37547 | 1295–1321–1324–1326–1331–1356–1428 |
| Circuit Breaker CLAMP | 31656 | 1356–1373–1403–1412–1428 |
| Terminal Lead CLIP (Spade) | 28332 | 1321–1324–1326–1331–1356 |
| Terminal Lead CLIP (Spade) (On End of Connecting Leads) | 121549 | 1295 |
| Terminal CLIP (Lock Switch) | 34240 | 1321–1236 |
| Terminal CLIP (On Accessory Terminal) | 1861740 | 1425–1429 |
| Terminal CLIP (On Accessory Terminal) | 1856319 | 1439–1440–1442–1446–1448 |
| Terminal CLIP (To Horn Switch) | 1868152 | 1447 |
| Terminal CLIP (For Ignition Switch Lead) | 1868152 | 1425–1429–1438–1439–1441–1443–1444–1446 |
| **NUTS** | | |
| Accessory Terminal Screw NUT | 1843522 | 1420–1425–1426–1429–1438–1439–1440–1442–1446–1448 |
| Lock Switch Mounting Screw NUT | 115596 | 1321–1326 |
| Terminal Screw NUT | 113739 | 1429–1439–1443–1444 |
| **LEAD ASSEMBLIES** | | |
| LEAD ASSEMBLY (Dome B & C to Dash and Signal Sw.) | 1853403 | 1428 |
| LEAD ASSEMBLY (Ignition to Cowl Lamp) | 16657 | 1295–1321–1324–1326–1331–1356–1428 |
| LEAD ASSEMBLY (Circuit Breaker to End Switch) | 16659 | 1295 |
| LEAD ASSEMBLY (Ignition Switch to Ammeter) | 16661 | 1295–1324–1331–1420–1426–1428 |
| LEAD ASSEMBLY (Buzzer to Extra Switch) | 16661 | 1321–1326–1327–1373–1390–1391–1392–1403–1412 |
| LEAD ASSEMBLY (Ignition Switch to Ammeter) | 37778 | 1321–1326 |
| LEAD ASSEMBLY (Circuit Breaker to Sign and Tail, Dome B and Extra) | 37777 | 1321–1326 |
| LEAD ASSEMBLY (Circuit Breaker to Sign and Buzzer, End Switches and Dome B and Extra) | 16659 | 1324–1331 |
| LEADASSEMBLY (Circuit Breaker to Ammeter) | 824663 | 1324–1326–1331–1356–1428 |
| LEAD ASSEMBLY (Circuit Breaker to Dome B and C, Starting Switch R & L | 38250 | 1327–1390–1391–1392–1403–1412–1420 |
| LEAD ASSEMBLY (Ignition Switch to Ammeter) | 38248 | 1327–1390–1391–1392–1403–1412–1420 |
| LEAD ASSEMBLY (Ignition Switch to Breaker) | 1835245 | 1356 |
| LEAD ASSEMBLY (Ignition Switch to Breaker) | 1868154 | 1425–1429–1439–1440–1446 |
| LEAD ASSEMBLY (Extra Switch to Breaker) | 1835244 | 1356 |
| LEAD ASSEMBLY (Starting Switch to Ammeter) | 16661 | 1356 |
| LEAD ASSEMBLY (Connecting Circuit Breaker Plate) | 1868148 | 1425–1429–1439–1440–1442–1443–1444–1446–1447–1448 |
| LEAD ASSEMBLY (Defroster to Ammeter) | 1869063 | 1426 |
| LEAD ASSEMBLY (Fan to Circuit Breaker) | 1869061 | 1426 |
| LEAD ASSEMBLY (Circuit Breaker to Dome B. & C.) | 1869171 | 1426 |
| LEAD ASSEMBLY (Circuit Breaker to Buzzer) | 1853402 | 1428 |
| LEAD ASSEMBLY (Ammeter Terminal) | 1882346 | 1441 |
| LEAD ASSEMBLY (Circuit Breaker & Defroster) | 1882350 | 1441 |
| LEAD ASSEMBLY (Panel to Running Switch) | 1882347 | 1441 |
| LEAD ASSEMBLY (Dome to Stop Switch) | 1882349 | 1441 |
| LEAD ASSEMBLY (To Lamp) | 1882348 | 1441 |
| LEAD ASSEMBLY (To Chime & Horn) | 1882345 | 1441 |
| **LOCK WASHERS** | | |
| Accessory Terminal Screw LOCK WASHER | 118874 | 1425–1429–1438–1439–1440–1442–1446–1448 |
| Ammeter Mounting Plate Screw LOCK WASHER | 106497 | 1438 |
| Ammeter Terminal Clamp Screw LOCK WASHER | 138530 | 1373–1390–1391–1392–1403–1412–1420–1426–1428–1441 |
| Ammeter Nut LOCK WASHER, No. 8 | 106496 | 1356–1373–1391 |
| Ammeter Nut LOCK WASHER, No. 10 | 106497 | 1373–1390–1391–1392–1403 |
| Ammeter Nut LOCK WASHER | 802759 | 1412 |
| Ammeter Nut LOCK WASHER | 1869533 | 1420–1425–1426–1428–1438–1439–1440–1441–1442–1446–1447–1448 |
| Circuit Breaker Bracket and Insulator Mounting Screw LOCK WASHER | 106497 | 1295–1321–1324–1326–1327–1331–1356–1373–1390–1391–1392–1403–1412–1420–1425–1426–1428–1429–1439–1440–1441–1442–1443–1444–1446–1447–1448 |
| Circuit Breaker Mounting LOCK WASHER | 106495 | 1295 |
| Circuit Breaker Mounting Screw LOCK WASHER | 138530 | 1321–1324–1326–1327–1331–1356–1373–1390–1391–1392–1403–1412–1420–1425–1426–1428–1429–1439–1440–1441–1442–1443–1444–1446–1447–1448 |

# MINOR PARTS SECTION (Panel Type)

| Name | Part No. | Used on Models |
|---|---|---|
| **LOCK WASHERS—Continued** | | |
| Circuit Breaker Terminal Screw LOCK WASHER | 120380 | 1438–1443–1444 |
| Circuit Breaker Terminal Clamp Screw LOCK WASHER | 36340 | 1356–1373–1403–1412–1428 |
| Lock Switch Mounting Screw LOCK WASHER | 802757 | 1321–1326 |
| Lock Switch Back Attaching Screw LOCK WASHER | 106496 | 1321–1326 |
| Lock Switch Clip LOCK WASHER | 802729 | 1321–1326 |
| Lock Switch Contact and Insulator Attaching Screw LOCK WASHER | 803972 | 1321 |
| Lock Switch Contact and Insulator Attaching Screw LOCK WASHER | 106496 | 1326 |
| Starting Switch Terminal Screw LOCK WASHER | 115544 | 1331–1356 |
| Starting Switch Terminal Screw LOCK WASHER | 103319 | 1429 |
| **PLAIN WASHERS** | | |
| Accessory Terminal Screw PLAIN WASHER | 816278 | 1425–1438 |
| Accessory Terminal Screw PLAIN WASHER | 823893 | 1429–1438–1439–1442–1446–1448 |
| Ammeter Mounting Plate Screw PLAIN WASHER | 22645 | 1438 |
| Ammeter Terminal Nut WASHER | 823893 | 1425 |
| Ammeter Terminal Nut WASHER | 114649 | 1356 |
| Ammeter Terminal Nut WASHER | 816278 | 1440–1442–1446–1447–1448 |
| Circuit Breaker Bracket and Insulator Mounting Screw PLAIN WASHER | 22645 | 1295–1321–1324–1326–1327–1331–1356–1390–1391–1392–1403–1412–1420–1425–1426–1428–1429–1439–1440–1441–1442–1443–1444–1446–1447–1448 |
| Mounting Plate Attaching Screw PLAIN WASHER | 38342 | 1321–1324–1326–1327–1356–1373–1390–1391–1392–1403–1412–1420–1425–1426–1428–1429–1438–1439–1440–1441–1442–1443–1444–1446–1447–1448 |
| **SCREWS** | | |
| Accessory Terminal SCREW | 1868151 | 1425–1429–1438–1439–1440–1442–1446–1448 |
| Ammeter Mounting Plate SCREW | 1856697 | 1438–1442 |
| Ammeter Terminal Clamp Attaching SCREW | 455880 | 1324–1326–1327–1331–1356–1373–1390–1391–1392–1403–1412–1420–1426–1428–1441 |
| Circuit Breaker Mounting SCREW | 36191 | 1295–1321–1324–1326–1327–1331–1356–1373–1390–1391–1392–1403–1412–1420–1425–1426–1428–1429–1439–1440–1441–1442–1443–1444–1446–1447–1448 |
| Circuit Breaker Insulator Mounting SCREW (10-30x1 3/32) | 29285 | 1295–1321–1324–1326–1331–1356–1373–1390–1391 |
| Circuit Breaker Insulator Mounting SCREW | 1856697 | 1392–1403–1412–1420–1425–1426–1428–1429–1439–1440–1441–1443–1444–1446–1447–1448 |
| Circuit Breaker Insulator Mounting SCREW | 29021 | 1295–1321–1324 |
| Circuit Breaker Terminal Clamp SCREW | 1835943 | 1356–1373–1403–1412–1428 |
| Lock Switch Mounting SCREW | 115594 | 1321–1326 |
| Lock Switch Back Mounting SCREW | 114763 | 1321–1326 |
| Lock Switch Terminal SCREW | 36191 | 1321–1326 |
| Lock Switch Contact and Insulator SCREW | 114935 | 1321–1326 |
| Lock Retaining SCREW | 821680 | 1321–1326 |
| Mounting Plate Attaching SCREW | 132751 | 1373–1390–1391–1392–1412–1420–1426–1441 |
| Mounting Plate Attaching SCREW | 141541 | 1429–1438–1439–1440–1441–1442–1443–1444–1446–1447–1448 |
| Mounting Plate Fastening SCREW (8-36x 5/16) | 29021 | 1295–1321–1324–1326–1327–1331 |
| Mounting Plate Fastening SCREW (8-32x 5/16) | 117114 | 1295–1321–1324–1326–1327–1331–1356–1428 |
| Panel Switch Mounting SCREW | 36228 | 1295–1321–1324–1326–1331–1356–1428 |
| Panel Switch Mounting SCREW | 38224 | 1327–1373–1390–1391–1392–1412–1420–1426 |
| Starting Switch Terminal SCREW | 1835943 | 1331 |
| Terminal SCREW—Brass (1/4-20x1) | 1873828 | 1429–1439–1443–1444 |
| **MISCELLANEOUS** | | |
| Ammeter Mounting PLATE | 1868145 | 1438 |
| Ammeter Mounting Plate Space SLEEVE | 1856698 | 1438–1441–1442 |
| Circuit Breaker Insulator Space SLEEVE | 1856698 | 1443–1444 |
| Dash Lamp PLUG | 38277 | 1327–1331 |

(Panel Type)

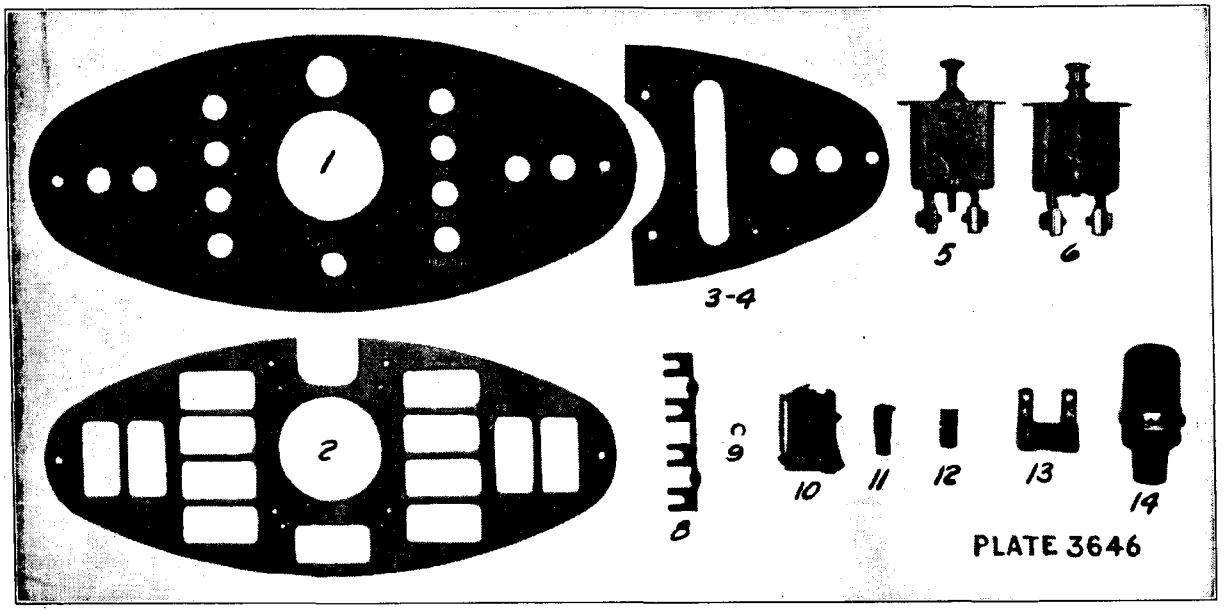


Illustrations are of Typical Parts only, which may vary in detail. For Parts not illustrated see Minor Parts Section.

| Model No. | Escutcheon Plate | Mtg. Plate and Hub | Mtg. Plate Felt Gasket (Ign. Side) | Mtg. Plate Felt Gasket | Pull Snap Switch | Starting Switch As'bly | Circuit Breaker Lead Ins. Sleeve | Switch Connector | Snap Ring | Circuit Breaker § | Lock Contact Bracket | Circuit Breaker Bracket Spacer | Resistance Unit | Lamp As'by |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 |
| 1998607 | 1886489 | 1868197 | 1868155 | 1868155 | ×1998651 | × 1374 | 1909653 | 38249 | | °1868153 | | 1856698 | | |
| 1998615 | 1881259 | " | " | " | × " | × " | " | " | | ° " | | " | | |
| 1998616 | 1868149 | " | " | " | × " | × " | | " | | | | | | |
| 1998617 | 1886489 | " | " | " | × " | × " | 1909653 | " | | °1868153 | | 1856698 | | |
| 1998620 | 1883063 | 1868150 | " | " | × " | | " | " | | " | | " | | |
| 1998621 | 1883257 | 1873704 | " | " | × " | | " | " | | " | | " | | |
| 1998622 | 1883258 | " | " | " | × " | | " | " | | " | | " | | |
| 1998623 | ⊕ | 1868150 | " | " | × " | | " | " | | " | | " | | |
| 1998624 | 1868673 | 38261 | 36197 | 36197 | × " | | 36634 | " | | •5768 | | " | | |
| 1998625 | 1882351 | " | " | " | × " | | | | | • " | | " | | 812764 |
| 1998626 | 1883063 | 1868150 | 1868155 | 1868155 | × " | | 1909653 | 38249 | | 1868153 | | " | | |
| 1998627 | ⊕ | 1873704 | " | " | × " | × 1374 | " | " | | " | | " | | |
| 1998631 | 1868149 | 1868197 | " | " | × " | × " | " | " | | " | | " | | |
| 1998632 | 1903867 | 1873704 | " | " | × " | | " | " | | " | | " | | |
| 1998633 | 1906514 | " | " | " | × " | | " | " | | " | | " | | |
| 1998634 | 1908314 | 1909325 | " | " | × " | | " | " | | " | | " | | |
| 1998640 | 1909208 | 1909323 | " | " | × " | | 1909653 | " | | 1909649 | | " | | |
| 1998641 | 1909655 | " | " | " | × " | | " | " | | " | | " | | |
| 1998643 | 1910244 | 1909325 | " | " | × " | | " | " | | 1868153 | | " | | |
| 1998646 | 1909655 | 1909323 | " | " | × " | | " | " | | 1909649 | | " | | |
| 1998647 | 1912044 | 1909325 | " | " | × " | | " | " | | 1868153 | | " | | |
| 1998652 | ⊕ | 1873704 | " | " | ×1998651 | ×1998654 | " | " | | " | | " | | |

×For parts see Control Switch—Group 1.
§For Circuit Breaker & Bracket Assembly see Minor Parts.
•5768 Circuit Breaker is L.H.; 5769 is R.H.—Lower.
⊕Escutcheon Plate must be purchased from car manufacturer.
°1884355 Circuit Breaker—L.H. to Accessory Terminal.

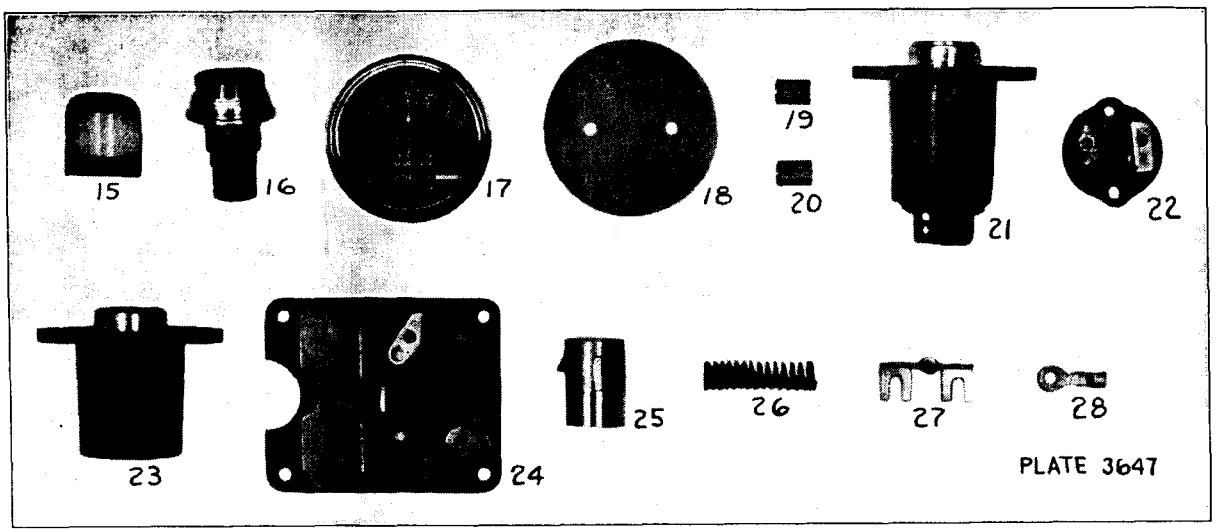


**(Panel Type)**

Illustrations are of Typical Parts only, which may vary in detail. For Parts not illustrated see Minor Parts Section.

| Model No. | Lamp Cover | Lamp Base | Ammeter | Insulator (for ammeter) | Ammeter Nut (Small) | Ammeter Nut (Large) | Ignition Lock As'bly | Ignition Lock Switch Back As'bly | Lock Barrel and Bushing | Bracket and Insulator | Lock and Key | Lock Spring | Double Clip | Grounding Clip |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 |
| **1998607** | | | 1864073 | 1864236 | 803880 | | | | | | | | 36190 | 200007 |
| **1998615** | | | " | " | " | | | | | | | | " | " |
| **1998616** | | | " | " | " | | | | | | | | " | " |
| **1998617** | | | " | " | " | | | | | | | | " | " |
| **1998620** | | | 1883043 | " | " | | | | | | | | " | " |
| **1998621** | | | | | | | | | | | | | | " |
| **1998622** | | | | | | | | | | | | | 36190 | " |
| **1998623** | | | 1868675 | 1864236 | 803880 | | | | | | | | " | " |
| **1998624** | | | " | " | 1864233 | | | | | 1864231 | | | " | " |
| **1998625** | 810589 | 812772 | " | " | " | | | | | " | | | " | " |
| **1998626** | | | " | " | 803880 | | | | | | | | " | " |
| **1998627** | | | | | | | | | | | | | " | " |
| **1998631** | | | 1864073 | 1864236 | 803880 | | | | | | | | " | " |
| **1998632** | | | | | | | | | | | | | " | " |
| **1998633** | | | | | | | | | | | | | " | " |
| **1998634** | | | 1883043 | 1864236 | 803880 | | | | | | | | " | " |
| **1998640** | | | | | | | | | | | | | " | " |
| **1998641** | | | | | | | | | | | | | " | " |
| **1998643** | | | 1883043 | 1864236 | 803880 | | | | | | | | " | " |
| **1998646** | | | | | | | | | | | | | " | " |
| **1998647** | | | 1883043 | 1864236 | 803880 | | | | | | | | " | " |
| **1998652** | | | | | | | | | | | | | " | " |

Parts not listed in this Catalog will not be sold separately.

# MINOR PARTS SECTION

| Name | Part No. | Used on Models |
|---|---|---|
| **CLAMPS OR CLIPS** | | |
| Clamp—Ammeter Terminal | 31656 | 1998624-25 |
| Clamp—Circuit Breaker Terminal | 31656 | 1998624-25 |
| Clip—Ammeter Connector | 38247 | 1998624-25 |
| Clip—Terminal (For Ignition Switch Lead) | 1868152 | 1998607-15-16-17-27-31-34-52 |
| Clip—Terminal (On Accessory Terminal) | 1856319 | 1998607-15-17-20-26-27-31 |
| Clip—Terminal (To Door Switch) | 1868152 | 1998621-22-32 |
| Clip—Terminal (To Horn Switch) | 1868152 | 1998623 |
| Clip—Terminal (To Extra Switch) | 1868152 | 1998632-40-41-43-46 |
| **LEAD ASSEMBLIES** | | |
| Lead Assembly (Ammeter Terminal to M.G. Switch) | 1882346 | 1998625 |
| Lead Assembly (Circuit Breaker Plate Connector) | 1868148 | 1998607-15-17-20-21-22-23-26-27-31-32-33-34-40-41-43-46-47-52 |
| Lead Assembly (Circuit Breaker to Chime) | 1882345 | 1998625 |
| Lead Assembly (Circuit Breaker to Defroster Switch) | 1869063 | 1998624 |
| Lead Assembly (Circuit Breaker to Defroster Switch) | 1882350 | 1998625 |
| Lead Assembly (Circuit Breaker to Dome "B" & "C") | 1869171 | 1998624 |
| Lead Assembly (Circuit Breaker to Fan Switch) | 1869061 | 1998624 |
| Lead Assembly (Circuit Breaker to Horn) | 1882345 | 1998625 |
| Lead Assembly (Dash Light to Buzzer Switch) | 16661 | 1998624 |
| Lead Assembly (Dome to Stop & Sign Switch) | 1882349 | 1998625 |
| Lead Assembly (Ignition Switch to Breaker Plate) | 1868154 | 1998607-15-17-27-31-52 |
| Lead Assembly (Panel to Running Light Switch) | 1882347 | 1998625 |
| Lead Assembly (To Lamp) | 1882348 | 1998625 |
| Lead Assembly (Jumper) | 1909627 | 1998640 |
| **LOCK WASHERS** | | |
| Lock Washer—Accessory Terminal Screw | 131184 | 1998607-15-16-17-20-26-27-31-52 |
| Lock Washer—Ammeter Mounting Plate Screw | 120217 | 1998616 |
| Lock Washer—Ammeter Terminal Clamp Screw | 138530 | 1998624-25 |
| Lock Washer—Ammeter Terminal Nut | 1869533 | 1998607-15-16-17-20-23-24-25-26-31-34-43-47 |
| Lock Washer—Circuit Breaker Attaching Screw | 138530 | 1998607-15-17-20-21-22-23-24-25-26-27-31-32-33-34-40-41-43-46-47-52 |
| Lock Washer—Circuit Breaker Insulator Attaching Screw | 120217 | 1998607-15-17-20-21-22-23-24-25-26-27-31-32-33-34-40-41-43-46-47-52 |
| Lock Washer—Circuit Breaker Terminal Clamp Screw | 138530 | 1998624-25 |
| Lock Washer—Terminal Screw (¼") | 120380 | 1998621-22-27-32-33-40-41-46-52 |
| **NUTS** | | |
| Nut—Accessory Terminal Screw | 121743 | 1998607-15-16-17-20-26-27-31-52 |
| Nut—Terminal Screw (¼-20) | 113739 | 1998621-22-27-32-33-40-41-46-52 |
| **WASHERS** | | |
| Washer—Accessory Terminal Screw—Plain | 823893 | 1998607-15-16-17-20-26-27-31-52 |
| Washer—Ammeter Mounting Plate Screw | 22645 | 1998616 |
| Washer—Ammeter Terminal Nut—Plain | 816278 | 1998607-15-16-17-20-26-27-31-34-43-47 |
| Washer—Circuit Breaker Insulator Attaching Screw—Plain | 22645 | 1998607-15-17-20-21-22-23-24-25-26-27-31-32-33-34-40-41-43-46-47-52 |
| Washer—Mounting Plate Attaching Screw | 38342 | 1998607-15-16-17-20-21-22-23-24-25-26-27-31-32-33-34-40-41-43-46-47-52 |
| **SCREWS** | | |
| Screw—Accessory Terminal | 1868151 | 1998607-15-16-17-20-26-27-31-52 |
| Screw—Ammeter Mounting Plate | 132143 | 1998616 |
| Screw—Ammeter Terminal Clamp | 455880 | 1998624-25 |
| Screw—Circuit Breaker Attaching | 36191 | 1998607-15-17-20-21-22-23-24-25-26-27-31-32-33-34-40-41-43-46-47-52 |
| Screw—Circuit Breaker Insulator Attaching | 132143 | 1998607-15-17-20-21-22-23-24-25-26-27-31-32-33-34-40-41-43-46-47-52 |
| Screw—Circuit Breaker Terminal Clamp | 1835943 | 1998624-25 |
| Screw—Mounting Plate Attaching | 141541 | 1998607-15-16-17-20-21-22-23-26-27-31-32-33-34-40-41-43-46-47-52 |
| Screw—Mounting Plate Attaching | 132751 | 1998624-25 |
| Screw—Switch Mounting (Shipped separately) | 1888234 | 1998607-15-16-17-24-25-31 |
| Screw—Terminal—Brass (¼-20x1) | 1873828 | 1998621-22-27-32-40-41-46-52 |

Parts not listed in this Catalog will not be sold separately.

# MINOR PARTS SECTION

| Name | Part No. | Used on Models |
|---|---|---|
| **MISCELLANEOUS** | | |
| CHOKE SWITCH (For parts see Control Switch—Group 1)... | 1408 | 1998616-31 |
| CIRCUIT BREAKER & BRACKET Assembly..... | 1868144 | 1998620-26-31 |
| CIRCUIT BREAKER & BRACKET Assembly..... | 1884354 | 1998607-15-17 |
| CIRCUIT BREAKER & BRACKET Assembly..... | 1883256 | 1998621-22-32-33 |
| CIRCUIT BREAKER & BRACKET Assembly..... | 1873703 | 1998627-52 |
| CIRCUIT BREAKER & BRACKET Assembly..... | 1885096 | 1998623 |
| CIRCUIT BREAKER & BRACKET Assembly..... | 1909628 | 1998640-41-46 |
| CIRCUIT BREAKER & BRACKET Assembly..... | 1910890 | 1998643 |
| CIRCUIT BREAKER & BRACKET Assembly..... | 1885504 | 1998647 |
| PLATE—Ammeter Mounting..... | 1868145 | 1998616 |
| SLEEVE—Ammeter Mounting Plate Space..... | 1856698 | 1998616 |

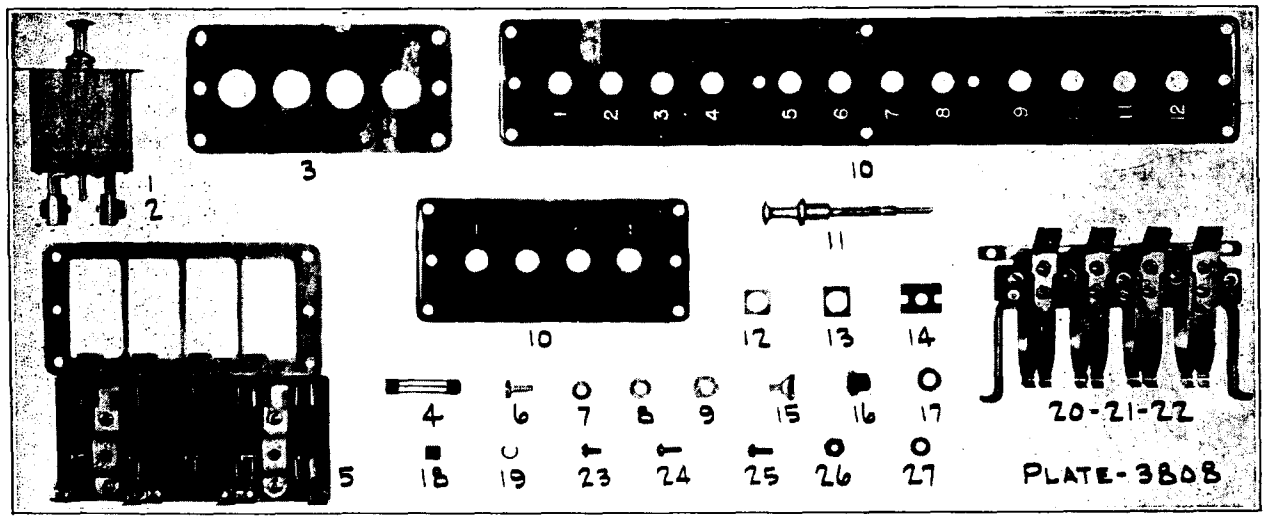


Illustrations are of Typical Parts only, which may vary in detail.

| Model No. | Switch | Control Switch | Switch Gasket | Fuse | Fuse Panel | Terminal Screw | Terminal Screw Lock Washer | Terminal Screw Plain Washer | Terminal Clamp | Panel Only | Switch Button | Switch Contact | Contact Connector | Contact Insulator |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 |
| 1346 | *1294 | †1380 | 829805 | 117142 | 829804 | 1835943 | 115544 | 807716 | | | | | | |
| 1362 | | | | | | 121839 | 802730 | | 34240 | 1841346 | 1841348 | 35870 | 1845318 | 35903 |
| 1363 | | | | | | " | " | | " | 1841634 | " | " | " | " |
| 1381 | | | | | | " | " | | " | 1850413 | " | " | " | " |
| 1382 | | | | | | " | " | | " | 1841634 | " | " | " | " |
| 1383 | *1294 | †1380 | 829805 | 117142 | 829804 | 1835943 | 115544 | 807716 | | | | | | |
| 1396 | | | | | | 121839 | 802730 | | 34240 | 1841346 | 1841348 | 35870 | 1845318 | 35903 |
| 1397 | | | | | | " | " | | " | 1841634 | " | " | " | " |
| 1401 | | | | | | " | " | | " | 1850413 | " | " | " | " |
| 1402 | | | | | | " | " | | " | 1858313 | " | " | " | " |
| 1413 | | | | | | " | " | | " | 1850413 | " | " | " | " |

*See Ignition Switch—Group 1—for parts.
†See Control Switch—Group 1—for parts.

| Model No. | Contact Retainer Clamp | Contact Insulating Bushing | Contact Retaining Washer | Contact Space Sleeve | Space Sleeve Retainer Clip | Contact Bracket Assembly Upper or R.H. | Contact Bracket Assembly Lower or L.H. | Contact Bracket Assembly Center | Contact Bracket taching Screw—Upper & Lower | Contact Bracket Attaching Screw Center | Contact Connecting Screw | Contact Connecting Screw Nut | Contact Connecting Screw Lock Washer | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | |
| 1346 | | | | | | | | | | | | | | |
| 1362 | 35902 | 1845396 | 834231 | 1845325 | 820921 | 1841335 | 1842938 | 1841336 | 141542 | 132695 | 141541 | 114524 | 802730 | |
| 1363 | " | " | " | " | " | " | " | " | " | " | " | " | " | |
| 1381 | " | " | " | " | " | | " | | " | | | | | |
| 1382 | " | " | " | " | " | 1841335 | " | 1841336 | " | 132695 | 141541 | 114524 | 802730 | |
| 1383 | | | | | | | | | | | | | | |
| 1396 | 35902 | 1845396 | 834231 | 1845325 | 820921 | 1858080 | 1842938 | 1841336 | 141542 | 132695 | 141541 | 114524 | 802730 | |
| 1397 | " | " | " | " | " | 1841335 | 1858172 | " | " | " | " | " | " | |
| 1401 | " | " | " | " | " | 1858172 | | | " | | | | | |
| 1402 | " | " | " | " | " | " | | | " | | | | | |
| 1413 | " | " | " | " | " | 1864829 | | | | 141542 | | | | |

| Model No. | NUT<br>Terminal | LOCK WASHER<br>Terminal | WASHER<br>Plain<br>Terminal |
|---|---|---|---|
| 404-T | 134566 | 9421425 | 805790 |
| 404-U | " | " | " |
| 404-Z | " | " | " |
| 405-A | " | " | " |
| 405-C | " | " | " |
| 405-D | " | " | " |
| 405-E | " | " | " |
| 406-A | " | " | " |
| 406-C | " | " | " |
| 406-D | " | " | " |
| 406-H | 115343 | " | " |
| 406-J | " | " | " |
| 406-K | 134566 | " | " |
| 406-L | 115343 | " | " |
| 406-M | 134566 | " | " |
| 406-N | " | " | " |
| 406-P | " | " | " |
| 408-A | " | " | " |
| 1996451 | " | " | " |
| 1996452 | " | " | " |
| 1996456 | " | " | ..... |
| 1996471 | 453787 | " | ..... |
| 1996475 | 453787 | " | ..... |
| 1996476 | " | " | ..... |
| 1996478 | 134566 | " | ..... |
| 1996487 | " | " | ..... |
| ×1996495 | 453787 | " | ..... |
| 1996496 | " | " | ..... |
| ..... | ..... | ..... | ..... |
| ..... | ..... | ..... | ..... |
| ..... | ..... | ..... | ..... |

×1886953 Knob
132110 Screw—Knob Attaching
9422354 Lock Washer—Knob Attaching Screw

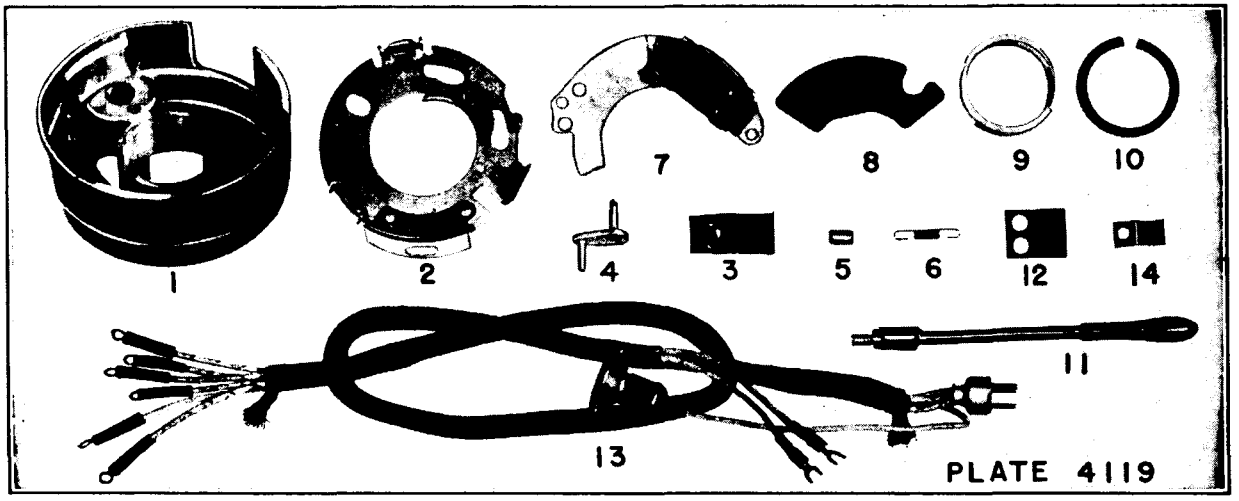


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

| * Model No. | Housing | Lever Plate Assembly | Lever Plate Tension Spring | Spring Post and Lever Assembly | Roller | Spring | Directional Switch and Plate | Insulation Strip | × Cam | Cam Snap Ring | × Operating Lever | Terminal Insulator | Wiring Harness | Wiring Harness Clamp |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 |
| **1995501** | 1879031 | 1879011 | 1881991 | 1879023 | 1879029 | 1879030 | 1997720 | 1879027 | 1879037 | † | 1879033 | 1879707 | 1879010 | |
| **1995502** | 1879667 | " | " | " | " | " | 1997727 | " | " | † | " | " | 1879593 | 1879668 |
| **1995503** | 1910363 | 1881987 | " | " | " | 1910518 | 1997720 | " | " | † | 1884925 | " | ⊕1882036 | |
| **1995504** | 1882035 | " | " | " | " | " | " | " | " | † | " | " | ⊕ " | |
| **1995507** | 1886391 | " | " | " | " | 1879030 | " | " | " | † | " | " | ⊕ " | |
| **1995508** | 1883207 | " | " | " | " | " | " | " | " | † | " | " | ⊕ " | |
| **1995509** | 1885741 | 1885728 | 1885739 | " | " | " | 1911171 | | " | | 1885146 | | ▲ | |
| **1995510** | 1886215 | 1881987 | 1881991 | " | " | " | 1997720 | | " | † | 1884925 | 1879707 | ⊕1882036 | |
| **1995511** | 1885741 | 1885728 | 1885739 | " | " | " | 1911171 | | " | | 1885146 | | ▲ | |
| **1995512** | " | " | " | " | " | " | 1885757 | | " | | " | | ▲ | |
| **1995513** | 1886391 | 1881987 | 1881991 | " | " | " | 1997720 | | " | † | 1884925 | 1879707 | ⊕1882036 | |
| **1995519** | 1886215 | " | " | " | " | " | " | | " | † | " | " | ⊕ " | |
| **1995520** | 1886391 | " | " | " | " | " | " | | " | † | " | " | ⊕ " | |
| **1995521** | 1882035 | " | " | " | " | " | " | 1879027 | " | † | " | " | ⊕ " | |
| **1995522** | 1883207 | " | " | " | " | " | " | " | " | † | " | " | ⊕ " | |
| **1995523** | 1885741 | 1885728 | 1885739 | " | " | " | 1911171 | | " | | 1885146 | | ▲ | |
| **1995524** | " | " | " | " | " | " | " | | " | | " | | ▲ | |
| **1995525** | 1910363 | 1881987 | 1881991 | " | " | 1910518 | 1997720 | 1879027 | " | † | 1884925 | 1879707 | ⊕1882036 | |
| **1995526** | 1910378 | " | " | " | " | " | " | " | " | † | " | " | ⊕ " | |
| **1995527** | 1910363 | " | " | " | " | " | " | " | " | † | " | " | ⊕ " | |
| **1995528** | 1910378 | " | " | " | " | " | " | " | " | † | " | " | ⊕ " | |
| **1995529** | 1912957 | 1885728 | " | " | " | " | 1910364 | " | " | † | ‡ | 1910375 | △ | |
| **1995530** | 1912958 | " | " | " | " | " | " | " | " | † | ‡ | " | □ | |
| **1995531** | 1910939 | " | " | " | " | " | 1910941 | | | | ‡ | | | 1910940 |
| **1995532** | 1885741 | " | 1885739 | " | " | 1879030 | 1911171 | | " | | 1885146 | | ▲ | |
| **1995533** | " | " | " | " | " | " | " | | " | | " | | ▲ | |
| **1995534** | 1912959 | " | " | " | " | 1910518 | 1910364 | 1879027 | " | † | ‡ | 1910375 | △ | |
| **1995535** | 1910363 | 1881987 | 1881991 | " | " | " | 1997720 | " | " | † | 1884925 | 1879707 | ⊕1882036 | |
| **1995536** | 1910378 | " | " | " | " | " | " | " | " | † | " | " | ⊕ " | |
| **1995537** | 1910363 | 1885728 | " | " | " | " | " | " | " | † | ‡ | " | ⊕ " | |
| **1995538** | 1910378 | " | " | " | " | " | " | " | " | † | ‡ | " | ⊕ " | |
| **1995539** | 1911185 | " | " | " | " | " | " | " | " | † | 1910321 | " | ⊕ " | |
| **1995540** | 1912469 | " | " | " | " | " | 1912470 | | | | ‡ | | | |
| **1995541** | 1912468 | " | " | " | " | " | " | | | | ‡ | | | |
| **1995542** | 1912546 | 1916511 | 1913604 | 1912544 | " | 1912536 | 1912547 | | ×1912497 | | ×1912498 | | | |
| **1995543** | 1912519 | 1885728 | 1881991 | 1879023 | " | 1910518 | 1912470 | | | | ‡ | | | |
| **1995544** | 1912520 | " | " | " | " | " | " | | | | ‡ | | | |
| **1995545** | 1912959 | " | " | " | " | " | 1910364 | 1879027 | 1879037 | † | ‡ | 1910375 | ■ | |
| **1995546** | 1913535 | 1916509 | " | " | " | " | 1997720 | " | " | † | ‡ | 1879707 | ♦ | |
| **1995547** | 1913535 | 1885728 | " | " | " | " | " | " | " | † | ‡ | " | ♦ | |

*Parts for Switches which are not listed, are not sold separately.
⊕1882037 Wiring Harness—Switch to Flasher.
▲Part of Directional Switch Assembly. Not sold separately.
×Shipped separate—not part of model number.
△Use 5288401 for Front Lights, 5288402 for Rear Lights.
□Use 5288404 for Front Lights, 5288403 for Rear Lights.
■Use 5289866 for Front Lights, 5289867 for Rear Lights.
♦Use 5290352 for Front Lights, 5290353 for Rear Lights.

†Serviced by Buick.
‡1910794 Lever (Black), 1910887 (Ivory).
‡1885325 Lever (Grey), 1910321 (Black).

# MINOR PARTS SECTION

| Name | Part No. | Used on Models |
|---|---|---|
| **LOCK WASHERS** | | |
| Lock Washer—Directional Switch Hold Down Screw | 121841 | 1995501-2 |
| Lock Washer—Directional Switch Hold Down Screw | 138530 | 1995503-4-7-8-9-10-11-12-13-19-20-21-22-23-24-25-26-27-28-29-30-31-32-33-34-35-36-37-38-39-45 |
| Lock Washer—Directional Switch Terminal Screw | 138522 | 1995501-2-3-4-10-13-19-20-21-22-25-26-27-28-29-30-34-35-36-37-38-39-45-46-47 |
| Lock Washer—Housing Cover Screw | 131044 | 1995509-11-12-23-24-32-33 |
| Lock Washer—Housing Cover Screw | 121841 | 1995531 |
| Lock Washer—Lever Plate Guide Screw | 138530 | 1995501-2 |
| Lock Washer—Lever Plate Tension Spring | 121841 | 1995501-2 |
| Lock Washer—Lever Plate Tension Spring | 138530 | 1995503-4-7-8-19-20-21-22-25-26-27-28-29-30-31-34-35-36-37-38-39-45 |
| Lock Washer—Operating Lever | ×186437 | 1995501-2-3-4-7-8-9-10-11-12-13-19-20-21-22-23-24-25-26-27-28-29-30-32-33-35-36 |
| Lock Washer—Wiring Harness Clamp Screw | 121841 | 1995502 |
| **SCREWS** | | |
| Screw—Directional Switch Hold Down | 1880419 | 1995501-2 |
| Screw—Directional Switch Hold Down | 122159 | 1995503-4-7-8-9-10-11-12-13-19-20-21-22-23-24-25-26-27-28-29-30-31-32-33-34-35-36-37-38-39-45 |
| Screw—Directional Switch Hold Down | 446610 | 1995540-41-42-46-47 |
| Screw—Directional Switch Terminal | 1879001 | 1995501-2-3-4-10-13-19-20-21-22-25-26-27-28-29-30-34-35-36-37-38-39-45-46-47 |
| Screw—Housing Cover | 132688 | 1995509-11-12-23-24-32-33 |
| Screw—Housing Cover | 1857216 | 1995531 |
| Screw—Lever Plate Guide | 1880419 | 1995501-2 |
| Screw—Lever Plate Tension Spring—To Housing | 122159 | 1995501-2-3-4-7-8-10-13-19-20-21-22-25-26-27-28-29-30-31-34-35-36-37-38-39-45 |
| Screw—Wiring Harness Clamp | 122159 | 1995502-7-8 |
| Screw (& Lock Washer)—Lever Plate Tension Spring Attaching | 445651 | 1995540-41-42-43-44-46-47 |
| Screw (& Lock Washer)—Switch Mounting | 445595 | 1995542 |
| **WASHERS** | | |
| Washer—Plain—Brass—Under Cam | □1879036 | 1995501-2-3-4-7-8-10-13-19-20-21-22-25-26-27-28 |
| Washer—Spring—Brass—Under Cam | □1879038 | 1995501-2-3-4-7-8-10-13-19-20-21-22-25-26-27-28 |
| Washer—Under Lever | 30866 | 1995501-2-3-4-7-8-10-13-19-20-21-22-25-26-27-28-29-30-31-34-35-36-37-38-39-40-41-42-43-44-45-46-47 |
| **MISCELLANEOUS** | | |
| CLIP—Ball Retainer | 1912537 | 1995542 |
| FLANGE—Housing | 1912472 | 1995540-41 |
| FLANGE—Housing | 1912521 | 1995543-44 |
| FLANGE—Housing | 1912538 | 1995542 |
| Housing COVER | 1885855 | 1995509-12 |
| Housing COVER | 1885857 | 1995511 |
| Housing COVER | 1907091 | 1995523-32 |
| Housing COVER | 1907423 | 1995524-33 |
| Housing COVER | ♦ | 1995531 |
| Housing Cup SUPPORT | ×1885145 | 1995509-11-12-23-24-32-33 |
| Housing Cup SUPPORT | ×1910933 | 1995531 |
| Lever Plate Bearing BALL | 145639 | 1995501-2-3-4-7-8-9-10-11-12-13-19-20-21-22-23-24-25-26-27-28-29-30-31-32-33-34-35-36-37-38-39-40-41-42-43-44-45-46-47 |
| Lever Plate GUIDE | 1880417 | 1995501-2 |
| RIVET—Lever Plate Tension Spring | 1853987 | 1995509-11-12-23-24-32-33 |
| SLEEVE—On Directional Switch Button | 1879000 | 1995501-2-3-4-7-8-9-10-11-12-13-19-20-21-22-23-24-25-26-27-28-32-33-35-36-37-38-39-46-47 |

×Shipped separate—not part of model number.
□Serviced by Buick.
♦Furnished and painted by Cadillac dealer.

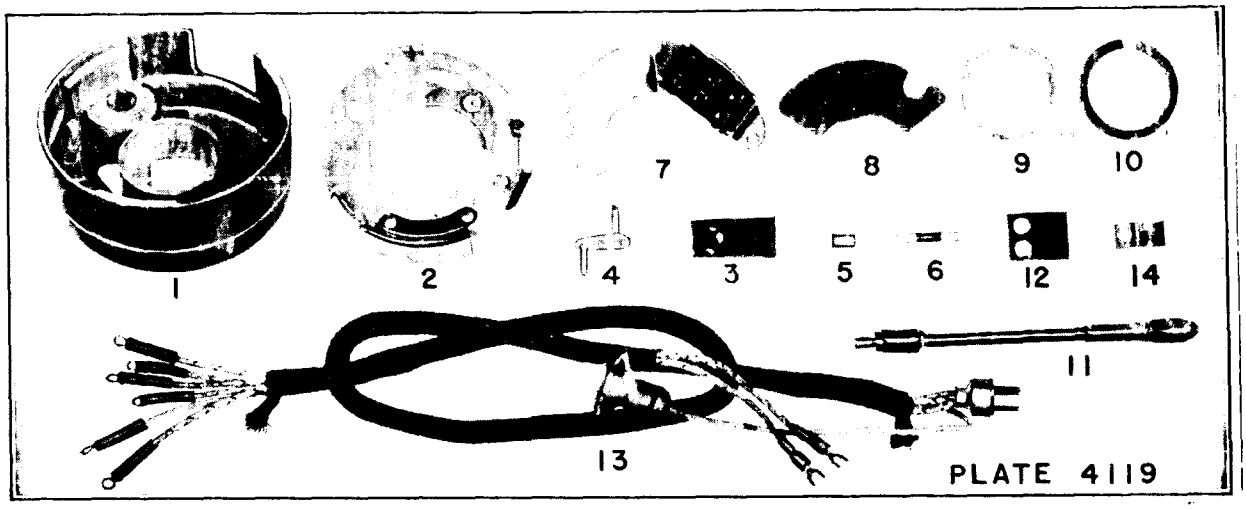


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

| * Model No. | Housing | Lever Plate Assembly | Lever Plate Tension Spring | Spring Post and Lever Assembly | Roller | Spring | Directional Switch and Plate | Insulation Strip | Cam | Cam Snap Ring | Operating Lever | Terminal Insulator | Wiring Harness | Wiring Harness Clamp |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 |
| **1995548** | 1913535 | 1885728 | 1881991 | 1879023 | 1879029 | 1910518 | 1910364 | 1879027 | † | † | °1910321 | °1910375 | △ | ..... |
| **1995549** | " | " | " | " | " | " | " | " | † | † | " | " | △ | ..... |
| **1995550** | 1913550 | " | " | " | " | " | " | " | † | † | " | " | □ | ..... |
| **1995551** | 1913656 | 1916507 | " | " | " | " | 1913658 | ..... | ..... | ..... | ■ | ..... | ..... | ..... |
| **1995552** | 1913657 | " | " | " | " | " | " | ..... | ..... | ..... | ■ | ..... | ..... | ..... |
| **1995553** | 1913650 | 1916509 | " | " | " | " | 1997720 | 1879027 | °1879037 | † | °1910321 | 1879707 | ▲ | ..... |
| **1995554** | 1916664 | 1916514 | 1913604 | 1912544 | " | 1912536 | 1914581 | ..... | °1912497 | ..... | 1913893 | ..... | ..... | ..... |
| **1995558** | See Switch—Group 111 | | | | | | | | | | | | | |
| **1995559** | 1917607 | 1917599 | 1913604 | 1912544 | 1879029 | 1912536 | 1917602 | ..... | °1912497 | ..... | ⊕ | ..... | ..... | 1917747 |
| **1995561** | 1918447 | 1918443 | 1881991 | " | " | 1910518 | 1917973 | ..... | °1879037 | ..... | ♦ | ..... | ..... | ..... |
| **1995562** | " | " | " | " | " | " | 1918307 | ..... | " | ..... | ♦ | ..... | ..... | ..... |
| ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... |
| ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... |
| ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... |
| ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... |

*Parts for Switches which are not listed, are not sold separately.
△Use 5288401 for Front Light, 5288402 for Rear Lights.
□Use 5288404 for Front Light, 5288403 for Rear Lights.
▲Use 5290754 for Front Light, 5290755 for Rear Lights.
†Serviced by Buick.
°Shipped separate.
■Lever shipped separate—Lever (w/Black knob) 1910794; Lever (w/Grey knob) 1914575.
♦Lever shipped separate—Lever (w/Black knob) 1919895.
⊕Lever shipped separate. 1917579 is Standard; 1918554 Optional used with Marr clock.

# MINOR PARTS SECTION

| Name | Part No. | Used on Models |
|---|---|---|
| **.OCK WASHERS** | | |
| Lock Washer—Directional Switch Terminal Screw | 138522 | 1995548-9; 50-3 |
| **CREWS** | | |
| Screw—Directional Switch Hold Down | 446610 | 1995548-9; 50-1-2-3-4; 62 |
| Screw—Directional Switch Hold Down | 1921350 | 1995561 |
| Screw—Directional Switch Terminal | 1879001 | 1995548-9; 50-3 |
| Screw—Switch Mounting | 159920 | 1995559 |
| Screw (& Lock Washer)—Lever Plate Tension Spring Attaching | 445651 | 1995548-9; 50-1-2-3; 61-2 |
| Screw (& Lock Washer)—Lever Plate Tension Spring Attaching | 444610 | 1995554-9 |
| Screw (& Lock Washer)—Switch Mounting | 445595 | 1995554 |
| **VASHERS** | | |
| Washer—Under Lever | 30866 | 1995548-9; 50-1-2-3-4; 61-2 |
| **MISCELLANEOUS** | | |
| BALL—Lever Plate Bearing | 145639 | 1995548-9; 50-1-2-3-4-9; 61-2 |
| CLIP—Ball Retainer | 1912537 | 1995554-9; 61-2 |
| FLANGE—Housing | 1913659 | 1995551-2 |
| KEY—Switch Mounting | 1917609 | 1995559 |

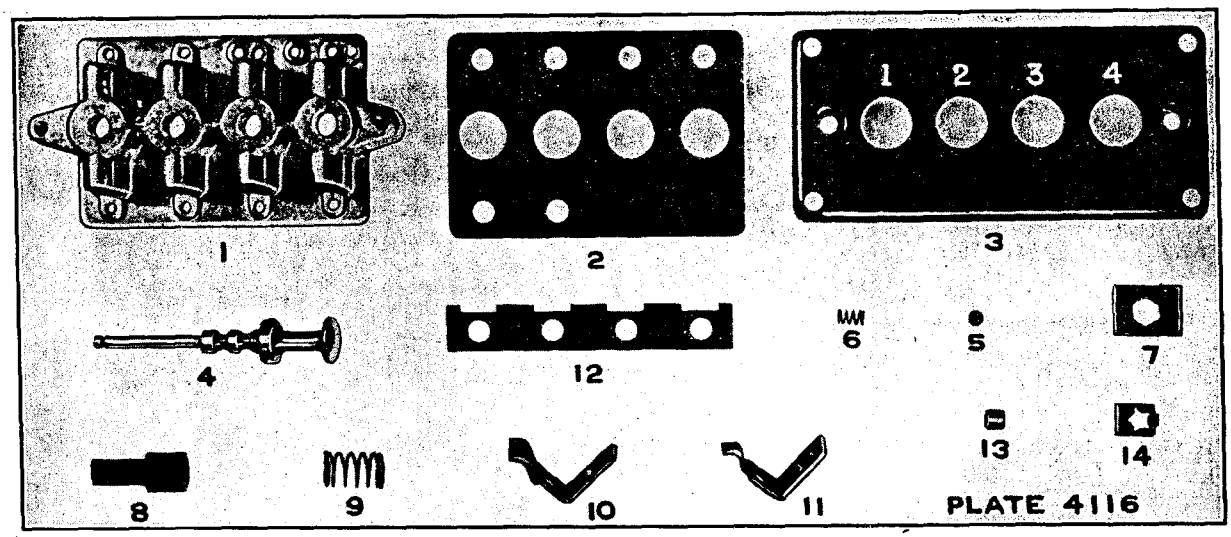


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

| Model No. | Housing | Housing Insulator | Face Plate | Switch Knob | Knob Ball | Ball Spring | Switch Contact | Insulation Sleeve | Switch Contact Spring | Terminal Wide Contact | Terminal Narrow Contact | Terminal Insulation Strip | Terminal Screw Insulation Bushing | Terminal Clip |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 |
| **1998601** | 1869349 | 1869359 | 1869358 | 1869352 | 169066 | 1869350 | 1869354 | 1869353 | 1869355 | 1869361 | 1869360 | 1869363 | 1869362 | 1855978 |
| **1998602** | 1869366 | 1869367 | " | " | " | " | " | " | " | " | ..... | 1869368 | " | " |
| **1998603** | † | * | ..... | " | " | " | " | " | " | " | 1869360 | § | " | " |
| **1998604** | 1869349 | 1869359 | ..... | " | " | " | " | " | " | " | " | 1869363 | " | " |
| **1998605** | 1869366 | 1869367 | ..... | " | " | " | " | " | " | " | " | 1869368 | " | " |
| **1998606** | 1869349 | 1869359 | 1869358 | " | " | " | " | " | " | " | " | § | " | " |
| **1998608** | ⊕ | 1869367 | ..... | " | " | " | " | " | " | " | ..... | 1869368 | " | " |
| **1998609** | 1869366 | " | ..... | " | " | " | " | " | " | " | ..... | " | " | " |
| **1998610** | 1869349 | 1869359 | 1869358 | " | " | " | " | " | " | " | 1869360 | 1869363 | " | " |
| **1998611** | 1869366 | 1869367 | " | " | " | " | " | " | " | " | ..... | 1869368 | " | " |
| **1998612** | 1869349 | 1869359 | " | " | " | " | " | " | " | " | 1869360 | § | " | " |
| **1998613** | 1874956 | 1869367 | ..... | " | " | " | " | " | " | " | ..... | 1869368 | " | " |
| **1998614** | ⊕ | " | ..... | " | " | " | " | " | " | " | ..... | " | " | " |
| **1998628** | 1869349 | 1869359 | ..... | " | " | " | " | " | " | " | 1869360 | 1869363 | " | " |
| **1998636** | ⊕ | 1869367 | ..... | " | " | " | " | " | " | " | ..... | 1869368 | " | ..... |
| **1998637** | 1869366 | " | ..... | " | " | " | " | " | " | " | ..... | " | " | ..... |
| **1998638** | 1874959 | " | ..... | " | " | " | " | " | " | " | ..... | " | " | 1855978 |
| **1998639** | " | " | ..... | " | " | " | " | " | " | " | ..... | " | " | " |
| **1998642** | ..... | 1910030 | ..... | 1910026 | " | " | " | " | 1910032 | " | ..... | ..... | " | " |
| **1998644** | 1874959 | 1869367 | ..... | 1869352 | " | " | × " | " | " | × " | ..... | 1869368 | " | " |
| **1998645** | 1910350 | " | ..... | △ " | " | " | " | " | " | " | ..... | " | " | " |
| **1998648** | 1869366 | " | ..... | " | " | " | " | " | 1869355 | " | ..... | " | " | " |
| **1998649** | ..... | 1910030 | ..... | 1910026 | " | " | " | " | 1910032 | " | ..... | ..... | " | " |
| **1998650** | ..... | " | ..... | 1921089 | " | " | " | " | " | " | ..... | ..... | " | " |
| **1998653** | 1869366 | 1869367 | ..... | 1923388 | " | " | " | " | 1869355 | " | ..... | 1869368 | " | " |
| **1998655** | ⊕ | " | ..... | " | " | " | " | " | " | " | ..... | " | " | ..... |
| **1998656** | 1910025 | 1910030 | ..... | 1921089 | " | " | " | " | 1910032 | " | ..... | 1910031 | " | 1855978 |

†1874962 Housing—L.H.—5 Circuit 1998603
1874956 Housing—Center—4 Circuit 1998603
1874959 Housing—R.H.—4 Circuit 1998603
*1869359 Housing Insulator—L.H. 1998603
1869367 Housing Insulator—R.H.—Center 1998603
§1869363 Terminal Ins. Strip—L.H. 1998603-6-12
1869368 Terminal Ins. Strip—R.H.—Center 1998603-6-12
⊕1874959 Housing—R.H. & L.H.—4 Circuit 1998608-14-36-55
1874956 Housing—Center—4 Circuit 1998608-14-36-55

×Use 1910308 Contact (Silver Inlaid) and 1910306 Terminal (Silver Inlaid) in Blower Circuit only.
△1910351—Knob is spring returned (one location only).

# MINOR PARTS SECTION

| Name | Part No. | Used on Models |
|---|---|---|
| **LOCK WASHERS** | | |
| Lock Washer—Connector Strap Screw | 131044 | 1998603-8-14-28-36-37-48-49-55 |
| Lock Washer—Fuse Block Attaching Screw | 1873844 | 1998636-37-55 |
| Lock Washer—Housing Connector Screw | 121841 | 1998603-8-14-36-55 |
| Lock Washer—Terminal Attaching Screw | 131044 | 1998601-2-3-4-5-6-8-9-10-11-12-13-14-36-38-39-42-44-45-50-53-56 |
| **NUTS** | | |
| Nut—Switch Mounting | 1913999 | 1998649 |
| Nut—Switch Mounting | 1921090 | 1998650 |
| **SCREWS** | | |
| Screw—Connector Strap | 132705 | 1998603-8-14-28-36-37-48-49-55 |
| Screw—Face Plate Attaching—To Housing | 133419 | 1998601-2-6-10-11-12 |
| Screw—Fuse Block Attaching | 1886496 | 1998636-37-53 |
| Screw—Housing Connector | 121832 | 1998603-8-14-36-55 |
| Screw—Switch Knob Ball—Set | 1869351 | 1998601-2-3-4-5-6-8-9-10-11-12-13-14-28-36-38-39-42-44-45-48-50-53-55-56 |
| Screw—Terminal Attaching | 132705 | 1998601-2-3-4-5-6-8-9-10-11-12-13-14-36-38-39-42-44-45-50-53-56 |
| Screw—Terminal | 1864099 | 1998601-2-3-4-5-6-8-9-10-11-12-13-14-28-38-39-42-44-45-48-49-50-53-56 |
| **WASHERS** | | |
| Washer—Connector Strap—Insulation | 822695 | 1998603-8-14-36-55 |
| Washer—Connector Strap Screw | 833960 | 1998603-8-14-28-36-48-49-55 |
| Washer—Contact Insulation | 1872394 | 1998601-2-3-4-5-6-8-9-10-11-12-13-14-28-36-37-38-39-44-45-53-55 |
| Washer—Contact Spring Insulation | 1869356 | 1998601-2-3-4-5-6-8-9-10-11-12-13-14-28-36-37-38-39-42-44-45-48-49-50-53-55-56 |
| Washer—Contact Retainer | 1869357 | 1998601-2-3-4-5-6-8-9-10-11-12-13-14-28-36-37-38-39-42-44-45-48-49-50-53-55-56 |
| Washer—Terminal Attaching Screw | 833960 | 1998601-2-3-4-5-6-8-9-10-11-12-13-14-36-37-38-39-42-44-45-50-53-56 |
| Washer—Terminal Attaching Screw Insulation | 822695 | 1998613-36-38-39-44 |
| Washer—Terminal Attaching Screw Insulation | 1910031 | 1998642-49-50 |
| **MISCELLANEOUS** | | |
| BUSHING—Connector Strap—Insulation | 1874965 | 1998603-8-14-36-55 |
| Connector STRAP—Gang Connector | 1874964 | 1998603-8-14-36-55 |
| Contact STRIP (Brass) | 1869364 | 1998601-4-10-28-37-48 |
| Contact STRIP—L.H. | 1874963 | 1998603-8-14-36-55 |
| Contact STRIP—Center | 1874957 | 1998603-8-13-14-36-38-39-55 |
| Contact STRIP—R.H. | 1874960 | 1998603-8-14-36-55 |
| Contact STRIP | 1910309 | 1998644 |
| Contact STRIP | 1910894 | 1998645 |
| FUSE BLOCK | 1908687 | 1998636-37-55 |
| GANG SWITCH Assembly—L.H.—5 Circuit | 1874961 | 1998603 |
| GANG SWITCH Assembly—L.H.—4 Circuit | 1886935 | 1998608-14 |
| GANG SWITCH Assembly—L.H. | 1908684 | 1998636 |
| GANG SWITCH Assembly—L.H. | 1923385 | 1998655 |
| GANG SWITCH Assembly—Center—4 Circuit | 1874955 | 1998603-8-14 |
| GANG SWITCH Assembly—Center | 1908685 | 1998636 |
| GANG SWITCH Assembly—Center | 1923386 | 1998655 |
| GANG SWITCH Assembly—R.H.—4 Circuit | 1874958 | 1998603-8-14 |
| GANG SWITCH Assembly—R.H. | 1908686 | 1998636 |
| GANG SWITCH Assembly—R.H. | 1923387 | 1998655 |
| INSULATOR—Contact Strip | 1869365 | 1998601-4-10-28 |
| INSULATOR—Contact Strip | 1910895 | 1998645 |

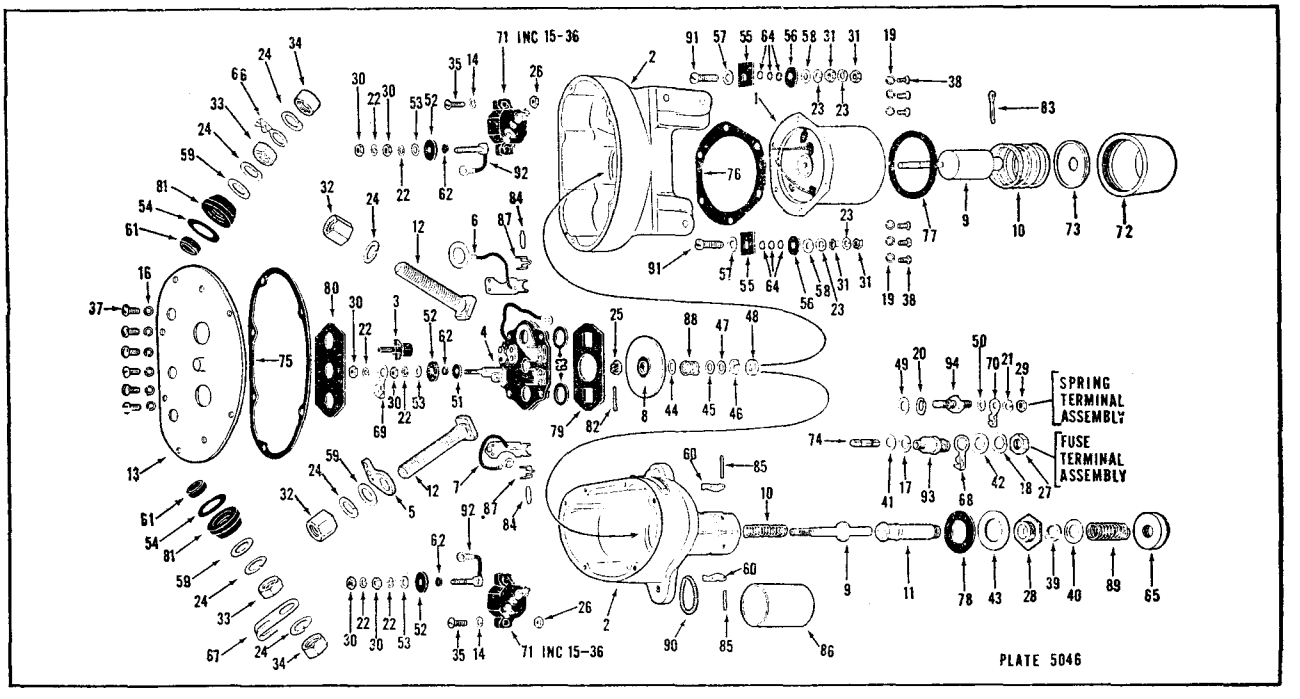


Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

| Model No. | Case & Coil | Housing | Contact Plunger | * Contact Plate | Contact & Support | Contact Blade R.H. | Contact Blade L.H. | Contact Disc | Plunger — or Push Rod | Spring — Plunger or Push Rod Return | Shaft — | Stud — Terminal | Cover or Plate |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 |
| **407-D** | | 1858371 | | 1866828 | 1910548 | | | 1855481 | 1855478 | 1857425 | 1884521 | 1869030 | 1864893 |
| **407-H** | | 1869004 | 1869033 | 1869009 | " | 1869025 | 1869022 | " | " | " | " | " | 1869037 |
| **407-J** | | " | " | " | " | " | " | " | " | " | " | " | " |
| **1543** | 1866834 | | | 1866828 | " | | | " | 1866838 | 1866841 | | " | 1864893 |
| **1561** | " | | 1869033 | 1869009 | " | 1869025 | 1869022 | " | " | " | | " | 1869037 |
| **1568** | 1873516 | | " | " | " | " | " | " | " | " | | " | " |
| **1574** | " | | " | " | " | " | " | " | " | " | | " | " |
| **1118044** | " | | " | " | " | " | " | " | " | " | | " | †1883724 |
| **1996454** | | 1869004 | " | " | " | " | " | " | 1855478 | 1857425 | 1880501 | " | 1880499 |
| **1996455** | | " | " | " | " | " | " | " | " | " | 1884521 | " | 1869037 |
| **x1996473** | | 1910574 | " | 1910557 | 1910548 | " | 1910555 | " | " | " | 1910577 | 1910552 | 1910568 |
| **x1996474** | 1910579 | †1910584 | " | " | " | " | " | " | 1866838 | 1866841 | | " | " |
| **x1996477** | " | † " | " | 1911490 | " | 1911493 | 1885633 | " | " | " | | " | " |
| **x1996493** | 1933377 | † " | " | " | " | " | " | " | " | " | | " | " |

*See Miscellaneous Section for contact plate assemblies.
†Later prod. waterproof models, identified by dash after model number use #1942975 Housing.
xEarly units not waterproof—may be converted to waterproof type by application of part #1950702 Package.

# MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | **LOCK WASHERS** | | |
| 14 | Lock Washer—Circuit Breaker Attaching Screw | 1962276 | 1996473-4 |
| 15 | Lock Washer—Circuit Breaker Terminal Screw | 453844 | 1996473-4-7 |
| — | Lock Washer—Contact Plate Attaching Screw | 453435 | 407-D-H-J; 1543; 61-8; 74; 1118044-1996455 |
| 16 | Lock Washer—Cover Attaching Screw | 1962276 | 1996473-4; 93 |
| 17 | Lock Washer—Fuse Terminal | 9421425 | 407-H; 1561-8; 1996454 |
| 18 | Lock Washer—Fuse Terminal Nut | 9421427 | 407-H; 1561-8 |
| — | Lock Washer—Ground Strap Screw | 453435 | 407-H-J; 1561-8 |
| 19 | Lock Washer—Housing Attaching Screw | 1962276 | 1996474-7; 93 |
| 20 | Lock Washer—Spring Terminal | 9421425 | 407-J; 1574; 1118044; 1996455 |
| 21 | Lock Washer—Spring Terminal Nut | 9421423 | 407-J; 1574; 1118044; 1996455 |
| — | Lock Washer—Terminal Screw | 453435 | 407-D; 1543 |
| 22 | Lock Washer—Terminal Stud (#10) | 1962276 | 407; 1561-8; 74; 1118044; 1996454-5; 73-4 |
| 23 | Lock Washer—Terminal Stud (¼) | 9421423 | 1543; 61-8; 74; 1118044; 1996474-7; 93 |
| 24 | Lock Washer—Terminal Stud (½) | 9421427 | 407-D-H-J; 1543; 61-4; 74; 1118044; 1996454-5-7; 93 |
| 24 | Lock Washer—Terminal Stud | 1928463 | 407-H-J; 1996473-4 |
| | **NUTS** | | |
| 25 | Nut—Contact Disc Attaching | 453688 | 407-D-H-J; 1543; 61-8; 74; 1118044; 1996454-5; 73-4-7; 93 |
| 26 | Nut—Circuit Breaker Attaching Screw | 453433 | 1996473-4 |
| 27 | Nut—Fuse Terminal | 1917035 | 407-H; 1561-8; 1996454 |
| 28 | Nut—Shaft | 1913795 | 407-D-H-J; 1996473 |
| 29 | Nut—Spring Terminal (¼-20) | 134551 | 407-J; 1574; 1118044; 1996455; 93 |
| 30 | Nut—Terminal (10-32) | 453433 | 407-H-J; 1561-8; 74; 1118044; 1996454-5; 73-4 |
| 31 | Nut—Terminal (¼-20) | 134551 | 1543; 61-8; 74; 1118044; 1996474-7; 93 |
| 32 | Nut—Terminal (½-13x$\frac{11}{16}$ thk.) | 1915505 | 407-H-J; 1561-8; 74; 1118044; 1996454-5; 73-4-7; 93 |
| 33 | Nut—Terminal (½-13x$\frac{5}{16}$ thk.) | 120238 | 407-D-H-J; 1543; 61-8; 74; 1118044; 1996454-5; 73-4-7; 93 |
| 34 | Nut—Terminal (½-13x½ thk.) | 120238 | 407-D-H-J; 1543; 61-8; 74; 1118044; 1996454-5; 73-4-7; 93 |
| | **SCREWS** | | |
| 35 | Screw—Circuit Breaker Attaching | †9416183 | 1996473-4 |
| 36 | Screw—Circuit Breaker Terminal | 453467 | 1996473-4 |
| — | Screw—Contact Plate Attaching | 9416183 | 407-D-H-J; 1543; 61-8; 74; 1118044; 1996455 |
| 37 | Screw—Cover Attaching | 453464 | 1996473-4-7; 93 |
| — | Screw—Ground Strap Attaching | 1914580 | 407-H-J; 1561-8; 1996454 |
| 38 | Screw—Housing Attaching | 1914580 | 1543-61 |
| 38 | Screw—Housing Attaching | 453464 | 1996474-7; 93 |
| — | Screw—Lead Attach to Circuit Breaker | 454059 | 1996474 |
| — | Screw—Terminal | 453319 | 407-D; 1543 |
| | **WASHERS** | | |
| — | Washer—Contact Plate Attaching Screw | 807295 | 407-D; 1543 |
| — | Washer—Contact Plate Attaching Screw | 807218 | 407-H-J; 1118044; 1996455 |
| — | Washer—Contact Plate Attaching Screw | 1880503 | 1996454 |
| 39 | Washer—Felt | 1915596 | 407-D-H-J; 1996454; 73 |
| 40 | Washer—Felt Retainer | 1915597 | 407-D-H-J; 1996454; 73 |
| 41 | Washer—Plain—Fuse Terminal | 812622 | 407-H; 1561-8; 1996454 |
| 42 | Washer—Plain—Fuse Terminal Nut | 811912 | 407-H; 1561; 1996454 |
| 43 | Washer—Sleeve Retainer | 1856801 | 407-D-H-J; 1996454-5; 73 |
| 44 | Washer—Spring Retainer (Cupped) | 1913041 | 407-D-H-J; 1543; 61-8; 74; 1118044; 1996454-5; 73-4-7; 93 |
| 45 | Washer—Spring Retainer (Cupped) | 1904608 | 1996454-5; 73 |
| 46 | Washer—Spring Retainer (Slotted) | 1905614 | 1543; 61-8; 1118044; 1996474-7; 93 |
| 47 | Washer—Spring Spacer | 1849235 | 1543; 61-8; 74; 1118044; 1996474-7; 93 |
| 48 | Washer—Spring Spacer (⅛ thk.) | 1905613 | 1543; 61-8; 74; 1118044; 1996474-7; 93 |
| 49 | Washer—Plain—Spring Terminal | 812622 | 407-J; 1996455 |
| 50 | Washer—Plain—Spring Terminal Nut | 1905125 | 407-J; 1574; 1118044; 1996455 |
| 51 | Washer—Ins. Terminal (Inner) | 1910572 | 407-H-J; 1568-74; 1996473-4; 93 |
| 52 | Washer—Ins. Terminal (Outer) | 1910571 | 1996473-4 |
| 53 | Washer—Plain Terminal | 1902988 | 407-H-J; 1561-8; 74; 1118044; 1996454-5; 73-4 |

†Later prod. waterproof models use 1942967 Screw.

# MINOR PARTS SECTION

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | WASHERS (Continued) | | |
| — | Washer—Plain—Push Button | 1869413 | 1996455 |
| — | Washer—Plain—Sw. Term. (Inside $\frac{9}{16}$ O.D.) | 1905125 | 1996477; 93 |
| 54 | Washer—Ins. Terminal Stud (Outside Cover) | 1922457 | 407-D-H-J; 1543; 61-8; 74; 1118044; 1996454-5 |
| 55 | Washer—Ins. Terminal Stud (Square) | 1902314 | 1568; 74; 1118044; 1996474-7; 93 |
| 56 | Washer—Ins. Terminal Stud ($\frac{1}{4}$x$\frac{3}{4}$x$\frac{1}{16}$) | 1941044 | 1543; 61-8; 74; 1118044; 1996474-7; 93 |
| 57 | Washer—Plain—Terminal Stud ($\frac{1}{4}$ Sq. Hole) | 1902315 | 1568; 74; 1118044; 1996474-7; 93 |
| 58 | Washer—Plain—Terminal Stud ($\frac{1}{4}$x$\frac{1}{2}$x$\frac{1}{32}$) | 1951748 | 1543; 1561-8; 74; 1118044 |
| 58 | Washer—Plain—Terminal Stud ($\frac{1}{4}$x$\frac{5}{16}$x$\frac{1}{32}$) | 1905125 | 1996474-7; 93 |
| 59 | Washer—Plain—Terminal Stud ($\frac{33}{64}$x$\frac{7}{8}$x$\frac{1}{32}$) | 811912 | 407-D-H-J; 1543; 61-8; 74; 1996454-5; 73-4-7; 93 |
| | MSCELLANEOUS | | |
| 60 | ARM—Shaft—Release | 1855497 | 407-D-H-J; 1996454-5; 73 |
| 61 | BUSHING—(Washer) Ins. Cover | 1869036 | 407-H-J; 1561-8; 74; 1118044; 1996454-5 |
| 61 | BUSHING—Ins. Cover ($\frac{1}{2}$x$\frac{11}{16}$x$\frac{1}{4}$) | *1906046 | 1996473-4-7; 93 |
| 62 | BUSHING—Ins. "SW" Terminal | 1845396 | 407-H-J; 1561-8; 74; 1118044; 1996454-5 |
| 62 | BUSHING—(Washer) Terminal | †1910567 | 1996473-4-7; 93 |
| 63 | BUSHING—(Washer) Terminal ($\frac{33}{64}$x$\frac{13}{16}$x$\frac{3}{32}$) | 1855490 | 407-D-H-J; 1543; 61-8; 74; 1118044; 1996454-5; 73-4-7 |
| 64 | BUSHING—(Washer) Ins. Terminal (.367x$\frac{17}{64}$x$\frac{1}{32}$) | †1905124 | 1543; 61-8; 74; 1118044; 1996474-7; 93 |
| — | BUSHING—(Rubber Washer $\frac{13}{64}$ I.D.) #10-32 term. | 1924974 | 1996474 |
| — | BUSHING—(Rubber Washer $\frac{17}{64}$ I.D.) #¼-20 term. | 1942971 | 1996474-7; 93 |
| — | BUSHING—(Rubber Washer ½ I.D.) #½-13 term. | 1942969 | 1996473-4-7; 93 |
| — | BUSHING—(Rubber Washer $\frac{17}{64}$ I.D.) #¼-20 term. | 1945534 | 1996477; 93 |
| 65 | BUTTON—Push | 1836822 | 407-D |
| 65 | BUTTON—Push | 1869006 | 407-H-J; 1996454 |
| 65 | BUTTON—Push | 1884522 | 1996455 |
| 65 | BUTTON—Push | 1910578 | 1996473 |
| 66 | CLIP—Terminal (For Ammeter Lead) | 200072 | 407-D-H-J; 1561-8; 74; 1118044 |
| 67 | CLIP—Terminal (For Battery Cable) | 200223 | 407-D-H-J; 1543; 61-8; 74; 1118044; 1996454-5 |
| 68 | CLIP—On Fuse Terminal | 200072 | 407-H; 1561-8; 1118044; 1996454-5 |
| — | CLIP—On Housing Terminal | 200011 | 1561-8; 74 |
| 69 | CLIP—On "SW" Terminal | 200006 | 407-H-J; 1561-8; 74; 1118044; 1996454-5 |
| 70 | CLIP—On Spring Terminal | 200011 | 407-J; 1574; 1118044; 1996455 |
| — | CONTACT PLATE—Assem. W/Contacts | 1869008 | 407-H-J; 1561; 68; 74; 1118044; 1996454-5 |
| — | CONTACT PLATE Assem. W/Studs & Contacts | 1866827 | 407-D; 1543 |
| — | CONTACT PLATE Assem. W/Studs & Contacts | 1869007 | 407-H-J; 1561; 68; 74; 1118044; 1996454-5 |
| — | CONTACT PLATE Assem. W/Studs & Contacts | 1910547 | 1996473-4 |
| — | CONTACT PLATE Assem. W/Studs & Contacts | 1885631 | 1996477; 93 |
| 71 | CIRCUIT BREAKER | 1910566 | 1996473-4 |
| — | COVER—Plunger Return Spring Cover | 1866842 | 1543; 61 |
| 72 | COVER—Plunger Return Spring | 1946007 | 1568; 74; 1118044; 1996474-7; 93 |
| 72 | COVER—Plunger Return Spring | 1866840 | 1543; 61 |
| 73 | CUP—Spring Retainer | 1905615 | 1543; 61-8; 74; 1118044; 1996474-7; 93 |
| 74 | FUSE—(50 amp.) | 187944 | 407-H; 1561-8; 1996454 |
| 75 | GASKET—Cover | 1869034 | 407-H-J; 1561-8; 74; 1118044; 1996454-5 |
| 75 | GASKET—Cover | 1942973 | 1996473-4-7; 93 |
| 76 | GASKET—Housing | †1910583 | 1996474-7; 93 |
| 77 | GASKET—Plunger Cover | 1948008 | 1561-8; 74; 1118044; 1996474-7; 93 |
| 78 | GASKET—Sleeve Retainer | 1879686 | 407-H-J; 1996454-5 |
| 79 | INSULATOR—Under Contact Plate | 1855488 | 407-D-H-J; 1543; 61-8; 74; 1118044; 1996454-5 |
| 79 | INSULATOR—Under Contact Plate | 1910550 | 1996473-4-7; 93 |
| 80 | INSULATOR—Under Cover | 1864892 | 407-D; 1543 |
| 80 | INSULATOR—Under Cover | 1869035 | 407-H-J; 1561-8; 74; 1118044; 1996454-5 |
| 80 | INSULATOR—Under Cover | 1910573 | 1996473-4-7; 93 |
| — | INSULATOR—Terminal (Bent Strip) | 1905466 | 1561 |
| 81 | INSULATOR—Terminal | *1906031 | 1996473-4-7; 93 |
| 82 | PIN—Cotter—Contact Disc. Nut | 119981 | 407-D-H-J; 1543; 61-8; 74; 1118044; 1996454-5; 73-4-7; 93 |
| — | PIN—Cotter—Coupling Nut | 103373 | 1996455 |
| 83 | PIN—Cotter—Plunger Spring Retainer | 108630 | 1543; 61-8; 74; 1118044; 1996493 |
| 83 | PIN—Cotter—Plunger Spring Retainer | 1905616 | 1996474-7 |

†For later prod. waterproof models, use for Illus. 62 #1942968; Illus. 64 #1947674; Illus. 76 #1942970.
*Later units 1996473-4 use 1944836 Insulator which combines Illustrations 61 Bushing and 81 Insulator.

# MINOR PARTS SECTION

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | MISCELLANEOUS (Continued) | | |
| 84 | PIN—Hinge | 1869028 | 407-H-J; 1561-8; 74; 1118044; 1996454-5; 73-4-7; 93 |
| 85 | PIN—Release Arm | 1855498 | 407-D-H-J; 1996454-5; 73 |
| — | PLATE—Contact Plate Support | 1864871 | 407-D-H-J; 1543; 61-8; 74; 1118044; 1996454-5 |
| — | SHAFT—Assem. (W/push button) | 1879682 | 407-D |
| | SHAFT—Assem. (W/push button) | 1869005 | 407-H-J; 1996473 |
| — | SHAFT—Assem. (W/push button) | 1880500 | 1996454 |
| — | SHAFT—Assem. (W/push button) | 1884520 | 1996455 |
| 86 | SLEEVE | 1856800 | 407-D-H-J; 1996454-5; 73 |
| 87 | SPRING—Contact Blade | 1869029 | 407-H-J; 1561-8; 74; 1118044; 1996454-5; 73-4-7; 93 |
| 88 | SPRING—Contact Disc Cushion | 1847240 | 407-D-H-J; 1996454-5; 73 |
| 88 | SPRING—Contact Disc Cushion | 1872510 | 1543; 61-8; 74; 1118044; 1996374-7; 63 |
| 89 | SPRING—Push Button | 1855496 | 407-D-H-J; 1996455; 73 |
| 89 | SPRING—Push Button | 1880502 | 1996454 |
| 90 | SPRING—Release Arm | 1855499 | 407-D-H-J; 1996454-5; 73 |
| — | STRAP—Ground | 1869042 | 407-H; 1561-8; 1996454 |
| 91 | STUD—Terminal (¼-20) | 1866733 | 1543; 61 |
| 91 | STUD—Terminal (¼-20 Sq. Shoulder) | †*1903161 | 1568; 74; 1118044; 1996474-7; 93 |
| 92 | STUD—Terminal ("A" Pos. & "B" Neg.) | 1885635 | 1996477 |
| 92 | STUD—(& Lead) | 1910563 | 1996473-4 |
| 93 | TERMINAL—Assem. (Fuse) | 1872384 | 407-H; 1561-8; 1996454 |
| 94 | TERMINAL—Assem. (Spring) | 1874750 | 407-J; 1574; 1118044; 1996455 |

*When replacing terminal without square shoulder by 1903161, also supply one-1902314 insulater & one-1902315 plain washer.
†For later prod. waterproof models use #1942972 Stud—Terminal.

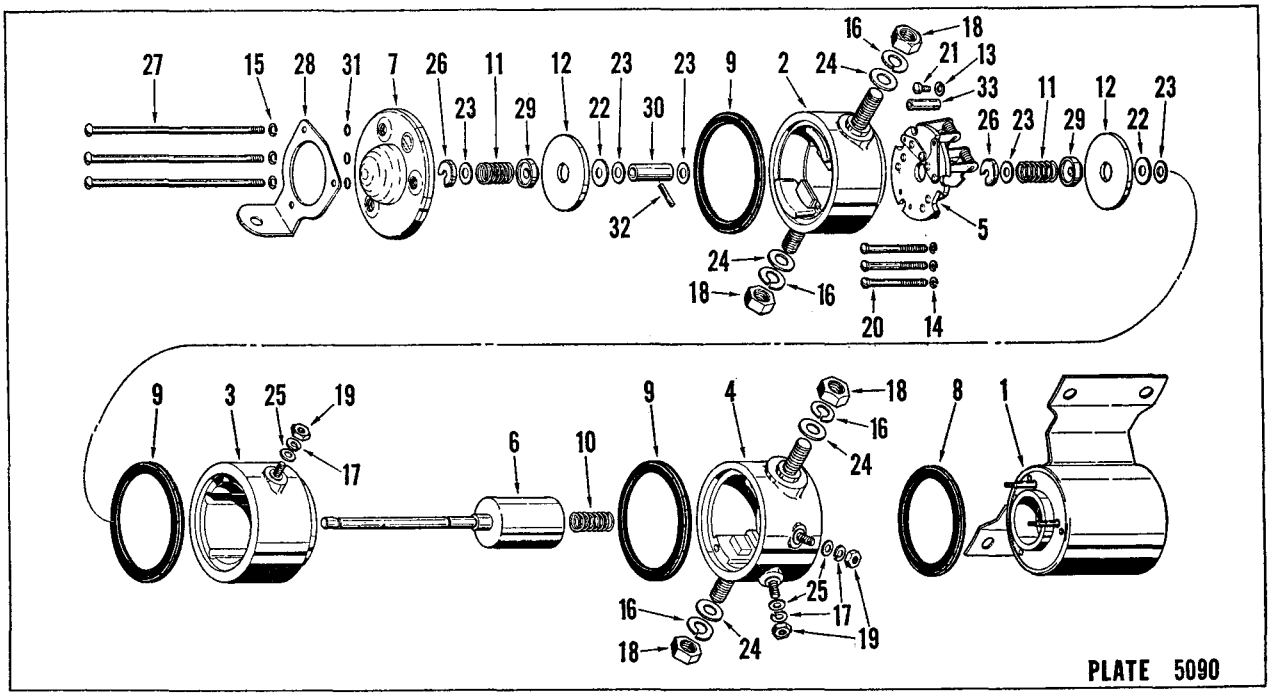


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

| Model No. | Case & Coil | Cap Assem. Cover End | Cap Assem. Center | Cap Assem. Coil End | Contact Plate Assem. | Plunger | Cover — End | Gasket Cap & Coil Case | Gasket — Cap | Spring — Plunger | Spring — Contact | Disc — Contact |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
| **1115509** | 1949721 | 1949733 | | 1949731 | 1949715 | 1858555 | 1931355 | 1904966 | 1904967 | 1953213 | 1948867 | 1907617 |
| **1119844** | " | 1949730 | 1949732 | " | 1949673 | 1949670 | " | " | " | " | " | " |
| **1119845** | " | 1949733 | | " | 1949715 | 1958555 | " | " | " | " | " | " |
| **1119899** | " | " | | " | " | " | " | " | " | " | " | " |

# MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | LOCK WASHERS | | |
| 13 | Lock Washer—Contact Terminal Screw | 456413 | 1115509; 1119844-5; 99 |
| 14 | Lock Washer—Contact Assem. Attaching Screw | 456413 | 1115509; 1119844-5; 99 |
| 15 | Lock Washer—Thru Bolt | 453844 | 1115509; 1119844; 99 |
| 16 | Lock Washer—⅜-16 Terminals | 9421425 | 1115509; 1119844-5; 99 |
| 17 | Lock Washer—#10-32 Terminals | 453435 | 1115509; 1119844-5 |
| | NUTS | | |
| 18 | Nut—⅜-16 Terminals | 134566 | 1115509; 1119844-5; 99 |
| 19 | Nut—#10-32 Terminals | 453284 | 1115509; 1119844-5; 99 |
| | SCREWS | | |
| 20 | Screw—Contact Assembly Attaching | 1949656 | 1115509; 1119844-5; 99 |
| 21 | Screw—Contact Terminal | 454458 | 1115509; 1119844-5; 99 |
| | WASHERS | | |
| 22 | Washer—Insul.—Contact Disc | 1954211 | 1115509; 1119844-5 |
| 23 | Washer—Plain—Contact Disc Spring Spacer | 1849235 | 1115509; 1119844-5; 99 |
| 24 | Washer—Plain—⅜-16 Terminals | 1914535 | 1115509; 1119844-5; 99 |
| 25 | Washer—Plain—#10-32 Terminals | 807295 | 1115509; 1119844-5; 99 |
| 26 | Washer—Slotted—Contact Disc Spring Retaining | 1913043 | 1115509; 1119844-5; 99 |
| | MISCELLANEOUS | | |
| 27 | BOLT—Thru | 1949655 | 1119844 |
| 27 | BOLT—Thru | 1949674 | 1115509; 1119845; 99 |
| 28 | BRACKET—Cover End | 1949717 | 1119844 |
| 29 | BUSHING—Contact Disc Spring Retaining | 1915669 | 1115509; 1119844-5; 99 |
| 30 | COLLAR—Spacing—Contact Disc | 1954619 | 1119844 |
| 30 | COLLAR—Spacing—Contact Disc | 1956774 | 1115509; 1119845; 99 |
| 31 | "O" RING—Thru Bolt Seal | 1918621 | 1115509; 1119844-5; 99 |
| 32 | PIN—Contact Disc Space Collar Attaching | 455478 | 1115509; 1119844-5; 99 |
| — | RING—Snap—Contact Disc | 1945411 | 1119844-5 |
| 33 | SPACER—Contact Assembly Attach. Screw | 1953045 | 1119844 |

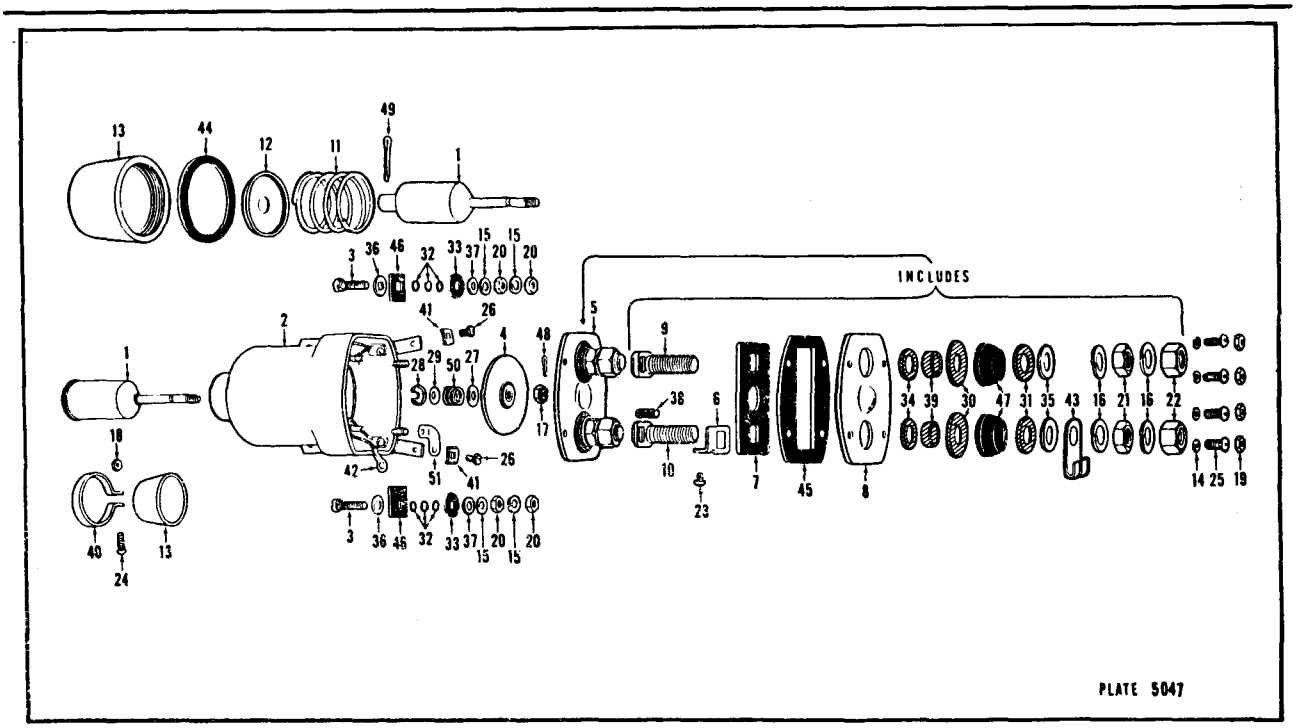


**Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.**

| Model No. | Plunger | Case and Coil | Stud — Terminal | Disc — Contact | Plate Assem. (Term.) | Support — Lead | Insulator | Plate — Terminal | Stud — "Bat" Terminal | Stud — "Motor" Terminal | Spring — Return | Cup — Retainer | Boot or Cover |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 |
| 1524 | 1857784 | 1857782 | ×1903161 | 1855481 | 1906493 | 1906051 | 1931673 | 1906494 | 1855489 | 1906495 | ..... | ..... | 1853346 |
| 1531 | " | " | 810459 | " | 1857789 | ..... | " | " | " | 1855489 | ..... | ..... | " |
| 1536 | " | 1872544 | ×1903161 | " | " | ..... | " | " | " | " | ..... | ..... | " |
| 1552 | " | 1867858 | " | " | 1906493 | 1906051 | " | " | " | 1906495 | ..... | ..... | " |
| 1554 | 1866838 | 1868156 | " | " | 1855486 | ..... | " | 1855487 | " | 1855489 | 1866841 | 1857386 | 1866840 |
| 1562 | 1857784 | 1872546 | " | " | 1857789 | ..... | " | 1906494 | " | " | ..... | ..... | 1853346 |
| 1118027 | 1878584 | 1857399 | " | " | 1906493 | 1906051 | " | " | " | 1906495 | ..... | ..... | " |
| 1118028 | 1866838 | 1879788 | " | " | 1855486 | ..... | " | 1901268 | " | 1855489 | 1886155 | 1905615 | 1946007 |
| 1118032 | 1857784 | 1880447 | " | " | 1880449 | ..... | " | 1906494 | " | " | ..... | ..... | 1853346 |
| 1118033 | " | 1880636 | " | " | 1857789 | ..... | " | " | " | " | ..... | ..... | " |
| 1118034 | 1866838 | 1880653 | " | " | 1855486 | ..... | " | 1901268 | " | " | 1866841 | 1905615 | 1946007 |
| 1118041 | 1857784 | 1883526 | " | " | 1857789 | ..... | " | 1906494 | " | " | ..... | ..... | 1853346 |
| 1118042 | " | 1883524 | " | " | 1906493 | 1906051 | " | " | " | 1906495 | ..... | ..... | " |
| 1118043 | 1939262 | 1883897 | " | " | " | " | " | " | " | " | ..... | ..... | " |
| 1118047 | " | " | " | " | " | " | " | " | " | " | ..... | ..... | ..... |
| 1118048 | " | 1884166 | " | " | " | " | " | " | " | " | ..... | ..... | ..... |
| 1118049 | " | 1884193 | " | " | " | " | " | " | " | " | ..... | ..... | ..... |
| 1118050 | " | 1884198 | " | " | " | " | " | " | " | " | ..... | ..... | ..... |
| 1118051 | " | 1884172 | " | " | " | " | " | " | " | " | ..... | ..... | ..... |
| 1118053 | " | 1884171 | " | " | " | " | " | " | " | " | ..... | ..... | ..... |
| 1118056 | " | 1885111 | " | " | " | " | " | " | " | " | ..... | ..... | ..... |
| 1118068 | " | 1901207 | " | " | " | " | " | " | " | " | ..... | ..... | ..... |
| 1118069 | " | 1884193 | " | " | 1857789 | ..... | " | 1904287 | " | 1855489 | ..... | ..... | ..... |
| 1118072 | " | 1902662 | " | " | 1902610 | 1906051 | " | 1906494 | " | 1906495 | ..... | ..... | ..... |
| 1118073 | " | 1884198 | " | " | 1857789 | ..... | " | 1904287 | " | 1855489 | ..... | ..... | ..... |
| 1118076 | " | 1903810 | " | " | 1906493 | 1906051 | " | 1906494 | " | 1906495 | ..... | ..... | ..... |
| 1118085 | 1905611 | 1905608 | " | " | 1901272 | ..... | " | 1915614 | " | 1855489 | 1886155 | 1905615 | 1946007 |
| 1118090 | 1939262 | 1906489 | " | " | 1906493 | 1906051 | " | 1906494 | 1906047 | 1906049 | ..... | ..... | ..... |
| 1118092 | 1905611 | 1906701 | " | " | 1906704 | ..... | " | 1945409 | " | 1906047 | 1886155 | 1905615 | 1946007 |
| 1118093 | 1939262 | 1907372 | " | 1907714 | 1907367 | 1906051 | " | 1906494 | 1907371 | 1907370 | ..... | ..... | ..... |
| 1118094 | 1905611 | 1907602 | " | 1855481 | 1906704 | ..... | " | 1945409 | 1906047 | 1906049 | 1886155 | 1905615 | 1946007 |

×When replacing Stud without square shoulder by 1903161 (which has square shoulder) also supply 1—1902314 Insulator and 1—1902315 Plain Washer.

**Delco-Remy**
SERVICE PARTS CATALOG

# MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | **LOCK WASHERS** | | |
| 14 | Lock Washer—Terminal Plate Attaching | 453435 | 1524–31–36–52–54–62; 1118027–8; 32–3–4; 41–2–3–7–8–9; 50–1–3–6; 68–9; 72–3–6; 85; 90–2–3–4 |
| 15 | Lock Washer—Terminal Stud (¼) | 9421423 | 1524–31–36–52–54–62; 1118027–8; 32–3–4; 41–2–3–7–8–9; 50–1–3–6; 68–9; 72–3–6; 85; 90–2–3–4 |
| 16 | Lock Washer—Terminal Stud (⅓) | 9421427 | 1524–31–36–52–54–62; 1118027–8; 32–3–4; 41–2–3–7–8–9; 50–1–3–6; 68–9; 72–3–6; 85; 90–2–3–4 |
| | **NUTS** | | |
| 17 | Nut—Contact Attaching | 427598 | 1524–36–54–62; 1118028; 32–3–4; 41–2–7–8; 53–6; 68–9; 73; 90–3 |
| 17 | Nut—Contact Attaching | 453688 | 1118085; 92–4 |
| 17 | Nut—Contact Attaching | 9421143 | 1552; 1118043–9; 50–1; 72–6 |
| 18 | Nut—Clamp Screw (Boot) | 120622 | 1524–31–36–52–62; 1118027; 32–3 |
| 19 | Nut—Terminal Plate Attaching | 453284 | 1118092–4 |
| 20 | Nut—Terminal (¼–20) | 134551 | 1524–31–36–52–54–62; 1118027–8; 32–3–4; 41–2–3–7–8–9; 50–1–3–6; 68–9; 72–3–6; 85; 90–2–3–4 |
| 21 | Nut—Terminal (⅓–13x$\frac{A}{16}$ thk.) | 120238 | 1524–31–36–52–54–62; 1118027–8; 32–3–4; 41–2–3–7–8–9; 50–1–3–6; 68–9; 72–3–6; 90–3 |
| 21 | Nut—Terminal (⅓–13x$\frac{A}{16}$ thk.) | 453287 | 1118085; 92–4 |
| 22 | Nut—Terminal (⅓–13x$\frac{7}{16}$ thk.) | 120378 | 1524–31–36–52–54–62; 1118027–8; 32–3–4; 41–2–3–7–8–9; 50–1–3–6; 68–9; 72–3–6; 90–3 |
| 22 | Nut—Terminal (⅓–13x$\frac{7}{16}$ thk.) | 453285 | 1118085; 92–4 |
| | **SCREWS** | | |
| 23 | Screw—Coil Lead Attaching | 1840633 | 1524–52; 1118027; 42–3–7–8–9; 50–1–3–6; 68; 72–6; 90–3 |
| 24 | Screw—Clamp (Boot) | 9417096 | 1524–31–36–52–54–62; 1118027; 32; 41–2 |
| 25 | Screw—Terminal Plate Attaching | 453464 | 1524–31–36–52–54–62; 1118027–8; 32–3–4; 41–2–3–7–8–9; 50–1–3–6; 72–6; 85; 90–3 |
| 25 | Screw—Terminal Plate Attaching | 1949653 | 1118068–9; 73 |
| | **WASHERS** | | |
| 27 | Washer—Cupped—Contact Spring Retainer | 1913041 | 1524–31–36–52–54–62; 1118027–8; 32–3–4; 41–2–3–7–9; 50–1–3–6; 68–9; 72–3–6; 85; 90–2–3–4 |
| 28 | Washer—Cupped & Slotted—Contact Spring Retainer | 1913043 | 1524–31–36–52–62; 1118027; 32–3; 41–2–3–7–8–9; 50–1–3–6; 68–9; 72–3–6; 90–3 |
| 28 | Washer—Cupped & Slotted—Contact Spring Retainer | 1866833 | 1554; 1118028; 34 |
| 28 | Washer—Cupped & Slotted—Contact Spring Retainer | 1905614 | 1118085; 92–4 |
| 29 | Washer—Plain—Contact Spring | 1849235 | 1524–31–36–52–54–62; 1118027–8; 32–3–4; 41–2–3–7–8–9; 50–1–3–6; 68–9; 72–3–6; 85–90–2–3–4 |
| .... | Washer—Space (.150 thk.)—Contact Spring | 1905613 | 1554; 1118028; 34; 85; 92–4 |
| 30 | Washer—Insul.—Terminal (1$\frac{3}{16}$ O.D.) | 1903058 | 1524–31–36–52–62; 1118027; 32–3; 41–2–3–7–8–9; 50–1–3–6; 68–9; 72; 90–3 |
| 31 | Washer—Insul.—Terminal ($\frac{13}{16}$ O.D.) | 1922457 | 1524–31–36–52–54–62; 1118027–8; 32–3–4; 41–2–3–7; 50–3–6; 68–9; 72–3–6; 85; 90–3 |
| .... | Washer—Insul.—Terminal (¼ I.D.x 1$\frac{3}{8}$ O.D.) | 1931668 | 1118092–4 |
| 32 | Washer—Insul.—Terminal (¼x$\frac{5}{8}$ Bushing) | 810501 | 1524–31–36–52–54–62; 1118056; 69; 76; 91 |
| 32 | Washer—Insul.—Terminal ($\frac{11}{64}$x$\frac{3}{8}$ Bushing) | 1905124 | 1524–31–36–52–54–62; 1118027–8; 32–3–4; 41–2–3–7–8–9; 50–1–3–6; 68–9; 72–3–6; 85; 90–2–3–4 |
| 33 | Washer—Insul.—Terminal (¼ I.D.x ¾ O.D.) | 1941044 | 1524–36–52; 1118027–8; 32–3–4; 41–2–3–7–8–9; 50–1–3; 72–3–6; 90–2–3–4 |
| 34 | Washer—Insul.—Terminal (Bushing) | 1855490 | 1524–31–36–52–54–62; 1118027–8; 32–3–4; 41–2–3–8–9; 50–3–6; 68–9; 72–3–6; 85; 90–3 |
| 35 | Washer—Plain—Terminal (⅞ O.D.) | 811912 | 1524–31–36–52–54–62; 1118027–8; 32–3–4; 41–2–3–7–8–9; 50–1–3–6; 68–9; 72–3–6; 85 90–2–3–4 |
| 36 | Washer—Plain—Terminal (¼ sq. hole) | 1902315 | 1524–36–52–54–62; 1118027–8; 32–3–4; 53–6; 68–9; 72–3–6; 90–2–3–4 |

# MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | **WASHERS—Continued** | | |
| 37 | Washer—Plain—Terminal (¼x⅝) | 1905125 | 1524–31–36–52–54–62; 1118056; 68–9; 85; 90–2–3–4 |
| 37 | Washer—Plain—Terminal (¼x$\frac{5}{16}$) | 1951748 | 1118027–8; 32–3–4; 41–2–3–7–8–9; 50–1–3 72–3; 93 |
| .... | Washer—Plain—Terminal Plate Attaching Nut | 813767 | 1118092–4 |
| .... | Washer—Rubber—Terminal Plate Attaching Nut | 1904970 | 1118092–4 |
| .... | Washer—Felt—Plunger | 1881617 | 1118043–7–8–9; 50–1–3–6; 68–9; 72–3–6; 90–3 |
| .... | Washer—Felt Retainer—Plunger | 1881618 | 1118043–7–8–9; 50–1–3–6; 68–9; 72–3–6; 90–3 |
| | **MISCELLANEOUS** | | |
| 38 | BUSHING—Insul.—Terminal Lead | 1908336 | 1118032; 51 |
| 38 | BUSHING—Insul.—Terminal Lead | 1873293 | 1524–36–52–62 |
| 38 | BUSHING—Insul.—Terminal Lead | 1847219 | 1531; 1118027; 41–2–3–7–8–9; 50–3–6; 69 |
| 38 | BUSHING—Insul.—Terminal Lead | 1858681 | 1118068; 72–3–6 |
| 39 | BUSHING—Insul.—Terminal Stud | 1906046 | 1118092–4 |
| 40 | CLAMP—Boot | 1853344 | 1524–31–36–52–62; 1118027; 32; 41–2 |
| 42 | CLIP—Terminal (Coil Lead to Support) | 1860801 | 1525–36–52–62; 1118027; 42–3–8–9; 50–1–3–6; 68; 72–6; 90 |
| .... | CLIP—Terminal (Inside to Coil Lead) | 200011 | 1524–36–52; 1118041–2–3–7–8–9; 50–1–3–6; 78–9 |
| 43 | CLIP—Terminal (Large to Coil Lead) | 1903023 | 1524–36–52–54–62; 1118027; 33; 41–3–7–8–9; 50–1–3–6; 68–9; 73–6 |
| .... | CLIP—Terminal (Large) | 200074 | 1531; 1118056; 68–9; 72–3–6 |
| .... | CLIP—Terminal (For Battery Cable) | 200223 | 1554; 1118028; 34 |
| .... | CLIP—Terminal (Large) | 1905241 | 1118072 |
| .... | CLIP—Terminal (Double) | 1847418 | 1524–31–36–62; 1118027 |
| .... | CLIP—Terminal (Inside on "Gr." Terminal) | 1867859 | 1524–31–36–52–62; 1118027 |
| .... | COVER—Plunger Return Spring Case | 1866842 | 1554 |
| 44 | GASKET—Plunger Cover | 1948008 | 1118028; 34; 85 |
| 44 | GASKET—Plunger Cover | 1907864 | 1118092–4 |
| 45 | GASKET—Terminal Plate | 1906053 | 1118028; 34; 41–2–3–7; 85; 92–4 |
| 46 | INSULATOR—Terminal (¼ sq. hole) | 1929135 | 1524–36–52–54–62; 1118027–8; 32–3–4; 53–6; 68–9; 72–3–6; 85; 90–2–3–4 |
| 46 | INSULATOR—Terminal (Bent) | 1905466 | 1524–31–36; 52–54; 1118041–2–3–7–8–9; 50–1 |
| 47 | INSULATOR—Terminal Stud | 1906031 | 1118092–4 |
| 48 | PIN—Cotter—Contact Nut | 119981 | 1524–31–36–52–54–62; 1118028; 32–3–4; 41–2–3–7–8–9; 50–1–3–6; 68–9; 72–3–6; 85; 90–2–3–4 |
| 49 | PIN—Cotter—Plunger Spring | 108630 | 1554; 1118028; 34 |
| 49 | PIN—Cotter—Plunger Spring | 1905616 | 1118085; 82–4 |
| 50 | SPRING—Contact Cushion | 1869505 | 1524–31–36–52–62; 1118027; 32–3; 41–2–3–7–8–9; 50–1–3–6; 68–9; 72–3–6; 90–3 |
| 50 | SPRING—Contact Cushion | 1872510 | 1554; 1118028; 34; 85; 92–4 |

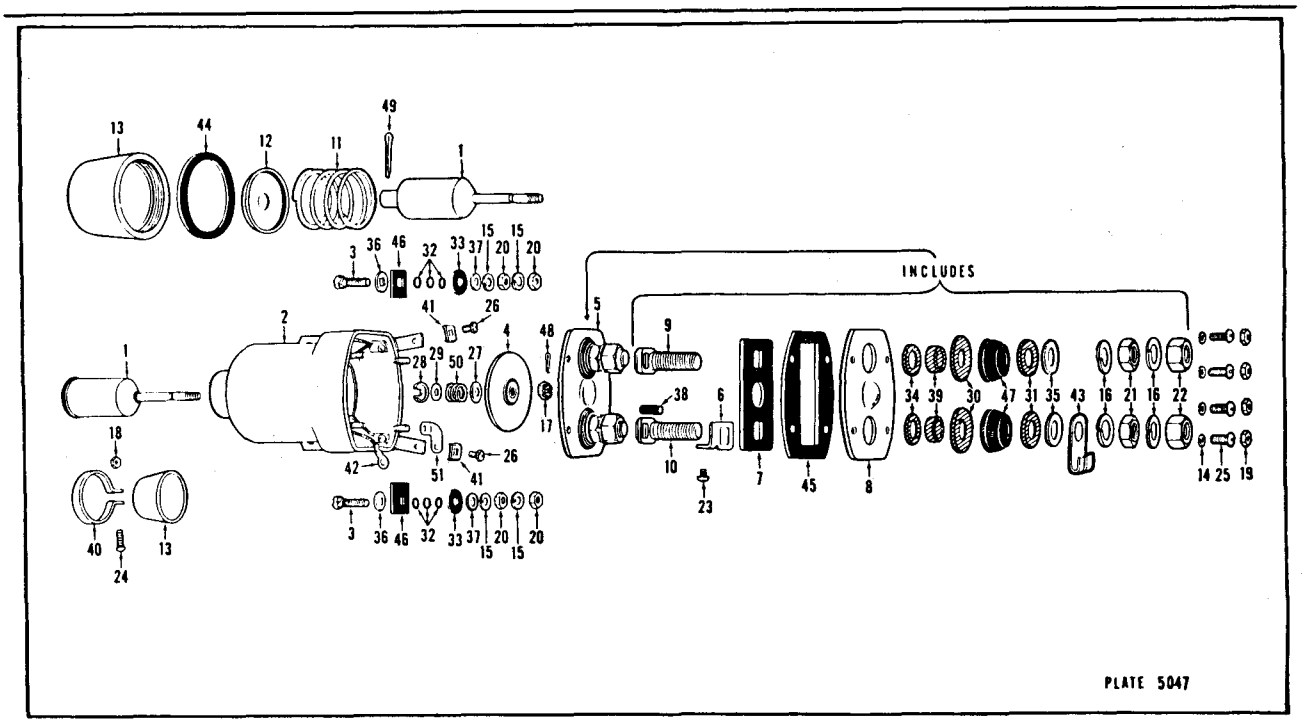


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

| Model No. | Plunger | Case and Coil | Stud — Terminal | Disc — Contact | Plate Assem. (Term.) | Support — Lead | Insulator | Plate — Terminal | Stud — "Bat" Terminal | Stud — "Motor" Terminal | Spring — Return | Cup — Retainer | Boot or Cover |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 |
| 1115512 | × | 1965638 | | 1967335 | 1967330 | 1906051 | 1931673 | 1945409 | 1906047 | 1906049 | | | |
| 1115515 | × | 1967338 | | " | " | " | " | " | " | " | | | |
| 1115516 | × | 1967546 | | 1954861 | 1961463 | 1915716 | " | 1948659 | 1961464 | 1961465 | | | |
| 1115517 | × | 1954510 | | " | 1953242 | " | " | " | 1953244 | " | | | |
| 1118095 | 1939262 | 1939233 | | 1960545 | 1907367 | 1906051 | " | 1906494 | 1907371 | 1907370 | | | |
| 1118096 | " | 1907684 | | 1855481 | 1906493 | " | " | " | 1855489 | 1906495 | | | |
| 1118098 | 1905611 | 1909014 | 1903161 | " | 1906704 | | " | 1945409 | 1906047 | 1906047 | 1886155 | 1905615 | 1946007 |
| 1118099 | 1939262 | 1909156 | | " | 1906493 | 1906051 | " | 1906494 | 1855489 | 1906495 | | | |
| 1118171 | " | 1909823 | | 1960545 | 1907367 | " | " | " | 1907371 | 1907370 | | | |
| 1118172 | " | 1921699 | | 1855481 | 1906493 | " | " | " | 1855489 | 1906495 | | | |
| 1118173 | " | 1958464 | | " | " | " | " | " | " | " | | | |
| 1118174 | " | 1910382 | | 1960545 | 1907367 | " | " | " | 1907371 | 1907370 | | | |
| 1118175 | " | 1910893 | | 1855481 | 1906493 | " | " | " | 1855489 | 1906495 | | | |
| 1118176 | 1939262 | 1885407 | 1903161 | " | 1945400 | " | " | 1945409 | 1906047 | 1906049 | | | |
| 1118177 | " | 1939493 | " | " | " | " | " | " | " | " | | | |
| 1118181 | 1905611 | 1916328 | " | 1933114 | 1906704 | | " | " | " | 1906047 | 1886155 | 1905615 | 1946007 |
| 1118182 | " | 1906701 | " | " | " | | " | " | " | " | " | " | " |
| 1119803 | 1939262 | 1958464 | | 1855481 | 1906493 | 1906051 | " | 1906494 | 1855489 | 1906495 | | | |
| 1119804 | " | 1921699 | | " | " | " | " | " | " | " | | | |
| 1119805 | " | 1969192 | | 1855481 | 1907367 | " | " | " | 1907371 | 1907370 | | | |
| 1119806 | " | " | | 1960545 | " | " | " | " | " | " | | | |
| 1119812 | " | 1909823 | | " | " | " | " | " | " | " | | | |
| 1119813 | " | 1958464 | | 1855481 | 1906493 | " | " | " | 1855489 | 1906495 | | | |
| 1119832 | × | 1969194 | | 1954861 | 1945400 | " | " | 1945409 | 1906047 | 1906049 | | | |
| 1119834 | 1939262 | 1945764 | | 1855481 | 1906493 | " | " | 1906494 | 1855489 | 1906495 | | | |
| 1119835 | × | 1969198 | | 1954861 | 1958218 | " | " | 1945409 | 1958219 | 1946003 | | | |
| 1119836 | × | 1945926 | | " | 1945400 | " | " | " | 1906047 | 1906049 | | | |
| 1119848 | × | 1969196 | | " | 1953242 | 1915716 | " | 1948659 | 1953244 | " | | | |
| 1119850 | 1905611 | 1950211 | 1942972 | 1855481 | 1906704 | | " | 1945409 | " | 1906047 | 1886155 | | 1933989 |
| 1119851 | 1939262 | 1969192 | | " | 1958218 | 1906051 | " | " | 1958219 | 1946003 | | | |
| 1119853 | × | 1969198 | | 1954861 | " | " | " | " | " | " | | | |

(Continued on Page 2)

×Plunger (& Link) is a part of Cranking Motor on which Solenoid is mounted.

**Delco-Remy**
SERVICE PARTS CATALOG

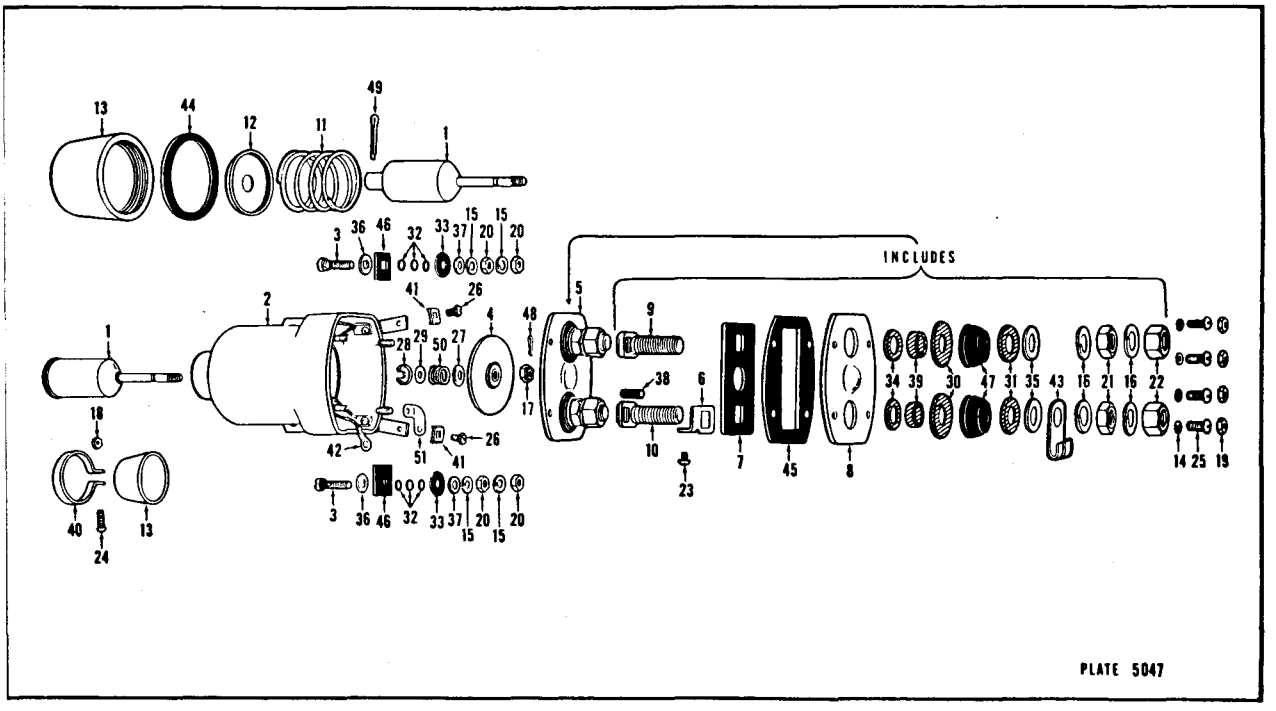


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

| Model No. | Plunger | Case and Coil | Stud — Terminal | Disc — Contact | Plate Assem. (Term.) | Support — Lead | Insulator | Plate — Terminal | Stud — "Bat" Terminal | Stud — "Motor" Terminal | Spring — Return | Cup — Retainer | Boot or Cover |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 |
| 1119861 | × | 1952999 | ..... | 1954861 | 1945400 | 1906051 | 1931673 | 1945409 | 1906047 | 1906049 | ..... | ..... | ..... |
| 1119862 | × | 1952956 | ..... | " | 1958218 | " | " | " | 1958219 | 1946003 | ..... | ..... | ..... |
| 1119863 | × | 1969194 | ..... | " | 1945400 | " | " | " | 1906047 | 1906049 | ..... | ..... | ..... |
| 1119878 | × | 1954510 | ..... | 1954861 | 1945400 | 1906051 | 1931673 | 1945409 | 1906047 | 1906049 | ..... | ..... | ..... |
| 1119879 | × | 1969198 | ..... | " | 1958218 | " | " | " | 1958219 | 1946003 | ..... | ..... | ..... |
| 1119887 | × | 1945926 | ..... | " | 1945400 | " | " | " | 1906047 | 1906049 | ..... | ..... | ..... |
| 1119894 | 1939262 | 1958464 | ..... | 1855481 | " | " | " | " | " | " | ..... | ..... | ..... |
| 1119895 | × | 1952956 | ..... | 1954861 | 1958218 | " | " | " | 1958219 | 1946003 | ..... | ..... | ..... |
| 1119937 | 1939262 | 1938204 | 1903161 | 1855481 | 1945400 | " | " | " | 1906047 | 1906049 | 1917676 | 1917677 | ..... |
| 1119939 | 1939262 | 1938316 | ..... | 1855481 | 1906493 | 1906051 | 1855488 | 1906494 | 1855489 | 1906495 | ..... | ..... | ..... |
| 1119948 | " | 1939233 | ..... | " | 1907367 | " | " | " | 1907371 | 1907370 | ..... | ..... | ..... |
| 1119949 | " | 1939232 | ..... | 1855481 | 1906493 | " | " | " | 1855489 | 1906495 | ..... | ..... | ..... |
| 1119950 | " | 1922233 | ..... | 1960545 | 1907367 | " | " | " | 1907371 | 1907370 | ..... | ..... | ..... |
| 1119951 | " | 1921287 | ..... | 1855481 | 1906493 | " | " | " | 1855489 | 1906495 | ..... | ..... | ..... |
| 1119960 | " | 1939491 | 1903161 | " | 1945400 | " | " | 1945409 | 1906047 | 1906049 | ..... | ..... | ..... |
| 1119961 | " | 1939493 | " | " | " | " | " | " | " | " | ..... | ..... | ..... |
| ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... |
| ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... |
| ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... |

×Plunger (& Link) is a part of Cranking Motor on which Solenoid is mounted.

# MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | **LOCK WASHERS** | | |
| 14 | Lock Washer—Terminal Plate Attaching | 453435 | 1118095-6-8-9; 1118171-2-3-4-5-6-7; 81-2 1119803-4-5-6; 12-13; 34; 50; 937-9; 48-9; 50-1; 60-1 |
| 15 | Lock Washer—Terminal Stud (¼) | 9421423 | 1118098; 1118176; 81-2; 1119850; 1119937; 60-1 |
| 16 | Lock Washer—Terminal Stud (½) | 9421427 | 1115512-15-16-17; 1118095-6-8-9; 1118171-2-3-4-5; 1119803-4-5-6; 12-13; 32-4-5-6; 48- 50-1-3; 61-2-3; 78-9; 87; 937-9; 48-9; 50-1; 60-1; 94-5 |
| | **NUTS** | | |
| — | Nut—Adjusting Link Screw | 1913360 | 1119937 |
| 17 | Nut—Contact Attaching | * 453688 | 1118095-6-9; 1118171-2-3-4-5-6-7 |
| 17 | Nut—Contact Attaching | 9421143 | 1119806; 12-13; 34; 50; 950-1 |
| 17 | Nut—Contact Attaching | *1887677 | 1118098; 1118181-2 |
| 17 | Nut—Contact Attaching | 9421143 | 1119803-4-5; 51; 94; 937; 48-9; 60-1 |
| 19 | Nut—Terminal Plate Attaching | 453284 | 1118095-6-8-9; 81-2 |
| 19 | Nut—Terminal Plate Attaching | ×453433 | 1118171-2-3-4-5-6-7; 1119803-4-5-6; 12-13; 34; 50; 937-9; 48-9; 50-1; 60-1 |
| 19 | Nut (& Washer)—Terminal Plate Attaching | ×1948656 | 1115512-15-16; 1119803-4-5; 1119832-5-6; 48; 51-3; 61-2-3; 78-9; 87; 94-5; 937; 939; 48-9; 60-1 |
| 20 | Nut—Terminal (¼) | 134551 | 1118171-2-4-5-6-7; 82; 1119803-4-5-6; 50; 937; 60-1 |
| 21 | Nut—Terminal (½-13x$\frac{A}{16}$ thk.) | 120238 | 1118095-6-9; 1118171-2-3-4-5; 1119803-4-5-6; 12-13; 34; 50; 939; 48-9; 50-1 |
| 21 | Nut—Terminal (½-13x$\frac{A}{16}$ thk.) | 453287 | 1118098; 1118176-7; 81-2; 1119832-5-6; 51-3; 61-2-3; 78-9; 87; 937; 60-1; 94-5 |
| 21 | Nut—Terminal (½-13x$\frac{5}{16}$ thk.) | 9414418 | 1115512-15-16-17; 1119848 |
| 22 | Nut—Terminal (½-13x$\frac{7}{16}$ thk.) | 120378 | 1118095-6-9; 1118171-2-3-4-5; 1119803-4-5-6; 12-13; 34; 50; 939; 48-9; 50-1 |
| 22 | Nut—Terminal (½-13x$\frac{7}{16}$ thk.) | 453285 | 1118098; 176-7; 81-2; 1119832-5-6; 51-3; 61-2-3; 78-9; 87; 937; 60-1; 94-5 |
| 22 | Nut—Terminal (½-13x$\frac{7}{16}$ thk.) | 9413509 | 1115512-15-16-17; 1119848 |
| | **SCREWS** | | |
| 23 | Screw—Coil—Lead Attaching | 1840633 | 1115512-15-16-17; 1118095-6-9; 171-2-3-4-6-7; 1119803-4-5-6; 12-13; 32-4-5-6; 48; 51-3; 61-3; 78-9; 87; 937-9; 48-9; 50-1; 60-1; 94 |
| 25 | Screw—(Sealing) Term. Plate Attaching | 1971106 | 1115512-15-17; 1119803-4-5; 32-4-6; 50-1; 62; 78-9; 94-5; 1119937-9; 48-9; 60-1 |
| 26 | Screw—Terminal | 1915717 | 1115512-15-16-17; 1118095-6-9; 171-2-3-4-5; 1119803-4-5-6; 12-13; 32-4-5-6; 48; 51-3; 61-2-3; 78-9; 87; 939; 48-9; 50-1; 94-5 |
| | **WASHERS** | | |
| 27 | Washer—Cupped—Contact Spring Retainer | 1913041 | 1118095-6-8-9; 1118171-2-3-4-5-6-7; 81-2; 1119803-4-5-6; 12-13; 34; 51; 937-9; 48-9; 50-1; 60-1; 94 |
| 27 | Washer—Cupped—Contact Spring Retainer | 1847239 | 1119850 |
| 28 | Washer—Cupped & Slotted—Contact Spring Retainer | 1913043 | 1118095-6-9; 1118171-2-3-4-5-6-7; 1119803-4-5-6; 12-13; 34; 51; 937-9; 48-9; 50-1; 60-1; 94 |
| 28 | Washer—Cupped & Slotted—Contact Spring Retainer | 1905614 | 1118098; 1118181-2; 1119850 |
| — | Washer—Felt—Plunger Seal | 809961 | 1118171-2-3-4-5-6-7; 1119803-4-5; 12-13; 1119939; 48-9; 50-1; 60-1 |
| — | Washer—Plain—Plunger Seal Retainer | 1881618 | 1118171-2-3-4-5-6-7; 1119803-4-5; 12-13; 1119939; 48-9; 50-1; 60-1 |
| 29 | Washer—Plain—Contact Spring | 1849235 | 1118095-6-9; 1118171-2-3-4-5-6-7; 1119803-4-5-6; 12-13; 34; 50-1; 937-9; 48-9; 50-1; 60-1; 94 |
| 29 | Washer—Plain—Contact Spring | 1849235 | 1118098; 1118181-2 |
| — | Washer—Space (.150 thk.)—Contact Spring | 1905613 | 1118098; 1118181-2; 1119850 |
| 30 | Washer—Insul.—Terminal (1$\frac{A}{16}$ O.D.) | 1903058 | 1118095-6-9; 1118171-2-3-4-5; 1119803-4-5-6; 12-13; 34; 939; 48-9; 50-1 |
| 31 | Washer—Insul.—Terminal ($\frac{11}{16}$ O.D.) | 1922457 | 1118095-6-9; 1118171-2-3-4-5; 1119803-4-5-6; 12-13; 34; 939; 48-9; 50-1 |
| 32 | Washer—Insul.—Terminal ($\frac{11}{16}$x⅜ Bushing) | 1905124 | 1118098; 1118176-7; 81-2; 1119850; 1119937; 60-1 |

*Switches with self-locking nut use 9421143
×Later units with terminal plate attached by screws require Part No. 1940556.

**Parts not listed in this Catalog will not be sold separately.**

# MINOR PARTS SECTION

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | **WASHERS—Continued** | | |
| 33 | Washer—Insul.—Terminal (¼ I.D.x ¾ O.D.) | 1941044 | 1118098; 1118176-7; 81-2; 1119850; 1119937; 60-1 |
| — | Washer—Insul.—Terminal (¼ I.D.x 1⅛ O.D.) | 1931668 | 1118098; 1118181-2; 1119850; 1119937; 60-1 |
| 34 | Washer—Insul.—Terminal (Bushing) | 1855490 | 1118095-6-9; 1118171-2-3-4-5; 1119803-4-5-6; 12-13; 34; 939; 48-9; 50-1 |
| — | Washer—Plain—Adjusting Link Screw | 1918691 | 1119937 |
| 35 | Washer—Plain—Terminal (⅞ O.D.) | 811912 | 1115512-15; 1118095-6-8-9; 1118171-2-3-4-5-6-7; 81-2; 1119803-4-5-6; 12-13; 32-4-5-6-9; 48-9; 50-1-3; 61-2-3; 78-9; 87; 937; 60-1; 94-5 |
| 35 | Washer—Plain—Terminal (⅞ O.D.) | 1914647 | 1115516-17; 1119848 |
| 36 | Washer—Plain—Terminal (¼ sq. hole) | 1902315 | 1118098; 1118176-7; 1119850; 1119937; 60-1 |
| 37 | Washer—Plain—Terminal (¼x⅝) | 1905125 | 1118098; 1118176-7; 81-2; 1119850; 1119937; 60-1 |
| — | Washer—Plain—Terminal Plate Attaching Nut | 1914741 | 1118176-7; 81-2; 1119937; 60-1 |
| — | Washer—Plain—Terminal Plate Attaching Nut | 813767 | 1118098 |
| — | Washer—Plain—Terminal Plate Attaching Nut | 807295 | 1119850 |
| — | Washer—Rubber—Terminal Plate Attaching Nut | 1904970 | 1118098; 1118176-7; 81-2; 1119850 1119937; 60-1 |
| — | Washer—Nylon—Terminal Plate Attaching Nut | 1923935 | 1118095-6-9; 171-2-3-4-5; 1119803-4-5; 12-13; 34; 939; 48-9; 50-1 |
| | **MISCELLANEOUS** | | |
| *39 | BUSHING—Insul.—Terminal Stud | 1906046 | 1118098; 1118176-7; 81-2; 1119937; 60-1 |
| 39 | BUSHING—Insul.—Terminal Stud | 1944836 | 1115512-15; 1119832-5-6; 51-3; 61-2-3; 78-9; 87; 94-5 |
| 39 | BUSHING—Insul.—Terminal Stud | 1942969 | 1115512-15-16-17; 1118181-2; 1119832-5-6; 48; 50; 61-2-3; 78-9; 87; 94-5 |
| 41 | CLAMP—Terminal | 1878503 | 1118095-6-9; 171-2-3-4-5; 1119803-4-5-6; 12-13; 32-4-5-6; 51-3; 61-2-3; 78-9; 87; 939; 48-9; 60-1; 94-5 |
| 41 | CLAMP—Terminal | 1915718 | 1115512-15-16-17; 1119848 |
| 42 | CLIP—Terminal (Coil Lead to Support) | 1860801 | 1118095-6-9; 1118171-2-3-4-5-6-7; 81 |
| 44 | GASKET—Plunger Cover | 1907864 | 1118098 |
| 44 | GASKET—Plunger Cover | 1948008 | 1118181-2 |
| 45 | GASKET—Terminal Plate | 1906053 | 1115512-15-16-17; 1118095-6-8-9; 1118171-2-3-4-5-6-7; 81-2; 1119803-4-5; 12-13; 32-4-5-6; 50-1-3; 61-2-3; 78-9; 87; 937-9; 48-9; 50-1; 94-5 |
| 45 | GASKET—Terminal Plate | 1950111 | 1119848 |
| 46 | INSULATOR—Terminal (¼ sq. hole x 1⅛ x 1⅛) | 1929135 | 1118098; 1118176-7; 81-2; 1119850; 1119937; 60-1 |
| *47 | INSULATOR—Terminal Stud | 1906031 | 1118098; 1118176-7; 1119937; 60-1 |
| 47 | INSULATOR—Terminal Stud | 1944841 | 1115516-17; 1118181-2; 1119848; 50 |
| — | LINK & Adjusting Screw) | 1938566 | 1119937 |
| 48 | PIN—Cotter—Contact Nut | 119981 | 1118095-6-8-9; 1118171-2-3-4-5-6-7; 81-2; 1119803-4-5-6; 12-13; 34; 50; 937-9; 48-9; 50-1; 60-1; 94 |
| 49 | PIN—Cotter—Plunger Spring | 1905616 | 1118098; 1118181-2 |
| 49 | PIN—Cotter—Plunger Return Spring | 453691 | 1119850 |
| — | PIN—Return Spring Retainer | 1917678 | 1119937 |
| 50 | SPRING—Contact Cushion | 1869505 | 1118095-6; 1118171-2-3-4-5-6-7; 1119803-4-5-6; 12-13; 34; 50-1; 937-9; 48-9; 50-1; 60-1; 94 |
| 50 | SPRING—Contact Cushion | 1872510 | 1118098; 1118181-2; 1119850 |
| — | SPRING—Plunger Return | 1914477 | 1119803-4-5; 937-9; 48-9; 50-1; 60-1 |
| — | SPRING—Plunger Return—Retainer | 1905615 | 1119850 |
| — | SPRING—Contact Return | 1945402 | 1115512-15-17; 1119832-5-6; 53; 61-2-3; 78-9; 87; 95 |
| — | SPRING—Contact return | 1948661 | 1115516; 1119848 |
| 51 | STRAP—Ground | 1907658 | 1115517; 1118095-6-9; 1119834; 78; 948-9 |
| 51 | STRAP—Ground | 1909829 | 1118171-2-3-4-5; 1119803-4-5-6; 12-13; 32-5-6; 51-3; 61-2-3; 79; 87; 939; 50-1; 94-5 |
| 51 | STRAP—Ground | 1924970 | 1119848 |

*Later units 1119937; 60-1 have illustrations 39 & 47 combined under part #1944836 Insulator

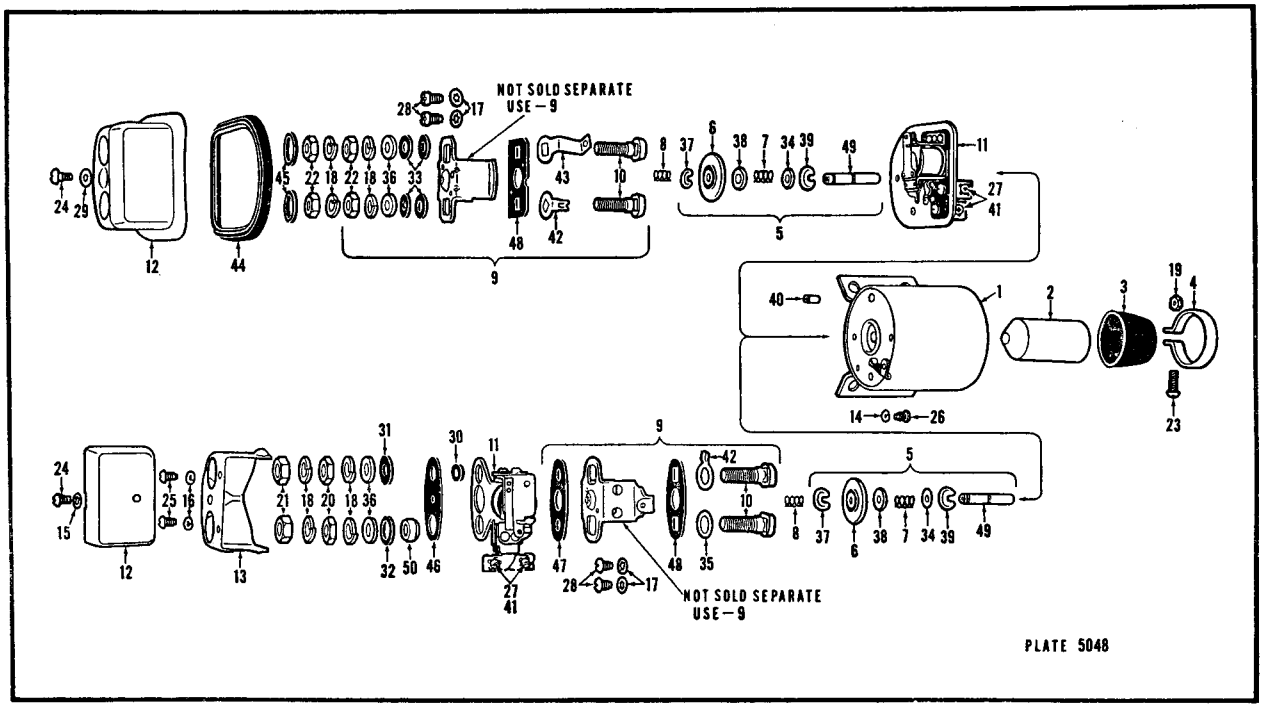


**Illustrations are of Typical Parts only. For parts not numbered, or illustrated see Minor Parts Section.**

| Model | Case & Coil | Plunger | Boot | Clamp — | Contact — Assem. | Disc — Contact | Spring — Contact Cushion | Spring — Contact Return | Bracket — Assem. (Term.) | Stud — Terminal | Relay — | Cover — Relay | Cover — Terminal |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 |
| **1512** | 1853354 | 1853347 | 1853346 | 1853344 | 1853325 | 1906626 | 1847240 | 1853342 | 1853365 | 1853333 | 1866167 | 1853343 | 1853345 |
| **1513** | 1853309 | " | " | " | " | " | " | " | 1853328 | " | 1854138 | " | " |
| **1514** | 1854156 | " | " | " | " | " | " | " | " | " | 1866750 | 1854151 | 1854152 |
| **1515** | 1854762 | " | " | " | " | " | " | " | " | " | " | " | " |
| **1516** | 1855900 | " | " | " | " | " | " | " | " | " | " | " | " |
| **1517** | 1856132 | " | " | " | " | " | " | " | 1853365 | " | " | " | " |
| **1518** | 1856357 | " | " | " | " | " | " | " | 1853328 | " | 1866167 | 1853343 | 1853345 |
| **1519** | 1856586 | " | " | " | " | " | " | " | " | " | 1854138 | " | " |
| **1521** | 1855590 | " | " | " | " | " | " | " | " | " | 1866750 | 1854151 | 1854152 |
| **1523** | 1857593 | " | " | " | " | " | " | " | " | " | 1854138 | 1853343 | 1853345 |
| **1526** | 1859754 | " | " | " | " | " | " | " | 1862702 | x | 1859752 | " | " |
| **1527** | " | " | " | " | " | " | " | " | " | x | " | " | " |
| **1530** | 1862757 | " | " | " | " | " | " | " | 1853365 | 1853333 | 1866819 | " | " |
| **1532** | 1853354 | " | " | " | " | " | " | " | " | " | 1866965 | " | " |
| **1537** | 1865629 | " | " | " | " | " | " | " | 1863641 | " | 1864542 | 1854151 | 1863646 |
| **1542** | 1853354 | " | " | " | " | " | " | " | 1853365 | " | 1866167 | 1853343 | 1853345 |
| **1545** | 1862757 | " | " | " | " | " | " | " | " | " | 1866819 | " | " |
| **1546** | 1855900 | " | " | " | " | " | " | " | 1853328 | " | 1866750 | 1854151 | 1854152 |
| **1547** | 1854762 | " | " | " | " | " | " | " | " | " | " | " | " |
| **1548** | 1853343 | " | " | " | " | " | " | " | 1853365 | " | " | 1853343 | 1853345 |
| **1556** | 1868322 | 1884191 | " | " | " | " | " | " | 1862702 | x | 1859752 | " | " |
| **1557** | 1868388 | " | " | " | " | " | " | " | 1868390 | x | 1868391 | 1854151 | 1854152 |
| **1559** | 1868722 | 1853347 | " | " | " | " | " | " | " | x | " | " | " |
| **1118002** | 1868388 | 1884191 | " | " | 1869002 | 1868720 | " | " | 1878046 | 1868921 | " | " | " |
| **1118019** | 1884784 | 1884731 | 1884732 | " | 1853325 | 1906626 | " | " | 1884787 | 1884729 | 1884537 | 1913750 | ..... |
| **1118021** | 1884701 | 1887462 | " | " | " | " | " | " | 1884723 | " | " | 1884736 | ..... |
| **1118052** | 1884306 | 1884191 | ..... | ..... | 1869002 | 1868720 | " | " | 1878046 | 1868921 | 1868391 | 1854151 | 1854152 |
| **1118102** | 1884847 | 1884731 | 1884732 | 1853344 | 1853325 | 1906626 | " | " | 1884787 | 1884729 | 1884537 | 1884736 | ..... |
| **1118109** | 1888106 | " | " | " | " | " | " | " | 1884723 | " | " | " | ..... |
| **1118112** | 1888417 | " | " | " | " | " | " | " | 1889373 | 1889339 | 1888261 | " | ..... |
| **1118141** | 1911771 | " | " | " | " | " | " | " | 1884787 | 1884729 | 1884537 | " | ..... |

x—Stud 1853333 is 1 5/16" long; 1862703 is 1 9/16" long. One each required.

# MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | LOCK WASHERS | | |
| — | Lock Washer—Armature Attaching Screw | 456413 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 14 | Lock Washer—Lead Attaching Screw—To Relay | 453844 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 15 | Lock Washer—Cover Screw (Relay) | 453844 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 16 | Lock Washer—Cover Screw (Terminal) | 453844 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 17 | Lock Washer—Terminal Bracket Screw | 453435 | 1512-14-15-16-18; 21; 30-2; 42 |
| 17 | Lock Washer—Terminal Bracket Screw | 121801 | 1513-17-19; 23-6-7; 37; 45-6-7-8; 56-7-9; 1118002-19-21-52; 1118102-9-12-13; 41 |
| 18 | Lock Washer—Terminal Stud | 9421425 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 18 | Lock Washer—Terminal Stud | 9421424 | 1118019-21; 1118102-9-12; 41 |
| | NUTS | | |
| 19 | Nut—Boot Clamp Screw | 109723 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-19-21; 1118102-9-12; 41 |
| 20 | Nut—Terminal (⅜-16x$\frac{5}{32}$ thk) | 805258 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 21 | Nut—Terminal (⅜-16x¼ thk) | 134566 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 22 | Nut—Terminal ($\frac{5}{16}$-18) | 134556 | 1118019-21; 1118102-9-12; 41 |
| | SCREWS | | |
| — | Screw—Armature Attaching (Relay) | 1904818 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 23 | Screw—Boot Clamp | 822417 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-19-21; 1118102-9-12; 41 |
| 24 | Screw—Cover Attaching (Relay) | 453647 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 24 | Screw—Cover Attaching (Relay) | 453461 | 1118019-21; 1118102-9-12; 41 |
| 25 | Screw—Cover Attaching (Terminal) | 453647 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 26 | Screw—Lead Attaching (To Relay) | 453418 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 27 | Screw—Relay Terminal | 453647 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 27 | Screw—Relay Terminal | 453418 | 1118019-21; 1118102-9-12; 41 |
| 28 | Screw—Terminal Bracket Attaching | 453319 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 28 | Screw—Terminal Bracket Attaching | 1878502 | 1118019-21; 1118102-9-12; 41 |
| | WASHERS | | |
| 29 | Washer—Ins. Cover Screw | 1913684 | 1118141 |
| 30 | Washer—Ins.—In Relay Bracket | 1853352 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 31 | Washer—Ins. (Cover Bushing (⅜x$1\frac{3}{16}$) | 1853350 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 32 | Washer—Ins. (Cover Bushing ($\frac{5}{16}$x$1\frac{3}{16}$) | 1853348 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 33 | Washer—Ins. Terminal | 1884727 | 1118019-21; 1118102-9-12; 41 |
| 34 | Washer—Plain—Contact Spring | 1849235 | All |
| 35 | Washer—Plain Terminal (Under Head) | 1857945 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 36 | Washer—Plain Terminal | 1917114 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 36 | Washer—Plain Terminal | 1903092 | 1118019-21; 1118102-9-12; 41 |
| 37 | Washer—Retainer—Contact (Cupped & Slotted) | 1917122 | All |
| 38 | Washer—Retainer—Contact Spring (Cupped) | 1913041 | All |
| 39 | Washer—Retainer—Contact Spring (Cupped & Slotted) | 1913043 | All |
| — | Washer—Space (Inner) Armature Attaching Screw | 813157 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| — | Washer—Space (Outer) Armature Attaching Screw | 813170 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |

# MINOR PARTS SECTION

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | MISCELLANEOUS | | |
| — | ARMATURE—Relay | 1857946 | 1512-13-14-15-16-17-18-19; 21-3-6; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| — | ARMATURE—Relay | 1861952 | 1527 |
| 40 | BUSHING—Ins. Lead | 1847219 | 1118019-21; 1118102-9-12; 41 |
| 41 | CLIP—Relay Terminal | 1855978 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 41 | CLIP—Relay Terminal | 1868137 | 1118019-21; 1118102-9-12; 41 |
| 42 | CLIP—Terminal | 200074 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 42 | CLIP—Terminal | 1884726 | 1118019-21; 1118102-9-12; 41 |
| 43 | CONNECTOR—Terminal | 1884788 | 1118019; 1118102-12; 41 |
| 43 | CONNECTOR—Terminal | 1884725 | 1118021; 1118109 |
| 44 | GASKET—Cover | 1884735 | 1118019; 21; 1118102-9-12 |
| 44 | GASKET—Cover | 1913997 | 1118141 |
| 45 | GASKET—Cover | 1884737 | 1118021; 1118102-9-12 |
| 45 | GASKET—Cover | 1913646 | 1118019; 1118141 |
| 46 | INSULATOR—Relay Bracket | 185335[illegible] | 1512-13-14-15-16-17-18-19; 21-3-6-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 47 | INSULATOR—Terminal Bracket (Outer) | 1854133 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 48 | INSULATOR—Terminal Bracket (Inner) | 1853332 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 42-5-6-7-8; 56-7-9; 1118002-52 |
| 48 | INSULATOR—Terminal Bracket (Inner) | 1884728 | 1118019-21; 1118102-9-12; 41 |
| 49 | ROD—Push | 1853327 | 1512-13-14-16-17-18-19; 21-3-6-7; 42-5-7-8; 56-7-9; 1118019-21; 1118102-9-12; 41 |
| 49 | ROD—Push | 1869317 | 1118002; 52 |
| 50 | SLEEVE—Space | 1853349 | 1512-13-14-15-16-17-18-19; 21-3-6-7; 30-2-7; 42-5-6-7-8; 56-7-9; 1118002-52 |

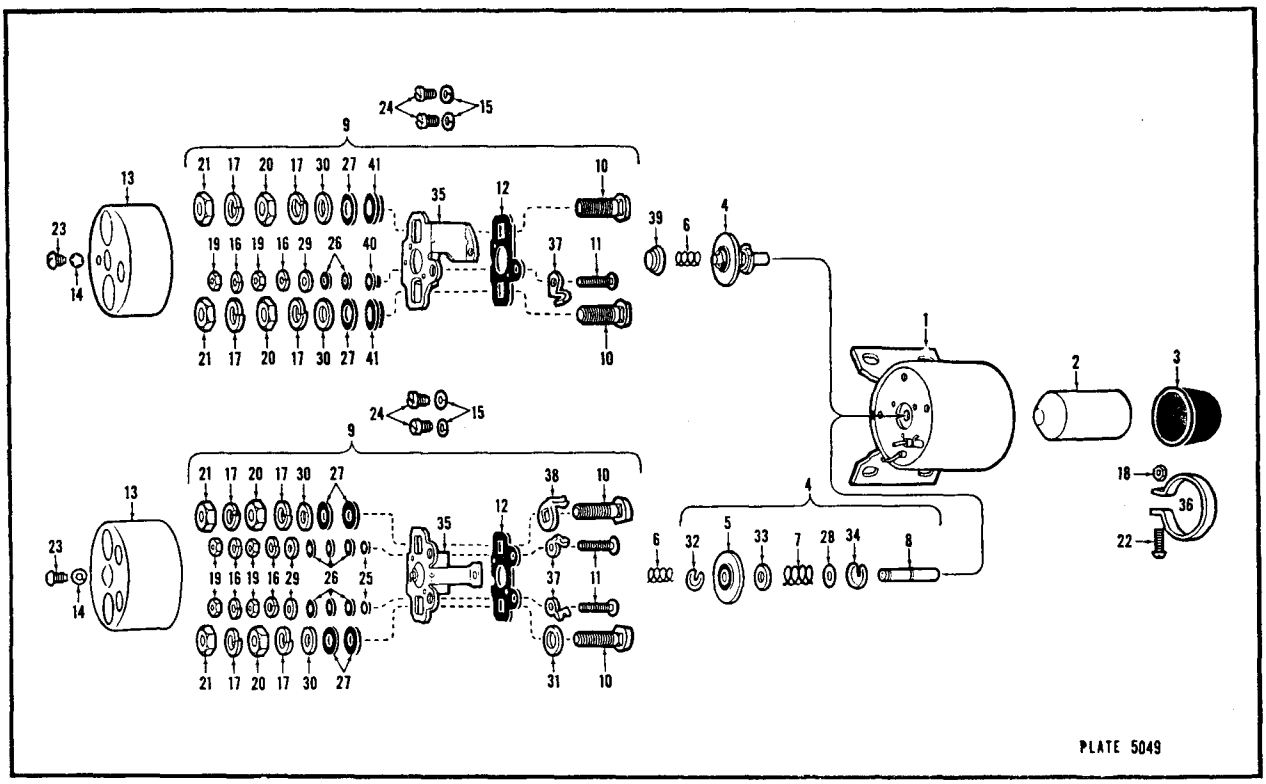


**Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.**

| Model | Case & Coil | Plunger | Boot or Cover | Contact — Assem. | Disc — Contact | Spring — Contact Return | Spring — Contact Cushion | Push — Rod | Bracket — Assem. (Term.) | Stud — (Term.) | Stud — (Term.) | Insulator — (Term.) | Cover |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 |
| 1501 | 1847200 | 1847232 | 1847234 | 1847419 | 1847225 | 1853342 | 1847240 | 1847241 | 1847220 | 1843464 | 1847243 | †1847222 | 1847236 |
| 1502 | 1849203 | " | " | " | " | " | " | " | 1847449 | " | " | † " | " |
| 1504 | 1849079 | " | " | " | " | " | " | " | 1847220 | " | " | † " | " |
| 1505 | 1849203 | " | " | " | " | " | " | " | 1847449 | " | " | † " | " |
| 1506 | " | " | " | " | " | " | " | " | " | " | " | † " | " |
| 1507 | 1850449 | " | " | " | " | " | " | " | 1847220 | " | " | † " | " |
| 1510 | 1848601 | " | " | " | " | " | " | " | 1862337 | " | " | † " | " |
| 1551 | 1871645 | 1853347 | 1853346 | 1869002 | 1868720 | " | " | 1869317 | 1871646 | 1868921 | 1868924 | 1871648 | 1872812 |
| 1555 | 1868225 | " | " | 1853325 | 1906626 | " | " | 1853327 | 1904649 | 1853333 | " | " | 1868227 |
| 1565 | 1872674 | " | " | " | " | " | " | " | 1871646 | 1868921 | " | " | 1872812 |
| 1566 | 1873130 | 1847232 | 1847234 | 1847419 | 1847225 | " | " | 1847241 | 1847449 | 1843464 | 1847243 | †1847222 | 1847236 |
| 1567 | 1873192 | 1853347 | 1905612 | 1873197 | 1873198 | 1853342 | " | 1869317 | 1873196 | 1853333 | 1868924 | 1871648 | 1872812 |
| 1118025 | " | " | 1878199 | 1869002 | 1868720 | " | " | " | 1878198 | 1868921 | " | " | " |
| 1118026 | 1878408 | 1884191 | 1853346 | 1853325 | 1847466 | 1853342 | " | 1853327 | 1868226 | 1853333 | " | " | 1868227 |
| 1118029 | 1879726 | 1853347 | " | " | " | " | " | " | 1881362 | 1868921 | " | " | " |
| 1118031 | 1880379 | " | " | " | " | " | " | " | 1880380 | 1853333 | " | " | 1872812 |
| 1118035 | 1880668 | " | " | " | " | " | " | " | 1881362 | 1868921 | " | " | 1868227 |
| 1118036 | 1881181 | 1884191 | " | " | " | " | " | " | 1881183 | 1853333 | " | " | 1885148 |
| 1118037 | 1881462 | 1853347 | " | " | " | " | " | " | 1873196 | " | " | " | 1872812 |
| 1118038 | 1881607 | 1881613 | ..... | ..... | ..... | ..... | ..... | ..... | 1881612 | ..... | " | " | 1881620 |
| 1118040 | 1882741 | 1853347 | 1853346 | ..... | ..... | ..... | ..... | ..... | " | ..... | " | " | " |
| 1118045 | 1883797 | " | " | 1869002 | 1868720 | 1853342 | 1847240 | 1869317 | 1883799 | 1868921 | " | " | 1872812 |
| 1118046 | 1884190 | 1884191 | ..... | 1853325 | 1847466 | " | " | 1853327 | 1904649 | 1853333 | 1915522 | " | 1868227 |
| 1118054 | 1872674 | 1853347 | 1853346 | " | " | " | " | " | 1880380 | " | 1868924 | " | 1872818 |
| 1118055 | 1884883 | 1884191 | ..... | " | " | " | " | " | 1881183 | " | " | " | 1885148 |
| 1118088 | 1906329 | 1906331 | ..... | ..... | ..... | ..... | ..... | ..... | 1881612 | ..... | 1917115 | " | 1881620 |
| 1118101 | 1880668 | 1853347 | 1853346 | 1853325 | 1847466 | 1853342 | 1847240 | 1853327 | 1904649 | 1853333 | 1868924 | " | 1868227 |
| 1118133 | 1910184 | 1884731 | 1911950 | " | " | " | " | " | 1910198 | 1884729 | " | 1910197 | 1910196 |

†Use 1905466 Insulator (Bent strip) on small terminal.

# MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | **LOCK WASHERS** | | |
| 14 | Lock Washer—Cover Screw | 453844 | 1501-2-4-5-6-7-10; 51-5; 65-6-7; 1118025-6-9; 31-5-6-7-8; 40-5-6; 54-5; 88; 1118101; 33 |
| 15 | Lock Washer—Terminal Bracket Screw | 453844 | 1501-2-4-5-6-7-10; 65-6 |
| 15 | Lock Washer—Terminal Bracket Screw | 453435 | 1551-5; 67; 1118025-6-9; 31-5-6-7-8; 40-5-6; 54-5; 88; 1118101; 133 |
| 16 | Lock Washer—Terminal Stud (#8) | 1946143 | 1551-5; 65-7; 1118025-6-9; 31-5-6-7-8; 40-5-6; 54-5; 88; 1118101; 33 |
| 16 | Lock Washer—Terminal Stud (1/4) | 9421423 | 1501-2-4-5-6-7-10; 66 |
| 17 | Lock Washer—Terminal Stud (3/8) | 9421425 | 1501-2-4-5-6-7-10; 51-5; 65-6-7; 1118025-6-9; 31-5-6-7; 45-6; 54-5; 1118101; 33 |
| | **NUTS** | | |
| 18 | Nut—Boot Clamp Screw | 109723 | 1501-2-4-5-6-7-10; 51; 65-6; 1118026-9; 31-5-6-7; 40-5; 54 |
| 18 | Nut—Boot Clamp Screw | 120622 | 1118046; 1118101; 33 |
| 19 | Nut—Terminal (1/4) | 134551 | 1501-2-4-5-6-7-10; 66 |
| 19 | Nut—Terminal (8-32) | 120622 | 1551-5; 1565-7; 1118025-6-9; 31-5-6-7-8; 40-5-6; 54-5; 88; 1118101; 33 |
| 20 | Nut—Terminal (3/8-16x5/32 thk.) | 805258 | 1501-2-4-5-6-7-10; 1551-5; 65-6-7; 1118025-6-9; 31-5-6-7; 45-6; 54-5; 1118101 |
| 20 | Nut—Terminal (5/16-18) | 134556 | 1118133 |
| 21 | Nut—Terminal (3/8-16x1/4 thk.) | 134566 | 1565-7; 1118025-6-9; 31-3-5-6-7; 45-6; 54-5; 1118101 |
| | **SCREWS** | | |
| 22 | Screw—Boot Clamp | 453357 | 1501-2-4-5-6-7-10; 51-5; 65-6; 1118026-9; 31-5-6-7; 45; 54; 1118133 |
| 22 | Screw—Boot Clamp | 454155 | 1118040; 101 |
| 23 | Screw—Cover Attaching | 453647 | 1501-2-4-5-6-7-10; 1118133 |
| 23 | Screw—Cover Attaching | 453461 | 1551; 65-7; 1118025; 31-7; 45; 54 |
| 23 | Screw—Cover Attaching | 453418 | 1555; 1118026-9; 35-6-8; 40-6; 55; 88; 1118101 |
| 23 | Screw—Cover Attaching | 453304 | 1566 |
| 24 | Screw—Terminal Bracket Attaching | 453647 | 1501-2-4-5-6-7-10; 66 |
| 24 | Screw—Terminal Bracket Attaching | 453319 | 1551; 65-7; 1118026-9; 31-5-6-7-8; 40-5-6; 54-5; 1118101 |
| 24 | Screw—Terminal Bracket Attaching | 453418 | 1555 |
| 24 | Screw—Terminal Bracket Attaching | 453463 | 1118025-88 |
| 24 | Screw—Terminal Bracket Attaching | 1917123 | 1118133 |
| | **WASHERS** | | |
| 25 | Washer—Ins. (Bushing) Terminal (11/64x3/8) | 1905124 | 1501-2-4-5-6-7-10; 66 |
| 25 | Washer—Ins. (Bushing) Terminal (.175x.277) | 1904600 | 1551-5; 65-7; 1118025-6-9; 31-6-7-8; 40-5-6; 54-5; 88; 1118101 |
| 26 | Washer—Ins. Terminal (1/4x5/8) | 810501 | 1501-2-4-5-6-7-10; 66 |
| 26 | Washer—Ins. Terminal (.173x7/16) | 1913846 | 1551-5; 65-7; 1118025-6-9; 31-5-6-7-8; 40-5-6; 54-5; 1118101; 33 |
| 27 | Washer—Ins. Terminal (21/64x3/4) | 1861076 | 1501-2-4-5-6-7-10; 66 |
| 27 | Washer—Ins. Terminal (3/8x13/16) | 1853350 | 1551-5; 1118025-6-9; 31-5-6-7-8; 45-6; 54-5; 1118101 |
| 27 | Washer—Ins. Terminal (5/16x11/16) | 1884727 | 1118133 |
| 28 | Washer—Plain—Contact Spring | 1849235 | 1501-2-4-5-6-7-10; 51-5; 65-6-7; 1118025-6-9; 31-5-7; 45-6; 54-5; 1118101; 33 |
| — | Washer—Plain—Plunger Retainer Spring | 1849486 | 1501-2-4-5-6-7-10 |
| 29 | Washer—Plain—Terminal (1/4x1/2) | 1905125 | 1501-2-4-5-6-7-10 |
| 29 | Washer—Plain—Terminal (.196x7/16) | 807295 | 1551-5; 65-7; 1118055; 88 |
| 29 | Washer—Plain—Terminal (.173x7/16) | 815540 | 1118025-6-9; 31-5-6-7-8; 40-5-6; 54; 1118101 |
| 30 | Washer—Plain—Terminal (.380x11/16) | 812622 | 1551-5; 65; 1118026-9; 31-5-6-7; 45-6; 54-5; 1118101 |
| 30 | Washer—Plain—Terminal (3/8x11/16) | 805790 | 1501-2-4-5-6-7-10; 66 |
| 30 | Washer—Plain—Terminal (5/16x9/16) | 1903092 | 1118133 |
| 31 | Washer—Plain—Terminal (17/32x33/64) | 1857945 | 1501-2-4-5-6-7-10; 51-5; 65-6-7; 1118026-9; 31-5-6-7; 45-6; 1118101 |
| 32 | Washer—Retainer—Contact (Cupped Slotted) | 1847237 | 1501-2-4-5-6-7-10; 51-5; 65-6-7; 1118025-6-9; 31-5-6-7; 45-6; 54-5; 1118101; 33 |
| 33 | Washer—Retainer—Contact Spring (Cupped) | 1913041 | 1501-2-4-5-6-7-10; 51-5; 65-6-7; 1118025-6-9; 31-5-6-7; 45-6; 54-5; 1118101; 33 |

# MINOR PARTS SECTION

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | WASHERS — (Continued) | | |
| 34 | Washer—Retainer—Contact Spring (Cupped-slotted) | 1913043 | 1501-2-4-5-6-7-10; 51-5; 65-6-7; 1118025-6-9; 31-5-6-7; 45-6; 54-5; 1118101; 33 |
| — | Washer—Space (Adj. Screw & Link) | 833795 | 1118037 |
| — | Washer—Stop—Plunger Rod | 1856056 | 1118038 |
| | MISCELLANEOUS | | |
| 35 | BRACKET—Terminal | 1847221 | 1501-2-4-5-6-7-10 |
| 35 | BRACKET—Terminal | † | 1551-5; 65-6-7; 1118025-6-9; 31-5-6-7-8; 40-5-6; 54-5; 1118101; 33 |
| 36 | CLAMP—Boot | 1847233 | 1501-2-4-5-6-7-10; 66 |
| 36 | CLAMP—Boot | 1853344 | 1551-5; 65; 1118026-9; 31-5-6-7; 40-5; 54; 1118101; 33 |
| 37 | CLIP—Terminal | 200035 | 1551-5; 66-7; 1118026-9; 31-5-6-7-8; 40-5-6; 54-5; 88; 1118101; 33 |
| 37 | CLIP—Terminal (Double) | 1847418 | 1501-2-4-5-6-7-10; 65-6 |
| 38 | CLIP—Terminal | 1884726 | 1118133 |
| 38 | CLIP—Terminal | 200074 | 1501-2-4-5-6-7-10; 51-5; 65-6; 1118026; 31-5-6; 45-6; 54-5; 1118101 |
| — | EXTENSION—Plunger | 1871091 | 1567 |
| — | EXTENSION—Plunger | 1881619 | 1118038 |
| — | GASKET—Cover | 1868777 | 1551; 65-7; 1118025; 37; 45 |
| — | GASKET—Cover (On Terminal) | 1868778 | 1551; 65-7; 1118025; 37; 45 |
| — | GASKET—Plunger Cover | 1948008 | 1567; 1118025 |
| — | INSULATOR—(Bent Strip) Sw. Term. | 1905466 | 1501-2-4-5-6-7-10; 66 |
| — | LINK (& Screw)—Assem. | 1871091 | 1567 |
| — | LINK (& Screw)—Assem. | 1873700 | 1118037 |
| — | RESISTOR | * | 1118133 |

*Not part of switch — See Cranking Motor — 1109660 Group 70
†Not serviced separately. Replace with complete term. assem.

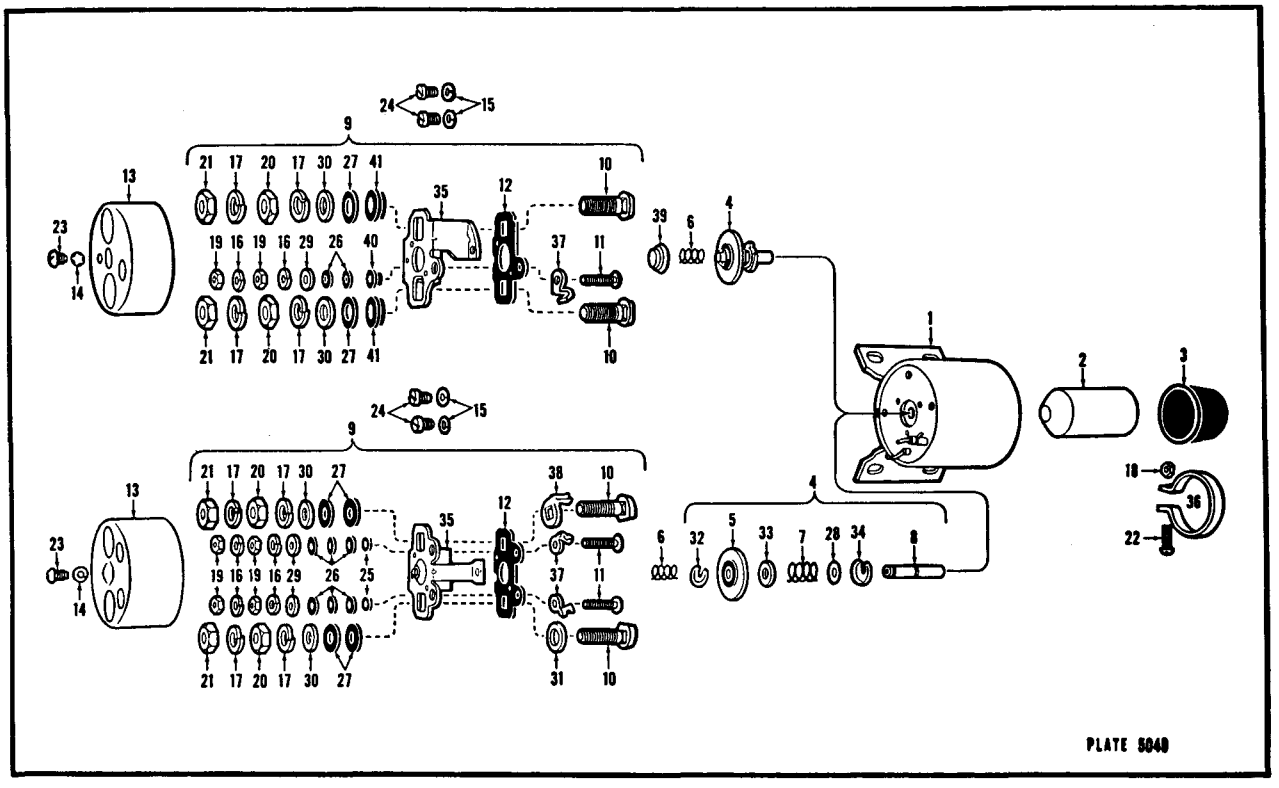


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

| Model No. | Case & Coil | Plunger | Boot or Cover | Contact Assem. | Disc — Contact | Spring — Contact Return | Spring — Contact Cushion | Push Rod | Bracket Assem. — Terminal | Stud — Terminal | Stud — Terminal | Insulator — Terminal | Cover |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 |
| 1114275 | 1952536 | × | † | 1952563 | * | 1853342 | * | * | 1912064 | 1915519 | 1917115 | 1912067 | 1912069 |
| 1118135 | 1912031 | × | ..... | 1952563 | * | " | * | * | " | " | " | " | " |
| 1118136 | 1931767 | × | † | " | * | " | * | * | " | " | " | " | " |
| 1118137 | 1912407 | × | ..... | " | * | " | * | * | " | " | " | " | " |
| 1118140 | 1931768 | × | † | " | * | " | * | * | " | " | " | " | " |
| 1118144 | 1913373 | × | † | " | * | " | * | * | " | " | " | " | " |
| 1118145 | 1913641 | × | † | " | * | " | * | * | " | " | " | " | " |
| 1118146 | 1914506 | × | † | " | * | " | * | * | " | " | " | " | " |
| 1118148 | 1912977 | × | † | " | * | " | * | * | 1912064 | 1915519 | 1915522 | " | " |
| 1118156 | 1912453 | × | † | " | * | " | * | * | " | " | " | " | " |
| 1118183 | 1918469 | 1884191 | ..... | 1853325 | 1847466 | " | 1847240 | 1853327 | 1881183 | 1853333 | 1917115 | 1871648 | 1885148 |
| 1119773 | 1930610 | × | ..... | 1952563 | * | " | * | * | 1912064 | 1915519 | " | 1912067 | 1912069 |
| 1119784 | 1932515 | × | † | " | * | " | * | * | " | " | " | " | " |
| 1119788 | 1932624 | × | † | " | * | " | * | * | " | " | " | " | " |
| 1119837 | 1944838 | 1853347 | 1853346 | ..... | ..... | ..... | ..... | ..... | 1881612 | ..... | " | 1871648 | 1881620 |
| 1119938 | 1938366 | × | † | 1952563 | * | 1853342 | * | * | 1912064 | 1915519 | " | 1912067 | 1912069 |
| 1119971 | 1940996 | ..... | ..... | " | ..... | " | ..... | ..... | " | " | " | " | " |
| ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... |
| ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... |
| ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... | ..... |

×Plunger (& Link) is part of Cranking Motor on which Solenoid is mounted.
†Boot is part of Cranking Motor on which Solenoid is mounted.
*Not serviced separate—see Column 4.

# MINOR PARTS SECTION

IOTE:Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not vailable from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and escription.

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | **LOCK WASHERS** | | |
| 14 | Lock Washer—Cover Screw | 138530 | 1118135–6–7; 40–8; 56; 1119773; 84; 938; 71 |
| 14 | Lock Washer—Cover Screw | 453844 | 1114275; 1118144–5–6; 83–8; 1119837 |
| 15 | Lock Washer—Terminal Bracket Screw | 121801 | 1118135–6–7; 40 |
| 15 | Lock Washer—Terminal Bracket Screw | 453435 | 1114275; 1118144–5–6–8; 56; 83; 1119773; 84–7–8; 938; 71 |
| 16 | Lock Washer—Terminal Stud (No. 8) | 1946143 | 1114275; 1118135–6–7; 40–4–5–6–8; 56; 83; 1119773; 84–8; 837; 938; 71 |
| 17 | Lock Washer—Terminal Stud (3/8) | 9421425 | 1114275; 1118135–6–7; 40–4–5–6–8; 56; 83; 1119773; 84–8; 938; 71 |
| | **NUTS** | | |
| .... | Nut—Clamp Attaching | 109723 | 1119837 |
| 19 | Nut—Terminal (8–32) | 120622 | 1114275; 1118135–6–7; 40–4–5–6–8; 56; 83; 1119773; 84–8; 837; 938; 71 |
| 20 | Nut—Terminal (3/8–16x5/32 thk.) | 805258 | 1114275; 1118135–6–7; 40–4–5–6–8; 56; 83; 84–8; 938; 71 |
| 21 | Nut—Terminal (3/8–16x1/4 thk.) | 134566 | 1114275; 1118135–6–7; 40–4–5–6–8; 56; 83; 84–8; 938; 71 |
| | **SCREWS** | | |
| .... | Screw—Clamp Attaching | 454155 | 1119837 |
| 23 | Screw—Cover Attaching | 453647 | 1114275; 1118135–6–7; 40–4–5–6–8; 56; 1119773; 84–8; 938; 71 |
| 23 | Screw—Cover Attaching | 453418 | 1118183; 1119837 |
| 24 | Screw—Terminal Bracket Attaching | 1917123 | 1114275; 1118135–6–7; 40–4–5–6–8; 56; 1119773; 84–8; 938; 71 |
| 24 | Screw—Terminal Bracket Attaching | 453319 | 1118183 |
| 24 | Screw—Terminal Bracket Attaching | 453463 | 1119837 |
| | **WASHERS** | | |
| 25 | Washer—Insul. (Bushing) Terminal (.175x.217) | 1904600 | 1118183; 1119837 |
| 26 | Washer—Insul.—Terminal (11/64x7/16) | 1913846 | 1114275; 1118135–6–7; 40–4–5–6; 83; 1119773; 84–8; 837; 938; 71 |
| 27 | Washer—Insul.—Terminal (33/64x3/4) | 1861076 | 1114275; 1118135–6–7; 40–4–5–6; 1119773; 84–8; 938; 71 |
| 27 | Washer—Insul.—Terminal (3/8x1 3/8) | 1853350 | 1118183 |
| 28 | Washer—Plain—Contact Spring | 1849235 | 1118183 |
| 29 | Washer—Plain—Terminal (1.73x7/16) | 815540 | 1114275; 1118135–6–7; 40–4–5–6–8; 56; 1119773; 84–8; 938; 71 |
| 29 | Washer—Plain—Terminal (.196x7/16) | 807295 | 1118183; 1119837 |
| 30 | Washer—Plain—Terminal (3/8x5/8) | 1917114 | 1114275; 1118135–6–7; 40–4–5–6–8; 56; 1119773; 84–8; 938; 71 |
| 30 | Washer—Plain—Terminal (.380x1/4) | 816622 | 1118183 |
| 31 | Washer—Plain—Terminal (11/32x33/64) | 1857945 | 1118183 |
| 32 | Washer—Retainer—Contact (Cupped—Slotted) | 1847237 | 1118183 |
| 33 | Washer—Retainer—Contact Spring (Cupped) | 1913041 | 1118183 |
| 34 | Washer—Retainer—Contact Spring (Cupped—Slotted) | 1913043 | 1118183 |
| | **MISCELLANEOUS** | | |
| 35 | BRACKET—Terminal | * | 1114275; 1118135–6–7; 40–4–5–8; 56 |
| .... | BOOT—Cover | 1918864 | 1118148 |
| .... | BOOT—Cover | 1915523 | 1118156 |
| .... | CLAMP—Boot Attaching | 1853344 | 1119837 |
| 37 | CLIP—Terminal | 1912401 | 1114275; 1118135–6–7; 40–4–5–6–8; 56; 1119773; 83–8; 938; 71 |
| 37 | CLIP—Terminal | 200035 | 1118183; 1119837 |
| 38 | CLIP—Terminal | 200074 | 1118183 |
| 39 | CUP—Spring Support | 1912068 | 1114275; 1118135–6–7; 40–4–5–6–8; 56; 1119773; 84–8; 938; 71 |
| 40 | INSULATOR—Terminal (7/16 O.D.) | 1915517 | 1118148; 56 |
| 41 | INSULATOR—Terminal (3/4 O.D.) | 1915518 | 1118148; 56 |

*Not serviced separately. Replace with complete Terminal Assembly.

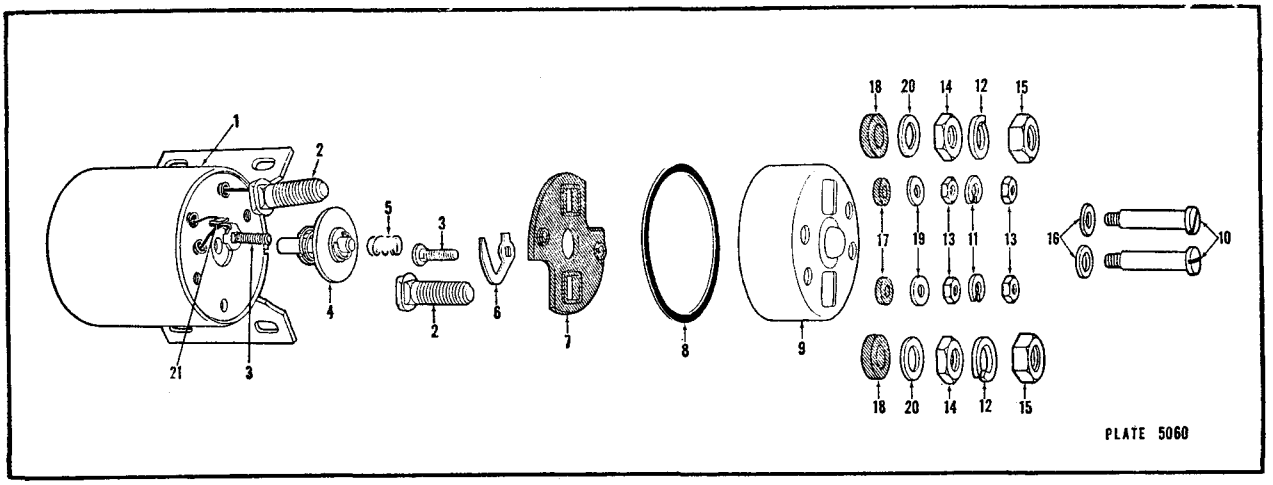


Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

| Model | Case & Coil | Stud — Terminal | Stud — Terminal | Contact — Assem. | Spring — Return | Contact | Insulator — Cover | Gasket — Cover | Cover | Stud — Cover |
|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
| 1114250 | 1945665 | # | † | 1952563 | 1853342 | | | 1930629 | 1938151 | 453468 |
| 1114274 | 1939931 | # | 1950069 | " | " | | | " | 1931818 | " |
| 1114292 | 1955888 | ▲ | † | " | " | | | " | 1938151 | " |
| 1114296 | 1956417 | ▲ | 1950069 | " | " | | | " | 1931818 | " |
| 1114300 | 1926956 | ▲ | " | " | " | | | " | " | " |
| 1114307 | 1959522 | ▲ | " | " | " | | | 1965625 | " | " |
| 1114310 | 1960928 | ⁂ | " | " | " | | | 1930629 | " | " |
| 1114311 | 1960849 | * | " | " | " | | | " | " | " |
| 1114312 | 1960869 | # | " | " | " | | | " | " | " |
| 1114314 | 1960887 | # | " | " | " | | | " | " | " |
| 1114315 | 1960955 | * | " | " | " | | | " | " | " |
| 1114316 | 1960956 | # | " | " | " | | | " | " | " |
| 1114317 | 1961091 | ▲ | " | " | " | | | " | " | " |
| 1114320 | 1960969 | # | " | " | " | | | " | " | " |
| 1114321 | 1960980 | * | " | " | " | | | " | " | " |
| 1114322 | 1960850 | # | " | " | " | | | " | " | " |
| 1114329 | 1944783 | □ | " | 1917119 | 1917128 | | | " | 1948777 | 453464 |
| 1115501 | 1956428 | ▮ | ● | 1952563 | 1853342 | 1935645 | | 1965625 | 1965622 | 1943225 |
| 1115508 | | ■ | ● | 1917119 | " | " | | " | " | " |
| 1115510 | | d | ◆ | " | " | " | | " | 1965624 | " |
| 1115511 | | ■ | 1960248 | " | " | | | " | 1965363 | " |
| 1115513 | | ■ | ◆ | 1952563 | " | | | " | 1966268 | " |
| 1115518 | 1971906 | EE | 1960248 | 1971913 | " | | 1971919 | 1956013 | 1971921 | 1956019 |
| 1115522 | 801046 | AA | " | 801044 | 1917128 | | " | " | 801043 | " |
| 1118186 | 1923941 | 1924230 | 1950069 | 1971913 | 1853342 | 1935645 | 1923936 | 1956013 | 1923940 | x |
| 1118187 | " | " | " | " | " | " | " | " | " | x |
| 1118188 | 1923950 | " | " | " | " | " | " | " | " | x |
| 1118806 | 1930679 | ▲ | " | " | " | | | 1930629 | 1931818 | 1943225 |
| 1118808 | 1943321 | * | " | " | " | | | " | " | 453468 |
| 1119760 | 1926956 | ▲ | † | " | " | 1935645 | | " | 1938151 | " |
| 1119761 | " | ▲ | † | " | " | " | | " | " | " |
| 1119767 | 1929013 | ▲ | 1950069 | " | " | | | " | 1931818 | " |
| 1119774 | 1930679 | ▲ | " | " | " | | | " | " | " |
| 1119777 | 1926956 | ▲ | † | " | " | 1935645 | | " | 1938151 | " |
| 1119778 | 1931813 | # | 1950069 | " | " | | | " | 1931818 | " |
| 1119780 | 1926956 | ▲ | " | " | " | | | " | " | " |
| 1119781 | | ‡ | † | 1956226 | " | 1935645 | | 1966034 | 1963521 | " |
| 1119789 | 1926956 | ▲ | 1950069 | 1952563 | " | | | 1930629 | 1931818 | " |
| 1119793 | 1929013 | ▲ | † | " | " | 1935645 | | " | 1938151 | " |
| 1119797 | 1933689 | ▲ | 1950069 | " | " | | | " | 1931818 | " |

(CONTINUED ON PAGE TWO)

**Delco-Remy**
SERVICE PARTS CATALOG

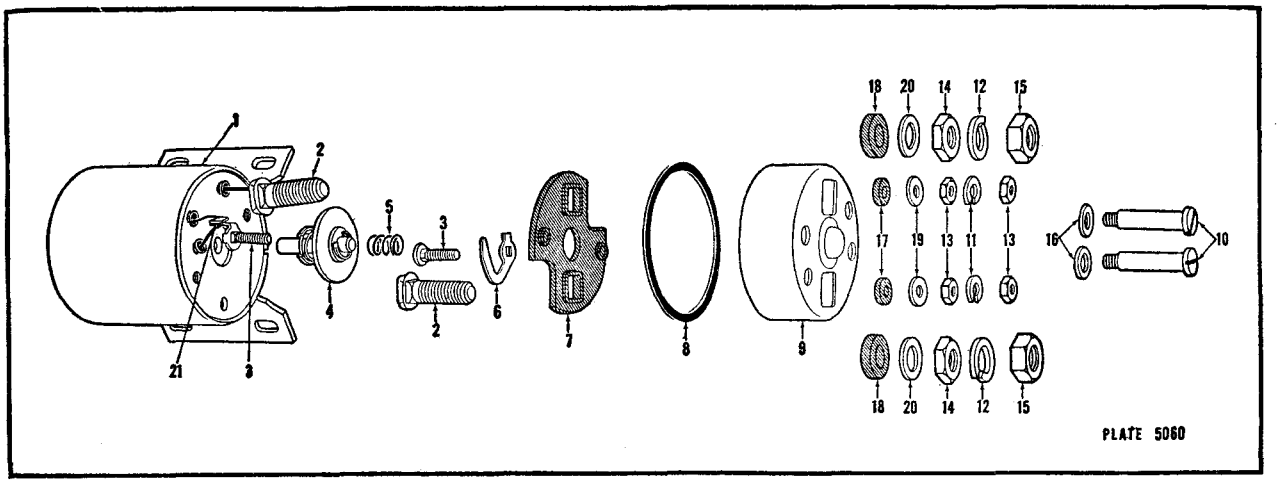


Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

(CONTINUED FROM PAGE ONE)

| Model | Case & Coil | Stud — Terminal | Stud — Terminal | Contact — Assem. | Spring — Return | Contact | Insulator — Cover | Gasket — Cover | Cover | Stud — Cover |
|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
| 1119818 | 1934661 | * | † | 1952563 | 1853342 | 1935645 | | 1930629 | 1938151 | " |
| 1119819 | | 1960244 | b | 1940553 | " | | | " | 1963521 | 1940556 |
| 1119820 | 1941382 | ○ | 1950069 | 1917119 | " | | | " | 1931818 | 1943225 |
| 1119833 | 1931813 | # | " | 1952563 | 1853442 | | | 1930629 | " | " |
| 1119840 | | 1960244 | " | 1940553 | " | | | 1966034 | 1962821 | 1940556 |
| 1119852 | 1950689 | # | † | 1952563 | " | | | 1930629 | 1938151 | 453468 |
| 1119855 | 1951898 | ○ | † | 1917119 | " | | | " | " | 1943225 |
| 1119856 | 1952030 | ○ | † | " | " | | | " | " | " |
| 1119858 | 1952123 | ○ | c | " | " | | | " | 1952122 | 453468 |
| 1119860 | 1952111 | ○ | 1950069 | " | " | | | " | 1931818 | 1943225 |
| 1119877 | 1954309 | # | " | 1952563 | " | | | 1965625 | " | 453468 |
| 1119882 | 1931813 | # | † | " | " | 1935645 | | 1930629 | 1938151 | 1940556 |
| 1119883 | 1934661 | * | † | " | " | " | | " | " | " |
| 1119884 | 1941382 | ○ | 1950069 | 1917119 | " | | | " | 1931818 | " |
| 1119885 | 1931813 | # | " | 1952563 | " | | | " | " | " |
| 1119888 | 1956028 | ○ | c | 1917119 | " | | | " | 1952122 | 1943225 |
| 1119890 | 1956428 | ♦ | 1950069 | 1952563 | " | | | 1965625 | " | 453464 |
| 1119892 | | ♦ | ● | 1940553 | " | | | 1966034 | 1950065 | 453468 |
| 1119896 | 1958753 | ■ | 1950069 | 1917119 | " | | | 1965625 | 1965623 | 1943225 |
| 1119905 | 1934670 | * | " | 1952563 | " | | | 1930629 | 1931818 | 453468 |
| 1119906 | 1934661 | * | " | " | " | | | " | " | " |
| 1119910 | | ‡ | z | 1956226 | " | 1935645 | | 1966034 | 1935167 | " |
| 1119912 | 1933689 | ▲ | † | 1952563 | " | " | | 1930629 | 1938151 | " |
| 1119920 | 1935584 | ▲ | † | " | " | " | | " | " | " |
| 1119923 | | ‡ | † | 1956226 | " | " | | 1966034 | 1963521 | " |
| 1119968 | 1930679 | ▲ | † | " | " | " | | " | 1938151 | " |
| 1119975 | 1941442 | ▲ | † | 1952563 | " | " | | " | " | " |
| 1119997 | 1942587 | * | 1950069 | " | " | | | " | 1931818 | " |

x For Stud Type Use 1925831; For Screw Type use 1914580.
▲ Stud No. 1926967 Motor Term.; 1960244 Batt. Term. * Stud No. 1931814 Motor Term.; 1927344 Batt. Term.
○ Stud No. 1941379 Motor Term.; 1941378 Batt. Term. ♦ Stud No. 1956427 Motor Term.; 1960244 Batt. Term.
□ Stud No. 1944833 Motor Term.; 1960244 Batt. Term. ‡ Stud No. 1955499 Motor Term.; 1960244 Batt. Term.
■ Stud No. 1958754 Motor Term.; 1958751 Batt. Term. EE Stud No. 1971908 Motor Term.; 1971920 Batt. Term.
d Stud No. 1956427 Motor Term.; 800487 Batt. Term. AA Stud No. 801048 Motor Term.; 801042 Batt. Term.
b Stud No. 1931625 Switch Term.; 1956030 Return Term.
⊕ Stud No. 1950069 Switch Term.; 1950062 Return Term. c Stud No. 1960248 Switch Term.; 1956030 Return Term.
z Stud No. 1950069 Switch Term.; 1935644 Resistor Term.
● Stud No. 1950069 Switch Term.; 1961333 Resistor Term.
† Stud No. 1950069 Switch Term.; 1956030 Resistor or Return Term.
♦ Stud No. 1960248 Switch Term.; 1961333 Resistor or Return Term.

# MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | LOCK WASHERS | | |
| 11 | Lock Washer—#8 Spring Lock Type | 1946143 | 1114250, 74; 92-6; 307-10-11-12-14-15-16-17; 20-1-2-9; 1115501-8-10-13; 1118186-7-8; 806-8; 1119760-1-7; 74-7-8; 80-1-9; 93-7, 818-20; 33; 52-5-6-8; 60; 77; 82-3-4-5-8; 90-6; 905-6; 10; 20-3; 68; 75; 97 |
| 11 | Lock Washer—#8 Internal Tooth Type | 121801 | 1119819; 40 |
| 11 | Lock Washer—#10 Spring Lock Type | 453435 | 1115510-11-13-18; 22; 1119858; 88 |
| 12 | Lock Washer—$\frac{5}{16}$ Terminal—Spring Lock Type | 9421424 | 1114292-6; 300-7-10; 29; 1118806; 1119760-1-7; 74-5; 80-9; 93-7; 920; 68 |
| 12 | Lock Washer—$\frac{3}{8}$ Terminal—Spring Lock Type | 9421425 | 1114250, 74; 96-9; 300-7-10-11-12-14-16-17; 20-1-2-9; 1115501-8-10-11-13-18; 22; 1118186-7-8; 806-8; 1119760-1-7; 74-7-8; 80-1-9; 93-7; 818-19; 20; 33; 40; 52-5-6-8; 60; 77; 82-3-4-5-8; 90-2-6; 905-6-10-12; 20-3; 68; 75; 97 |
| 12 | Lock Washer—$\frac{3}{8}$ Terminal—Sealing Type | 1940547 | 1119819; 40 |
| | NUTS | | |
| 13 | Nut—#8-32x$\frac{3}{32}$ | 1951409 | 1115513 |
| 13 | Nut—#8-32x$\frac{1}{8}$ | *120622 | 1114250, 307; 1118186-7-8; 806-8; 1119760-1-7; 74-7-8; 80-1-9; 93-7; 818-19-20; 40; 910-12; 20-3 |
| 13 | Nut—#8-32x$\frac{1}{8}$ | 453996 | 1114274; 92-6; 310-11-12-14-15-16-17; 20-1-2; 1115501-8-10-13; 1119833; 52-5-6-8; 60; 77; 82-3-4-5-8; 90-2-6, 975, 97 |
| 13 | Nut—#10-32 | 453433 | 1115522 |
| 13 | Nut—#8-32x$\frac{1}{8}$ | 453434 | 1114329 |
| 13 | Nut—#8-32—Sealing Type | 1940361 | 1114274; 300; 1119819; 40; 55-8; 77; 82-3-4-5-8; 968 |
| 13 | Nut—#10-32x$\frac{1}{8}$ | 453284 | 1115510-11-13-18; 1119858; 88; 92 |
| 13 | Nut—#10-32—Sealing Type | 1948656 | 1119858; 88 |
| 14 | Nut—$\frac{3}{8}$-16x$\frac{5}{32}$ | 1904419 | 1114250; 74; 310-11-12-15-16; 20-1-2-9; 1115501-8-10-11-13-18; 22; 1118808; 1119833; 52; 77; 82-3-4-5; 90-2-6; 905-6; 75; 97 |
| 14 | Nut—$\frac{3}{8}$-16x$\frac{5}{32}$ | 805258 | 1114292; 307-10-11-14-16-17; 20-2; 1118186-7-8; 806; 1119760-1-7; 74-7-8; 80-1-9; 93-7; 818-19-20; 40; 55-6-8; 60; 88; 910-12; 20-3; 68 |
| 15 | Nut—$\frac{5}{16}$-18x$\frac{5}{32}$ | 1926640 | 1114292-6; 300-7-17; 1118806; 1119760-1-7; 74-7; 80-9; 93-7; 912; 20; 68 |
| 15 | Nut—$\frac{5}{16}$-18x$\frac{5}{32}$ | 1914097 | 1114329; 1119975 |
| 15 | Nut—$\frac{5}{16}$-18x$\frac{3}{16}$ | 124824 | 1114292-6; 317 |
| 15 | Nut—$\frac{3}{8}$-16x$\frac{1}{4}$ | 134566 | 1114250; 74; 92-6; 300-7-10-11-12-14-15-16-17; 20-1-2-9; 1115501-8-10-11-13; 1118186-7-8; 806-8; 1119760-1-7; 74-7-8; 80-1-9; 93-7; 818-19-20; 33; 40; 52-5-6-8; 60; 77; 82-3-4-5-8; 90-6; 905-6-10-12; 20-3; 68; 75; 97 |
| | SCREWS | | |
| — | Screw—Mounting Bracket | 1945460 | 1119819; 40; 92 |
| | WASHERS | | |
| 16 | Washer—Cover Attaching Screw | 1923935 | 1114250; 74; 92-6; 300-7-10-11-12-14-15-16-17; 20-1-2-9; 1115501-8-10-11-13; 1118186-7-8; 806-8; 1119760-1-7; 74-7-8; 80-1-9; 93-7; 818-19-20; 33; 52-5-6-8; 60; 77; 88; 90-2; 905-6-10-12; 20-3; 75; 97 |
| 16 | Washer—Cover Attaching Screw | 1956015 | 1115518; 22 |
| 16 | Washer—(Sealing)Cover Attaching Screw | 1971926 | 1115518; 22 |
| 17 | Washer—(Insul.) #8-32 Terminal | 1923933 | 1118186-7-8 |
| 17 | Washer—(Insul.) #8-32 Terminal | 1950071 | 1115501-8-10-13; 1119890-2-6 |
| 17 | Washer—(Insul.) #8-32 Terminal | 1923935 | 1114250; 307-10-11-12-14-15-16-17; 20-1-2-9; 1118808; 1119760-1-7; 77-8; 80-1-9; 90-2-3-7; 818; 20; 33; 52-6; 60; 905-6-10-12, 20-3; 75; 97 |

* Later production on 1119910 uses 453433 #10 Nut and 1923935 Washer (Insul)—Terminal.

# MINOR PARTS SECTION

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | WASHERS (Continued) | | |
| 17 | Washer—(Insul.) #10-32 Terminal | 1971923 | 1115518; 22 |
| 17 | Washer—(Insul.) #10-32 Terminal | 1950063 | 1115510-11-13; 1119892 |
| 18 | Washer—(Insul.) ⅜-16 Terminal | 1923930 | 1118186-7-8 |
| 18 | Washer—(Insul.) ⅜-16 and $\frac{5}{16}$-18 Terminals | 1927345 | 1114250; 92-6; 307-10-11-12-14-15-16-17; 20-1-2-9; 1118806-8; 1119760-1-7; 74-7-8; 80-1-9; 93-7; 809-18; 20-9; 33; 52-6; 60; 905-6-10-12; 20-8; 75; 97 |
| — | Washer—Insul. Terminal Stud (⅜-16) | 1956016 | 1115518; 22 |
| 18 | Washer (Sealing Type)—⅜-16 Terminal | 1971922 | 1115518; 22 |
| 18 | Washer (Sealing Type) Terminal | 1971926 | 1115518; 22 |
| 18 | Washer (Sealing Type)—⅜-16 Terminal | 1953479 | 1114300; 1119968 |
| 18 | Washer (Sealing Type)—⅜-16 Terminal | 1949012 | 1114274; 300; 1119855-8; 77; 82-3-4-5-8; 968 |
| 18 | Washer (Sealing Type)—⅜-16 Terminal | 1950064 | 1115501-8-10-11-13; 1119890-2-6 |
| 19 | Washer—Plain—#8-32 Terminal | 815540 | 1115501-8-10-11-13; 1118186-7-8; 1119819; 90-2-6 |
| 19 | Washer—Plain—#10-32 Terminal | 1856056 | 1115510-11-13-18; 22; 1119892 |
| 20 | Washer—Plain—⅜-16 Terminal | 805790 | 1115501-8-10-11-13-18; 22; 1119890-2-6 |
| | MISCELLANEOUS | | |
| — | BRACKET—Mounting | 1940552 | 1119819, 92 |
| — | BRACKET—Mounting | 1946955 | 1119840 |
| 21 | CLIP—Terminal | 1923924 | 1118186-7-8; 1119852-5-6-8; 88 |
| 21 | CLIP—Terminal | 1949538 | 1114250; 74; 92-6; 300-7-10-11-12-14-15-16-17; 20-1-2-9; 1115501-8; 1118806-8; 1119760-1-7; 74-7-8; 80-1-9; 93-7; 818-20; 33; 52-5-6; 60; 77; 82-3-4-5; 90-6; 905-6-10-12; 20-3; 68; 75; 97 |
| 21 | CLIP—Terminal | 1954870 | 1115513 |
| 21 | CLIP—Terminal | 1958278 | 1115510-11-13; 1119858; 88 |
| 21 | CLIP—Terminal | 1971910 | 1115518; 22 |
| — | INSULATOR—Cover Screw | 1926567 | 1118188 |
| — | INSULATOR—Cup—Cover (Notched) | 1971924 | 1115518; 22 |

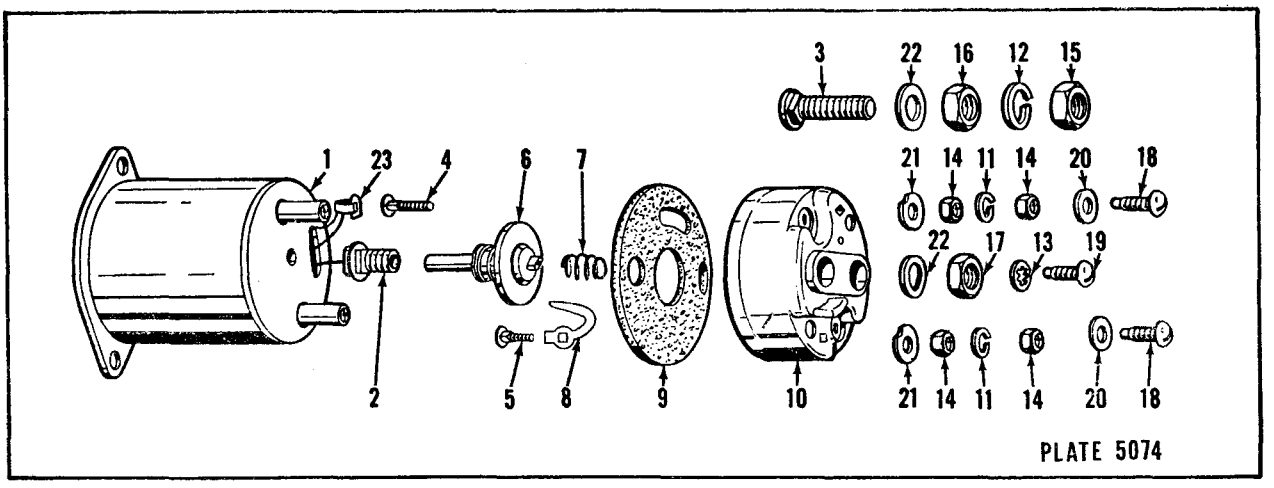


PLATE 5074

**Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section**

| Model | Case & Coil | Stud — Motor Terminal | Stud — Battery Terminal | Stud — Switch Terminal | Stud — Resistor Terminal | Contact — Assem. | Spring — Return | Contact Blade | Gasket Cover | Cover |
|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
| 1114211 | | 1931814 | 1927344 | 1960248 | 1956030 | 1956226 | 1853342 | | | 1950428 |
| 1114251 | | " | " | 1950069 | | " | " | | | 1962821 |
| 1114252 | | 1955499 | " | " | 1935644 | " | " | 1935645 | | 1935167 |
| 1114253 | | 1931814 | " | " | " | " | " | " | | " |
| 1114255 | | " | " | " | " | " | " | " | | " |
| 1114256 | | 1950067 | " | " | " | " | " | " | | " |
| 1114257 | | " | " | " | | " | " | | | 1962821 |
| 1114261 | | 1931814 | " | " | | " | " | | | " |
| 1114262 | | 1955499 | 1960244 | " | 1950062 | " | " | 1935645 | | 1946898 |
| 1114263 | | 1950067 | " | " | " | " | " | " | 1966034 | " |
| 1114264 | | 1955499 | 1927344 | 1960248 | | " | " | | | 1959231 |
| 1114266 | | " | 1960244 | 1950069 | | " | " | | | 1953123 |
| 1114268 | | 1931814 | 1927344 | 1960248 | | " | " | | | 1959231 |
| 1114269 | | 1950067 | " | 1950069 | | 1952505 | " | | | 1962821 |
| 1114270 | | 1955499 | " | " | 1956030 | 1956226 | " | 1935645 | | 1947584 |
| 1114271 | | " | " | " | | " | " | | | 1962821 |
| 1114272 | | 1950067 | 1960244 | " | | " | " | | 1966034 | 1953123 |
| 1114273 | | 1931814 | 1927344 | 1960248 | 1935644 | " | " | 1935645 | | 1952116 |
| 1114277 | | 1955499 | " | 1950069 | | " | " | | | 1962821 |
| 1114278 | | " | 1960244 | " | | " | " | | | 1953123 |
| 1114279 | | " | " | " | | " | " | | | " |
| 1114281 | | " | 1927344 | " | 1935644 | " | " | 1935645 | 1966034 | " |
| 1114282 | | 1931814 | " | " | " | " | " | " | | " |
| 1114283 | | 1955499 | 1960244 | " | | " | " | | | 1953123 |
| 1114284 | | 1950067 | 1927344 | " | 1935644 | 1952505 | " | 1935645 | | 1935167 |
| 1114287 | | 1955499 | " | " | " | 1956226 | " | " | | " |
| 1114289 | | 1950067 | " | " | | " | " | | | 1962821 |
| 1114290 | | 1955499 | " | " | | " | " | | 1956013 | 1956017 |
| 1114291 | | 1950067 | " | " | 1837533 | " | " | 1935645 | | 1956079 |
| 1114293 | 1956224 | 1941379 | 1941378 | " | 1956030 | " | " | | | 1963521 |
| 1114294 | | 1950067 | 1927344 | 1960248 | | " | " | | | 1959231 |
| 1114295 | | 1931814 | " | 1950069 | 1935644 | " | " | 1935645 | 1966034 | 1935167 |
| 1114297 | | 1950067 | " | " | " | " | " | " | " | " |
| 1114298 | | 1959524 | 1941378 | 1960248 | 1956030 | 1952505 | " | | | 1950428 |
| 1114299 | | 1955499 | " | 1950069 | | 1956226 | " | | | 1962821 |
| 1114304 | | " | " | " | 1935644 | " | " | 1935645 | | 1935167 |
| 1114306 | | 1950067 | " | " | | " | " | | | 1962821 |
| 1114324 | 1960865 | " | 1960244 | 1960248 | | " | " | | 1966034 | 1960940 |
| 1114325 | | 1955499 | 1927344 | " | | " | " | | " | 1959231 |

(CONTINUED ON PAGE TWO)

**Delco-Remy**
SERVICE PARTS CATALOG

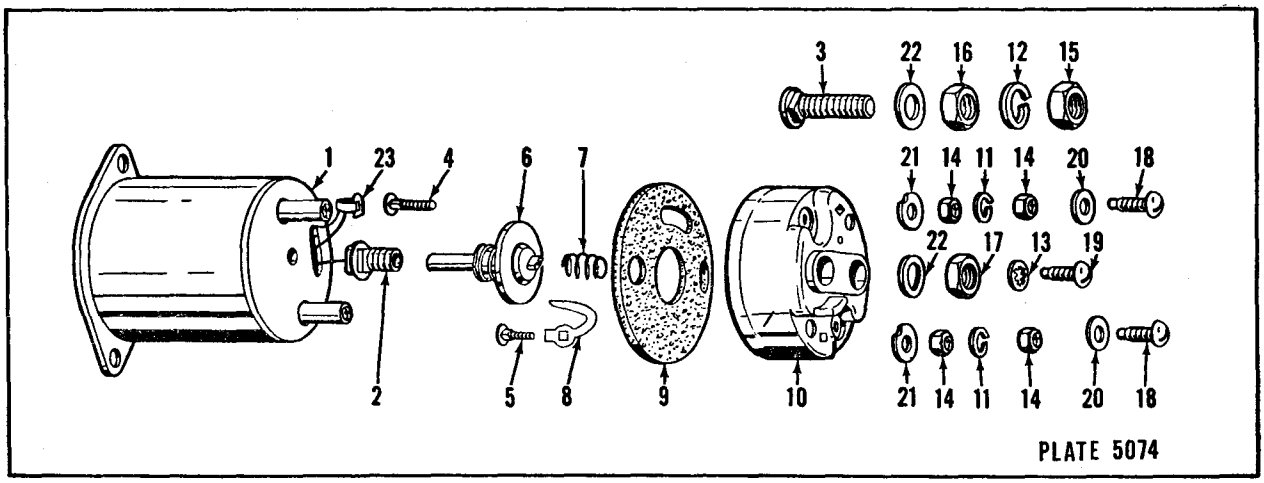


PLATE 5074

**Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.**

**(CONTINUED FROM PAGE ONE)**

| Model | Case & Coil | Stud — Motor Terminal | Stud — Battery Terminal | Stud — Switch Terminal | Stud — Resistor Terminal | Contact — Assem. | Spring — Return | Contact Blade | Gasket Cover | Cover |
|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
| 1114326 | | 1931814 | 1927344 | 1960248 | | 1956226 | 1853342 | | 1966034 | 1951752 |
| 1114327 | | 1941379 | 1941378 | 1950069 | 1956030 | 1952505 | " | | " | 1963521 |
| 1114328 | 1961620 | 1955499 | 1960244 | 1960248 | | 1956226 | " | | " | 1960940 |
| 1114330 | | 1950067 | 1927344 | 1950069 | 1935644 | " | " | 1935645 | | 1935167 |
| 1114331 | | 1955499 | 1942235 | " | | 1961940 | 1917128 | | 1966034 | " |
| 1114333 | | 1955499 | 1927344 | " | 1935644 | 1956226 | 1853342 | 1935645 | " | " |
| 1114334 | | " | " | " | | " | " | | | 1962821 |
| 1114335 | | 1950067 | 1960244 | " | | " | " | | | " |
| 1114336 | | 1955499 | 1927344 | " | | " | " | | 1966034 | " |
| 1114337 | | 1950067 | 1960244 | 1960248 | | " | " | | " | 1960940 |
| 1114338 | | 1959524 | 1941378 | 1950069 | 1956030 | 1952505 | " | | " | 1963521 |
| 1114339 | | 1950067 | 1960244 | " | *1950062 | 1956226 | " | 1935645 | | *1946898 |
| 1114340 | | 1949325 | 1927344 | " | 1935644 | " | " | " | | 1935167 |
| 1114341 | | 1955499 | " | " | " | " | " | " | | " |
| 1118810 | | " | " | " | " | " | " | " | | " |
| 1118811 | | " | " | " | | " | " | | | 1962821 |
| 1118816 | | " | " | " | 1935644 | " | " | 1935645 | | 1935167 |
| 1118821 | | " | " | " | " | " | " | " | | " |
| 1119798 | | " | " | " | | " | " | | 1966034 | 1962821 |
| 1119919 | | " | " | " | 1935644 | " | " | 1935645 | " | 1935167 |
| 1119935 | 1931813 | 1931814 | " | " | 1956030 | 1952563 | " | " | 1930629 | 1938151 |
| 1119936 | | 1955499 | " | " | 1935644 | 1956226 | " | " | 1966034 | 1935167 |
| 1119946 | | 1931814 | " | " | " | " | " | " | " | " |
| 1119965 | 1939931 | " | " | " | " | 1952563 | " | " | 1930629 | 1938151 |
| 1119966 | 1939932 | " | " | " | " | " | " | " | " | " |
| 1119967 | | 1955499 | " | " | | 1956226 | " | | | 1962821 |
| 1119974 | | " | " | " | 1935644 | " | " | 1935645 | | 1935167 |
| 1119986 | | " | " | " | | " | " | | | 1962821 |
| 1119998 | | 1931814 | " | " | | " | " | | 1966034 | " |
| 1119999 | | 1955499 | " | " | 1935644 | " | " | 1935645 | | 1935167 |

* Later units with #8 Resistor Terminal use 1950069 Stud and 1963525 Cover.

# MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | LOCK WASHERS | | |
| — | Lockwashers—Cover Attaching | 1956015 | 1114290 |
| — | Lock Washer—Terminal (3/8) | 9421425 | 1114211; 51-2-3-4-5-6-7; 61-2-3-4-6-8-9; 70-1-2-3-7-8-9; 81-2-3-4-7-9; 90-3-5-8-9; 304-6; 324-5-6-7-8; 30-3-4-5-6-7-8-9; 40-1; 1118810-11-16; 21; 1119936; 74; 86; 9-1-4-7; 98-9 |
| 11 | Lock Washer—Terminal (#8) | 1946143 | 1114251-2-3-5-6-7; 61-2-3-4; 98; 304; 1118810-11-16; 21; 1119798; 919; 35-6; 46; 65-6; 74; 86; 98-9 |
| 11 | Lock Washer—Terminal (#10) | 453435 | 1114211; 52-3; 62-3-4-8; 73; 81-2-7; 91-4-7; 95; 304; 24-5-6-8; 30-3; 37-9; 40-1; 1118810-16; 21; 1119936; 74; 99 |
| 11 | Lock Washer—Terminal Stud (8-32) | 1946143 | 1114211; 66-9; 70-1-2-7-8-9; 81-3-4-7; 90-1-3-5-7-8-9; 304-6; 27; 30-1-3-5-6-8-9; 40-1 |
| 12 | Lock Washer—Terminal (3/8) | 9421425 | 1114270; 1119798; 919; 35-6; 46; 65-6; 86 |
| 12 | Lock Washer—Terminal Sealing (⅜) | 1949012 | 1114211; 51-5; 61-4-8; 73; 82-4; 94-7; 1118821; 111406; 1119946 |
| 12 | Lock Washer—Terminal Stud (⅜) | 9421425 | 1114331 |
| 13 | Lock Washer—Terminal—Field Lead Attach Screw | 121801 | 1119798; 919; 36 |
| — | Lock Washer—Terminal—Internal Tooth (#10) | 456319 | 1114251-2-5-6-7; 62-3-4-6-9; 70-1-2-7-8-9; 81-3-4-7-9; 90-8-9; 91-4; 304; 24-5-8; 30-3-4-5-6-7-8-9; 40-1; 1118810-11-16; 21; 1119974; 86; 98 |
| — | Lock Washer—Terminal (#10 Internal Tooth) | 453792 | 1114331 |
| | NUTS | | |
| 14 | Nut—Terminal (8-32) ⅜ Hex | 120622 | 1114270; 91; 1119798; 919; 35; 46; 65-6 |
| 14 | Nut—Terminal (8-32) 11/32 Hex | 453996 | 1114211; 52-3-5-6-7; 61-2-3-6-8-9; 71-2-7-8-9; 81-2-3-4-7; 90-3-5-7-8-9; 304-6; 27; 30-3-4-5-6-8-9; 40-1; 1118810-16; 21; 1119936; 74; 86; 98-9 |
| 14 | Nut—Terminal (10-32) | 453284 | 1114211; 52-3-5-6; 62-3-4-8; 73; 81-2-4-7; 91-4-5-7-8-9; 304; 24-5-6-8; 30-3-7-9; 40-1; 1118810-16; 21; 1118810-74; 99 |
| 14 | Nut—Terminal Sealing (10-32) | 1948656 | 1114211; 55; 64-8; 73; 81-2-4-7; 94-5-7-8; 1114306; 25-6; 33; 1118821; 1119946 |
| 14 | Nut—Terminal Stud (8-32) | 453434 | 1114331 |
| 15 | Nut—Terminal (⅛-16x1/4) | 134566 | 1114211; 51-2-3-5-6-7; 61-2-3-4-6-8-9; 70-1-2-3-7-8-9; 81-2-3-4-7; 90; 91-3-4-5-7-8-9; 304-6; 24-5-6-7-8; 30-1-3-4-5-6-7-8-9; 40-1; 1118810-11-16; 21; 1119798; 919; 35-6; 46; 65-6-7; 74; 86; 98-9 |
| 16 | Nut—Terminal (3/8-16x5/32 thk.) | 805258 | 1114211; 52; 62-3-4-6-8-9; 70-1-2-7; 93; 325-6-7; 38; 1118810-11-16; 21; 1119798; 919; 35; 46; 65-6; 74; 86 |
| 16 | Nut—Terminal (3/8-16x5/32 thk.) | 1904419 | 1114251-3-5-6-7; 61; 73-8-9; 81-2-3-4-7-9; 90; 91-4-5-7-8-9; 304-6; 324-8; 30-3-4-5-6-7-9; 40-1; 1119936; 67; 98-9 |
| 16 | Nut—Terminal Sealing (⅜-16) | 1940361 | 1114251-2-5-6; 61; 73; 81-2-4-7-9; 95-7-8; 333; 38; 1118816; 21; 1119946 |
| 16 | Nut—Terminal Stud (⅜-16) | 1949671 | 1114331 |
| | SCREWS | | |
| 18 | Screw—Cover Attaching (Nylock) | 1956019 | 1114290-1; 1119935 |
| 18 | Screw—Cover Attaching | 453464 | 1114331 |
| 18 | Screw—Cover Attaching | 453468 | 1114211; 51-2-3-5-6-7; 61-2-3-4-6-8-9; 70-1-2-3-7-8-9; 81-2-3-4-7-9; 93-4-5-7-8-9; 304-6; 24-5-6-7-8; 30-3-4-5-6-7-8-9; 40-1; 1118810-11 16; 21; 1119978; 919; 46; 65-6-7; 74; 86; 98 |
| 19 | Screw—Field Lead Attach. to Terminal | 453468 | 1114251-2-6-7; 1118810-11-16; 21; 1119974; 86; 98 |
| 19 | Screw—Field Lead Attach. to Terminal | 453464 | 1119798; 919; 31-6 |
| 19 | Screw—Field Lead Attach. to Terminal | 1949653 | 1114262-3-4-6-9; 70-1-2-7-8-9; 81; 83-4-7-9; 90; 91-4-8-9; 304; 24-5-8; 30-3-4-5-6-7-8-9; 40-1 |

# MINOR PARTS SECTION

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | **WASHERS** | | |
| 20 | Washer—Cover Attaching Screw | 1923935 | 1114211; 51-2-3-5-6-7; 61-2-3-4-6-8-9; 70-1-2-3-7-8-9; 81-2-3-4; 94-7; 99; 1114306; 324-5-6-7-8; 30-1-3-4-5-6-7-8-9; 40-1; 1118810-11-16; 21; 1119798; 919; 35-6; 46; 65-6-7; 74; 86; 98-9 |
| 20 | Washer—Cover Attaching Screw | 1956015 | 111429-1 |
| 21 | Washer—Insulating Terminal ($\frac{11}{64}$ I.D.x$\frac{1}{16}$ O.D.) | 1923935 | 1114253-7; 304; 30-1; 40-1; 1118810-11; 1119798; 919; 35-6; 46; 65-6-7; 74; 86; 98-9 |
| — | Washer—Ins. Terminal Stud (3/8-16) | 1956016 | 1114290-1 |
| 21 | Washer—Ins. Terminal Stud (8-32) | 1923935 | 1114269; 70-1-7; 330; 1119936 |
| 21 | Washer—Ins. Terminal Stud (8-32) | 1956014 | 1114290-1 |
| 22 | Washer—Insulating Terminal ($\frac{11}{32}$ I.D.x$\frac{11}{32}$ O.D.) | 1927345 | 1114252-3-6-7; 60; 70-1-7; 99; 304; 30-1-4-5-6; 40-1; 1118810-11-16; 1119798; 919; 35-6; 65-6-7; 74; 86; 98-9 |
| — | Washer—Ins.—Terminal Stud ($\frac{3}{8}$-16) | 1917114 | 1114266 |
| — | Washer—Plain—Terminal Stud (8-32) | 810794 | 1114290-1 |
| — | Washer—Plain—Terminal (3/8-16) | 805790 | 1114262-3; 72-8-9; 83; 90-1; 324-8; 37-9 |
| — | Washer—Plain—Resistor Terminal | 815540 | 1114339 |
| — | Washer—Plain—Resistor Terminal #10 | 1856056 | 1114262-3; 324-8; 37-8 |
| — | Washer—Rubber—Resistor Terminal #8 | 1950071 | 1114339 |
| — | Washer—Plain—Switch Terminal | 815540 | 1114262-3-6; 72-8-9; 83; 339 |
| — | Washer—(Rubber)—Motor Terminal | 1950064 | 1114262-3-6; 72-8-9; 83; 324-8; 37-9 |
| — | Washer—Rubber—Resistor Terminal #10 | 1950063 | 1114262-3; 324-8; 37-9 |
| — | Washer—Rubber—Switch Terminal | 1950071 | 1114262-3; 72-8-9; 83; 339 |
| — | Washer—Sealing Terminal Stud (3/8-16) | 1949012 | 1114281-7-9; 93-4-5-7-8; 1114306; 25-6-7; 33-8 |
| — | Washer—Sealing Terminal Stud ($\frac{11}{32}$ I.D. $\frac{11}{32}$ O.D.) | 1953479 | 1114333 |
| | **MISCELLANEOUS** | | |
| — | CLIP—Terminal (For 8-32) Switch | 1923924 | 1114290; 91-2-8; 327; 38 |
| 23 | CLIP—Terminal | 1949538 | 1114211; 51-2-3-5-6-7; 61-2-3-6-9; 70-1-2-7-8; 81-2-3-4-7-9; 93-5-7-9; 304-6; 27; 30; 33; 38; 1118810-11-16; 21; 1119798; 919; 35-6; 46; 65-6-7; 74-9; 86; 98-9 |
| 23 | CLIP—Terminal (For 10-32) | 1958278 | 1114211; 64-8; 73; 94-8; 325-6-8 |
| 23 | CLIP—Terminal (For 10-32) | 1960249 | 1114324; 37 |
| — | CLIP—Terminal (For 8-32) Switch | 1926958 | 1114334 |
| — | CLIP—Terminal (For 8-32) Switch | 1949538 | 1114331-5-6-9; 40-1 |
| — | CONNECTOR | 1940133 | 1119967 |
| — | GASKET—Between Switch & Drive Hsg. | 1952427 | 1114326-7; 33-7 |
| — | INSULATION—Plunger Shaft | 1955934 | 1114290-1 |
| — | WICK—Cover | 1961942 | 1114331 |

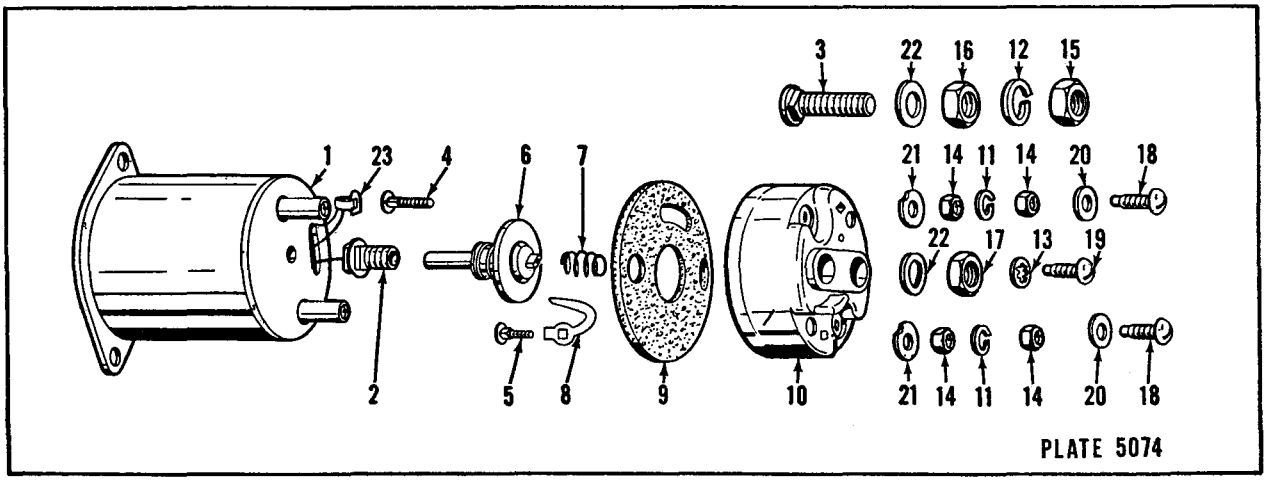


Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

| Model | Case & Coil | Stud — Motor Terminal | Stud — Battery Terminal | Stud — Switch Terminal | Stud — Resistor Terminal | Contact — Assem. | Spring — Return | Contact Blade | Gasket Cover | Cover |
|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
| 1114342 | | 1955499 | 1960244 | 1950069 | 1950062 | 1956226 | 1853342 | 1935645 | 1966034 | 1946898 |
| 1114343 | | " | " | " | " | " | " | " | " | 1950065 |
| 1114344 | | " | 1927344 | " | 1935644 | " | " | " | | 1935167 |
| 1114345 | | 1950067 | 1960244 | " | " | " | " | " | | " |
| 1114346 | | " | " | " | " | " | " | " | 1966034 | " |
| 1114347 | | 1955499 | " | " | " | " | " | " | " | " |
| 1114348 | | 1950067 | " | " | 1950069 | 1952505 | " | 1935645 | 1956013 | 1956079 |
| 1114349 | | 1955499 | " | " | | " | " | | " | 1956017 |
| 1114350 | | " | " | " | 1935644 | 1956226 | " | 1935645 | | 1935167 |
| 1114351 | | " | " | 1960248 | | " | " | | 1966034 | 1960940 |
| 1114352 | | 1955499 | " | 1950069 | 1955681 | 1952505 | 1917128 | 1948202 | 1966034 | 1960895 |
| 1114353 | | 1950067 | " | " | | 1956226 | 1853342 | | 1966034 | 1953123 |
| 1114354 | | " | " | 1960248 | | " | " | | " | 1960940 |
| 1114355 | | 1955499 | " | 1950069 | 1956030 | " | " | 1935645 | " | 1963521 |
| 1114356 | | " | " | " | 1950069 | " | " | " | " | 1963525 |
| 1114358 | | 1950067 | " | " | | " | " | | | 1962821 |
| 1114359 | | 1955499 | " | " | 1935644 | " | " | 1935645 | | 1935167 |
| 1114360 | | 1950067 | " | " | " | " | " | " | | " |
| 1114362 | | 1955499 | " | " | " | 1956226 | " | " | | " |
| 1114363 | | 1950067 | " | " | 1950069 | 1952505 | " | " | 1966034 | 1963525 |
| 1114364 | | " | " | " | " | " | " | " | | 1935167 |
| 1114365 | | 1955499 | " | " | 1950062 | 1956226 | " | " | " | 1946898 |
| 1114366 | | 1950067 | " | " | 1935644 | " | " | " | 1966378 | 1966377 |
| 1114367 | | 1949890 | " | " | " | " | " | " | " | " |
| 1114369 | | " | " | " | " | " | " | " | | " |
| 1114370 | | 1955499 | " | " | 1970207 | " | " | " | | 1935167 |

**Delco Remy**
SERVICE PARTS CATALOG

# MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | LOCK WASHERS | | |
| 11 | Lock Washer—Terminal (#10) | 453435 | 1114344-8; 52; 65-6-7; 70 |
| 11 | Lock Washer—Terminal Stud (8-32)—Switch | 453792 | 1114352 |
| 11 | Lock Washer—Terminal Stud (8-32) | 1946143 | 1114342-3-4-8-9; 50-2-5-6; 63-5-6-7; 70 |
| 12 | Lock Washer—Terminal (⅜) | 9421425 | 1114344-8-9; 52-5-6; 63-5-6-7; 70 |
| 13 | Lock Washer—Terminal—Internal Tooth (#10) | 456319 | 1114344-8-9; 53-5; 63-5-6-7 |
| | NUTS | | |
| 14 | Nut—Terminal (8-32) 11/32 Hex | 453996 | 1114344-5-8-9; 53-5-6-8; 59; 60-2-3-4-5-6-7-9; 70 |
| 14 | Nut—Terminal (10-32) | 453284 | 1114342-3-4-5-8; 51-4 |
| 14 | Nut—Terminal Stud (8-32) | 453434 | 1114352 |
| 14 | Nut—Sealing—Terminal Stud (10-32) | 1948656 | 1114346-7; 50 |
| 14 | Nut—Terminal Stud (10-32) | 453433 | 1114352-9; 60-2-4-5-6-7-9; 70 |
| 15 | Nut—Terminal (⅜-16x¼) | 134566 | 1114344-8-9; 55-6; 63-5-6-7; 70 |
| 16 | Nut—Terminal (⅜-16x5/32 thk.) | 1904419 | All |
| 16 | Nut—Terminal Stud (⅜-16) | 9415318 | 1114352 |
| 16 | Nut—Terminal Sealing (⅜-16) | 1940361 | 1114346-7; 50-2 |
| 16 | Nut—Terminal Stud (⅜-16) | 120377 | 1114360-5 |
| 17 | Nut—Terminal (⅜-16x¼") Motor | 134566 | 1114356 |
| 17 | Nut—Terminal (⅜-16") Motor | 1967959 | 1114362-4-7-9 |
| | SCREWS | | |
| 18 | Screw—Cover Attaching (Nylock) | 1956019 | 1114348-9 |
| 18 | Screw—Cover Attaching | 453464 | 1114352 |
| 18 | Screw—Cover Attaching | 453468 | 1114342-3-4-5-6-7; 50-1-3-4-5-6-8; 60-2-3-4-5-6-7-9; 70 |
| 18 | Screw—Cover Attaching | 1943225 | 1114359 |
| 19 | Screw—Field Lead Attach. to Terminal (#10-32x1") | 9413474 | 1114356 |
| 19 | Screw—Field Lead Attach. to Terminal (#10-32x1/16") | 9427815 | 1114344-8-9; 56; 63-5-6 |
| — | Screw—Terminal Stud (10-32) | 453464 | 1114352 |
| — | Screw—Terminal Stud (8-32) | 9427815 | 1114367; 70 |
| | WASHERS | | |
| 20 | Washer—Cover Attaching Screw | 1923935 | 1114342-3-4-5-6-7; 50-1-2-3-4-5-6-8; 60-2-3-4-5-9; 70 |
| 20 | Washer—Cover Attaching Screw | 1956015 | 1114348-9; 66-7 |
| — | Washer—Ins. Terminal Stud (⅜-16) | 1956016 | 1114348-9; 66-7 |
| 21 | Washer—Ins. Terminal Stud (8-32) | 1923935 | 1114344-5-6; 55-8-9; 60-2-4-9; 70 |
| 21 | Washer—Ins. Terminal Stud (8-32) | 1956014 | 1114348-9; 66 |
| 21 | Washer—Ins. Terminal Stud (8-32) | 1956015 | 1114367 |
| 22 | Washer—Insulating Terminal (23/32 I.D.x19/32 O.D.) | 1927345 | 1114344-5; 55-8-9; 60-2-4-9; 70 |
| — | Washer—Plain—Terminal Stud (⅜-16) | 812622 | 1114348-9; 70 |
| — | Washer—Plain—Terminal Stud (8-32) | 1914610 | 1114348-9 |
| 22 | Washer—Plain—Terminal (⅜-16) | 805790 | 1114342-3-8-9; 51-3-4-6; 63-5 |
| — | Washer—Plain—Resistor Terminal | 1856056 | 1114342-3; 51-4; 65 |
| 21 | Washer—Plain—Switch Terminal | 815540 | 1114342-3; 53-6; 63; 65 |
| — | Washer—Plain—Motor Terminal Stud | 812622 | 1114370 |
| — | Washer—(Rubber)—Motor and Batt. Term. | 1950064 | 1114342-3; 51-3-4-6; 63-5; 70 |
| — | Washer—Rubber—Resistor Terminal | 1950063 | 1114342-3; 51-4; 65 |
| — | Washer—Rubber—Switch Terminal | 1950071 | 1114342-3; 50-3-6; 63-5; 70 |
| — | Washer—Space (1/32" thick) FLD Att. Screw | 1883115 | 1114356 |
| — | Washer—Sealing Terminal Stud (⅜-16) | 1949012 | 1114346-7; 52 |
| — | Washer—Space (1/16" thick) FLD Att. Screw | 1856056 | 1114356 |
| | MISCELLANEOUS | | |
| 23 | CLIP—Terminal | 1923924 | 1114348-9 |
| 23 | CLIP—Terminal | 1958278 | 1114351-4 |
| 23 | CLIP—Terminal | 1949538 | 1114342-3-4-5-6-7; 50-2-3-5-6-8-9; 60-2-3-5-6-7-9; 70 |
| — | CONNECTOR—Terminal Adapter | 1963519 | 1114355-6 |
| — | INSULATION—Plunger Shaft | 1955934 | 1114348-9 |
| — | SHIELD—Heat | 9789465 | 1114366 |
| — | SPRING—Return Plunger | 1958679 | 1114348; 55-6 |
| — | TUBE—Cover Screw Support | 1955682 | 1114352 |

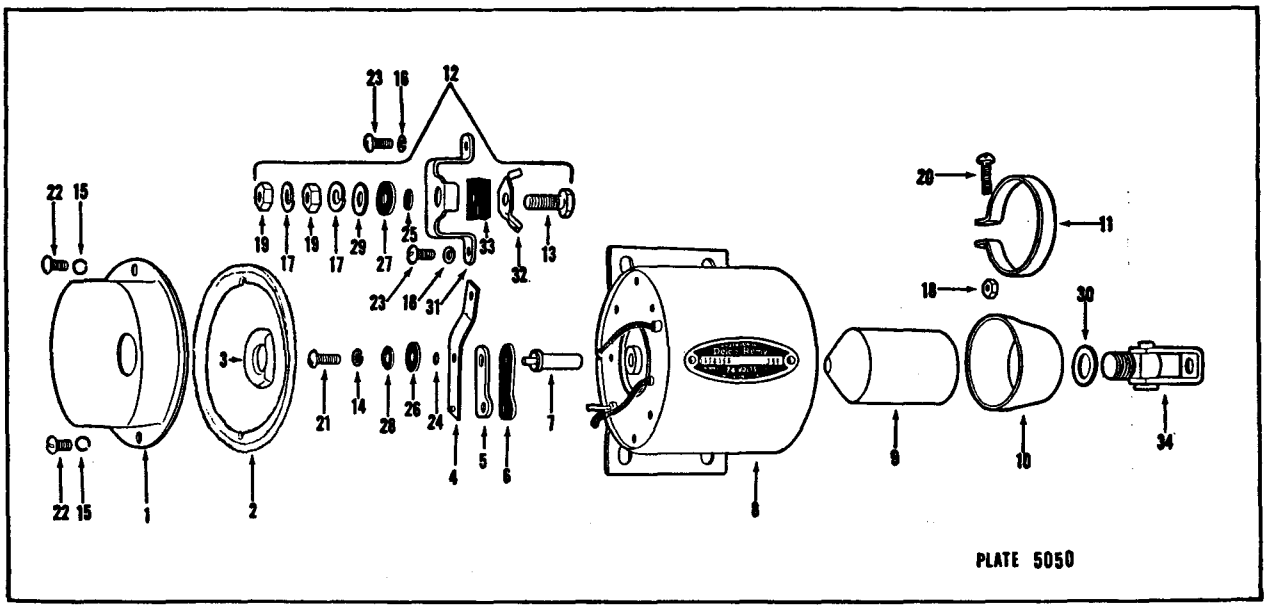


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

| Model No. | Cover | Gasket | Gasket | Spring — Contact | Contact & Support | Insulator — Contact | Push Rod | Case & Coil | Plunger | Boot — Plunger | Clamp — Boot | Bracket Assem. — Terminal | Stud — Terminal |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 |
| 1433 | | | | | | | | 1874978 | 1874986 | | | | |
| 1511 | 1962598 | | | 1850889 | 1850888 | 1850887 | 1850886 | 1850893 | 1847232 | | | 1850890 | 1847243 |
| 1535 | " | 1877519 | 1877518 | 1929286 | 1857304 | 1857308 | 1857306 | 1857307 | " | 1847234 | 1847233 | " | " |
| 1538 | " | " | " | " | " | " | " | " | " | | | " | " |
| 1114401 | 1945875 | | | 1936532 | 1936528 | | 1936527 | 1945874 | | 1936537 | | | |
| 1114402 | 1945878 | | | " | " | | " | 1945876 | | " | | | |
| 1114404 | 1947787 | | | 1947799 | | | | 1947789 | 1947794 | | | | 1950069 |
| 1115500 | 1962598 | 1877519 | 1877518 | | | | | 1952440 | 1962597 | | | 1850890 | 1847243 |
| 1115507 | 1940362 | | | 1940358 | 1940356 | | 1940360 | | 1847232 | 1847234 | 1847233 | | |
| 1118030 | | | | | | | | 1879792 | 1879795 | | | | |
| 1118039 | 1962598 | 1877519 | 1877518 | 1929286 | 1857304 | 1857308 | 1857306 | 1857307 | 1847232 | 1847234 | 1847233 | 1850890 | 1847243 |
| 1118057 | | | | | | | | 1885899 | 1879795 | | | | |
| 1118061 | 1962598 | 1877519 | 1877518 | 1929286 | 1857304 | 1857308 | 1857306 | 1886127 | 1847232 | 1847234 | 1847233 | 1850890 | 1847243 |
| 1118062 | " | " | " | " | " | " | " | 1888035 | * | " | " | " | " |
| 1118074 | " | " | " | " | " | " | " | 1903330 | 1847232 | " | " | " | " |
| 1118075 | " | " | " | " | " | " | " | 1857307 | " | " | " | " | " |
| 1118091 | " | " | " | " | " | " | " | " | " | | | " | " |
| 1118194 | " | " | " | " | " | " | " | 1886127 | " | 1847234 | 1847233 | " | " |
| 1118196 | " | " | " | " | " | " | " | † | " | " | " | " | " |
| 1118807 | 1943612 | | | 1936532 | 1936528 | | 1936527 | 1936506 | | 1936537 | | | |
| 1119796 | 1962598 | 1877519 | 1877518 | 1929286 | 1857304 | 1857308 | 1857306 | † | 1847232 | 1847234 | 1847233 | 1850890 | 1847243 |
| 1119817 | 1940362 | | | 1940358 | 1940356 | | 1940360 | | " | " | " | | |
| 1119821 | 1962598 | 1877519 | 1877518 | 1929286 | 1857304 | 1857308 | 1857306 | | " | " | " | 1850890 | 1847243 |
| 1119823 | " | " | " | " | " | " | " | | " | " | " | " | " |
| 1119826 | " | " | " | " | " | " | " | | " | " | " | " | " |
| 1119911 | " | " | " | " | " | " | " | † | " | " | " | " | " |
| 1119918 | 1936535 | | | 1936532 | 1936528 | | 1936527 | 1936506 | | 1936537 | | | |

*Plunger not furnished by Delco-Remy.
†Not set up for service. Replace with complete unit.

# MINOR PARTS SECTION

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | **LOCK WASHERS** | | |
| 14 | Lock Washer—Contact Attaching Screw | 453844 | 1511-35-38; 1118039; 61-2; 74-5; 91; 194-6; 1119796; 821-3-6; 911 |
| 14 | Lock Washer—Contact Support Attaching Screw | 121801 | 1114401-2; 1118807; 1119918 |
| 15 | Lock Washer—Cover Screw | 453844 | 1511-35-38; 1115500; 1118039; 61-2; 74-5; 91; 194-6; 1119796; 821-3-6; 911 |
| 15 | Lock Washer—Cover Attaching Screw | 1923935 | 1110507; 1119817 |
| — | Lock Washer—Mounting Plate Attach. Screw | 138599 | 1115500 |
| 16 | Lock Washer—Terminal Bracket Attaching Screw | 453844 | 1511-35-38; 1115500; 1118039; 61-2; 74-5; 91; 194-6; 1119796; 821-3-6; 911 |
| 17 | Lock Washer—Terminal Stud | 453294 | 1115500 |
| 17 | Lock Washer—Terminal Stud | 1946143 | 1115507 |
| 17 | Lock Washer—Terminal Stud | 9421423 | 1511-35-38; 1118039; 61-2; 74-5; 91; 194-6; 1119796; 821-3-6; 911 |
| 17 | Lock Washer—Terminal | 1946143 | 1119817 |
| 17 | Lock Washer—Terminal Stud | 121801 | 1114404 |
| | **NUTS** | | |
| 18 | Nut—Boot Clamp Screw | 109723 | 1535; 1115507; 1118039; 61-2; 74-5; 194-6; 1119796; 817; 21-3-6; 911 |
| 19 | Nut—Terminal | 134551 | 1511-35-38; 1118039; 61-2; 74-5; 91; 194-6; 1119796; 821-3-6; 911 |
| 19 | Nut—Terminal | 120622 | 1114404; 1119817 |
| 19 | Nut—Terminal | 116004 | 1115500 |
| 19 | Nut—Terminal | 453996 | 1115507 |
| — | Nut—Terminal (Sealing) | 1940361 | 1115507; 1119817 |
| | **SCREWS** | | |
| 20 | Screw—Boot Clamp | 453357 | 1535; 1118039; 62; 194; 1119796 |
| 20 | Screw—Boot Clamp | 454155 | 1115507; 1118061; 74-5; 196; 1119817; 21-3-6; 911 |
| 21 | Screw—Contact Attaching | 453461 | 1511 |
| 21 | Screw—Contact Attaching | 9417096 | 1535-38; 1118039; 61-2; 74-5; 91; 194-6; 1119796; 821-3-6; 911 |
| 21 | Screw—Contact Attaching | 1945463 | 1115507; 1119817 |
| 21 | Screw—Contact Support Attaching | 132900 | 1114401-2; 1118807; 1119918 |
| 22 | Screw—Cover Attaching | 453418 | 1511-35-38; 1115500; 1118039; 61-2; 74-5; 91; 194-6; 1119796; 821-3-6; 911 |
| 22 | Screw—Cover Attaching | 133641 | 1114401-2; 1118807; 1119918 |
| 22 | Screw—Cover Attaching | 453468 | 1114404 |
| 22 | Screw—Cover Attaching | 1945460 | 1115507 |
| — | Screw—Mounting Plate Attaching | 133634 | 1115500 |
| — | Screw—Terminal | 1837533 | 1115507; 1119817 |
| 23 | Screw—Terminal Bracket Attaching | 453461 | 1511-35-38; 1115500; 1118039; 61-2; 74-5; 91; 194-6; 1119796; 821-3-6; 911 |
| | **WASHERS** | | |
| — | Washer—Cover Attaching Screw | 1923935 | 1114404 |
| 24 | Washer—Insul. (Bushing) Contact Attaching Screw | 1837223 | 1511-35-38; 1118039; 61-2; 74-5; 91; 194-6; 1119796; 821-3-6; 911 |
| 25 | Washer—Insul. (Bushing) Terminal Stud | 1905124 | 1511-35-38; 1115500; 1118039; 61-2; 74-5; 91; 194-6; 1119796; 821-3-6; 911 |
| 25 | Washer—Insul. Terminal Stud (8-32) | 1923935 | 1114404 |
| 26 | Washer—Insul.—Contact Attaching Screw | 1882247 | 1511-35-38; 1118039; 61-2; 74-5; 91; 194-6; 1119796; 821-3-6; 911 |
| 27 | Washer—Terminal Stud | 810501 | 1535; 1115500; 1118039; 61; 74-5; 194-6; 1119796; 817; 21-3-6; 911 |
| 28 | Washer—Plain—Contact Attaching Screw | 1914476 | 1511-35-38; 1118039; 61-2; 74-5; 91; 194-6; 1119796; 821-3-6; 911 |
| — | Washer—Plain—Terminal Bracket Attaching Screw | 810794 | 1115500 |
| 29 | Washer—Plain—Terminal Stud | 1905125 | 1511-35-38; 1115500; 1118039; 61-2; 74-5; 91; 194-6; 1119796; 821-3-6; 911 |
| 30 | Washer—Space—Adjusting Screw | 1905382 | 1511-35-38; 1115507; 1118039; 61-2; 74-5; 91; 194-6; 1119796; 821-3-6; 911 |
| | **MISCELLANEOUS** | | |
| 32 | CLIP—Terminal | 1847418 | 1511-35-38; 1115500; 1118039; 61-2; 74-5; 91; 194-6; 1119796; 821-3-6 |
| 32 | CLIP—Terminal | 1949538 | 1119817 |
| 32 | CLIP—Terminal | 1949538 | 1114404; 1115507 |

# MINOR PARTS SECTION

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | MISCELLANEOUS—Continued | | |
| — | GASKET—Mounting Plate | 1963293 | 1115500 |
| — | GASKET—Plunger Retainer Plate | 1948111 | 1114404 |
| — | GROMMET—In Cover | 1880400 | 1114401–2; 1118807; 1119918 |
| 33 | INSULATOR—Terminal | 1905466 | 1511–35–38; 1115500; 1118039; 61–2; 74–5; 91; 194–6; 1119796; 821–3–6; 911 |
| 34 | LINK (& Screw) Assembly | 1871630 | 1535; 1115507; 1118194; 1119796; 817; 21–3–6; 911 |
| 34 | Link SCREW (Only) | 1847229 | 1538; 1118039; 75 |
| 34 | LINK (& Screw) | 1887111 | 1118061; 74; 196 |
| — | PLATE—Mounting | 1952525 | 1115500 |
| — | PLATE—Plunger Retainer | 1947798 | 1114404 |
| — | SPRING—Push Rod | 1936526 | 1114401–2; 1118807; 1119918 |

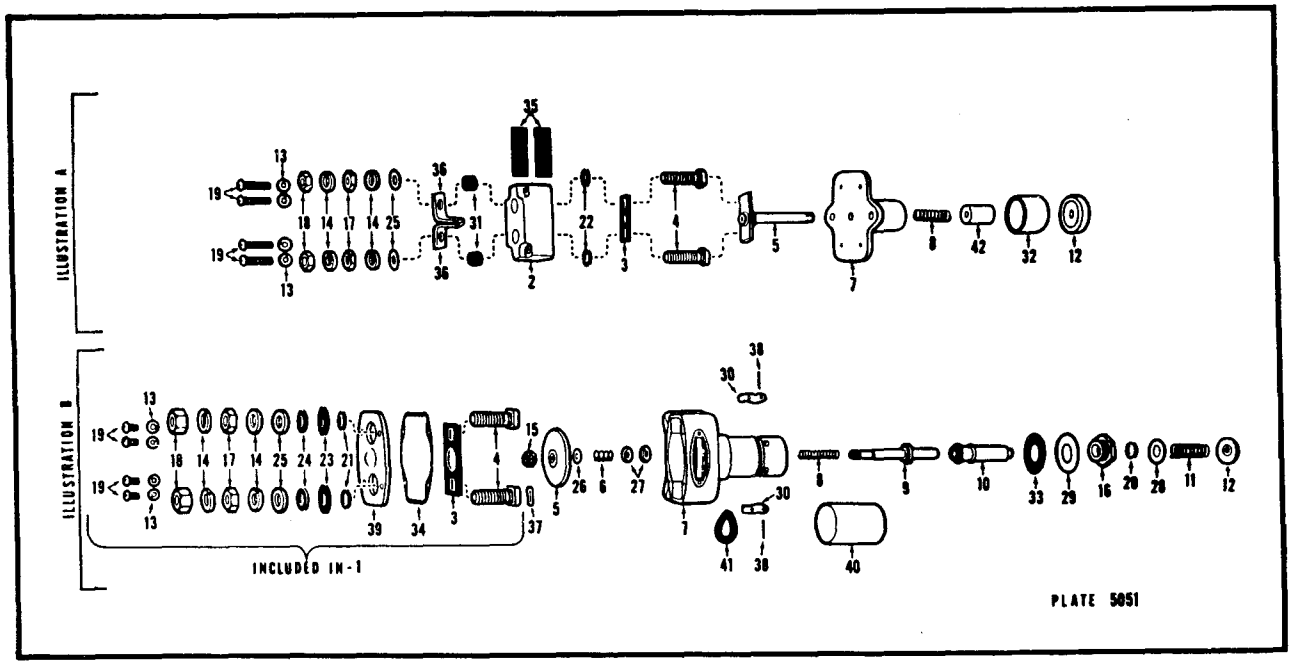


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

| Model | Plate Assem. — Terminal | Case — Terminal | Insulator — Terminal | Stud — Terminal | Contact — Assem. | Spring — Contact | Case or Housing | Spring — Return | Push Rod | Shaft | Spring | Button — Push |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| **Illus. A** | **1** | **2** | **3** | **4** | **5** | **6** | **7** | **8** | **9** | **10** | **11** | **12** |
| **407-A** | | 1836835 | 1836831 | 1836830 | 1837478 | | 1836827 | 1836825 | | | | 1836822 |
| **407-E** | | " | 1865186 | 1862703 | 1865189 | | " | " | | | | 1869006 |
| **407-F** | | " | " | " | 1867172 | | " | " | | | | 1836822 |
| **407-G** | | 1871781 | " | 1853333 | " | | 1871783 | " | | | | " |
| **Illus. B** | **1** | **2** | **3** | **4** | **5** | **6** | **7** | **8** | **9** | **10** | **11** | **12** |
| **407-C** | 1855486 | | 1855488 | 1855489 | 1855481 | 1847240 | 1855477 | 1857425 | 1855478 | †1884521 | 1855496 | †1836822 |
| **1996453** | " | | " | " | " | " | 1874860 | " | " | " | " | " |
| **1996467** | " | | " | " | " | " | 1903773 | " | " | " | " | " |
| **1996491** | " | | " | " | " | " | 1858371 | " | " | " | " | " |

†Shaft Assembly (w/Button and Spring) 1879682.

**Delco-Remy**
SERVICE PARTS CATALOG

# MINOR PARTS SECTION

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | **LOCK WASHERS** | | |
| 13 | Lock Washer—Case or Plate Attaching Screw | 120217 | 407-A-C-E-F-G; 1996453; 67; 91 |
| 14 | Lock Washer—Terminal | 120381 | 407-A-E-F-G |
| 14 | Lock Washer—Terminal | 1902494 | 407-C; 1996453; 67; 91 |
| | **NUTS** | | |
| 15 | Nut—Contact Attaching | 427598 | 407-C; 1996453; 67; 91 |
| 16 | Nut—Push Button Shaft | 1913795 | 407-C; 1996453; 67; 91 |
| 17 | Nut—Terminal (3/8-16x5/32 thk.) | 805258 | 407-E-F-G |
| 17 | Nut—Terminal (1/2-13x5/16 thk.) | 120238 | 407-C; 1996453; 67; 91 |
| 18 | Nut—Terminal (3/8-16x3/4 thk.) | 134566 | 407-A-E-F-G |
| 18 | Nut—Terminal (1/2-13x1/2 thk.) | 120378 | 407-C; 1996453; 67; 91 |
| | **SCREWS** | | |
| 19 | Screw—Case Attaching | 132926 | 407-A-E-F |
| 19 | Screw—Case Attaching | 132915 | 407-G |
| 19 | Screw—Plate Attaching | 132908 | 407-C; 1996453; 67; 91 |
| | **WASHERS** | | |
| 20 | Washer—Felt (In Shaft Nut) | 1879684 | 407-C; 1996453; 67; 91 |
| 21 | Washer—Insul. (Bushing) Terminal | 1855490 | 407-C; 1996453; 67; 91 |
| 22 | Washer—Insul.—Terminal | 1861076 | 407-E-F-G |
| 23 | Washer—Insul.—Terminal (1 3/16 O.D.) | 1903058 | 407-C; 1996453; 91 |
| 24 | Washer—Insul.—Terminal (1/4 O.D.) | 1855491 | 407-C; 1996453; 67; 91 |
| 25 | Washer—Plain—Terminal | 812622 | 407-A-E-F-G |
| 25 | Washer—Plain—Terminal | 811912 | 407-C; 1996453; 67; 91 |
| 26 | Washer—Retainer—Contact Spring | 1913041 | 407-C; 1996453; 67; 91 |
| 27 | Washer—Retainer—Contact Spring | 1913041 | 407-C; 1996453; 67; 91 |
| 28 | Washer—Retainer—Felt | 1879685 | 407-C; 1996453; 67; 91 |
| 29 | Washer—Retainer—Housing Sleeve | 1856801 | 407-C; 1996453; 67; 91 |
| | **MISCELLANEOUS** | | |
| 30 | ARM—Push Rod Release | 1855497 | 407-C; 1996453; 67; 91 |
| 31 | BUSHING—Insul. Terminal | 1836833 | 407-A |
| 31 | BUSHING—Insul. Terminal | 1865187 | 407-E-F-G |
| 32 | COVER—Dust | 1847454 | 407-E |
| 33 | GASKET—Sleeve Retainer | 1879686 | 407-C; 1996453; 67; 91 |
| 34 | GASKET—Terminal Plate | 1906053 | 407-C; 1996453; 67 |
| 35 | INSULATOR—Switch Case | 1836834 | 407-A-E-F-G |
| 36 | INSULATOR—Terminal | 1836829 | 407-A-E-F-G |
| 37 | PIN—Cotter—Contact Nut | 119981 | 407-C; 1996453; 67; 91 |
| 38 | PIN—Release Arm | 1855498 | 407-C; 1996453; 67; 91 |
| — | PLATE—Terminal Locking | 1836832 | 407-A |
| 39 | PLATE Only—Terminal | 1915614 | 407-C; 1996453; 67; 91 |
| 40 | SLEEVE—Housing | 1856800 | 407-C; 1996453; 67; 91 |
| 41 | SPRING—Release Arm | 1855499 | 407-C; 1996453; 67; 91 |
| 42 | SUPPORT—Push Button | 1836823 | 407-A-E-F-G |

| Model No. | Nut — Mtg. | Washer — Mtg. Nut | Screw or Nut — Terminal | Lock-washer — Terminal Screw | Clamp — Terminal |
|---|---|---|---|---|---|
| 1377 | | | 1864099 | 1904376 | 1855978 |
| 1379 | | | " | " | " |
| 1385 | 1855241 | 1855242 | " | " | " |
| 1386 | | | " | " | " |
| 1387 | 1855936 | | " | " | " |
| 1388 | | | " | " | " |
| 1389 | 1855241 | 1855242 | " | " | " |
| 1394 | 1855936 | | " | " | " |
| 1398 | † | | " | | " |
| 1400 | | | 141547 | 1873844 | |
| 1405 | 1855241 | 1855242 | 1864099 | | 1855978 |
| 1407 | | | " | | " |
| 1415 | 1855241 | 1855242 | " | | " |
| 1435 | " | " | " | | " |
| 1436 | " | " | " | | " |
| 1437 | " | " | ♦ | 1904377 | " |
| 1449 | " | " | 1864099 | | " |
| 1996001 | | | 141547 | 1904376 | |
| 1996002 | † | | 1864099 | " | 34240 |
| 1996003 | | | 141547 | " | 1855978 |
| 1996004 | 1855241 | 1855242 | 1864099 | | " |
| 1996005 | | | " | | " |
| 1996006 | 1855241 | 1855242 | " | | " |
| 1996007 | " | " | " | | " |
| 1996008 | † | | " | 1904376 | 34240 |
| ⊕1996009 | | | 1881793 | 115543 | |
| 1996010 | 1855241 | 1855242 | 1864099 | | 1855978 |
| 1996011 | 1881516 | 1881517 | " | | " |
| 1996012 | 1855241 | 1855242 | " | | " |
| 1996013 | " | " | " | | " |
| 1996014 | 1855241 | 1855242 | 1864099 | | 1855978 |
| 1996015 | " | " | " | | " |
| ⊕1996017 | | | 1881793 | 115543 | |
| 1996018 | 1855241 | 1855242 | 1864099 | | 1855978 |
| 1996019 | † | | " | | " |
| 1996020 | | | 1881793 | 115543 | |
| 1996021 | | | " | " | |
| 1996027 | ■ | a | 142212 | 138557 | |
| 1996031 | 1855241 | 1855242 | 1864099 | | 1855978 |
| 1996032 | 1914379 | 1913828 | " | 1873844 | |
| ⊕1996033 | | | 1881793 | 115543 | |

| Model No. | Nut — Mtg. | Washer — Mtg. Nut | Screw or Nut — Terminal | Lock-washer — Terminal Screw | Clamp — Terminal |
|---|---|---|---|---|---|
| 1996034 | 1855241 | | 1864099 | | 1855978 |
| 1996035 | " | 1855242 | " | | " |
| 1996036 | " | " | " | | " |
| 1996037 | * | | " | | " |
| 1996038 | | | " | | " |
| 1996039 | * | | " | | " |
| 1996040 | * | | " | | " |
| 1996044 | ▲ | Furnished | by Nash | | |
| 1996045 | * | | 1864099 | | 1855978 |
| 1996046 | □ | | " | | " |
| 1996048 | 1917869 | | " | | " |
| 1996049 | " | | " | | " |
| 1996050 | " | | " | | " |
| 1996051 | " | | " | | " |
| 1996053 | * | | " | | " |
| 1996054 | | | " | | " |
| 1996055 | * | | " | | " |
| 1996059 | 1923281 | | " | | " |
| 1996060 | " | | " | | " |
| 1996061 | " | | " | | " |
| 1996062 | " | | " | | " |
| 1996063 | " | | " | | " |
| 1996064 | " | 1855242 | " | | " |
| 1996065 | " | " | " | | " |
| 1996066 | " | " | " | | " |
| 1996067 | " | " | " | | " |
| 1996068 | | | 1881793 | 115543 | |
| 1996069 | | | 1864099 | | 1855978 |
| 1996070 | | | 1881793 | 115543 | |
| 1996074▲ | | | | | |
| 1996076 | 1855936 | | 120614 | 120217 | |
| 1996079 | ■ | a | " | " | |
| 1996080 | b | a | d | " | |
| 1996081 | # | c | 1864099 | 1873844 | |
| 1996086 | 1923281 | | " | | 1855978 |
| 1996090 | | | " | | " |
| 1996095 | 1855936 | 138557 | | | |
| 1996096 | " | " | | | |
| 1996097 | ○ | a | 453433 | 453296 | |
| 1997735 | 1881516 | 1881517 | 1864099 | | 1855978 |
| 1997746 | 1855241 | 1585242 | " | | " |

†1873052 knurled nut outside, 1855936 hex nut inside
♦1864099 is 8-32 and 132688 is 6-32.
■Use 1855936 mounting nut (inner), 1903896 mounting nut (outer) 1908720 Boot. Later units with boot attached to mounting nut use 1956191 Boot & Nut Assembly.
⊕1912183 mtg. bracket (Shipped separate).
□1917531 mtg. bushing (Shipped separate).
*1911548 mtg. bushing (Shipped separate).
▲1911563 mtg. bushing (Shipped separate).
a-Use 138557 lock washer 1913828 plain washer
b-Use 1855936 mounting nut (inner), 1903896 mounting nut (outer) 1914549 Boot.
c-Use 453679 lock washer, 1913828 plain washer.
d-Use 1845804 plain washer.
#Use 1914379 mounting nut (inner), 1903896 mounting nut (outer) 1908720 Boot. Later units with boot attached to mounting nut use 1956191 Boot & Nut Assembly.
○1855936 hex nut inside; 1956191 nut outside

| Model | × Lock Assembly | × Screw — Terminal | × Lock Washer — Terminal | Nut — Mounting | Washer — Mounting Nut |
|---|---|---|---|---|---|
| 429-J | | 453418 | 453844 | 1906758 | |
| 429-K | 1842770 | " | " | " | 827608 |
| 429-V | 1842770 | " | " | " | " |
| 429-Z | 1853842 | " | 138530 | " | " |
| 430-F | | " | " | " | 1855607 |
| 430-H | | " | " | " | " |
| 430-J | | " | " | " | " |
| 430-K | | " | " | " | " |
| 430-L | | 453647 | " | " | " |
| 430-M | | " | " | " | " |
| 430-R | 1853856 | " | " | | |
| 431-B | 1842770 | 453418 | 453844 | 1906758 | 827608 |
| 431-E | 1855243 | " | " | | |
| 431-F | " | " | " | | |
| 431-G | " | " | " | | |
| 431-L | | " | " | | |
| 431-M | | " | " | 1906758 | 827608 |
| 431-N | | | | 1923631 | |
| 431-P | | 453418 | 453844 | " | 827608 |
| 431-W | | " | " | 1906758 | " |
| 431-Y | | " | " | 1923631 | " |
| 433-A | 1859298 | 453460 | 456413 | 1841164 | 1841380 |
| 435-A | | | | | |
| 435-E | | 453418 | 453844 | 1906758 | 827608 |
| 435-J | | | | | |
| 435-R | | 453418 | 453844 | | |
| 435-T | | " | " | 1906758 | 827608 |
| 435-U | | " | 138530 | 1923631 | " |
| 435-V | | " | 453844 | " | " |
| 1116252 | | " | " | " | " |
| 1116253 | | " | " | | |
| 1116254 | | " | " | | |
| 1116255 | | * | * | | |
| 1116256 | | * | * | | |
| 1116257 | | | | | |
| 1116258 | | 453418 | 453844 | 1923631 | 827608 |
| 1116259 | | " | " | | |
| 1116261 | | " | " | | |
| 1116263 | | " | " | 1923631 | 827608 |
| 1116264 | | * | * | | |
| 1116265 | | * | * | | |
| 1116266 | | 453418 | 453844 | 1923631 | 827608 |
| 1116267 | | " | " | " | " |
| 1116268 | | " | " | | |
| 1116269 | | " | " | | |
| 1116270 | | " | " | 1923631 | 827608 |
| 1116271 | | * | * | | |
| 1116272 | | 453418 | 453844 | | |
| 1116273 | | | | | |
| 1116274 | | 453418 | 453844 | | |
| 1116275 | | | | | |
| 1116276 | | 453418 | 453844 | | |
| 1116277 | | " | " | | |
| 1116278 | | " | " | 1923631 | 827608 |
| 1116279 | | " | " | " | " |
| 1116280 | | " | " | | |
| 1116281 | | | | | |
| 1116282 | | | | | |
| 1116283 | | | | | |
| 1116284 | | * | * | | |

| Model | × Lock Assembly | × Screw — Terminal | × Lock Washer — Terminal | Nut — Mounting | Washer — Mounting Nut |
|---|---|---|---|---|---|
| 1116285 | | * | * | | |
| 1116286 | | * | * | | |
| 1116287 | | 453418 | 453844 | | |
| 1116288 | | " | " | | |
| 1116289 | | | | | |
| 1116290 | | | | | |
| 1116291 | | * | * | 1923631 | 827608 |
| 1116292 | | * | * | " | " |
| 1116293 | | * | * | | |
| 1116295 | | | | 1923631 | 827608 |
| 1116296 | | 453418 | 1855978 | | |
| 1116297 | | " | " | | |
| 1116298 | | " | " | 1923631 | 827608 |
| 1116299 | | " | " | " | " |
| 1116300 | | " | 453844 | 1906758 | " |
| 1116301 | | " | " | 1923631 | " |
| 1116302 | | " | " | " | " |
| 1116303 | | " | " | " | " |
| 1116304 | | " | " | | |
| 1116305 | | " | 1855978 | | |
| 1116306 | | " | " | | |
| 1116309 | | " | " | 1923631 | 827608 |
| 1116311 | | " | " | | |
| 1116312 | | " | " | | |
| 1116313 | | " | " | | |
| 1116314 | | " | " | | |
| 1116316 | | " | 453844 | 1906758 | 827608 |
| 1116325 | | " | 1855978 | | |
| 1116327 | | " | " | 1923631 | 827680 |
| 1116328 | | " | " | " | " |
| 1116329 | | " | " | " | " |
| 1116330 | | " | " | | |
| 1116331 | | " | " | | |
| 1116332 | | " | " | | |
| 1116334 | | " | " | | |
| 1116341 | | " | 453844 | 1923631 | |
| 1116342 | | " | " | " | |
| 1116343 | | " | " | " | |
| 1116344 | | " | 1855978 | 1888013 | |
| 1116345 | | " | " | 1923631 | |
| 1116346 | | " | " | " | |
| 1116347 | | " | " | " | |
| 1116348 | | " | 453844 | " | |
| 1116349 | | " | " | " | |
| 1116350 | | " | " | " | |
| 1116351 | | " | 1855978 | | |
| 1116352 | | " | 453844 | 1923631 | |
| 1116353 | | " | 1855978 | | |
| 1116359 | | " | " | | |
| 1116360 | | " | " | | |
| 1116361 | | " | " | | |
| 1116362 | | | | 1923631 | |
| 1116363 | | | | " | |
| 1116364 | | 453418 | 1855978 | " | |
| 1116451 | | " | " | 1911107 | |
| 1116452 | | " | " | | |
| 1116453 | | " | " | | |
| 1116454 | | | | | |
| 1116455 | | 453418 | 1855978 | | |
| 1116456 | 1842770 | " | " | 1906758 | |

(Continued on Page 2)

×Where Lock and Key and terminal parts are not listed, they are supplied by car manufacturer.
*132688 is 6–32, 121749 is 8–32 (one each used. 131044 Lock Washer is No. 6, 121841 Lock Washer is No. 8.)

**Delco-Remy**
SERVICE PARTS CATALOG

| Model | ×Lock Assembly | ×Screw—Terminal | ×Lock Washer or Clip—Terminal | Nut—Mounting | Washer—Mounting Nut |
|---|---|---|---|---|---|
| 1116457 | 1842770 | 453418 | 1855978 | 1906758 | |
| 1116458 | | " | " | | |
| 1116459 | | " | " | | |
| 1116460 | | " | " | | |
| 1116461 | | " | 1868137 | | |
| 1116462 | | " | 1855978 | 1912467 | |
| 1116463 | | " | " | | |
| 1116464 | | " | 1868137 | | |
| 1116465 | 1842770 | " | 1855978 | 1906758 | |
| 1116467 | " | " | " | " | |
| 1116468 | | " | " | | |
| 1116469 | | " | 1868137 | 1917129 | |
| 1116470 | | " | 1855978 | 1932586 | |
| 1116471 | | " | " | 1906758 | |
| 1116472 | | " | 1868137 | △ | |
| 1116474 | | " | 138530 | 1921124 | |
| 1116476 | | " | 1868137 | | |
| 1116478 | | " | " | † | |
| 1116479 | | " | " | 1917129 | |
| 1116480 | 1842770 | " | 1855978 | 1923305 | |
| 1116481 | 1842770 | " | " | " | |
| 1116482 | | " | " | " | |
| 1116483 | 1842770 | " | " | " | |
| 1116484 | " | " | " | " | |
| 1116485 | | " | " | " | |
| 1116486 | 1842770 | " | 453844 | " | |
| 1116487 | " | " | " | " | |
| 1116488 | " | " | 138530 | " | |
| 1116489 | | " | 453844 | " | |
| 1116490 | | " | " | " | |
| 1116491 | | " | 138530 | " | |
| 1116492 | 1842770 | " | 1855978 | ♦ | |
| 1116493 | | " | 138530 | 1923305 | |
| 1116494 | 1923526 | " | 1868137 | 1923527 | |
| 1116495 | 1842770 | 453460 | 131044 | 1841164 | 1841380 |
| 1116496 | 1924159 | 453418 | 453844 | 1923305 | |
| 1116497 | " | " | " | " | |
| 1116498 | 1842770 | " | 1855978 | " | |
| 1116499 | | " | 1868137 | | |
| 1116501 | 1842770 | " | " | 1923305 | |
| 1116502 | | " | " | " | |
| 1116503 | 1923526 | " | " | 1926938 | |
| 1116504 | | " | " | | |
| 1116505 | | " | " | | |
| 1116506 | | " | " | ■ | |
| 1116507 | | " | " | ■ | |
| 1116508 | 1842770 | " | " | 1923305 | |
| 1116511 | 1924159 | " | " | " | |
| 1116513 | 1842770 | " | 1855978 | ♦ | |
| ○1116516 | " | 453418 | 1855978 | * | |
| 1116517 | 1842770 | | | 1923305 | |
| ○1116516 | " | 453418 | 1855978 | * | |
| 1116519 | | " | 1868137 | | |
| ○1116520 | 1842770 | " | " | ♦ | |

| Model | ×Lock Assembly | ×Screw—Terminal | ×Lock Washer or Clip—Terminal | Nut—Mounting | Washer—Mounting Nut |
|---|---|---|---|---|---|
| 1116521 | | 453418 | 1868137 | | |
| 1116522 | | | | ‡ | |
| 1116523 | | | | ■ | |
| 1116524 | | | | ■ | |
| ○1116525 | 1842770 | 453418 | 1868137 | ▲ | |
| ○1116526 | " | " | " | * | |
| 1116527 | | " | " | | |
| 1116529 | | " | " | 1923305 | |
| 1116531 | ⊕1939376 | " | " | 1934685 | |
| 1116531-B | ⊕1942483 | " | " | " | |
| 1116539 | 1842770 | | | 1923305 | |
| 1116540 | | | | " | |
| ○1116541 | 1942770 | 453418 | 1868137 | ♦ | |
| 1116542 | ⊕1939376 | " | 1939383 | 1917129 | |
| 1116542-B | ⊕1942483 | " | " | " | |
| 1116543 | ⊕1939376 | " | 1867137 | 1934685 | |
| 1116543-B | ⊕1942483 | " | " | " | |
| 1116551 | | " | 1868137 | | |
| 1116552 | | " | " | 1923305 | |
| 1116553 | 1842770 | | | " | |
| 1116563 | " | 453418 | 1868137 | 1923305 | |
| 1116564 | 1842770 | " | 1855978 | " | |
| 1116565 | ⊕1942483 | " | 1868137 | 1934685 | |
| 1116566 | " | | | " | |
| 1116568 | | 453418 | 1868137 | 1917129 | |
| ○1116571 | 1924159 | " | " | * | |
| 1116574 | | " | " | 1917129 | |
| 1116575 | | " | " | 1934685 | |
| 1116582 | 1842770 | | | 1923305 | |
| •1116583 | | | 138479 | | |
| 1116585 | ⊕1942483 | 453418 | 1939383 | | |
| 1116589 | ⊕1942483 | | | | |
| 1116593 | ⊕1942483 | 453418 | 1939383 | 1917129 | |
| 1116597 | ⊕1942483 | " | 1868137 | 1934685 | |
| 1116599 | 1842770 | | | 1923305 | |
| 1116600 | | | | " | |
| 1116601 | 1858421 | 453418 | 1868137 | " | |
| 1116602 | ⊕1942483 | | | | |
| 1116606 | | 453418 | 1868137 | | |
| 1116613 | 1842770 | | | 1923305 | |
| 1116614 | | | | " | |
| 1116615 | | | | " | |
| 1116616 | 1842770 | | | " | |
| 1116620 | | | | " | |
| 1116622 | ⊕1942483 | | | | |
| 1116624 | 1958421 | 453418 | 1868137 | 1923305 | |
| 1116627 | ⊕1924483 | " | 1939383 | | |
| 1116628 | | | | 1923305 | |
| 1116629 | ⊕1942483 | " | " | 1934685 | |
| 1116637 | | | 138479 | 453433 | |
| 1116638 | | | " | " | |
| 1116640 | | 453418 | " | | |
| 1116642 | ⊕1942483 | " | 1939383 | 1917129 | |
| 1116644 | 1942480 | " | 1868137 | 1934685 | |

(Continued on Page 3)

×Where Lock and Key and terminal parts are not listed, they are supplied by car manufacturer.
△Mounting Nut—1923766 (Shipped separate).
†Mounting Nut—1922539 (Shipped separate).
■Mounting Nut—1917129 (Shipped separate).
‡Mounting Nut—1930492 (Shipped separate).
•Terminal Nut—120614.
♦Use 1931108 Cap & Nut (Outer), 1923405 Mounting Nut (Inner).
♣Use 1923405 Mounting Nut (Inner) and 1931108 Nut & Cap Assembly.
*Use 1923405 Mounting Nut (Inner) and 1931108 Nut & Cap (Outer).
▲Use 1923405 Mounting Nut (Inner) and 1931108 Nut & Cap (Outer).
○Miscellaneous Parts
1923404—Seal (Cover),
1930636—Seal (Mounting Nut).
⊕Key only.

**Parts not listed in this Catalog will not be sold separately.**

| Model | × Lock Assembly | × Screw — Terminal | × Lock Washer or Clip — Terminal | Nut — Mounting | Washer — Mounting Nut |
|---|---|---|---|---|---|
| **1116652** | ..... | ..... | 138479 | 453433 | ..... |
| **1116653** | ..... | ..... | " | " | ..... |
| **1116657** | ⊕1950992 | 453418 | 1939383 | " | ..... |
| **1116668** | ⊕1942483 | " | 1868137 | 1934685 | ..... |
| **1116669** | 1842770 | " | " | 1923305 | ..... |
| **1116689** | ⊕1942483 | " | 1868137 | 1917129 | ..... |
| **1116705** | 1958421 | ..... | ..... | 1923305 | ..... |
| **1116706** | 1842770 | 453418 | 1878503 | " | ..... |
| **1997708** | " | 453647 | 1385530 | 1906758 | 827608 |
| **1997712** | " | 9417096 | " | " | " |
| **1997733** | " | 453418 | " | " | " |
| **1997734** | ..... | " | " | " | 1881509 |
| **1997743** | ..... | " | " | " | 1840912 |
| **1997748** | ..... | " | " | " | " |
| **1997770** | ..... | " | " | ..... | ..... |
| **1997777** | 1887842 | " | " | ..... | ..... |
| **1997781** | 1842770 | " | " | 1906758 | ..... |
| **1997782** | ..... | " | " | " | ..... |
| **1997783** | ..... | 453418 | 138530 | 1887874 | ..... |
| **1997784** | 1842770 | " | " | **1906758** | ..... |
| **1997785** | " | 453647 | " | " | ..... |
| **1997786** | 1842770 | 453418 | " | " | ..... |
| **1997797** | ..... | " | " | **1884132** | ..... |
| **1997807** | ..... | " | " | **1906758** | ..... |

×Where Lock and Key and terminal parts are not listed, they are supplied by car manufacturer.

| Model | Screw — Terminal | Clamp — or Lock Washer — Terminal Screw | Resistance | Screw — Resistance Attaching | Lock Washer — Resistance Attaching Screw |
|---|---|---|---|---|---|
| 1993558 | | | | | |
| 1993578 | 453418 | 453844 | 1877830 | | |
| 1994001 | 453418 | 453844 | | | |
| 1994002 | 453647 | " | 810922 | 453647 | 453844 |
| †1994003 | " | " | | | |
| 1994004 | 453418 | " | | | |
| 1994005 | 453647 | " | 810922 | 453647 | 453844 |
| 1994006 | 453418 | " | | | |
| 1994007 | 453647 | " | 810922 | 453647 | 453844 |
| 1994008 | 453418 | " | 1838155 | " | " |
| 1994009 | " | " | | | |
| 1994010 | " | " | | | |
| ‡1994011 | 453647 | " | | | |
| 1994012 | 453418 | " | 1877831 | 453418 | 453844 |
| 1994013 | " | " | 1878070 | " | " |
| 1994014 | " | " | | | |
| 1994015 | " | " | | | |
| 1994016 | " | " | | | |
| 1994017 | " | " | | | |
| 1994019 | ▲ | " | 1878070 | 453418 | 453844 |
| 1994020 | ▲ | " | 1877831 | " | " |
| 1994021 | 1882994 | " | 814545 | " | 138530 |
| 1994022 | " | " | | | |
| 1994023 | ▲ | ▲ | | | |
| 1994024 | ▲ | ▲ | | | |
| 1994025 | 1882994 | 453844 | 814545 | 1882994 | 138530 |
| 1994026 | " | " | 1877830 | " | " |
| 1994027 | 453418 | " | | | |
| 1994031 | ▲ | " | 1900521 | 453418 | 453844 |
| 1994033 | × | × | | | |
| 1994034 | 453418 | 453844 | 808767 | 453647 | 453844 |
| 1994035 | ▲ | ▲ | 1878070 | 453418 | 453844 |
| 1994036 | 1882994 | 453844 | 814545 | 1882994 | 138530 |
| 1994038 | " | " | " | " | " |
| 1994043 | " | " | 1877830 | " | " |
| 1994046 | ▲ | ▲ | | | |
| 1994048 | ▲ | 453844 | | | |
| 1994050 | 453418 | " | | | |
| 1994051 | ▲ | ▲ | | | |
| 1994053 | 1882994 | 453844 | | | |
| 1994059 | ▲ | ▲ | | | |
| 1994501 | 453418 | 1904376 | | | |
| 1994502 | " | " | | | |
| 1994503 | " | 453418 | | | |
| 1994504 | " | " | | | |
| 1994505 | " | " | | | |
| 1994506 | " | " | | | |
| 1994507 | " | " | | | |
| 1994508 | " | " | | | |
| 1994523 | " | " | | | |
| 1994524 | " | " | | | |
| 1994525 | " | " | | | |
| 1994526 | " | 453844 | | | |
| 1994527 | " | 1855978 | | | |
| 1994528 | " | " | | | |
| 1994530 | " | 453844 | | | |
| 1994532 | " | 1855978 | | | |
| 1994533 | " | " | | | |

| Model | Screw — Terminal | Clamp — or Lock Washer — Terminal Screw | Resistance | Screw — Resistance Attaching | Lock Washer — Resistance Attaching Screw |
|---|---|---|---|---|---|
| 1994534 | 453418 | 1855978 | | | |
| 1994536 | " | " | | | |
| 1994537 | " | 1855978 | | | |
| 1994538 | " | " | 1929313 | 454408 | 453844 |
| 1994539 | " | " | 1925600 | " | " |
| 1994542 | " | " | | | |
| 1994546 | " | " | | | |
| 1994547 | " | " | | | |
| 1994548 | " | ⊕ " | 1877830 | 454408 | 453844 |
| 1994549 | " | ⊕ " | 1925600 | " | " |
| 1994551 | " | " | | | |
| 1994554 | " | " | 1877830 | 454408 | 453844 |
| 1994559 | " | " | 1928374 | " | " |
| 1994560 | " | " | | | |
| 1994561 | " | " | 1929666 | 454408 | 453844 |
| 1994564 | " | 453844 | | | |
| 1994565 | " | " | | | |
| 1994566 | " | 1855978 | | | |
| 1994567 | " | " | | | |
| 1994568 | 453418 | " | | | |
| 1994569 | " | 453844 | | | |
| 1995001 | " | " | | | |
| 1995002 | " | " | | | |
| 1995003 | " | " | | | |
| 1995004 | " | " | | | |
| 1995005 | " | " | | | |
| 1995006 | " | " | | | |
| 1995007 | " | " | | | |
| 1995008 | " | " | | | |
| 1995009 | " | " | | | |
| 1995010 | " | " | | | |
| 1995011 | " | " | | | |
| 1995012 | " | " | | | |
| 1995014 | " | " | | | |
| 1995015 | " | " | | | |
| 1995016 | " | " | | | |
| 1995017 | " | " | | | |
| 1995018 | " | " | | | |
| 1995019 | " | " | | | |
| 1995020 | " | " | | | |
| 1995021 | " | " | | | |
| 1995023 | " | " | | | |
| 1995024 | " | " | | | |
| 1995025 | " | " | | | |
| 1995026 | " | " | | | |
| 1995027 | " | " | | | |
| 1995030 | " | " | | | |
| 1995031 | " | " | | | |
| 1995032 | " | " | | | |
| 1995033 | " | " | | | |
| 1995034 | " | " | | | |
| 1995035 | " | " | | | |
| 1995036 | " | " | | | |
| 1995037 | " | " | | | |
| 1995038 | " | " | | | |
| 1995039 | " | " | | | |
| 1995040 | " | " | | | |
| 1995041 | " | " | | | |
| 1995042 | " | " | | | |

(Continued on Page 2)

†Use 147685 Fuse.
‡Use 120151 Fuse.
▲See Minor Parts.

⊕Lock Washer 453844 also used in 3 places.
×Terminal parts furnished by car manufacturer.

| Model | Screw — Terminal | Clamp — or Lock Washer — Terminal Screw | Resistance | Screw — Resistance Attaching | Lock Washer — Resistance Attaching Screw |
|---|---|---|---|---|---|
| 1995043 | 453418 | 453844 | | | |
| 1995044 | " | " | | | |
| 1995045 | " | " | | | |
| 1995046 | " | " | | | |
| 1995047 | " | " | | | |
| 1995048 | " | " | | | |
| 1995049 | " | " | | | |
| 1995051 | " | " | | | |
| 1995052 | " | " | | | |
| 1995053 | " | " | | | |
| 1995054 | " | " | | | |
| 1995055 | " | " | | | |
| 1995057 | " | " | | | |
| 1995058 | " | " | | | |
| 1995059 | " | " | | | |
| 1995060 | " | " | | | |
| 1995067 | " | " | | | |
| 1995068 | " | " | | | |
| 1995116 | " | 1855978 | | | |
| 1995601 | 1882994 | 138530 | 1838155 | 1882994 | 138530 |
| ♦1995602 | 1881998 | 1855978 | | | |
| 1995603 | 453804 | 138530 | 1838155 | 1882994 | 138530 |
| 1995604 | " | " | 1877831 | " | " |
| 1995605 | " | " | 1838155 | " | " |
| 1995606 | " | " | 1877831 | " | " |
| 1995607 | 453418 | 1855978 | | | |
| *1995626 | " | 138530 | | | |
| 1995627 | " | " | | | |
| ×1995629 | " | " | | | |
| 1995631 | " | " | | | |
| 1995632 | " | " | | | |
| 1998151 | " | 1855978 | | | |
| 1998933 | | | | | |

♦1990549 Knob; 812479 Mtg. Nut & 138545 Lock Washer.
*1990660 Knob; 812479 Mtg. Nut & 138545 Lock Washer.
×1990660 Knob; 1954729 Mtg. Nut & 138545 Lock Washer.

# MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

| Name | Part No. | Used on Models |
|---|---|---|
| **LOCK WASHERS** | | |
| Lock Washer—Back Attaching Screw | 453844 | 1994019; 20-1-5-6; 31 |
| Lock Washer—Back Attaching Screw | 453435 | 1994023-4; 46; 51 |
| Lock Washer—Fuse Block Attaching Screw | 456413 | 1994504 |
| *Lock Washer—Knob Attaching Screw | * | 1994019; 20-1-5-6; 31 |
| Lock Washer—Lever Attaching Screw | 122159 | 1994012-13 |
| Lock Washer—Lever Attaching Screw | 453435 | 1994023-4; 46; 51 |
| Lock Washer—Lever Attaching Screw | 453844 | 1993578; 1994523-4-5-6-7-8; 30-2-4-6-7; 42-6-7; 51-4-9; 60-4-5-7-8-9; 1998151; 933 |
| Lock Washer—Mounting Nut | 138545 | 1995632 |
| Lock Washer—Mounting Nut | 138549 | 1993578; 1994523-4-5-6-7-8; 30-2-4-6-7; 42-6-7; 51-4; 60-4-5-6-9; 1998151 |
| Lock Washer—Resistance Coil Attaching Screw | 138530 | 1994012-13-19; 20; 35 |
| *Lock Washer—Switch Mounting | * | 1994019; 20-1-5-6; 31-4 |
| Lock Washer—Terminal & Resistor Attaching Screw | 138530 | 1994525 |
| Lock Washer—Terminal Connector Screw | 453844 | 1994503-4-5 |
| Lock Washer—Terminal Nut | 138537 | 1994023-4; 46; 51 |
| Lock Washer—Terminal Screw | 453844 | 1994035-59 |
| Lock Washer—Terminal Screw | 453834 | 1994059 |
| Lock Washer—Thermostat Attaching Screw | 456413 | 1994501-5 |
| Lock Washer—Thermostat Attaching Screw | 453844 | 1994503 |
| Lock Washer—Mounting | 453813 | 1998933 |
| Lock Washer—Terminal | 453435 | 1998933 |
| **NUTS** | | |
| ⊕Nut—Knob Attaching | 1914305 | 1994019; 20-1-5-6 |
| Nut—Switch Mounting | 812479 | 1995632 |
| ⊕Nut—Switch Mounting | 1914305 | 1994019; 20-1-5-6; 31-5-6-8; 43-8; 50-3-9 |
| ⊕Nut—Switch Mounting | 1873327 | 1994012-13 |
| Nut—Switch Mounting | 1913360 | 1993578; 1994523-4-5-6-7-8; 30-2-3-4-6-7; 42-6-7; 51-4; 60-4-5-6-9; 1998151; 933 |
| Nut—Switch Mounting | 1957682 | 1994567 |
| Nut—Terminal Stud | 142247 | 1994023; 46; 51 |
| Nut—Switch Mounting | 1920318 | 1994568 |
| Nut—Terminal | 426325 | 1998933 |
| **SCREWS** | | |
| Screw—Back Attaching (8-32x1/2) | 453302 | 1994019; 20-1-5-6; 31 |
| Screw—Back Attaching (8-32x3/4) | 454583 | 1994021 |
| Screw—Back Attaching | 132110 | 1993558 |
| Screw—Clamp Attaching | 125591 | 1994023-4; 46; 51 |
| Screw—Contact Support—To Drive Coupling | 1882015 | 1994019; 20-1-5-6; 31 |
| Screw—Fuse Block Attaching | 132691 | 1994504 |
| *Screw—Knob Attaching | 453418 | 1994019; 20-1-5-6; 31-5-6-8; 43-8; 50-3-9 |
| Screw—Lever Attaching | 453418 | 1994012-13 |
| Screw—Lever Attaching | 153416 | 1994023-4; 46; 51 |
| Screw—Lever Attaching | 453804 | 1993578; 1994523-4-5-6-7-8; 30-2-3-4-6-7; 42-6-7; 51-4-9; 51-4-9; 60-4-5-7-8-9; 1998151; 933 |
| Screw—Resistor Attaching | 454408 | 1994526 |
| Screw—Terminal & Resistor Attaching | 1882994 | 1994019; 20-1-5-6; 35; 50; 525 |
| Screw—Terminal (8-32x1/4) | 453418 | 1994019; 20; 31-5; 48; 68 |
| Screw—Terminal (8-32x3/8) | 453804 | 1994059 |
| Screw—Terminal (8-32x3/8) | 1882994 | 1994019; 20; 31-5; 48 |
| Screw—Terminal (8-32x1/2) | 453302 | 1994035; 59 |
| Screw—Terminal Connector Attaching | 453647 | 1994501-2-3-4-5 |
| Screw—Thermostat Attaching | 453460 | 1994501-3 |
| Screw—Thermostat Attaching | 1914580 | 1994505 |
| **WASHERS** | | |
| Washer—Felt—On Lever Shaft | 1882302 | 1994023-4; 46 |
| Washer—Plain—Mounting Nut | 1919694 | 1994567-8 |
| Washer—Plain—Mounting Nut | 1902924 | 1993578; 1994523-4-5-7-8; 30-6-7; 42-6-7; 60-4-5-9 |
| Washer—Space—On Lever Shaft | 1919947 | 1994046; 51 |
| Washer—Terminal | 1905125 | 1994023-4; 46; 51 |
| Washer—Under Dimmer Coil | 138530 | 1994025-6 |
| Washer—Plain Terminal | 807295 | 1998933 |
| **MISCELLANEOUS** | | |
| BACK Assembly | 1882001 | 1994019; 20; 31 |
| BACK Assembly | 1881999 | 1994021 |

*Furnished by car manufacturers.
⊕Shipped separate.

Parts not listed in this Catalog will not be sold separately.

# MINOR PARTS SECTION

| Name | Part No. | Used on Models |
|---|---|---|
| MISCELLANEOUS—Continued | | |
| BACK Assembly | 1882310 | 1994023–4 |
| BACK Assembly | 1882083 | 1994025–6 |
| BACK Assembly | 1919941 | 1994046; 51 |
| BACK Only | 1882311 | 1994023–4 |
| BLOCK—Fuse | 1868292 | 1994504 |
| BUSHING—Mounting | 1910441 | 1995040; 58 |
| BUSHING—Switch Wire | 1912151 | 1995030 |
| CASE Assembly | 1882005 | 1994019; 20; 31 |
| CASE Assembly | 1882429 | 1994021–5–6 |
| CASE Assembly | 1882315 | 1994023 |
| CASE Assembly | 1882314 | 1994024 |
| CASE Assembly | 1999939 | 1994046 |
| CLAMP | 1933447 | 1993558 |
| COLLAR—Lock | 1882299 | 1994024 |
| CONNECTOR—Ground Terminal to Switch Hub | 1903854 | 1994525 |
| CONNECTOR—Terminal—Thermostat to No. 10 Terminal | 1865818 | 1994503–4 |
| CONNECTOR—Terminal—No. 1 to No. 10 Terminal | 1865818 | 1995601–2–5 |
| CONNECTOR—Terminal—No. 3 to No. 6 Terminal | 1865819 | 1994501 |
| CONNECTOR—Terminal—No. 9 to No. 12 Terminal | 1865820 | 1994501–2–3–4–5 |
| CONNECTOR—Terminal—No. 10 to Thermostat | 1866789 | 1994505 |
| CONNECTOR—Thermostat | 1868305 | 1994505 |
| CONTACT—Heat | 1882306 | 1994046 |
| CONTACT—Ignition | 1882308 | 1994023–4 |
| CONTACT—Light | 827721 | 1994019; 20–1–5–6; 31 |
| CONTACT—Light | 1882306 | 1994023–4; 51 |
| CONTACT—Starting | 1882308 | 1994046; 51 |
| COUPLING & CONTACT Assembly | 1908629 | 1994019; 20–1–5–6; 31 |
| GASKET—Back | 1882011 | 1994019; 20–1–5–6; 31 |
| GASKET—Back | 1882313 | 1994023–4; 46; 51 |
| HOUSING—Switch | 1932904 | 1994051 |
| INSULATOR—Switch Back | 1919943 | 1994046; 51 |
| *KNOB | 1882013 | 1994019; 20–1–5–6; 31–5–6; 48; 50–3 |
| KNOB | 1930685 | 1994038; 43; 59 |
| KNOB | 1990660 | 1995632 |
| KNOB & ROD | 1990686 | 1995040; 58 |
| KNOB & ROD | 1990668 | 1995041 |
| LEVER | 1873326 | 1994012–13 |
| LEVER | 1882301 | 1994023–4; 46; 51 |
| LEVER | 1902694 | 1994523–4–5–6; 32–4; 54–5 |
| LEVER | 1911039 | 1993578; 1994527; 30; 65–9; 1998151; 933 |
| LEVER | 1885685 | 1994528; 36–7; 42–6–7; 64 |
| LEVER | 1914889 | 1994533; 51 |
| LEVER | 1921081 | 1994560 |
| LEVER | 1956470 | 1994567–8 |
| LOCK Assembly | 1882743 | 1994024 |
| LOCK (& Key) | 1849889 | 1994051 |
| PLATE—Lock | 1882300 | 1994024 |
| PLATE—Lock | 1932489 | 1994051 |
| PLUNGER—Ratchet | 1945413 | 1994023–4 |
| RESISTOR—Dimmer Coil | 1877830 | 1994020 |
| RESISTOR—Dimmer Coil | 814545 | 1994013–19; 35; 526 |
| RESISTOR—Between Field & Ground Terminal | 1838155 | 1994525 |
| SHAFT—Lever | 1919944 | 1994046; 51 |
| SHAFT & RATCHET—Lever | 1882303 | 1994023–4 |
| SPRING—Contact | 827719 | 1994019; 20–1–5–6; 31 |
| SPRING—Contact | 1882305 | 1994024–5; 46; 51 |
| SPRING—Heat Lever Return | 1919945 | 1994046 |
| SPRING—Light Lever Return | 1919945 | 1994051 |
| SPRING—Plunger | 1878542 | 1994023–4 |
| SPRING—Starting Lever Return | 1919946 | 1994046; 51 |
| STUD & CONTACT—Terminal | 1882312 | 1994023–4; 46; 51 |
| SUPPORT—Contact | 1882304 | 1994023–4; 46; 51 |
| *THERMOSTAT | 1865577 | 1994501 |
| *THERMOSTAT | 1866467 | 1994503 |
| THERMOSTAT | 1868301 | 1994504–5 |

*Shipped separate.

| Name | Part No. | Used on Models |
|---|---|---|
| Case Assem. | 1841171 | 473-B-D |
| Case Assem. | 1843790 | 473-C |
| Case Assem. | 1865331 | 473-E; 1998020 |
| Case Assem. | 1860975 | 473-F |
| Case Assem. | 1865333 | 473-G |
| Case Assem. | 1866622 | 473-H |
| Case Assem. | 1888017 | 1997702; 80; 899 |
| Case Assem. | 1947711 | 1998723 |
| Cover | 1841142 | 473-B-C-D-E-F-G-H; 1997702; 80 |
| Cover | 1921087 | 1997899; 1998020 |
| Cover | 1947712 | 1998723 |
| Screw—Cover Attach. | 117114 | 473-B-C-D-E-F-G-H; 1997702; 80; 899; 1998020 |
| Knob | 1888020 | 473-B-C-E-F-G-H; 1997702; 80; 1998723 |
| Knob | 1900692 | 473-D |
| Knob | 1921088 | 1997899; 1998020 |
| Pin—Knob Attach. | 1888064 | 473-B-C-D-E-F-G-H; 1997702; 80; 899; 1998020; 1998723 |
| Collar—Contact | 1841148 | 473-B-D-E-G; 1997702; 80; 899; 1998020; 723 |
| Collar—Contact | 1844513 | 473-C-H |
| Collar—Contact | 1860980 | 473-F |
| Shaft | 1841143 | 473-B-C-D-E-G; 1997702; 1998020 |
| Shaft | 1860979 | 473-F |
| Shaft | 1866623 | 473-H |
| Shaft | 1888053 | 1997780; 899 |
| Shaft | 1948894 | 1998723 |
| Spring—Shaft | 1841144 | 473-B-C-D-E-G-H; 1997702; 80; 899; 1998020; 723 |
| Spring—Shaft (Inside) | 1860981 | 473-F |
| Spring—Shaft (Outside) | 1860982 | 473-F |
| Spring—Plain (Shaft) | 834560 | 473-F |
| Washer—Felt (Shaft Stop) | 1841147 | 473-B-C-D-E-G-H; 1997702; 80; 899; 1998020; 723 |
| Sleeve—(Shaft) | 1860978 | 473-F |
| Screw—Terminal | 122159 | 473-B-C-D-E-F-G-H; 1997702; 80; 899; 1998020; 723 |
| Bracket—Terminal | 1841137 | 1997702; 80; 1998020 |
| Spring—Contact | 1841138 | 1997702; 80; 1998020 |
| Insulator—Terminal | 1841136 | 1997702; 80; 1998020 |
| Bushing—Ins. Terminal | 813494 | 1997702; 80; 1998020 |
| Bushing | 1947713 | 1998723 |
| Washer—Ins. Terminal | 32223 | 1997702; 80; 1998020 |
| Washer—Plain Terminal | 807716 | 1997702; 80; 1998020 |
| Rivet—(17/32 long) Terminal | 1841140 | 1997702; 80; 1998020 |
| Rivet—( 7/16 long) Terminal | 1841141 | 1997702; 80; 1998020 |

| Model No. | Screw Terminal | Lock-washer Terminal | Clip Terminal | Fuse or Resistor |
|---|---|---|---|---|
| 1114410 | | | | |
| 1114418 | | | | |
| 1114420 | | | | |
| 1114421 | | | | |
| 1114422 | | | | |
| 1114423 | | | | |
| 1114425 | | | | |
| 1114427 | | | | |
| 1114429 | | | | |
| 1114437 | | | | |
| 1114440 | | | | |
| 1114441 | | | | |
| 1114442 | | | | |
| 1114443 | | | | |
| 1114447 | | | | |
| 1993301 | | | | |
| 1993308 | | | | |
| 1993327 | | | | |
| 1993388 | | | | |
| 1993471 | 453418 | | 1855978 | |
| 1993536 | " | | " | |
| 1993597 | 1955694 | | 1957443 | |
| 1993600 | " | | " | |
| 1993621 | " | | " | |
| 1993624 | " | | " | |
| 1993638 | " | | " | |
| 1993667 | " | | " | |
| 1993668 | | | | |
| 1993676 | | | | |
| 1997014 | 453418 | | 1855978 | |
| 1997025 | " | | " | |
| 1997032 | " | | " | |
| 1997034 | " | | " | |
| 1997706 | " | 453844 | | |
| 1997719 | " | 138530 | | 1878697 |
| 1997740 | " | | 1855978 | |
| 1997744 | 453304 | | " | 147685 |
| 1997745 | " | | " | " |
| 1997750 | 1857216 | 138530 | | |
| 1997751 | 453418 | | 1855978 | |
| 1997761 | 453647 | 138530 | | |
| 1997762 | 453304 | | 1855978 | 147685 |
| 1997764 | " | | " | " |
| 1997766 | 1857216 | 138530 | | |
| †1997819 | 453418 | | 1855978 | |
| 1997841 | 453304 | | " | |
| 1997844 | 1857216 | 138530 | | |
| 1997845 | 453647 | " | | |
| 1997846 | 453418 | | 1855978 | |
| *1997849 | 453647 | 138530 | | |
| 1997855 | 453304 | | 1855978 | |
| 1997859 | 1857216 | 138530 | | |
| 1997870 | 446610 | | | |
| 1997874 | 453418 | | 1855978 | |
| 1997875 | " | | " | |
| 1997879 | " | | " | |
| 1997880 | " | | " | |
| 1997882 | 1921359 | | | |
| 1997885 | 1864090 | | 1855978 | |
| 1997887 | " | | " | |

| Model No. | Screw Terminal | Lock-washer Terminal | Clip Terminal | Fuse or Resistor |
|---|---|---|---|---|
| 1997893 | 1864090 | | 1855978 | |
| 1997895 | 1863090 | | " | |
| 1997924 | 453418 | | " | |
| 1997927 | 453304 | | " | 147684 |
| 1998010 | 453418 | | " | |
| 1998011 | " | | " | |
| 1998012 | " | | " | |
| 1998016 | 1857216 | 138530 | " | |
| 1998018 | 453418 | | " | |
| 1998021 | " | | " | |
| 1998026 | " | | " | |
| 1998029 | " | | " | |
| 1998031 | " | | " | |
| 1998039 | " | | " | |
| 1998040 | " | | 1868137 | |
| 1998041 | " | | | |
| 1998043 | " | | 1855978 | |
| 1998044 | " | | | |
| 1998045 | " | | | |
| 1998052 | " | | 1855978 | |
| 1998054 | " | | " | |
| 1998058 | " | | | |
| 1998059 | " | | | |
| 1998065 | " | | 1855978 | |
| 1998069 | " | | " | |
| 1998070 | " | | " | |
| 1998071 | " | | " | |
| 1998072 | " | | " | |
| 1998073 | " | | " | |
| 1998074 | " | | " | |
| 1998083 | " | | " | |
| 1998090 | " | | " | |
| 1998091 | " | | " | |
| 1998093 | " | | " | |
| 1998094 | " | | " | |
| 1998100 | " | | 1868137 | |
| 1998108 | 446009 | | 1855978 | |
| 1998117 | 453418 | | " | |
| 1998118 | " | | " | |
| 1998131 | " | | " | |
| 1998150 | " | | " | |
| 1998155 | " | | " | |
| 1998156 | " | | " | |
| 1998175 | " | | " | |
| 1998195 | " | | " | |
| 1998661 | " | | 1868137 | |
| 1998678 | " | | 1855978 | |
| 1998680 | " | | 1868137 | |
| 1998687 | " | | " | |
| 1998720 | " | | 1855978 | |
| 1998721 | " | | " | |
| 1998722 | " | | " | |
| 1998730 | " | | " | |
| 1998743 | " | | " | |
| 1998744 | " | | " | |

† 1990660 knob and 1910158 mounting bushing shipped separately

* Use 1884911 Lever Spring.

# MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

| Name | Part No. | Used on Models |
|---|---|---|
| MISCELLANEOUS | | |
| BOOT | 1964385 | 1993327; 88 |
| BOOT | 1966890 | 1993301; 27; 668 |
| BOOT | 1970802 | 1114418; 20-1-2-3-5-7-9; 41-2-3-7 |
| FILTER | 801528 | 1114437; 40 |
| NUT—Mounting | 812479 | 1997927 |
| SET SCREW | 1883235 | 1997927 |
| SPRING—Extension | 1965675 | 1993597; 600; 38; 67 |
| SPRING—Extension | 1962761 | 1993621-3; 1993308 |
| SPRING—Plunger | 1932324 | 1114410 |
| WASHER—Spring Retainer | 1944725 | 1114410 |
| WASHER—Plain—Spring Retainer | 833795 | 1114410 |
| SPRING—Lever | 1964615 | 1993676 |

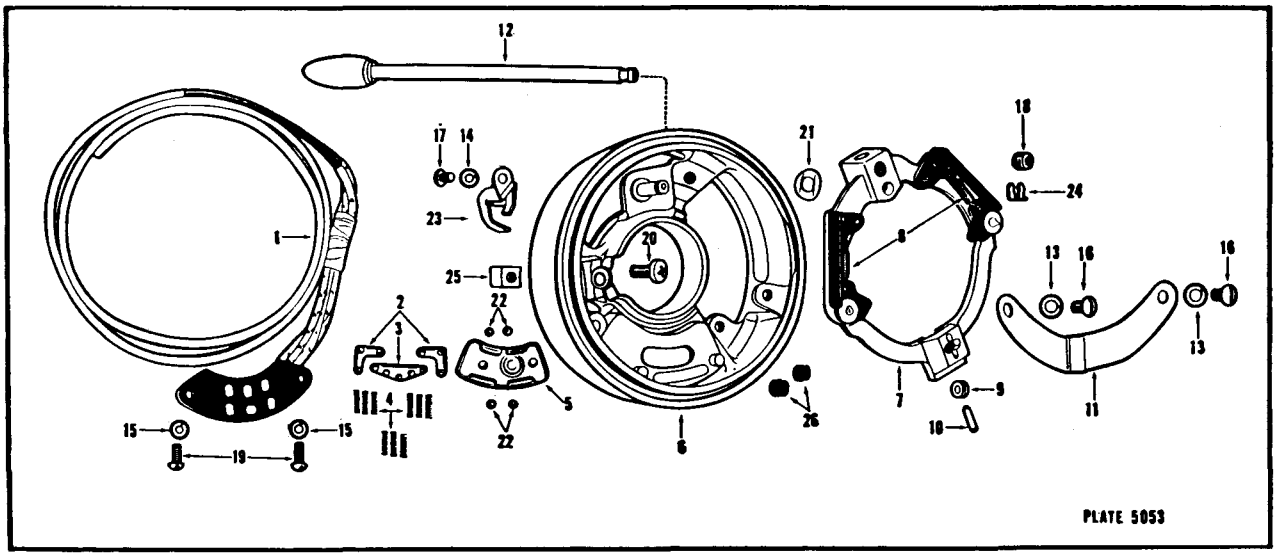


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

| Model No. | Harness and Back, or Switch | Contact | Contact | Spring — Contact | Carrier — Contact | Housing | Plate Assem. | Spring — Release | Roller | Shaft — Roller | Spring — Detent | Lever — Shipped separate |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
| 1995558 | 1917195 | 1910372 | 1910373 | 1917218 | 1910371 | | | | | | | ♦ |
| 1995563 | 1921934 | " | " | " | " | 1921927 | 1921931 | 1921885 | 1921883 | 1917201 | 1921936 | × |
| 1995565 | 1921879 | | | | | 1921921 | 1921882 | " | | | 1921895 | 1921778 |
| 1995566 | 1921877 | | | | | " | " | " | | | " | " |
| 1995568 | 1917195 | 1910372 | 1910373 | 1917218 | 1910371 | | | | | | | △ |
| 1995570 | 1923724 | " | " | " | " | 1923726 | 1923719 | 1917194 | | | 1921895 | □ |
| 1995571 | 1924196 | | | | | 1924199 | 1921882 | 1921885 | | | " | 1924605 |
| 1995572 | 1924191 | 1910372 | 1910373 | * | * | * | 1924184 | " | | | 1924190 | ◊ |
| 1995574 | 1921879 | | | | | 1925007 | 1921882 | " | | | 1921895 | 1924605 |
| 1995575 | 1924196 | | | | | 1925350 | " | " | | | " | " |
| 1995581 | 1927339 | 1910372 | 1910373 | 1926913 | 1926906 | 1927341 | 1927336 | " | | | 1924190 | ● |
| 1995582 | 1924191 | " | " | " | " | 1924182 | 1927547 | " | | | " | ▲ |
| 1995585 | 1928224 | | | | | 1925350 | 1921882 | " | | | 1921895 | 1924605 |
| 1995587 | 1927996 | | | | | 1927943 | " | " | | | " | " |
| 1995588 | 1927859 | 1910372 | 1910373 | 1926913 | 1926906 | 1927854 | 1927863 | 1917194 | | | " | |
| 1995589 | 1928045 | " | " | 1917218 | 1910371 | 1928044 | 1928048 | " | | | " | ◊ |
| 1995590 | " | " | " | " | " | 1928050 | " | " | | | " | ■ |

*Early production units used 1910371 Carrier (3/8 thk.) & 1917218 Spring (1 3/32 approx. free length. Later production used 1926906 Carrier (13/64 thk.) & 1926913 Spring (1 1/16 approx. free length). Replace housing with complete unit.

♦Lever (Black knob)—1917054
Lever (Ivory knob)—1917880
Lever (Chelsa Grey knob)—1920529
Lever (Keswick green knob)—1920530
Lever (Falmouth Blue knob)—1920531
Lever (Bolero Maroon knob)—1920532
Lever (Orion Blue knob)—1920533

×Lever (Standard)—1921914
Lever (Use with clock)—1921963

△Lever (Seville Brown knob)—1920707
Lever (Black knob)—1920708
Lever (Granite Grey knob)—1920709
Lever (Duchess Blue knob)—1920710
Lever (Balmoral Blue knob)—1920712
Lever (Bolero Maroon knob)—1920713

□Lever (Seville Brown knob)—1923683
Lever (Black knob)—1924461
Lever (Granite Grey knob)—1924462
Lever (Duchess Blue knob)—1924463
Lever (Balmoral Green knob)—1924464
Lever (Momany Red knob)—1924465
Lever (Red knob—Sport Car)—1925157
Lever (Blue knob—Sport Car)—1925158
Lever (Highland Green knob—Spec. convertible)—1925598
Lever (Aegean Blue knob—Spec. convertible)—1925599

For 1954 only

◊Lever (Light Grey)—1924143
Lever (Light Green)—1924708
Lever (Light Blue)—1924711
Lever (Black)—1924714
Lever (White)—1927812

●Lever (Ivory) 1927754
Lever (Light Grey)—1927755
Lever (Light Green)—1927756
Lever (Light Blue)—1927757

▲Lever (Light Gray knob)—1927510
Lever (Light Green knob)—1927511
Lever (Light Blue knob)—1927512
Lever (Black knob)—1927513
Lever (White knob)—1927811

◊Lever (Caprice Blue knob)—1927896
Lever (Cedar Green knob)—1927897
Lever (Segovia Brown knob)—1927898
Lever (Princess Blue knob)—1927899
Lever (Briar Green knob)—1927900
Lever (Cumulus Grey)—1927901
Lever (Mandran Red knob)—1927902
Lever (Black knob)—1927903
Lever (Balmoral Green knob)—1930217

■Lever (Aztec Red knob)—1927904
Lever (Azure Blue knob)—1927905

**Delco-Remy**
SERVICE PARTS CATALOG

# MINOR PARTS SECTION

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | **LOCK WASHERS** | | |
| 13 | Lock Washer—Detent Spring Screw | 121841 | 1995563 |
| 14 | Lock Washer—Harness Clamp Screw | 121841 | 1995563; 72; 82 |
| 15 | Lock Washer—Switch Back Screw | 121841 | 1995558; 63–8; 70–2; 82–9; 90 |
| | **SCREWS** | | |
| 16 | Screw—Detent Spring Attaching | 122159 | 1995563 |
| 17 | Screw—Harness Clamp Attaching | 122159 | 1995563; 72; 82 |
| 17 | Screw—Harness Clamp Attaching | 1921350 | 1995571–5; 81–5–7 |
| 18 | Screw—Lever Attaching (¼–20 Allen hd.) | 451993 | 1995558; 70 |
| 18 | Screw—Lever Attaching (¼–28 Slotted) | 1927021 | 1995570 |
| 18 | Screw—Lever Attaching (¼–20 Allen hd.) | 179117 | 1995563–5–6; 71–2–4–5; 85–7 |
| — | Screw—Ratchet Plate Attaching | 1921350 | 1995571; 87 |
| 19 | Screw—Switch Back Attaching | 132756 | 1995558; 63–8; 70–2; 82 |
| 19 | Screw (& Lock Washer)—Switch Attaching | 1921350 | 1995565–6; 71–4–5; 85–7 |
| 19 | Screw (& Lock Washer)—Switch Attaching | 453696 | 1995581–8–9; 90 |
| 20 | Screw—Switch Mounting | 159920 | 1995563; 71–2–5; 82–5–7 |
| | **WASHERS** | | |
| — | Washer—Contact | 1927998 | 1995587 |
| 21 | Washer—Lever Plate Tension | 1921933 | 1995563 |
| — | Washer—Retainer—Contact Spring | 814830 | 1995587 |
| | **MISCELLANEOUS** | | |
| 22 | BALL—Contact Carrier | 169064 | 1995558; 63–8; 70–2; 81–2–8–9; 90 |
| 23 | CLAMP—Wiring Harness | 1917217 | 1995558; 68 |
| 23 | CLAMP—Wiring Harness | 1910940 | 1995563; 71–2–5; 81–2–5–7 |
| 23 | CLAMP—Wiring Harness | 1923727 | 1995570; 88–9; 90 |
| 24 | CLIP—Plate Retainer | 813245 | 1995563 |
| — | INSULATOR—Switch | 1927860 | 1995587 |
| 25 | KEY—Switch Mounting | 1917609 | 1995563 |
| 25 | KEY—Switch Mounting | 1924200 | 1995571–5; 85–7 |
| 25 | KEY—Switch Mounting | 1924358 | 1995572; 81–2 |
| — | PLATE—Ratchet | 1345353 | 1995571; 87 |
| — | SHIELD | 1928456 | 1995581 |
| — | SHIELD—Plate Assembly | 1924183 | 1995572; 82 |
| 26 | SLEEVE (Rubber)—Lever Plate Stop | 1921930 | 1995563 |
| — | SPRING—Contact | 1927947 | 1995587 |
| — | SOCKET (Lamp) | 1927944 | 1995587 |

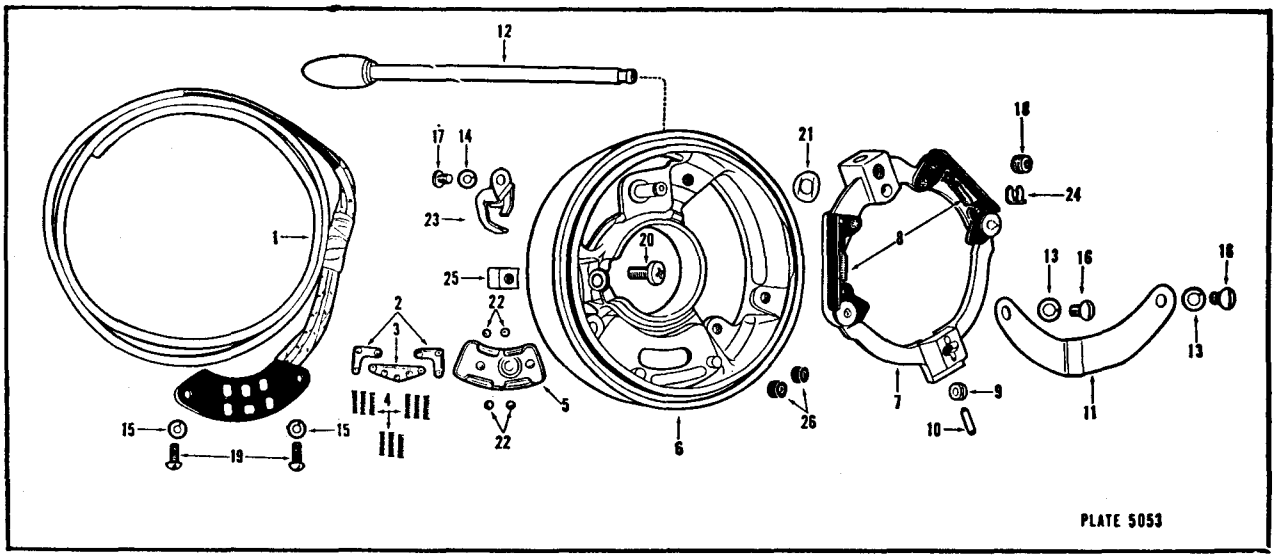


Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

| Model No. | Harness and Back, or Switch 1 | Contact 2 | Contact 3 | Spring — Contact 4 | Carrier — Contact 5 | Housing 6 | Plate Assem. 7 | Spring — Release 8 | Roller 9 | Shaft — Roller 10 | Spring — Detent 11 | Lever — Shipped separate 12 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 1995591 | 1930065 | 1910372 | 1910373 | 1926913 | 1926906 | 1929965 | 1929951 | 1929955 | | | 1929964 | • |
| 1995592 | 1929732 | " | " | " | 1929763 | 1929731 | 1929734 | 1921885 | | | 1925279 | 1929716 |
| 1995593 | " | " | " | " | " | 1929785 | " | " | | | " | " |
| 1995594 | 1927339 | " | " | " | 1926906 | 1930069 | 1929951 | 1929955 | | | 1929964 | • |
| 1995595 | 1930035 | † | † | 1925266 | 1930280 | 1930277 | 1930038 | 1930005 | | | 1930043 | 1929978 |
| 1995598 | " | † | † | " | " | " | " | " | | | " | " |
| 1995599 | " | † | † | " | " | " | " | " | | | " | " |
| 1995600 | " | † | † | " | 1932484 | 1932483 | 1932478 | 1932479 | | | " | × |
| 1995801 | | | | | | 1932298 | 1932299 | 1929955 | | | 1929964 | |
| 1995802 | 1932969 | † | † | 1925266 | 1932484 | 1932491 | 1932478 | 1932479 | | | 1930043 | × |
| 1995803 | 1932941 | 1910372 | 1910373 | 1926913 | 1929763 | 1933564 | 1933422 | 1933423 | | | 1925279 | 1933248 |
| 1995804 | " | " | " | " | " | 1933565 | " | " | | | " | " |
| 1995805 | 1932944 | † | † | 1925266 | 1930280 | 1930277 | 1930038 | 1930005 | | | 1930043 | 1929978 |
| 1995806 | " | † | † | " | " | " | " | " | | | " | " |
| 1995807 | " | † | † | " | " | " | " | " | | | " | " |
| 1995808 | " | † | † | " | " | " | " | " | | | " | " |
| 1995809 | " | † | † | " | " | " | " | " | | | " | " |
| 1995810 | " | † | † | " | " | " | " | " | | | " | " |
| 1995811 | | | | | | 1935013 | 1935858 | 1929955 | | | 1929964 | |
| 1995812 | | | | | | 1936555 | 1936552 | " | | | " | |
| 1995813 | | | | | | 1936556 | " | " | | | " | |
| 1995814 | 1939996 | † | † | 1925266 | 1932484 | 1936677 | 1936680 | 1932479 | | | 1930043 | × |
| 1995815 | | | | | | 1937347 | 1937348 | 1929955 | | | 1929964 | |
| 1995816 | | | | | | *1938270 | 1937410 | 1930005 | | | 1937408 | 1937242 |
| 1995817 | | | | | | *1938271 | " | " | | | " | " |
| 1995818 | | | | | | *1938272 | " | " | | | " | " |
| 1995820 | | | | | | *1938270 | " | " | | | " | " |
| 1995821 | | | | | | * " | " | " | | | " | |
| 1995822 | | | | | | " | " | " | | | " | |
| 1995823 | | | | | | " | " | " | | | " | |

(Continued on Page 2)

†Contact 1930278 has 2 points; 1930279 has 3 points.

•
1955 Lever—(Ivory)—1927754
Lever—(Light Grey)—1927755
Lever—(Light Green)—1930239
Lever—(Light Blue)—1927757
Lever—(Red)—1930240
Lever—(Burlingame Red)—1931317
Lever—(Coral)—1931318
Lever—(Turquoise)—1931319

×Lever furnished by Cadillac.
*Housing and Shield Assembly.

•
1956 Lever—(Pale Green)—1932912
Lever—(Pale Blue)—1932913
Lever—(Light Grey)—1932914
Lever—(Ivory)—1932915
Lever—(Red)—1932916
Lever—(Beige)—1932917

# Delco-Remy
## SERVICE PARTS CATALOG

| Model No. | Harness and Back, or Switch | Contact | Contact | Spring — Contact | Carrier — Contact | Housing | Plate Assem. | Spring — Release | Roller | Shaft — Roller | Spring — Detent | Lever — Shipped separate |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
| 1995824 | 1939996 | † | † | 1925266 | 1932484 | 1943828 | 1943318 | 1932479 | | | 1930043 | |
| 1995825 | | | | | | 1943537 | | 1929955 | | | 1960990 | 1932216 |
| 1995826 | | | | | | 1943979 | 1943850 | " | | | 1929964 | " |
| 1995827 | | | | | | *1945134 | 1937410 | 1930005 | | | 1937408 | |
| 1995828 | | | | | | *1945135 | " | " | | | " | |
| 1995829 | | | | | | *1945136 | " | " | | | " | |
| 1995830 | | | | | | *1945137 | " | " | | | " | |
| 1995831 | | | | | | *1945035 | " | " | | | " | |
| 1995832 | | | | | | 1947960 | | 1929955 | | | 1960990 | 1932216 |
| 1995833 | | | | | | " | | " | | | " | " |
| 1995834 | | | | | | 1943979 | 1948148 | 1948149 | | | 1929964 | " |
| 1995836 | | | | | | *1948861 | 1948315 | 1930005 | | | 1937408 | |
| 1995837 | | | | | | *1948862 | " | " | | | " | |
| 1995838 | | | | | | *1948863 | " | " | | | " | |
| 1995839 | | | | | | *1948864 | " | " | | | " | |
| 1995841 | | | | | | | | 1929955 | 1937411 | | 1960990 | 1932216 |
| 1995842 | | | | | | *1951814 | 1951812 | 1948149 | | | 1929964 | " |
| 1995843 | | | | | | | | 1929955 | 1937411 | | 1960990 | " |
| 1995844 | | | | | | 1952090 | | " | " | | 1960990 | " |
| 1995845 | | | | | | " | | " | " | | " | " |
| ‡1995846 | | | | | | △ | | | | | 1960475 | |
| ‡1995847 | | | | | | △ | | | | | " | |
| ‡1995848 | | | | | | △ | | | | | " | |
| 1995849 | | | | | | 1961286 | | 1929955 | 1937411 | | 1960990 | 1932216 |
| ‡1995850 | | | | | | △ | | | | | 1960475 | |
| 1995851 | | | | | | 1961951 | 1961950 | 1948149 | | | 1929964 | 1932216 |
| ‡1995852 | | | | | | △ | | | | | 1960475 | |
| ‡1995853 | | | | | | | | | | | " | |
| ‡1995854 | | | | | | | | | | | " | |
| 1995855 | | | | | | | | 1929955 | | | " | 1960990 |
| ‡1995856 | | | | | | | | | | | " | |
| ‡1995857 | | | | | | | | | 1937411 | | 1961811 | 1932216 |
| ‡1995858 | | | | | | | | | | | 1960475 | |
| ‡1995862 | | | | | | | | | | | " | |
| ‡1995864 | | | | | | | | | | | " | |
| ‡1995865 | | | | | | | | | | | " | |
| 1995866 | | | | | | 1963655 | 1963653 | 1948149 | | | 1929964 | 1932216 |
| ‡1995867 | | | | | | | | | | | 1960475 | |
| ‡1995868 | | | | | | | | | | | " | |
| ‡1995869 | | | | | | | | | | | " | |
| ‡1995870 | | | | | | | | | | | " | |
| ‡1995871 | | | | | | | | | | | 1967077 | |
| 1995872 | | | | | | | | | | | 1964461 | |
| 1995873 | | | | | | | | | | | 1965268 | |
| 1995874 | | | | | | | | | | | 1960475 | |
| 1995875 | | | | | | | | | | | 1965268 | |
| 1995876 | | | | | | | | | | | " | |
| 1995877 | | | | | | | | | | | 1960475 | |
| 1995878 | | | | | | | | | | | 1967077 | |
| 1995879 | | | | | | | | | | | 1960475 | |
| 1995880 | | | | | | | | | | | 1965270 | |
| 1995881 | | | | | | | | | | | " | |
| 1995882 | | | | | | | | | | | 1960475 | |
| 1995883 | | | | | | | | | | | " | |
| 1995884 | | | | | | | | | | | " | |
| 1995885 | | | | | | | | | | | " | |
| 1995886 | | | | | | | | | | | " | |

†Contact 1930278 has 2 points; 1930279 has 3 points.
*Housing and Shield Assembly.
‡Wire Assembly is not included—for service must order separately.
△Housing serviced by Saginaw Steering Division.

**Parts not listed in this Catalog will not be sold separately.**

| Model No. | Harness and Back, or Switch | Contact | Contact | Spring — Contact | Carrier — Contact | Housing | Plate Assem. | Spring — Release | Roller | Shaft — Roller | Spring — Detent | Lever — Shipped separate |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
| 1995887 | | | | | | | | | | | 1967077 | |
| 1995888 | | | | | | | | | | | 1964461 | |
| 1995889 | | | | | | | | | | | " | |
| 1995890 | | | | | | | | | | | " | |
| 1995891 | | | | | | | | | | | " | |
| 1995892 | | | | | | | | | | | 1960475 | |
| 1995893 | | | | | | | | | | | " | |
| 1995894 | | | | | | | | | | | 1964461 | |
| 1995895 | | | | | | | | | | | 1967077 | |
| 1995896 | | | | | | | | | | | 1960475 | |
| 1995897 | | | | | | | | | | | 1967684 | |
| 1995898 | | | | | | | | | | | " | |
| 1995899 | | | | | | | | | | | " | |
| 1995900 | | | | | | | | | | | " | |
| 1997930 | | | | | | | | | | | " | |
| 1997931 | | | | | | | | | | | " | |
| 1997932 | | | | | | | | | | | " | |
| 1997933 | | | | | | | | | | | " | |
| 1997934 | | | | | | | | | | | " | |
| 1997935 | | | | | | | | | | | " | |
| 1997936 | | | | | | | | | | | " | |
| 1997937 | | | | | | | | | | | " | |
| 1997938 | | | | | | | | | | | " | |
| 1997939 | | | | | | | | | | | " | |
| 1997940 | | | | | | | | | | | " | |
| 1997945 | | | | | | | | | | | " | |
| 1997948 | | | | | | | | | | | " | |
| 1997949 | | | | | | | | | | | " | |
| 1997950 | | | | | | | | | | | " | |
| 1997951 | | | | | | | | | | | " | |
| 1997952 | | | | | | | | | | | " | |
| 1997953 | | | | | | | | | | | " | |
| 1997955 | | | | | | | | | | | " | |

**Delco-Remy**
SERVICE PARTS CATALOG

# MINOR PARTS SECTION

**NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.**

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | **SCREWS** | | |
| — | Screw—Control Wire Attaching | 9419291 | 1995846-7-8; 50-2-3-4-6-7-8; 62-4-5-7-8-9; 70-1-4-7-8-9; 82; -3-4-5-6 |
| — | Screw—Control Wire Attaching | 9423451 | 1995887; 92-3-5-6 |
| — | Screw—Control Wire Attaching | 1931494 | 1995816-17-18; 20-1-2-3-7-8-9; 30-1-6-7-8-9 |
| 17 | Screw—Harness Clamp Attaching | 453418 | 1995591-2-3-4; 803-4 |
| 17 | Screw—Harness Clamp Attaching (No. 8) | 1931494 | 1995595-8-9 |
| 17 | Screw—Harness Clamp Attaching (No. 6) | 172111 | 1995595-8-9; 805-6-7-8-9-10 |
| 19 | Screw (& Lock Washer)—Switch Back Attaching | 453696 | 1995591-2-3-4; 803-4 |
| 19 | Screw (8-32x$\frac{5}{16}$ Truss hd.)—Switch Back Attaching | 453418 | 1995591 |
| 19 | Screw (& Lock Washer)—Switch Back Attaching | 171354 | 1995595-8-9; 805-6-7-8-9-10 |
| 19 | Screw—Switch Back Attaching | 9404433 | 1995600; 802; 14; 24 |
| — | Screw—Yoke Mounting Plate | 171225 | 1995825 |
| — | Screw—Socket Assem. Attaching | 9423451 | 1997937 |
| | **MISCELLANEOUS** | | |
| | BALL—Contact Carrier | 169064 | 1995591-2-3-4; 803-4; 16-17-18; 20-1-2-3-5-7-8-9; 30-1-2-3-6-7-8-9; 41-3-4-5-6; 55 |
| 22 | BALL—Contact Carrier | 169063 | 1995595-8-9; 600; 802-5-6-7-8-9-10-14; 24 |
| — | CAM (Shipped separate) | 1929717 | 1995592-3 |
| 23 | CLAMP—Wiring Harness | 1930068 | 1995591 |
| 23 | CLAMP—Wiring Harness | 1932312 | 1995592-3 |
| 23 | CLAMP—Wiring Harness | 1910940 | 1995594 |
| 23 | CLAMP—Wiring Harness | 1930470 | 1995595-8-9 |
| 23 | CLAMP—Wiring Harness | 1932485 | 1995600; 802 |
| 23 | CLAMP—Wiring Harness | 1937744 | 1995814; 24 |
| — | LEVER (Shipped separate) | 1932216 | 1995801; 11-12-13-15; 51 |
| — | LOCK WASHER—Pivot Stud | 9422354 | 1995816-17-18; 20-1-2-3-5-7-8-9; 30-1-2-3-6-7-8-9; 41-3-4-5-6; 55 |
| — | PLATE—Bearing | 1947959 | 1998832; 44-5 |
| — | PLATE—Bearing | 1947994 | 1995833 |
| — | PLATE—Bearing | 1951768 | 1995843 |
| — | PLATE—Bearing | 1951066 | 1995841; 55 |
| — | PLATE—Bearing | 1960988 | 1995849 |
| — | PLATE—Yoke Mounting | 1943435 | 1995825 |
| — | RING—Post Retainer | 1927545 | 1995846-7-8; 50-2-3-4-6-7-8; 62-4-5-7-8-9; 70-1-4-7-8-9; 82-3-4-5-6-7; 92-3-6 |
| — | ROD (Shipped separate) | 1932215 | 1995801 |
| — | ROD (Shipped separate) | 1936450 | 1995811 |
| — | ROD (Shipped separate) | 1937041 | 1995812-13; 26 |
| — | ROD (Shipped separate) | 1937382 | 1995815 |
| — | ROD (Shipped separate) | 1943423 | 1995825 |
| — | ROD (Shipped separate) | 1943428 | 1995832-3 |
| — | ROD (Shipped separate) | 1948124 | 1995834; 42-6; 66 |
| — | ROD (Shipped separate) | 579695 | 1995841 |
| — | ROD (Shipped separate) | 1950625 | 1995843; 55 |
| — | ROLLER | 1937411 | 1995816-17-18; 20-1-2-3-5-7-8-9; 30-1-2-3-6-7-8-9 |
| — | SHIELD | 1928456 | 1995591-4; 600; 811 |
| — | SHIELD | 1936554 | 1995812-13-15; 26; 34; 42; 51; 66 |
| — | SOCKET—Assem.—Gear Selector Lamp | 1846385 | 1997953 |
| — | SOCKET—Assem.—Gear Selector Lamp | 1969210 | 1997930 |
| — | SOCKET—Assem—Gear Selector Lamp | 1967972 | 1995899; 937 |
| — | SPRING—Anti-Rattle | 1925275 | 1995812-13-15; 26; 34 |
| — | SPRING—Anti-Rattle | 1927545 | 1995842; 51; 66 |
| — | SPRING—Cancelling | 1964543 | 1995872; 88-9; 90-1-4 |
| — | SPRING—Cancelling | 1964784 | 1995873-5-6; 80-1; 97-8-9; 900-1997930-1-2-3-4-5-6-7-8-9; 40-5-8-9; 50-1-2-3-5 |
| — | SPRING—Cancelling | 1964785 | 1995873-5-6; 80-1; 97-8-9; 900-1997930-1-2-3-4-5-6-7-8-9; 40-5-8-9; 50-1-2-3-5 |
| — | SPRING—Lane Change | 1967685 | 1995897-8-900-1997930-1-2-3-4-5-6-7-8-9; 40-5-8-9; 50-1-2-3-5 |
| — | SPRING—Lever (Shipped separate) | 1932217 | 1995801; 11-12-13-15; 25-6; 32-3-4; 41-2-3-4-5-9; 51-5; 66 |
| — | SPRING—Trigger | *1921885 | 1995846-7-8; 50-2-3-4-6-7-8; 62-4-5-7-8-9; 70-1-4-7-8-9; 82-3-4-5-6; 92-3 |
| — | SPRING—Trigger—R.H. | 1966522 | 1995887; 95-6 |
| — | SPRING—Trigger—L.H. | 1966523 | 1995887; 95-6 |
| — | STUD—Yoke Pivot | 1937405 | 1995816-17-18; 20-1-2-3-7-8-9; 30-1-6-7-8-9 |

*Later Actuators use R.H. 1966522 and L.H. 1966523.

# MINOR PARTS SECTION

| Illus. No. | Name | Part No. | Used on Models |
|---|---|---|---|
| | MISCELLANEOUS—Continued | | |
| — | STUD—Yoke Pivot | 1944521 | 1995825; 32–3; 41–3–4–5–9; 55 |
| — | WASHER—Pivot Stud | 1943853 | 1995825; 32–3; 41–3–4–5–6; 55 |
| — | WIRE—Control | 1937400 | 1995816–17–18; 20–1–2–3–7–8–9; 30–1 |
| — | WIRE—Control | 1948822 | 1995836–7–8–9 |
| — | WIRE—Control | 1960470 | 1995848 |
| — | WIRE—Control | 1960495 | 1995846 |
| — | WIRE—Control | 1960533 | 1995847; 50 |
| — | WIRE—Control | 1958552 | 1995852 |
| — | WIRE—Control | 1962877 | 1995853; 82 |
| — | WIRE—Control | 1965037 | 1995874 |
| — | WIRE—Control | 1965038 | 1995877 |
| — | WIRE—Control | 1965039 | 1995878 |
| — | WIRE—Control | 1965040 | 1995879 |
| — | WIRE—Control | 1965262 | 1995883 |
| — | WIRE—Control | 1965263 | 1995884 |
| — | WIRE—Control | 1965264 | 1995885 |
| — | WIRE—Control | 1965265 | 1995886 |
| — | WIRE—Control | 1939043 | 1995858 |
| — | WIRE—Control | 1962377 | 1995853 |
| — | WIRE—Control | 1962382 | 1995854 |
| — | WIRE—Control | 1962876 | 1995856 |
| — | WIRE—Control | 1963518 | 1995862–5; 71; 95–6 |
| — | WIRE—Control | 1963636 | 1995864 |
| — | WIRE—Control | 1963719 | 1995867 |
| — | WIRE—Control | 1963725 | 1995868 |
| — | WIRE—Control | 1964233 | 1995869 |
| — | WIRE—Control | 1966507 | 1995887 |
| — | WIRE—Control | 1966817 | 1995892 |
| — | WIRE—Control | 1966818 | 1995893 |
| — | YOKE | 1967420 | 1995825; 32–3; 44–5 |
| — | YOKE | 1950524 | 1995841–3; 55 |
| — | YOKE | 1960491 | 1995846 |
| — | YOKE | 1966809 | 1995848; 53–4–8; 67–8; 74–7–8; 83–4–5–6–7; 92–3 |
| — | YOKE | 1960989 | 1995849 |
| — | YOKE | 1968091 | 1995847; 50–2–6–7 |
| — | YOKE | 1967313 | 1995864 |
| — | YOKE | 1968093 | 1995869 |
| — | YOKE | 1967311 | 1995862–5; 70–1; 95–6 |
| — | YOKE | 1965125 | 1995879; 82 |

| Name | Part No. | Used on Models |
|---|---|---|
| BALL (⅛ dia.) | 169064 | 1993635 |
| BALL (3/32" dia.) | 169067 | 1993504-5-6-7-11-12-14-15-16-17-19; 35; 44-5-6-7-8-9; 610; 35; 686; 1998986-7-8-9; 122; 157-9; 60-2; 71; 84-5-6; 658-9; 702; 34-5-6-7 |
| BASE & TERMINAL | 1940531 | 1993547; 1998658 |
| BASE & TERMINAL | 1940538 | 1993686; 1998659 |
| BOOT | 1955207 | 1993668; 695 |
| BUTTON (& Contact) | 1935688 | 1993503; 35; 85; 1998167 |
| CAP | 1929209 | 1993511; 12-19; 35; 1998086-7-8-9; 122; 157-9; 60; 71; 86; 610; 658-9 |
| CAP | 1935474 | 1993547; 1998162; 736-7 |
| CAP | 1935692 | 1993503; 85; 610; 1998167 |
| CAP | 1937736 | 1993515-17; 45; 1998184 |
| CAP | 1937801 | 1993514-16; 44; 1998185 |
| CAP | 1945044 | 1993546; 1998702; 34-5 |
| CAP | 1950122 | 1993504; 48 |
| CAP | 1950123 | 1993506-7; 49 |
| CAP | 1963276 | 1993635 |
| CAP | 1964564 | 1993686 |
| CARRIER—(Contact) | 1929210 | 1993504-5-6-7-11-12-14-15-16-17-19; 35; 44-5-6-7-8-9; 610; 35; 686; 1998086-7-8-9; 122; 157-9; 60-2; 71; 84-5-6; 658-9; 702; 34-5-6-7 |
| CONTACT | 1908726 | 1993504-5-6-7-11-12-14-15-16-17-19; 35; 44-5-6-7-8-9; 610; 35; 686; 1998086-7-8-9; 157-9; 60-2; 71; 84-5-6; 658-9; 702; 34-5-6-7 |
| CONTACT | 1931293 | 1998122 |
| HARNESS (& Back) | 1932265 | 1998086 |
| HARNESS (& Back) | 1932432 | 1998087 |
| HARNESS (& Back) | 1932433 | 1998088 |
| HARNESS (& Back) | 1932434 | 1998089 |
| HARNESS (& Back) | 1931294 | 1998122 |
| HARNESS (& Back) | 1935166 | 1998157 |
| HARNESS (& Back) | 1935360 | 1998159 |
| HARNESS (& Back) | 1935366 | 1998160 |
| HARNESS (& Back) | 1935359 | 1998162; 84-5 |
| HARNESS (& Back) | 1935686 | 1998167 |
| HARNESS (& Back) | 1935844 | 1998171; 702 |
| HARNESS (& Back) | 1938200 | 1998186 |
| HARNESS (& Back) | 1940531 | 1993549 |
| HARNESS (& Back) | 1940538 | 1993544-5-6-8 |
| HARNESS (& Back) | 1948829 | 1993504-6; 1998736 |
| HARNESS (& Back) | 1948830 | 1993505-7-12; 1998737 |
| HARNESS (& Back) | 1950255 | 1993503 |
| HARNESS (& Back) | 1950256 | 1993511-14-15; 1998734 |
| HARNESS (& Back) | 1950257 | 1993516-17; 1998735 |
| HARNESS (& Back) | 1951194 | 1993519 |
| HARNESS (& Back) | 1952987 | 1993535 |
| HARNESS (& Back) | 1959929 | 1993585 |
| HARNESS (& Back) | 1961497 | 1993610 |
| HARNESS (& Back) | 1963271 | 1993635 |
| KNOB—Control | 1990660 | 1998147 |
| SCREW—Cap Att. * | 120612 | 1998086-7-8-9; 122; 157-9; 60-2-7; 71; 84-5-6; 702 |
| SCREW—Cap Att. | 1940537 | 1993503-4-5-6-7-11-12-14-15-16-17-19; 35; 44-5-6-7-8-9; 85; 610; 35; 686; 1998658-9; 734-5-6-7 |
| SCREW—Set | 173675 | 1998086-7-8-9; 122; 157-9; 60-2-7; 71; 84-5-6; 702 |
| SCREW—Set | 1883235 | 1998147 |
| SPRING—Ball Tension | 1931291 | 1993504-5-6-7-11-12-14-15-16-17-19; 35; 44-5-6-7-8-9; 686; 1998086-7-8-9; 122; 157-9; 60-2; 71; 84-5-6; 658-9; 734-5-6-7 |
| SPRING—Ball Tension | 1961499 | 1993610; 35 |
| SPRING—(Button) | 1935691 | 1993585; 1998167 |
| SPRING—(Contact) | 1929406 | 1993504-5-6-7-11-12-14-15-16-17-19; 35; 44-5-6-7-8-9; 610; 35; 686; 1998086-7-8-9; 122; 157-9; 60-2; 71; 84-5-6; 658-9; 702; 34-5-6-7 |
| SPRING—(Contact) | 1950254 | 1993503 |

* Later models without set screw use 1940537.

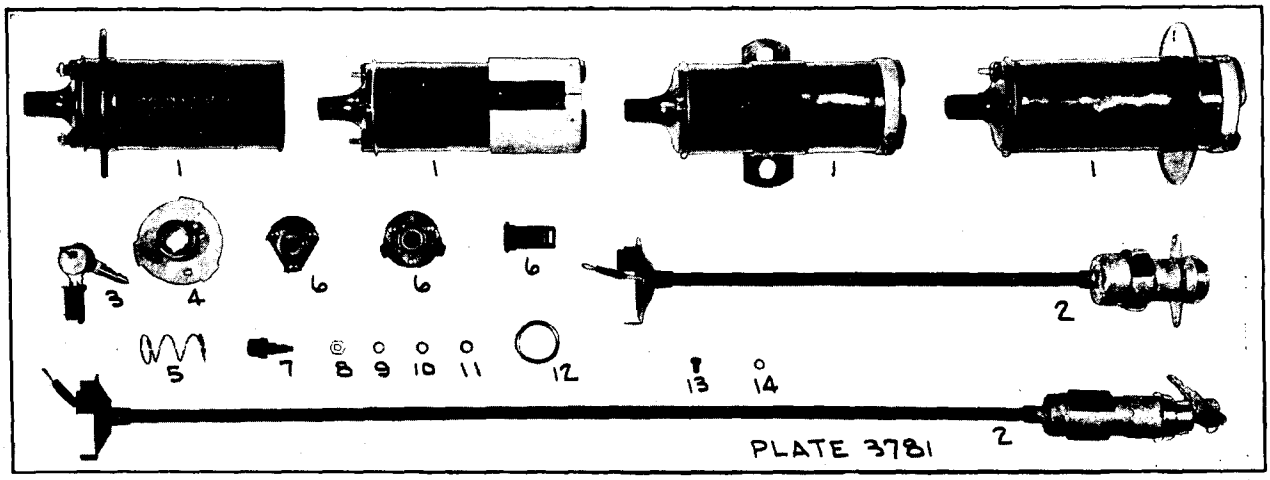


Illustrations are of Typical Parts only, which may vary in detail.

| Model No. | Coil less Switch | Switch Assembly | Lock Assembly | Lock Mounting Plate | Lock Return Spring | Contact bly bly | High Tension Terminal (Screw Type) | Switch Lead Attaching Nut | Switch Lead Attaching Nut Lock Washer | Switch Lead Nut Steel Washer | Switch Lead Nut Brass Washer | Switch Mounting Nut | Switch Terminal Screw | Switch Terminal Screw Lock Washer |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 |
| 538-A | 1853585 | °430-A | 1853856 | | | | | | | | | | 114935 | 138530 |
| 538-B | 1849562 | 430-C | 1854101 | | | | | 115295 | 141552 | 1845804 | | 1884878 | | |
| 538-C | 1847626 | 431-C | | | | | | " | " | " | | 1854006 | 132753 | 141551 |
| 538-CA | " | 431-CA | 1855243 | | | | | " | " | " | | " | " | " |
| 538-E | 1849562 | 430-E | 1854101 | | | | | " | " | " | | 1884878 | | |
| 538-F | " | 430-D | " | | | | | " | " | " | | " | | |
| 538-G | " | 430-G | " | | | | | " | " | " | | " | | |
| 538-H | 1853585 | 430-P | 1853856 | | | | | " | " | " | 826213 | | 114935 | 138530 |
| 538-J | 1849739 | 429-U | * | | | | 1839164 | " | " | " | " | | " | " |
| 538-K | " | 429-T | * | | | | " | " | " | " | " | | " | " |
| 538-L | " | 429-S | * | | | | " | " | " | " | " | | " | " |
| 538-M | " | 429-R | * | | | | " | " | " | " | " | | " | " |
| 538-N | " | 429-P | * | | | | " | " | " | " | " | | " | " |
| 538-P | " | 429-N | * | | | | " | " | " | " | " | | " | " |
| 538-R | " | 429-M | * | | | | " | " | " | " | " | | " | " |
| 538-T | " | 429-F | * | | | | " | " | " | " | " | | " | " |
| 538-U | " | 429-D | * | | | | " | " | " | " | " | | " | " |
| 538-V | " | 429-C | * | | | | " | " | " | " | " | | " | " |
| 538-W | " | 429-W | * | | | | " | " | " | " | " | | " | " |
| 538-X | " | 429-X | * | | | | " | " | " | " | " | | " | " |
| 538-Y | " | 429-Y | * | | | | " | " | " | " | " | | " | " |
| x538-Z | x | | * | | | | | " | " | | " | | " | |

°1854317 Switch Assembly less lock and key—538-A.
*Lock furnished by Car Manufacturer.
x538-Z is Service Coil less switch.

| MISCELLANEOUS PARTS | Part No. | Used on Models |
|---|---|---|
| Coil Terminal CLAMP | 824665 | All |
| Coil Terminal NUT | 115295 | All |
| Coil Terminal Nut LOCK WASHER | 106497 | All |
| Coil Terminal Nut Plain WASHER—Brass | 826213 | All |
| Coil Terminal Nut Plain WASHER—Steel | 1845804 | All |
| H.T. TERMINAL | 829833 | 538-Z |
| NIPPLE | 1839771 | 538-Z |
| Bracket SPACER | 1842363 | 538-Z |
| Bracket Clamp SCREW | 132143 | 538-Z |
| Bracket Clamp Screw NUT | 115614 | 538-Z |