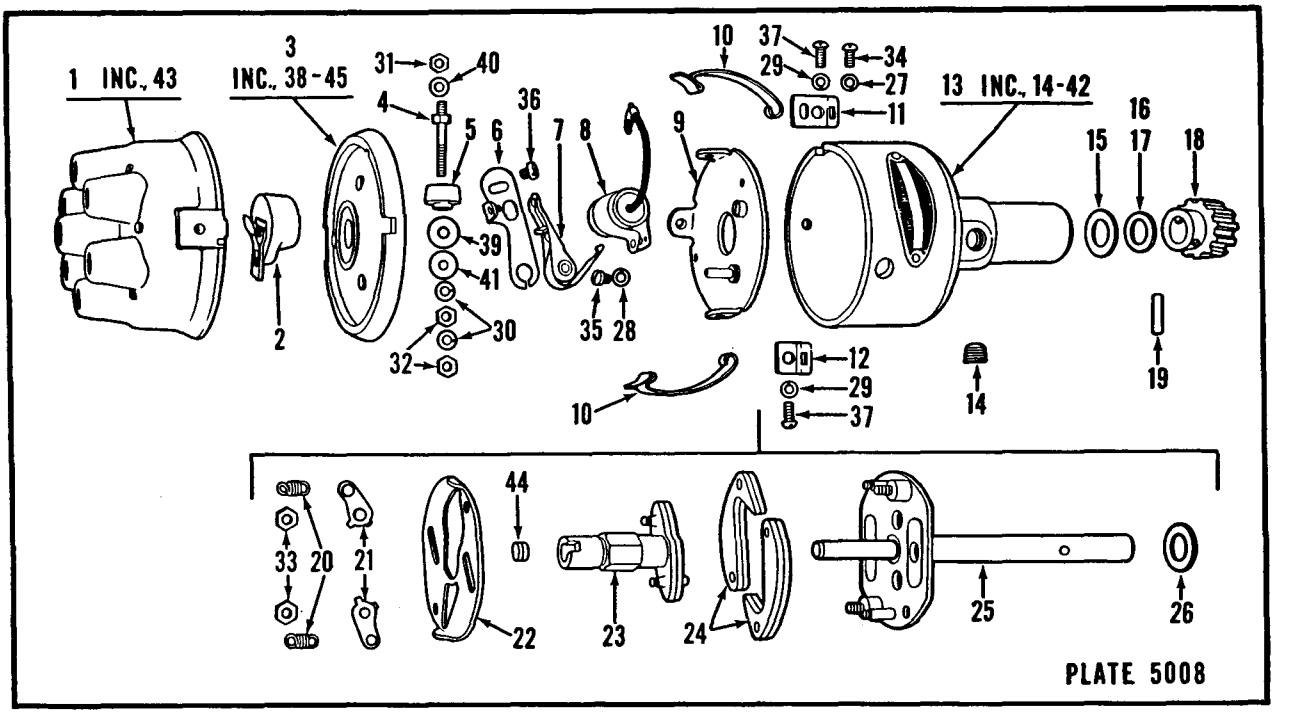

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Cover — Housing	Screw or Stud — Terminal	Bushing — Ins.	Point and Support	Breaker Lever	Condenser	Plate — Breaker	Spring — Cap	Support — Cap Spring	Support — Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112392	1924248	1924245	.....	1924371	†	*1848038	×1917254	1928111	1847643	1871838	1847289	1847289	1927932
1112395	824735	820445	.....	1916806	1878405	♦ "	♦ 813238	1900272	"	"	"	"	1877908
1112396	1924248	1924245	.....	1924371	†	* "	*1917254	1928111	"	"	"	"	1927932
1112397	824735	820445	.....	1916806	□	♦ "	♦ 813238	1900272	"	"	"	"	1918021
1112398	"	"	.....	1916806	□	"	"	"	"	"	"	"	1927776
1112399	"	"	.....	"	□	"	"	"	"	"	"	"	**1927776**
1112400	1924248	1924245	.....	1924371	†	* "	*1917254	1928111	"	"	"	"	1927932
1112401	824735	820445	.....	1916806	1878405	♦ "	♦ 813238	"	"	"	"	"	1921275
1112402	1931512	1924245	.....	1924371	†	* "	*1917254	"	"	"	"	"	1960257
1112403	1924248	"	.....	"	†	"	"	"	"	"	"	"	1927932
1112404	824735	820445	.....	1916806	1878405	♦ "	♦ 813238	1900272	"	"	"	"	1913720
1112405	"	"	.....	1916806	□	♦ "	♦ "	1928111	"	"	"	"	1930249
1112406	"	"	.....	"	□	♦ "	♦ "	1900272	"	"	"	"	1930246
1112407	1924248	1924245	.....	1924371	†	* "	*1917254	1928111	"	"	"	"	1927932
1112408	824735	820445	.....	1916806	□	♦ "	♦ 813238	1900272	"	"	"	"	1931055
1112409	1931512	1924245	.....	1924371	†	* "	*1917254	1928111	"	"	"	"	1931052
1112410	1911597	820445	.....	1916806	□	♦ "	♦ 813238	1900272	"	"	"	"	1930246
1112411	1924248	1931482	.....	1924371	†	* "	*1917254	1928111	"	"	"	"	1927932
1112412	824735	820445	.....	1916806	□	♦ "	♦ 813238	1900272	"	"	"	"	1930246
1112413	1911597	"	.....	"	□	♦ "	♦ "	"	"	"	"	"	"
1112414	1931512	1931482	.....	1924371	†	* "	*1917254	1928111	"	"	"	"	1927932
1112416	"	1924245	.....	1916806	□	♦ "	♦ 813238	"	"	"	"	"	1938136
1112417	"	1931482	.....	"	□	♦ "	♦ "	"	"	"	"	"	1938191
1112418	824735	820445	.....	1916806	1878405	‡1882964	‡1881394	1900272	"	"	"	"	1912483
1112419	1931512	1931482	.....	1916806	□	♦1848038	♦ 813238	"	"	"	"	"	1939332

♦Contact Set No. 1855720.
*Contact Set No. 1924571.
°Contact Set No. 1911119.
‡Contact Set No. 1882965.
□Use 1916805 Bushing (Inside) & 1914142 Bushing (Outside).
†Use 1924369 Bushing (Inside) & 1924370 Bushing (Outside).

Delco-Remy
SERVICE PARTS CATALOG

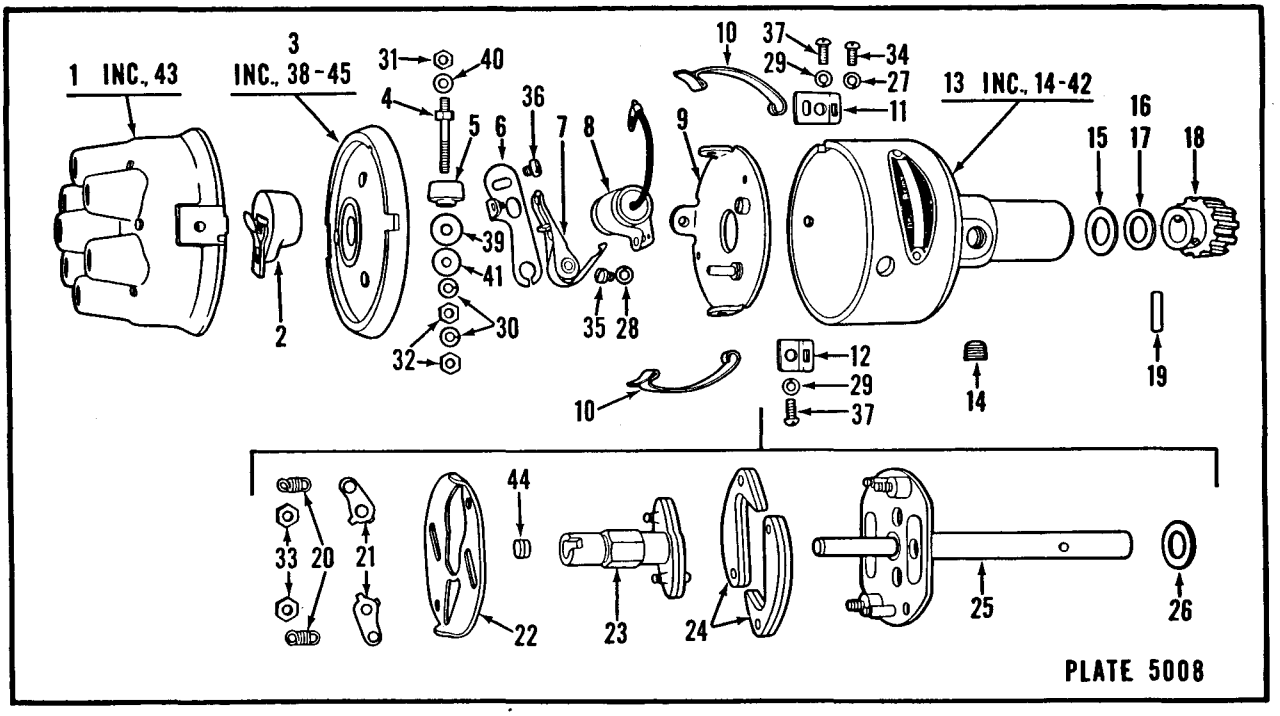

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar Coupling or Gear	Pin	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Washer — Space — under Weight Plate
	14	15	16	17	18	19	20	21	22	23	24	25	26
1112392	.....	.....	.....	.....	1921074	1857502	1922426	1885558	1885557	1924266	1881371	1924265	.....
1112395	.....	811912	810074	1912129	×069537	817267	1906858	"	"	1926171	1880902	1926170	811912
1112396	.....	.....	.....	.....	1921074	1857502	1906766	"	"	1924240	1882907	1924238	.....
1112397	125947	811912	810074	1912129	1912218	1862218	1911092	"	"	1926787	1881371	1926785	811912
1112398	"	"	"	"	1864165	1857492	1900371	"	"	1926765	"	1926764	"
1112399	"	"	"	"	"	"	1903101	"	"	1927775	1880902	1927774	"
1112400	.....	.....	.....	.....	1921074	1857502	1886508	"	"	1924451	1881371	1924238	.....
1112401	125947	1837617	1927529	1848596	1845656	1862218	1917710	"	"	1928231	"	1923083	811912
1112402	"	.....	.....	.....	△	△	1929319	"	"	1929339	1880902	1929337	"
1112403	.....	.....	.....	.....	1921074	1857502	1906766	"	"	1929485	1882907	1924238	.....
1112404	.....	811912	810074	1912129	1864165	1857492	1913799	"	"	1915726	"	1915724	811912
1112405	125947	"	"	"	1902407	829421	1903693	"	"	1919997	1881371	1915759	"
1112406	.....	"	"	"	1907957	"	1913799	"	"	1915726	1882907	1930245	"
1112407	.....	.....	.....	.....	1921074	1857502	1922426	"	"	1930317	1881371	1924265	.....
1112408	125947	811912	810074	1912129	1912218	1862218	1903101	"	"	1931058	1880902	1918017	811912
1112409	"	1837617	1927529	1848596	1845656	"	1917710	"	"	1931054	1881371	1931050	"
1112410	.....	811912	810074	1912129	1907957	829421	1913799	"	"	1915726	1882907	1930245	"
1112411	.....	.....	.....	.....	1921074	1857502	1886508	"	"	1924451	1881371	1924238	.....
1112412	.....	811912	810074	1912129	1907957	829421	1885339	"	"	1921049	"	1931504	811912
1112413	.....	"	"	"	"	"	"	"	"	"	"	"	"
1112414	.....	.....	.....	.....	1921074	1857502	1886508	"	"	1935743	"	1924238	.....
1112416	125947	811912	810074	1912129	1912218	1862218	1900611	"	"	1938135	1880902	1938133	811912
1112417	"	"	"	"	1864165	1857492	1939794	"	"	1938189	1881371	1938188	"
1112418	"	"	"	"	1912218	1862218	1906858	"	"	1879259	1880902	1939403	"
1112419	.....	"	"	"	1907957	1857502	1939337	"	"	1939338	1881371	1939335	"

×Purchase from G.M. Truck.
△Not furnished by Delco-Remy.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No	Used on Models
	LOCK WASHERS		
27	Lock Washer—Breaker Plate Support Screw	453844	1112392-5-6-7-8-9; 400-1-2-3-4-5-6-7-8-9-10-11-12-13-14-16-17-18-19
28	Lock Washer—Condenser Attaching Screw	453844	1112392-5-6-7-8-9; 400-1-2-3-4-5-6-7-8-9-10-11-12-13-14-16-17-18-19
29	Lock Washer—Distributor Cap Spring Support Screw	453844	1112392-5-6-7-8-9; 400-1-2-3-4-5-6-7-8-9-10-11-12-13-14-16-17-18-19
—	Lock Washer—Terminal Stud	453844	1112392-6-7-8-9; 400-2-3-5-6-7-8-9-10-11-12-13-14-16-17-19
30	Lock Washer—Terminal Stud—Outside	453844	1112305; 401-4; 18
	NUTS		
31	Nut—Terminal Stud—Inside	817363	1112395-7-8-9; 401-4-5-6-8-10-12-13-16-17-18-19
32	Nut—Terminal Stud—Outside (Hex.)	120622	1112392-5-6-7-8-9; 400-1-2-3-4-5-6-7-8-9-10-11-12-13-14-16-17-18-19
32	Nut—Terminal Stud—Outside (Round)	1924372	1112392-6; 400-2-3-7-9-11-14
33	Nut—Weight Hold Down	1923540	1112392-5-6-7-8-9; 400-1-2-3-4-5-6-7-8-9-10-11-12-13-14-16-17-18-19
	SCREWS		
34	Screw—Breaker Plate Support	453418	1112392-5-6-7-8-9; 400-1-2-3-4-5-6-7-8-9-10-11-12-13-14-16-17-18-19
35	Screw—Condenser Attaching	453304	1112392-5-6-7-8-9; 400-1-2-3-4-5-6-7-8-9-10-11-12-13-14-16-17-18-19
36	Screw—Contact Attaching	1914916	All
37	Screw—Distributor Cap Spring Support	453461	1112392-5-6-7-8-9; 400-1-2-3-4-5-6-7-8-9-10-11-12-13-14-16-17-18-19
	WASHERS		
39	Washer—Insulation—Terminal Stud—Outside	1882247	1112395; 401-4; 18
40	Washer—Plain—Terminal Stud—Inside	810794	1112395; 401-4; 18
41	Washer—Plain—Terminal Stud—Outside	815540	1112395; 401-4; 18
	MISCELLANEOUS		
—	BRACKET—Condenser	1869573	1112403
42	BUSHING—Distributor Housing	1909003	1112397-8-9; 401-2-4-5-6-8-9-10-12-13-16-17-18-19
42	BUSHING—Distributor Housing (Lower)	1923251	1112400-11-14
42	BUSHING—Distributor Housing (Upper)	1923250	1112400-11-14
43	BUTTON—Carbon—In Cap	1938193	1112392-5-6-7-8-9; 400-1-2-3-4-5-6-7-8-9-10-11-12-13-14-16-17-18-19
—	CLIP—Lock—Terminal Stud—Outside	1914144	1112392-6-7-8-9; 400-2-3-5-6-7-8-9-10-11-12-13-14-16-17-19
—	CUP—Oil	113702	1112419
44	Felt WICK—In Cam	1963555	1112395-9; 401; 18
44	Felt WICK—In Cam	819639	1112397-8; 402-4-5-6-8-9-10-12-13-16-17-19
—	GREASE CUP	1955293	1112392-5-6; 400-3-7-11-14
—	OILER	1922265	1112404-6-10-12-13-19
—	Oil SEAL—In Housing	1885665	1112401-9
—	PLUG—In Grease Cup Hole	1869303	1112392-5-6; 403-7
--	SPRING—In Grease Cup Hole	1845715	1112392-5-6; 403-7

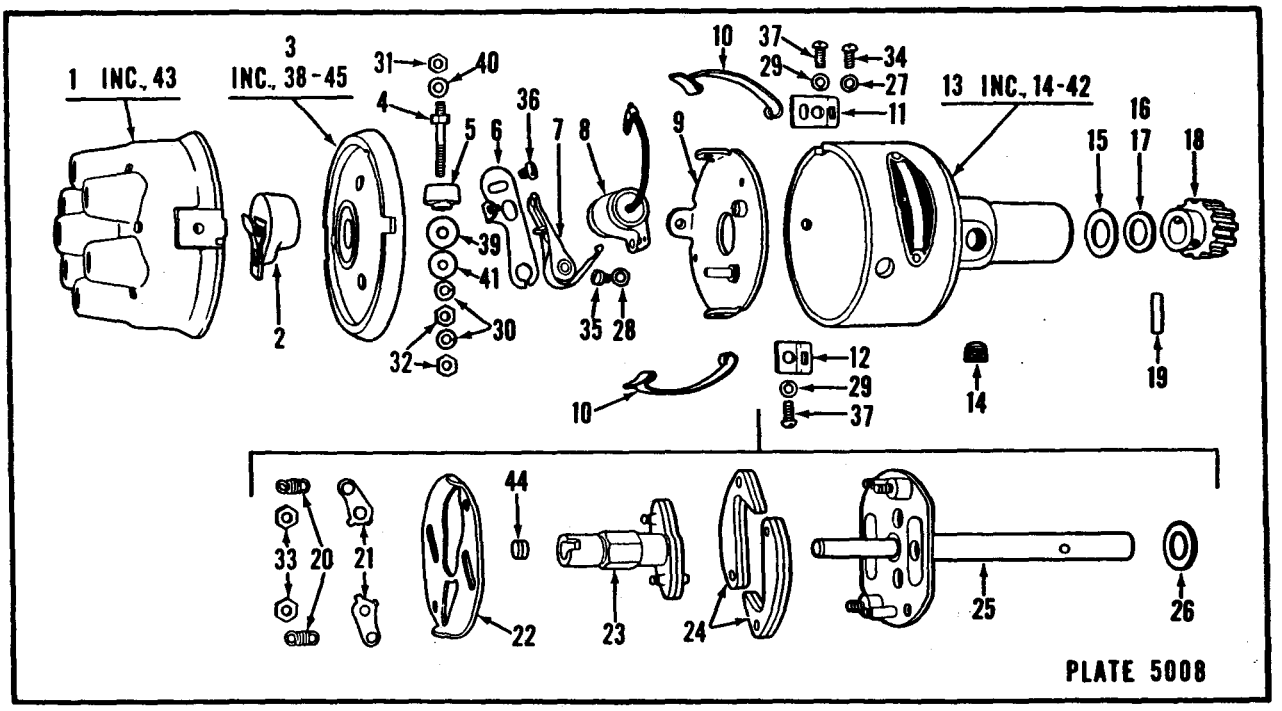

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Cover — Housing	Screw or Stud — Terminal	Bushing — Ins.	Point and Support	Breaker Lever	Condenser	Plate — Breaker	Spring — Cap	Support — Cap Spring	Support — Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112420	1931512	1931482	.....	1916806	□	♦1848038	♦ 813238	1900272	1847643	1871838	1847289	1847289	1939880
1112421	824735	820445	.....	"	□	♦ "	♦ "	"	"	"	"	"	1947377
1112422	1941308	1924245	.....	"	□	♦ "	♦ "	1928111	"	"	"	"	1938136
1112423	1931512	1931482	.....	"	□	♦ "	♦ "	"	"	"	"	"	1938191
1112424	"	1924245	.....	"	□	♦ "	♦ "	"	"	"	"	"	1938136
1112425	1941308	1931482	.....	"	□	♦ "	♦ "	"	"	"	"	"	1938191
1112426	824735	820445	.....	1924371	+	★ "	*1917254	1928111	"	"	"	"	1942613
1112427	"	"	.....	1916806	□	♦1848038	♦ 813238	1900272	"	"	"	"	1919788
1112429	1931512	1931482	.....	"	□	♦ "	♦ "	1928111	"	"	"	"	1945225
1112430	1941308	"	.....	"	□	♦ "	♦ "	"	"	"	"	"	"
1112431	824735	820445	.....	"	□	♦ "	♦ "	"	"	"	"	"	1947377
1112432	811735	"	.....	"	□	♦ "	♦ "	"	"	"	"	"	1947377
1112433	1931512	1931482	1945388	"	□	♦ "	♦ "	"	"	"	"	"	1945225
1112434	"	1924245	.....	1924371	+	★ "	*1917254	1928111	1948546	"	"	"	1957527
1112435	"	"	.....	"	+	★ "	★ "	"	1847643	"	"	"	"
1112437	"	"	1945388	1916806	□	♦ "	♦ 813238	"	"	"	"	"	1938136
1112438	"	1931482	"	"	□	♦ "	♦ "	"	"	"	"	"	1938191
1112439	"	"	.....	"	□	△1882964	△1881394	"	1956221	"	"	"	1956214
1112440	1941308	1924245	.....	"	□	♦1848038	♦ 813238	"	1847643	"	"	"	1938138
1112441	"	1931482	.....	"	□	♦ "	♦ "	"	"	"	"	"	1938191
1112442	811735	820445	.....	1924371	+	*1848038	*1917254	1928111	"	"	"	"	1947377

♦Contact Set No. 1855720.
*Contact Set No. 1924571.
□Use 1916805 Bushing (Inside) & 1914142 Bushing (Outside).
+Use 1924369 Bushing (Inside) & 1924370 Bushing (Outside).
△Contact Set No. 1882965.

Delco-Remy
SERVICE PARTS CATALOG

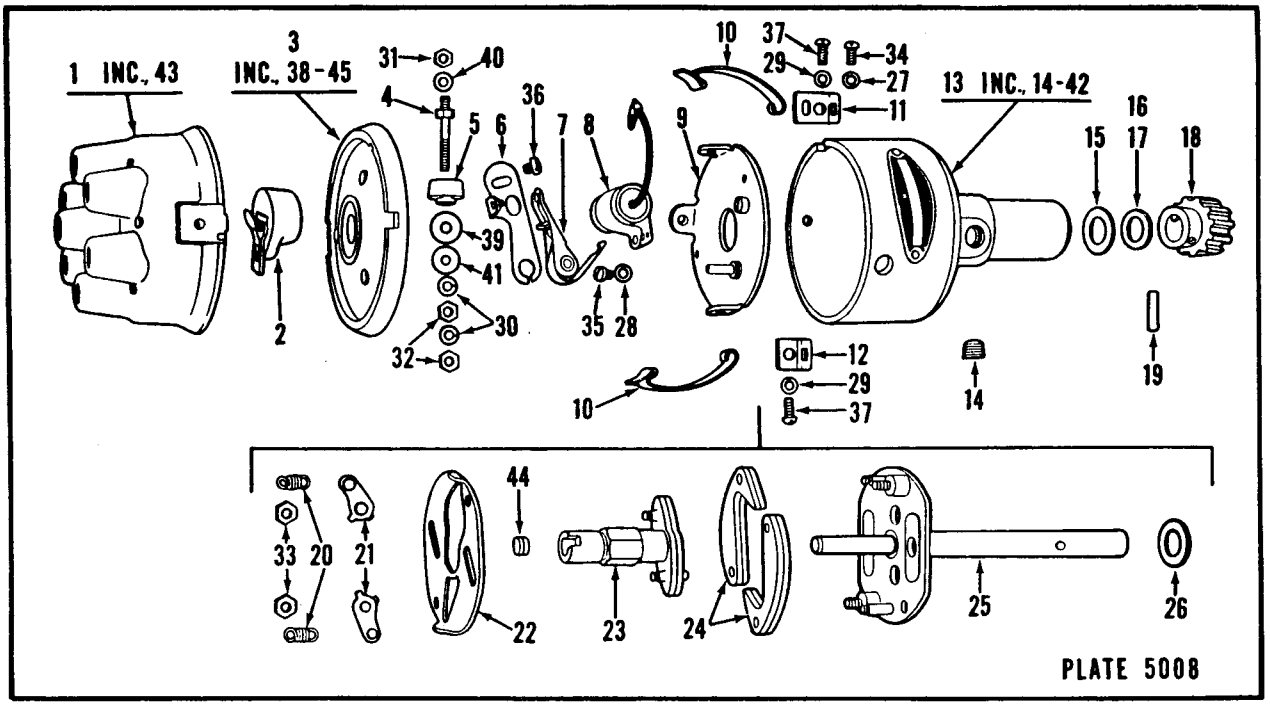

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar Coupling or Gear	Pin	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Washer — Space — under Weight Plate
	14	15	16	17	18	19	20	21	22	23	24	25	26
1112420	125947	811912	810074	1912129	1917569	1857502	1903101	1885558	1885557	1939831	1881371	1939879	811912
1112421	"	"	"	"	809673	829421	1926116	"	"	1917717	1880902	1929478	"
1112422	"	"	"	"	1912218	1862218	1900611	"	"	1938135	"	1938133	"
1112423	"	"	"	"	1864165	1857492	1885339	"	"	1938379	1881371	1941989	"
1112424	"	"	"	"	1912218	1862218	1911092	"	"	1942017	"	1942016	"
1112425	"	"	"	"	1864165	1857492	1939794	"	"	1938189	"	1938188	"
1112426	"	1849806	1848595	1848596	1845656	1862218	1942615	"	"	1942610	1924737	1942608	"
1112427	"	811912	810074	1912129	809673	829421	1885756	"	"	1943842	1881371	1943841	"
1112429	"	"	"	"	1907957	1857502	1885339	"	"	1938379	"	1945223	"
1112430	"	"	"	"	"	"	"	"	"	"	"	"	"
1112431	"	"	"	"	809673	829421	1884929	"	"	1917717	1880902	1915560	"
1112432	"	"	"	"	821865	1862218	1887553	"	"	1947375	"	1947374	"
1112433	"	"	"	"	1907957	1857502	1903101	"	"	1947671	"	1947670	"
1112434	"	"	"	"	1962708	"	1957483	"	"	1948544	1881371	1948542	"
1112435	"	"	"	"	"	274795	1957483	"	"	"	"	1957534	"
1112437	"	"	"	"	1952113	273436	1903101	"	"	1938135	1880902	1955562	"
1112438	"	"	"	"	1955578	274795	"	"	"	1947671	"	1938188	"
1112439	"	"	"	"	1909709	1908031	1911092	"	"	1956219	1881371	1956217	"
1112440	"	"	"	"	1952113	273436	"	"	"	1942017	"	1942016	"
1112441	"	"	"	"	1958131	274795	1885339	"	"	1938379	"	1941989	"
1112442	"	"	"	"	809673	455862	1958213	"	"	1958216	"	1958214	"

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	LOCK WASHERS		
—	Lock Washer—Advance Arm Screw	9421423	1112420
27	Lock Washer—Breaker Plate Support Screw	453844	All
28	Lock Washer—Condenser Attaching Screw	453844	1112420-1-2-3-4-5-6-7-9; 30-1-2-3
29	Lock Washer—Distributor Cap Spring Support Screw	453844	All
—	Lock Washer—Terminal Stud	453844	All
	NUTS		
—	Nut—Advance Arm	453848	1112420
31	Nut—Terminal Stud—Inside	817363	1112420-1-2-3-4-5-7-9; 30-1-2-3-7-8-9; 40-1
31	Nut—Terminal Stud—Inside	1924372	1112426; 34-5; 42
32	Nut—Terminal Stud—Outside (Hex.)	120622	All
33	Nut—Weight Hold Down	1923540	All
	SCREWS		
—	Screw—Advance Arm	120854	1112420
34	Screw—Breaker Plate Support	453418	All
35	Screw—Condenser Attaching	453304	All
36	Screw—Contact Attaching	1914916	All
37	Screw—Distributor Cap Spring Support	453461	All
	WASHERS		
—	Washer—Adaptor Retainer	1926782	1112420
—	Washer—Plain—Advance Arm	1905125	1112420
	MISCELLANEOUS		
—	Advance ARM	1838617	1112420
—	BLOCK—Drive Gear	1908028	1112439
—	BRACKET—Condenser	1869573	1112420-1
—	BRACKET—Condenser	1869574	1112442
42	BUSHING—Distributor Housing	1909003	1112420-1-2-3-4-5-6-7-9; 30-1-2-3-4-7-8-9; 40-1-2
—	BUSHING—Distributor Housing—Upper	1957530	1112435
—	BUSHING—Distributor Housing—Lower	1957529	1112435
—	BUSHING—Upper—Distributor Housing	1910436	1112434
43	BUTTON—Carbon—In Cap	1938193	1112420-1-2-3-4-5-6-7-9; 30-1-2-3-4-5-7-8-9; 40-1
—	CLIP—Lock—Terminal Stud—Outside	1914144	All
—	CUP—Oil	113702	1112429; 30
—	CUP—Oil	113702	1112433
—	CUSHION—Drive Gear	1908029	1112439
—	DIAL—Advance Arm	815095	1112420
44	Felt WICK—In Cam	819639	1112420-1-2-3-4-5-6-7-9; 30-1-2-3-7-8-9; 40-1-2
—	OILER Assembly	1922265	1112433
—	Oil SEAL—In Housing	1885665	1112426-9; 30
—	RETAINER—Drive Gear Cushion	1908030	1112439
—	SEAL—Housing Lubrication	1950569	1112435
—	SLEEVE—Adaptor	1917568	1112420

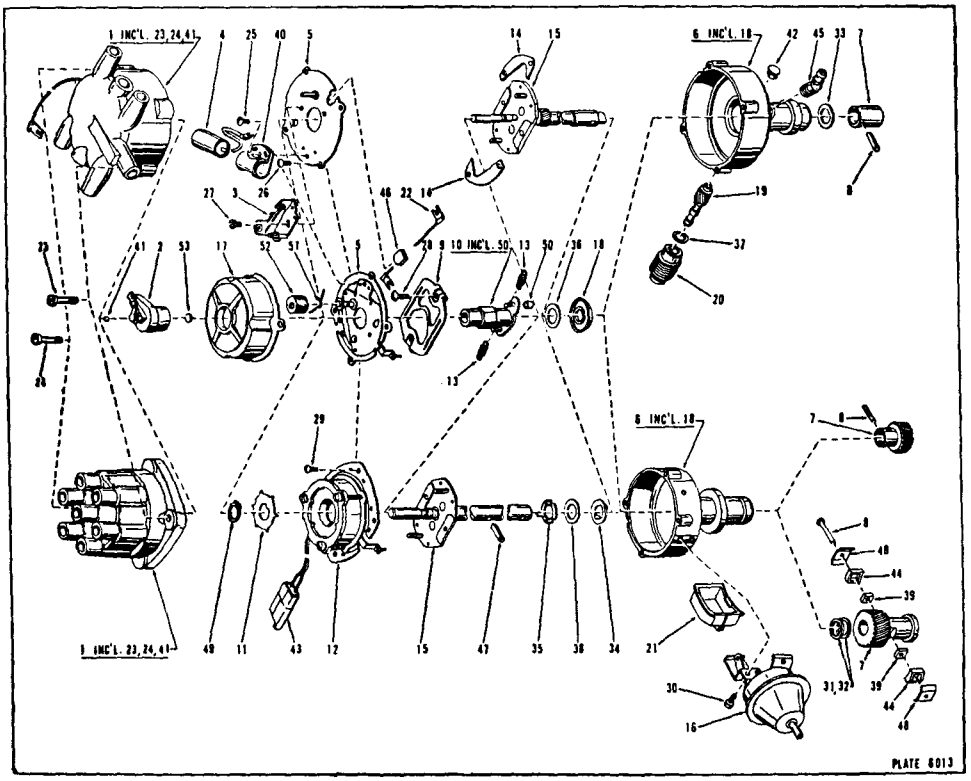

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap 1	Rotor 2	Contact — Assem. 3	Condnser 4	Plate — Breaker 5	Housing 6	Coupling — Collar or Gear 7	Pin 8	Plate — Weight Hold Down 9	Cam 10	Pole Piece — Rotor 11
1112443	1960833	1954566	1967550	1928111	1960814	1969635	1952953	273436	1954548	1966650	.....
1112444	1960810	"	"	"	"	1961853	1961856	9417392	"	1961861	.....
1112446	1960833	"	1954557	"	"	1964208	.....	.....	"	1971953	.....
1112447	"	"	1962640	"	"	1960835	1962052	454512	"	1954610	.....
1112448	"	1963972	"	"	"	"	"	"	"	"	.....
1112449	1960810	1954566	1954557	"	"	1969635	809673	455862	1960919	1960917	.....
1112450	1971009	"	"	"	"	1969651	1970960	273436	1954548	800273	.....
1112452	801064	"	.....	.....	.....	800568	.....	"	"	800885	1964945
1112453	1969456	"	.....	.....	.....	1968246	809673	455862	"	†800888	"
1112454	1960810	"	1954557	1928111	1960814	1960910	.....	273436	1960919	1964889	.....
1112455	1960833	"	"	"	"	1969635	1961856	9417392	1954548	1962222	.....
1112456	1960810	800055	1962640	"	"	1963135	1963136	454512	"	1966621	.....
1112457	1971009	1954566	1954557	"	"	1969651	1970960	273436	"	800273	.....
1112458	1960833	"	"	"	"	"	809673	455862	"	801213	.....
1112459	"	"	"	"	"	1960910	.....	273436	"	801233	.....
1112460	"	"	"	"	"	1969759	809673	455862	1960919	801629	.....
1112461	1960810	"	"	"	"	"	"	"	"	1968083	.....
1112462	"	"	"	"	"	1969635	"	"	"	"	.....
1112463	1960833	"	"	"	"	1960910	1952259	"	1954548	1969284	.....
1112465	1960810	"	"	"	"	1969635	.....	.....	1960919	1964889	.....
1112466	"	"	1967550	"	"	1960910	1909273	455106	"	1960917	.....
1112467	1960833	800055	1962640	"	"	1846174	1962052	454512	1954548	1846158	.....
1112468	1960810	"	"	"	"	"	"	"	"	1966621	.....
1112469	"	"	"	"	"	1846133	1963136	"	"	"	.....
1112470	1960833	1954566	1954557	"	"	1960910	1928574	829421	"	1969284	.....
1112471	1960810	"	"	"	"	1969759	1969751	273436	1960919	1846294	.....
1112472	"	"	"	"	"	1969635	809673	455862	"	1960917	.....
1112473	"	"	"	"	"	"	1907957	274795	"	1967148	.....
1112474	1960833	"	1967550	"	"	1960910	1909273	455106	1954548	1964515	.....

†800888 is bushing & automatic cam.

Delco-Remy
SERVICE PARTS CATALOG

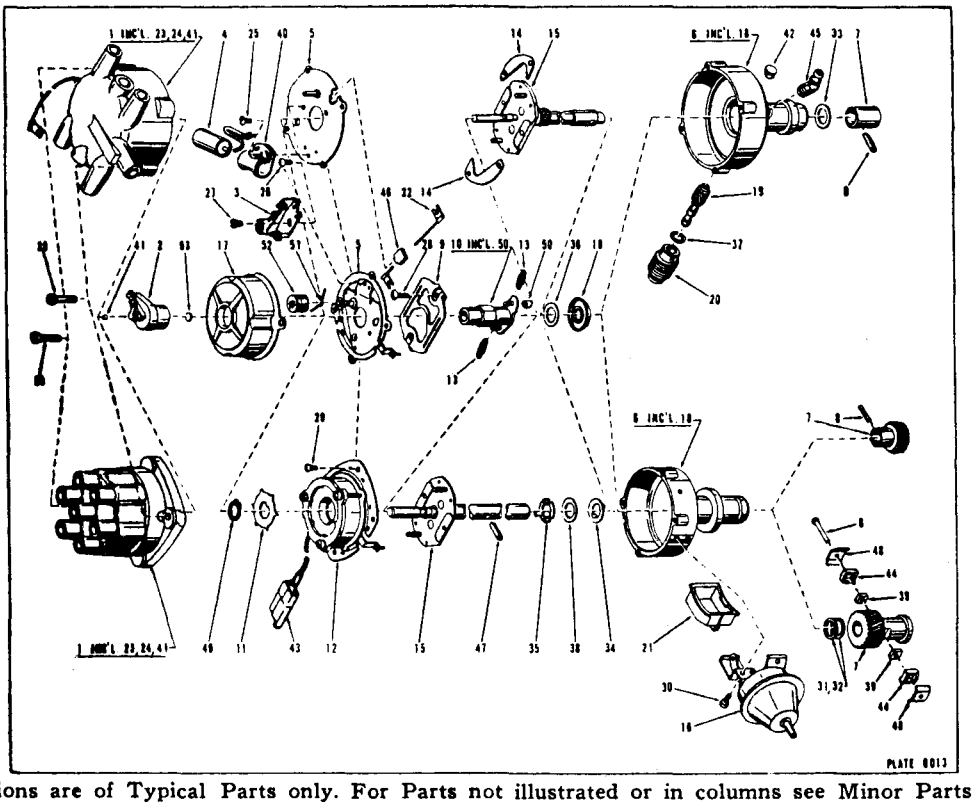

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Coil — Assem. 12	Spring — Weight 13	Weight 14	Shaft 15	Vacuum — Control 16	Dust Seal — Cover 17	Seal — Housing 18	Gear & Shaft Tach. 19	Coupling — Tach. 20	Boot — Vacuum Control 21	Lead — Primary 22
1112443		1910312	1881371	1966648		1960325	1950569				1954563
1112444		1911255	1880902	1961858		"	"				"
1112446		1939381	"	800054			"				"
1112447		1912189	1881371	800094							1963967
1112448		"	"	"		1960325					1954563
1112449		1885756	"	1966413		"	1950569				"
1112450		1912764	1880902	800275		"	"				"
1112452	1967741	1903693	"	800883			"				
1112453	"	800889	1881371	800887			"				
1112454		1909189	"	800995		1960325	"				1954563
1112455		1884929	1880902	800992		"	"				"
1112456		1928363	1881371	801089							1963967
1112457		1947660	1880902	801133		1960325	1950569				1954563
1112458		1958213	1881371	1971006		"	"				1970772
1112459		1883121	"	801231		"	"				1954563
1112460		1904292	"	801628		"	"				"
1112461		1911092	"	801624		"	"				"
1112462		"	"	801588		"	"				"
1112463		"	"	801593		"	"				"
1112465		1909189	"	1968432		"	"				"
1112466		1904292	"	1960914		"	"				"
1112467		1883121	1880902	1846157			1920463				1963967
1112468		1928363	1881371	1846073			"				"
1112469		"	"	1846160			"				"
1112470		1903101	"	1846263		1960325	1950569				1954563
1112471		"	1880902	1846293		"	"				1963967
1112472		1885756	1881371	1968432		1960325	"				1954563
1112473		1903101	1880902	1846544		"	"				"
1112474		1931384	1881371	1964514		"	"				"

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
	SCREWS		
23	Screw—Cap Attach. #8-32	1954571	All
24	Screw—Cap Attach #10-32	1957573	All
25	Screw—Capacitor Bracket Attach	454458	All except 1112452-3
26	Screw—Cir. Breaker Plate Attach	453461	1112443-4-6-7-8-9; 50-4-5-6-7-8-9; 60-1-2-3-5-6-7-8-9; 71-2-3-4
26	Screw—Cir. Breaker Plate Attach	1964163	1112470
27	Screw—Contact Adjusting	1914916	1112443-4-6-7-8-9; 50-4-5-6-7-8-9; 60-1-2-3-5-6-7-8-9; 71-2-3-4
28	Screw—(& L.W.) Hold Down Plate Attach	453647	1112443-4-6-7-8-9; 50-2-3-4-5-6-7-8-9; 60-1-2-3-5-6-7-8-9; 70-1-2-3-4
29	Screw—Pole Piece and Coil Assem. Attach	453461	1112452-3
	WASHERS		
31	Washer—Shim .005 Thick	810074	1112443-4-6-9; 50-2-3-4-5-7-8-9; 60-1-2-3-6; 70-1-2-3
31	Washer—Shim .005 Thick	1927529	1112473
32	Washer—Shim .010 Thick	1912129	1112443-4-6-9; 50-2-3-4-5-7-8-9; 60-1-2-3-6; 70-1-2-4
32	Washer—Shim .010 Thick	1927530	1112473
33	Washer—Space—Under Collar or Gear	811912	1112443-4; 50-2-3-4-5-6-7-8-9; 60-1-2-3-6-9; 70-1-2-4
34	Washer—Tang—Thrust	1946238	1112452-4
36	Washer—Under Weight Plate	811912	1112443-4-6-9; 54-5; 65; 70-1-2-3-4
36	Washer—Thrust—Under Weight Plate	1959714	1112450-7
38	Washer—Space—Tang Washer	811912	1112446-9
—	Washer—Under Cam and Main Shaft	817051	1112452; 67-8-9
38	Washer—Space—Tang	1960478	1112456; 69
—	Washer—Under Coupling	1965784	1112460-1
	MISCELLANEOUS		
40	BRACKET—Capacitor	1944118	All except 1112452-3
41	BUTTON—Carbon	1938193	All
—	BUTTON—(Nylon) In weight base	1957329	1112452
43	CONNECTOR—Coil Lead	2973782	1112452-3
—	FELT—Cam Lubricator	1949084	1112447-8; 56; 67-8-9
—	FITTING—Grease	271283	1112444
—	PIN—Gear Attaching	829421	1112470
43	PIN—Cotter—Shaft	1911899	1112446
46	GROMMET—Pole Piece and Plate Assem.	1964573	1112452-3
46	GROMMET—In Housing	1960824	1112443-4-6-7-8; 50-4-5-6-7-8-9; 60-1-2-3-5-6-7-8-9; 70-1-2-3-4
—	RETAINER—Cam Lubricator—Felt	1961083	1112447; 56; 67-8-9
—	RETAINER—Cam Lubricator—Felt	1963858	1112443-4-8; 54; 62-3-5-6; 71
—	RING—Rotor Pole Piece Retainer	9422340	1112452-3
52	WICK—Oil—Cam Lubricator	1961088	1112443-4; 54; 62-5-6; 71
53	WICK—In Rotor	1963555	1112443-6-7-8-9; 50-2-4-5-6-7-8-9; 60-1-2-3-5-6-7-8-9; 70-1-2-3

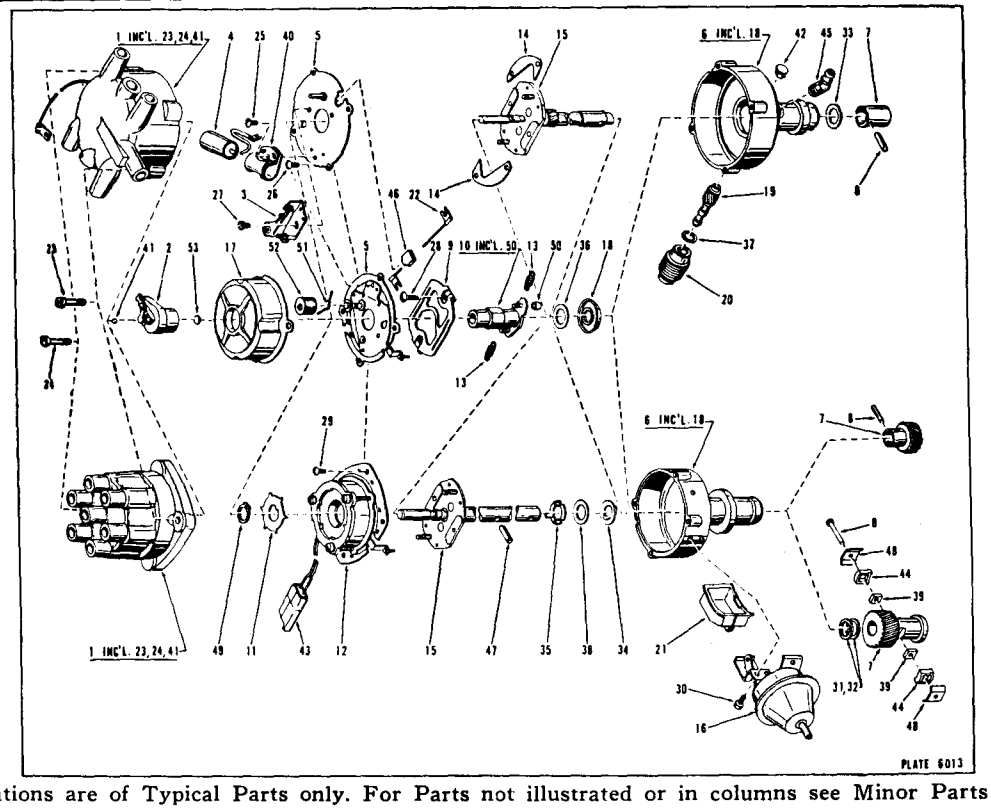

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap 1	Rotor 2	Contact — Assem. 3	Condnser 4	Plate — Breaker 5	Housing 6	Coupling — Collar or Gear 7	Pin 8	Plate — Weight Hold Down 9	Cam 10	Pole Piece — Rotor 11
1112475	1960833	1954566	1954557	1928111	1960814	1969635			1954548	1846716	
1112476	1960810	1971326	"	"	"	"	809673	455862	"	1961236	
1112477	1960833	800055	800537	"	"	1960910		273436	"	1846979	
1112478	"	800056	1962640	"	"	1851269	1962052	454512	"	1954610	
1112479	1960810	"	"	"	"	1846174	"	"	"	1964090	
1112480	"	800055	1954557	"	"	1969635	1952953	9417392	"	1851566	
1112484	1960833	1954566	"	"	"	"	1962053	"	"	1846979	
1112486	"	800055	"	"	"	"	1851922	273436	"	1971953	

Delco-Remy
SERVICE PARTS CATALOG

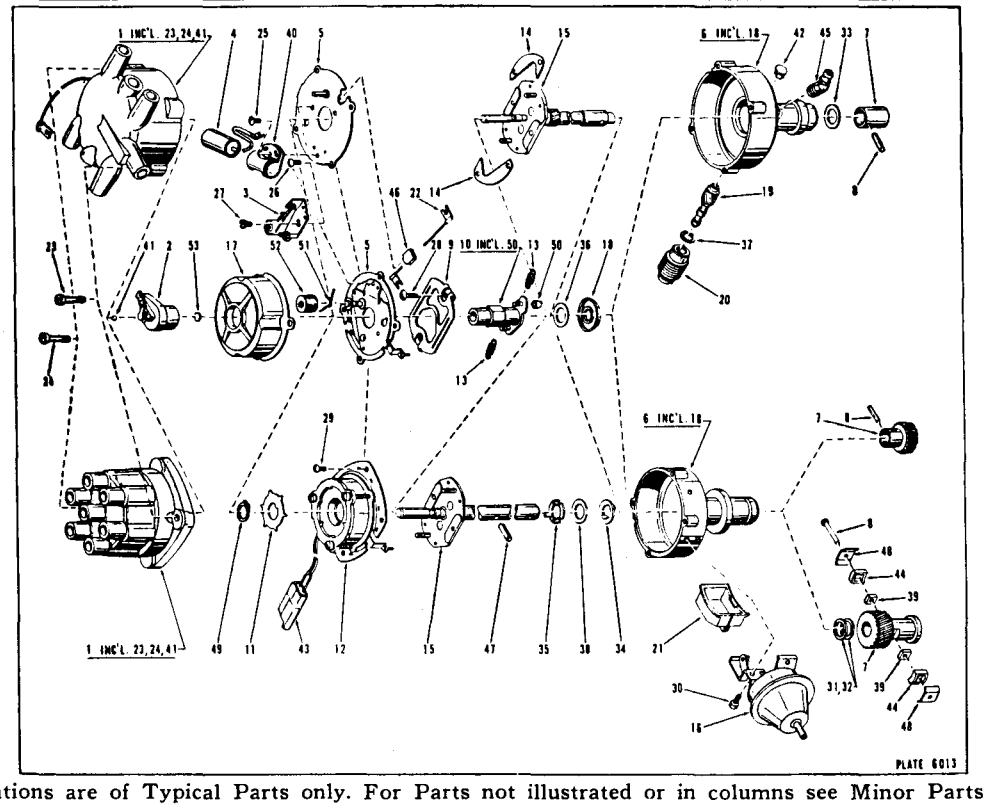

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

	Coil — Assem.	Spring — Weight	Weight	Shaft	Vacuum — Control	Dust Seal — Cover	Seal — Housing	Gear & Shaft Tach.	Coupling — Tach.	Boot — Vacuum Control	Lead — Primary
Model	**12**	**13**	**14**	**15**	**16**	**17**	**18**	**19**	**20**	**21**	**22**
1112475		1943070	1881371	1846715		1960325	1950569				1954563
1112476		1965886	1961068	1846821		"	"				"
1112477		1883779	1880902	1846978		"	"				1970224
1112478		1912189	1881371	1851268		"	"				1954563
1112479		1885636	1963700	1851261		"	1920463				"
1112480		1911855	1881371	1851565		"	1950569				"
1112484		1922426	1880902	1851671		"	"				"
1112486		1884929	"	1851921		"	"				"

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
	SCREWS		
23	Screw—Cap Attach. #8-32	1954571	All
24	Screw—Cap Attach. #10-32	1957573	All
25	Screw—Capacitor Bracket Attach.	454458	All
26	Screw——Cir. Breaker Plate Attach	453461	1112475-6-7-8-9; 80-4-6
27	Screw—Contact Adjusting	1914916	All
28	Screw—(& L.W.) Hold Down Plate Attach	453647	All
	WASHERS		
31	Washer—Shim .005 Thick	810074	1112475-6-7; 86
32	Washer—Shim .010 Thick	1912129	1112475-6-7; 86
33	Washer—Space——Under Collar or Gear	811912	1112475-6; 86
34	Washer—Tang—Thrust	1946238	1112477
36	Washer—Under Weight Plate	811912	1112475-6
36	Washer—Under Weight Plate	1959714	1112486
38	Washer—Space—Tang Washer	811912	1112477
—	Washer—Under Cam and Main Shaft	817051	1112477
	MISCELLANEOUS		
40	BRACKET—Capacitor	1944118	All
41	BUTTON—Carbon	1938193	All
—	FELT—Cam Lubricator	1961088	1112475-6-7-8; 80-4-6
46	GROMMET—In Housing	1960824	1112475-6-7-8-9; 80-4-6
—	RETAINER—Cam Lubricator—Felt	1963858	1112475-6-8-9; 80-4-6
53	WICK—In Rotor	1963555	1112475-6-8-9; 80-4-6

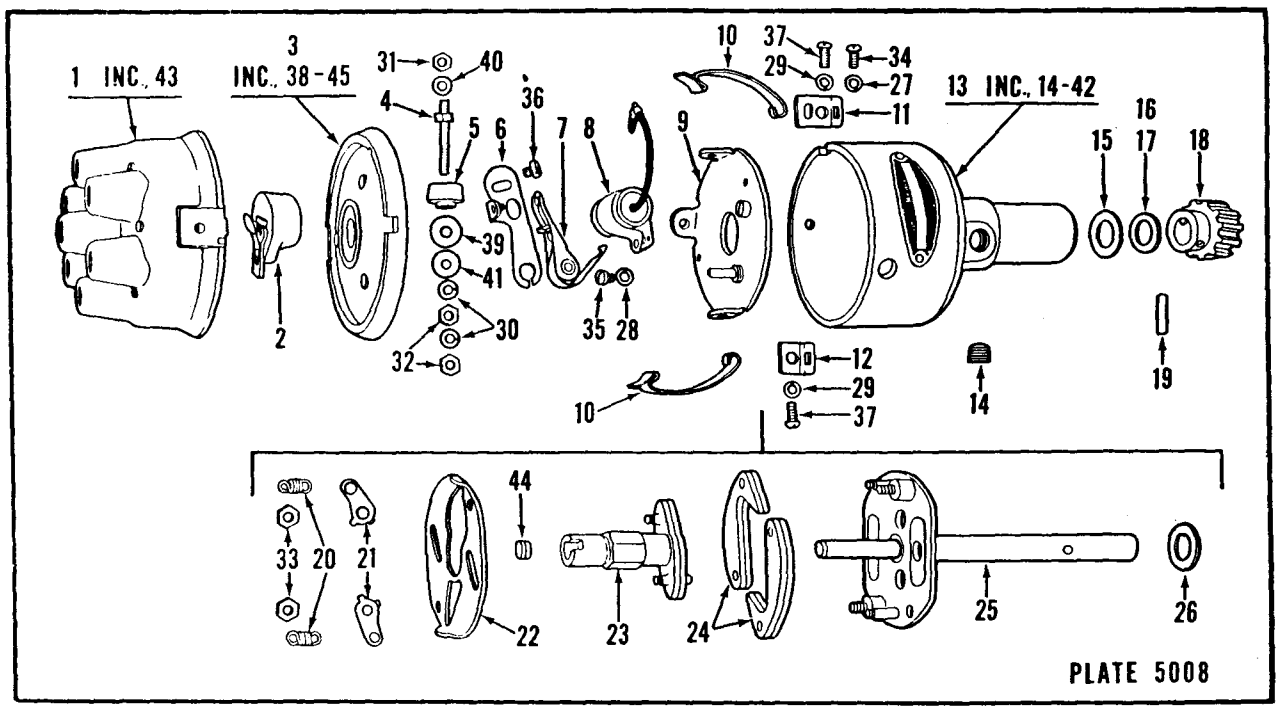

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Cover — Housing	Screw or Stud — Terminal	Bushing — Ins.	Point and Support	Breaker Lever	Condenser	Plate — Breaker	Spring — Cap	Support & Cover Locator — Cap Spring	Support — Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112551	811735	820445	1900119	1916806	□	♦1848038	♦813238	1928111	1847643	1889967	1889999	1847289	1917900
1112553	824735	"	"	"	□	"	"	"	"	"	"	"	1917312
1112554	"	"	"	"	□	"	"	"	"	"	"	"	"
1112555	811735	"	"	"	□	"	"	"	"	"	"	"	1917900
1112556	824735	"	"	"	□	"	"	"	"	"	"	"	1929476
1112557	811735	"	"	"	□	"	"	"	"	"	"	"	1963695
1112558	1867722	1905590	"	"	□	"	"	1900272	"	"	"	"	1963697
1112559	1842714	"	"	"	□	"	"	1928111	"	"	"	"	1917900
1112560	1867722	"	"	"	□	△1882964	△1881394	1900272	1908033	"	"	"	1917312
1112561	824735	820445	"	"	□	♦1848038	♦1848038	1928111	1847643	"	"	"	"
1112562	"	"	"	"	□	"	"	"	"	"	"	"	1963695
1112563	"	"	"	"	□	"	"	"	"	"	"	"	1917312
1112565	811735	"	"	"	□	"	"	"	"	"	"	"	1917900
1112566	824735	"	"	"	□	"	"	1900272	"	"	"	"	1963695
1112568	811735	"	"	"	□	"	"	1928111	"	"	"	"	1917900
1112569	1935038	"	"	"	□	+ "	+1905344	"	"	"	"	"	1917312
1112570	811735	"	"	"	□	♦ "	♦813238	"	"	"	"	"	1947954
1112571	1909008	"	"	"	□	+ "	+1905344	"	"	"	"	"	1917900
1112573	811735	"	"	"	□	♦ "	♦813238	"	"	"	"	"	1947954
1112574	824735	"	"	"	□	♦ "	♦ "	"	"	"	"	"	1917900
1112575	811735	"	"	"	□	♦ "	♦ "	1900272	"	"	"	"	1963697
1112576	1935038	"	"	"	□	♦ "	+1905344	1928111	"	"	"	"	1929476
1112577	811735	"	"	"	□	♦ "	♦ 813238	"	"	"	"	"	1917312
1112578	824735	"	"	"	□	♦ "	♦ "	"	"	"	"	"	"
1112579	"	"	"	"	□	♦ "	♦ "	"	"	"	"	"	"

♦Contact Set No. 1855720.
△Contact Set No. 1882965.
+Contact Set No. 1911119.
□Use 1916805 Bushing (Inside) & 1914142 Bushing (Outside).

Delco-Remy
SERVICE PARTS CATALOG

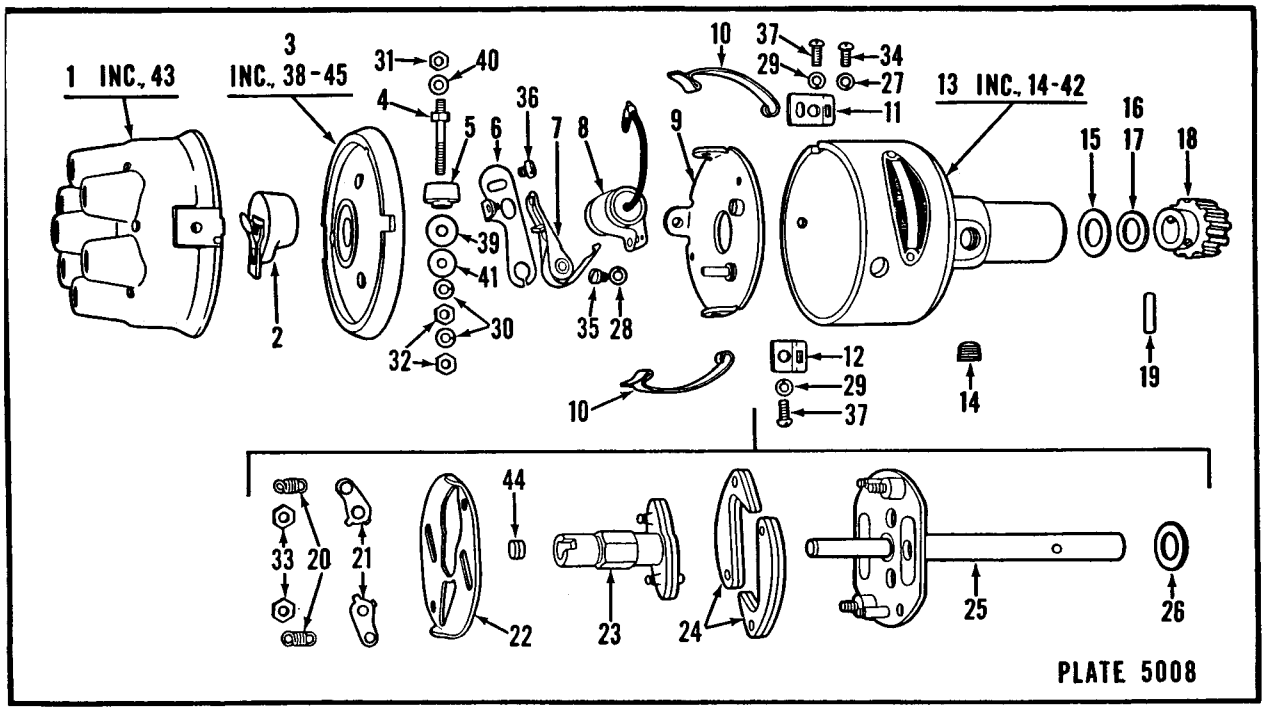

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar Coupling or Gear	Pin	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Washer — Space — under Weight Plate
	14	15	16	17	18	19	20	21	22	23	24	25	26
1112551	125947	811912	810074	1912129	1928574	829421	1888115	1885558	1885557	1928869	1880902	1928573	811912
1112553	"	.....	.....	.....	△	△	"	"	"	1914623	"	1929383	"
1112554	"	.....	.....	.....	△	△	1927235	"	"	1924360	1881371	1929581	"
1112555	"	811912	810074	1912129	1930254	829421	1930200	"	"	1928869	1880902	1943011	"
1112556	"	"	"	"	1909273	"	1906766	"	"	1915023	"	1930466	"
1112557	"	"	"	"	1912476	1900428	1900611	"	"	1919674	"	1930638	"
1112558	"	"	"	"	809673	829421	1908587	"	"	1909240	"	1924112	"
1112559	"	"	"	"	1909273	"	1911092	"	"	1921328	1881371	1921327	"
1112560	"	"	"	"	1902407	"	1906858	"	"	1922262	"	1931603	"
1112561	"	"	"	"	1930254	"	1927235	"	"	1924360	"	1929581	"
1112562	"	"	"	"	809673	"	1903693	"	"	"	"	1924833	"
1112563	"	"	"	"	1928574	1843167	1927235	"	"	"	1881371	1915759	"
1112565	"	"	"	"	821865	1862218	1927140	"	"	1925135	"	1962131	"
1112566	"	"	"	"	"	"	1904292	"	"	1922262	"	1933380	"
1112568	"	"	"	"	1928574	829421	1930200	"	"	1928869	1880902	1943011	"
1112569	"	"	"	"	1935040	1857502	1881321	"	"	1935036	"	1935035	"
1112570	"	"	"	"	1912476	1900428	1903101	"	"	1935159	1881371	1935158	"
1112571	"	"	"	"	1909273	829421	1902376	"	"	1909004	1880902	1935139	"
1112573	"	"	"	"	△	△	1903693	"	"	1935189	1881371	1937845	"
1112574	"	"	"	"	821865	1862218	1927140	"	"	1921819	"	1936497	"
1112575	"	"	"	"	1861373	1857502	1884931	"	"	1916669	1880902	1936578	"
1112576	"	"	"	"	1935040	"	1937173	"	"	1937192	"	1937191	"
1112577	"	"	"	"	1909273	829421	1904292	"	"	1937455	1881371	1923301	"
1112578	"	"	"	"	809673	"	1885756	"	"	1938350	"	1943841	"
1112579	"	"	"	"	1930254	"	1888115	"	"	1914623	1880902	1928573	"

△Coupling or Gear & Pin not furnished by Delco-Remy.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
	LOCK WASHERS		
27	Lock Washer—Breaker Plate Support Screw	453844	1112551-3-4-5-6-7-8-9; 60-1-2-3-5-6-8-9; 70-1-3-4-5-6-7-8-9
—	Lock Washer—Cam Lubricator Screw	453844	1112560
28	Lock Washer—Condenser Attaching Screw	453844	1112551-3-4-5-6-7-8-9; 60-1-2-3-5-6-8-9; 70-1-3
29	Lock Washer—Distributor Cap Spring Support Screw	453844	1112551-3-4-5-6-7-8-9; 60-1-2-3-5-6-8-9; 70-1-3-4-5-6-7-8-9
—	Lock Washer—Terminal Stud	453844	1112551-3-4-5-6-7-8-9; 60-1-2-3-5-6-8-9; 70-1-3-4-5-6-7-8-9
	NUTS		
31	Nut—Terminal Stud—Inside	817363	1112551-3-4-5-6-7-8-9; 60-1-2-3-5-6-8-9; 70-1-3-4-5-6-7-8-9
32	Nut—Terminal Stud—Outside	120622	1112551-3-4-5-6-7-8-9; 60-1-2-3-5-6-8-9; 70-1-3-4-5-6-7-8-9
33	Nut—Weight Hold Down	1923540	1112551-3-4-5-6-7-8-9; 60-1-2-3-5-6-8-9; 70-1-3-4-5-6-7-8-9
	SCREWS		
34	Screw—Breaker Plate Support	453418	1112551-3-4-5-6-7-8-9; 60-1-2-3-5-6-8-9; 70-1-3-4-5-6-7-8-9
—	Screw—Cam Lubricator Attaching	453304	1112560
35	Screw—Condenser Attaching	453304	1112551-3-4-5-6-7-8-9; 60-1-2-3-5-6-8-9; 70-1-3-4-5-6-7-8
36	Screw—Contact Attaching	1914916	All
37	Screw—Distributor Cap Spring Support	453961	1112551-3-4-5-6-7-8-9; 60-1-2-3-5-6-8-9; 70-1-3-4-5-6-7-8-9
	WASHERS		
38	Washer—Felt—Housing Cover	1914309	1112551-3-4-5-6-7-8-9; 60-1-2-3-5-6-8-9; 70-1-3-4-5-6-7-8-9
	MISCELLANEOUS		
42	BUSHING—Distributor Housing	1909003	1112551-3-4-5-6-7-8-9; 60-1-2-3-5-6-8-9; 70-1-3-4-5-6-7-8-9
43	BUTTON—Carbon—In Cap	1938193	1112551-3-4-5-6-7-8; 60-1-2-3-5-6-8-9; 70-1-3-4-5-6-7-8-9
43	BUTTON—Carbon—In Cap	806923	1112559
—	CLIP—Lock—Terminal Stud—Outside	1914144	1112551-3-4-5-6-7-8-9; 60-1-2-3-5-6-8-9; 70-1-3-4-5-6-7-8-9
44	Felt WICK—In Cam	819639	1112551-3-4-5-6-7-9; 60-1-2-3-5-6-8-9; 70-3-4-5-6-7-8-9
44	Felt WICK—In Cam	1963555	1112558; 71
45	GASKET—Housing Cover	1889966	1112551-3-4-5-6-7-8-9; 60-1-2-3-5-6-8-9; 70-1-3-4-5-6-7-8-9
—	LUBRICATOR—Cam	1885562	1112560

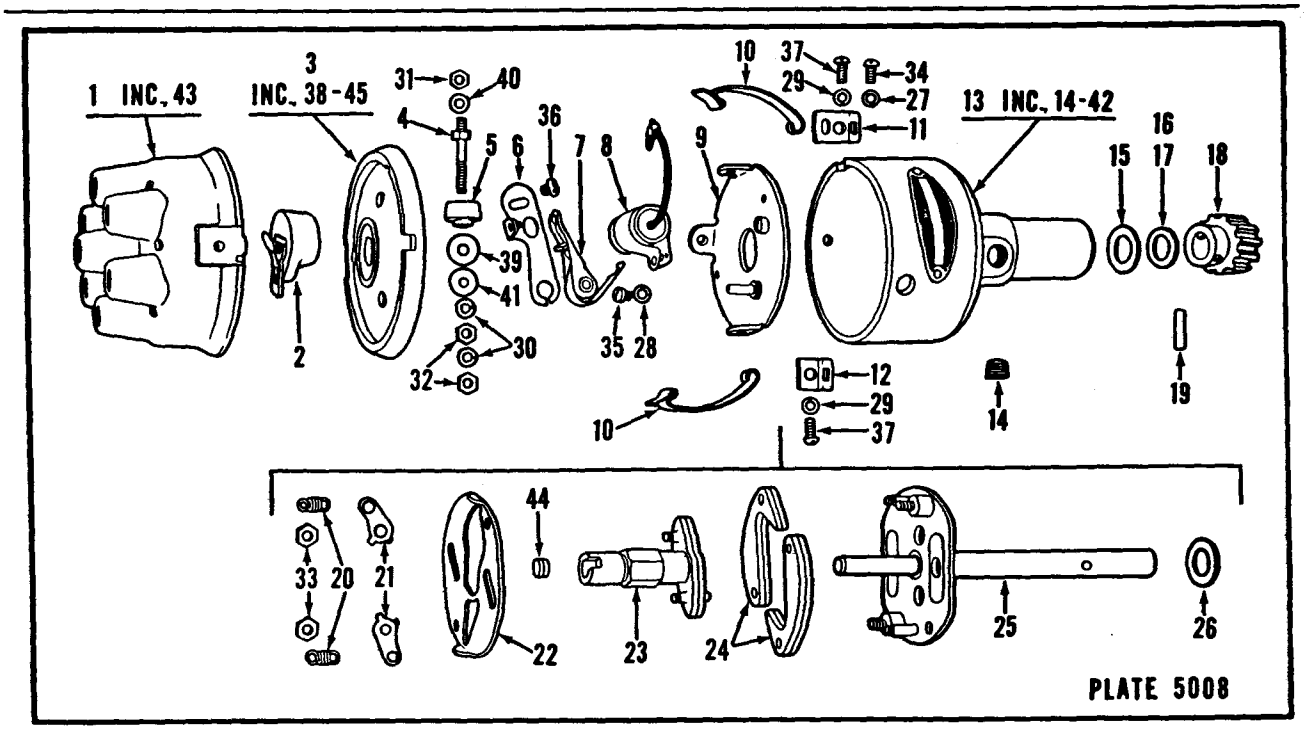

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Cover — Housing	Screw or Stud — Terminal	Bushing — Ins.	Point and Support	Breaker Lever	Condenser	Plate — Breaker	Spring — Cap	Support & Cover Locator — Cap Spring	Support — Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112581	824735	820445	1900119	1916806	□	♦1848038	♦ 813238	1928111	1847643	1889967	1889999	1847289	1917312
1112582	1867722	1905590	"	"	□	♦ "	♦ "	1900273	"	"	"	"	1963697
1112583	811735	820445	"	"	□	♦ "	♦ "	1928111	"	"	"	"	"
1112584	824735	1921285	"	"	□	♦ "	♦ "	"	"	"	"	"	1917312
1112585	811735	820445	"	"	□	♦ "	♦ "	"	"	"	"	"	1963695
1112586	"	"	"	"	□	♦ "	♦ "	"	"	"	"	"	1947954
1112587	824735	"	"	"	□	♦ "	♦ "	"	"	"	"	"	1917312
1112588	"	"	"	"	□	♦ "	♦ "	"	"	"	"	"	1917900
1112589	811735	"	"	"	□	♦ "	♦ "	"	"	"	"	"	1963697
1112590	"	"	"	"	□	♦ "	♦ "	"	"	"	"	"	"
1112591	"	"	"	"	□	♦ "	♦ "	"	"	"	"	"	"
1112593	"	1921285	"	"	□	♦ "	♦ "	"	"	"	"	"	1917312
1112594	824735	820445	"	"	□	♦ "	♦ "	"	"	"	"	"	1917900
1112595	"	"	"	"	□	♦ "	♦ "	"	"	"	"	"	1963697
1112596	811735	"	"	"	□	♦ "	♦ "	"	"	"	"	"	1947954
1112597	824735	"	"	"	□	♦ "	♦ "	"	"	"	"	"	1963695
1112598	811735	"	"	"	□	♦ "	♦ "	"	"	"	"	"	1963697
1112599	824735	"	"	"	□	♦ "	♦ "	"	"	"	"	"	1963695
1112601	"	"	"	"	□	♦ "	♦ "	"	"	"	"	"	"
1112602	811735	"	"	"	□	♦ "	♦ "	"	"	"	"	"	"
1112603	824735	"	"	"	□	♦ "	♦ "	"	"	"	"	"	1929476
1112604	811735	"	1952331	"	□	♦ "	♦ "	"	"	"	.....	"	1956951
1112605	824735	"	1900119	"	□	♦ "	♦ "	"	"	"	1889999	"	1963695
1112606	811735	"	1952331	"	□	♦ "	♦ "	"	"	"	.....	"	1953314
1112607	"	1921285	"	"	□	♦ "	♦ "	"	1954108	"	.....	"	"
1112608	824735	820445	"	"	□	♦ "	♦ "	"	1947643	"	.....	"	1956951
1112609	811735	1921285	1900119	"	□	♦ "	♦ "	"	1847643	"	1889999	"	1929476
1112610	"	820445	1952331	"	□	♦ "	♦ "	"	"	"	.....	"	1956951
1112611	"	"	"	"	□	♦ "	♦ "	"	"	"	.....	"	"
1112612	824735	"	"	"	□	♦ "	♦ "	"	"	"	.....	"	"
1112613	"	"	"	"	□	♦ "	♦ "	"	"	"	.....	"	"

♦Contact Set No. 1855720. □Use 1916805 Bushing (Inside) & 1914142 Bushing (Outside).

Delco-Remy
SERVICE PARTS CATALOG

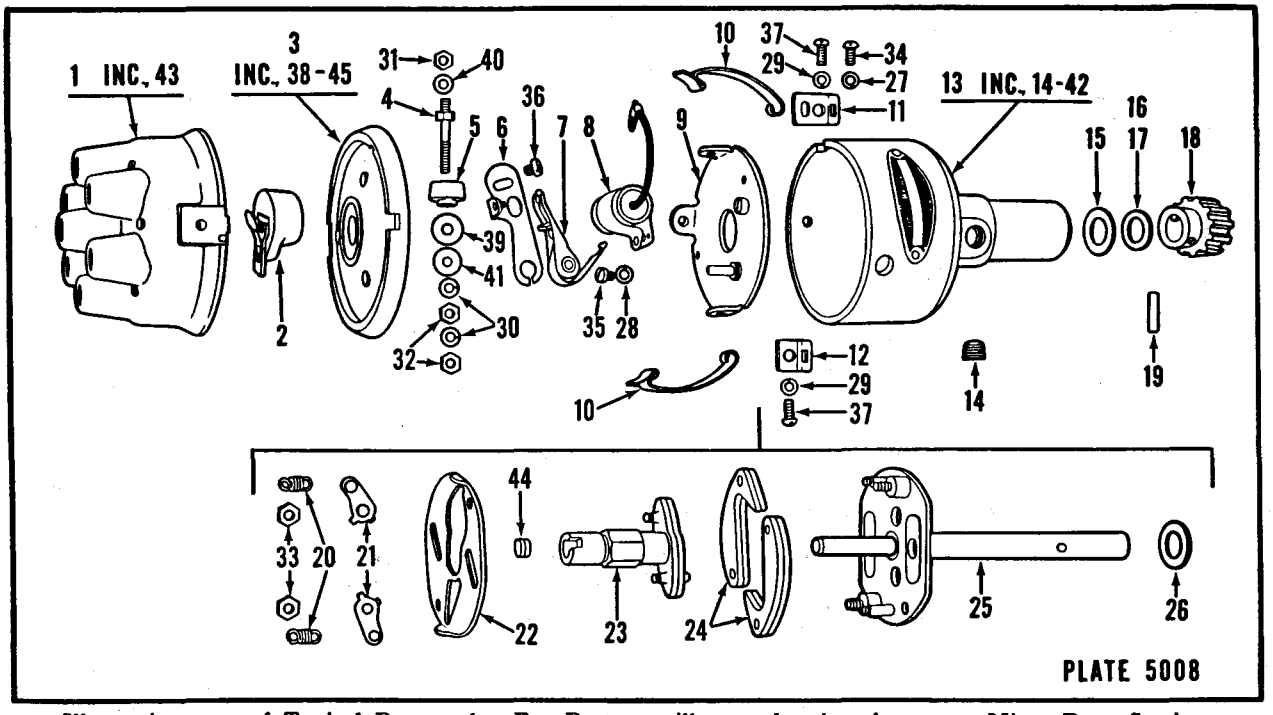

PLATE 5008

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar Coupling or Gear	Pin	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Washer — Space — under Weight Plate
	14	15	16	17	18	19	20	21	22	23	24	25	26
1112581	125947	811912	810074	1912129	1909273	829421	1904292	1885558	1885557	1922262	1881371	1923301	811912
1112582	"	"	.....	.....	△	△	1916848	"	"	1915023	1880902	1940773	"
1112583	453465	"	810074	1912129	1940743	1900428	1883498	"	"	1917958	"	1940914	"
1112584	125947	"	"	"	1924220	829421	1883121	"	"	1928869	"	1941377	"
1112585	"	"	"	"	1912476	1900428	1901737	"	"	1942038	1921271	1942037	"
1112586	"	"	"	"	1942355	829421	1903693	"	"	1935189	1881371	1942833	"
1112587	"	"	"	"	1930254	"	1883874	"	"	1914623	1880902	1943011	"
1112588	"	"	"	"	"	"	1927235	"	"	1924360	1881371	1929581	"
1112589	453465	"	"	"	1940743	1900428	1887885	"	"	1943563	1921271	1943562	"
1112590	"	"	"	"	1944951	1862218	1884929	"	"	1916669	1880902	1916888	"
1112591	"	"	"	"	1952953	"	1911896	"	"	1945551	1924737	1956407	"
1112593	125947	.....	"	"	1924220	"	1887130	"	"	1928869	1880902	1946952	"
1112594	"	811912	"	"	821865	"	1927140	"	"	1921819	1881371	1962131	"
1112595	"	"	"	"	1845656	"	1912766	"	"	1914246	"	1947751	"
1112596	"	"	"	"	1881717	"	1883121	"	"	1942038	1921271	1947952	"
1112597	"	"	"	"	809673	829421	1848088	"	"	1924360	1881371	1948083	"
1112598	453465	"	"	"	1952953	1862218	1946990	"	"	1948110	1880902	1948109	"
1112599	125947	"	"	"	809673	829421	1909189	"	"	1925029	1881371	1948358	"
1112601	"	"	"	"	"	"	1903693	"	"	1924360	"	1951441	"
1112602	"	"	"	"	809673	"	1883498	"	"	1951445	1881371	1951444	"
1112603	"	"	"	"	1952259	455862	1952258	"	"	1952257	"	1952255	"
1112604	"	"	"	"	809673	"	1908587	"	"	1917958	1880902	1952327	"
1112605	"	"	"	"	"	"	1948088	"	"	1924360	1881371	1952523	"
1112606	"	"	"	"	"	"	1953313	"	"	1953312	1881371	1953310	"
1112607	"	"	"	"	1954109	"	1911092	"	"	1916669	1880902	1954106	"
1112608	"	"	"	"	809673	"	1930481	"	"	1916520	"	1952327	"
1112609	"	"	"	"	1924220	813131	1911092	"	"	1916669	"	1954463	"
1112610	"	"	"	"	809673	455862	1885756	"	"	1953312	1881371	1955318	"
1112611	"	"	"	"	1942355	"	1953313	"	"	1953314	"	1955309	"
1112612	"	"	"	"	"	"	1910312	"	"	1961246	"	1960981	"
1112613	"	"	"	"	809673	"	1885413	"	"	1916520	1880902	1956407	"

△Coupling or Gear & Pin not furnished by Delco-Remy.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
	LOCK WASHERS		
27	Lock Washer—Breaker Plate Support Screw	453844	1112581-2-3-5-6-7-8-9; 90-1-4-5-6-7-8-9; 601-2-3-4-5-6-8; 10-11-12-13
27	Lock Washer—Breaker Plate Support Screw	138530	1112584; 607-9
28	Lock Washer—Condenser Attaching Screw	453844	1112582
29	Lock Washer—Distributor Cap Spring Support Screw	453844	1112581-2-3-5-6-7-8-9; 90-1-4-5-6-7-8-9; 601-2-3-4-5-6-8; 10-11-12-13
29	Lock Washer—Distributor Cap Spring Support Screw	138530	1112584; 93; 607-9
—	Lock Washer—Terminal Stud	453844	All
	NUTS		
31	Nut—Terminal Stud—Inside	817363	All
32	Nut—Terminal Stud—Outside	120622	All
33	Nut—Weight Hold Down	1923540	All
	SCREWS		
34	Screw—Breaker Plate Support	453418	1112581-2-3-5-6-7-8-9; 90-1-4-5-6-7-8-9; 601-2-3-4-5-6-8; 10-11-12-13
34	Screw—Breaker Plate Support	453461	1112584; 607
35	Screw—Condenser Attaching	453304	All
36	Screw—Contact Attaching	1914916	All
37	Screw—Distributor Cap Spring Support	453461	1112581-2-3-5-6-7-8-9; 90-1-3-4-5-6-7-8-9; 601-2-3-4-5-6-7-8; 10-11-12-13
37	Screw—Distributor Cap Spring Support	9417096	1112584; 93; 607-9
	WASHERS		
38	Washer—Felt—Housing Cover	1914309	1112581-2-3-4-5-6-7-8-9; 90-1-3-4-5-6-7-8-9; 601-2-3-5-9
	MISCELLANEOUS		
‡—	ADVANCE ARM Assembly	1885650	1112608
—	BRACKET—Condenser Attaching	1869573	1112605; 10-11-12-13
42	BUSHING—Distributor Housing	1909003	1112581-2-3-4-5-6-7-8-9; 90-1-3-4-5-6-7-8-9; 601-2-3-4-5-6-7-8-9; 10-11-12-13
43	BUTTON—Carbon—In Cap	1938193	1112581-3-4-5-6-7-8-9; 90-1-3-4-5-6-7-8-9; 601-2-3-4-5-6-7-8-9; 10-11-12-13
—	CLIP—Gasket Retainer—Cap Spring Support	1919246	1112584; 93; 609
—	CLIP—Lock—Terminal Stud—Outside	1914144	All
44	Felt WICK—In Cam	1963555	All
—	GASKET—Cap Spring Support	1919247	1112584; 93; 609
—	GASKET—Cap Spring Support	1918319	1112609
45	GASKET—Housing Cover	1889966	1112581-2-3-4-5-6-7-8-9; 90-1-3-4-5-6-7-8-9; 601-2-3-5-9

×If button recess in cap is spherical bottom drilled use 1938193.
‡See Advance Arm—Group 1.

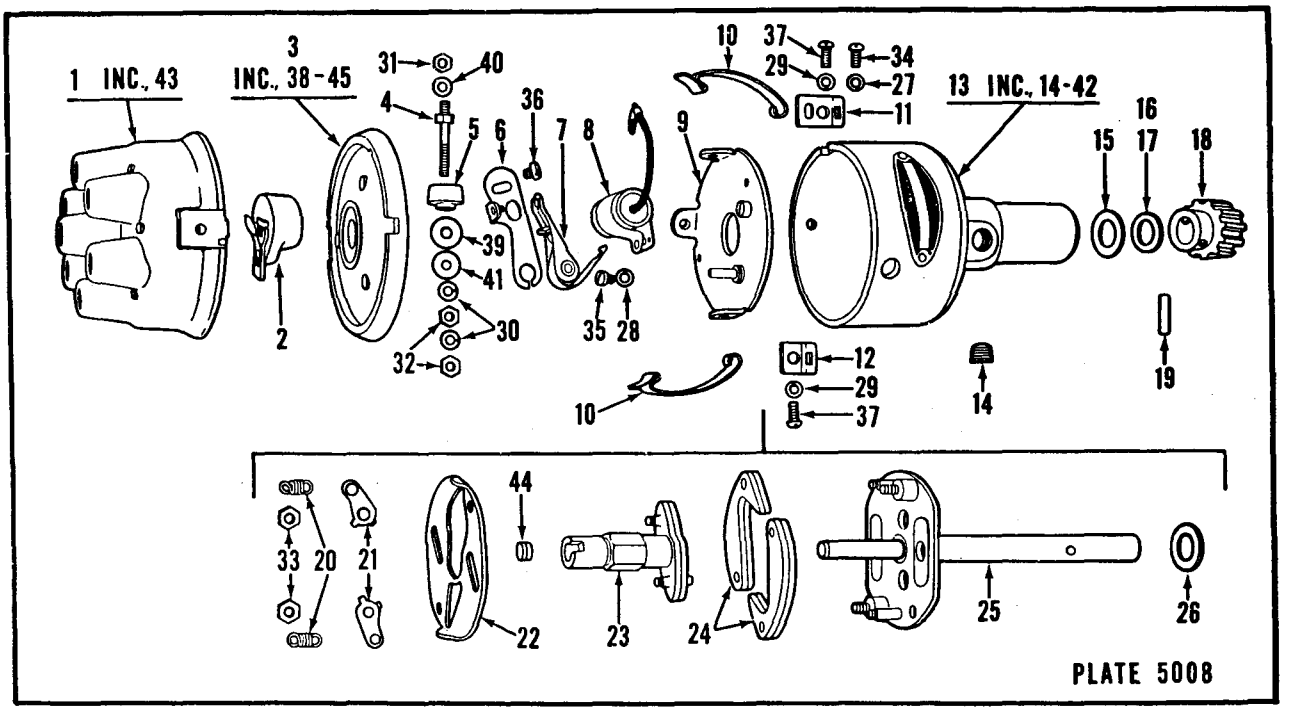

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Cover — Housing	Screw or Stud — Terminal	Bushing — Ins.	Point and Support	Breaker Lever	Condenser	Plate — Breaker	Spring — Cap	Support & Cover Locator — Cap Spring	Support — Cap Spring	Housing
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112614	811735	820445	1952331	1916806	□	♦1848038	♦ 813238	1928111	1847643	1889967	.....	1847289	1956951
1112615	824735	"	1900119	"	□	♦ "	♦ "	"	"	"	1889999	"	1957826
1112616	"	"	1952331	"	□	♦ "	♦ "	"	"	"	.....	"	1960257
1112617	"	"	"	"	□	♦ "	♦ "	"	"	"	.....	"	1956951
1112618	811735	"	1900119	"	□	♦ "	♦ "	"	"	"	1889999	"	1929476
1112619	824735	"	"	"	□	♦ "	♦ "	"	"	"	"	"	"
1112625	811735	"	1952331	"	□	♦ "	♦ "	"	"	"	.....	"	1956951
1112626	1867722	1905590	"	"	□	♦ "	♦ "	"	"	"	.....	"	1960257
1112627	811735	820445	1900119	"	□	♦ "	♦ "	"	"	"	1889999	"	1929476
1112629	"	"	1952331	"	□	♦ "	♦ "	"	"	"	.....	"	1962127
1112633	824735	"	"	"	□	♦ "	♦ "	"	"	"	.....	"	1960257
1112645	"	"	1900119	"	□	♦ "	♦ "	"	"	"	1889999	"	1957826
1112655	"	"	"	"	□	♦ "	♦ "	"	"	"	"	"	1847954
1112656	811735	"	"	"	□	♦ "	♦ "	"	"	"	"	"	"
1112657	824735	"	"	"	□	♦ "	♦ "	"	"	"	"	"	1957826
1112670	1931512	1924245	.....	"	□	♦ "	♦ "	"	"	1871838	.....	"	1967359
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....

♦Contact Set No. 1855720. □Use 1916805 Bushing (Inside) & 1914142 Bushing (Outside).

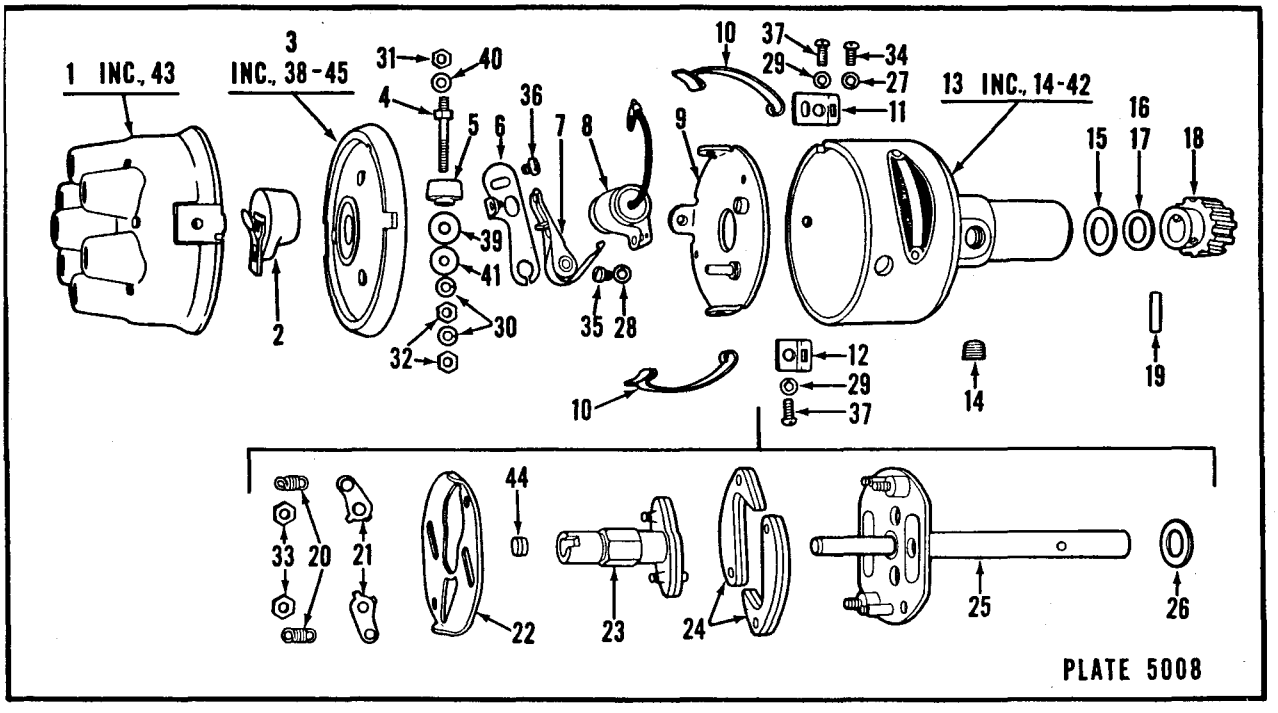

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Pipe Plug	Washer — Space	Washer — Shim .005 thk.	Washer — Shim .010 thk.	Collar Coupling or Gear	Pin	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Washer — Space — under Weight Plate
	14	15	16	17	18	19	20	21	22	23	24	25	26
1112614	125947	811912	810074	1912129	809673	1952271	1911255	1885558	1885557	1956950	1880902	1953310	811912
1112615	.....	"	"	"	"	"	1903693	"	"	1924360	1881371	1964201	"
1112616	125947	.....	.....	.....	▲	▲	1910530	"	"	1921328	"	1952556	"
1112617	"	811912	.....	.....	▲	▲	1908587	"	"	1915023	1880902	1948373	"
1112618	"	"	810074	1912129	1952259	455862	1903101	"	"	1947656	1881371	1951196	"
1112619	"	"	"	"	1909273	"	1952258	"	"	1952257	"	1956865	"
1112625	"	"	"	"	1942355	"	1910312	"	"	1947656	"	1960981	"
1112626	"	"	"	"	1953898	456652	1910530	"	"	1921328	"	1961597	"
1112627	"	"	"	"	1928574	829421	1903101	"	"	1947656	"	1951196	"
1112629	"	"	"	"	▲	▲	1927140	"	"	1925135	"	1962131	"
1112633	"	"	"	"	1942355	456652	1910530	"	"	1921328	"	1961597	"
1112645	.....	"	"	"	809673	455862	1903693	"	"	1924360	"	1964201	"
1112655	453465	"	"	"	"	829421	1911092	"	"	1921328	"	1965582	"
1112656	1951874	"	"	"	"	"	1904292	"	"	1965598	"	1965597	"
1112657	.....	"	"	"	"	455862	1911092	"	"	1921328	"	"	"
1112670	453465	"	"	"	1952113	1962218	1939381	"	"	1967364	1965843	1967362	"
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....

▲Coupling or Gear & Pin not furnished by Delco-Remy.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
	LOCK WASHERS		
27	Lock Washer—Breaker Plate Support Screw	453844	All
29	Lock Washer—Distributor Cap Spring Support Screw	453844	All
—	Lock Washer—Terminal Stud	453844	All
	NUTS		
—	Nut—Coupling—Tach. Drive	1960059	1112615; 45; 57
31	Nut—Terminal Stud——Inside	817363	All
32	Nut—Terminal Stud—Outside	120622	All
33	Nut—Weight Hold Down	1923540	All
	SCREWS		
34	Screw—Breaker Plate Support	453418	1112614-15-16-17-18-19; 25-6-7; 45; 55-6-7; 70
34	Screw—Breaker Plate Support	453461	1112629
35	Screw—Condenser Attaching	453304	All
36	Screw—Contact Adjusting	1914916	1112614-15-16-17-18-19; 25-6-7-9; 45; 55-6-7; 70
37	Screw—Distributor Cap Spring Support	453461	1112614-15-16-17-18-19; 25-6-7-9; 45; 55-6-7; 70
—	Screw (& Lock Washer) Weight Hold Down Attach	453647	1112620-1-2-3-4; 31-2-4
	WASHERS		
38	Washer—Felt—Housing Cover	1914309	1112615-18-19; 27; 45; 55-6-7
—	Washer—Thrust—Tang	1946238	1112629
—	Washer—Under Tach. Gear	1956834	1112615; 45; 57
	MISCELLANEOUS		
—	BRACKET—Condenser Attaching	1869573	All
42	BUSHING—Distributor Housing	1909003	1112614-16-17-18-19; 25-6-7-9; 33; 55-6; 70
43	BUTTON—Carbon—In Cap	1938193	All
—	BUTTON—In Housing	1957329	1112615; 45; 55-6-7
—	CAP—Dust—Tach. Drive	1960060	1112615; 45; 55-6-7
—	CLIP—Lock—Terminal Stud—Outside	1914144	All
—	COUPLING—Gear & Cross Shaft	1955799	1112615; 45; 55-6-7
44	Felt WICK—In Cam	819639	1112614-15-16-17-18-19; 25-6-7-9; 33; 45
—	FITTING—Grease—In Housing	271283	1112657
—	PLUG-PIPE—In Housing	456465	1112655-6
45	FITTING—Grease—In Housing	191758	1112615; 45
—	GASKET—Housing Cover	1889966	1112615-18-19; 27-45; 55-6-7
—	GEAR & CROSS SHAFT	1955842	1112615; 57
—	PIN—Under Thrust Washer	273436	1112629
—	WICK—Under Rotor	1963555	1112655-6-7; 70

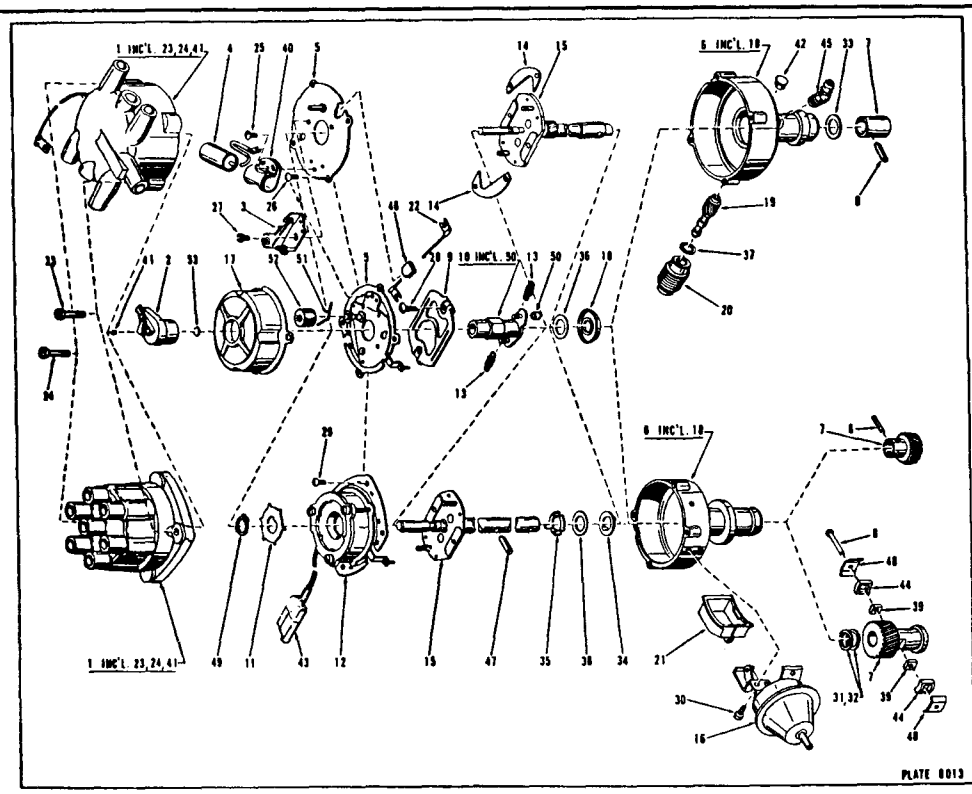

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap 1	Rotor 2	Contact — Assem. 3	Condnser 4	Plate — Breaker 5	Housing 6	Coupling — Collar or Gear 7	Pin 8	Plate — Weight Hold Down 9	Cam 10	Pole Piece — Rotor 11
1112620	1960833	1954566	1962640	1928111	1960814	1960835	1962052	454512	1954548	1954610	
1112621	1960810	"	"	"	"	"	"	"	"	1954584	
1112622	"	"	1954557	"	"	1960820	1960823	9417392	"	1960819	
1112623	1960833	"	"	"	"	1960910	1909273	455106	1960919	1960967	
1112624	1960810	"	"	"	"	"	"	"	"	1960917	
1112628	"	"	"	"	"	1961853	1961856	9417392	1954548	1961861	
1112631	"	"	"	"	"	1960820	1960823	"	"	1962294	
1112632	"	"	"	"	"	1960910	1952259	455862	"	1962356	
1112634	"	"	1962640	"	"	1963135	1963136	454512	"	1954584	
1112635	1962111	1962115	1954557	"	"	1961853	1961856	9417392	"	1962084	
1112636	1962085	1954566	"	"	"	"	"	"	"	1962094	
1112637	1960833	"	"	"	"	"	"	"	"	1962479	
1112638	1960810	"	"	"	"	1960910			1960919	1963724	
1112639	1960833	"	"	"	"	1961853			"	1963855	
1112640	1960810	"	1962640	"	"	1963856	1962052	454512	1954548	1964090	
1112641	1960810	1954566	1954557	"	"	1960835	"	"	"	1964039	
1112642	1960833	"	"	"	"	1960910	809673	455862	1960919	1960967	
1112643	"	"	"	"	"	1969635	1960823	9417392	"	1964210	
1112644	"	"	"	"	"	"	1964207	"	1954548	1962222	
1112647	"	"	"	"	"	"	1960823	"	"	"	
1112648	"	"	"	"	"	1960910	1909273	455106	"	"	
1112649	1960810	"	"	"	"	"	1902407	454512	1960919	1964889	
1112650	"	"	"	"	"	"	"	"	1954548	1964882	
1112651	"	"	"	"	"	"	"	"	"	1954584	
1112653	"	"	"	"	"	1962083	809673	455862	1960919	1960917	
1112654	1960833	"	"	"	"	1960910		273436	"	1963855	
1112658	1960810	"	"	"	"	1969635	1960823	9417392	1954548	1962203	
1112659	"	"	"	"	"	1960910	1902407	454512	1960919	1965773	
1112660	1960833	"	"	"	"	"		273436	1954548	1965908	
1112661	"	"	"	"	"	"		"	1960919	1965999	

Delco-Remy
SERVICE PARTS CATALOG

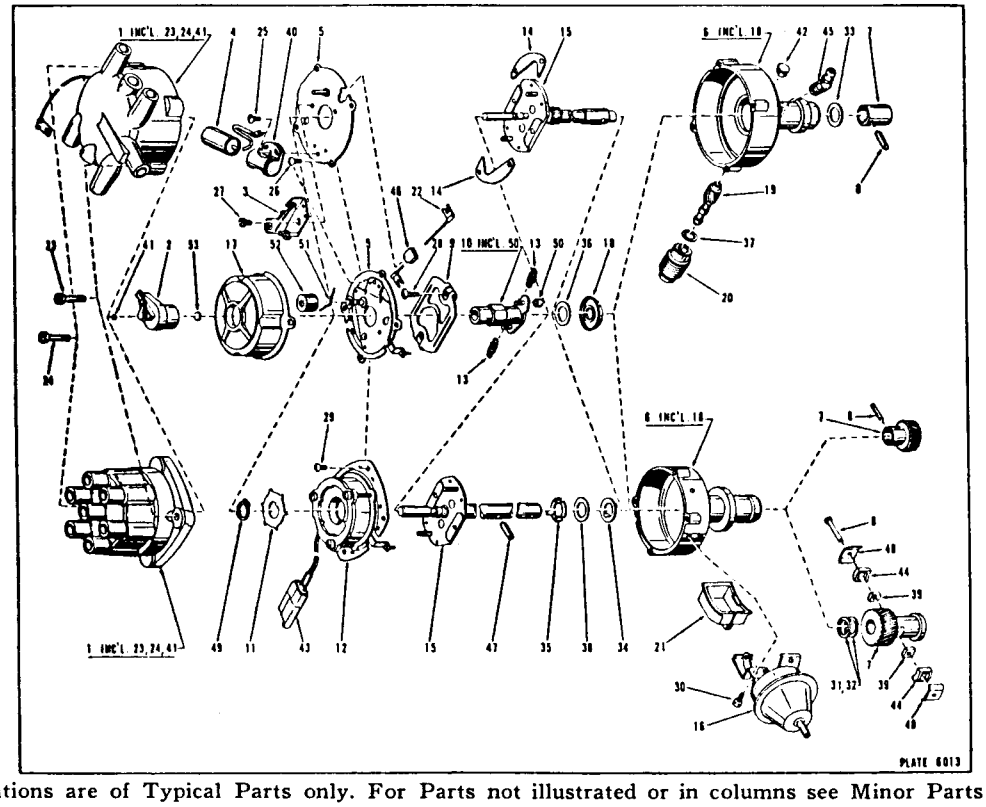

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Coil — Assem. 12	Spring — Weight 13	Weight 14	Shaft 15	Vacuum — Control 16	Dust Seal — Cover 17	Seal — Housing 18	Gear & Shaft Tach. 19	Coupling — Tach. 20	Boot — Vacuum Control 21	Lead — Primary 22
1112620		1912189	1881371	1961211							1963967
1112621		1885636	1880902	1961215							"
1112622		1922426	1881371	1960816		1960325	1950569				1954563
1112623		1904292	"	1960914		"	"				"
1112624		"	"	"		"	"				"
1112628		1911255	1880902	1961858		"					"
1112631		1886967	1881371	1962292		"	1950569				"
1112632		1952258	"	1962354		"	"				"
1112634		1885636	1880902	1963145							"
1112635		1911255	"	1963258		1960325	1950569				"
1112636		"	"	1961858		"	"				"
1112637		"	"	1963258		"	"				"
1112638		1883121	1921271	1963721		"	"				"
1112639		1910312	"	1963852		"	"				"
1112640		1885636	1963700	1967245		"	1920463				"
1112641		1884094	1881371	1958594			1950569				"
1112642		1903693	"	1964236		1960325	"				"
1112643		1903101	"	1964211		"	"				"
1112644		1883498	1880902	1964205		"	"				"
1112647		"	"	"		"	"				"
1112648		1931384	1881371	1964514		"	"				"
1112649		1903693	"	1960914		"	"				"
1112650		1939381	"	1964514		"	"				"
1112651		1887553	1880902	1964884		"	"				"
1112653		1910530	1881371	1965009		"	"	1965012			"
1112654		1910312	1921271	1965527		"	"				"
1112658		1911092	1880902	1965729		"	"				"
1112659		1906858	1881371	1965772		"	"				"
1112660		1952756	"	1965907		"	"				"
1112661		1964346	"	1965998		"	"				"

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
	SCREWS		
23	Screw—Cap Atach #8-32	1954571	All
24	Screw—Cap Attach #10-32	1957573	All
25	Screw—Capacitor Bracket Attach	454458	All
26	Screw—Cir. Breaker Plate Attach	453418	1112628
26	Screw—Cir. Breaker Plate Attach	453461	1112622-3-4; 31-2-4-5-6-7-8-9; 40; 1-2-3-4-7-8-9; 50-1-3-8-9; 60-1
27	Screw—Contact Adjusting	1914916	All
28	Screw—(& L.W.) Hold Down Plate Attach	453647	All
	WASHERS		
31	Washer—Shim .005 Thick	810074	1112653-4; 60-1
32	Washer—Shim .010 Thick	1912129	1112653-4; 60-1
34	Washer—Tang—Thrust	1946238	1112638-9; 53-4; 60-1
35	Washer—Tang—Housing	1960478	1112634
36	Washer—Under Weight Plate	817051	1112640
36	Washer—Under Weight Plate	811912	1112639; 53-4; 60-1
37	Washer—Under Tach. Gear (15/32 O.D.)	1956834	1112653
38	Washer—Space—Tang Washer	811912	1112634-8-9; 53-4; 60-1
	MISCELLANEOUS		
40	BRACKET—Capacitor	1944118	1112620-1-3-4-8; 31-4-5-6; 42-3-4-7-8-9; 50-1-3-4-8-9; 60-1
41	BUTTON—Carbon	1938193	All
—	FELT—Cam Lubricator	1949084	1112620-1; 34; 41
43	GROMMET	1960824	All
45	FITTING—Grease—In Housing	271283	1112653; 57
47	PIN—Tang Washer Retaining	273436	1112638-9; 53-4; 60-1
—	PLUG—Pipe In Housing	456465	1112655-6
—	RETAINER—Cam Lubricator—Felt	1961083	1112620-1; 34; 41
—	RETAINER—Cam Lubricator—Felt	1963858	1112640
52	WICK—Oil—Cam Lubricator	1961088	1112640
53	WICK—In Rotor	1963555	1112620-1-38; 41-2-7; 53-8; 61

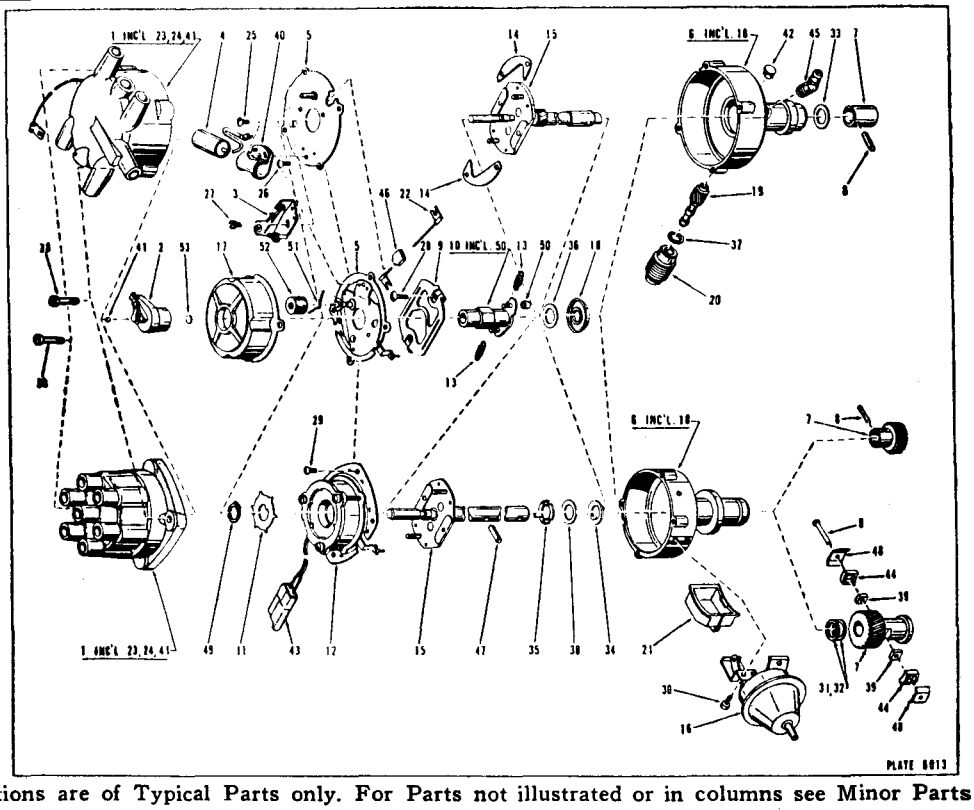

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Contact — Assem.	Condenser	Plate Breaker	Housing	Coupling Collar or Gear	Pin	Plate — Weight Hold Down	Cam	Pole Piece — Rotor
	1	2	3	4	5	6	7	8	9	10	11
1112662	1960810	1954566	1954557	1928111	1960814	1960910			1960919	1963724	
1112663	1960833	"	"	"	"	"			1954548	1965908	
1112664	"	"	"	"	"	"			1960919	1965999	
1112665	"	800055	"	"	"	1969635	809673	455862	"	1966440	
1112666	"	1954566	"	"	"	"	1952953	273436	1954548	1966650	
1112667	1960810	800055	"	"	"	1962083	809673	455862	1960919	1966634	
1112668	"	"	"	"	"	1969635	"	"	"	1960917	
1112671	1960833	1954566	"	"	"	1960910	"	"	1954548	1967549	
1112672	1960810	800055	"	"	"	1961853	1961856	9417392	"	1961861	
1112673	1960833	"	"	"	"	"	"	"	"	1962479	
1112674	1960810	1971326	1954557	"	"	1967597	1945934	1908031	"	1961236	
1112675	1960833	1954566				1967736	1961856	9417392	"	†1967739	1964945
1112676	1960810	"	1954557	1928111	1960814	1960910			1960919	1967754	
1112677	1962111	1962115	1967550	"	"	1961853	1961856	9417392	1954548	1962084	
1112678	1960810	1954566	1954557	"	"	1969635			1960919	1968025	
1112679	1960810	"	1967550	"	"	1960910	1909709	1908031	"	1968083	
1112680	1960833	1963972	1962640	"	"	1960835	1962052	454512	1954548	1954610	
1112681	1954569	1954566				1968246	1907957	274795	"	†1968250	1964582
1112682	1960810	"	1954557	1928111	1960814	1960910	1909273	455106	1960919	1964889	
1112683	"	"	"	"	"	"	"	"	"	1960917	
1112684	"	"	"	"	"	"			1954548	1968867	
1112685	1960833	800055	1967550	"	"	1969635	809673	455862	"	†1969284	
1112686	1960810	1954566				1967736	1961856	9417392	"	†1967739	1964582
1112687	1960810	"	1954557	1928111	1960814	1960910	1909273	455106	"	1965374	
1112688	1960833	"	"	"	"	"	1969658	273436	1960919	1969654	
1112689	"	"	"	"	"	1960910	"	"	"	1969284	
1112690	800057	"	"	"	"	1969759	1969758	"	"	1969757	
1112691	"	"	"	"	"	"	"	"	"	1967148	
1112692	"	"	"	"	"	1969635	1907957	274795	1954548	1969716	
1112693	1960833	"	"	"	"	1969651	809673	455862	"	1962222	

† Cam—Automatic and Breaker.

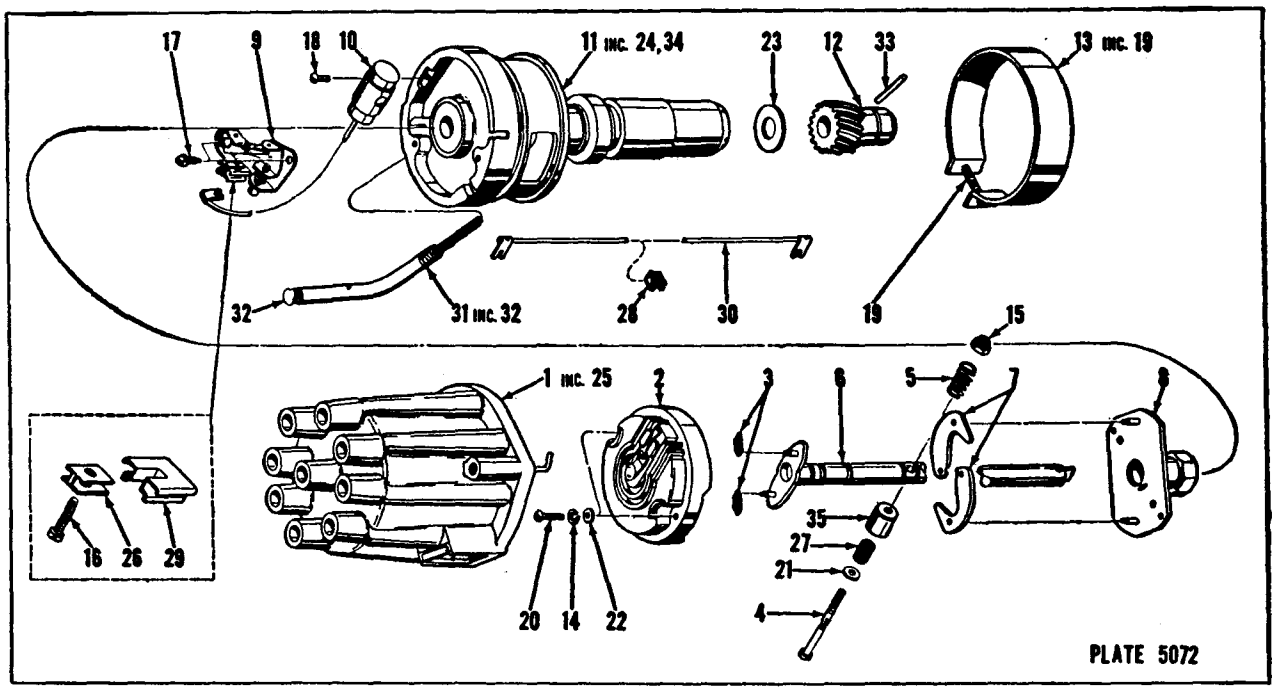

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring — Weight	Valve — Governor	Spring — Governor	Shaft	Weight	Cam	Contact Assem.	Condenser	Housing	Gear	Band
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112701	1932018	1932015	1929319	1948781	1950691	1932720	1880902	1932724	1931988	1928111	1937880	1958599	1932727
1112702	"	"	1929319	"	1938725	1932720	1881371	1937339	"	"	1932764	1932667	"
1112703	"	"	1929319	"	1938725	1932720	1880902	1932724	"	"	1964096	1958599	"
1112707	"	"	1937723	"	1934592	1935793	1881371	1937339	"	"	1932764	1932667	"
1112712	"	"	1929319	"	1950691	1932720	1880902	1932724	"	"	1964096	1958599	"
1112715	"	"	1926116	"	1941506	1939936	1881371	1942456	"	"	1964107	"	"
1112720	1942654	"	1947329	× "	1934592	1940923	"	1942456	"	"	1964096	"	"
1112721	"	"	"	× "	"	"	"	"	"	"	"	"	"
1112722	"	"	1941524	1920471	1920473	1940901	"	1945415	"	"	1940798	1940909	"
1112725	"	"	1947329	1948781	1941506	1940923	"	1942456	"	"	1964096	1958599	"
1112726	"	"	"	"	"	"	"	"	"	"	"	"	"
1112727	1932018	"	1884094	1920471	"	1939936	"	1942456	"	"	1964107	"	"
1112728	1942654	"	1886558	1948781	"	"	"	1942456	"	"	"	"	"
1112729	"	"	"	"	"	"	"	"	"	"	"	"	"
1112731	"	"	1884610	1920471	1920473	1942865	"	1941498	"	"	1937570	1942867	"
1112732	"	"	1947329	1948781	1938725	1940923	"	1942456	"	"	1964096	1958599	"
1112735	"	"	1941524	×1920471	1920473	1940901	"	1945415	"	"	1940798	1940909	"
1112738	"	"	1947329	1948781	1950691	1940923	"	1942456	"	"	1964096	1958599	"
1112739	"	"	1941524	1920471	1933549	1940901	"	1945415	"	"	1940798	1940909	"
1112740	"	"	1903693	*1946301	1950691	1945557	"	1946727	"	1932004	1945559	1945234	"
1112743	"	"	1943070	* "	"	1946581	"	1946729	"	"	"	"	"
1112744	"	"	"	* "	"	1946358	"	"	"	"	1946360	"	"
1112745	"	"	1903693	* "	"	"	"	1946727	"	"	"	"	"
1112746	"	"	1946990	1949783	1950691	1946987	"	1947327	"	"	1946984	1948832	"
1112747	1946976	"	"	.....	.....	1946994	"	1946995	"	"	1946968	1946983	.....
1112748	1942654	"	1946972	*1946301	1950691	1946992	"	1947327	"	"	1946984	1948832	1932727
1112749	1946976	"	"	.....	.....	1946970	"	1946995	"	"	1946968	1946983	.....
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....

×Later units with "O" Ring Valve Stop use 1948781 Valve.
*Later units with "O" Ring Valve Stop use 1949783 Valve.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	LOCK WASHERS		
—	Lock Washer—Contact Adjusting Screw	121801	1112701-2-3-7; 12
—	Lock Washer—Ground Lead Attaching Screw	453435	1112746-7-8-9
14	Lock Washer—Rotor Attaching Screw	453435	1112701-2-3-7; 12; 38-9; 40-3-4-5-6-7-8-9
—	Lock Washer—Tach. Housing Cover Plate Screw	453844	1112744-5-7-9
—	Lock Washer—Vacuum Control Attaching Screw	453844	1112740-3-4-5
—	Lock Washer—Vacuum Control Arm Attach. Screw	456413	1112746-7-8-9
	NUTS		
15	Nut—Governor Valve	1920472	1112701-2-3-7; 12-15; 20-1-2-5-6-7-8-9; 31-2-5-8-9; 40-3-4-5-6-8
	SCREWS		
16	Screw—Breaker Lever Spring Attaching	9417096	1112701-2-3-7; 12-15; 20-1-2-5-6-7-8-9; 31-2-5-8-9; 40-3-4-5-6-7-8-9
—	Screw—Contact Adjusting	1949844	1112701-2-3-7; 12-15; 20-1-2-5-6-7-8-9; 31-2-5-8-9; 40-3-4-5-6-7-8-9
17	Screw (& Lock Washer)—Contact Assembly Attaching	1938527	1112701-2-3-7; 12-15; 20-1-2-5-6-7-8-9; 31-2-5-8-9; 40-3-4-5-6-7-8-9
18	Screw—Condenser Attaching	453418	1112701-2-3-7; 12-15; 20-1-2-5-6-7-8-9; 31-2-5-8-9
18	Screw—Condenser Attaching	1949837	1112740-3-4-5-6-7-8-9
19	Screw—Cover Band	453479	1112701-2-3-7; 12-15; 20-1-2-5-6-7-8-9; 31-2-5-8-9; 40-3-4-5-6-8
—	Screw—Ground Lead Attaching	453647	1112746-7-8-9
20	Screw—Rotor Attaching	9416183	1112701-2-3-7; 12; 22; 38-9; 40-3-4-5-6-7-8-9
—	Screw (& Lock Washer)—Rotor Attaching	274453	1112715; 20-1-5-6-7-8-9; 31-2-5
—	Screw—Tachometer Housing Cover Plate Attaching	453418	1112744-5-7-9
—	Screw—Vacuum Control Attaching	453461	1112740-3-4-5
—	Screw (& Lock Washer)—Vacuum Control Attaching	274937	1112746-7-8-9
—	Screw—Vacuum Control Arm Attaching	453460	1112746-7-8-9
	WASHERS		
—	Washer—Felt—under Breaker Plate	1932418	1112740-3-4-5-6-7-8-9
21	Washer—Plain—Governor Cushion	1900466	1112701-2-3-7; 12-15; 20-1-2-5-6-7-8-9; 31-2-5-8-9; 40-3-4-5-6-8
22	Washer—Plain—Rotor Attaching Screw	807295	1112701-2-3-7; 12
—	Washer—Shim—Gear (.005 thk.)	810074	1112744-5
—	Washer—Shim—Gear (.010 thk.)	1912129	1112744-5
—	Washer—Shim (.005 thk.)	1927529	1112747-9
—	Washer—Shim (.010 thk.)	1927530	1112747-9
—	Washer—Shim—Tach. Shaft & Gear (.031 thk.)	1913003	1112744-5-7-9
—	Washer—Shim—Tach. Shaft & Gear (.010 thk.)	1913004	1112744-5-7-9
23	Washer—Space—under Gear	1837617	1112701-3; 12-15; 20-1-5-6-7-8-9; 32-8; 47
23	Washer—Space—under Gear	1945776	1112702-7; 31
23	Washer—Space—under Gear	1905382	1112747-9
23	Washer—Space—under Lower Gear	811912	1112744-5
—	Washer—Space—under Upper Gear	1940647	1112744-5
24	Washer—Spring—between Seals	1932718	1112701-2-3-7; 12-15; 20-1-2-5-6-7-8-9; 31-2-5-8-9; 40-3-4-5-6-7-8-9
	MISCELLANEOUS		
—	BLOCK—Gear Cushion	1908028	1112722; 31-5-9
—	BRACKET—Condenser	1869573	1112740-3-4-5-6-7-8-9
25	BRUSH—in Cap	1938193	All
26	CLIP—Breaker Lever Spring Screw	1931998	1112707; 12-15; 20-1-2-5-6-7-8-9; 31-2-5-31-2-5-8-9; 40-3-4-5-6-7-8-9
—	COLLAR—Shaft	821865	1112746-7-8-9
—	COUPLING—Tachometer Drive	1912819	1112744-5-7-9
—	CUSHION—Gear	1908029	1112722; 31-5-9
27	CUSHION (Rubber)—Governor Weight	1920474	1112707; 15; 20-1-2-5-6-7-8-9; 31-5-9; 40-3-4-5
27	CUSHION (Rubber)—Governor Weight	1938099	1112701-2-3; 12; 32-8; 46-8
—	FITTING—Lubrication	271285	1112744-5
—	FITTING—Lubrication	271283	1112747-9
—	GASKET—Between Cap & Base	1946978	1112746-8-9

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
—	GASKET—Tachometer Housing Cover Plate	1940604	1112744-5-7-9
—	GASKET—Vacuum Control	1946975	1112746-7-8-9
—	GEAR—upper Distributor Shaft	1946362	1112744-5
—	GEAR (& Shaft)—Tachometer Drive	1946363	1112744-5-7-9
28	GROMMET—for Primary Lead	1932732	1112701-2-3-7; 12-15; 20-1-2-5-6-7-8-9; 31-2-5-8-9; 40-3-4-5-6-7-8-9
29	INSULATOR—Breaker Lever Spring Screw	1931997	1112701-2-3-7; 12-15; 20-1-2-5-6-7-8-9; 31-2-5-8-9; 40-3-4-5-6-7-8-9
—	LEAD—Ground	1932002	1112740-3-4-5
—	LEAD—Ground	1865978	1112746-7-8-9
30	LEAD—Primary	1932731	1112701-2-3-7; 12-15; 20-1-5-6-7-8-9; 31-2-8;
30	LEAD—Primary	1958971	1112722; 35-9
30	LEAD—Primary	1950278	1112740-3-4-5
30	LEAD—Primary	1949006	1112746-8
×31	OILER Assembly	1922265	1112701-2-3; 7-12-15; 20-1-2-5-6-7-8-9; 31-2-5-8-9; 40-3-4-5-6-8
31	OILER Assembly	1931982	1112747-9
32	OILER (only)	113702	1112701-2-3-7; 12-15; 20-1-2-5-6-7-8-9; 31-2-5-8-9; 40-3-4-5-6-7-8-9
—	PIN—Collar Attaching	1862218	1112746-7-8-9
—	PIN—Dowel—in Housing	1938856	All
33	PIN—Gear	829421	1112701-3- 12-15; 20-1-5-6-7-8-9; 32-8
*33	PIN—Gear	1857492	1112702-7
33	PIN—Gear	1908031	1112722; 31-5-9
33	PIN—Gear	455481	1112740-3-4-5-6-8
—	PIN—upper Shaft Gear	274795	1112744-5-7-9
—	PLATE—Breaker	1935622	1112740-3-4-5
—	PLATE—Breaker	1946981	1112746-7-8-9
—	PLATE—Tachometer Housing Cover	1940657	1112744-5-7-9
—	PLUG—Thrust—Tachometer Shaft	1912818	1112744-5-7-9
—	RETAINER—Contact Adjusting Screw	1938376	All
—	RETAINER—Gear Cushion	1908030	1112722; 31-5-9
—	RING (Rubber)—Valve Stop	1948782	1112702-3; 12; 20-1-5-6-8-9; 32-8; 40-3-4-5-6-8
—	RING—Snap—Valve Stop	1945755	1112720-1-5-6-8-9
34	SEAL—Oil (in Housing)	1920463	1112701-2-3-7; 12-15; 20-1-2-5-6-7-8-9; 31-2-5-8-9; 40-3-4-5-6-7-8-9
—	SLEEVE—Spring Post	1945548	1112728; 39
—	SPRING—Breaker Plate Retainer	1932024	1112740-3-4-5-6-7-8-9
—	SPRING—Contact Adjusting	1931995	1112701-2-3-7; 12-15; 20-1-2-5-6-7-8-9; 31-2-5-8-9; 40-3-4-5-6-7-8-9
—	Vacuum CONTROL	1116118	1112740-3-4-5
—	Vacuum CONTROL	1116156	1112746-8
—	Vacuum CONTROL	1116157	1112747
—	Vacuum CONTROL	1116159	1112749
35	WEIGHT—Governor	1932730	1112707; 15; 20-1-2-5-6-7-8-9; 31-5-9; 40-3-4-5
35	WEIGHT—Governor	1938098	1112701-2-3; 12; 32-8; 46-8

×If oiler hole in base is $\frac{1}{32}$" dia.—not tapped; use 113702 only.
*If gear pin hole is .127/.131 use 1952271 Pin.

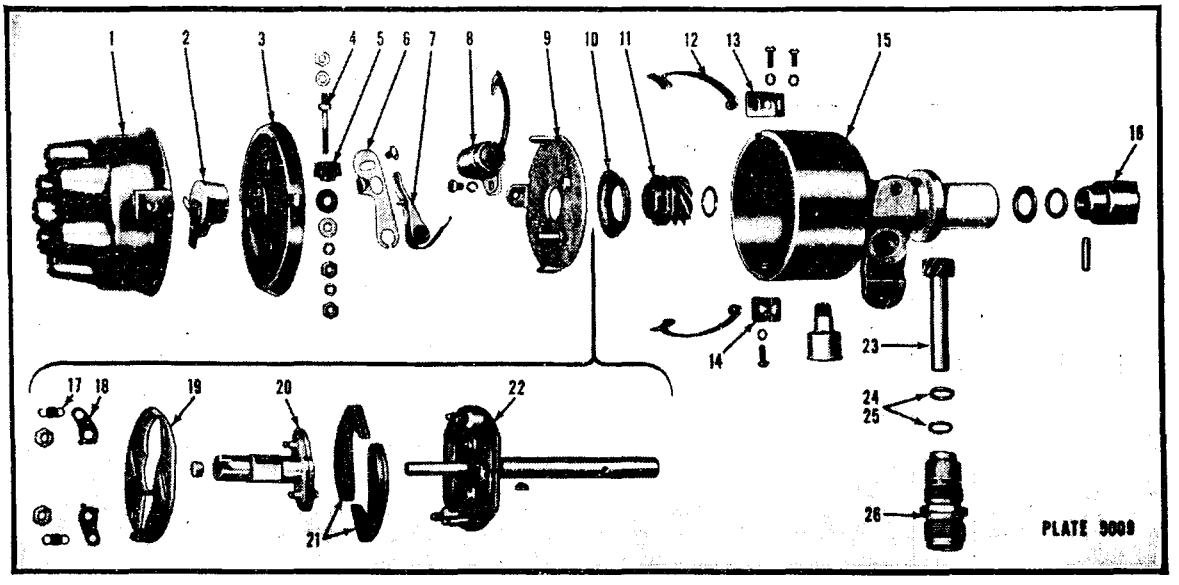

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Cover — Housing	Screw or Stud — Terminal	Bushing — Insul.	Contact Point and Support	Breaker Lever	Condenser	Plate — Breaker	Seal or Shield — Oil	Gear — Gov. or Tach. Drive	Spring — Cap	Support — Cap Spring Cover Locator
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112704	1931512	1931482	.....	1916806	†	‡1848038	‡ 813238	1900272	1847643	1912820	1912821	1871838	.....
1112705	"	"	.....	"	†	‡ "	‡ "	"	"	"	"	"	.....
1112706	"	"	.....	"	†	‡ "	‡ "	"	"	"	"	"	.....
1112709	1867722	1905590	1900119	"	†	△1882964	△1881394	"	1908033	"	"	1889967	.....
1112710	824735	820445	.....	"	†	△ "	△ "	"	1847643	"	"	1871838	.....
1112713	1931512	1931482	.....	"	†	‡1848038	‡ 813238	.....	"	"	"	"	.....
1112714	"	"	.....	"	†	‡ "	‡ "	1900272	"	"	"	"	.....
1112723	1842714	1905590	1900119	"	†	△1882964	△1881394	"	1908033	"	"	1889967	1889999
1112724	"	"	"	"	†	△ "	△ "	"	"	"	"	"	"
1112730	1941308	1931482	.....	"	†	‡1848038	‡ 813238	"	1847643	"	"	1871838	.....
1112741	1872832	1905590	1900119	"	†	△1882964	△1881394	"	1908033	"	"	1889967	1889999
1112742	1931512	1931482	1945388	"	†	‡1848038	‡ 813238	1928111	1847643	"	"	1871838	.....
1112750	1842714	1905590	1900119	"	†	△1882964	△1881394	1900272	"	"	"	1889967	"
1112751	"	"	"	"	†	△ "	△ "	"	"	"	"	"	"
1112760	1941308	1931482	.....	"	†	‡1848038	‡ 813238	1928111	"	"	"	1871838	.....
1112778	824735	820445	1952331	"	†	‡ "	‡ "	"	1847643	"	"	1889967	.....
1112774	1931512	1931482	.....	"	†	‡ "	‡ "	"	1847643	"	"	1871838	.....
1112791	1842714	1905590	1900119	"	†	△1882964	△1881394	1900272	1908033	"	"	1889967	1889999
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....

†Use 1916805 Bushing (Inside); 1914142 Bushing (Outside).
△Contact Set No. 1882965.
‡Contact Set No. 1855720.

Delco-Remy
SERVICE PARTS CATALOG

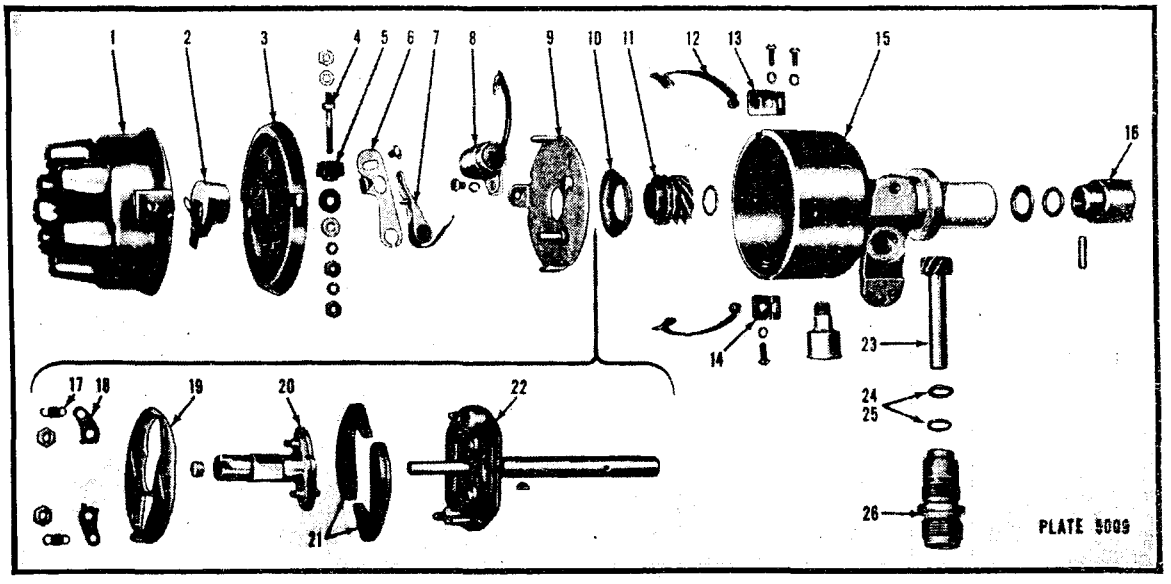

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Support — Cap Spring	Housing	Collar, Coupling or Gear	Spring — Weight	Lock Washer	Weight Hold Down — Cup or Plate	Cam Assembly	Weight	Main Shaft	Shaft and Gear — Gov. or Tach. Drive	Washer — Space $\frac{1}{32}$ thk.	Washer — Shim .010 thk.	Bearing — Gov. or Tach. Drive
	14	15	16	17	18	19	20	21	22	23	24	25	26
1112704	1847289	1938280	1864165	1939794	1885558	1885557	1938189	1881371	1938278	1921820	1913003	1913004	.....
1112705	"	"	"	1885339	"	"	1938379	"	1938378	"	"	"	1914626
1112706	"	"	"	"	"	"	"	"	"	"	"	"	.....
1112709	1889999	1924848	1917569	1906858	"	"	1914623	1880902	1939365	1921279	"	"	1914626
1112710	1847289	1930242	1912218	"	"	"	1931058	"	1939363	1915829	"	"	1912819
1112718	"	1939832	1917569	1903101	"	"	1939831	1881371	1939829	1921279	"	"	1914626
1112714	"	1938280	1864165	1939794	"	"	1938189	"	1938278	1921279	"	"	"
1112723	"	1940792	1902407	1930481	"	"	1915023	1880902	1940776	"	"	"	"
1112724	"	1940663	"	1929319	"	"	1914623	"	1940661	"	"	"	"
1112730	"	1938280	1864165	1939794	"	"	1938189	1881371	1938278	1921820	"	"	"
1112741	"	1935484	1902407	1900221	"	"	1916902	"	1924301	1915829	"	"	1912819
1112742	"	1946264	1912218	1903101	"	"	1938135	1880902	1946267	1915829	"	"	"
1112750	"	1948378	×	1948359	"	"	1915023	"	1948376	1948381	"	"	"
1112751	"	"	×	1948360	"	"	"	"	1948589	"	"	"	"
1112760	"	1938280	1952113	1903101	"	"	1938135	"	1952108	1921820	"	"	.....
1112773	"	1957544	809673	1911255	"	"	1940733	"	1957620	1912814	"	"	1912819
1112774	"	1957576	1907957	1885339	"	"	1938379	1881371	1957582	1921279	"	"	.....
1112791	"	1964445	×	1883498	"	"	1914433	"	1923948	1912814	"	"	1912819
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....

×Not furnished by Delco-Remy.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Name	Part No.	Used on Models
LOCK WASHERS		
Lock Washer—Breaker Plate Support Screw	453844	1112704–5–6–9; 10–13–14; 23–4; 30; 41–2; 50–1; 60; 73–4; 91
Lock Washer—Cam Lubricator Screw	453844	1112741; 91
Lock Washer—Clamp Arm Attaching Screw	9421423	1112750–1
Lock Washer—Condenser Attaching Screw	453844	1112704–5–6–9; 10–13–14; 23–4; 30; 41–2; 50–1; 60; 91
Lock Washer—Dial Plate Screw	9421423	1112713
Lock Washer—Distributor Cap Spring Support Screw	453844	1112704–5–6–9; 10–13–14; 23–4; 30; 41; 50–1; 73–4; 91
Lock Washer—Terminal Stud—Inside	453844	1112704–5–6–9; 10–13–14; 23–4; 30; 41–2; 50–1; 60; 73–4; 91
NUTS		
Nut—Dial Plate Screw	453848	1112713
Nut—Terminal Stud—Inside	817363	1112704–5–6–9; 10–13–14; 23–4; 30; 41–2; 50–1; 60; 73–4; 91
Nut—Terminal Stud—Outside	120622	1112704–5–6–9; 10–13–14; 23–4; 30; 41–2; 50–1; 60; 73–4; 91
Nut—Weight Hold Down	1923540	1112704–5–6–9; 10–13–14; 23–4; 30; 41–2; 50–1; 60; 73–4; 91
SCREWS		
Screw—Breaker Plate Support	453418	1112704–5–6–9; 10–13–14; 23–4; 30; 41–2; 50–1; 60; 73–4; 91
Screw—Cam Lubricator Attaching	453304	1112741; 73–4; 91
Screw—Cap—High Tension (Center)	1860407	1112741
Screw—Cap—High Tension (Side)	1860406	1112741
Screw—Clamp Arm Attaching	453660	1112750–1
Screw—Condenser Attaching	453304	1112704–5–6–9; 10–13–14; 23–4; 30; 41–2; 50–1; 60; 91
Screw—Contact Attaching	1914916	1112704–5–6–9; 10–13–14; 23–4; 30; 41–2; 50–1; 60; 73–4; 91
Screw—Dial Plate	120854	1112713
Screw—Distributor Cap Spring Support	453461	1112704–5–6–9; 10–13–14; 23–4; 30; 41–2; 50–1; 60; 73–4; 91
WASHERS		
Washer—Dial Plate Screw	1905125	1112713
Washer—Seal—In Housing Cover	1914309	1112709; 13; 50–1; 91
Washer—Shim (.005 thk.)	810074	1112704–5–6–9; 10–13–14; 30; 41–2; 50–1; 60; 73–4; 91
Washer—Shim (.010 thk.)	1912129	1112704–5–6–9; 10; 41–2; 50–1; 60; 73–4; 91
Washer—Shim—Under Coupling (.005 thk.)	1927529	1112723–4
Washer—Shim—Under Coupling (.010 thk.)	1927530	1112723–4
Washer—Space—Under Coupling or Gear ($\frac{33}{64}$ dia.)	811912	1112704–5–6–9; 10–13–14; 30; 41–2; 50–1; 60; 73–4; 91
Washer—Space—Under Coupling or Gear	1926782	1112750–1
Washer—Space—Under Coupling	1849806	1112723–4
MISCELLANEOUS		
ADAPTOR—Mounting	1917568	1112713
ADAPTOR—Mounting	1948429	1112750–1
*Advance ARM	1838617	1112709
Advance ARM	1948380	1112750–1
BRACKET—Condenser	1869573	1112713; 73–4
BRACKET—Condenser	1910476	1112791
BUSHING—Distributor Housing	1909003	1112704–5–6–9; 10–13–14; 30; 41–2; 50–1; 60; 73–4; 91
BUSHING—Distributor Housing	1932972	1112723–4
BUTTON—Carbon—In Cap ($\frac{1}{4}$ dia.)	1938193	1112704–5–6–9; 10–13–14; 30; 42; 60; 74
BUTTON—Carbon—In Cap	806923	1112723–4; 41; 50–1; 91
BUTTON—Carbon—In Cap	1938193	1112773
CLIP—Lock—Terminal Stud—Outside	1914144	1112704–5–6–9; 10–13–14; 23–4; 30; 41–2; 50–1; 60; 73–4; 91
Coupling ASSEMBLY (Governor)	1914626	1112774
DIAL—Advance	815095	1112709; 13
Felt WICK—In Cam	819639	1112704–5–6–9; 10–13–14; 23–4; 30; 41–2; 50–1; 60; 73–4; 91

*For service parts see Advance Arm—Group 1.

Parts not listed in this catalog will not be sold separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
MISCELLANEOUS—Continued		
FITTING—Lubrication	191758	1112704–5–6; 10–14; 30; 42; 50–1; 60; 73–4; 91
FITTING—Lubrication	271283	1112709; 13; 41
GASKET—Housing Cover	1889966	1112709; 23–4; 50–1; 91
KEY—Woodruff—Governor Gear	190016	1112704–5–6–9; 10–13–14; 23–4; 30; 41–2; 50–1; 60; 73–4; 91
LUBRICATOR—Cam	1885562	1112741; 91
OILER	1922131	1112741
PIN—Collar Attaching	1862218	1112710; 42
PIN—Coupling	1857492	1112704–5–6; 14; 30
PIN—Coupling	1902407	1112723
PIN—Coupling	829421	1112724; 41
PIN—Coupling	1857502	1112774
PIN—Coupling	455862	1112773
PIN—Governor Drive Gear	1857502	1112709; 13
Pipe PLUG—In Housing	125947	1112704–5–6–9; 13–14; 23–4; 30; 42; 50–1; 60; 73–4
PLUG—Pipe	125947	1112774
PLUG—Thrust	1912818	1112710; 41–2; 60–1; 73; 91
PLUG—Thrust	1937391	1112704–6; 60
SEAL—Felt—Housing	1912382	1112723–4
SEAL—Oil	1912820	1112742; 60
SLEEVE—Adaptor	1917568	1112709
SPRING—Felt Retainer—Housing Cover	1913643	1112709

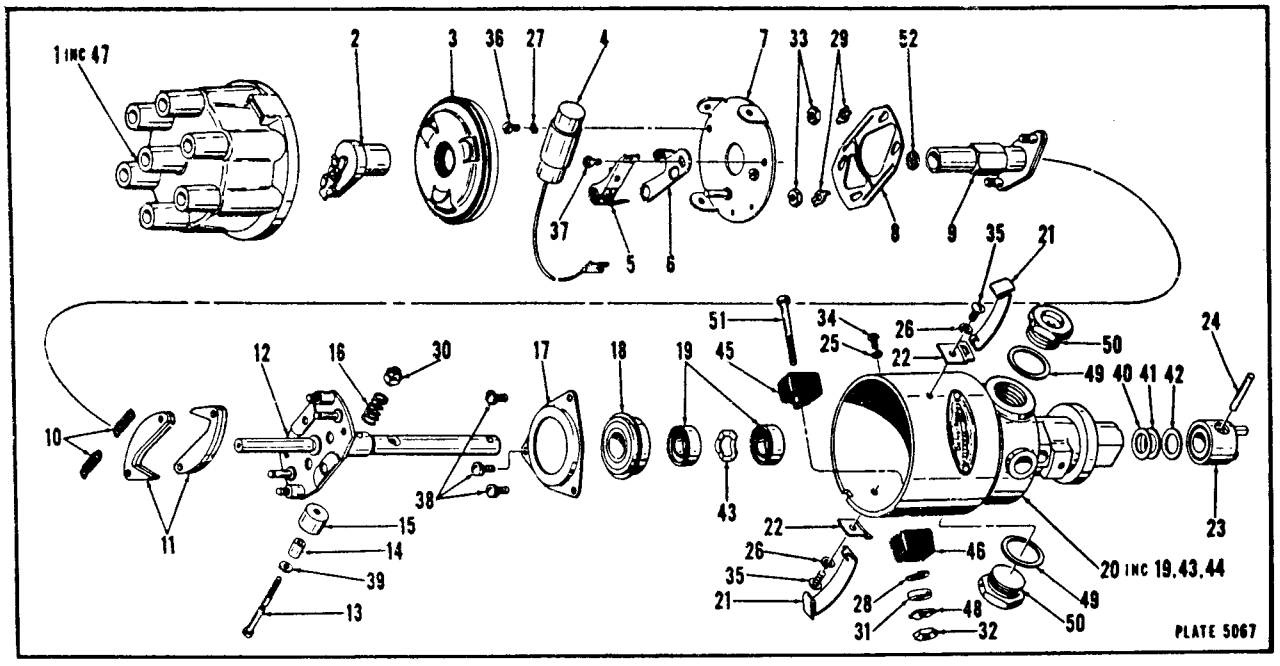

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Cover	Condenser	Lever	Point & Support	Plate — Breaker	Plate — Hold Down	Cam	Spring	Weight	Shaft & Plate
	1	2	3	4	5	6	7	8	9	10	11	12
1112708	1924248	1931482	1925477	1900272	✦ 813238	✦1848038	1847643	1885557	1939579	1926116	1881371	1939578
1112711	"	"	"	"	✦ "	✦ "	"	"	1935735	1884094	"	1937320
1112716	1931512	"	"	"	✦ "	✦ "	"	"	1939579	1926116	"	1939578
1112718	1917247	1927393	1931377	"	○1917254	○1938330	1930585	"	1935385	1935546	"	1940501
1112734	"	1931482	1925477	"	✦ 813238	✦1848038	1847643	"	1939579	1926116	"	1939578
1112737	1946553	"	"	"	□1881394	□1882964	1908033	"	1944932	1886558	"	1944930

✦Use Contact Set No. 1855720.
□Use Contact Set No. 1882965.
○Use Contact Set No. 1918148.

Delco-Remy
SERVICE PARTS CATALOG

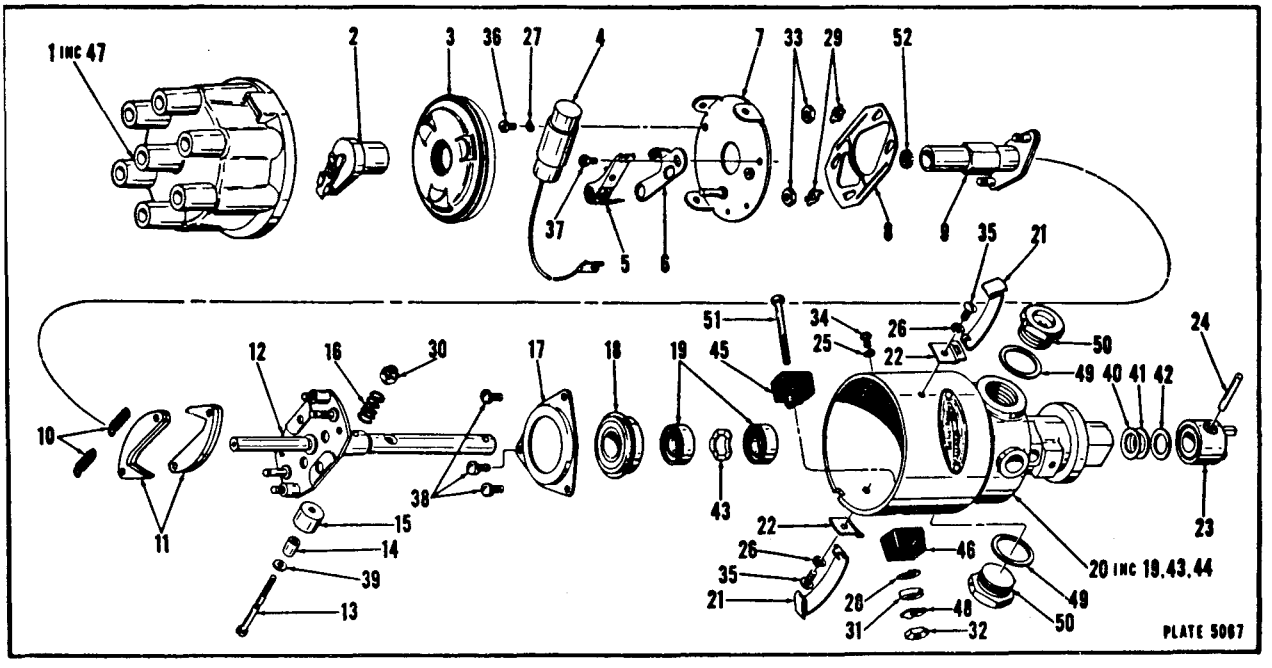

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Valve — Gov.	Cushion — Valve	Weight — Valve	Spring — Valve	Plate — Retainer	Bearing	Seal — Oil	Housing	Spring — Cap	Support — Cap Spring	Coupling or Gear	Pin
	13	**14**	**15**	**16**	**17**	**18**	**19**	**20**	**21**	**22**	**23**	**24**
1112708	1920471	1920474	1925571	1926030	1939551	954939	1920463	1939590	1889967	1847289	1929088	829421
1112711	"	"	"	"	"	"	"	1925474	"	"	"	"
1112716	"	"	"	1933386	"	"	"	1939590	"	1847289	"	"
1112718	"	"	"	1920473	"	"	"	1931518	"	1931381	1912568	"
1112734	"	"	"	1933386	"	"	"	1939590	"	1847289	1929088	"
1112737					"	"		1944933	"	"	1908041	1908031

'arts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
	LOCK WASHERS		
25	Lock Washer—Breaker Plate Support Screw	453844	1112708; 11-16-18; 34-7
—	Lock Washer—Cam Lubricator Attaching Screw	453844	1112737
26	Lock Washer—Cap Spring Support Screw	453844	1112708; 11-16-18; 34-7
27	Lock Washer—Condenser Screw	453844	1112708; 11-16-18; 34-7
28	Lock Washer—Terminal Stud	453844	1112708; 11-16; 34-7
29	Lock Washer—Hold Down Plate Nut	1885558	1112708; 11-16-18; 34-7
	NUTS		
30	Nut—Governor Valve	1920472	1112708; 11-16-18; 34-7
—	Nut—Lead Attaching	817363	1112718
—	Nut—Terminal (Inside)	817363	1112718; 37
31	Nut—Terminal (Round)	1924372	1112708; 11-16; 34
32	Nut—Terminal (Hex.)	120622	1112708; 11-16-18; 34-7
33	Nut—Weight Hold Down Plate	1923540	1112708; 11-16-18; 34-7
	SCREWS		
34	Screw—Breaker Plate Support	453418	1112708; 11-16; 34-7
34	Screw—Breaker Plate Support	453461	1112718
—	Screw—Cam Lubricator Attaching	453304	1112737
35	Screw—Cap Spring Support	453461	1112708; 11-16-18; 34-7
36	Screw—Condenser Attaching	453304	1112708; 11-16-18; 34-7
37	Screw—Contact Adjusting	1914916	1112708; 11-16-18; 34-7
—	Screw—Lead Attaching	455957	1112718
38	Screw (& Lock Washer)—Bearing Plate Attaching	455341	1112708; 11-16-18; 34-7
	WASHERS		
39	Washer—Governor Weight	1900466	1112708; 11-16-18; 34-7
40	Washer—Shim (.005 thk.)	810074	1112708; 11-16; 34-7
40	Washer—Shim (.005 thk.)	1927529	1112718
41	Washer—Shim (.010 thk.)	1912129	1112708; 11-16; 34-7
41	Washer—Shim (.010 thk.)	1927530	1112718
—	Washer—Space—Under Coupling	811912	1112737
—	Washer—Space—Under Gear	1945776	1112718
43	Washer—Spring (Between Seals)	1925476	1112708; 11-16-18; 34-7
	MISCELLANEOUS		
—	BLOCK—Gear Cushion	1909028	1112737
44	BUSHING—In Housing	825463	1112708; 11-16; 34-7
45	BUSHING—Terminal (Inside)	1924369	1112708; 11-16; 34
45	BUSHING—Terminal (Inside)	1916805	1112718; 37
46	BUSHING—Terminal (Outside)	1924370	1112708; 11-16; 34
46	BUSHING—Terminal (Outside)	1914142	1112718; 37
47	BRUSH (Carbon)—In Cap	1938193	1112708; 11-16-18; 34-7
—	CLIP—(Lock)—Lead Attaching	1868992	1112718
48	CLIP—(Lock)—Terminal	1914144	1112708; 11-16-18; 34-7
—	COLLAR—Shaft	821865	1112737
—	CUSHION—Gear	1909029	1112737
—	FITTING—Lubrication	271283	1112737
49	GASKET—Plug	113897	1112708; 11-16-18; 34
—	LEAD—Terminal Connector	1930587	1112718
—	LUBRICATOR—Cam	1885562	1112737
—	PIN—Collar Attaching	1862218	1112737
50	PLUG—Housing	1925481	1112708; 11-16-18; 34
—	RETAINER—Drive Block	1908030	1112737
51	STUD—Terminal	1924371	1112708; 11-16; 34
51	STUD—Terminal	1916806	1112718; 37
52	WICK—Felt (In Cam)	1963555	1112708; 11-16-18; 34-7

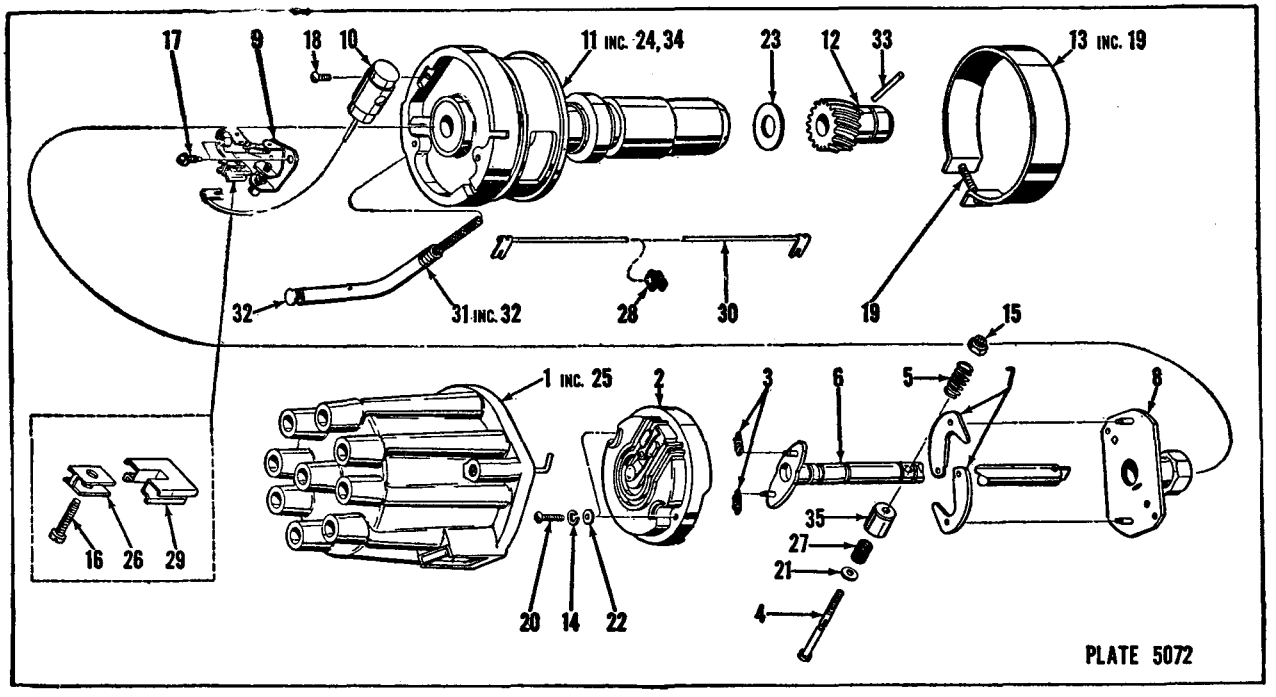

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring — Weight	Valve — Governor	Spring — Governor	Shaft	Weight	Cam	Contact Assem.	Condenser	Housing	Gear	Band
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112752	1949212	1932135	1943070	*1946301	1950691	1946581	1881371	1946729	1931988	1932004	1945559	1945234	1932727
1112753	"	"	"	* "	"	1946358	"	"	"	"	1946360	"	"
1112755	"	1932015	1946972	1949783	"	1946992	"	1947327	"	"	1946984	1948832	"
1112756	1942654	"	1886558	1948781	1938725	1951423	"	1942456	"	1928111	1964107	1958599	"
1112757	1949212	1932135	1946990	1949783	1950691	1946987	"	1947327	"	1932004	1946984	1948832	"
1112758	"	"	"	----------	----------	1946994	"	1946995	"	"	1946968	----------	----------
1112759	1942654	1932015	1886558	1948781	1934592	1951423	"	1942456	"	1928111	1964107	1958599	1932727
1112762	1949212	1932135	1943070	1949783	1950691	1946358	"	1946729	"	1955329	1955327	1945234	"
1112764	1932018	1932015	1943041	1948781	1934592	1955699	1924737	1957868	"	1928111	1964096	1958599	"
1112765	"	"	"	"	"	"	"	"	"	"	"	"	"
1112767	"	"	1912189	"	1941506	1955706	1881371	1957873	"	"	1964107	"	"
1112768	"	"	1917710	"	"	1955685	1924737	1955689	"	"	"	"	"
1112769	"	"	"	"	"	"	"	"	"	"	"	"	"
1112770	"	"	"	"	1938725	"	"	"	"	"	"	"	"
1112771	1942654	"	1942510	1957272	1934592	1957270	"	1957946	"	1932004	1945559	1945234	"
1112772	"	"	"	"	"	1957260	"	"	"	"	1946360	"	"
1112775	1949212	1932015	"	"	"	1957270	"	"	"	"	1945559	"	"
1112776	"	"	"	"	"	1957260	"	"	"	"	1946360	"	"
1112777	"	"	1903693	1949783	1950691	1945557	1881371	1946727	"	"	1945559	"	"
1112778	"	"	"	"	"	1946583	"	"	"	"	1946360	"	"
1112779	"	1932135	1946972	----------	----------	1946970	"	1946995	"	"	1946968	----------	----------
1112780	1958489	1932015	1943070	1949783	1950691	1946581	"	1946729	"	"	1945559	1945234	1932727
1112781	"	"	"	"	"	1946358	"	"	"	"	1946360	"	"
1112782	"	"	"	"	1933386	"	"	"	"	"	"	"	"
1112783	1949212	"	"	"	1950691	1946581	"	"	"	"	1945559	"	"
1112784	"	"	"	"	"	1946358	"	"	"	"	1946360	"	"
1112785	1932018	"	1943041	1948781	1938725	1955699	1924737	1957868	"	1928111	1964096	1958599	"
1112786	"	"	1917710	"	1941506	1960830	"	1955689	"	"	1964107	1959658	"
1112787	"	"	"	"	1938725	"	"	"	"	"	"	"	"

* Later Units with "O" Ring Valve Stop use 1949783 Valve.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Model
	LOCK WASHERS		
—	Lock Washer—Ground Lead Attaching Screw	453844	1112755-7-8; 79
14	Lock Washer—Rotor Attaching Screw	453435	1112752-3-4-6-7-8-9; 62-4-5-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2-3-4-5-6-7
—	Lock Washer—Tach. Housing Cover Plate Screw	453844	1112753-8; 62; 72-6-8-9; 81-2-4
—	Lock Washer—Vacuum Control Attaching Screw	453844	1112752-3; 62; 71-2-5-6-7-8; 80-1-2-3-4
—	Lock Washer—Vacuum Control Arm Attach. Screw	456413	1112755-7-8; 62; 79
	NUTS		
15	Nut—Governor Valve	1920472	1112752-3-5-6-7-9; 62-4-5-7-8-9; 70-1-2-5-6-7-8; 80-1-2-3-4-5-6-7
	SCREWS		
16	Screw—Breaker Lever Spring Attaching	9417096	1112752-3-5-6-7-8-9; 62-4-5-7-8-9; 70-1-2-5-6-7-8-9; 80-1-2-3-4-5-6-7
—	Screw—Contact Adjusting	1949844	1112752-3-5-6-7-8-9; 62-4-5-7-8-9; 70-1-2-5-6-7-8-9; 80-1-2-3-4-5-6-7
17	Screw (& Lock Washer)—Contact Assembly Attach.	1938527	1112752-3-5-6-7-8-9; 62-4-5-7-8-9; 70-1-2-5-6-7-8-9; 80-1-2-3-4-5-6-7
18	Screw—Condenser Attaching	453418	1112756-9; 64; 65-7-8-9; 70; 85-6-7
18	Screw—Condenser Attaching	1949837	1112752-3-5-7-8; 62; 71-2-5-6-7-8-9; 80-1-2-3-4
19	Screw—Cover Band	453479	1112752-3-5-6-7-9; 62-4-5-7-8-9; 70-1-2-5-6-7-8; 80-1-2-3-4-5-6-7
—	Screw—Ground Lead Attaching	453647	1112755-7-8; 79
20	Screw—Rotor Attaching	9416183	1112752-3-5-6-7-8-9; 62-4-5-7-8-9; 70-1-2-3-4-5-6-7-8-9; 80-1-2-3-4-5-6-7
—	Screw—Tachometer Housing Cover Plate Attaching	453418	1112753-8; 62; 72-6-8-9; 81-2-3-4
—	Screw—Vacuum Control Attaching	453461	1112752-3; 62; 77-8; 80-1-2-3-4
—	Screw—Vacuum Control	1927193	1112771-2-5-6
—	Screw (& Lock Washer)—Vacuum Control Attaching	274937	1112755-7-8; 79
—	Screw—Vacuum Control Arm Attaching	453460	1112755-7-8
	WASHERS		
—	Washer—Felt—Under Breaker Plate	1932418	1112752-3-5-7-8; 62; 71-2-5-6-7-8-9; 80-1-2-3-4
21	Washer—Plain—Governor Cushion	1900466	1112752-3-5-6-7-9; 62-4-5-7-8-9; 70-1-2-5-6-7-8; 80-1-2-3-4-5-6-7
—	Washer—Shim—Gear (.005 thk.)	810074	1112753; 62; 72-6-8; 81-2-4
—	Washer—Shim—Gear (.005 thk.)	1927529	1112758; 79
—	Washer—Shim—Gear (.010 thk.)	1912129	1112753; 62; 72-6-8; 81-2-4
—	Washer—Shim—Gear (.010 thk.)	1927530	1112758; 79
—	Washer—Shim—Tach. Shaft & Gear (.031 thk.)	1913003	1112753-8; 62; 72-6-8-9; 81-2-4
—	Washer—Shim—Tach. Shaft & Gear (.010 thk.)	1913004	1112753-8; 62; 72-6-8-9; 81-2-4
—	Washer—Space—Under Dist. Shaft Gear	1905382	1112758; 79
23	Washer—Space—Under Gear or Collar	1837617	1112756-8-9; 64; 65-7-8-9; 70-9; 85-6-7
23	Washer—Space—under Lower Gear	811912	1112753; 62; 72-6-8; 81-2-4
—	Washer—Space—under Upper Gear	1940647	1112753; 62; 72-6-8; 81-2-4
24	Washer—Spring—between Seals	1932718	1112752-3-5-6-7-9; 62-4-5-7-8-9; 70-1-2-5-6-7-8-9; 80-1-2-3-4-5-6-7
	MISCELLANEOUS		
—	BRACKET—Condenser	1869573	1112752-3-5-7-8; 62-4-5-7-8-9; 70-1-2-5-6-7-8-9; 80-1-2-3-4-5-6-7
25	BRUSH—in Cap	1938193	1112752-3-5-6-7-8-9; 62-4-5-7-8-9; 70-1-2-5-6-7-8-9; 80-1-2-3-4-5-6-7
—	BUTTON—(Nylon)—In Weight Base	1957329	1112764-5-7; 85-6-7; 90
—	CABLE ASSEM.—Ground	1955332	1112762
26	CLIP—Breaker Lever Spring Screw	1931998	1112752-3-5-6-7-8-9; 62-4-5-7-8-9; 70-1-2-5-6-7-8-9; 80-1-2-3-4-5-6-7
—	COLLAR—Shaft	821865	1112755-7-8; 79
—	COUPLING—Tachometer Drive	1912819	1112753-8; 62; 72-6-8-9; 81-2-4
—	COVER—Vacuum Control	1957834	1112780-1
27	CUSHION (Rubber)—Governor Weight	1920474	1112752-3; 62-4-5-7-8-9; 77-8; 80-1-3-4-6
27	CUSHION (Rubber)—Governor Weight	1938099	1112755-6-7-9; 70-1-2-5-6; 82-5-7
—	FITTING—Lubrication	109354	1112753
—	FITTING—Lubrication	271285	1112762; 72-6-8; 81-2-4
—	FITTING—Lubrication	271283	1112758; 79
—	GASKET—Between Cap & Base	1946978	1112755-7
—	GASKET—Tachometer Housing Cover Plate	1940604	1112753-8; 62; 72-6-8-9; 81-2-4

×If oiler hole in base is $\frac{3}{32}$" dia.—not tapped; use 113702 only.

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—(Continued)		
—	GASKET—Vacuum Control	1946975	1112755-7-8; 79
—	GEAR—upper Distributor Shaft	1946362	1112753; 62; 72-6-8; 81-2-4
—	GEAR—Upper Dist. Shaft	1946983	1112758; 79
—	GEAR (& Shaft)—Tachometer Drive	1946363	1112753-8; 62; 72-6-8-9; 81-2-4
28	GROMMET—for Primary Lead	1932732	1112752-3-5-6-7-8-9; 62-4-5-7-8-9; 70-1-2-5-6-7-8-9; 80-1-2-3-4-5-6-7
29	INSULATOR—Breaker Lever Spring Screw	1931997	1112752-3-5-6-7-8-9; 62-4-5-7-8-9; 70-1-2-5-6-7-8-9; 80-1-2-3-4-5-6-7
—	LEAD—Ground	1932002	1112752-3; 62; 71-2-5-6-7-8; 80-1-2-3-4
—	LEAD—Ground	1865978	1112755-7-8; 79
30	LEAD—Primary	1932731	1112756-9; 64; 65-7-8-9; 70; 85-6-7
30	LEAD—Primary	1949006	1112755-7
30	LEAD—Primary	1950278	1112752-3-8; 62; 71-2-5-6-7-8-9; 80-1-2-3-4
31	OILER Assembly	1931982	1112758; 79
×31	OILER Assembly	1922265	1112752-3-5-7; 62; 71-2-5-6-7-8; 80-1-2-3-4
32	OILER (only)	113702	1112752-3-5-6-7-8-9; 62-4-5-7-8-9; 70-1-2-5-6-7-8-9; 80-1-2-3-4-5-6-7
—	PIN—Collar Attaching	1862218	1112755-7-8; 79
33	PIN—Gear	455481	1112752-3-5-7; 62; 71-2-5-6-7-8; 80-1-2-3-4
33	PIN—Gear	455862	1112756-9; 64; 65-7-8-9; 70; 85-7
—	PIN—Dowel—In Housing	1938856	1112764; 85
33	PIN—Gear	456652	1112786
—	PIN—upper Shaft Gear	274795	1112753-8; 62; 72-6-8-9; 81-2-4
—	PLATE—Breaker	1935622	1112752-3; 62; 71-2-5-6-7-8; 80-1-2-3-4
—	PLATE—Breaker	1946981	1112755-7-8; 79
—	PLATE—Tachometer Housing Cover	1940657	1112753-8; 62; 72-6-8-9; 81-2-4
—	PLUG—In Housing	1922807	1112785
—	PLUG—Thrust—Tachometer Shift	1912818	1112753-8; 62; 72-6-8-9; 81-2-4
—	RETAINER—Contact Adjusting Screw	1938376	1112752-3-5-6-7-8-9; 62-4-5-7-8-9; 70-1-2-5-6-7-8-9; 80-1-2-3-4-5-6-7
—	RING—Valve Stop	1948782	1112752-3-5-6-7-9; 62-4-5-7-8-9; 76-7-8; 80-1; 82-3-4-5-6-7
34	SEAL—Oil (in Housing)	1920463	1112752-3-5-6-7-8-9; 62-4-5-7-8-9; 70-1-2-5-6-7-8-9; 80-1-2-3-4-5-6-7
—	SLEEVE—Spring Post	1945548	All
—	SPRING—Breaker Plate Retainer	1932024	1112752-3-5-7-8; 75-6-7-8-9; 80-1-2-3-4
—	SPRING—Contact Adjusting	1931995	1112752-3-5-7-8-9; 62-4-5-7-8-9; 70-1-2-5-6-7-8-9; 80-1-2-3-4-5-6-7
—	Vacuum CONTROL	1116118	1112752-3; 62; 71-2-5-6-7-8; 80-1-2-3-4
—	Vacuum CONTROL	1116157	1112758; 79
—	Vacuum CONTROL	1116156	1112755-7
35	WEIGHT—Governor	1932730	1112752-3; 62-4-5-7-8-9; 77-8; 80-1-3-4-6
35	WEIGHT—Governor	1938098	1112755-6-7-9; 70-1-2-5-6; 82-5-7

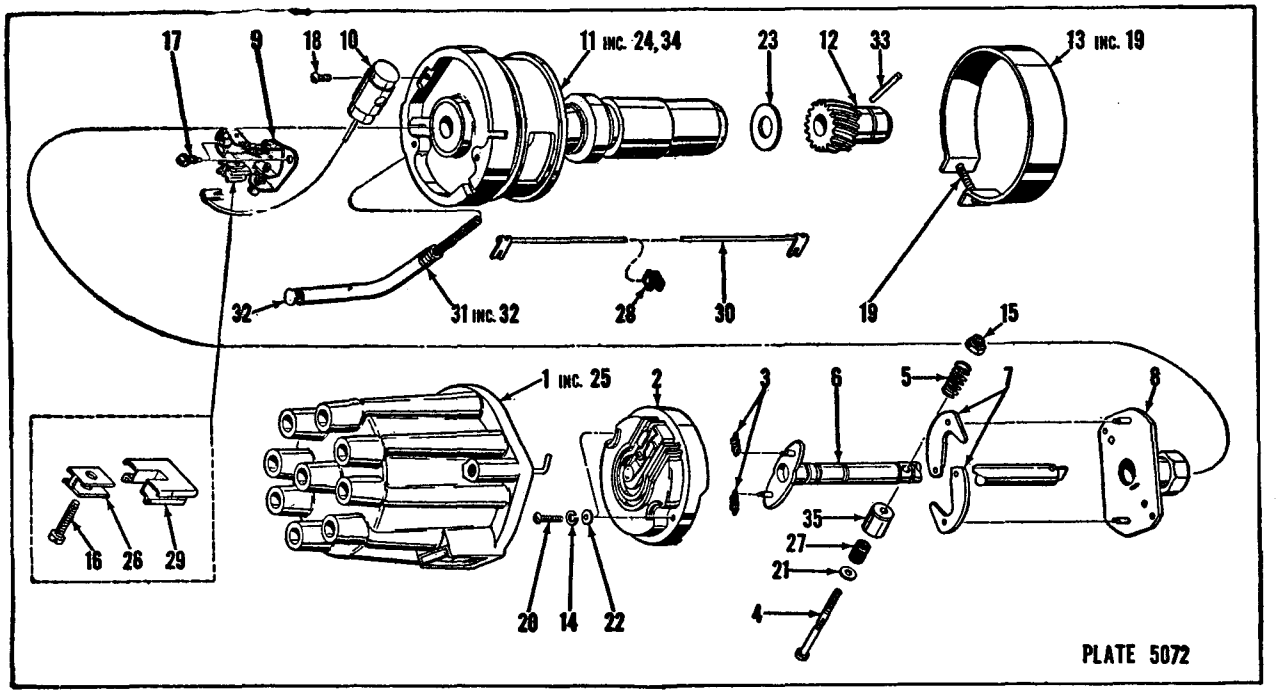

Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cap	Rotor	Spring — Weight	Valve — Governor	Spring — Governor	Shaft	Weight	Cam	Contact Assem.	Condenser	Housing	Gear	Band
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112790	1932018	1932015	1943041	1948781	1950691	1955699	1924737	1957868	1931988	1928111	1964096	1958599	1932727
1112792	1942654	"	1963584	1949783	"	1963585	"	1947327	"	1932004	1946984	1948832	"
1112793	1946976	"	"	.....	.....	1963587	"	1946995	"	"	1946968	1946983	.....
1112794	1942654	"	1937291	1949783	1950691	1963786	1881371	o	o	.....	1963779	1948832	1932727
1112795	1932018	"	1943041	1948781	1934592	1964093	1924737	1957868	1949838	1928111	1964096	1964095	"
1112796	"	"	1917710	"	1941506	1964105	"	1955689	"	"	1964107	"	"
1112797	"	"	1912189	"	"	1964112	1881371	1957873	"	"	"	"	"
1112798	"	"	1886559	"	"	1964274	"	o	o	.....	1964296	1958599	"
1112799	"	"	1884610	"	1934592	1964308	"	o	o	.....	1964310	"	"
1112800	"	"	1964400	"	1941506	1962881	"	o	o	.....	1964296	"	"

o Not used in this model.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lockwashers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
	LOCK WASHER		
—	Lock Washer—Ground Lead Attaching Screw	453844	1112792-3
14	Lock Washer—Rotor Attaching Screw	453435	1112790-2-3-4-5-6-7-8-9; 800
—	Lock Washer—Tach. Housing Cover Plate Screw	453844	1112793
—	Lock Washer—Vacuum Control Attaching Screw	453844	1112794
—	Lock Washer—Vacuum Control Arm Attach. Screw	456413	1112792-3
	NUTS		
15	Nut—Governor Valve	1920472	1112790-2-4-5-6-7-8-9; 800
	SCREWS		
16	Screw—Breaker Lever Spring Attaching	9417096	1112790-2-3
17	Screw (& Lock Washer)—Contact Assembly Attach.	1938527	1112790-2-3-5-6-7
18	Screw—Condenser Attaching	453418	1112790-5-6-7
18	Screw—Condenser Attaching	1949837	1112792-3
19	Screw—Cover Band	453479	1112790-2-4-5-6-7-8-9; 800
—	Screw—Ground Lead Attaching	453647	1112792-3
20	Screw—Rotor Attaching	9416183	1112790-2-3-4-5-6-7-8-9; 800
—	Screw—Tachometer Housing Cover Plate Attaching	453418	1112793
—	Screw—Vacuum Control Attaching	453461	1112794
—	Screw (& Lock Washer)—Vacuum Control Attaching	274937	1112792-3
—	Screw—Vacuum Control Arm Attaching	453460	1112792-3
	WASHERS		
—	Washer—Plain—Under Advance Plate	1961927	1112794-8-9; 800
—	Washer—Felt—Under Breaker Plate	1932418	1112790-3
21	Washer—Plain—Governor Cushion	1900466	1112790-2-4-5-6-7-8-9; 800
—	Washer—Shim—Gear (.005 thk.)	1927529	1112793
—	Washer—Shim—Gear (.010 thk.)	1927530	1112793
—	Washer—Shim—Tach. Shaft & Gear (.031 thk.)	1931677	1112793
—	Washer—Space—Under Dist. Shaft Gear	1905382	1112793
23	Washer—Space—Under Gear or Collar	1837617	1112790-5-6-7-8-9; 800
24	Washer—Spring—between Seals	1932718	1112790-2-4-5-6-7-8-9; 800
	MISCELLANEOUS		
—	BLOCK—Gear	1908028	1112795-6-7
—	BRACKET—Condenser	1869573	1112790-2-3-5-6-7
25	BRUSH—in Cap	1938193	1112790-2-3-4-5-6-7-8-9; 800
26	CLIP—Breaker Lever Spring Screw	1931998	1112790-2-3
—	COLLAR—Shaft	821865	1112792-3-4
—	CONNECTOR—Lead Junction	2973782	1112794-8-9; 800
—	COUPLING—Tachometer Drive	1912819	1112793
—	CUSHION—Gear	1908029	1112795-6-7
27	CUSHION (Rubber) Governor Valve	1920474	1112795-6-7-8-9; 800
27	CUSHION—(Rubber)—Governor Weight	1938099	1112790-2-4
—	FITTING—Lubrication	271283	1112793
—	GASKET—Between Cap & Base	1946978	1112790-3
—	GASKET—Tachometer Housing Cover Plate	1940604	1112793
—	GASKET—Vacuum Control	1946975	1112792-3
—	GEAR (& Shaft)—Tachometer Drive	1946363	1112793
—	GROMMET—Pole Piece & Plate Assembly	1963928	1112794-8-9; 800
28	GROMMET—for Primary Lead	1932732	1112790-2-3-5-6-7
—	LEAD—Ground	1865978	1112792-3
30	LEAD—Primary	1932731	1112790-5-6-7
30	LEAD—Primary	1949006	1112792
30	LEAD—Primary	1950278	1112793
31	OILER Assembly	1931982	1112793
×31	OILER Assembly	1922265	1112790-4
32	OILER (only)	113702	1112790-2-3-4-5-6-7-8-9; 800
—	PIN—Dowel—In Housing	1938856	1112795-6-7
—	PIN—Advance Plate Locating	9413283	1112798-9; 800
—	PIN—Collar Attaching	1862218	1112792-3-4
33	PIN—Gear	455481	1112792-4
33	PIN—Gear	455862	1112790
33	PIN—Gear	456652	1112795-6-7-8-9; 800
—	PIN—upper Shaft Gear	274795	1112790
—	POLE PIECE & WT. BASE	1962800	1112794
—	POLE PIECE & WT. BASE	1964255	1112800

×If oiler hole in base is $\frac{9}{32}$" dia.—not tapped; use 113702 only.

MINOR PARTS SECTION

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—(Continued)		
—	POLE PIECE & WT. BASE	1964272	1112798
—	POLE PIECE & WT. BASE	1964309	1112799
—	POLE PIECE & PLATE ASSEM.	1960779	1112794
—	POLE PIECE & PLATE ASSEM.	1964276	1112798-9; 800
—	PLATE—Breaker	1946981	1112792-3
—	PLATE—Tachometer Housing Cover	1940657	1112793
—	PLUG—Thrust—Tachometer Shift	1912818	1112793
—	RETAINER ("C" Washer) Advance Plate	1932024	1112794-8-9; 800
—	RETAINER—Gear Cushion	1908030	1112795-6-7
—	RING—Valve Stop	1948782	1112790-2-4-5-6-7-8-9; 800
34	SEAL—Oil (in Housing)	1920463	1112790-2-3-4-5-6-7-8-9; 800
—	SLEEVE—Spring Post	1945548	1112794
—	SLEEVE—Spring Post	1961234	1112798-9; 800
—	SLEEVE—Spring Post	1961234	1112795-6-7
—	SPRING—Breaker Plate Retainer	1932024	1112792-3
—	VACUUM CONTROL	1116156	1112792
—	VACUUM CONTROL	1116159	1112793
—	VACUUM CONTROL	1116118	1112794
35	WEIGHT—Governor	1932730	1112795-6-7-8-9; 800
35	WEIGHT—Governor	1938098	1112790-2-4

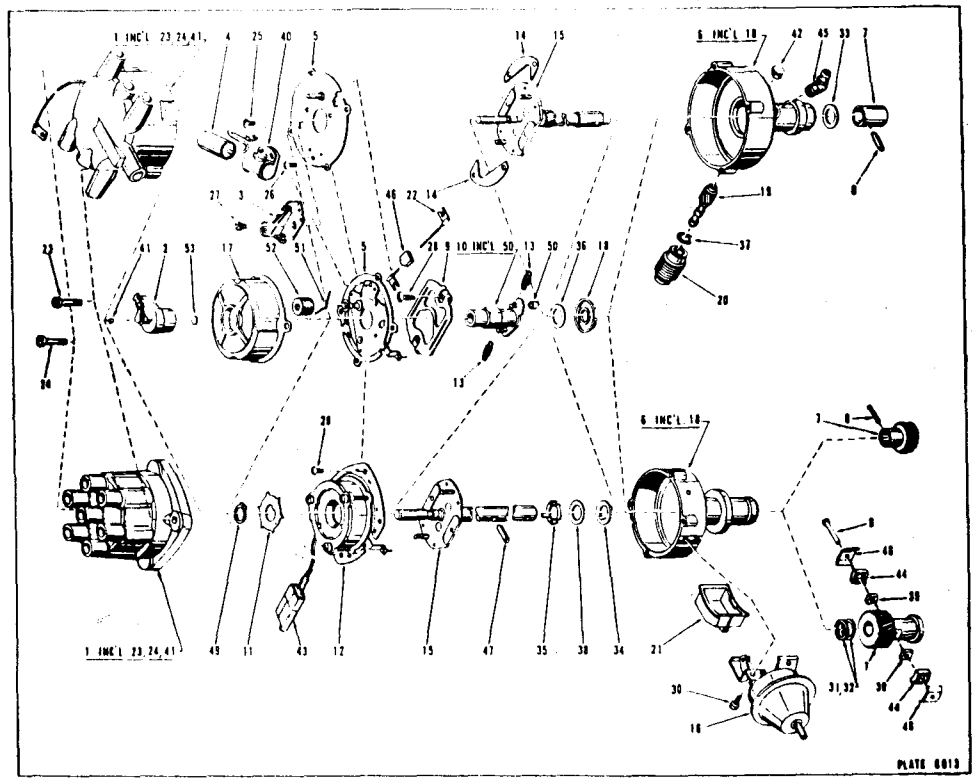

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cap 1	Rotor 2	Contact Assem. 3	Condnser 4	Plate Breaker 5	Housing 6	Coupling Collar or Gear 7	Pin 8	Plate — Weight Hold Down 9	Cam 10	Pole Piece — Rotor 11
1112788	1962085	1954566	1954557	1928111	1960814	1962083	1961856	9417392	1954548	1962094	.....
1112789	1962111	1962115	"	"	"	"	"	"	"	1962084	.....
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....
.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....

Delco-Remy
SERVICE PARTS CATALOG

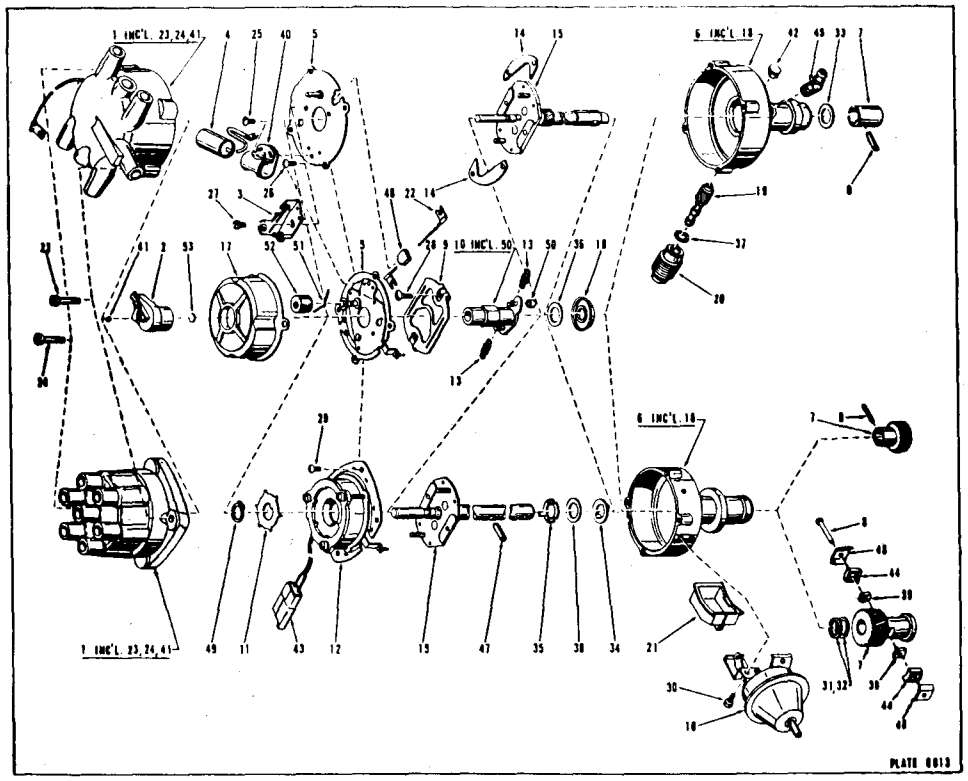

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Coil — Assem. 12	Spring Weight 13	Weight 14	Shaft 15	Vacuum — Control 16	Dust Seal — Cover 17	Seal — Housing 18	Gear & Shaft Tach. 19	Coupling — Tach. 20	Boot — Vacuum Control 21	Lead Primary 22
1112788		1911255	1880902	1962092		1960325	1950569	1955842	1955799		1954563
1112789		"	"	1962114		"	"	"	"		"

Parts not listed in this Catalog will not be sold separately.

MINOR PARTS SECTION

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used On
	SCREWS		
23	Screw—Cap Attach #8-32	1954571	1112788-9
24	Screw—Cap Attach #10-32	1954573	1112788-9
25	Screw—Capacitor Bracket Attach.	454458	1112788-9
26	Screw—Cir. Breaker Plate Attach.	453461	1112788-9
27	Screw—Contact Adjusting	1914916	1112788-9
28	Screw—(& L.W.) Hold Down Plate Attach.	453647	1112788-9
	WASHERS		
31	Washer—Shim .005 Thick	810074	1112788-9
32	Washer—Shim .010 Thick	1912129	1112788-9
33	Washer—Space—Under Collar, or Gear	811912	1112788
36	Washer—Space—Under Weight Base	811912	1112788-9
37	Washer—Thrust—Tach. Gear	1956834	1112788-9
	MISCELLANEOUS		
40	BRACKET—Capacitor	1944118	1112788-9
41	BUTTON—Carbon	1938193	1112788-9
—	BUTTON—(Nylon) In Weight Base	1957329	1112788-9
45	FITTING—Grease	271283	1112788
46	GROMMET—In Housing	1960824	1112788-9

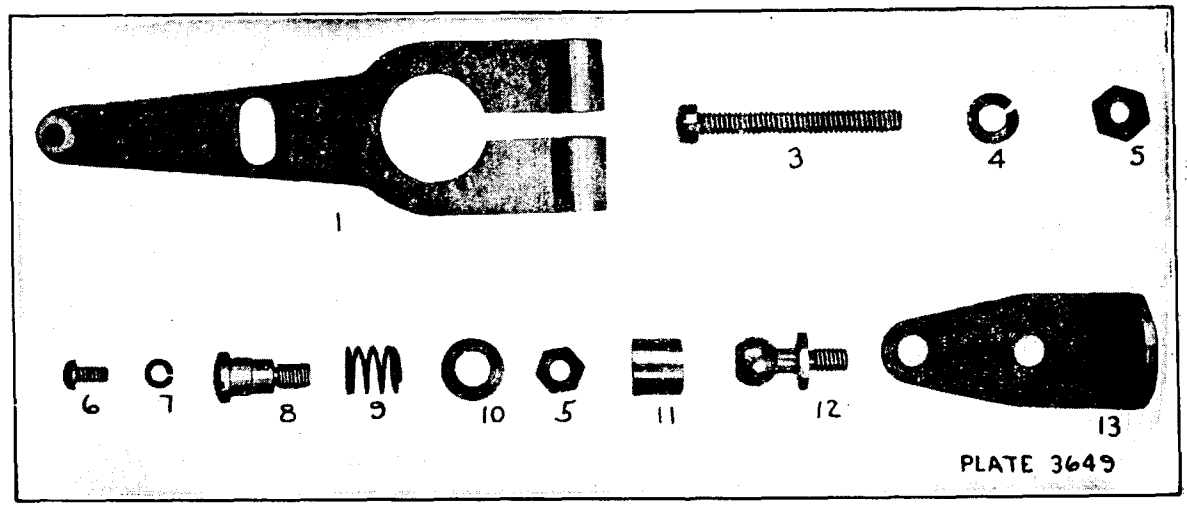

Illustrations are of Typical Parts only, which may vary in detail.

Advance Arm or Hold Down Assemblies †	Advance Arm Only or Hold Down Plate	Advance Arm Clamp Screw	Advance Arm Clamp Screw L. W.	Advance Arm Clamp Screw Nut	Terminal or Wire Control Screw	Wire Control Screw L. W.	Hold Down Screw	Hold Down Screw Spring	Hold Down Screw Washer	Spring Cup	Ball Stud	Bracket or Arm Extension	Clamp Arm Dial or Indicator
	1	3	4	5	6	7	8	9	10	11	12	13	14
813086	813043	114991	802760	802818			†813044	† 827234	†813046				
815572	815573	"	"	"			† "	† "	† "				†815095
815877	815094	"	"	"			† "	† 813045	† "				
816807	816808	802855		816862	115448	106496	† "	† "	† "				
817108	817107	114991	802760	802818			813044	813045	813046				†815095
817268	817269	132124		115614									
817764	817749	114991	802760	802818			†818195	† 813045	†818194				
818229	818230	115380	141552		115448	106496							
819653	819652	114991	802760	802818			813044	813045	813046				
820076	820077	"	"	"	132753	106496	†813044	† 813045	†822566				
820079	820080	"	"	"			† "	† "	†813046				
⊕820317		"	"	"	114763		† "	† "	† "				
820439	820440	"	"	"			† "	† "	† "				
820443	820442	"	"	"			813044	813045	813046				
820506	820507	"	"	"			† "	† "	†813046				
820512	820513	"	"	"			†813044	†§813045	† "				
820615	820616	"	"	"	132753		† "	† 813045	† "				
820774	820775	"	"	"			† "	† "	† "				
820935	820936	"	"	"			† "	† "	† "				
*821034	820513	"	"	"			† "	† "	† "			820514	
821165	821166	"	"	1917597			† 35483	† 35498	† 21168			°36142	
821545	821546	"	"	802818			†821600	† 821599	†821601				
821629	821644	"	"	"			† 35483	† 35498	† 21168				
	821805												
821807	821804	114991	802760	802818			†813044	† 827234	†813046				
822221	822222	"	"	"									
822441	822431	"	"	"			†813044	† 813045	†813046				
822611	822612	"	"	"			35483	35498	21168				
	821166												†822656
822986	823784	114991	802760	802818	132753		823785	813045	813046				
823264	823263	"	"	"									
823319	823320	"	"	"			†825161	† 813045	†813046				
823283	823284	"	"	"			†813044	† "	† "				

*820512 is Advance Arm Assembly less Bracket on 821034.
†Advance Arm Assemblies include all parts listed on same line, except where Hold Down Screws, Springs and Washers are marked †. These parts are shipped separate and are not part of Arm Assembly.
§Use 1838908 Hold Down Spring for Pierce-Arrow only.
°804488 Extension Attaching Screw.
⊕820635 Wire Control Post and 813046 Washer shipped separate.

Delco-Remy
SERVICE PARTS CATALOG

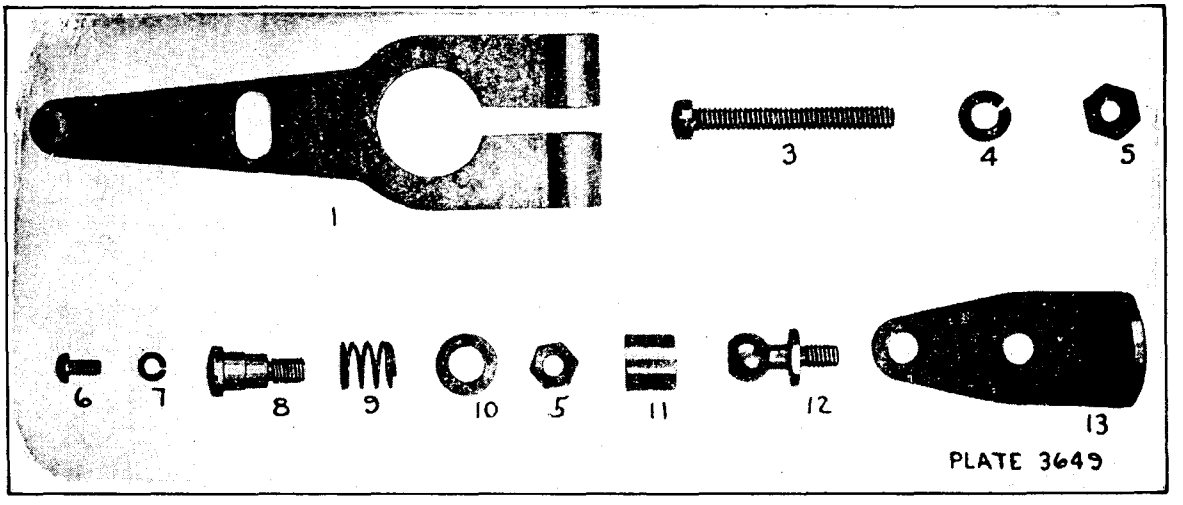

Illustrations are of Typical Parts only, which may vary in detail.

Advance Arm or Hold Down Assemblies †	Advance Arm Only or Hold Down Plate	Advance Arm Clamp Screw	Advance Arm Clamp Screw L. W.	Advance Arm Clamp Screw Nut	Terminal or Wire Control Screw	Wire Control Screw L. W.	Hold Down Screw	Hold Down Screw Spring	Hold Down Screw Washer	Spring Cup	Ball Stud	Bracket or Arm Extension	Clamp Arm Dial or Indicator
	1	3	4	5	6	7	8	9	10	11	12	13	14
824015	820617	114991	802760	802818			†813044	† 813045	†813046				
824489	824488	"	"	"			818195	813045	818194				
824653	35278	34588		33159			31822	27025	20915	31853	35279		
824793	822431	114991	802760	802818			†813044	† 813045	†813046				
821877	824876	"	"	"									
825107	825108	"	"	"			†813044	† 813045	†813046				
825344	817107	"	"	"			823785	"	"				
826413	826414	"	"	"	114935		†813044	† 827234	† "				
826477	822985	"	"	"			823785	813045	813046				
826701	826702	"	"	"			"	"	"				
826951	826952	114361	"	"	132753		†821600	† 821599	†821601				
827046	827047	132294	1838563	1838562			†813044	† 827234	†813046				
827435	827436	"	"	"	114935		† "	† "	† "				
828082	828095	114991	802760	802818			823785	813045	813046				
828225	828226	"	"	"			813044	"	"				
828258	828442	"	"	"									
828289	828449	"	"	"	114935		813044	813045	813046				
828290	828450	"	"	"	"		823785	"	"				
828507	828511	"	"	"			†828508	† 829045	† 21168				
828638	828467	132124		115614								†828509	
829030	829031	114991	802760	802818									
829103	829992	"	"	"	132753		825161	813045	813046				
829192	829193	"	"	"	114935		†813044	† 827234	†813046				
829586	829387	"	"	"			† "	† "	† "				
829516	820513	829521	829523	829522			†829518	†1838908	†829520				
829612	829615	114991	802760	802818	132753		813044	813045	813046				
829613	829699	"	"	"			"	"	"				
829892	829893	"	"	"			"	"	"				
1835074	1835073	"	"	"	132753		"	"	"				
1835087	1835088	"	"	"			823785	"	"				
1835474													
1835508	1835509	114991	802760	802818									
1835641	1835642	"	"	"	114935		†813044	† 827234	†813046				
1836155	1836170	"	"	"			† "	† "	† "				

*820512 is Advance Arm Assembly less Bracket on 821034.
†Advance Arm Assemblies include all parts listed on same line, except where Hold Down Screws, Springs and Washers are marked †. These parts are shipped separate and are not part of Arm Assembly.

Continued on Page 3

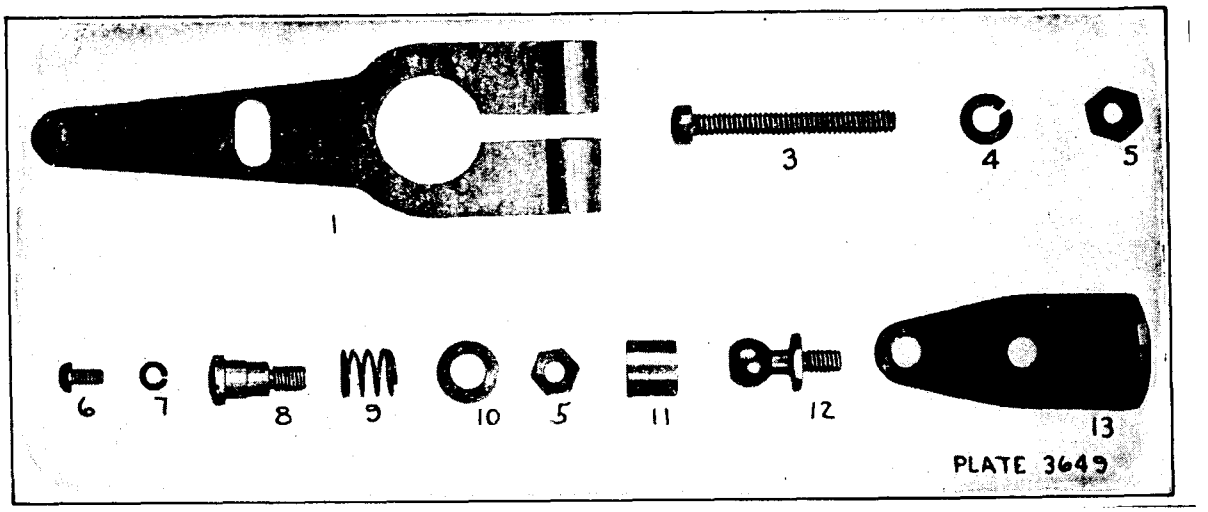

Illustrations are of Typical Parts only, which may vary in detail.

Advance Arm or Hold Down Assemblies †	Advance Arm Only or Hold Down Plate	Advance Arm Clamp Screw	Advance Arm Clamp Screw L. W.	Advance Arm Clamp Screw Nut	Terminal or Wire Control Screw	Advance Arm Wire Control Screw L. W.	Hold Down Screw	Hold Down Screw Spring	Hold Down Screw Washer	Spring Cup	Ball Stud	Bracket or Arm Extension	Clamp Arm Dial or Indicator
	1	3	4	5	6	7	8	9	10	11	12	13	14
1836645	1836646	114991	802760	802818	132753		813044	813045	813046				
1837319	1837320	"	"	"			823785	"	"				
1837491	1837492	121328	1838563	1838562	1837883		† 813044	† 827234	† "				
1837567	1835642	114991	802760	802818	114935		"	813045	"				
1837615	1837616	"	"	"			"	"	"				
1837917	1837918	"	"	1917597	132753		† "	† 813045	† "				† 815095
1838004	1838005	"	"	802818			† "	† "	† "				
1838060	1838074	121328	1838563	"	1837883		† "	† 827234	† "				
1838144	815094	114991	802760	1838562									† 815095
1838517	1838561	121328	1838563	"			1838564	1838565	1838566				
1838526	1838527	"	"	"									
1838617	1838618	114991	802760	802818									
1838902	1835624	"	"	"			† 813044	† 813045	† 813046				† 822656
1838992	822655	"	"	"									
1839063	1839434	"	"	"	114768								
1839120	1839119	"	"	"	114935		1839126	813045	813046				
1839351	‡1838902	"	"	"			813044	"	"				
1839449	1839460	"	"	"	114763		"	"	"				
1839810	1839811	"	"	"	1837883		† "	† 827234	† "				
1839907	826702	"	"	"			† "	† 813045	† "				
1840068	"	"	"	"			"	"	"				
1840212	1840228	"	"	"			†1840210	† 827234	† "				
1840213	1840289	121328	829523	829522			†1840211	† "	† 829520				
1840596	1840595	114991	802760	802818			813044	813045	813046				
1840612	1840613	"	"	"			† "	† "	† "				
1840643	1840644	"	"	"			† "	† "	† "				
1840747	1840775	"	"	"	132753		35483	35498	21168				
1840757	1840755	"	"	"			813044	813045	813046				
1840967	1840968	"	"	1917597			† 123454	† 141553	† 834560				† 822656
1840992	1841003	"	"	802818	114935		813044	813045	813046				
1841061	1841169	"	"	"	132755		† "	† "	† "				
1841304	1841305	"	"	"									
1841399	1841600	121328	1838563	1838562									
1841418	1841419	114991	802760	802818									
1841475	1841476	"	"	"									

†Advance Arm Assemblies include all parts listed on same line, except where Hold Down Screws, Springs and Washers are marked †. These parts are shipped separate and are not part of Arm Assembly.
‡1835624 Advance Arm only.

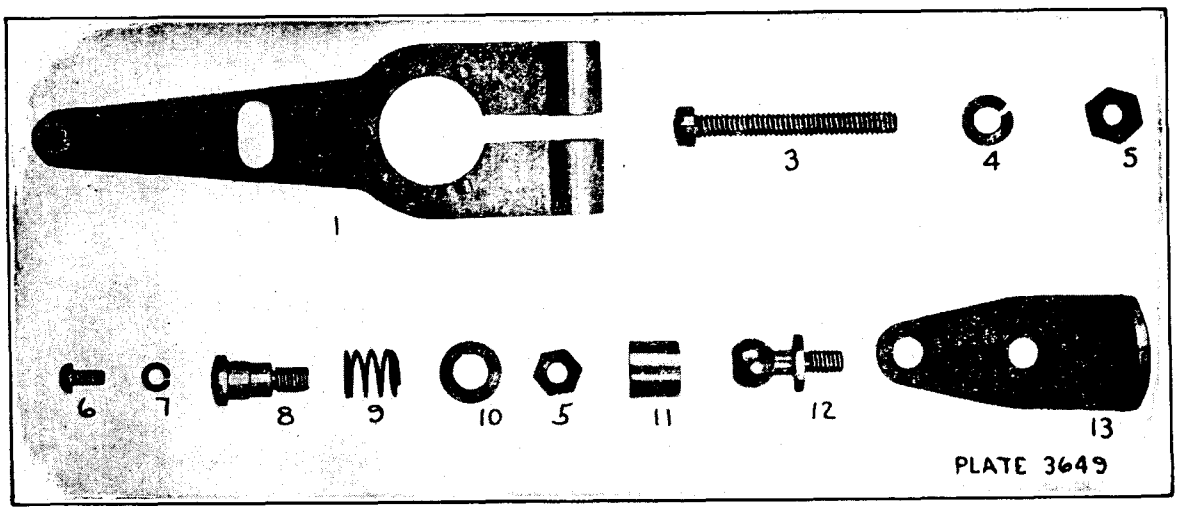

Illustrations are of Typical Parts only, which may vary in detail.

Advance Arm or Hold Down Assemblies †	Advance Arm Only or Hold Down Plate	Advance Arm Clamp Screw	Advance Arm Clamp Screw L. W.	Advance Arm Clamp Screw Nut	Terminal or Wire Control Screw	Advance Arm Wire Control Screw L. W.	Hold Down Screw	Hold Down Screw Spring	Hold Down Screw Washer	Spring Cup	Ball Stud	Bracket or Arm Extension	Clamp Arm Dial or Indicator	
	1	3	4	5	6	7	8	9	10	11	12	13	14	
1841625	1841626	114991	802760	802818	114935									
1841689	1839460	"	"	"	"		813044	813045	813046					
1841834	1841833	"	"	"	"		"	"	"					
1841906	1841907	121328	1838563	1838562	1837883		‡1841905		813046					
1841972	823320	114991	802760	802818			813044	813045	"					
1842350	1842349	"	"	"	132753		"	"	"					
1842379	1835624	"	"	"			"	"	"					
1842588	820617	"	"	"										
1842625	1842628	"	"	"	132753		813044	813045	813046					
1842916	1842917	"	"	"	"		"	"	"					
1842929	1842930	"	"	"			† 35483	† 35498	† 21168					
1842947	1842948	"	"	"			† 813044	† 813045	† 813046					
1843580	1843579	"	"	"										
1843608	813043	"	"	"			813044	813045	813046					
1843966	820617	"	"	"			"	"	"					
1844018	1840755	"	"	"			823785	"	"					
1844225	1844226	"	"	"	114935		813044	"	"					
1844642	1844646	"	"	"	"		"	"	"					
1844643	1844648	"	"	"	"		"	"	"					
1844664	826702	"	"	"										
1844835	1844836	"	"	"			813044	813045	813046					
1844893		"	"	"			"	827234	"					
1845022	1845023	"	"	"			"	813045	"					
1845232	1845233				152753									
1845340	1845339	114991	802760	802818										
1845846	821804	"	"	"			813044	813045	813046					
1847101	1840776	"	"	"			"	"	"					
1847259	817107	"	"	"			1847260	"	"					
1847385	1840776	"	"	"			35483	21168	35498					
1847532	1847533	132268		116004										
1848801	1848802	121328	1835563	1838562										
1850063	1850064	114991	802760	802818										
1850100	1850101	121328	1838563	1838562	114935		813046	813045	813046					
1850133	1837320	"	"	"			1847260	"	"					
1850157	1850158	"	"	"										

†Advance Arm Assemblies include all parts listed on same line, except where Hold Down Screws, Springs and Washers are marked †. These parts are shipped separate and are not part of Arm Assembly.
1845234 Advance Arm Bushing for 1845232 Arm Assembly.

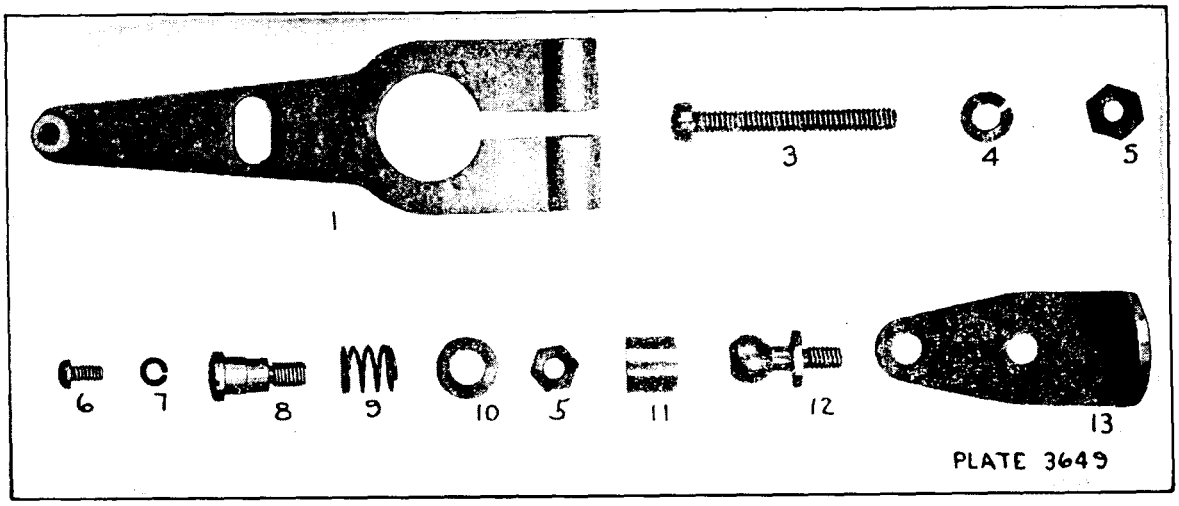

Illustrations are of Typical Parts only, which may vary in detail.

Advance Arm or Hold Down Assemblies †	Advance Arm Only or Hold Down Plate	Advance Arm Clamp Screw	Advance Arm Clamp Screw L. W.	Advance Arm Clamp Screw Nut	Terminal or Wire Control Screw	Advance Arm Wire Control Screw L. W.	Hold Down Screw	Hold Down Screw Spring	Hold Down Screw Washer	Spring Cup	Ball Stud	Bracket or Arm Extension	Clamp Arm Dial or Indicator
	1	3	4	5	6	7	8	9	10	11	12	13	14
1850795	1840775	114991	802760	802818	132753		813044	813045	813046				
1850796	1850101	"	"	"	114935		823785	"	"				
1850797	1850809	"	"	"	132753		813044	"	"				
1850946	1850947	"	"	"	121749		"	"	"				
1853599	1853637	125723		131395			1853638		114604				1853634
1854528	1840613	114991	802760	802818			813044	813045	813046				
1855381	1855382	"	"	"	132753								
1855575	1845339	"	"	"			35483	35498	21168				
1856076	1856077	"	"	1917597			×1867893						
1856380	815094	132291	1856382	124819									
1857232	1841419	114991	802760	802818									
1857587	1857588	121328	1838563	1838562									
1858028	1858029	114991	802760	802818									
1858115	1858116	"	"	"	132753								
1858458	1858461	1858511	"	131395									
1858500	822612	114991	"	802818									
1859098	1859099	125723	"	814162									
1859598	1859599	"	"	"									
1860017	828450	"	"	"	114935		1860424	813045	813046				
1860280	1860343	132286	1838563	1838562									
1861677	1840644	114991	802760	802818									
1862267	*1853637	125723		802818			1853640	1853639	834750				1862265
1862875	1862876	114991	802760	1917597									
1863526	1850809	"	"	802818	132753								
1863169	1863170	121328	1838563	1838562			†823785	†813045	†813046				
1864348	1864506	114991	802760	802818	132753		813044	"	"				
1865524	1865525	132277	814162	1917597									
1865844	823263	114991	802760	802818									
1865929	*1853637	125753		802818			1853640	1853639	834750				1866084
1867754	1867755	114991	802760	802818									

*1854036 Adjusting SCREW—for 1858458–1862267–1865929.
*826958 Adjusting Screw Plain WASHER—for 1862267–1865929.
*114604 Adjusting Screw LOCK WASHER—for 1858458–1862267–1865929.
820635 Wire Control POST—for 1869287.
813016 Wire Control Post WASHER—for 1869287.
1872057 Wire Control Post WASHER—$\frac{5}{32}$x$\frac{1}{2}$ O.D.—for 1872057.
†Advance Arm Assembly includes all parts listed on same line, except where hold down screws, springs and washers are marked †. These parts are shipped separate.
×802818 Hold Down Screw Nut.
802760 Hold Down Screw Lock Washer.

(over)

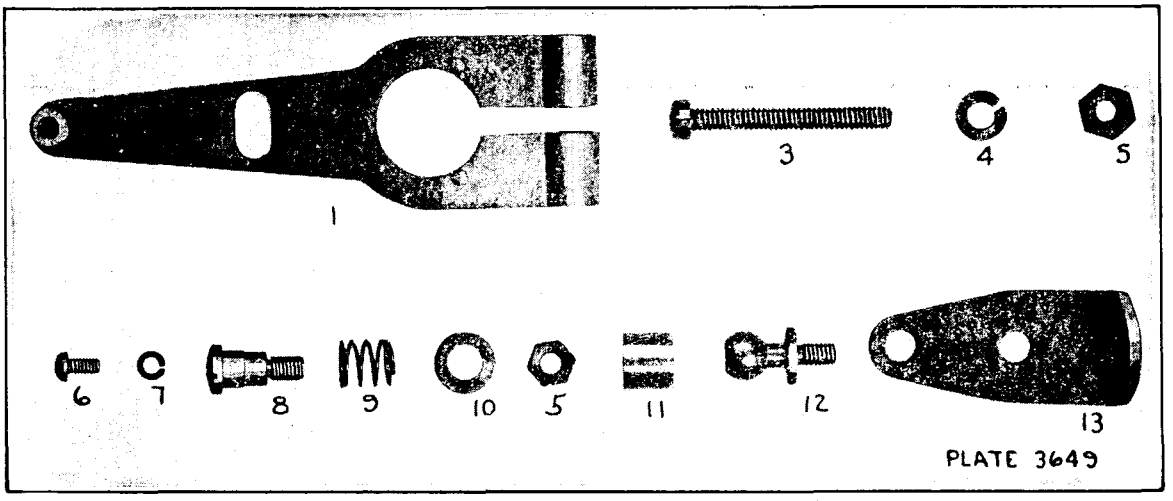

Illustrations are of Typical Parts only, which may vary in detail.

†Advance Arm or Hold Down Assemblies	Advance Arm Only or Hold Down Plate	Clamp Screw	Clamp Screw Washer	Clamp Screw Nut	Terminal or Wire Control Screw	Advance Arm Wire Control Screw L. W.	Hold Down Screw	Hold Down Screw Spring	Hold Down Screw Washer	Spring Cup	Ball Stud	Bracket or Arm Extension	Clamp Arm Dial or Indicator
	1	3	4	5	6	7	8	9	10	11	12	13	14
1868044	1868045	114991	802760	802818			813044	813045	813046				
1868176		"	"	"			"	"	"				815095
1868260	1868261	"	"	"									
1868281	1868282	125723	814162	115978									
1868870	1868871	132277	"	1917597									
1869287	1869288	114991	802760	802818	132753		823785	813045	813046				
1869330	1845339	"	"	"									
1869536	1859597	121328	"	1838562	121749		1847260	813045	813046				
1871734	1871743	114991	"	802818			813044	"	"				
1872845	1838618	121328	"	1838562									
1873331	1873332	132277	814162	115978									
1873507		114991	802760	802818									
1874261	1874262	"	"	"									
1874810	1874811	"	"	"									
1877947	1877948	"	"	"									
1880199	1867755	"	"	"			1867893		* 834560				
1880443	1880444	"	"	"	122159		1880453	1880294	820578				
1881756	1881757	132277	814162	115978									
1883057	1883058	114991	802760	802818									
1883493	1883494	"	"	"									
1884031	1884032	132143		120611									
1885650		114991	802760	802818									
1885656		"	"	"									
1886392	1886393	106692	○	1886395									
1886656	□1886657	114991	802760	802818	□ 121832		813044	813045	813046				
1887445		"	"	"									
1907910		132294	"	1917597									
1911522		114991	"	802818									
1912433		121328	1874495	1838562									
1913873		175169	802760	1917597									
1914530		132277	814162	"									
1917898		121328	1874495	1838562			120854		△ 815920				
1920535		175169	"	1917597									
1923135		"		"									
1923137		"		"									
1927476		114991	1874495	453848			813044	813045	1927517				
1934351		175170	"	131395									
1947919		114991	"	453848									
1948505		132277		1865181									

†Advance Arm Assembly includes all parts listed on same line, except where hold down screws, springs and washers are marked †. These parts are shipped separate.
*Hold Down Screw LOCK WASHER—103319.
Wire Control POST (Swivel)—826634—for 1880443.
Wire Control Post WASHER—813016—for 1880443.
□Use Control Wire Post—820635; Control Wire Post Washer—813016.
△802818 Hold Down Screw Nut; 121637 Lock Washer.
○1844249 Plain Washer.

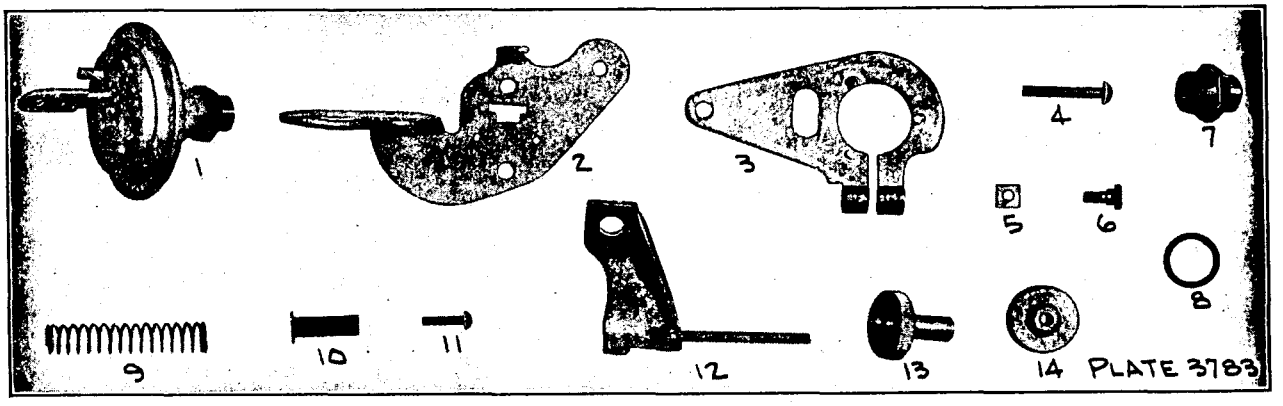

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	Vacuum Control less Bracket	Bracket	Clamp Arm Only	Clamp Screw	Clamp Screw Nut	Clamp Arm to Control Rod Screw	Coupling	Coupling Gasket	Diaphragm Spring	Spring Guide	Wire Control Screw	Manual Adjusting Indicator	Indicator Nut Outside	Indicator Nut Inner
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
681-A	1862706	1858640					1841900	1841901	1864053					
681-B	1863092	1855392					"	"	"					
681-C	1871542	1863523	1863517	132286	1917597	1863521	"	"	1864237					
681-D	1863518	1863524	"	"	"	"	"	"	1862341					
681-E	1864332	1857725	1857724	114991	"	1847272	"	"	1864208			1857726		
681-F	1865150	1865155	1865154	132277	1865181	1865159	1865961	"	1865654			1865158	1847660	1847660
681-G	1865600	1863523	1863517	132286	1917597	1863521	1841900	"	1907774					
681-H							1865961	"	1907722					
681-K							1865656	"	1866036					
681-L							"	"	1866071					
681-M							"	"	1907723					
681-N							1866166	"	1866160					
681-P							1865656	"	1864053					
681-R							"	"	1865960					
681-S	1866952	1853651	1841944	114991	802818	1865159	"	"	1866955					
681-T	1869482	1865155	1865154	132277	1865181	1865159	1865961	"	1855535			1865158	1847600	1847660
681-U							1841900	"	"					
681-V							1865656	"	1873915					
681-W							1866166	"	1871568					

MINOR PARTS SECTION

Name	Part No.	Used on Models
Clamp Screw LOCK WASHER	802760	681-C
Clamp Screw LOCK WASHER	1869533	681-F-T
Clamp Screw Plain WASHER	834560	681-D-E-G
Clamp Arm to Control Rod Screw NUT	5024654	681-C-D-E-F-G-S-T
Clamp Arm to Control Rod Screw LOCK WASHER	106497	681-C-D-E-F-G-S-T
Clamp Arm to Control Rod Screw Spring WASHER	1863522	681-C-D-G
Hold Down SCREW	1857727	681-E
Hold Down SPRING	1847668	681-E
Hold Down Screw WASHER—⅞" O.D.	1857728	681-E
Hold Down Screw WASHER—1½" O.D.	1857729	681-E
Hold Down Screw LOCK WASHER	115547	681-E
Manual Adjusting Nut LOCK WASHER	114603	681-F-T
Mounting Bracket NUT	5024654	681-A-B-C-D-E-F-G-S-T
Mounting Bracket Nut LOCK WASHER	106497	681-A-B-C-D-E-F-G-S-T
×Range STOP	1871610	681-C

×Range Stop should be supplied by Graham Paige, their number—B 85423.

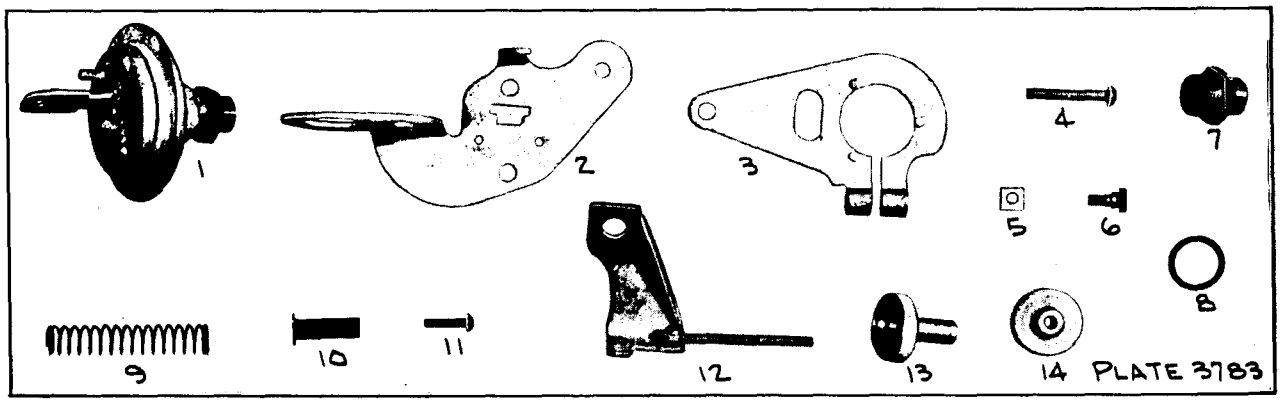

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Model No.	* Vacuum Control	Bracket	Clamp Arm	Clamp Screw	Clamp Screw Nut	Clamp Arm to Control Rod Screw	Coupling	Coupling Gasket	Diaphragm Spring	Spring Guide	Wire Control Screw	Manual Adjusting Indicator	Indicator Nut Outside	Indicator Nut Inner
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1116001	1866952	1857574	1841944	114991	802818	1865159	1865656	1841901	1866955					
1116002	1863518	1863523	1863517	132286	1917597	1863521	1841900	"	1862341					
1116003	1872022	"	1872242	"	"	"	"	"	1864237					
1116004	1872211	1857725	1857724	114991	"	1847272	1865656	"	1907721			1857726		
1116005							1866166	"	1873934					
1116006	1865600	1863523	1872242	132290	131395	1863521	1841900	"	1907774					
1116007							1865656	"	1872520					
1116008							1866166	"	1866160					
1116009	1872825	1865155	1865154	132277	1865181	1865159	"	"	1865654			1865158	1847660	1847660
1116010	1872927	"	"	"	"	"	"	"	1855535			"	"	"
1116011	*1873365	1886200	1873369	"	"	"	"	"	1873551					
1116012							"	"	1873934					
1116013							1865656	"	1873915					
1116014							1866166	"	1907723					
1116015	1877541	1874615	1874617	132290	1917597	1865159	"	"	1866955					
1116017	1866952	1853651	1841944	114991	802818	"	1865656	"	"					
1116018	1844843	1844844	1844846	132290	1917597	1863521	1841900	"	1841898					
1116019						"	1865656	"	1866955					
1116020							"	"	1881049					
1116021							1866166	"	1880197					
1116022							"	"	1858639					
1116023	1909340	1886200	1873369	132243	1865181	1865159	"	"	1866955					
1116024							"	"	1881194					
1116025	1909340	1886200	1873369	177933	1865181	1865159	"	"	1881667					
1116026	*1881774	"	"	"	"	"	"	"	1881777					
1116027	1866952	1882440	1841944	114991	802818	1865159	1865656	"	1866955					
1116028	1882538	1882541					"	"	1865960					
1116029	1882561	1882569	1882567	114991	802818	1865159	"	"	1882568					
1116030							1883027	"	1881049					
1116031							1885042	"	1907365					
1116032							1866166	"	"					
1116033	*1881774	*1886200	1873369	132277	1865181	1865159	"	"	1881777					
1116034	1886217	1882541					1865656	"	1886243					
1116035							1883027	"	1886291					
1116036							"	"	1886565					
1116037	1855946	1887613	1844846	132290	1917597	1863521	1841900	"	1862341					
1116039							1883027	"	1864237					
1116041							1865656	"	1907722					
1116042							"	"	1873915					
1116043	*1888197	*1886200	1873369	177933	1865181	1865159	1883027	"	1881777					
1116044							"	"	1911463					

*Late production units have bracket welded to Vacuum Assembly and are not serviced separately.

Delco-Remy

SERVICE PARTS CATALOG

Model No.	* Vacuum Control	Bracket	Clamp Arm	Clamp Screw	Clamp Screw Nut	Clamp Arm to Control Rod Screw	Coupling	Coupling Gasket	Diaphragm Spring	Spring Guide	Wire Control Screw	Manual Adjusting Indicator	Indicator Nut Outside	Indicator Nut Inner
	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1116045	1911477	1882569	1882567	453660	802818	1924452	1883027	1841901	1911464					
1116046							1865961	"	1907722					
1116047							1883027	"	1921119					
1116048							"	"	1912560					
1116049	1912733	1857725	1912736	453660	1917597	1847272	1865656	"	1912719			1857726		
1116050							1866166	"	1880197					
1116051							1865656	"	1907723					
1116052							1883027	"	1913885					
1116053							"	"	1864237					
1116054							"	"	1915562					
1116055							"	"	1916390					
1116056							"	"	1921119					
1116057							"	"	1907722					
1116058							"	"	1931564					
1116059							"	"	1917874					
1116060							"	"	1853691					
1116061	1918889		1918888	132277	1865181		"	"	1881777					
1116063							"	"	1923115					
1116064							"	"	1923121					
1116065							1865961	"	1923159					
1116066							1883027	"	1923142					
1116067							"	"	1911463					
1116068							1865961	"	1924891					
1116069							1883027	"	1911464					
1116070							"	"	1925203					
1116072	1924505	1882569	1882567	453660	802818	1924452	"	"	1924498					
1116073							1865961	"	1924968					
1116074														
1116076	1925518		1918888				1883027	1841901	1925529					
1116077							1865656	"	1926115					
1116079							1866166	"	"					
1116080							"	"	1929475					
1116082							1883027	"	1915562					
1116083							1865961	"	1930435					
1116084							1883027	"	1927928					
1116087							"	"	1928436					
1116088	1928580	1857725	1912736	453660	1917597	1847272	"	"	1912719			1857726		
1116089	1929109		1929107	1955423	1865181		"	"	1925529					
1116090							1865961	"	1921119					
1116092							1883027	"	1911463					
1116093							"	"	1931105					
1116095							1865656	"	"					
1116099							1883027	"	1933570					
1116101							1865656	"	1934456					
1116102	1934384		1873369	132277	1865181	1866166	"	"	1881667					
1116105						1883027	"	"	1935430					
1116112							"	"	1930435					
1116116							"	"	"					
1116119	*1938153		1929107				1883027	1841901	1923121					
1116121							"	"	1938236					
1116138							"	1926250	1935430					
1116140	1942564		1918888	1955423	1865181		"	1841901	1925529					
1116143	1943452		1929107	"	1865181		"	"	"					
1116145							"	"	1934456					
1116166	1950285		1948505											
1116168														
1116174	1950285		1950283			1924452								
1116214	1961825		"			"								
1998867							1883027	1841901						
1998875														

*Late production units have bracket welded to Vacuum Assembly and are not serviced separately.

MINOR PARTS SECTION

Name	Part No.	Used on Models
Clamp Screw LOCK WASHER	1874495	1116001-4-6-15-17-27-29-45-49-72
Clamp Screw LOCK WASHER	1869533	1116009-10-11-23-25-26-33-43
Clamp Screw Plain WASHER	834560	1116002-3-18-37
Clamp Arm to Control Rod Screw NUT	5024654	1116001-2-3-4-6-9-10-11-15-17-18-23-25-26-27-29-33-37-43-45-49-72-88; 214
Clamp Arm to Control Rod Screw LOCK WASHER	453296	1116001-2-3-4-6-9-10-11-17-18-23-25-26-27-29-33-37-43-45-49-72-88; 174; 214
Clamp Arm to Control Rod Screw Spring WASHER	1863522	1116002-3-6-15-17-18-19
Clamp Arm to Control Rod Screw Spring WASHER	1948287	1116166; 74; 214
Hold Down SCREW	1857727	1116004-49-88
Hold Down SPRING	1847668	1116004-49-88
Hold Down SPRING	1873373	1116011-23-25-26
Hold Down Screw WASHER—⅞ O.D.	1857728	1116004-49-88
Hold Down Screw WASHER—½ O.D.	1857729	1116004-49-88
Hold Down Screw LOCK WASHER	138537	1116004-49-88
Hold Down Spring WASHER	1873936	1116011-23-25-26
LEAD—Mounting Bracket to Clamp Arm	1883391	1116027-29-45-72
LEAD—Mounting Bracket to Clamp Arm	1887614	1116037
LINK—Connector	1949734	1998875
LOCK WASHER—Lead Attaching Screw (To Bracket)	453299	1116037
Manual Adjusting Nut LOCK WASHER	114603	1116009-10
Mounting Bracket NUT	5024654	1116001-2-3-4-6-9-10-11-15-17-18-19-23-25-26-27-28-29-33-34-37-43-49-72-88; 174
Mounting Bracket Nut LOCK WASHER	453296	1116001-2-3-4-6-9-10-11-15-17-18-19-23-25-26-27-28-29-33-34-37-43-49-72-88
SCREW—Connector Link Attaching	1943215	1998875
SCREW—Lead Attaching (To Bracket)	453647	1116037
SLEEVE—Connector	1947985	1116168

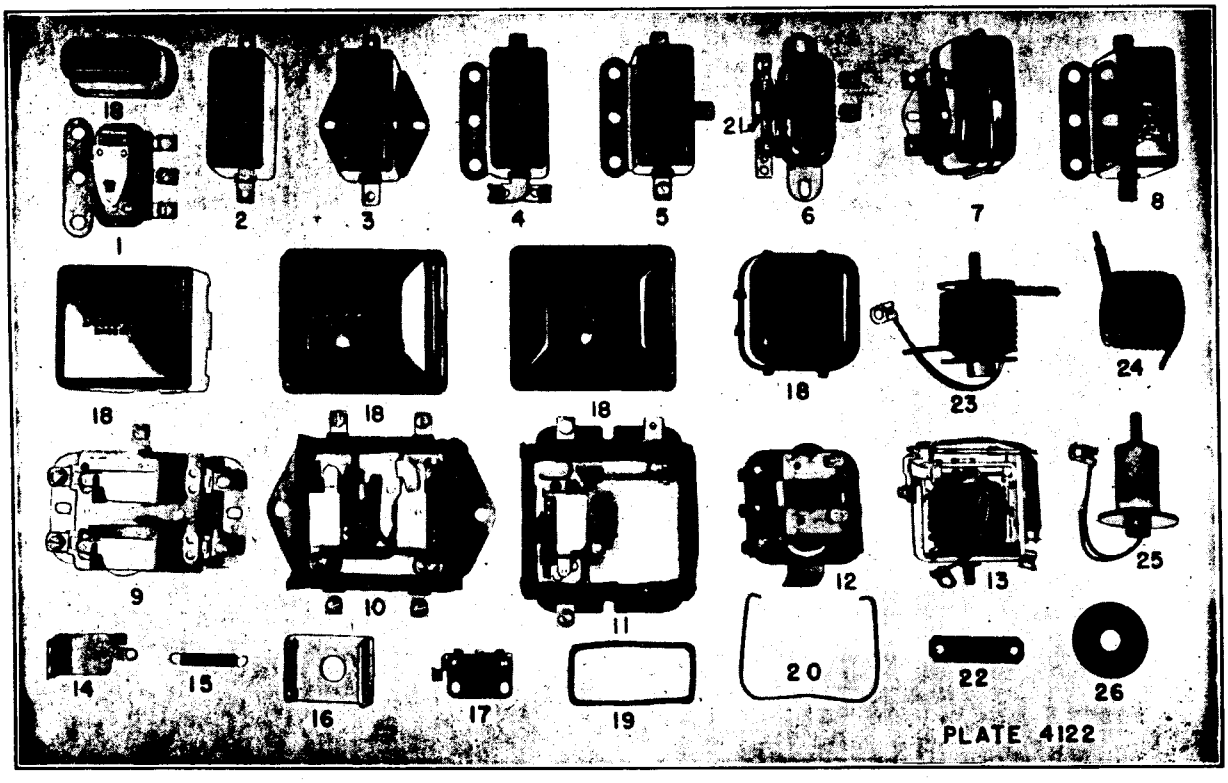

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Relay Models	Illus. No.	Relay Models	Illus. No.	Relay Models	Illus. No.	Relay Models	Illus. No.	Relay Models	Illus. No.	Relay Models	Illus. No.	Relay Models	Ill N
1115801	.....	1116758	5	1116789	6	1116824	4	1116882	4	1116943	.....		
1115802	.....	1116759	1	1116790	6	1116825	4	1116885	5	1116944	6		
1115807	5	1116760	4	1116791	8	1116826	5	1116886	5	1116945	6		
1115810	.....	1116761	2	1116792	1	1116827	10	1116887	10	1116952	1		
1115811	.....	1116762	5	1116793	4	1116830	5	1116892	6	1116953	1		
1115814	.....	1116763	1	1116794	1	1116833	7	1116894	11	1116954	1		
1115818	.....	1116764	4	1116795	7	1116835	4–5	1116895	6	1116955	18		
1115821	.....	1116765	5	1116796	7	1116839	4–5	1116896	6	1116956	1		
1115822	.....	1116766	11	1116797	4	1116840	10	1116897	6	1116957	7		
1115824	.....	1116766 A	11	1116798	10	1116844	10	1116898	11	1116959	1		
1115827	10	1116777 A	11	1116799	4	1116845	5	1116899	10	1116960	1		
1115831	10	1116807 A	11	1116800	1	1116846	.....	1116900	.....	1116962	1		
1115832	.....	1116808 A	11	1116801	10	1116847	5	1116901	4	1116963	1		
1115834	7	1116767	7	1116802	10	1116848	.....	1116902	10	1116964	1		
1115836	6	1116768	7	1116803	.....	1116849	10	1116903	6	1116966	.....		
1115837	.....	1116769	5	1116804	.....	1116850	5	1116904	6	1116967	1		
1115840	.....	1116770	4	1116805	4	1116851	5	1116905	7	1116969	1		
1115841	.....	1116771	4	1116806	5	1116852	5	1116911	5	1116971	1		
1115842	.....	1116772	11	1116807	11	1116855	1	1116912	11	1116972	.....		
1115843	.....	1116773	7	1116808	11	1116859	7	1116913	1	1116975	4		
1115848	.....	1116774	5	1116809	7	1116860	10	1116914	11	1116977	.....		
1115860	.....	1116775	1	1116810	7	1116864	1	1116915	11	1116978	.....		
1115862	.....	1116776	5	1116811	11	1116865	1	1116920	1	1116980	.....		
1115880	.....	1116777	11	1116812	5	1116866	10	1116921	1	1116981	10		
1115888	1	1116778	1	1116813	7	1116867	7	1116924	10	1116983	10		
1115889	.....	1116779	1	1116814	7	1116868	7	1116926	6	1116984	.....		
1115890	.....	1116780	1	1116816	7	1116869	7	1116927	5	1116987	.....		
1116751	2	1116781	1	1116817	4	1116872	7	1116931	10	1116989	.....		
1116752	4	1116782	9	1116818	5	1116875	5	1116933	1	1116990	.....		
1116753	7	1116783	9	1116819	5	1116876	1	1116937	1	1116992	.....		
1116754	4	1116784	13	1116820	7	1116877	7	1116938	6	1116993	.....		
1116755	3	1116785	12	1116821	1	1116878	1	1116939	6	1116994	.....		
1116756	1	1116786	5	1116822	5								
1116757	7	1116787	8	1116823	10	1116879	1	1116940	7	1116996	.....		
						1116881	4	1116942	1	1116999	.....		

NOTE: Most screws, bolts, nuts, lock washers, woodruff keys, and cotter pins are Standard Hardware items and are not available from Delco-Remy. Refer to Standard Hardware sheets in catalog miscellaneous section for dimensions and description.

Illus. No.	Name	Part No.	Used on Models
	LOCK WASHERS		
—	Lock Washer—Armature Attaching Screw	453844	1116766; 72-7; 84; 1116808-11
—	Lock Washer—Armature Attaching Screw	456413	1116846-8; 900
—	Lock Washer—Armature Attaching Screw	1914816	1116971
—	Lock Washer—Armature Attaching Screw	1924764	1116766-A; 77-A; 807-A-808-A
—	Lock Washer—Armature Adjustment Locking Screw	453844	1116784; 1116811
—	Lock Washer—Armature Support Screw	456413	1116846-8; 900
—	Lock Washer—Coil Attaching Stud	35977	5781
—	Lock Washer—Connector Stud Nut	9421423	1116811
—	Lock Washer—Contact Bracket Screw	453844	1116784; 1116811; 46-8; 900
—	Lock Washer—Contact Screw—To Base	9421424	1116900
—	Lock Washer—Cover Nut	114603	1116811
—	Lock Washer—Cover Screw	1914816	1116809-14-16; 59; 67-8-9; 77; 905; 40; 57; 71-8; 96-9
—	Lock Washer—Ignition Terminal Screw	1946143	5781
—	Lock Washer—Plain—Clamp	453435	1116943
—	Lock Washer—Relay Lead Ground Screw	453435	1116811
—	Lock Washer—Relay Mounting Nut	9421423	1116784; 1116811
—	Lock Washer—Relay Lead Screw	453435	1116811
—	Lock Washer—Resistance Attaching Screw	456413	1116766; 77; 1116807-8
—	Lock Washer—Terminal Nut	456413	1116900
—	Lock Washer—Terminal Nut (Shakeproof)	178349	1116900
—	Lock Washer—No. 8 Terminal Screw	453844	Where needed
—	Lock Washer—No. 10 Terminal Screw	453435	1116811
—	Lock Washer—Terminal Screw	453844	1116927; 75
—	Lock Washer—Winding Attaching Nut	9421423	1116846-8; 900
	NUTS		
—	Nut—Clamp—Screw	453433	1116943
—	Nut—Coil Attaching Stud	24619	5781
—	Nut—Connector Stud	29991	1116811
—	Nut—Cover Attaching	1923540	1116811
—	Nut—Ignition Terminal Screw	120622	5781
—	Nut—Relay Mounting	29991	1116784; 1116811
—	Nut—Terminal Screw	29864	5781
—	Nut—Terminal Screw	134530	1116900
—	Nut—Terminal Stud	1900468	1116846-8
—	Nut—Winding Attaching	29991	1116846-8; 900
	SCREWS & STUDS		
—	Screw—Armature Attaching	1904818	1116766; 77; 1116808
—	Screw—Armature Attaching	454329	1116772
—	Screw—Armature Attaching	1916016	1116784; 1116811
—	Screw—Armature Attaching	1924764	1115840; 1116766-A; 77-A; 807-A-808-A; 80
—	Screw (& Bumper)—Armature Attaching	1850695	1116811
—	Screw—Armature Attaching	435884	1116846-8; 900
—	Screw—Armature Attaching	453460	1116971
—	Screw—Armature Adjusting	1912159	1115840; 1116766-A; 77-A; 807-A-808-A; 80
—	Screw—Armature Adjusting	1944590	1116900; 24; 78; 99
—	Screw—Armature Adjustment Lock	1916016	1116784; 1116811
—	Screw—Armature Support Attaching	454458	1116846-8; 900
—	Screw—Clamp—Attaching	37872	1116943
—	Screw—Contact Attaching	453357	1116846-8; 900
—	Screw—Contact Attaching	1943854	1116999
—	Screw—Contact Attaching—To Base	435655	1116900
—	Screw—Contact Bracket Attaching	22820	1116784; 1116811
—	Screw—Contact Support Attaching	1878516	1116924; 78
—	Screw (& Bumper)—Contact Bracket Attaching	1850695	1116811
—	Screw—Cover	1943386	1116809-14-16; 33; 59; 67-8-9; 77; 905; 940; 57; 71-8; 96-9
—	Screw—Cover	1922087	1115810; 22; 31-2; 1116766; 72-7; 98; 1116801-2-7-8; 23-7; 40-4-9; 60-6; 87; 94-8-9; 902; 12-14-15; 24; 31; 55; 81-3
—	Screw—Cover	1931886	1116943
—	Screw—Cover	1927982	1115840; 80
—	Screw—Ignition Terminal	822205	5781
—	Screw—Relay Ground Lead Attaching	453319	1116811
—	Screw—Relay Series Lead	115328	1116811
—	Screw—Resistance Attaching	453460	1116766; 77; 1116807-8
—	Screw—Terminal	453418	All except 5781- 1115821-4; 34; ; 1116811; 49; 50-1-2; 1116924-7; 31-3; 42; 64-7-9; 71-5-8; 81-3-4-9; 93-4-6

Illus. No.	Name	Part No.	Used on Models
	SCREWS & STUDS—Continued		
—	Screw—Terminal	30362	5781
—	Screw—Terminal	453319	1116811
—	Screw—Terminal	9413245	1116900
—	Screw—Terminal	1914800	1115824; 37; 62; 89–90
—	Stud—Coil Attaching	35959	5781
—	Stud—Connector	1858390	1116811
—	Stud—Terminal	1900467	1116846–8
	WASHERS		
—	Washer—Armature Attaching Screw—Inner	813157	1116766; 72–7; 1116808
—	Washer—Armature Attaching Screw—Outer	813170	1116766; 72–7; 1116808
—	Washer—Armature Adjustment Screw	810794	1116784; 1116811
—	Washer—Contact Bracket Screw	810794	1116784; 1116811
—	Washer—Cover Screw	1922996	1116766–A; 77–A; 807–A; 808–A; 924
—	Washer—Cover Screw	1938522	1116943
—	Washer—Insulating—Contact Attaching Screw	1922996	1116999
—	Washer—Insulating—Contact Support	1878507	1116924; 78
—	Washer—Insulating—Cover Screw	1865616	1116766; 72–7; 98; 1116801–2–7–8; 23–7
—	Washer—Insulating—Cover Screw	1910297	1115810; 22; 1116840–4–9; 60–6; 94–7–8–9; 902; 12–4–5; 31; 55; 81–3
—	Washer—Ins. Cover Screw	1935031	1115840; 80
—	Washer—Insulating—Ignition Terminal Screw	1860294	5781
—	Washer—Plain—Armature Attaching Screw	1918848	1116846–8; 900
—	Washer—Plain—Armature Support Attaching Screw	1900821	1116846–8; 900
—	Washer—Plain—Clamp Screw	807295	1116943
—	Washer—Plain—Contact Attaching Screw	815540	1116846–8; 900
—	Washer—Plain—Contact Support Screw	1878505	1116924; 78
—	Washer—Plain—Cover Screw	1914476	1115810; 22; 31–2; 1116840–4; 97–9; 902; 31; 55; 83
—	Washer—Plain—Cover Screw	815540	1116849; 60–6; 94–8; 912–14–15; 81
—	Washer—Plain—Ignition Terminal Screw	815540	5781
—	Washer—Relay Series Lead Screw	1918130	1116811
	MISCELLANEOUS		
14	ARMATURE (& Frame)	16476	5781
14	ARMATURE	1861259	1116772
14	ARMATURE	1869662	1116766; 77; 1116808
14	ARMATURE	1839042	1116784; 1116811
14	ARMATURE	1931974	1116846–8
14	ARMATURE	1911461	1116852
14	ARMATURE	1914269	1116900
—	ARMATURE	1939646	1116766–A; 77–A; 807–A–808–A
14	ARMATURE	1944709	1116971
14	ARMATURE	1967653	1115840; 80
—	BASE	1860290	5781
—	BASE	1858383	1116811
—	BASE	1900442	1115807
15	SPRING—Armature	1916982	1116784; 1116811
15	SPRING—Armature	37339	5781
15	SPRING—Armature	35987	1116846; 900
15	SPRING—Armature	1911401	1116924
15	SPRING—Armature	1882595	1116978
15	SPRING—Armature	1912176	1116999
15	SPRING—Armature	1939620	1116846–8; 900
16	BRACKET—Armature Stop	1916013	1116784; 1116811
—	BUSHING—Ignition Terminal Screw	816863	5781
—	BUSHING—Insulating—Contact Attaching Screw	1900464	1116846–8; 900
—	BRACKET—Mounting Package	1913064	1115840; 80
20	CLAMP—Cover	1859787	1116753–7; 67–8; 73; 95–6; 1116813; 20
—	CLAMP—Nylon	1941828	1116943
—	CLIP—Ignition Terminal Lead	200030	5781
—	CLIP—Terminal Lock Screw	1878503	1115824; 37; 62; 88–9; 90
—	CLIP—Terminal Screw Lock	31656	5781
—	CLIP—Terminal Screw Lock	1868137	1115801–2; 10–14–18; 22; 31–2–4; 40–1–2–3–8; 80; 1116769; 72; 801–2; 16; 23; 36; 40–4–7–9; 55; 60–5–6–8–9; 72–6–7–9; 81–2–6–7; 92–4–5–6–7–8–9; 902–3–4–5; 11–12–14–15; 21–4; 31–3; 40–2; 54–5–7; 60–2–3–4–7–9; 71–8; 81–3–4–9; 93–4–6–9
—	CLIP—Terminal Screw Lock	1855978	1116756–9; 63–7; 75–8–9; 80–1–9; 90–2–3; 1116800; 21–2; 64; 913
—	CLIP—Terminal Screw Lock	34240	1116767–8; 73; 95
17	CONTACT (& Support)	1839044	1116784; 1116811
17	CONTACT (& Support)	1911459	1116852
17	CONTACT (& Support)	1925605	1116924

Illus. No.	Name	Part No.	Used on Models
	MISCELLANEOUS—Continued		
17	CONTACT (& Support)	1878517	1116978
—	CONTACT (& Support)	1951033	1116999
—	CONTACT (& Support)—L.H.	1908889	1116846–8
—	CONTACT (& Support)—L.H.	1912316	1116900
—	CONTACT (& Support)—R.H.	1908890	1116846–8
—	CONTACT (& Support)—R.H.	1912313	1116900
—	CONTACT—Stationary Support	1939632	1116766–A; 77–A; 807–A–808–A
18	COVER	1858143	5781
18	COVER	813171	1116751
18	COVER	1855759	1116752; 60
18	COVER	1859786	1116753–7; 67–8; 73; 95–6; 1116813; 20
18	COVER	1850468	1116754; 64; 70; 93–7–9; 1116805–12; 24–5; 35–9; 45; 52; 927
18	COVER	813158	1116755–8; 61; 87–8; 91
18	COVER	1865384	1116756–9; 63
18	COVER	1872528	1116751
18	COVER	1835822	1116762–9; 76; 1116818–19; 22–6; 47; 50
18	COVER	1865603	1115810; 22; 1116766; 72–7; 98; 801–2–7–8; 23–7; 40–4–9; 60–6; 87; 94–8–9; 902; 12–14–15; 24; 31; 55; 81–3
18	COVER	1855759	1116771
18	COVER	1874129	1116774
18	COVER	1874297	1115811; 24; 1116775; 81; 92–4; 1116800; 21; 64; 990
18	COVER	1874375	1116778
18	COVER	1943567	1115814
18	COVER	1874377	1116779
18	COVER	1874646	1116780
18	COVER	1848740	1116782–3
18	COVER	1877619	1116785
18	COVER	1877669	1116786
18	COVER	1878024	1116789; 920; 37; 52–6–9
18	COVER	1878036	1116790
18	COVER	1881250	1116809–10–14–16; 33; 59; 67–8–9; 72–7; 905; 40; 57; 71–8; 96
18	COVER	1845630	1116811
18	COVER	1889529	1116830
18	COVER	1913581	1115807–27; 1116926; 38;9; 44–5; 53; 72–7; 87; 92
18	COVER	1931886	1116943
18	COVER	1944696	1115821; 1116980
18	COVER	1951024	1116999
19	GASKET—Cover	1871836	1116753–7; 67–8; 73; 1116813
19	GASKET—Cover	1871636	1115810; 22; 31–2; 1116766–A; 77–A; 801–2–7–A–8–A; 23–7; 49; 60–6; 94–8; 902; 12–14–15; 24; 31; 55; 81–3
19	GASKET—Cover	1881251	1116809–10–14–16; 33; 59; 67–8–9; 72–7; 905; 40; 57; 71–8; 96–9
19	GASKET—Cover	1904642	1115831–2; 1116846–8; 87–9
19	GASKET—Cover	1913579	1115807; 1116926; 38–9; 44; 92
19	GASKET—Cover	1953902	1115840; 80
—	GASKET—Rubber—Cover Screw	1910297	1115832
—	INSULATOR—Contact Attaching Screw	1939659	1116999
—	INSULATOR—Contact Support	1900463	1116840–4; 900
—	INSULATOR—Contact Support Screw	1922599	1116924; 78
21	FUSE	147686	1116789; 90
26	INSULATOR—Winding	37330	1116784
26	RELAY only	1858387	1116811
22	RESISTANCE	1872012	1116777; 1116808
22	RESISTANCE	1871890	1116766; 1116807
22	RESISTANCE	1910175	1116894–8; 912–14–15; 81
22	RESISTANCE	1910176	1115832
22	RESISTANCE	1912745	1116924
22	RESISTANCE	1885297	1116933
22	RESISTANCE	1941431	1116999
—	RESISTOR	1962243	1116766–A
—	RESISTOR	1941431	1116777–A
—	RESISTOR	1962529	1116807–A
—	RESISTOR	1941431	1116808–A
—	SUPPORT—Armature	1910684	1116846–8; 900
23	WINDING Assembly	1873814	5781
23	WINDING Assembly	1877567	1116784
23	WINDING Assembly	1858388	1116811
23	WINDING Assembly	1929227	1116900
24	WINDING—Series	1877568	1116784
25	WINDING—Shunt	1872309	1116784
25	WINDING—Shunt	18204	1116811
—	WINDING	1908884	1116846
—	WINDING	1909190	1116848

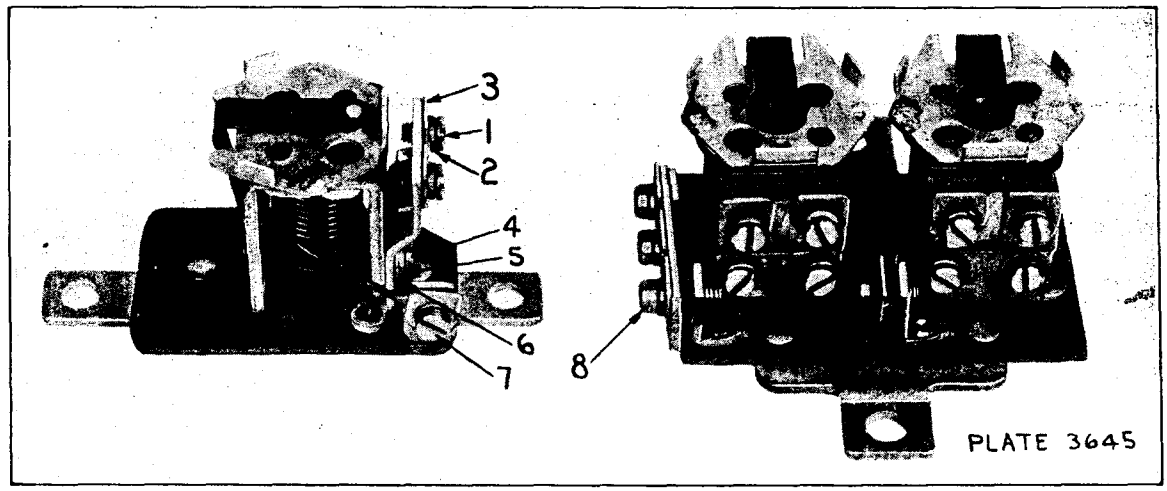

Illustrations are of Typical Parts only which may vary in detail.

Model No.	Circuit Breaker Terminal Screw	Circuit Breaker Terminal Screw Lock Washer	Terminal Clip	Terminal Plate Mounting Screw	Terminal Plate Mounting Screw Lock Washer	Terminal Plate Mounting Screw Plain Washer	Base Terminal Screw (Short)	Base Terminal Screw (Long)	Base Terminal Screw Lock Washer		
	1	2	3	4	5	6	7	8			
410-A	122159	106496	34240	122159	106496	807716	121832	.....	.....		
410-B	"	"	"	"	"	"	"	115419	.....		
410-C	"	"	"	"	"	"	"	.....	.....		
410-D	"	"	"	"	"	"	"	.....	.....		
410-E	"	"	"	"	"	"	"	132753	.....		
410-F	"	"	"	"	"	"	"	.....	.....		
410-G	"	"	"	"	"	"	"	.....	.....		
410-H	"	"	"	.....	.....	26641	"	132753	.....		
410-J	"	"	"	.....	.....	807716	"	.....	.....		
410-K	"	"	"	122159	106496	"	"	.....	.....		
410-L	"	"	"	"	"	"	.....	121832	.....		
410-M	"	"	"	"	"	"	121832	.....	106496		
410-N	"	"	"	"	"	810794	121749	121832	"		
410-R	"	"	"	"	"	"	121832	.....	"		
1997401	"	"	1855978	"	"	"	"	.....	"		

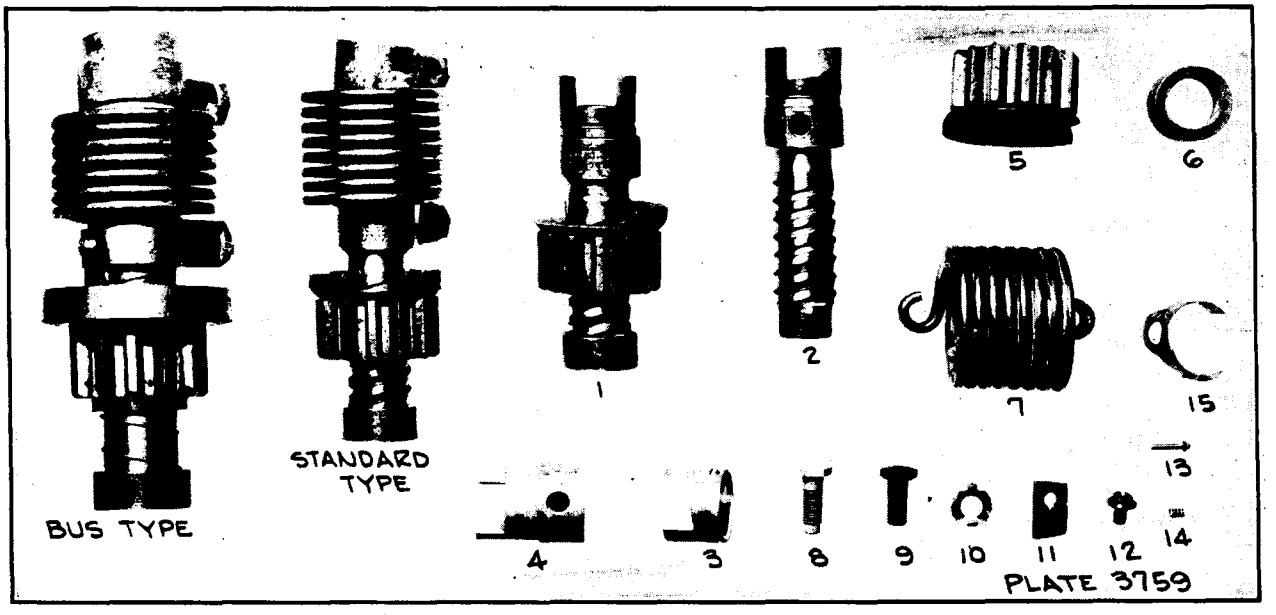

Illustrations are of Typical Parts only, which may vary in detail.

Drive Part No.	Gear and Shaft Assembly	Shaft and Sleeve Assembly	Service Sleeve	Drive Head	Gear	Stop Nut	Drive Spring	Head Spring Bolt or Screw	Shaft Spring Screw	Lock Washer	Back Stop	Back Stop Screw	Retard Pin	Retard Pin Spring	Support
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
□ 12639	811073	*805061	807143	805066	805063	805062	805060	805058	805056	805057	.....	.....	.....	.....	.....
□ 13490	14545	13897	808950	808949	13785	29924	809690	808953	806426	806427	.....	.....	808951	808471	.....
□ 13791	14329	"	"	"	13981	"	809518	810287	810288	"	.....	.....	"	"	811559
16217	16295	.....	"	"	.....	.....	"	"	"	"	.....	.....	"	"	"
18141	37705	.....	1836330	37700	.....	.....	37701	37703	37702	805057	37706	37707	.....	.....	.....
□805970	811072	*805050	807143	807142	805052	805051	805971	805973	805972	"	.....	.....	808470	808471	.....
□807354	811070	*806420	807356	807355	806422	806421	806425	806428	806426	806427	.....	.....	"	"	.....
□807357	811071	*806869	"	"	806868	806884	808952	"	"	"	.....	.....	"	"	.....
□807358	811072	*805050	807143	807142	805052	805051	805055	805058	805056	805057	.....	.....	"	"	.....
□807359	811073	*805061	"	"	805063	805062	805060	"	"	"	.....	.....	"	"	.....
808898	816165	805738	808950	808949	816164	809917	809518	810287	810288	806427	.....	.....	808951	"	811559
808922	811074	810336	"	"	808947	808945	808952	808953	806426	"	.....	.....	"	"	.....
809505	816394	805738	"	"	818413	809917	809518	810287	810288	"	.....	.....	"	"	811559
809506	816395	805737	"	"	808947	808945	808724	"	"	"	.....	.....	"	"	811558
809604	811076	810336	"	"	809918	"	808952	808953	806426	"	.....	.....	"	"	.....
809669	811075	810337	"	"	818413	809917	809690	"	"	"	.....	.....	"	"	.....
809925	811077	"	"	"	809732	"	"	"	"	"	.....	.....	"	"	.....
810274	811078	805737	"	"	810290	808945	809724	810287	810288	"	.....	.....	"	"	811558
810275	811079	805738	"	"	810289	809917	809518	"	"	"	.....	.....	"	"	811559
811194	811080	"	"	"	811195	"	"	"	"	"	.....	.....	"	"	"
813298	811520	811521	1836330	811523	805052	805051	805971	811524	805972	805057	.....	.....	808470	"	.....
813458	815528	805738	808950	808949	818413	809917	809518	810287	810288	806427	.....	.....	808951	815531	811559
815661	816394	"	"	816422	"	"	816424	816423	816425	"	.....	.....	"	808471	"
816393	817148	817150	817147	817146	805052	805051	805971	811524	805972	805057	.....	.....	808470	"	.....
‡817054	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....	.....
818305	818414	805738	808950	808949	818413	809917	809690	808953	806426	806427	.....	.....	808951	808471	.....
826155	827206	"	"	"	"	"	809518	810287	810288	"	.....	.....	"	"	811559
826208	826209	805737	"	"	826210	808945	809724	"	"	"	.....	.....	"	"	811558
826464	38341	.....	1836330	37700	.....	.....	37701	37703	37702	805057	37706	37707	.....	.....	.....
828651	828650	805737	808950	808949	828649	808945	808952	808953	806426	806427	.....	.....	808951	808471	.....
828978	828981	828983	1836329	828975	828982	828980	809724	828977	810288	"	.....	.....	"	"	811558
829969	1946113	.....	1836330	37700	.....	.....	1835846	37703	37702	805057	1937811	37707	.....	.....	.....
834459	811072	*805050	807143	805066	805052	805051	805055	805058	805056	"	.....	.....	808470	808471	.....
1835963	811080	805738	808950	816422	811195	809917	816424	816423	816425	806427	.....	.....	808951	"	811559
1836347	1836348	805737	"	"	1836349	808945	1836123	"	"	"	.....	.....	"	"	811558

*Shaft only.
‡No longer serviced.

□ 29925 Pin used on 13490 and 13791 Drive.
805059 Bolt Nut on 12639–805970–807358–807359.
806429 Bolt Nut on 807354–807357.

Delco-Remy
SERVICE PARTS CATALOG

Drive Part No.	Gear and Shaft Assembly	Shaft and Sleeve Assembly	Service Sleeve	Drive Head	Gear	Stop Nut	Drive Spring	Head Spring Bolt or Screw	Shaft Spring Screw	Lock Washer	Back Stop	Back Stop Screw	Retard Pin	Retard Pin Spring	Support
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
836541	1836542		808950	808949			809518	810287	810288	806427					811559
837029	1836348	805737	"	"	1836349	808945	809724	"	"	"			808951	808471	811558
837321	1837322	1837326	"	"	1837323	"	"	"	"	"				1837324	"
838097	1838465		817147	1838098			37701	37703	37702	805057	37706	37707			
838654	1839008			808949			809518	810287	810288	806427					811559
839025	816165	805738	808950	816422	816164	809917	816424	816423	816425	"			808951	808471	"
840516	1911603		817147	1838098			37701	37703	37702	805057	37706	37707			
840519	1840520		"	"			1835846	"	"	"	1937811	"			
841377	1841378		1836330	37700			37701	"	"	"	37706	"			
842514	1842527		"	"			1835846	"	"	"	1937811	"			
843424	1843425		808950	808949			809518	810287	810288	806427					811559
844504	1844515		"	"			809690	808958	806426	"					
849596	1850036		1849782	1850037			1850038	1850040	1850039	805057					
850667	1850813		"	1848530			1850812	1850811	1850810	"					
850794	1853008		808950	808949			809518	810287	810288	806427					811559
850844	1853012		1849782	1848530			1850812	1850811	1850810	805057					
850952	1850980		"	"			"	"	"	"					
853475	1853476		"	1850037			1853477	1850040	1850039	"					
853598	1854077		"	1848530			1850812	1850811	1850810	"					
855548	1855629		"	"			1855630	1848180	1848531	"					
856867	1856888		1836330	37700			37701	37703	37702	"	37706	37707			
857327	1857326		"	"			1835846	"	"	"	"	"			
857818	1853012		1849782	1850037			1850038	1850040	1850039	"					
858522	"		"	1848530			1858546	1848180	1848531	"					
859383	1859720		"	1850037			1850038	1850040	1850039	"					
859631	1859721		"	1848530			1850812	1850811	1850810	"					
860638	1860640		"	"			1860639	"	"	"					
861363	1859720		"	"			1850812	"	"	"					
862002	1862001		"	"			"	"	"	"					
862146	1862225		817147	817146			1862224	811524	805972	"					
862740	1859721		1849782	1850037			1850038	1850040	1850039	"					
864682	1864683		"	"			1853477	"	"	"					
864684	1864685		"	1848530			1860639	1850811	1850810	"					
866095	1866122		"	"			1850812	"	"	"					
866638	1866640		5029708	1866641			1862224	1866642	805972	"					
866644	5015840		817147	1838098			1835846	37703	37702	"	37706	37707			
868804	1855629		1849782	1848530			1860639	1850811	1850810	"					
873782	1873808		1836330	37700			37701	37703	37702	"	37706	37707			
873819	1874097		"	1838098			"	"	"	"	"	"			
874855	"		817147	37700			1877562	"	"	"	"	"			
877704	1860640		1849782	1850037			1853477	1850040	1850039	"					
878532	1879474		817147	37700			1877562	37703	37702	"	37706	37707			
878704	1879475		"	"			"	"	"	"	"	"			
879263	1879633		"	"			1879634	"	"	"	1937811	"			
880651	1880879		1849782	1848530			1860639	1850811	"	"					
881148	1881232		"	1850037			1850038	1850040	1850039	"					
881585	1881682		1836330	37700			37701	37703	37702	"	37706	37707			
882486	1881232		1849782	1848530			1850812	1850811	1850810	"					
883489	1879474		1836330	37700			37701	37703	37702	"	37706	37707			
883648	1883676		1849782	1850037			1853477	1850040	1850039	"					
883693	1883729		1836330	37700			37701	37703	37702	"	37706	37707			
883837	1884112		"	"			1879634	"	"	"	"	"			
883879	1884140		1849782	1848530			1850812	1850811	1850810	"					
884915	1884916		"	1850037			1850038	1850040	1850039	"					
884991	1885722		"	1848530			1850812	1850811	1850810	"					
887597	1887893		"	"			"	"	"	"					
889923	1887893		"	1850037			1850038	1850040	1850039	"					

Name	Part No.	Used on Models
Take Up RING	1861234	1850667–1860683–1866095–1877704–1884915–1884991–1889923

arts not listed in this Catalog will not be sold separately.