



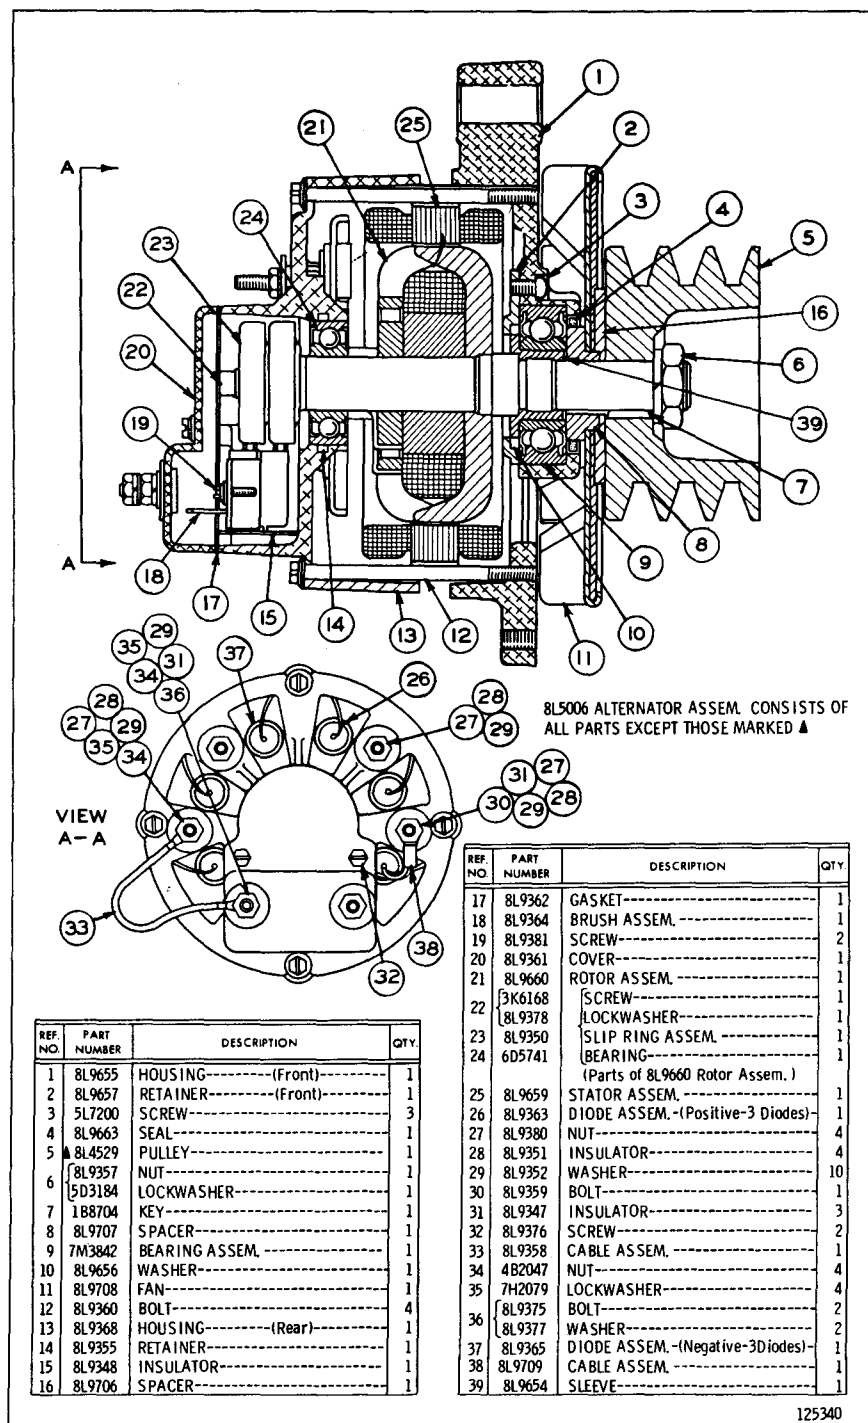


125340

BL5005 ALTERNATOR AND DRIVE GROUP--24 Volt, 35 Ampere
FOR USE WITH FAN DRIVE GROUP

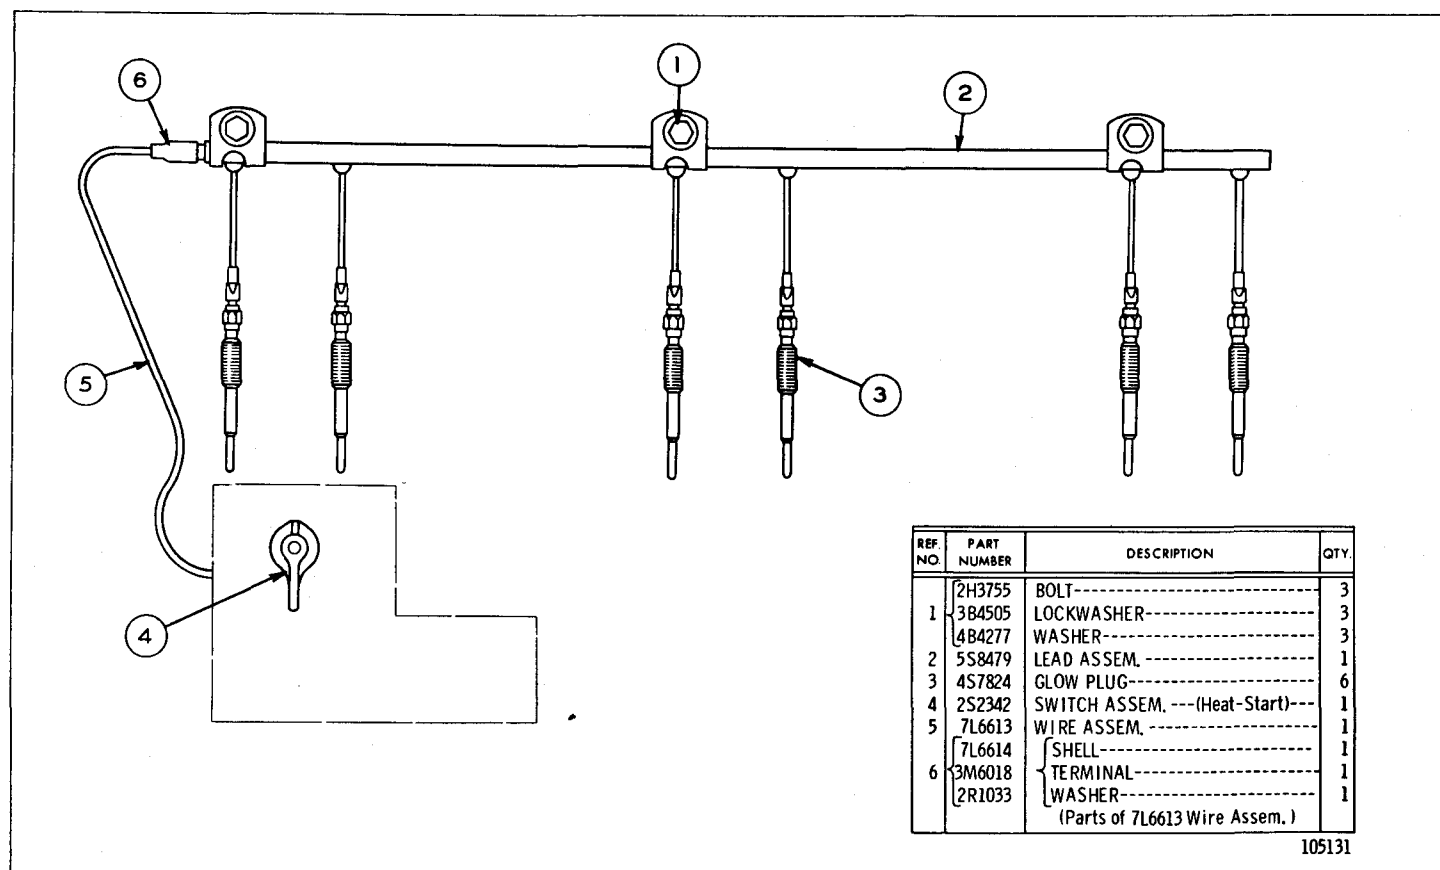


8L4480 STARTING AID GLOW PLUG GROUP--24 Volt

9L4084 AIR COMPRESSOR GROUP—Type 1
 Cannot be used with Auxiliary Water Pump
 9L4104 Air Compressor parts are shown on Pages 52 and 53

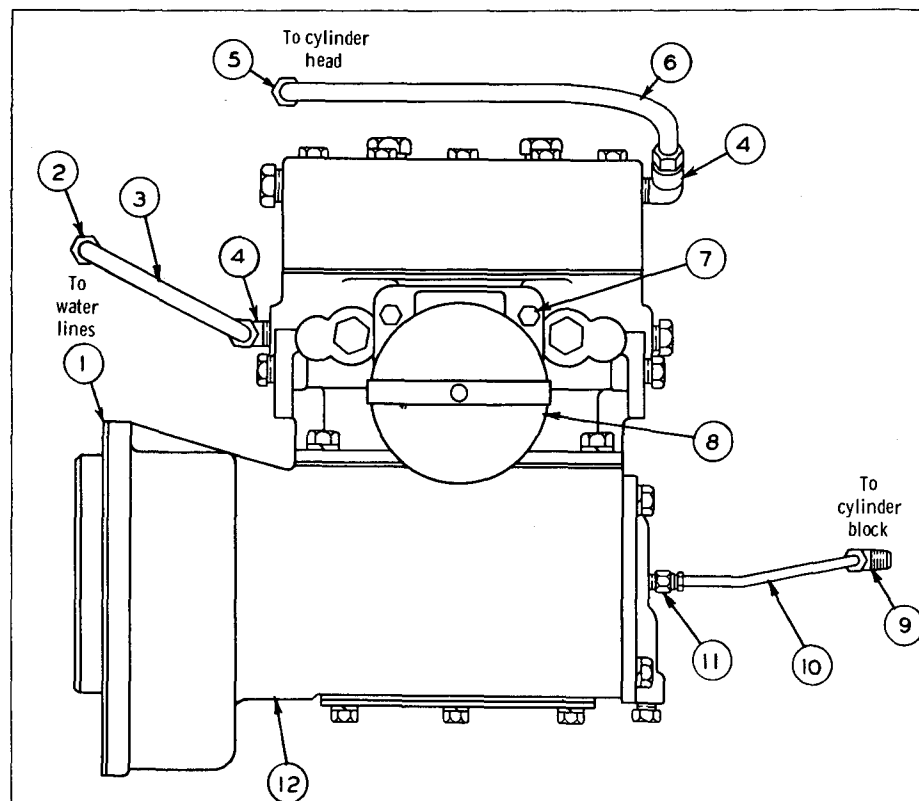


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	7L7850	GASKET-----	1
2	3B8997	FITTING-----	1
	8F8998	NUT-----	1
		(Part of 3B8997 Fitting)	
3	9L4161	TUBE----- (water inlet)-----	1
4	3B9053	FITTING-----	2
	8F8998	NUT-----	2
		(1 in each 3B9053 Fitting)	
5	3B9388	FITTING-----	1
	8F8998	NUT-----	1
		(Part of 3B9388 Fitting)	
6	9L4157	TUBE----- (water outlet)-----	1
7	1A9136	BOLT-----	2
	3B4505	LOCKWASHER-----	2
8	9L3690	AIR CLEANER ASSEM. -----	1
	9L2169	ELEMENT ASSEM. -----	1
		(Part of 9L3690 Air Cleaner Assem.)	
9	1H7922	FITTING-----	1
	1F1344	NUT-----	1
		(Part of 1H7922 Fitting)	
10	9L4105	TUBE----- (oil supply)-----	1
11	3B8995	FITTING-----	1
	1F1344	NUT-----	1
		(Part of 3B8995 Fitting)	
12	9L4104	AIR COMPRESSOR ASSEM. -----	1
		(See separate illustration)	

9L4084 AIR COMPRESSOR GROUP—Type 2
 Cannot be used with Auxiliary Water Pump
 9L4104 Air Compressor parts are shown on Pages 52 and 53

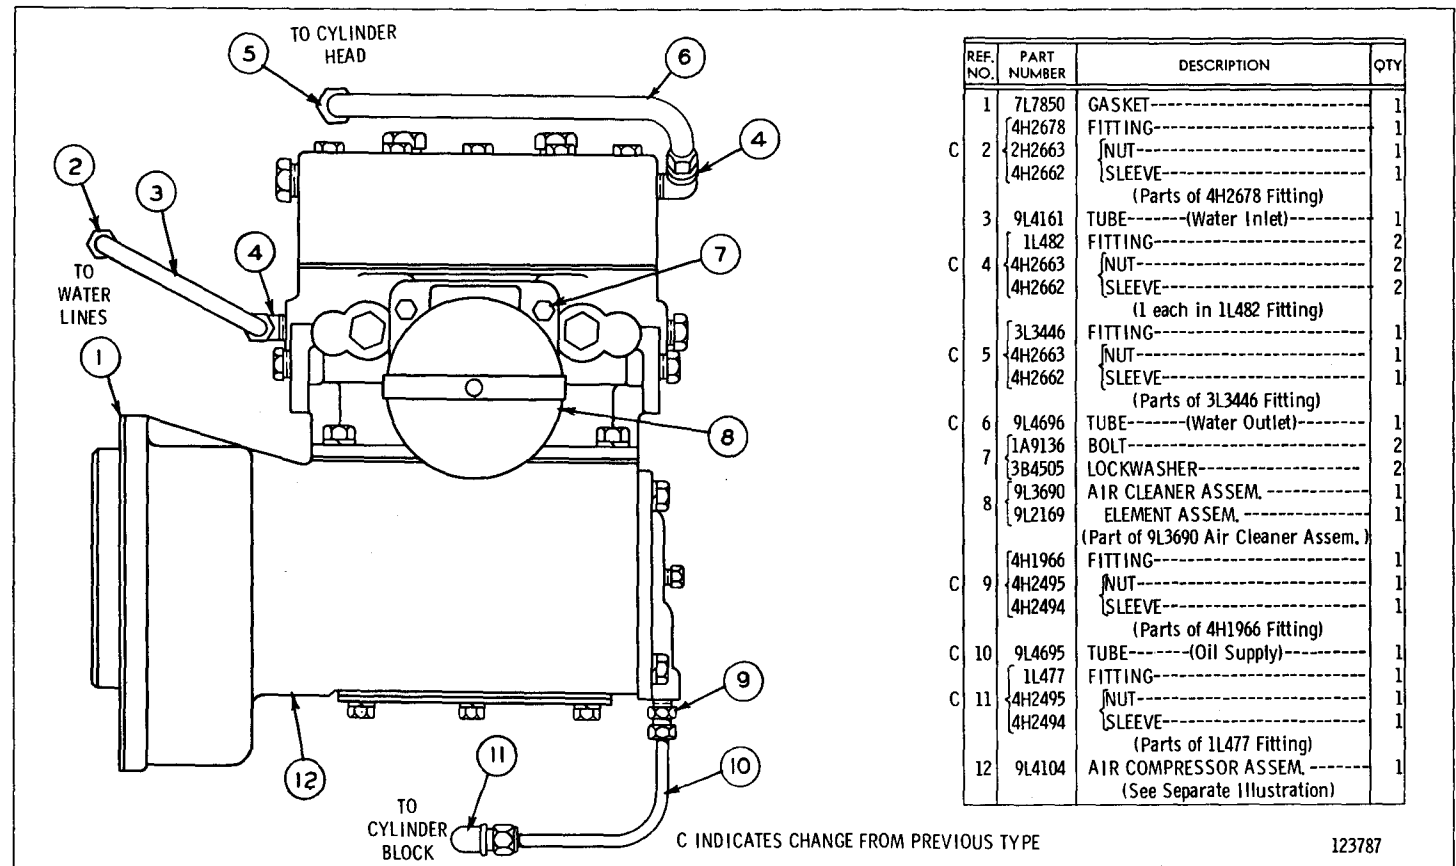

REF. NO.	PART NUMBER	DESCRIPTION	QTY
1	7L7850	GASKET-----	1
C 2	4H2678	FITTING-----	1
	2H2663	NUT-----	1
	4H2662	SLEEVE-----	1
		(Parts of 4H2678 Fitting)	
3	9L4161	TUBE----- (Water Inlet)-----	1
C 4	1L482	FITTING-----	2
	4H2663	NUT-----	2
	4H2662	SLEEVE-----	2
		(1 each in 1L482 Fitting)	
C 5	3L3446	FITTING-----	1
	4H2663	NUT-----	1
	4H2662	SLEEVE-----	1
		(Parts of 3L3446 Fitting)	
C 6	9L4696	TUBE----- (Water Outlet)-----	1
7	1A9136	BOLT-----	2
	3B4505	LOCKWASHER-----	2
8	9L3690	AIR CLEANER ASSEM.-----	1
	9L2169	ELEMENT ASSEM.-----	1
		(Part of 9L3690 Air Cleaner Assem.)	
C 9	4H1966	FITTING-----	1
	4H2495	NUT-----	1
	4H2494	SLEEVE-----	1
		(Parts of 4H1966 Fitting)	
C 10	9L4695	TUBE----- (Oil Supply)-----	1
C 11	1L477	FITTING-----	1
	4H2495	NUT-----	1
	4H2494	SLEEVE-----	1
		(Parts of 1L477 Fitting)	
12	9L4104	AIR COMPRESSOR ASSEM.-----	1
		(See Separate Illustration)	

123787

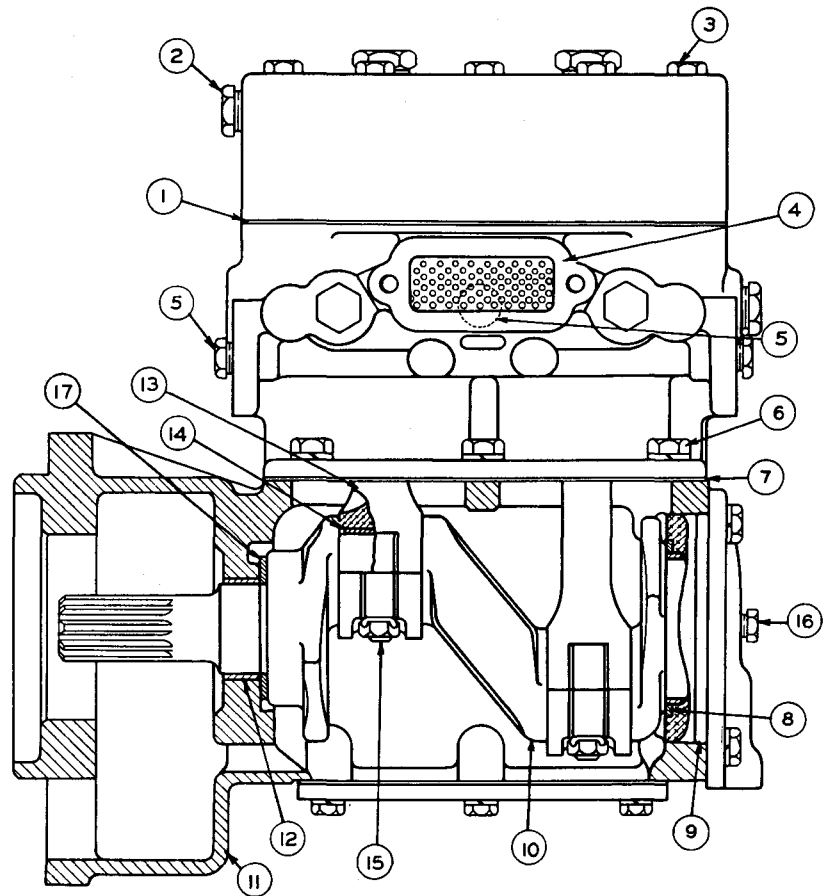

▲ NOT PART OF 9L4104 AIR COMPRESSOR ASSEM.


REF. NO.	PART NUMBER	DESCRIPTION	QTY
1	2S1218	GASKET-----	1
2	3J5390	PLUG-----	5
3	9M379	BOLT-----	10
4	9M385	PLATE-----	1
4	6L1884	GASKET-----	2
5	5M6213	PLUG-----	2
6	S1594	BOLT-----	6
6	3B4506	LOCKWASHER-----	6
7	3H7311	GASKET-----	1
8	9L1517	WASHER-----	1
9	2H3931	SEAL-----	1
10	9L4118	CRANKSHAFT-----	1
11	9L4253	CRANKCASE ASSEM.-----	1
12	159867	BEARING----- (Part of 9L4253 Crankcase Assem.)	1

REF. NO.	PART NUMBER	DESCRIPTION	QTY
13	9M389	ROD ASSEM.-----	2
14	9M5180	BEARING----- (1 in each 9M389 Rod Assem.)	2
15	9M5181	BOLT-----	4
15	2A5328	LOCK----- (2 each in 9M389 Rod Assem.)	4
16	5M6214	PLUG-----	1
17	9L1518	WASHER-----	1
17	9L947	KIT----- (Gasket) (Includes gaskets for cylinder head, block and crankcase)	1

105126

9L4104 AIR COMPRESSOR ASSEMBLY--Part 1
Part of 9L4084 Air Compressor Group shown on Pages 50A & 51

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

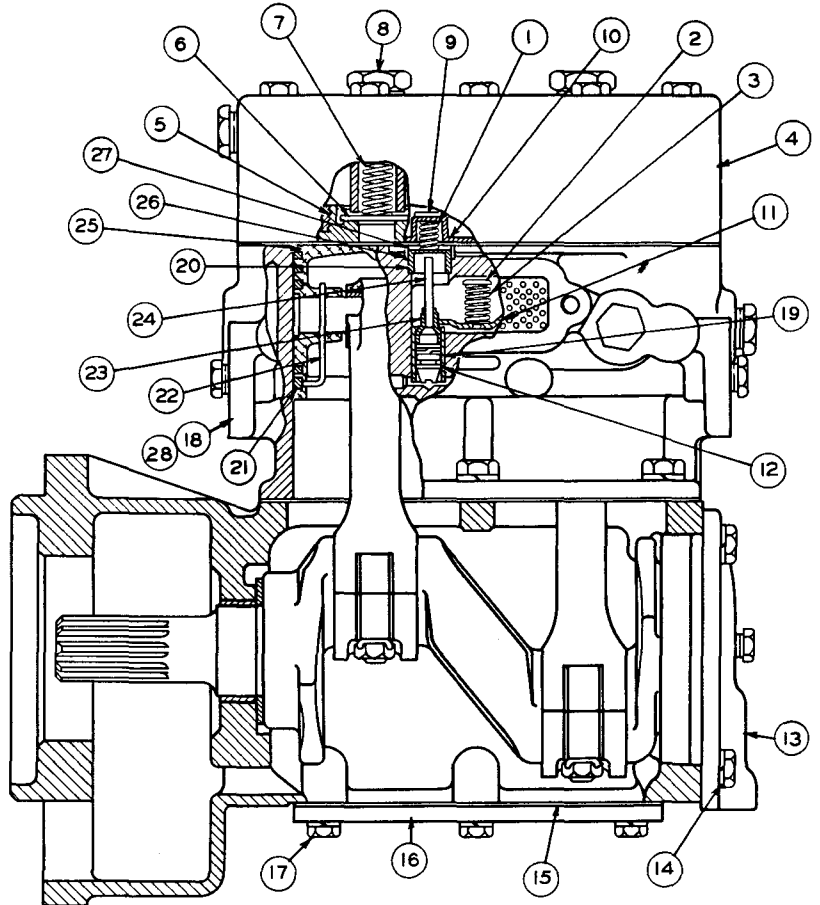


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	9L2278	SPRING-----	2
2	4M6410	SEAT-----	1
3	9L2273	SPRING-----	1
4	9L1166	HEAD ASSEM.-----	1
5	9M394	SEAT-----	2
6	3H5181	VALVE-----	2
7	3F4987	SPRING-----	2
8	9M386	CAP-----	2
9	9M387	SEAT-----	2
10	9M388	INSERT-----	2
		(Parts of 9L1166 Head Assem.)	
11	9L2272	SADDLE-----	1
	9L2269	PISTON ASSEM.-----	2
12	4M6412	RING-----	2
	4M6408	GROMMET-----	2
		(1 each in 9L2269 Piston Assem.)	
13	9L3520	COVER ASSEM.-----	1
	2S4245	BEARING-----	1
		(Part of 9L3520 Cover Assem.)	

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
14	4M61	BOLT-----	4
	4L7318	LOCKWASHER-----	4
15	3H5175	GASKET-----	1
16	2S3079	COVER-----	1
	4M5281	BOLT-----	6
17	3B4504	LOCKWASHER-----	6
18	9M410	BLOCK ASSEM.-----	1
19	9M382	BUSHING-----	2
20	9M381	SEAT-----	2
		(Parts of 9M410 Block Assem.)	
21	3S916	PISTON RING KIT--(10 Rings)-----	1
		(For Cast Iron Pistons)	
22	9M380	LOCK-----	2
23	9L2271	GUIDE-----	2
24	9L2270	PLUNGER-----	2
25	3S915	PISTON ASSEM.-----	2
26	9L2276	GUIDE-----	2
27	9L2277	VALVE-----	2
28	3L7316	PLUG----- (Recessed)-----	1

105132


9L4104 AIR COMPRESSOR ASSEMBLY--Part 2
Part of 9L4084 Air Compressor Group shown on Pages 50A & 51

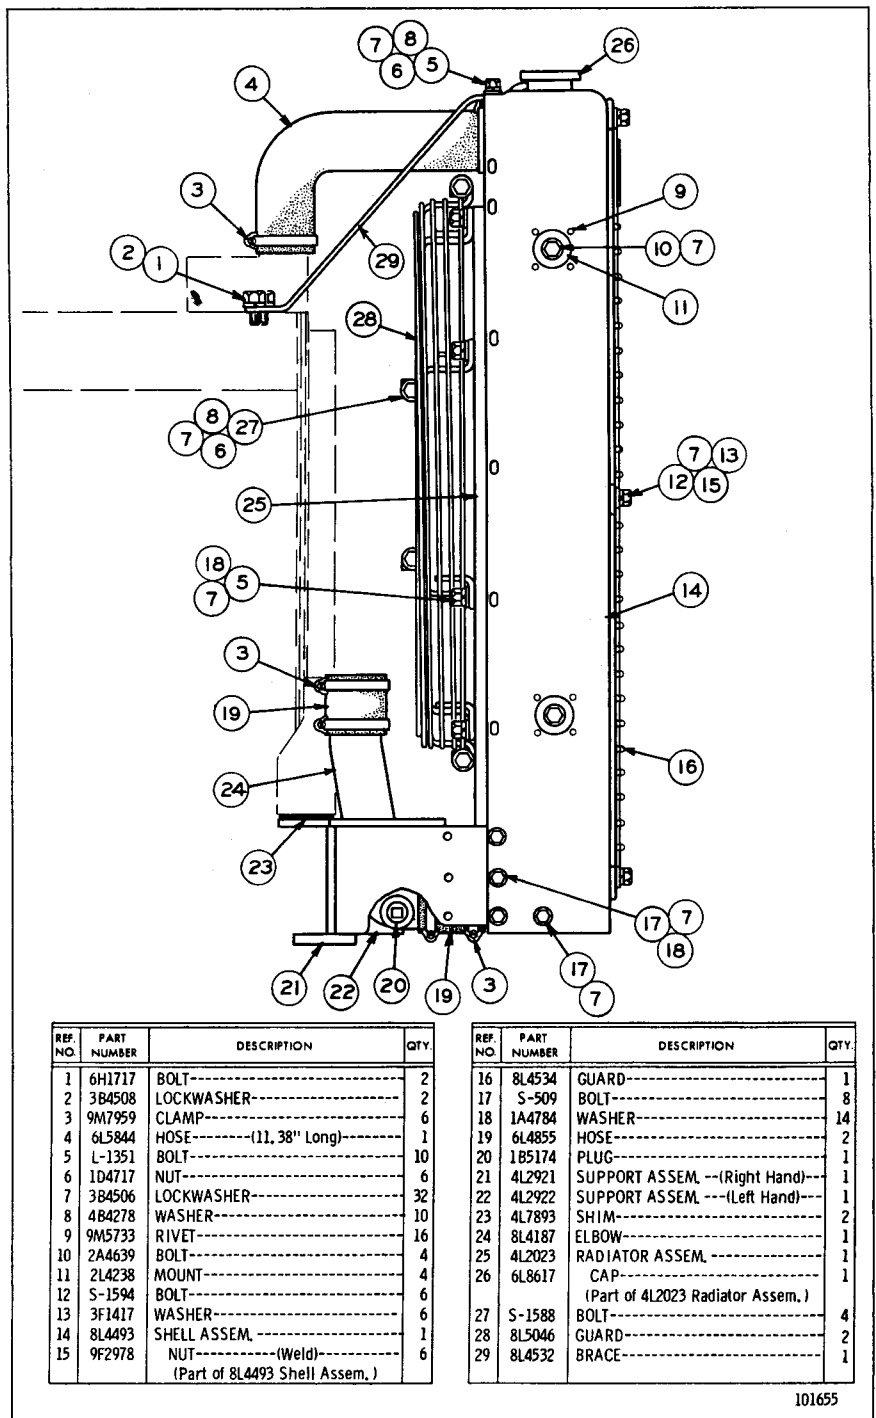

101655

8L4996 RADIATOR GROUP

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

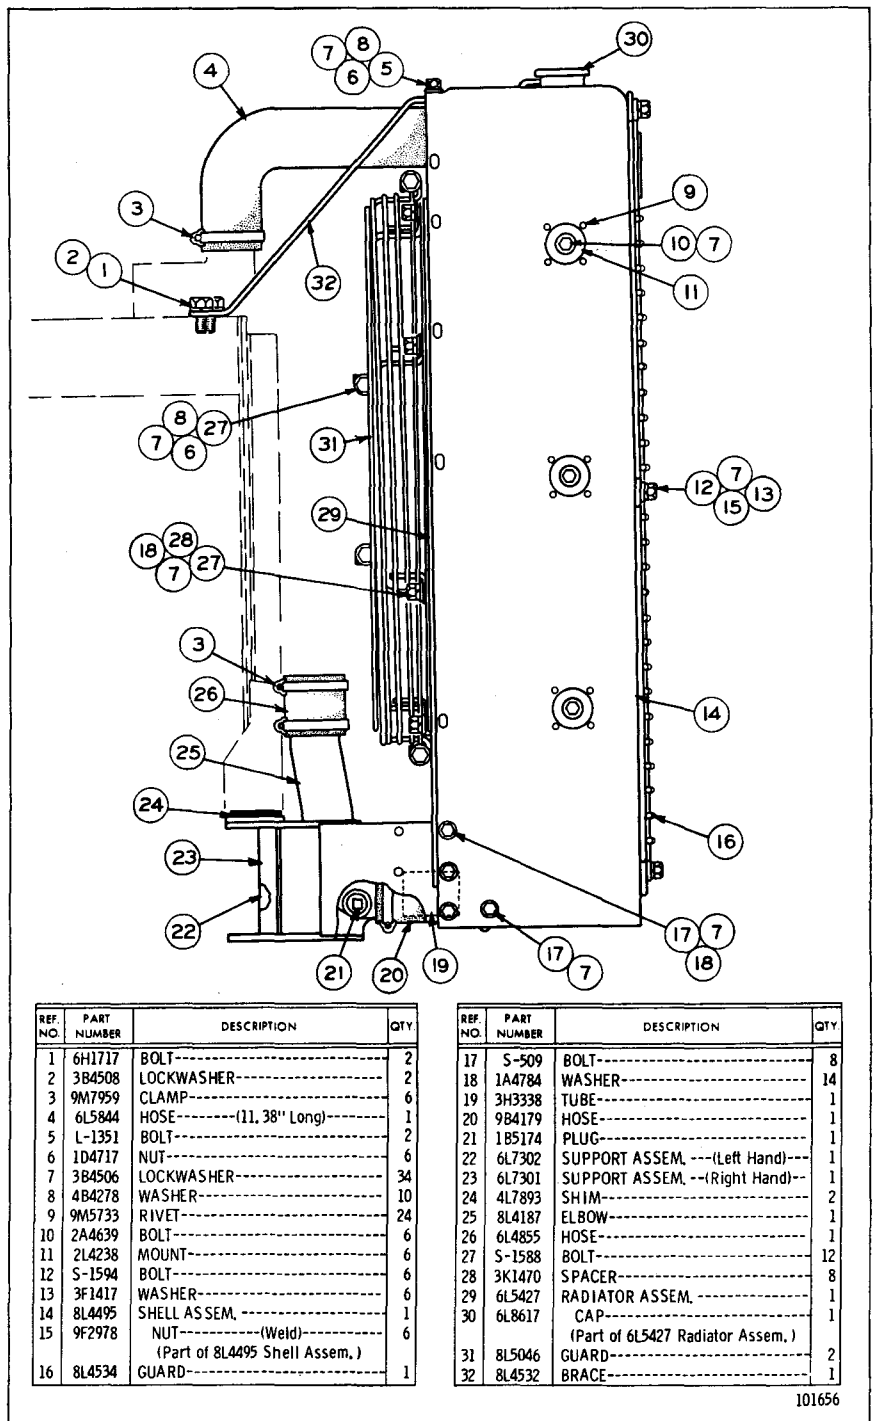


REF NO.	PART NUMBER	DESCRIPTION	QTY
1	6H1717	BOLT-----	2
2	3B4508	LOCKWASHER-----	2
3	9M7959	CLAMP-----	6
4	6L5844	HOSE----- (11, 38" Long)	1
5	L-1351	BOLT-----	2
6	1D4717	NUT-----	6
7	3B4506	LOCKWASHER-----	34
8	4B4278	WASHER-----	10
9	9M5733	RIVET-----	24
10	2A4639	BOLT-----	6
11	2L4238	MOUNT-----	6
12	S-1594	BOLT-----	6
13	3F1417	WASHER-----	6
14	8L4495	SHELL ASSEM.-----	1
15	9F2978	NUT----- (Weld) (Part of 8L4495 Shell Assem.)	6
16	8L4534	GUARD-----	1

REF NO.	PART NUMBER	DESCRIPTION	QTY
17	S-509	BOLT-----	8
18	1A4784	WASHER-----	14
19	3H3338	TUBE-----	1
20	9B4179	HOSE-----	1
21	1B5174	PLUG-----	1
22	6L7302	SUPPORT ASSEM. --- (Left Hand)---	1
23	6L7301	SUPPORT ASSEM. -- (Right Hand) --	1
24	4L7893	SHIM-----	2
25	8L4187	ELBOW-----	1
26	6L4855	HOSE-----	1
27	S-1588	BOLT-----	12
28	3K1470	SPACER-----	8
29	6L5427	RADIATOR ASSEM.-----	1
30	6L8617	CAP----- (Part of 6L5427 Radiator Assem.)	1
31	8L5046	GUARD-----	2
32	8L4532	BRACE-----	1


101656

BL4997 RADIATOR GROUP--HIGH CAPACITY

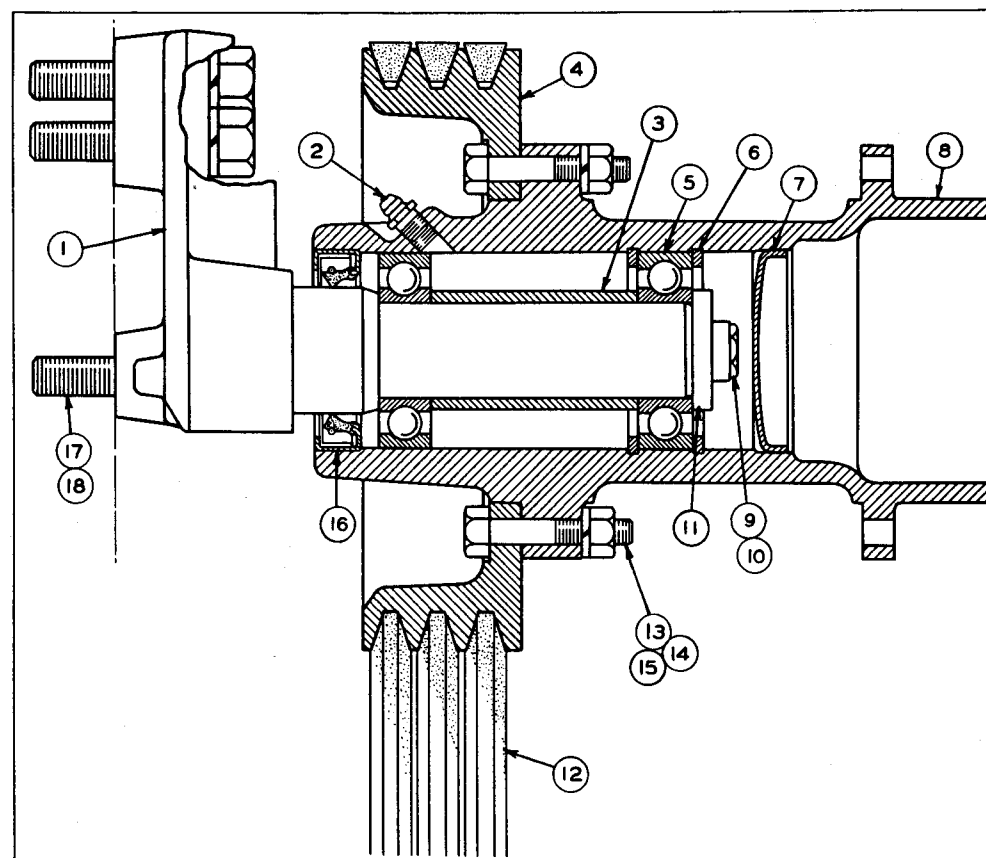


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	8L5207	SHAFT ASSEM.-----	1
2	3B8489	FITTING-----	1
3	8L4963	SPACER-----	1
4	8L4530	PULLEY-----	1
5	1B3867	BEARING-----	2
6	4F1392	RING-----	2
7	4B4098	PLUG-----	1
8	8L4531	HUB-----	1
9	1A2343	BOLT-----	2
10	5B3390	LOCK-----	1
11	5H7230	WASHER-----	1
12	8L4526	VEE BELT SET----- (Consists of 3 Belts)	1
13	1B9575	BOLT-----	6
14	1D4716	NUT-----	6
15	3B4505	LOCKWASHER-----	6
16	5M9737	SEAL-----	1
17	2B947	BOLT-----	4
18	3B4508	LOCKWASHER-----	4


8L5007 FAN DRIVE GROUP
FOR USE WITH ALTERNATOR

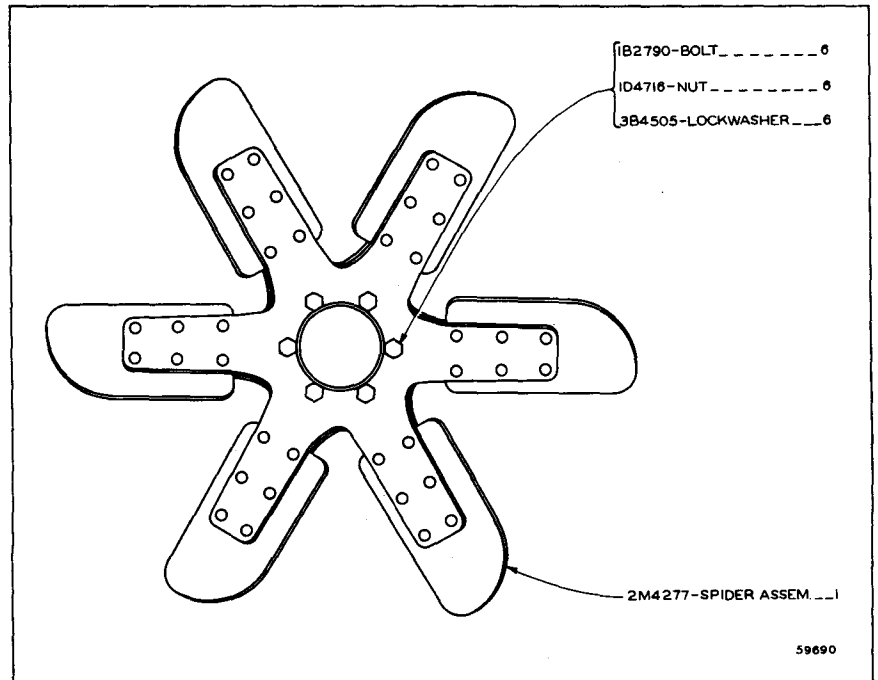


4L2906 BLOWER FAN GROUP--26 INCH

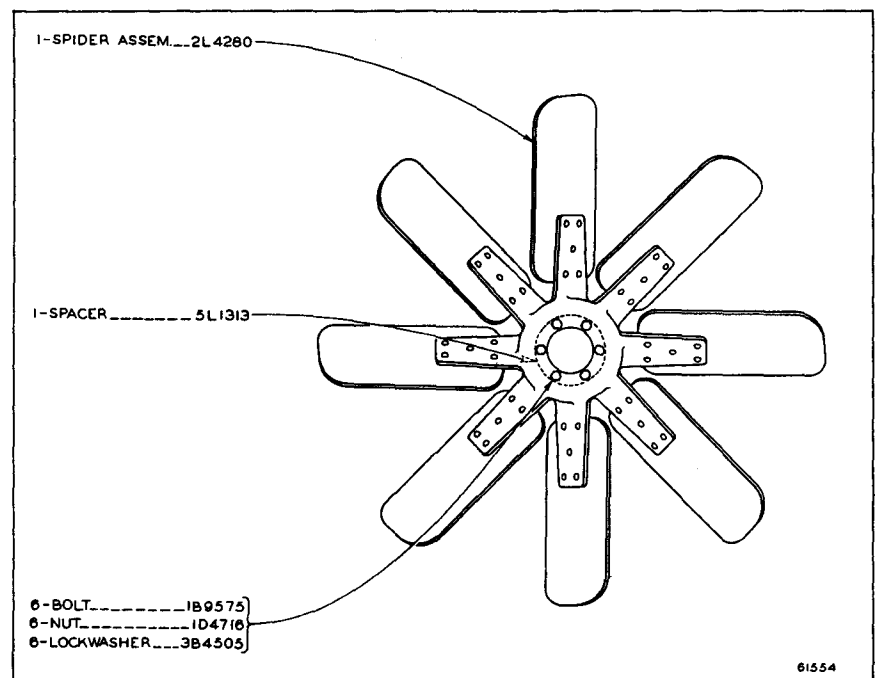

5L1315 BLOWER FAN GROUP--26 INCH

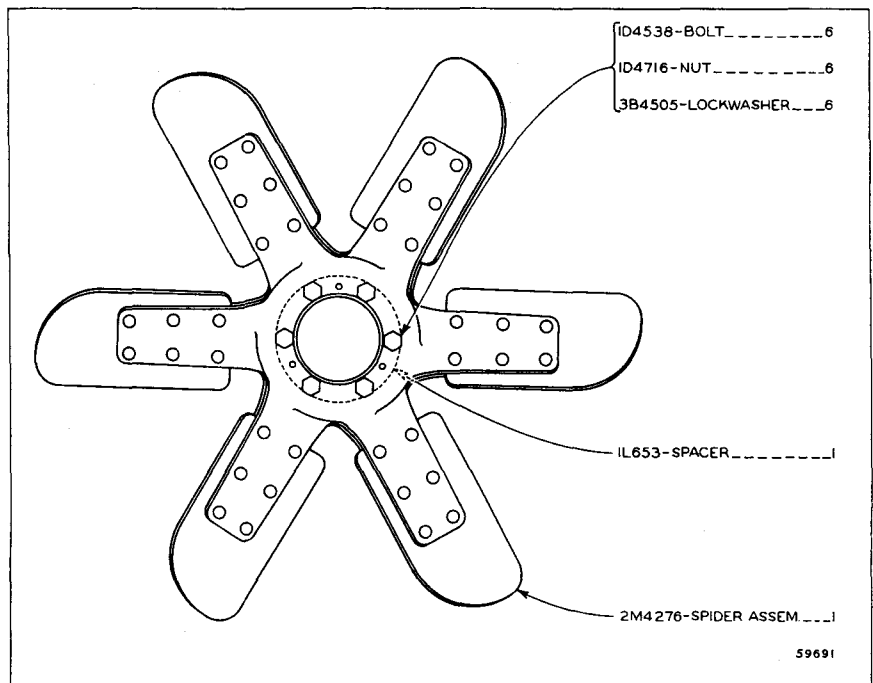


4L2905 SUCTION FAN GROUP--26 INCH

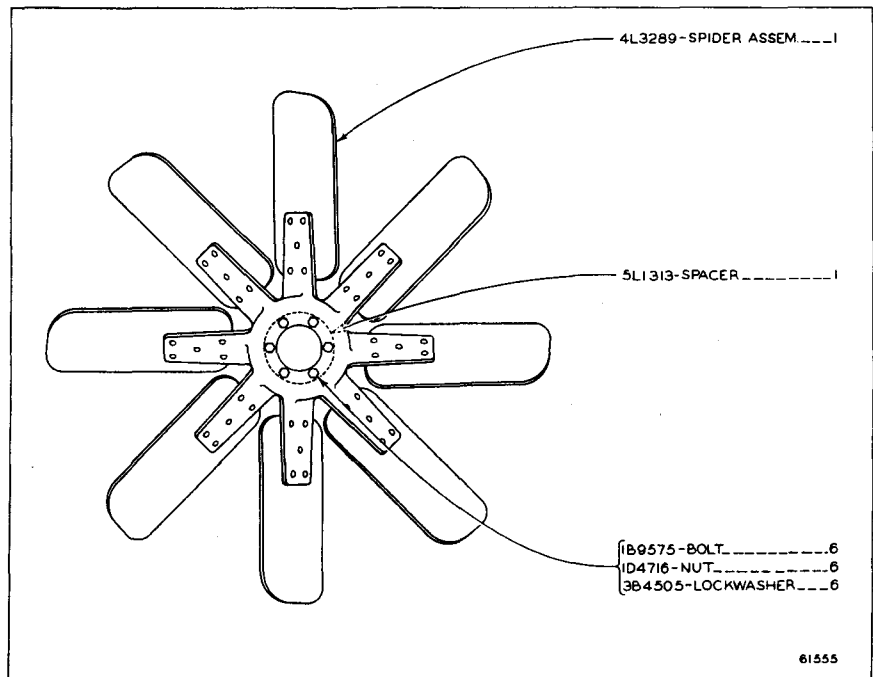

5L1314 SUCTION FAN GROUP--26 INCH


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

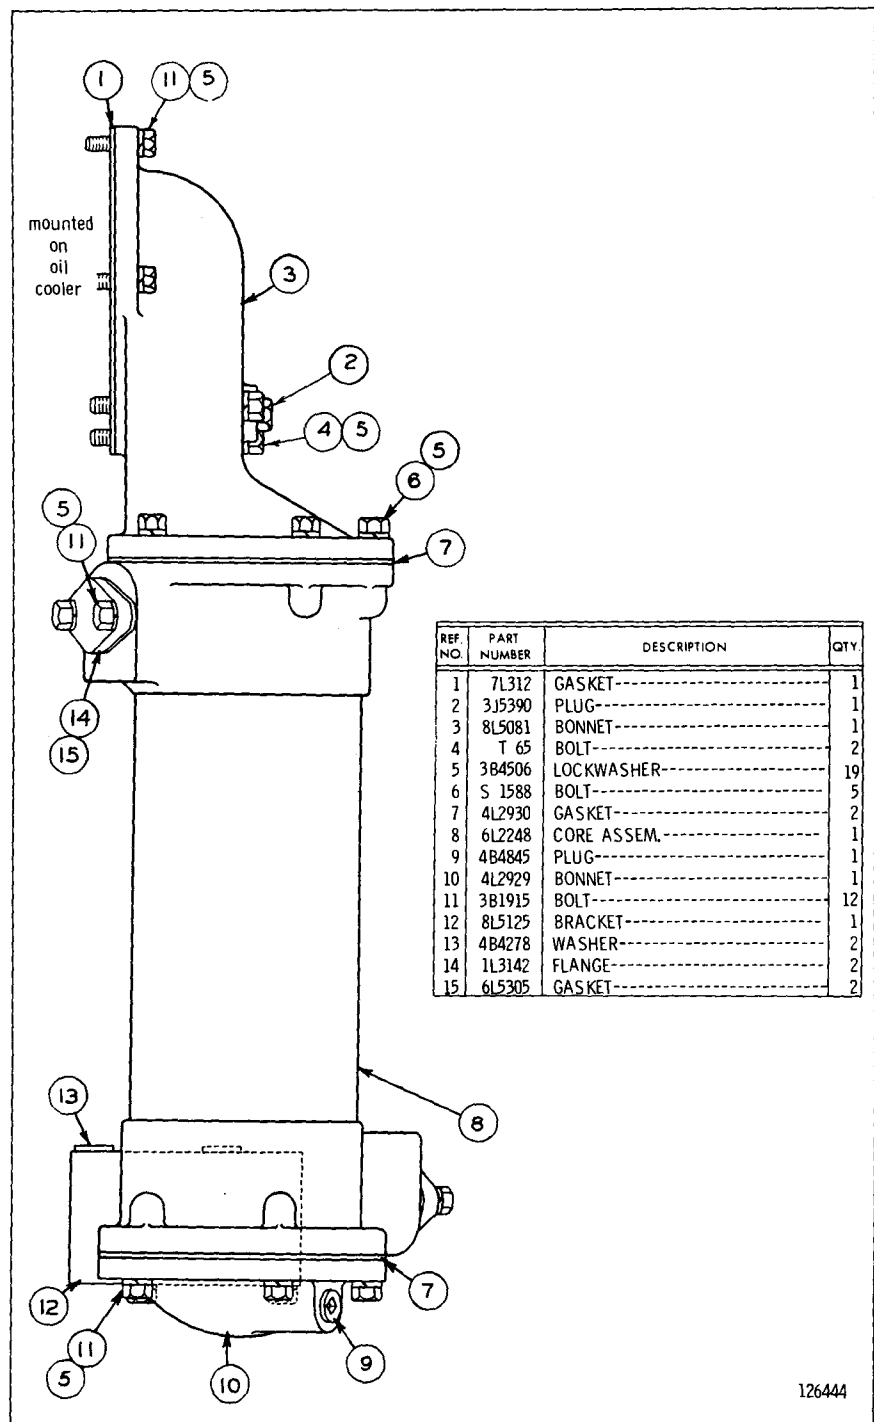

126444

8L5157 TORQUE CONVERTER OIL COOLER GROUP


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

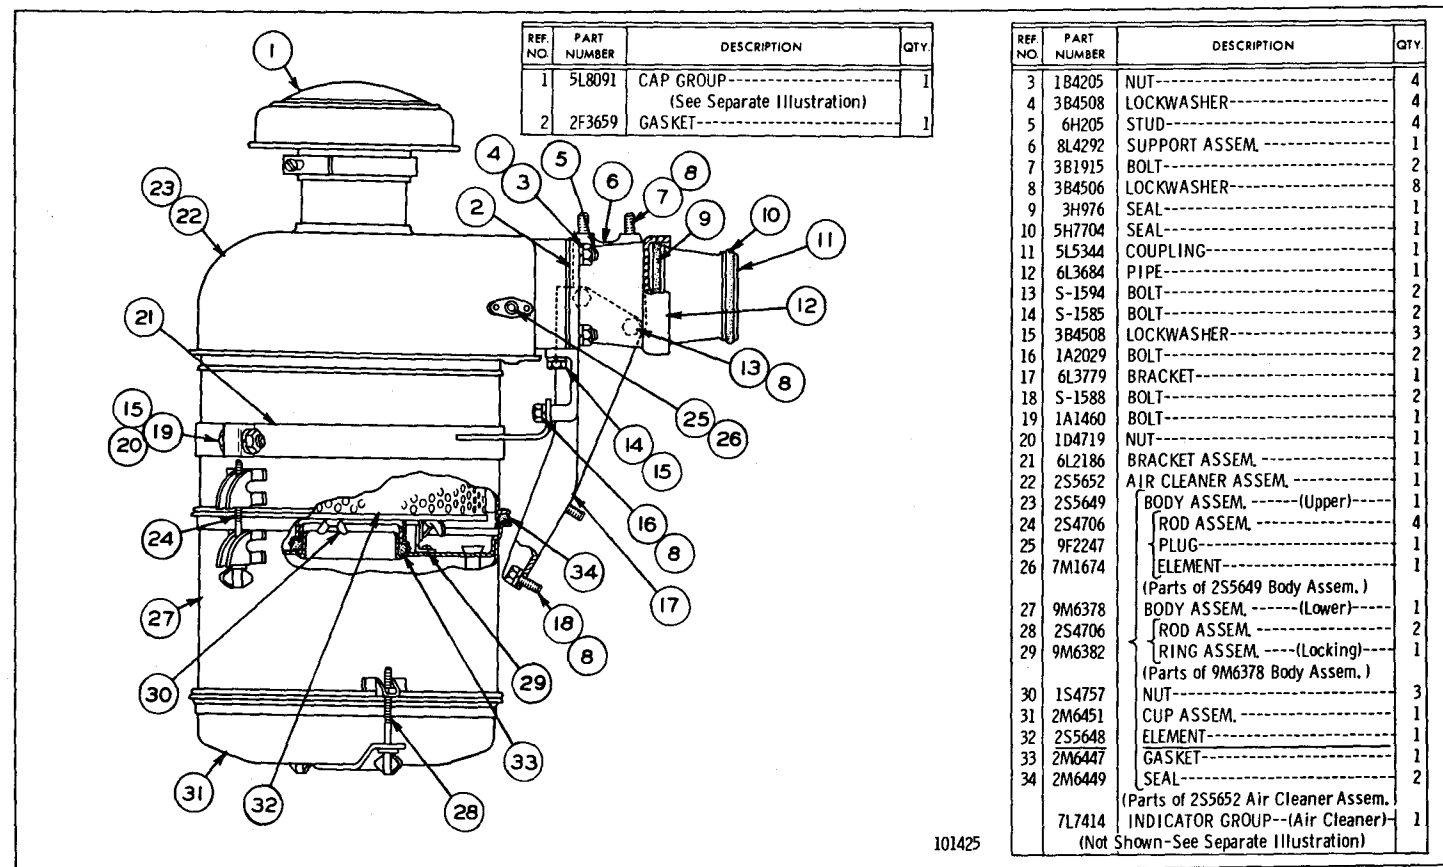


101425

8L4149 AIR CLEANER GROUP-2 Stage, Dry Type
7L7414 Indicator and 5L8091 Cap parts are shown on Page 61


8L4148 AIR CLEANER GROUP—2 Stage—Heavy Duty
7L7414 Indicator parts are shown on Page 61

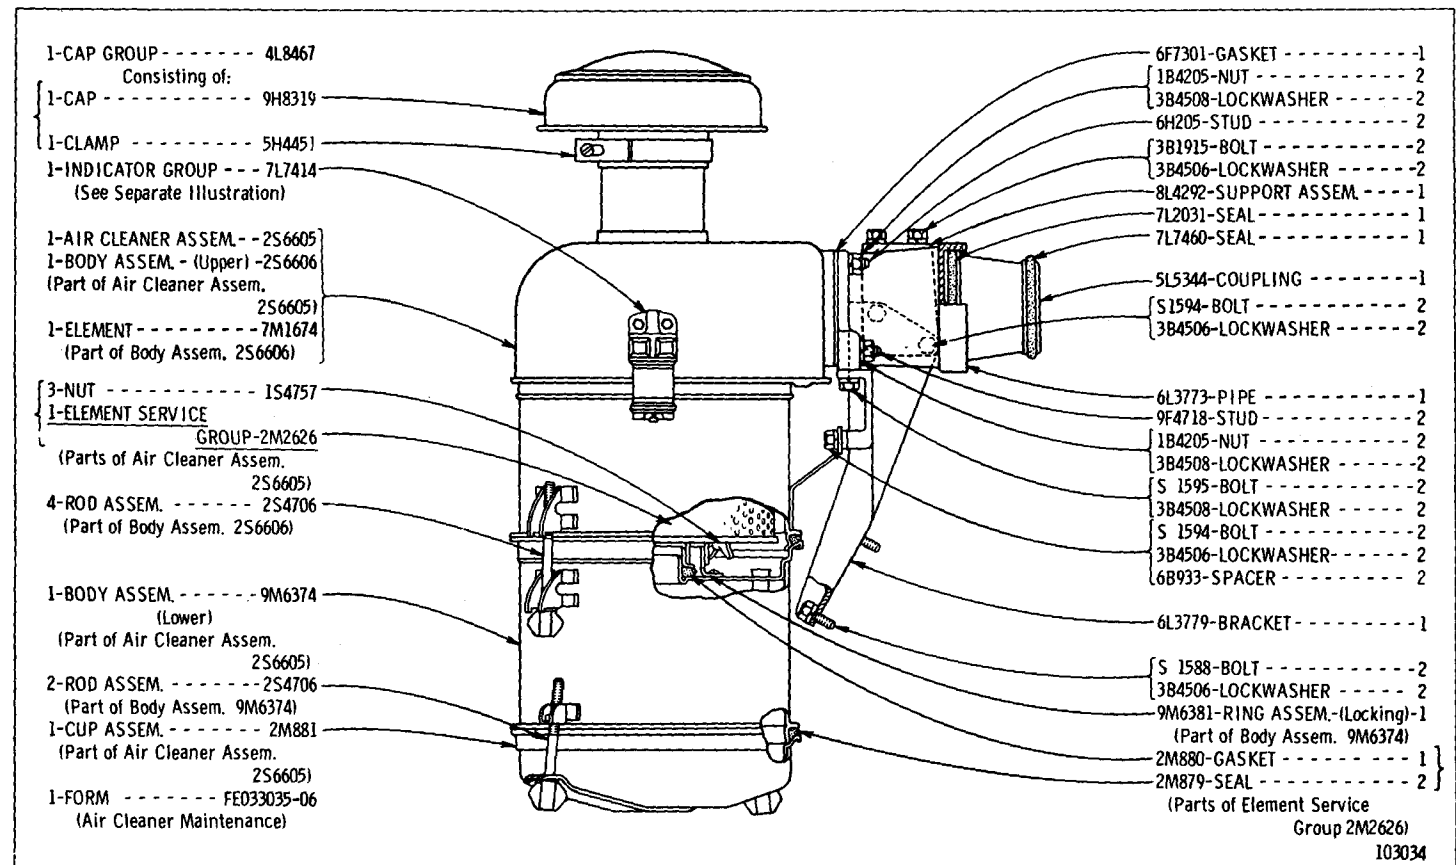

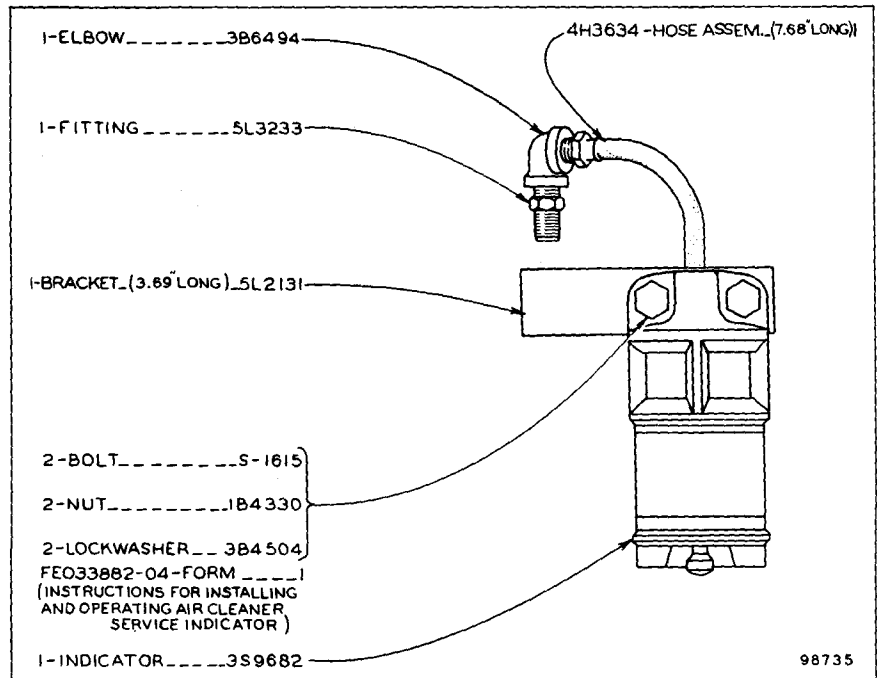

7L7414 INDICATOR GROUP-Air Cleaner

Also part of 8L4149 & 8L4148 Air Cleaner Groups shown on Pages 60 & 60A

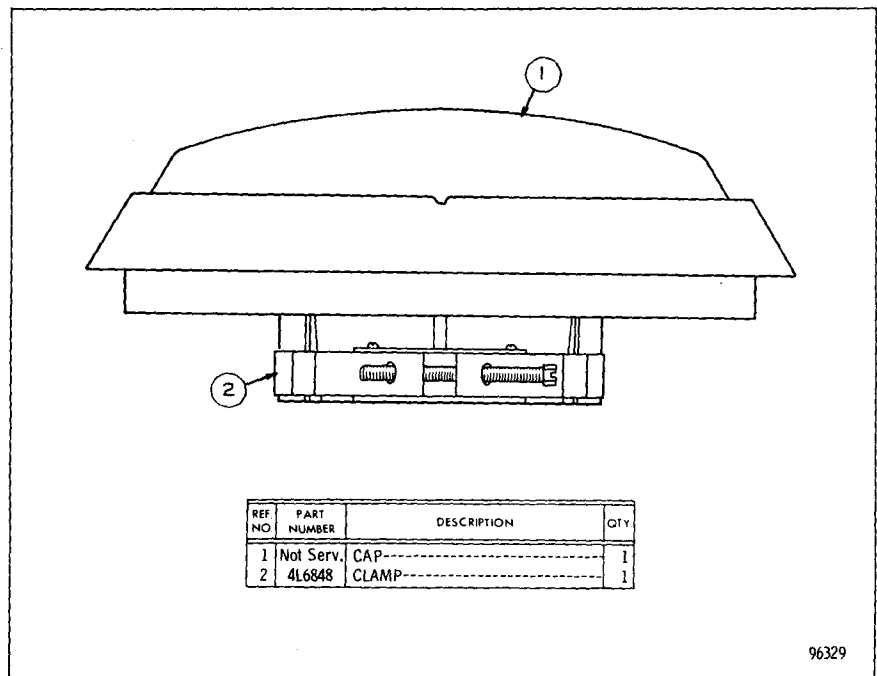


5L8091 AIR CLEANER CAP GROUP


Also part of 8L4149 Air Cleaner Group and 8L8421 Generator

Installation Arrangement shown on Pages 60 and 83

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

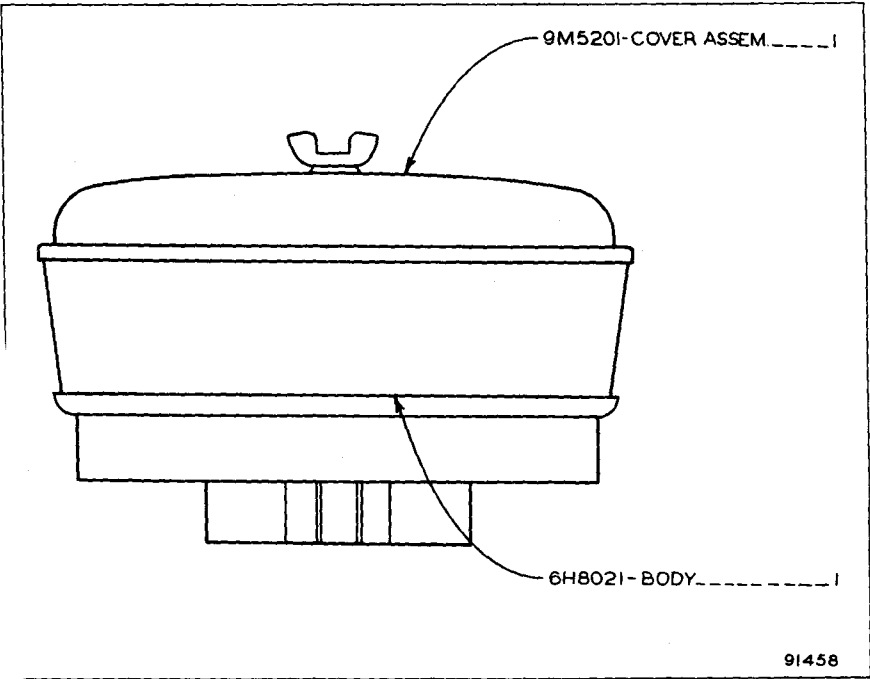

5L7942 AIR PRECLEANER GROUP

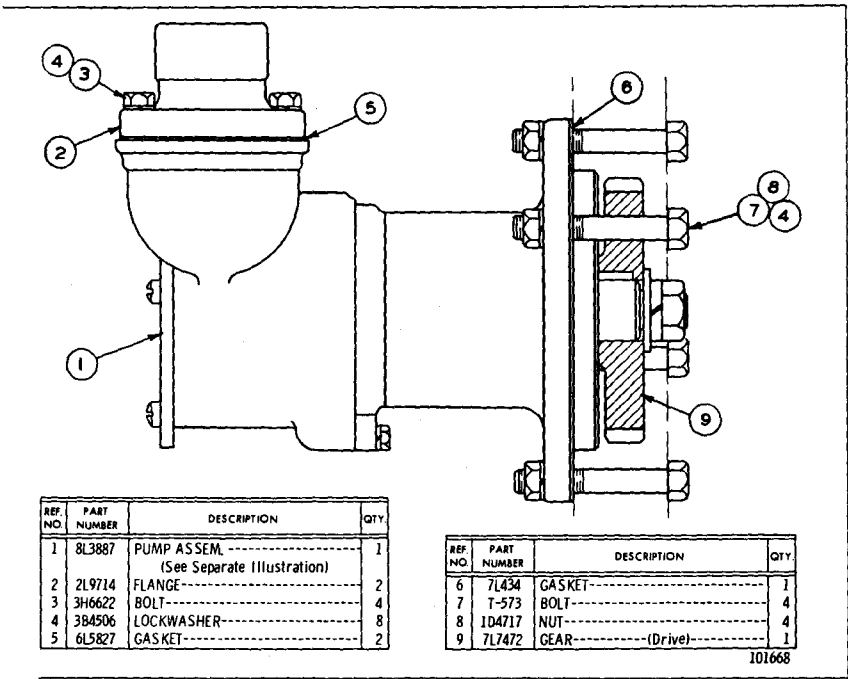


8L4846 AUXILIARY WATER PUMP GROUP

8L3887 RAW WATER PUMP PARTS ARE SHOWN ON PAGE 64


WAYS GIVE CREDIT

7L851 RAW WATER PUMP, HEAT EXCHANGER AND CONNECTIONS GROUP
 FOR USE WITH EXPANSION TANK. CANNOT BE USED WITH AIR COMPRESSOR GROUP
 8L3887 RAW WATER PUMP PARTS ARE SHOWN ON PAGE 64. SEE PAGE 20 FOR GASKET KIT

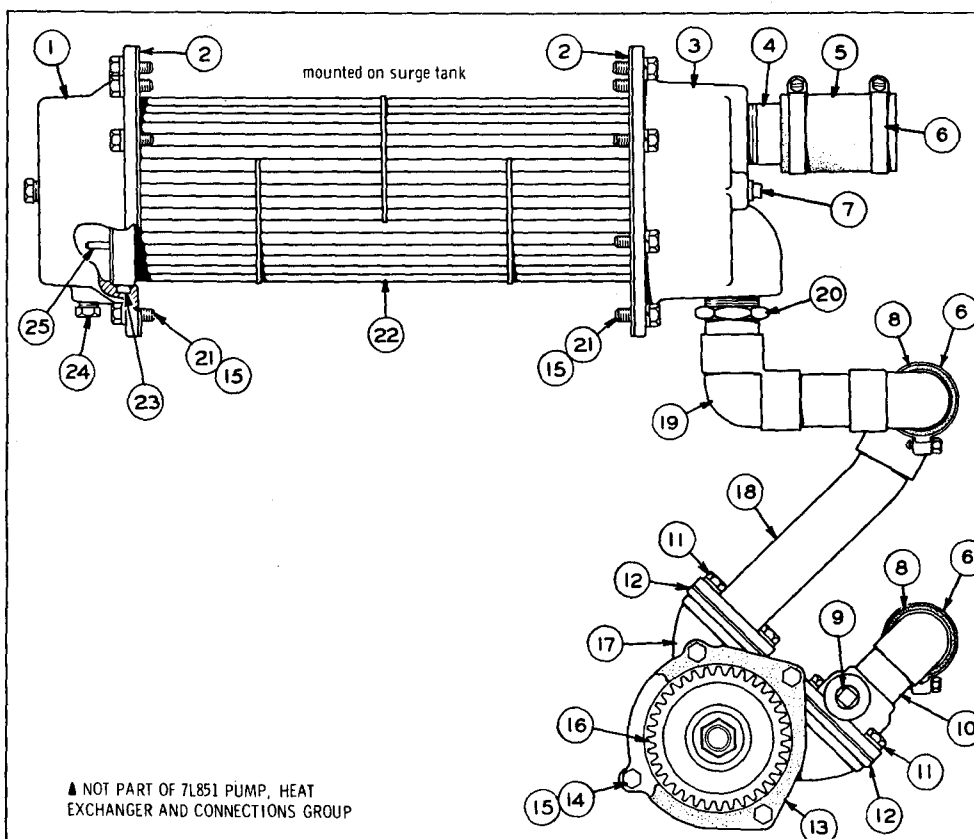

REF. NO.	PART NUMBER	DESCRIPTION	QTY
1	7L875	BONNET-----	1
2	7L874	GASKET-----	2
3	7L877	BONNET-----	1
4	4H7137	PIPE-----	1
5	6L4757	HOSE-----	1
6	9M164	CLAMP-----	6
7	6L2279	PLUG-----	3
8	6L2280	ROD-----	3
9	6L3944	HOSE-----	2
10	5B5098	PLUG-----	1
11	7L218	TUBE ASSEM.-----	1
12	3H5842	BOLT-----	4
13	7F7259	LOCKWASHER-----	4
14	6L5827	GASKET-----	2
15	7L434	GASKET-----	1
16	T-573	BOLT-----	4
17	1D4717	NUT-----	4
18	3B4506	LOCKWASHER-----	20
19	7L7472	GEAR----- (40 Teeth)	1
20	8L3887	PUMP ASSEM.-----	1
21		(See Separate Illustration)	
22	7L219	TUBE ASSEM.-----	1
23	7L217	TUBE ASSEM.-----	1
24	5L2994	ADAPTER-----	1
25		(Part of 7L217 Tube Assem.)	
	S-1594	BOLT-----	16
	7L876	TUBE BUNDLE-----	1
		-or-	
	8L5418	TUBE BUNDLE-----	1
		(Copper-Nickel Tubing)	
	5D6642	SEAL-----	2
	9B887	PLUG-----	2
	8L4478	DOWEL-----	2

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

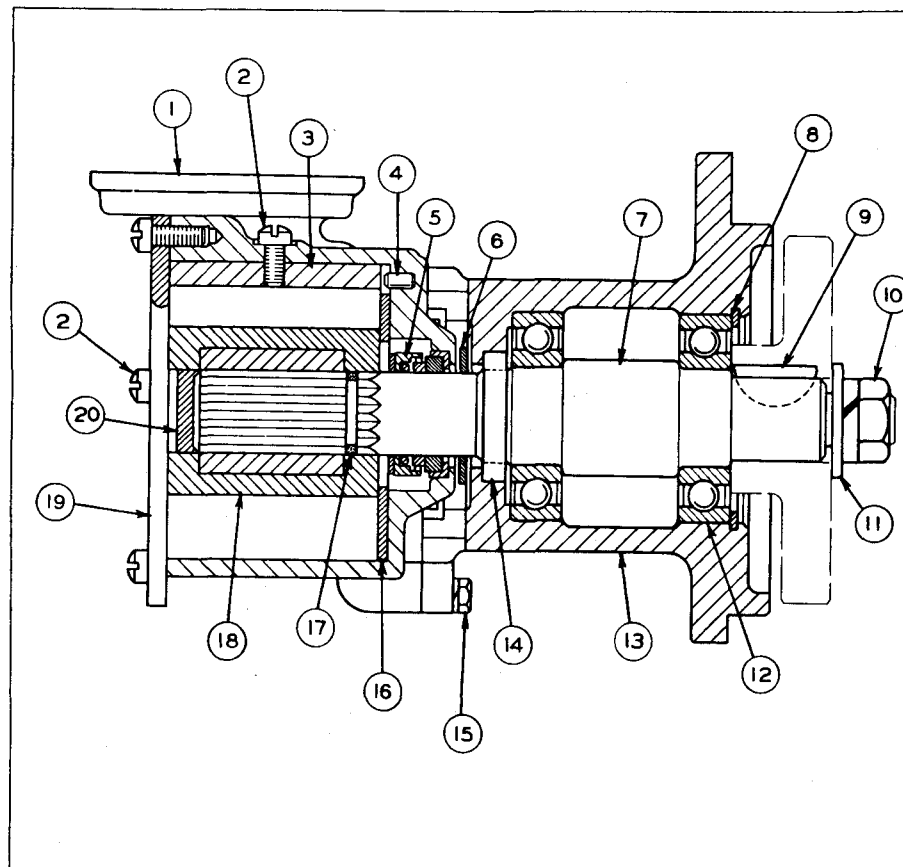

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	7L7504	BODY-----	1
2	3F7586	SCREW-----	6
3	6L8790	CAM-----	1
4	4L9022	DOWEL-----	1
5	7L2130	SEAL ASSEM.-----	1
6	1L4786	SLINGER-----	1
7	7L7506	SHAFT-----	1
8	1L4775	RING-----	1
9	1B8712	KEY-----	1
10	2986-A	NUT-----	1
11	4L9018	LOCKWASHER-----	1
12	4L9017	WASHER-----	1
13	7L7508	BEARING-----	2
14	8L5776	HOUSING-----	1
15	7L7507	SEAL-----	1
16	4M61	BOLT-----	4
17	3L6789	LOCKWASHER-----	4
18	4L8473	PLATE-----	1
19	8F3469	SEAL-----	1
20	1L4774	IMPELLER ASSEM.-----	1
	8L5775	COVER-----	1
	1L4785	GASKET-----	1
	2L7985	SEAL-----	1


The following Repair Kits are available:

5L8002-KIT----- (Minor Overhaul)----- 1
 (Consists of such parts as Screw, Impeller, Gasket, Tool and Seal Assem.)

8L9331-KIT----- (Major Overhaul)----- 1
 (Consists of such parts as Gaskets, Cam, Bearing Seal, Ball Bearing, Impeller, Plate Seal Assem., Slinger, End Cover, Shaft, Spline Seal and Screws)

101659


8L3887 RAW WATER PUMP ASSEMBLY
 PART OF 8L4846 AUXILIARY WATER PUMP GROUP AND 7L851 RAW WATER PUMP, HEAT EXCHANGER AND CONNECTIONS GROUP SHOWN ON PAGES 62 AND 63

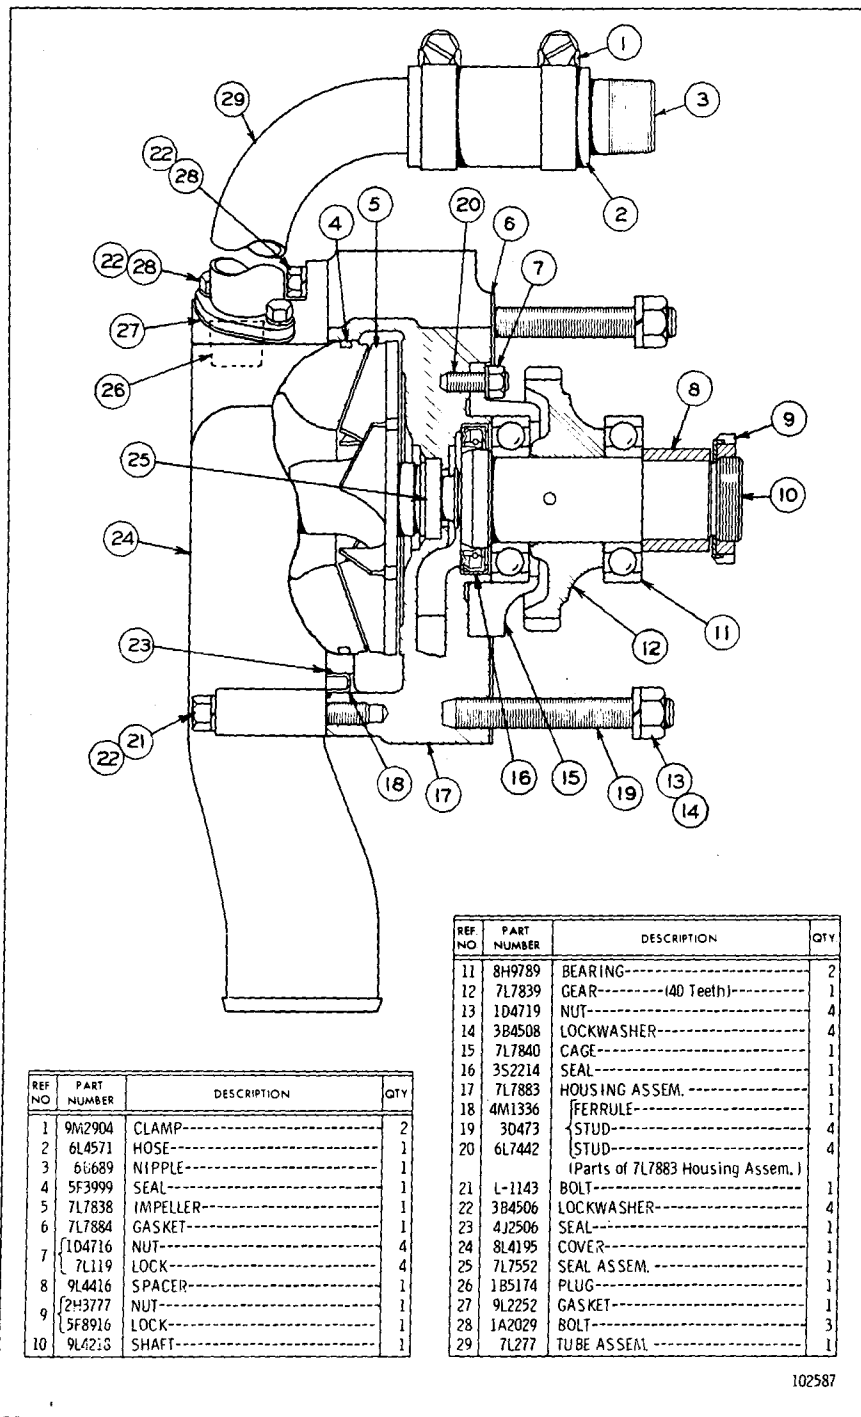

102587

8L8465 WATER PUMP GROUP
For use with 8L4950 Auxiliary Drive or 9L4084 Air Compressor

"CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

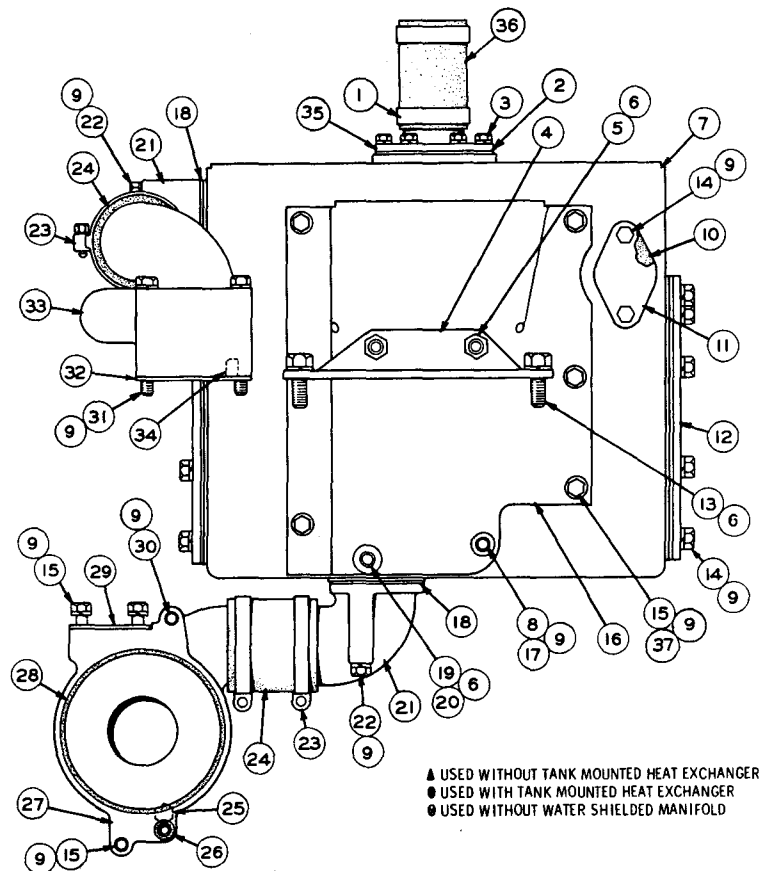


REF NO	PART NUMBER	DESCRIPTION	QTY
1	9M164	CLAMP	2
2	4L7636	GASKET	1
3	S 1615	BOLT	6
3	3B4504	LOCKWASHER	6
4	9L4228	BRACKET	1
5	6H1717	BOLT	2
5	1D4719	NUT	2
6	3B4508	LOCKWASHER	5
7	8L3932	TANK ASSEM.	1
8	S 1588	BOLT	1
9	3B4506	LOCKWASHER	37
10	6L6580●	GASKET	1
11	1H6666●	COVER	1
12	8L4847▲	COVER	2
12	7L874A	GASKET	2
13	S 1595●	BOLT	2
14	S 1594▲	BOLT	18
15	1A2029	BOLT	9
16	8L3933	BRACKET	1
17	9L4233	SPACER	1
18	6L5567	GASKET	2
19	1A1460	BOLT	1
20	5F8354	SPACER	1

REF NO	PART NUMBER	DESCRIPTION	QTY
21	1S4662	ELBOW	2
22	L 1352	BOLT----- (3.25" Long)	2
22	L 1143	BOLT----- (2.50" Long)	2
23	9M7959	CLAMP	6
24	6L4855●	HOSE	2
24	4S6822▲	HOSE	2
25	3J5390	PLUG	1
26	4J2506	SEAL	1
27	8L3903	COVER	1
28	5F3999	SEAL	1
29	9L2252	GASKET	1
30	1A5964	BOLT	1
31	T 65	BOLT	4
32	5S9059	GASKET	1
33	8L3883●	HOUSING ASSEM.	1
33	7L532▲	HOUSING ASSEM.	1
34	4M1336	FERRULE	1
	(Part of 7L532 & 8L3883 Housing Assem.)		
35	4L2892	PIPE	1
36	6L4757	HOSE	1
37	4B4278	WASHER	6

103655

8L4848 EXPANSION TANK AND WATER LINES GROUP

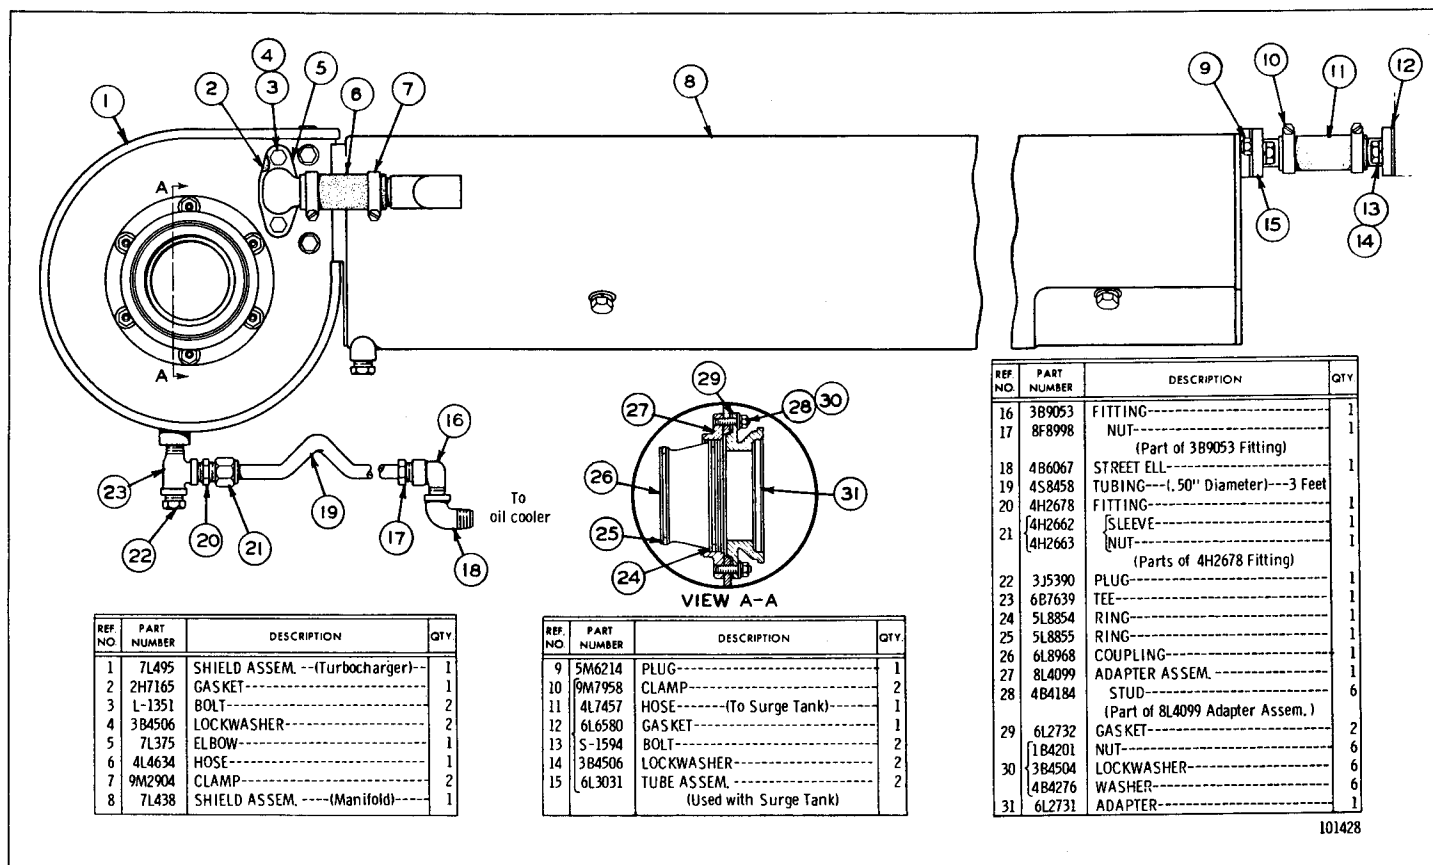


101428

7L931 EXHAUST MANIFOLD WATER SHIELD GROUP--PART 1

"CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

7L931 EXHAUST MANIFOLD WATER SHIELD GROUP--PART 2

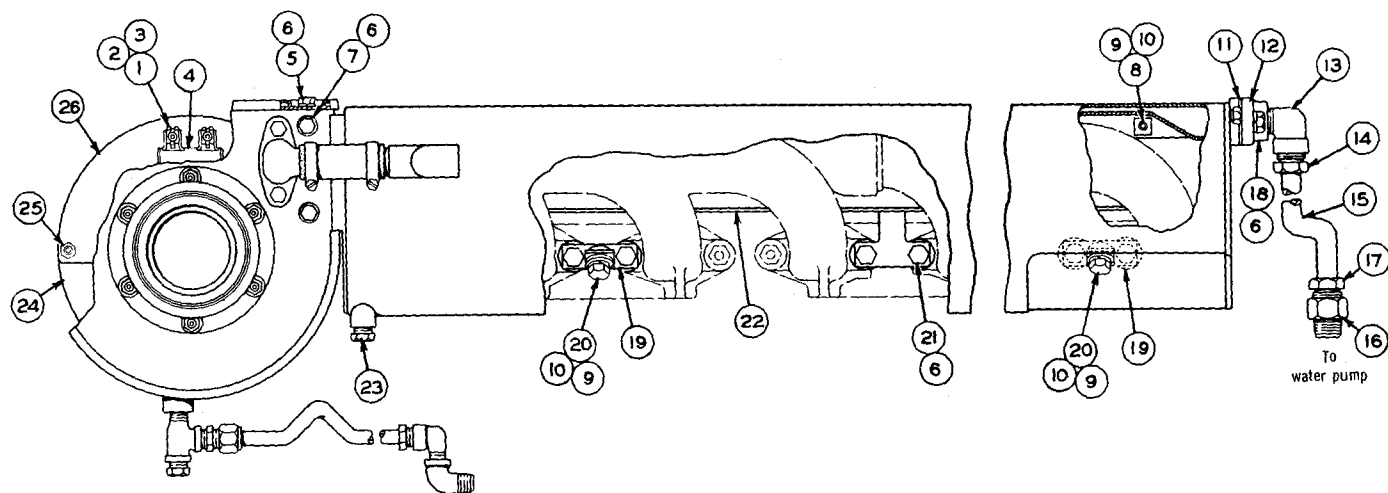


REF NO	PART NUMBER	DESCRIPTION	QTY
1	S-1613	BOLT-----	2
2	6L5470	NUT----- (Retaining)-----	2
3	8M6701	WASHER-----	2
4	6L5257	BRACKET-----	1
5	T-102	BOLT-----	2
6	3B4506	LOCKWASHER-----	12
7	L-1351	BOLT-----	2
8	2H3755	BOLT-----	6
9	3B4505	LOCKWASHER-----	8
10	4B4277	WASHER-----	8
11	2S2934	GASKET-----	1


REF NO	PART NUMBER	DESCRIPTION	QTY
12	7L919	COVER-----	1
13	8B7639	FITTING-----	1
14	8F8999	NUT----- (Part of 8B7639 Fitting)	1
15	7L937	TUBE-----	1
16	4B3041	FITTING----- (Used without Surge Tank)	1
17	8F8999	NUT----- (Part of 4B3041 Fitting)	1
18	1A2029	BOLT-----	2
19	8L4965	SUPPORT ASSEM.-----	2

REF NO	PART NUMBER	DESCRIPTION	QTY
20	S-1617	BOLT-----	2
21	T-102	BOLT-----	6
22	8L4964	NUT----- (Spacer)-----	6
23	8L5034	SHIELD ASSEM.----- (Water)-----	1
24	3J5390	PLUG-----	1
25	6L2737	SHIELD----- (Turbocharger-Lower)-----	1
26	6L1569	BOLT-----	2
27	8F2103	NUT-----	2
28	8M9936	LOCKWASHER-----	2
29	8H5505	WASHER-----	2
30	8L5121	SHIELD----- (Turbocharger-Upper)-----	1

CATERPILLAR D333C ENGINE

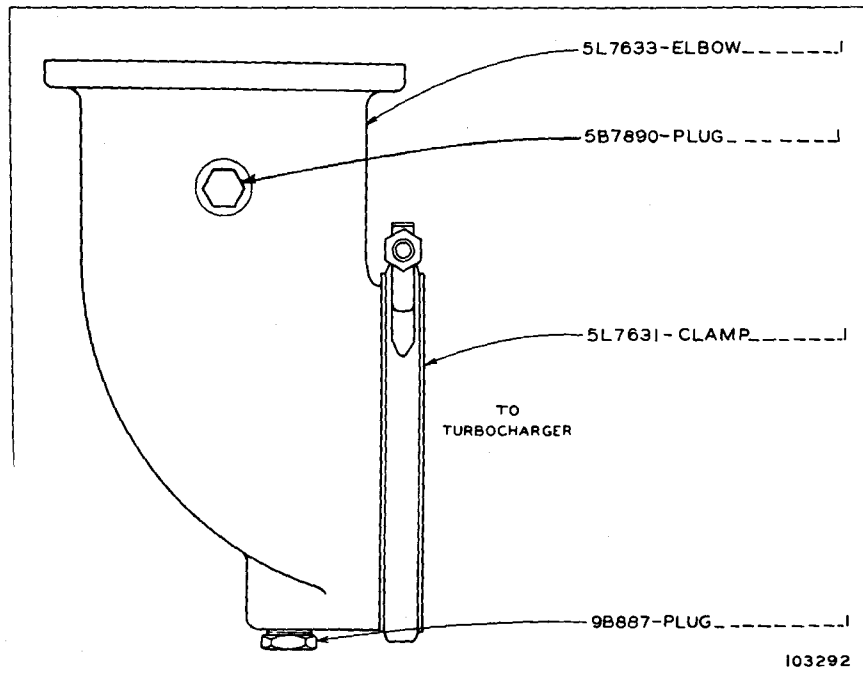


5L7660 EXHAUST ELBOW GROUP--4 INCH

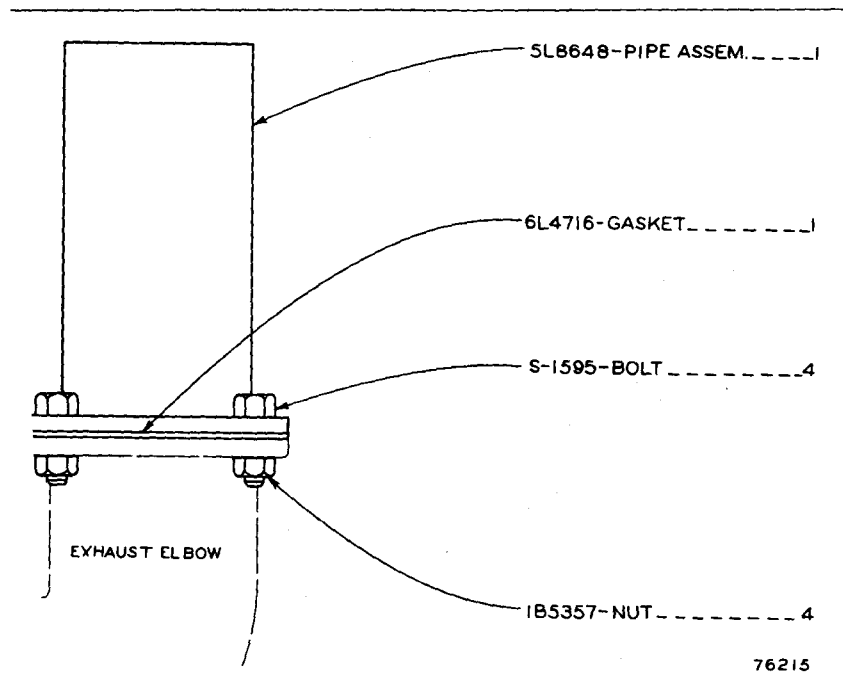



5L8649 EXHAUST PIPE GROUP--4 INCH

WAYS GIVE SERIAL

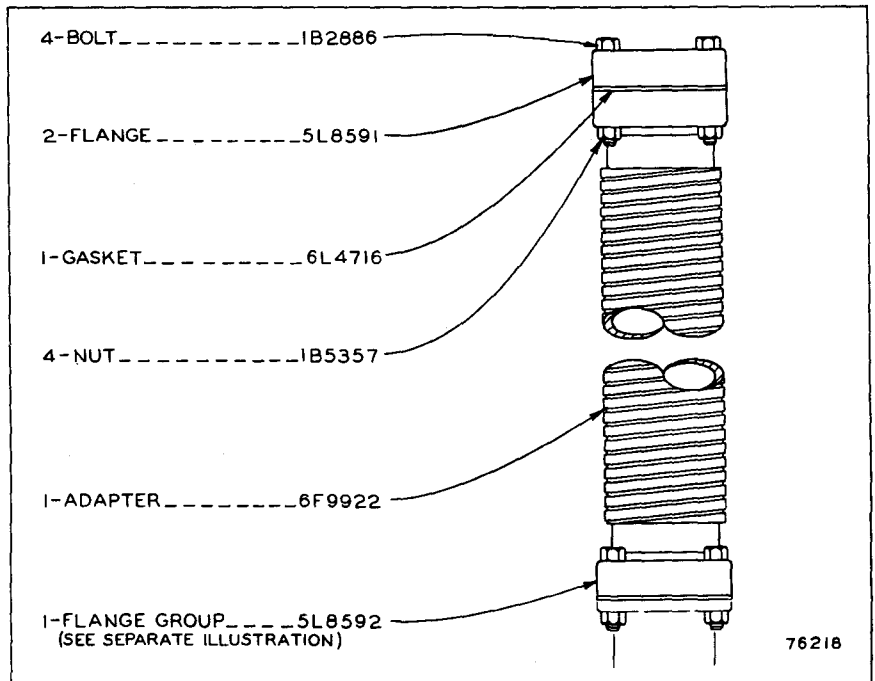


5L8602 VERTICAL EXHAUST FITTING GROUP--4 INCH

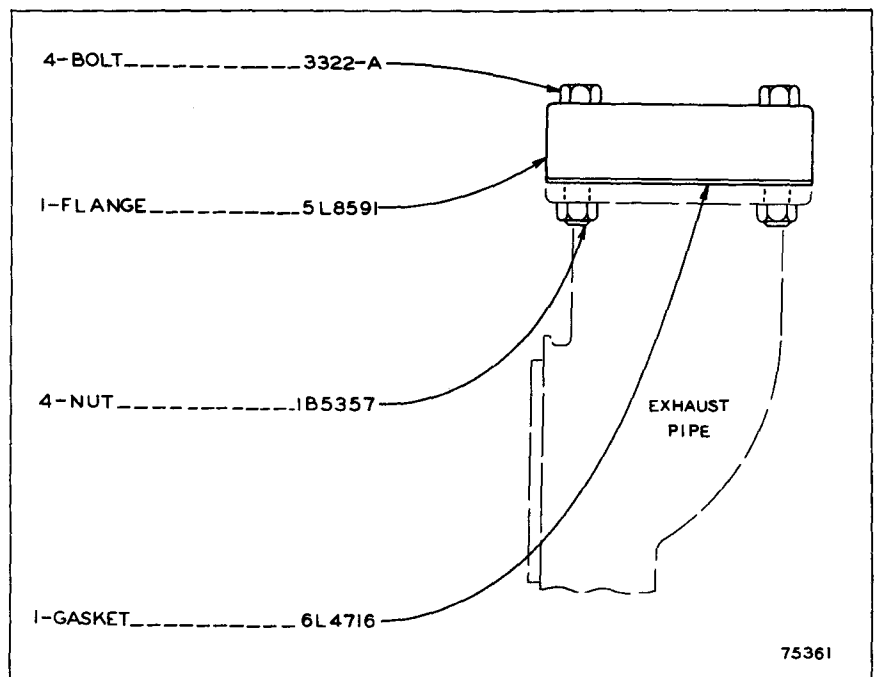5L8592 EXHAUST FLANGE GROUP--4 INCH
ALSO PART OF 5L8602 VERTICAL EXHAUST FITTING GROUP

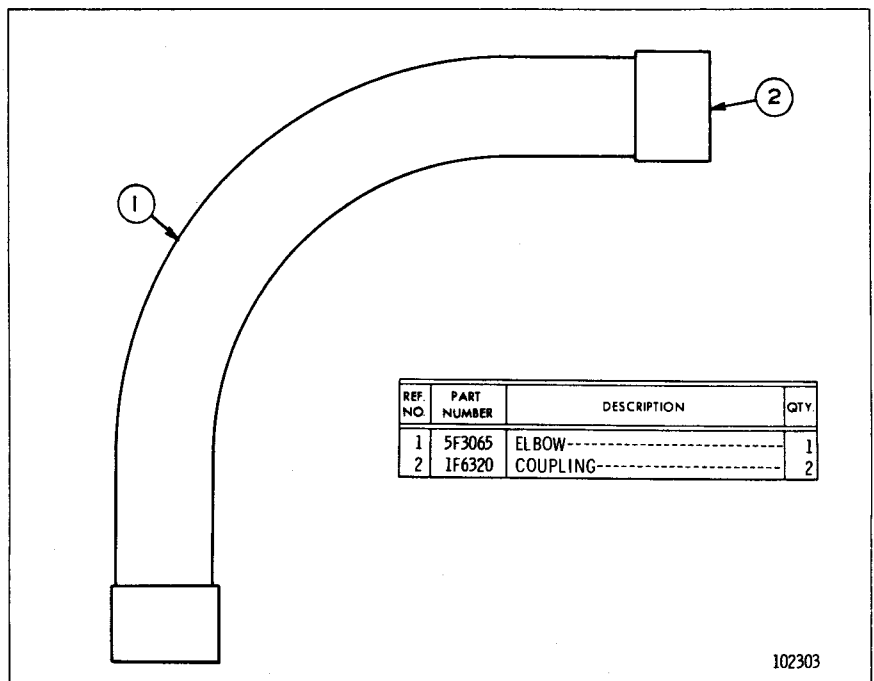


7L443 EXHAUST ELBOW GROUP--90° BEND--4 INCH

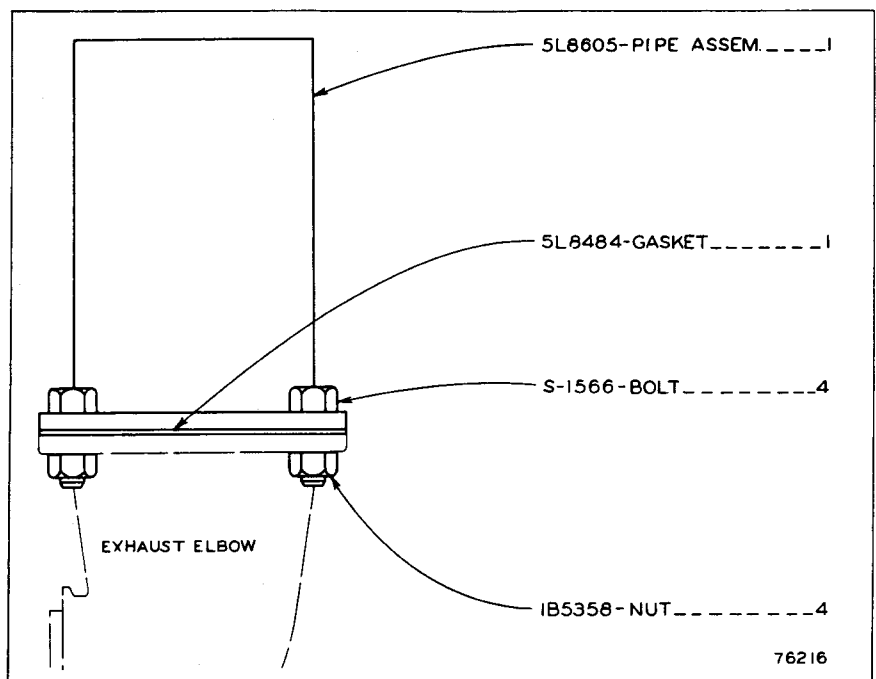



5L8632 EXHAUST PIPE GROUP--5 INCH

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

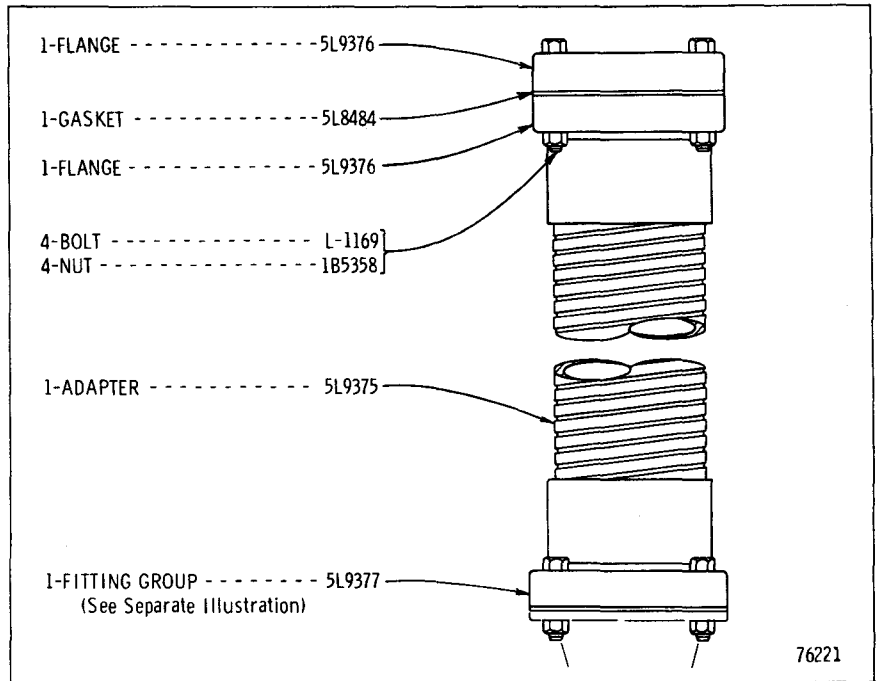


6L3093 VERTICAL EXHAUST FITTING GROUP--5 INCH

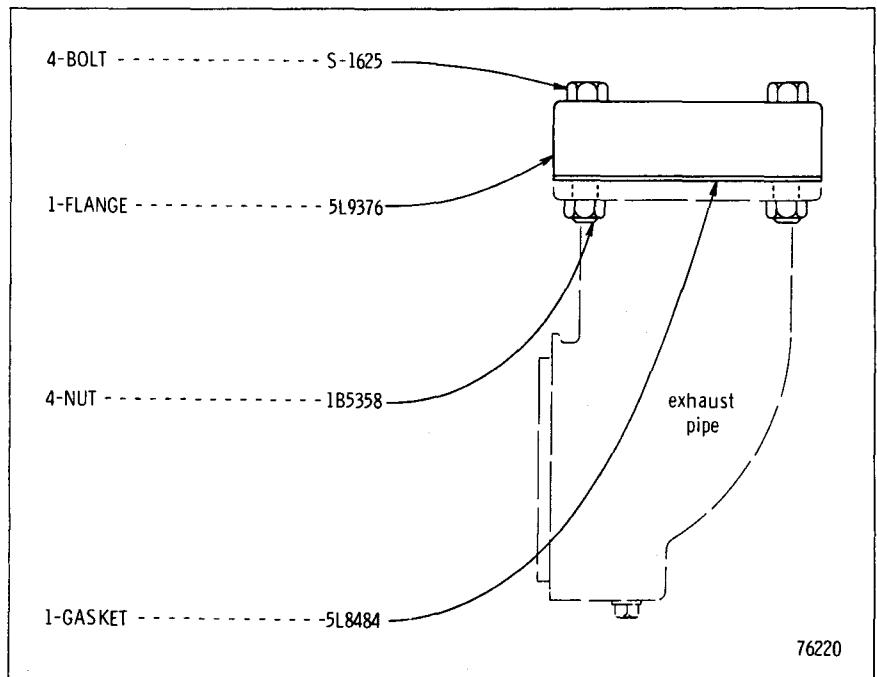5L9377 EXHAUST FITTING GROUP--5 INCH
ALSO PART OF 6L3093 VERTICAL EXHAUST FITTING GROUP

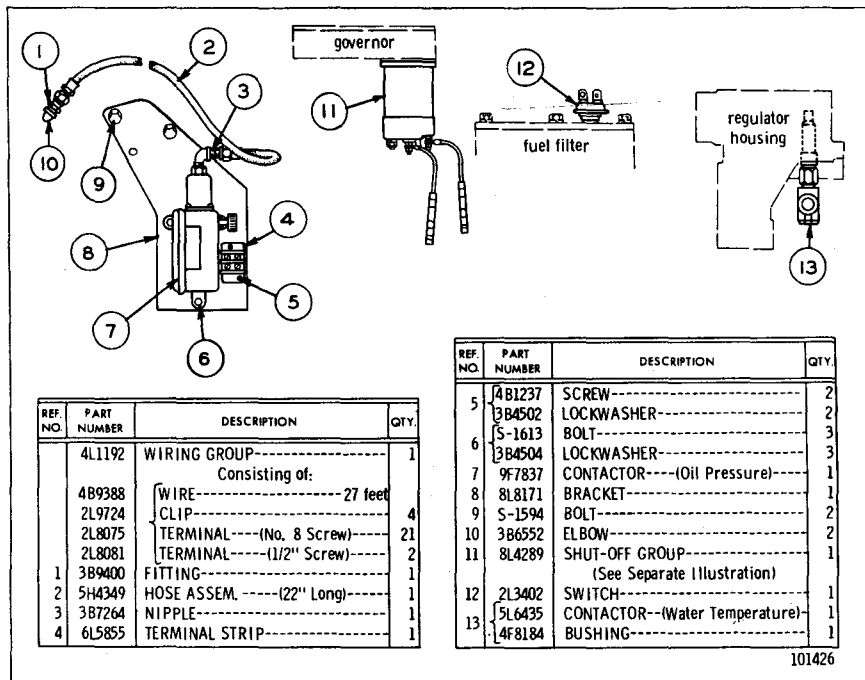


8L4290 OIL PRESSURE & WATER TEMPERATURE SHUT-OFF ARRANGEMENT
8L4289 SOLENOID SHUT-OFF GROUP PARTS ARE SHOWN ON PAGE 47

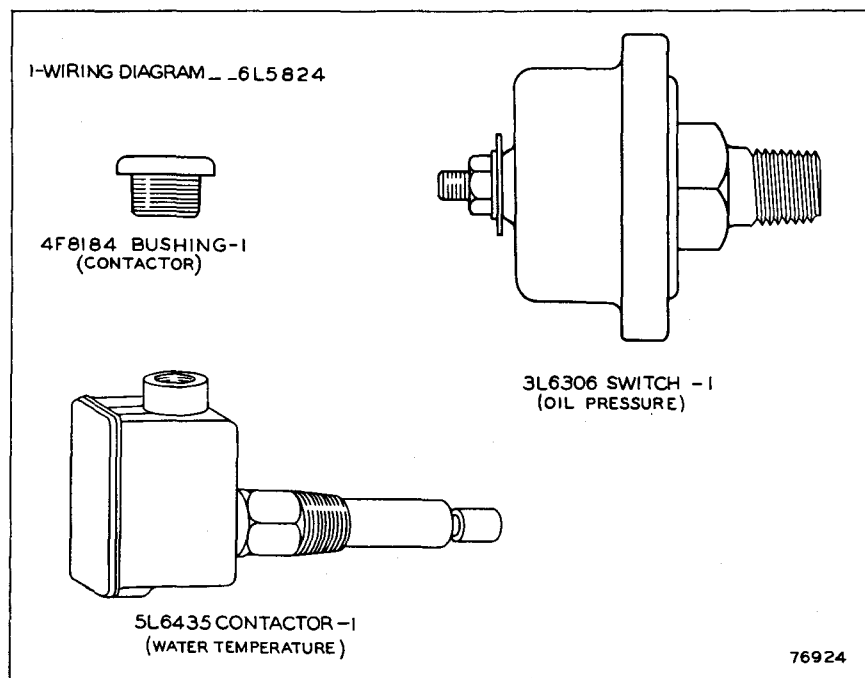


5L9879 SAFETY CONTACTOR GROUP--OIL PRESSURE & WATER TEMPERATURE

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

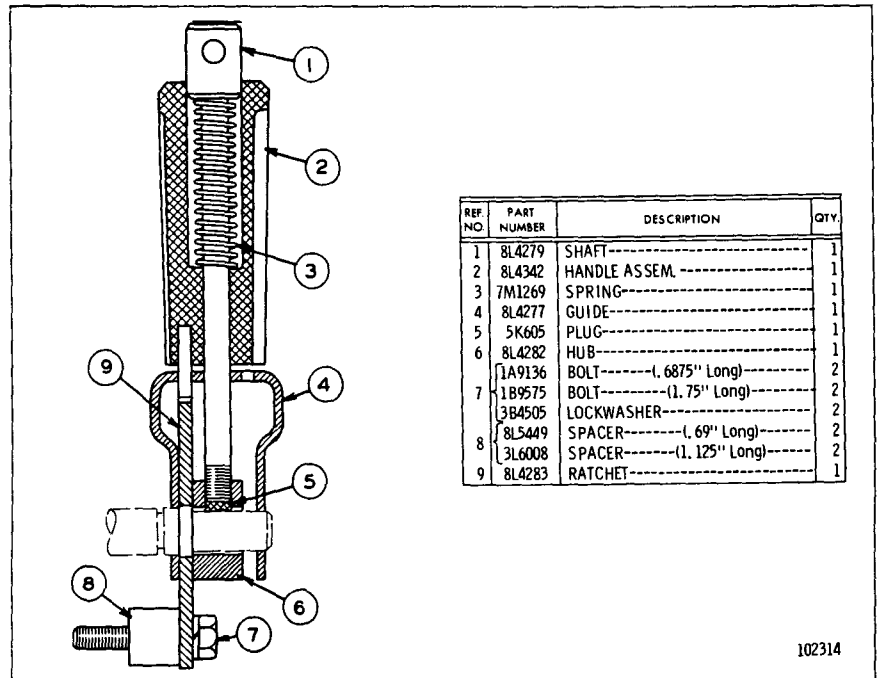


102314

8L4443 GOVERNOR CONTROL GROUP--Positive Lock

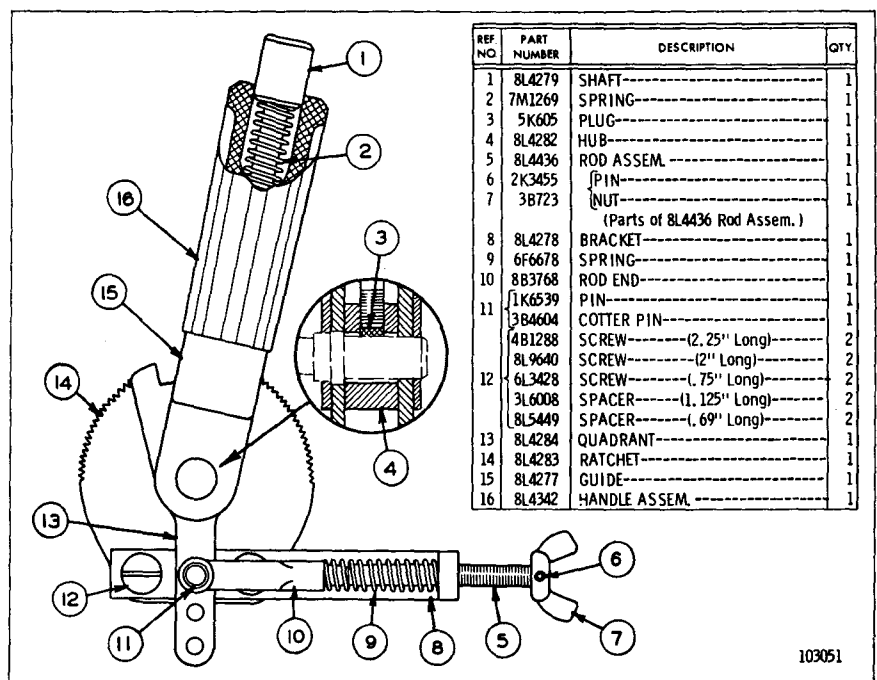


103051

8L4444 GOVERNOR CONTROL GROUP--Vernier and Positive Lock

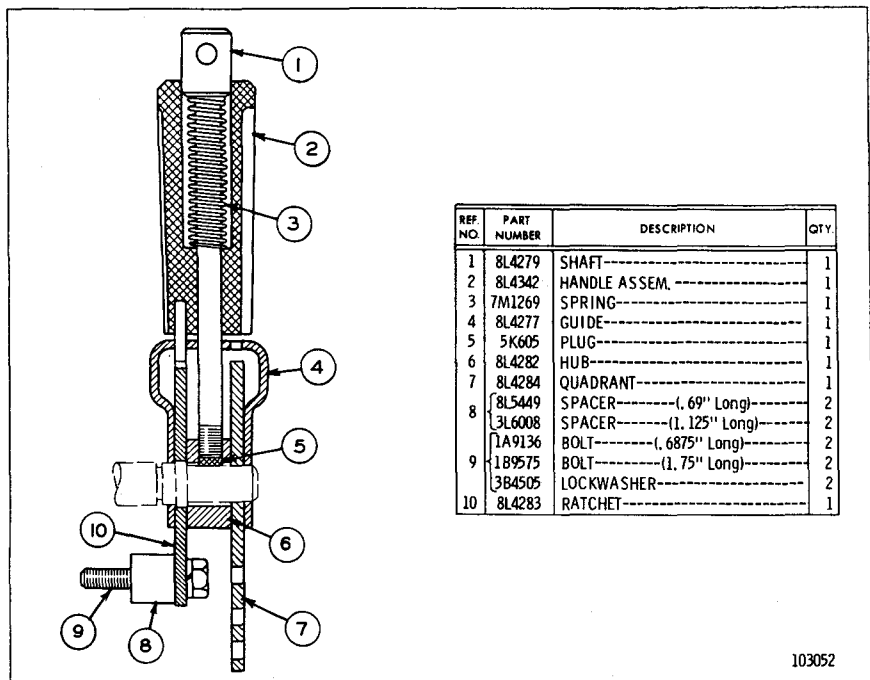

8L4445 GOVERNOR CONTROL GROUP--Remote and Positive Lock

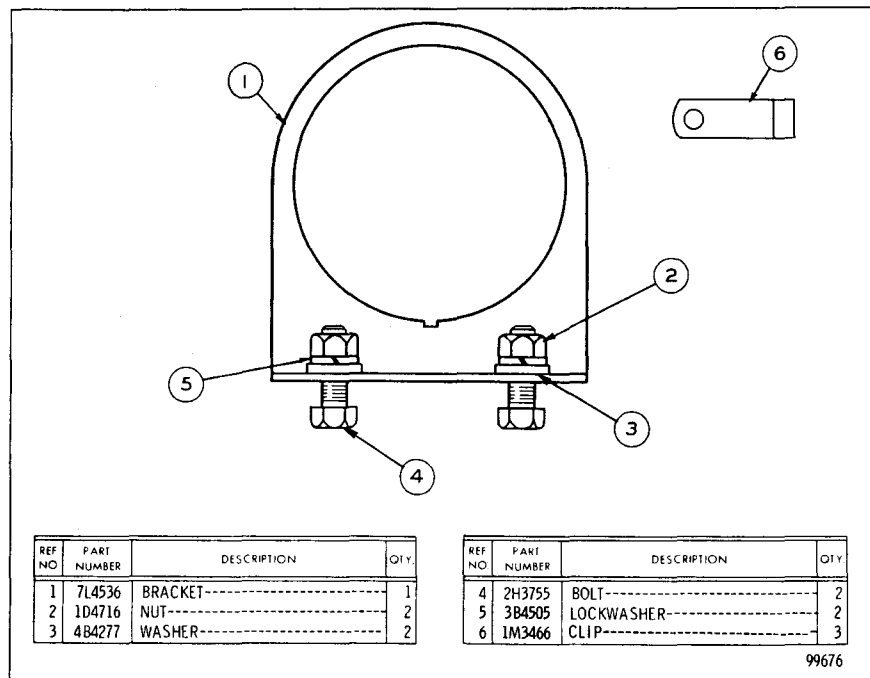7L4535 TACHOMETER MOUNTING GROUP
Part of Mechanical Tachometers

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

7L3083 ELECTRIC TACHOMETER GROUP--12 VOLT

CONSISTS OF:

- 1 5L7434 TACHOMETER ASSEMBLY
- 1 5L7452 SENDING UNIT ASSEMBLY
- 1 PRINT OF WIRING DIAGRAM

7L3084 ELECTRIC TACHOMETER GROUP--24 & 32 VOLT

CONSISTS OF:

- 1 5L7445 TACHOMETER ASSEMBLY
- 1 5L7452 SENDING UNIT ASSEMBLY
- 1 PRINT OF WIRING DIAGRAM

ELECTRIC TACHOMETERS

REMOTE MOUNTED

CONSISTS OF:

- 1 5L9896 TACHOMETER
- 1 5L2277 ADAPTER--DUAL ANGLE
- 1 6B3124 ADAPTER--DIRECT
- 1 5L9195 FLEXIBLE SHAFT--12 FOOT
- OR -
- 1 5L7775 FLEXIBLE SHAFT--15 FOOT
- OR -
- 1 5L9113 FLEXIBLE SHAFT--20 FOOT

ENGINE MOUNTED


CONSISTS OF

PAGE

- 1 7L4535 TACHOMETER MOUNTING GROUP 74
- 1 5L9896 TACHOMETER
- 1 1L9112 ADAPTER
- 1 6H4293 FLEXIBLE SHAFT--50 INCHES

MECHANICAL TACHOMETERS

REF NO	PART NUMBER	DESCRIPTION	QTY
	8L5833	GOVERNOR ASSEM.-----	1
1	6L5506	GOVERNOR ASSEM.-----	1
		Consisting of:	
		GOVERNOR ASSEM.-----	1
		(See Separate Illustration)	
2	2L8919	DISCONNECT-----	6
3	8F1559	INSULATOR-----	3
4	8L5817	LEVER-----	1
5	3L1474	PIN-----	1

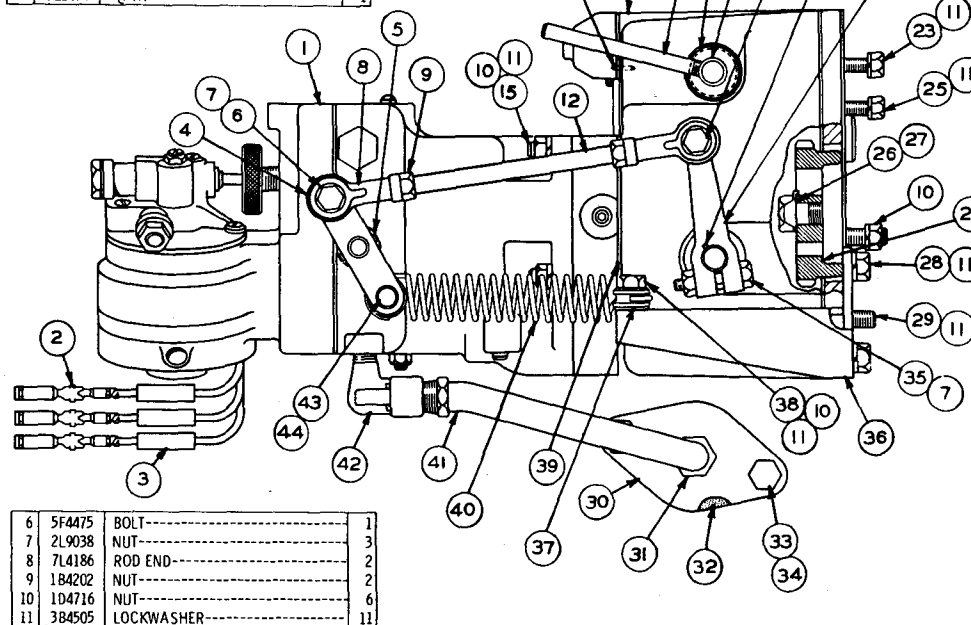


6	5F4475	BOLT-----	1
7	2L9038	NUT-----	3
8	7L4186	ROD END-----	2
9	1B4202	NUT-----	2
10	1D4716	NUT-----	6
11	3B4505	LOCKWASHER-----	11

REF NO	PART NUMBER	DESCRIPTION	QTY
12	1L2313	ROD-----	1
13	8L5852	HOUSING ASSEM.-----	1
14	7H3639	PIN-----	1
15	4L7547	STUD-----	4
16	2M2489	SEAL-----	2
17	4F4541	BEARING-----	4
		(Parts of 8L5852 Housing Assem.)	
18	7L4984	STUD-----	1
19	7L4983	SHAFT-----	1
20	S1597	BOLT-----	1
21	5H2532	KEY-----	1
22	8B4712	LEVER-----	1
23	6H5636	BOLT-----	1
24	8L5651	GEAR----- (42 Teeth)-----	1
25	1B7182	BOLT-----	1
26	5B2208	BOLT-----	1
27	8M7640	LOCK-----	1
28	4B9883	BOLT-----	2
29	3H3243	BOLT-----	2
30	5L8683	FLANGE-----	1
31	3B8997	FITTING-----	1
	8F8998	NUT-----	1
		(Part of 3B8997 Fitting)	
32	4M6480	GASKET-----	1
33	S1594	BOLT-----	2
34	3B4506	LOCKWASHER-----	2
35	4B2152	BOLT-----	1
36	8L5969	BRACKET-----	1
37	5B9290	EYELET-----	2
38	S1618	BOLT-----	1
39	6L3528	GASKET-----	1
40	8L5063	SPRING-----	1
41	8L5958	TUBE----- (Governor Drain)-----	1
42	2H9866	FITTING-----	1
	8F8998	NUT-----	1
		(Part of 2H9866 Fitting)	
43	1A2457	PIN-----	1
44	3B4607	COTTER PIN-----	1
	3L9429	WIRING DIAGRAM-----	1


103038

8L5670 WOODWARD GOVERNOR GROUP—Part 1
6L5506 Governor parts are shown on Page 74D

8L5670 WOODWARD GOVERNOR GROUP-Part 2

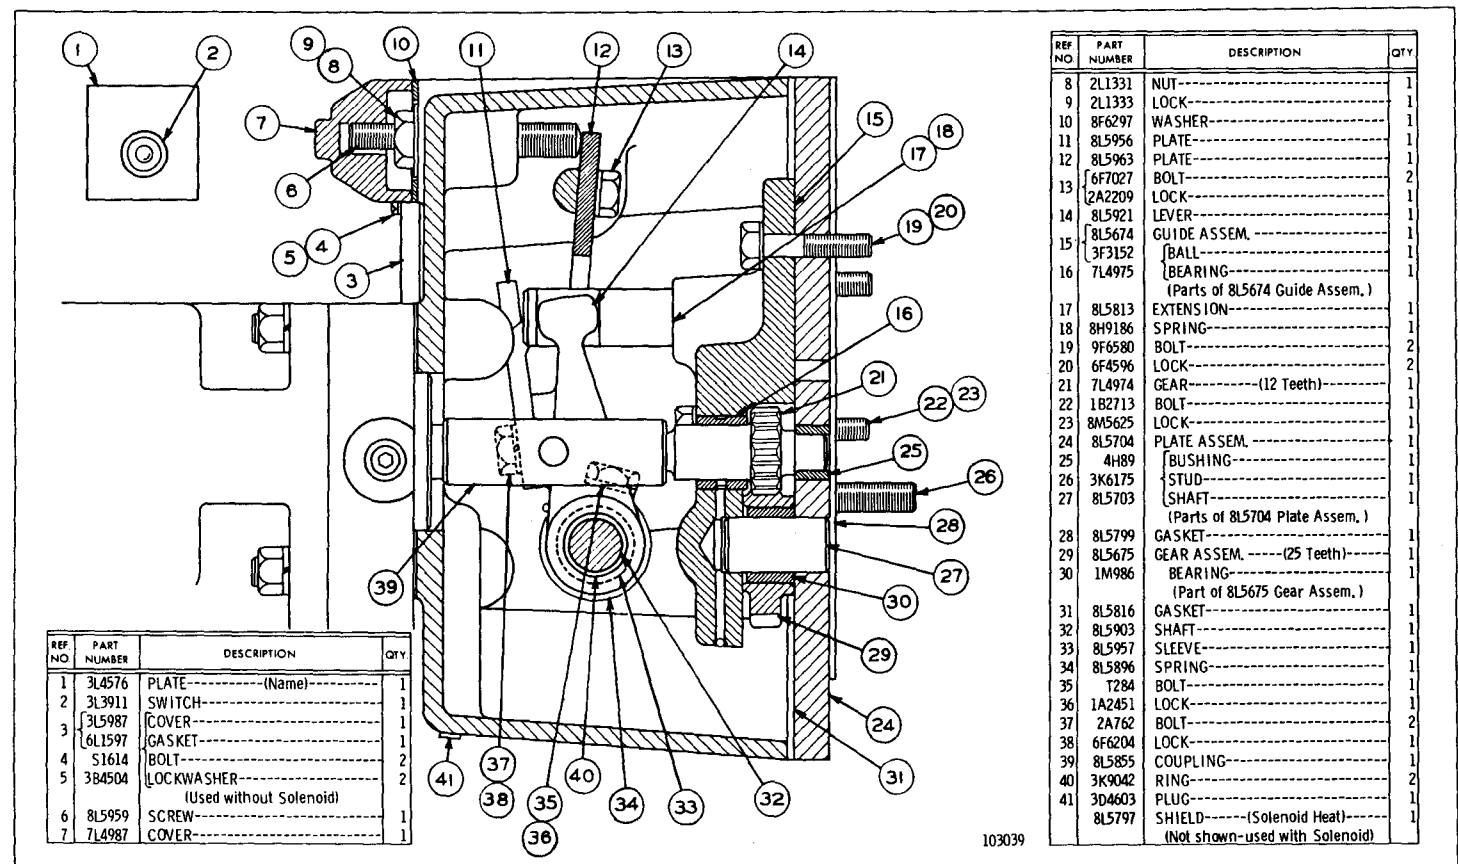


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

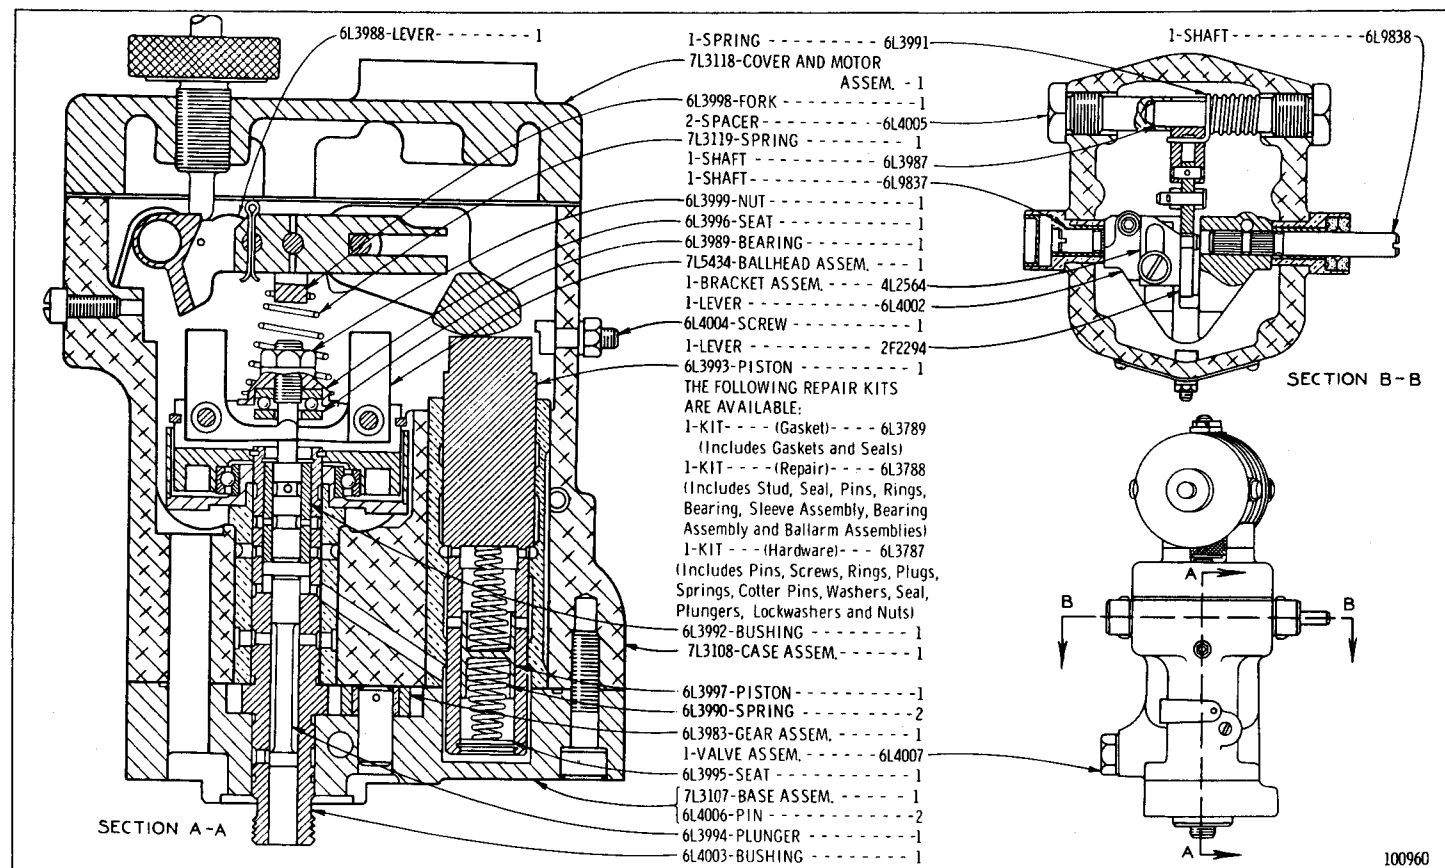


6L5506 GOVERNOR ASSEMBLY

Part of 8L5670 Woodward Governor Group shown on Page 74B


8L5327 HOOD AND DASH GROUP

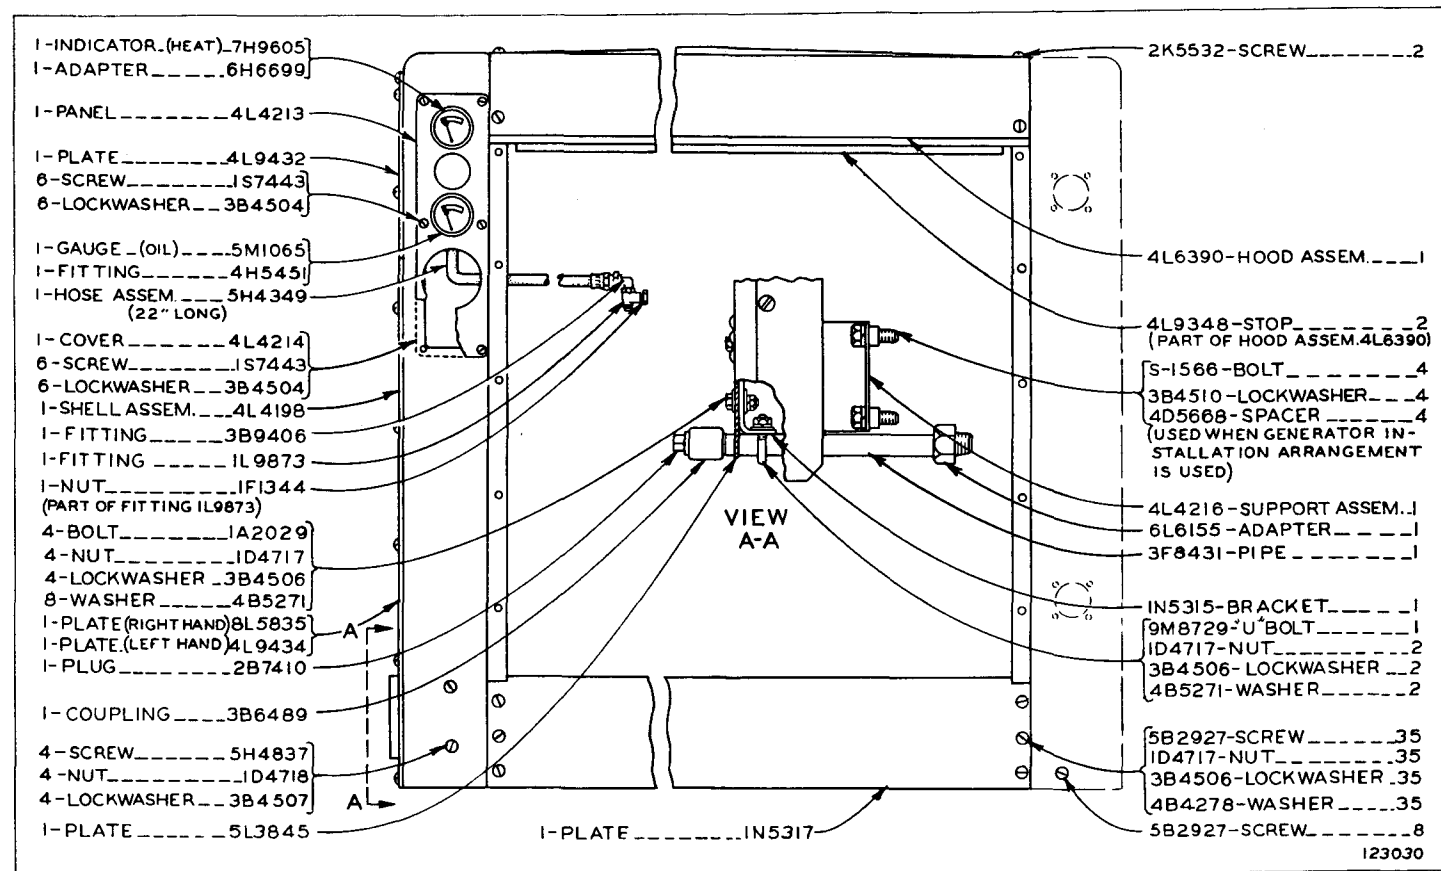

123030

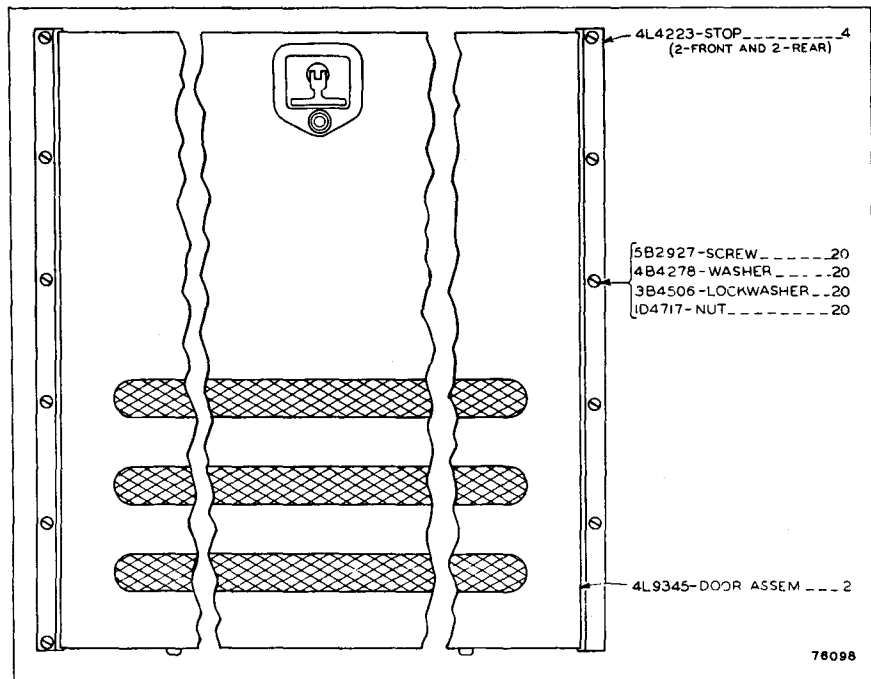


4L6506 DOOR GROUP
FOR USE WITH HOOD AND DASH

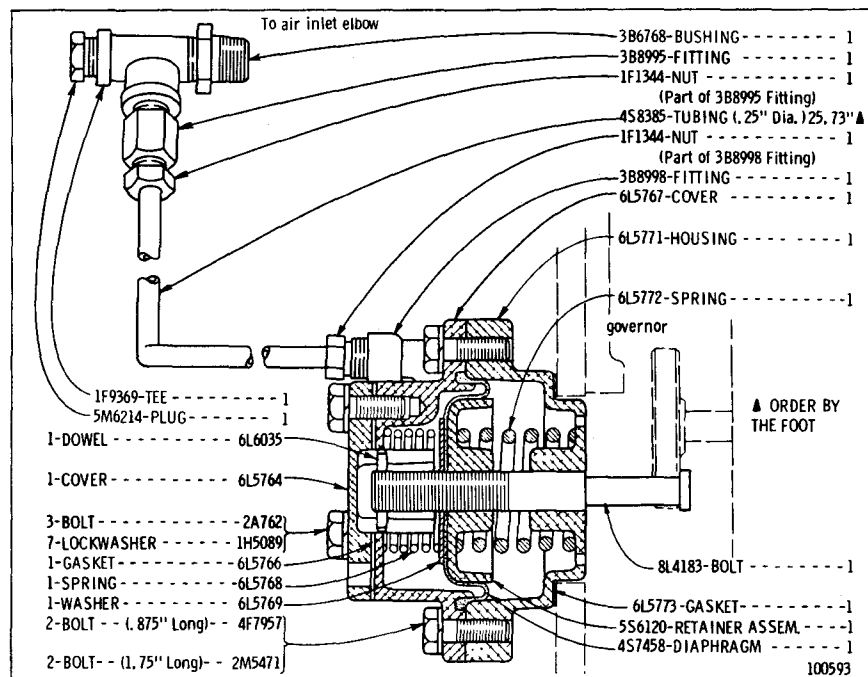


7L850 FUEL RATIO CONTROL GROUP

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

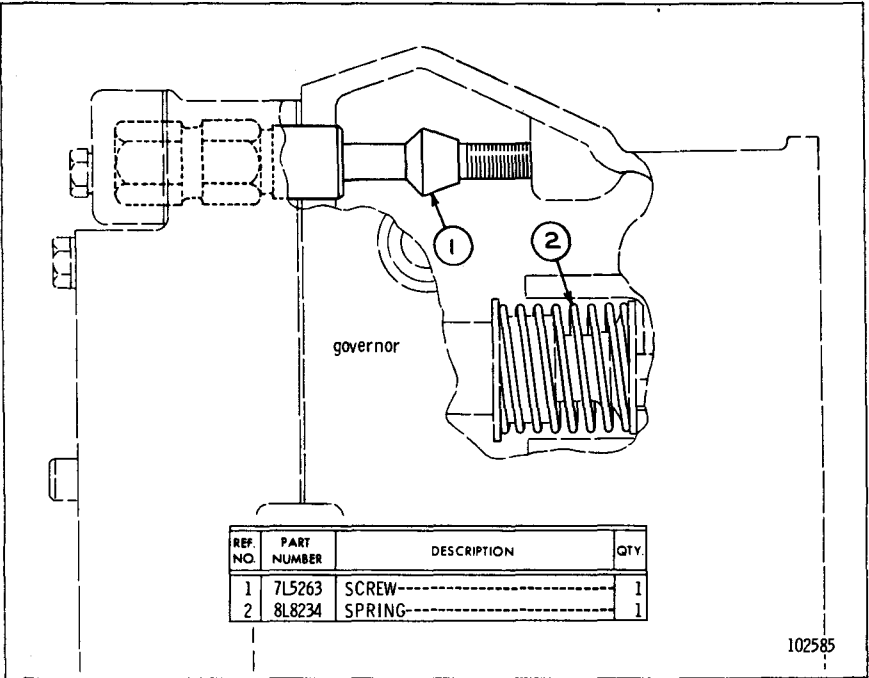


8L8220 GOVERNOR CONVERSION GROUP—3% Regulation
Only separate parts serviced
When complete Group is required order 1N7145

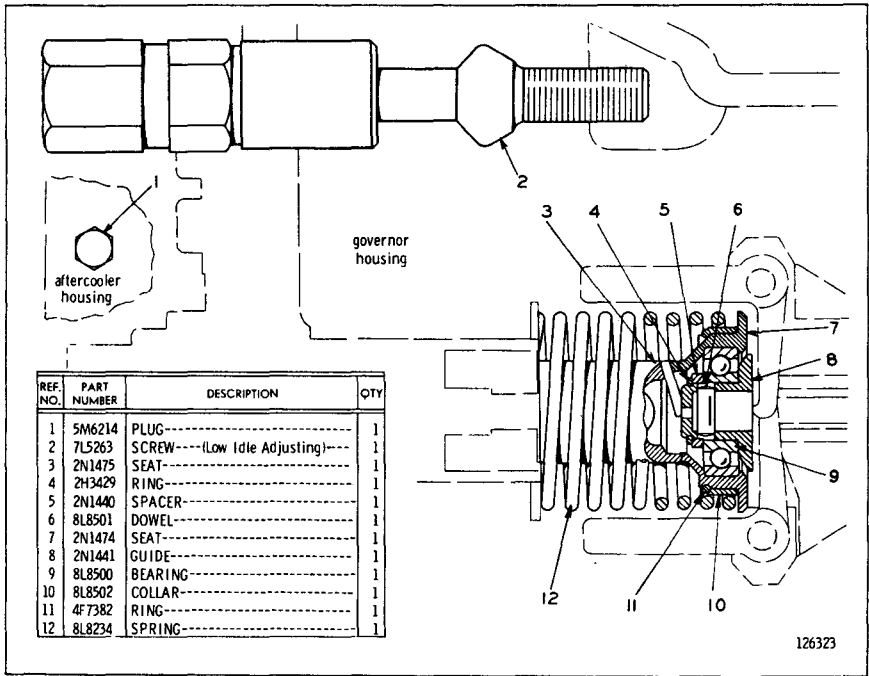

1N7145 GOVERNOR CONVERSION GROUP—3% Regulation


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

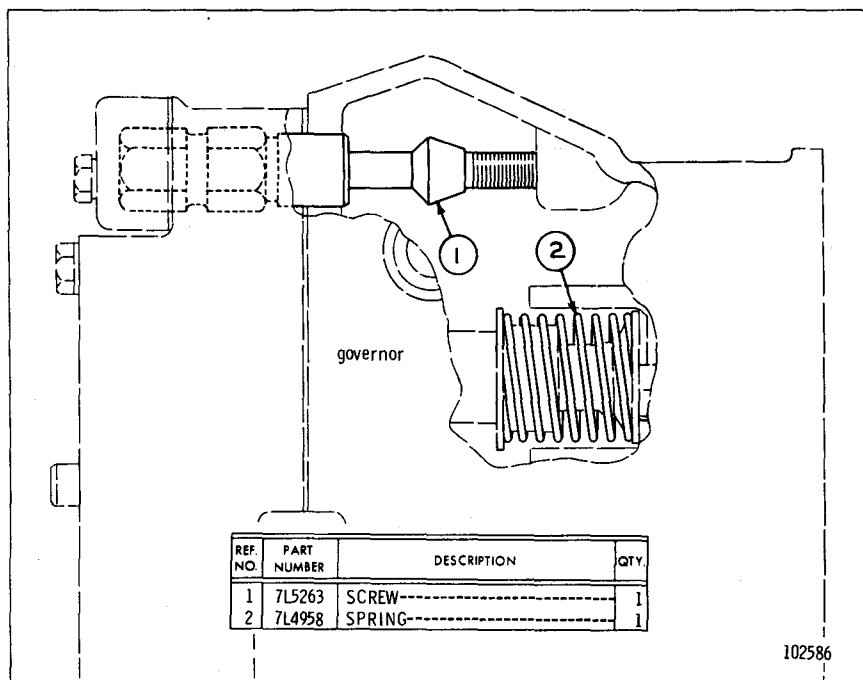

8L8221 GOVERNOR CONVERSION GROUP—3% Regulation


Only separate parts serviced

When complete Group is required order 1N7149

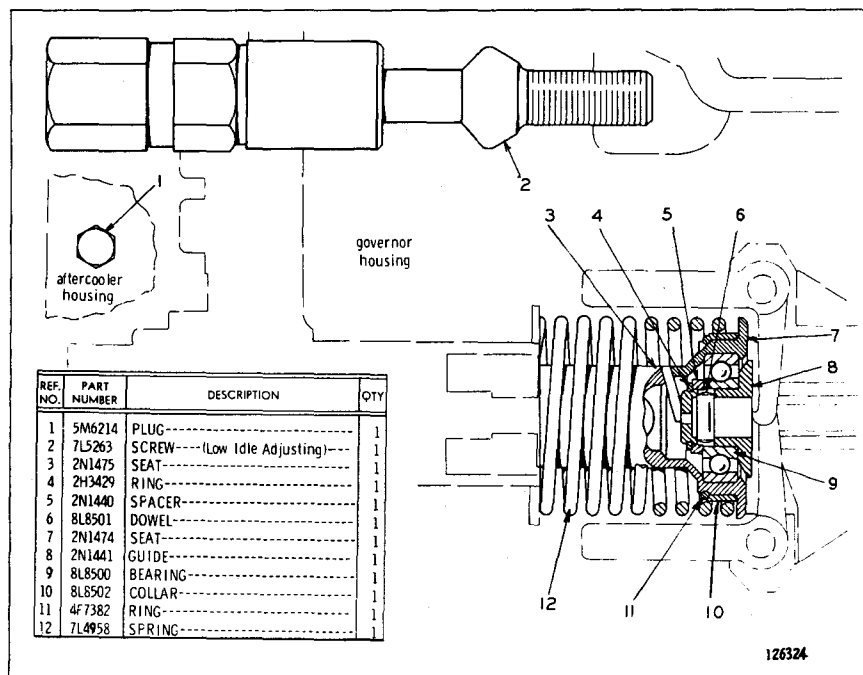


1N7149 GOVERNOR CONVERSION GROUP—3% Regulation

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

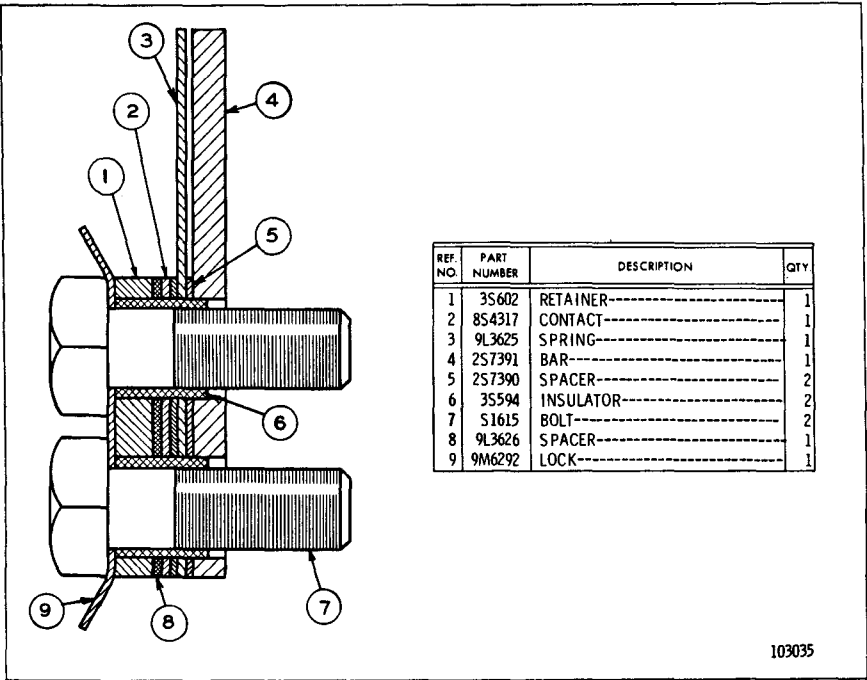


8L8682 GOVERNOR TORQUE SPRING GROUP

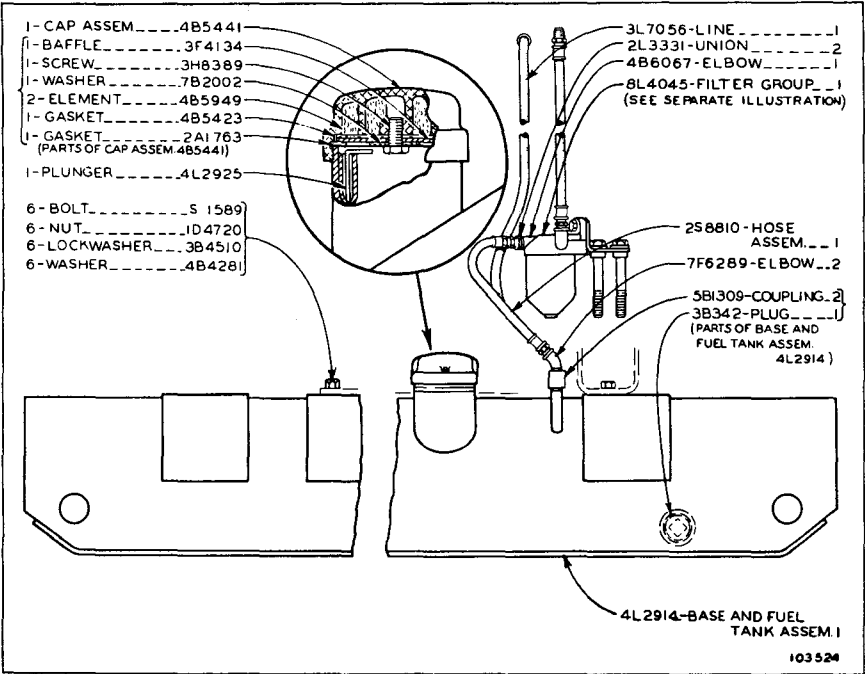


8L4485 BASE AND FUEL TANK GROUP—Long Tank
8L4045 Primary Fuel Filter parts are shown on Pages 78 & 79


ONLY HOATERBULLARY PARTS GIVE HOATERBULLARY PERFORMANCE

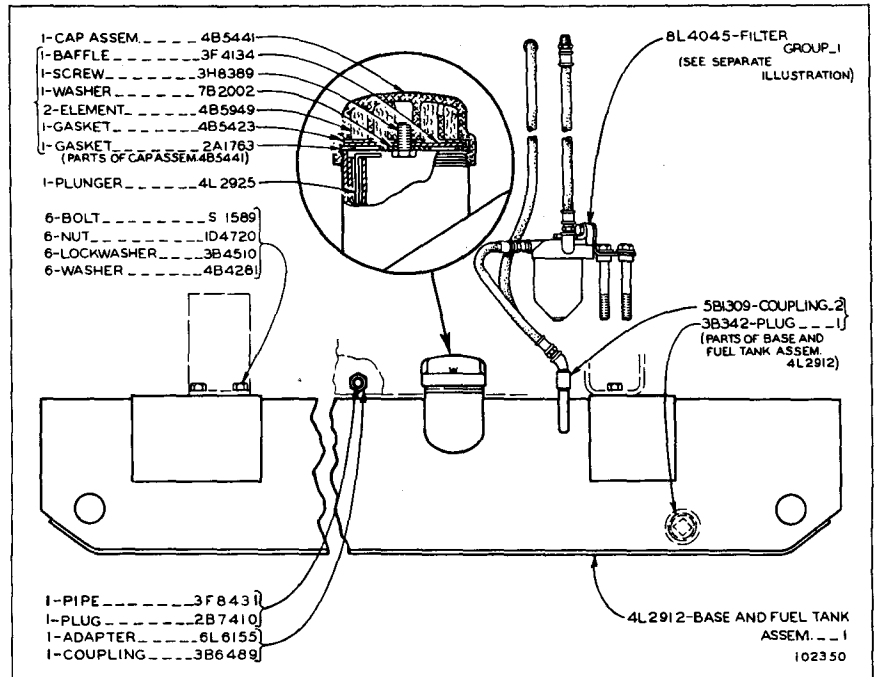


8L4486 BASE AND FUEL TANK GROUP—Short Tank—Type 1
 8L4045 Primary Fuel Filter parts are shown on Page 78

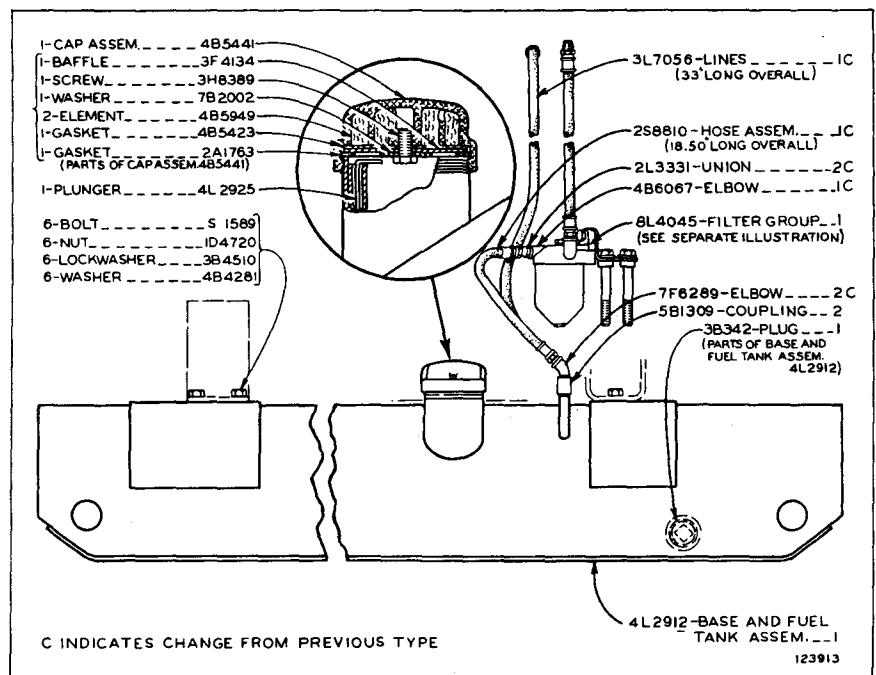

8L4486 BASE AND FUEL TANK GROUP—Short Tank—Type 2
 8L4045 Primary Fuel Filter parts are shown on Page 79

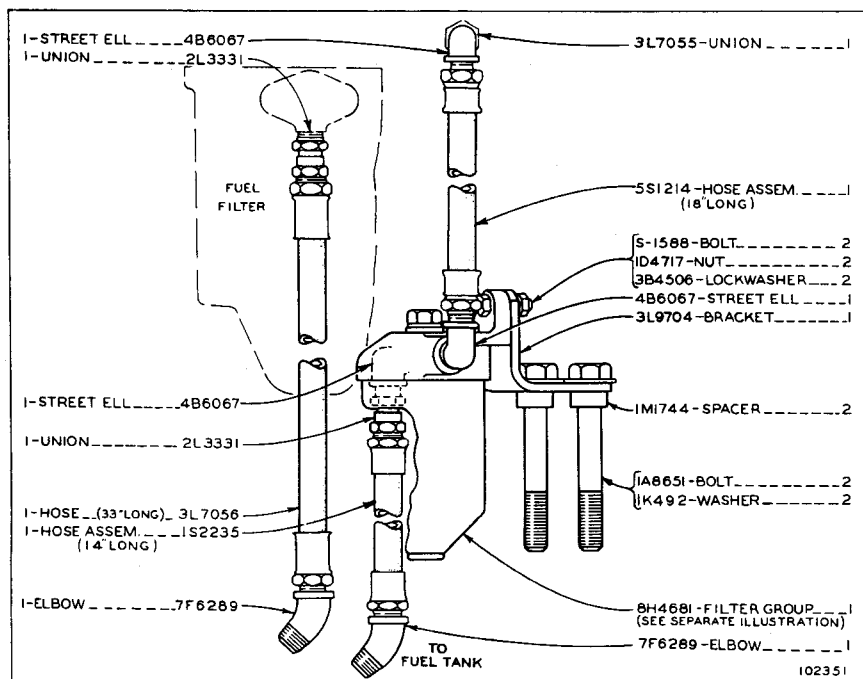


8L4045 PRIMARY FUEL FILTER GROUP-Type 1
 Also part of 8L4485 and 8L4486 Base and Fuel Tank Groups
 shown on Pages 76C and 77

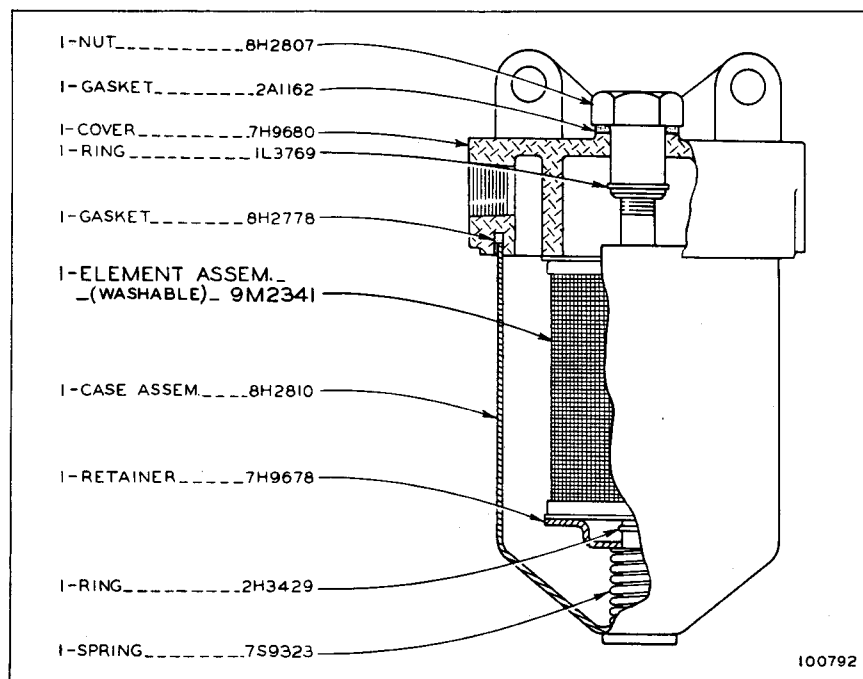


8H4681 PRIMARY FUEL FILTER GROUP
 Part of 8L4045 Primary Fuel Filter Group

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

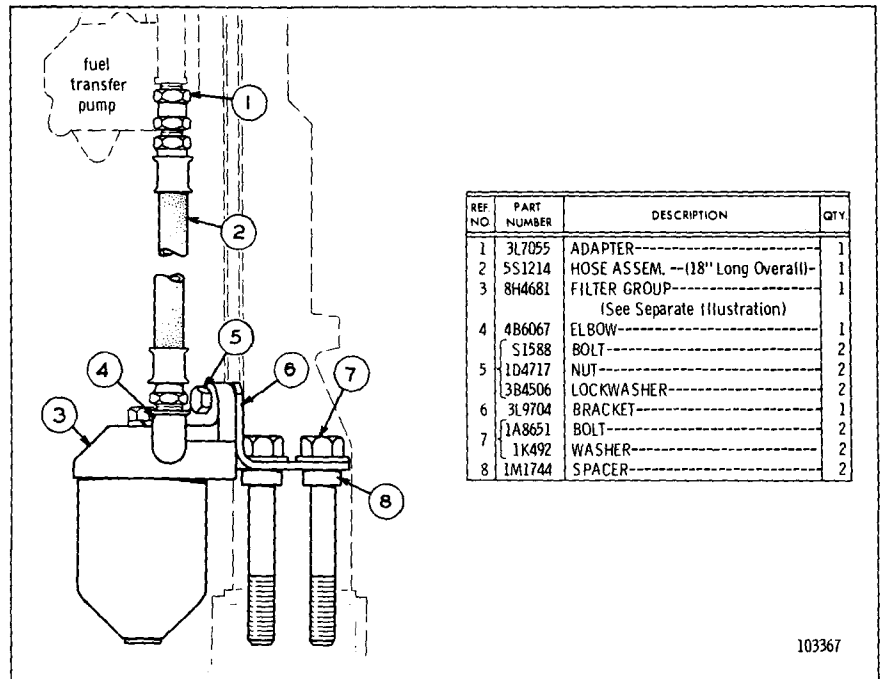


8L4045 PRIMARY FUEL FILTER GROUP--Type 2
Also part of 8L4485 and 8L4486 Base and Fuel Tank Groups
shown on Pages 76C and 77

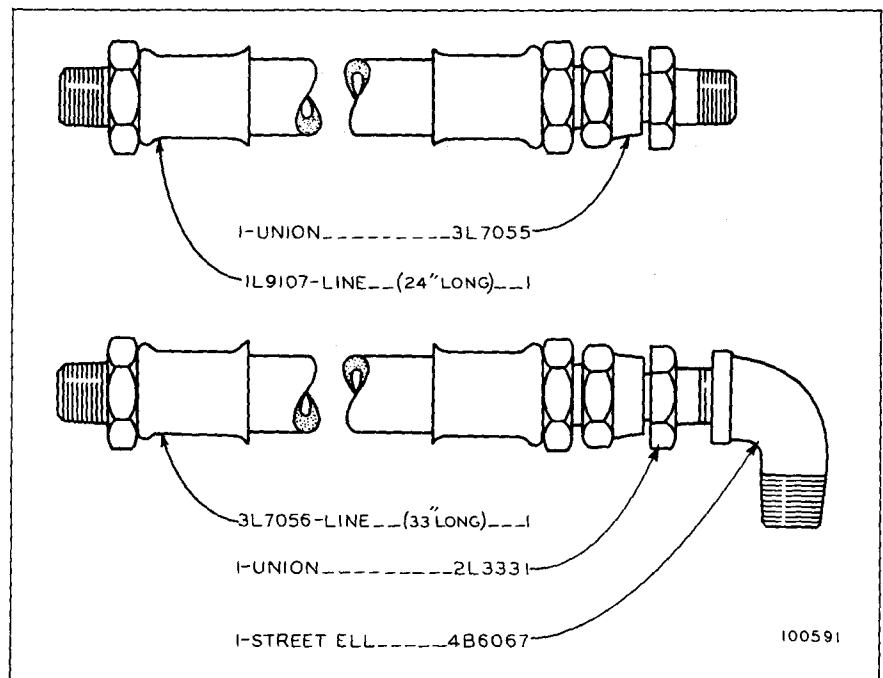


8L4454 FLEXIBLE FUEL LINES GROUP
Also part of 8L8421 Generator Installation Arrangement listed on Page 83

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

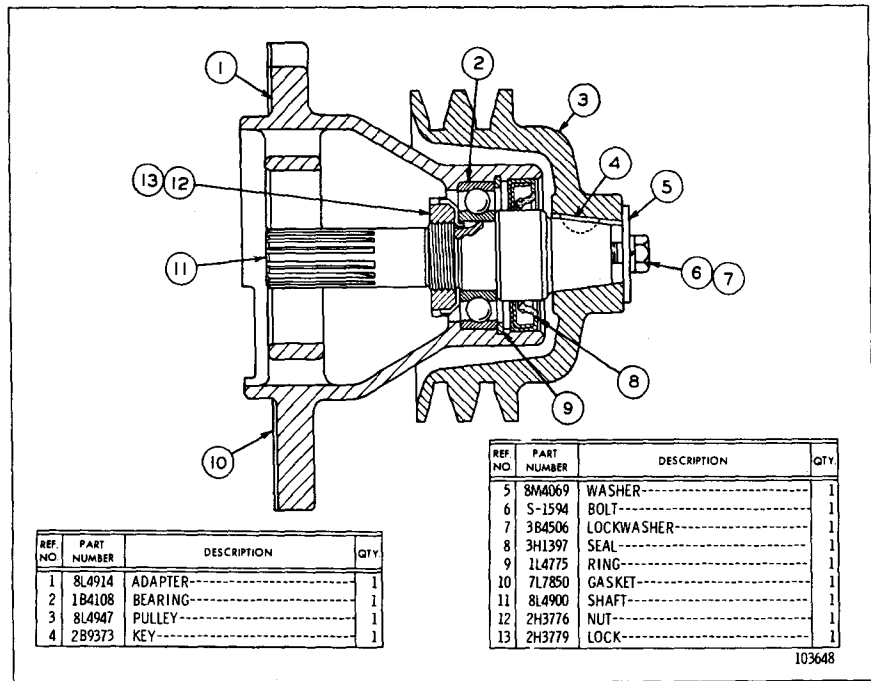


8L4950 AUXILIARY DRIVE GROUP—Upper
 For use with Attachments not exceeding 10 H.P.
 For use with 8L8465 Water Pump Group

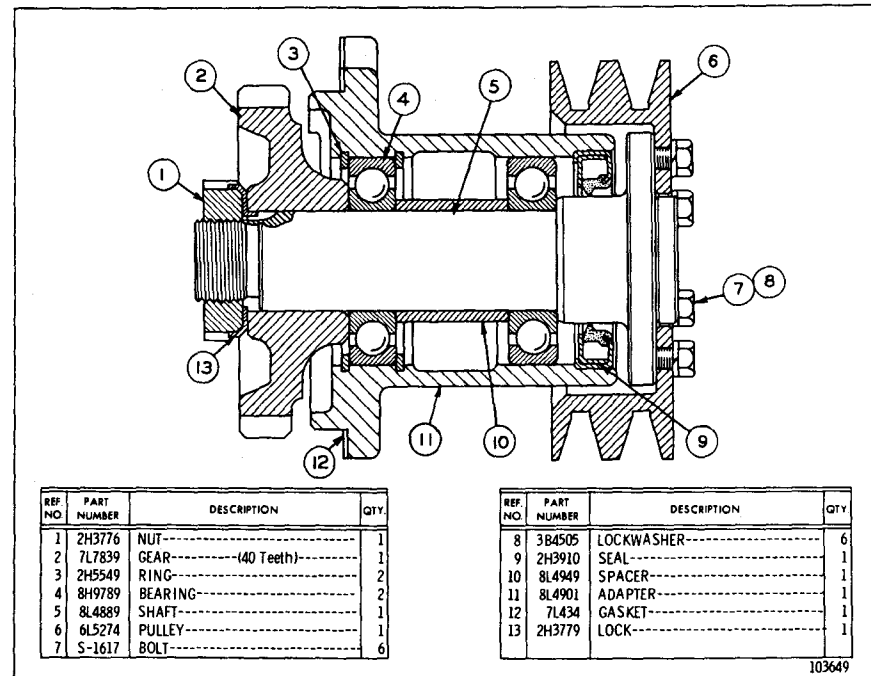


8L4951 AUXILIARY DRIVE GROUP—Lower
 For use with Attachments not exceeding 10 H.P.


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

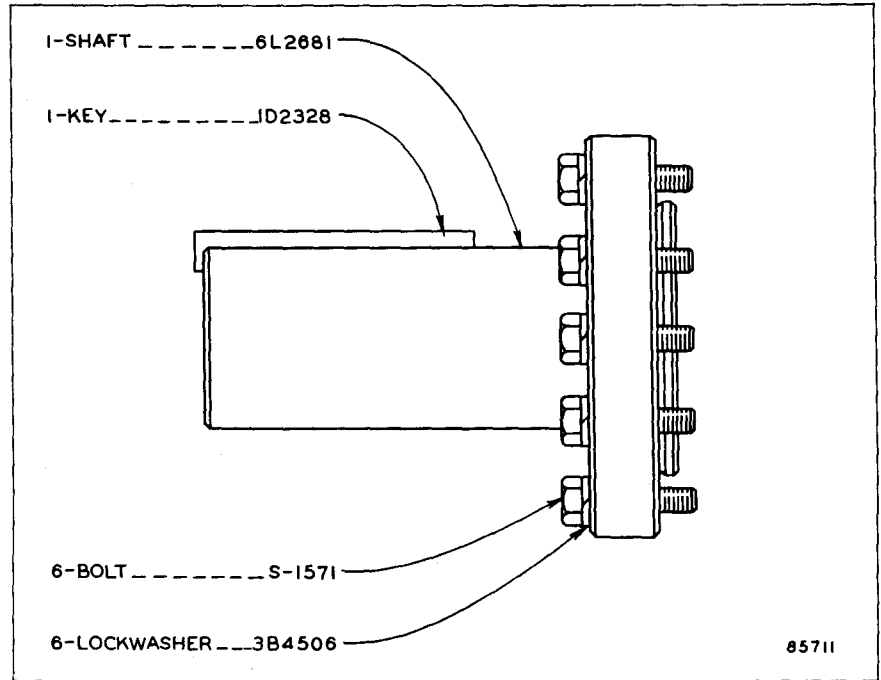


6L2691 STUB SHAFT GROUP--FRONT MOUNTED

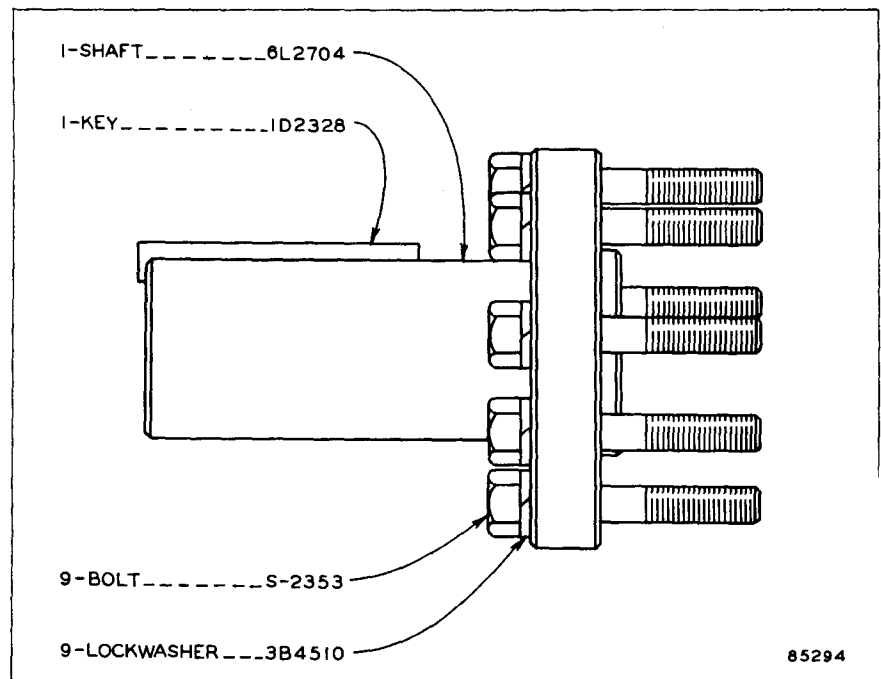

6L2692 STUB SHAFT GROUP--REAR MOUNTED

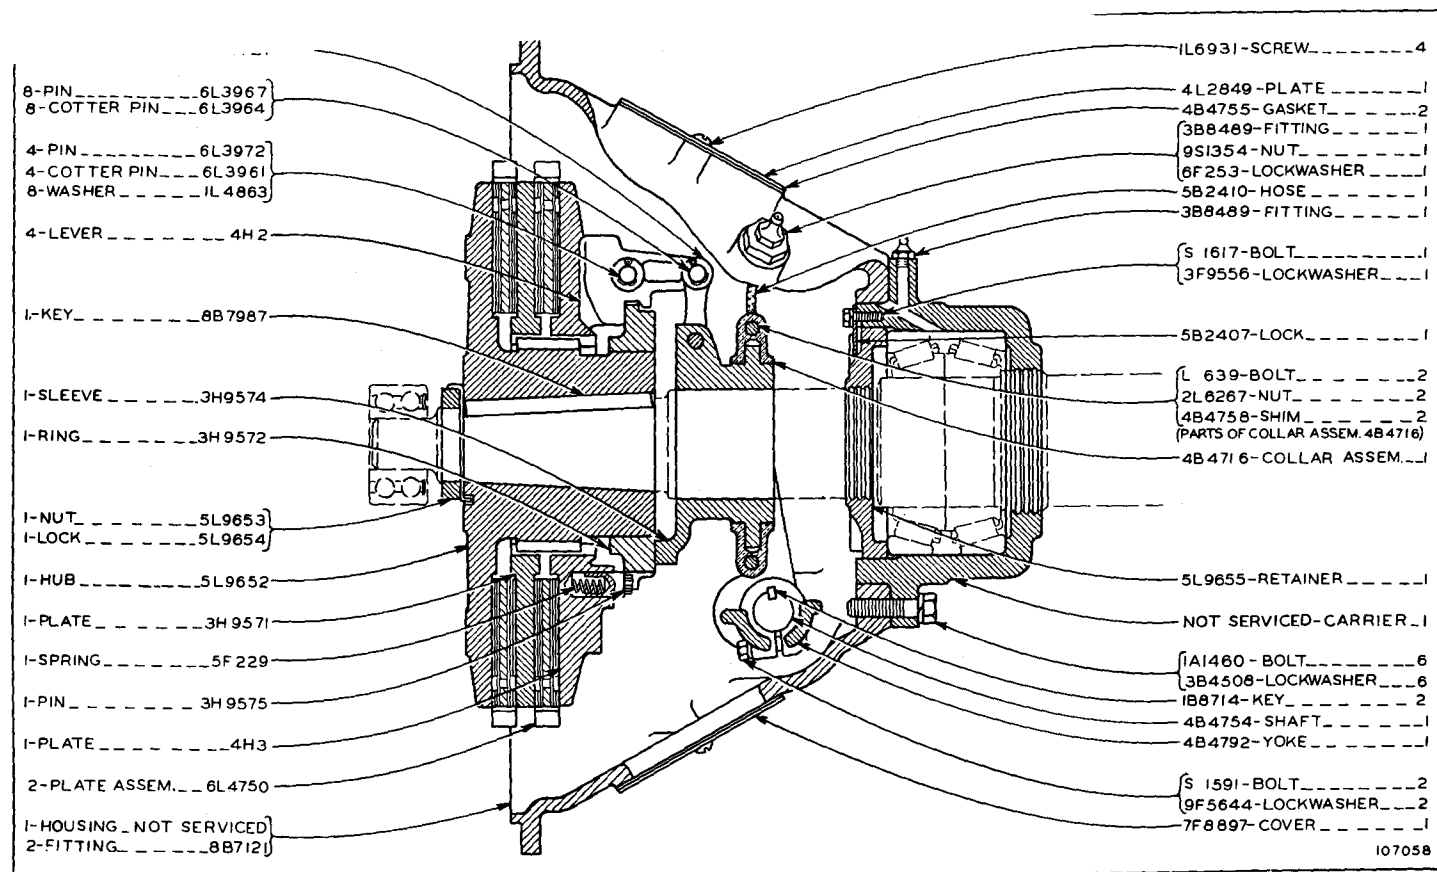


2R6853 CLUTCH ASSEMBLY
 SPECIFICATION No. 30365
 PART OF 2R6914 ENCLOSED CLUTCH GROUP

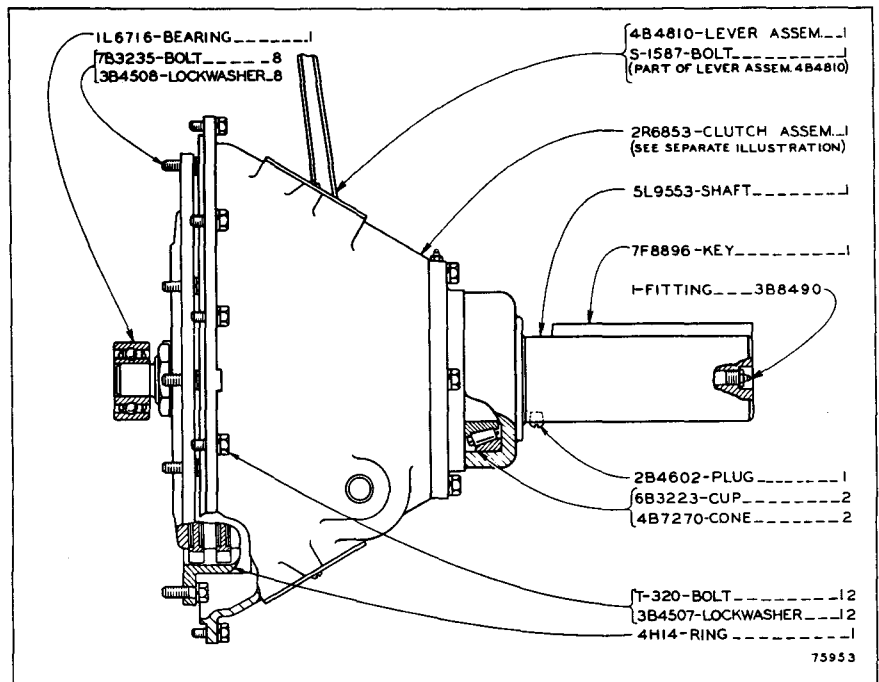

2R6914 ENCLOSED CLUTCH GROUP

CONSISTS OF:			PAGE
1	5L8091	AIR CLEANER CAP GROUP	61
1	6L3916	GENERATOR DRIVE COUPLING GROUP	84
1	8L4454	FLEXIBLE FUEL LINES GROUP	79
8	1B4201	NUT--GENERATOR LINE LEADS	
12	3B4507	LOCKWASHER--GENERATOR TO ENGINE	
8	4B4276	WASHER--GENERATOR LINE LEADS	
8	S-1570	BOLT--GENERATOR LINE LEADS	
12	T-772	BOLT--GENERATOR TO ENGINE	
1		INSTRUCTION FORM No. 35555	

8L8421 GENERATOR INSTALLATION ARRANGEMENT

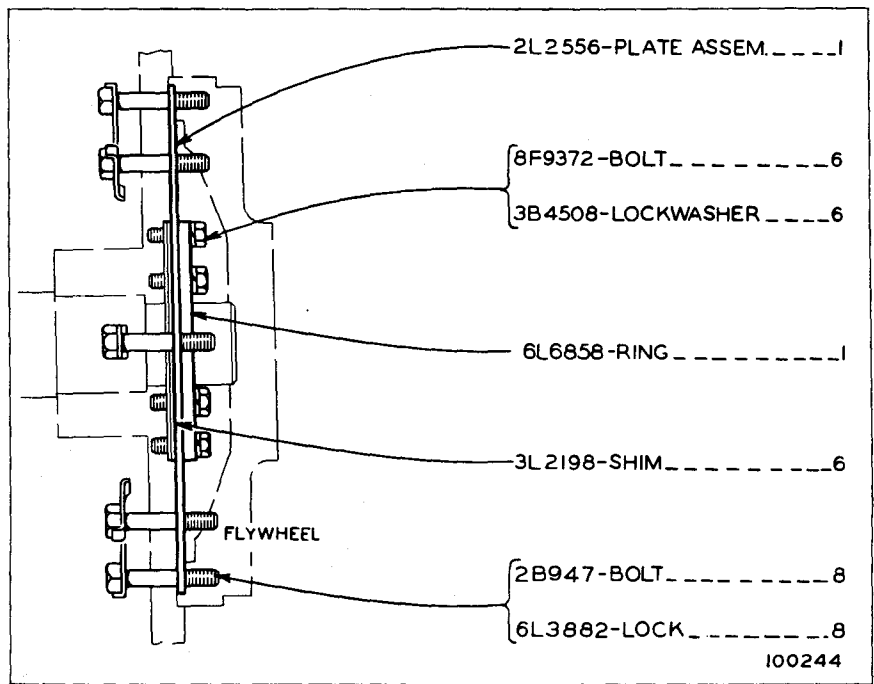

6L3916 GENERATOR DRIVE COUPLING GROUP
Part of 8L8421 Generator Installation Arrangement listed on Page 83

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

REPLACEMENT PARTS FOR GENERATORS

Only those generators which are sold and serviced exclusively by "Caterpillar" Dealers are illustrated on the following pages.

Externally-regulated "Caterpillar" Diesel Electric Sets are equipped with generators made by other manufacturers. Parts for these generators are NOT serviced by Caterpillar Tractor Co. Parts lists and parts should be ordered from the manufacturer whose name is shown on the Generator Name Plate, always giving the generator rating and serial number shown.

PIECES DE RECHANGE POUR GENERATRICES

Dans les pages suivantes, nous ne décrivons que les génératrices constantes dont la vente et la réparation est assurée par les concessionnaires Caterpillar.

Les Groupes électrogènes Caterpillar à régulation externe sont équipés de génératrices fabriquées par d'autres constructeurs. Les pièces pour ces génératrices ne sont pas fournies par Caterpillar Tractor Co. Il convient donc de s'adresser au constructeur dont le nom figure sur la plaque de la génératrice pour toutes les listes de pièces et pour les commandes de pièces, en indiquant la puissance et le numéro de série de la génératrice.

REPUESTOS PARA GENERADORES

En las páginas siguientes solamente se ilustran los generadores que son vendidos y reparados exclusivamente por los Distribuidores Caterpillar.

Los Grupos Electrógenos "Caterpillar" de regulación externa están equipados con generadores de otros fabricantes. Caterpillar Tractor Co. no suministra repuestos para estos generadores. Las listas de repuestos y los repuestos mismos deberán pedirse al fabricante cuyo nombre aparece en la placa de identificación del generador, indicando siempre la capacidad de éste y su número de serie indicado.

PECAS DE SUBSTITUICAO PARA GERADORES

Estão ilustrados nas páginas seguintes somente os geradores vendidos e assistidos exclusivamente pelos revendedores Caterpillar.

As peças de substituição para os geradores dos Grupos Eletrógenos Caterpillar regulados externamente são fabricadas por outras firmas e não são fornecidas pela Caterpillar Tractor Co. Para obter qualquer delas, bem como os catálogos de peças, dirija-se à firma cujo nome aparece na chapa de identificação do gerador, acrescentando no pedido as especificações e o número de série do gerador.

ERSATZTEILE FÜR GENERATOREN


Nur diejenigen Generatoren welche ausschliesslich von CATERPILLAR Händlern verkauft und gewartet werden, sind auf den folgenden Seiten dargestellt.

Caterpillar Dieselstromaggregate mit Fremdregelung sind mit Generatoren ausgerüstet, die von anderen Herstellern erzeugt werden. Ersatzteile für solche Generatoren werden NICHT auf Grund von Caterpillar Ersatzteillisten geliefert sondern müssen jeweils bei dem auf dem Firmenschild angegebenen Hersteller des Generators unter Angabe der Leistung und Seriennummer desselben bestellt werden.

REF NO	PART NUMBER	DESCRIPTION	QTY
1	7L4219	BOX ASSEM.	1
2	6L8315	GASKET SET	1
3	6L8313	CHANNEL	1
4	6L8314	CHANNEL	1
		(Parts of 7L4219 Box Assem.)	
5	6L6659	PLUG	1

REF NO	PART NUMBER	DESCRIPTION	QTY
6	2L5816	COVER	1
	481259	SCREW	4
7	184330	NUT	4
	384504	LOCKWASHER	4
	484276	WASHER	4
8	2L5815	SCREEN	1
		The following repair kits are available:	
	6L6669	KIT (Rotor Balance Weight)	1
	7L2327	KIT (Stator Rewind)	1


REF NO	PART NUMBER	DESCRIPTION	QTY
9	7L2325	ROTOR ASSEM.	1
	3L9963	HUB	1
10	2L5586	KEY	1
11	7L2326	FAN	1
12	6L8306	KEY	2
13	6L7008	CLAMP	2
14	6L8304	FAN	1
	481222	SCREW	2
15	987233	LOCKWASHER	2
16	2L5820	RING ASSEM. (Inner)	1
17	2L5821	RING ASSEM. (Outer)	1
		(Parts of 7L2325 Rotor Assem.)	
18	2L4845	NUT	4
		(2 in 2L5820 & 2L5821 Ring Assem.)	
19	2L4844	TUBE	1
		(Part of 2L5821 Ring Assem.)	
20	6L3498	FAN	1
21	2L5590	RETAINER AND YOKE ASSEM.	1
	2L4849	TUBE (Long)	2
	2L5592	TUBE (Short)	2
		(Parts of 2L5590 Retainer & Yoke Assem.)	
22	2L5567	BEARING	1
23	4H7859	NUT	1
	186161	LOCK	1
24	7L2324	STATOR ASSEM.	1
	S-1614	BOLT	6
25	7F9223	LOCKWASHER	6
26	6L8302	BRACKET	2
27	6L6648	CHANNEL	1
		(Parts of 7L2324 Stator Assem.)	
28	6L9933	ANGLE	1
29	S-1614	BOLT	2
	7F9223	LOCKWASHER	2
30	5L7056	BRUSH	4
31	2L5593	HOLDER ASSEM.	2
	2L5594	HOLDER	2
	2L2076	PIN	4
32	384604	COTTER PIN	4
	2L2073	WASHER	8
33	2L4853	ARM	4
34	S-1615	BOLT (L. 75" Long)	4
35	384504	LOCKWASHER	8
36	2L2074	SPRING	4
37	S-1614	BOLT (L. 50" Long)	4
		(1/2 each in 2L5593 Holder Assem.)	

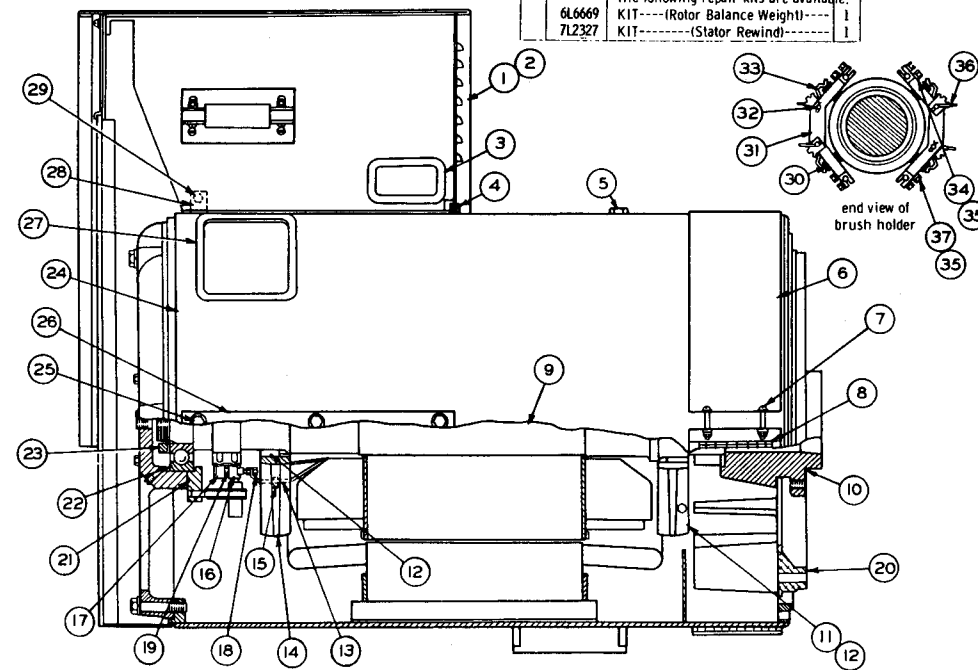


7L21 GENERATOR—3 Phase—Side View
 Generator Serial No. 100TH200 to 100TH722 inclusive
 230-460 Vole, 60 hertz at 1800 R.P.M. or 200-400 Volt, 50 hertz at 1500 R.P.M.

7L21 GENERATOR—3 Phase—Front View
 Generator Serial No. 100TH200 to 100TH722 inclusive. 230-460 Volt, 60 hertz at 1800 R.P.M. or
 200-400 Volt, 50 hertz at 1500 R.P.M. 7L4208 Exciter and Regulator parts are shown on Page 88B

REF NO	PART NUMBER	DESCRIPTION	QTY
1	6L7104	SCREW-----	27
2	9F5599	LOCKWASHER-----	27
3	7L4192	WIRING HARNESS-----	1
4	6L9962	NOISE SUPPRESSION ASSEM. ---	1
5	1B4427	NUT-----	8
5	1H3244	LOCKWASHER-----	8
	(Parts of 6L9962 Noise Suppression Assem.)		
6	6L8316	PANEL-----	1
7	6L7009	DROOP TRANSFORMER ASSEM. ---	1
8	4B1237	SCREW-----	10
9	8F1434	LOCKWASHER-----	10
10	6L8312	COVER-----	1
11	2B4602	PLUG-----	2
12	1B5174	PLUG-----	1
13	6L8308	BRACKET-----	1
14	1A5822	BOLT-----	6
14	3B4508	LOCKWASHER-----	6
15	1L-1352	BOLT-----	4
15	3B4506	LOCKWASHER-----	4
16	S-1614	BOLT-----	6
16	7F9223	LOCKWASHER-----	6
17	6L6667	HINGE-----	2
18	7L2768	FUSE BLOCK-----	1
19	4B1258	SCREW-----	2
19	1H3244	LOCKWASHER-----	2
20	7L2765	FUSE-----	3
21	7L4220	CABLE ASSEM. -----	1
22	6L8311	COVER-----	1
22	6L8330	WIRING DIAGRAM-----	1
23	7L4208	EXCITER & REGULATOR ASSEM. --- (See Separate Illustration)	1

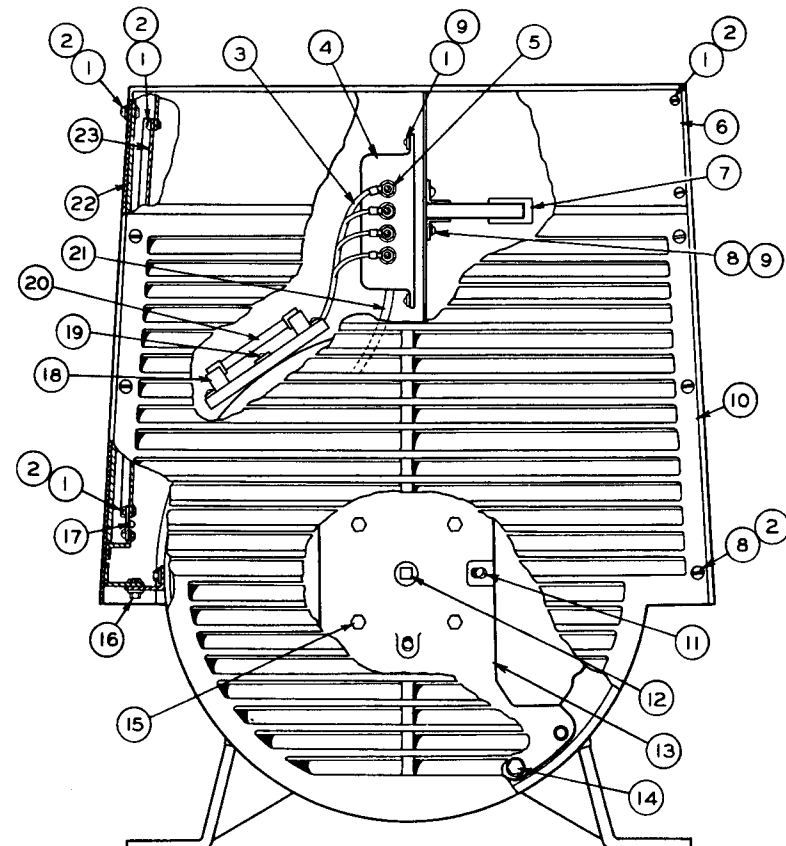



ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

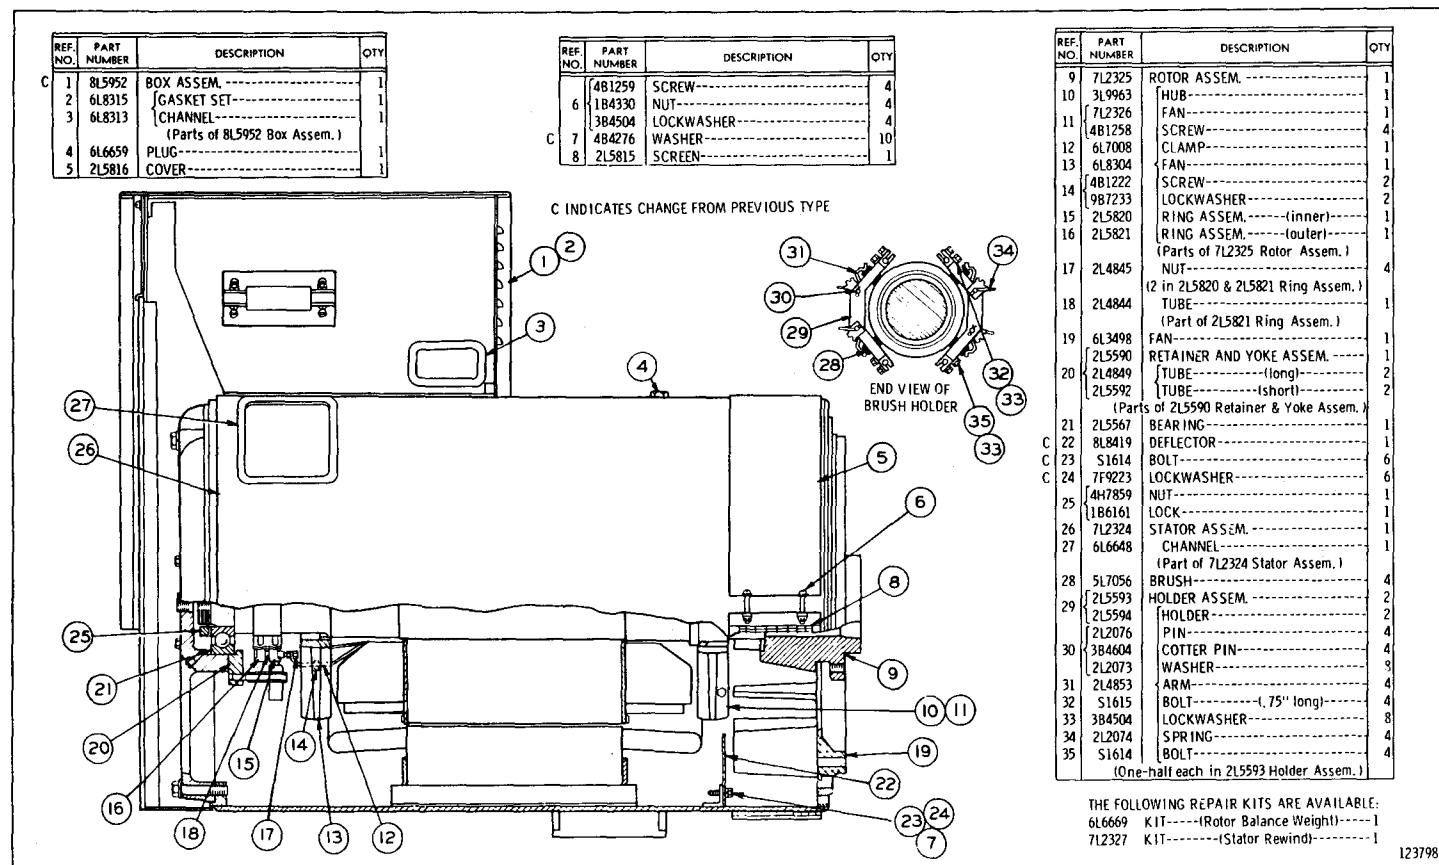

7L21 GENERATOR—3 Phase—Side View
 Generator Serial No. 100TH723 to 100TH1499 inclusive. 230-460 Volt, 60 hertz at 1800 R.P.M. or
 200-400 Volt, 50 hertz at 1500 R.P.M.

7L21 GENERATOR—3 Phase—Front View
 Generator Serial No. 100TH723 to 100TH1499 inclusive. 230-460 Volt, 60 hertz at 1800 R.P.M. or
 200-400 Volt, 50 hertz at 1500 R.P.M. 7L4208 Exciter and Regulator parts are shown on Page 88B

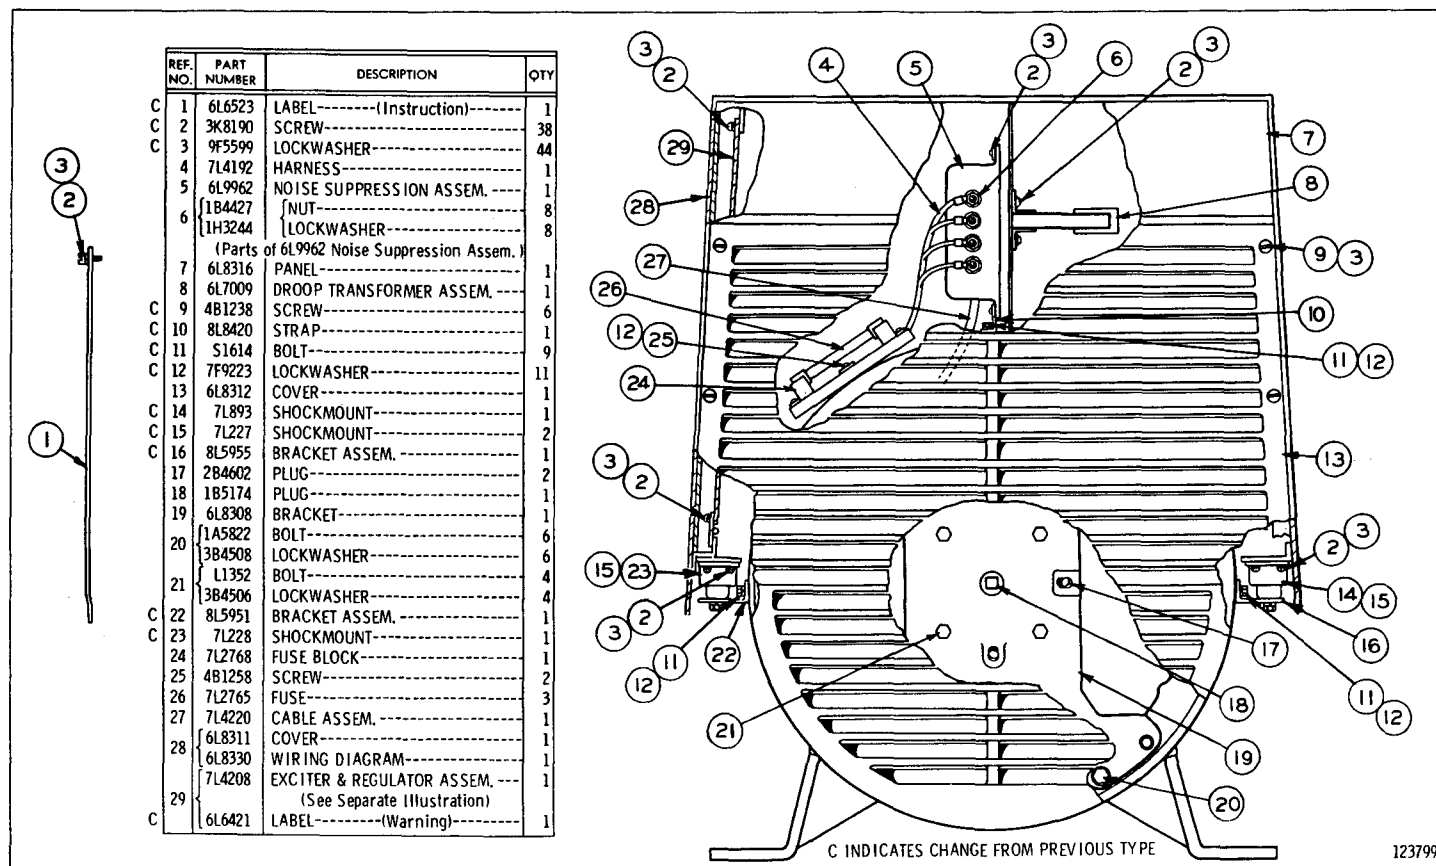


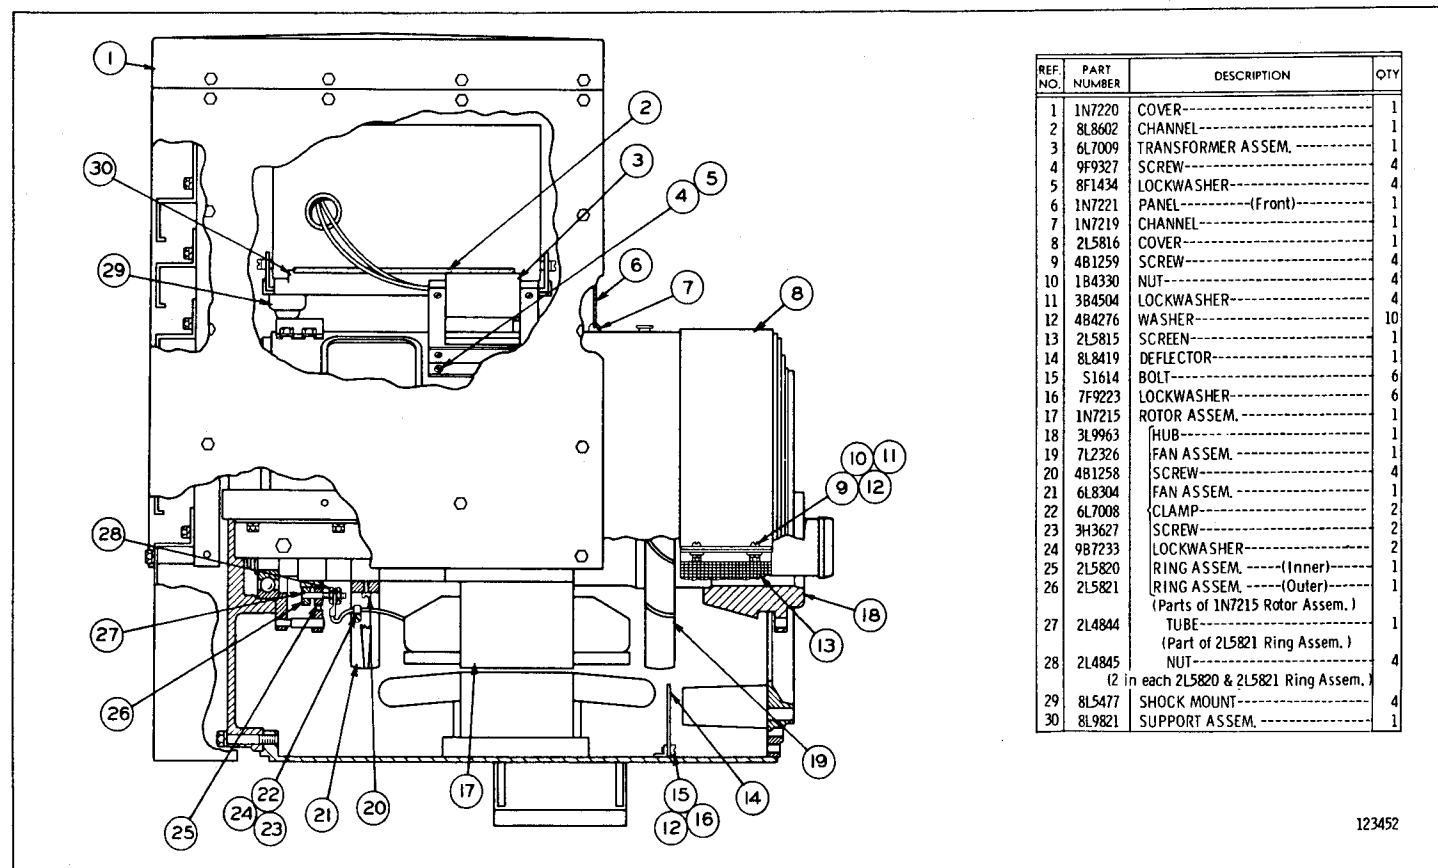

123452


7L81 GENERATOR--3 Phase--Part 1 of 3
Effective with Generator Serial No. 100TH1500
230-460 Volt, 60 hertz at 1800 R.P.M. or 200-400 Volt, 50 hertz at 1500 R.P.M.

7L81 GENERATOR—3 Phase—Part 2 of 3
Effective with Generator Serial No. 100TH1500
230-460 Volt, 60 hertz at 1800 R.P.M. or 200-400 Volt, 50 hertz at 1500 R.P.M.

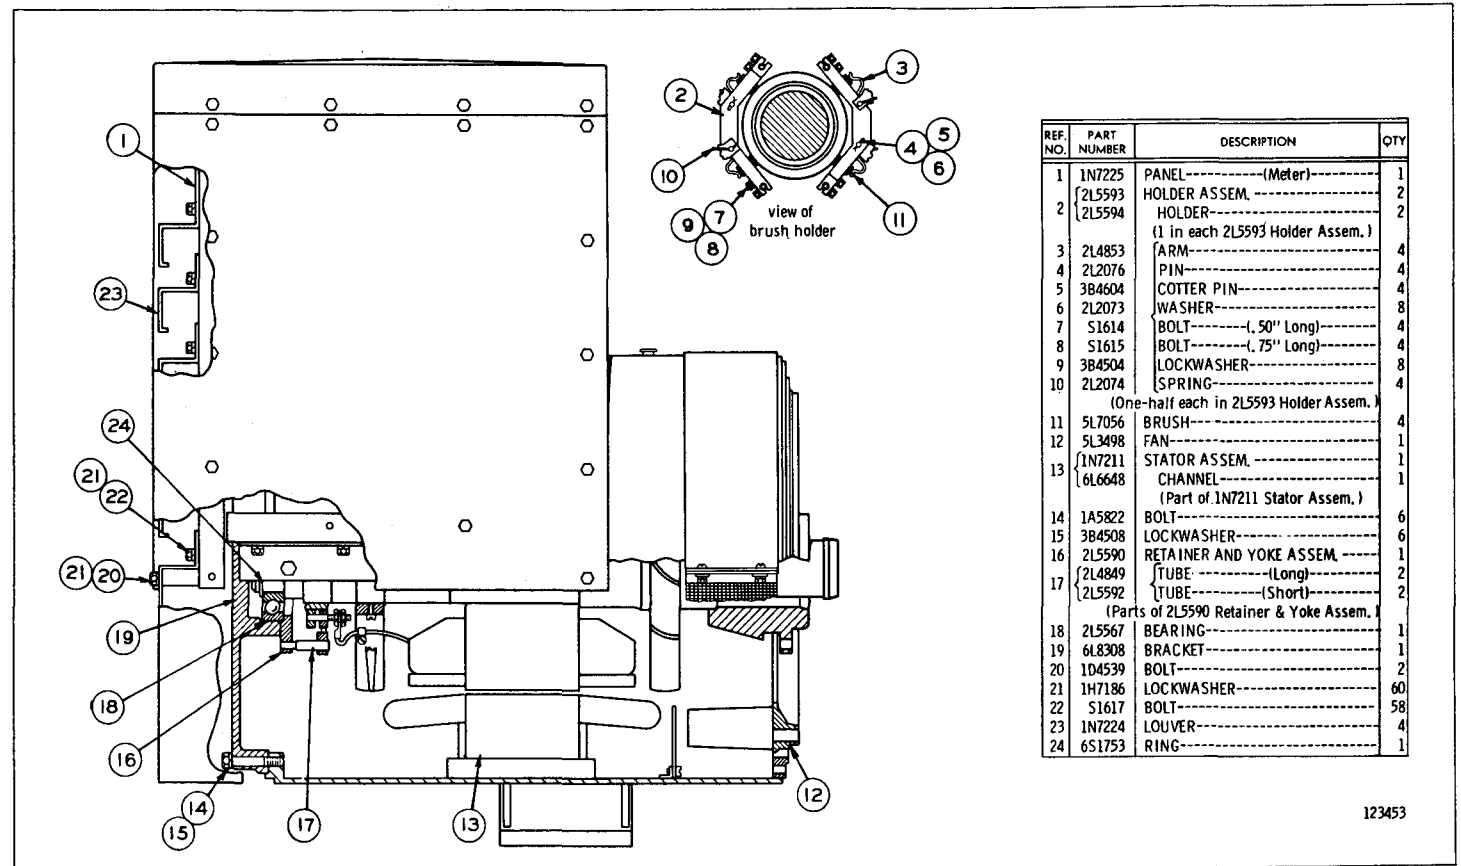

123453

ALWAYS USE SPECIAL MARKED WHEN ORDERING PARTS

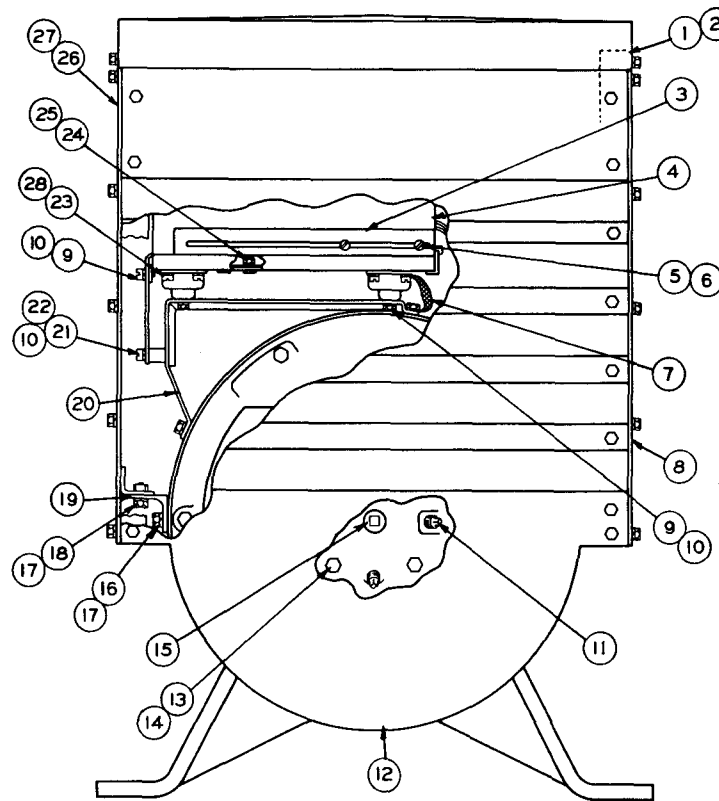

REF. NO.	PART NUMBER	DESCRIPTION	QTY
1	1N7217	FRAME ASSEM. --- (Right Hand)---	1
2	1N7218	FRAME ASSEM. --- (Left Hand)---	1
3	8L9823	GUIDE---	2
4	1N5916	EXCITER & REGULATOR ASSEM. --- (See Separate Illustration)	1
5	9F9327	SCREW---	4
6	8F1434	LOCKWASHER---	4
7	8L5476	STRAP---	1
8	1N7223	PANEL--- (Side)---	2
9	S1614	BOLT---	6
10	7F9223	LOCKWASHER---	8
11	2B4602	PLUG---	2
12	1N7222	COVER ASSEM. ---	1
13	L1352	BOLT---	4
14	3B4506	LOCKWASHER---	4
15	1B5174	PLUG---	1
16	2H3755	BOLT---	14
17	1H7186	LOCKWASHER---	14
18	S1617	BOLT---	8
19	1N7214	BRACKET---	2
20	1N7230	BRACKET---	2
21	4B1259	SCREW---	2
22	8L9826	SPACER---	2
23	4B1237	SCREW---	16
24	S1613	BOLT---	4
25	1H3244	LOCKWASHER---	4
26	6L6523	LABEL--- (Instruction)---	1
27	1N5917	DIAGRAM--- (Wiring)---	1
28	9F5599	LOCKWASHER---	20
The following repair kits are available:			
	7L2327	KIT--- (Stator Rewind)---	1
	6L6669	KIT--- (Rotor Balance Weight)---	1


123454

7L81 GENERATOR—3 Phase—Part 3 of 3
Effective with Generator Serial No. 100TH1500. 230-460 Volt, 60 hertz at 1800 R.P.M. or
200-400 Volt, 50 hertz at 1500 R.P.M. 1N5916 Exciter and Regulator parts are shown on Pages 88 and 88A


807

CAUTION: USE 3/32" ENGINE

7L82 GENERATOR—3 Phase—Part 1 of 3
Effective with Generator Serial No. 100TG1500
287-575 Volt, 60 hertz at 1800 R.P.M. or 230-460 Volt, 50 hertz at 1500 R.P.M.

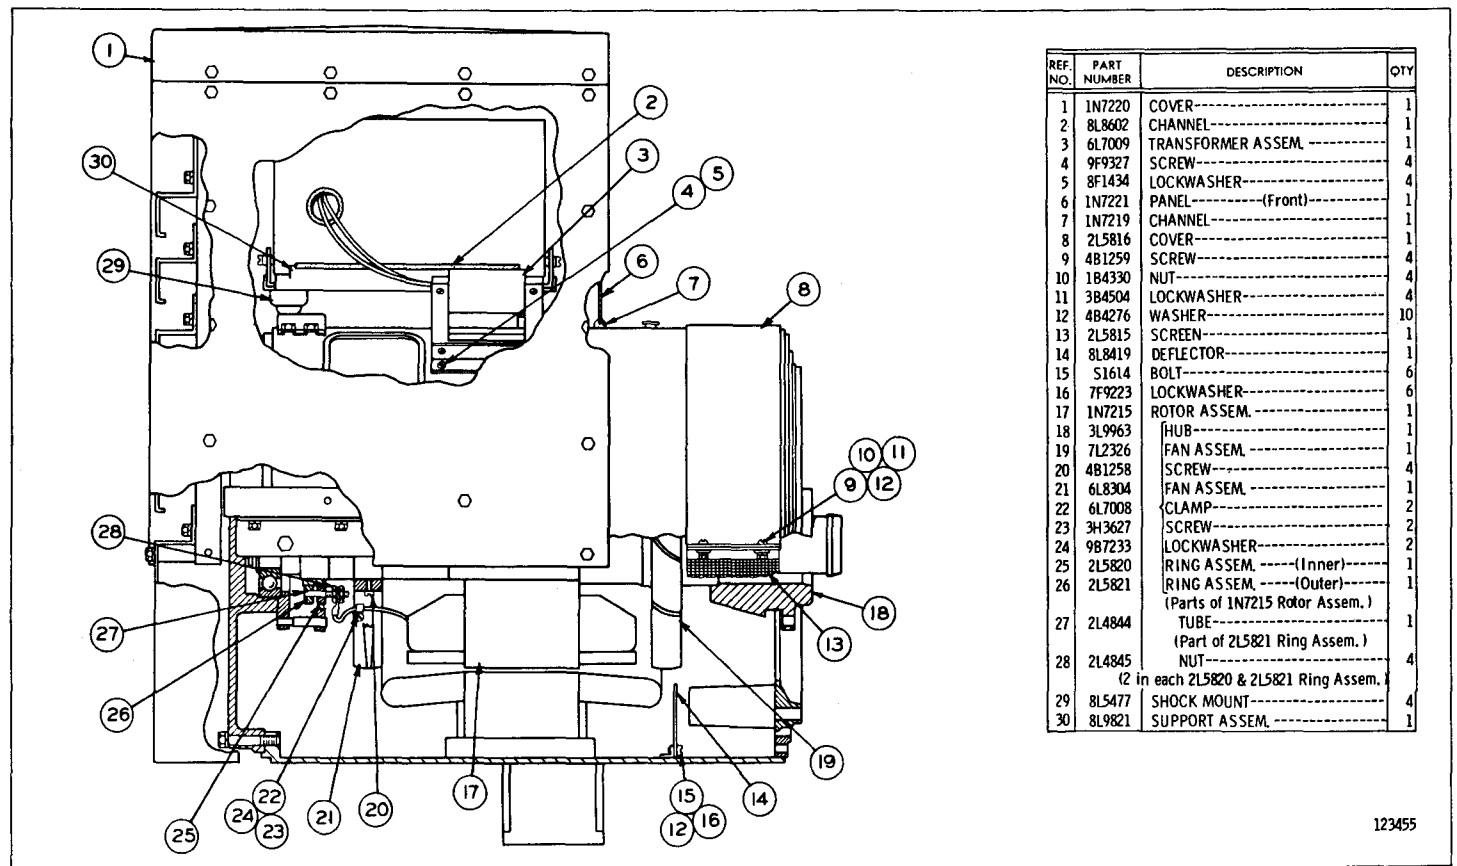


123455

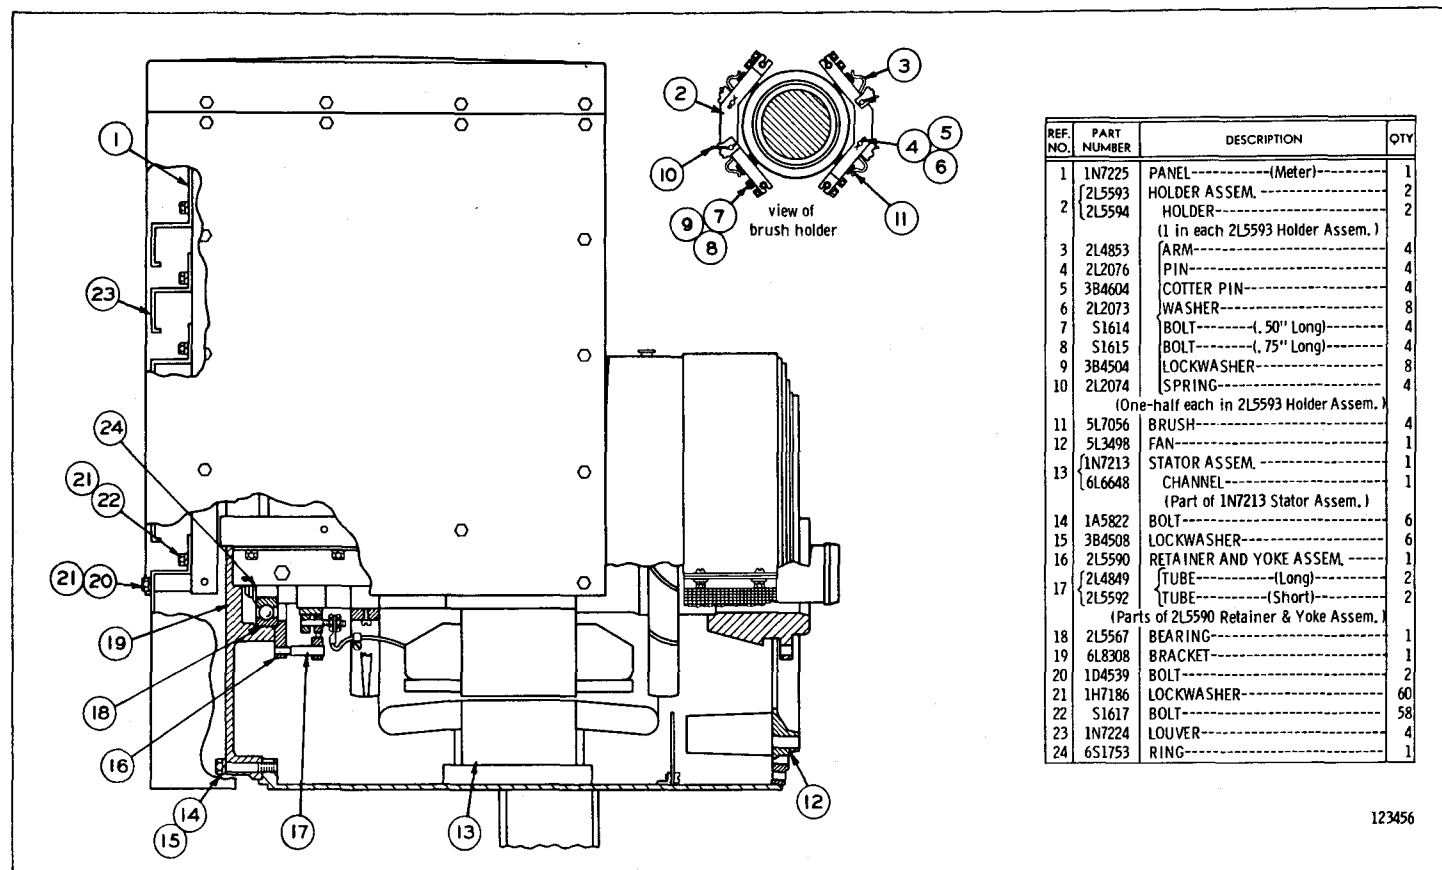

123456


7L82 GENERATOR—3 Phase—Part 2 of 3
 Effective with Generator Serial No. 100TG1500
 287-575 Volt, 60 hertz at 1800 R.P.M. or 230-460 Volt, 50 hertz at 1500 R.P.M.

7L82 GENERATOR—3 Phase—Part 3 of 3
 Effective with Generator Serial No. 100TG1500. 287-575 Volt, 60 hertz at 1800 R.P.M. or 230-460 Volt, 50 hertz at 1500 R.P.M.
 1N5916 Exciter and Regulator parts are shown on Pages 88 and 88A

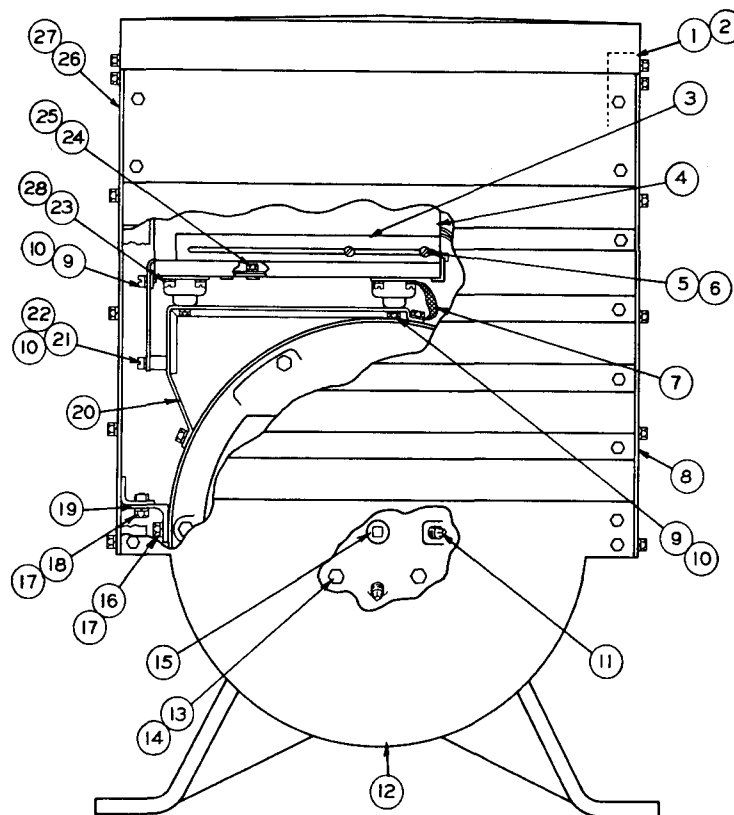

REF. NO.	PART NUMBER	DESCRIPTION	QTY
1	1N7217	FRAME ASSEM. --- (Right Hand)---	1
2	1N7218	FRAME ASSEM. --- (Left Hand)---	1
3	8L9823	GUIDE---	2
4	1N5916	EXCITER & REGULATOR ASSEM. --- (See Separate Illustration)	1
5	9F9327	SCREW---	4
6	8F1434	LOCKWASHER---	4
7	8L5476	STRAP---	1
8	1N7223	PANEL----- (Side)---	2
9	51614	BOLT-----	6
10	7F9223	LOCKWASHER---	8
11	2B4602	PLUG-----	2
12	1N7222	COVER ASSEM. ---	1
13	1L352	BOLT-----	4
14	3B4506	LOCKWASHER---	4
15	1B5174	PLUG-----	1
16	2H3755	BOLT-----	14
17	1H7186	LOCKWASHER---	14
18	51617	BOLT-----	8
19	1N7214	BRACKET-----	2
20	1N7230	BRACKET-----	2
21	4B1259	SCREW-----	2
22	8L9826	SPACER-----	2
23	4B1237	SCREW-----	16
24	51613	BOLT-----	4
25	1H3244	LOCKWASHER---	4
26	6L6523	LABEL----- (Instruction)---	1
27	1N5917	DIAGRAM----- (Wiring)---	1
28	9F5599	LOCKWASHER---	20
The following repair kits are available:			
	7L2395	KIT----- (Stator Rewind)---	1
	6L6669	KIT --- (Rotor Balance Weight)---	1

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

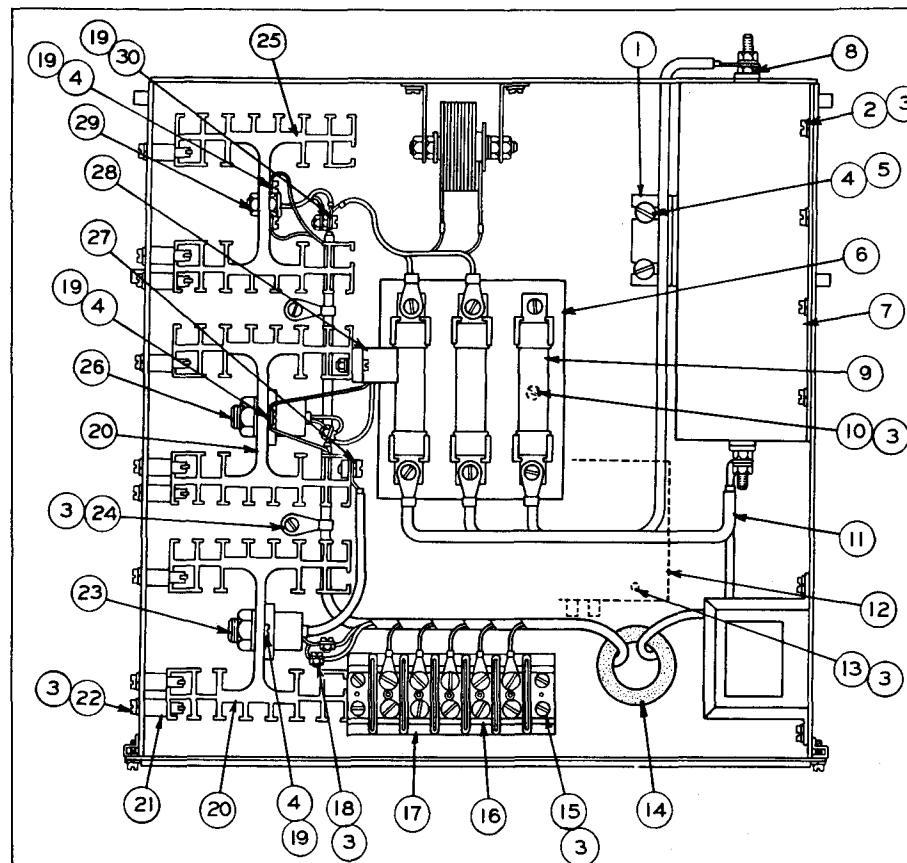


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	1N5035	BRACKET-----	1
2	4B1220	SCREW-----	4
3	9B7233	LOCKWASHER-----	30
4	4B1237	SCREW-----	6
5	9F5599	LOCKWASHER-----	2
6	7L2768	BLOCK-----	1
7	6L9962	NOISE SUPPRESSION ASSEM.-----	1
8	1B4427	NUT-----	8
	1H3244	LOCKWASHER-----	8
		(Parts of 6L9962 Assem.)	
9	7L2765	FUSE----- (50 AMP.)	3
10	3D9799	SCREW-----	2
11	1N7247	WIRING HARNESS-----	1
12	7L286	REGULATOR ASSEM.-----	1
13	8M8626	SCREW-----	4
14	8L5478	GROMMET-----	1
15	5M6668	SCREW-----	4
16	2L1717	STRIP----- (Terminal)	1
17	1N7253	STRIP----- (Marker)	1
18	7S1201	SCREW-----	2
	4B2043	NUT-----	2
19	8F1434	LOCKWASHER----- (Shakeproof)	7
20	1N7246	HEAT SINK-----	2
21	8L5827	NUT-----	12
22	8L5828	SCREW-----	12
23	6L6500	RECTIFIER-----	1
24	4B1221	SCREW-----	2
25	1N7245	HEAT SINK-----	1
26	6L3590	RECTIFIER-----	1
	1S7443	SCREW-----	1
27	6L7161	NUT-----	1
	7F9223	LOCKWASHER-----	1
28	7L4062	SUPPRESSOR ASSEM.-----	1
29	6L3600	RECTIFIER-----	2
	1H4336	SCREW-----	3
30	8L5832	NUT-----	3


123458

1N5916 EXCITER AND REGULATOR ASSEMBLY--Part 1
Part of 7L81 and 7L82 Generators shown on Pages 86F and 87

1N5916 EXCITER AND REGULATOR ASSEMBLY—Part 2
Part of 7L81 and 7L82 Generators shown on Pages 86F and 87

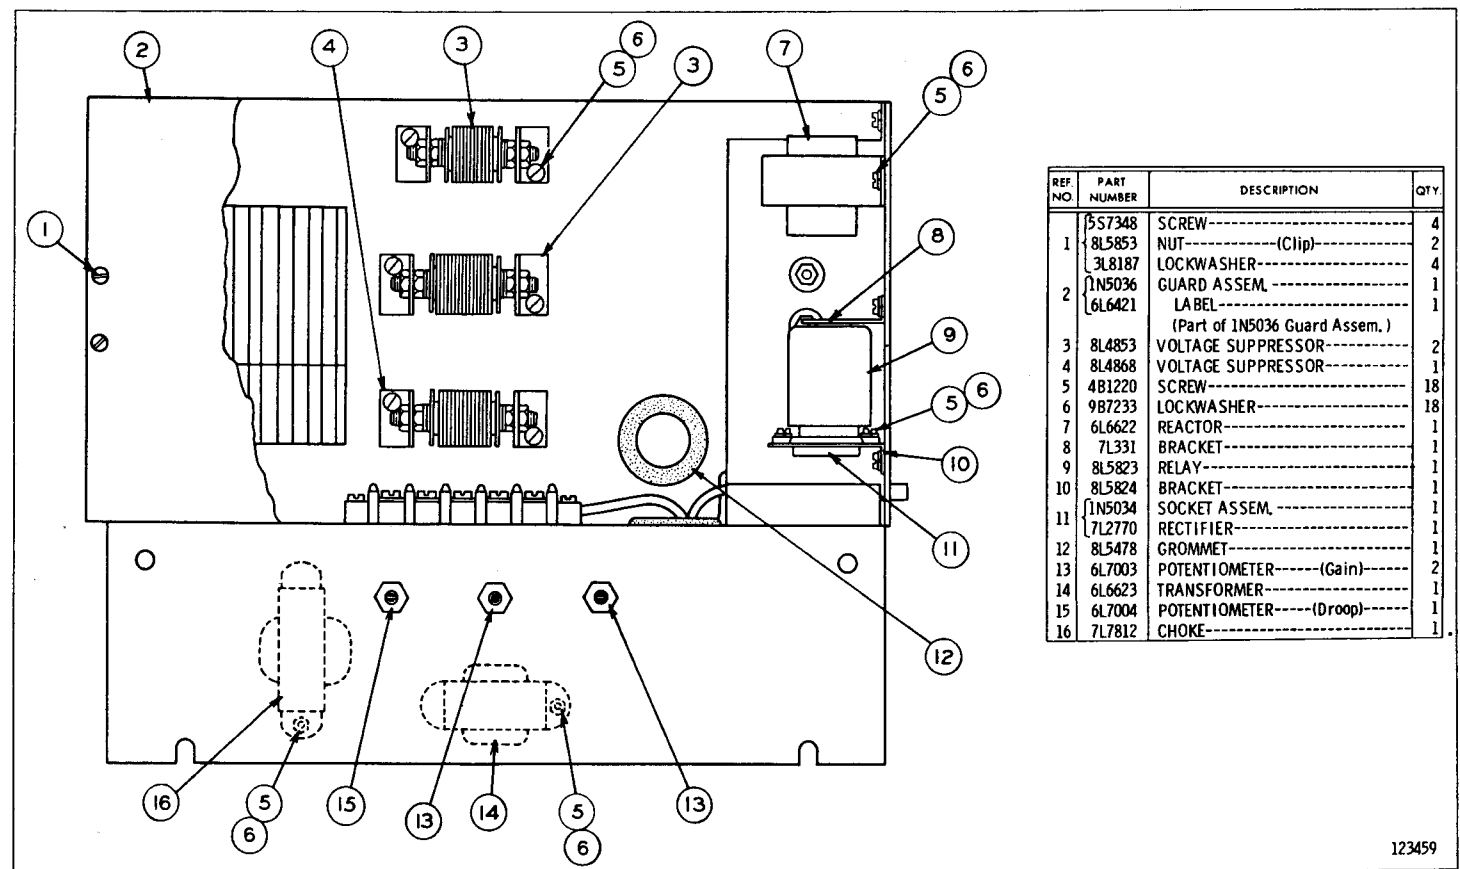


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

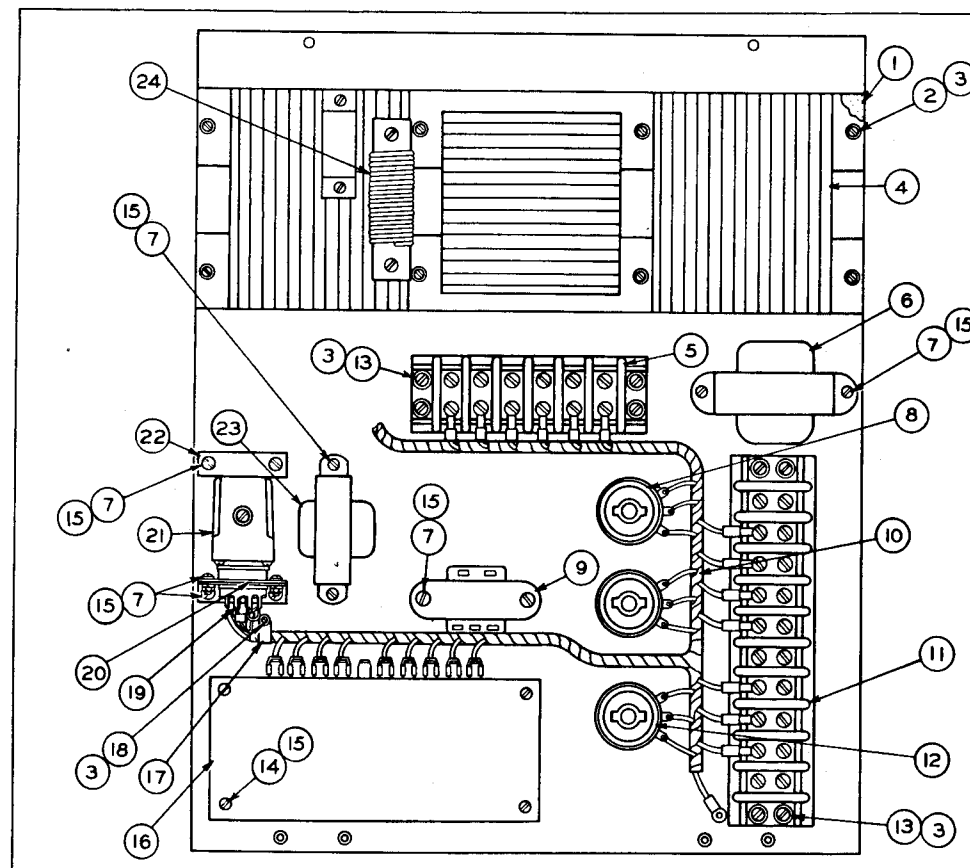


REF NO.	PART NUMBER	DESCRIPTION	QTY
1	6L8408	INSULATOR-----	2
2	4B1221	SCREW-----	8
3	9B7233	LOCKWASHER-----	25
4	6L8402	HEAT SINK ASSEM. ----- (See Separate Illustration)	1
5	3H4647	TERMINAL STRIP-----	1
6	6L6622	REACTOR-----	1
7	4B1218	SCREW-----	12
8	6L7003	POTENTIOMETER---(Level & Gain)---	2
9	6L6623	TRANSFORMER-----	1
10	7L4207	HARNESS-----	1
11	6F8974	TERMINAL STRIP-----	1
12	6L7004	POTENTIOMETER---(Droop)---	1
13	4B1222	SCREW-----	8
14	6L7158	SCREW-----	4
15	3L8187	LOCKWASHER-----	16
16	7L286	REGULATOR ASSEM. -----	1
17	6L7008	CLAMP-----	9
18	9B7242	SCREW-----	9
19	6L7082	SOCKET-----	1
19	7L2770	RECTIFIER-----	1
19	7L3178	WIRE----- (2 Feet)-----	1
20	6L7083	BRACKET-----	1
21	7L2767	RELAY-----	1
22	6L7084	BRACKET-----	1
23	7L7812	CHOKE-----	1
24	7L4062	SUPPRESSOR ASSEM. -----	1
▲	Not part of 7L4208 Exciter and Regulator Assem.		

101661


7L4208 EXCITER AND REGULATOR ASSEMBLY
Part of 7L21 Generator shown on Pages 86A and 86C

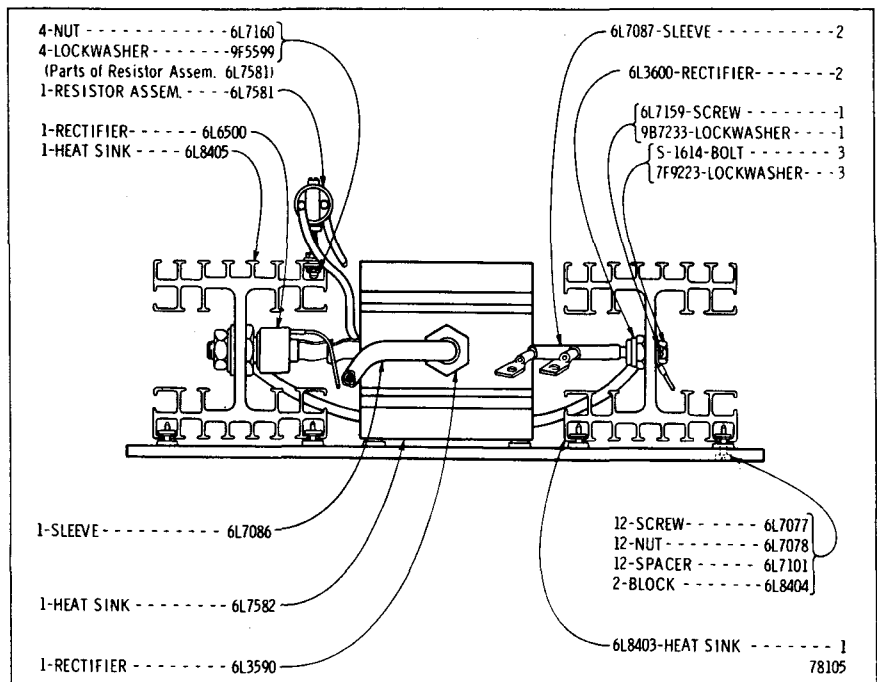

6L8402 HEAT SINK ASSEMBLY
 Part of 7L4208 Exciter and Regulator Assembly

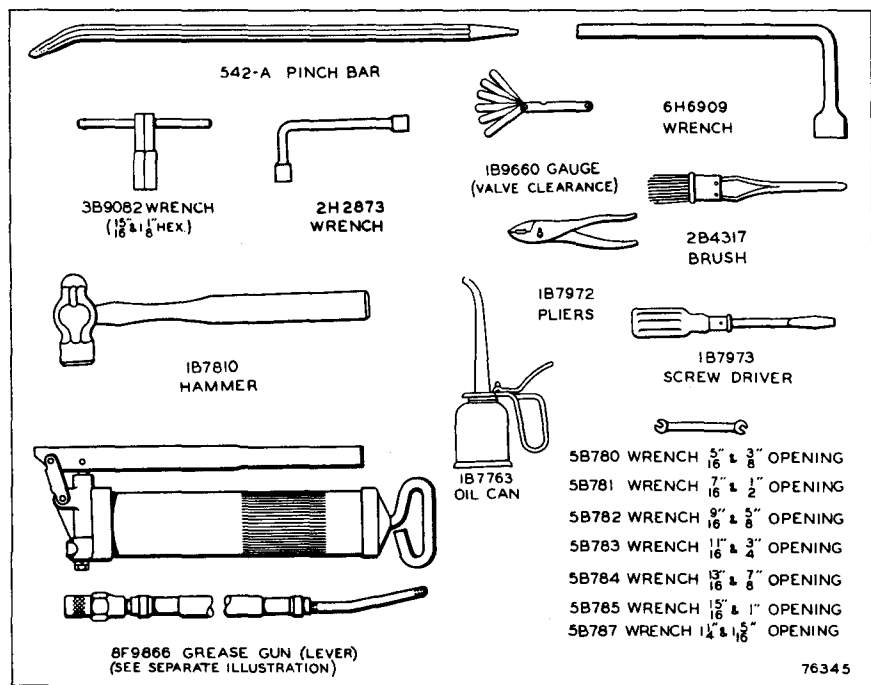


4L1560 TOOL GROUP AN ATTACHMENT

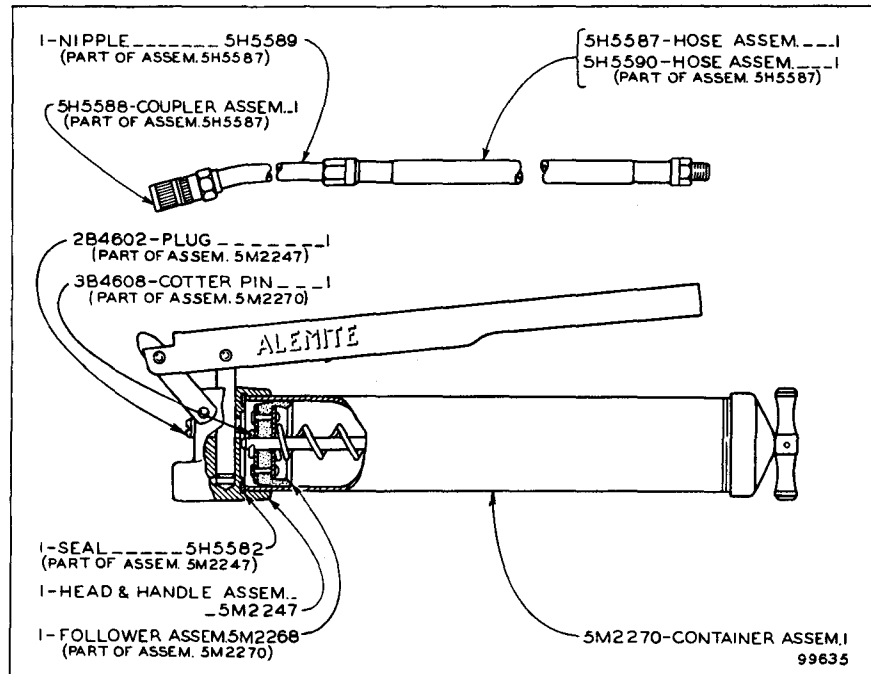

8F9866 GREASE GUN--Type 1 Part of 4L1560 Tool Group

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

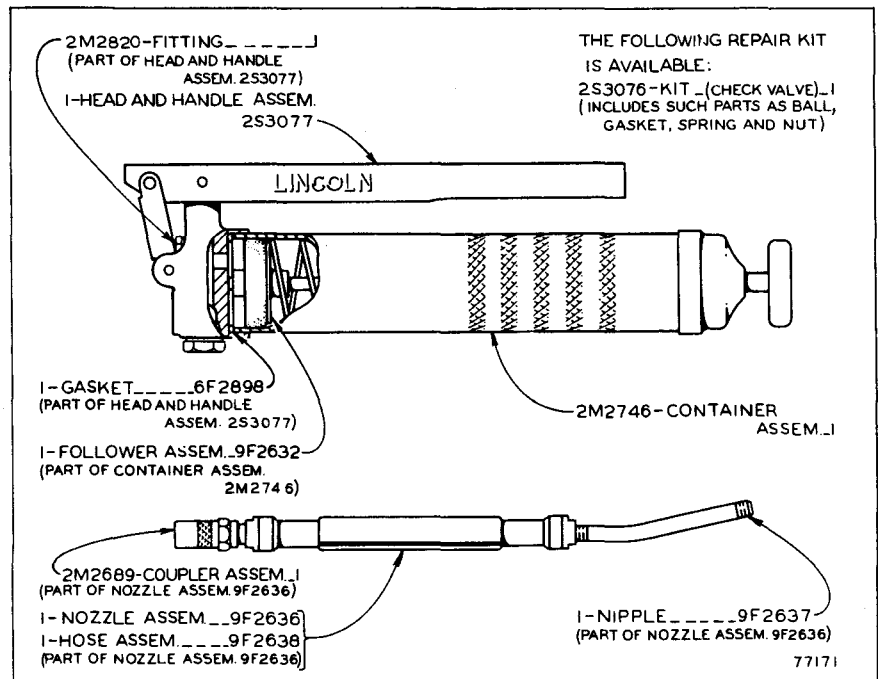

8F9866 GREASE GUN-Type 2
Part of 4L1560 Tool Group

QUANTITY USED	PART NUMBER	DESCRIPTION
1	5L3985	PLATE--WARNING AND INFORMATION ON FLYWHEEL HOUSING
1	2M6831	PLATE--SERIAL NUMBER ON LEFT HAND SIDE OF CYLINDER BLOCK
1	7M3855	PLATE--WARNING
8	7B3028	DRIVE SCREW
1	1H3040	TRANSFER--SAFETY ON DASH OR GUARDS WHEN USED
1	1M4898	TRANSFER--FILTER INSTRUCTIONS ON OIL FILTER COVER
1	7M2214	TRANSFER--AIR CLEANER INSTRUCTIONS ON SIDE OF DIESEL AIR CLEANER
1	2N4366	TRANSFER--CATERPILLAR
1	2N4368	TRANSFER--D333 (INCLUDES CORPORATE SYMBOL)
1	1S9547	TRANSFER--CRANKCASE INSTRUCTIONS ON OIL FILTER OR OPEN SPACE NEAR OIL FILLER
1	8L9765	FILM--WARNING ON FUEL FILTER HOUSING
1	9S8072	FILM--ORIGIN NEAR SERIAL NUMBER PLATE

NAME PLATES AND TRANSFERS

SPECIFICATIONS

(SUBJECT TO CHANGE WITHOUT NOTICE)

WEIGHT, SHIPPING (APPROXIMATE) 1960 LBS.

DIMENSIONS

LENGTH 61.0"
 WIDTH 33.0"
 HEIGHT 39.4"

CAPACITIES

LUBRICATION: ENGINE: FULL PRESSURE SYSTEM, GEAR TYPE PUMP.
 CRANKCASE CAPACITY (INCLUDING FILTER) 7.25 U.S. GAL.
 COOLING SYSTEM WITHOUT RADIATOR 5.6 U.S. GAL.
 COOLING SYSTEM WITH RADIATOR 11 U.S. GAL.

STARTING METHOD

TWENTY-FOUR VOLT DIRECT ELECTRIC STARTING OR AIR STARTING SYSTEMS
 ARE AVAILABLE.

ATTACHMENTS

ADDITIONAL EQUIPMENT SUCH AS AIR CLEANER, CHARGING GENERATORS,
 ALTERNATORS, HEAT EXCHANGERS, ETC., ARE AVAILABLE AT EXTRA COST.
 CONSULT YOUR "CATERPILLAR" DEALER.

MACHINE SERIAL NUMBER PLATE LOCATION

SERIAL NUMBER PLATE IS LOCATED ON THE LEFT-HAND SIDE OF THE
 CYLINDER BLOCK.

MADE IN U.S.A.

FORM 11507000