


D10

ENGINE 4

FUEL TRANSFER PUMP 0421

FUEL TRANSFER PUMP
CODE 3701 FUEL PUMP

TP26007

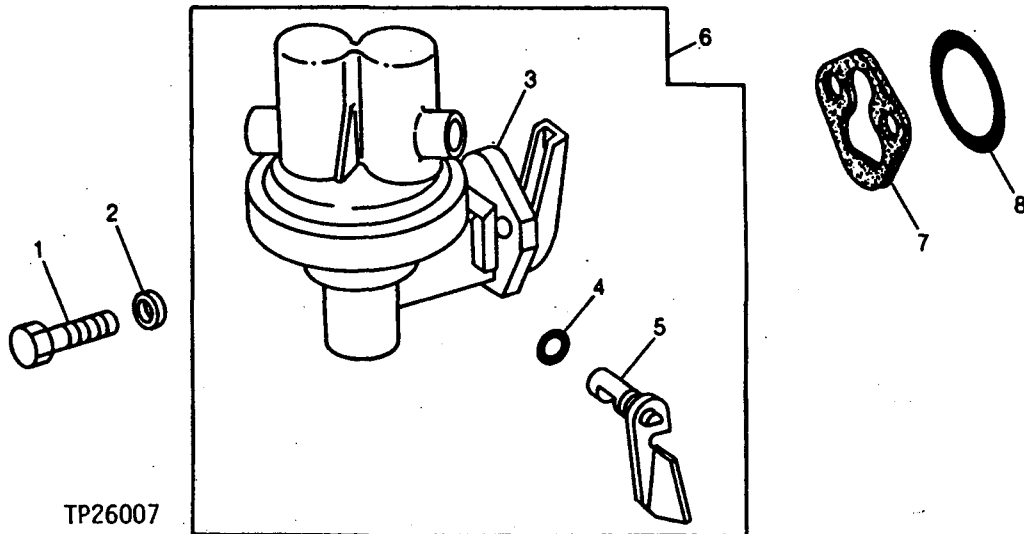


TP26007

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	DT	REMARKS
1	19H1849	CAP SCREW	2		X X	5/16" X 1-1/4"
2	T27860	WASHER	2		X X	
3		FUEL PUMP	1		X X	(SUB RE27667)
4	A4365R	O-RING	1		X X	
5	AR52556	LEVER	1		X X	
6	RE27667	FUEL PUMP	1		X X	(ALSO ORDER R97350)
7	R97350	GASKET	1		X X	(SUB FOR R27285)
8	R48399	WASHER	AR		X X	

STARTING MOTOR AND ATTACHING PARTS
CODE 3002 STARTING MOTOR
(12-VOLT) (JOHN DEERE)

TP25044

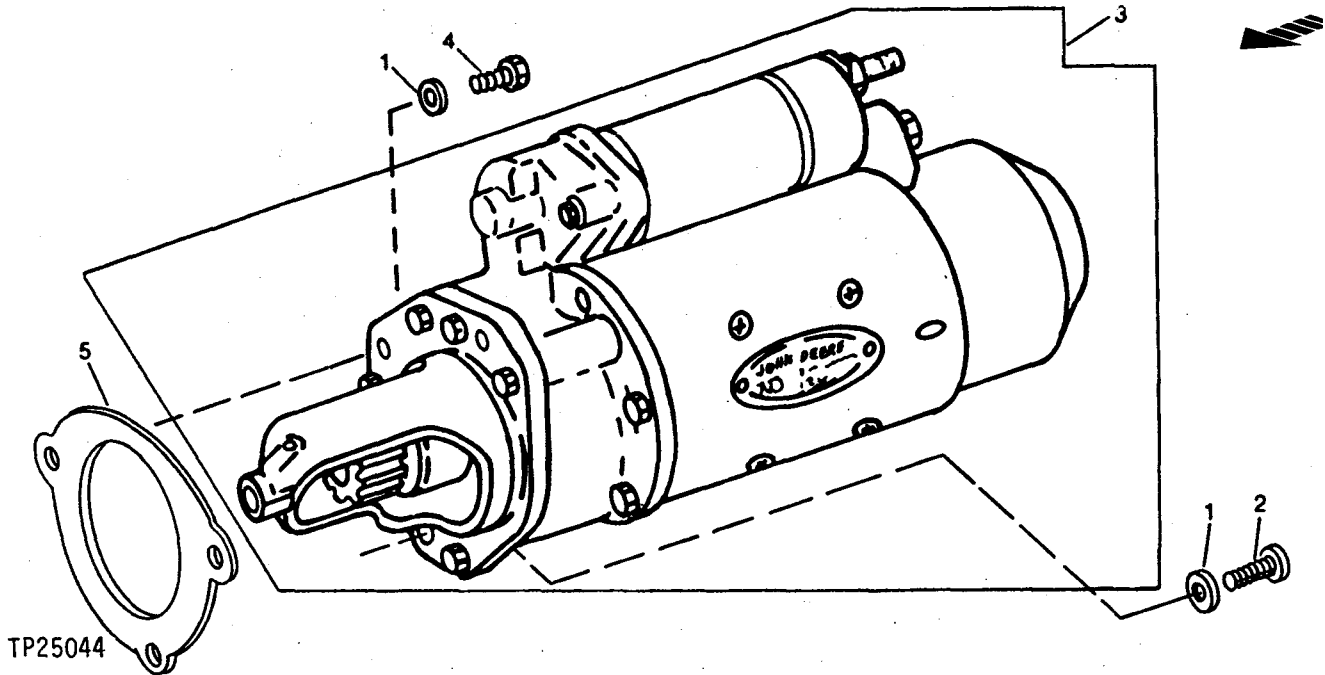


KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6	REMARKS
					3 3	
1	12H304	LOCK WASHER	3		5 5	
2	19H1732	CAP SCREW	2		9 9	
3	TY6617	STARTER	1		D T	
4	19H1800	CAP SCREW	1			
5	R53108	GASKET	1			

STARTER DRIVE HOUSING AND ARMATURE
CODE 3002 STARTING MOTOR
(12-VOLT) (JOHN DEERE)

STARTING MOTOR AND FASTENINGS 0422

TP1233

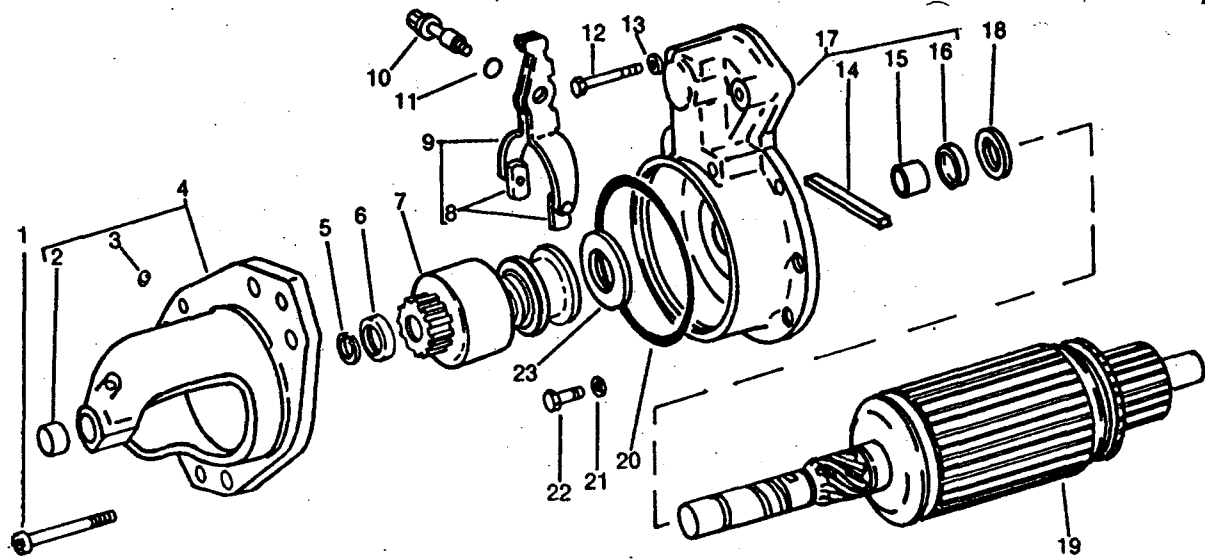


TP1233

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	R50900	SCREW	6		X X	
2	R50891	BUSHING	1		X X	
3	R50892	PLUG	1		X X	
4	AR54990	HOUSING	1		X X	
5	R50902	SNAP RING	1		X X	
6	R50903	STOP	1		X X	
7	AR54992	DRIVE	1		X X	
8	R51667	WEAR PLATE	2		X X	
9	AR67827	ARM	1		X X	
10	R50897	SHAFT	1		X X	
11	R52387	O-RING	1		X X	
12	R50893	SCREW	2		X X	
13	12H302	LOCK WASHER	2		X X	1/4"
14	R51666	WICK	1		X X	
15	R51665	BUSHING	1		X X	
16	AR55947	SEAL	1		X X	
17	AR68430	HOUSING	1		X X	
18	R50906	THRUST WASHER	1		X X	
19	AR66778	ARMATURE	1		X X	
20	R50901	WASHER	1		X X	
21	12H317	LOCK WASHER	2		X X	9/16"
22	R51661	SCREW	2		X X	
23	R50905	WEAR RING	1		X X	

STARTER MAIN FRAME AND COIL
CODE 3002 STARTING MOTOR
(12-VOLT) (JOHN DEERE)

RG1171

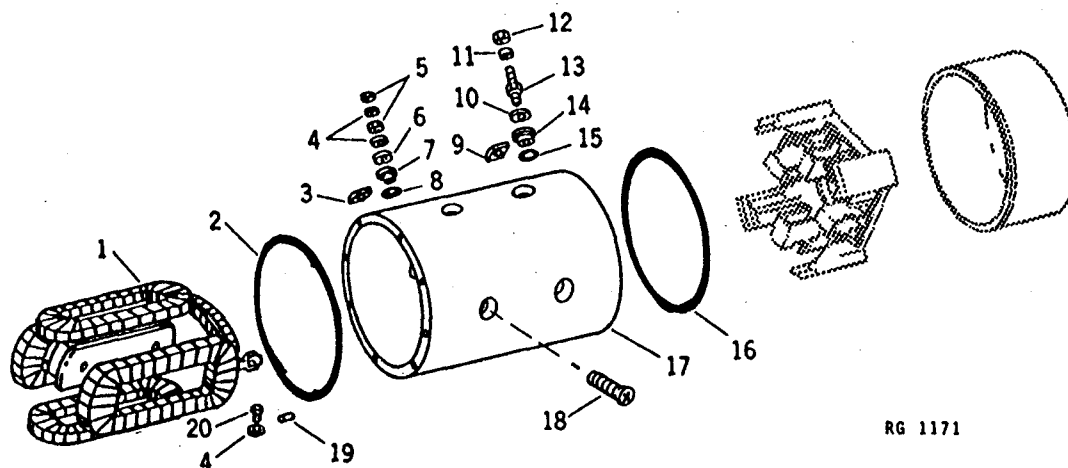

RG 1171

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	REMARKS
1	AR54996	FIELD WINDING COIL	AR	6 6	
	RE13731	FIELD WINDING COIL	AR	3 3	
2	R50913	O-RING	1	5 9	
3	R50916	WASHER	1	9 5	
4	12H246	LOCK WASHER	3	DT	NO. 10
5	R50907	NUT	2		
6	24H1283	WASHER	1		7/32" X 1/2" X 0.048"
7	R50914	WASHER	1		
8	R50915	O-RING	1		
9	R50920	BUSHING	1		
10	R50917	WASHER	1		
11	R50899	LOCK WASHER	1		
12	R50909	NUT	1		
13	R56802	BOLT	1		
14	R50918	WASHER	1		
15	R50919	O-RING	1		
16	R50922	O-RING	1		
17		HOUSING	1		(SUB TY6617)
18	R50921	SCREW	8		
19	R51664	DOWEL PIN	1		
20	R50931	SCREW	1		


D14

ENGINE 4

STARTER COMMUTATOR END FRAME CODE 3002 STARTING MOTOR, 12-VOLT

STARTING MOTOR AND FASTENINGS 0422

TP14894

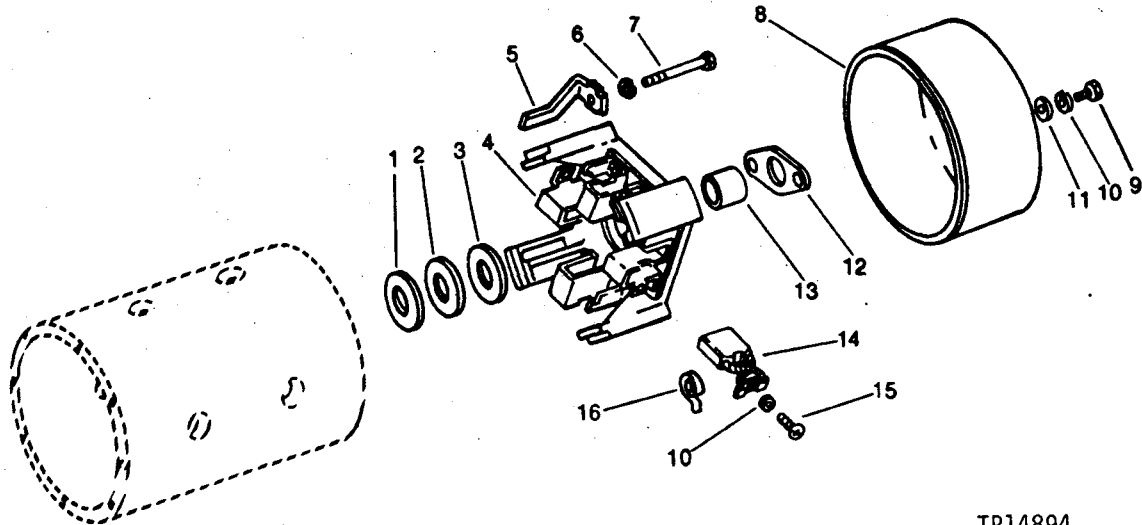

TP14894

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 DT	REMARKS
1	R50923	SHIM	AR		X X	0.18 MM (.007")
2	R50924	SHIM	AR		X X	0.48 MM (.019")
3	R50925	THRUST WASHER	1		X X	
4	AR54997	FRAME	1		X X	
5	R51660	BRACKET	2		X X	
6	12H317	LOCK WASHER	2		X X	9/16"
7	R51659	SCREW	2		X X	
8	R50912	COVER	1		X X	
9	R50931	SCREW	2		X X	
10	12H246	LOCK WASHER	6		X X	NO. 10
11	24H1283	WASHER	2		X X	7/32" X 1/2" X 0.048"
12	R50930	GASKET	1		X X	
13	R50891	BUSHING	1		X X	
14	R50927	CARBON BRUSH CONDUCTOR	4		X X	
15	R50929	SCREW	4		X X	
16	R50928	SPRING	4		X X	


D15

ENGINE

STARTING MOTOR AND FASTENINGS 042

STARTER SOLENOID SWITCH CODE 3002 STARTING MOTOR, 12-VOLT

TP14295

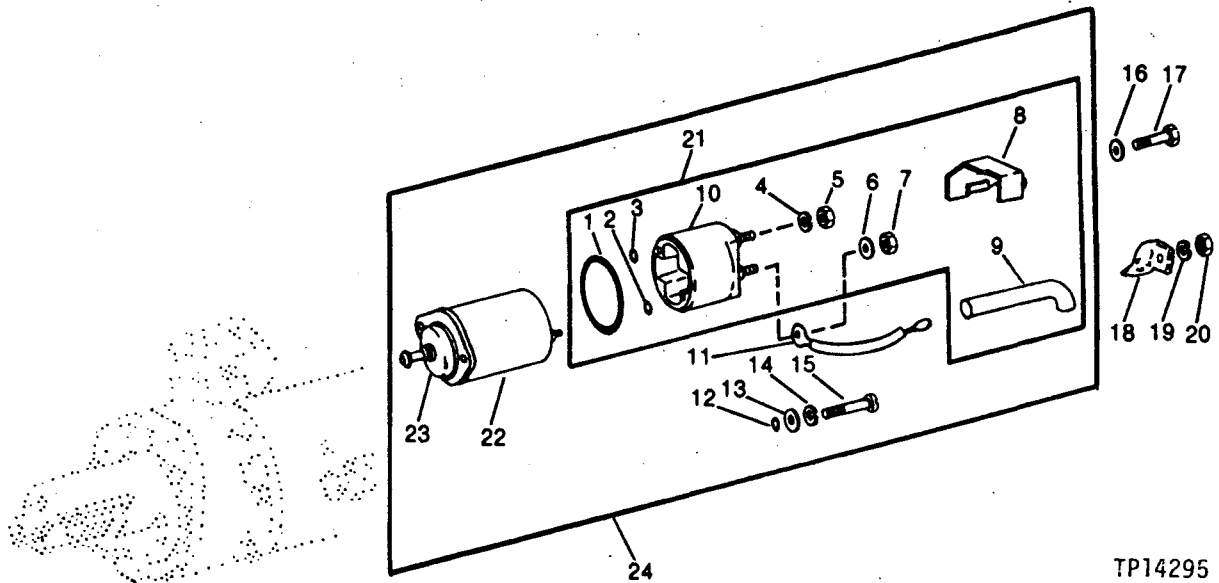

TP14295

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	REMARKS
1	R68224	GASKET	AR	6 6	
	R51668	WASHER	AR	3 3	
2	R56792	WASHER	1	5 5	
3	R56793	SHIM	1	9 9	
4	12H303	LOCK WASHER	1	DT	5/16"
5	R51671	NUT	1		
6	12H246	LOCK WASHER	1		NO. 10
7	14H631	NUT	2		NO. 10
8	R76139	COVER	1		(ALSO ORDER 14H732)
9	R68222	HOSE	1		
10		COVER	1		(SUB RE13733)
11	RE15058	WIRE	1		
12	R50894	O-RING	2		
13	24H1305	WASHER	2		13/32" X 13/16" X 0.060"
14	12H302	LOCK WASHER	2		1/4"
15	R51669	SCREW	2		
16	R51662	WASHER	1		
17	AR55946	SCREW	1		WITH WASHER
18	R50910	CONNECTOR	1		
19	R50899	LOCK WASHER	2		
20	14H732	NUT	2		3/8"
21	RE13733	SWITCH	1		
22		SWITCH	1		(SUB RE13732)
23	R52385	BOOT	1		
24	RE13732	SWITCH	1		


D16

ENGINE

STARTING MOTOR AND FASTENINGS 042

STARTING MOTOR ATTACHING PARTS
 CODE 3003 STARTING MOTOR, SEALED FOR WET CLUTCH
 CODE 3006 STARTING MOTOR, SEALED FOR WET CLUTCH

TP25468

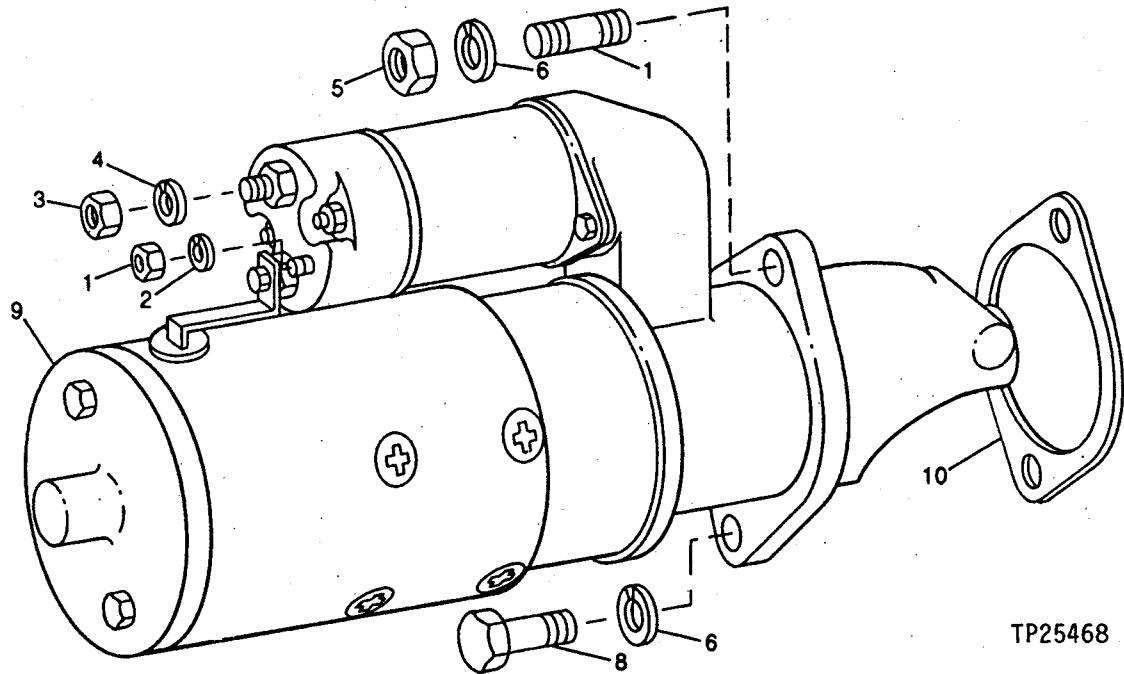


TP25468

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	14M7297	NUT	1		X X	M5
2	12M7011	LOCK WASHER	1		X X	5.100MM
3	14M7274	NUT	1		X X	M10
4	12M7013	LOCK WASHER	1		X X	10.180MM
5	14H812	NUT	1		X X	3/8"
6	12H304	LOCK WASHER	2		X X	3/8"
7	C2175R	STUD	1		X X	
8	19H1731	CAP SCREW	1		X X	3/8" X 1"
9	RE19196	MOTOR	1		X X	(CODE 3003) (DELCO-REMY NO. 1998364)
	RE19187	MOTOR	1		X X	(CODE 3006) (DELCO-REMY NO. 1998367)
10	R71835	GASKET	1		X X	

STARTING MOTOR COIL ASSEMBLY, HOUSING AND ARMATURE
CODE 3003 STARTING MOTOR, SEALED FOR WET CLUTCH

STARTING MOTOR AND FASTENINGS 0422

TP25499

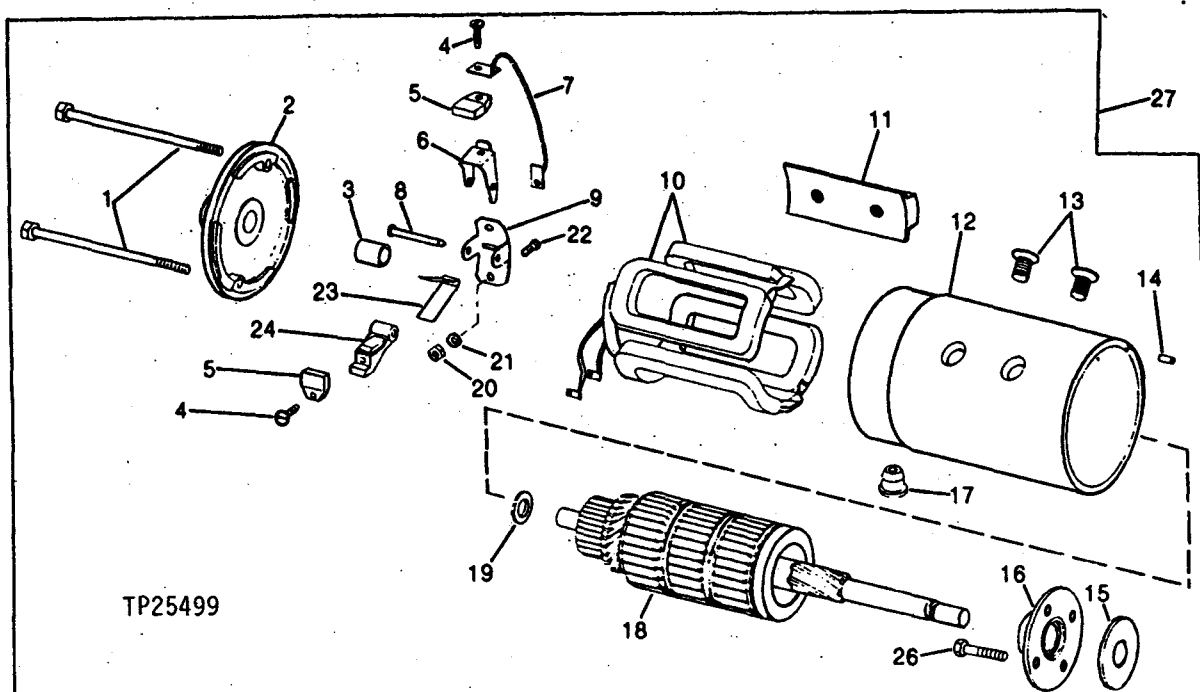

TP25499


KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 D	6 3 5 9 T	REMARKS
1	R81171	BOLT	2		X	X	
2	R81167	END PLATE	1		X	X	
3	R61932	BUSHING	1		X	X	
4	RE19189	SCREW	4		X	X	
5	R81168	BRUSH	4		X	X	
6	R81169	CARBON BRUSH HOLDER	2		X	X	
7	R57028	WIRING LEAD	2		X	X	
8	T736T	PIN	2		X	X	
9	AR68302	KIT	2		X	X	
10	RE19188	FIELD WINDING COIL	1		X	X	
11	T11680	SHOE	4		X	X	
12		HOUSING	1		X	X	(SUB RE19196)
13	21H1280	SCREW	8		X	X	3/8" X 3/4"
14	R81173	DOWEL PIN	4		X	X	
15	R54585	GASKET	1		X	X	
16	AR62967	BEARING	1		X	X	WITH BUSHING
17	R11236	GROMMET	1		X	X	
18	AR68299	ARMATURE	1		X	X	
19	R81198	THRUST WASHER	1		X	X	
20	14H778	NUT	4		X	X	NO. 10
21	12H246	LOCK WASHER	4		X	X	NO. 10
22	21H1301	SCREW	4		X	X	NO. 10 X 1/2"
23	R81170	SPRING	2		X	X	
24	R57027	HOLDER	2		X	X	
26	RE19191	SCREW, WITH WASHER	4		X	X	
27	RE19196	MOTOR	1		X	X	(DELCO-REMY NO. 1998364)

D18

ENGINE

STARTING MOTOR DRIVE AND SWITCH ASSEMBLY CODE 3003 STARTING MOTOR, SEALED FOR WET CLUTCH

TP25498

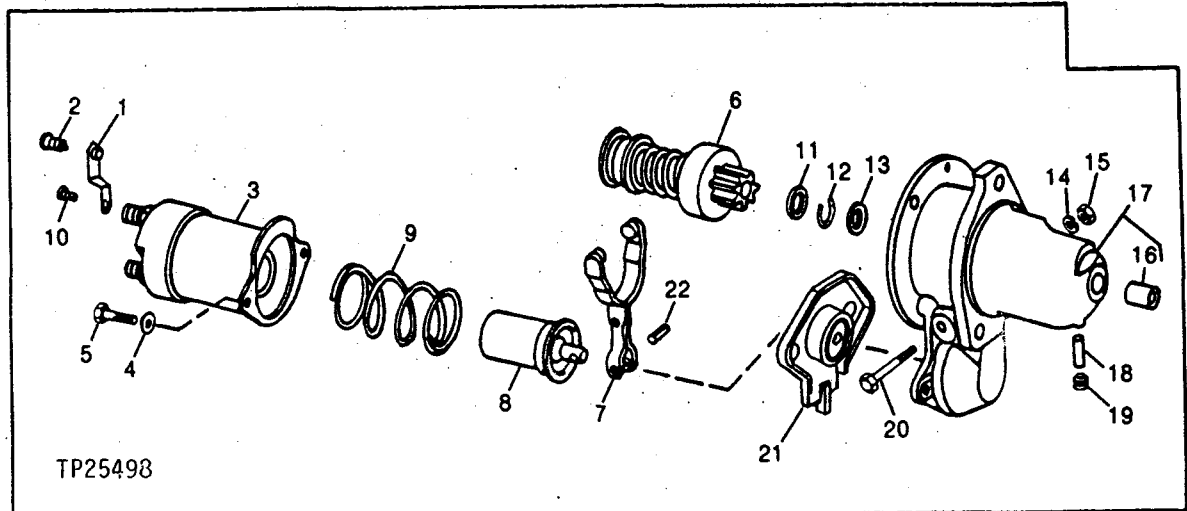

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	R57025	CONNECTOR	1		X X	
2	37H91	SCREW	1		X X	NO. 10 X 1/2"
3	AM39968	SOLENOID	1		X X	
4	12H302	LOCK WASHER	2		X X	1/4"
5	21H1142	SCREW	2		X X	1/4" X 1/2"
6	AR54923	BENDIX DRIVE	1		X X	
7	T18113	SHIFTER	1		X X	
8	RE19197	PLUNGER	1		X X	
9	R81176	COMPRESSION SPRING	1		X X	
10	T15564	SCREW	1		X X	
11	R11116	SPACER	1		X X	
12	R11117	SNAP RING	1		X X	
13	T24539	WASHER	1		X X	
14	AR62966	WASHER	1		X X	
15	14H611	NUT	1		X X	5/16"
16	R57029	BUSHING	1		X X	
17	AR71834	HOUSING	1		X X	
18	R61934	WICK	1		X X	
19	R81174	PLUG	1		X X	1/8"
20	T11672	CAP SCREW	1		X X	
21	R81177	BOOT	1		X X	
22	34H279	SPRING PIN	1		X X	3/16" X 13/16"
23	RE19196	MOTOR	1		X X	(DELCO-REMY NO. 1998364)


D19

ENGINE 4

STARTING MOTOR AND FASTENINGS 0422

CODE 3003 STARTER SOLENOID SWITCH
CODE 3006 STARTING MOTOR, SEALED FOR WET CLUTCH
STARTING MOTOR, SEALED FOR WET CLUTCH

TP17616

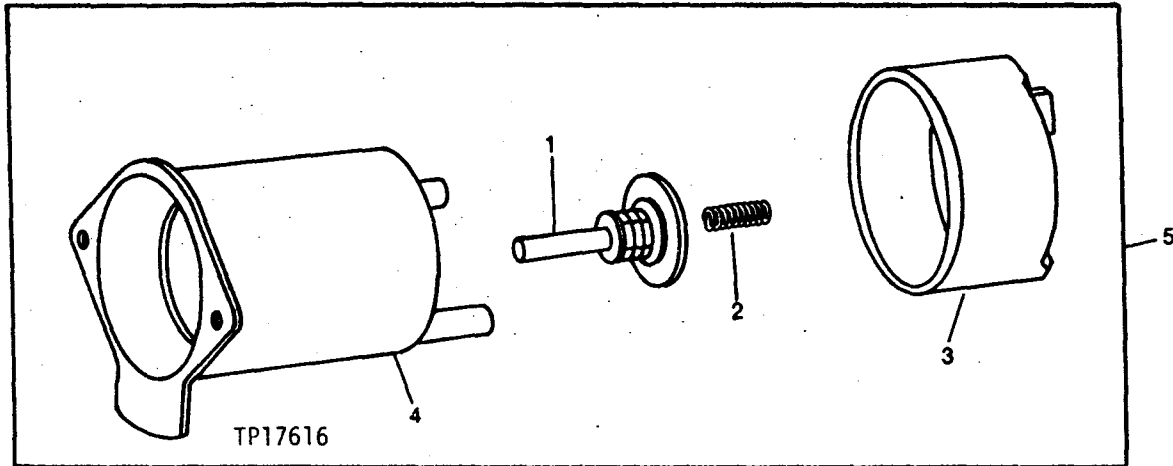

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	AM39969	CONTACT	1		X X	
2	R11066	SPRING	1		X X	
3	RE24175	COVER	1		X X	
4		SOLENOID	1		X X	(SUB AM39968)
5	AM39968	SOLENOID	1		X X	(12-VOLT) (DELCO-REMY NO. 1114524)


D20

ENGINE 4

STARTING MOTOR COIL ASSEMBLY, HOUSING AND ARMATURE CODE 3006 STARTING MOTOR, SEALED FOR WET CLUTCH

STARTING MOTOR AND FASTENINGS 0422

TP25499

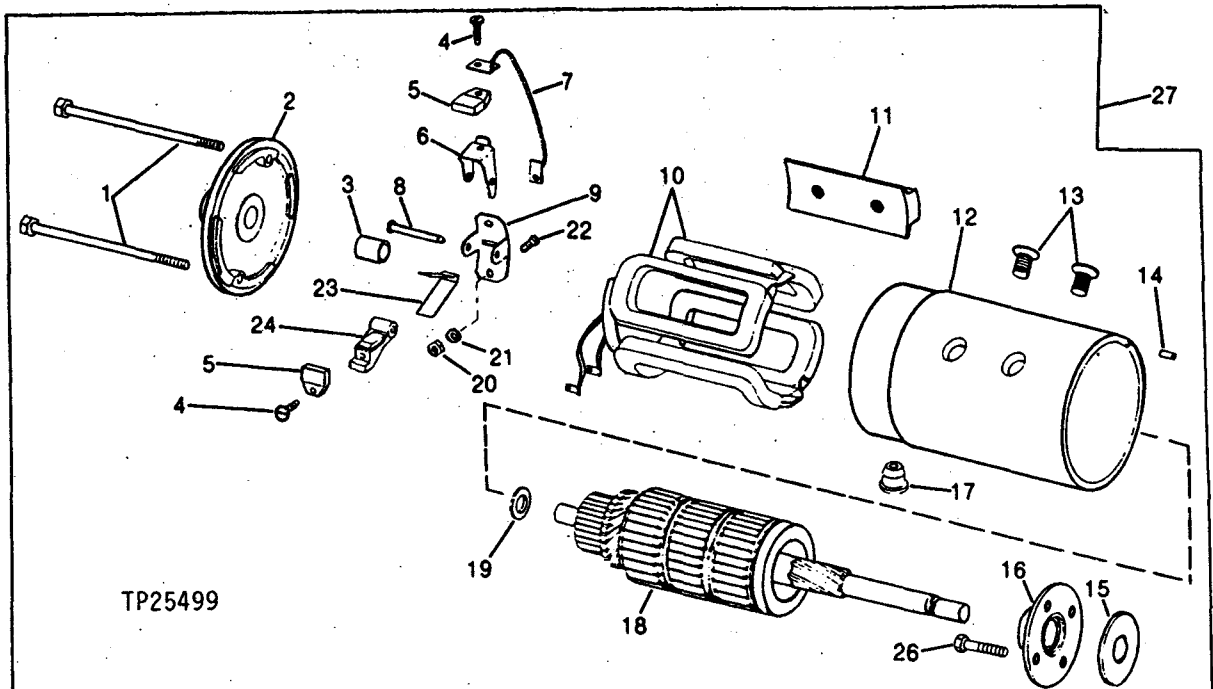


TP25499

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 DT	REMARKS
1	R81171	BOLT	2		X X	
2	R81167	END PLATE	1		X X	
3	R61932	BUSHING	1		X X	
4	RE19189	SCREW	4		X X	
5	R81168	BRUSH	4		X X	
6	R81169	CARBON BRUSH HOLDER	2		X X	
7	R57028	WIRING LEAD	2		X X	
8	T736T	PIN	2		X X	
9	AR68302	KIT	2		X X	
10	RE19188	FIELD WINDING COIL	1		X X	
11	T11680	SHOE	4		X X	
12		HOUSING	1		X X	(SUB RE19187)
13	21H1280	SCREW	8		X X	3/8" X 3/4"
14	R81173	DOWEL PIN	4		X X	
15	R81172	WASHER	1		X X	
16	RE19192	PLATE	1		X X	WITH BUSHING
17	R11236	GROMMET	1		X X	
18	AR68299	ARMATURE	1		X X	
19	R81198	THRUST WASHER	1		X X	
20	14H778	NUT	4		X X	NO. 10
21	12H246	LOCK WASHER	4		X X	NO. 10
22	21H1301	SCREW	4		X X	NO. 10 X 1/2"
23	R81170	SPRING	2		X X	
24	R57027	HOLDER	2		X X	
25	R61934	WICK	AR		X X	1/8"
26	RE19191	SCREW, WITH WASHER	4		X X	
27	RE19187	MOTOR	1		X X	

STARTING MOTOR AND FASTENINGS 0422
 STARTING MOTOR DRIVE AND SWITCH ASSEMBLY
 CODE 3006 STARTING MOTOR, SEALED FOR WET CLUTCH

TP25498

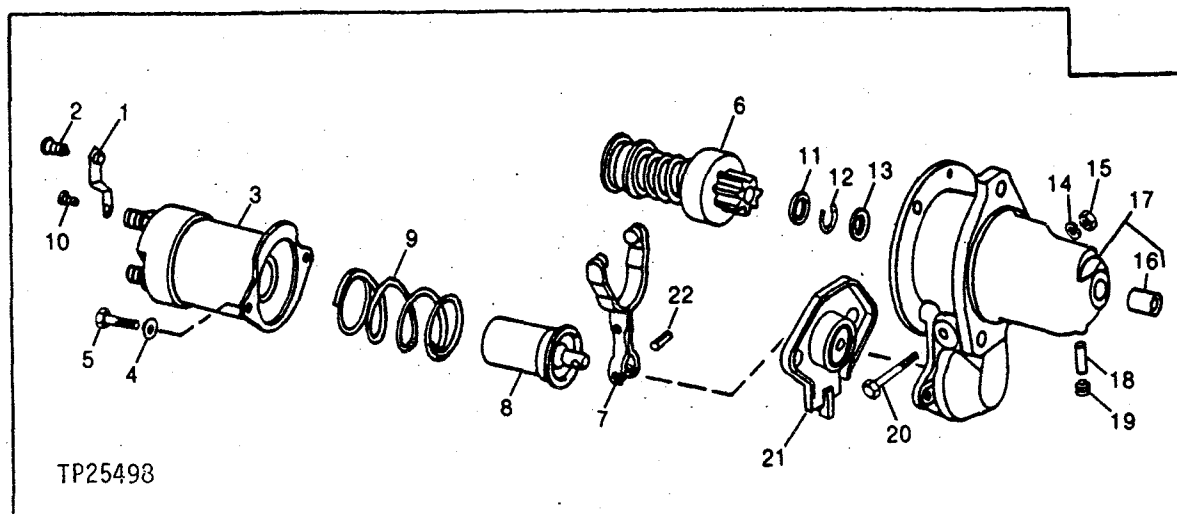


KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	R57025	CONNECTOR	1		X X	
2	37H91	SCREW	1		X X	NO. 10 X 1/2"
3	AM39968	SOLENOID	1		X X	
4	12H302	LOCK WASHER	2		X X	1/4"
5	21H1142	SCREW	2		X X	1/4" X 1/2"
6	AR54923	BENDIX DRIVE	1		X X	
7	T18113	SHIFTER	1		X X	
8	AM39970	PLUNGER	1		X X	
9	R81176	COMPRESSION SPRING	1		X X	
10	T15564	SCREW	1		X X	
11	R11116	SPACER	1		X X	
12	R11117	SNAP RING	1		X X	
13	T24539	WASHER	1		X X	
14	12H303	LOCK WASHER	1		X X	5/16"
15	14H611	NUT	1		X X	5/16"
16	R57029	BUSHING	1		X X	
17	RE19193	HOUSING	1		X X	
18	R81175	WICK	1		X X	
19	R81174	PLUG	1		X X	1/8"
20	T11672	CAP SCREW	1		X X	
21	T17058	GASKET	1		X X	
22	34H279	SPRING PIN	1		X X	3/16" X 13/16"
23	RE19187	MOTOR	1		X X	

STARTING MOTOR, ATTACHING PARTS AND SOLENOID COVER
CODE 3007 STARTING MOTOR, 12-VOLT

STARTING MOTOR AND FASTENINGS 0422

TP26021

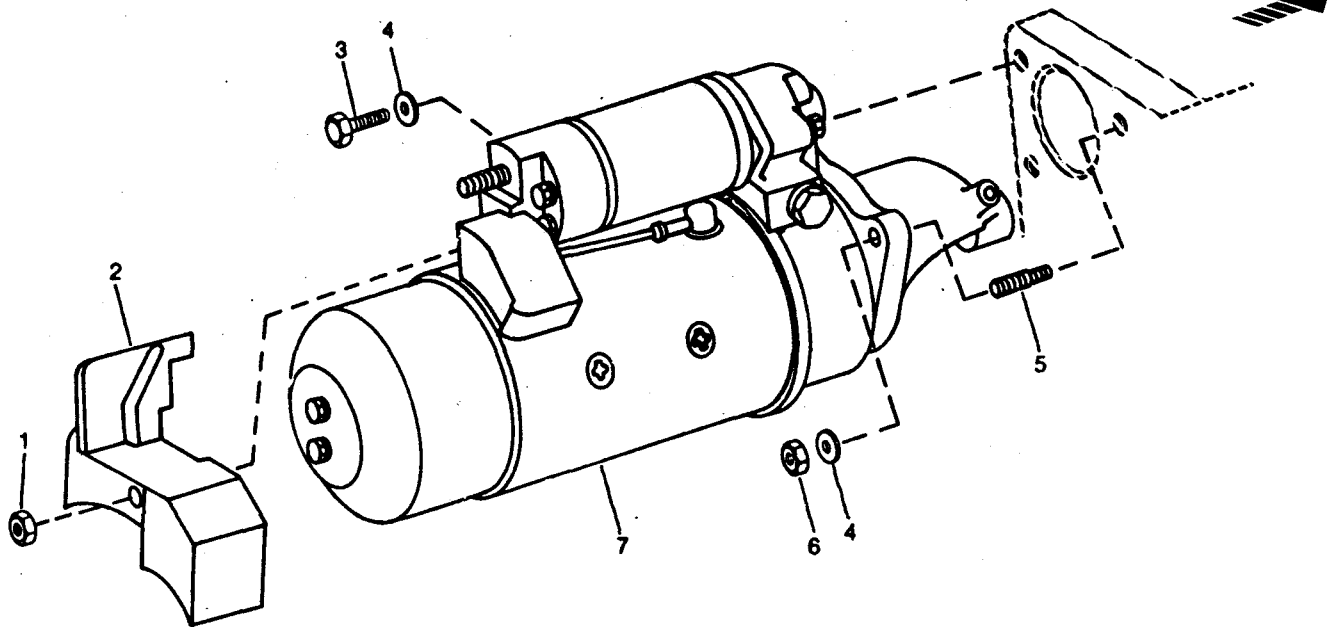


TP26021

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	14H732	NUT	1		X X	3/8"
2	R76139	COVER	1		X X	
3	19H1732	CAP SCREW	2		X X	3/8" X 1-1/4"
4	12H304	LOCK WASHER	3		X X	3/8"
5	C2175R	STUD	1		X X	
6	14H812	NUT	1		X X	3/8"
7	TY6613	STARTER	1		X X	(REMANUFACVTURED) (JOHN DEERE)

STARTER SOLENOID SWITCH
CODE 3007 STARTING MOTOR, 12-VOLT


TP10910

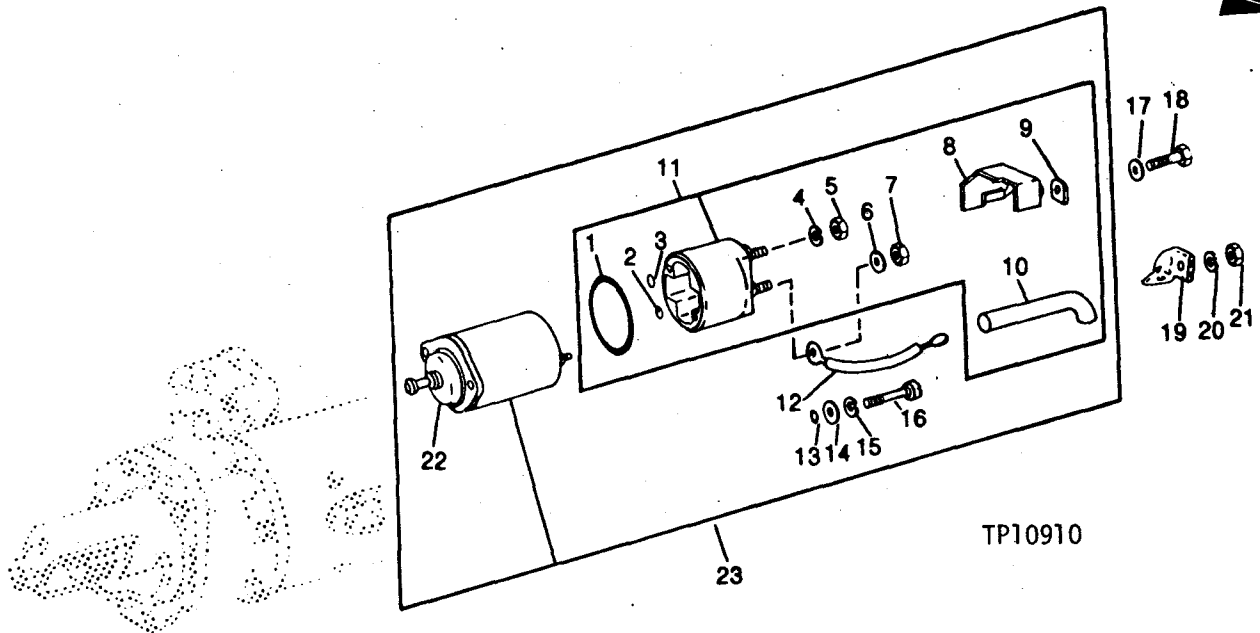

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 DT	REMARKS
1	R68224	GASKET	1		X X	
2	R56792	WASHER	1		X X	
3	R56793	SHIM	1		X X	
4	12H303	LOCK WASHER	1		X X	5/16"
5	R51671	NUT	1		X X	
6	12H246	LOCK WASHER	1		X X	NO. 10
7	14H631	NUT	2		X X	NO. 10
8	R76139	COVER	1		X X	
9	R68223	PLATE	1		X X	
10	R68222	HOSE	1		X X	
11	RE13733	SWITCH	1		X X	
12	RE15058	WIRE	1		X X	
13	R50894	O-RING	2		X X	
14	24H1305	WASHER	2		X X	13/32" X 13/16" X 0.060"
15	12H302	LOCK WASHER	2		X X	1/4"
16	R51669	SCREW	2		X X	
17	R51662	WASHER	1		X X	
18	AR55946	SCREW	1		X X	
19	R50910	CONNECTOR	1		X X	
20	R50899	LOCK WASHER	2		X X	
21	14H732	NUT	2		X X	3/8"
22	R52385	BOOT	1		X X	
23	RE13732	SWITCH	1		X X	

STARTING MOTOR MAIN FRAME AND COIL
CODE 3007 STARTING MOTOR, 12-VOLT

TP4275

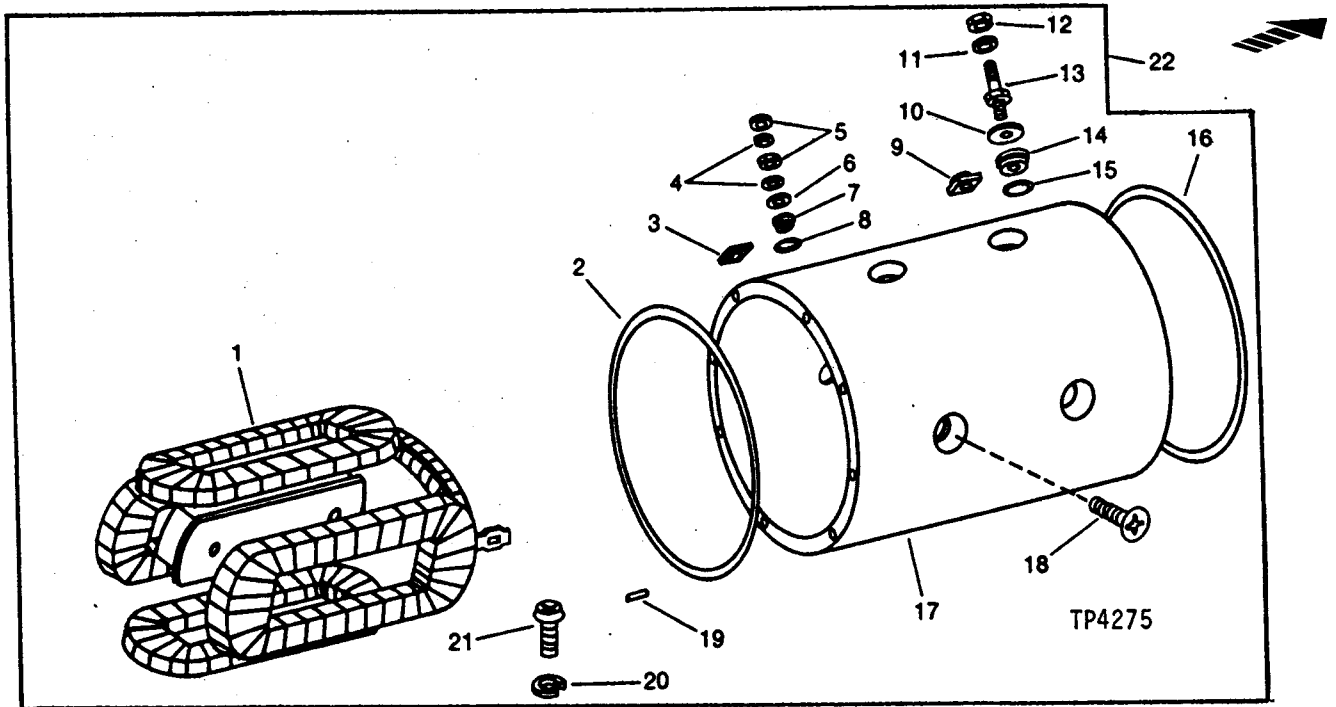

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 DT	REMARKS
1	AR54996	FIELD WINDING COIL	1		X X	
2	R50913	O-RING	1		X X	
3	R50916	WASHER	1		X X	
4	12H246	LOCK WASHER	2		X X	NO. 10
5	R50907	NUT	2		X X	
6	24H1283	WASHER	1		X X	7/32" X 1/2" X 0.048"
7	R50914	WASHER	1		X X	
8	R50915	O-RING	1		X X	
9	R50920	BUSHING	1		X X	
10	R50917	WASHER	1		X X	
11	R50899	LOCK WASHER	1		X X	
12	R50909	NUT	1		X X	
13	R56802	BOLT	1		X X	
14	R50918	WASHER	1		X X	
15	R50919	O-RING	1		X X	
16	R50922	O-RING	1		X X	
17		HOUSING	1		X X	(SUB AR68732)
18	R50921	SCREW	8		X X	
19	R51664	DOWEL PIN	1		X X	
20	12H246	LOCK WASHER	1		X X	NO. 10
21	R50931	SCREW	1		X X	
22	AR68732	FIELD WINDING COIL	1		X X	


D25

ENGINE 4

STARTING MOTOR COMMUTATOR END FRAME CODE 3007 STARTING MOTOR, 12-VOLT

STARTING MOTOR AND FASTENINGS 0422

TP4276

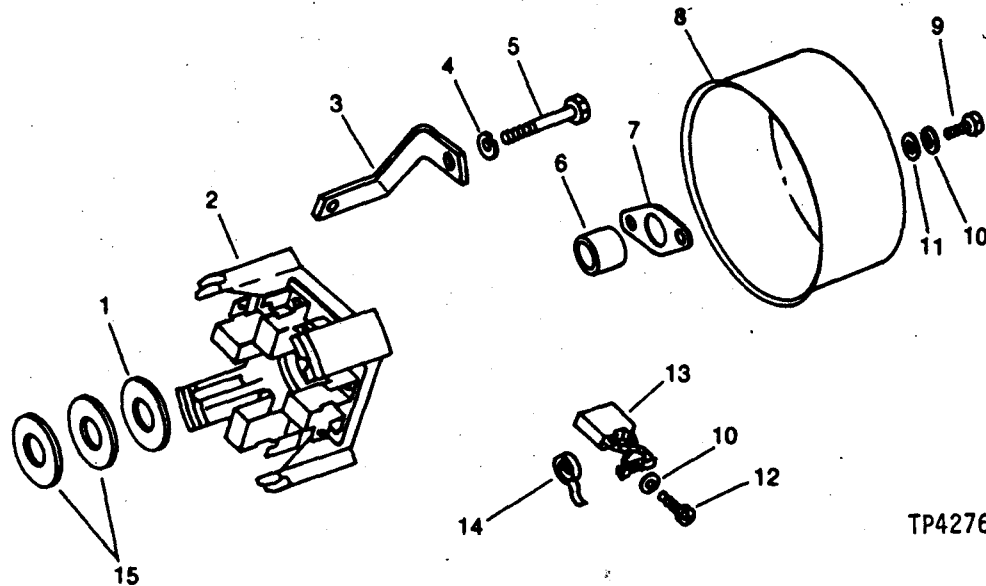


TP4276

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D A	REMARKS
1	R50925	THRUST WASHER	1		X X	
2	AR54997	FRAME	1		X X	
3	R51660	BRACKET	1		X X	
4	12H317	LOCK WASHER	2		X X	9/16"
5	R51659	SCREW	2		X X	
6	R50891	BUSHING	1		X X	
7	R50930	GASKET	1		X X	
8	R50912	COVER	1		X X	
9	R50931	SCREW	2		X X	
10	12H246	LOCK WASHER	6		X X	NO. 10
11	24H1283	WASHER	2		X X	7/32" X 1/2" X 0.048"
12	R50929	SCREW	4		X X	
13	R50927	CARBON BRUSH CONDUCTOR	4		X X	
14	R50928	SPRING	4		X X	
15	R50923	SHIM	AR		X X	0.18 MM (.007")
	R50924	SHIM	AR		X X	0.48 MM (.019")

STARTING MOTOR DRIVE HOUSING AND ARMATURE
CODE 3007 STARTING MOTOR, 12-VOLT

STARTING MOTOR AND FASTENINGS 0422


TP14756

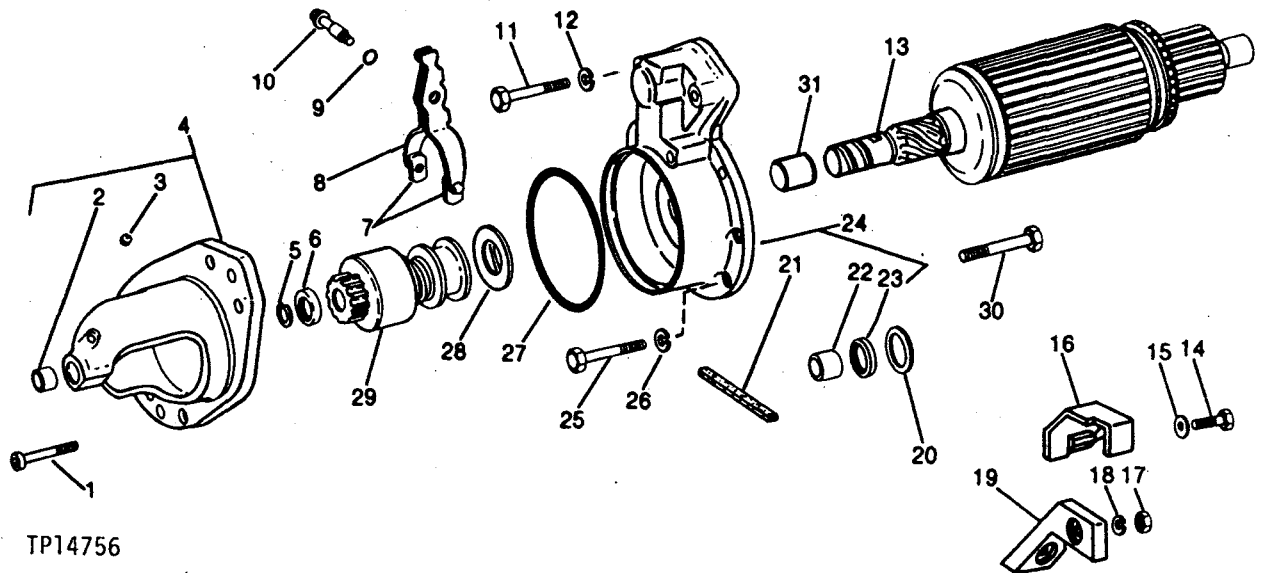

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 T 9 D	6 3 5 9 T	REMARKS
1	R50900	SCREW	6		X	X	
2	R50891	BUSHING	1		X	X	
3	R50892	PLUG	1		X	X	
4	AR68730	HOUSING	1		X	X	
5	R50902	SNAP RING	1		X	X	
6	R50903	STOP	1		X	X	
7	R51667	WEAR PLATE	2		X	X	
8	R50904	LEVER	1		X	X	
	AR67827	ARM	1		X	X	
9	R52387	O-RING	1		X	X	
10	R50897	SHAFT	1		X	X	
11	R50893	SCREW	2		X	X	
12	12H302	LOCK WASHER	2		X	X	1/4"
13	AR66778	ARMATURE	1		X	X	
14	AR55946	SCREW	1		X	X	
15	R51662	WASHER	1		X	X	
16	R76139	COVER	1		X	X	
17	14H732	NUT	3		X	X	3/8"
18	R50899	LOCK WASHER	3		X	X	
19	R50910	CONNECTOR	1		X	X	FIELD COIL
20	R50906	THRUST WASHER	1		X	X	
21	R51666	WICK	1		X	X	
22	R51665	BUSHING	1		X	X	
23	AR55947	SEAL	1		X	X	
24	AR68731	HOUSING	1		X	X	CENTER BEARING
25	R51661	SCREW	2		X	X	
26	12H317	LOCK WASHER	2		X	X	9/16"
27	R50901	WASHER	1		X	X	
28	R50905	WEAR RING	1		X	X	
29	AR54992	DRIVE	1		X	X	
30	AR62963	SCREW	1		X	X	
31	AR62964	SEAL	1		X	X	

STARTING MOTOR AND ATTACHING PARTS
 CODE 3011 STARTING MOTOR
 CODE 3016 STARTING MOTOR

RGP2745

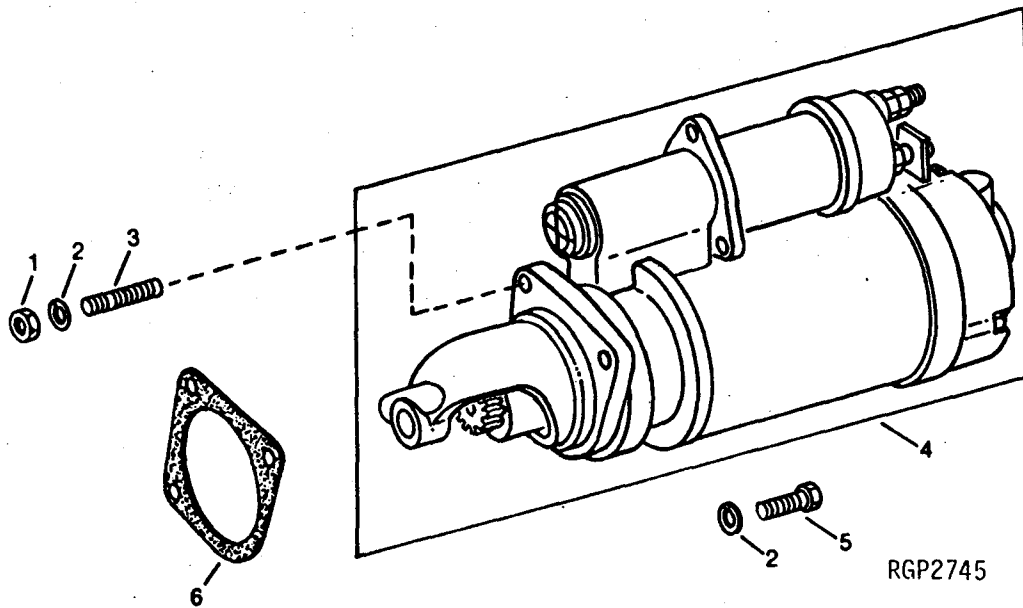


KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	14H812	NUT	1		X X	3/8"
2	12H304	LOCK WASHER	3		X X	3/8"
3	R55396	STUD	1		X X	
4	RE27462	STARTER	1		X X	(A) (CODE 3011) (DELCO-REMY NO. 1993799) (12-VOLT)
	RE29400	STARTER	1		X X	(A) (CODE 3016) (DELCO-REMY NO. 1993829) (12-VOLT)
5	19H1732	CAP SCREW	2		X X	3/8" X 1-1/4"
6	R53108	GASKET	1		X X	

(A) FOR REPAIR PARTS SEE YOUR DELCO-REMY REPAIR STATION

STARTING MOTOR
CODE 3013 STARTING MOTOR, 24-VOLT

RG1168

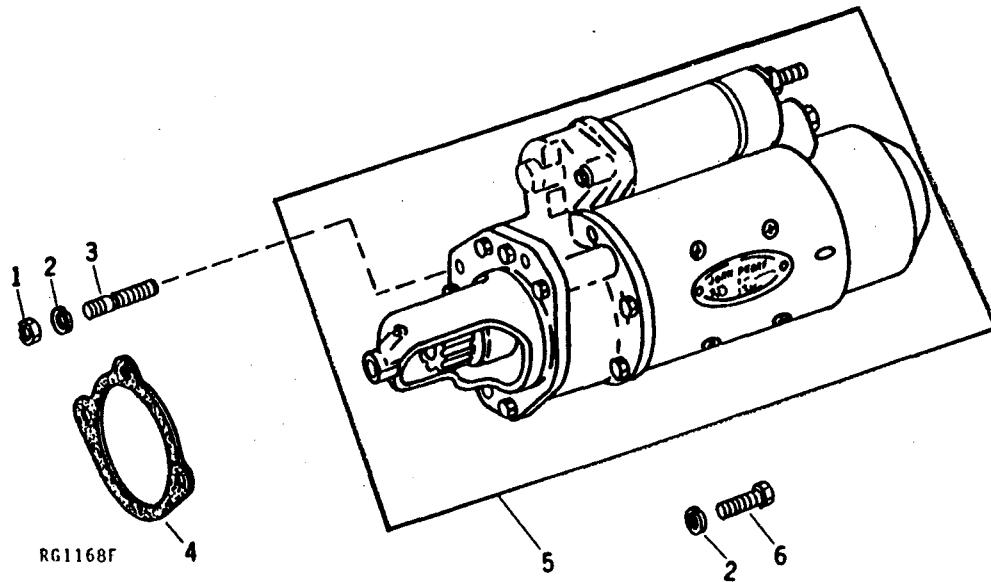


KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	14H1076	NUT	1		X X	HS, SAE 8, 3/8"
2	12H304	LOCK WASHER	3		X X	3/8"
3	R55396	STUD	1		X X	
4	R53108	GASKET	1		X X	
5	TY6654	STARTER	1		X X	REMANUFACTURED (NIPPONDENSO NO. 028000-5250)
6	19H2545	CAP SCREW	2		X X	(A) 3/8" X 1-3/8"

(A) (ALSO ORDER R76139, 14H732, R77998 AND R77999)

STARTER COMMUTATOR END FRAME
CODE 3013 STARTING MOTOR, 24-VOLT

STARTING MOTOR AND FASTENINGS 0422

RG1172

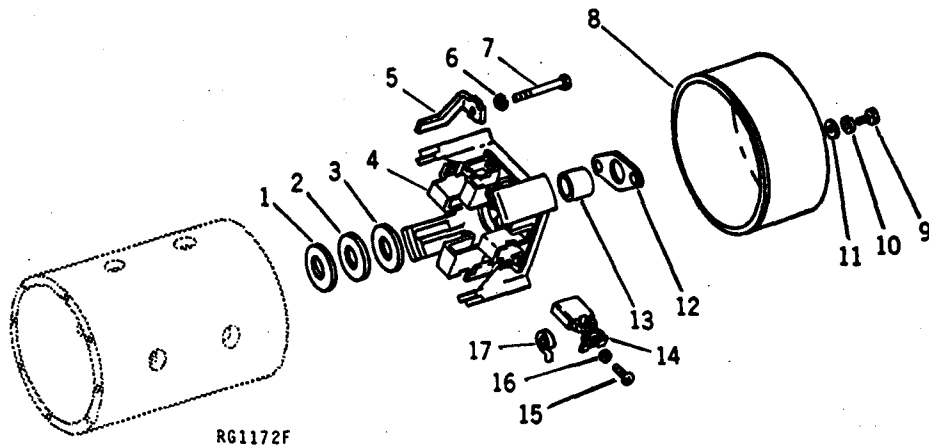

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 DT	REMARKS
1	R50923	SHIM	AR		X X	0.18 MM (.007")
2	R50924	SHIM	AR		X X	0.50 MM (.019")
3	R50925	THRUST WASHER	1		X X	
4	AR54997	FRAME	1		X X	
5	R51660	BRACKET	2		X X	
6	12H303	LOCK WASHER	2		X X	5/16"
7	R51659	SCREW	2		X X	
8	R50912	COVER	1		X X	
9	R50931	SCREW	2		X X	
10	12H246	LOCK WASHER	6		X X	NO. 10
11	24H1283	WASHER	2		X X	7/32" X 1/2" X 0.048"
12	R50930	GASKET	1		X X	
13	R50891	BUSHING	1		X X	
14	R65702	BRUSH	4		X X	
15	R50929	SCREW	4		X X	
16	12H246	LOCK WASHER	4		X X	NO. 10
17	R50928	SPRING	4		X X	


E05

ENGINE 4

STARTING MOTOR AND FASTENINGS 0422

STARTER MAIN FRAME AND COIL
CODE 3013 STARTING MOTOR, 24-VOLT

RG1171

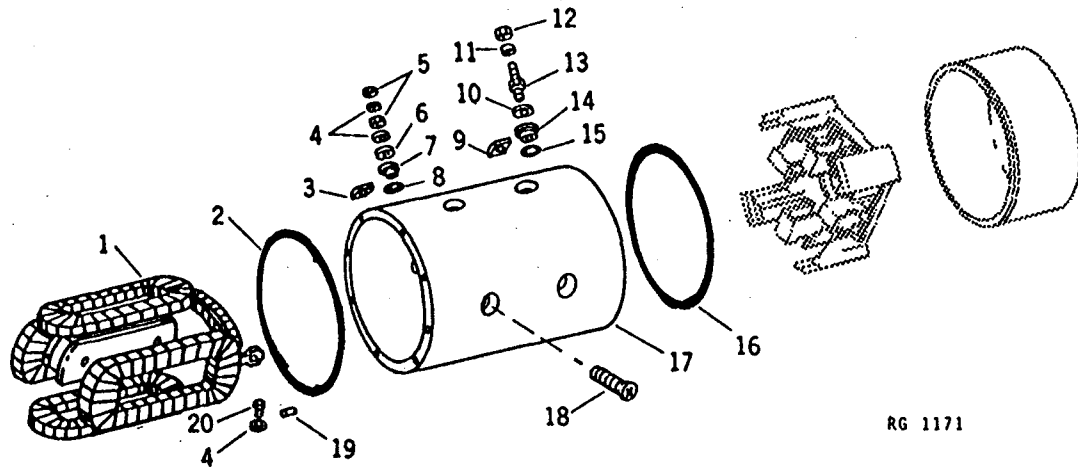


RG 1171

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 DT	REMARKS
1	RE15662	FIELD WINDING COIL	1		X X	
2	R50913	O-RING	1		X X	
3	R50916	WASHER	1		X X	
4	12H246	LOCK WASHER	3		X X	NO. 10
5	R50907	NUT	2		X X	
6	24H1283	WASHER	1		X X	7/32" X 1/2" X 0.048"
7	R50914	WASHER	1		X X	
8	R50915	O-RING	1		X X	
9	R50920	BUSHING	1		X X	
10	R50917	WASHER	1		X X	
11	R50899	LOCK WASHER	1		X X	
12	R50909	NUT	1		X X	
13	R56802	BOLT	1		X X	
14	R50918	WASHER	1		X X	
15	R50919	O-RING	1		X X	
16	R50922	O-RING	1		X X	
17		FRAME	1		X X	(SUB TY6654 OR RE15663 AND R76139, THIS APPLICATION)
18	R50921	SCREW	8		X X	
19	R51664	DOWEL PIN	1		X X	
20	R50931	SCREW	1		X X	

STARTER DRIVE HOUSING AND ARMATURE
CODE 3013 STARTING MOTOR, 24-VOLT

STARTING MOTOR AND FASTENINGS 0422

RG1169

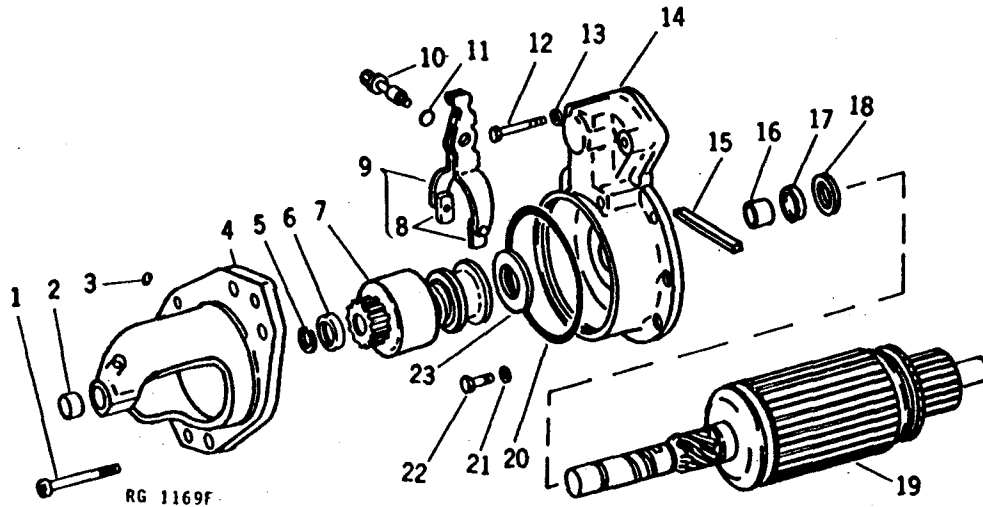


KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 DT	REMARKS
1	R65700	SCREW	6		X X	
2	R50891	BUSHING	1		X X	
3	R50892	PLUG	2		X X	
4	AR84335	HOUSING	1		X X	
5	R50902	SNAP RING	1		X X	
6	R65701	LOCKING COLLAR	1		X X	
7	AR84337	DRIVE	1		X X	
8	R51667	WEAR PLATE	2		X X	
9	AR67827	ARM	1		X X	
10	R50897	SHAFT	1		X X	
11	R52387	O-RING	1		X X	
12	R50893	SCREW	2		X X	
13	12H302	LOCK WASHER	2		X X	1/4"
14	AR68430	HOUSING	1		X X	
15	R51666	WICK	1		X X	
16	R51665	BUSHING	1		X X	
17	AR55947	SEAL	1		X X	
18	R50906	THRUST WASHER	1		X X	
19	AR84338	ARMATURE	1		X X	
20	R50901	WASHER	1		X X	
21	12H303	LOCK WASHER	2		X X	5/16"
22	R51661	SCREW	2		X X	
23	R50905	WEAR RING	1		X X	

ENGINE 4

STARTING MOTOR AND FASTENINGS 0422

STARTER SOLENOID SWITCH
CODE 3013 STARTING MOTOR, 24-VOLT

TP26025

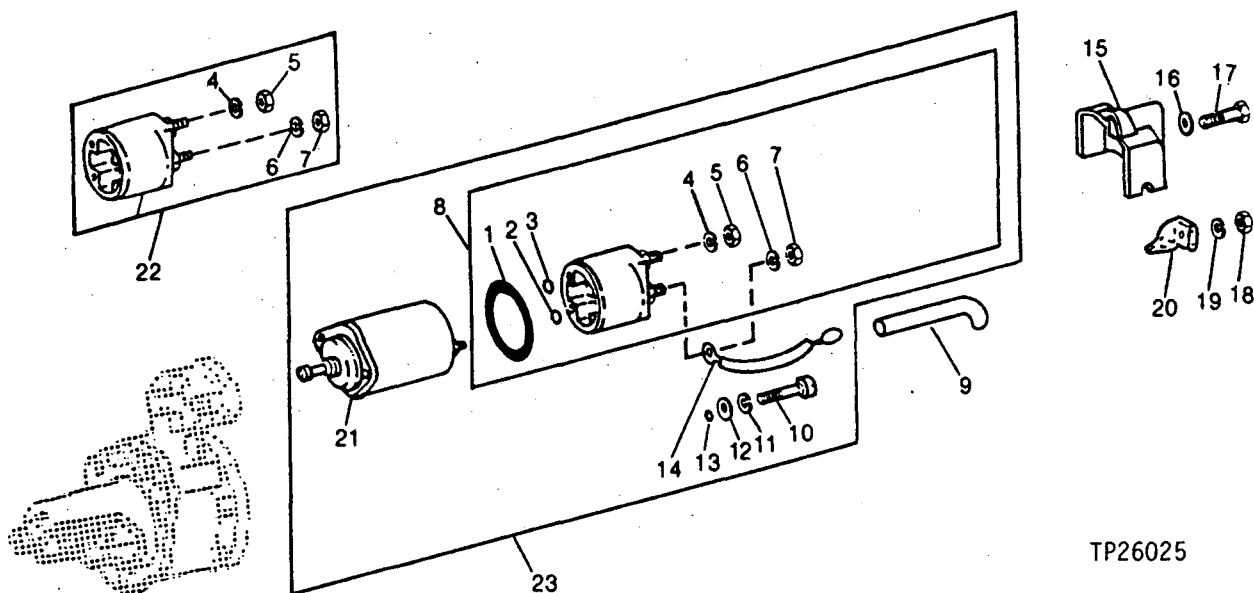


TP26025

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	REMARKS
1	R68224	GASKET	1	X X	
2	R56792	WASHER	1	X X	
3	R56793	SHIM	1	X X	
4	12H315	LOCK WASHER	1	X X	NO. 8
5	R51671	NUT	1	X X	
6	12H246	LOCK WASHER	1	X X	NO. 10
7	14H631	NUT	1	X X	NO. 10
8	AR84334	COVER	1	X X	
9	R68222	HOSE	1	X X	
10	R51669	SCREW	2	X X	
11	24H1305	WASHER	2	X X	13/32" X 13/16" X 0.060"
12	24H1283	WASHER	2	X X	7/32" X 1/2" X 0.048"
13	R50894	O-RING	2	X X	
14	RE15058	WIRE	1	X X	
15	R76139	COVER	1	X X	
16	R51662	WASHER	1	X X	
17	AR55946	SCREW	1	X X	
18	14H971	NUT	1	X X	1/2"
19	R50899	LOCK WASHER	1	X X	
20	R50910	CONNECTOR	1	X X	
21	R52385	BOOT	1	X X	
22	RE20872	COVER	1	X X	(USE WITH RE15663)
23	RE15661	SWITCH	1	X X	(NIPPONDENSO 053400-6050)

STARTING MOTOR
CODE 3014 STARTING MOTOR, 24-VOLT FOR WET CLUTCH

TP25533

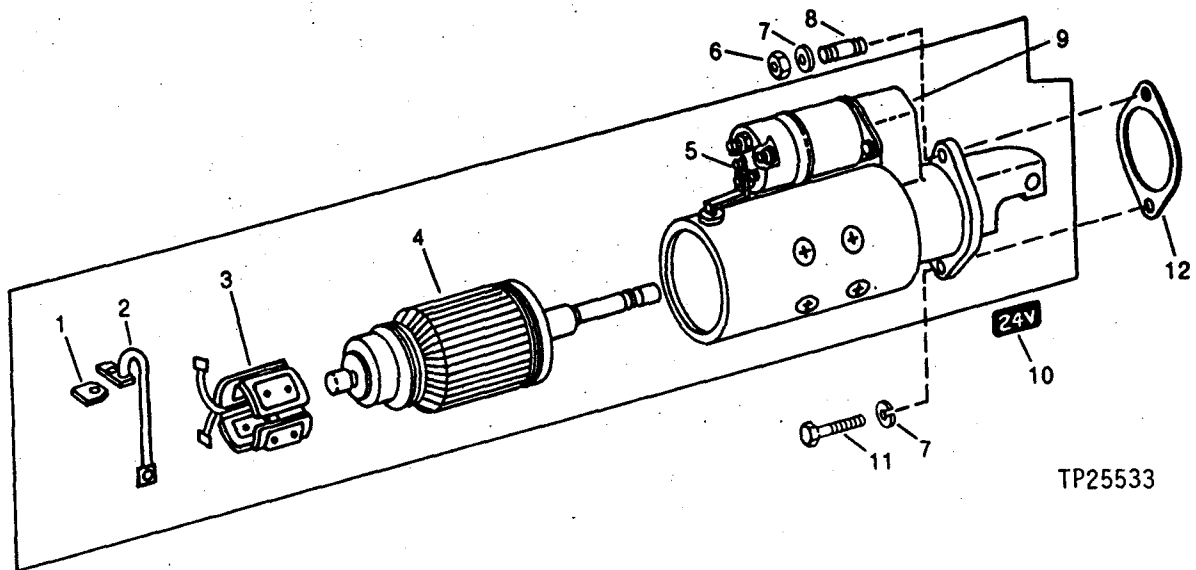


TP25533

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	R82830	CONTACT	4		X X	
2	RE22243	WIRING LEAD	2		X X	
3	RE22242	FIELD WINDING COIL	1		X X	
4	RE22241	ARMATURE	1		X X	
5	RE22244	SWITCH	1		X X	
6	14H812	NUT	1		X X	3/8"
7	12H304	LOCK WASHER	2		X X	3/8"
8	C2175R	STUD	1		X X	
9	RE19737	STARTER	1		X X	(DELCO-REMY NO. 1998519)
10	R81996	LABEL	1		X X	
11	19H1731	CAP SCREW	1		X X	3/8" X 1"
12	R71835	GASKET	1		X X	

STARTING MOTOR
CODE 3015 STARTING MOTOR, 24-VOLT

TP25537

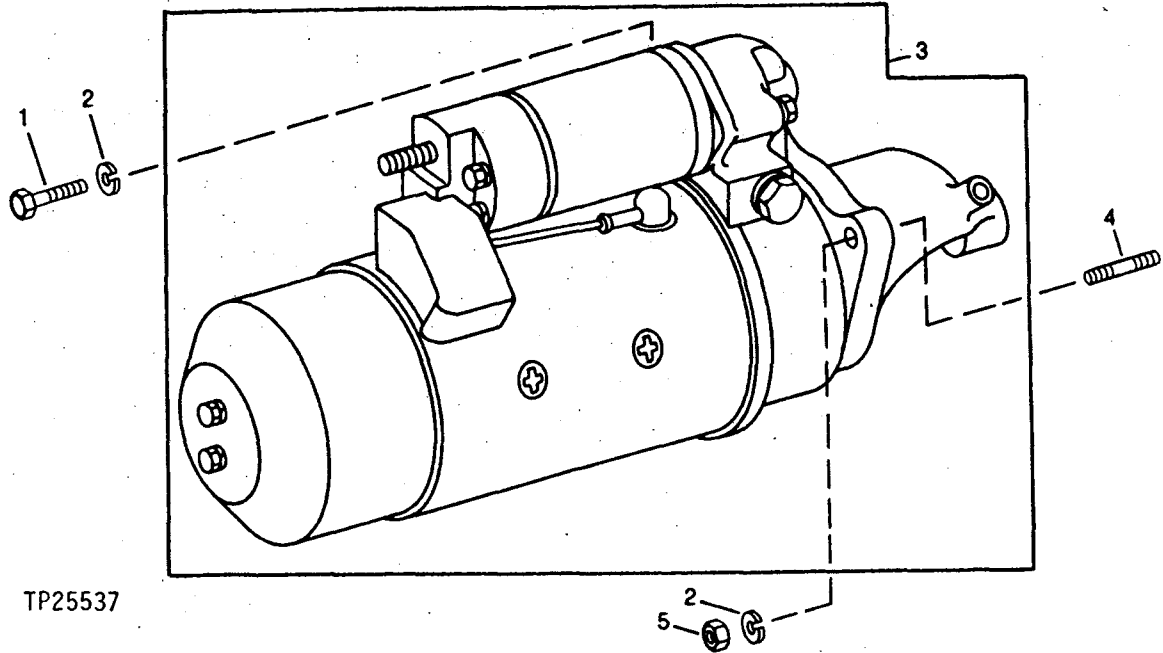

TP25537


KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 D	T	REMARKS
1	19H1732	CAP SCREW	2		X	X	3/8" X 1-1/4"
2	12H304	LOCK WASHER	3		X	X	3/8"
3	RE15718	STARTER	1		X	X	
4	C2175R	STUD	1		X	X	
5	14H812	NUT	1		X	X	3/8"

E10

ENGINE 4

STARTING MOTOR DRIVE MOTOR AND ARMATURE CODE 3015 STARTING, MOTOR, 24-VOLT


TP25536

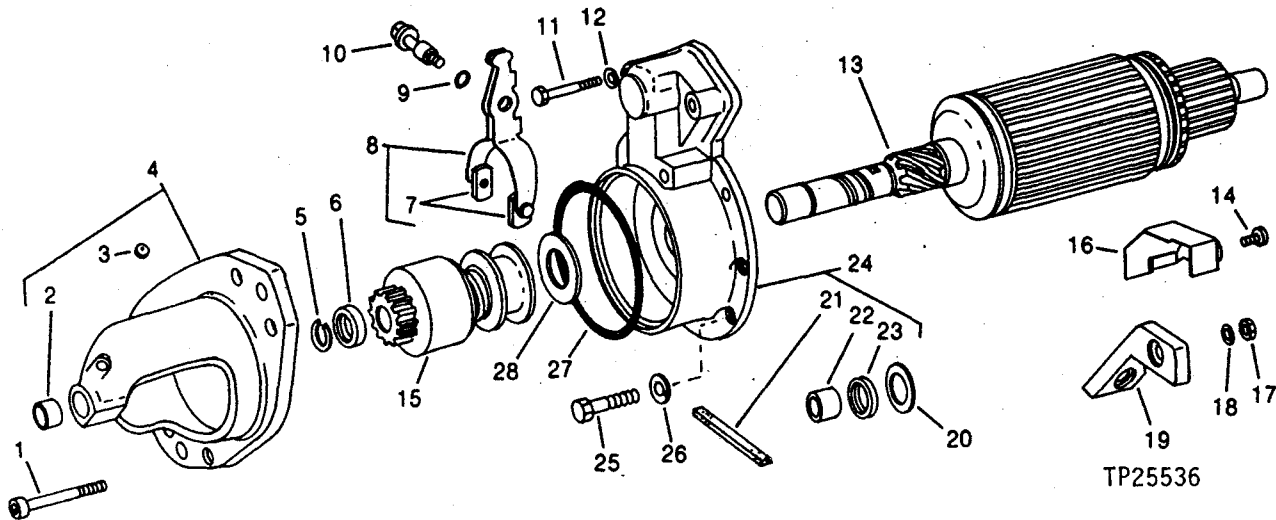

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	DT	REMARKS
1	R65700	SCREW	6		X X	
2	R50891	BUSHING	1		X X	
3	R50892	PLUG	1		X X	
4	RE16047	STARTER	1		X X	
5	R50902	SNAP RING	1		X X	
6	R65701	LOCKING COLLAR	1		X X	
7	R51667	WEAR PLATE	2		X X	
8	AR67827	ARM	1		X X	
9	R52387	O-RING	1		X X	
10	R50897	SHAFT	1		X X	
11	R50893	SCREW	2		X X	
12	12H302	LOCK WASHER	2		X X	1/4"
13	AR84338	ARMATURE	1		X X	
14	AR55946	SCREW	1		X X	
15	AR84337	DRIVE	1		X X	
16	R76139	COVER	1		X X	
17	14H971	NUT	1		X X	1/2"
18	R50899	LOCK WASHER	1		X X	
19	R50910	CONNECTOR	1		X X	
20	R50906	THRUST WASHER	1		X X	
21	R51666	WICK	1		X X	FELT, OIL
22	R51665	BUSHING	1		X X	CENTER HOUSING
23	AR55947	SEAL	1		X X	
24	AR68731	HOUSING	1		X X	CENTER BEARING
25	R51661	SCREW	2		X X	
26	12H302	LOCK WASHER	2		X X	1/4"
27	R50901	WASHER	1		X X	
28	R50905	WEAR RING	1		X X	

STARTING MOTOR AND MAIN FRAME COIL
CODE 3015 STARTING MOTOR, 24-VOLT

T59464

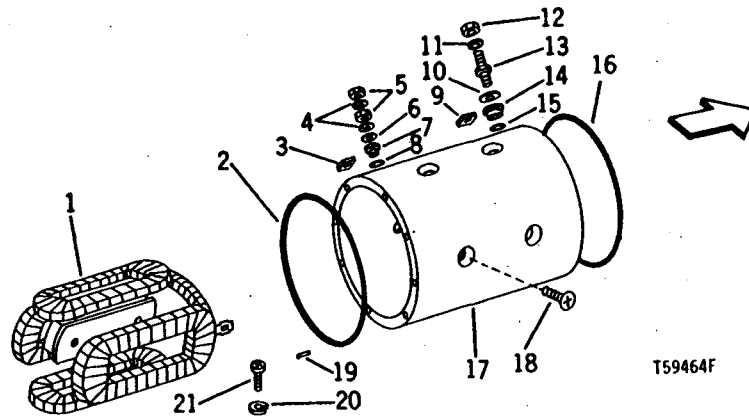


KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	DT	REMARKS
1	AR84339	FIELD WINDING COIL	1		X X	
2	R50913	O-RING	1		X X	
3	R50916	WASHER	1		X X	
4	12H246	LOCK WASHER	2		X X	NO. 10
5	R50907	NUT	2		X X	
6	24H1283	WASHER	1		X X	7/32" X 1/2" X 0.048"
7	R50914	WASHER	1		X X	
8	R50915	O-RING	1		X X	
9	R50920	BUSHING	1		X X	
10	R50917	WASHER	1		X X	
11	R50899	LOCK WASHER	1		X X	
12	R50909	NUT	1		X X	
13	R56802	BOLT	1		X X	
14	R50918	WASHER	1		X X	
15	R50919	O-RING	1		X X	
16	R50922	O-RING	1		X X	
17		HOUSING	1		X X	(SUB RE15718)
18	R50921	SCREW	8		X X	
19	R51664	DOWEL PIN	1		X X	
20	12H246	LOCK WASHER	1		X X	NO. 10
21	R50931	SCREW	1		X X	

E12

ENGINE 4

STARTING MOTOR COMMUTATOR AND END COVER CODE 3015 STARTING MOTOR, 24-VOLT


T59465

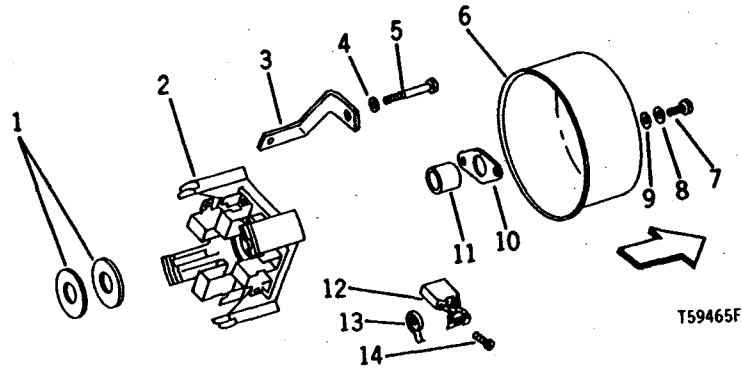

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	DT	REMARKS
1	R50923	SHIM	2		X X	.18 MM (.007")
2	AR54997	FRAME	1		X X	
3	R51660	BRACKET	2		X X	
4	12H303	LOCK WASHER	2		X X	5/16"
5	R51659	SCREW	2		X X	
6	R50912	COVER	1		X X	
7	R50931	SCREW	2		X X	
8	12H246	LOCK WASHER	2		X X	NO. 10
9	24H1283	WASHER	2		X X	7/32" X 1/2" X 0.048"
10	R50930	GASKET	1		X X	
11	R50891	BUSHING	1		X X	
12	R65702	BRUSH	4		X X	
13	R50928	SPRING	4		X X	
14	R50929	SCREW	4		X X	

STARTING MOTOR SOLENOID SWITCH
CODE 3015 STARTING MOTOR, 24-VOLT

T70152

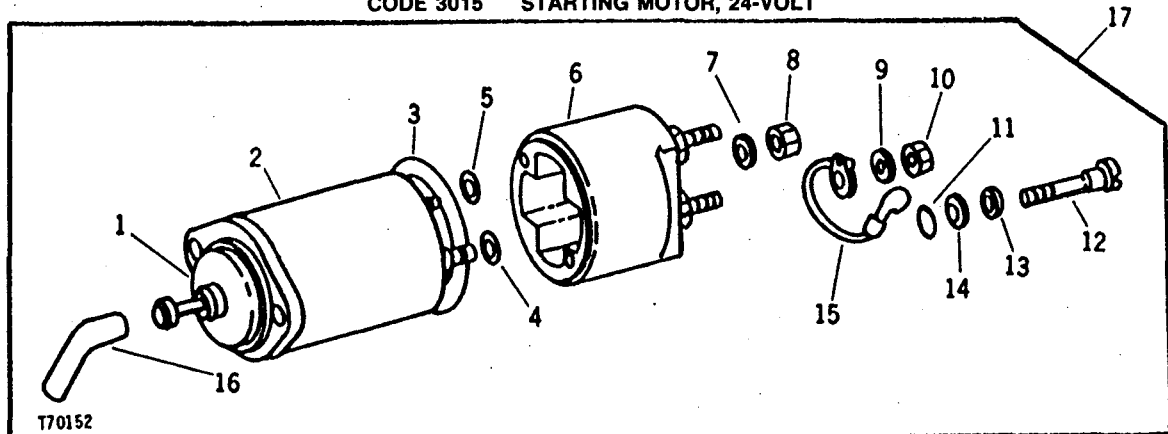


KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	REMARKS
1	R52385	BOOT	1	6 6	
2		HOUSING	1	3 3	
3	R68224	GASKET	1	5 5	(SUB RE15661)
4	R56792	WASHER	1	9 9	
5	R56793	SHIM	1	D T	
6	RE20872	COVER	1		
7	12H303	LOCK WASHER	2		5/16"
8	R51671	NUT	1		
9	12H246	LOCK WASHER	1		NO. 10
10	14H631	NUT	1		NO. 10
11	R50894	O-RING	1		
12	R51669	SCREW	2		
13	12H302	LOCK WASHER	2		1/4"
14	24H1305	WASHER	2		13/32" X 13/16" X 0.060"
15	RE15058	WIRE	1		
16	R68222	HOSE	1		
17	RE15661	SWITCH	1		

STARTER MOTOR SOLENOID COVER
CODE 3015 STARTING MOTOR, 24-VOLT

STARTING MOTOR AND FASTENINGS 0422

TP7689

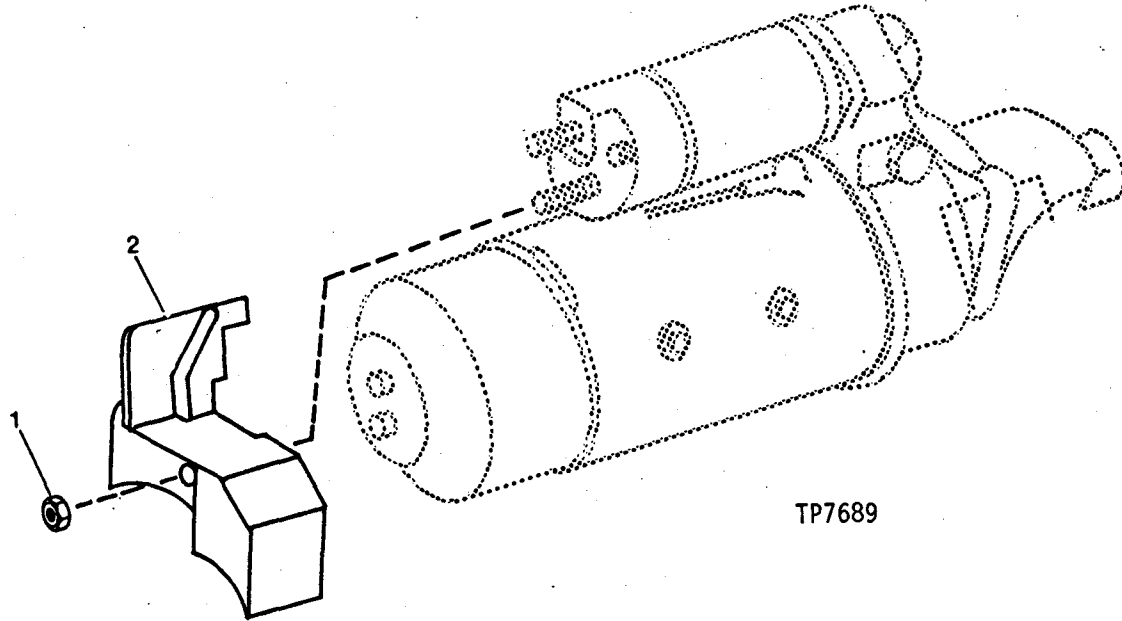

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	14H732	NUT	1		X X	3/8"
2	R76139	COVER	1		X X	


E15

ENGINE 4

STARTING MOTOR AND FASTENINGS 0422

STARTING MOTOR AND ATTACHING PARTS
CODE 3017 STARTING MOTOR, 12-VOLT
CODE 3018 STARTING MOTOR, 24-VOLT

TP25539

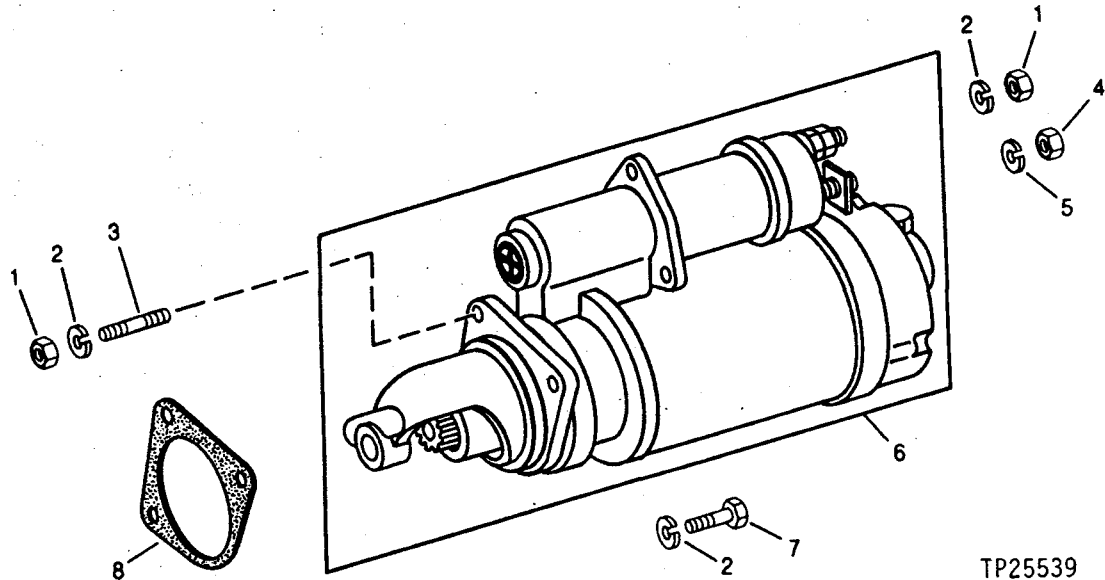

TP25539

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	14H812	NUT	2		X X	3/8"
2	12H304	LOCK WASHER	3		X X	3/8"
3	R55396	STUD	1		X X	
4	14H631	NUT	1		X X	NO. 10
5	12H246	LOCK WASHER	1		X X	NO. 10
6	RE29399	STARTER	1		X X	(A) (CODE 3017) (DELCO-REMY NO. 1993799) (12-VOLT)
	RE29401	STARTER	1		X X	(A) (CODE 3018) (DELCO-REMY NO. 1993829) (24-VOLT)
7	19H1732	CAP SCREW	2		X X	3/8" X 1-1/4"
8	R53108	GASKET	1		X X	

(A) FOR REPAIR PARTS SEE YOUR DELCO-REMY REPAIR STATION


E16

ENGINE 4

FAN DRIVE 0429

FAN BELTS
CODE 2414 FAN BELT, WITH DUAL FAN BELTS
CODE 2419 FAN BELT, WITH POLY VEE DRIVE

TP25956

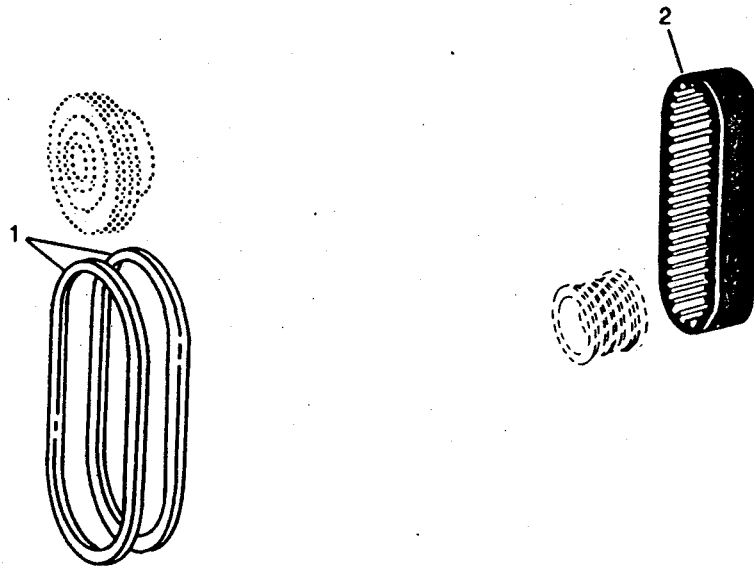

TP25956

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	AT24833	BELT SET	2		X X	CODE 2414 (SET OF TWO)
2	R98510	BELT	1		X X	CODE 2419


E17

ENGINE 4

FAN DRIVE 0429

FAN DRIVE
CODE 2302 FAN DRIVE

TP22919

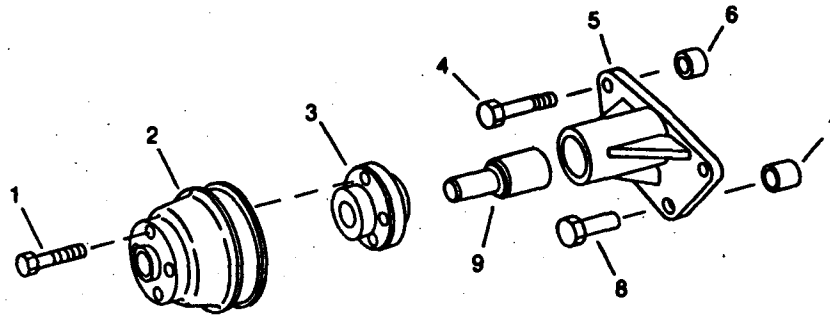

TP22919

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 DT	REMARKS
1	19H2128	CAP SCREW	4		X X	3/8" X 3"
2	R100771	PULLEY	1	-XXXXXX	X X	(SUB FOR R93151)
	R100743	HUB	1	XXXXXX-	X X	
3	R51684	HUB	1		X X	
4	19H2855	CAP SCREW	2		X X	3/8" X 3-1/4"
5	RE33353	HOUSING	1	-XXXXXX	X X	
	RE40012	HOUSING	1	XXXXXX-	X X	
6	28H1892	BUSHING	2		X X	0.622" X 0.840" X 5/8"
7	28H2551	SPACER	1		X X	0.423" X 0.675" X 1-1/8"
	28H860	WASHER	1		X X	0.423" X 0.675" X 3/8"
8	R96523	NUT	2		X X	
9	JD9489	BALL BEARING	1	-XXXXXX	X X	(SUB FOR JD9224)
	JD10058	BEARING	1	XXXXXX-	X X	


E18

ENGINE 4

FAN DRIVE 0429

CRANKSHAFT DAMPER CODE 1321 DAMPER (6359D AND 6359T) CODE 1338 DAMPER (6359T)


TP17831

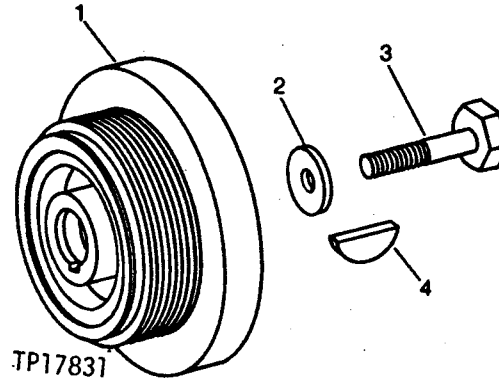

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	26H27	SHAFT KEY	1		X X	
2	RE27602	PULLEY, WITH DAMPENER	1		X X	(CODE 1321)
	RE30950	IDLER	1		X X	(CODE 1338)
3	CD16045	WASHER	1		X X	
4	R84978	CAP SCREW	1		X X	
5	H35244	RING	1		X X	
6	R81989	SLEEVE	1		X X	

CRANKSHAFT PULLEY
CODE 1314 CRANKSHAFT PULLEY WITH AUXILIARY DRIVE GEAR

CD25718

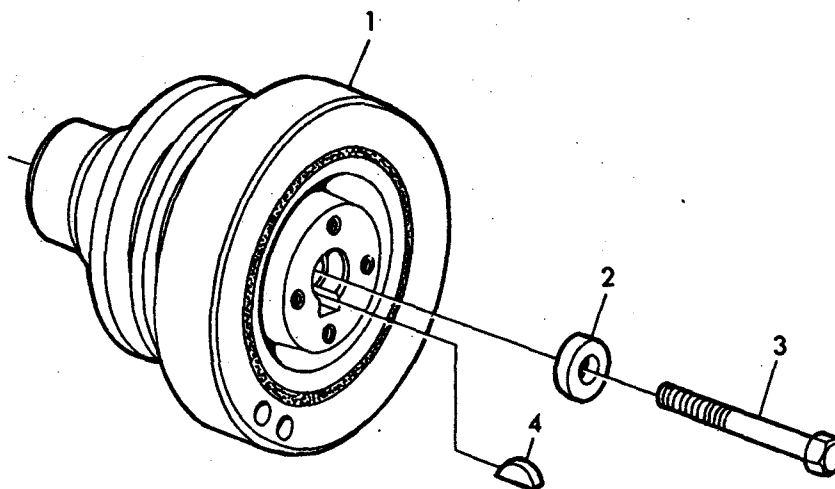


CD 25718

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 DT	REMARKS
1	RE24808	PULLEY, WITH DAMPENER	1		X X	
2	CD16045	WASHER	1	-218768	X X	TK= 12MM (0.472")
	R97079	BUSHING	1	218769-	X X	
3	R84978	CAP SCREW	1		X X	1/2" X 1-3/4"
4	R93347	KEY	1	-218768	X X	
	R93347	KEY	1	218769-	X X	

ENGINE FLYWHEEL OVERCENTER CLUTCH
 CODE 1501 FLYWHEEL WITH OVER-CENTER CLUTCH (6359D)
 CODE 1502 FLYWHEEL WITH SPRING LOADED CLUTCH
 CODE 1503 FLYWHEEL WITH DAMPER CLUTCH
 CODE 1504 FLYWHEEL WITH SPRING LOADED CLUTCH (6359D)
 CODE 1505 FLYWHEEL WITH OVER-CENTER CLUTCH
 CODE 1514 FLYWHEEL WITH TORQUE CONVERTER
 CODE 1518 FLYWHEEL WITH TORQUE CONVERTER


TP25954

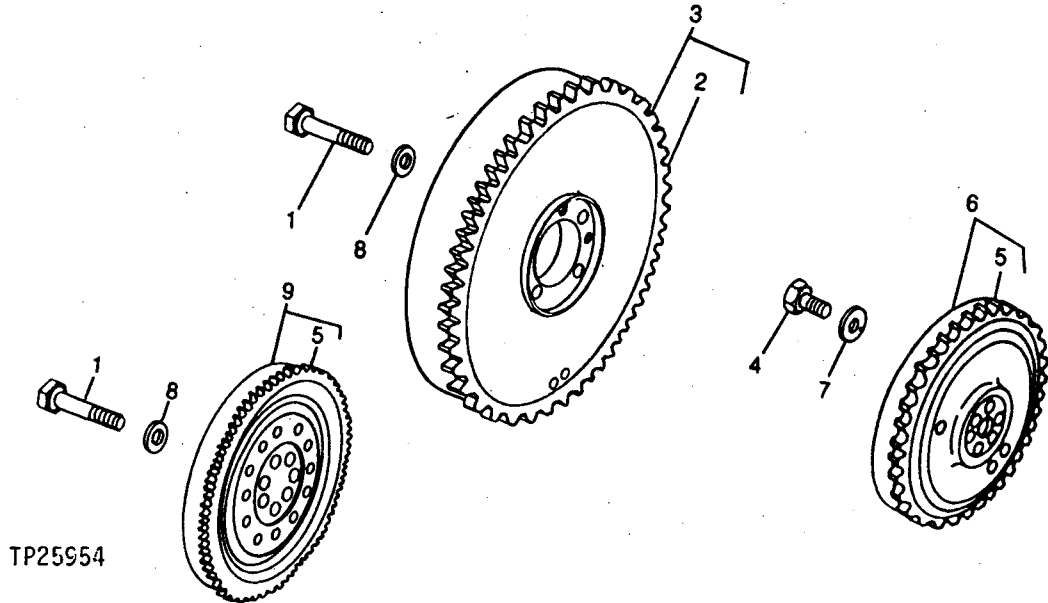

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 D T	REMARKS
1	19H2993	CAP SCREW	4		X X	
2	T20088	GEAR	1		X X	(142 TEETH) CODE 1501, 1502, 1504 AND 1505
3	AT30260	FLYWHEEL	1		X	CODE 1501
	RE25651	FLYWHEEL	1		X X	CODE 1502
	AR85994	FLYWHEEL	1		X	CODE 1504
	RE23941	FLYWHEEL	1		X X	CODE 1505
4	19H2993	CAP SCREW	4		X X	1/2" X 1-1/2", CODE 1503, (SUB FOR R74444, THIS APPLICATION)
5	R28811	GEAR	1		X X	(129 TEETH) CODE 1503, 1514 AND 1518
6	RE24452	FLYWHEEL	1		X X	CODE 1503
7	T23891	WASHER	4		X X	CODE 1503, (SUB FOR T33177, THIS APPLICATION)
8	T23891	WASHER	4		X X	CODE 1501, 1502, 1504, 1505, 1514 AND 1518
9	RE28195	FLYWHEEL	1		X X	CODE 1514
	RE24451	FLYWHEEL	1		X X	CODE 1518

ENGINE FLYWHEEL
CODE 1528 FLYWHEEL FOR FLAT CLUTCH

TP22973

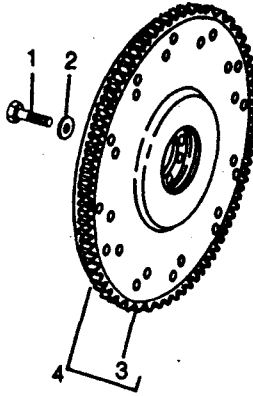


TP22973

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	19H2993	CAP SCREW	4		X X	HS, SAE8, 1/2" X 1-1/2"
2	T23891	WASHER	4		X X	
3	R85520	GEAR	1		X X	(138-TEETH)
4	RE25292	FLYWHEEL	1		X X	(MARKED R85519)

ENGINE FLYWHEEL
CODE 1530 FLYWHEEL, WITH DELCO GENERATOR DRIVE (6359T)

TP25230

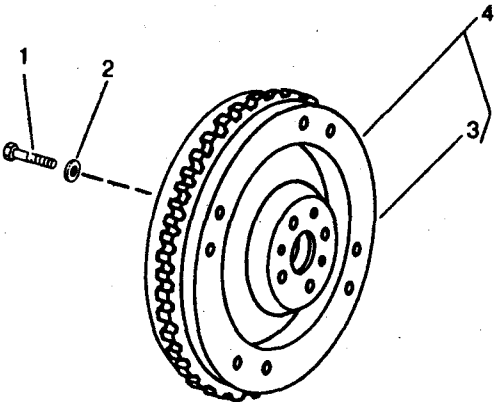

TP25230

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6	REMARKS
					3 3	
1	19H3109	CAP SCREW	4		5 5	X HS, SAE 8, 1/2" X 1-1/2"
2	T23891	WASHER	4		9 9	
3	R90034	GEAR	1		D T	X (119 TEETH)
4	RE29449	FLYWHEEL	1			X

E23


ENGINE 4

FLYWHEEL HOUSING CODE 1403 FLYWHEEL HOUSING, SAE NO. 3

FLYWHEEL, HOUSING AND FASTENINGS 0433

TP25875


TP25875

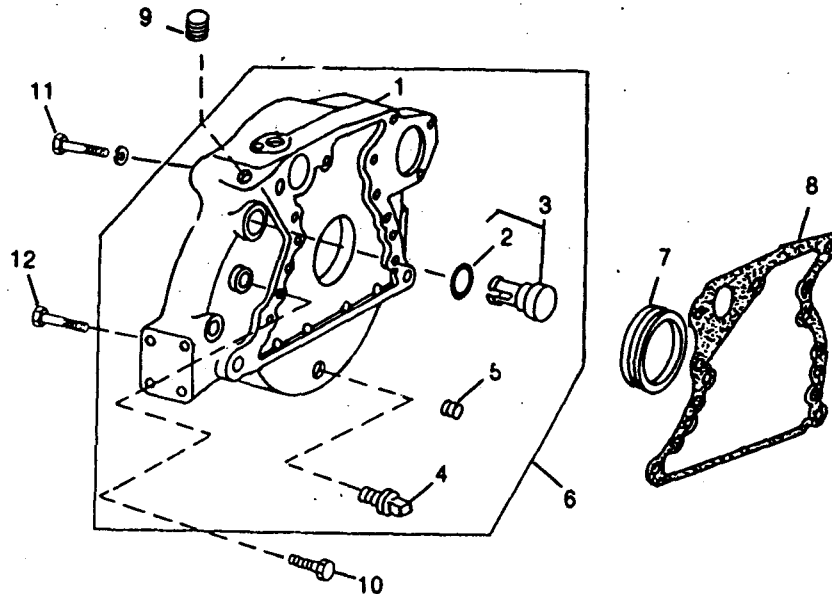

KEY	PART NO.	PART NAME	QTY	SERIAL NO.	6 3 5 9 DT	REMARKS
1		HOUSING	1		X X	(SUB RE38348)
2	R27149	O-RING	1		X X	
3	AR61533	PLUG	1		X X	
4	AT63089	DRAIN PLUG	1		X X	
5	15H561	PIPE PLUG	1		X X	1/2"
6	RE38348	HOUSING	1		X X	(MARKED R63192 OR R98778)
7	RE24959	SEAL	1		X X	
8	R97351	GASKET	1		X X	(SUB FOR R70483)
9	15H638	PIPE PLUG	1		X X	1/8"
10	19H2351	CAP SCREW	1		X X	1/2" X 1/2"
11	19H1100	CAP SCREW	8		X X	3/8" X 1-3/8"
12	19H1847	CAP SCREW	4		X X	5/8" X 2-1/2"

FLYWHEEL HOUSING
CODE 1404 FLYWHEEL HOUSING, SAE NO. 4 (6359D)

TP26387

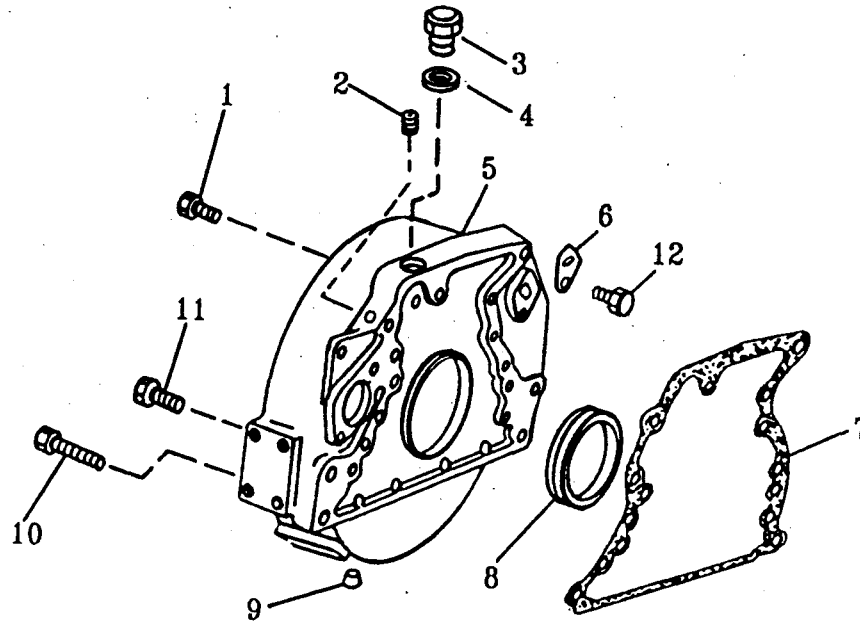

TP26387

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 2 3 9 D T	REMARKS
1	19H1847	CAP SCREW	2	X	X	5/8" X 2-1/2", UPPER RIGHT, (SUB FOR 19H1387)
2	15H638	PIPE PLUG	1	X	X	1/8"
3	M1746T	DRAIN PLUG	1	X	X	
4	T13213	WASHER	1	X	X	(SUB FOR H1058R, THIS APPLICATION)
5	R98777	HOUSING	1	X	X	(SUB FOR R73527)
6	T20089	COVER	1	X	X	
7	R97351	GASKET	1	X	X	(SUB FOR R70483)
8	RE24959	SEAL	1	X	X	
9	T23590	PLUG	1	X	X	
10	19H1923	CAP SCREW	2	X	X	5/8" X 5-1/2"
11	19H1100	CAP SCREW	8	X	X	3/8" X 1-3/8"
12	19H2351	CAP SCREW	1	X	X	1/2" X 1/2"


E25

ENGINE 4

FLYWHEEL, HOUSING AND FASTENINGS 0433

FLYWHEEL HOUSING
CODE 1405 FLYWHEEL HOUSING SAE NO. 2


TP26035

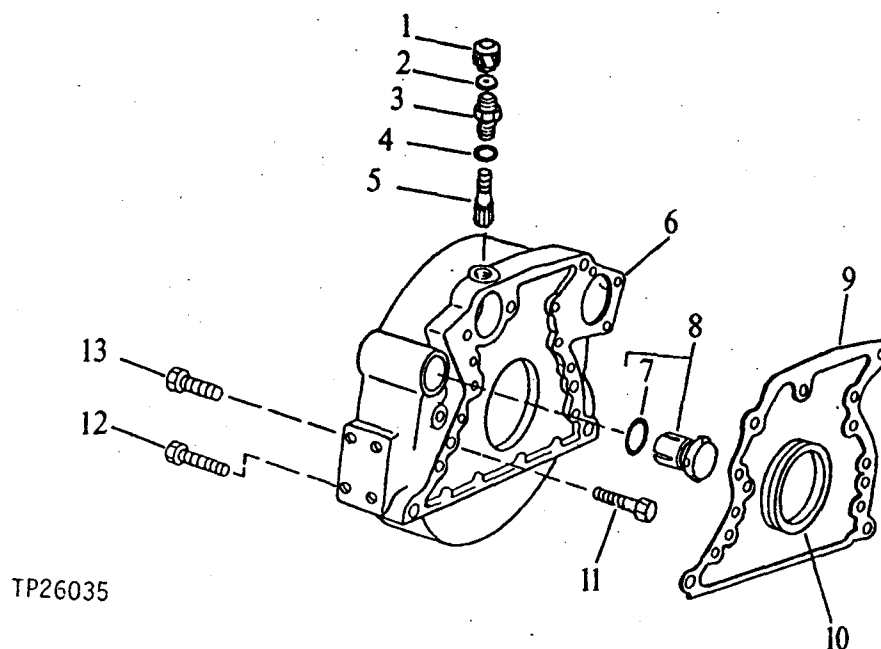

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 5 9 9 D T	REMARKS
1	B3362R	CAP	1		X X	
2	B3285R	WASHER	1		X X	
3	T22537	FITTING	1		X X	
4	T13213	WASHER	1		X X	
5	T22536	GEAR	1		X X	
6	R58967	HOUSING	1		X X	
7	R27149	O-RING	1		X X	
8	AR61533	PLUG	1		X X	
9	R97351	GASKET	1		X X	(SUB FOR R49516 AND R70483)
10	RE24959	SEAL	1		X X	(SUB FOR RE17831)
11	19H2351	CAP SCREW	1		X X	1/2" X 1/2"
12	19H1847	CAP SCREW	4		X X	5/8" X 2-1/2"
13	19H1100	CAP SCREW	8		X X	3/8" X 1-3/8"

CODE 1410 FLYWHEEL HOUSING
FLYWHEEL HOUSING, WITH TORQUE CONVERTER

TP26036

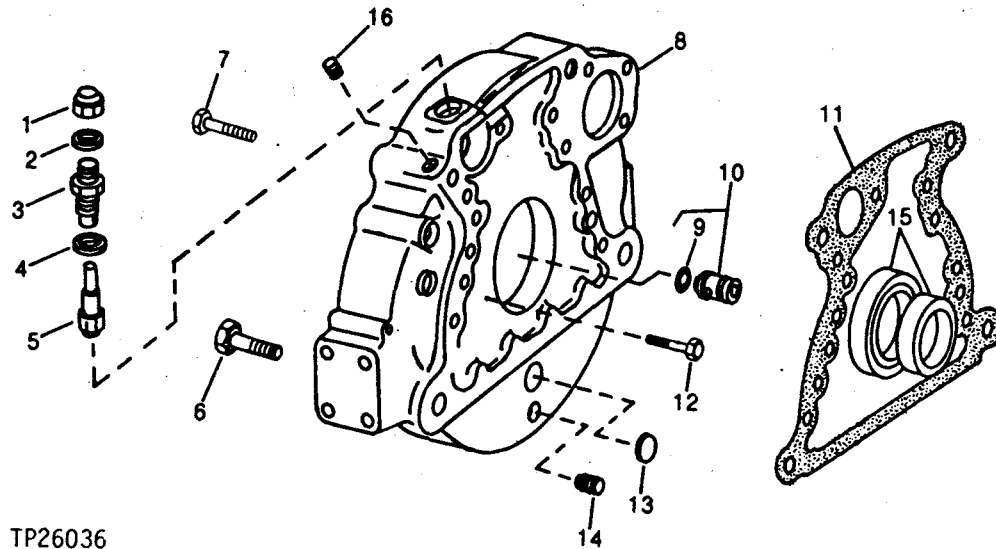

TP26036

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 D T	REMARKS
1	B3362R	CAP	1		X X	
2	B3285R	WASHER	1		X X	
3	T22537	FITTING	11		X X	
4	H1058R	WASHER	1		X X	
5	T22536	GEAR	1		X X	
6	19H1847	CAP SCREW	4		X X	5/8" X 2-1/2"
7	19H1100	CAP SCREW	8		X X	3/8" X 1-3/8"
8	R76741	HOUSING	1		X X	
9	R27149	O-RING	1		X X	
10	AR61533	PLUG	1		X X	
11	R97351	GASKET	1		X X	
12	19H2351	CAP SCREW	1		X X	1/2" X 1/2", (SUB FOR T20090)
13	T13518	CAP	1		X X	
14	15H560	PIPE PLUG	1		X X	1/16"
15	RE24959	SEAL	1		X X	
16	15H638	PIPE PLUG	1		X X	1/8"


F02

ENGINE 4

FLYWHEEL, HOUSING AND FASTENINGS 0433

FLYWHEEL HOUSING
CODE 1411 FLYWHEEL HOUSING

TP26037

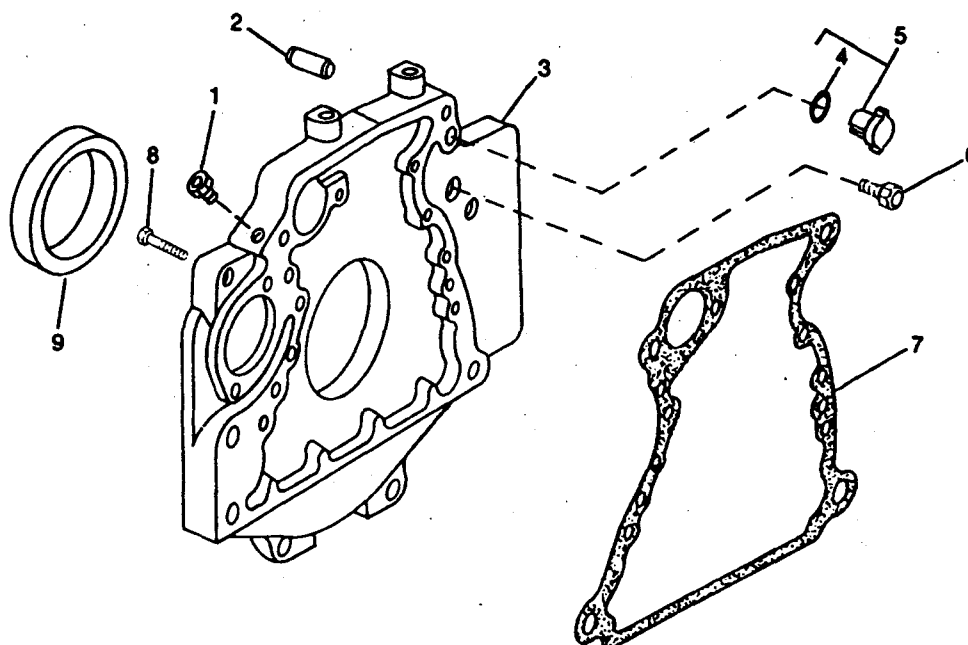


TP26037

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 D T	REMARKS
1	15H638	PIPE PLUG	1		X X	1/8"
2	T26565	DOWEL PIN	2		X X	
3	R54621	HOUSING	1		X X	
4	R27149	O-RING	1		X X	
5	AR61533	PLUG	1		X X	
6	19H2351	CAP SCREW	1		X X	1/2" X 1/2"
7	R97351	GASKET	1		X X	
8	19H1100	CAP SCREW	8		X X	3/8" X 1-3/8"
9	RE24959	SEAL	1		X X	

CODE 1420

FLYWHEEL HOUSING
FLYWHEEL HOUSING, SAE NO. 2

TP23152

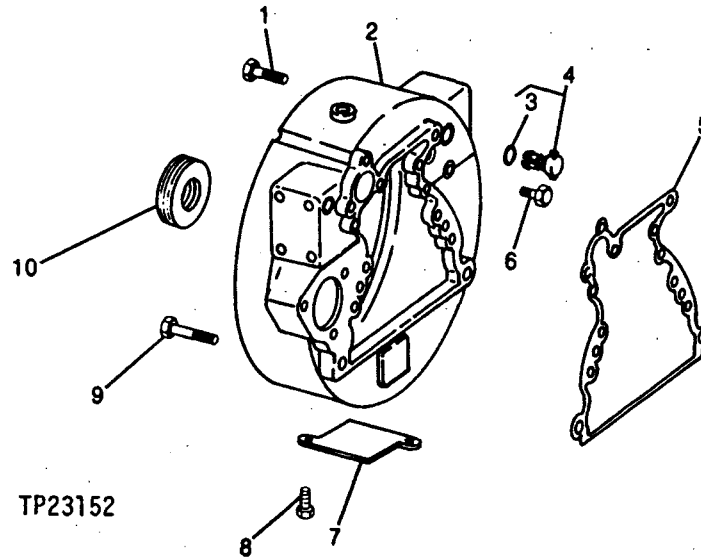

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	19H1100	CAP SCREW	8		X X	3/8" X 1-3/8"
2	R100149	HOUSING	1		X X	(SUB FOR R93534)
3	R27149	O-RING	1		X X	
4	AR61533	PLUG	1		X X	
5	R97351	GASKET	1		X X	(SUB FOR R90182)
6	19H2351	CAP SCREW	1		X X	1/2" X 1/2"
7	R89195	PLATE	1		X X	
8	19H1227	CAP SCREW	2		X X	1/4" X 1/2"
9	19H1847	CAP SCREW	4		X X	5/8" X 2-1/2"
10	RE24959	SEAL	1		X X	


F04

ENGINE 4

FLYWHEEL HOUSING CODE 1421 FLYWHEEL HOUSING, SEALED

FLYWHEEL, HOUSING AND FASTENINGS 0433

TP25888

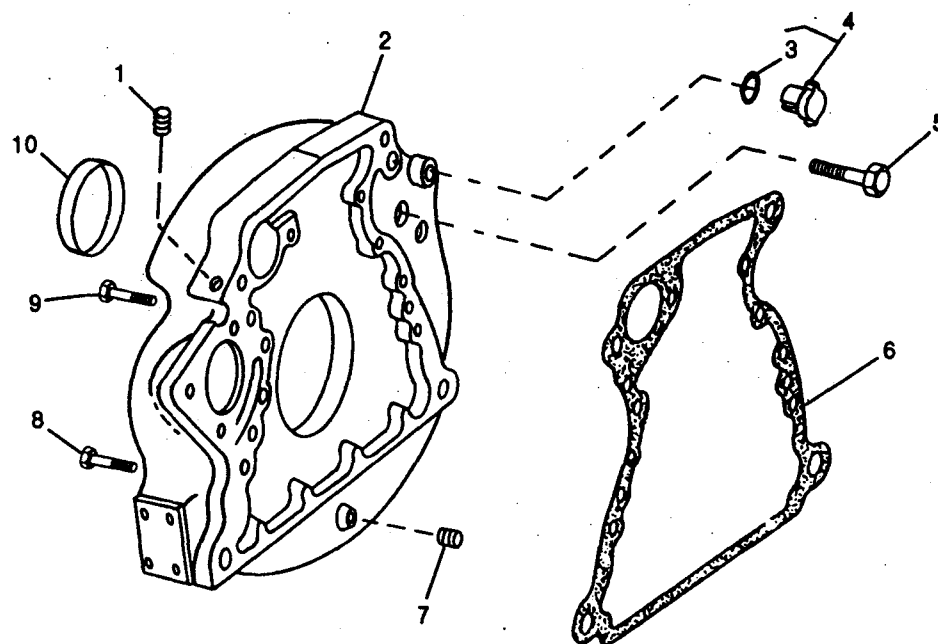

TP25888

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 DT	REMARKS
1	15H638	PIPE PLUG	1		X X	1/8"
2	R79635	HOUSING	1		X X	
3	R27149	O-RING	1		X X	
4	AR61533	PLUG	1		X X	
5	19H2351	CAP SCREW	1		X X	1/2" X 1/2"
6	R97351	GASKET	1		X X	
7	15H561	PIPE PLUG	1		X X	1/2"
8	19H1847	CAP SCREW	4		X X	5/8" X 2-1/2"
9	19H1100	CAP SCREW	8		X X	3/8" X 1-3/8"
10	RE24959	SEAL	1		X X	


F05

ENGINE 4

FLYWHEEL, HOUSING AND FASTENINGS 0433

ENGINE FLYWHEEL HOUSING CODE 1422 FLYWHEEL HOUSING, SAE NO. 1 (6359T)

TP25226

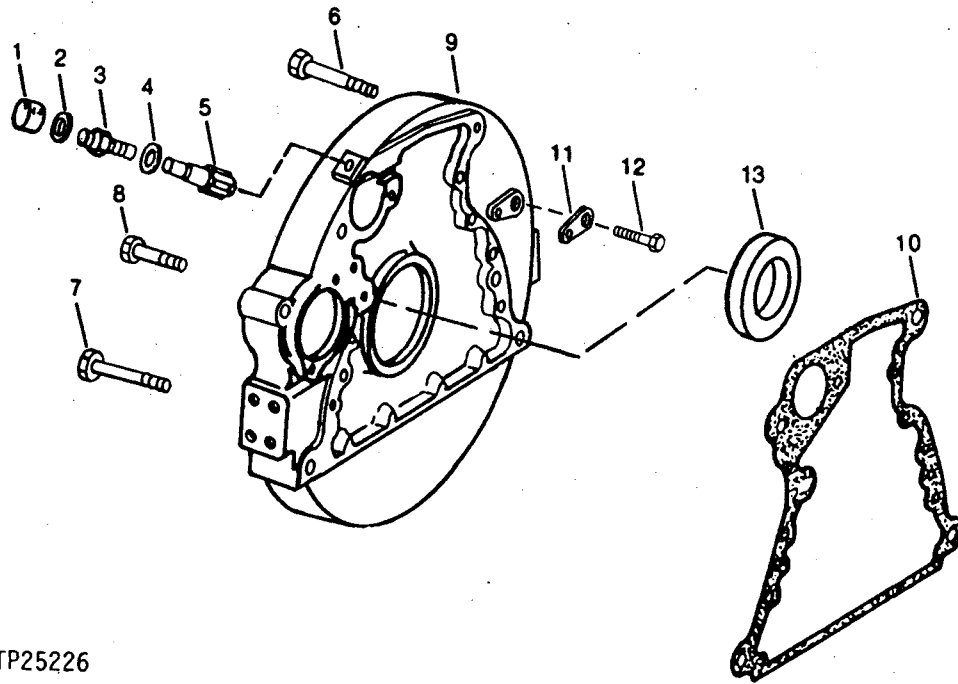


TP25226

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 D T	REMARKS
1	B3362R	CAP	1		X	
2	B3285R	WASHER	1		X	
3	R90027	ADAPTER	1		X	
4	T13213	WASHER	1		X	57/64" X 1-3/16" X 0.064"
5	R90029	PINION	1		X	
6	19H1847	CAP SCREW	1		X	5/8" X 2-1/2"
7	19H1847	CAP SCREW	3		X	5/8" X 2-1/2", (SUB FOR 19H1387, THIS APPLICATION)
8	19H1100	CAP SCREW	8		X	3/8" X 1-3/8"
9	R89849	HOUSING	1		X	
10	R97351	GASKET	1		X	(SUB FOR R70483)
11	T20089	COVER	1		X	
12	19H2351	CAP SCREW	1		X	1/2" X 1/2"
13	RE24959	SEAL	1		X	

FLYWHEEL HOUSING
CODE 1425 FLYWHEEL HOUSING, WITH TORQUE CONVERTER, SAE NO. 3

TP26768

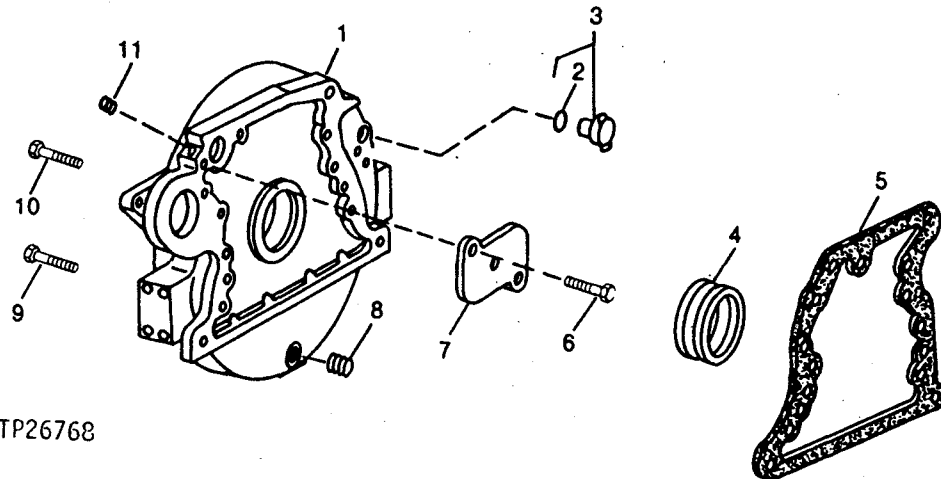


TP26768

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	R100698	HOUSING	1		X X	(SUB FOR R94036)
2	R27149	O-RING	1		X X	
3	AR61533	PLUG	1		X X	
4	RE24959	SEAL	1		X X	
5	R97351	GASKET	1		X X	
6	19H1227	CAP SCREW	2		X X	1/4" X 1/2"
7	R89195	PLATE	1		X X	
8	15H561	PIPE PLUG	1		X X	1/2"
9	19H1847	CAP SCREW	4		X X	5/8" X 2-1/2"
10	19H1100	CAP SCREW	8		X X	3/8" X 1-3/8"
11	15H638	PIPE PLUG	1		X X	1/8"

MECHANICAL TACHOMETER DRIVE

FLYWHEEL, HOUSING AND FASTENINGS 0433

TP26388

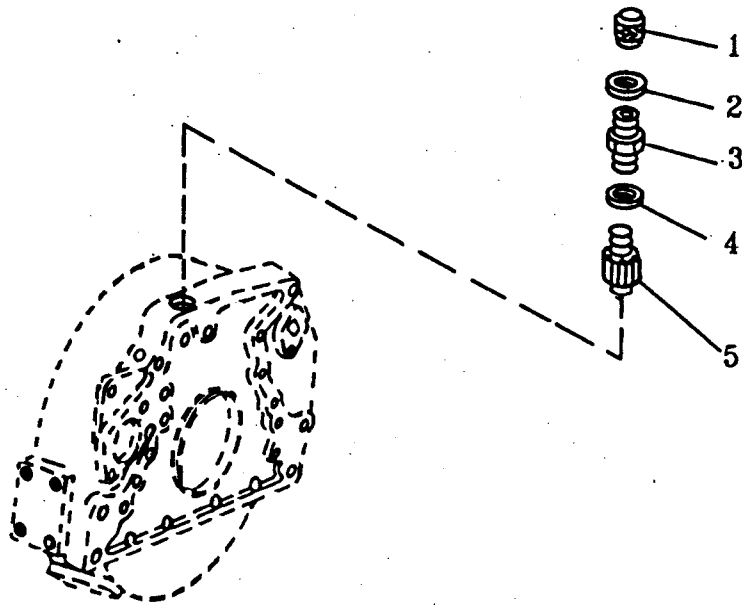


TP26388

KEY	PART NO.	PART NAME	QTY	SERIAL NO.	6 3 5 9 D	6 3 5 9 T	REMARKS
1	B3362R	CAP	1		X	X	
2	B3285R	WASHER	1		X	X	
3	T22537	FITTING	1		X	X	
4	T13213	WASHER	1		X	X	
5	T22536	GEAR	1		X	X	

ENGINE CYLINDER HEAD REMOVAL GASKET SET

GASKET REPLACEMENT KITS 0452

TP26061

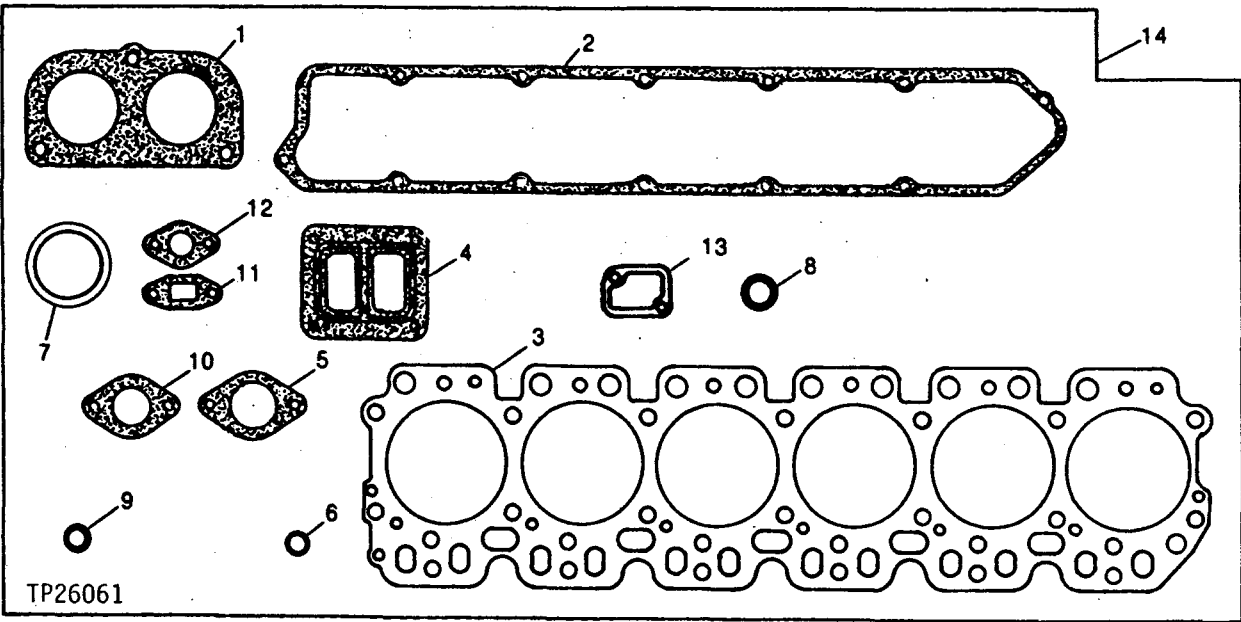

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6	REMARKS
					3 3	
1	R54638	GASKET	1		5 5	THERMOSTAT COVER
2	R75728	GASKET	1		9 9	ROCKER ARM COVER
3	R92426	GASKET	1		D T	CYLINDER HEAD
4	R89879	GASKET	1			TURBOCHARGER, (SUB FOR R55509)
5	R81275	GASKET	2			AIR INLET
6	R56461	O-RING	2			WATER BYPASS TUBE
7	R56905	O-RING	1			VALVE STEM
8	R87627	O-RING	12			VENT TUBE
9	R56463	O-RING	1			EXHAUST MANIFOLD
10	R90658	GASKET	6			TURBOCHARGER OIL OUTLET
11	R97349	GASKET	1			TURBOCHARGER OIL INLET
12	R97348	GASKET	1			THERMOSTAT HOUSING WATER OUTLET
13	R54641	GASKET	1			
14	RE38852	GASKET	1			


F09

ENGINE 4

ENGINE OVERHAUL GASKET SET

GASKET REPLACEMENT KITS 0452

TP26062

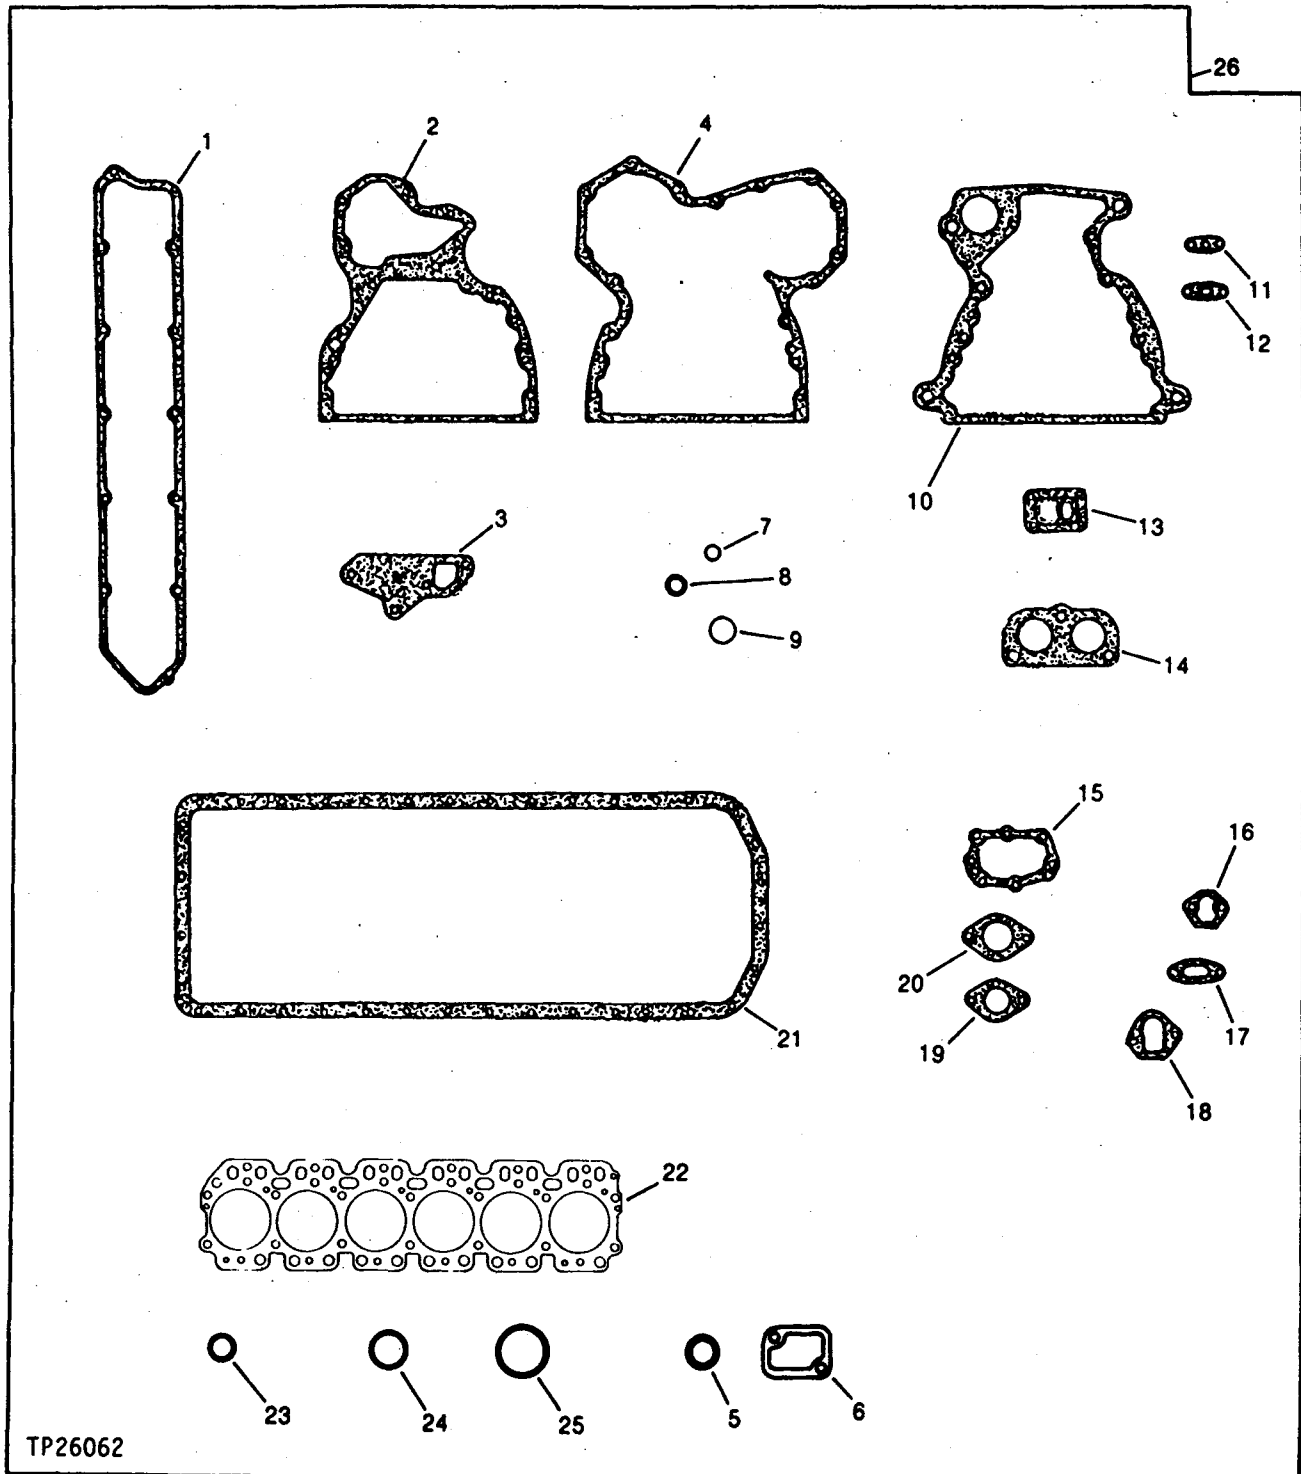

TP26062

0452-2

THIS PARTS LISTING IS CONTINUED

OEM ENGINES AND ACCESSORIES - 6359D AND 6359T

PC-2299 (30-AUG-89)

LITHO IN U.S.A.

F10

ENGINE 4


GASKET REPLACEMENT KITS 0452

ENGINE OVERHAUL GASKET SET

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	R75728	GASKET	1		X X	ROCKER ARM COVER
2	R90648	GASKET	1		X X	CYLINDER BLOCK PLATE
3	T20243	GASKET	1		X X	WATER PUMP
4	R97454	GASKET	1		X X	TIMING GEAR COVER
5	R61871	O-RING	1		X X	OIL PUMP INTAKE TO OIL PUMP HOUSING
6	R54641	GASKET	1		X X	THERMOSTAT HOUSING WATER OUTLET
7	R74354	O-RING	1		X X	OIL PUMP OUTLET TUBE
	R27564	O-RING	1		X X	OIL PUMP OUTLET TUBE
8	R56463	O-RING	1		X X	VENT TUBE
9	T20328	GASKET	1		X X	OIL FILLER CAP
10	R97351	GASKET	1		X X	FLYWHEEL HOUSING
11	R97348	GASKET	1		X X	TURBOCHARGER OIL INLET
12	R97349	GASKET	1		X X	TURBOCHARGER OIL OUTLET
13	R89879	GASKET	1		X X	TURBOCHARGER, (SUB FOR R55509)
14	R54638	GASKET	1		X X	THERMOSTAT COVER
15	T20273	GASKET	1		X X	TIMING GEAR COVER OPENING COVER
16	R97350	GASKET	1		X X	FUEL PUMP
17	R97352	GASKET	1		X X	OIL FILLER INLET
18	R97773	GASKET	1		X X	INJECTION PUMP COVER
19	R90658	GASKET	6		X X	EXHAUST MANIFOLD
20	R81275	GASKET	2		X X	AIR INLET
21	T20205	GASKET	1		X X	OIL PAN (USE IF AVAILABLE)
	R97344	GASKET	1		X X	OIL PAN, (SUB FOR T20205)
22	R92426	GASKET	1		X X	CYLINDER HEAD
23	R87627	O-RING	12		X X	VALVE STEM
24	R56461	O-RING	1		X X	THERMOSTAT BYPASS TUBE
	R56461	O-RING	1		X X	WATER PUMP BYPASS TUBE
25	R70956	WASHER	1		X X	OIL COOLER
26	RE38858		1		X X	(ALSO ORDER (6) AR65507 CYLINDER LINER PACKING KITS)

ENGINE COOLANT HEATER
 CODE 2601 ENGINE COOLANT HEATER
 CODE 2602 ENGINE COOLANT HEATER


TP2263

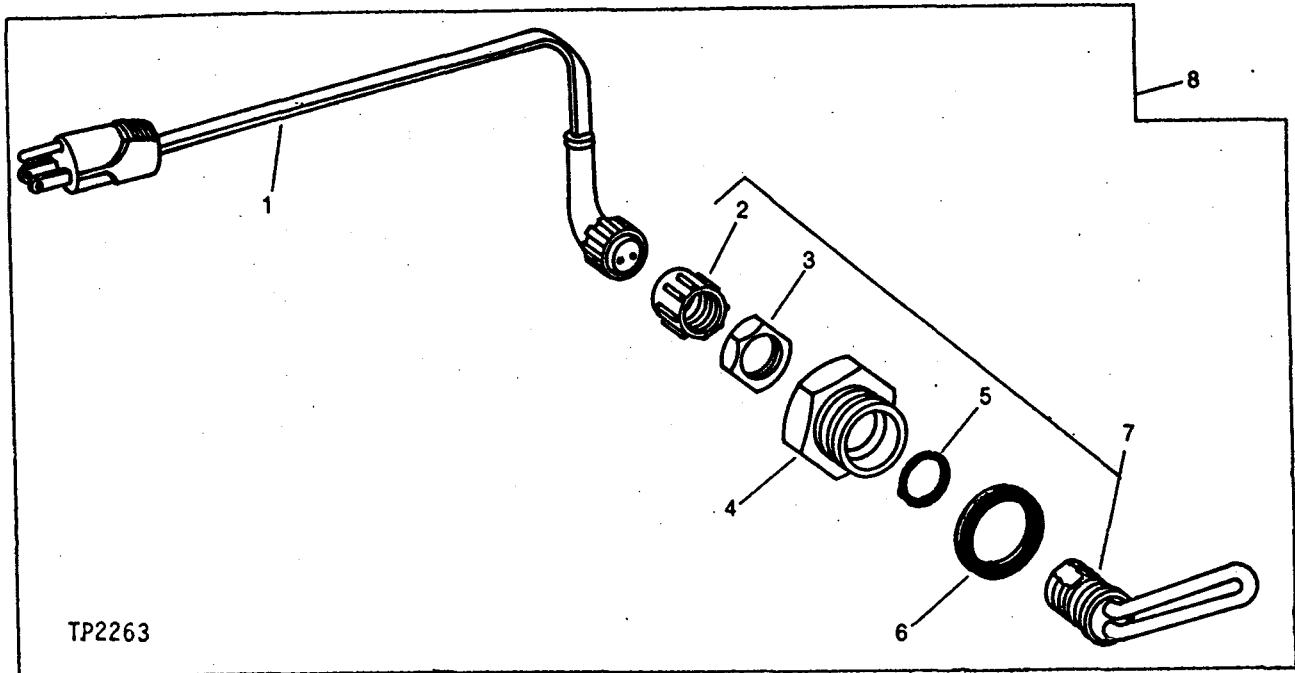


KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 D T	REMARKS
1	AR50411	WIRING LEAD	1		X X	CODE 2601 (110-VOLT)
	AR87079	POWER CORD	1		X X	CODE 2602 (220-VOLT)
2	R54510	CAP	1		X X	
3	R54511	NUT	1		X X	
4	R54123	ADAPTER	1		X X	
5	R47693	GASKET	1		X X	
6	U13639	O-RING	1		X X	
7	AR62399	COOLANT HEATER	1		X X	CODE 2601 (110-VOLT)
	AR103807	HEATER	1		X X	CODE 2602 (220-VOLT)
8	AR62492	COOLANT HEATER	1		X X	CODE 2601 (110-VOLT)
	AR103806	COOLANT HEATER	1		X X	CODE 2602 (220-VOLT)

FAN BLADE ASSEMBLY

TP14662

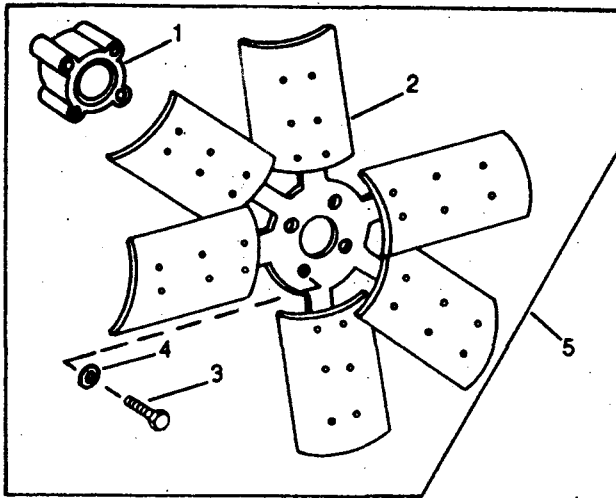


TP14662

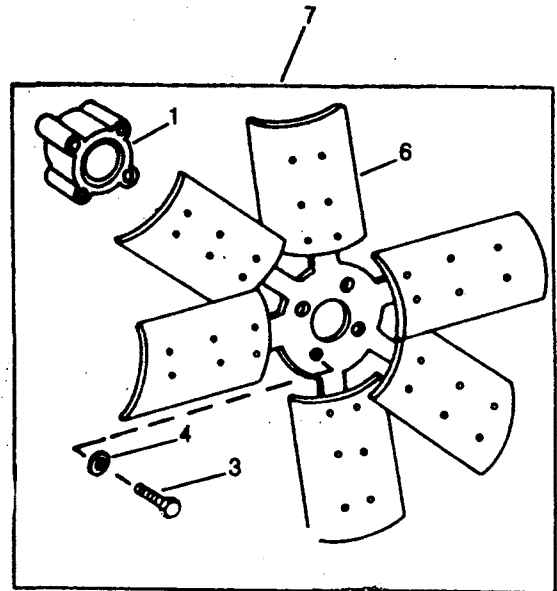

KEY	PART NO.	PART NAME	QTY	SERIAL NO.	DT	REMARKS
1	R81876	SPACER	1		X	(3-1/4" LONG)
	R81911	SPACER	1		X	(2-1/2" LONG)
2	AT24834	BLOWER FAN	1		X	SIX BLADE BLOWER
3	19H1912	CAP SCREW	4		X	3/8" X 3-1/2", (USE WITH R81911)
	19H3598	CAP SCREW	4		X	HS, SAE 8, 3/8" X 4-3/4", (USE WITH R81876)
4	12H304	LOCK WASHER	4		X	3/8"
5	RE20378	BLOWER FAN	1		X	WITH WARNING DECAL
6	AR48871	SUCTION FAN	1		X	SIX BLADE SUCTION
7	RE20377	SUCTION FAN	1		X	WITH WARNING DECAL

BLOWER AND SUCTION FAN BLADE

TP17013

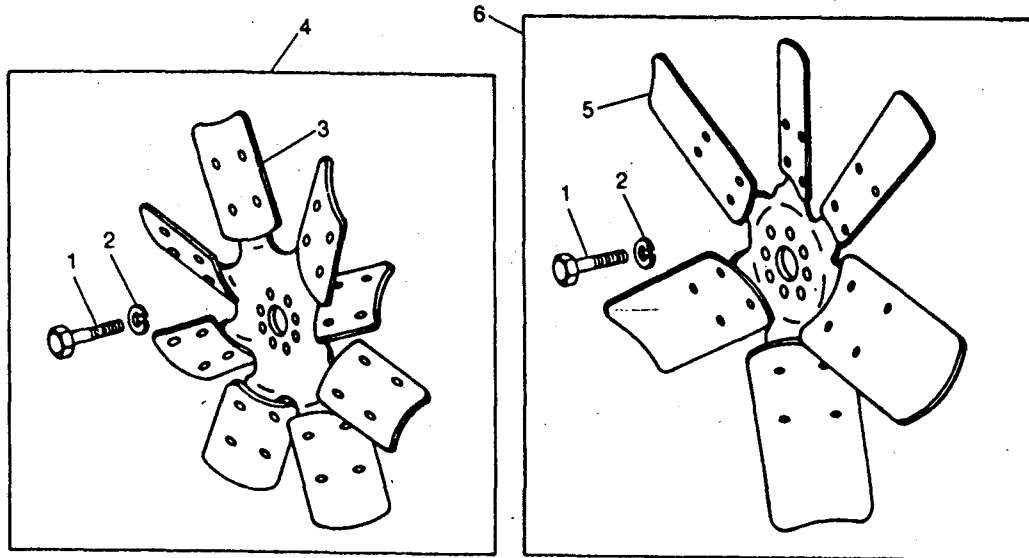


TP17013

KEY	PART NO.	PART NAME	QTY	SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	19H1731	CAP SCREW	4		X X	3/8" X 1"
2	12H304	LOCK WASHER	4		X X	3/8"
3	AT31819	BLOWER FAN	1		X X	EIGHT-BLADE BLOWER
4	RE18839	FAN	1		X X	WITH WARNING DECAL
5	AR98090	SUCTION FAN	1		X X	SIX-BLADE SUCTION
6	RE18840	FAN	1		X X	WITH WARNING DECAL

BLOWER AND SUCTION FAN BLADE

TP14666

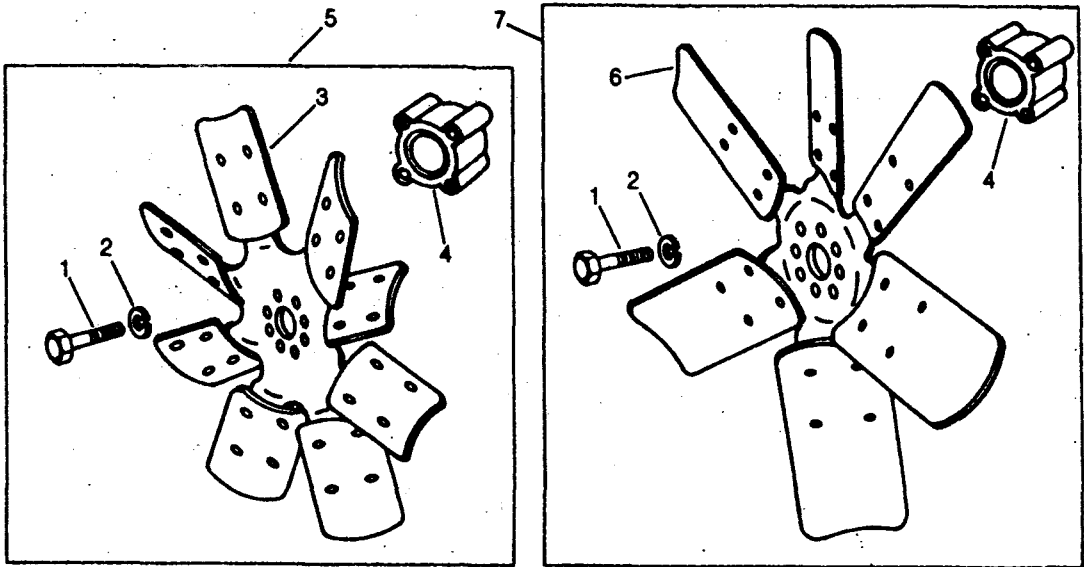


TP14666

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	19H1912	CAP SCREW	4		X	3/8" X 3-1/2"
2	12H304	LOCK WASHER	4		X	3/8"
3	AT31819	BLOWER FAN	1		X	EIGHT BLADE BLOWER
4	R81911	SPACER	1		X	
5	RE20475	FAN	1		X	WITH WARNING DECAL
6	AR98090	SUCTION FAN	1		X	SIX BLADE SUCTION
7	RE20476	FAN	1		X	WITH WARNING DECAL

RADIATOR MOUNTING KIT


TP19486

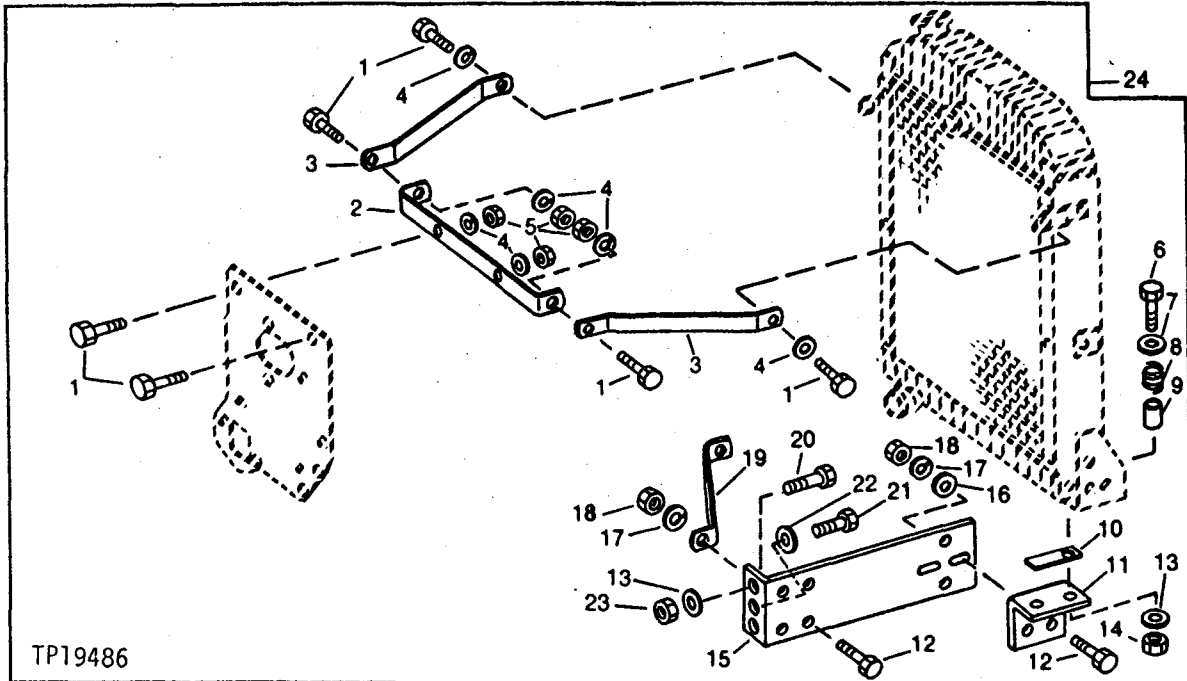

KEY	PART NO.	PART NAME	QTY	SERIAL NO.	DT	REMARKS
1	19H1732	CAP SCREW	6		X	3/8" X 1-1/4"
2	R81914	BRACKET	1		X	TO WATER PUMP PLATE (UPPER)
3	R81913	BRACKET	2		X	TO RADIATOR (UPPER)
4	12H304	LOCK WASHER	6		X	3/8"
5	14H1047	NUT	4		X	7/16"
6	19H1819	CAP SCREW	2		X	3/8" X 2-1/8"
7	24H1309	WASHER	2		X	13/32" X 1-1/16" X 0.120"
8	F2411R	SPRING ASSEMBLY	2		X	
9	R26417	SPACER	2		X	
10	R26413	STRAP	2		X	
11	R81878	BRACKET	2		X	
12	19H1777	CAP SCREW	6		X	1/2" X 1-3/4"
13	12H294	LOCK WASHER	4		X	5/8"
14	14H1076	NUT	2		X	3/8"
15	R81879	SUPPORT	2		X	(L.H. NOT ILLUSTRATED)
16	24H1625	WASHER	4		X	17/32" X 1" X 0.120"
17	12H301	LOCK WASHER	6		X	1/2"
18	14H1040	NUT	6		X	1/2"
19	R81885	BRACKET	1		X	LOWER RADIATOR SUPPORT
20	19H1756	CAP SCREW	2		X	5/8" X 1-1/2"
21	19H2358	CAP SCREW	2		X	9/16" X 2-1/4"
22	12H317	LOCK WASHER	2		X	9/16"
23	14H886	NUT	2		X	9/16"
24	RE20477	RADIATOR	1		X	

RADIATOR, FAN SHROUD AND GUARD KIT


TP14680

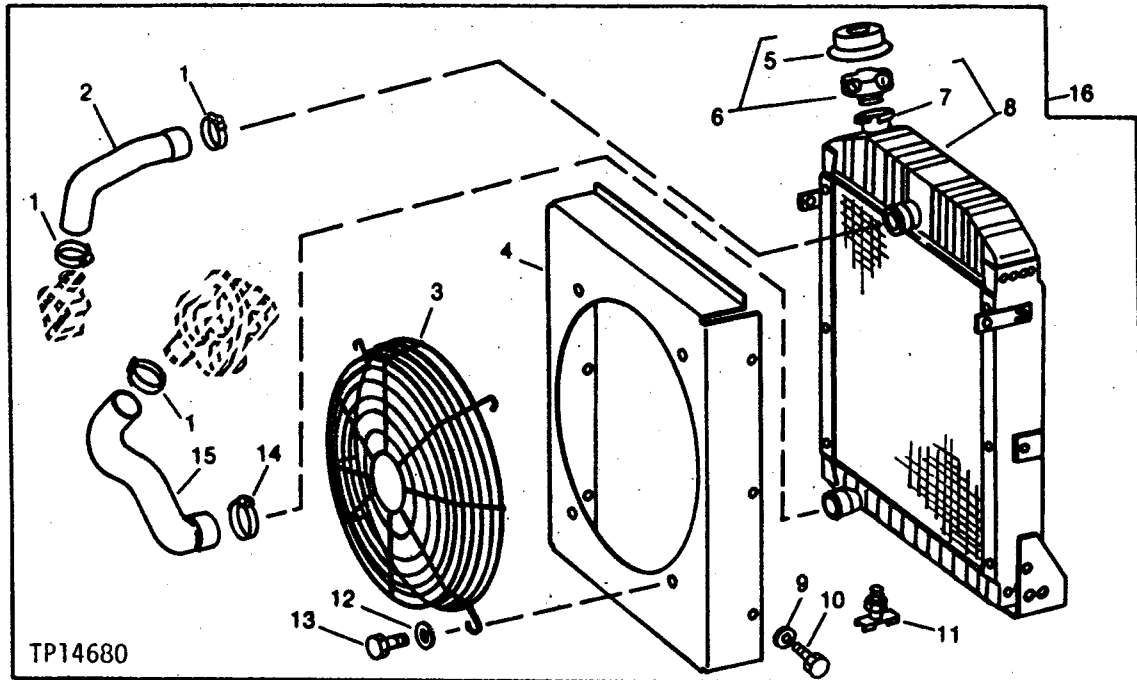

KEY	PART NO.	PART NAME	QTY	SERIAL NO.	DT	REMARKS
1	AR21999	CLAMP	3		X X	(SUB FOR AR21840, THIS APPLICATION)
2	R81912	HOSE	1		X X	
3	RE20380	GUARD	1		X X	
4	RE20381	SHROUD	1		X X	
5	R27209	COVER	1		X X	
6	AR28482	CAP	1		X X	
7	RE15427	FILLER NECK	1		X X	
8	RE21429	RADIATOR	1		X X	
9	12H302	LOCK WASHER	6		X X	1/4"
10	37H79	SCREW	6		X X	
11	AT13740	DRAIN VALVE	1		X X	
12	24H1882	WASHER	4		X X	17/32" X 3/4" X 0.060"
13	19H2284	CAP SCREW	4		X X	3/8" X 7/8"
14	AR21999	CLAMP	1		X X	
15	R61433	HOSE	1		X X	
16	RE21428	KIT	1		X X	RADIATOR

AIR CLEANER MOUNTING KIT

TP19353

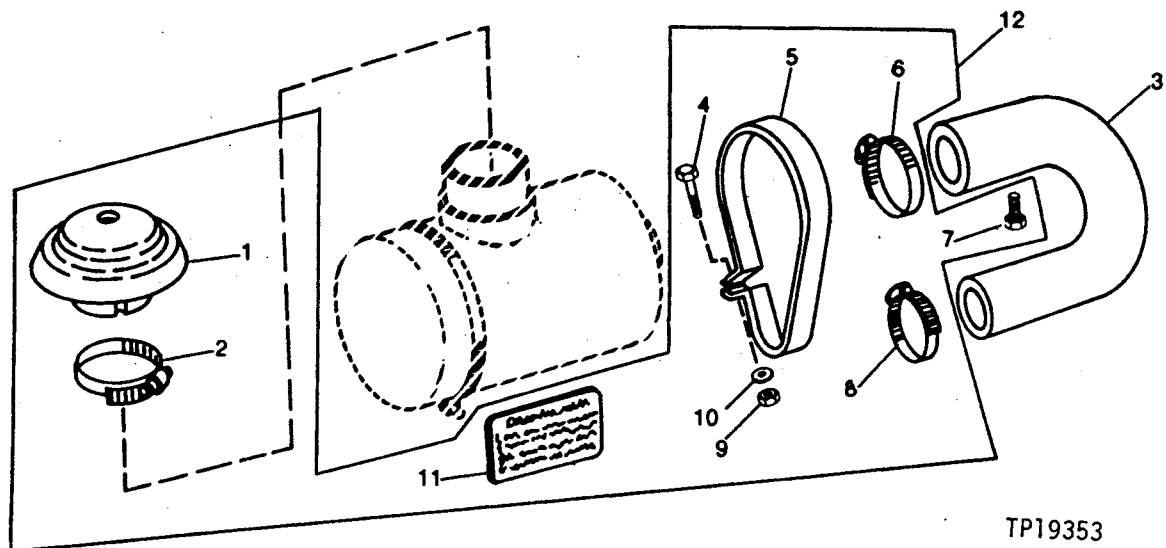

TP19353

KEY	PART NO.	PART NAME	QTY	SERIAL NO.	DT	REMARKS
1	AR72337	CAP	1		X	
2	C16054	CLAMP	1		X	
3	AT43866	HOSE	1		X	
4	19H3131	CAP SCREW	2		X	5/16" X 2"
5	T90155	CLAMP	2		X	
6	AR21842	CLAMP	1		X	
7	15H638	PIPE PLUG	1		X	SQ. HD., 1/8"
8	AT25242	CLAMP	1		X	
9	T32688	LOCK NUT	2		X	5/16"
10	12H304	LOCK WASHER	2		X	3/8"
11	R56902	LABEL	1		X	
12	RE23056	KIT	1		X	(SUB AR94140 OR AR94141)


F19

ENGINE AUXILIARY SYSTEM 5

INTAKE SYSTEM 0520

REPLACEMENT AIR CLEANER AND MOUNTING KIT


TP2805

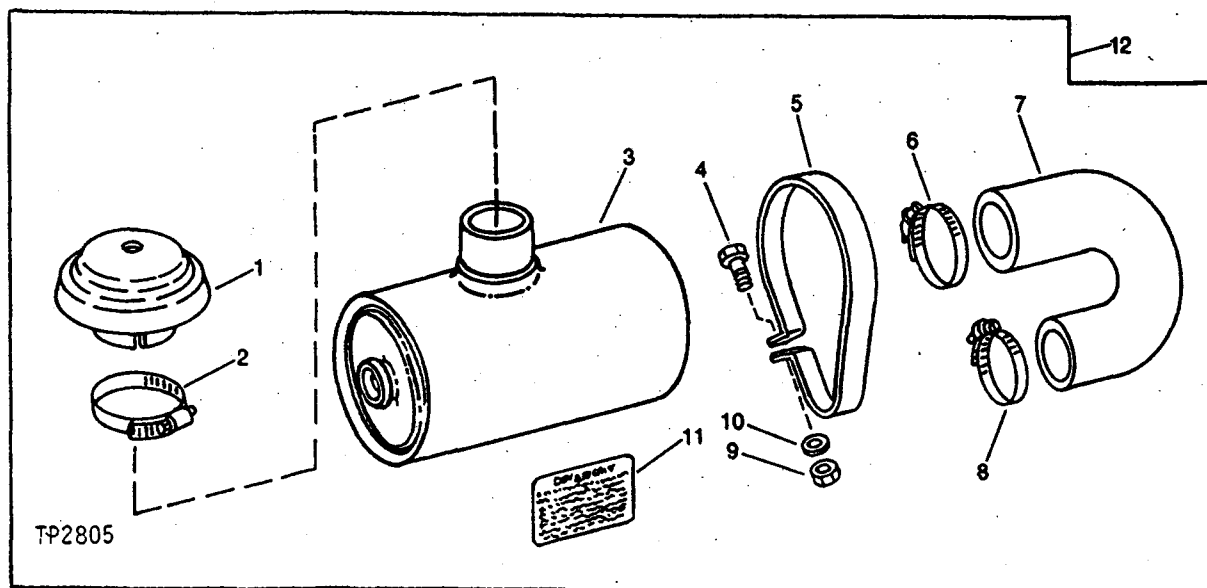

KEY	PART NO.	PART NAME	QTY	SERIAL NO.	DT	REMARKS
1	AR72337	CAP	1		X	
2	C16054	CLAMP	1		X	
3	AR99578	AIR CLEANER	1		X	
4	19H3131	CAP SCREW	2		X	5/16" X 2"
5	T90155	CLAMP	2		X	
6	AR21842	CLAMP	1		X	
7	T45015	HOSE	1		X	
8	AT25242	CLAMP	1		X	
9	T32688	LOCK NUT	2		X	5/16"
10	12H304	LOCK WASHER	2		X	3/8"
11	R56902	LABEL	1		X	
12	AR94140	AIR CLEANER	1		X	

REPLACEMENT AIR CLEANER AND MOUNTING KIT


TP2809

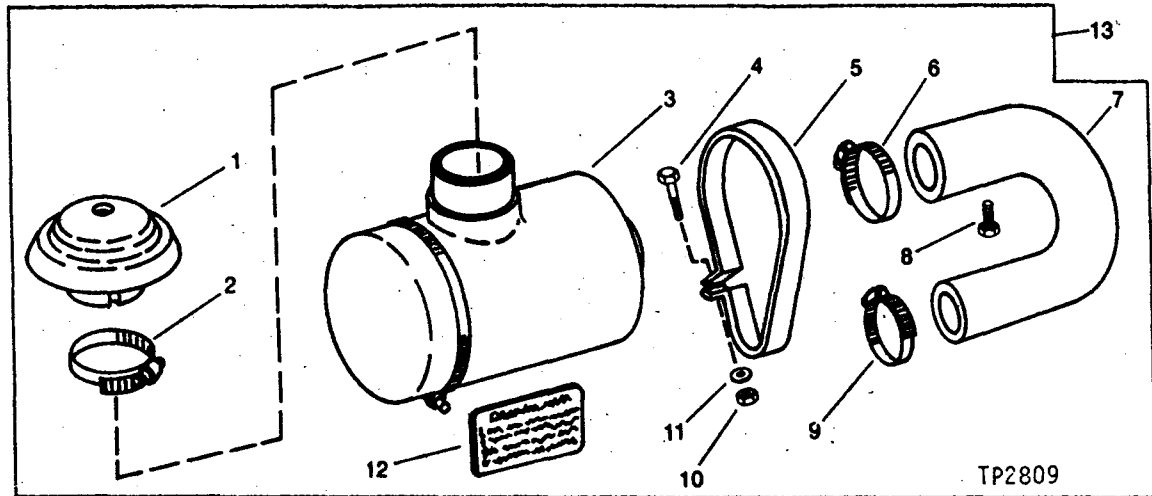

KEY	PART NO.	PART NAME	QTY	SERIAL NO.	6 5 3 5 9 D T	REMARKS
1	AR72337	CAP	1		X	
2	C16054	CLAMP	1		X	
3	AR99578	AIR CLEANER	1		X	
4	19H3131	CAP SCREW	2		X	5/16" X 2"
5	T90155	CLAMP	2		X	
6	AR21842	CLAMP	1		X	
7	AT43866	HOSE	1		X	
8	15H638	PIPE PLUG	1		X	SQ. HD., 1/8"
9	AT25242	CLAMP	1		X	
10	T32688	LOCK NUT	2		X	5/16"
11	12H304	LOCK WASHER	2		X	3/8"
12	R56902	LABEL	1		X	
13	AR94141	AIR CLEANER	1		X	

AIR CLEANER AND ELEMENTS


TP2812

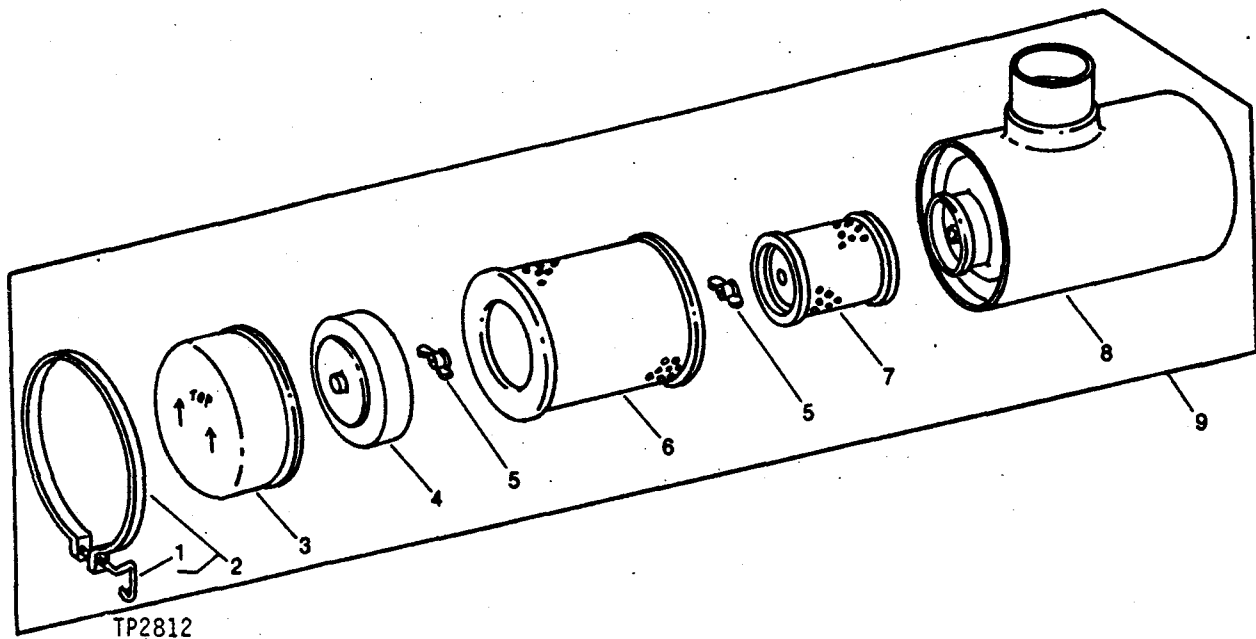

KEY	PART NO.	PART NAME	QTY	SERIAL NO.	6 3 5 9 DT	REMARKS
1	R28633	BOLT	1		X	
2	AR40146	CLAMP	1		X	
3	AH21420	CAP	1		X	
4	R36698	COVER	1		X	
5	AH20849	WING NUT	2		X	
6	AT35155	FILTER ELEMENT	1		X	
7	AT31227	FILTER ELEMENT	1		X	
8		AIR CLEANER	1		X	(SUB AR99578)
9	AR99578	AIR CLEANER	1		X	

ALTERNATOR, REGULATOR AND CHARGING SYSTEM WIRING 1672
ALTERNATOR AND SHIELD
CODE 3101 ALTERNATOR, 65-AMPERE SEALED
CODE 3109 ALTERNATOR, 65-AMPERE SEALED WITH AUXILIARY DRIVE GEAR

TP26028

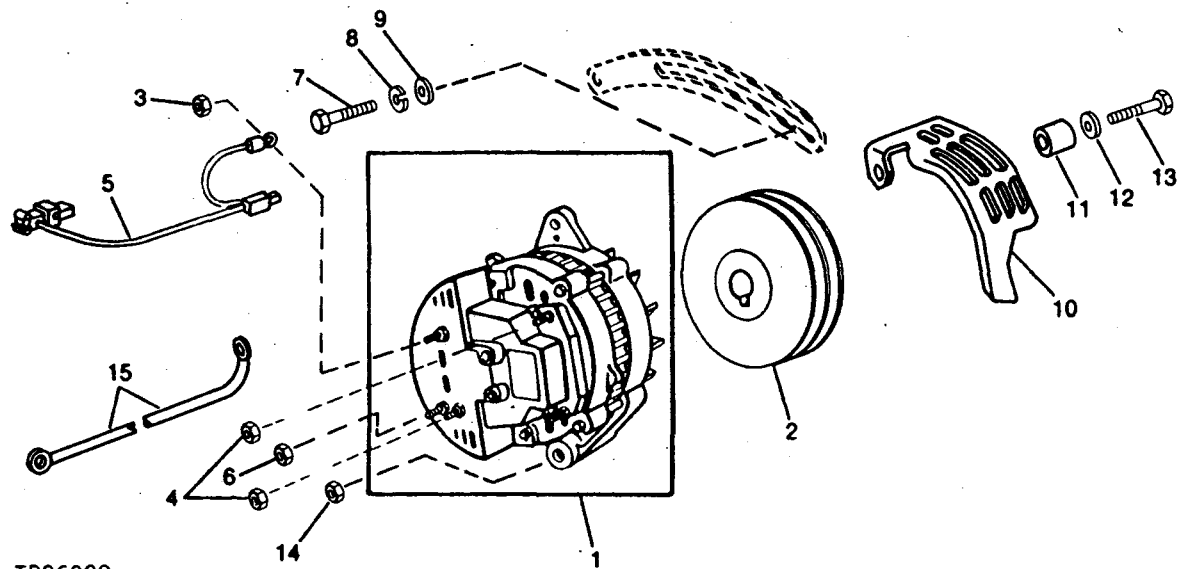


TP26028

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 D T	REMARKS
1	TY6678	ALTERNATOR	1		X X	(65-AMP) (SUB FOR AT103344 AND AT125414, THIS APPLICATION)
2	T29096	SHEAVE	1		X X	CODE 3101 AND 3109
3	14M7165	LOCK NUT	1		X X	M6
4	14M7375	NUT	2		X X	M5
5	AT107970	WIRING HARNESS	1		X X	(USE WHEN TY6678 IS INSTALLED AS A REPLACEMENT PART)
6	14M7375	NUT	1		X X	M5
7	19M7163	CAP SCREW	1		X X	M8 X 25
8	12H303	LOCK WASHER	1		X X	5/16"
9	24H1621	WASHER	1		X X	11/32" X 1" X 0.194"
10	R56012	SHIELD	1		X X	
11	28H2547	SPACER	1		X X	
12	12M7066	LOCK WASHER	1		X X	10.200MM
13	19M7329	CAP SCREW	1		X X	M10 X 75, CODE 3101 AND 3109
14	14M7274	NUT	1		X X	M10
15	AU42892	WIRING LEAD	1		X X	(USE WHEN TY6678 IS INSTALLED AS A REPLACEMENT PART)

ALTERNATOR, REGULATOR AND CHARGING SYSTEM WIRING 1672

CODE 3111 ALTERNATOR
 CODE 3114 ALTERNATOR, 78-AMPERE
 CODE 3115 ALTERNATOR, 78-AMPERE

TP26725

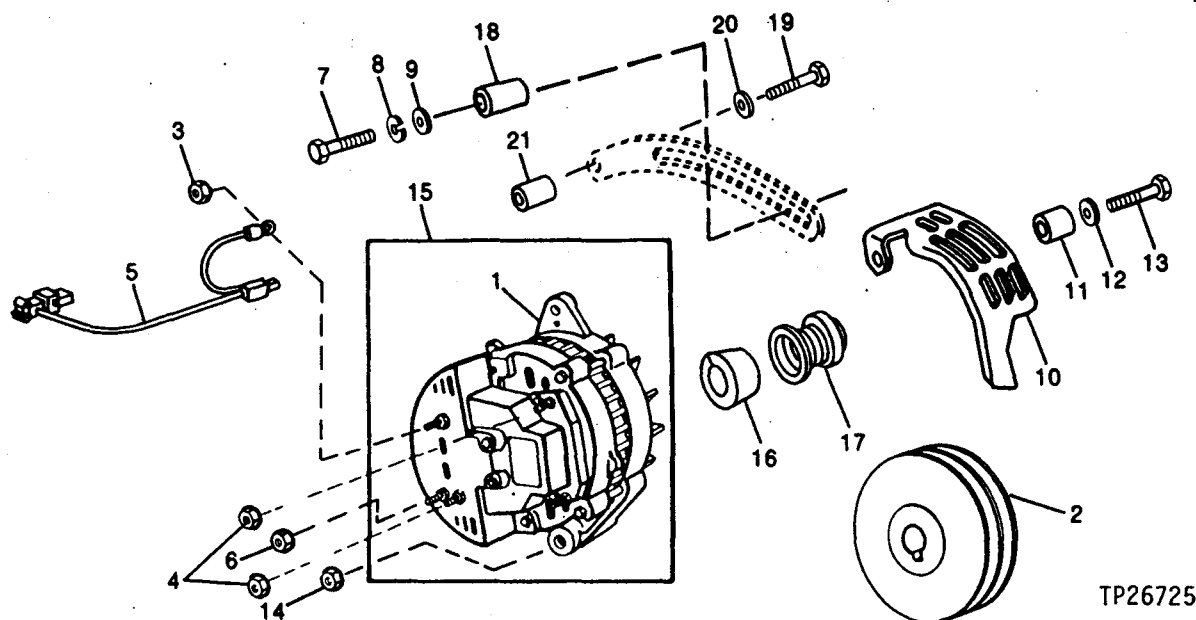


TP26725

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 DT	REMARKS
1	R87764	FAN	1		X X	
2	T42171	PULLEY	1		X X	CODE 3111 AND 3114
3	14M7165	LOCK NUT	1		X X	M6
4	14M7375	NUT	2		X X	M5
5	AR55283	WIRING HARNESS	1		X X	CODE 3115
6	14M7375	NUT	1		X X	M5
7	19M7163	CAP SCREW	1		X X	M8 X 25, CODE 3111 AND 3114
	19M7164	CAP SCREW	1		X X	M8 X 50, CODE 3115
8	12H303	LOCK WASHER	1		X X	5/16"
9	24H1621	WASHER	1		X X	11/32" X 1" X 0.194"
10	R56012	SHIELD	1		X X	CODE 3111 AND 3114
	R100846	SHIELD	1		X X	CODE 3115
11	28H2547	SPACER	1		X X	CODE 3110 AND 3111
12	12M7066	LOCK WASHER	1		X X	10.200MM
13	19M7668	CAP SCREW	1		X X	M10 X 100, CODES 3110 AND 3111
	19M7329	CAP SCREW	1		X X	M10 X 75, CODES 3114 AND 3115
14	14M7274	NUT	1		X X	M10, CODE 3111 AND 3114
	14M7273	NUT	1		X X	M8, CODE 3115
15	RE31694	ALTERNATOR	1		X X	(DELCO-REMY NO. 1101345) (FOR SERVICE PARTS, SEE DELCO-REMY REPAIR STATION)
16	R94351	OIL LINE	1		X X	CODE 3115
17	R94350	OIL LINE	1		X X	CODE 3115
18	28H1878	SPACER	1		X X	0.493" X 0.675" X 7/16", CODE 3115
19	19H2855	CAP SCREW	1		X X	
20	24H1685	WASHER	1		X X	
21	28H1953	SPACER	1		X X	

ALTERNATOR, REGULATOR AND CHARGING SYSTEM WIRING 1672
ALTERNATOR ATTACHING PARTS AND SHIELD
CODE 3117 ALTERNATOR, 24-VOLT (45-AMPERE)
CODE 3119 ALTERNATOR, 24-VOLT (45-AMPERE)


TP26033

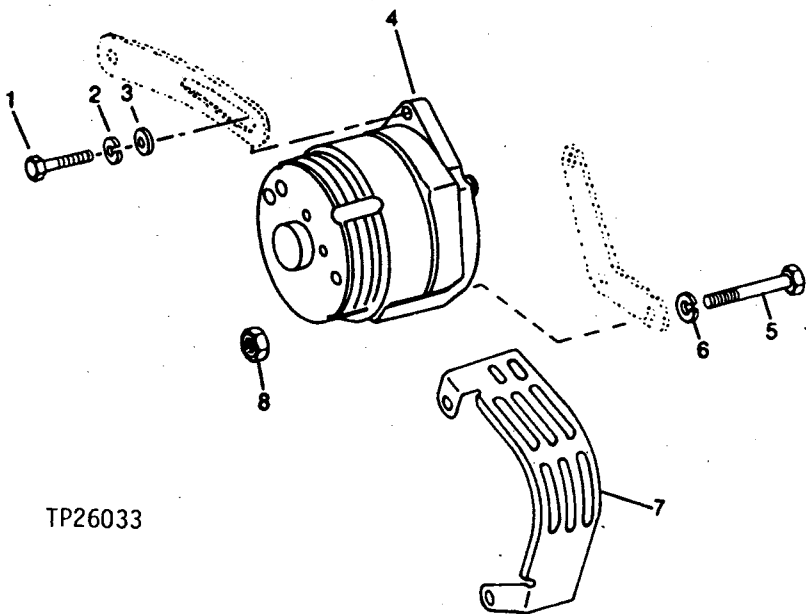

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T		REMARKS
1	19M7163	CAP SCREW	1		X X		M8 X 25
2	24H1621	WASHER	1		X X		11/32" X 1" X 0.194"
	12H303	LOCK WASHER	1		X X		5/16"
3	24M7055	WASHER	1		X X		8.400 X 17 X 1.600MM
4	TY6680	ALTERNATOR	1		X X		REMANUFACTURED, (SUB FOR AT115049 AND AT125430) (42-AMPERE)
5	19M7329	CAP SCREW	1		X X		M10 X 75
6	24H1621	WASHER	1		X X		11/32" X 1" X 0.194"
	12M7066	LOCK WASHER	1		X X		10.200MM
7	R56012	SHIELD	1		X X		
8	14M7274	NUT	1		X X		M10

ALTERNATOR, REGULATOR AND CHARGING SYSTEM WIRING 1672
 ALTERNATOR
 CODE 3117 ALTERNATOR, 24-VOLT (45-AMP)
 CODE 3119 ALTERNATOR, 24-VOLT (45-AMP)
 (MOTOROLA NO. 70D42179T02)

TP25562

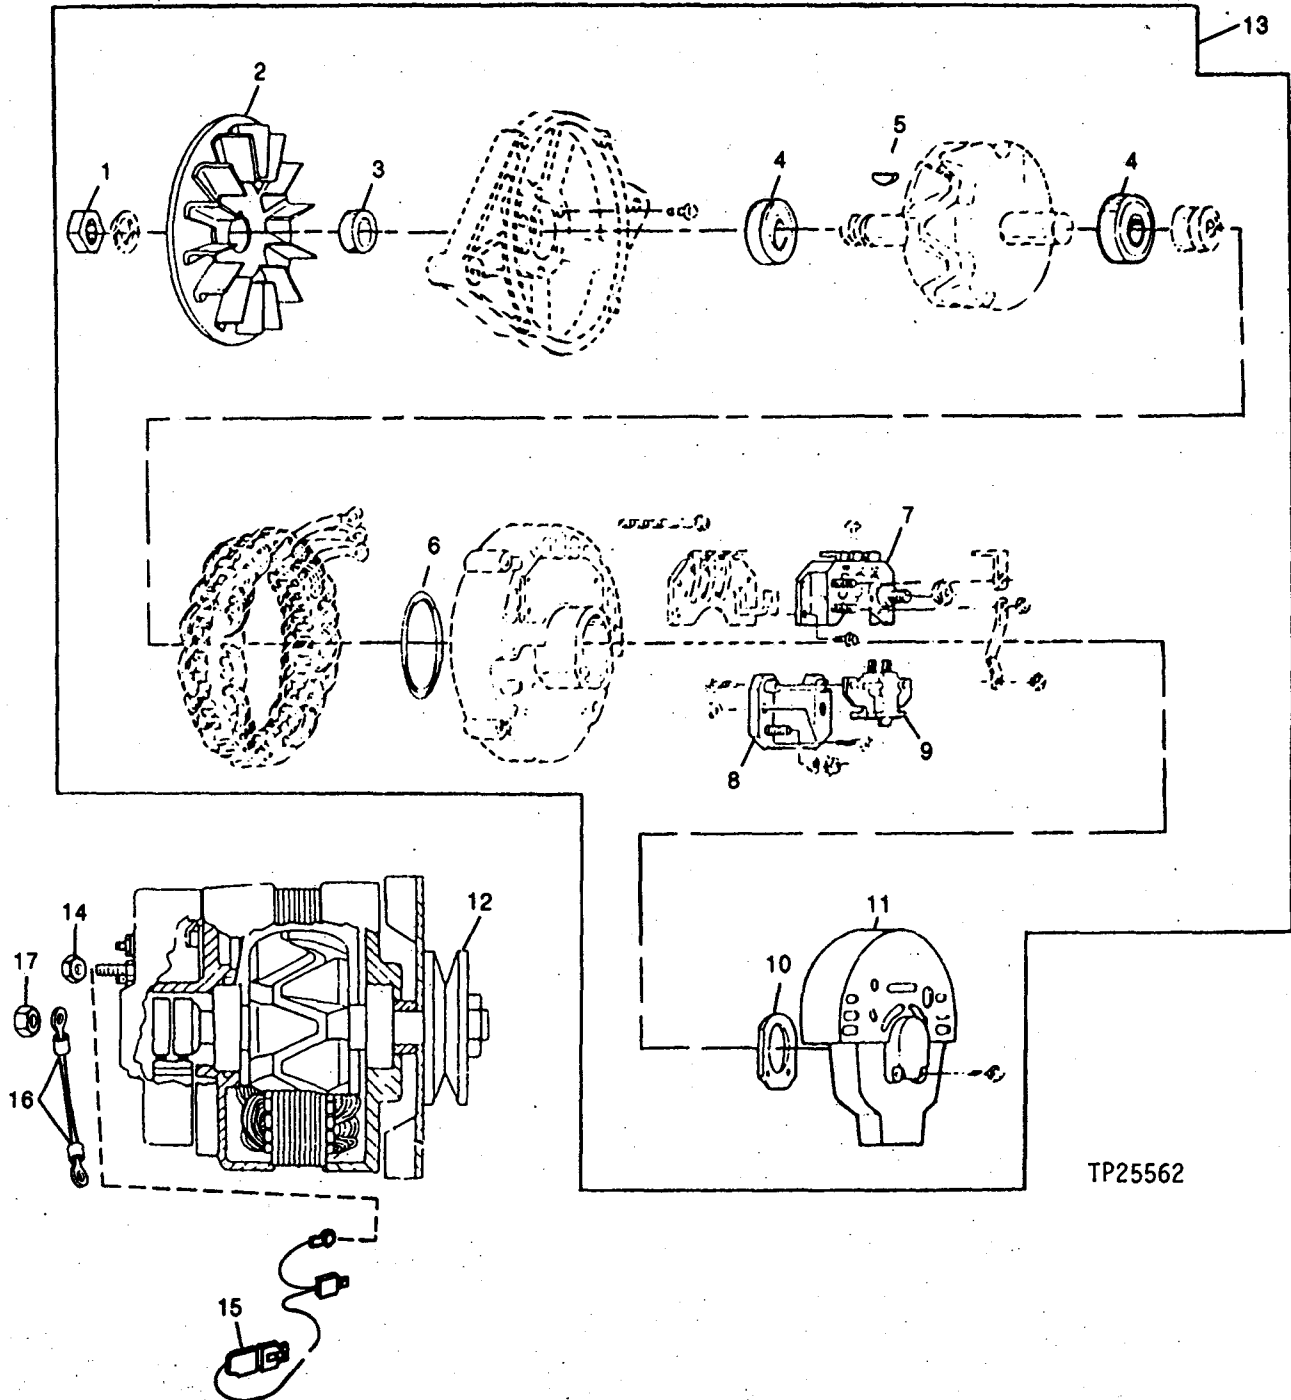

TP25562


ALTERNATOR, REGULATOR AND CHARGING SYSTEM WIRING 1672

ALTERNATOR
 CODE 3117 ALTERNATOR, 24-VOLT (45-AMP)
 CODE 3119 ALTERNATOR, 24-VOLT (45-AMP)
 (MOTOROLA NO. 70D42179T02)

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	W36250	NUT	1		X X	
2	R60492	FAN	1		X X	
3	T25343	BUSHING	1		X X	
4	JD9449	BEARING	2		X X	
5	26H9	SHAFT KEY	2		X X	1/8" X 5/8"
6	T50860	RING	1		X X	
7	AT104092	RECTIFIER	1		X X	
8	AT120668	REGULATOR	1		X X	
9	AT104090	HOLDER	1		X X	
10	T103117	GASKET	1		X X	
11	T103118	COVER	1		X X	
12	T29096	SHEAVE	1		X X	
13	TY6680	ALTERNATOR	1		X X	REMANUFACTURED, (SUB FOR AT115049 AND AT125430) (42-AMPERE)
14	14M7375	NUT	2		X X	M5
15	AT107970	WIRING HARNESS	1		X X	
16	AU42892	WIRING LEAD	1		X X	
17	14M7165	LOCK NUT	1		X X	M6

ALTERNATOR, REGULATOR AND CHARGING SYSTEM WIRING 1672
ALTERNATOR MOUNTING BRACKETS
CODE 6217 ALTERNATOR MOUNTING BRACKET


TP25660

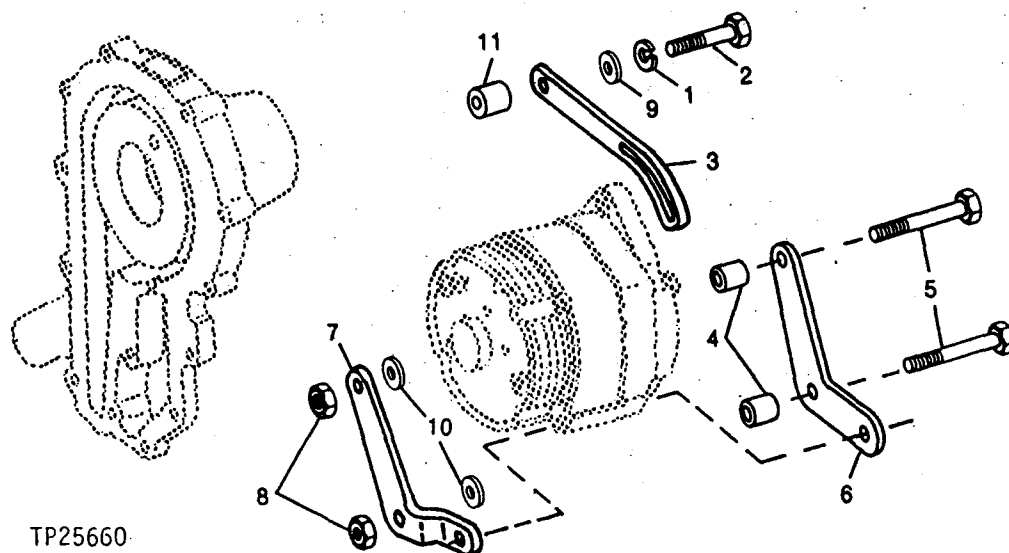

KEY	PART NO.	PART NAME	QTY	ENGINE SERIAL NO.	6 3 5 9 9 D T	REMARKS
1	12H304	LOCK WASHER	1		X X	3/8"
2	19H2855	CAP SCREW	1		X X	3/8" X 3-1/4"
	19H2023	CAP SCREW	1		X X	3/8" X 3-1/4"
3	T32853	STRAP	1		X X	
4	28H1523	BUSHING	2		X X	0.493" X 0.675" X 13/16", 3/8" X 1"
5	19H1912	CAP SCREW	2		X X	3/8" X 3-1/2"
	19H2128	CAP SCREW	2		X X	3/8" X 3"
6	T20202	BRACKET	1		X X	
7	R59962	BRACKET	1		X X	
8	14H812	NUT	2		X X	3/8"
9	24H1304	WASHER	1		X X	13/32" X 23/32" X 0.120"
10	24H1304	WASHER	2		X X	13/32" X 23/32" X 0.120"
11	28H1953	SPACER	1		X X	0.493" X 0.675" X 1-7/16"

WIRE LEAD KIT

RWP3870

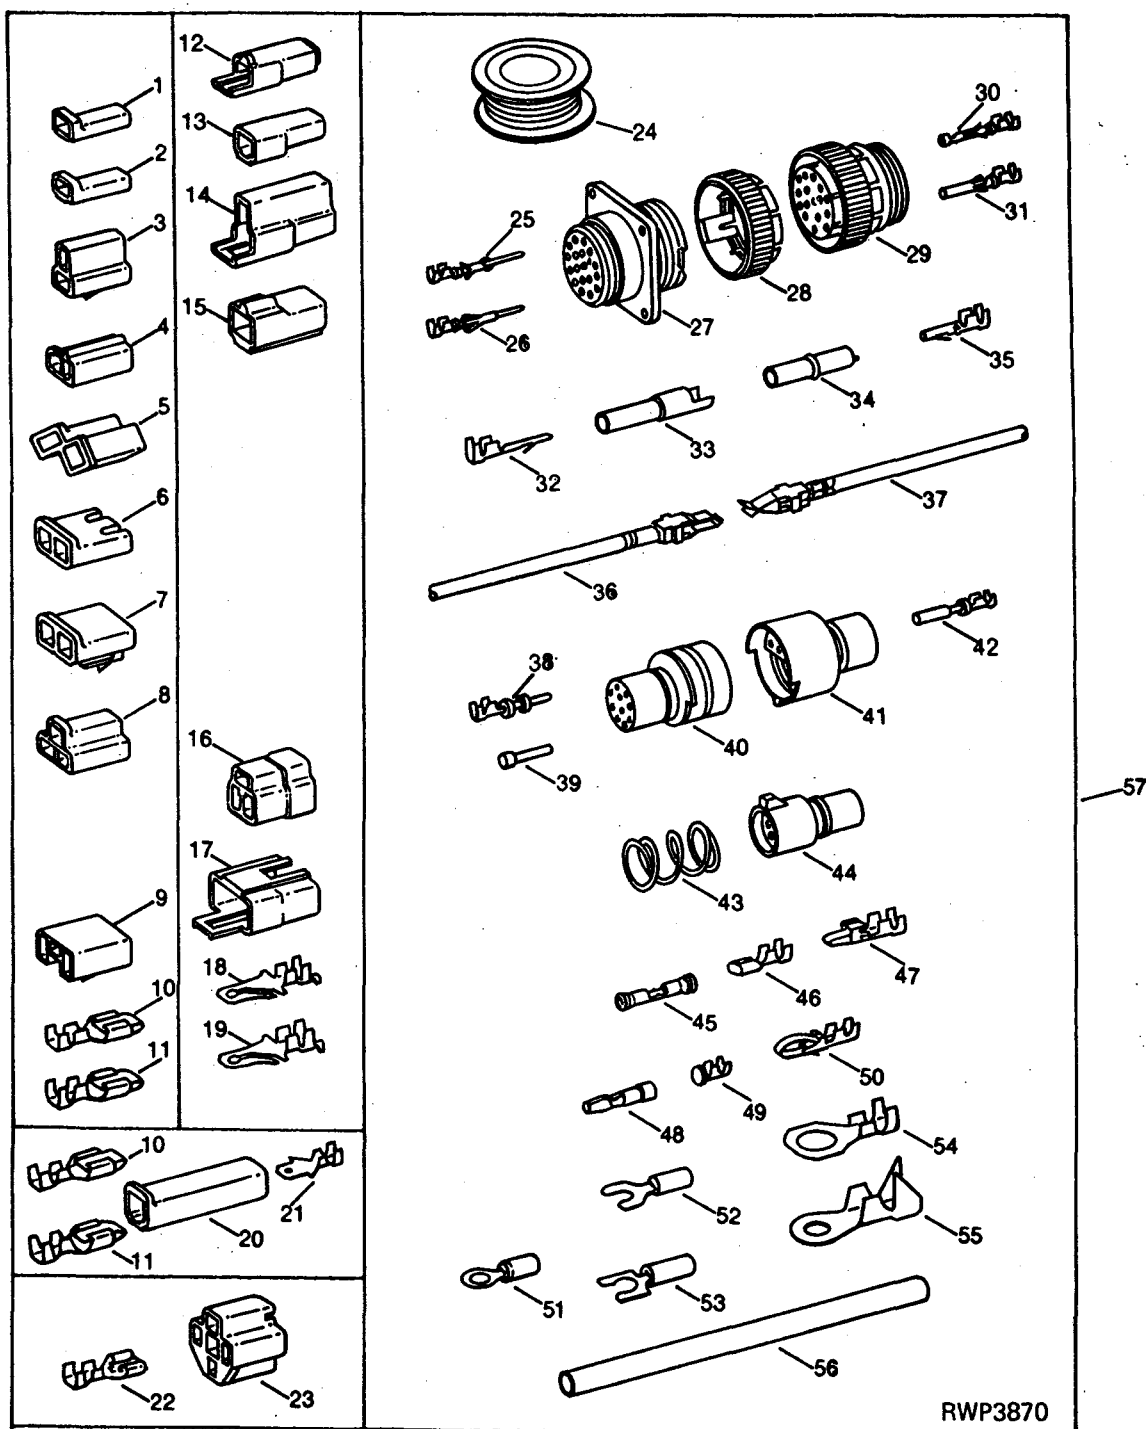

RWP3870


WIRE LEAD KIT

KEY	PART NO.	PART NAME	QTY	TRACTOR SERIAL NO.	6 6 3 3 5 5 9 9 D T	REMARKS
1	T28583	RECEPTACLE	1		X X (B)	
2	M43835	FLAT CONNECTOR	1		X X (B)	
3	R77476	CONNECTOR	1		X X (A)	
4	R77477	CONNECTOR	1		X X (A)	
5	R77479	CONNECTOR	1		X X (A)	
6	R77480	CONNECTOR	1		X X (A)	
7	R77481	CONNECTOR	1		X X (A)	
8	R77482	CONNECTOR	1		X X	
9	H104855	CONNECTOR	1		X X	
10	U46662	TERMINAL	1		X X (E) (F)	
11	N115096	TERMINAL	1		X X (G) (PKG. OF 15)	
12	T28585	TERMINAL	1		X X (B)	
13	R77475	CONNECTOR	1		X X (B)	
14	T28586	CONNECTOR	1		X X (A)	
15	R77478	CONNECTOR	1		X X (A)	
16	R77483	CONNECTOR	1		X X	
17	R48887	RECEPTACLE	1		X X	
18	T34067	TERMINAL	1		X X (E) (F)	
19	R77484	TERMINAL	1		X X (G) (PKG. OF 15)	
20	U46370	CONNECTOR	1		X X (B)	
21	R77485	TERMINAL	1		X X (C) (F)	
22	R77486	TERMINAL	1		X X (E) (F)	
23	R77487	CONNECTOR	1		X X (B)	
24	R66321	WIRING LEAD	1		X X 15M (50 FT.) 10 GA.	
	R66320	WIRING LEAD	1		X X 30.5M (100 FT.) 12 GA.	
	R77501	WIRE	1		X X 30.5M (100 FT.) 14 GA.	
	R77500	WIRE	1		X X 30.5M (100 FT.) 16 GA.	
	R77499	WIRE	1		X X 30.5M (100 FT.) 18 GA.	
	R77498	WIRE	1		X X 30.5M (100 FT.) 20 GA.	
25	R77462	PIN CONTACT	1		X X (PKG. OF 40) (20-22 OR 24 GA. WIRE)	
26	R77464	PIN CONTACT	1		X X (H) (PKG. OF 50)	
27	R77456	RECEPTACLE	1		X X (37 WAY)	
28	R77458	RETAINER	1		X X (A) (SIZE 23)	
	R77459	RETAINER	1		X X (A) (SIZE 17)	
	R77460	RETAINER	1		X X (A) (SIZE 13)	
	R77461	RETAINER	1		X X (A) (SIZE 11)	
29	R77457	ELECTRICAL PLUG	1		X X (37 WAY)	
30	R77463	SOCKET CONTACT	1		X X (PKG. OF 40) (20-22 OR 24 GA. WIRE)	
31	R77465	SOCKET CONTACT	1		X X (H) (PKG. OF 50)	
32	R77468	TERMINAL	1		X X (PKG. OF 5)	
33	R77466	CONNECTOR	1		X X (A)	
34	R77467	CONNECTOR	1		X X (A)	

- (A) PKG. OF 2
 (B) PKG. OF 3
 (C) PKG. OF 10
 (D) PKG. OF 20
 (E) PKG. OF 25
 (F) 14 OR 16 GA. WIRE
 (G) 10 OR 12 GA. WIRE
 (H) 14-16 OR 18 GA. WIRE

WIRE LEAD KIT-CONTINUED

RWP3870

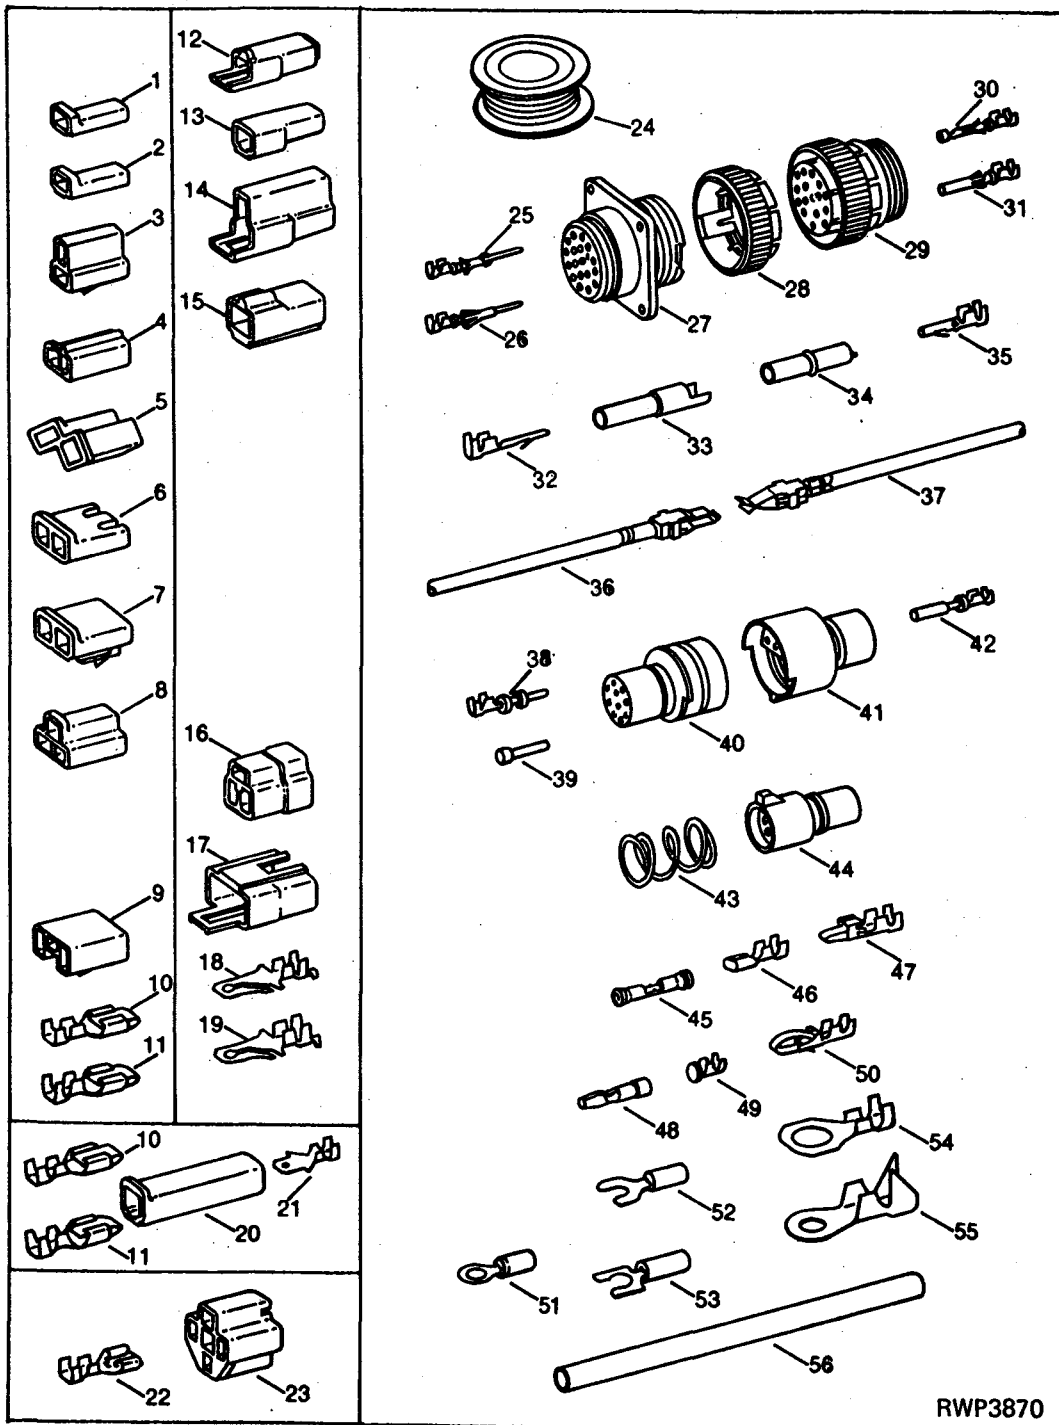

RWP3870

WIRE LEAD KIT

KEY	PART NO.	PART NAME	QTY	TRACTOR SERIAL NO.	6 6 3 3 5 5 9 9 D T		REMARKS
35	R77469	TERMINAL	1		X X		(PKG. OF 5)
36	RE11156	TERMINAL	1		X X		(B) (MALE)
37	RE11157	TERMINAL	1		X X		(B) (FEMALE)
38	R70222	PIN CONTACT	1		X X		(D) (H)
39	R70221	PLUG	1		X X		(E)
40	R70219	PLUG	1		X X		(A) (10 WAY)
	R70217	PLUG	1		X X		(A) (7 WAY)
	R70215	PLUG	1		X X		(A) (4 WAY)
	R70213	PLUG	1		X X		(A) (3 WAY)
	R70211	PLUG	1		X X		(A) (2 WAY)
41	R70218	RECEPTACLE	1		X X		(A) (10 WAY)
	R70216	RECEPTACLE	1		X X		(A) (7 WAY)
	R70214	RECEPTACLE	1		X X		(A) (4 WAY)
	R70212	RECEPTACLE	1		X X		(A) (3 WAY)
	R70210	RECEPTACLE	1		X X		(A) (2 WAY)
42	AR91793	SOCKET CONTACT	1		X X		(D)
43	R30378	SPRING	1		X X		(C)
44	R77474	CONNECTOR	1		X X		(A) (6 WAY)
45	R77470	TERMINAL	1		X X		SPLICE (PKG. OF 15) (16-18-20 OR 22 GA. WIRE)
	R77471	TERMINAL	1		X X		(C) (G) SPLICE
	R77472	TERMINAL	1		X X		(A) SPLICE (8 GA. WIRE)
	R77473	TERMINAL	1		X X		(A) SPLICE (6 GA. WIRE)
46	R65607	TERMINAL	1		X X		(C) (18 OR 20 GA. WIRE)
47	U46664	TERMINAL	1		X X		(C) (F)
48	R32026	TERMINAL	1		X X		(D) (F)
49	R65602	CONTACT	1		X X		(C) (16 OR 18 GA. WIRE)
50	R70220	TERMINAL	1		X X		(C) (18 OR 20 GA. WIRE)
51	R77489	TERMINAL	1		X X		(D) (14-16-18 OR 20 GA. WIRE) (NO. 10 EYELET)
	R77493	TERMINAL	1		X X		(D) (G) (NO. 10 EYELET)
	R77488	TERMINAL	1		X X		(D) (14-16-18 OR 20 GA. WIRE) (3/8" EYELET)
	R77490	TERMINAL	1		X X		(D) (G) (1/2" EYELET)
52	R77496	TERMINAL	1		X X		(D) (F) (NO. 8 SPADE)
	R77495	TERMINAL	1		X X		(D) (18 GA. WIRE) (NO. 10 SPADE)
53	R77497	TERMINAL	1		X X		(D) (F) (NO. 6 SPADE)
54	R77491	TERMINAL	1		X X		(D) (G) (3/8" EYELET)
	R77492	TERMINAL	1		X X		(D) (G) (1/4" EYELET)
55	R77494	TERMINAL	1		X X		(D) (6 OR 8 GA. WIRE) (1/4" EYELET)
56	R77502	TUBE	1		X X		(PKG. OF 8) 3/8" (HEAT SHRINK)
	R77503	TUBE	1		X X		(PKG. OF 8) 3/16" (HEAT SHRINK)
57	RE11154	KIT	1		X X		

- (A) PKG. OF 2
 (B) PKG. OF 3
 (C) PKG. OF 10
 (D) PKG. OF 20
 (E) PKG. OF 25
 (F) 14 OR 16 GA. WIRE
 (G) 10 OR 12 GA. WIRE
 (H) 14-16 OR 18 GA. WIRE